


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :**
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

A: DEH-S5100BT/XNUC
B: DEH-S5120BT/XNUC
C: DEH-S510BT/XNEW5
D: DEH-X500BT/XNCS
E: DEH-S5150BT/XNGS

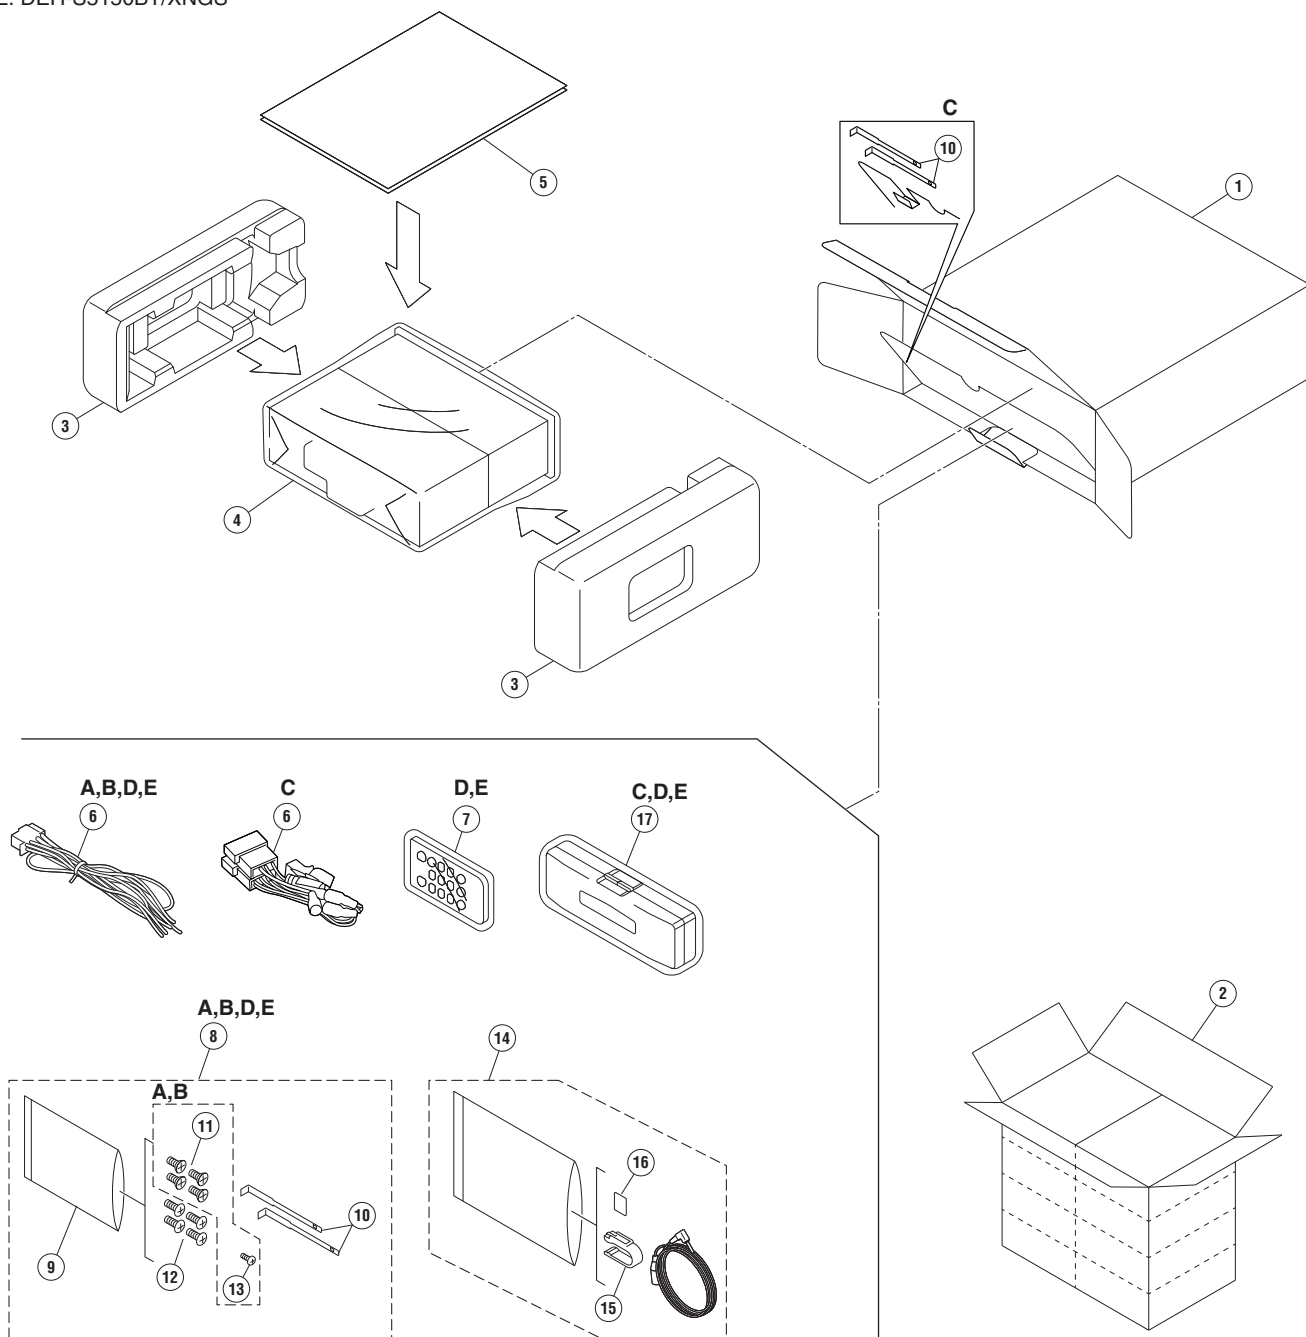

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	DEH-S5100BT /XNUC	DEH-S5120BT /XNUC	DEH-S510BT /XNEW5	DEH-X500BT /XNCS	DEH-S5150BT /XNGS
A	1	Unit Box	QHG4388	QHG4389	QHG4387	QHG4391	QHG4390
	2	Contain Box	QHL4388	QHL4389	QHL4387	QHL4391	QHL4390
	3	Protector	CHP4594	CHP4594	CHP4594	CHP4594	CHP4594
	4	Polyethylene Bag	CEG1173	CEG1173	QEG3001	QEG3001	QEG3001
	5-1	Owner's Manual	Not used	Not used	QRB3772	Not used	QRD3587
	5-2	Quick Start Guide	QRD3581	QRD3581	QRD3577	QRD3588	Not used
	5-3	Quick Start Guide	Not used	Not used	QRD3578	Not used	Not used
	5-4	Web IM	See Contents of Web IM(2)	See Contents of Web IM(2)	See Contents of Web IM(2)	See Contents of Web IM(2)	See Contents of Web IM(2)
	* 5-5	Warranty Card	QRY3001	QRY3001	CRY1376	Not used	Not used
	6	Cord Assy	CDP1484	CDP1484	QDP3072	CDP1484	CDP1484
	7	Card Remote Control Unit	Not used	Not used	Not used	CXE9605	CXE9605
	* 8	Accessory Assy	QEA3337	QEA3337	Not used	QEA3338	QEA3338
	9	Polyethylene Bag	CEG1160	CEG1160	Not used	CEG1160	CEG1160
	10	Handle	QNC3021	QNC3021	QNC3021	QNC3021	QNC3021
	11	Screw	CBA2384	CBA2384	Not used	CBA2384	CBA2384
	12	Screw	CBA2383	CBA2383	Not used	Not used	Not used
	13	Screw	BPZ20P060FTC	BPZ20P060FTC	Not used	Not used	Not used
	14	Microphone Assy	CPM1109	CPM1109	CPM1109	CPM1109	CPM1109
	15	Holder	CZN7192	CZN7192	CZN7192	CZN7192	CZN7192
	16	Cushion	CZN7193	CZN7193	CZN7193	CZN7193	CZN7193
C	17	Case Assy	Not used	Not used	QXA3129	QXA3129	QXA3129

Owner's Manual, Installation Manual

Part No.	Language
QRB3772	Russian
QRD3577	English, French, Italian
QRD3578	Spanish(Espanol), German, Dutch
QRD3581	English, French, Spanish(Espanol)
QRD3587	English, Traditional Chinese, Arabic, Persian
QRD3588	English, Spanish(Espanol), Portuguese(B)


(2) CONTENTS OF WEB IM

Part No.	Language
*QRI3042 (for XNEW5)	English, French, Italian, Spanish(Espanol), German, Dutch
*QRI3044 (for XNUC)	English, French, Spanish(Espanol)
*QRI3098 (for XNCS)	English, Spanish(Espanol), Portuguese(B)

All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

9.2 EXTERIOR SECTION

A: DEH-S5100BT/XNUC
B: DEH-S5120BT/XNUC
C: DEH-S510BT/XNEW5
D: DEH-X500BT/XNCS
E: DEH-S5150BT/XNGS

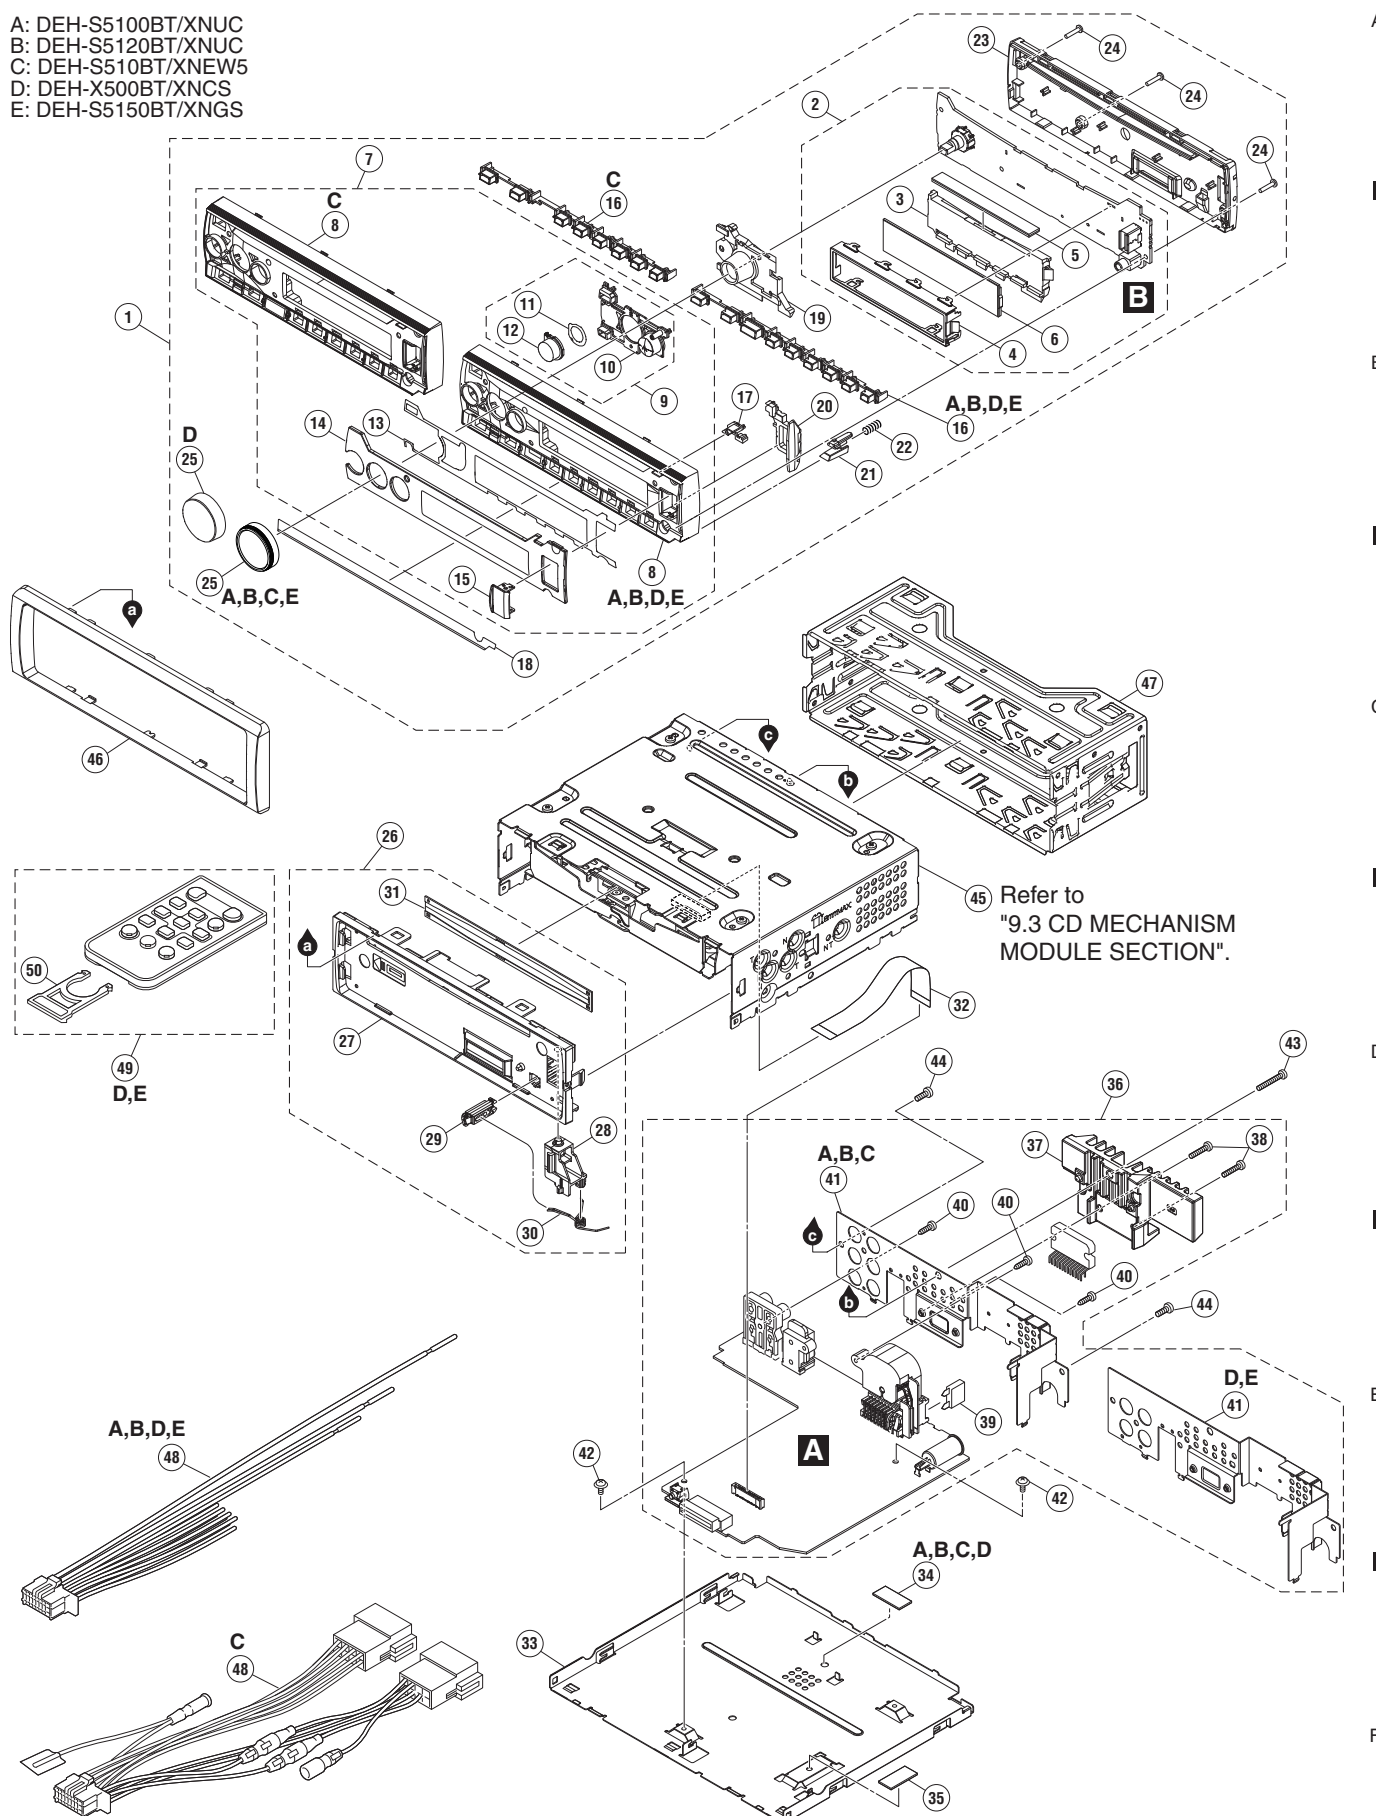

(1) EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	Detach Grille Assy	See Contrast table (2)		26	Panel Assy	QXA4716
	2	Keyboard Unit	See Contrast table (2)		27	Panel	QNS4071
	3	Lighting Conductor	QNV3151		28	Arm	QNV3025
	4	Holder	QNC3131		29	Button	QNV3026
	5	Rubber Connector	QNV3129		30	Spring	QBH3001
	6	Segment LCD (V1801)	CAW2065		31	Cover	QNM3029
	7	Grille Unit	See Contrast table (2)		32	FFC	QDE3029
	* 8	Grille	See Contrast table (2)		33	Case	QNB3055
	* 9	Button Unit	See Contrast table (2)		34	Heat Cond Sheet	See Contrast table (2)
	* 10	Button(SRC,BACK,LIST,DISP)	QAC3302		35	Heat Cond Sheet	QNM3223
B	* 11	DS Tape	QNM3228		36	Tuner Amp Unit	See Contrast table (2)
	* 12	Button	See Contrast table (2)		37	Heat Sink	See Contrast table (2)
	* 13	DS Tape	QNM3227		38	Screw	BSZ26P120FTC
	* 14	Plate	QNS4244	⚠	39	Fuse (10 A)	CEK1415
	* 15	Door	QAT3034		40	Screw	BPZ26P080FTC
	16	Button	See Contrast table (2)		41	Holder	See Contrast table (2)
	17	Button(EJECT)	QAC3304		42	Screw	ASZ26P050FTC
	18	Plate	See Contrast table (2)		43	Screw	BSZ26P120FTC
	19	Lighting Conductor	QNV3150		44	Screw	BSZ26P060FTC
	20	Lighting Conductor	QNV3152		45	CD Mechanism Module(11.6VA_T07)	CXK5808
C						CD Mechanism Module(S11.6_T07)	CXK5807
	21	Button(DETACH)	QAC3305		46	Panel	QNS4330
	22	Spring	CBH2210		47	Holder	QNC3020
	23	Cover	QNS4246		48	Cord Assy	See Contrast table (2)
	24	Screw	BPZ20P100FTC		49	Card Remote Control Unit	See Contrast table (2)
	25	Knob Unit	See Contrast table (2)		50	Cover	See Contrast table (2)


Notes: For No.45, please refer to "1.4 NOTES ON REPLACING PARTS" for part distinguish.

(2) CONTRAST TABLE

DEH-S5100BT/XNUC, DEH-S5120BT/XNUC, DEH-S510BT/XNEW5, DEH-X500BT/XNCS and DEH-S5150BT/XNGS are constructed the same except for the following:

Mark	No.	Description	DEH-S5100BT /XNUC	DEH-S5120BT /XNUC	DEH-S510BT /XNEW5	DEH-X500BT /XNCS	DEH-S5150BT /XNGS
	1	Detach Grille Assy	QXA5829	QXA5609	QXA5610	QXA5612	QXA5611
	2	Keyboard Unit	QWM4984	QWM4984	QWM4985	QWM4984	QWM4984
	7	Grille Unit	QXA5499	QXA5519	QXA5520	QXA5522	QXA5521
	* 8	Grille	QNS4242	QNS4242	QNS4243	QNS4242	QNS4242
	* 9	Button Unit	QXA5426	QXA5426	QXA5777	QXA5779	QXA5426
E							
	* 12	Button	QAC3297(BASS)	QAC3297(BASS)	QAC3298(PHONE)	QAC3299(MIX)	QAC3297(BASS)
	16	Button	QAC3296 (TRACK,PHONE,1-6)	QAC3296 (TRACK,PHONE,1-6)	QAC3307 (TRACK,1-6)	QAC3296 (TRACK,PHONE,1-6)	QAC3296 (TRACK,PHONE,1-6)
	18	Plate	QNM3230	QNM3230	QNM3244	QNM3229	QNM3229
	25	Knob Unit	QXA5430	QXA5430	QXA5430	QXA5429	QXA5430
	34	Heat Cond Sheet	QNM3130	QNM3130	QNM3130	QNM3130	Not used
	36	Tuner Amp Unit	QWM4914	QWM4915	QWM4913	QWM4917	QWM4916
	37	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002
	41	Holder	QNC3113	QNC3113	QNC3113	QNC3165	QNC3165
F	48	Cord Assy	CDP1484	CDP1484	QDP3072	CDP1484	CDP1484
	49	Card Remote Control Unit	Not used	Not used	Not used	CXE9605	CXE9605
	50	Cover	Not used	Not used	Not used	CNU3681	CNU3681

5 6 7 8 9.3 CD MECHANISM MODULE

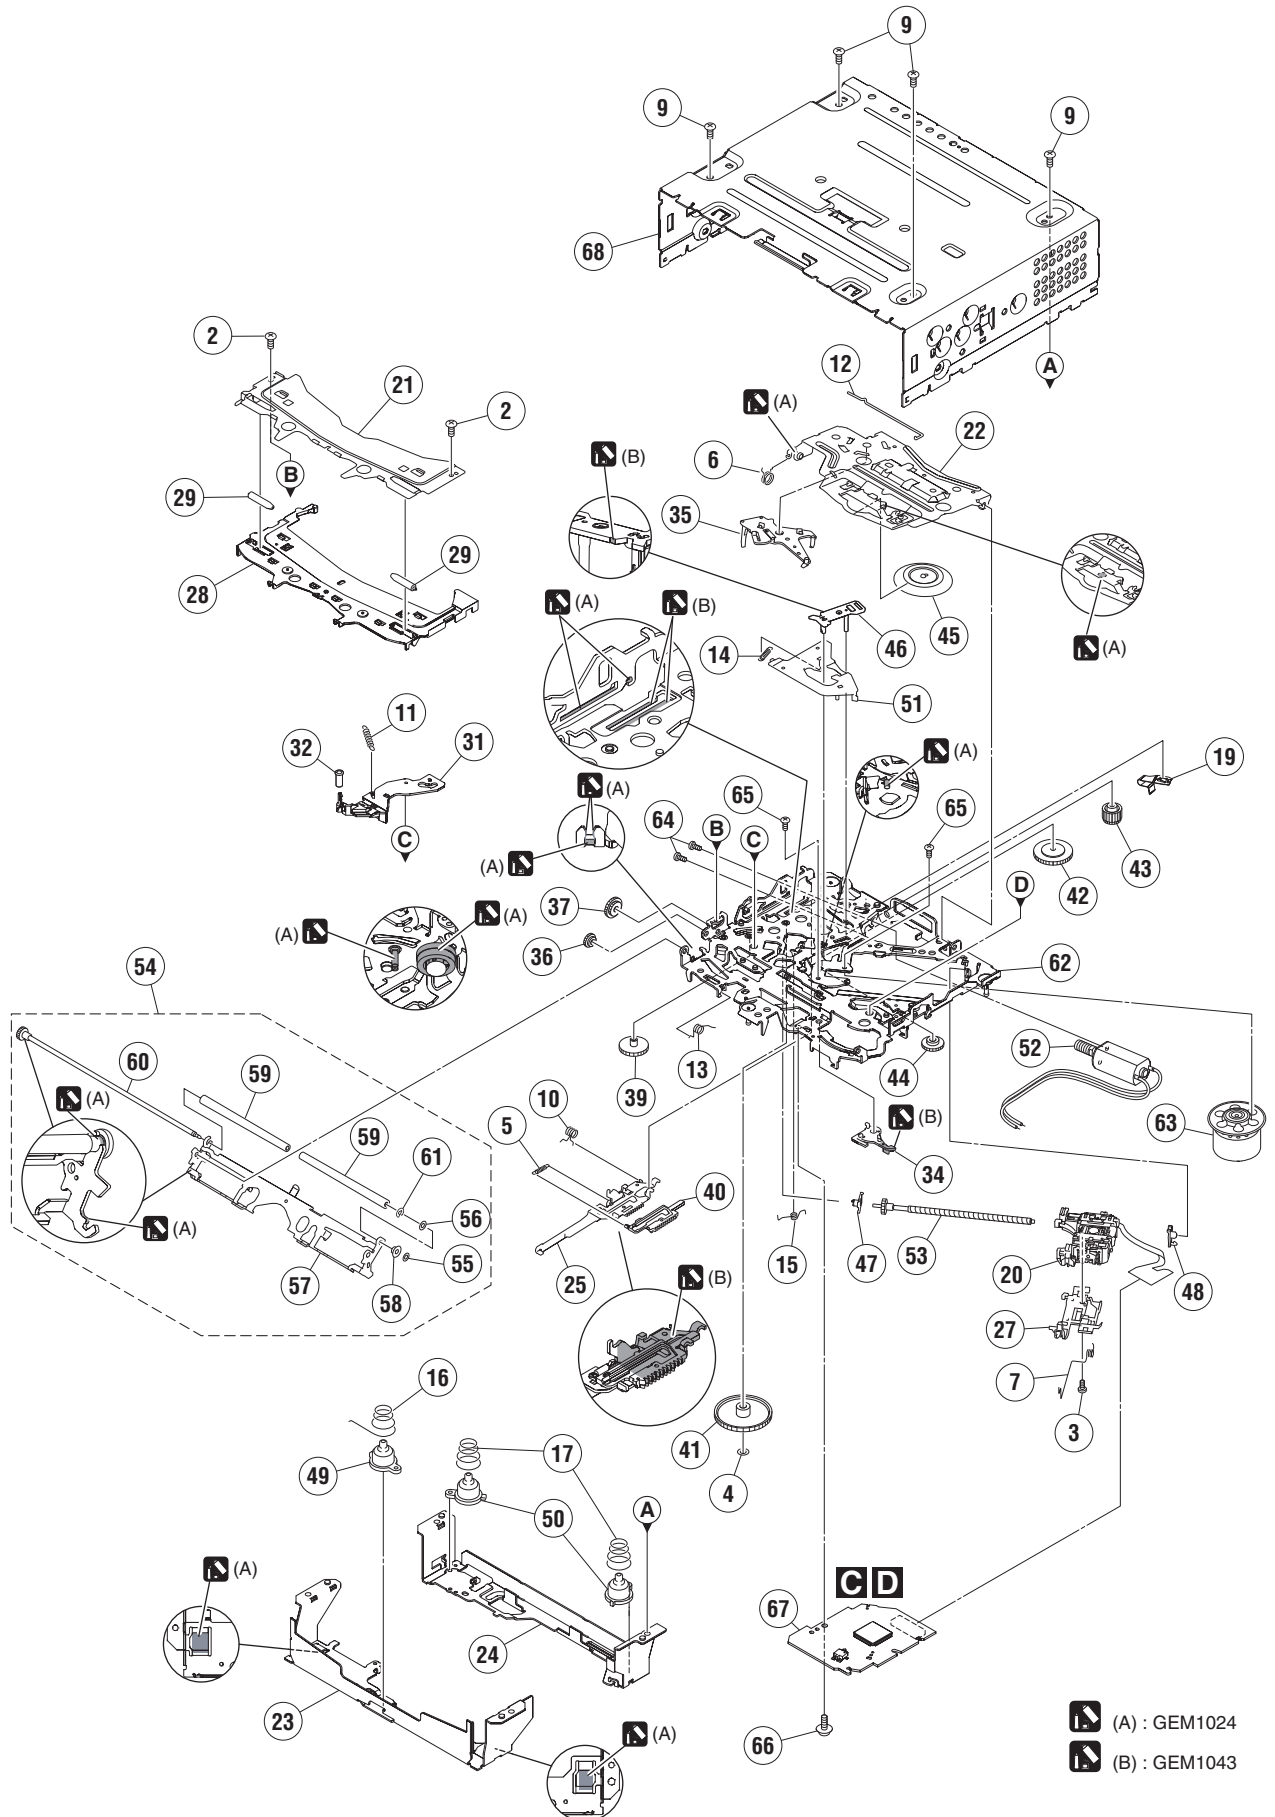

CD MECHANISM MODULE SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	•••••			36	Gear	CNW1180
	2	Screw	BSZ20P040FTC		37	Gear	CNW1181
	3	Screw(M2 x 4)	CBA1835		38	•••••	
	4	Washer	CBF1038		39	Gear	CNW1183
	5	Spring	CBH3010		40	Rack	CNW1184
	6	Spring	CBH2855		41	Gear	CNW1185
	7	Spring	CBH2856		42	Gear	CNW1186
	8	•••••			43	Gear	CNW1187
	9	Screw	BSZ26P060FTC		44	Gear	CNW2287
	10	Spring	CBH3011		45	Clamper	CNW1190
B	11	Coil Spring	CBH3095		46	Arm	CNW1192
	12	Spring	CBH3014		47	Holder	CNW1193
	13	Spring	CBH3145		48	Holder	CNW1194
	14	Spring	CBH3016		49	Damper	CNW1197
	15	Spring	CBH3017		50	Damper	CNW1198
	16	Spring	CBH3086		51	Arm	CNW1726
	17	Spring	CBH3019		52	Motor Unit(M2)(LOAD/CRG)	CXC4026
	18	•••••			53	Screw Unit	CXC8894
	19	Leaf Spring	CBL1824		54	Arm Assy	CXE8953
	20	Pickup Unit(P11)(Service) for CXK5808 CXX4754 Pickup Unit(P10.6)(Service) for CXK5807 CXX3556			55	Washer	CBF1037
C	21	Bracket	CND4553		56	Washer	CBF1038
	22	Arm	CND7608		57	Arm	CND6242
	23	Bracket	CND6127		58	Collar	CNW2444
	24	Bracket	CND5710		59	Roller	CNW2500
	25	Lever	CND6834		60	Gear Unit	CXE8952
	26	•••••			61	Washer	YE15FTC
	27	Rack	CNV8342		62	Chassis Unit	CXE9531
	28	Guide	CNW3489		63	Motor Unit(M1)(SPDL)	CXE2273
	29	Roller	CNW1172		64	Screw	JFZ20P025FTC
	30	•••••			65	Screw	JGZ17P022FTC
D	31	Arm	CNW2241		66	Screw	EBA1028
	32	Roller	CNW1175		67	CD Core Unit (S11.6VA)(for CXK5808) CWX4269 CD Core Unit (S11.6STD)(for CXK5807) CWX4023	
	33	•••••			68	Chassis	CNA3373
	34	Arm	CNW1177				
	35	Arm	CNW1178				

Notes: For No.20 and 67, please refer to "1.4 NOTES ON REPLACING PARTS" for part distinguish.

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
A:DEH-S5100BT/XNUC		IC 741	FlashROM Unit(A,B)
B:DEH-S5120BT/XNUC		IC 741	FlashROM Unit(C,D,E)
C:DEH-S510BT/XNEW5		IC 742	Flash Memory IC
D:DEH-X500BT/XNCS			
E:DEH-S5150BT/XNGS		IC 761	E-VOL System LSI(A,C,D,E)
		IC 761	E-VOL System LSI(B)
		IC 851	Tuner IC
		IC 1301	Power Amp IC(A,B,C,D)
		IC 1301	Power Amp IC(E)
Unit Number: QWM4914(A)			
Unit Number: QWM4915(B)		IC 1302	Logic IC
Unit Number: QWM4913(C)		IC 1401	IC(C,D,E)
Unit Number: QWM4917(D)		IC 1402	Op-amp IC(C,D,E)
Unit Number: QWM4917(E)		Q 111	Resistor Built-in Transistor
Unit Name : Tuner Amp Unit		Q 121	Resistor Built-in Transistor
Unit Number: QWM4984(A,B,D,E)			
Unit Number: QWM4985(C)		Q 141	Resistor Built-in Transistor
Unit Name : Keyboard Unit		Q 142	Resistor Built-in Transistor
Unit Number: CWX4269		Q 201	Resistor Built-in Transistor
Unit Name : CD Core Unit(11.6VA_T07)		Q 202	FET
Unit Number: CWX4023		Q 203	Power MOS FET
Unit Name : CD Core Unit(S11.6STD)			
		Q 204	Resistor Built-in Transistor
		Q 205	FET
		Q 441	Transistor
		Q 442	Resistor Built-in Transistor
		Q 701	Resistor Built-in Transistor

Notes:

For CD Core Unit, please refer to "1.4 NOTES ON REPLACING PARTS" for part distinguish.



Unit Number: QWM4914(A)
Unit Number: QWM4915(B)
Unit Number: QWM4913(C)
Unit Number: QWM4917(D)
Unit Number: QWM4917(E)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 201	Power supply IC	BD49101ARFS
IC 461	DC/DC Converter IC(B)	NJW4132U2-A
IC 501	Microprocessor IC	STA1080
IC 502	IC	S-80827CNMC-B8M
IC 701	IC	337S3959
IC 711	RAM IC	M12L128168A-5TG2N
IC 731	ROM IC	M95512-RMN6P
		Q 1101
		Q 1241
		Q 1242
		Q 1243
		Q 1276
		Q 1277
		Q 1278
		Q 1279
		Q 1301
		Q 1302
		Q 1401
		Q 1403
		D 101
		D 102
		D 111
		D 111
		D 121
		D 141
		D 201
		D 202

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 203	Schottky Diode	RB056LAM-40TF
D 204	Rectifier Diode	RR1VWM4STF
D 206	Schottky Diode	CMS30I30A
D 207	Schottky Diode	RB751SM-40
D 208	Schottky Diode	RB751SM-40

P 1243	Poly Switch
P 1276	Poly Switch
VA1101	SMD Varistor
VA1201	SMD Varistor
VA1202	SMD Varistor

FSMD075-24R
FSMD075-24R
MLV0402ES012V0010N
MLV0402ES012V0010N
MLV0402ES012V0010N

D 210	Schottky Diode	RB162MM-40TF
D 461	Schottky Diode(B)	RB551VM-30
D 501	Schottky Diode(A,B,C)	RB751SM-40
D 502	Schottky Diode(A,B,C)	RB751SM-40
D 1001	Zener Diode	SZESD7351HG

U 1001	BT Module
CN1101	Connector
CN1201	Connector
JA 101	Plug
JA 851	Antenna Jack

CWX4751
VKN1192
CKS6452
CKM1624
CKX1104

D 1101	Zener Diode	UDZV18(B)
D 1201	Zener Diode	RSB6R8SM
D 1204	Zener Diode	UDZV18(B)
D 1205	Zener Diode	UDZV18(B)
D 1206	Zener Diode	RSB6R8SM

JA 1241	RCA Jack(A,B,C)
JA 1241	RCA Jack(D,E)
JA 1276	Jack

CKB1113
CKB1109
CKN1103

RESISTORS

D 1207	Zener Diode	RSB6R8SM
D 1208	Zener Diode	RSB6R8SM
D 1209	Zener Diode	RSB6R8SM
D 1210	Zener Diode	RSB6R8SM
D 1301	Rectifier Diode(E)	RR1VWM4STF

R 111	
R 112	
R 113	(A,B,D,E)
R 113	(C)
R 114	(A,B,D,E)

XRS1/16SS223J
XRS1/16SS473J
XRS1/16SS682J
XRS1/16SS333J
RS1/4SA102J

D 1302	Rectifier Diode	RR1VWM4STF
D 1303	Schottky Diode	RB751SM-40
L 101	Choke Coil 120 uH	CTH1620
L 201	SMD SPL Inductor	CTH1521
L 202	SMD SPL Inductor	CTH1584

R 114	(C)
R 121	
R 123	
R 141	
R 142	

RS1/4SA122J
XRS1/16SS103J
RS1/4SA102J
XRS1/16SS104J
XRS1/16SS473J

L 203	Chip Beads	VTL1133
L 441	Inductor	CTF1736
L 461	SMD SPL Inductor(B)	CTH1674
L 501	Chip Beads	VTL1133
L 502	Inductor	CTF1645

R 143	
R 144	
R 145	
R 165	
R 201	

XRS1/16SS103J
XRS1/16SS472J
XRS1/16SS0R0J
XRS1/10SR0R0J
XRS1/16SS102J

L 504	Chip Beads	VTL1133
L 505	Chip Beads	VTL1133
L 511	Chip Beads	VTL1133
L 513	Chip Beads	VTL1133
L 514	Chip Beads	VTL1126

R 202	
R 203	
R 204	
R 206	
R 207	

XRS1/16SS3303D
XRS1/10SR0R0J
XRS1/10SR0R0J
XRS1/16SS472J
XRS1/16SS103J

L 517	Chip Beads	VTL1133
L 518	Chip Beads	VTL1133
L 519	Chip Beads	VTL1133
L 520	Chip Beads	VTL1133
L 711	Chip Beads	VTL1133

R 208	
R 209	
R 210	
R 211	
R 212	

XRS1/16SS473J
XRS1/10SR472J
XRS1/16SS103J
XRS1/10SR472J
XRS1/16SS103J

L 854	Inductor	LCMAR27J1608
L 855	Inductor	CTF1786
L 856	Inductor(A,B,C,D)	CTF1787
L 857	SMD SPL Inductor(E)	LCYAR82J2016
L 858	Chip Coil(E)	LCTAWR27J2520

R 213	
R 214	
R 215	
R 216	
R 217	

XRS1/16SS132J
XRS1/16SS102J
XRS1/16SS2403D
XRS1/16SS7502D
XRS1/16SS4303D

L 859	Chip Coil(E)	LCTAWR27J2520
L 860	Inductor(A,B,C,D)	LCYC150K1608
L 863	Inductor	LCMAR22J1608
L 1001	Chip Ferrite Bead	DTL1107
L 1101	Inductor	CTF1787

R 218	
R 219	
R 220	
R 221	
R 222	

XRS1/16SS4303D
XRS1/16SS273J
XRS1/16SS474J
XRS1/16SS473J
XRS1/16SS6802D

L 1102	Chip Beads	VTL1133
L 1103	Chip Beads	VTL1133
L 1104	Chip Beads	VTL1133
L 1201	Noise Filter	CTF1901
L 1401	Ferrite Bead(C,D,E)	CTF1528

R 223	0.02 ohm
R 224	
R 225	
R 226	
R 227	

CCN1401
XRS1/16SS6802D
XRS1/16SS102J
XRS1/16SS1203D
XRS1/16SS1802D

X 501	Resonator 24 MHz	CSS1773
X 502	Resonator 32.768 kHz	CSS1807
X 851	Crystal Resonator 55.46667 MHz	CSS1898
S 501	Switch(RESET)	CSG1020
P 852	Surge Absorber	IMSA-6803-01Y900

R 229	
R 230	
R 231	
R 232	

XRS1/16SS3902D
XRS1/16SS682J
XRS1/16SS4703D
XRS1/16SS1503D

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 233		XRS1/16SS1003D		R 547		XRS1/16SS473J	
				R 548		XRS1/16SS102J	
R 234		XRS1/16SS7503D					
R 235		XRS1/16SS1603D		R 550		XRS1/16SS103J	A
R 236		XRS1/16SS103J		R 551		XRS1/16SS103J	
R 238		XRS1/16SS822J		R 552		XRS1/16SS102J	
R 239		XRS1/16SS101J		R 554		XRS1/16SS222J	
				R 555		XRS1/16SS135J	
R 240		XRS1/16SS101J					
R 241		XRS1/16SS680J		R 556		XRS1/16SS101J	
R 242		XRS1/16SS4701D		R 557		XRS1/16SS101J	
R 243		XRS1/16SS393J		R 558		XRS1/16SS222J	
R 244		XRS1/16SS103J		R 559		XRS1/16SS222J	
				R 560		XRS1/16SS473J	
R 246		XRS1/10SR0R0J					
R 248		XRS1/16SS473J		R 561		XRS1/16SS103J	B
R 250		XRS1/10SR471J		R 562		XRS1/16SS472J	
R 263		XRS1/10SR103J		R 563		XRS1/16SS472J	
R 269		XRS1/16SS101J		R 564		XRS1/16SS472J	
				R 566		RAB4CQ103J	
R 301		XRS1/10SR0R0J					
R 441		XRS1/16SS103J		R 567		XRS1/16SS472J	
R 442		XRS1/10SR221J		R 568		XRS1/16SS0R0J	
R 461 (B)		XRS1/10SR0R0J		R 570		XRS1/16SS221J	
R 463 (B)		XRS1/16SS2202D		R 571		XRS1/16SS221J	
				R 572		XRS1/16SS472J	
R 464 (B)		XRS1/16SS4701D					
R 465 (B)		XRS1/16SS4303D		R 573		XRS1/16SS473J	
R 466 (B)		XRS1/10SR102J		R 574		XRS1/16SS473J	C
R 501 (B)		XRS1/16SS222J		R 575		XRS1/16SS473J	
R 503		XRS1/16SS3R3J		R 577		XRS1/16SS182J	
				R 578		XRS1/16SS473J	
R 504		XRS1/16SS3R3J					
R 505		XRS1/16SS221J		R 579		XRS1/16SS473J	
R 506		XRS1/16SS473J		R 580		XRS1/16SS473J	
R 507		XRS1/16SS473J		R 581		XRS1/16SS0R0J	
R 508		XRS1/16SS473J		R 583		XRS1/16SS0R0J	
				R 584		XRS1/16SS102J	
R 509		XRS1/16SS473J					
R 510		XRS1/16SS473J		R 585		XRS1/16SS0R0J	
R 511		XRS1/16SS473J		R 586		XRS1/16SS103J	
R 512		XRS1/16SS102J		R 587		XRS1/16SS102J	D
R 513		XRS1/16SS222J		R 588		XRS1/16SS221J	
				R 589		XRS1/16SS0R0J	
R 515		XRS1/16SS103J					
R 517		XRS1/16SS103J		R 590		XRS1/16SS221J	
R 518		XRS1/16SS472J		R 591		XRS1/16SS361J	
R 519		XRS1/16SS271J		R 593		XRS1/16SS0R0J	
R 521		XRS1/16SS473J		R 594		XRS1/16SS0R0J	
				R 596		XRS1/16SS0R0J	
R 522		XRS1/16SS0R0J					
R 524		XRS1/16SS3001D		R 597		XRS1/16SS102J	
R 525		XRS1/16SS103J		R 598		XRS1/16SS102J	
R 526		XRS1/16SS1213F		R 599		XRS1/16SS102J	
R 531		XRS1/16SS222J		R 603		XRS1/16SS101J	E
				R 604		XRS1/16SS101J	
R 532		XRS1/16SS222J					
R 533		XRS1/10SR103J		R 605		XRS1/16SS101J	
R 534		XRS1/10SR103J		R 611		XRS1/16SS472J	
R 536		XRS1/16SS472J		R 614		XRS1/16SS473J	
R 538 (A,C)		XRS1/16SS472J		R 615		XRS1/16SS103J	
				R 617		XRS1/16SS473J	
R 538 (D)		XRS1/16SS223J					
R 538 (E)		XRS1/16SS103J		R 627		XRS1/16SS153J	
R 539 (B,E)		XRS1/16SS473J		R 628		XRS1/16SS153J	
R 540		XRS1/16SS103J		R 629		XRS1/16SS472J	
R 541		XRS1/16SS103J		R 630		XRS1/16SS101J	
				R 631		XRS1/16SS0R0J	F
R 544		XRS1/16SS102J					
R 545		XRS1/16SS473J		R 632		XRS1/16SS101J	
R 546		XRS1/16SS273J		R 633		XRS1/16SS101J	

	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	R 634	XRS1/16SS101J	R 745	XRS1/16SS330J
	R 635	XRS1/16SS101J	R 746	XRS1/16SS103J
	R 636	XRS1/16SS101J	R 747	XRS1/16SS330J
			R 748	XRS1/16SS330J
	R 637	XRS1/16SS221J		
	R 638	XRS1/16SS221J	R 749	XRS1/16SS330J
	R 639	XRS1/16SS101J	R 750	XRS1/16SS103J
	R 640	XRS1/16SS101J	R 751	XRS1/16SS103J
	R 642	XRS1/16SS221J	R 753	XRS1/16SS103J
			R 754	XRS1/16SS330J
	R 643	XRS1/16SS101J		
	R 644	XRS1/16SS473J	R 755	XRS1/16SS0R0J
	R 645	XRS1/16SS101J	R 756	XRS1/16SS0R0J
	R 646	XRS1/16SS101J	R 757	XRS1/16SS0R0J
B	R 647	XRS1/16SS102J	R 761	XRS1/10SR221J
			R 762	XRS1/16SS0R0J
	R 648	XRS1/16SS102J		
	R 650	XRS1/16SS101J	R 763	XRS1/16SS101J
	R 651	XRS1/16SS102J	R 764	XRS1/16SS101J
	R 652	XRS1/16SS101J	R 765	XRS1/16SS222J
	R 653	XRS1/16SS0R0J	R 766	XRS1/16SS0R0J
			R 767	XRS1/16SS104J
	R 657	XRS1/16SS101J		
	R 658	XRS1/16SS101J	R 768	XRS1/16SS181J
	R 659	XRS1/16SS101J	R 851	XRS1/16SS105J
	R 660	XRS1/16SS101J	R 852	XRS1/16SS105J
C	R 661	XRS1/16SS101J	R 853	XRS1/16SS391J
			R 853	XRS1/16SS101J
	R 663	XRS1/16SS101J		
	R 664	XRS1/16SS101J	R 857	XRS1/16SS0R0J
	R 672	XRS1/16SS101J	R 863	XRS1/16SS103J
	R 690	XRS1/16SS472J	R 868	XRS1/16SS103J
	R 701	XRS1/16SS103J	R 870	XRS1/16SS101J
			R 871	XRS1/16SS0R0J
	R 702	XRS1/16SS472J		
	R 703	XRS1/16SS101J	R 872	XRS1/16SS0R0J
	R 704	XRS1/16SS101J	R 873	XRS1/16SS182J
	R 705	XRS1/16SS222J	R 874	XRS1/16SS101J
	R 706	XRS1/16SS222J	R 875	XRS1/16SS472J
			R 890	XRS1/16SS0R0J
D	R 707	XRS1/16SS472J		
	R 708	XRS1/16SS272J	R 1001	XRS1/16SS0R0J
	R 709	XRS1/16SS473J	R 1002	XRS1/16SS221J
	R 710	XRS1/16SS0R0J	R 1004	XRS1/16SS473J
	R 714	RAB4CQ121J	R 1005	XRS1/16SS221J
			R 1006	XRS1/16SS0R0J
	R 715	RAB4CQ121J		
	R 716	RAB4CQ121J	R 1007	XRS1/16SS0R0J
	R 717	RAB4CQ121J	R 1011	XRS1/16SS221J
	R 718	RAB4CQ121J	R 1012	XRS1/16SS221J
	R 719	RAB4CQ121J	R 1013	XRS1/16SS0R0J
			R 1017	XRS1/16SS473J
E	R 720	RAB4CQ121J		
	R 721	RAB4CQ121J	R 1018	XRS1/16SS473J
	R 722	RAB4CQ121J	R 1101	XRS1/16SS104J
	R 723	XRS1/10SR0R0J	R 1104	XRS1/16SS472J
	R 724	XRS1/16SS121J	R 1105	XRS1/16SS221J
			R 1106	XRS1/16SS221J
	R 731	XRS1/16SS330J		
	R 732	XRS1/16SS330J	R 1107	XRS1/16SS101J
	R 733	XRS1/16SS103J	R 1108	XRS1/16SS221J
	R 734	XRS1/16SS103J	R 1109	XRS1/16SS101J
	R 735	XRS1/16SS103J	R 1110	XRS1/16SS102J
			R 1112	XRS1/16SS221J
F	R 736	XRS1/16SS330J		
	R 737	XRS1/16SS330J	R 1114	XRS1/16SS473J
	R 741	XRS1/16SS330J	R 1115	XRS1/16SS472J
	R 742	XRS1/16SS103J	R 1116	XRS1/16SS472J
	R 743	XRS1/16SS103J	R 1117	XRS1/16SS472J
			R 1119	XRS1/16SS473J
	R 744	XRS1/16SS330J		

5	6	7	8	
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
R 1120	XRS1/16SS151J	R 1308 (A,B,C,D)	RS1/8SQ0R0J	A
R 1121	XRS1/16SS151J	R 1309 (A,B,C,D)	RS1/8SQ0R0J	
R 1122	XRS1/16SS151J	R 1310 (E)	RS1/8SQ0R0J	
R 1201	XRS1/10SR222J	R 1311 (E)	RS1/8SQ0R0J	
R 1203	XRS1/16SS223J	R 1312	XRS1/16SS103J	
R 1204	XRS1/16SS223J	R 1313	XRS1/16SS102J	
R 1205	XRS1/10SR222J	R 1321 (A,C,D,E)	XRS1/16SS0R0J	
R 1206	XRS1/10SR0R0J	R 1321 (B)	XRS1/16SS432J	
R 1207	XRS1/10SR0R0J	R 1322 (A,C,D,E)	XRS1/16SS0R0J	
R 1208	XRS1/10SR0R0J	R 1322 (B)	XRS1/16SS432J	
R 1209	XRS1/10SR222J	R 1323 (A,C,D,E)	XRS1/16SS0R0J	B
R 1210	XRS1/10SR222J	R 1323 (B)	XRS1/16SS432J	
R 1211	XRS1/10SR222J	R 1324 (A,C,D,E)	XRS1/16SS0R0J	
R 1212	XRS1/10SR222J	R 1324 (B)	XRS1/16SS432J	
R 1213	XRS1/16SS123J	R 1325 (B)	XRS1/16SS272J	
R 1214	XRS1/10SR222J	R 1326 (B)	XRS1/16SS272J	
R 1215	XRS1/10SR101J	R 1327 (B)	XRS1/16SS272J	
R 1218 (A,B,C)	XRS1/16SS0R0J	R 1328 (B)	XRS1/16SS272J	
R 1219 (A,B,C)	XRS1/16SS0R0J	R 1401 (C,D,E)	XRS1/16SS221J	
R 1220	XRS1/16SS0R0J	R 1402 (C,D,E)	XRS1/16SS102J	
R 1221	XRS1/16SS0R0J	R 1403 (C,D,E)	XRS1/16SS103J	C
R 1222	XRS1/16SS0R0J	R 1407 (C,D,E)	XRS1/16SS272J	
R 1223	XRS1/16SS0R0J	R 1408 (C,D,E)	XRS1/16SS332J	
R 1241 (A,C)	XRS1/16SS821J	R 1409 (C,D,E)	XRS1/16SS333J	
R 1241 (B)	XRS1/16SS470J	R 1410 (C,D,E)	XRS1/16SS163J	
R 1242 (A,C)	XRS1/16SS821J	R 1411 (C,D,E)	XRS1/16SS824J	
R 1242 (B)	XRS1/16SS470J	R 1412 (C,D,E)	XRS1/16SS563J	
R 1243 (A,C,D,E)	XRS1/16SS821J	R 1413 (C,D,E)	XRS1/16SS0R0J	
R 1243 (B)	XRS1/16SS470J	R 1414 (C,D,E)	XRS1/16SS0R0J	
R 1244 (A,C,D,E)	XRS1/16SS821J	R 1415 (C,D,E)	XRS1/16SS273J	
R 1244 (B)	XRS1/16SS470J	R 1416	XRS1/10SR0R0J	D
R 1245 (A,C,D,E)	XRS1/16SS821J	R 1421 (A,B)	XRS1/16SS0R0J	
R 1245 (B)	XRS1/16SS470J	R 1422 (A,B)	XRS1/16SS0R0J	
R 1246 (A,C,D,E)	XRS1/16SS821J	R 1428 (C,D,E)	XRS1/16SS0R0J	
R 1246 (B)	XRS1/16SS470J	R 1431	XRS1/10SR0R0J	
R 1247	XRS1/16SS223J	CAPACITORS		
R 1248	XRS1/16SS223J	C 101 2 200 uF/16V	CCH1659	
R 1249	XRS1/16SS223J	C 102	CKSRYB103K50	
R 1250	XRS1/16SS223J	C 103	CKSSYB102K50	
R 1251 (A,B,C)	XRS1/16SS223J	C 104	CKSSYB102K50	
		C 105	CKSSYB102K50	
R 1252 (A,B,C)	XRS1/16SS223J	C 106	CKSSYB102K50	E
R 1253 (A,B,C)	XRS1/16SS0R0J	C 107	CKSSYB102K50	
R 1254 (D,E)	XRS1/16SS0R0J	C 108	CKSSYB102K50	
R 1255 (A,B,C)	XRS1/16SS0R0J	C 109	CKSSYB102K50	
R 1256 (D,E)	XRS1/16SS0R0J	C 110	CKSSYB102K50	
R 1276 (D,E)	XRS1/16SS8201D	C 111	CKSRYX104K50	F
R 1277 (D,E)	XRS1/16SS6800D	C 121	CKSSYB104K16	
R 1278 (A,B,C)	XRS1/16SS102J	C 122	CKSRYX105K50	
R 1278 (D,E)	XRS1/16SS1001D	C 201	CKSSYB681K50	
R 1279 (D,E)	XRS1/16SS6800D	C 202	CEVW221M16	
R 1280 (A,B,C)	XRS1/16SS102J	C 203	CKSRYX106M6R3	
R 1280 (D,E)	XRS1/16SS1001D	C 204	CEVQW221M6R3	
R 1281	XRS1/16SS101J	C 205	CKSRYX105K50	
R 1282	XRS1/16SS101J	C 206	CKSYX106K35	
R 1283 (D,E)	XRS1/16SS8201D	C 207	CKSSYB104K10	
R 1301	XRS1/16SS123J	C 208	CCSSCH471J50	
R 1302	XRS1/16SS103J	C 209	CKSSYB681K50	
R 1303	XRS1/16SS221J			
R 1306	XRS1/16SS103J			
R 1307	XRS1/16SS0R0J			

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	C 210	2 200 uF/16V	CCH1659	C 509	CKSRYX475K6R3
	C 211		CKSQYX106K10	C 510	CKSSYB104K10
	C 212		CEAT102M16	C 511	CKSRYX475K6R3
				C 512	CKSSYB104K10
	C 213		CKSSYB222K50		
	C 214		CKSRYX106M6R3	C 513	CKSRYX475K6R3
	C 215		CKSSYB104K16	C 514	CKSSYB104K10
	C 216		CKSSYX104K50	C 515	CKSSYX105K10
	C 218		CKSYX106K35	C 516	CKSRYX225K16
				C 517	CKSSYB104K10
	C 220		CKSYX106K35		
	C 221		CKSYX106K35	C 518	CCSSCH100D50
	C 222		CEVW221M16	C 519	CCSSCH100D50
	C 223		CCSSCH221J50	C 520	CKSRYX475K6R3
	C 224		CKSRYX105K16	C 521	CKSSYB104K10
				C 522	CKSRYX475K6R3
B	C 225		CKSRYX105K16		
	C 227		CCSSCH221J50	C 523	CKSRYX475K6R3
	C 228		CKSSYB102K50	C 524	CKSRYX475K6R3
	C 230		CKSQYX106K10	C 525	CKSRYX106M6R3
	C 231		CKSSYB104K16	C 526	CKSSYB103K16
				C 527	CKSRYX106M6R3
	C 232		CEHVW101M6R3		
	C 234		CKSRYX475K6R3	C 528	CKSSYB103K16
	C 236		CKSYX106K35	C 529	CKSSYB104K10
	C 237		CKSSYB104K16	C 530	CKSRYX475K6R3
	C 238		CKSYX226M16	C 531	CKSSYX105K10
				C 532	CKSSYX105K10
C	C 239		CCSSCH100D50		
	C 240		CCSSCH100D50	C 533	CKSRYX475K6R3
	C 241		CKSQYX106K10	C 534	CKSSYB104K10
	C 242		CKSSYB104K16	C 535	CEVW221M10
	C 243		CKSYX106K35	C 536	CCSSCH101J50
				C 537	CKSSYB103K16
	C 244		CKSSYB102K50		
	C 245		CKSYX106K35	C 538	CKSRYX106M6R3
	C 246		CKSRYX104K50	C 539	CKSSYB103K16
	C 247		CKSSYX105K10	C 540	CKSRYX106M6R3
	C 248		CKSRYX105K50	C 541	CKSSYB222K50
				C 542	CKSSYB104K10
	C 249		CCSSCH820J50		
	C 250		CKSRYX225K10	C 543	CKSSYX105K10
	C 251		CKSSYX105K10	C 544	CKSSYB473K16
	C 252		CKSRYX475K6R3	C 545	CCSSCH100D50
D	C 253		CKSRYX105K50	C 546	CCSSCH120J50
				C 551	CKSSYB104K10
	C 255		CKSSYX105K6R3		
	C 257		CKSYX106K35	C 552	CKSRYX475K6R3
	C 259		CKSQYX106K10	C 553	CKSRYX106M6R3
	C 260		CKSQYX106K10	C 555	CKSSYB103K16
	C 261		CKSSYB104K10	C 556	CKSSYB104K10
				C 559	CKSQYB224K50
	C 267		CKSSYB104K16		
	C 270		CKSRYX475K6R3	C 560	CKSSYB103K16
	C 441		CCSSCH101J50	C 565	CCSSCH270J50
	C 442		CKSRYX106M6R3	C 566	CCSSCH330J50
E	C 443		CCSSCH101J50	C 575	CKSSYB104K10
				C 576	CKSSYB102K50
	C 444		CKSRYX106M6R3		
	C 461 (B)		CKSYX106K35	C 580	CKSRYX104K50
	C 462 (B)		CKSYX106K35	C 588	CKSSYB104K10
	C 463 (B)		CKSQYX106K16	C 590	CKSSYB472K25
	C 464 (B)		CKSSYB221K50	C 591	CKSSYB472K25
				C 592	CKSSYB472K25
	C 502		CKSSYB104K10		
	C 503		CKSRYX475K6R3	C 593	CKSSYB472K25
	C 505		CKSSYB104K10	C 595	CKSSYB472K25
	C 506		CKSRYX475K6R3	C 701	CKSSYB104K10
F	C 507		CKSRYX475K6R3	C 702	CKSSYB104K10
				C 712	CKSSYX105K10
	C 508		CKSSYB104K10		

5		6		7		8	
Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.		
C 713		CKSSYB104K10	C 882		CKSSYX105K10	A	
C 714		CKSSYX105K10	C 884	(A,C,D,E)	CKSSYB104K16		
C 715		CKSSYX105K10	C 885	(A,B,C,D)	CKSRYB103K50		
C 716		CKSSYX105K10	C 890		CKSRYX106M6R3		
C 717		CKSRYX475K6R3	C 891		CKSRYX225K10		
C 718		CKSSYX105K10	C 1003		CKSSYB104K16	B	
C 719		CKSSYB104K10	C 1004		CKSSYB104K16		
C 721		CKSSYX105K16	C 1101		CKSSYB103K16		
C 722		CKSSYB104K10	C 1105		CKSSYX105K10		
C 723		CKSSYB102K50	C 1106		CKSSYX105K10		
C 729		CKSQYX106K10	C 1109		CKSSYB102K50	C	
C 731		CKSSYB104K10	C 1201	1 000 pF	CCG1345		
C 741		CKSRYX225K10	C 1202		CKSSYX104K50		
C 742		CKSSYB104K10	C 1203		CKSRYX104K50		
C 743		CKSSYB104K10	C 1204		CKSRYX105K16		
C 761		CKSRYX105K16	C 1205		CCSRCH221J50	D	
C 762		CKSRYX105K16	C 1206		CCSRCH221J50		
C 763		CKSRYX105K16	C 1210		CKSRYX105K16		
C 767	(C,D,E)	CKSRYX105K16	C 1212		CCSSCH470J50		
C 768	(C,D,E)	CKSRYX105K16	C 1217		CCSSCH121J50		
C 769		CKSRYX105K16	C 1221		CKSYX106K35	E	
C 770		CKSRYX105K16	C 1241	(A,C)	CKSQYX106K10		
C 771		CKSRYX105K16	C 1241	(B)	CKSQYX106K25		
C 772		CKSRYX105K16	C 1242	(A,C)	CKSQYX106K10		
C 773		CKSRYX105K16	C 1242	(B)	CKSQYX106K25		
C 774		CCSSCH151J50	C 1243	(A,C,D,E)	CKSQYX106K10	F	
C 775		CCSSCH151J50	C 1243	(B)	CKSQYX106K25		
C 776		CKSSYX104K50	C 1244	(A,C,D,E)	CKSQYX106K10		
C 777		CKSYX106K35	C 1244	(B)	CKSQYX106K25		
C 778	(C,D,E)	CKSRYX105K16	C 1245	(A,C,D,E)	CKSQYX106K10		
C 779		CKSQYX106K10	C 1245	(B)	CKSQYX106K25	G	
C 780		CKSSYB104K16	C 1246	(A,C,D,E)	CKSQYX106K10		
C 781		CKSRYX105K16	C 1246	(B)	CKSQYX106K25		
C 782		CKSRYX105K16	C 1247	(A,C,D,E)	CKSSYB102K50		
C 783		CKSRYX105K16	C 1247	(B)	CKSSYB103K16		
C 784		CKSRYX105K16	C 1248	(A,C,D,E)	CKSSYB102K50	H	
C 785		CKSRYX105K16	C 1248	(B)	CKSSYB103K16		
C 787		CKSQYX106K16	C 1249	(A,C,D,E)	CKSSYB102K50		
C 788		CKSQYX106K16	C 1249	(B)	CKSSYB103K16		
C 790		CKSRYX106M6R3	C 1250	(A,C,D,E)	CKSSYB102K50		
C 791		CKSSYB103K25	C 1250	(B)	CKSSYB103K16	I	
C 794		CCSSCH101J50	C 1251	(A,C)	CKSSYB102K50		
C 853		CCSSCH120J50	C 1251	(B)	CKSSYB103K16		
C 854		CCSSCH471J50	C 1252	(A,C)	CKSSYB102K50		
C 856		CKSSYX104K50	C 1252	(B)	CKSSYB103K16		
C 857		CKSSYX104K50	C 1253		CKSSYB103K16	J	
C 858		CCSSCH5R0C50	C 1254		CKSSYB104K10		
C 859		CCSSCH120J50	C 1255		CKSSYB331K50		
C 860	(E)	CCSSCK2R0C50	C 1256		CKSSYX105K10		
C 861	(E)	CCSSCK2R0C50	C 1276		CKSSYB104K16		
C 862	(E)	CCSSCK2R0C50	C 1277		CKSSYB104K16	K	
C 863	(E)	CCSSCK2R0C50	C 1278		CKSSYB104K16		
C 865		CKSRYX225K10	C 1279		CKSSYB104K16		
C 866		CKSSYB224K6R3	C 1280		CKSSYB102K50		
C 867		CKSSYB102K50	C 1281		CKSSYB102K50		
C 870		CKSSYB102K50	C 1301		CKSQYB474K25	L	
C 872		CKSSYB104K10	C 1302		CKSQYB474K25		
C 874		CCSSCH180J50	C 1303		CKSQYB474K25		
C 875		CKSSYB104K10	C 1304		CKSQYB474K25		
C 878		CKSSYB152K50					

Circuit Symbol and No.**Part No.**

C 1305		CKSSYB104K10
C 1306		CKSRYB474K10
C 1308		CKSRYX104K50
C 1310		CKSQYX106K16
C 1311		CKSRYX225K10
C 1312		CKSRYX104K50
C 1317		CKSRYX104K50
C 1318		CKSRYX104K50
C 1321		CKSRYX106M6R3
C 1401 (C,D,E)		CKSSYB104K10
C 1403 (C,D,E)		CKSRYX106M6R3
C 1404 (C,D,E)		CKSSYB104K10
C 1405 (C,D,E)		CKSSYX105K10
C 1406 (C,D,E)		CKSSYB104K10
C 1407 (C,D,E)		CKSSYB182K50
C 1408 (C,D,E)		CKSRYX105K25
C 1409 (C,D,E)		CKSSYX105K10
C 1410 (C,D,E)		CCSSCH6R0D50
C 1411 (C,D,E)		CKSSYB102K50
C 1412 (C,D,E)		CKSSYB104K10
C 1421 (C,D,E)		CKSRYX105K16
C 1422 (C,D,E)		CKSRYX105K16
C 1424		CKSRYB474K10

Circuit Symbol and No.**Part No.**

S 1832	Push Switch	CSG1155
S 1833	Push Switch	CSG1155
S 1834	Push Switch	CSG1155
S 1835	Push Switch	CSG1155
S 1836	Rotary Encoder(MULTI-CONTROL)	CSD1212
CN1941	Connector	CKS6287
JA 1901	Connector	CKS6443
JA 1921	Jack	CKN1090
V 1801	Segment LCD	CAW2065

RESISTORS

R 1802		XRS1/10SR472J
R 1821		XRS1/10SR273J
R 1852 (C)		XRS1/10SR473J
R 1854 (A,B,D,E)		XRS1/10SR101J
R 1921		XRS1/10SR221J
R 1922		XRS1/10SR221J
R 1923		XRS1/10SR0R0J
R 1941		XRS1/10SR222J
R 1942		XRS1/10SR222J
R 1943		XRS1/10SR222J
R 1944		XRS1/10SR222J
R 1951		XRS1/10SR332J
R 1952		XRS1/10SR152J
R 1953		XRS1/10SR332J
R 1954		XRS1/10SR152J
R 1955		XRS1/10SR332J
R 1956		XRS1/10SR152J
R 1957		XRS1/10SR680J
R 1958		XRS1/10SR680J
R 1959		XRS1/10SR680J

R 1960		XRS1/10SR332J
R 1961		XRS1/10SR152J
R 1962		XRS1/10SR332J
R 1963		XRS1/10SR152J
R 1964		XRS1/10SR332J
R 1965		XRS1/10SR152J
R 1966		XRS1/10SR680J
R 1967		XRS1/10SR680J
R 1968		XRS1/10SR680J
R 1969		XRS1/10SR221J

R 1970		XRS1/10SR121J
R 1971		XRS1/10SR121J

CAPACITORS

C 1801		CKSRYX105K16
C 1851 (A,B,D,E)		CKSQYX106K10
C 1901		CCSRCH471J50
C 1904		CKSRYX475K10
C 1921 1 000 pF		CCG1345
C 1922 1 000 pF		CCG1345

**Unit Number: CWX4269****Unit Name : CD Core Unit(11.6VA_T07)****MISCELLANEOUS**

B
Unit Number: QWM4984(A,B,D,E)
Unit Number: QWM4985(C)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	Driver IC	BU97540KV-M
IC 1851	IR RC REC Module(A,B,D,E)	PNJ4833M
Q 1951	Bipolar Transistor	LSCR523UB
Q 1952	Bipolar Transistor	LSCR523UB
Q 1953	Bipolar Transistor	LSCR523UB
Q 1954	Bipolar Transistor	LSCR523UB
Q 1955	Bipolar Transistor	LSCR523UB
Q 1956	Bipolar Transistor	LSCR523UB
D 1901	Zener Diode	SZESD7351HG
D 1902	Zener Diode	SZESD7351HG
D 1941	Zener Diode	RSB6R8SM
D 1942	Zener Diode	RSB6R8SM
D 1951	LED	NSSM124F-A21107
D 1952	LED	NSSM124F-A21107
D 1953	LED	NSSM124F-A21107
D 1954	LED	NSSM124F-A21107
D 1955	LED	NSSM124F-A21107
S 1821	Push Switch	CSG1155
S 1822	Push Switch	CSG1155
S 1823	Push Switch	CSG1155
S 1824	Push Switch	CSG1155
S 1825	Push Switch	CSG1155
S 1826	Push Switch	CSG1155
S 1827	Push Switch	CSG1155
S 1828	Push Switch	CSG1155
S 1829	Push Switch	CSG1155
S 1830	Push Switch	CSG1155
S 1831	Push Switch	CSG1155

5

<

Circuit Symbol and No.**Part No.**

R 254
R 260
R 264
R 281
R 282

RS1/16SS104J
RS1/16SS103J
RS1/16SS102J
RS1/16SS560J
RS1/16SS560J

R 291
R 294
R 303
R 304
R 305

RS1/16SS560J
RS1/16SS471J
RS1/16SS123J
RS1/16SS123J
RS1/16SS102J

R 306
R 307
R 308
R 309
R 310

RS1/16SS472J
RS1/16SS102J
RS1/16SS472J
RS1/16SS473J
RS1/16SS472J

R 311
R 312
R 313
R 701
R 702

RS1/16SS472J
RS1/16SS472J
RS1/16SS472J
RS1/16SS101J
RS1/16SS101J

R 706

RS1/16SS221J

CAPACITORS

C 104
C 203
C 209
C 210
C 211

CKSQYB475K6R3
CKSSYB104K10
CKSRYB104K16
CKSSYB104K10
CKSSYB104K10

C 212
C 213
C 214
C 215
C 216

CKSSYB104K10
CKSSYB332K50
CKSSYB473K16
CKSSYB104K10
CKSSYB182K50

C 217
C 218
C 219
C 220
C 221

CCSSCH560J50
CCSSCH4R0C50
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10

C 222
C 223
C 224
C 225
C 228

CKSSYB104K10
CCSSCH680J50
CCSSCH470J50
CKSSYB103K16
CCSSCH270J50

C 229
C 233
C 236
C 238
C 299

CKSSYB104K10
CKSSYB103K16
CKSSYB104K10
CKSRYB104K16
CKSSYB104K10

C 302
C 303
C 304
C 305
C 306

CKSSYB102K50
CKSSYB102K50
CKSSYB223K16
CKSSYB104K10
CKSSYB104K10

C 307
C 308
C 710

CKSRYB105K10
CKSRYB105K10
CKSSYB102K50