● CD Player Service Precautions

1. For pickup unit(CXX1480) handling, please refer to"Disassembly"(see page 38).
   During replacement, handling precautions shall be taken to prevent an electrostatic discharge(protection by a jumper-solder).
2. During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.
3. Please checking the grating after changing the pickup unit(see page 35).
4. In this product, because the memory capacity of the microcomputer is insufficient, the test mode is not installed. However grating of the pickup unit can be confirmed.

1. SAFETY INFORMATION

CAUTION


This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.
Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty.
If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

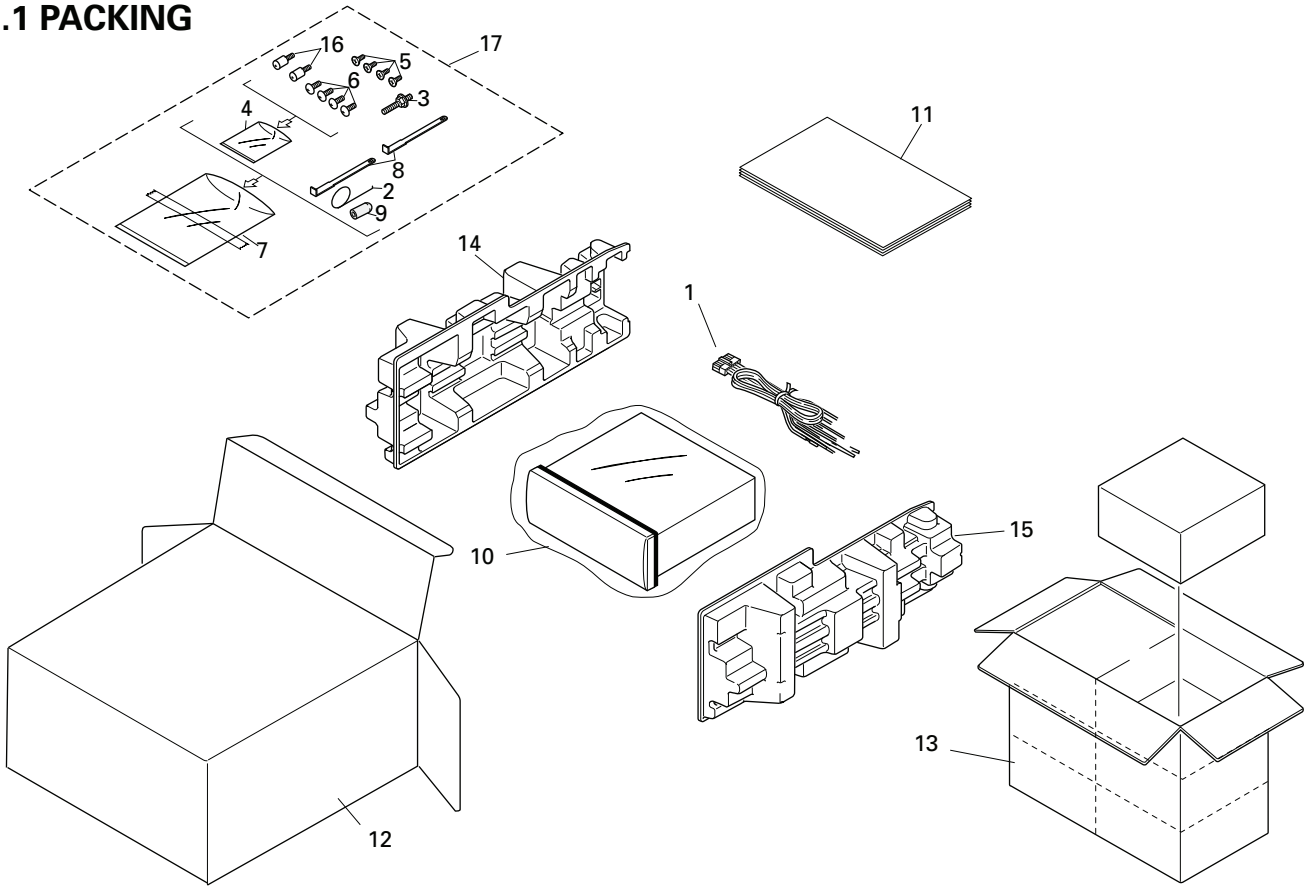

NOTE:

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDE6468
	2	Spring	CBH1650
	3	Screw	CBA1002
*	4	Polyethylene Sheet	CNM4338
	5	Screw	CRZ50P090FMC
	6	Screw	TRZ50P080FMC
*	7	Polyethylene Bag	CEG-158
	8	Handle	CNC5395
	9	Bush	CNV3930
	10	Polyethylene Bag	CEG1173
	11-1	Owner's Manual	CRD3487
	11-2	Installation Manual	CRD3492
*	11-3	Card	ARY1048
	12	Carton	See Contrast table(2)
	13	Contain Box	See Contrast table(2)
	14	Protector	CHP2421
	15	Protector	CHP2422
	16	Screw(M3x4)	CBA1488
	17	Accessory Assy	CEA2781

(2) CONTRAST TABLE


DEH-1400/XM/UC and DEH-14/XM/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-1400/XM/UC	DEH-14/XM/UC
12	Carton	CHG4489	CHG4493
13	Contain Box	CHL4489	CHL4493

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-1400/XM/UC	CRD3487	English, French, Spanish
DEH-14/XM/UC	CRD3492	

DEH-1400,14
2.2 EXTERIOR

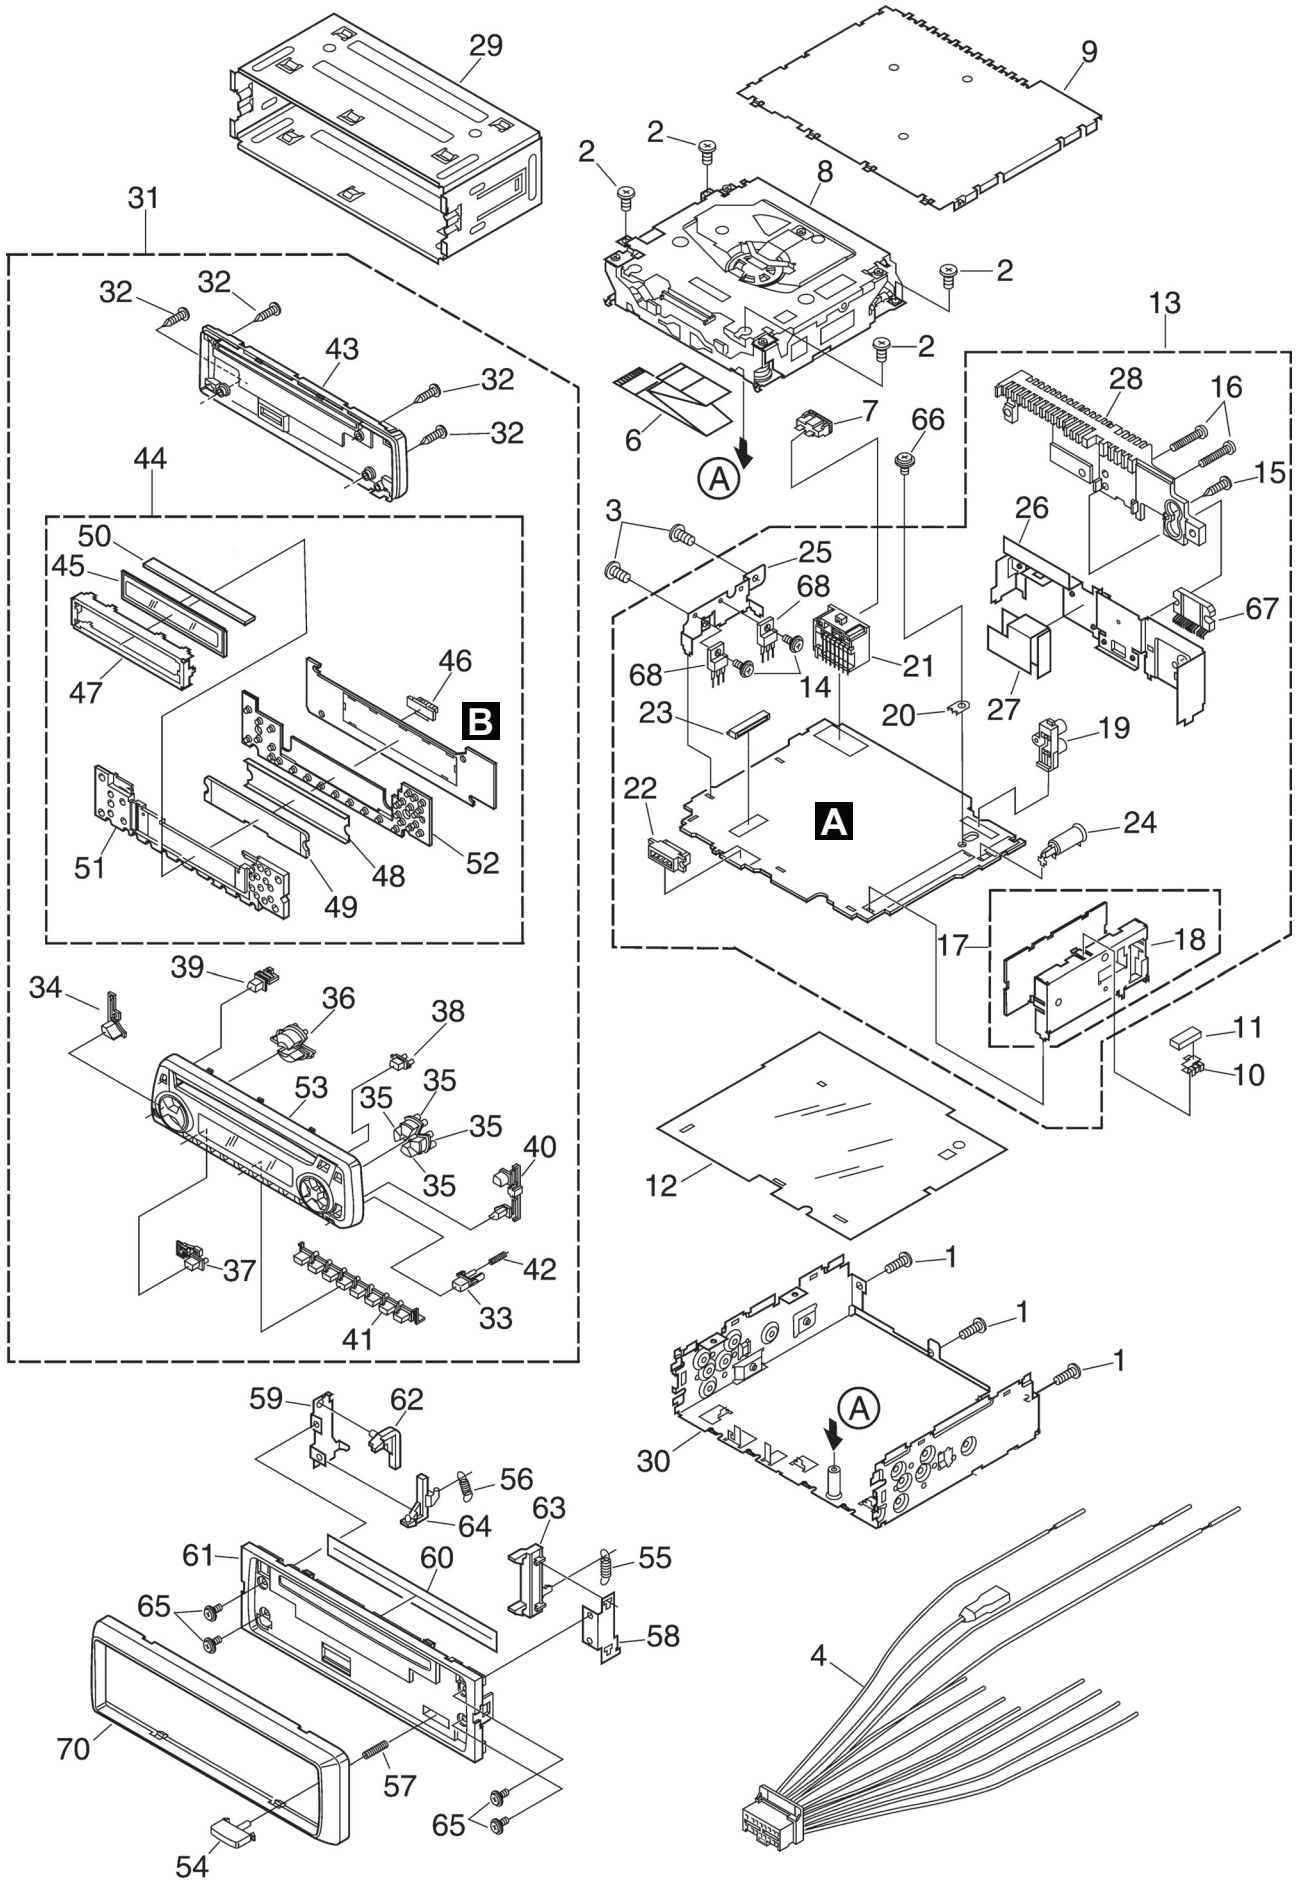

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.
1	Screw	BMZ30P100FMC
2	Screw	BSZ26P060FMC
3	Screw	BSZ30P060FMC
4	Cord Assy	CDE6468
5	•••••	
6	Cable	CDE6610
7	Fuse(10A)	CEK1136
8	CD Mechanism Module(S9ANA)	CXK5501
9	Case	CNB2686
10	Holder	CNC5704
11	Cushion	CNM4870
12	Insulator	CNM7622
13	Tuner Amp Unit	CWM7942
14	Screw	ASZ26P060FMC
15	Screw	BPZ26P120FMC
16	Screw	BSZ26P160FMC
17	FM/AM Tuner Unit	CWE1563
18	Holder	CNC8815
19	Pin Jack(CN351)	CKB1035
20	Terminal(CN404)	CKF1059
21	Plug(CN901)	CKM1330
22	Connector(CN751)	CKS3581
23	Connector(CN501)	CKS3835
24	Antenna Jack(CN402)	CKX1056
25	Holder	CNC8615
26	Holder	CNC9619
27	Insulator	CNM6949
28	Heat Sink	CNR1583
29	Holder Unit	CXB6681
30	Chassis Unit	CXB7816
31	Detach Grille Assy	See Contrast table(2)
32	Screw	BPZ20P100FZK
33	Button(DETACH)	CAC5789
34	Button(EQ)	CAC7186
35	Button(SELECT)	CAC7181
36	Button(VOL+,-)	CAC7182
37	Button(SRC)	CAC7187
38	Button(EJECT)	CAC7183
39	Button(CLOCK)	CAC7298
40	Button(A,LD)	CAC7184
41	Button(1-6)	CAC7180
42	Spring	CBH2210
43	Cover	CNS6720
44	Keyboard Unit	See Contrast table(2)
45	LCD	See Contrast table(2)
46	Connector(CN1800)	CKS3580
47	Holder	CNC9617
48	Sheet	CNM7057
49	Lighting Conductor	CNV6476
50	Connector	CNV6868
51	Lighting Conductor	CNV6869
52	Rubber	CNV6905
53	Grille Unit	See Contrast table(2)
54	Button	CAC4836
55	Spring	CBH1835
56	Spring	CBH2208
57	Spring	CBH2367
58	Bracket	CNC6791
59	Holder	CNC8042
60	Cover	CNM6276
61	Panel	CNS6722
62	Arm	CNV4692
63	Arm	CNV4728
64	Arm	CNV5576
65	Screw	IMS20P030FZK
66	Screw	ISS26P055FUC
67	IC(IC361)	TDA7386
68	Transistor(Q501,910)	2SD2396
69	•••••	
70	Panel	CNS6344

(2) CONTRAST TABLE

DEH-1400/XM/UC and DEH-14/XM/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-1400/XM/UC	DEH-14/XM/UC
31	Detach Grille Assy	CXB8748	CXB8749
44	Keyboard Unit	CWM7955	CWM7956
45	LCD	CAW1723	CAW1716
53	Grille Unit	CXB8745	CXB8746

2.3 CD MECHANISM MODULE

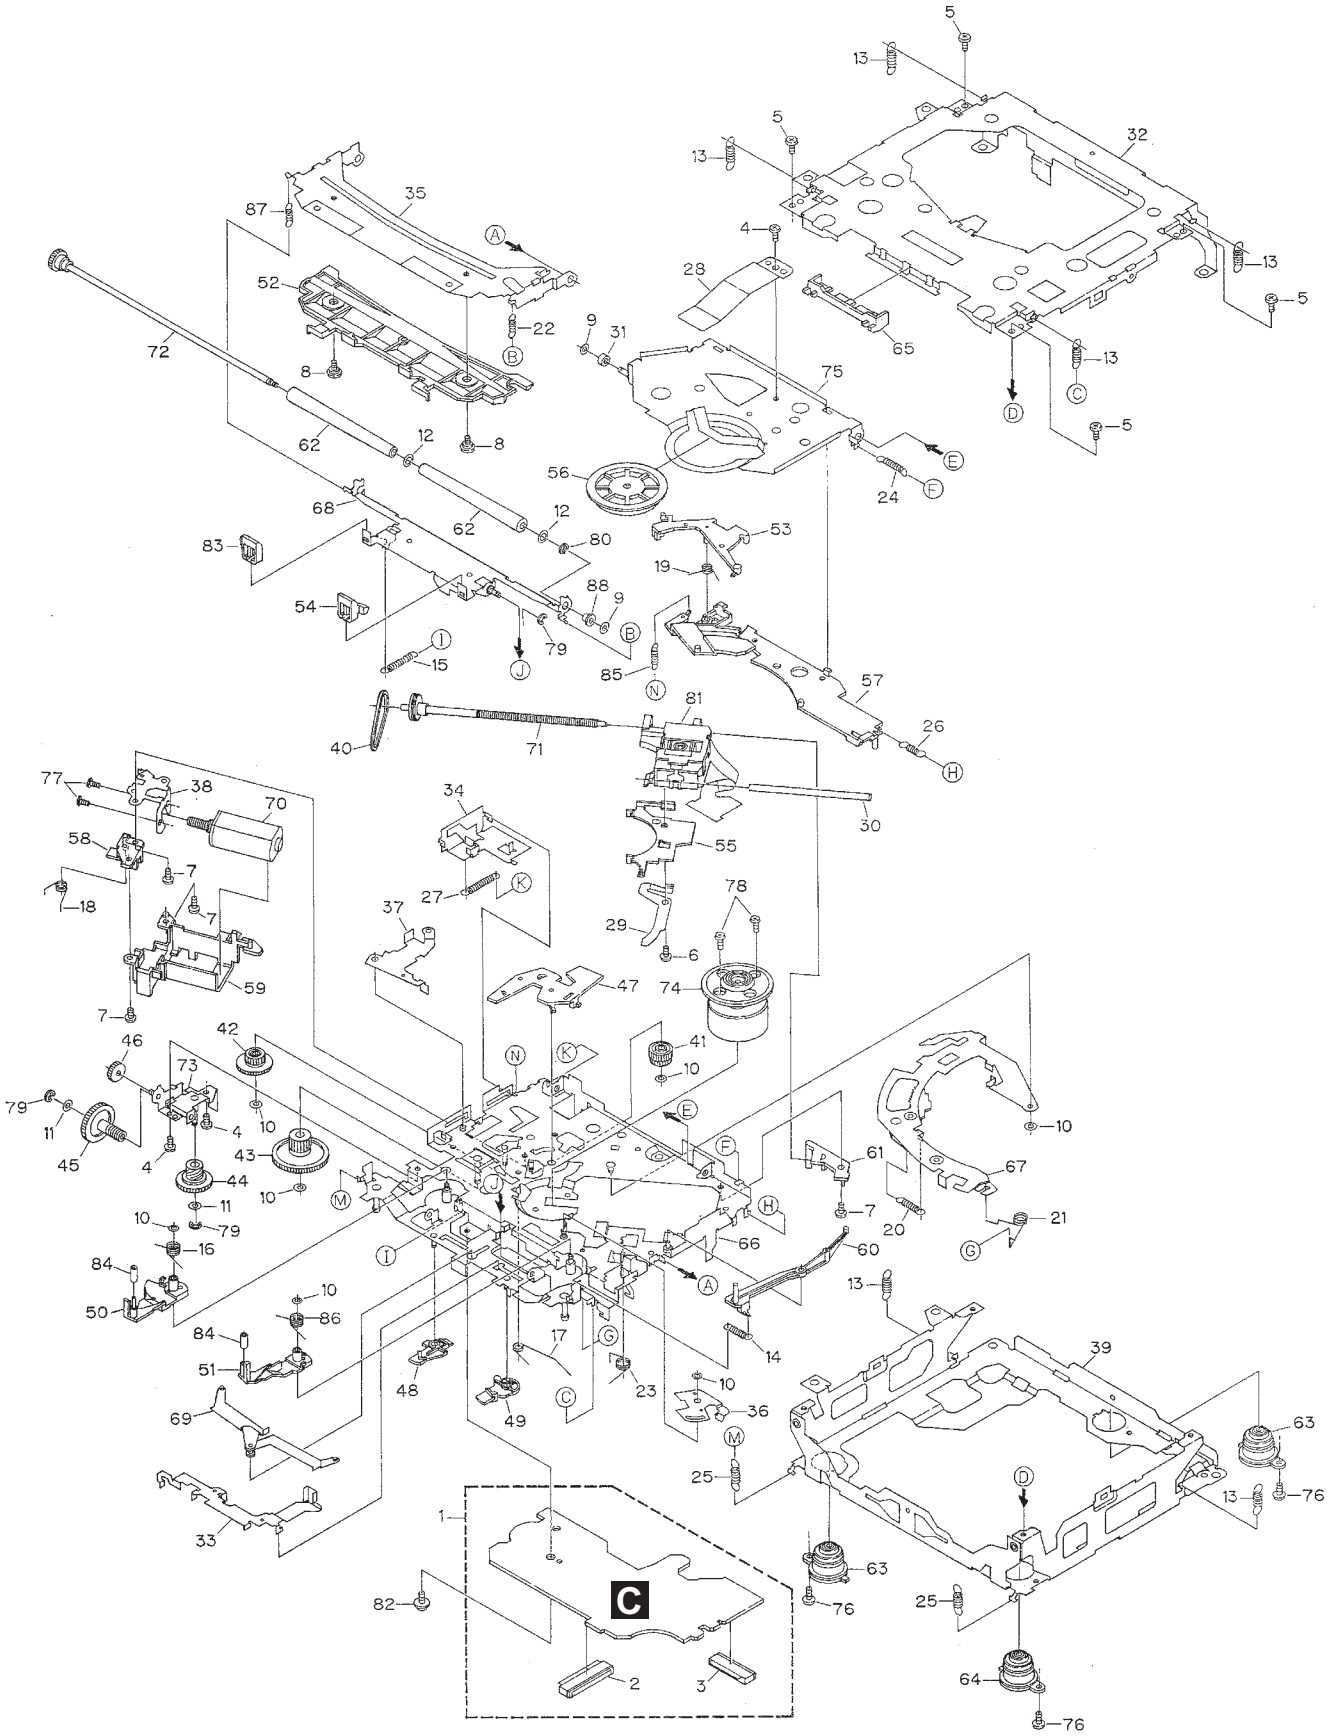

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2481
	2	Connector(CN701)	CKS1959
	3	Connector(CN101)	CKS3486
	4	Screw	BMZ20P025FMC
	5	Screw	BSZ20P040FMC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1527
	8	Screw	CBA1545
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1039
	12	Washer	CBF1060
	13	Spring	CBH2378
	14	Spring	CBH2379
	15	Spring	CBH2514
	16	Spring	CBH2533
	17	Spring	CBH2382
	18	Spring	CBH2383
	19	Spring	CBH2384
	20	Spring	CBH2527
	21	Spring	CBH2386
	22	Spring	CBH2537
	23	Spring	CBH2390
	24	Spring	CBH2391
	25	Spring	CBH2523
	26	Spring	CBH2426
	27	Spring	CBH2444
	28	Spring	CBL1561
	29	Spring	CBL1553
	30	Shaft	CLA3845
	31	Roller	CLA3910
	32	Frame	CNC9654
	33	Lever	CNC9664
	34	Lever	CNC8949
	35	Arm	CNC9661
	36	Arm	CNC9016
	37	Arm	CNC9017
	38	Bracket	CNC9123
	39	Frame	CNC9656
	40	Belt	CNT1086
	41	Gear	CNV6886
	42	Gear	CNV6316
	43	Gear	CNV6317
	44	Gear	CNV6318
	45	Gear	CNV6319
	46	Gear	CNV6320
	47	Arm	CNV6322
	48	Arm	CNV6323
	49	Arm	CNV6324
	50	Arm	CNV6888
	51	Arm	CNV6889
	52	Guide	CNV6327
	53	Arm	CNV6924
	54	Guide	CNV6921
	55	Rack	CNV6923
	56	Clamper	CNV6331
	57	Arm	CNV6332
	58	Guide	CNV6333
	59	Cover	CNV6334
	60	Arm	CNV6335
	61	Guide	CNV6336
	62	Roller	CNV6338
	63	Damper	CNV6339
	64	Damper	CNV6340
	65	Guide	CNV6925
	66	Chassis Unit	CXB7980
*	67	Arm Unit	CXB7983
	68	Arm Unit	CXB7984
	69	Arm Unit	CXB7985
	70	Motor Unit(M2)	CXB5903
	71	Screw Unit	CXB5904
	72	Gear Unit	CXB8076
	73	Bracket Unit	CXB7982
	74	Motor Unit(M1)	CXB6007
	75	Arm Unit	CXB8504
	76	Screw(M2x5)	EBA1028
	77	Screw	JFZ20P020FMC
	78	Screw	JGZ17P020FZK
	79	Washer	YE15FUC
	80	Washer	YE20FUC
	81	Pickup Unit(Service)(P9)	CXX1480
	82	Screw	IMS26P030FMC
	83	Guide	CNV6922
	84	Roller	CNV6887
	85	Spring	CBH2509
	86	Spring	CBH2512
	87	Spring	CBH2536
	88	Collar	CNV6906

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM7942
Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	301	IC	PML003AM
IC	361	IC	TDA7386
IC	603	IC	S-80834ANY
IC	610	IC	PE5262A
IC	901	IC	TPD1018F
Q	351	Transistor	IMH3A
Q	359	Transistor	DTA124EK
Q	361	Transistor	DTC124EK
Q	410	Transistor	2SC2412K
Q	510	Transistor	2SD2396
Q	511	Transistor	RN46A1
Q	750	Transistor	2SA1037K
Q	751	Transistor	2SA1036K
Q	753	Transistor	DTC114EK
Q	909	Transistor	RN46A1
Q	910	Transistor	2SD2396
Q	911	Transistor	2SB1243
Q	912	Transistor	DTC114EK
Q	913	Transistor	2SD1859
Q	920	Transistor	IMX1
Q	921	Transistor	DTA124EK
D	510	Diode	HZS9L(B1)
D	750	Diode	1SS270
D	751	Diode	1SS270
D	753	Diode	1SS270
D	754	Diode	1SS270
D	759	Diode	MA152WA
D	910	Diode	HZS9L(B3)
D	911	Diode	HZS6L(B2)
D	912	Diode	S5688G
D	913	Diode	HZS7L(C2)
D	914	Diode	HZS7L(A1)
D	919	Diode	S5688G
D	920	Diode	S5688G
D	921	Diode	DAN202U
D	923	Diode	S5688G
D	924	Diode	S5688G
L	310	Inductor	LAU1R0K
L	361	Choke Coil 600µH	CTH1221
L	410	Ferri-Inductor	LAU4R7K
L	411	Ferri-Inductor	LAU2R2K
L	412	Ferri-Inductor	LAU2R2K
L	617	Ferri-Inductor	LAU101K
L	618	Ferri-Inductor	LAU2R2K
L	750	Ferri-Inductor	LAU2R2K
X	610	Crystal Resonator 4.194304MHz	CSS1023
AR	410	Surge Protector	DSP-201M-S00B
		FM/AM Tuner Unit	CWE1563

RESISTORS

=====Circuit Symbol and No.		===Part Name	Part No.
R	310		RS1/16S101J
R	311		RS1/16S101J
R	314		RS1/16S101J
R	315		RS1/16S101J
R	351		RD1/4PU821J
R	352		RS1/16S821J
R	353		RS1/16S223J
R	354		RS1/16S223J
R	355		RS1/16S0R0J
R	361		RS1/16S103J
R	362		RS1/16S103J
R	363		RS1/16S331J
R	364		RD1/4PU153J
R	410		RS1/16S222J
R	411		RS1/16S222J
R	413		RS1/16S473J
R	414		RS1/16S473J
R	415		RS1/16S393J
R	417		RS1/16S681J
R	418		RS1/16S681J
R	419		RS1/16S681J
R	420		RS1/16S103J
R	421		RS1/16S681J
R	422		RD1/4PU473J
R	423		RD1/4PU472J
R	424		RD1/4PU473J
R	429		RS1/16S681J
R	430		RS1/16S681J
R	431		RS1/16S473J
R	432		RS1/16S473J
R	437		RS1/16S0R0J
R	438		RS1/16S0R0J
R	445		RS1/16S272J
R	446		RS1/16S272J
R	447		RS1/16S162J
R	448		RS1/16S162J
R	490		RS1/16S0R0J
R	510		RD1/4PU221J
R	511		RD1/4PU221J
R	512		RD1/4PU472J
R	513		RD1/4PU222J
R	516		RS1/16S104J
R	517		RD1/4PU222J
R	519		RD1/4PU102J
R	520		RS1/16S0R0J
R	521		RS1/16S0R0J
R	522		RS1/16S0R0J
R	523		RS1/16S0R0J
R	525		RS1/16S0R0J
R	527		RS1/16S0R0J

=====Circuit Symbol and No.		===Part Name	Part No.
R	531		RD1/4PU222J
R	532		RD1/4PU222J
R	536		RD1/4PU102J
R	537		RS1/16S104J
R	538		RS1/16S0R0J
R	612		RS1/16S0R0J
R	613		RD1/4PU102J
R	614		RS1/16S821J
R	615		RS1/16S473J
R	616		RS1/16S682J
R	617		RS1/16S473J
R	618		RS1/16S223J
R	622		RD1/4PU104J
R	625		RS1/16S0R0J
R	712		RD1/4PU104J
R	750		RD1/4PU104J
R	751		RS1/16S103J
R	752		RS1/16S153J
R	753		RS1/16S153J
R	754		RS1/16S222J
R	755		RD1/4PU222J
R	758		RS1/16S102J
R	759		RS1/16S222J
R	764		RS1/16S0R0J
R	765		RS1/16S1R0J
R	767		RS1/16S103J
R	769		RS1/16S102J
R	774		RS1/16S0R0J
R	775		RS1/16S1R0J
R	777		RS1/16S152J
R	778		RS1/16S152J
R	779		RD1/4PU103J
R	791		RS1/16S0R0J
R	910		RS1/16S1R0J
R	911		RD1/4PU220J
R	912		RD1/4PU132J
R	913		RD1/4PU122J
R	914		RS1/16S103J
R	915		RS1/16S222J
R	916		RD1/4PU153J
R	917		RS1/16S104J
R	918		RS1/16S104J
R	919		RS1/16S104J
R	920		RS1/16S473J
R	921		RS1/16S103J
R	922		RS1/16S473J
R	923		RD1/4PU102J
R	924		RS1/16S472J
R	927		RS1/16S102J
R	928		RS1/16S473J
R	929		RS1/16S0R0J
R	930		RS1/16S0R0J
R	931		RS1/16S0R0J
R	937		RS1/16S152J
R	939		RS1/16S0R0J

CAPACITORS

C	307		CEJQ470M10
C	308		CEJQ100M16
C	309		CKSRYB104K25
C	310		CKSRYB105K6R3
C	311		CKSRYB104K25
C	312		CKSRYB104K25
C	313		CKSRYB105K6R3
C	314		CEJQ4R7M35
C	315		CEJQ4R7M35
C	316		CKSRYB153K25

=====Circuit Symbol and No.		===Part Name	Part No.
C	321		CKSRYB153K25
C	324		CCSRCH100D50
C	326		CCSRCH100D50
C	327		CCSRCH100D50
C	329		CCSRCH100D50
C	351		CEJQ2R2M50
C	352		CEJQ2R2M50
C	361	3300µF/16V	CCH1368
C	362		CKSRYB104K25
C	363		CKSQYB474K16
C	364		CKSQYB474K16
C	365		CKSQYB474K16
C	366		CKSQYB474K16
C	367		CKSQYB474K16
C	368		CKSQYB474K16
C	369		CKSQYB474K16
C	370		CKSQYB474K16
C	371		CEJQ330M10
C	372		CEJQ2R2M50
C	373		CKSQYB225K10
C	374		CKSQYB225K10
C	375		CEJQ100M16
C	410		CKSQYB103K25
C	412		CKSRYB223K50
C	413		CKSRYB102K50
C	414		CEJQ220M10
C	415		CKSRYB223K50
C	417		CKSRYB472K50
C	418		CEJQ101M6R3
C	419		CKSRYB473K50
C	424		CKSRYB183K25
C	425		CKSRYB183K25
C	510		CKSRYB473K50
C	511		CKSRYB102K50
C	512		CEJQ101M10
C	515		CKSRYB102K50
C	516		CKSRYB102K50
C	614		CKSRYB473K50
C	615		CEJQ2R2M50
C	616		CKSRYB104K25
C	617		CCSRCH101J50
C	618		CEJQ4R7M35
C	619		CKSRYB473K50
C	620		CCSRCH150J50
C	621		CCSRCH150J50
C	751		CKSRYB104K25
C	910	330µF/16V	CCH1326
C	911		CKSRYB103K50
C	912		CEJQ101M16
C	913		CEJQ101M10
C	914		CKSRYB473K50
C	915		CKSRYB103K50
C	916	470µF/16V	CCH1331
C	918		CKSQYB473K50
C	919		CKSRYB103K50

B Unit Number : CWM7955(DEH-1400/XM/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1800	IC	PD6340A
D	1700	LED	NSSW440-9159
D	1701	LED	NSSW440-9159
D	1702	LED	SML-310PT
D	1703	LED	SML-310PT

=====Circuit Symbol and No.		===Part Name	Part No.
D	1704	LED	SML-310PT
D	1705	LED	SML-310PT
D	1706	LED	SML-310PT
D	1707	LED	SML-310PT
D	1708	LED	SML-310PT
D	1800	Diode	MA152WK
D	1801	Diode	MA152WA
X	1800	Ceramic Resonator 4.97MHz	CSS1573
IL	1700	Lamp 14V 40mA	CEL1651
IL	1701	Lamp 14V 40mA	CEL1651
		LCD	CAW1723

RESISTORS

R	1700		RS1/16S101J
R	1701		RS1/16S101J
R	1702		RS1/16S101J
R	1703		RS1/16S101J
R	1708		RS1/16S151J
R	1709		RS1/16S151J
R	1710		RS1/16S151J
R	1711		RS1/16S820J
R	1712		RS1/16S181J
R	1713		RS1/16S181J
R	1714		RS1/16S181J
R	1715		RS1/16S121J
R	1716		RS1/16S181J
R	1717		RS1/16S181J
R	1718		RS1/16S181J
R	1719		RS1/16S121J
R	1800		RS1/16S222J
R	1801		RS1/16S222J
R	1802		RS1/16S471J
R	1803		RS1/16S471J
R	1804		RS1/16S471J
R	1805		RS1/16S471J

CAPACITORS

C	1700		CKSQYF104Z50
C	1701		CKSQYF104Z50
C	1800		CKSRYB103K50

B Unit Number : CWM7956(DEH-14/XM/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1800	IC	PD6340A
D	1700	LED	NSSW440-9159
D	1701	LED	NSSW440-9159
D	1702	LED	SML-310DT
D	1703	LED	SML-310DT
D	1704	LED	SML-310DT
D	1705	LED	SML-310DT
D	1706	LED	SML-310DT
D	1707	LED	SML-310DT
D	1708	LED	SML-310DT
D	1800	Diode	MA152WK
D	1801	Diode	MA152WA
X	1800	Ceramic Resonator 4.97MHz	CSS1573
IL	1700	Lamp 14V 40mA	CEL1638
IL	1701	Lamp 14V 40mA	CEL1638
		LCD	CAW1716

RESISTORS

R	1700		RS1/16S101J
R	1701		RS1/16S101J
R	1702		RS1/16S101J
R	1703		RS1/16S101J
R	1708		RS1/16S151J
R	1709		RS1/16S151J
R	1710		RS1/16S151J
R	1711		RS1/16S121J
R	1712		RS1/16S181J
R	1713		RS1/16S181J
R	1714		RS1/16S181J
R	1715		RS1/16S181J
R	1716		RS1/16S181J
R	1717		RS1/16S181J
R	1718		RS1/16S181J
R	1719		RS1/16S181J
R	1800		RS1/16S222J
R	1801		RS1/16S222J
R	1802		RS1/16S471J
R	1803		RS1/16S471J
R	1804		RS1/16S471J
R	1805		RS1/16S471J

CAPACITORS

C	1700		CKSQYF104Z50
C	1701		CKSQYF104Z50
C	1800		CKSRYB103K50

C Unit Number : CWX2481
Unit Name : Control Unit

MISCELLANEOUS

IC	101	IC	TA2153FN
IC	201	IC	TC9495F2
IC	401	IC	BA5996FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	UMD2N
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
X	301	Ceramic Resonator 16.934MHz	CSS1525
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101		RS1/16S222J
R	102		RS1/8S120J
R	103		RS1/8S100J
R	201		RS1/16S513J
R	202		RS1/16S513J
R	203		RS1/16S823J
R	204		RS1/16S823J
R	206		RS1/16S823J
R	208		RS1/16S124J
R	209		RS1/16S183J
R	210		RS1/16S153J
R	211		RS1/16S103J
R	212		RS1/16S103J
R	213		RS1/16S124J
R	215		RS1/16S0R0J
R	216		RS1/16S471J
R	301		RS1/16S333J
R	302		RS1/16S332J
R	303		RS1/16S332J
R	304		RS1/16S514J
R	306		RS1/16S102J
R	307		RS1/16S102J
R	312		RS1/16S103J
R	313		RS1/16S473J
R	315		RS1/16S334J

=====Circuit Symbol and No.		===Part Name	Part No.
R	321		RS1/16S331J
R	322		RS1/16S0R0J
R	323		RS1/16S332J
R	401		RS1/16S684J
R	402		RS1/16S103J
R	403		RS1/16S103J
R	404		RS1/16S183J
R	405		RS1/16S123J
R	407		RS1/16S622J
R	408		RS1/16S622J
R	409		RS1/16S113J
R	410		RS1/16S752J
R	701		RS1/16S102J
R	702		RS1/16S221J
R	703		RS1/16S221J
R	704		RS1/16S221J
R	705		RS1/16S221J
R	706		RS1/16S221J
R	707		RS1/16S221J
R	708		RS1/16S102J
R	709		RS1/16S102J
R	710		RS1/16S102J
R	901		RS1/16S104J
R	902		RS1/16S473J
R	903		RS1/16S273J

CAPACITORS

C	101		CEV470M6R3
C	102		CKSRYB102K50
C	103		CKSRYB104K16
C	104		CKSRYB224K16
C	105		CEV470M6R3
C	106		CKSRYB104K16
C	107		CKSRYB105K6R3
C	201		CKSRYB104K16
C	202		CCSRCH560J50
C	204		CKSRYB224K16
C	205		CKSRYB224K16
C	206		CKSRYB273K25
C	207		CKSRYB273K25
C	208		CKSRYB104K16
C	209		CKSRYB104K16
C	210		CCSRCK2R0C50
C	211		CCSRCH220J50
C	301		CKSRYB153K25
C	302		CKSRYB104K16
C	303		CKSRYB103K50
C	304		CKSRYB103K50
C	305		CKSRYB104K16
C	306		CKSRYB104K16
C	307		CKSRYB333K16
C	308		CKSRYB104K16
C	309		CKSRYB473K16
C	310		CKSRYB473K16
C	311		CKSRYB104K16
C	312		CKSRYB104K16
C	315		CEV220M6R3
C	317		CKSRYB104K16
C	318		CKSRYB104K16
C	319		CKSRYB104K16
C	320		CCSRCH470J50
C	325		CKSRYB471K50
C	328		CKSRYB472K50
C	329		CKSRYB104K16
C	330		CKSRYB104K16
C	331		CKSRYB104K16
C	401		CKSRYB221K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	402		CKSRYB221K50
C	403		CKSRYB153K25
C	404		CKSRYB103K50
C	405		CEV101M10
C	702		CKSRYB104K16
C	703		CKSRYB104K16
C	801	10µF/10V	CCH1349
C	802		CEV101M10
C	803		CKSRYB224K16

Miscellaneous Parts List

		Pickup Unit(Service)(P9)	CXX1480
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB5903