● **CD Player Service Precautions**

1. For pickup unit(CXX1480) handling, please refer to"Disassembly"(see page 50).
   During replacement, handling precautions shall be taken to prevent an electrostatic discharge(protection by a jumper-solder).
2. During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.
3. Please checking the grating after changing the service pickup unit(see page 44).

1. SAFETY INFORMATION

CAUTION


This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.
Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty.
If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

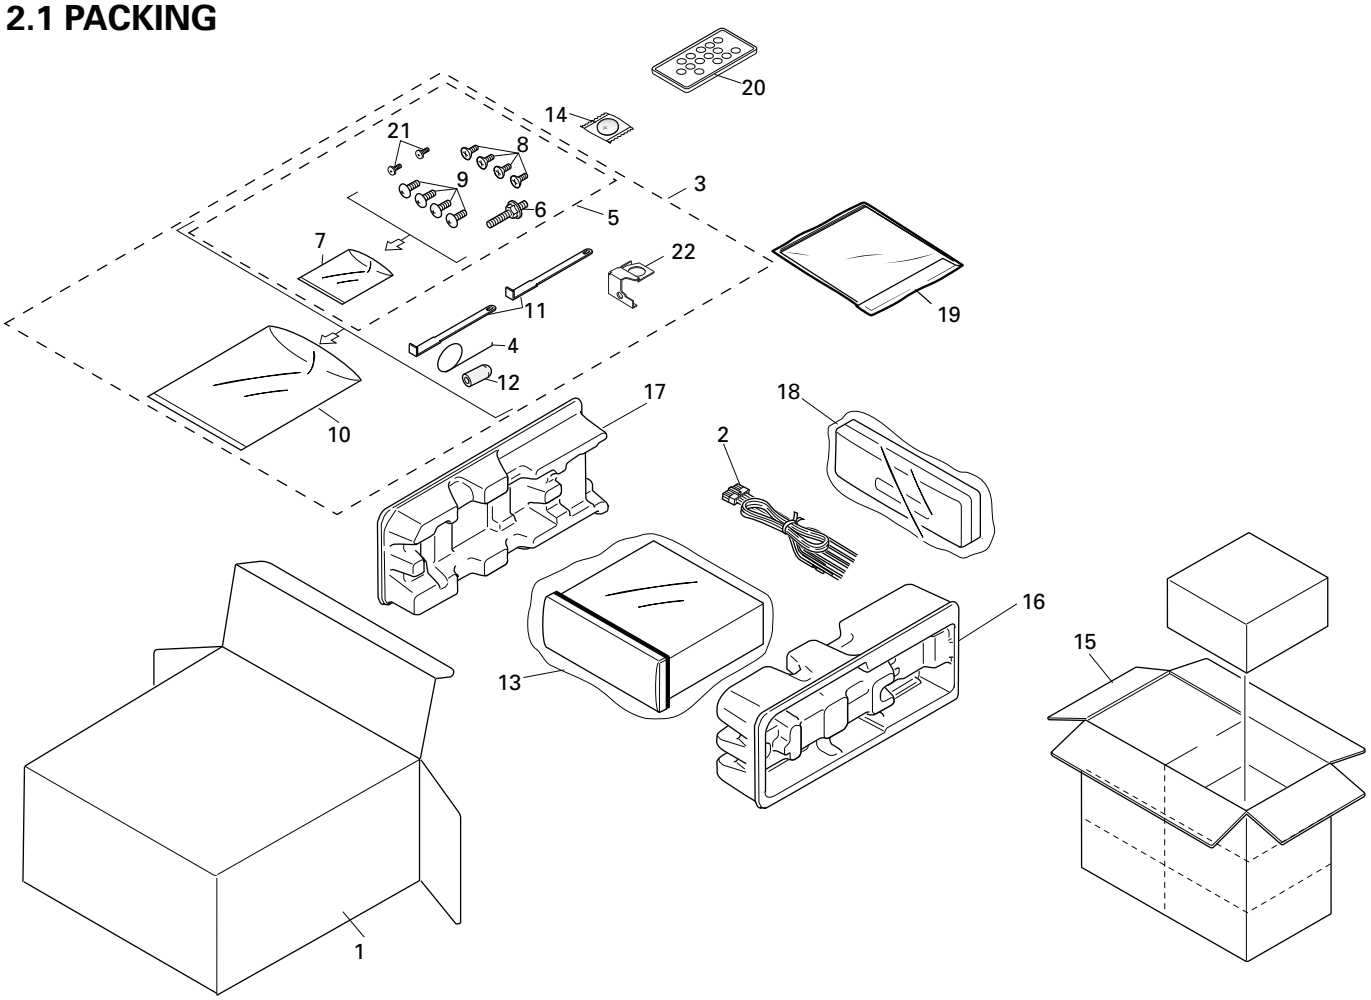

NOTE:

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Carton	See Contrast table(2)
	2	Cord Assy	CDE6436
	3	Accessory Assy	CEA2773
	4	Spring	CBH1650
	5	Screw Assy	CEA2396
	6	Screw	CBA1002
*	7	Polyethylene Bag	CEG-127
	8	Screw	CRZ50P090FMC
	9	Screw	TRZ50P080FMC
*	10	Polyethylene Bag	CEG-158
	11	Handle	CNC5395
	12	Bush	CNV3930
	13	Polyethylene Bag	CEG1301
*	14	Battery	CEX1065
	15	Contain Box	See Contrast table(2)
	16	Protector	CHP2251
	17	Protector	CHP2252
	18	Case Assy	CXB3520
	19-1	Polyethylene Bag	CEG1116
	19-2	Owner's Manual	See Contrast table(2)
	19-3	Installation Manual	See Contrast table(2)
*	19-4	Card	See Contrast table(2)
*	19-5	Caution Card	CRP1207
*	19-6	Warranty Card	See Contrast table(2)
	20	Remote Control Unit	CXB6797
	21	Screw	BPZ20P060FZK
	22	Earth Plate	CNC9450

(2) CONTRAST TABLE


DEH-P630/X1N/UC and DEH-P6300/X1N/UC are constructed the same except for the following:

		Part No.	
Mark No.	Symbol and Description	DEH-P630/X1N/UC	DEH-P6300/X1N/UC
1	Carton	CHG4330	CHG4329
15	Contain Box	CHL4330	CHL4329
19-2	Owner's Manual	CRD3384	CRD3382
19-3	Installation Manual	CRD3385	CRD3383
* 19-4	Card	Not used	ARY1048
* 19-6	Warranty Card	CRY1070	Not used

● **Owner's Manual, Installation Manual**

Model	Part No.	Language
DEH-P630/X1N/UC	CRD3384	English, French
	CRD3385	English, French
DEH-P6300/X1N/UC	CRD3382	English, French
	CRD3383	English, French

2.2 EXTERIOR(DEH-P630/X1N/UC)

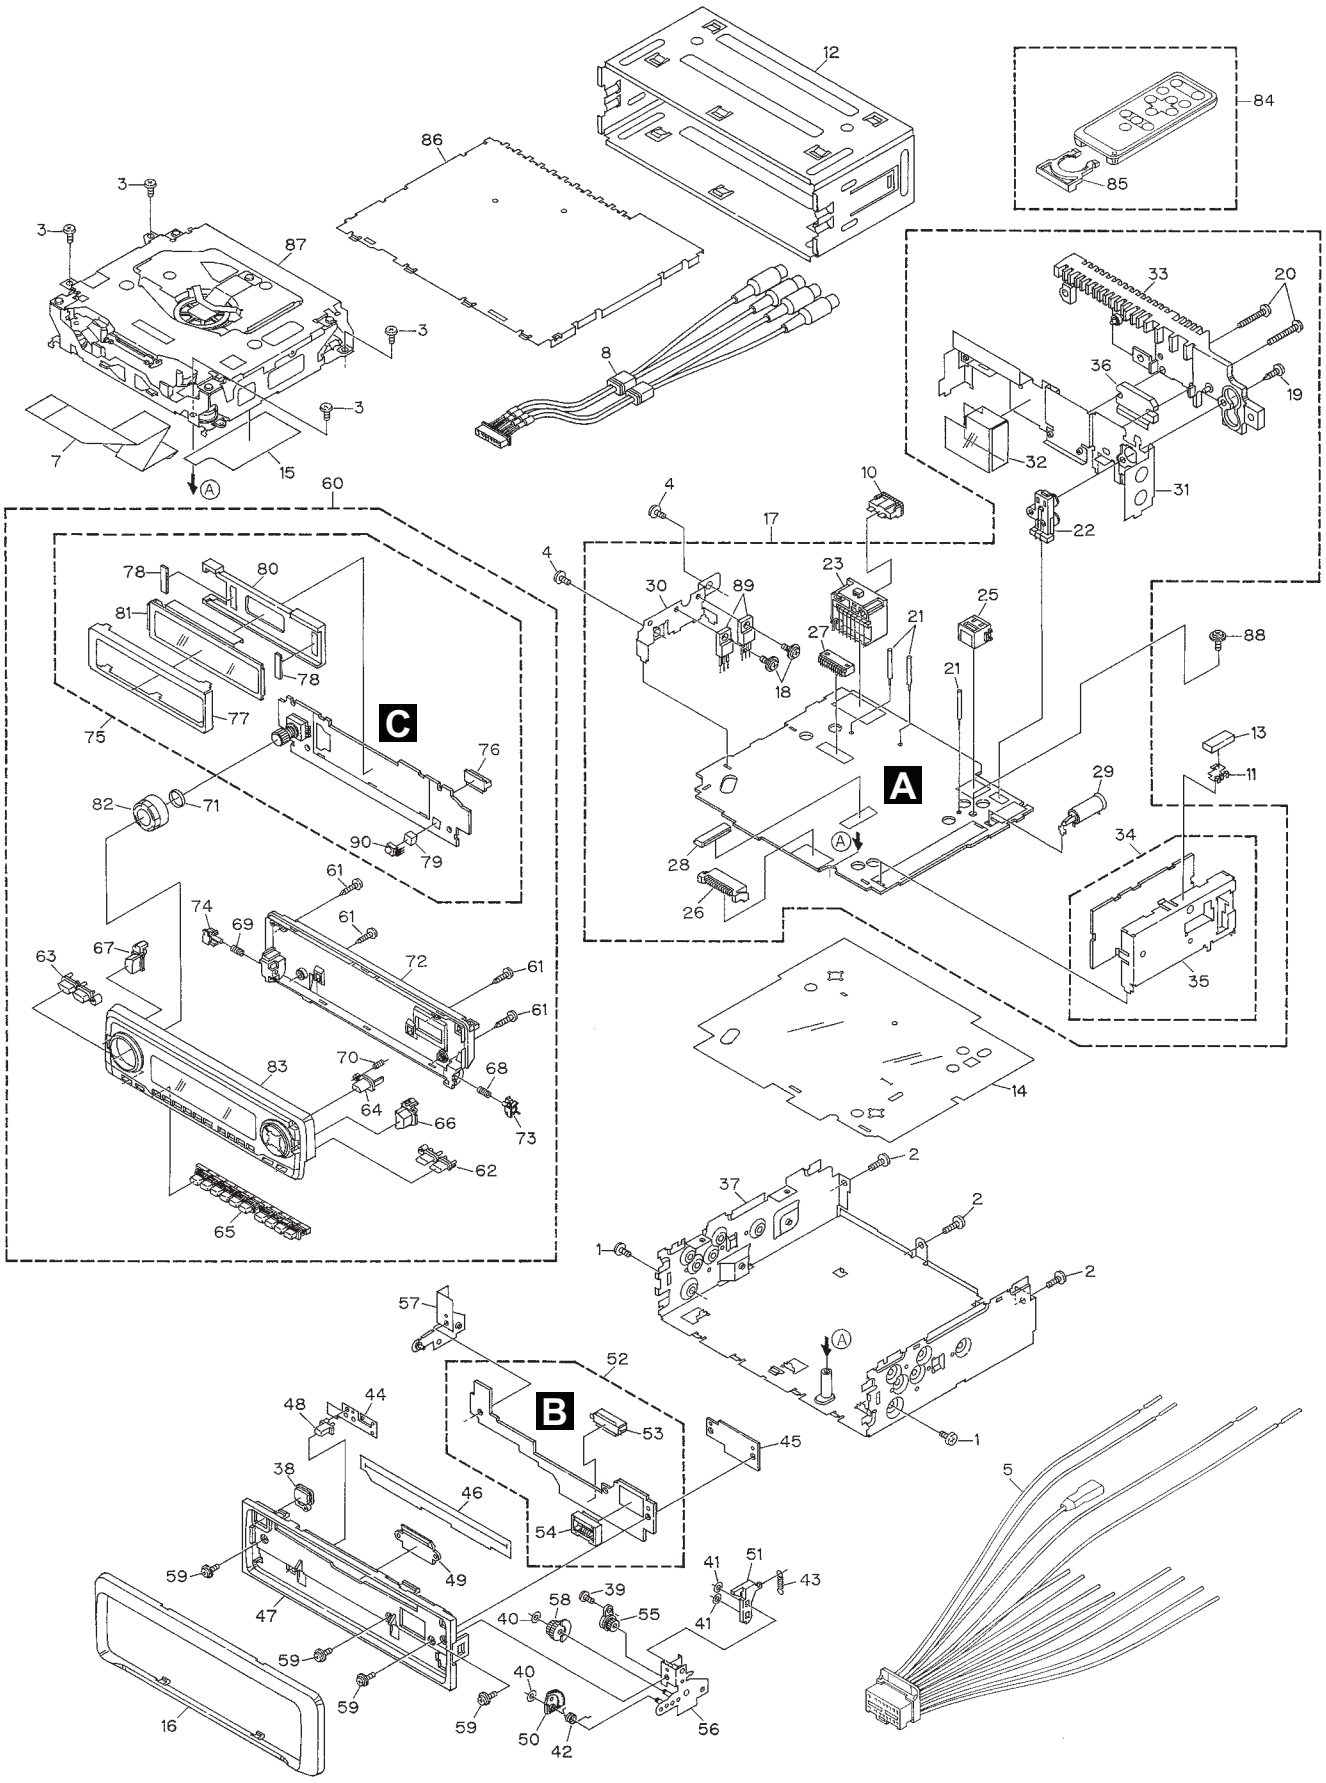


● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK
2	Screw	BMZ30P100FMC
3	Screw	BSZ26P060FMC
4	Screw	BSZ30P040FMC
5	Cord Assy	CDE6436
6	•••••	
7	Cable	CDE6451
8	Cord Assy	CDE6453
9	•••••	
10	Fuse(10A)	CEK1136
11	Holder	CNC5704
12	Holder	CNC8659
13	Cushion	CNM4870
14	Insulator	CNM6948
15	Insulator	CNM7214
16	Panel	CNS6552
17	Tuner Amp Unit	CWM7457
18	Screw	ASZ26P060FMC
19	Screw	BPZ26P120FMC
20	Screw	BSZ26P160FMC
21	Clamper	CEF1007
22	Pin Jack(CN351)	CKB1035
23	Plug(CN901)	CKM1330
24	•••••	
25	Connector(CN101)	CKS3408
26	Plug(CN801)	CKS3537
27	Connector(CN352)	CKS3602
28	Connector(CN653)	CKS3835
29	Antenna Jack(CN401)	CKX1056
30	Holder	CNC8615
31	Holder	CNC9469
32	Insulator	CNM6949
33	Heat Sink	CNR1583
34	FM/AM Tuner Unit	CWE1563
35	Holder	CNC8815
36	IC(IC301)	PAL006A
37	Chassis Unit	CXB6100
38	Button(EJECT)	CAC6839
39	Screw(M2x2)	CBA1176
40	Washer	CBF1038
41	Washer	CBF1039
42	Spring	CBH2428
43	Spring	CBH2429
44	Spring	CBL1512
45	Holder	CNC9096
46	Cover	CNM6854
47	Panel	CNS6278
48	Pin	CNV6486
49	Lighting Conductor	CNV6487
50	Gear	CNV6507

Mark No.	Description	Part No.
51	Arm	CNV6508
52	Panel Unit	CWM7375
53	Socket(CN1950)	CKS3550
54	Connector(CN1951)	CKS4206
55	Damper Unit	CXB5070
56	Holder Unit	CXB6356
57	Holder Unit	CXB6357
58	Clutch Unit	CXB6358
59	Screw	IMS20P045FZK
60	Detach Grille Assy	CXB6538
61	Screw	BPZ20P100FZK
62	Button(FUNC AUDIO)	CAC6776
63	Button(SOURCE DISP)	CAC6777
64	Button(OPEN)	CAC6780
65	Button(1-6)	CAC6841
66	Button(SFEQ)	CAC6842
67	Button(EQ)	CAC6840
68	Spring	CBH2430
69	Spring	CBH2431
70	Spring	CBH2491
71	Spring	CBL1470
72	Cover	CNS6282
73	Holder	CNV6505
74	Holder	CNV6506
75	Keyboard Unit	CWM7808
76	Connector(CN1901)	CKS4524
77	Holder	CNC9112
78	Cushion	CNM6633
79	Cushion	CNM7469
80	Holder	CNV6105
81	OEL Unit	MXS8016
82	Knob Unit	CXB7239
83	Sub Grille Assy	CXB7251
84	Remote Control Unit	CXB6797
85	Cover	CNS6439
86	Case Unit	CXB7482
87	CD Mechanism Module(S9)	CXK5500
88	Screw	ISS26P055FUC
89	Transistor(Q921,998)	2SD2396
90	IC(IC1903)	TSOP1840SB1

2.3 EXTERIOR(DEH-P6300/X1N/UC)

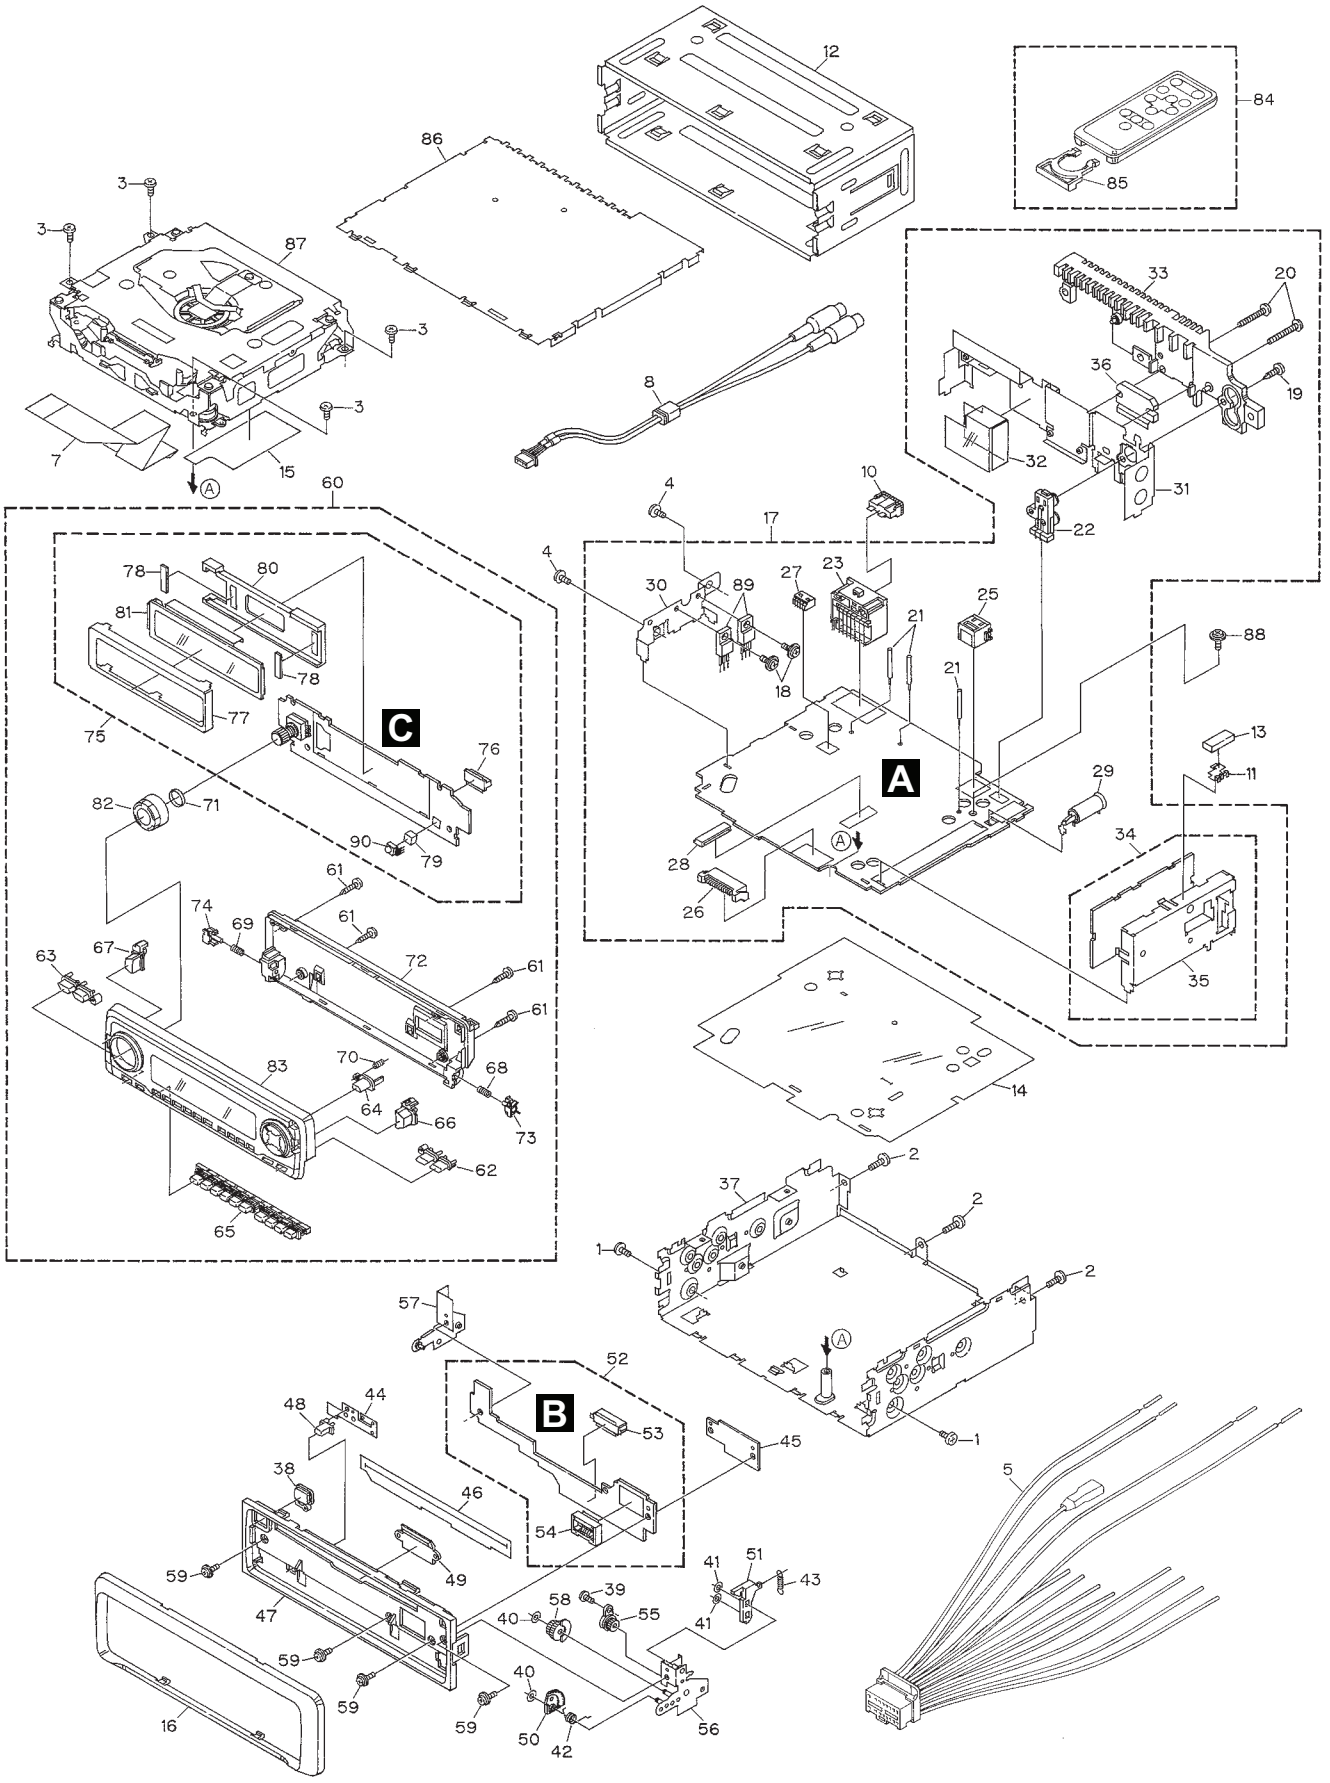


● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK
2	Screw	BMZ30P100FMC
3	Screw	BSZ26P060FMC
4	Screw	BSZ30P040FMC
5	Cord Assy	CDE6436
6	•••••	
7	Cable	CDE6451
8	Cord Assy	CDE6454
9	•••••	
10	Fuse(10A)	CEK1136
11	Holder	CNC5704
12	Holder	CNC8659
13	Cushion	CNM4870
14	Insulator	CNM6948
15	Insulator	CNM7214
16	Panel	CNS6552
17	Tuner Amp Unit	CWM7458
18	Screw	ASZ26P060FMC
19	Screw	BPZ26P120FMC
20	Screw	BSZ26P160FMC
21	Clamper	CEF1007
22	Pin Jack(CN351)	CKB1035
23	Plug(CN901)	CKM1330
24	•••••	
25	Connector(CN101)	CKS3408
26	Plug(CN801)	CKS3537
27	Connector(CN352)	CKS3598
28	Connector(CN653)	CKS3835
29	Antenna Jack(CN401)	CKX1056
30	Holder	CNC8615
31	Holder	CNC9470
32	Insulator	CNM6949
33	Heat Sink	CNR1583
34	FM/AM Tuner Unit	CWE1563
35	Holder	CNC8815
36	IC(IC301)	PAL006A
37	Chassis Unit	CXB6100
38	Button(EJECT)	CAC6839
39	Screw(M2x2)	CBA1176
40	Washer	CBF1038
41	Washer	CBF1039
42	Spring	CBH2428
43	Spring	CBH2429
44	Spring	CBL1512
45	Holder	CNC9096
46	Cover	CNM6854
47	Panel	CNS6278
48	Pin	CNV6486
49	Lighting Conductor	CNV6487
50	Gear	CNV6507

Mark No.	Description	Part No.
51	Arm	CNV6508
52	Panel Unit	CWM7375
53	Socket(CN1950)	CKS3550
54	Connector(CN1951)	CKS4206
55	Damper Unit	CXB5070
56	Holder Unit	CXB6356
57	Holder Unit	CXB6357
58	Clutch Unit	CXB6358
59	Screw	IMS20P045FZK
60	Detach Grille Assy	CXB6539
61	Screw	BPZ20P100FZK
62	Button(FUNC AUDIO)	CAC6776
63	Button(SOURCE DISP)	CAC6777
64	Button(OPEN)	CAC6780
65	Button(1-6)	CAC6841
66	Button(SFEQ)	CAC6842
67	Button(EQ)	CAC6840
68	Spring	CBH2430
69	Spring	CBH2431
70	Spring	CBH2491
71	Spring	CBL1470
72	Cover	CNS6282
73	Holder	CNV6505
74	Holder	CNV6506
75	Keyboard Unit	CWM7467
76	Connector(CN1901)	CKS4524
77	Holder	CNC9112
78	Cushion	CNM6633
79	Cushion	CNM7469
80	Holder	CNV6105
81	OEL Unit	MXS8016
82	Knob Unit	CXB7239
83	Sub Grille Assy	CXB7252
84	Remote Control Unit	CXB6797
85	Cover	CNS6439
86	Case Unit	CXB7482
87	CD Mechanism Module(S9)	CXK5500
88	Screw	ISS26P055FUC
89	Transistor(Q921,998)	2SD2396
90	IC(IC1903)	TSOP1840SB1

2.4 CD MECHANISM MODULE

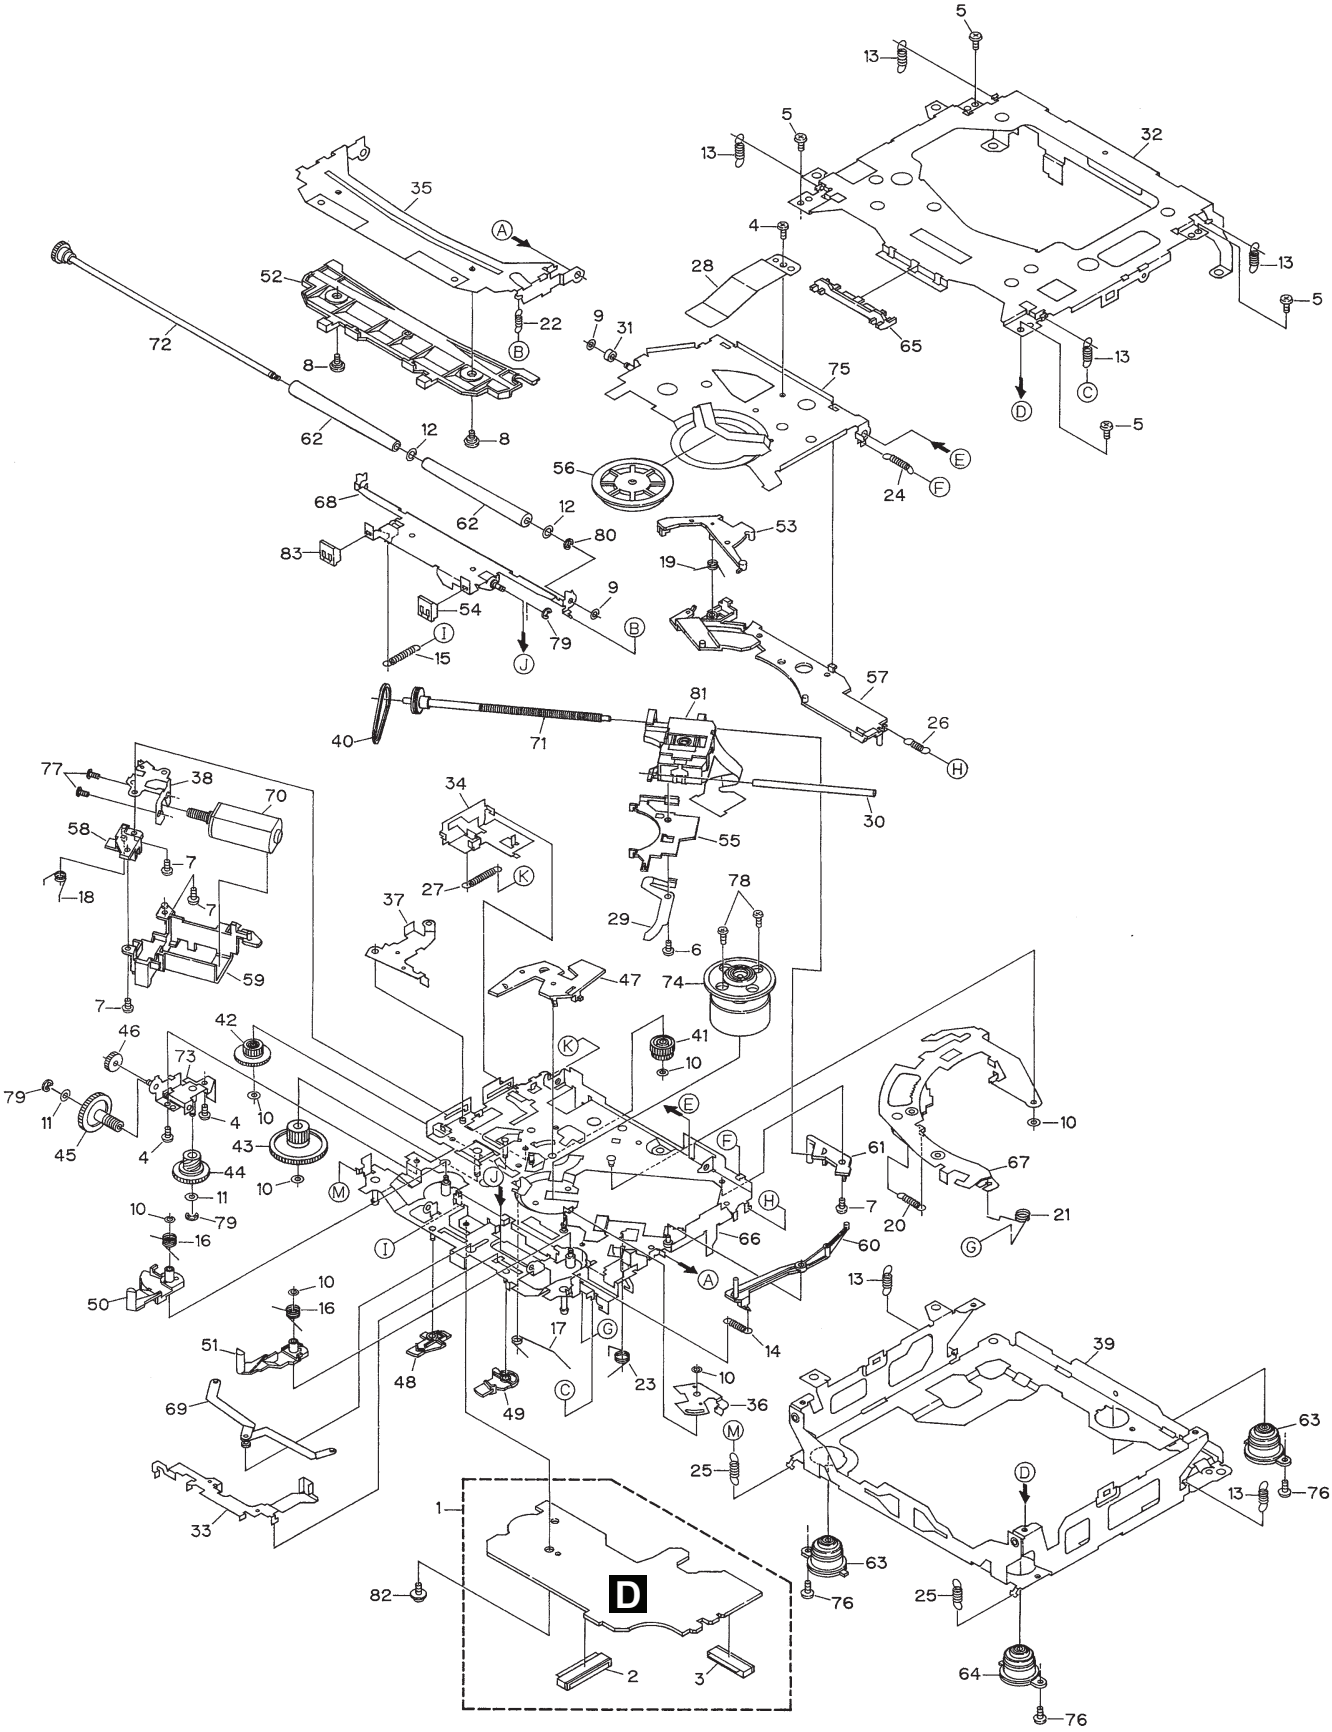

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	Control Unit	CWX2481
2	Connector(CN701)	CKS1959
3	Connector(CN101)	CKS3486
4	Screw	BMZ20P025FMC
5	Screw	BSZ20P040FMC
6	Screw(M2x4)	CBA1362
7	Screw(M2x3)	CBA1527
8	Screw	CBA1545
9	Washer	CBF1037
10	Washer	CBF1038
11	Washer	CBF1039
12	Washer	CBF1060
13	Spring	CBH2378
14	Spring	CBH2379
15	Spring	CBH2380
16	Spring	CBH2381
17	Spring	CBH2382
18	Spring	CBH2383
19	Spring	CBH2384
20	Spring	CBH2385
21	Spring	CBH2386
22	Spring	CBH2387
23	Spring	CBH2390
24	Spring	CBH2391
25	Spring	CBH2392
26	Spring	CBH2426
27	Spring	CBH2444
28	Spring	CBL1494
29	Spring	CBL1495
30	Shaft	CLA3845
31	Roller	CLA3910
32	Frame	CNC8946
33	Lever	CNC8948
34	Lever	CNC8949
35	Arm	CNC8951
36	Arm	CNC9016
37	Arm	CNC9017
38	Bracket	CNC9123
39	Frame	CNC9263
40	Belt	CNT1086
41	Gear	CNV6315
42	Gear	CNV6316
43	Gear	CNV6317
44	Gear	CNV6318
45	Gear	CNV6319
46	Gear	CNV6320
47	Arm	CNV6322
48	Arm	CNV6323
49	Arm	CNV6324
50	Arm	CNV6325
51	Arm	CNV6326
52	Guide	CNV6327
53	Arm	CNV6328
54	Guide	CNV6329
55	Rack	CNV6330
56	Clamper	CNV6331
57	Arm	CNV6332
58	Guide	CNV6333
59	Cover	CNV6334
60	Arm	CNV6335
61	Guide	CNV6336
62	Roller	CNV6338
63	Damper	CNV6339
64	Damper	CNV6340
65	Guide	CNV6484
66	Chassis Unit	CXB5898
67	Arm Unit	CXB5899
68	Arm Unit	CXB5900
69	Arm Unit	CXB5901
70	Motor Unit(M2)	CXB5903
71	Screw Unit	CXB5904
72	Gear Unit	CXB5905
73	Bracket Unit	CXB6006
74	Motor Unit(M1)	CXB6007
75	Arm Unit	CXB6237
76	Screw(M2x5)	EBA1028
77	Screw	JFZ20P020FMC
78	Screw	JGZ17P020FZK
79	Washer	YE15FUC
80	Washer	YE20FUC
81	Pickup Unit(Service)(P9)	CXX1480
82	Screw	IMS26P030FMC
83	Guide	CNV6832

5. ELECTRICAL PARTS LIST

NOTES:

● Parts whose parts numbers are omitted are subject to being not supplied.

● The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM7457(DEH-P630/X1N/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	101	IC	CA0008AM
IC	132	IC	NJM4558MD
IC	203	IC	PML009A
IC	271	IC	PA2028A
IC	301	IC	PAL006A
IC	601	IC	PD5615A
IC	851	IC	NJM2360M
IC	961	IC	S-80735ANDZI
Q	101	Transistor	2SA1162
Q	102	Transistor	DTC124EK
Q	131	Transistor	2SC2412K
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	352	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	801	Transistor	IMD2A
Q	802	Transistor	2SD1760F5
Q	803	Transistor	2SD1859
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EK
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	IMD2A
Q	931	Transistor	IMX1
Q	932	Transistor	2SC2412K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
Q	991	Transistor	IMD2A
Q	998	Transistor	2SD2396
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	801	Diode	HZS6L(B1)
D	803	Diode Network	DA204U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U
D	808	Diode	HZS11L(A1)
D	851	Diode	HZS9L(B2)
D	852	Diode	SB05-03C
D	901	Diode	1SR139-400
D	902	Diode	1SR139-400
D	903	Diode	1SR139-400
D	904	Diode	1SR139-400

=====Circuit Symbol and No.		===Part Name	Part No.
D	911	Diode	1SR139-400
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS9L(C1)
D	922	Diode	1SR139-400
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)
D	981	Diode	DAN202U
D	982	Diode	HZS9L(B1)
D	991	Diode	HZS9L(B1)
ZNR	451	Surge Protector	DSP-201M-A21F
L	271	Ferri-Inductor	LAU101K
L	401	Ferri-Inductor	LAU2R2K
L	402	Ferri-Inductor	LAU4R7K
L	403	Ferri-Inductor	LAU1R0M
L	601	Ferri-Inductor	LAU2R2K
L	801	Inductor	LAU100K
L	852	Inductor	CTF1510
L	853	Inductor	CTF1489
L	901	Choke Coil 600µH	CTH1221
X	601	Radiator 10.00MHz	CSS1475
S	801	Switch(DETACH SENSE)	CSN1039
BZ	641	Buzzer	CPV1050
		FM/AM Tuner Unit	CWE1563

RESISTORS

R	101		RS1/16S101J
R	102		RS1/16S470J
R	103		RS1/16S101J
R	104		RS1/16S222J
R	105		RS1/16S103J
R	106		RS1/16S562J
R	107		RS1/16S332J
R	108		RS1/16S150J
R	109		RS1/16S181J
R	110		RS1/16S181J
R	111		RS1/16S223J
R	112		RS1/16S223J
R	113		RS1/16S102J
R	114		RS1/16S102J
R	143		RS1/16S104J
R	144		RS1/16S104J
R	145		RS1/16S563J
R	146		RS1/16S563J
R	147		RS1/16S474J
R	148		RS1/16S474J
R	151		RS1/16S0R0J
R	152		RS1/16S0R0J
R	161		RS1/16S272J
R	162		RS1/16S272J
R	163		RS1/16S162J
R	164		RS1/16S162J
R	245		RS1/16S101J
R	246		RS1/16S101J
R	247		RS1/16S101J
R	248		RS1/16S101J

Circuit Symbol and No.	Part Name	Part No.
R 249		RS1/16S101J
R 250		RS1/16S101J
R 283		RS1/16S223J
R 301		RS1/16S103J
R 302		RS1/16S103J
R 304		RS1/16S331J
R 351		RS1/16S820J
R 352		RS1/16S820J
R 353		RS1/16S820J
R 354		RS1/16S820J
R 355		RS1/16S820J
R 356		RS1/16S820J
R 357		RS1/16S223J
R 358		RS1/16S223J
R 359		RS1/16S223J
R 360		RS1/16S223J
R 361		RS1/16S223J
R 362		RS1/16S223J
R 363		RS1/16S0R0J
R 364		RS1/16S0R0J
R 365		RS1/16S0R0J
R 366		RS1/16S0R0J
R 367		RS1/16S0R0J
R 368		RS1/16S0R0J
R 369		RS1/16S471J
R 370		RS1/16S471J
R 371		RS1/16S471J
R 372		RS1/16S471J
R 373		RS1/16S471J
R 374		RS1/16S471J
R 401		RS1/16S473J
R 402		RS1/16S473J
R 403		RS1/16S681J
R 404		RS1/16S681J
R 409		RS1/16S681J
R 410		RS1/16S103J
R 411		RS1/16S681J
R 412		RS1/16S681J
R 413		RS1/16S681J
R 414		RS1/16S473J
R 415		RS1/16S472J
R 416		RS1/16S473J
R 417		RS1/16S473J
R 418		RS1/16S473J
R 419		RS1/16S222J
R 420		RS1/16S222J
R 424		RS1/16S393J
R 506		RS1/16S0R0J
R 602		RS1/16S473J
R 604		RS1/16S473J
R 608		RS1/16S104J
R 611		RS1/16S102J
R 612		RS1/16S102J
R 613		RAB4C222J
R 614		RS1/16S222J
R 615		RS1/16S104J
R 616		RS1/16S473J
R 618		RS1/16S222J
R 619		RS1/16S473J
R 620		RS1/16S472J
R 621		RS1/16S473J
R 622		RS1/16S104J
R 623		RS1/16S473J
R 624		RS1/16S0R0J
R 627		RS1/16S104J
R 628		RS1/16S104J
R 633		RS1/16S104J
R 641		RS1/16S102J
R 801		RS1/16S332J
R 805		RS1/16S271J
R 806		RS1/16S271J
R 807		RS1/16S473J
R 808		RS1/16S473J
R 809		RS1/16S102J
R 810		RS1/16S222J
R 811		RS1/16S222J
R 812		RS1/16S222J
R 813		RS1/16S222J
R 814		RS1/16S222J
R 815		RS1/16S473J
R 816		RS1/16S104J
R 817		RD1/4PU391J
R 819		RS1/16S222J
R 820		RS1/16S222J
R 851		RS1/16S331J
R 852		RD1/4PU302J
R 853		RD1/4PU302J
R 854		RS1/16S121J
R 855		RS1/16S391J
R 856		RS1/16S1R0J
R 857		RS1/16S331J
R 912		RS1/16S681J
R 913		RS1/16S223J
R 914		RS1/16S681J
R 922		RD1/4PU221J
R 923		RS1/16S102J
R 924		RS1/16S223J
R 931		RS1/16S472J
R 932		RS1/16S473J
R 933		RS1/16S103J
R 934		RS1/16S473J
R 935		RS1/16S104J
R 936		RS1/16S103J
R 937		RS1/16S473J
R 938		RD1/4PU102J
R 939		RD1/4PU102J
R 962		RS1/16S102J
R 964		RS1/16S822J
R 982		RS1/16S473J
R 983		RS1/16S104J
R 984		RS1/16S473J
R 985		RD1/4PU102J
R 991		RD1/4PU221J
R 992		RD1/4PU221J
R 993		RS1/16S472J
R 994		RS1/16S222J
R 995		RS1/16S0R0J
R 997		RAB4C102J

CAPACITORS

Circuit Symbol and No.	Part Name	Part No.
C 101		CKSRYB104K16
C 102		CKSRYB104K16
C 139		CKSRYB104K16
C 140		CKSRYB104K16
C 141		CKSRYB104K16
C 142		CKSRYB104K16
C 143		CKSRYB474K10
C 144		CKSRYB474K10
C 145		CCSRCH101J50
C 146		CCSRCH101J50
C 147		CKSRYB103K50
C 161		CKSRYB183K25
C 162		CKSRYB183K25
C 171		CEJQ470M10
C 172		CKSRYB104K16
C 173		CEJQ100M16
C 177		CCSRCH100D50
C 178		CCSRCH100D50
C 179		CCSRCH100D50
C 180		CCSRCH100D50

Circuit Symbol and No.		Part Name	Part No.
C	191		CEJQ1R0M50
C	192		CEJQ1R0M50
C	205		CEJQR22M50
C	206		CEJQR22M50
C	207		CEJQ1R0M50
C	208		CEJQ1R0M50
C	209		CEJQ1R0M50
C	210		CEJQ1R0M50
C	211		CEJQNP4R7M16
C	212		CEJQNP4R7M16
C	213		CEJQNP4R7M16
C	214		CEJQNP4R7M16
C	215		CEJQNP4R7M16
C	216		CEJQNP4R7M16
C	217		CEJQNP4R7M16
C	218		CEJQNP4R7M16
C	271		CEJQNP1R0M50
C	272		CEJQNP1R0M50
C	273		CEJQNP1R0M50
C	274		CEJQNP1R0M50
C	275		CEJQNP1R0M50
C	276		CEJQNP1R0M50
C	277		CEJQ4R7M35
C	278		CEJQ101M16
C	279		CEJQ100M16
C	280		CEJQ100M16
C	281		CKSRYB105K10
C	282		CKSYB684K16
C	283		CASAQ4R7M16
C	284		CEJQ330M25
C	285		CEJQ330M25
C	306		CEJQ330M10
C	307	4700µF/16V	CCH1367
C	309		CKSRYB104K16
C	310		CEJQ100M16
C	311		CFTNA105J50
C	313		CFTNA224J50
C	314		CFTNA224J50
C	315		CFTNA224J50
C	316		CFTNA224J50
C	351		CEJQ100M35
C	352		CEJQ100M35
C	353		CEJQ100M35
C	354		CEJQ100M35
C	355		CEJQ100M35
C	356		CEJQ100M35
C	357		CKSRYB222K50
C	358		CKSRYB222K50
C	359		CKSRYB222K50
C	360		CKSRYB222K50
C	361		CKSRYB222K50
C	362		CKSRYB222K50
C	403		CKSRYB473K25
C	404		CEAL101M6R3
C	405		CKSRYB103K50
C	406		CEJQ220M10
C	407		CKSQYB103K50
C	408		CKSRYB223K25
C	409		CKSRYB223K25
C	411		CKSRYB472K50
C	440		CKSRYB103K25
C	601		CEJQ4R7M35
C	602		CKSRYB102K50
C	604		CCSRCH180J50
C	605		CCSRCH180J50
C	653		CKSRYB103K50
C	755		CKSRYB104K16
C	801		CKSRYB103K50
C	802		CEJQ470M10
C	803		CKSRYB104K16

Circuit Symbol and No.		Part Name	Part No.
C	806		CKSRYB473K25
C	812		CKSYB475K16
C	851		CEJQ470M16
C	853	4.7µF/25V	CCG1111
C	855		CEJQ100M25
C	856		CCSRCH331J50
C	857		CEJQ330M25
C	858		CKSRYB104K16
C	859		CEJQ101M10
C	860		CKSRYB104K16
C	861		CKSRYB103K25
C	911		CEAT102M16
C	912		CKSRYB472K50
C	913		CKSRYB103K50
C	914		CEJQ470M10
C	921	330µF/10V	CCH1181
C	922		CKSRYB103K50
C	923		CEJQ100M16
C	931		CEJQ100M16
C	963		CEJQ2R2M50
C	991		CKSRYB473K25
C	992		CKSRYB102K50
C	993		CEJQ101M10

A Unit Number : CWM7458(DEH-P6300/X1N/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	CA0008AM
IC	132	IC	NJM4558MD
IC	203	IC	PML009A
IC	301	IC	PAL006A
IC	601	IC	PD5615A
IC	851	IC	NJM2360M
IC	961	IC	S-80735ANDZI
Q	101	Transistor	2SA1162
Q	102	Transistor	DTC124EK
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	801	Transistor	IMD2A
Q	802	Transistor	2SD1760F5
Q	803	Transistor	2SD1859
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EK
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	IMD2A
Q	931	Transistor	IMX1
Q	932	Transistor	2SC2412K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
Q	991	Transistor	IMD2A
Q	998	Transistor	2SD2396
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	801	Diode	HZS6L(B1)
D	803	Diode Network	DA204U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U

Circuit Symbol and No.		Part Name	Part No.
D	808	Diode	HZS11L(A1)
D	851	Diode	HZS9L(B2)
D	852	Diode	SB05-03C
D	901	Diode	1SR139-400
D	902	Diode	1SR139-400
D	903	Diode	1SR139-400
D	904	Diode	1SR139-400
D	911	Diode	1SR139-400
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS9L(C1)
D	922	Diode	1SR139-400
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)
D	981	Diode	DAN202U
D	982	Diode	HZS9L(B1)
D	991	Diode	HZS9L(B1)
ZNR	451	Surge Protector	DSP-201M-A21F
L	401	Ferri-Inductor	LAU2R2K
L	402	Ferri-Inductor	LAU4R7K
L	403	Ferri-Inductor	LAU1R0M
L	601	Ferri-Inductor	LAU2R2K
L	801	Inductor	LAU100K
L	852	Inductor	CTF1510
L	853	Inductor	CTF1489
L	901	Choke Coil 600µH	CTH1221
X	601	Radiator 10.00MHz	CSS1475
S	801	Switch(DETACH SENSE)	CSN1039
BZ	641	Buzzer	CPV1050
		FM/AM Tuner Unit	CWE1563

RESISTORS

Circuit Symbol and No.		Part Name	Part No.
R	101		RS1/16S101J
R	102		RS1/16S470J
R	103		RS1/16S101J
R	104		RS1/16S222J
R	105		RS1/16S103J
R	106		RS1/16S562J
R	107		RS1/16S332J
R	108		RS1/16S150J
R	109		RS1/16S181J
R	110		RS1/16S181J
R	111		RS1/16S223J
R	112		RS1/16S223J
R	113		RS1/16S102J
R	114		RS1/16S102J
R	143		RS1/16S104J
R	144		RS1/16S104J
R	145		RS1/16S563J
R	146		RS1/16S563J
R	147		RS1/16S474J
R	148		RS1/16S474J
R	151		RS1/16S0R0J
R	152		RS1/16S0R0J
R	161		RS1/16S272J
R	162		RS1/16S272J
R	163		RS1/16S162J
R	164		RS1/16S162J
R	245		RS1/16S101J
R	246		RS1/16S101J
R	247		RS1/16S101J
R	248		RS1/16S101J
R	249		RS1/16S101J
R	250		RS1/16S101J
R	285		RS1/16S0R0J
R	286		RS1/16S0R0J
R	287		RS1/16S0R0J
R	288		RS1/16S0R0J
R	301		RS1/16S103J
R	302		RS1/16S103J
R	304		RS1/16S331J
R	351		RS1/16S821J
R	352		RS1/16S821J
R	355		RS1/16S821J
R	356		RS1/16S821J
R	357		RS1/16S223J
R	358		RS1/16S223J
R	361		RS1/16S223J
R	362		RS1/16S223J
R	363		RS1/16S0R0J
R	364		RS1/16S0R0J
R	367		RS1/16S0R0J
R	368		RS1/16S0R0J
R	369		RS1/16S471J
R	370		RS1/16S471J
R	373		RS1/16S471J
R	374		RS1/16S471J
R	401		RS1/16S473J
R	402		RS1/16S473J
R	403		RS1/16S681J
R	404		RS1/16S681J
R	409		RS1/16S681J
R	410		RS1/16S103J
R	411		RS1/16S681J
R	412		RS1/16S681J
R	413		RS1/16S681J
R	414		RS1/16S473J
R	415		RS1/16S472J
R	416		RS1/16S473J
R	417		RS1/16S473J
R	418		RS1/16S473J
R	419		RS1/16S222J
R	420		RS1/16S222J
R	424		RS1/16S393J
R	506		RS1/16S0R0J
R	602		RS1/16S473J
R	603		RS1/16S473J
R	608		RS1/16S104J
R	611		RS1/16S102J
R	612		RS1/16S102J
R	613		RAB4C222J
R	614		RS1/16S222J
R	615		RS1/16S104J
R	616		RS1/16S473J
R	618		RS1/16S222J
R	619		RS1/16S473J
R	620		RS1/16S472J
R	621		RS1/16S473J
R	622		RS1/16S104J
R	623		RS1/16S473J
R	624		RS1/16S0R0J
R	627		RS1/16S104J
R	628		RS1/16S104J
R	633		RS1/16S104J
R	641		RS1/16S102J
R	801		RS1/16S332J
R	805		RS1/16S271J
R	806		RS1/16S271J
R	807		RS1/16S473J
R	808		RS1/16S473J
R	809		RS1/16S102J
R	810		RS1/16S222J

=====Circuit Symbol and No.	===Part Name	Part No.
R 811		RS1/16S222J
R 812		RS1/16S222J
R 813		RS1/16S222J
R 814		RS1/16S222J
R 815		RS1/16S473J
R 816		RS1/16S104J
R 817		RD1/4PU391J
R 819		RS1/16S222J
R 820		RS1/16S222J
R 851		RS1/16S331J
R 852		RD1/4PU302J
R 853		RD1/4PU302J
R 854		RS1/16S121J
R 855		RS1/16S391J
R 856		RS1/16S1R0J
R 857		RS1/16S331J
R 912		RS1/16S681J
R 913		RS1/16S223J
R 914		RS1/16S681J
R 922		RD1/4PU221J
R 923		RS1/16S102J
R 924		RS1/16S223J
R 931		RS1/16S472J
R 932		RS1/16S473J
R 933		RS1/16S103J
R 934		RS1/16S473J
R 935		RS1/16S104J
R 936		RS1/16S103J
R 937		RS1/16S473J
R 938		RD1/4PU102J
R 939		RD1/4PU102J
R 962		RS1/16S102J
R 964		RS1/16S822J
R 982		RS1/16S473J
R 983		RS1/16S104J
R 984		RS1/16S473J
R 985		RD1/4PU102J
R 991		RD1/4PU221J
R 992		RD1/4PU221J
R 993		RS1/16S472J
R 994		RS1/16S222J
R 995		RS1/16S0R0J
R 997		RAB4C102J

CAPACITORS

=====Circuit Symbol and No.	===Part Name	Part No.
C 101		CKSRYB104K16
C 102		CKSRYB104K16
C 139		CKSRYB104K16
C 140		CKSRYB104K16
C 141		CKSRYB104K16
C 142		CKSRYB104K16
C 143		CKSRYB474K10
C 144		CKSRYB474K10
C 145		CCSRCH101J50
C 146		CCSRCH101J50
C 147		CKSRYB103K50
C 161		CKSRYB183K25
C 162		CKSRYB183K25
C 171		CEJQ470M10
C 172		CKSRYB104K16
C 173		CEJQ100M16
C 177		CCSRCH100D50
C 178		CCSRCH100D50
C 179		CCSRCH100D50
C 180		CCSRCH100D50
C 191		CEJQ1R0M50
C 192		CEJQ1R0M50
C 205		CEJQR22M50
C 206		CEJQR22M50
C 207		CEJQ1R0M50
C 208		CEJQ1R0M50
C 209		CEJQ1R0M50
C 210		CEJQ1R0M50
C 211		CEJQNP4R7M16
C 212		CEJQNP4R7M16
C 213		CEJQNP4R7M16
C 214		CEJQNP4R7M16
C 215		CEJQNP4R7M16
C 216		CEJQNP4R7M16
C 217		CEJQNP4R7M16
C 218		CEJQNP4R7M16
C 306		CEJQ330M10
C 307	4700µF/16V	CCH1367
C 309		CKSRYB104K16
C 310		CEJQ100M16
C 311		CFTNA105J50
C 313		CFTNA224J50
C 314		CFTNA224J50
C 315		CFTNA224J50
C 316		CFTNA224J50
C 351		CEJQ100M16
C 352		CEJQ100M16
C 355		CEJQ100M16
C 356		CEJQ100M16
C 357		CKSRYB222K50
C 358		CKSRYB222K50
C 361		CKSRYB222K50
C 362		CKSRYB222K50
C 403		CKSRYB473K25
C 404		CEAL101M6R3
C 405		CKSRYB103K50
C 406		CEJQ220M10
C 407		CKSQYB103K50
C 408		CKSRYB223K25
C 409		CKSRYB223K25
C 411		CKSRYB472K50
C 440		CKSRYB103K25
C 601		CEJQ4R7M35
C 602		CKSRYB102K50
C 604		CCSRCH180J50
C 605		CCSRCH180J50
C 653		CKSRYB103K50
C 755		CKSRYB104K16
C 801		CKSRYB103K50
C 802		CEJQ470M10
C 803		CKSRYB104K16
C 806		CKSRYB473K25
C 812		CKSYB475K16
C 851		CEJQ470M16
C 853	4.7µF/25V	CCG1111
C 855		CEJQ100M25
C 856		CCSRCH331J50
C 857		CEJQ330M25
C 858		CKSRYB104K16
C 859		CEJQ101M10
C 860		CKSRYB104K16
C 861		CKSRYB103K25
C 911		CEAT102M16
C 912		CKSRYB472K50
C 913		CKSRYB103K50

=====Circuit Symbol and No.	Part Name	Part No.
C 914		CEJQ470M10
C 921	330µF/10V	CCH1181
C 922		CKSRYB103K50
C 923		CEJQ100M16
C 931		CEJQ100M16
C 963		CEJQ2R2M50
C 991		CKSRYB473K25
C 992		CKSRYB102K50
C 993		CEJQ101M10

C Unit Number : CWM7808(DEH-P630/X1N/UC)
Unit Number : CWM7467(DEH-P6300/X1N/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1901	IC	PD5627A
IC	1902	IC (DEH-P630/X1N/UC)	PD8086A
		IC (DEH-P6300/X1N/UC)	PD8074A
IC	1903	IC	TSOP1840SB1
IC	1904	IC	PD5536A
Q	1907	Transistor	2SD1664
Q	1908	Transistor	2SC4617
D	1901	Diode	DAP202U
D	1902	Diode	DAN202U
D	1904	Diode	1SS355
D	1914	LED	CL170UBX
D	1917	Diode	DAN202U
D	1922	LED	CL170PGCD
D	1923	LED	CL170PGCD
D	1924	LED	CL170PGCD
D	1925	LED	CL170PGCD
L	1901	Chip-Inductor	LCTA2R2J3225
L	1904	Chip-Inductor	LCTA2R2J3225
L	1905	Inductor	LCTA220J2520
L	1906	Inductor-Array	CTF1421
L	1907	Inductor-Array	CTF1421
L	1908	Inductor	LCTA220J2520
L	1909	Inductor	CTF1484
L	1910	Inductor	CTF1410
L	1911	Inductor	CTF1410
L	1912	Inductor-Array	CTF1421
TH	1901	Thermistor	CCX1037
X	1901	Ceramic Resonator 15.62MHz	CSS1458
S	1901	Push Switch	CSG1112
S	1903	Push Switch	CSG1111
S	1906	Push Switch	CSG1112
S	1907	Switch	CSG1107
S	1908	Push Switch	CSG1146
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Push Switch	CSG1112
S	1918	Push Switch	CSG1112
S	1919	Switch	CSG1107
S	1920	Push Switch	CSG1112
S	1922	Push Switch	CSG1112
S	1923	Push Switch	CSG1112
S	1924	Push Switch	CSG1112
S	1930	Encoder	CSD1059
VR	1902	Semi-fixed 20kΩ(B)	CCP1231
		OEL Unit	MXS8016

=====Circuit Symbol and No.	Part Name	Part No.

RESISTORS

R	1901	RS1/16S154J
R	1902	RS1/16S473J
R	1903	RS1/16S101J
R	1906	RS1/16S102J
R	1907	RS1/16S473J
R	1909	RS1/16S101J
R	1910	RAB4C101J
R	1911	RAB4C101J
R	1912	RAB4C101J
R	1913	RAB4C101J
R	1915	RAB4C101J
R	1918	RAB4C101J
R	1921	RAB4C102J
R	1922	RS1/16S121J
R	1923	RS1/16S2R2J
R	1924	RS1/16S222J
R	1925	RS1/16S222J
R	1928	RS1/16S102J
R	1929	RS1/16S102J
R	1930	RS1/16S222J
R	1931	RS1/16S101J
R	1932	RS1/16S333J
R	1933	RS1/16S683J
R	1934	RS1/16S393J
R	1935	RS1/16S392J
R	1940	RS1/16S0R0J
R	1949	RS1/16S1R0J
R	1960	RS1/16S202J
R	1961	RS1/16S121J
R	1962	RS1/16S121J
R	1963	RS1/16S121J
R	1964	RS1/16S391J
R	1965	RS1/16S121J
R	1966	RS1/16S121J
R	1967	RS1/16S202J
R	1968	RS1/16S391J
R	1969	RS1/16S121J
R	1970	RS1/16S121J
R	1971	RS1/16S121J
R	1972	RS1/16S121J
R	1973	RS1/16S121J
R	1979	RS1/16S0R0J
R	1989	RS1/16S222J
R	1990	RS1/16S822J
R	1991	RAB4C101J
R	1992	RAB4C101J
R	1993	RS1/16S473J
R	1996	RS1/16S101J
R	1997	RS1/16S473J
R	1998	RS1/16S103J

CAPACITORS

C	1902	CKSRYB103K25
C	1903	CSZSR100M16
C	1904	CSZSR100M16
C	1906	CKSRYB103K25
C	1907	CCSRCH101J50
C	1908	CKSRYB473K16
C	1913	CSZSR100M16
C	1922	CKSRYB104K16
C	1926	CKSRYB104K25
C	1927	CKSRYB104K25
C	1928	CKSRYB104K25
C	1929	CKSRYB104K16
C	1936	CKSRYB104K25
C	1937	CKSRYB104K16
C	1938	CKSRYB104K16

=====Circuit Symbol and No.		===Part Name	Part No.
C	1941		CKSRYB104K16
C	1943	4.7µF/25V	CCG1111
C	1945		CKSRYB104K25
C	1946		CKSRYB104K16
C	1947		CKSRYB103K25
C	1948		CKSRYB103K25

B Unit Number : CWM7375
Unit Name : Panel Unit

MISCELLANEOUS

D	1950	LED	CL220PGC
S	1950	Push Switch(EJECT)	CSG1112

RESISTORS

R	1952		RS1/16S101J
R	1953		RS1/16S101J

D Unit Number : CWX2481
Unit Name : Control Unit

MISCELLANEOUS

IC	101	IC	TA2153FN
IC	201	IC	TC9495F2
IC	401	IC	BA5996FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	UMD2N
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
X	301	Ceramic Resonator 16.934MHz	CSS1525
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101	RS1/16S222J
R	102	RS1/8S120J
R	103	RS1/8S100J
R	201	RS1/16S513J
R	202	RS1/16S513J
R	203	RS1/16S823J
R	204	RS1/16S823J
R	206	RS1/16S823J
R	208	RS1/16S124J
R	209	RS1/16S183J
R	210	RS1/16S153J
R	211	RS1/16S103J
R	212	RS1/16S103J
R	213	RS1/16S124J
R	215	RS1/16S0R0J
R	216	RS1/16S471J
R	301	RS1/16S333J
R	302	RS1/16S332J
R	303	RS1/16S332J
R	304	RS1/16S514J
R	306	RS1/16S102J
R	307	RS1/16S102J
R	312	RS1/16S103J
R	313	RS1/16S473J
R	315	RD1/4PU334J
R	321	RS1/16S331J
R	322	RS1/16S0R0J
R	323	RS1/16S332J
R	401	RS1/16S684J
R	402	RS1/16S103J

=====Circuit Symbol and No.		===Part Name	Part No.
R	403		RS1/16S103J
R	404		RS1/16S183J
R	405		RS1/16S123J
R	407		RS1/16S622J
R	408		RS1/16S622J
R	409		RS1/16S113J
R	410		RS1/16S752J
R	701		RS1/16S102J
R	702		RS1/16S221J
R	703		RS1/16S221J
R	704		RS1/16S221J
R	705		RS1/16S221J
R	706		RS1/16S221J
R	707		RS1/16S221J
R	708		RS1/16S102J
R	709		RS1/16S102J
R	710		RS1/16S102J
R	901		RS1/16S104J
R	902		RS1/16S473J
R	903		RS1/16S273J

CAPACITORS

C	101	CEV470M6R3
C	102	CKSRYB102K50
C	103	CKSRYB104K16
C	104	CKSRYB224K16
C	105	CEV470M6R3
C	106	CKSRYB104K16
C	107	CKSRYB105K6R3
C	201	CKSRYB104K16
C	202	CCSRCH560J50
C	204	CKSRYB224K16
C	205	CKSRYB224K16
C	206	CKSRYB273K25
C	207	CKSRYB273K25
C	208	CKSRYB104K16
C	209	CKSRYB104K16
C	210	CCSRCK2R0C50
C	211	CCSRCH220J50
C	301	CKSRYB153K25
C	302	CKSRYB104K16
C	303	CKSRYB103K50
C	304	CKSRYB103K50
C	305	CKSRYB104K16
C	306	CKSRYB104K16
C	307	CKSRYB333K16
C	308	CKSRYB104K16
C	309	CKSRYB473K16
C	310	CKSRYB473K16
C	311	CKSRYB104K16
C	312	CKSRYB104K16
C	315	CEV220M6R3
C	317	CKSRYB104K16
C	318	CKSRYB104K16
C	319	CKSRYB104K16
C	320	CCSRCH470J50
C	325	CKSRYB471K50
C	328	CKSRYB472K50
C	329	CKSRYB104K16
C	330	CKSRYB104K16
C	331	CKSRYB104K16
C	401	CKSRYB221K50
C	402	CKSRYB221K50
C	403	CKSRYB153K25
C	404	CKSRYB103K50
C	405	CEV101M10
C	702	CKSRYB104K16