EXPLODED VIEW / PARTS LIST

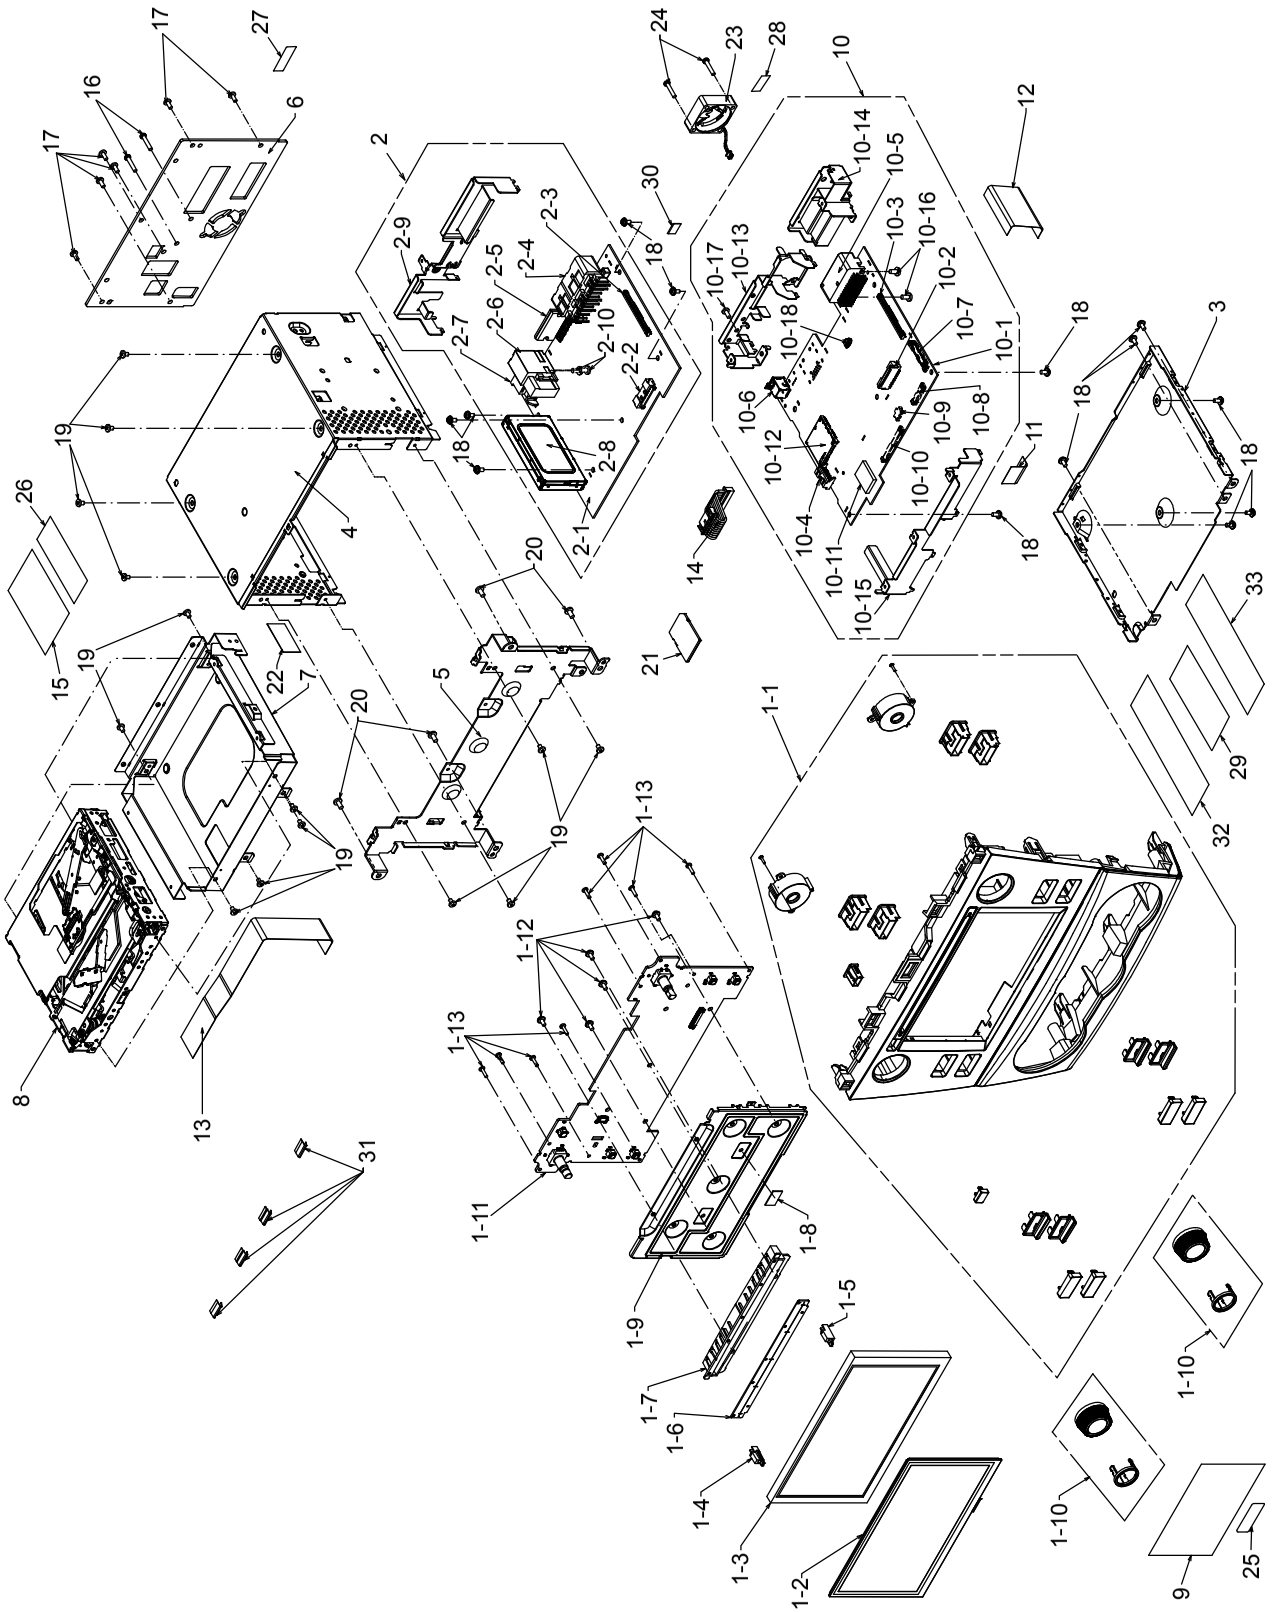

NO.	PART NO.	DESCRIPTION	Q'TY
1	----------	*Unused number	-
1-1	940-8790-36	ES-ASSY(CM744CL)(for PF3679AA)	1
	940-8862-04	ES-ASSY(CM785CL)(for PF3679AB)	1
	940-8790-58	ES-ASSY(CM754CL)(for PF3756AA)	1
	940-8862-06	ES-ASSY(CM795CL)(for PF3756AB)	1
1-2	013-9745-00	TOUCH PANEL	1
1-3	379-0491-02	TFT	1
1-4	335-9939-02	MOLDED PART(L)	1
1-5	335-9938-02	MOLDED PART(R)	1
1-6	346-0314-11	LEATHER PART	1
1-7	335-9937-00	MOLDED PART(DISC GUIDE)	1
1-8	331-3038-50	EARTH PLATE	1
1-9	331-5532-03	PRESSED PART(LCD HOLDER)	1
1-10	947-0863-02	KNOB ASSY	2
1-11	.990-1009A	SW PWB ASSY(3658B7-77)	1
1-12	716-0878-50	SPECIAL SCREW	5
1-13	716-0778-52	SPECIAL SCREW	8
2	.990-1063A	MAIN PWB ASSY (3732A7-75)	1
2-1	----------	MAIN PWB (461100-039)	1
2-2	076-6021-60	PLUG(10P)	1
2-3	074-2248-80	OUTLET SOCKET(80P)	1
2-4	074-1261-00	OUTLET SOCKET(10P+6P)	1
2-5	051-2077-00	IC	1
2-6	092-2260-00	ANT-RECEPT(RADIO)	1
2-7	092-2259-00	ANT-RECEPT(XM)	1
2-8	----------	TUNER PACK(XM)(026001-941)	1
2-9	331-5535-04	BRKT-C	1
2-10	778-3006-00	TAP-SCREW	2
3	311-2084-11	LOWER CASE	1
4	310-2026-12	UPPER CASE	1
5	309-2002-01	FRONT PLATE	1
6	313-2194-02	HEAT SINK	1
7	331-5531-01	PRESSED PART(MECH BRKT)	1
8	929-5400-80	CD-MECH-MODULE	1
9	347-9449-02	PROTECTOR	1
10	.990-1061A	NAVI-PWB-ASSY(3731A7-78)	1
10-1	----------	NAVI PWB(448000-039)	1
10-2	076-6030-60	PLUG(10P)	1
10-3	074-2248-80	OUTLET SOCKET(80P)	1
10-4	076-6023-07	PLUG(7P)	1
10-5	074-1302-28	OUTLET SOCKET(28P)	1
10-6	074-4105-00	OUTLET SOCKET(4P)	1
10-7	074-2248-40	OUTLET SOCKET(40P)	1
10-8	074-2248-30	OUTLET SOCKET(30P)	1

⚠⚠⚠

NO.	PART NO.	DESCRIPTION	Q'TY
10-9	074-2249-04	OUTLET SOCKET(4P)	1
10-10	074-2248-60	OUTLET SOCKET(60P)	1
10-11	060-8162-90	BLUETOOTH MODULE	1
10-12	074-8017-91	OUTLET SOCKET(16P)	1
10-13	331-5533-03	PRESSED PART(BRKT-L)	1
10-14	331-5534-01	PRESSED PART(BRKT-R)	1
10-15	331-5586-01	PRESSED PART(BRKT-F)	1
10-16	778-3006-00	TAP-SCREW	2
10-17	714-2606-8B	MACHINE SCREW	1
10-18	076-0569-02	PLUG(2P)	1
11	816-3135-55	FLAT WIRE(30P)	1
12	816-3105-55	FLAT WIRE(80P)	1
13	816-3167-57	FLAT WIRE(40P)	1
14	854-4667-52	EXTENSION LEAD	1
15	----------	SETPLATE(113673-276)(for PF3679AA)	1
	----------	SETPLATE(153326-276)(for PF3679AB)	1
	----------	SETPLATE(113674-276)(for PF3756AA)	1
	----------	SETPLATE(153328-276)(for PF3756AB)	1
16	714-2614-8B	MACHINE SCREW	2
17	714-2606-8B	MACHINE SCREW	6
18	716-0878-50	SPECIAL SCREW	13
19	714-2604-8B	MACHINE SCREW	14
20	778-3006-51	TAP SCREW	4
21	.440-3679A	SD CARD (for PF3679AA,PF3756AA)	1
	.440-3679B	SD-ASSY (for PF3679AB,PF3756AB)	1
22	347-9373-00	PAPER PART	1
23	020-3066-00	DC-MOTOR	1
24	732-2614-1B	SEMS SCREW	2
25	----------	LABEL(XM)(091901-290)(for PF3679AA)	1
	----------	LABEL(XM)(091906-290)(for PF3679AB)	1
	----------	LABEL(XM)(091902-290)(for PF3756AA)	1
	----------	LABEL(XM)(091907-290)(for PF3756AB)	1
26	----------	LABEL(HD)(075400-290)	1
27	290-0548-83	QR LABEL(MR74)(for PF3679AA)	1
	290-0946-03	QR LABEL(MR78)(for PF3679AB)	1
	290-0548-99	QR LABEL(MR75)(for PF3756AA)	1
	290-0946-05	QR LABEL(MR79)(for PF3756AB)	1
28	347-9381-00	PROTECT-SHEET	1
29	----------	LABEL(XM BARCODE)(092000-290)	1
30	345-6717-00	GASKET	1
31	347-9492-00	PAPER PART	4
32	----------	*Not mounted(LABEL)	-
33	----------	*Not mounted(BSMI LABEL)	-

< About the software of an SD card and the microcomputer>

* The software of PF3679AA and PF3756AA is the same.
The software of PF3679AB and PF3756AB is the same.

ELECTRICAL PARTS LIST / CIRCUIT DIAGRAM / PRINTED WIRING BOARD

* Refer to the service manual of No.7675-01.