EXPLODED VIEW (CD MECHANISM)

A : N09-6108-15
B : N09-6426-15+
C : N09-6735-05
D : N09-6737-15
E : N09-6738-15
F : N19-2335-14
G : N35-2003-48
H : N39-1720-48

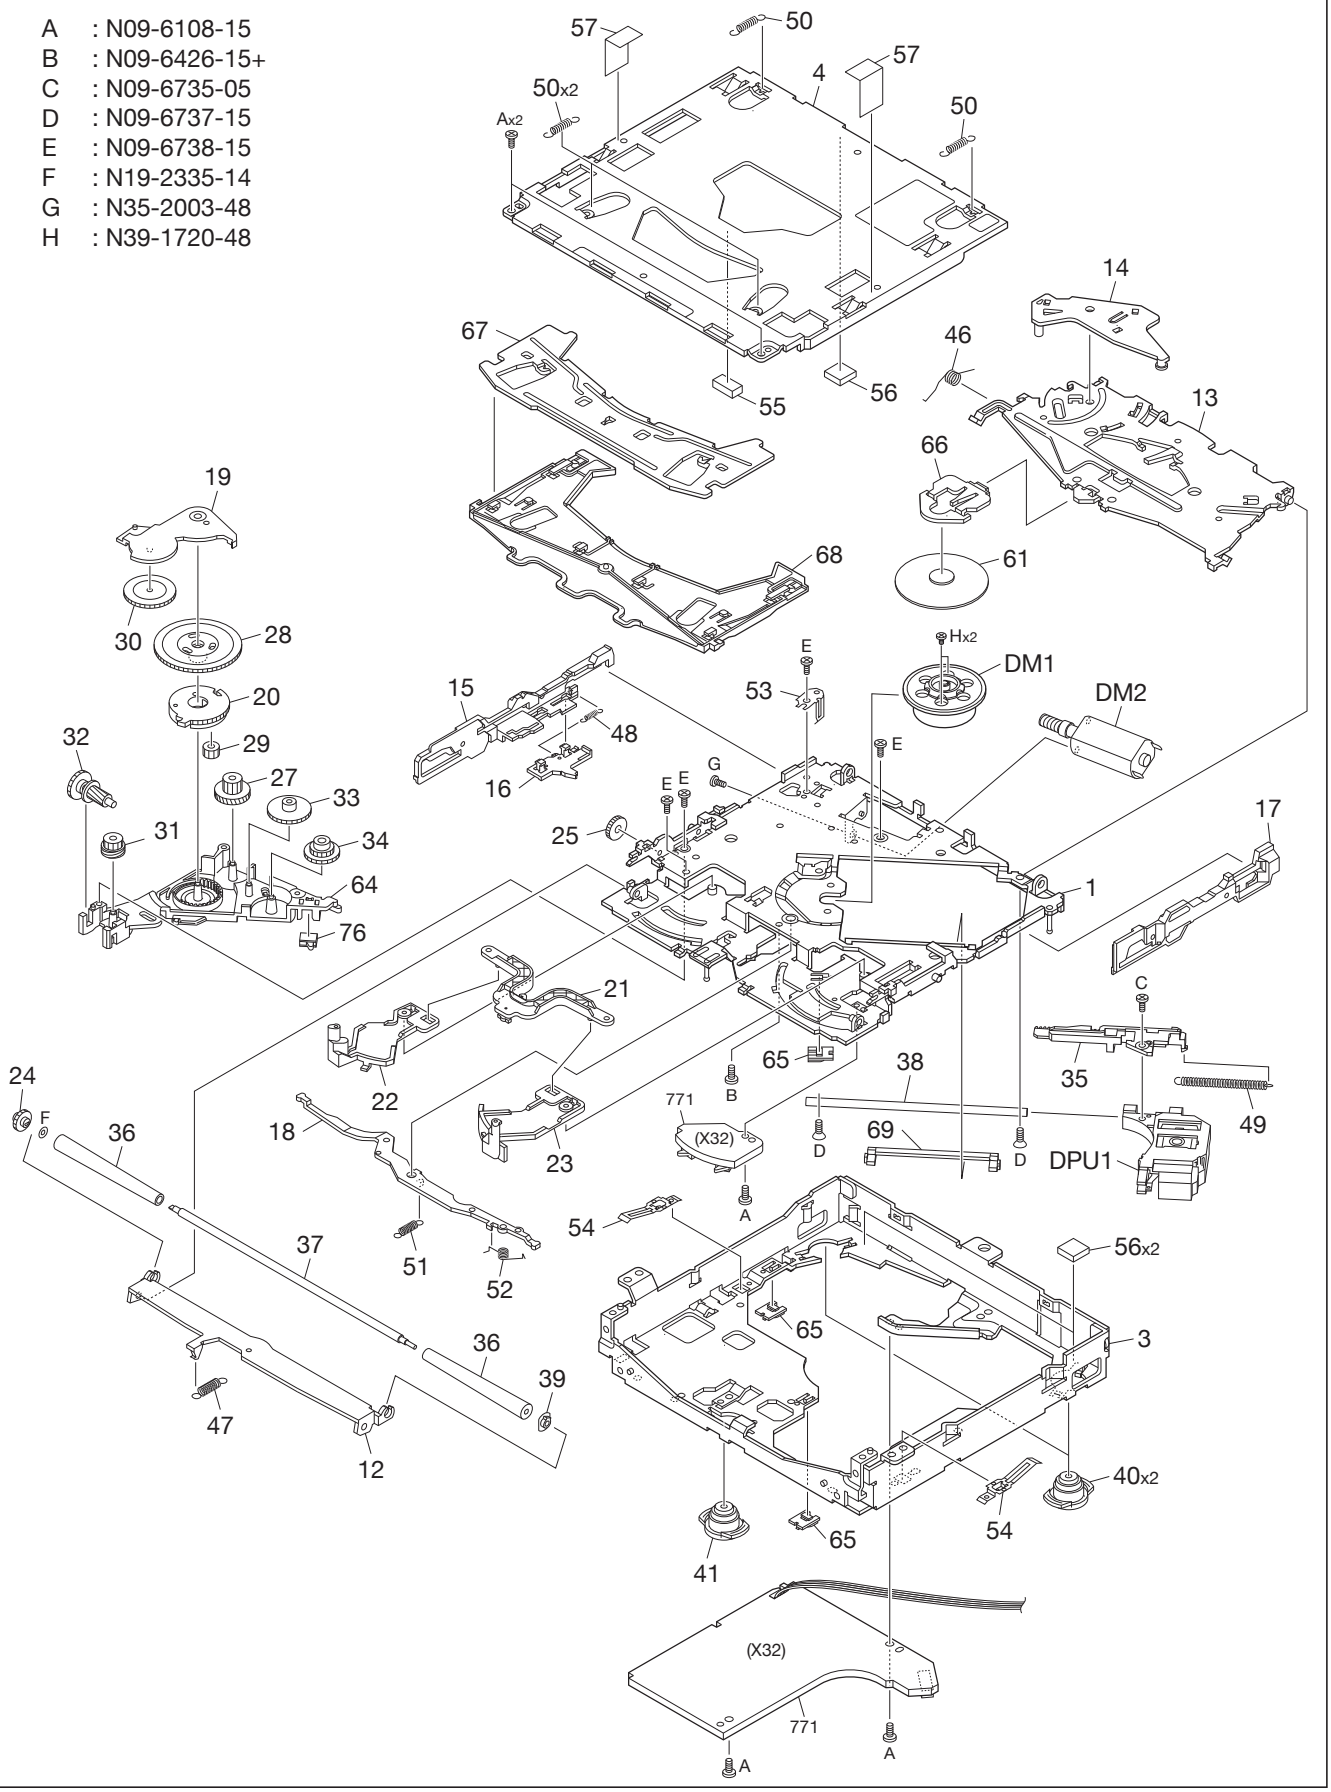

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

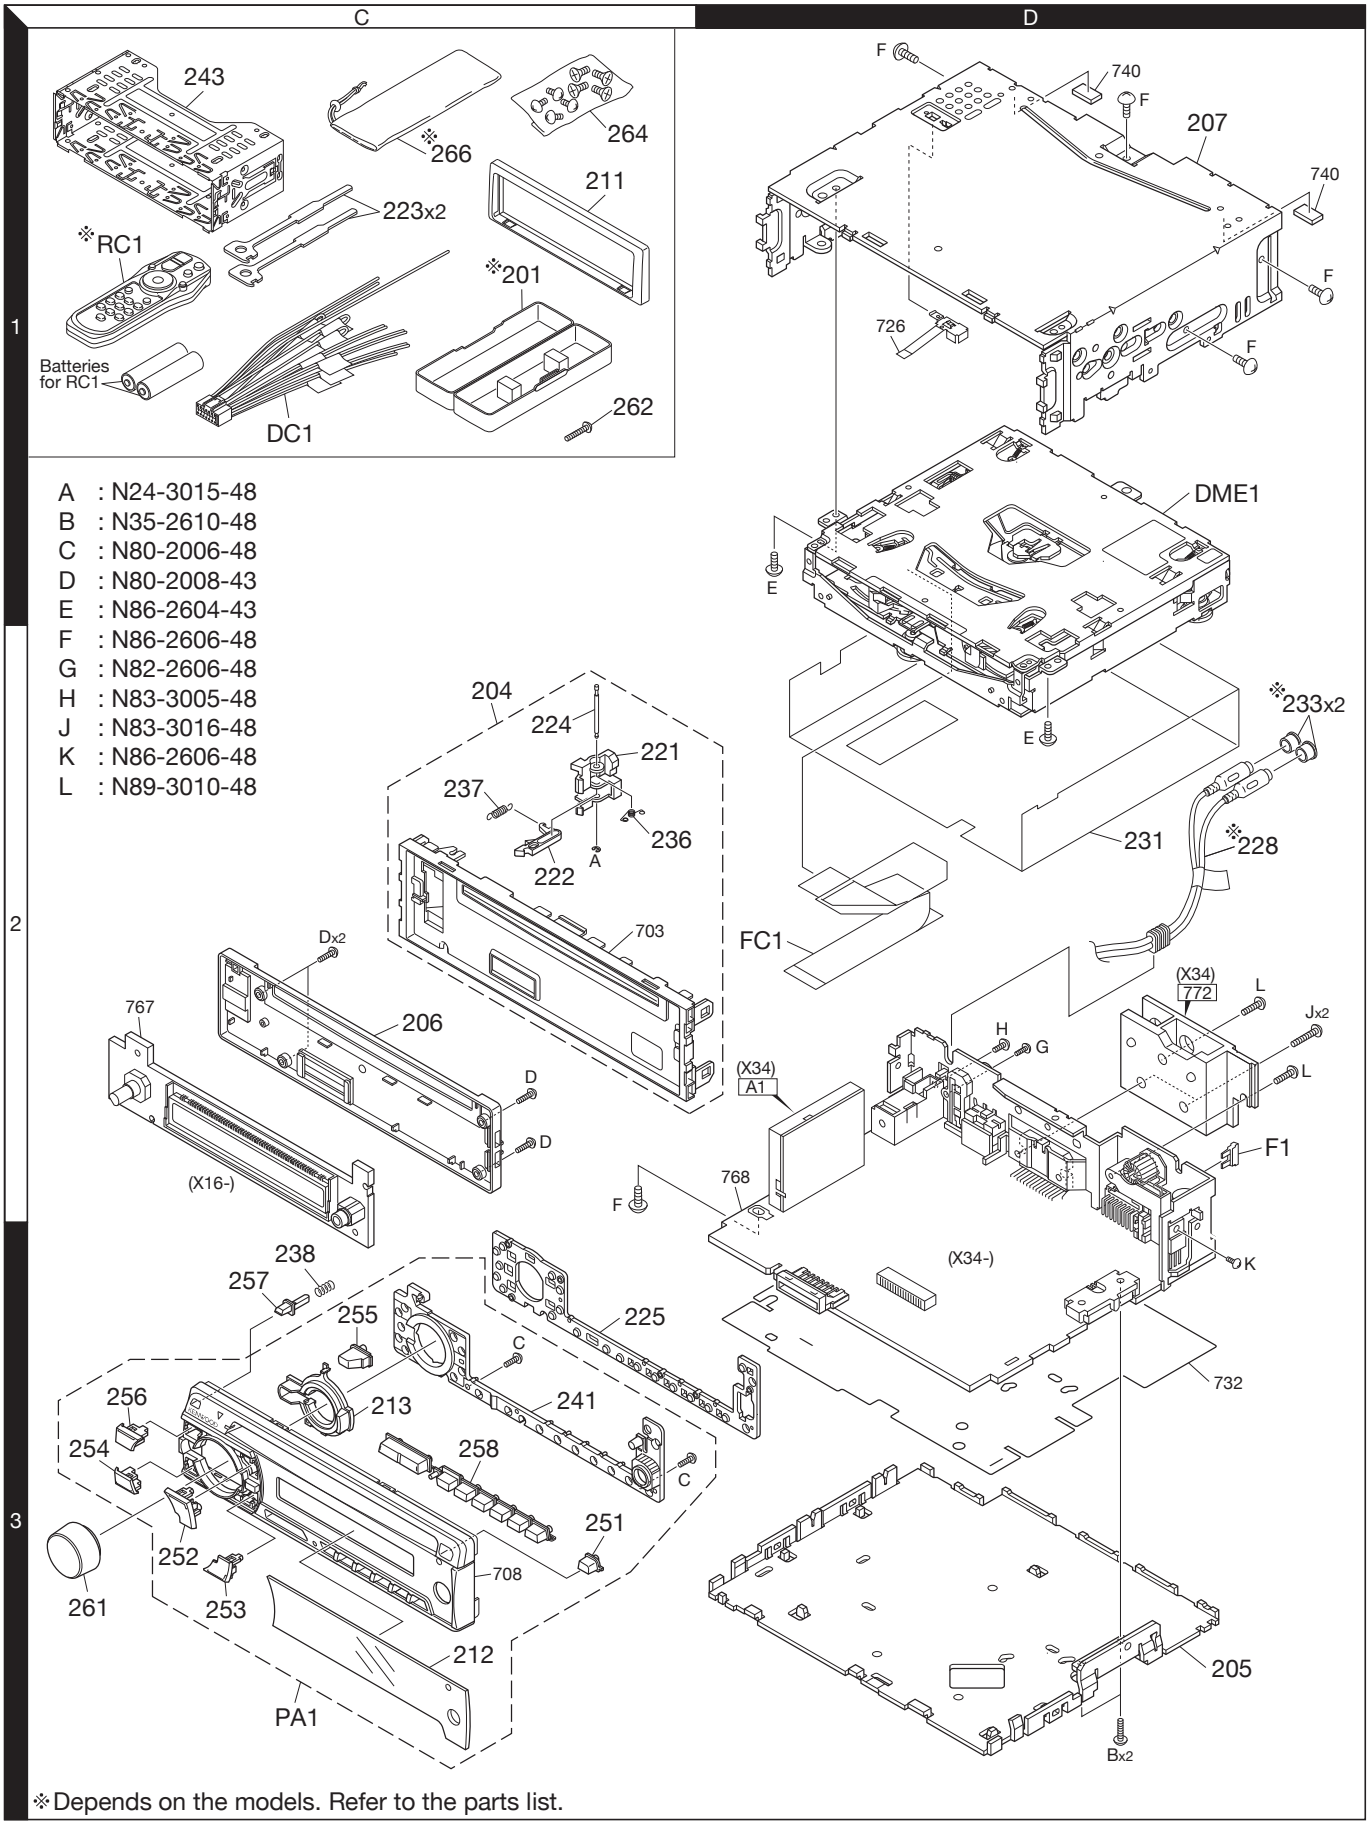

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-MP142/MP142CR/MP242/MP243/MP243SW KDC-MP3043/MP343/MP343S/MP443					
201	1C		A02-2755-13	PLASTIC CABINET ASSY	M1M2M3
201	1C		A02-2755-13	PLASTIC CABINET ASSY	M4M5M6
204	2C	✻	A22-3199-03	SUB PANEL ASSY	
205	3D	✻	A40-1359-01	BOTTOM PLATE	
206	2C	✻	A46-1881-01	REAR COVER	
207	1D	✻	A52-1107-01	TOP COVER	
PA1	3C	✻	A64-4645-02	PANEL ASSY	K
PA1	3C	✻	A64-4646-02	PANEL ASSY	K1
PA1	3C	✻	A64-4647-02	PANEL ASSY	K2
PA1	3C	✻	A64-4648-02	PANEL ASSY	M1
PA1	3C	✻	A64-4649-02	PANEL ASSY	M2
PA1	3C	✻	A64-4650-02	PANEL ASSY	M3
PA1	3C	✻	A64-4651-02	PANEL ASSY	M4
PA1	3C	✻	A64-4652-02	PANEL ASSY	M5
PA1	3C	✻	A64-4653-02	PANEL ASSY	M6
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	K1K2M3
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	M4M5
RC1	1C		A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	KM1
-		✻	B64-4211-00	INST. MANUAL (ENG.FRE.SPA.)	KK1K2
-		✻	B64-4213-00	INST. MANUAL (ENG.ARA.)	M1M2M3
-		✻	B64-4213-00	INST. MANUAL (ENG.ARA.)	M4M5M6
211	1C	✻	B07-3270-01	ESCUTCHEON	KK1K2
211	1C	✻	B07-3270-01	ESCUTCHEON	M1M2M3
211	1C	✻	B07-3270-01	ESCUTCHEON	M6
211	1C	✻	B07-3271-01	ESCUTCHEON (HOT RUNNER)	M4M5
212	3C	✻	B10-5159-01	FRONT GLASS	K
212	3C	✻	B10-5160-01	FRONT GLASS	K1
212	3C	✻	B10-5161-01	FRONT GLASS	K2
212	3C	✻	B10-5162-01	FRONT GLASS	M1
212	3C	✻	B10-5163-01	FRONT GLASS	M2
212	3C	✻	B10-5164-01	FRONT GLASS	M3
212	3C	✻	B10-5165-01	FRONT GLASS	M4M5
212	3C	✻	B10-5166-01	FRONT GLASS	M6
213	3C	✻	B19-2513-03	LIGHTING BOARD	
221	2C		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C	✻	D10-7049-04	LEVER	
224	2C		D21-2329-04	SHAFT	
225	3C	✻	E29-2127-02	CONDUCTIVE RUBBER	
228	2D		E30-6229-05	CORD WITH PINPLUG	KM1
⚠ DC1	1C		E30-6767-05	DC CORD	M1M2M3
⚠ DC1	1C		E30-6767-05	DC CORD	M4M5M6
⚠ DC1	1C		E30-6798-05	DC CORD	KK1K2
FC1	2D		E39-1017-05	FLAT CABLE	
231	2D	✻	F11-1870-03	SHIELD COVER	
233	2D		F29-0626-04	INSULATING COVER	KM1
⚠ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING (REL)	

Ref. No.	Add	New	Parts No.	Description	Destination
-		✻	H54-4430-03	ITEM CARTON CASE	K
-		✻	H54-4431-03	ITEM CARTON CASE	K1
-		✻	H54-4432-03	ITEM CARTON CASE	K2
-		✻	H54-4435-03	ITEM CARTON CASE	M1
-		✻	H54-4436-03	ITEM CARTON CASE	M2
-		✻	H54-4437-03	ITEM CARTON CASE	M3
-		✻	H54-4438-03	ITEM CARTON CASE	M4
-		✻	H54-4439-03	ITEM CARTON CASE	M5
-		✻	H54-4440-03	ITEM CARTON CASE	M6
241	3C	✻	J19-7230-01	HOLDER	
243	1C	✻	J22-0789-03	MOUNTING HARDWARE ASSY	
251	3C	✻	K24-4955-04	PUSH KNOB (EJECT)	
252	3C	✻	K24-4956-03	PUSH KNOB (FM)	
253	3C	✻	K24-4957-03	PUSH KNOB (AM)	
254	3C	✻	K24-4958-03	PUSH KNOB (DISP)	
255	3C	✻	K24-4959-04	PUSH KNOB (SEARCH)	
256	3C	✻	K24-4960-03	PUSH KNOB (SRC)	
257	3C	✻	K24-4961-04	PUSH KNOB (RELEASE)	
258	3C	✻	K25-1937-02	PUSH KNOB (PRESET)	
261	3C	✻	K28-0337-04	KNOB ASSY (VOL)	
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	
264	1C		N99-1757-15	SCREW SET	
A	2C		N24-3015-48	E TYPE RETAINING RING	
B	3D		N35-2610-48	BINDING HEAD MACHINE SCREW	
C	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
D	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
E	2D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
F	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
266	1C		W01-1710-05	CARRYING CASE	KK1
DME1	1D	✻	X92-6320-00	MECHANISM ASSY (DXM-9B10W)	

SWITCH UNIT (X16-646x-xx)

D1 -14			B30-1779-05	LED (1608,SR)				K1K2M1
D1 -14			B30-1779-05	LED (1608,SR)				M2M3M5
D1 -14			B30-1779-05	LED (1608,SR)				M6
D1 -17			B30-1780-05	LED (1608,PG)				M4
D1 -8			B30-1779-05	LED (1608,SR)				K
D9 -14			B30-1781-05	LED (1608,BLUE)				K
D21			B30-1779-05	LED (1608,SR)				
C11			CK73GB1A105K	CHIP C	1.0UF	K		
C12			CK73GB1H104K	CHIP C	0.10UF	K		
C21			CK73GB1A105K	CHIP C	1.0UF	K		
C51 ,52			CK73GB1H103K	CHIP C	0.010UF	K		
J1			E59-0852-05	RECTANGULAR PLUG				
J2			E11-0654-05	3.5D PHONE JACK				
CP11			RK74GA1J101J	CHIP-COM	100	J	1/16W	
R11			RK73GB2A473J	CHIP R	47K	J	1/10W	
R12			RK73GB2A221J	CHIP R	220	J	1/10W	
R13			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R14			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R15			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R21			RK73GB2A104J	CHIP R	100K	J	1/10W	

K: KDC-MP242 **K1**: KDC-MP142CR **K2**: KDC-MP142 **M1**: KDC-MP443 **M2**: KDC-MP243
M3: KDC-MP3043 **M4**: KDC-MP343 **M5**: KDC-MP343S **M6**: KDC-MP243SW

⚠Indicates safety critical compo nents.

PARTS LIST

SWITCH UNIT (X16-646x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R22			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73FB2B751J	CHIP R 750 J 1/8W	
R32 ,33			RK73FB2B471J	CHIP R 470 J 1/8W	
R34 -36			RK73FB2B561J	CHIP R 560 J 1/8W	K
R34 -36			RK73FB2B751J	CHIP R 750 J 1/8W	K1K2M1
R34 -36			RK73FB2B751J	CHIP R 750 J 1/8W	M2M3M4
R34 -36			RK73FB2B751J	CHIP R 750 J 1/8W	M5M6
R37			RK73FB2B471J	CHIP R 470 J 1/8W	M4
R41			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R61 ,62			RK73EB2E240J	CHIP R 24 J 1/4W	
S1		✻	T99-0484-05	ROTARY ENCODER	
ED1		✻	3-BT-262N	FLUORESCENT INDICATOR TUBE	
IC1		✻	BU9754KV-E2	MOS-IC	
IC2			PIC95603	ANALOGUE IC	
CD PLAYER UNIT (X32-6240-00) IN CD MECHA					
C1			CK73FB0J106K	CHIP C 10UF K	
C3			CC73GCH1H680J	CHIP C 68PF J	
C4			CK73GB1A105K	CHIP C 1.0UF K	
C6			CK73FB1C105K	CHIP C 1.0UF K	
C8			CK73GB1H222K	CHIP C 2200PF K	
C9 ,10			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H153K	CHIP C 0.015UF K	
C12			CK73GB1C104K	CHIP C 0.10UF K	
C13			CK73GB1H332K	CHIP C 3300PF K	
C14			CK73GB1H103K	CHIP C 0.010UF K	
C15			CK73GB1H333K	CHIP C 0.033UF K	
C16			CK73GB1C104K	CHIP C 0.10UF K	
C18			CK73GB1H153K	CHIP C 0.015UF K	
C19			CK73GB1H103K	CHIP C 0.010UF K	
C20			CK73GB1C104K	CHIP C 0.10UF K	
C22			CK73GB1H103K	CHIP C 0.010UF K	
C23			CK73GB1H153K	CHIP C 0.015UF K	
C24			CC73GCH1H470J	CHIP C 47PF J	
C25 -27			CK73GB1C104K	CHIP C 0.10UF K	
C29			CK73GB1A105K	CHIP C 1.0UF K	
C30			CK73GB1C104K	CHIP C 0.10UF K	
C31 ,32			CK73GB1A105K	CHIP C 1.0UF K	
C36			CK73GB1A105K	CHIP C 1.0UF K	
C41 ,42			CK73GB1C104K	CHIP C 0.10UF K	
C43 ,44			CK73GB1H102K	CHIP C 1000PF K	
C45			CK73GB1C104K	CHIP C 0.10UF K	
C46			CK73GB1A105K	CHIP C 1.0UF K	
C47			CC73GCH1H560J	CHIP C 56PF J	
C48			CC73GCH1H101J	CHIP C 100PF J	
C49			CK73GB1A474K	CHIP C 0.47UF K	
C50			CK73FB1A225K	CHIP C 2.2UF K	
C51			CK73FB0J106K	CHIP C 10UF K	
C54			CK73FB0J106K	CHIP C 10UF K	
C57			CK73GB1C104K	CHIP C 0.10UF K	
C59			CK73GB1H472K	CHIP C 4700PF K	
C60			CK73GB1C224K	CHIP C 0.22UF K	
C61			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E41-2954-05	FLAT CABLE CONNECTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7 -9			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1			RK73GB2A560J	CHIP R 56 J 1/10W	
R2			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R3			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R4			RK73GB2A104J	CHIP R 100K J 1/10W	
R5			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R6			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB2A221J	CHIP R 220 J 1/10W	
R8			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R9			RK73GB2A913J	CHIP R 91K J 1/10W	
R10			RK73GB2A334J	CHIP R 330K J 1/10W	
R11			RK73GB2A153J	CHIP R 15K J 1/10W	
R13			RK73GB2A333J	CHIP R 33K J 1/10W	
R14			RK73GB2A103J	CHIP R 10K J 1/10W	
R15			RK73GB2A183J	CHIP R 18K J 1/10W	
R16			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R17 ,18			RK73GB2A103J	CHIP R 10K J 1/10W	
R19 ,20			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R25			RK73GB2A103J	CHIP R 10K J 1/10W	
R27			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R29			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R39			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R40			RK73GB2A681J	CHIP R 680 J 1/10W	
R43 ,44			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R49			RK73GB2A393J	CHIP R 39K J 1/10W	
R50			RK73GB2A363J	CHIP R 36K J 1/10W	
R51			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52 -58			RK73GB2A101J	CHIP R 100 J 1/10W	
R59			RK73GB2A204J	CHIP R 200K J 1/10W	
R64			RK73GB2A223J	CHIP R 22K J 1/10W	
R65			RK73GB2A333J	CHIP R 33K J 1/10W	
S1 ,2			S68-0924-05	PUSH SWITCH	
D1			DA204U	DIODE	
D2			DAP202U	DIODE	
D3 ,4			DA204U	DIODE	
IC3			BD8222EFV	ANALOGUE IC	
IC4		✻	TC94A92FG-001	MOS-IC	
IC5		✻	XC6415S001P1	MOS-IC	
Q1			2SB0970	TRANSISTOR	
Q10 -12			UM6K1N	DUAL FET	
Q13			DTC114YUA	DIGITAL TRANSISTOR	
Q14		✻	RJU003N03	FET	
ELECTRIC UNIT (X34-621x-xx)					
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	
C2			CD04AB1C220M	ELECTRO 22UF 16WV	
C3			CK73GB1H104K	CHIP C 0.10UF K	KK1K2
C3 ,4			CK73GB1H104K	CHIP C 0.10UF K	M1M2M3
C3 ,4			CK73GB1H104K	CHIP C 0.10UF K	M4M5M6
C5			CD04AR1C221M	ELECTRO 220UF 16WV	

K: KDC-MP242 **K1**: KDC-MP142CR **K2**: KDC-MP142 **M1**: KDC-MP443 **M2**: KDC-MP243
M3: KDC-MP3043 **M4**: KDC-MP343 **M5**: KDC-MP343S **M6**: KDC-MP243SW

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-621x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
C7		✻	CD04AV0J101M	ELECTRO	100UF	6.3WV		
C9			CK73GB1C104K	CHIP C	0.10UF	K		
C11			CK73FB1A225K	CHIP C	2.2UF	K		
C12			CK73GB1C104K	CHIP C	0.10UF	K		
C14			CK73GB1C104K	CHIP C	0.10UF	K		
C15			CD04AB1C220M	ELECTRO	22UF	16WV		
C17 ,18			CK73GB1C104K	CHIP C	0.10UF	K		
C19			CK73GB1E223K	CHIP C	0.022UF	K		
C101,102			CK73GB1H103K	CHIP C	0.010UF	K		
C202			CC73GCH1H180J	CHIP C	18PF	J		
C203			CC73GCH1H220J	CHIP C	22PF	J		
C204			CK73GB1C104K	CHIP C	0.10UF	K		
C205			CK73GB1H102K	CHIP C	1000PF	K		
C301,302		✻	CD04AV1HR47M	ELECTRO	0.47UF	50WV		
C306,307			CK73GB1C104K	CHIP C	0.10UF	K		
C308		✻	CD04AV0J470M	ELECTRO	47UF	6.3WV		
C310,311			CK73GB1H102K	CHIP C	1000PF	K		
C401		✻	CD04AV1C470M	ELECTRO	47UF	16WV		
C403		✻	CD04AV1H010M	ELECTRO	1UF	50WV		
C404-407			CK73GB1A105K	CHIP C	1.0UF	K		
C509,510			CK73GB1C104K	CHIP C	0.10UF	K		
C601,602			CK73GB1C104K	CHIP C	0.10UF	K		KM1
C603		✻	CD04AV0J470M	ELECTRO	47UF	6.3WV		KM1
C701,702		✻	CD04AV1V100M	ELECTRO	10UF	35WV		
C705,706		✻	CD04AV1V100M	ELECTRO	10UF	35WV		KM1
C801-804			CK73GB1A224K	CHIP C	0.22UF	K		
C805		✻	CD04AV1V100M	ELECTRO	10UF	35WV		
C806,807			CK73GB1A105K	CHIP C	1.0UF	K		
C809			CK73GB1A105K	CHIP C	1.0UF	K		
CN2			E41-1822-05	FLAT CABLE CONNECTOR				
CN4			E40-6526-05	PIN ASSY				KM1
⚠ J1			E58-0991-05	RECTANGULAR RECEPTACLE				
J2			E04-0334-05	RF COAXIAL CABLE RECEPTACLE				
J3			E58-1060-15	RECTANGULAR RECEPTACLE				
J4			E56-0855-05	CYLINDRICAL RECEPTACLE				KM1
J5			E63-0937-05	PIN JACK				
⚠ L1			L33-2459-05	CHOKE COIL ASSY				
L401			L40-4791-58	SMALL FIXED INDUCTOR				
X1			L78-0879-05	RESONATOR (10.0MHZ)				
X2			L77-2920-05	CRYSTAL RESONATOR				
G	2D		N82-2606-48	BINDING HEAD TAPTITE SCREW				
H	2D		N83-3005-48	PAN HEAD TAPTITE SCREW				
J	2D		N83-3016-48	PAN HEAD TAPTITE SCREW				
K	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW				
L	2D		N89-3010-48	BINDING HEAD TAPTITE SCREW				
R1			RD14BB2C102J	RD	1.0K	J	1/6W	
R2 -5			RD14BB2C103J	RD	10K	J	1/6W	
R11			RD14DB2H100J	SMALL-RD	10	J	1/2W	
R12			RK73PB2H100J	CHIP R	10	J	1/2W	
R13 -15			RD14DB2H100J	SMALL-RD	10	J	1/2W	
R16			RK73FB2B681J	CHIP R	680	J	1/8W	
R17			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R18			RK73GB2A473J	CHIP R	47K	J	1/10W	
R101			RD14BB2C472J	RD	4.7K	J	1/6W	KK1K2

Ref. No.	Add	New	Parts No.	Description				Destination
R101,102			RD14BB2C472J	RD	4.7K	J	1/6W	M1M2M3
R101,102			RD14BB2C472J	RD	4.7K	J	1/6W	M4M5M6
R106			RD14BB2C332J	RD	3.3K	J	1/6W	
R107			RD14BB2C333J	RD	33K	J	1/6W	
R108			RK73GB2A103J	CHIP R	10K	J	1/10W	
R109			RD14BB2C223J	RD	22K	J	1/6W	
R110			RK73FB2B683J	CHIP R	68K	J	1/8W	
R111			RK73GB2A473J	CHIP R	47K	J	1/10W	
R112			RD14BB2C203J	RD	20K	J	1/6W	
R113			RK73GB2A104J	CHIP R	100K	J	1/10W	
R114,115			RK73GB2A103J	CHIP R	10K	J	1/10W	
R116,117			RD14BB2C682J	RD	6.8K	J	1/6W	
R118			RD14BB2C103J	RD	10K	J	1/6W	
R119			RK73GB2A473J	CHIP R	47K	J	1/10W	
R120			RK73GB2A104J	CHIP R	100K	J	1/10W	
R203,204			RK73GB2A103J	CHIP R	10K	J	1/10W	
R205-207			RK73GB2A473J	CHIP R	47K	J	1/10W	
R208			RD14BB2C473J	RD	47K	J	1/6W	
R209,210			RD14BB2C471J	RD	470	J	1/6W	
R218			RK73GB2A223J	CHIP R	22K	J	1/10W	
R223			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R225			RK73GB2A473J	CHIP R	47K	J	1/10W	K1M2M3
R225			RK73GB2A473J	CHIP R	47K	J	1/10W	M4M5
R226			RK73GB2A223J	CHIP R	22K	J	1/10W	K1M2M3
R226			RK73GB2A223J	CHIP R	22K	J	1/10W	M4M5
R226			RK73GB2A473J	CHIP R	47K	J	1/10W	K2
R226,227			RK73GB2A473J	CHIP R	47K	J	1/10W	M6
R227			RK73GB2A473J	CHIP R	47K	J	1/10W	M1M2M3
R227			RK73GB2A473J	CHIP R	47K	J	1/10W	M4M5
R228			RK73GB2A223J	CHIP R	22K	J	1/10W	M1M2M3
R228			RK73GB2A223J	CHIP R	22K	J	1/10W	M4M5M6
R228			RK73GB2A473J	CHIP R	47K	J	1/10W	KK1K2
R301			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R302			RD14BB2C101J	RD	100	J	1/6W	
R303			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R304			RD14BB2C102J	RD	1.0K	J	1/6W	
R305			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R306			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R307			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R310-313			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R314			RK73GB2A104J	CHIP R	100K	J	1/10W	
R315			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R316,317			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R318			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R319			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R320			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R321			RK73GB2A473J	CHIP R	47K	J	1/10W	
R322			RK73GB2A471J	CHIP R	470	J	1/10W	
R330			RD14BB2C101J	RD	100	J	1/6W	
R331			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R332			RD14BB2C101J	RD	100	J	1/6W	
R333,334			RD14BB2C102J	RD	1.0K	J	1/6W	
R335			RK73GB2A473J	CHIP R	47K	J	1/10W	
R336-339			RD14BB2C222J	RD	2.2K	J	1/6W	
R340			RK73GB2A225J	CHIP R	2.2M	J	1/10W	

K: KDC-MP242 **K1**: KDC-MP142CR **K2**: KDC-MP142 **M1**: KDC-MP443 **M2**: KDC-MP243
M3: KDC-MP3043 **M4**: KDC-MP343 **M5**: KDC-MP343S **M6**: KDC-MP243SW

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-621x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R341			RD14BB2C222J	RD	2.2K	J	1/6W	
R342			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R343			RD14BB2C102J	RD	1.0K	J	1/6W	
R344,345			RD14BB2C4R7J	RD	4.7	J	1/6W	
R346			RD14BB2C2R2J	RD	2.2	J	1/6W	
R347			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R348,349			RK73GB2A103J	CHIP R	10K	J	1/10W	
R352,353			RD14BB2C471J	RD	470	J	1/6W	
R401			RK73GB2A103J	CHIP R	10K	J	1/10W	
R402,403			RD14BB2C471J	RD	470	J	1/6W	
R501			RK73GB2A471J	CHIP R	470	J	1/10W	
R502			RD14BB2C472J	RD	4.7K	J	1/6W	
R503			RK73GB2A471J	CHIP R	470	J	1/10W	
R504			RD14BB2C472J	RD	4.7K	J	1/6W	
R601,602			RD14BB2C100J	RD	10	J	1/6W	KM1
R603			RD14BB2C4R7J	RD	4.7	J	1/6W	KM1
R604			RK73GB2A102J	CHIP R	1.0K	J	1/10W	KM1
R605			RD14BB2C101J	RD	100	J	1/6W	KM1
R606,607			RD14BB2C102J	RD	1.0K	J	1/6W	KM1
R608,609			RD14BB2C101J	RD	100	J	1/6W	KM1
R610			RD14BB2C472J	RD	4.7K	J	1/6W	KM1
R611			RD14BB2C101J	RD	100	J	1/6W	KM1
R612			RD14BB2C472J	RD	4.7K	J	1/6W	KM1
R613,614			RK73GB2A100J	CHIP R	10	J	1/10W	KM1
R615			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	KM1
R616			RK73GB2A473J	CHIP R	47K	J	1/10W	KM1
R617			RK73GB2A104J	CHIP R	100K	J	1/10W	KM1
R618,619			RD14BB2C104J	RD	100K	J	1/6W	KM1
R620			RK73GB2A104J	CHIP R	100K	J	1/10W	KM1
R701,702			RK73GB2A331J	CHIP R	330	J	1/10W	
R703,704			RD14BB2C223J	RD	22K	J	1/6W	
R705,706			RD14BB2C181J	RD	180	J	1/6W	
R707,708			RK73GB2A331J	CHIP R	330	J	1/10W	KM1
R709,710			RD14BB2C223J	RD	22K	J	1/6W	KM1
R711,712			RD14BB2C181J	RD	180	J	1/6W	KM1
R802			RK73GB2A473J	CHIP R	47K	J	1/10W	
R804			RK73GB2A331J	CHIP R	330	J	1/10W	
R805			RK73GB2A473J	CHIP R	47K	J	1/10W	
R806			RK73GB2A622J	CHIP R	6.2K	J	1/10W	
R808			RK73GB2A100J	CHIP R	10	J	1/10W	
R809			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R811			RD14BB2C473J	RD	47K	J	1/6W	
R812			RK73EB2E000J	CHIP R	0.0	J	1/4W	
D1			S2V60-5009F46	DIODE				
D2		✻	HZS9-E (A1)	ZENER DIODE				
D3			D1F60-5063	DIODE				
D4 ,5			1SS133	DIODE				M1M2M3
D4 ,5			1SS133	DIODE				M4M5M6
D7		✻	HZS11-E (C3)	ZENER DIODE				
D101-104			D1F60-5063	DIODE				M1M2M3
D101-104			D1F60-5063	DIODE				M4M5M6
D101,102			D1F60-5063	DIODE				KK1K2
D106-108			MTZJ6.8 (B)	ZENER DIODE				
D109		✻	HZS5-E (B1)	ZENER DIODE				

Ref. No.	Add	New	Parts No.	Description	Destination
D110			KDS121-P	DIODE	
D306		✻	HZS7-E (A3)	ZENER DIODE	
D401			1SS133	DIODE	
D601-606		✻	HZS7-E (A3)	ZENER DIODE	KM1
D801,802			1SS133	DIODE	
IC1		✻	30622MEPB69FP	MICROCONTROLLER IC	K1K2M2
IC1		✻	30622MEPB69FP	MICROCONTROLLER IC	M3M4M5
IC1		✻	30622MEPB69FP	MICROCONTROLLER IC	M6
IC1		✻	30622MGPB71FP	MICROCONTROLLER IC	KM1
IC2			E-TDA7719	ANALOGUE IC	
IC4		✻	BD4914-V4	ANALOGUE IC	
IC6		✻	TB2926HQ	ANALOGUE IC	
IC8			XC6120N362N1	MOS-IC	
Q2			2SB1565	TRANSISTOR	
Q3			2SC4081	TRANSISTOR	
Q7			KRC403-P	DIGITAL TRANSISTOR	
Q8			2SB1565	TRANSISTOR	
Q9			2SC4081	TRANSISTOR	
Q10			KRA303-P	DIGITAL TRANSISTOR	
Q11			KRC403-P	DIGITAL TRANSISTOR	
Q12			KRA303-P	DIGITAL TRANSISTOR	
Q13			KRC403-P	DIGITAL TRANSISTOR	M1M2M3
Q13			KRC403-P	DIGITAL TRANSISTOR	M4M5M6
Q14			KRA303-P	DIGITAL TRANSISTOR	M1M2M3
Q14			KRA303-P	DIGITAL TRANSISTOR	M4M5M6
Q101-103			2SC4081	TRANSISTOR	
Q104,105			KRC404-P	DIGITAL TRANSISTOR	
Q301			KRA307-P	DIGITAL TRANSISTOR	
Q701-704			KRC410-P	DIGITAL TRANSISTOR	KM1
Q701,702			KRC410-P	DIGITAL TRANSISTOR	K1K2M2
Q701,702			KRC410-P	DIGITAL TRANSISTOR	M3M4M5
Q701,702			KRC410-P	DIGITAL TRANSISTOR	M6
Q705			KRA303-P	DIGITAL TRANSISTOR	
TH1			PRF18BE471QS2	POSITIVE RESISTOR	
A1	2D	✻	X86-4230-11	FRONT-END UNIT	KK1K2
A1	2D	✻	X86-4230-11	FRONT-END UNIT	M1M2M3
A1	2D	✻	X86-4230-11	FRONT-END UNIT	M4M5
A1	2D	✻	X86-4230-21	FRONT-END UNIT	M6

MECHANISM ASSY (X92-6320-00) DXM-9B10W

1	2B		A10-5450-43	CHASSIS ASSY
3	3B	✻	A10-5452-41	CHASSIS
4	1B	✻	A10-5453-32	CHASSIS
12	3A		D10-4993-52	LEVER
13	1B	✻	D10-4991-02	ARM
14	1B	✻	D10-4992-03	ARM
15	2A	✻	D10-4994-02	SLIDER
16	2A	✻	D10-4995-03	SLIDER
17	2B	✻	D10-4996-02	SLIDER
18	2A	✻	D10-4997-03	LEVER
19	1A	✻	D10-4998-03	ARM
20	2A	✻	D10-4999-03	ARM
21	2A	✻	D10-7001-03	ARM
22	2A	✻	D10-7002-03	ARM
23	2A	✻	D10-7003-03	ARM

K: KDC-MP242 **K1**: KDC-MP142CR **K2**: KDC-MP142 **M1**: KDC-MP443 **M2**: KDC-MP243
M3: KDC-MP3043 **M4**: KDC-MP343 **M5**: KDC-MP343S **M6**: KDC-MP243SW

⚠Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6320-00) DXM-9B10W

Ref. No.	Add	New	Parts No.	Description	Destination
24	2A	✻	D13-2445-04	GEAR	
25	2A	✻	D13-2446-04	GEAR	
27	2A	✻	D13-2448-04	GEAR	
28	2A	✻	D13-2449-04	GEAR	
29	2A	✻	D13-2450-04	GEAR	
30	2A	✻	D13-2451-04	GEAR	
31	2A	✻	D13-2452-04	GEAR	
32	2A	✻	D13-2453-04	GEAR	
33	2A	✻	D13-2454-04	GEAR	
34	2A	✻	D13-2455-04	GEAR	
35	2B	✻	D13-2456-03	RACK (GEAR)	
36	2A	✻	D14-1028-04	ROLLER	
37	3A		D21-2507-04	SHAFT	
38	2B		D21-2508-04	SHAFT	
39	3A	✻	D23-0963-04	RETAINER	
40	3B		D39-0277-15	DAMPER	
41	3B		D39-0278-15	DAMPER	
46	1B	✻	G01-4682-24	TORSION COIL SPRING	
47	3A		G01-4683-14	EXTENSION SPRING	
48	2A		G01-4684-04	EXTENSION SPRING	
49	2B		G01-4685-04	EXTENSION SPRING	
50	1B		G01-4686-14	EXTENSION SPRING	
51	3A		G01-4688-14	EXTENSION SPRING	
52	3A	✻	G01-4692-24	TORSION COIL SPRING	
53	2B	✻	G02-1587-04	FLAT SPRING	
54	3A	✻	G02-1588-04	FLAT SPRING	
55	1B		G13-1297-04	CUSHION	
56	1B		G13-1299-14	CUSHION	
57	1A		G16-1715-04	SHEET	
61	1B	✻	J11-0675-03	CLAMPER	
64	2A		J19-7210-21	HOLDER	
65	2B	✻	J19-7225-04	HOLDER	
66	1B	✻	J22-0706-03	MOUNTING HARDWARE	
67	1A	✻	J22-0707-02	MOUNTING HARDWARE	
68	1B		J90-1170-21+	GUIDE	
69	2B	✻	J90-1168-03	RAIL	
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)	
B	2B		N09-6426-15+	MACHINE SCREW	
C	2B		N09-6735-05	TAPTITE SCREW	
D	2B		N09-6737-15	MACHINE SCREW	
E	2B		N09-6738-15	TAPTITE SCREW	
F	2A		N19-2335-14	FLAT WASHER	
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW	
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW	
76	2A		S68-0921-05	PUSH SWITCH	
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY	
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)	
DPU1	2B		X93-2260-01	OPTICAL PICKUP ASSY	

Ref. No.	Add	New	Parts No.	Description	Destination

K: KDC-MP242 **K1**: KDC-MP142CR **K2**: KDC-MP142 **M1**: KDC-MP443 **M2**: KDC-MP243
M3: KDC-MP3043 **M4**: KDC-MP343 **M5**: KDC-MP343S **M6**: KDC-MP243SW

⚠Indicates safety critical compo nents.