2. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ・ *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
・ *The "* ***!*** *" mark found on some component parts indicates The importance of The safety factor of The part. Therefore, when replacing, be sure to use parts of identical designation.*
・ *Nos. indicate the pages and Nos. in the service manual for the base model.*

CONTRAST TABLE

DDJ-SB3/SXJ and DDJ-SB3-S/PXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SB3/SXJ	DDJ-SB3-S/PXJ	Remarks
		PACKING SECTION			
	P48-8	PACKING CASE	DHG3622	DHG3768	
	P48-9	MASTER CARTON	DHG3625	DHG3770	
NSP	P48-10	WARRANTY	DRY1274	— — —	
		LABEL	— — —	DRW2908	CG label (attached to the packing case)
		LABEL	— — —	DRW2909	CG label (attached to the packing case)
NSP		LABEL	— — —	DRW2907	Attached to QSG FCC page
NSP		LABEL	— — —	DRW2974	Attached to QSG FCC page(ATA's new adress)
		LABEL	— — —	DRW2534	Attached to the QSG cover
		EXTERIOR SECTION			
	P49-15	DIAL KNOB S(B)／KNOB	DAA1273	DAA1455	
	P49-16	KNOB/PLS／KNOB	DAA1324	DAA1454	
	P49-17	KNOB	DAC3539	DAC3564	
	P49-18	SLIDER KNOB 2／SLIDER KNOB(W)2	DAC2685	DAC2770	
	P49-22	BUTTON	DAC3418	DAC3560	PLAY/CUE
	P46-27	BUTTON	DAC3151	DAC3563	LOAD
	P49-28	BUTTON	DAC3376	DAC3561	SHIFT
	P49-30	BUTTON	DAC3221	DAC3562	LOOP IN/OUT
	P49-34	CONTROL PANEL	DNK6759	DNK6960	
	P49-35	CHASSIS	DNK6760	DNK6961	
	P49-36	KNOB	DNK6530	DNK6964	

DISASSEMBLY Knobs and Volumes Location

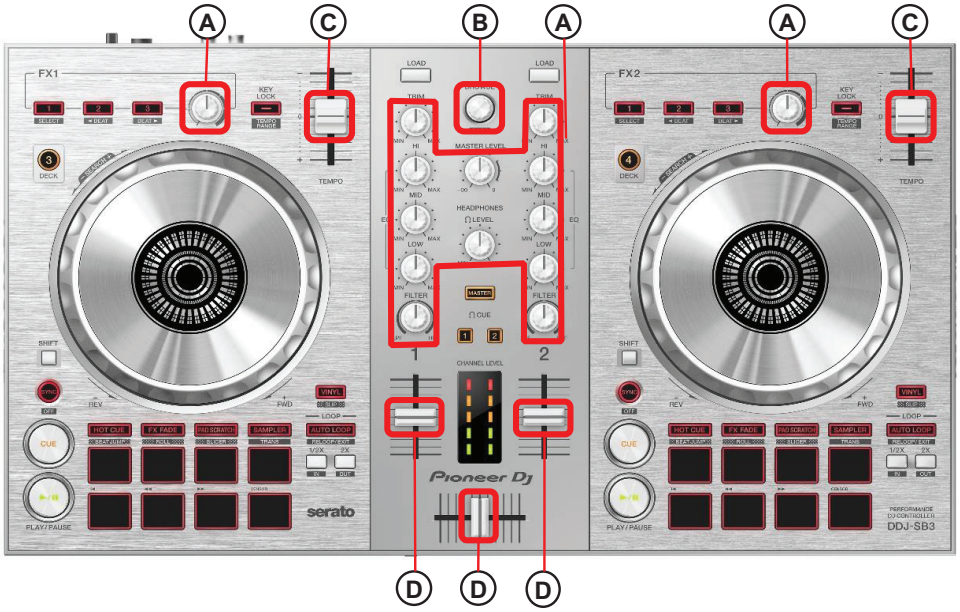

Ⓐ DAA1454 ×14

Ⓑ DAA1455 ×1

Ⓒ DNK6964 ×2
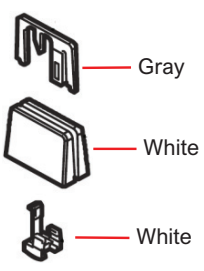
Ⓓ DAC2770 ×3
+
DAC3564 ×3
+
DNK6009 ×3