A : N09-6108-15
B : N09-6426-15
C : N09-6735-05
D : N09-6737-15
E : N09-6738-15
F : N19-2335-14
G : N35-2003-48
H : N39-1720-48

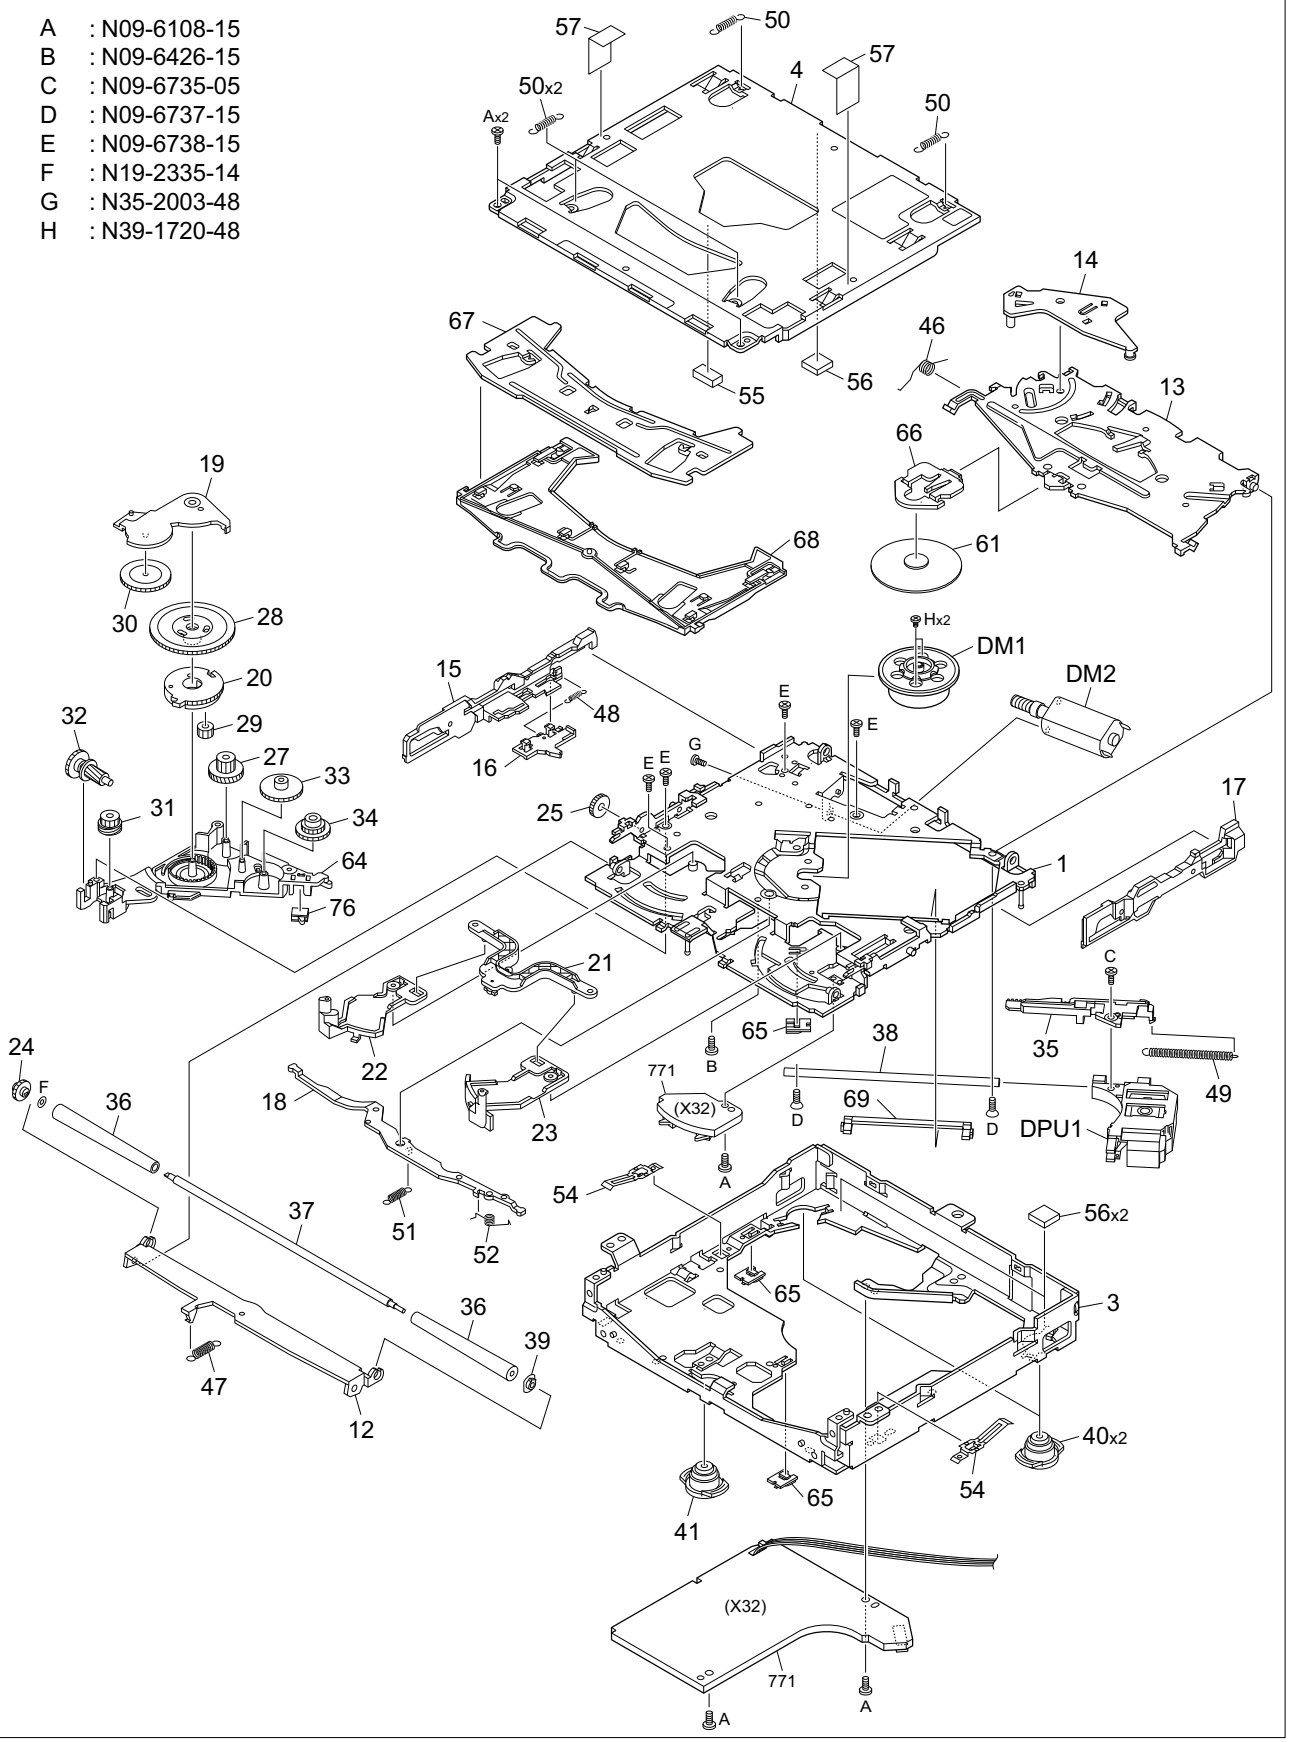

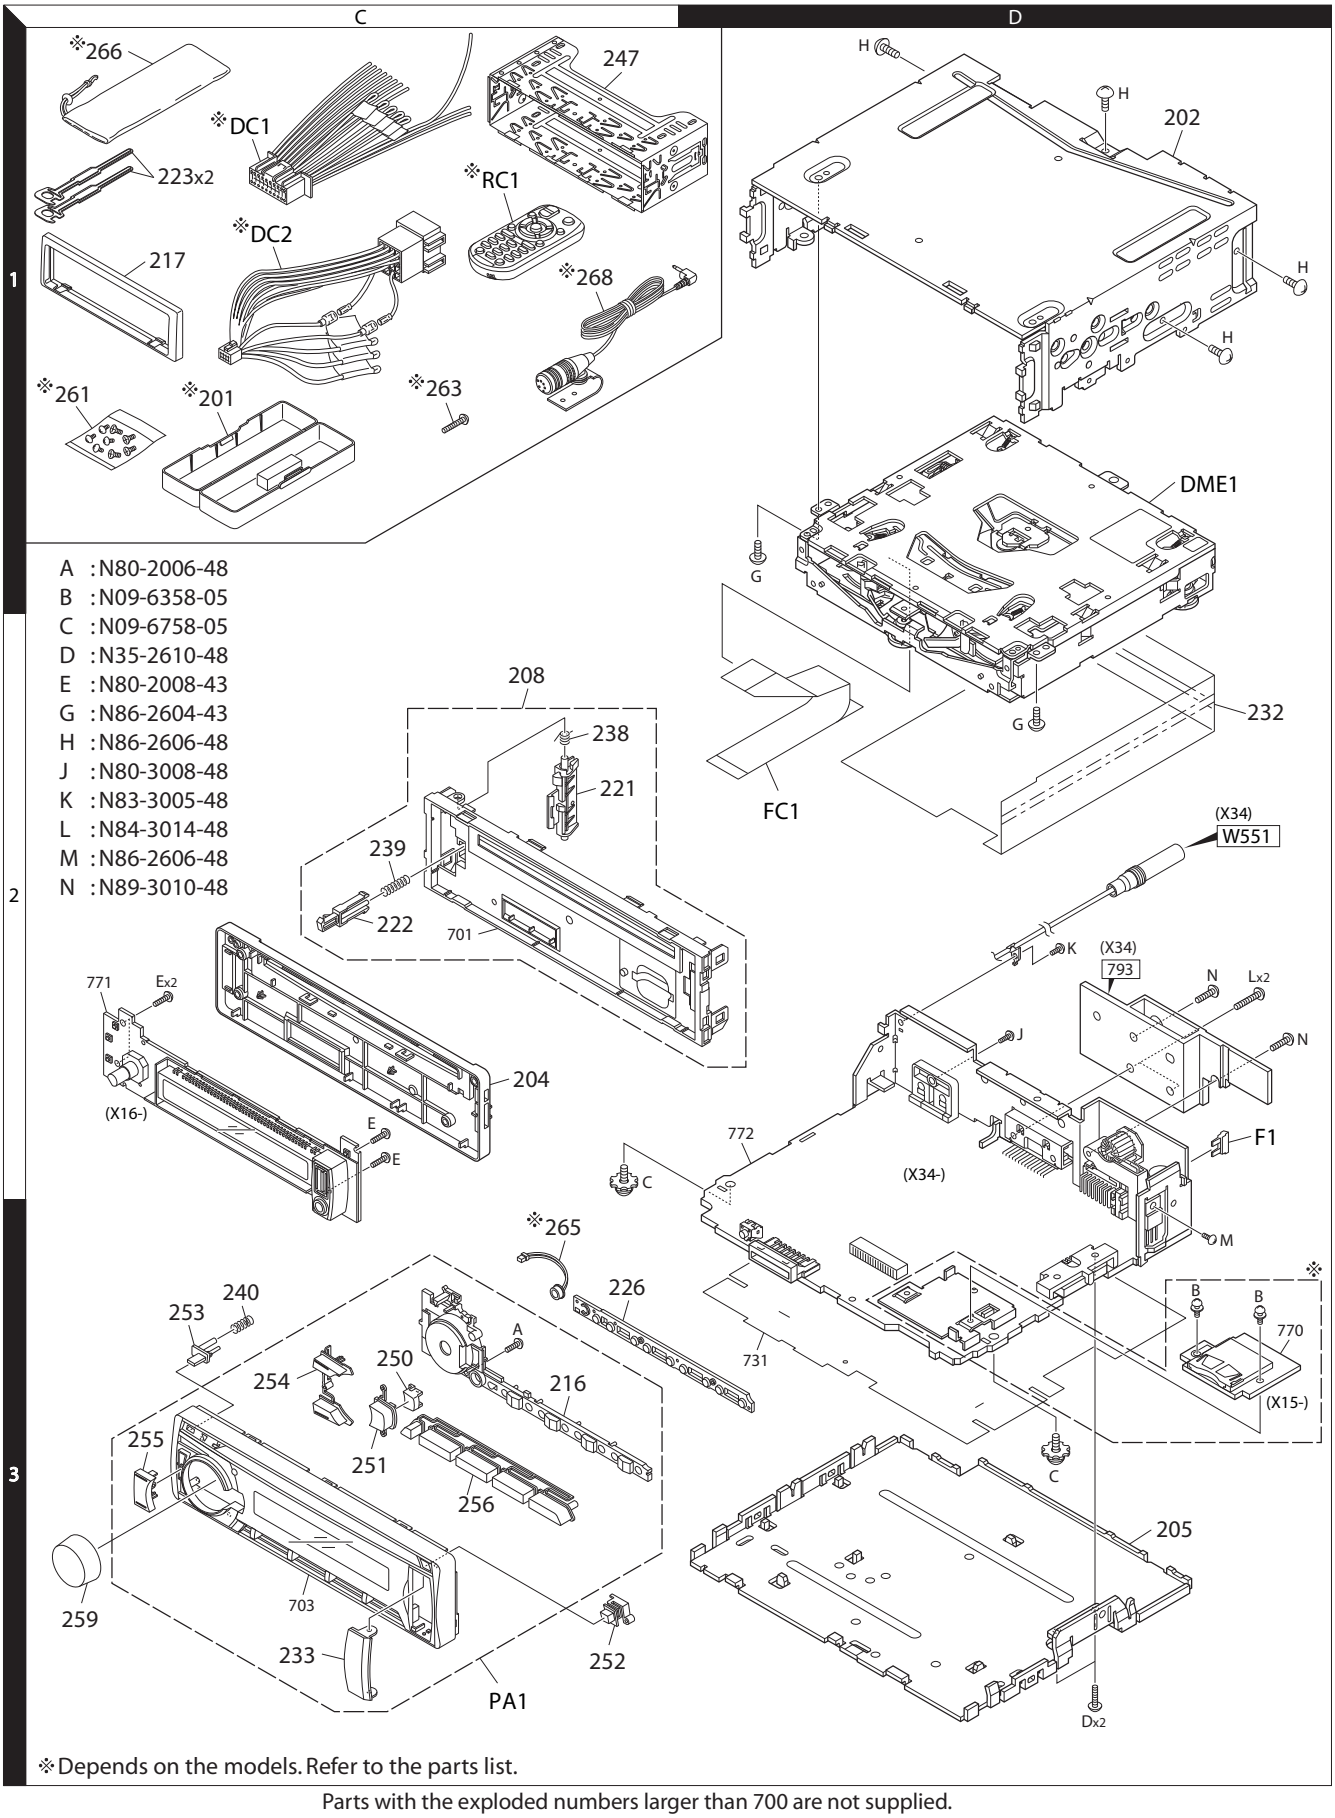

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts
Parts without **Parts No**. are not supplied.
Les articles non mentionnes dans le **Parts No**. ne sont pas fournis.
Teile ohne **Parts No**. werden nicht geliefert.

Ref.No.	Add	New	Parts No.	Description	Destination
KDC-348U/4751SD/BT41U/BT648U/U4549/U4549SD/U549BT/X395/X695					
201	1C		A02-2757-13	PLASTIC CABINET ASSY	M3M1M2
202	1D	*	A52-1156-01	TOP COVER	
204	2C	*	A46-1918-01	REAR COVER	
205	3D	*	A40-1410-01	BOTTOM PLATE	
208	2C	*	A22-3297-03	SUB PANEL ASSY	KK1E1
208	2C	*	A22-3297-03	SUB PANEL ASSY	K2K3M3
208	2C	*	A22-3297-03	SUB PANEL ASSY	M1
208	2C	*	A22-3298-13	SUB PANEL ASSY	E3M2
PA1	3C	*	A64-5235-12	PANEL ASSY	K2
PA1	3C	*	A64-5236-02	PANEL ASSY	K3
PA1	3C	*	A64-5237-12	PANEL ASSY	M3
PA1	3C	*	A64-5240-02	PANEL ASSY	K
PA1	3C	*	A64-5241-12	PANEL ASSY	K1
PA1	3C	*	A64-5242-12	PANEL ASSY	E1
PA1	3C	*	A64-5244-12	PANEL ASSY	M1
PA1	3C	*	A64-5245-02	PANEL ASSY	E3
PA1	3C	*	A64-5246-12	PANEL ASSY	M2
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)	KK1M1
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)	K2K3M3
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)	M2
-		*	B64-4798-10	INST. MANUAL (ENG.FRE.SPA.)	K1
-		*	B64-4798-10	INST. MANUAL (ENG.FRE.SPA.)	K2K3K
-		*	B64-4799-10	INST. MANUAL (ENGLISH)	E1E3
-		*	B64-4800-10	INST. MANUAL (FRE.GER.DUT.)	E1E3
-		*	B64-4801-10	INST. MANUAL (ITA.SPA.POR.)	E1E3
-		*	B64-4802-10	INST. MANUAL (RUS.URK.)	E1E3
-		*	B64-4803-10	INST. MANUAL (ENG.ARA.)	M3M1M2
-		*	B64-4804-10	INST. MANUAL (S-CHINESE)	M1
216	3C		GE10289-001A	LIGHT GUIDE	
217	1C	*	B07-3361-02	TRIM PLATE	K2K1E1
217	1C	*	B07-3361-02	TRIM PLATE	M1
217	1C		GE20274-001A	TRIM PLATE	E3M2
217	1C		GE20274-001A	TRIM PLATE	K3M3K
221	2C		GE34045-001A	LOCK LEVER	
222	2C		GE34046-001A	RELEASE LEVER	
223	1C	*	D10-7139-04	LEVER	
226	3C		GE34058-001A	CONDUCTIVE RUBBER	
⚠ DC1	1C		E30-6933-05	DC CORD	KK1M1
⚠ DC1	1C		E30-6933-05	DC CORD	K2K3M3
⚠ DC1	1C		E30-6933-05	DC CORD	M2
⚠ DC2	1C		E30-6934-05	DC CORD	E1E3
FC1	2D		E39-1077-05	FLAT CABLE	
232	2D		F11-1874-03	SHIELDING COVER	KK1E1
232	2D		F11-1874-03	SHIELDING COVER	K2K3M3
232	2D		F11-1874-03	SHIELDING COVER	M1
232	2D	*	F11-1884-13	SHIELDING COVER	E3M2
233	3C		GE34055-001A	USB DOOR COVER	
⚠ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
238	2C		GE40504-001A	SPRING (TORSION)	
239	2C		GE40505-001A	SPRING (COMPRESSION)	
240	3C		GE40505-002A	SPRING (DETACH)	

Ref.No.	Add	New	Parts No.	Description	Destination
-		*	H54-5024-03	ITEM CARTON CASE	K2
-		*	H54-5025-03	ITEM CARTON CASE	K3
-		*	H54-5026-03	ITEM CARTON CASE	M3
-		*	H54-5027-03	ITEM CARTON CASE	K
-		*	H54-5028-03	ITEM CARTON CASE	K1
-		*	H54-5029-03	ITEM CARTON CASE	E1
-		*	H54-5031-03	ITEM CARTON CASE	M1
-		*	H54-5032-03	ITEM CARTON CASE	E3
-		*	H54-5033-03	ITEM CARTON CASE	M2
247	1C	*	J22-2049-03	MOUNTING HARDWARE ASSY	
250	3C		GE34053-001A	ACCENT BUTTON BASE	
251	3C		GE34052-001A	ACCENT BUTTON TOP (iPod)	K2K3M
251	3C	*	K28-0453-03	ACCENT BUTTON TOP (TEL)	KK1E1
251	3C	*	K28-0453-03	ACCENT BUTTON TOP (TEL)	M1
251	3C	*	K28-0454-03	ACCENT BUTTON TOP (SD)	E3M2
252	3C		GE34059-001A	EJECT BUTTON	
253	3C		GE34060-001A	DETACH BUTTON	
254	3C		GE34061-001A	SRC BUTTON	
255	3C		GE34063-001A	SEARCH BUTTON	
256	3C		GE34064-001A	PRESET BUTTON	
259	3C		GE40511-001A	VOL KNOB RUBBER	K1E1M
259	3C		GE40511-001A	VOL KNOB RUBBER	K2K3K
259	3C		GE40511-001A	VOL KNOB RUBBER	M2
259	3C		GE40511-002A	VOL KNOB RUBBER	M3E3
261	1C		N99-1757-15	SCREW SET	KK1M1
261	1C		N99-1757-15	SCREW SET	K2K3M
261	1C		N99-1757-15	SCREW SET	M2
263	1C		N80-2008-48	TAP SCREW (ACCESSORY)	KK1M1
263	1C		N80-2008-48	TAP SCREW (ACCESSORY)	K2K3M
263	1C		N80-2008-48	TAP SCREW (ACCESSORY)	M2
A	3C		N80-2006-48	TAP SCREW	
B	3D		N09-6358-05	TAPTITE SCREW	E3M2
C	2C		N09-6758-05	TAPTITE SCREW	
D	3D		N35-2610-48	BINDING HEAD MACHINE SCREW	
E	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
G	1D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
H	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
265	3C		T91-1007-05	MICROPHONE ASSY	KE1M1
266	1C		W01-1664-05	CARRYING CASE	K2K1
266	1C		W01-1710-05	CARRYING CASE	E3
266	1C		W01-1710-05	CARRYING CASE	K3KE1
268	1C		W01-1768-15	MICROPHONE (3m)	K1
DME1	1D	*	X92-6370-04	MECHANISM ASSY (DXM-9B24W)	
SYNTHESIZER UNIT (X15-1552-70)					
C1 -3			CC73HCH1H221J	CHIP C 220PF J	E3M2
CN1		*	E41-3250-05	PIN ASSY	E3M2
J1			E68-0826-05	JACK	E3M2
SWITCH UNIT (X16-707x-xx)					
D51			B30-1566-05	LED (1608,RED)	
D52 -55			B30-1788-05	LED (1608,WHITE)	M3M1M
D52 -55			B30-3210-05	LED (1608,BLUE)	K1E1E

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD

⚠ indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-707x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
D52 -55			B30-3210-05	LED (1608,BLUE)	K2K3K
D60 -64			B30-3210-05	LED (1608,BLUE)	M3M2
D60 -65			B30-1779-05	LED (1608,SR)	K3E3
D60 -69			B30-1788-05	LED (1608,WHITE)	M1
D60 -69			B30-3210-05	LED (1608,BLUE)	E1
D60 -69			B30-3210-05	LED (1608,BLUE)	K2KK1
D65 -69			B30-1788-05	LED (1608,WHITE)	M3M2
D66 -69			B30-3210-05	LED (1608,BLUE)	K3E3
C10			CK73HB1A104K	CHIP C 0.10UF K	
C11			CK73GB1C104K	CHIP C 0.10UF K	
C12			CK73HB1A104K	CHIP C 0.10UF K	
C13			CK73GB1H102K	CHIP C 1000PF K	
C21			CK73HB0J105K	CHIP C 1.0UF K	
C81 ,82			CC73GCH1H471J	CHIP C 470PF J	
C83			CK73GB1H472K	CHIP C 4700PF K	
C84			CK73GB1H102K	CHIP C 1000PF K	
C100			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-1486-05	PIN ASSY	KE1M1
J1		*	E59-0864-05	RECTANGULAR PLUG	
J2			QNS0308-001	DIA 3.5 TYPE JACK	
J3			QNZ1057-001	USB CONNECTOR	
L2			L92-0639-05	CHIP FERRITE	K1E1E3
L2			L92-0639-05	CHIP FERRITE	K2K3K
CP11			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP13			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J101J	CHIP-COM 100 J 1/16W	
R10			RK73HB1J104J	CHIP R 100K J 1/16W	
R12			RK73HB1J223J	CHIP R 22K J 1/16W	
R13			RK73HB1J101J	CHIP R 100 J 1/16W	
R15			RK73HB1J101J	CHIP R 100 J 1/16W	
R22			RK73HB1J101J	CHIP R 100 J 1/16W	
R30			RK73PB2H7R5J	CHIP R 7.5 J 1/2W	
R51			RK73EB2E821J	CHIP R 820 J 1/4W	
R52 ,53			RK73GB2A821J	CHIP R 820 J 1/10W	
R56 -58			RK73FB2B511J	CHIP R 510 J 1/8W	K1E1M1
R56 -58			RK73FB2B511J	CHIP R 510 J 1/8W	K2M3K
R56 -58			RK73FB2B511J	CHIP R 510 J 1/8W	M2
R56 -58			RK73FB2B621J	CHIP R 620 J 1/8W	K3E3
R59 ,60			RK73FB2B821J	CHIP R 820 J 1/8W	
R81 ,82			RK73GB2A220J	CHIP R 22 J 1/10W	
R106			RK73GB2A000J	CHIP R 0.0 J 1/10W	M3M1M2
S2 ,3			NSW0326-001X	TACT SWITCH	
S10 ,11			NSW0326-001X	TACT SWITCH	
S15 ,16			NSW0326-001X	TACT SWITCH	
S1			T99-0484-05	ROTARY ENCODER	
D1			RKZ4.7KG(B2)	ZENER DIODE	
D9 ,10			RKZ4.7KG(B2)	ZENER DIODE	KE1M1
D79			DA204U	DIODE	
D81			HZM6.8ZMWA-E	ZENER DIODE	
D82			DA204U	DIODE	
ED1			QLF0202-001	FLUORESCENT INDICATOR TUBE	

Ref.No.	Add	New	Parts No.	Description	Destination
IC2			KSM-2003TN5B	IR DETECT FOR REMOTO CONTROL	
Q20			RT1N436M-T111	TRANSISTOR	
Q21 -23			RT1P141M-T111	TRANSISTOR	

CD PLAYER UNIT (X32-6250-02) IN CD MECHA

C1			CK73FB0J106K	CHIP C 10UF K	
C3			CC73GCH1H680J	CHIP C 68PF J	
C4			CK73GB1A105K	CHIP C 1.0UF K	
C6			CK73FB1C105K	CHIP C 1.0UF K	
C8			CK73GB1H222K	CHIP C 2200PF K	
C9 ,10			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H153K	CHIP C 0.015UF K	
C12			CK73GB1C104K	CHIP C 0.10UF K	
C13			CK73GB1H332K	CHIP C 3300PF K	
C14			CK73GB1H103K	CHIP C 0.010UF K	
C15			CK73GB1C333K	CHIP C 0.033UF K	
C16			CK73GB1C104K	CHIP C 0.10UF K	
C18			CK73GB1H153K	CHIP C 0.015UF K	
C19			CK73GB1H103K	CHIP C 0.010UF K	
C20			CK73GB1C104K	CHIP C 0.10UF K	
C22			CK73GB1H103K	CHIP C 0.010UF K	
C23			CK73GB1H153K	CHIP C 0.015UF K	
C24			CC73GCH1H470J	CHIP C 47PF J	
C25			CK73GB1C104K	CHIP C 0.10UF K	
C26			CK73GB1A105K	CHIP C 1.0UF K	
C27			CK73GB1C104K	CHIP C 0.10UF K	
C29 ,30			CK73GB1C104K	CHIP C 0.10UF K	
C31			CK73GB1A105K	CHIP C 1.0UF K	
C36			CK73GB1A105K	CHIP C 1.0UF K	
C41 ,42			CK73GB1C104K	CHIP C 0.10UF K	
C43 ,44			CK73GB1H102K	CHIP C 1000PF K	
C45			CK73GB1H103K	CHIP C 0.010UF K	
C46			CK73GB1A105K	CHIP C 1.0UF K	
C47			CC73GCH1H560J	CHIP C 56PF J	
C48			CC73GCH1H101J	CHIP C 100PF J	
C49			CK73GB1A105K	CHIP C 1.0UF K	
C50			CK73FB1A225K	CHIP C 2.2UF K	
C51			CK73FB0J106K	CHIP C 10UF K	
C54			CK73FB0J106K	CHIP C 10UF K	
C57			CK73GB1C104K	CHIP C 0.10UF K	
C59			CK73GB1H472K	CHIP C 4700PF K	
C61			CK73GB1C104K	CHIP C 0.10UF K	
C101			CK73GB1A105K	CHIP C 1.0UF K	
C103			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E41-2954-05	FLAT CABLE CONNECTOR	
CN2			E41-2630-05	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1			RK73GB2A560J	CHIP R 56 J 1/10W	
R2			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R3			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R4			RK73GB2A104J	CHIP R 100K J 1/10W	
R5			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R6			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD ⚠ indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6250-02) IN CD MECHA

Ref.No.	Add	New	Parts No.	Description	Destination
R7			RK73GB2A221J	CHIP R 220 J 1/10W	
R8			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R9			RK73GB2A913J	CHIP R 91K J 1/10W	
R10			RK73GB2A334J	CHIP R 330K J 1/10W	
R11			RK73GB2A153J	CHIP R 15K J 1/10W	
R13			RK73GB2A104J	CHIP R 100K J 1/10W	
R14			RK73GB2A103J	CHIP R 10K J 1/10W	
R15			RK73GB2A101J	CHIP R 100 J 1/10W	
R17 ,18			RK73GB2A103J	CHIP R 10K J 1/10W	
R25			RK73GB2A103J	CHIP R 10K J 1/10W	
R27			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R39			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R40			RK73GB2A681J	CHIP R 680 J 1/10W	
R43 ,44			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R49			RK73GB2A393J	CHIP R 39K J 1/10W	
R50			RK73GB2A363J	CHIP R 36K J 1/10W	
R51			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52 -58			RK73GB2A101J	CHIP R 100 J 1/10W	
R59			RK73GB2A204J	CHIP R 200K J 1/10W	
R64			RK73GB2A223J	CHIP R 22K J 1/10W	
R65			RK73GB2A333J	CHIP R 33K J 1/10W	
R69 -73			RK73GB2A101J	CHIP R 100 J 1/10W	
R74 ,75			RK73GB2A103J	CHIP R 10K J 1/10W	
R76			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R102			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1 ,2			S68-0924-05	PUSH SWITCH	
D2			DAP202U	DIODE	
D3 ,4			DA204U	DIODE	
IC3			BD8222EFV	ANALOGUE IC	
IC4			JCV8023	MOS-IC	
IC5			XC6415S001P1	MOS-IC	
Q1			2SA2188-T1(E)	TRANSISTOR	
Q14			RUE003N02	FET	

ELECTRIC UNIT (X34-696x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C1			C90-6906-05	ELECTRO 3300UF 16WV	
C4			CK73GB1C104K	CHIP C 0.10UF K	
C6			CK73GB1H104K	CHIP C 0.10UF K	K1E1E3
C6			CK73GB1H104K	CHIP C 0.10UF K	K2K3K
C6 ,7			CK73GB1H104K	CHIP C 0.10UF K	M3M1M2
C8			CD04BN1C221M	ELECTRO 220UF 16WV	
C9			CD04AV0J101M	ELECTRO 100UF 6.3WV	
C11 -13			CK73GB1C104K	CHIP C 0.10UF K	
C15			CK73GB1C224K	CHIP C 0.22UF K	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C22 ,23			CK73GB1A105K	CHIP C 1.0UF K	
C24			CD04AV0J470M	ELECTRO 47UF 6.3WV	
C52			CK73FB0J106K	CHIP C 10UF K	
C53			CC73HCH1H151J	CHIP C 150PF J	
C54			CK73GB1C104K	CHIP C 0.10UF K	
C55			CK73GB1H102K	CHIP C 1000PF K	
C58			CK73EB1H475K	CHIP C 4.7UF K	
C71			CK73HB1A104K	CHIP C 0.10UF K	
C72			CK73GB1C104K	CHIP C 0.10UF K	
C73		*	C90-6990-05	ELECTRO 220UF 10WV	
C91			CD04AV1V100M	ELECTRO 10UF 35WV	K2K1
C92 ,93			CK73GB1H102K	CHIP C 1000PF K	K2K1
C94			CD04AV1V100M	ELECTRO 10UF 35WV	K2K1
C101			CK73HB1E103K	CHIP C 0.010UF K	
C102			CK73GB1H104K	CHIP C 0.10UF K	
C201			CK73GB1C104K	CHIP C 0.10UF K	
C202,203			CC73HCH1H220J	CHIP C 22PF J	
C204			CK73GB1C104K	CHIP C 0.10UF K	
C205			CK73GB1H102K	CHIP C 1000PF K	
C210-212			CK73HB1A104K	CHIP C 0.10UF K	
C213			CK73GB1C104K	CHIP C 0.10UF K	
C214-216			CK73HB1A104K	CHIP C 0.10UF K	
C217,218			CC73HCH1H080D	CHIP C 8.0PF D	
C261			CK73HB1A104K	CHIP C 0.10UF K	
C301,302			CD04AV1HR47M	ELECTRO 0.47UF 50WV	
C303,304			CK73GB1C104K	CHIP C 0.10UF K	
C305,306			CK73GB1H102K	CHIP C 1000PF K	
C307			CD04AV0J470M	ELECTRO 47UF 6.3WV	
C308			CK73GB1H103K	CHIP C 0.010UF K	
C311			CC73GCH1H040C	CHIP C 4.0PF C	
C401			CK73GB1A105K	CHIP C 1.0UF K	
C402			CK73GB1A474K	CHIP C 0.47UF K	
C403			CK73GB1A105K	CHIP C 1.0UF K	
C404			CK73GB1A474K	CHIP C 0.47UF K	
C405-409			CK73GB1A105K	CHIP C 1.0UF K	
C410		*	CD04AV1H2R2M	ELECTRO 2.2UF 50WV	
C411			CD04AV1V100M	ELECTRO 10UF 35WV	E1E3M
C411			CD04AV1V100M	ELECTRO 10UF 35WV	K3M3K
C411			CD04AV1V100M	ELECTRO 10UF 35WV	M2
C411,412			CD04AV1C470M	ELECTRO 47UF 16WV	K2K1
C412			CD04AV1C470M	ELECTRO 47UF 16WV	E1E3M
C412			CD04AV1C470M	ELECTRO 47UF 16WV	K3M3K
C412			CD04AV1C470M	ELECTRO 47UF 16WV	M2
C415-418			CC73GCH1H100D	CHIP C 10PF D	
C419			CC73GCH1H470J	CHIP C 47PF J	
C501			CK73GB1H102K	CHIP C 1000PF K	
C502			CK73GB1A105K	CHIP C 1.0UF K	
C505			CK73GB1C224K	CHIP C 0.22UF K	
C506			CK73GB1C104K	CHIP C 0.10UF K	
C507			CC73GCH1H090D	CHIP C 9.0PF D	
C509-511			CK73GB1A105K	CHIP C 1.0UF K	
C512-514			CK73GB1H103K	CHIP C 0.010UF K	
C515			CK73GB1C104K	CHIP C 0.10UF K	
C516			CK73GB1H103K	CHIP C 0.010UF K	
C517			CK73GB1C104K	CHIP C 0.10UF K	
C518			CK73GB1H102K	CHIP C 1000PF K	
C519			CD04AV1C470M	ELECTRO 47UF 16WV	
C520			CK73GB1C104K	CHIP C 0.10UF K	
C523			CK73GB1H102K	CHIP C 1000PF K	
C524			CK73GB1C224K	CHIP C 0.22UF K	
C525			CC73GCH1H270J	CHIP C 27PF J	
C527			CC73GCH1H150J	CHIP C 15PF J	
C528			CC73GCH1H471J	CHIP C 470PF J	
C530			CK73GB1H102K	CHIP C 1000PF K	
C531			CC73GCH1H070D	CHIP C 7.0PF D	

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD ⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-696x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C532			CC73GCH1H060D	CHIP C 6.0PF D	
C533			CC73GCH1H020C	CHIP C 2.0PF C	
C539,540			CC73GCH1H040C	CHIP C 4.0PF C	
C541			CK73GB1H102K	CHIP C 1000PF K	
C601,602			CK73GB1C104K	CHIP C 0.10UF K	KK1M2
C601,602			CK73GB1C104K	CHIP C 0.10UF K	K2K3M3
C603			CD04AV0J470M	ELECTRO 47UF 6.3WV	KK1M2
C603			CD04AV0J470M	ELECTRO 47UF 6.3WV	K2K3M3
C701-706			CD04AV1V100M	ELECTRO 10UF 35WV	KK1M2
C701-706			CD04AV1V100M	ELECTRO 10UF 35WV	K2K3M3
C703-706			CD04AV1V100M	ELECTRO 10UF 35WV	M1
C705,706			CD04AV1V100M	ELECTRO 10UF 35WV	E1E3
C711-716			CK73GB1H102K	CHIP C 1000PF K	KK1M2
C711-716			CK73GB1H102K	CHIP C 1000PF K	K2K3M3
C713-716			CK73GB1H102K	CHIP C 1000PF K	M1
C715,716			CK73GB1H102K	CHIP C 1000PF K	E1E3
C801-804			CK73GB1C224K	CHIP C 0.22UF K	
C805			CD04AV1C330M	ELECTRO 33UF 16WV	
C806			CK73GB1A105K	CHIP C 1.0UF K	
C807			CK73HB0J105K	CHIP C 1.0UF K	
C808			CK73GB1A105K	CHIP C 1.0UF K	
C821-828			CC73GCH1H471J	CHIP C 470PF J	
C901			CK73GB1C104K	CHIP C 0.10UF K	KK1E1
C901			CK73GB1C104K	CHIP C 0.10UF K	M1
C902			CK73FB0J106K	CHIP C 10UF K	KK1E1
C902			CK73FB0J106K	CHIP C 10UF K	M1
C903,904			CC73GCH1H101J	CHIP C 100PF J	KK1E1
C903,904			CC73GCH1H101J	CHIP C 100PF J	M1
C905,906			CK73GB1C104K	CHIP C 0.10UF K	KK1E1
C905,906			CK73GB1C104K	CHIP C 0.10UF K	M1
C908			CD04AV1V100M	ELECTRO 10UF 35WV	KK1E1
C908			CD04AV1V100M	ELECTRO 10UF 35WV	M1
C909			CK73GB1C104K	CHIP C 0.10UF K	KK1M1
C909			CK73GB1C104K	CHIP C 0.10UF K	M2E1E3
C910			C90-6989-05	ELECTRO 330UF 6.3WV	KK1E1
C910			C90-6989-05	ELECTRO 330UF 6.3WV	M1
C912			CK73HB1A104K	CHIP C 0.10UF K	KK1E1
C912			CK73HB1A104K	CHIP C 0.10UF K	M1
C913			CK73GB1H102K	CHIP C 1000PF K	KK1E1
C913			CK73GB1H102K	CHIP C 1000PF K	M1
C914			CK73GB0J225K	CHIP C 2.2UF K	KK1M1
C914			CK73GB0J225K	CHIP C 2.2UF K	M2E1E3
C915			CK73FB1H334K	CHIP C 0.33UF K	KK1M1
C915			CK73FB1H334K	CHIP C 0.33UF K	M2E1E3
C916,917			CK73GB1C104K	CHIP C 0.10UF K	KK1E1
C916,917			CK73GB1C104K	CHIP C 0.10UF K	M1
C921			CK73GB1H103K	CHIP C 0.010UF K	E1
CN301			E41-1828-05	FLAT CABLE CONNECTOR	
CN901			E41-3043-05	PIN ASSY	KK1M1
CN901			E41-3043-05	PIN ASSY	M2E1E3
⚠ J1			E58-0991-05	RECTANGULAR RECEPTACLE	
J301		*	E58-1144-05	RECTANGULAR RECEPTACLE	
J601			E56-0855-05	CYLINDRICAL RECEPTACLE	KK1M2
J601			E56-0855-05	CYLINDRICAL RECEPTACLE	K2K3M3

Ref.No.	Add	New	Parts No.	Description	Destination
J701			E63-0972-05	PIN JACK	KK1M2
J701			E63-0972-05	PIN JACK	K2K3M
J701			E63-0973-05	PIN JACK	M1
J701			E63-0974-05	PIN JACK	E1E3
J921			E11-0625-05	PHONE JACK	K1E1
W551	2D		E30-6803-05	CORD WITH PLUG	
F1			F53-0406-05	FUSE (UL,CSA) (2.5A)	
⚠ L1			L33-2459-05	CHOKE COIL ASSY	
L51			L33-2462-05	SMALL FIXED INDUCTOR	
L52 ,53			L92-0639-05	CHIP FERRITE	
L302			L92-0616-05	CHIP FERRITE	
L401-405			L92-0648-05	CHIP FERRITE	
L501			L40-4791-58	SMALL FIXED INDUCTOR	
L502,503			L33-1031-05	SMALL FIXED INDUCTOR	
L504			L40-2781-58	SMALL FIXED INDUCTOR (0.27UH)	
L505			L40-4791-58	SMALL FIXED INDUCTOR	
L506			L40-4781-58	SMALL FIXED INDUCTOR	
L507			L40-1891-58	SMALL FIXED INDUCTOR (1.8UH)	
L508			L40-4781-58	SMALL FIXED INDUCTOR	
L509			L92-0607-05	CHIP FERRITE	K1
L509			L92-0607-05	CHIP FERRITE	K2K3K
L551			QQR1872-001	RF COIL	
X201		*	L77-3846-05	CRYSTAL RESONATOR (12MHZ)	
X202			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
X501			L77-3824-05	CRYSTAL RESONATOR (4.000MHZ)	
J	2D		N80-3008-48	PAN HEAD TAPTITE SCREW	
K	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
L	2D		N84-3014-48	PAN HEAD TAPTITE SCREW	
M	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
N	2D		N89-3010-48	BINDING HEAD TAPTITE SCREW	
CP901			RK74GA1J101J	CHIP-COM 100 J 1/16W	KK1M1
CP901			RK74GA1J101J	CHIP-COM 100 J 1/16W	M2E1E
R1			RD14BB2C102J	RD 1.0K J 1/6W	
R2			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R11			RD14DB2H7R5J	SMALL-RD 7.5 J 1/2W	
R51			RK73GH2A303D	CHIP R 30K D 1/10W	
R52			RK73GH2A164D	CHIP R 160K D 1/10W	
R53			RK73HB1J164J	CHIP R 160K J 1/16W	
R54			RK73GH2A823D	CHIP R 82K D 1/10W	
R55			RK73GH2A134D	CHIP R 130K D 1/10W	
R57			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R59			RK73EB2E150J	CHIP R 15 J 1/4W	
R71			RK73GB2A223J	CHIP R 22K J 1/10W	
R91			RK73GB2A362J	CHIP R 3.6K J 1/10W	K2K1
R92			RK73GB2A432J	CHIP R 4.3K J 1/10W	K2K1
R93			RK73GB2A562J	CHIP R 5.6K J 1/10W	K2K1
R94			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	K2K1
R95			RK73FB2B102J	CHIP R 1.0K J 1/8W	K2K1
R96			RK73GB2A222J	CHIP R 2.2K J 1/10W	K2K1
R97			RK73GB2A101J	CHIP R 100 J 1/10W	K2K1
R99			RK73EB2E000J	CHIP R 0.0 J 1/4W	E1E3M
R99			RK73EB2E000J	CHIP R 0.0 J 1/4W	K3M3K
R99			RK73EB2E000J	CHIP R 0.0 J 1/4W	M2

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-696x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R101			RK73FB2B472J	CHIP R 4.7K J 1/8W	K1
R101			RK73FB2B472J	CHIP R 4.7K J 1/8W	K2K3K
R101,102			RK73FB2B472J	CHIP R 4.7K J 1/8W	M1M2
R101,102			RK73FB2B472J	CHIP R 4.7K J 1/8W	M3E1E3
R103-105			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R106			RK73EB2E333J	CHIP R 33K J 1/4W	
R107			RK73HB1J103J	CHIP R 10K J 1/16W	
R108			RK73GB2A223J	CHIP R 22K J 1/10W	
R109			RK73FB2B683J	CHIP R 68K J 1/8W	
R110			RK73GB2A473J	CHIP R 47K J 1/10W	
R111			RK73EB2E203J	CHIP R 20K J 1/4W	
R112			RK73HB1J104J	CHIP R 100K J 1/16W	
R113			RK73GB2A103J	CHIP R 10K J 1/10W	
R114,115			RK73HB1J103J	CHIP R 10K J 1/16W	
R117			RK73GB2A123J	CHIP R 12K J 1/10W	
R118			RK73GB2A683J	CHIP R 68K J 1/10W	
R119			RK73HB1J103J	CHIP R 10K J 1/16W	
R124			RK73HB1J363J	CHIP R 36K J 1/16W	
R125			RK73HB1J104J	CHIP R 100K J 1/16W	
R151			RK73HB1J000J	CHIP R 0.0 J 1/16W	M3M1M2
R152			RK73HB1J000J	CHIP R 0.0 J 1/16W	E1E3
R201,202			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R203			RK73GB2A223J	CHIP R 22K J 1/10W	
R204			RK73GB2A104J	CHIP R 100K J 1/10W	
R205			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R206			RK73GB2A100J	CHIP R 10 J 1/10W	
R207			RK73HB1J153J	CHIP R 15K J 1/16W	
R208			RK73GB2A100J	CHIP R 10 J 1/10W	
R209			RK73HB1J153J	CHIP R 15K J 1/16W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W	K3M3K
R213			RK73GB2A473J	CHIP R 47K J 1/10W	K2K1
R213,214			RK73GB2A473J	CHIP R 47K J 1/10W	E1E3M1
R213,214			RK73GB2A473J	CHIP R 47K J 1/10W	M2
R214			RK73GB2A473J	CHIP R 47K J 1/10W	M3
R215			RK73GB2A223J	CHIP R 22K J 1/10W	M3M1M2
R215			RK73GB2A473J	CHIP R 47K J 1/10W	K1
R215			RK73GB2A473J	CHIP R 47K J 1/10W	K2K3K
R216			RK73HB1J104J	CHIP R 100K J 1/16W	
R217			RK73GB2A473J	CHIP R 47K J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R219			RK73GB2A473J	CHIP R 47K J 1/10W	
R220			RK73HB1J104J	CHIP R 100K J 1/16W	
R222			RK73HB1J101J	CHIP R 100 J 1/16W	
R223			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R224,225			RK73HB1J101J	CHIP R 100 J 1/16W	
R226,227			RK73HB1J223J	CHIP R 22K J 1/16W	
R228,229			RK73GB2A101J	CHIP R 100 J 1/10W	
R230			RK73HB1J223J	CHIP R 22K J 1/16W	
R231			RK73HB1J101J	CHIP R 100 J 1/16W	
R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R233			RK73HB1J101J	CHIP R 100 J 1/16W	
R234			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R238			RK73EB2E471J	CHIP R 470 J 1/4W	
R240			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R241			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R242			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R261			RK73GB2A223J	CHIP R 22K J 1/10W	
R262			RK73HB1J223J	CHIP R 22K J 1/16W	
R263			RK73HB1J333J	CHIP R 33K J 1/16W	
R266,267			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R271			RK73HB1J101J	CHIP R 100 J 1/16W	
R301			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R302			RK73HB1J101J	CHIP R 100 J 1/16W	
R303			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R304			RK73HB1J101J	CHIP R 100 J 1/16W	
R305,306			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R307			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R308			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R309,310			RK73HB1J101J	CHIP R 100 J 1/16W	
R311			RK73GB2A101J	CHIP R 100 J 1/10W	
R312,313			RK73HB1J101J	CHIP R 100 J 1/16W	
R314			RK73GB2A223J	CHIP R 22K J 1/10W	
R315			RK73GB2A100J	CHIP R 10 J 1/10W	
R318,319			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R321			RK73GB2A104J	CHIP R 100K J 1/10W	
R322			RK73HB1J104J	CHIP R 100K J 1/16W	
R323			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R324			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R327			RK73HB1J225J	CHIP R 2.2M J 1/16W	
R331			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R332,333			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R334-336			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R337,338			RK73GB2A103J	CHIP R 10K J 1/10W	
R339,340			RK73EB2E100J	CHIP R 10 J 1/4W	
R341			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R342			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R343			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R347			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R401,402			RK73GB2A103J	CHIP R 10K J 1/10W	
R403			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R404			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R505			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R506			RK73EB2E220J	CHIP R 22 J 1/4W	
R507,508			RK73GB2A221J	CHIP R 220 J 1/10W	
R513,514			RK73GB2A684J	CHIP R 680K J 1/10W	
R515,516			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R518			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2
R518			RK73GB2A000J	CHIP R 0.0 J 1/10W	M3E1E
R519,520			RK73GB2A221J	CHIP R 220 J 1/10W	
R528			RK73EB2E000J	CHIP R 0.0 J 1/4W	K1E1E
R528			RK73EB2E000J	CHIP R 0.0 J 1/4W	K2K3K
R601,602			RK73EB2E100J	CHIP R 10 J 1/4W	KK1M2
R601,602			RK73EB2E100J	CHIP R 10 J 1/4W	K2K3M
R603			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	KK1M2
R603			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K2K3M
R605			RK73EB2E101J	CHIP R 100 J 1/4W	KK1M2
R605			RK73EB2E101J	CHIP R 100 J 1/4W	K2K3M
R606,607			RK73EB2E473J	CHIP R 47K J 1/4W	KK1M2
R606,607			RK73EB2E473J	CHIP R 47K J 1/4W	K2K3M
R608			RK73EB2E101J	CHIP R 100 J 1/4W	KK1M2

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD ⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-696x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R608			RK73EB2E101J	CHIP R 100 J 1/4W	K2K3M3
R609			RK73EB2E473J	CHIP R 47K J 1/4W	KK1M2
R609			RK73EB2E473J	CHIP R 47K J 1/4W	K2K3M3
R610			RK73EB2E472J	CHIP R 4.7K J 1/4W	KK1M2
R610			RK73EB2E472J	CHIP R 4.7K J 1/4W	K2K3M3
R611			RK73EB2E432J	CHIP R 4.3K J 1/4W	KK1M2
R611			RK73EB2E432J	CHIP R 4.3K J 1/4W	K2K3M3
R612			RK73EB2E472J	CHIP R 4.7K J 1/4W	KK1M2
R612			RK73EB2E472J	CHIP R 4.7K J 1/4W	K2K3M3
R616			RK73GB2A473J	CHIP R 47K J 1/10W	KK1M2
R616			RK73GB2A473J	CHIP R 47K J 1/10W	K2K3M3
R617			RK73HB1J104J	CHIP R 100K J 1/16W	KK1M2
R617			RK73HB1J104J	CHIP R 100K J 1/16W	K2K3M3
R618			RK73GB2A683J	CHIP R 68K J 1/10W	KK1M2
R618			RK73GB2A683J	CHIP R 68K J 1/10W	K2K3M3
R619,620			RK73HB1J683J	CHIP R 68K J 1/16W	KK1M2
R619,620			RK73HB1J683J	CHIP R 68K J 1/16W	K2K3M3
R701,702			RK73GB2A331J	CHIP R 330 J 1/10W	KK1M2
R701,702			RK73GB2A331J	CHIP R 330 J 1/10W	K2K3M3
R703,704			RK73HB1J223J	CHIP R 22K J 1/16W	KK1M2
R703,704			RK73HB1J223J	CHIP R 22K J 1/16W	K2K3M3
R705,706			RK73FB2B181J	CHIP R 180 J 1/8W	KK1M2
R705,706			RK73FB2B181J	CHIP R 180 J 1/8W	K2K3M3
R707,708			RK73GB2A331J	CHIP R 330 J 1/10W	KK1M1
R707,708			RK73GB2A331J	CHIP R 330 J 1/10W	K2K3M3
R707,708			RK73GB2A331J	CHIP R 330 J 1/10W	M2
R709,710			RK73HB1J223J	CHIP R 22K J 1/16W	KK1M1
R709,710			RK73HB1J223J	CHIP R 22K J 1/16W	K2K3M3
R709,710			RK73HB1J223J	CHIP R 22K J 1/16W	M2
R711,712			RK73FB2B181J	CHIP R 180 J 1/8W	KK1M1
R711,712			RK73FB2B181J	CHIP R 180 J 1/8W	K2K3M3
R711,712			RK73FB2B181J	CHIP R 180 J 1/8W	M2
R713,714			RK73GB2A331J	CHIP R 330 J 1/10W	
R715,716			RK73HB1J223J	CHIP R 22K J 1/16W	
R717,718			RK73FB2B181J	CHIP R 180 J 1/8W	
R801			RK73HB1J333J	CHIP R 33K J 1/16W	
R802			RK73HB1J473J	CHIP R 47K J 1/16W	
R803			RK73HB1J331J	CHIP R 330 J 1/16W	
R804			RK73GB2A223J	CHIP R 22K J 1/10W	
R805			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R806			RK73GB2A100J	CHIP R 10 J 1/10W	
R807,808			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R809			RK73GB2A473J	CHIP R 47K J 1/10W	
R810			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R821			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R822,823			RK73HB1J101J	CHIP R 100 J 1/16W	
R901			RK73HB1J101J	CHIP R 100 J 1/16W	E3M2
R901			RK73HB1J220J	CHIP R 22 J 1/16W	KK1E1
R901			RK73HB1J220J	CHIP R 22 J 1/16W	M1
R902			RK73HB1J473J	CHIP R 47K J 1/16W	KK1M1
R902			RK73HB1J473J	CHIP R 47K J 1/16W	M2E1E3
R903,904			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R903,904			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R905,906			RK73GB2A223J	CHIP R 22K J 1/10W	KK1E1
R905,906			RK73GB2A223J	CHIP R 22K J 1/10W	M1

Ref.No.	Add	New	Parts No.	Description	Destination
R907			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	KK1E1
R907			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	M1
R908,909			RK73GB2A103J	CHIP R 10K J 1/10W	KK1E1
R908,909			RK73GB2A103J	CHIP R 10K J 1/10W	M1
R913			RK73HB1J000J	CHIP R 0.0 J 1/16W	KK1E1
R913			RK73HB1J000J	CHIP R 0.0 J 1/16W	M1
R913			RK73HB1J330J	CHIP R 33 J 1/16W	E3M2
R914			RK73GB2A473J	CHIP R 47K J 1/10W	E3M2
R915			RK73GB2A000J	CHIP R 0.0 J 1/10W	KK1E1
R915			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1
R917			RK73EB2E000J	CHIP R 0.0 J 1/4W	KK1E1
R917			RK73EB2E000J	CHIP R 0.0 J 1/4W	M1
R921,922			RK73EB2E101J	CHIP R 100 J 1/4W	K1E1
R923,924			RK73HB1J000J	CHIP R 0.0 J 1/16W	K1
R925,926			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1
R927,928			RK73GB2A101J	CHIP R 100 J 1/10W	KE1M1
R929			RK73HB1J473J	CHIP R 47K J 1/16W	E1
R951			RK73HB1J101J	CHIP R 100 J 1/16W	E3M2
R952			RK73HB1J473J	CHIP R 47K J 1/16W	E3M2
R953			RK73GB2A473J	CHIP R 47K J 1/10W	E3M2
R954			RK73HB1J101J	CHIP R 100 J 1/16W	E3M2
R955			RK73HB1J102J	CHIP R 1.0K J 1/16W	E3M2
R956			RK73HB1J473J	CHIP R 47K J 1/16W	E3M2
S301			S70-0959-05	TACT SWITCH	
D1			S2V60-5009F46	DIODE	
D2			HZS9-E(A1)	ZENER DIODE	
D3			1SR154-400	DIODE	
D4			HSS4148	DIODE	
D6			HSS4148	DIODE	
D51			CMS14	DIODE	
D52			1SS355	DIODE	
D91			1SR154-400	DIODE	K2K1
D92 ,93			UDZW5.6(B)	ZENER DIODE	K2K1
D101-104			1SR154-400	DIODE	M1M2
D101-104			1SR154-400	DIODE	M3E1E
D101,102			1SR154-400	DIODE	K1
D101,102			1SR154-400	DIODE	K2K3K
D105			MC2846-T111	DIODE	
D106-108			UDZW6.8(B)	ZENER DIODE	
D201			RB521S-30	DIODE	
D301			MC2850-T111	DIODE	
D302-304			RKZ6.8KG(B2)	ZENER DIODE	
D305,306			LVS10C270S030	VARISTOR	
D307			HZM6.8ZMWA-E	ZENER DIODE	
D308			MC2850-T111	DIODE	
D401-403			MC2846-T111	DIODE	
D502			MC2850-T111	DIODE	
D601-605			RKZ6.8KG(B2)	ZENER DIODE	KK1M2
D601-605			RKZ6.8KG(B2)	ZENER DIODE	K2K3M
D611			RKZ6.8KG(B2)	ZENER DIODE	KK1M2
D611			RKZ6.8KG(B2)	ZENER DIODE	K2K3M
D701,702			MC2846-T111	DIODE	KK1M1
D701,702			MC2846-T111	DIODE	K2K3M
D701,702			MC2846-T111	DIODE	M2

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD ⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-696x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
D702			MC2846-T111	DIODE	E1E3
D801			MC2846-T111	DIODE	
D921,922			RKZ4.7KG(B2)	ZENER DIODE	K1E1
IC1			BD49131-V4	ANALOGUE IC	
IC21			R1114N331B-TR	ANALOGUE IC	
IC51			MP2562DS-X	ANALOGUE IC	
IC71			BD2224G	MOS-IC	
IC201		*	W05-1654-00	MCU	KK1E1
IC201		*	W05-1654-00	MCU	M1
IC201		*	W05-1656-00	MCU	E3M2
IC201		*	W05-1657-00	MCU	K2K3M3
IC202		*	XC6119N28AN-G	MOS-IC	
IC203		*	EX24002ATAS0A	ROM IC	E3M2
IC203		*	EX24002ATAS0A	ROM IC	K2K3M3
IC203		*	EX24008ATAS0A	ROM IC	KK1E1
IC203		*	EX24008ATAS0A	ROM IC	M1
IC261			MFI341S2162	MICROPROCESSOR IC	
IC301			TC7SET125FU-F	MOS-IC	
IC401			E-TDA7415CB	ANALOGUE IC	
IC501			TEF6614TV1S3-X	ANALOGUE IC	E1E3
IC501			TEF6614TV1S4-X	ANALOGUE IC	KK1M1
IC501			TEF6614TV1S4-X	ANALOGUE IC	K2K3M3
IC501			TEF6614TV1S4-X	ANALOGUE IC	M2
IC601			TC74VHCT08AFT	MOS-IC	KK1M2
IC601			TC74VHCT08AFT	MOS-IC	K2K3M3
IC602			TC7SET08FU-F	MOS-IC	KK1M2
IC602			TC7SET08FU-F	MOS-IC	K2K3M3
IC801			E-TDA7851A	ANALOGUE IC	
IC802			74HCT2G08DP	MOS-IC	
IC901			NJM4565V-ZB	ANALOGUE IC	KK1E1
IC901			NJM4565V-ZB	ANALOGUE IC	M1
IC902			NJM2845DL133B	ANALOGUE IC	KK1M1
IC902			NJM2845DL133B	ANALOGUE IC	M2E1E3
IC921			TC4053BFT(N)	ANALOGUE IC	E1
Q1			KTA1046-P	TRANSISTOR	
Q2			2SC4081	TRANSISTOR	
Q3			RT1N241M-T111	TRANSISTOR	
Q4			RT1P241M-T111	TRANSISTOR	
Q5			RT1N436M-T111	TRANSISTOR	M3M1M2
Q6			RT1P241M-T111	TRANSISTOR	M3M1M2
Q7			RT1N436M-T111	TRANSISTOR	
Q8			RT1P241M-T111	TRANSISTOR	
Q9			RT1N436M-T111	TRANSISTOR	
Q10			RT1P241M-T111	TRANSISTOR	
Q51			RT1N436M-T111	TRANSISTOR	
Q91			2SC4081	TRANSISTOR	K2K1
Q92			2SC5053	TRANSISTOR	K2K1
Q93			RT1P241M-T111	TRANSISTOR	K2K1
Q94			RT1N436M-T111	TRANSISTOR	K2K1
Q101-104			2SC4081	TRANSISTOR	
Q301			RT1P237M-T111	TRANSISTOR	KK1M1
Q301			RT1P237M-T111	TRANSISTOR	M2E1E3
Q301,302			RT1P237M-T111	TRANSISTOR	K2K3M3
Q701-706			RT1N430M-T111	TRANSISTOR	KK1M2
Q701-706			RT1N430M-T111	TRANSISTOR	K2K3M3
Q703-706			RT1N430M-T111	TRANSISTOR	M1
Q705,706			RT1N430M-T111	TRANSISTOR	E1E3
Q707,708			RT1P144M-T111	TRANSISTOR	KK1M1
Q707,708			RT1P144M-T111	TRANSISTOR	K2K3M
Q707,708			RT1P144M-T111	TRANSISTOR	M2
Q708			RT1P144M-T111	TRANSISTOR	E1E3
Q921			RT1N436M-T111	TRANSISTOR	E1
Q951			2SB1689	TRANSISTOR	E3M2
TH801			PRF18BE471QS2	POSITIVE RESISTOR	
A901			W02-5374-15	ELECTRIC CIRCUIT MODULE	KK1E1
A901			W02-5374-15	ELECTRIC CIRCUIT MODULE	M1

MECHANISM ASSY (X92-6370-04) DXM-9B24W

1	2B		A10-5450-63	CHASSIS ASSY
3	3B		A10-5452-41	CHASSIS
4	1B		A10-5453-32	CHASSIS
12	3A		D10-4993-52	LEVER
13	1B		D10-4991-22	ARM
14	1B		D10-4992-13	ARM
15	2A		D10-4994-02	SLIDER
16	2A		D10-4995-03	SLIDER
17	2B		D10-4996-02	SLIDER
18	2A		D10-4997-03	LEVER
19	1A		D10-4998-03	ARM
20	2A		D10-4999-03	ARM
21	2A		D10-7001-03	ARM
22	2A		D10-7002-03	ARM
23	2A		D10-7003-03	ARM
24	2A		D13-2445-04	GEAR
25	2A		D13-2446-04	GEAR
27	2A		D13-2448-04	GEAR
28	2A		D13-2449-04	GEAR
29	2A		D13-2450-04	GEAR
30	2A		D13-2451-04	GEAR
31	2A		D13-2452-04	GEAR
32	2A		D13-2453-04	GEAR
33	2A		D13-2454-04	GEAR
34	2A		D13-2455-04	GEAR
35	2B		D13-2456-03	RACK (GEAR)
36	2A		D14-1028-04	ROLLER
37	3A		D21-2507-04	SHAFT
38	2B		D21-2508-04	SHAFT
39	3A		D23-0963-04	RETAINER
40	3B		D39-0277-15	DAMPER
41	3B		D39-0278-15	DAMPER
46	1B		G01-4682-34	TORSION COIL SPRING
47	3A		G01-4756-04	EXTENSION SPRING
48	2A		G01-4684-04	EXTENSION SPRING
49	2B		G01-4685-04	EXTENSION SPRING
50	1B		G01-4686-14	EXTENSION SPRING
51	3A		G01-4688-14	EXTENSION SPRING
52	3A		G01-4692-24	TORSION COIL SPRING
54	3A		G02-1588-04	FLAT SPRING
55	1B		G13-1297-04	CUSHION
56	1B		G13-1299-14	CUSHION

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD ⚠ indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6370-04) DXM-9B24W

Ref.No.	Add	New	Parts No.	Description	Destination
57	1A		G16-1715-04	SHEET	
61	1B		J11-0675-03	CLAMPER	
64	2A		J19-7210-21	HOLDER	
65	2B		J19-7225-04	HOLDER	
66	1B		J22-0706-03	MOUNTING HARDWARE	
67	1A		J22-0707-12	MOUNTING HARDWARE	
68	1B		J90-1166-11	GUIDE	
69	2B		J90-1168-03	RAIL	
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)	
B	2B		N09-6426-15	MACHINE SCREW	
C	2B		N09-6735-05	TAPTITE SCREW	
D	2B		N09-6737-15	MACHINE SCREW	
E	2B		N09-6738-15	TAPTITE SCREW	
F	2A		N19-2335-14	FLAT WASHER	
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW	
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW	
76	2A		S68-0921-05	PUSH SWITCH	
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY	
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)	
DPU1	2B		X93-2280-00	OPTICAL PICKUP ASSY	

Ref.No.	Add	New	Parts No.	Description	Destination

K: KDC-BT648U **K1**: KDC-X695 **K2**: KDC-X395 **K3**: KDC-348U
M1: KDC-U549BT **M2**: KDC-U4549SD **M3**: KDC-U4549 **E1**: KDC-BT41U **E3**: KDC-4751SD

⚠ indicates safety critical components.