EXPLODED VIEW

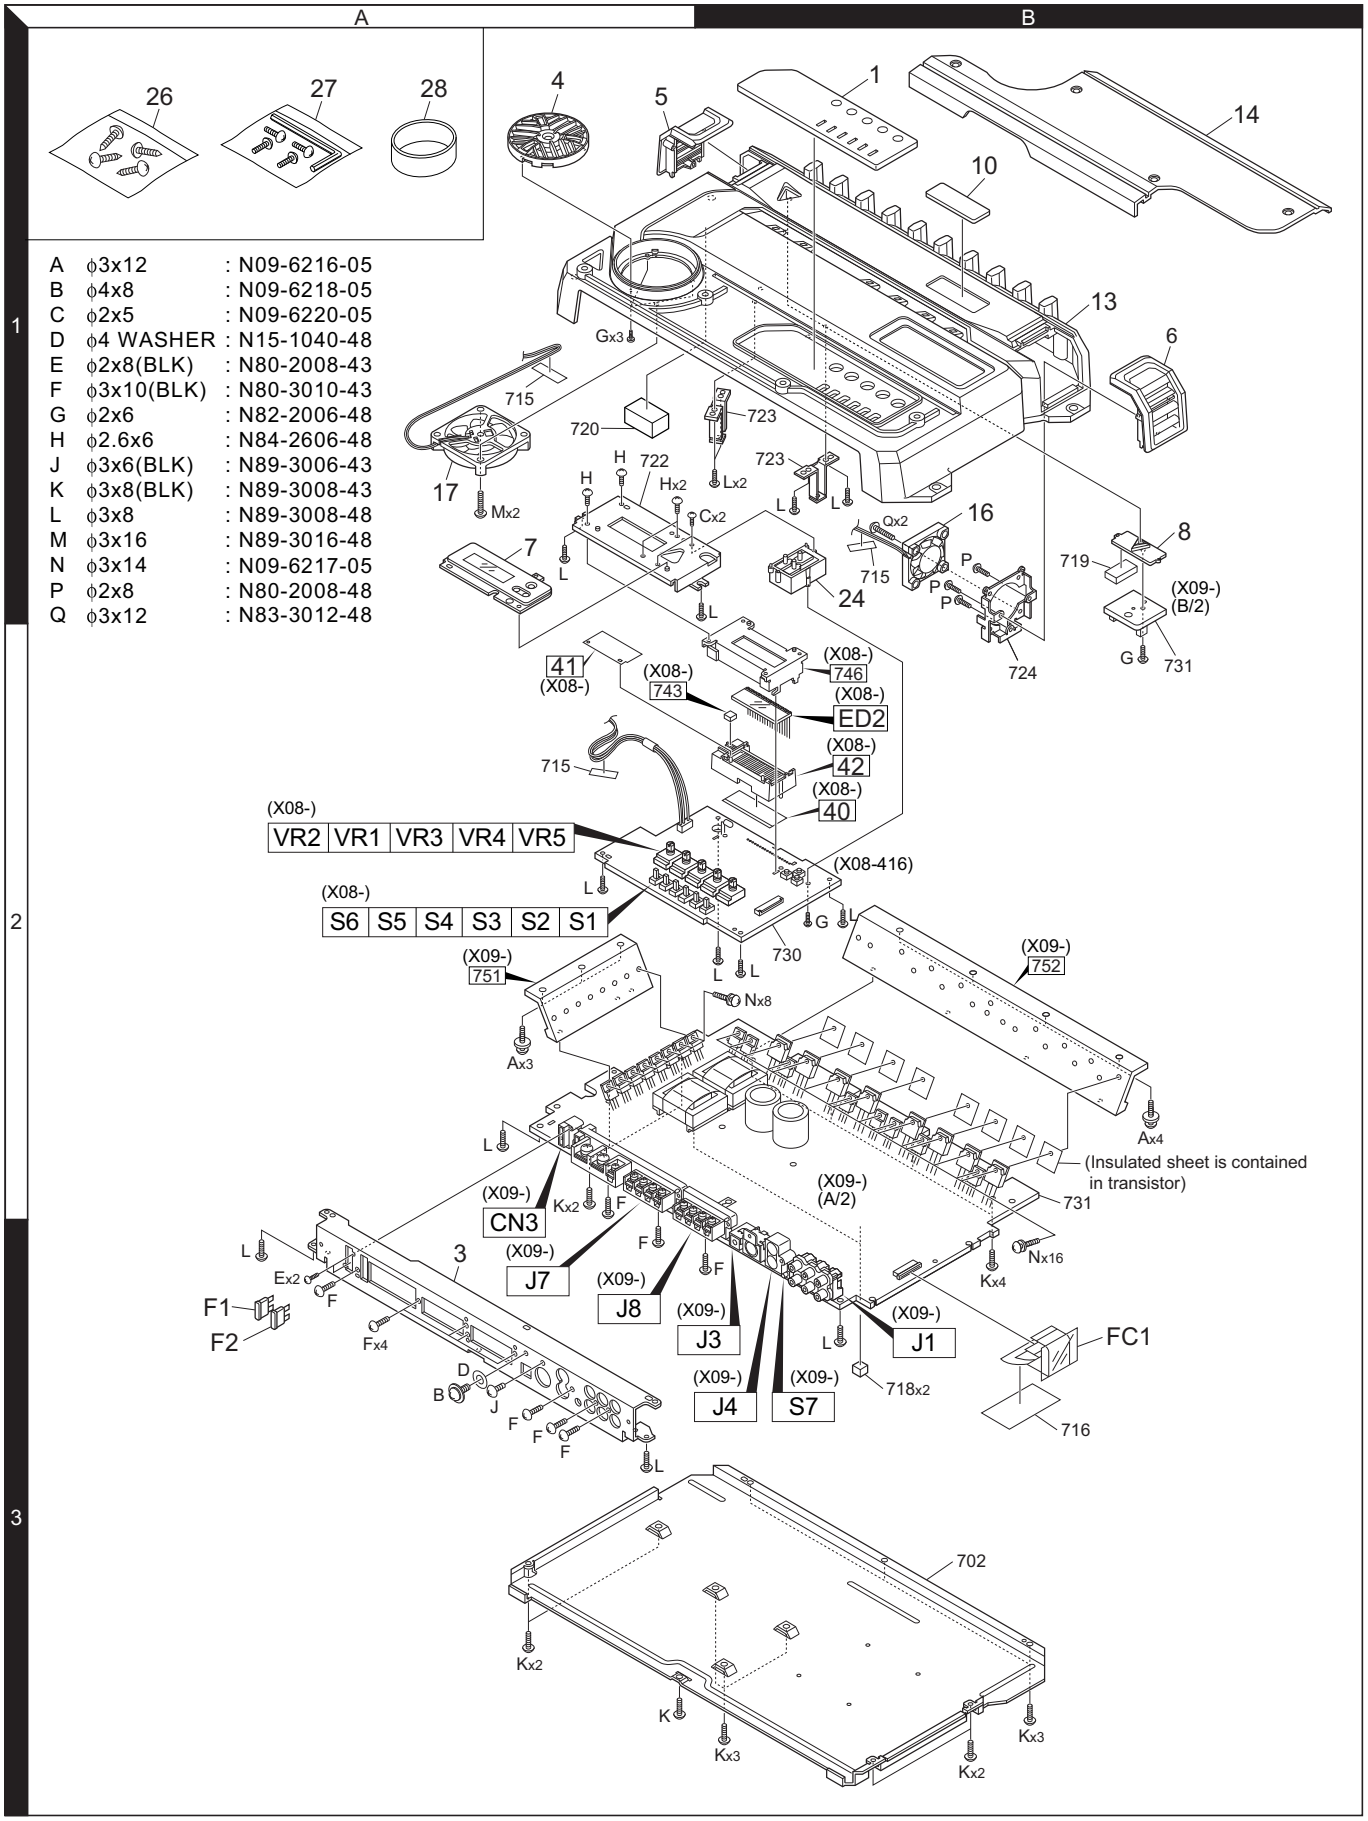

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KAC-X542					
1	1B	✻	A21-6506-02	DRESSING PANEL	
3	3A	✻	A64-3925-02	PANEL	
4	1A	✻	B07-3176-03	ESCUTCHEON	
5	1A	✻	B07-3177-02	ESCUTCHEON	
6	1B	✻	B07-3178-02	ESCUTCHEON	
7	1A		B10-4717-03	FRONT GLASS	
8	1B		B19-2257-03	LIGHTING BOARD	
10	1B	✻	B43-1537-04	BADGE	
-			B46-0682-00	WARRANTY CARD	
-		✻	B64-3395-00	INST. MANUAL (ENG.FRE.SPA)	
FC1	3B		E39-0643-05	FLAT CABLE	
13	1B	✻	F01-3534-01	HEAT SINK	
14	1B	✻	F07-1178-02	COVER (TERMINAL COVER)	
16	1B	✻	F09-1846-15	FAN (40X40X10)	
17	1A		F09-1885-15	FAN (60X60X11.5)	
⚠ F1,2	3A		F52-0015-05	FUSE (BLADE TYPE) (30A)	
-			H10-4894-13	POLYSTYRENE FOAMED FIXTURE	
-			H13-2056-04	CARTON BOARD	
-			H25-1199-04	PROTECTION BAG	
-			H25-1200-04	PROTECTION BAG (250X350X0.03)	
-		✻	H54-3783-03	ITEM CARTON CASE	
24	1B		K24-4146-03	PUSH KNOB (VR CAP)	
26	1A		N99-1577-15	SCREW SET	
27	1A		N99-1770-15	SCREW & WRENCH KEY SET	
A	2A		N09-6216-05	TAPTITE SCREW (3X12)	
B	3A		N09-6218-05	TAPTITE SCREW (4X8)	
C	1B		N09-6220-05	MACHINE SCREW (2X5)	
D	3A		N15-1040-48	FLAT WASHER	
E	3A		N80-2008-43	PAN HEAD TAPTITE SCREW	
F	3A		N80-3010-43	PAN HEAD TAPTITE SCREW	
G	1A		N82-2006-48	BINDING HEAD TAPTITE SCREW	
H	1A		N84-2606-48	PAN HEAD TAPTITE SCREW	
J	3A		N89-3006-43	BINDING HEAD TAPTITE SCREW	
K	3B		N89-3008-43	BINDING HEAD TAPTITE SCREW	
L	2B		N89-3008-48	BINDING HEAD TAPTITE SCREW	
M	1A		N89-3016-48	BINDING HEAD TAPTITE SCREW	
P	1B		N80-2008-48	PAN HEAD TAPTITE SCREW	
Q	1B		N83-3012-48	PAN HEAD TAPTITE SCREW	
28	1A		W01-1606-05	ACCESSORY	
PREAMPLIFIER UNIT (X08-4160-11)					
40	2B		B11-1446-04	REFLECTION SHEET	
41	2A		B11-1447-04	OPTICAL DIFFUSER	
42	2B		B19-2258-12	LIGHTING BOARD	
D2			B30-1641-05	LED	
ED2	2B		B38-1150-05	LCD ASSY	
C1,2			CK73GB1H103K	CHIP C 0.010UF K	
C3-8			CK73FB1H224K	CHIP C 0.22UF K	
C9,10			CD04AS1H010M	ELECTRO 1UF 50WV	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CD04AS1V100M	ELECTRO 10UF 35WV	
C14-17			CD04AS1V100M	ELECTRO 10UF 35WV	
C18,19			CK73GB1H103K	CHIP C 0.010UF K	
C20,21			CD04AS1V100M	ELECTRO 10UF 35WV	
C22,23			CK73GB1H104K	CHIP C 0.10UF K	
C24,25			CK73FB1H224K	CHIP C 0.22UF K	
C26,27			CD04AS1V100M	ELECTRO 10UF 35WV	
C28,29			CK73GB1H103K	CHIP C 0.010UF K	
C30			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73FB1E154K	CHIP C 0.15UF K	
C32			CK73GB1H223K	CHIP C 0.022UF K	
C33,34			CK73GB1H103K	CHIP C 0.010UF K	
C36			CD04AS1V100M	ELECTRO 10UF 35WV	
C49,50			CK73GB1H102K	CHIP C 1000PF K	
C51			CK73GB1H103K	CHIP C 0.010UF K	
C52			CD04AS1V100M	ELECTRO 10UF 35WV	
C53			CK73GB1H103K	CHIP C 0.010UF K	
C61,62			CK73FB1H224K	CHIP C 0.22UF K	
C63,64			CD04AS1V100M	ELECTRO 10UF 35WV	
C72			CK73GB1H104K	CHIP C 0.10UF K	
C73			CK73FB1E154K	CHIP C 0.15UF K	
C75			CD04AS1V100M	ELECTRO 10UF 35WV	
C76			CK73GB1H333K	CHIP C 0.033UF K	
C101,102			CD04AS1V100M	ELECTRO 10UF 35WV	
C103,104			CK73GB1H104K	CHIP C 0.10UF K	
C105,106			CK73FB1H224K	CHIP C 0.22UF K	
C107,108			CD04AS1V100M	ELECTRO 10UF 35WV	
C109			CC73GCH1H470J	CHIP C 47PF J	
C110			CC73GCH1H101J	CHIP C 100PF J	
C114,115			CD04AS1V100M	ELECTRO 10UF 35WV	
C200			CD04AS1V100M	ELECTRO 10UF 35WV	
C201			CK73GB1H103K	CHIP C 0.010UF K	
C202,203			CK73GB1H473K	CHIP C 0.047UF K	
C204			CK73GB1H821K	CHIP C 820PF K	
C900-905			CK73GB1H103K	CHIP C 0.010UF K	
C906			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2186-05	FLAT CABLE CONNECTOR	
CN2			E41-0941-05	PIN ASSY	
WH2			E39-0655-05	WIRING HARNESS	
R1,2			RK73GB2A473J	CHIP R 47K J 1/10W	
R3,4			RK73GB2A134J	CHIP R 130K J 1/10W	
R5,6			RK73GB2A223J	CHIP R 22K J 1/10W	
R7,8			RK73GB2A563J	CHIP R 56K J 1/10W	
R9			RK73GB2A473J	CHIP R 47K J 1/10W	
R12,13			RK73GB2A473J	CHIP R 47K J 1/10W	
R14-17			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R18,19			RK73GB2A103J	CHIP R 10K J 1/10W	
R20,21			RK73GB2A473J	CHIP R 47K J 1/10W	
R22,23			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R24,25			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R26,27			RK73GB2A563J	CHIP R 56K J 1/10W	
R28,29			RK73GB2A473J	CHIP R 47K J 1/10W	
R32,33			RK73GB2A153J	CHIP R 15K J 1/10W	
R35			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R36			RK73GB2A222J	CHIP R 2.2K J 1/10W	

E : Europe **K** : North America **M** : Other Areas **E** : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

PREAMPLIFIER UNIT (X08-4160-11)

Ref. No.	Add	New	Parts No.	Description	Destination
R37			RK73GB2A473J	CHIP R 47K J 1/10W	
R38			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R42			RK73GB2A153J	CHIP R 15K J 1/10W	
R43			RK73GB2A473J	CHIP R 47K J 1/10W	
R50,51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52			RK73GB2A203J	CHIP R 20K J 1/10W	
R53,54			RK73GB2A471J	CHIP R 470 J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R60,61			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R101,102			RK73GB2A473J	CHIP R 47K J 1/10W	
R103			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R104			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R105			RK73GB2A563J	CHIP R 56K J 1/10W	
R107			RK73GB2A473J	CHIP R 47K J 1/10W	
R108			RK73GB2A563J	CHIP R 56K J 1/10W	
R110,111			RK73GB2A473J	CHIP R 47K J 1/10W	
R112			RK73GB2A103J	CHIP R 10K J 1/10W	
R114			RK73GB2A203J	CHIP R 20K J 1/10W	
R115,116			RK73GB2A473J	CHIP R 47K J 1/10W	
R122			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R126			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R128,129			RK73GB2A471J	CHIP R 470 J 1/10W	
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R201			RK73GB2A683J	CHIP R 68K J 1/10W	
R202-205			RK73GB2A471J	CHIP R 470 J 1/10W	
R206-209			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R210			RK73GB2A104J	CHIP R 100K J 1/10W	
R211			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R213			RK73GB2A103J	CHIP R 10K J 1/10W	
R215			RK73GB2A103J	CHIP R 10K J 1/10W	
R217			RK73GB2A103J	CHIP R 10K J 1/10W	
R228,229			RD14BB2C391J	RD 390 J 1/6W	
R230-233			RK73GB2A101J	CHIP R 100 J 1/10W	
R237,238			RK73GB2A393J	CHIP R 39K J 1/10W	
R239,240			RK73GB2A473J	CHIP R 47K J 1/10W	
R241			RK73GB2A103J	CHIP R 10K J 1/10W	
R242			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R243			RK73GB2A224J	CHIP R 220K J 1/10W	
R244			RK73GB2A123J	CHIP R 12K J 1/10W	
R245			RK73GB2A101J	CHIP R 100 J 1/10W	
R246			RK73GB2A103J	CHIP R 10K J 1/10W	
R247,248			RK73GB2A150J	CHIP R 15 J 1/10W	
R249,250			RK73GB2A473J	CHIP R 47K J 1/10W	
VR1,2	2A		R31-0241-05	VARIABLE RESISTOR 50K (C)	
VR3	2A		R31-0238-05	VARIABLE RESISTOR 10K (A)	
VR4	2A		R31-0241-05	VARIABLE RESISTOR 50K (C)	
VR5	2A		R31-0238-05	VARIABLE RESISTOR 10K (A)	
S1-5	2A		S62-0873-05	SLIDE SWITCH	
S6	2A		S62-0874-05	SLIDE SWITCH	
S7-9			S70-0922-05	TACT SWITCH	
D1		*	02CZ8.2-F(Y)	ZENER DIODE	
IC1,2			NJM2058M-ZB	ANALOGUE IC	
IC4			NJM2058M-ZB	ANALOGUE IC	
IC5,6			NJM4565MD-ZB	ANALOGUE IC	
IC7			LC75853NE-E	MOS-IC	
IC8			E-TDA7409DTR	ANALOGUE IC	

AUDIO UNIT (X09-5780-11)

Ref. No.	Add	New	Parts No.	Description	Destination
D92		*	B30-1743-05	LED (RED LED)	
C1			C90-5557-05	ELECTRO 10UF 25WV	
C2			CD04BJ1E470M	ELECTRO 47UF 25WV	
C3			CQ93FMG1H102J	MYLAR 1000PF J	
C4			CD04BJ1A101M	ELECTRO 100UF 10WV	
C5			CD04BJ1H100M	ELECTRO 10UF 50WV	
C6-10			CK73GB1H103K	CHIP C 0.010UF K	
C11,12			CD04BC1C392M	ELECTRO 3900UF 16WV	
C13			CK73GB1H103K	CHIP C 0.010UF K	
C14			CD04BJ1H100M	ELECTRO 10UF 50WV	
C17			CD04BJ1H100M	ELECTRO 10UF 50WV	
C19,20			CD04BJ1E470M	ELECTRO 47UF 25WV	
C21,22			CK73GB1H103K	CHIP C 0.010UF K	
C23,24			CQ93FMG1H152J	MYLAR 1500PF J	
C27,28			CD04BJ1H100M	ELECTRO 10UF 50WV	
C29			CD04BJ1E221M	ELECTRO 220UF 25WV	
C30			CK73GB1H103K	CHIP C 0.010UF K	
C31,32			CC73GCH1H120J	CHIP C 12PF J	
C33,34			CK73GB1H103K	CHIP C 0.010UF K	
C35,36			C90-5691-05	ELECTRO 4700UF 42WV	
C37,38			CK73GB1H103K	CHIP C 0.010UF K	
C50			CD04BJ1H100M	ELECTRO 10UF 50WV	
C51			CD04BJ1H010M	ELECTRO 1.0UF 50WV	
C52			CD04BJ1E470M	ELECTRO 47UF 25WV	
C53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CD04BJ1H100M	ELECTRO 10UF 50WV	
C55			CK73GB1H103K	CHIP C 0.010UF K	
C69			CD04BJ1H100M	ELECTRO 10UF 50WV	
C70			CK73GB1H103K	CHIP C 0.010UF K	
C72			CD04BJ1A101M	ELECTRO 100UF 10WV	
C75			CD04BJ1H100M	ELECTRO 10UF 50WV	
C76			CK73GB1H103K	CHIP C 0.010UF K	
C77			CD04BJ1A221M	ELECTRO 220UF 10WV	
C78			CK73GB1H103K	CHIP C 0.010UF K	
C80			CD04BJ1H100M	ELECTRO 10UF 50WV	
C81			CD04BJ1E470M	ELECTRO 47UF 25WV	
C82			CK73GB1H103K	CHIP C 0.010UF K	
C85			CD04BJ1A101M	ELECTRO 100UF 10WV	
C86			CD04BJ1H2R2M	ELECTRO 2.2UF 50WV	
C98,99			CK73GB1H103K	CHIP C 0.010UF K	
C100			CQ93FMG1H102J	MYLAR 1000PF J	
C101,102			CK73GB1H102K	CHIP C 1000PF K	
C103,104			CD04BJ1H100M	ELECTRO 10UF 50WV	
C105,106			CC73GCH1H150J	CHIP C 15PF J	
C107			CK73FB1H104K	CHIP C 0.10UF K	
C113,114			CC73GCH1H150J	CHIP C 15PF J	
C115,116			CD04BJ1H100M	ELECTRO 10UF 50WV	
C124			CK73FB1H104K	CHIP C 0.10UF K	
C125			CK73GB1H471K	CHIP C 470PF K	
C126			CK73GB1H102K	CHIP C 1000PF K	
C131,132			CC73GCH1H150J	CHIP C 15PF J	

E : Europe **K** : North America **M** : Other Areas **E** : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-5780-11)

Ref. No.	Add	New	Parts No.	Description			Destination
C150			CD04BJ1C220M	ELECTRO	22UF	16WV	
C161			CD04BJ1H221M	ELECTRO	220UF	50WV	
C200			CQ93FMG1H102J	MYLAR	1000PF	J	
C201,202			CK73GB1H102K	CHIP C	1000PF	K	
C203,204			CD04BJ1H100M	ELECTRO	10UF	50WV	
C205,206			CC73GCH1H150J	CHIP C	15PF	J	
C213,214			CC73GCH1H150J	CHIP C	15PF	J	
C215,216			CD04BJ1C220M	ELECTRO	22UF	16WV	
C224			CK73FB1H104K	CHIP C	0.10UF	K	
C225			CK73GB1H471K	CHIP C	470PF	K	
C226			CK73GB1H102K	CHIP C	1000PF	K	
C231,232			CC73GCH1H150J	CHIP C	15PF	J	
C250			CD04BJ1C220M	ELECTRO	22UF	16WV	
C255			CD04BJ1H100M	ELECTRO	10UF	50WV	
C301,302			CD04BJ1H100M	ELECTRO	10UF	50WV	
C303,304			CK73GB1H471K	CHIP C	470PF	K	
C305,306			CQ93FMG1H472J	MYLAR	4700PF	J	
C307,308			CD04BJ1E470M	ELECTRO	47UF	25WV	
C309,310			CC45FSL1H220J	CERAMIC	22PF	J	
C311,312			CC45FSL1H101J	CERAMIC	100PF	J	
C313,314			CC45FSL1H121J	CERAMIC	120PF	J	
C315,316			CD04BJ1H100M	ELECTRO	10UF	50WV	
C319-322			CK73GB1H682K	CHIP C	6800PF	K	
C350,351			CQ93FMG1H473J	MYLAR	0.047UF	J	
C352-355			CK73GB1H102K	CHIP C	1000PF	K	
C363,364			CK73GB1H221K	CHIP C	220PF	K	
C401,402			CD04BJ1H100M	ELECTRO	10UF	50WV	
C403,404			CK73GB1H681K	CHIP C	680PF	K	
C405,406			CQ93FMG1H472J	MYLAR	4700PF	J	
C407,408			CD04BJ1E470M	ELECTRO	47UF	25WV	
C409,410			CC45FSL1H220J	CERAMIC	22PF	J	
C411,412			CC45FSL1H101J	CERAMIC	100PF	J	
C413,414			CC45FSL1H121J	CERAMIC	120PF	J	
C415,416			CD04BJ1H100M	ELECTRO	10UF	50WV	
C419-422			CK73GB1H682K	CHIP C	6800PF	K	
C450,451			CQ93FMG1H473J	MYLAR	0.047UF	J	
C452-455			CK73GB1H102K	CHIP C	1000PF	K	
C461			CD04BJ1H221M	ELECTRO	220UF	50WV	
C463,464			CK73GB1H221K	CHIP C	220PF	K	
C501,502			CK73GB1H102K	CHIP C	1000PF	K	
C503			CK73GB1H103K	CHIP C	0.010UF	K	
C504			CK73GB1H104K	CHIP C	0.10UF	K	
C506			C90-5557-05	ELECTRO	10UF	25WV	
C507			CK73GB1H104K	CHIP C	0.10UF	K	
C508			CD04BJ1E470M	ELECTRO	47UF	25WV	
C509-511			CC73GCH1H101J	CHIP C	100PF	J	
C512,513			CK73FB1H104K	CHIP C	0.10UF	K	
C515,516			CC73GCH1H101J	CHIP C	100PF	J	
C517			CK73FB1H104K	CHIP C	0.10UF	K	
C902			CD04BC1C392M	ELECTRO	3900UF	16WV	
C920,921			CK73GB1H103K	CHIP C	0.010UF	K	
CN1			E41-0928-05	PIN ASSY (3P)			
CN2			E41-0927-05	PIN ASSY (2P)			
CN4			E41-2203-05	FLAT CABLE CONNECTOR (30P)			

Ref. No.	Add	New	Parts No.	Description			Destination
J1	3B		E63-0922-05	PIN JACK (6P)			
J3	3B		E56-0856-05	CYLINDRICAL RECEPTACLE (13P)			
J4	3B		E56-0853-05	CYLINDRICAL RECEPTACLE (4PX2)			
J7	3A		E70-0838-05	SCREW TERMINAL BOARD (7P)			
J8	3A		E70-0840-05	SCREW TERMINAL BOARD (4P)			
⚠ CN3	2A		J13-0602-05	FUSE HOLDER			
L1			L33-1972-05	CHOKE COIL (25UH)			
L3,4			L19-0755-05	TRANSFORMER FOR CONVERTER			
L5			L19-0758-05	TRANSFORMER FOR CONVERTER			
L9			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)			
X1			L77-2844-05	CRYSTAL RESONATOR (12.288MHZ)			
F	3A		N80-3010-43	PAN HEAD TAPTITE SCREW			
K	3B		N89-3008-43	BINDING HEAD TAPTITE SCREW			
N	2B		N09-6217-05	TAPTITE SCREW (3X14)			
R1			RK73GB2A153J	CHIP R	15K	J 1/10W	
R2			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R3			RK73GB2A104J	CHIP R	100K	J 1/10W	
R4			RD14BB2C182J	RD	1.8K	J 1/6W	
R7,8			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R9,10			RK73GB2A560J	CHIP R	56	J 1/10W	
R11,12			RK73GB2A100J	CHIP R	10	J 1/10W	
R13,14			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R17			RD14BB2C332J	RD	3.3K	J 1/6W	
R19			RK73GB2A113J	CHIP R	11K	J 1/10W	
R20			RK73GB2A103J	CHIP R	10K	J 1/10W	
R21			RK73FB2B101J	CHIP R	100	J 1/8W	
R22			RD14BB2C622J	RD	6.2K	J 1/6W	
R23,24			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R25,26			RD14BB2C183J	RD	18K	J 1/6W	
R32			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R40			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R45			RK73GB2A333J	CHIP R	33K	J 1/10W	
R46			RK73GB2A511J	CHIP R	510	J 1/10W	
R47			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R48			RK73GB2A103J	CHIP R	10K	J 1/10W	
R50			RK73GB2A103J	CHIP R	10K	J 1/10W	
R51			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R58			RK73GB2A104J	CHIP R	100K	J 1/10W	
R59			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R60			RK73GB2A473J	CHIP R	47K	J 1/10W	
R62			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R63			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R64			RK73GB2A103J	CHIP R	10K	J 1/10W	
R65			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R66			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R67			RK73GB2A103J	CHIP R	10K	J 1/10W	
R68			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R69-75			RK73GB2A103J	CHIP R	10K	J 1/10W	
R76			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R78			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R79,80			RK73GB2A470J	CHIP R	47	J 1/10W	
R81			RK73GB2A223J	CHIP R	22K	J 1/10W	
R82			RK73GB2A331J	CHIP R	330	J 1/10W	
R83			RK73GB2A153J	CHIP R	15K	J 1/10W	

E : Europe **K** : North America **M** : Other Areas **E** : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-5780-11)

Ref. No.	Add	New	Parts No.	Description			Destination
R84			RK73GB2A473J	CHIP R	47K	J 1/10W	
R86			RK73GB2A123J	CHIP R	12K	J 1/10W	
R87			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R90			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R91			RK73GB2A103J	CHIP R	10K	J 1/10W	
R92-95			RK73GB2A473J	CHIP R	47K	J 1/10W	
R96			RK73GB2A104J	CHIP R	100K	J 1/10W	
R97			RK73GB2A103J	CHIP R	10K	J 1/10W	
R98			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R99			RK73GB2A103J	CHIP R	10K	J 1/10W	
R100			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R101,102			RD14BB2C102J	RD	1.0K	J 1/6W	
R103-108			RK73GB2A103J	CHIP R	10K	J 1/10W	
R109-112			RK73GH2A103D	CHIP R	10K	D 1/10W	
R123-126			RK73GH2A103D	CHIP R	10K	D 1/10W	
R127,128			RK73GB2A223J	CHIP R	22K	J 1/10W	
R161			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R170			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R172			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R174			RK73GB2A103J	CHIP R	10K	J 1/10W	
R179			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R187			RK73GB2A680J	CHIP R	68	J 1/10W	
R194-196			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R197			RD14BB2C301J	RD	300	J 1/6W	
R200			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R201,202			RD14BB2C102J	RD	1.0K	J 1/6W	
R203-208			RK73GB2A103J	CHIP R	10K	J 1/10W	
R209-212			RK73GH2A103D	CHIP R	10K	D 1/10W	
R223-226			RK73GH2A103D	CHIP R	10K	D 1/10W	
R227,228			RK73GB2A362J	CHIP R	3.6K	J 1/10W	
R232			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R241			RK73GB2A512J	CHIP R	5.1K	J 1/10W	
R270			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R272			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R294-296			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R297			RD14BB2C301J	RD	300	J 1/6W	
R301,302			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R303,304			RK73FB2B223J	CHIP R	22K	J 1/8W	
R305-308			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R309,310			RK73FB2B101J	CHIP R	100	J 1/8W	
R311,312			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R313,314			RK73FB2B223J	CHIP R	22K	J 1/8W	
R315-318			RK73FB2B151J	CHIP R	150	J 1/8W	
R319-322			RD14NB2E432J	RD	4.3K	J 1/4W	
R323,324			RK73FB2B151J	CHIP R	150	J 1/8W	
R325,326			RK73GB2A511J	CHIP R	510	J 1/10W	
R328			RD14NB2E101J	RD	100	J 1/4W	
R329-331			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R333-335			RD14NB2E101J	RD	100	J 1/4W	
R337-340			RK73FB2B152J	CHIP R	1.5K	J 1/8W	
R341-344			RD14NB2E4R7J	RD	4.7	J 1/4W	
R345-348			R92-0205-05	METAL-PLATE	0.1	K 2W	
R351			RK73GB2A330J	CHIP R	33	J 1/10W	
R355,356			RK73FB2B682J	CHIP R	6.8K	J 1/8W	
R357,358			RK73GB2A182J	CHIP R	1.8K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R359			RD14NB2E221J	RD	220	J 1/4W	
R360			RK73GB2A330J	CHIP R	33	J 1/10W	
R361			RD14NB2E221J	RD	220	J 1/4W	
R363,364			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R365,366			RK73GB2A622J	CHIP R	6.2K	J 1/10W	
R370,371			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R401,402			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R403,404			RK73FB2B223J	CHIP R	22K	J 1/8W	
R405-408			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R409,410			RK73FB2B101J	CHIP R	100	J 1/8W	
R411,412			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R413,414			RK73FB2B223J	CHIP R	22K	J 1/8W	
R416-418			RK73FB2B151J	CHIP R	150	J 1/8W	
R419,420			RD14NB2E432J	RD	4.3K	J 1/4W	
R421			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R422			RD14NB2E432J	RD	4.3K	J 1/4W	
R423,424			RK73FB2B151J	CHIP R	150	J 1/8W	
R425,426			RK73GB2A511J	CHIP R	510	J 1/10W	
R428			RD14NB2E101J	RD	100	J 1/4W	
R429-432			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R433-435			RD14NB2E101J	RD	100	J 1/4W	
R437-440			RK73FB2B152J	CHIP R	1.5K	J 1/8W	
R441-444			RD14NB2E4R7J	RD	4.7	J 1/4W	
R445-448			R92-0205-05	METAL-PLATE	0.1	K 2W	
R451,452			RK73FB2B682J	CHIP R	6.8K	J 1/8W	
R453			RK73FB2B151J	CHIP R	150	J 1/8W	
R454			RD14NB2E221J	RD	220	J 1/4W	
R455			RD14NB2E432J	RD	4.3K	J 1/4W	
R457			RK73GB2A330J	CHIP R	33	J 1/10W	
R458			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R459			RD14NB2E221J	RD	220	J 1/4W	
R460			RK73GB2A330J	CHIP R	33	J 1/10W	
R461			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R463,464			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R465,466			RK73GB2A622J	CHIP R	6.2K	J 1/10W	
R470,471			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R472			RK73GB2A473J	CHIP R	47K	J 1/10W	
R500,501			RD14BB2C102J	RD	1.0K	J 1/6W	
R502			RD14BB2C104J	RD	100K	J 1/6W	
R503			RD14BB2C153J	RD	15K	J 1/6W	
R504			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R505			RK73GB2A103J	CHIP R	10K	J 1/10W	
R506,507			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R508			RK73GB2A473J	CHIP R	47K	J 1/10W	
R509,510			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R511			RK73GB2A470J	CHIP R	47	J 1/10W	
R512			RD14BB2C470J	RD	47	J 1/6W	
R513			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R514			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R515			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R516			RD14BB2C153J	RD	15K	J 1/6W	
R517			RK73GB2A123J	CHIP R	12K	J 1/10W	
R518			RK73GB2A203J	CHIP R	20K	J 1/10W	
R519,520			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R521			RK73GB2A123J	CHIP R	12K	J 1/10W	

E : Europe **K** : North America **M** : Other Areas **E** : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-5780-11)

Ref. No.	Add	New	Parts No.	Description	Destination
R522			RK73GB2A203J	CHIP R 20K J 1/10W	
R523			RD14BB2C473J	RD 47K J 1/6W	
R524			RK73GB2A470J	CHIP R 47 J 1/10W	
R525			RD14BB2C470J	RD 47 J 1/6W	
R526-528			RK73GB2A101J	CHIP R 100 J 1/10W	
R529			RD14BB2C221J	RD 220 J 1/6W	
R530,531			RK73GB2A101J	CHIP R 100 J 1/10W	
R532			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R533-536			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R537			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R539-542			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R543			RK73GB2A101J	CHIP R 100 J 1/10W	
R544-546			RK73GB2A103J	CHIP R 10K J 1/10W	
R548-550			RK73GB2A103J	CHIP R 10K J 1/10W	
R555			RK73GB2A103J	CHIP R 10K J 1/10W	
R556			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R560			RK73GB2A473J	CHIP R 47K J 1/10W	
R561,562			RK73GB2A104J	CHIP R 100K J 1/10W	
R563,564			RK73GB2A101J	CHIP R 100 J 1/10W	
R565			RK73GB2A113J	CHIP R 11K J 1/10W	
R566			RK73GB2A103J	CHIP R 10K J 1/10W	
R567			RK73GB2A113J	CHIP R 11K J 1/10W	
R568			RK73GB2A103J	CHIP R 10K J 1/10W	
R569			RK73GB2A113J	CHIP R 11K J 1/10W	
R570			RK73GB2A471J	CHIP R 470 J 1/10W	
R571			RK73GB2A103J	CHIP R 10K J 1/10W	
R572,573			RD14BB2C4R7J	RD 4.7 J 1/6W	
R574			RK73GB2A181J	CHIP R 180 J 1/10W	
R576			RK73GB2A181J	CHIP R 180 J 1/10W	
R577,578			RK73GB2A100J	CHIP R 10 J 1/10W	
R579			RK73GB2A113J	CHIP R 11K J 1/10W	
R580,581			RK73GB2A103J	CHIP R 10K J 1/10W	
R582			RK73GB2A104J	CHIP R 100K J 1/10W	
R590			RK73GB2A473J	CHIP R 47K J 1/10W	
R600,601			RD14BB2C271J	RD 270 J 1/6W	
R602			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R603			RK73GB2A103J	CHIP R 10K J 1/10W	
R604			RK73GB2A100J	CHIP R 10 J 1/10W	
R605			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R606,607			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R610			RK73GB2A104J	CHIP R 100K J 1/10W	
R611			RK73GB2A103J	CHIP R 10K J 1/10W	
R612			RK73GB2A271J	CHIP R 270 J 1/10W	
R613			RK73GB2A103J	CHIP R 10K J 1/10W	
R614			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R619			RK73GB2A153J	CHIP R 15K J 1/10W	
R620			RK73GB2A103J	CHIP R 10K J 1/10W	
R681			RK73GB2A123J	CHIP R 12K J 1/10W	
R905,906			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R933,934			RK73GB2A223J	CHIP R 22K J 1/10W	
R945,946			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R961			RK73GB2A473J	CHIP R 47K J 1/10W	
R964			RK73GB2A153J	CHIP R 15K J 1/10W	
R967			RK73GB2A331J	CHIP R 330 J 1/10W	
R970			RK73GB2A223J	CHIP R 22K J 1/10W	
R973,974			RK73GB2A153J	CHIP R 15K J 1/10W	
VR5-8			R32-0294-05	SEMI FIXED VARIABLE RESISTOR	
W500-502			R92-1252-05	CHIP R 0 OHM J 1/16W	
W503-509			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W510			R92-1252-05	CHIP R 0 OHM J 1/16W	
W511-514			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W515			R92-1252-05	CHIP R 0 OHM J 1/16W	
W516-522			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W523,524			R92-1252-05	CHIP R 0 OHM J 1/16W	
W525-529			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W530			R92-1252-05	CHIP R 0 OHM J 1/16W	
W531-534			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W535,536			R92-1252-05	CHIP R 0 OHM J 1/16W	
W537-541			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W542			R92-1252-05	CHIP R 0 OHM J 1/16W	
W543			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W544-546			R92-1252-05	CHIP R 0 OHM J 1/16W	
W547			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W548			R92-1252-05	CHIP R 0 OHM J 1/16W	
W549			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W550-552			R92-1252-05	CHIP R 0 OHM J 1/16W	
W553			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W554-560			R92-1252-05	CHIP R 0 OHM J 1/16W	
W561			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W562			R92-1252-05	CHIP R 0 OHM J 1/16W	
W563			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W564			R92-1252-05	CHIP R 0 OHM J 1/16W	
W565,566			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W567-572			R92-1252-05	CHIP R 0 OHM J 1/16W	
W573			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W574,575			R92-1252-05	CHIP R 0 OHM J 1/16W	
W576			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W577-579			R92-1252-05	CHIP R 0 OHM J 1/16W	
W580,581			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W582			R92-1252-05	CHIP R 0 OHM J 1/16W	
W583,584			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W585,586			R92-1252-05	CHIP R 0 OHM J 1/16W	
W587,588			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W589,590			R92-1252-05	CHIP R 0 OHM J 1/16W	
W591,592			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W593			R92-1252-05	CHIP R 0 OHM J 1/16W	
W594			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W595-597			R92-1252-05	CHIP R 0 OHM J 1/16W	
W598			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W599-602			R92-1252-05	CHIP R 0 OHM J 1/16W	
W603,604			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W605-607			R92-1252-05	CHIP R 0 OHM J 1/16W	
W608			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W610			R92-1252-05	CHIP R 0 OHM J 1/16W	
W611			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W612			R92-1252-05	CHIP R 0 OHM J 1/16W	
W613,614			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W615			R92-1252-05	CHIP R 0 OHM J 1/16W	
W616			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W617,618			R92-1252-05	CHIP R 0 OHM J 1/16W	

E : Europe **K** : North America **M** : Other Areas **E** : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-5780-11)

Ref. No.	Add	New	Parts No.	Description	Destination
W619-622			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W623,624			R92-1252-05	CHIP R 0 OHM J 1/16W	
W625			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W626			R92-1252-05	CHIP R 0 OHM J 1/16W	
W627			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W628			R92-1252-05	CHIP R 0 OHM J 1/16W	
W629			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W630			R92-1252-05	CHIP R 0 OHM J 1/16W	
W631			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W632,633			R92-1252-05	CHIP R 0 OHM J 1/16W	
W634-636			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W637			R92-1252-05	CHIP R 0 OHM J 1/16W	
W638			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W639,640			R92-1252-05	CHIP R 0 OHM J 1/16W	
W641			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W642-645			R92-1252-05	CHIP R 0 OHM J 1/16W	
W646,647			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W648,649			R92-1252-05	CHIP R 0 OHM J 1/16W	
W650,651			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W652,653			R92-1252-05	CHIP R 0 OHM J 1/16W	
W654			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W655-658			R92-1252-05	CHIP R 0 OHM J 1/16W	
W659			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W660,661			R92-1252-05	CHIP R 0 OHM J 1/16W	
W662-666			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W667-669			R92-1252-05	CHIP R 0 OHM J 1/16W	
W700,701			R92-1252-05	CHIP R 0 OHM J 1/16W	
W702,703			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W704-707			R92-1252-05	CHIP R 0 OHM J 1/16W	
W708			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W709			R92-1252-05	CHIP R 0 OHM J 1/16W	
W710			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W711			R92-1252-05	CHIP R 0 OHM J 1/16W	
W712			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W713-719			R92-1252-05	CHIP R 0 OHM J 1/16W	
S6		*	S79-0853-05	DIP SWITCHES	
S7			S68-0806-05	PUSH SWITCH	
D1,2			RM4ZLF-J1NF	DIODE	
D4			UDZS16B	ZENER DIODE	
D8			RD15JS-AZ(B)	ZENER DIODE	
D9			UDZS6.8B	ZENER DIODE	
D11			UDZS5.1B	ZENER DIODE	
D12			UDZS4.7B	ZENER DIODE	
D13			S5566B-Q	DIODE	
D17			RD16JS-AZ(B)	ZENER DIODE	
D25			FCH20A20	DIODE	
D26			FRH20A20	DIODE	
D29,30			LM1MA142WA-G	DIODE	
D38			UDZS5.1B	ZENER DIODE	
D39			1SS355	DIODE	
D41			1SS355	DIODE	
D62			LM1MA142WK-G	DIODE	
D63			1SS355	DIODE	
D66-70			1SS355	DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D71			UDZS3.3B	ZENER DIODE	
D72			UDZS10B	ZENER DIODE	
D74,75			1SS355	DIODE	
D76			UMZ6.8N	ZENER DIODE	
D78,79			1SS355	DIODE	
D80-82			UMZ6.8N	ZENER DIODE	
D83-85			1SS355	DIODE	
D87,88			UMZ6.8N	ZENER DIODE	
D91			LM1MA142WA-G	DIODE	
D93			LM1MA142WK-G	DIODE	
D100			UMZ6.8N	ZENER DIODE	
D101			LM1MA142WK-G	DIODE	
D102			LM1MA142WA-G	DIODE	
D107			UMZ6.8N	ZENER DIODE	
D151,152			1SS355	DIODE	
D153			LM1MA142WK-G	DIODE	
D154			LM1MA142WA-G	DIODE	
D155			LM1MA142WK-G	DIODE	
D157,158			1SS355	DIODE	
D159			LM1MA142WK-G	DIODE	
D160			LM1MA142WA-G	DIODE	
D161			LM1MA142WK-G	DIODE	
D200			UMZ6.8N	ZENER DIODE	
D201			LM1MA142WK-G	DIODE	
D202,203			LM1MA142WA-G	DIODE	
D301,302			LM1MA142WK-G	DIODE	
D304			LM1MA142WA-G	DIODE	
D305,306			LM1MA142WK-G	DIODE	
D308			LM1MA142WK-G	DIODE	
D401,402			LM1MA142WK-G	DIODE	
D403,404			LM1MA142WA-G	DIODE	
D405			LM1MA142WK-G	DIODE	
D406			UDZS5.1B	ZENER DIODE	
D915			LM1MA142WA-G	DIODE	
D955			LM1MA142WA-G	DIODE	
D958			1SS355	DIODE	
IC1,2			BA14741F	ANALOGUE IC	
IC3		*	784224YGC117A	MICROCONTROLLER IC	
IC4			PST3436UL-E	MOS-IC	
IC6			BA4560F	ANALOGUE IC	
IC8			BA10393F	ANALOGUE IC	
IC9			P82B96PN	ANALOGUE IC	
IC10		*	UPC494GS-A	ANALOGUE IC	
Q1,2			2SC4081	TRANSISTOR	
Q7,8			2SC4097	TRANSISTOR	
Q9,10			2SA1577	TRANSISTOR	
Q11-16			2SK3662-F	FET	
Q17			2SD2012-F	TRANSISTOR	
Q18			2SB1375-F	TRANSISTOR	
Q20			2SB1241	TRANSISTOR	
Q21			DTC114EUA	DIGITAL TRANSISTOR	
Q22			2SB1238	TRANSISTOR	
Q24			2SC4081	TRANSISTOR	
Q25			2SA1576A	TRANSISTOR	
Q26			2SK246(BL)-F	FET	

E : Europe **K** : North America **M** : Other Areas **E** : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-5780-11)

Ref. No.	Add	New	Parts No.	Description	Destination
Q27			2SA992-A(F,E)	TRANSISTOR	
Q30,31			2SC4081	TRANSISTOR	
Q41-44			2SC4081	TRANSISTOR	
Q50			2SC4081	TRANSISTOR	
Q51			2SA1576A	TRANSISTOR	
Q52			2SC4081	TRANSISTOR	
Q53			2SA1576A	TRANSISTOR	
Q54			DTA114EUA	DIGITAL TRANSISTOR	
Q56,57			2SC4081	TRANSISTOR	
Q58,59			2SC945AA(Q,P)	TRANSISTOR	
Q60			2SA1576A	TRANSISTOR	
Q61			2SC4081	TRANSISTOR	
Q62			DTC114EUA	DIGITAL TRANSISTOR	
Q63			DTA114EUA	DIGITAL TRANSISTOR	
Q64			DTC114EUA	DIGITAL TRANSISTOR	
Q65			2SC4081	TRANSISTOR	
Q66,67			2SD1863	TRANSISTOR	
Q73-75			DTA114EUA	DIGITAL TRANSISTOR	
Q77			DTC114EUA	DIGITAL TRANSISTOR	
Q80-83			2SC4081	TRANSISTOR	
Q84			DTC114EUA	DIGITAL TRANSISTOR	
Q85			2SC4081	TRANSISTOR	
Q86			DTC114EUA	DIGITAL TRANSISTOR	
Q90			DTC114EUA	DIGITAL TRANSISTOR	
Q91			DTA114EUA	DIGITAL TRANSISTOR	
Q92			DTC114EUA	DIGITAL TRANSISTOR	
Q93,94			2SA1576A	TRANSISTOR	
Q95			2SC4081	TRANSISTOR	
Q96			2SA1576A	TRANSISTOR	
Q97			DTA114EUA	DIGITAL TRANSISTOR	
Q98			2SA1576A	TRANSISTOR	
Q99			DTA114EUA	DIGITAL TRANSISTOR	
Q210			2SA1376AA(L,K)	TRANSISTOR	
Q212			2SC3419(Y)-F	TRANSISTOR	
Q301-304			2SA992-A(F,E)	TRANSISTOR	
Q305-308			2SC3478AA(L,K)	TRANSISTOR	
Q309			2SA1376AA(L,K)	TRANSISTOR	
Q311			2SC3419(Y)-F	TRANSISTOR	
Q312			2SC2235-F	TRANSISTOR	
Q314			2SA965-F	TRANSISTOR	
Q315,316			2SC1845-A(F,E)	TRANSISTOR	
Q317,318			2SA992-A(F,E)	TRANSISTOR	
Q319			2SC2235-F	TRANSISTOR	
Q320			2SC3856NF	TRANSISTOR	
Q321			2SA965-F	TRANSISTOR	
Q322			2SA1492NF	TRANSISTOR	
Q323			2SC3856NF	TRANSISTOR	
Q325			2SA1492NF	TRANSISTOR	
Q401-404			2SA992-A(F,E)	TRANSISTOR	
Q405-408			2SC3478AA(L,K)	TRANSISTOR	
Q409,410			2SA1376AA(L,K)	TRANSISTOR	
Q411,412			2SC3419(Y)-F	TRANSISTOR	
Q415,416			2SC1845-A(F,E)	TRANSISTOR	
Q417,418			2SA992-A(F,E)	TRANSISTOR	
Q419,420			2SC2235-F	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q421,422			2SA965-F	TRANSISTOR	
Q423,424			2SC3856NF	TRANSISTOR	
Q425,426			2SA1492NF	TRANSISTOR	
Q901,902			2SK3662-F	FET	
Q905,906			2SC4081	TRANSISTOR	
Q945,946			2SC4081	TRANSISTOR	
Q967			DTA114EUA	DIGITAL TRANSISTOR	
TH1-5			NT732ATTD103J	THERMISTOR	

E : Europe **K** : North America **M** : Other Areas **E** : Without Europe

⚠ Indicates safety critical components.