EXPLODED VIEW (KDC-C521FM MECHANISM)

A	φ2x3.5	: N09-4126-05
B	φ2x2.5(BLK)	: N09-4288-05
C	φ2x5	: N86-2005-46
D	φ1.7x1.5(BLK)	: N09-4189-05
E	φ2x6	: N09-4154-05
F	M1.7x3	: N09-4181-05
G	M1.7x2.2	: N39-1722-46
H	φ2x3.5	: N09-6108-05
J	WASHER φ3.8	: N19-2105-14
K	WASHER φ4	: N19-2058-04
L	WASHER φ3.8	: N19-2080-14
M	WASHER φ3.5	: N19-2028-04

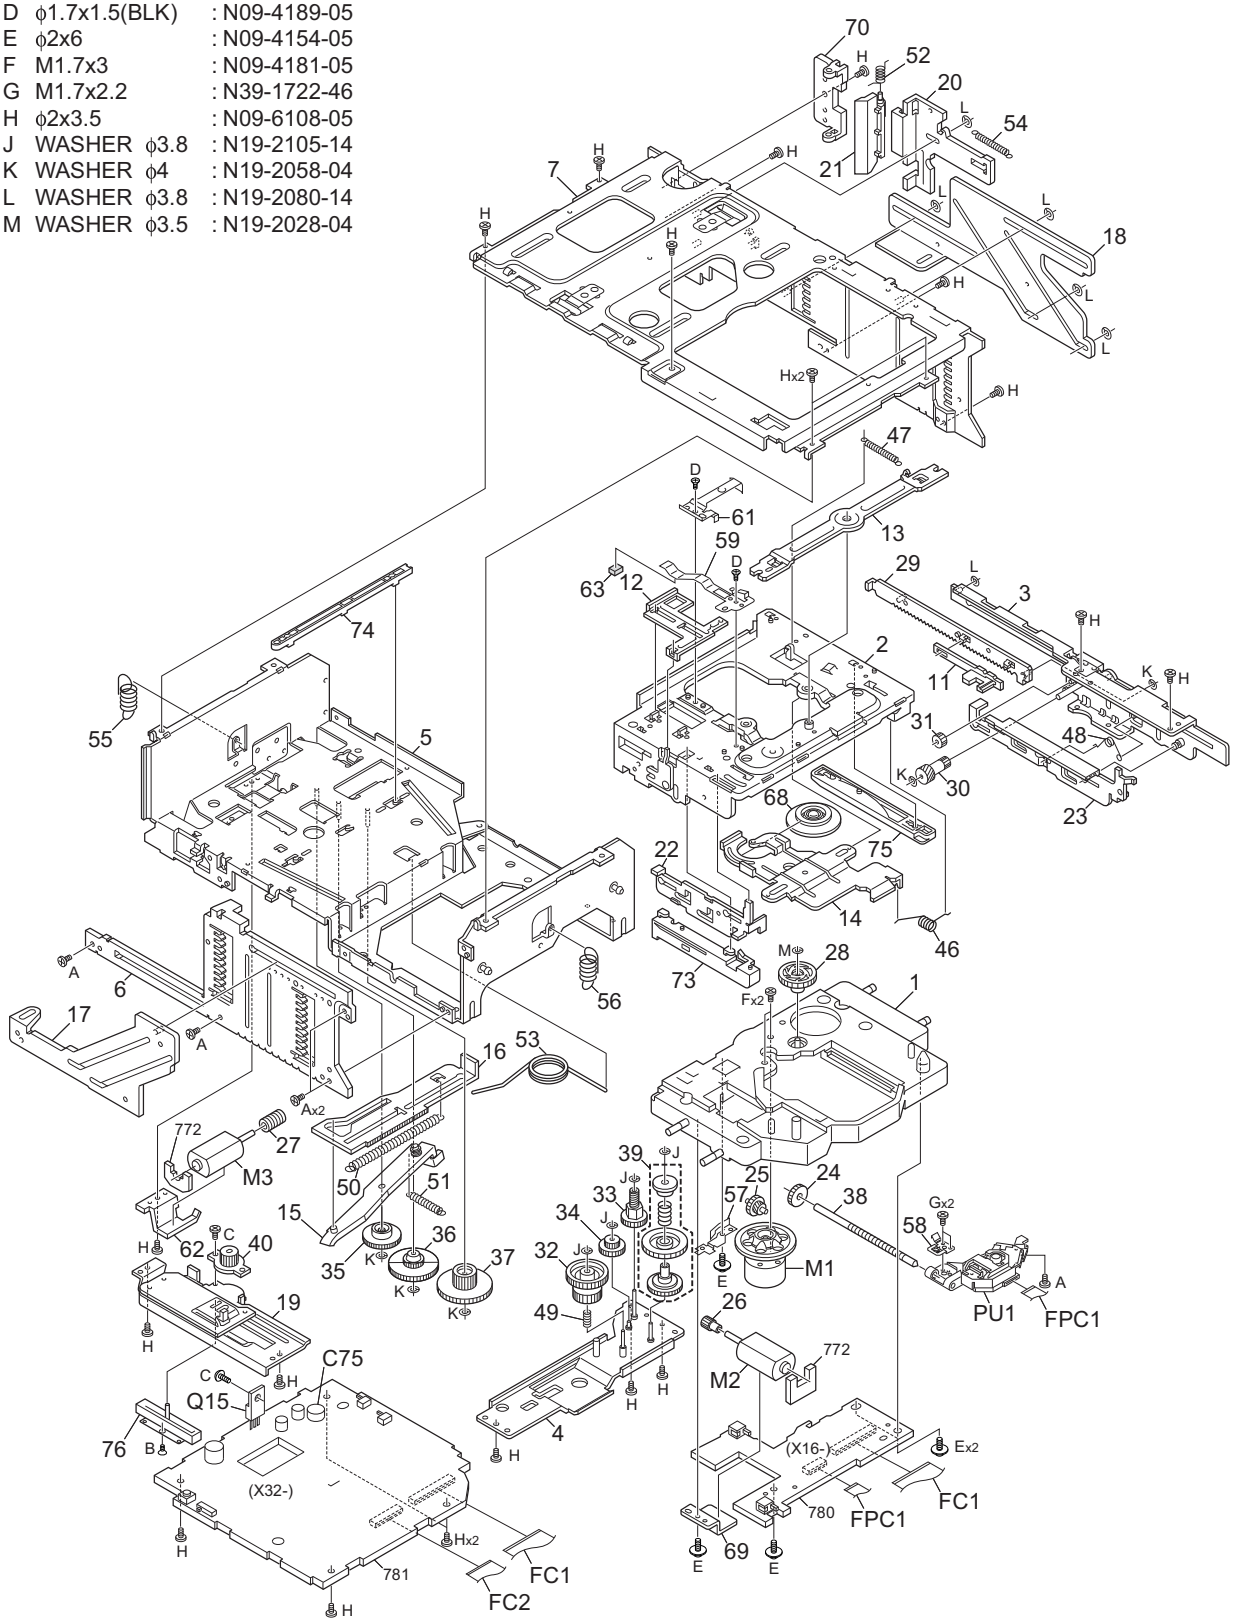

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (KDC-C471FM MECHANISM)

A	φ2x3.5	: N09-4126-05
B	φ2x2.5(BLK)	: N09-4288-05
C	φ2x5	: N86-2005-46
D	φ1.7x1.5(BLK)	: N09-4189-05
E	φ2x6	: N09-4154-05
F	M1.7x3	: N09-4181-05
G	M1.7x2.2	: N39-1722-46
H	φ2x3.5	: N09-6108-05
J	WASHER φ3.8	: N19-2105-14
K	WASHER φ4	: N19-2058-04
L	WASHER φ3.8	: N19-2080-14
M	WASHER φ3.5	: N19-2028-04

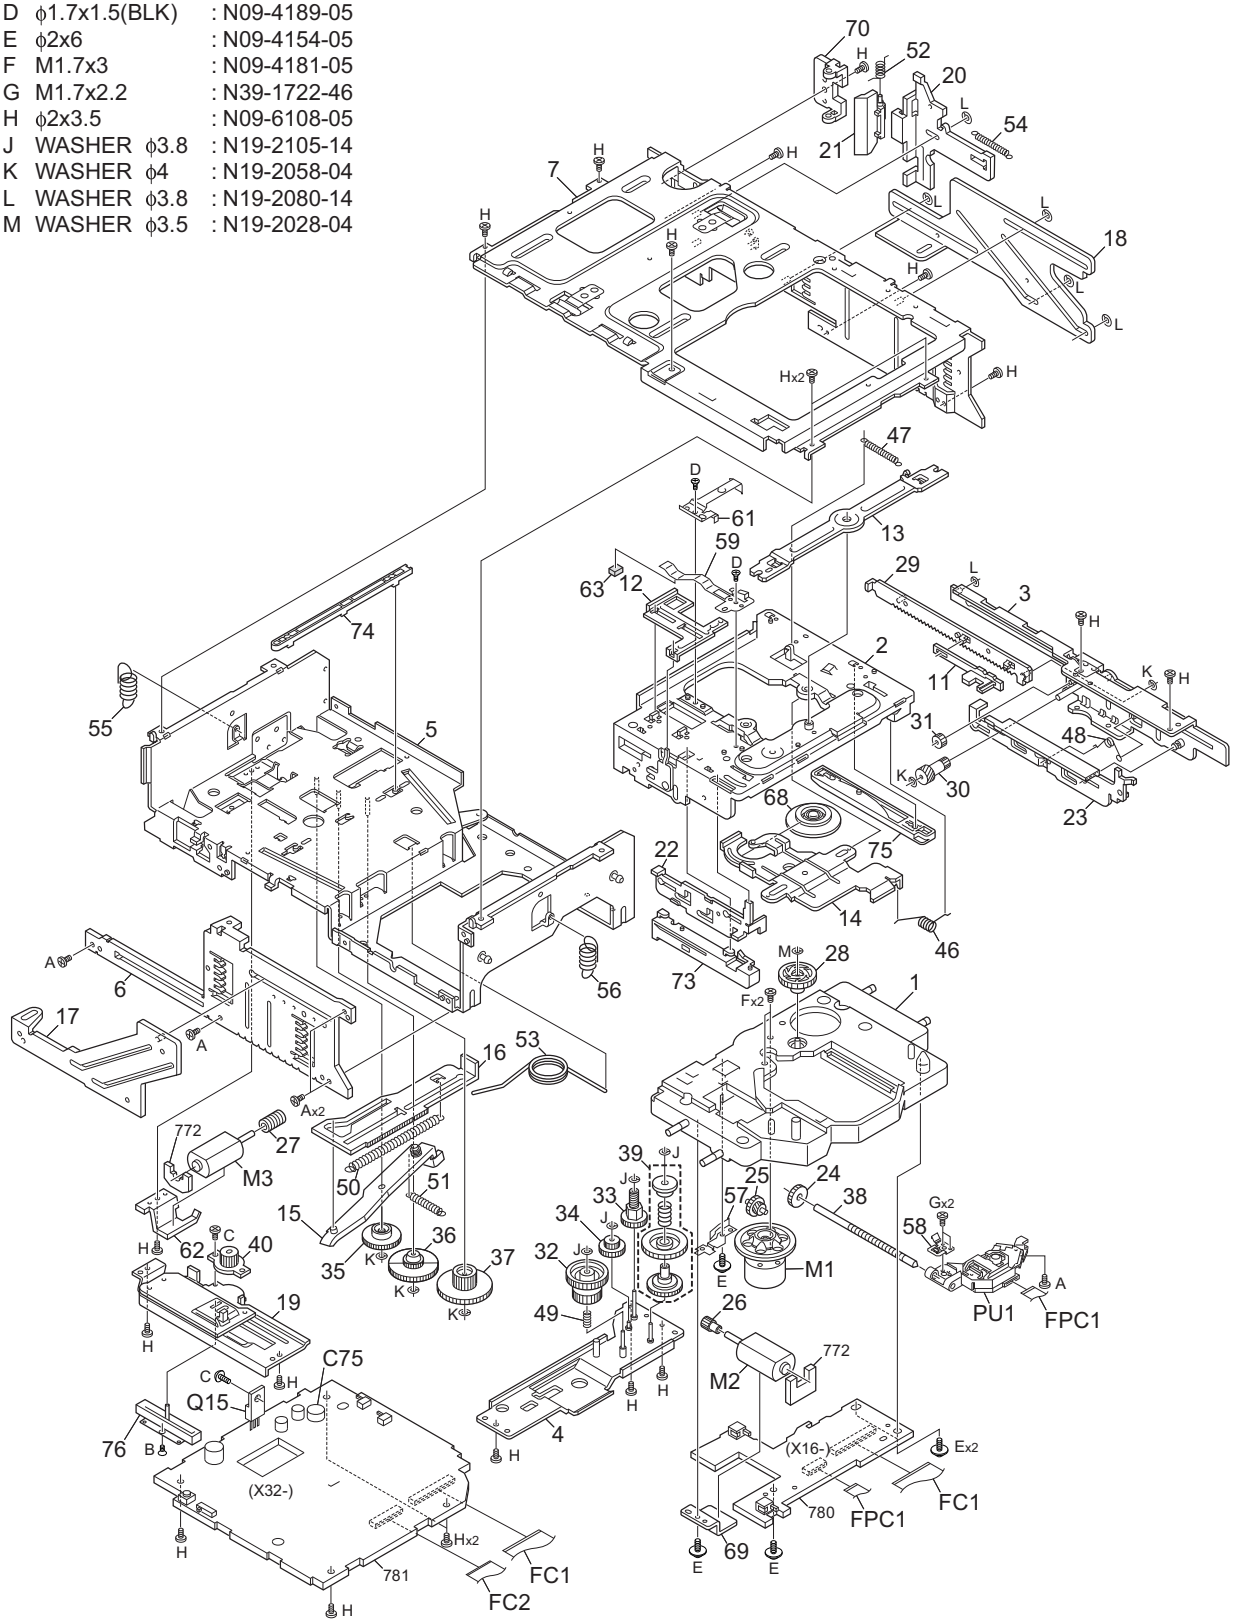

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

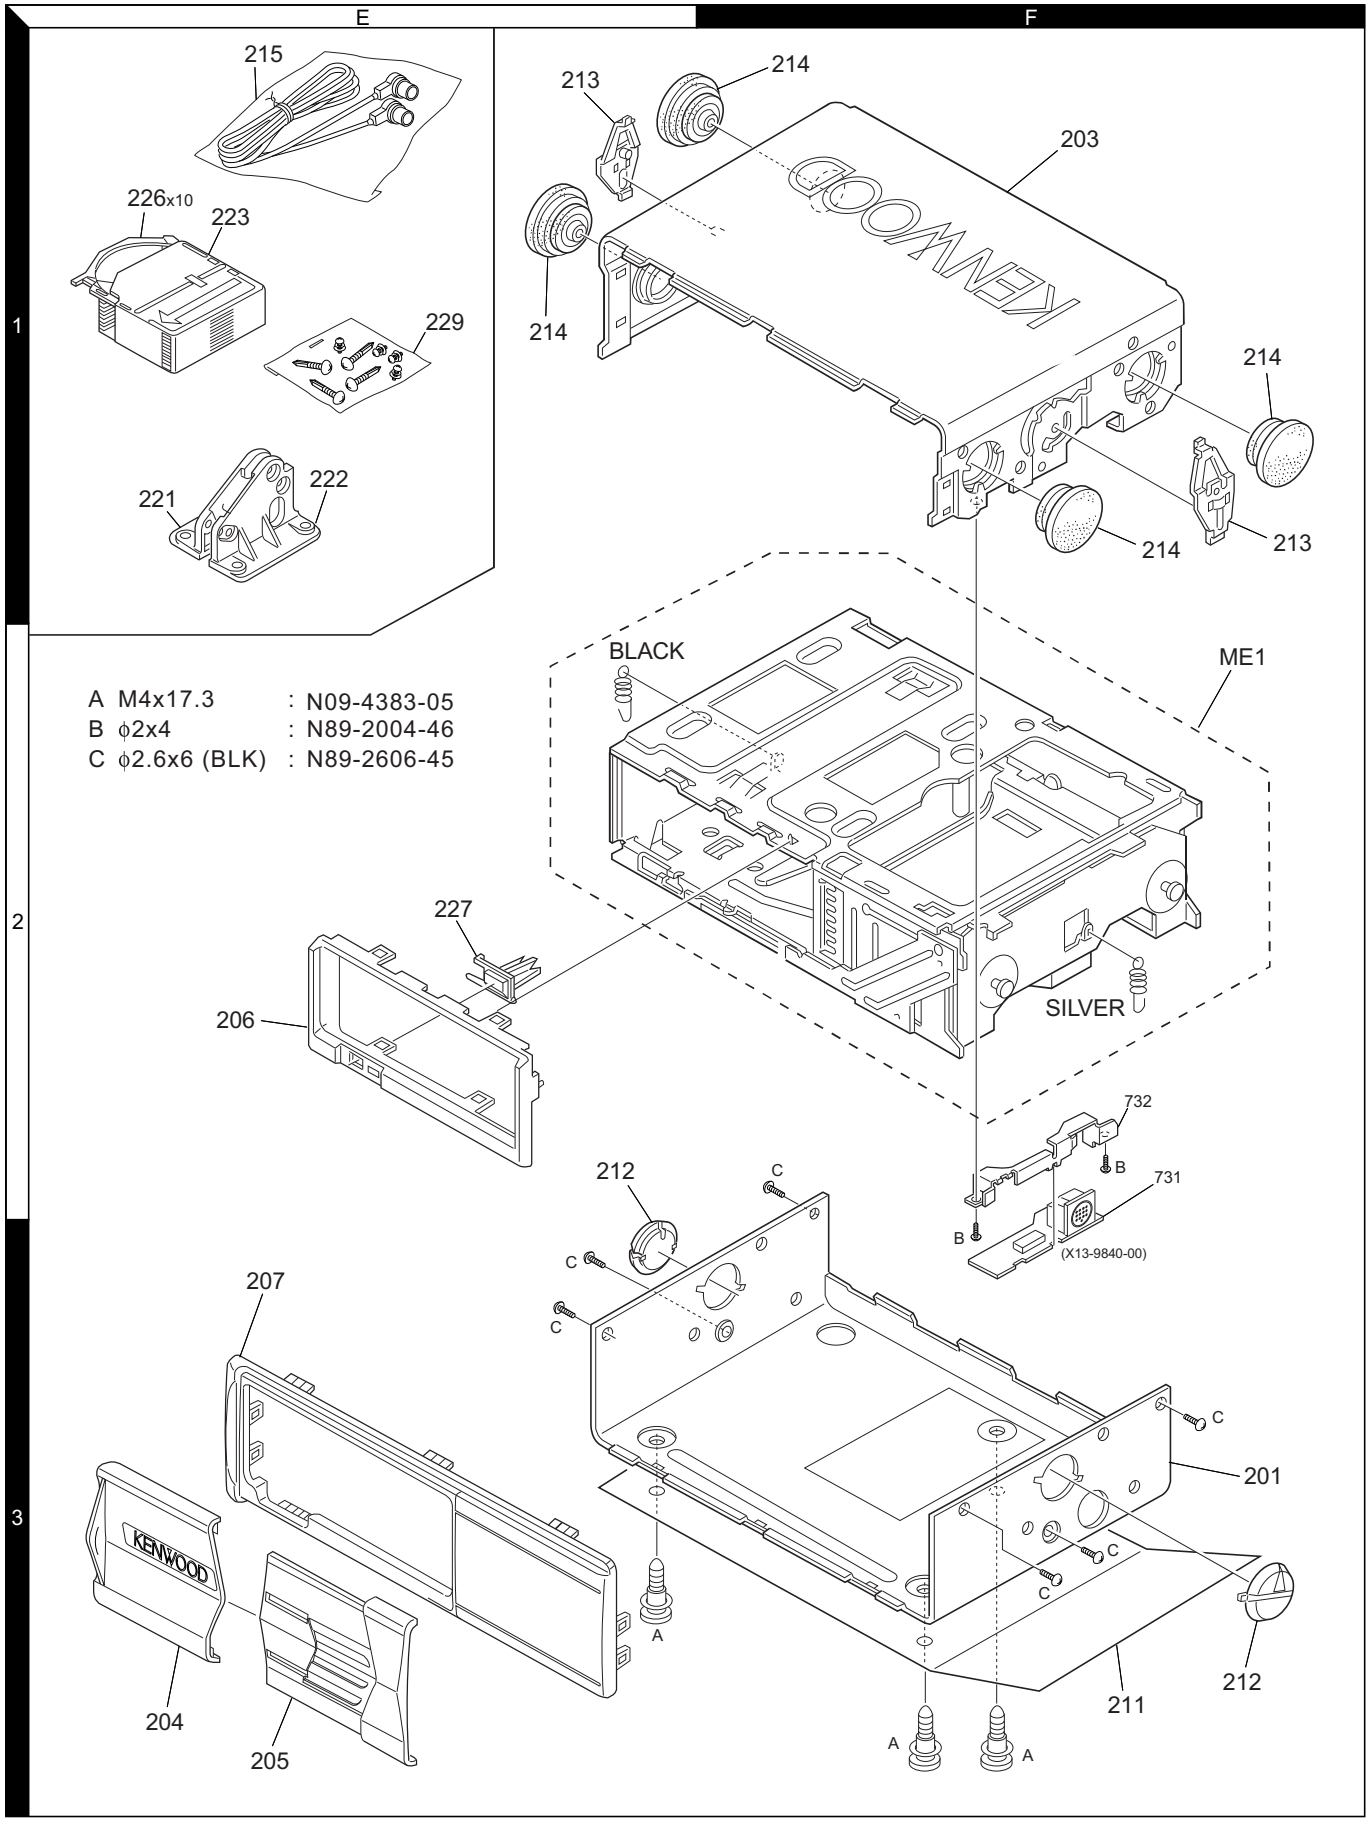

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (FM MODULATOR, CONTROL UNIT)

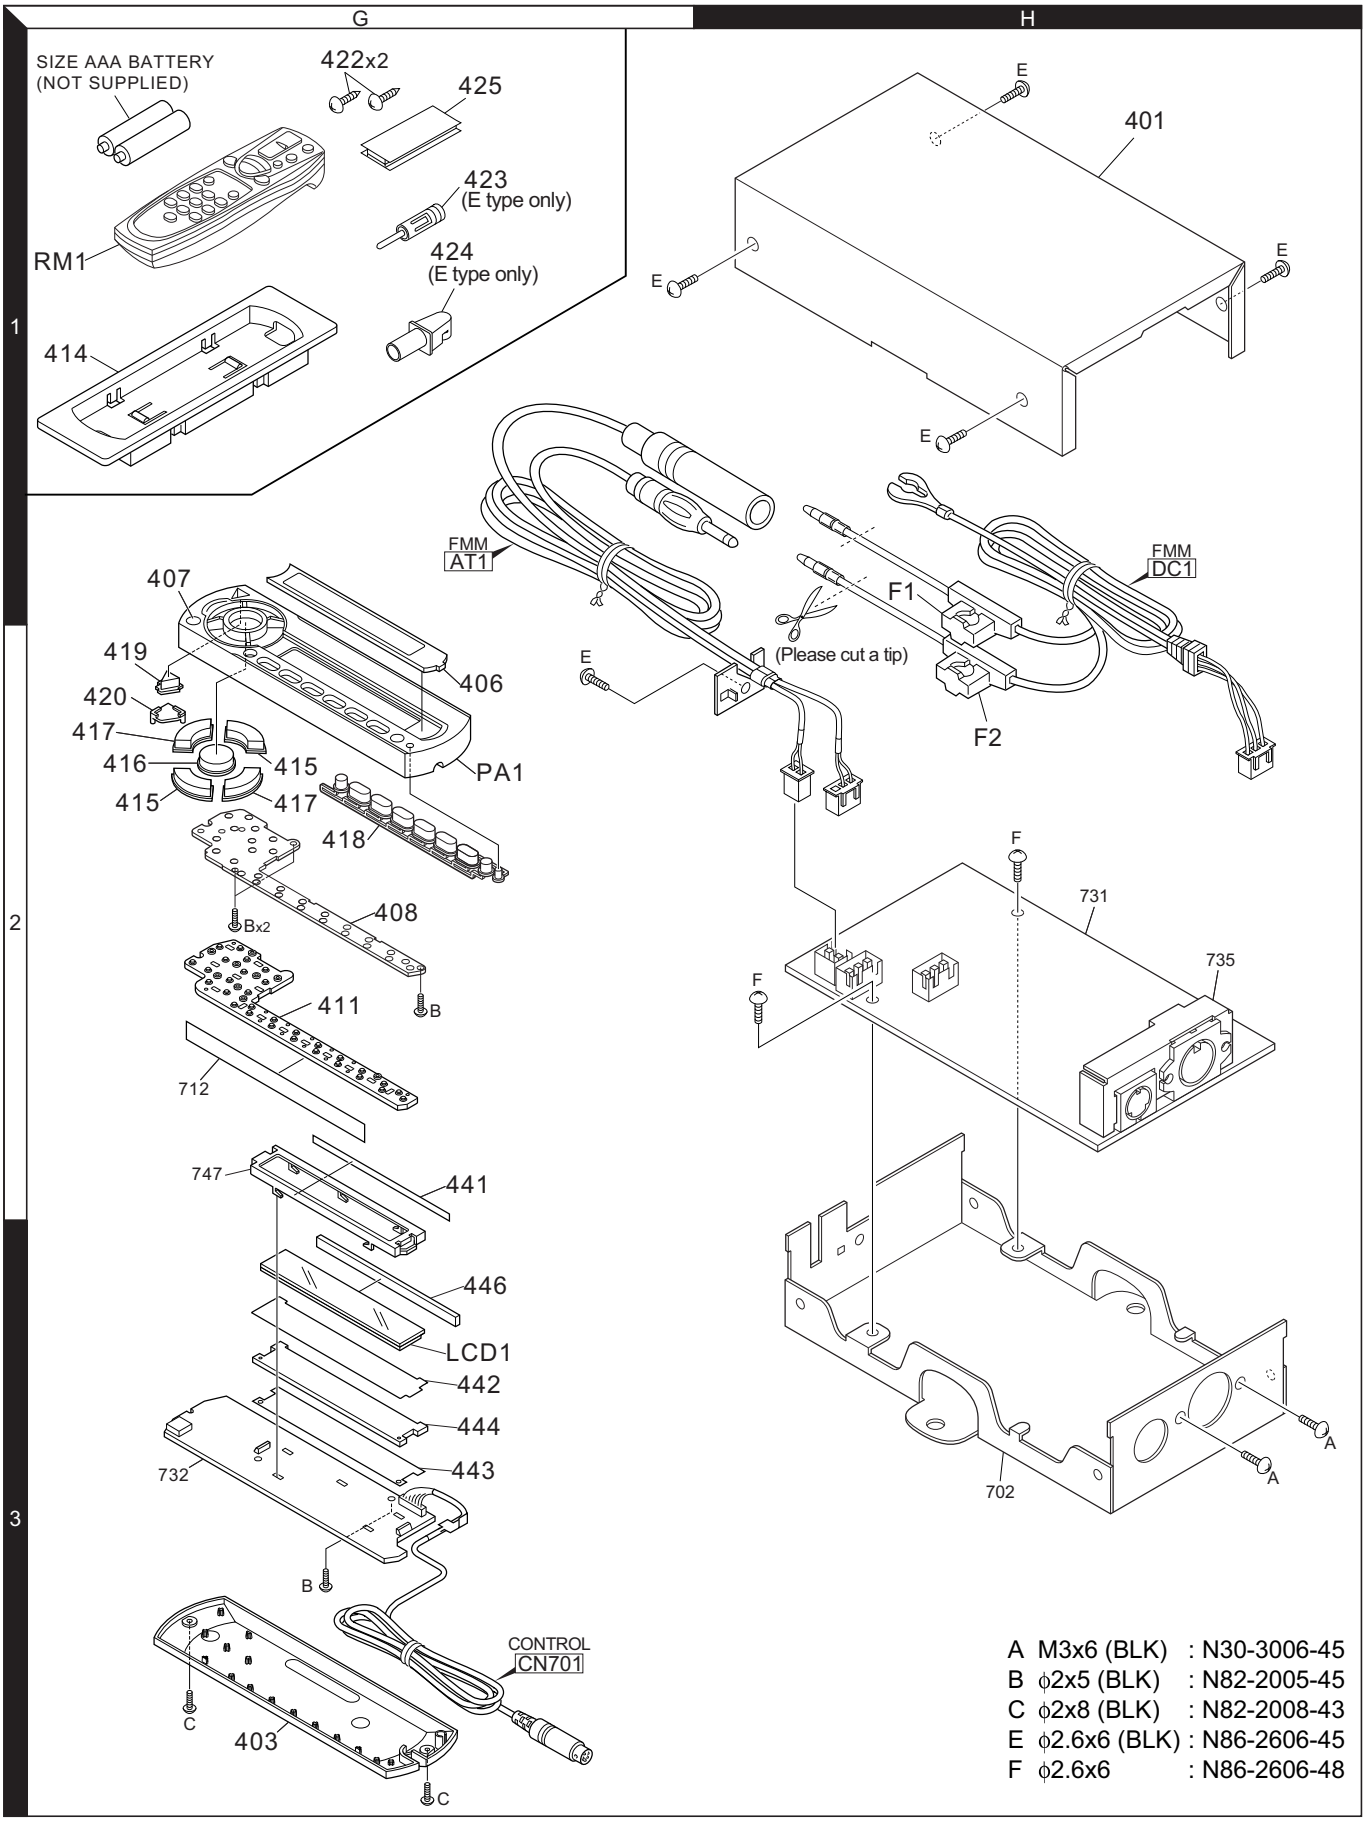

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-C471FM/C521FM					
201	3F		A10-4735-01	CHASSIS	M1
201	3F		A10-4736-01	CHASSIS	E1
201	3F		A10-4837-01	CHASSIS	K
201	3F		A10-4838-01	CHASSIS	K1
201	3F		A10-4875-01	CHASSIS	K1
201	3F		A10-4876-01	CHASSIS	K
203	1F		A01-2726-11	METALLIC CABINET	M1
203	1F		A01-2727-11	METALLIC CABINET	E1
203	1F		A01-2744-11	METALLIC CABINET	K
203	1F		A01-2745-11	METALLIC CABINET	K1
203	1F		A01-2767-01	METALLIC CABINET	K1
203	1F	✻	A01-2768-01	METALLIC CABINET	K
204	3E		A21-3530-12	DRESSING PANEL	E1
204	3E		A21-4047-12	DRESSING PANEL	M1
204	3E		A21-4080-02	DRESSING PANEL	K
204	3E		A21-4082-02	DRESSING PANEL	K1
205	3E		A21-3532-12	DRESSING PANEL	E1
205	3E		A21-4048-12	DRESSING PANEL	M1
205	3E		A21-4081-02	DRESSING PANEL	K
205	3E		A21-4083-02	DRESSING PANEL	K1
206	2E	✻	A22-2997-02	SUB PANEL	K1M1
206	2E	✻	A22-3001-02	SUB PANEL	KE1
207	3E	✻	A64-3355-01	PANEL	K
207	3E	✻	A64-3356-01	PANEL	E1
207	3E	✻	A64-3359-01	PANEL	M1
207	3E	✻	A64-3360-01	PANEL	K1
-			B46-0100-50	WARRANTY CARD	
-			B46-0182-14	ID CARD	E1
-			B58-1236-04	CAUTION CARD	
-			B58-1411-04	CAUTION CARD	E1
-		✻	B64-2786-00	INST.MANUAL (GER.DUT.ITA.POR.)	E1
-		✻	B64-2788-00	INSTRUCT.MANUAL (ENG.FRE.SPA.)	KE1K1
-		✻	B64-2789-00	INSTRUCTION MANUAL (ENG.T-CHI.)	M1
-		✻	B64-2790-00	INSTRUCTION MANUAL (ARABIC)	M1
211	3F		B58-1275-04	CAUTION CARD	
212	3F		D10-4515-03	ARM	
213	1E		D10-4516-04	LEVER	
214	1E		D39-0242-05	DAMPER	
215	1E		E30-4711-05	CORD WITH PLUG	
-			H02-0827-03	INNER CARTON CASE	K1M1
-			H02-0828-03	INNER CARTON CASE	KE1
-			H10-4729-02	POLYSTYRENE FOAMED FIXTURE	K1M1
-			H10-4730-02	POLYSTYRENE FOAMED FIXTURE	KE1
-			H13-1706-04	CARTON BOARD	K1M1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1M1
-			H25-1115-04	PROTECTION BAG	KK1
-		✻	H54-3144-04	ITEM CARTON CASE	KE1
-		✻	H54-3145-04	ITEM CARTON CASE	K1
-		✻	H54-3146-04	ITEM CARTON CASE	M1

Ref. No.	Add	New	Parts No.	Description	Destination
221	1E		J19-5018-03	BRACKET	K1M1
221	1E		J19-5020-03	BRACKET	KE1
222	1E		J19-5019-03	BRACKET	K1M1
222	1E		J19-5021-03	BRACKET	KE1
223	1E		J19-5146-02	HOLDER ASSY	K1M1
223	1E		J19-5149-02	HOLDER ASSY	KE1
226	1E		J99-0614-01	TRAY	
227	2E		K24-4055-04	KNOB (EJECT)	
229	1E		N99-1645-15	SCREW SET	
A	3F		N09-4383-05	STEPPED SCREW	
B	2F		N89-2004-46	BINDING HEAD TAPTITE SCREW	
C	3F		N89-2606-45	BINDING HEAD TAPTITE SCREW	
ME1	2F		X92-4760-01	CD-CH MECHANISM ASSY (10-DISC)	K1M1
ME1	2F		X92-4770-01	CD-CH MECHANISM ASSY (6-DISC)	KE1
SUB-CIRCUIT UNIT (X13-9840-00)					
CN1			E40-9555-05	FLAT CABLE CONNECTOR	
J1			E56-0825-05	CYLINDRICAL RECEPTACLE	
SUB-CIRCUIT UNIT (X16-1010-00)					
CN1			E40-9487-05	FLAT CABLE CONNECTOR	
CN2			E40-9536-05	FLAT CABLE CONNECTOR	
W1,2			R92-2053-05	CHIP R 0 J 1/8W	
S1,2			S74-0811-05	MICRO SWITCH	
CD PLAYER UNIT (X32-5470-01)					
C2			C92-0628-05	CHIP-TAN 10UF 10WV	
C3			CK73GB1H682K	CHIP C 6800PF K	
C4			CK73GB1H152K	CHIP C 1500PF K	
C5			CC73GCH1H470J	CHIP C 47PF J	
C6			CC73GCH1H680J	CHIP C 68PF J	
C7			CC73GCH1H040C	CHIP C 4.0PF C	
C8			CC73GCH1H180J	CHIP C 18PF J	
C9			CK73GB1A224K	CHIP C 0.22UF K	
C10			CK73GB1H222K	CHIP C 2200PF K	
C11			CK73GB1H682K	CHIP C 6800PF K	
C12,13			CK73GB1H103K	CHIP C 0.010UF K	
C14-16			CK73GB1C104K	CHIP C 0.10UF K	
C17			CK73FB1A225K	CHIP C 2.2UF K	
C19			CK73FB1A225K	CHIP C 2.2UF K	
C21			CK73GB1H681K	CHIP C 680PF K	
C23			CK73EB1A475K	CHIP C 4.7UF K	
C24			CK73GB1H102K	CHIP C 1000PF K	
C34			C92-0628-05	CHIP-TAN 10UF 10WV	
C46,47			C92-1393-05	ELECTRO 10UF 16WV	
C48,49			CK73GB1H681K	CHIP C 680PF K	
C52			CK73EB1A475K	CHIP C 4.7UF K	
C55			C92-0628-05	CHIP-TAN 10UF 10WV	
C56			CK73EB1A475K	CHIP C 4.7UF K	
C59			C92-1390-05	ELECTRO 100UF 6.3WV	
C60			CK73EB1A475K	CHIP C 4.7UF K	
C61			CK73GB1C104K	CHIP C 0.10UF K	
C62			C92-1392-05	ELECTRO 100UF 10WV	
C63			CK73EB1A475K	CHIP C 4.7UF K	

E1 : KDC-C471FM **K** : KDC-C471FM **K1** : KDC-C521FM **M1** : KDC-C521FM
(**E** : Europe **K** : North America **M** : Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5470-01)

Ref. No.	Add	New	Parts No.	Description	Destination
C64			C92-1388-05	ELECTRO 470UF 16WV	
C67-69			CK73GB1C104K	CHIP C 0.10UF K	
C70			CC73GCH1H101J	CHIP C 100PF J	
C71,72			CK73FB1A225K	CHIP C 2.2UF K	
C85			CK73FB1A225K	CHIP C 2.2UF K	
C192			CK73GB1H681K	CHIP C 680PF K	
C200-206			CK73GB1C104K	CHIP C 0.10UF K	
C300			C92-0712-05	CHIP-TAN 22UF 6.3WV	
C301			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E40-9338-05	FLAT CABLE CONNECTOR	
CN2			E40-9404-05	FLAT CABLE CONNECTOR	
L2			L92-0322-05	CHIP FERRITE	
X1			L78-0596-05	RESONATOR	
X2			L78-0568-05	RESONATOR	
CP1			R90-0720-05	MULTI-COMP 100K X4	
CP3			R90-0720-05	MULTI-COMP 100K X4	
CP5,6			R90-1014-05	MULTI-COMP 100 X4	
CP7,8			R90-0720-05	MULTI-COMP 100K X4	
CP9			R90-0725-05	MULTI-COMP 1K X2	
CP12			R90-1014-05	MULTI-COMP 100 X4	
CP14,15			R90-0720-05	MULTI-COMP 100K X4	
CP16			R90-0724-05	MULTI-COMP 1K X4	
CP17			R90-0720-05	MULTI-COMP 100K X4	
R4			RK73GB2A391J	CHIP R 390 J 1/10W	
R5			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R7			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R8			RK73EB2E100J	CHIP R 10 J 1/4W	
R9			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11-14			RK73GB2A103J	CHIP R 10K J 1/10W	
R15			RK73GB2A104J	CHIP R 100K J 1/10W	
R16			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R17			RK73EB2E103J	CHIP R 10K J 1/4W	
R18			RK73GB2A103J	CHIP R 10K J 1/10W	
R19			RK73GB2A333J	CHIP R 33K J 1/10W	
R20			RK73GB2A104J	CHIP R 100K J 1/10W	
R21			RK73GB2A123J	CHIP R 12K J 1/10W	
R22			RK73GB2A183J	CHIP R 18K J 1/10W	
R25			RK73GB2A113J	CHIP R 11K J 1/10W	
R26			RK73EB2E123J	CHIP R 12K J 1/4W	
R53,54			RK73GB2A681J	CHIP R 680 J 1/10W	
R57,58			RK73GB2A223J	CHIP R 22K J 1/10W	
R59			RK73GB2A914J	CHIP R 910K J 1/10W	
R60,61			RK73EB2E101J	CHIP R 100 J 1/4W	
R67			RK73GB2A124J	CHIP R 120K J 1/10W	
R68			RK73EB2E124J	CHIP R 120K J 1/4W	
R69,70			RK73GB2A303J	CHIP R 30K J 1/10W	
R71			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R72,73			RK73GB2A101J	CHIP R 100 J 1/10W	
R74,75			RK73GB2A223J	CHIP R 22K J 1/10W	
R76			RK73GB2A104J	CHIP R 100K J 1/10W	
R77			RK73GB2A183J	CHIP R 18K J 1/10W	
R78			RK73GB2A104J	CHIP R 100K J 1/10W	
R79			RK73GB2A332J	CHIP R 3.3K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R80			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R81			RK73GB2A103J	CHIP R 10K J 1/10W	
R82-84			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R85-87			RK73GB2A104J	CHIP R 100K J 1/10W	
R93			RK73GB2A224J	CHIP R 220K J 1/10W	
R95,96			RK73GB2A104J	CHIP R 100K J 1/10W	
R97,98			RK73GB2A103J	CHIP R 10K J 1/10W	
R99			RK73GB2A104J	CHIP R 100K J 1/10W	
R100,101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R102			RK73GB2A104J	CHIP R 100K J 1/10W	
R105,106			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R107			RK73GB2A101J	CHIP R 100 J 1/10W	
R108			RK73GB2A104J	CHIP R 100K J 1/10W	
R110,111			RK73GB2A104J	CHIP R 100K J 1/10W	
R114			RK73GB2A103J	CHIP R 10K J 1/10W	
R120			RK73GB2A393J	CHIP R 39K J 1/10W	
R121			RK73GB2A103J	CHIP R 10K J 1/10W	
R122,123			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R124			RK73GB2A223J	CHIP R 22K J 1/10W	
R127			RK73GB2A104J	CHIP R 100K J 1/10W	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R133,134			RK73GB2A104J	CHIP R 100K J 1/10W	
R135-138			RK73GB2A101J	CHIP R 100 J 1/10W	
R139-143			RK73GB2A104J	CHIP R 100K J 1/10W	
R148,149			RK73GB2A101J	CHIP R 100 J 1/10W	
R150			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R152			RK73GB2A913J	CHIP R 91K J 1/10W	
R153,154			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R155,156			RK73GB2A101J	CHIP R 100 J 1/10W	
R157			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R161			RK73GB2A163J	CHIP R 16K J 1/10W	
R162			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R190			RK73GB2A223J	CHIP R 22K J 1/10W	
R191			RK73GB2A123J	CHIP R 12K J 1/10W	
R205			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R206			RK73GB2A102J	CHIP R 1.0K J 1/10W	
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	
W3			R92-2053-05	CHIP R 0 J 1/8W	
W5-7			R92-1252-05	CHIP R 0 OHM J 1/16W	
S1			S68-0823-05	PUSH SWITCH	
S2			S70-0838-05	TACT SWITCH	
S3			S68-0823-05	PUSH SWITCH	
D1			DAP202K	DIODE	
D3,4			MA3056-M	ZENER DIODE	
D5			MA8075-M	ZENER DIODE	
D7			MA3056-M	ZENER DIODE	
D8			MA8062-M	ZENER DIODE	
D9,10			M1F60	DIODE	
D11			1SR154-400	DIODE	
D12			DA204U	DIODE	
D14			MA8091-M	ZENER DIODE	
D15			DAP202K	DIODE	
D16			DAP202U	DIODE	
D21,22			DAN202K	DIODE	

E1 : KDC-C471FM **K** : KDC-C471FM **K1** : KDC-C521FM **M1** : KDC-C521FM
(**E** : Europe **K** : North America **M** : Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
D23,24			DAN202U	DIODE	
IC1			UPD63711AGC	MOS-IC	
IC4			KIA78L05F	ANALOGUE IC	
IC5			LA6576	ANALOGUE IC	
IC7			784214AGC-165	MICROCONTROLLER IC	
IC8			BR24C02F-W	ROM IC	
IC8			CAT24WC02JI	ROM IC	
IC8			M24C02-WMN6T	MEMORY IC	
IC8			S-24C02BFJA	MEMORY IC	
IC8			24LC02BT-ISN	MEMORY IC	
IC9			S-80830CNNB	MOS-IC	
Q1			MCH6101	TRANSISTOR	
Q4			DTA124EK	DIGITAL TRANSISTOR	
Q5			DTA124EUA	DIGITAL TRANSISTOR	
Q6,7			DTC343TK	DIGITAL TRANSISTOR	
Q8			DTA124EK	DIGITAL TRANSISTOR	
Q9			2SB1202	TRANSISTOR	
Q10			2SB1295	TRANSISTOR	
Q11			DTC124EK	DIGITAL TRANSISTOR	
Q13			DTC124EUA	DIGITAL TRANSISTOR	
Q14			DTA143EUA	DIGITAL TRANSISTOR	
Q16			2SC4081	TRANSISTOR	
Q17			DTA143EK	DIGITAL TRANSISTOR	
Q18,19			DTC124EUA	DIGITAL TRANSISTOR	
Q20			DTC124EK	DIGITAL TRANSISTOR	
Q21			2SB1202	TRANSISTOR	
Q22			2SC4081	TRANSISTOR	
Q30			DTC114YUA	DIGITAL TRANSISTOR	
Q31			DTC124EUA	DIGITAL TRANSISTOR	
TH1			NTH5G20B333K07	THERMISTOR	

CD-CH MECHANISM ASSY (X92-4760-01) for KDC-C521FM

1	2B		A10-4745-13	CHASSIS ASSY	K1M1
2	2B		A10-4748-02	CHASSIS CALKING ASSY	K1M1
3	2B		A10-4751-03	CHASSIS CALKING ASSY	K1M1
4	3A		A10-4754-04	CHASSIS CALKING ASSY	K1M1
5	2A		A10-4757-12	CHASSIS CALKING ASSY	K1M1
6	2A		A10-4759-02	CHASSIS	K1M1
7	1A		A10-4760-02	CHASSIS CALKING ASSY	K1M1
11	2B		D10-4546-03	ARM	K1M1
12	2A		D10-4527-03	SLIDER	K1M1
13	2B		D10-4528-03	ARM	K1M1
14	2B		D10-4529-03	LEVER	K1M1
15	3A		D10-4531-04	LEVER ASSY	K1M1
16	2A		D10-4533-03	LEVER	K1M1
17	2A		D10-4534-04	SLIDER ASSY	K1M1
18	1B		D10-4536-13	SLIDER	K1M1
19	3A		D10-4537-04	SLIDER ASSY	K1M1
20	1B		D10-4540-13	ARM	K1M1
21	1B		D10-4547-03	LEVER	K1M1
22	2B		D12-0630-02	CAM	K1M1
23	2B		D12-0631-02	CAM	K1M1
24	3B		D13-2185-04	GEAR	K1M1
25	3B		D13-2186-04	GEAR	K1M1
26	3B		D13-2187-04	GEAR	K1M1

CD PLAYER UNIT (X32-5470-01)

Ref. No.	Add	New	Parts No.	Description	Destination
27	3A		D13-2188-04	WORM	K1M1
28	2B		D13-2092-04	GEAR	K1M1
29	2B		D13-2093-04	GEAR ASSY	K1M1
30	2B		D13-2095-04	GEAR	K1M1
31	2B		D13-2096-04	GEAR	K1M1
32	3A		D13-2099-04	GEAR	K1M1
33	3A		D13-2100-04	GEAR	K1M1
34	3A		D13-2101-04	GEAR	K1M1
35	3A		D13-2102-04	GEAR	K1M1
36	3A		D13-2103-04	GEAR	K1M1
37	3A		D13-2104-04	GEAR	K1M1
38	3B		D19-0636-04	LEAD SCREW	K1M1
39	3A		D19-0637-04	CLUTCH ASSY	K1M1
40	3A		D39-0225-05	DAMPER	K1M1
FC1	3A		E39-0172-15	FLAT CABLE	K1M1
FC2	3A		E39-0173-25	FLAT CABLE	K1M1
46	2B		G01-3036-04	TORSION COIL SPRING	K1M1
47	1B		G01-3037-04	EXTENSION SPRING	K1M1
48	2B		G01-3038-04	TORSION COIL SPRING	K1M1
49	3A		G01-3039-04	COMPRESSION SPRING	K1M1
50	3A		G01-3040-04	EXTENSION SPRING	K1M1
51	3A		G01-3041-04	EXTENSION SPRING	K1M1
52	1B		G01-3042-04	TORSION COIL SPRING	K1M1
53	2A		G01-3043-04	TORSION COIL SPRING	K1M1
54	1B		G01-3044-04	EXTENSION SPRING	K1M1
55	2A		G01-3045-04	EXTENSION SPRING	K1M1
56	2A		G01-3046-04	EXTENSION SPRING	K1M1
57	3B		G02-1374-04	FLAT SPRING	K1M1
58	3B		G02-1375-03	FLAT SPRING	K1M1
59	2B		G02-1376-03	FLAT SPRING	K1M1
61	2B		G02-1378-14	FLAT SPRING	K1M1
62	3A		G02-1380-04	FLAT SPRING	K1M1
63	2A		G10-1045-14	FELT	K1M1
68	2B		J11-0637-03	CLAMPER	K1M1
69	3B		J21-9592-04	MOUNTING HARDWARE	K1M1
70	1B		J21-9595-03	MOUNTING HARDWARE	K1M1
73	2B		J90-0759-03	GUIDE	K1M1
74	2A		J90-0992-03	RAIL	K1M1
75	2B		J90-0990-03	GUIDE	K1M1
FPC1	3B		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	K1M1
A	2A		N09-4126-05	MACHINE SCREW (2X3.5)	K1M1
B	3A		N09-4288-05	TAPTITE SCREW (2X2.5)	K1M1
C	3A		N86-2005-46	BINDING HEAD TAPTITE SCREW	K1M1
D	2B		N09-4189-05	TAPTITE SCREW (1.7X1.5)	K1M1
E	3B		N09-4154-05	TAPTITE SCREW	K1M1
F	2B		N09-4181-05	MACHINE SCREW (M1.7X3)	K1M1
G	3B		N39-1722-46	PAN HEAD MACHINE SCREW	K1M1
H	3A		N09-6108-05	MACHINE SCREW (M2✻3.5)	K1M1
J	3A		N19-2105-14	FLAT WASHER	K1M1
K	3A		N19-2058-04	FLAT WASHER	K1M1
L	1B		N19-2080-14	FLAT WASHER	K1M1
M	2B		N19-2028-04	FLAT WASHER	K1M1

E1 : KDC-C471FM **K** : KDC-C471FM **K1** : KDC-C521FM **M1** : KDC-C521FM
(**E** : Europe **K** : North America **M** : Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
76	3A	✻	R33-0207-15	SLIDE TYPE VARIABLE RESISTOR	K1M1
M1	3B		T42-0797-04	DC MOTOR ASSY (SP)	K1M1
M2,3	3A		T42-0788-05	DC MOTOR	K1M1
Q15	3A		2SB1548(P)	TRANSISTOR	K1M1
Q15	3A		2SB1565(E,F)	TRANSISTOR	K1M1
PU1	3B		X93-2000-00	OPTICAL PICKUP ASSY	K1M1
CD-CH MECHANISM ASSY (X92-4770-01) for KDC-C471FM					
1	2D		A10-4745-13	CHASSIS ASSY	KE1
2	2D		A10-4748-02	CHASSIS CALKING ASSY	KE1
3	2D		A10-4751-03	CHASSIS CALKING ASSY	KE1
4	3C		A10-4754-04	CHASSIS CALKING ASSY	KE1
5	2C		A10-4763-02	CHASSIS CALKING ASSY	KE1
6	2C		A10-4765-02	CHASSIS	KE1
7	1C		A10-4766-02	CHASSIS CALKING ASSY	KE1
11	2D		D10-4546-03	ARM	KE1
12	2C		D10-4527-03	SLIDER	KE1
13	2D		D10-4528-03	ARM	KE1
14	2D		D10-4529-03	LEVER	KE1
15	3C		D10-4531-04	LEVER ASSY	KE1
16	2C		D10-4533-03	LEVER	KE1
17	2C		D10-4541-04	SLIDER ASSY	KE1
18	1D		D10-4543-13	SLIDER	KE1
19	3C		D10-4537-04	SLIDER ASSY	KE1
20	1D		D10-4545-13	ARM	KE1
21	1D		D10-4548-03	LEVER	KE1
22	2D		D12-0630-02	CAM	KE1
23	2D		D12-0631-02	CAM	KE1
24	3D		D13-2185-04	GEAR	KE1
25	3D		D13-2186-04	GEAR	KE1
26	3D		D13-2187-04	GEAR	KE1
27	3C		D13-2188-04	WORM	KE1
28	2D		D13-2092-04	GEAR	KE1
29	2D		D13-2093-04	GEAR ASSY	KE1
30	2D		D13-2095-04	GEAR	KE1
31	2D		D13-2096-04	GEAR	KE1
32	3C		D13-2099-04	GEAR	KE1
33	3C		D13-2100-04	GEAR	KE1
34	3C		D13-2101-04	GEAR	KE1
35	3C		D13-2102-04	GEAR	KE1
36	3C		D13-2103-04	GEAR	KE1
37	3C		D13-2104-04	GEAR	KE1
38	3D		D19-0636-04	LEAD SCREW	KE1
39	3C		D19-0637-04	CLUTCH ASSY	KE1
40	3C		D39-0225-05	DAMPER	KE1
FC1	3C		E39-0172-15	FLAT CABLE	KE1
FC2	3C		E39-0173-25	FLAT CABLE	KE1
46	2D		G01-3036-04	TORSION COIL SPRING	KE1
47	1D		G01-3037-04	EXTENSION SPRING	KE1
48	2D		G01-3038-04	TORSION COIL SPRING	KE1
49	3C		G01-3039-04	COMPRESSION SPRING	KE1
50	3C		G01-3040-04	EXTENSION SPRING	KE1

CD-CH MECHANISM ASSY (X92-4760-01) for KDC-C521FM

Ref. No.	Add	New	Parts No.	Description	Destination
51	3C		G01-3041-04	EXTENSION SPRING	KE1
52	1D		G01-3042-04	TORSION COIL SPRING	KE1
53	2C		G01-3043-04	TORSION COIL SPRING	KE1
54	1D		G01-3044-04	EXTENSION SPRING	KE1
55	2C		G01-3046-04	EXTENSION SPRING	KE1
56	2C		G01-3047-04	EXTENSION SPRING	KE1
57	3D		G02-1374-04	FLAT SPRING	KE1
58	3D		G02-1375-03	FLAT SPRING	KE1
59	2D		G02-1376-03	FLAT SPRING	KE1
61	2D		G02-1378-14	FLAT SPRING	KE1
62	3C		G02-1380-04	FLAT SPRING	KE1
63	2C		G10-1045-14	FELT	KE1
68	2D		J11-0637-03	CLAMPER	KE1
69	3D		J21-9592-04	MOUNTING HARDWARE	KE1
70	1D		J21-9597-03	MOUNTING HARDWARE	KE1
71	2D		J90-0759-03	GUIDE	KE1
74	2C		J90-0992-03	RAIL	KE1
75	2D		J90-0990-03	GUIDE	KE1
FPC1	3D		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	KE1
A	2C		N09-4126-05	MACHINE SCREW (2X3.5)	KE1
B	3C		N09-4288-05	TAPTITE SCREW (2X2.5)	KE1
C	3C		N86-2005-46	BINDING HEAD TAPTITE SCREW	KE1
D	2D		N09-4189-05	TAPTITE SCREW (1.7X1.5)	KE1
E	3D		N09-4154-05	TAPTITE SCREW	KE1
F	2D		N09-4181-05	MACHINE SCREW (M1.7X3)	KE1
G	3D		N39-1722-46	PAN HEAD MACHINE SCREW	KE1
H	3A		N09-6108-05	MACHINE SCREW (M2✻3.5)	KE1
J	3C		N19-2105-14	FLAT WASHER	KE1
K	3C		N19-2058-04	FLAT WASHER	KE1
L	1D		N19-2080-14	FLAT WASHER	KE1
M	2D		N19-2028-04	FLAT WASHER	KE1
76	3C	✻	R33-0207-15	SLIDE TYPE VARIABLE RESISTOR	KE1
M1	3D		T42-0797-04	DC MOTOR ASSY (SP)	KE1
M2,3	3C		T42-0788-05	DC MOTOR	KE1
Q15	3C		2SB1548(P)	TRANSISTOR	KE1
Q15	3C		2SB1565(E,F)	TRANSISTOR	KE1
PU1	3D		X93-2000-00	OPTICAL PICKUP ASSY	KE1
FM MODULATOR					
401	1H	✻	A01-2853-08	METALLIC CABINET	K1KM1
401	1H	✻	A01-2855-08	METALLIC CABINET	E1
403	3G	✻	A46-1806-08	REAR COVER	K1KM1
403	3G	✻	A46-1812-08	REAR COVER	E1
PA1	2G	✻	A64-3412-08	PANEL ASSY	K1KM1
PA1	2G	✻	A64-3414-08	PANEL ASSY	E1
RM1	1G	✻	A70-2051-05	REMOTE CONTROLLER ASSY (RC-535)	K1M1
RM1	1G	✻	A70-2052-05	REMOTE CONTROLLER ASSY (RC-525)	E1
406	2G	✻	B10-4561-08	FRONT GLASS	
407	1G	✻	B19-2269-08	LIGHTING BOARD	
408	2G	✻	B19-2270-08	LIGHTING BOARD	
411	2G	✻	E29-1992-08	CONDUCTIVE RUBBER	

E1 : KDC-C471FM **K** : KDC-C471FM **K1** : KDC-C521FM **M1** : KDC-C521FM
(**E** : Europe **K** : North America **M** : Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
F1,2	1H		F06-3026-05	FUSE 3A	
-		✻	H12-2756-08	PACKING FIXTURE	
-		✻	H12-2757-08	PACKING FIXTURE	
414	2G	✻	J19-7009-08	UNIT HOLDER	
415	2G	✻	K24-4174-08	KNOB (UP/DOWN)	K1KM1
415	2G	✻	K24-4215-08	KNOB (UP/DOWN)	E1
416	2G	✻	K24-4175-08	KNOB (MENU)	K1KM1
416	2G	✻	K24-4217-08	KNOB (MENU)	E1
417	2G	✻	K24-4213-08	KNOB (SEEK)	K1KM1
417	2G	✻	K24-4216-08	KNOB (SEEK)	E1
418	2G	✻	K25-1653-08	KNOB (1-6)	
419	2G	✻	K29-7101-08	KEY TOP (SRC)	
420	2G	✻	K29-7102-08	KNOB BASE (SRC HOLDER)	
422	1G	✻	N99-1755-08	SCREW	
A	3H		N30-3006-45	PAN HEAD MACHINE SCREW	
B	2G		N82-2005-45	BINDING HEAD TAPTITE SCREW	
C	3G	✻	N82-2008-43	BINDING HEAD TAPTITE SCREW	
E	1H		N86-2606-45	BINDING HEAD TAPTITE SCREW	
F	2H		N86-2606-46	BINDING HEAD TAPTITE SCREW	
423	1G		T90-0512-05	ANTENNA ADAPTOR	E1
424	1G		T90-0521-05	ANTENNA ADAPTOR	E1
425	1G	✻	W01-1633-08	VELCRO	

FM MODULATOR UNIT

C1			CE04DW1A221M	ELECTRO	220UF	10WV	
C102		✻	C93-1371-08	CHIP C	1000PF	J	
C103			CE04BW1H4R7M	NP-ELEC	4.7UF	50WV	
C104			CK73GB1C104K	CHIP C	0.10UF	K	
C106			CE04DW1H010M	ELECTRO	1.0UF	50WV	
C107			CK73GB1H472K	CHIP C	4700PF	K	
C108			CC73GCH1H180J	CHIP C	18PF	J	
C109			CK73GB1H153K	CHIP C	0.015UF	K	
C112			CE04DW1E220M	ELECTRO	22UF	25WV	
C114			CC73GCH1H681J	CHIP C	680PF	J	E1
C114		✻	C93-1371-08	CHIP C	1000PF	J	K1KM1
C115			CK73GB0J105K	CHIP C	1.0UF	K	
C118		✻	C91-2274-08	MP-F C	0.22UF	J	
C120			CE04DW1H4R7M	ELECTRO	4.7UF	50WV	
C202		✻	C93-1371-08	CHIP C	1000PF	J	
C203			CE04BW1H4R7M	NP-ELEC	4.7UF	50WV	
C207			CK73GB1H472K	CHIP C	4700PF	K	
C208			CC73GCH1H180J	CHIP C	18PF	J	
C209			CK73GB1H153K	CHIP C	0.015UF	K	
C212			CE04DW1E220M	ELECTRO	22UF	25WV	
C214			CC73GCH1H681J	CHIP C	680PF	J	E1
C214		✻	C93-1371-08	CHIP C	1000PF	J	K1KM1
C218		✻	C91-2274-08	MP-F C	0.22UF	J	
C220			CE04DW1H4R7M	ELECTRO	4.7UF	50WV	
C301			CE04DW1E100M	ELECTRO	10UF	25WV	
C302			CC73GCH1H101J	CHIP C	100PF	J	
C303			CC73GCH1H150J	CHIP C	15PF	J	
C306			CK73GB1E333K	CHIP C	0.033UF	K	

FM MODULATOR

Ref. No.	Add	New	Parts No.	Description			Destination
C307			CC73GCH1H180J	CHIP C	18PF	J	
C308			CC73GCH1H471J	CHIP C	470PF	J	
C309			CE04DW1H4R7M	ELECTRO	4.7UF	50WV	
C312			CE04DW1E470M	ELECTRO	47UF	25WV	
C313			CE04DW1A101M	ELECTRO	100UF	10WV	
C314			CC73GCH1H330J	CHIP C	33PF	J	
C315			CK73GB1H332K	CHIP C	3300PF	K	
C401			CE04DW1E220M	ELECTRO	22UF	25WV	
C402			CE04DW1E100M	ELECTRO	10UF	25WV	
C403			CC73GCH1H101J	CHIP C	100PF	J	
C404			CC73GCH1H120J	CHIP C	12PF	J	
C405			CE04DW1H4R7M	ELECTRO	4.7UF	50WV	
C411-413			CC73GCH1H150J	CHIP C	15PF	J	
C414			CC73GCH1H471J	CHIP C	470PF	J	
C416			CK73GB1E223K	CHIP C	0.022UF	K	
C418			CC73GCH1H101J	CHIP C	100PF	J	
C419			CC73GCH1H330J	CHIP C	33PF	J	
C420			CK73GB1E223K	CHIP C	0.022UF	K	
C421			CC73GCH1H471J	CHIP C	470PF	J	
C451			CC73GCH1H471J	CHIP C	470PF	J	
C501			CC73GCH1H330J	CHIP C	33PF	J	
C502			CC73GCH1H220J	CHIP C	22PF	J	
C504			CK73GB1E223K	CHIP C	0.022UF	K	
C505			CK73GB0J105K	CHIP C	1.0UF	K	
C506		✻	C94-0228-08	ELECTRO	1000UF	16WV	
C517-522			CC73GCH1H101J	CHIP C	100PF	J	
C551			CK73GB1C104K	CHIP C	0.10UF	K	
C552			CK73GB1H103K	CHIP C	0.010UF	K	
C561-566			CC73GCH1H101J	CHIP C	100PF	J	
C602		✻	C94-0228-08	ELECTRO	1000UF	16WV	
C603			CE04DW1A101M	ELECTRO	100UF	10WV	
C604			CK73GB1C104K	CHIP C	0.10UF	K	
C608			CK73GB1C104K	CHIP C	0.10UF	K	
C651			CK73GB1C104K	CHIP C	0.10UF	K	
C652			CK73GB0J105K	CHIP C	1.0UF	K	
SC501		✻	C90-6703-08	ELECTRO	0.47F	5.5WV	
AT1	1G	✻	E30-6376-08	CORD WITH PLUG (ANT)			
DC1	1H	✻	E30-6377-08	DC CORD ASSY			
LUG1			E23-0746-05	TERMINAL			
PN301,302		✻	E41-2228-08	PIN ASSY			
PN302		✻	E41-2229-08	PIN ASSY			
SKT401		✻	E56-0860-08	CYLINDRICAL RECEPTACLE (8P MIN DIN)			
SKT402		✻	E56-0861-08	CYLINDRICAL RECEPTACLE (13P DIN)			
VC401		✻	KDV1472-B	VARIABLE CAPACITANCE DIODE			
L601		✻	L33-2220-08	CHOKE COIL	100UH		
X301		✻	L77-2895-08	CRYSTAL RESONATOR	38KHZ		
X501		✻	L77-2894-08	CRYSTAL RESONATOR	4.5MHZ		
J401-403			R92-2053-05	CHIP R	0	J 1/8W	
R102			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R103			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R104,105			RK73GB2A103J	CHIP R	10K	J 1/10W	
R107,108			RK73GB2A103J	CHIP R	10K	J 1/10W	

E1 : KDC-C471FM **K** : KDC-C471FM **K1** : KDC-C521FM **M1** : KDC-C521FM
(**E** : Europe **K** : North America **M** : Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

FM MODULATOR UNIT

Ref. No.	Add	New	Parts No.	Description	Destination
R109			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R110			RK73GB2A103J	CHIP R 10K J 1/10W	
R112,113			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R115			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R116			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R117			RK73GB2A471J	CHIP R 470 J 1/10W	
R118			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R120		✻	RK73GB2A753J	CHIP R 75K J 1/10W	
R121			RK73GB2A473J	CHIP R 47K J 1/10W	
R202			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R203			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R204,205			RK73GB2A103J	CHIP R 10K J 1/10W	
R207,208			RK73GB2A103J	CHIP R 10K J 1/10W	
R209			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R210			RK73GB2A103J	CHIP R 10K J 1/10W	
R212,213			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R215			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R217			RK73GB2A471J	CHIP R 470 J 1/10W	
R220		✻	RK73GB2A753J	CHIP R 75K J 1/10W	
R301			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R302			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R303,304			RK73GB2A103J	CHIP R 10K J 1/10W	
R306			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R307			RK73GB2A683J	CHIP R 68K J 1/10W	
R308			RK73GB2A155J	CHIP R 1.5M J 1/10W	
R309			RK73GB2A471J	CHIP R 470 J 1/10W	
R310			RK73GB2A561J	CHIP R 560 J 1/10W	
R311			RK73FB2B331J	CHIP R 330 J 1/8W	
R314			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R316			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R318			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R321			RK73GB2A223J	CHIP R 22K J 1/10W	
R322-324			RK73GB2A103J	CHIP R 10K J 1/10W	
R325			RK73GB2A154J	CHIP R 150K J 1/10W	
R327			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R351			RK73GB2A223J	CHIP R 22K J 1/10W	
R352			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R353			RK73GB2A681J	CHIP R 680 J 1/10W	
R355			RK73GB2A183J	CHIP R 18K J 1/10W	
R356			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R401			RK73GB2A223J	CHIP R 22K J 1/10W	
R402			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R403			RK73GB2A561J	CHIP R 560 J 1/10W	
R404			RK73GB2A104J	CHIP R 100K J 1/10W	
R405,406			RK73GB2A103J	CHIP R 10K J 1/10W	
R407			RK73GB2A101J	CHIP R 100 J 1/10W	
R411			RK73GB2A153J	CHIP R 15K J 1/10W	
R412			RK73GB2A221J	CHIP R 220 J 1/10W	
R413			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R414			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R451			RK73GB2A391J	CHIP R 390 J 1/10W	
R501			RK73GB2A103J	CHIP R 10K J 1/10W	
R502,503			RK73FB2B103J	CHIP R 10K J 1/8W	
R511			RK73FB2B332J	CHIP R 3.3K J 1/8W	
R512			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R513			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R514			RK73FB2B332J	CHIP R 3.3K J 1/8W	
R515			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R516			RK73FB2B332J	CHIP R 3.3K J 1/8W	
R517			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R518			RK73FB2B221J	CHIP R 220 J 1/8W	
R519-521			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R522			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R531			RK73GB2A104J	CHIP R 100K J 1/10W	
R534			RK73GB2A104J	CHIP R 100K J 1/10W	
R536			RK73GB2A104J	CHIP R 100K J 1/10W	
R551,552			RK73FB2B103J	CHIP R 10K J 1/8W	
R601			RK73GB2A103J	CHIP R 10K J 1/10W	
R602,603			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R604-606			RK73FB2B103J	CHIP R 10K J 1/8W	
R607			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R611			RK73GB2A103J	CHIP R 10K J 1/10W	
R612			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R613,614			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R617			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R617			RK73GB2A473J	CHIP R 47K J 1/10W	
R651			RK73GB2A471J	CHIP R 470 J 1/10W	
VR301,302		✻	R32-0295-08	SEMI FIXED VARIABLE RESIS. 10K	
RY401		✻	S76-0814-08	RELAY RF	
D101		✻	KDS122	DIODE	
D201		✻	KDS122	DIODE	
D301		✻	KDS122	DIODE	
D601-605			1N4004A	DIODE	
IC101-103		✻	CO5532A	ANALOGUE IC	
IC301			NJM2035M	ANALOGUE IC	
IC302		✻	CO5532A	ANALOGUE IC	
IC501		✻	LC72366-9B63	MICROCONTROLLER IC	
IC601		✻	KIA7806AF	ANALOGUE IC	
Q102,103		✻	KTK5134S	FET	
Q203		✻	KTK5134S	FET	
Q301		✻	KTC3875S-Y	TRANSISTOR	
Q303-305		✻	KTK5134S	FET	
Q351		✻	KTC3875S-Y	TRANSISTOR	
Q401,402		✻	KTC3879S-Y	TRANSISTOR	
Q411		✻	KTC4080-0	TRANSISTOR	
Q501,502		✻	KRC110S	TRANSISTOR	
Q601		✻	KTA1505S-Y	TRANSISTOR	
Q602		✻	KRC110S	TRANSISTOR	
Q603		✻	KTC3875S-Y	TRANSISTOR	
Q604			KRC103S	TRANSISTOR	
Q605		✻	KTA1505S-Y	TRANSISTOR	
Q606		✻	KTC4374-Y	TRANSISTOR	
Q607			KRC103S	TRANSISTOR	
Q608		✻	KRC110S	TRANSISTOR	
Q609		✻	KRC105S	TRANSISTOR	
ZD511-516		✻	KDZ5.6EV	ZENER DIODE	
ZD518		✻	KDZ5.6EV	ZENER DIODE	
ZD601,602		✻	KDZ5.6EV	ZENER DIODE	
ZD603		✻	KDZ8.2EV	ZENER DIODE	

E1 : KDC-C471FM **K** : KDC-C471FM **K1** : KDC-C521FM **M1** : KDC-C521FM
(**E** : Europe **K** : North America **M** : Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
CONTROL UNIT					
441	2G	✻	B11-1465-08	REFLECTION SHEET	
442	3G	✻	B11-1466-08	OPTICAL DIFFUSER	
443	3G	✻	B11-1467-08	REFLECTION SHEET	
444	3G	✻	B19-2271-08	LIGHTING BOARD	
D701,702		✻	B30-1698-05	LED	
D703			B30-1564-05	LED	
D704-716			B30-1567-05	LED	
LCD1	3G	✻	B38-1161-08	LIQUID CRYSTAL	
C701-703			CK73GB1C104K	CHIP C 0.10UF K	
C704			CC73GCH1H681J	CHIP C 680PF J	
C705-707			CK73GB1C104K	CHIP C 0.10UF K	
C708		✻	C92-1895-08	ELECTRO 10UF 16WV	
C709		✻	C92-1896-08	ELECTRO 47UF 16WV	
C710		✻	C92-1895-08	ELECTRO 10UF 16WV	
C711			CK73GB1E223K	CHIP C 0.022UF K	
446	3G	✻	E29-2020-08	CONDUCTIVE RUBBER	
CN701		✻	E30-6378-08	CORD WITH DIN CONNECTOR	
R701-703			RK73GB2A331J	CHIP R 330 J 1/10W	
R704			RK73GB2A391J	CHIP R 390 J 1/10W	
R705-710			RK73GB2A221J	CHIP R 220 J 1/10W	
R711-719			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R720			RK73GB2A473J	CHIP R 47K J 1/10W	
R722-726			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R727			RK73GB2A473J	CHIP R 47K J 1/10W	
R728			RK73GB2A100J	CHIP R 10 J 1/10W	
R729,730			RK73GB2A471J	CHIP R 470 J 1/10W	
R731			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R732			RK73GB2A471J	CHIP R 470 J 1/10W	
R733,734			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R735			RK73GB2A100J	CHIP R 10 J 1/10W	
R736			RK73GB2A101J	CHIP R 100 J 1/10W	
R737			RK73GB2A473J	CHIP R 47K J 1/10W	
R751			RK73GB2A102J	CHIP R 1.0K J 1/10W	
D717-722		✻	KDS122	DIODE	
IC701			LC75808W	MOS-IC	
IC702		✻	NJL67H380A	ANALOGUE IC	
Q701			KTC3875S	TRANSISTOR	
Q702			KRA303	TRANSISTOR	
Q703			KRA305	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination

E1 : KDC-C471FM **K** : KDC-C471FM **K1** : KDC-C521FM **M1** : KDC-C521FM
(**E** : Europe **K** : North America **M** : Other Areas)

⚠ Indicates safety critical components.