EXPLODED VIEW

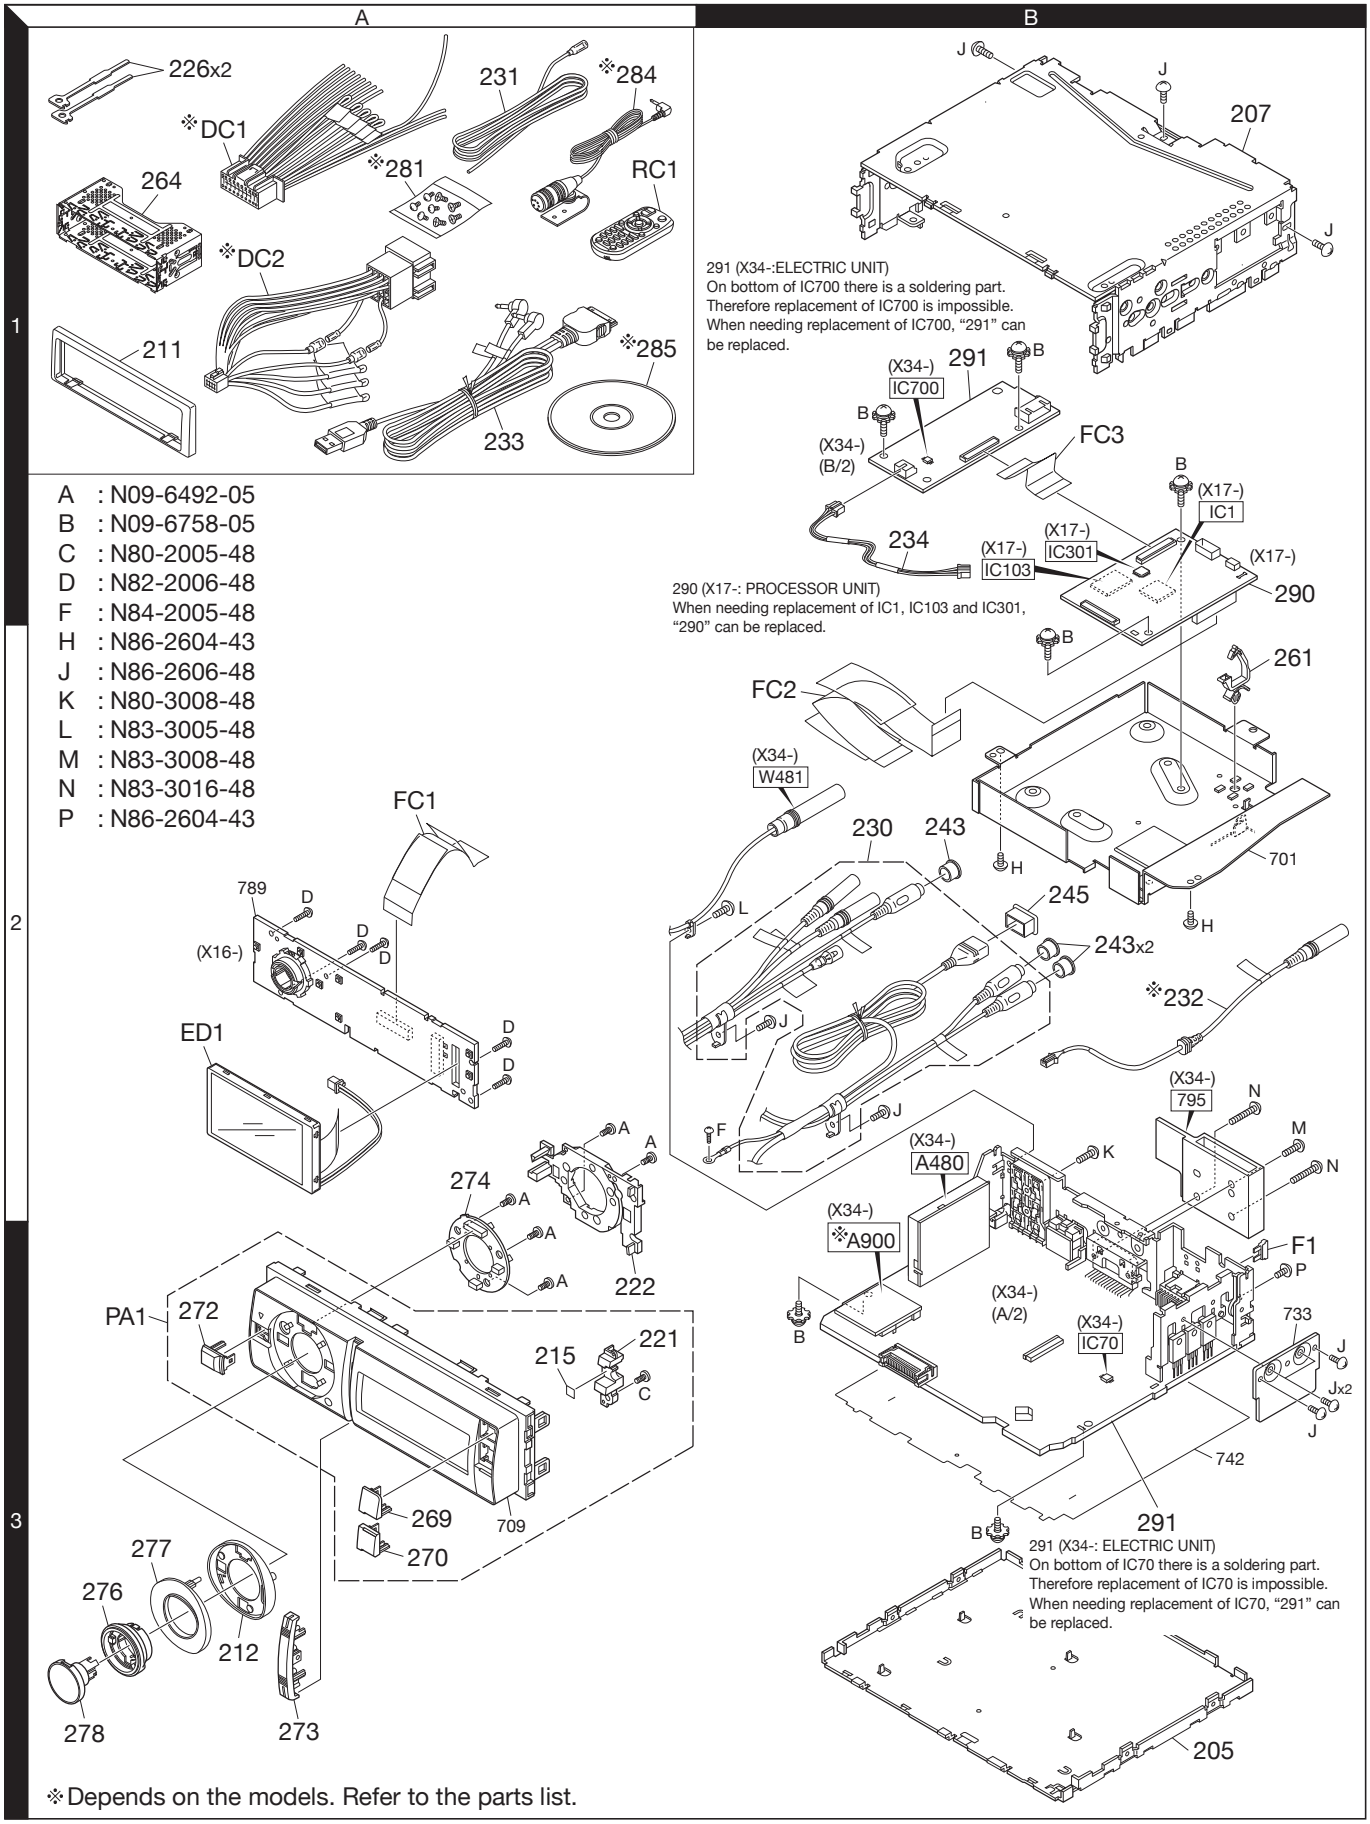

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
			KIV-700/BT900		
205	3B		A40-1362-42	BOTTOM PLATE	
207	1B	✻	A52-1151-01	TOP COVER	
PA1	3A	✻	A64-5139-01	PANEL ASSY	K
PA1	3A	✻	A64-5140-01	PANEL ASSY	K1
PA1	3A	✻	A64-5141-01	PANEL ASSY	E1
PA1	3A	✻	A64-5142-01	PANEL ASSY	M1
RC1	1A		A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)	
-		✻	B59-2016-00	SUB-INST. MANUAL (ENG.FRE.SPA.)	KK1
-		✻	B59-2017-00	SUB-INST. MANUAL (ENG.FRE.)	E1
-		✻	B59-2017-00	SUB-INST. MANUAL (GER.DUT.)	E1
-		✻	B59-2018-00	SUB-INST. MANUAL (ITA.SPA.POR.)	E1
-		✻	B59-2018-00	SUB-INST. MANUAL (RUS.UKR.)	E1
-		✻	B59-2020-00	SUB-INST. MANUAL (ENGLISH)	M1
-		✻	B64-4748-00	INST. MANUAL (ENGLISH)	M1
-		✻	B64-4749-00	INST. MANUAL (S-CHINESE)	M1
-		✻	B64-4750-00	INST. MANUAL (ARABIC)	M1
211	1A		B07-3245-01	ESCUTCHEON	
212	3A		B07-3338-03	ESCUTCHEON (MENU)	
215	3A		B11-2016-04	REFLECTION SHEET	
221	3A		B19-2562-03	LIGHTING BOARD (R)	
222	3A		B19-2563-02	LIGHTING BOARD (L)	
ED1	2A	✻	B38-1221-05	LCD (TFT 320 X 240 QVGA)	
226	1A		D10-7106-04	LEVER	
230	2B	✻	E30-6959-05	CORD WITH CONNECTOR (USB)	
231	1A		E30-6920-05	CONNECTING CORD ASSY (PRK)	
232	2B		E30-6832-05	CORD WITH CONNECTOR (MIC)	K
233	1A	✻	E30-6958-05	CORD WITH CONNECTOR (iPod)	
234	1B	✻	E39-1150-05	WIRING HARNESS	
⚠ DC1	1A		E30-6939-05	DC CORD	KK1M1
⚠ DC2	1A		E30-6940-05	DC CORD	E1
FC1	2A	✻	E39-1151-05	FLAT CABLE (X17-X16)	
FC2	2B	✻	E39-1152-05	FLAT CABLE (X17-X34)	
FC3	1B	✻	E39-1153-05	FLAT CABLE (X17-X34)	
243	2B		F29-0626-04	INSULATING COVER (RCA)	
245	2B		F29-0637-04	INSULATING COVER (USB)	
⚠ F1	3B		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
-		✻	H54-4827-03	ITEM CARTON CASE	K
-		✻	H54-4828-03	ITEM CARTON CASE	K1
-		✻	H54-4829-03	ITEM CARTON CASE	E1
-		✻	H54-4830-03	ITEM CARTON CASE	M1
261	2B		J11-0683-05	WIRE CLAMPER	
264	1A		J22-0789-03	MOUNTING HARDWARE ASSY	
269	3A		K24-5057-13	PUSH KNOB (SEARCH MODE)	
270	3A		K24-5059-03	PUSH KNOB (FAV)	
272	3A		K24-5068-03	PUSH KNOB (SRC)	
273	3A		K25-1988-03	PUSH KNOB (SPEED SEARCH)	
274	2A		K28-0403-13	KNOB BASE (MENU)	
276	3A		K28-0407-14	KNOB ASSY (VOL)	
277	3A		K28-0418-03	KEY TOP (MENU)	
278	3A	✻	K28-0422-14	KNOB ASSY (KENWOOD)	

Ref. No.	Add	New	Parts No.	Description	Destination
281	1A		N99-1757-15	SCREW SET	KK1M1
A	2A		N09-6492-05	TAPTITE SCREW	
B	1B		N09-6758-05	TAPTITE SCREW	
C	3A		N80-2005-48	PAN HEAD TAPTITE SCREW	
D	2A		N82-2006-48	BINDING HEAD TAPTITE SCREW	
F	2B		N84-2005-48	PAN HEAD TAPTITE SCREW	
H	1B		N86-2604-43	BINDING HEAD TAPTITE SCREW	
J	1B		N86-2606-48	BINDING HEAD TAPTITE SCREW	
284	1A		W01-1768-05	MICROPHONE	K
285	1A	✻	W01-1780-05	COMPACT DISC	KK1E1
290	1B	✻	X17-2080-10	PROCESSOR UNIT (for IC1,103,301)	
291	3B	✻	X34-6770-10	ELECTRIC UNIT (for IC70,700)	K
291	3B	✻	X34-6770-11	ELECTRIC UNIT (for IC70,700)	K1
291	3B	✻	X34-6770-21	ELECTRIC UNIT (for IC70,700)	M1
291	3B	✻	X34-6772-71	ELECTRIC UNIT (for IC70,700)	E1

SWITCH UNIT (X16-6880-10)

D1			B30-1566-05	LED (1608,RED)			
D3 -6			B30-1798-05	LED (RGB MPX A,B,C,D)			
C1			CK73GB1A105K	CHIP C	1.0UF	K	
C2			CE32BJ1C100M	CHIP EL	10UF	16WV	
C3 ,4			CK73EB1A475K	CHIP C	4.7UF	K	
C5			CE32BJ1V100M	CHIP EL	10UF	35WV	
C6			CE32BJ1C100M	CHIP EL	10UF	16WV	
C7			CK73EB1A475K	CHIP C	4.7UF	K	
C8 -10			CK73GB1C225K	CHIP C	2.2UF	K	
C11			CE32BJ1C100M	CHIP EL	10UF	16WV	
C12			CK73GB1C225K	CHIP C	2.2UF	K	
C13			CE32BJ1V100M	CHIP EL	10UF	35WV	
C14			CK73EB1A475K	CHIP C	4.7UF	K	
C18 ,19			CK73GB1H103K	CHIP C	0.010UF	K	
C20			CK73GB1H104K	CHIP C	0.10UF	K	
CN1		✻	E41-3192-05	FLAT CABLE CONNECTOR			
CN2		✻	E41-3213-05	PIN ASSY			
CN3		✻	E41-3192-05	FLAT CABLE CONNECTOR			
CN4			E41-2896-05	PIN ASSY			
R1			RK73GB2A331J	CHIP R	330	J	1/10W
R2			RK73EB2E151J	CHIP R	150	J	1/4W
R3			RK73EB2E301J	CHIP R	300	J	1/4W
R4			RK73EB2E161J	CHIP R	160	J	1/4W
R5			RK73EB2E331J	CHIP R	330	J	1/4W
R6			RK73EB2E391J	CHIP R	390	J	1/4W
R7 ,8			RK73EB2E331J	CHIP R	330	J	1/4W
R9			RK73EB2E391J	CHIP R	390	J	1/4W
R10			RK73EB2E331J	CHIP R	330	J	1/4W
R11 -13			RK73GB2A681J	CHIP R	680	J	1/10W
R15 ,16			RK73GB2A101J	CHIP R	100	J	1/10W
R20			RK73GB2A223J	CHIP R	22K	J	1/10W
R21			RK73GB2A821J	CHIP R	820	J	1/10W
R22 ,23			RK73EB2E150J	CHIP R	15	J	1/4W
R24			RK73EB2E200J	CHIP R	20	J	1/4W
R25 -33			RK73GB2A101J	CHIP R	100	J	1/10W
W1 -9			R92-2053-05	CHIP R	0 OHM	J	1/8W

K: KIV-BT900 **K1**: KIV-700 **M1**: KIV-700 **E1**: KIV-700
(**E** : Europe **K** : North America **M** : Other Areas)

⚠Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-6880-10)

Ref. No.	Add	New	Parts No.	Description	Destination
S2			S70-0960-05	TACT SWITCH	
S4 -6			S70-0960-05	TACT SWITCH	
S8 -13			S70-0960-05	TACT SWITCH	
S1			T99-0488-05	ROTARY ENCODER	
D7			DA204U	DIODE	
D15			FTZ6.8E	ZENER DIODE	
D16 -18			UDZW6.8(B)	ZENER DIODE	
IC1			PIC95603	ANALOGUE IC	
Q1			RT1N436M-T111	TRANSISTOR	
Q3 -5			RT1N237M-T111	TRANSISTOR	
Q6 -8			RT1N436M-T111	TRANSISTOR	
Q9			RT1N144M-T111	TRANSISTOR	
Q10			2SA1577	TRANSISTOR	

PROCESSOR UNIT (X17-2080-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C1 ,2			CC73HCH1H100D	CHIP C 10PF D	
C3 -13			CK73HB1A104K	CHIP C 0.10UF K	
C14			CK73HB0J105K	CHIP C 1.0UF K	
C15 -24			CK73HB1A104K	CHIP C 0.10UF K	
C25 -27			CK73HB0J105K	CHIP C 1.0UF K	
C30			CK73HB0J105K	CHIP C 1.0UF K	
C41			CK73HB1E103K	CHIP C 0.010UF K	
C51			CK73GB1A105K	CHIP C 1.0UF K	
C61			CK73GB1A105K	CHIP C 1.0UF K	
C62			CK73FB0J106K	CHIP C 10UF K	
C71			CK73HB1A104K	CHIP C 0.10UF K	
C72			CK73FB0J106K	CHIP C 10UF K	
C73			CC73HCH1H101J	CHIP C 100PF J	
C100			CK73HB0J105K	CHIP C 1.0UF K	
C101-107			CK73HB1A104K	CHIP C 0.10UF K	
C108			CK73HB0J105K	CHIP C 1.0UF K	
C109-115			CK73HB1A104K	CHIP C 0.10UF K	
C121			CK73HB1A104K	CHIP C 0.10UF K	
C142			CK73HB0J105K	CHIP C 1.0UF K	
C201			CK73FB0J106K	CHIP C 10UF K	
C202			CK73HB1A104K	CHIP C 0.10UF K	
C203			CK73FB0J106K	CHIP C 10UF K	
C205			CK73HB1H102K	CHIP C 1000PF K	
C215,216			CK73HB1H222K	CHIP C 2200PF K	
C301			CK73GB1H104K	CHIP C 0.10UF K	
C302			CK73FB0J106K	CHIP C 10UF K	
C303			CK73HB1A104K	CHIP C 0.10UF K	
C304			CK73FB0J106K	CHIP C 10UF K	
C305			CK73GB1H104K	CHIP C 0.10UF K	
C306			CK73FB0J106K	CHIP C 10UF K	
C307			CK73HB1A104K	CHIP C 0.10UF K	
C308			CK73FB0J106K	CHIP C 10UF K	
C309			CK73HB1A104K	CHIP C 0.10UF K	
C310			CK73HB1E103K	CHIP C 0.010UF K	
C311			CK73GB1H333K	CHIP C 0.033UF K	
C312,313			CK73HB1A104K	CHIP C 0.10UF K	
C314-316			CK73HB1E103K	CHIP C 0.010UF K	
C317,318			CC73HCH1H060D	CHIP C 6.0PF D	
C319			CC73GCH1H221J	CHIP C 220PF J	
C401			CK73GB1H104K	CHIP C 0.10UF K	
C411,412			CK73HB1A104K	CHIP C 0.10UF K	
C413			CE32BN0J221M	CHIP EL 220UF 6.3WV	
C421			CK73HB1A104K	CHIP C 0.10UF K	
C501			CK73HB1C333K	CHIP C 0.033UF K	
CN201			E41-2264-05	PIN ASSY	
CN501,502		✻	E41-3192-05	FLAT CABLE CONNECTOR	
CN503		✻	E41-3207-05	FLAT CABLE CONNECTOR	
L25 -30			L92-0615-05	CHIP FERRITE	
L501-509			L92-0838-05	CHIP FERRITE	
X1			L77-2908-05	CRYSTAL RESONATOR (12.000MHZ)	
X301			L77-2916-05	CRYSTAL RESONATOR (24.576MHZ)	
CP3 -6			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP7			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP9 -12			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP13-20			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP21,22			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP23			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP24			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP28			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP51-57			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP60,61			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP63-69			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP71,72			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP86-89			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP90			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP102,103			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP301,302			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP601,602			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP603			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP605			RK74HB1J220J	CHIP-COM 22 J 1/16W	
R1			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R2			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R7			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R11			RK73HB1J100J	CHIP R 10 J 1/16W	
R12 -15			RK73HB1J220J	CHIP R 22 J 1/16W	
R16			RK73HB1J100J	CHIP R 10 J 1/16W	
R37			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R52			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R61 ,62			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R91			RK73HB1J223J	CHIP R 22K J 1/16W	
R92			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R102			RK73HB1J223J	CHIP R 22K J 1/16W	
R103-107			RK73HB1J220J	CHIP R 22 J 1/16W	
R108			RK73HB1J223J	CHIP R 22K J 1/16W	
R109			RK73HB1J473J	CHIP R 47K J 1/16W	
R111-113			RK73HB1J220J	CHIP R 22 J 1/16W	
R115-117			RK73HB1J220J	CHIP R 22 J 1/16W	
R202,203			RK73HB1J101J	CHIP R 100 J 1/16W	
R205			RK73HB1J101J	CHIP R 100 J 1/16W	
R209			RK73HB1J100J	CHIP R 10 J 1/16W	
R211,212			RK73HB1J471J	CHIP R 470 J 1/16W	
R213,214			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R217-220			RK73HB1J510J	CHIP R 51 J 1/16W	
R301			RK73GB2A300J	CHIP R 30 J 1/10W	

K: KIV-BT900 **K1**: KIV-700 **M1**: KIV-700 **E1**: KIV-700
(**E** : Europe **K** : North America **M** : Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

PROCESSOR UNIT (X17-2080-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R302,303			RK73HB1J220J	CHIP R	22	J 1/16W	
R304-306			RK73HB1J101J	CHIP R	100	J 1/16W	
R307			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R308			RK73GH2A682D	CHIP R	6.8K	D 1/10W	
R309-313			RK73HB1J223J	CHIP R	22K	J 1/16W	
R314,315			RK73HB1J101J	CHIP R	100	J 1/16W	
R316			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R331,332			RK73HB1J220J	CHIP R	22	J 1/16W	
R341			RK73GB2A470J	CHIP R	47	J 1/10W	
R342,343			RK73HB1J220J	CHIP R	22	J 1/16W	
R401,402			RK73HB1J270J	CHIP R	27	J 1/16W	
R411			RK73HB1J223J	CHIP R	22K	J 1/16W	
R412			RK73HB1J101J	CHIP R	100	J 1/16W	
R413			RK73HB1J223J	CHIP R	22K	J 1/16W	
R414			RK73GH2A430D	CHIP R	43	D 1/10W	
R415			RK73HB1J223J	CHIP R	22K	J 1/16W	
R416		✻	RK73GB2A1R2J	CHIP R	1.2	J 1/10W	
R419			RK73HB1J101J	CHIP R	100	J 1/16W	
R421,422			RK73HB1J223J	CHIP R	22K	J 1/16W	
R427,428			RK73HB1J101J	CHIP R	100	J 1/16W	
R429,430			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R501			RK73HB1J560J	CHIP R	56	J 1/16W	
R503			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R504-506			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R507,508			RK73HB1J392J	CHIP R	3.9K	J 1/16W	
R509-512			RK73HB1J560J	CHIP R	56	J 1/16W	
R513-521			RK73HB1J470J	CHIP R	47	J 1/16W	
R522			RK73HB1J220J	CHIP R	22	J 1/16W	
R523-534			RK73HB1J223J	CHIP R	22K	J 1/16W	
R535,536			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R537,538			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R539			RK73HB1J331J	CHIP R	330	J 1/16W	
D401,402			LVS10C270S030	VARISTOR			
IC1	1B		Impossible to replace	MOS-IC (See exploded view)			
IC51			XC6209B502P1	ANALOGUE IC			
IC61		✻	XC6219F132P1	ANALOGUE IC			
IC71			S-1132B18U5T1G	ANALOGUE IC			
IC100,101		✻	M12L1281685TT	DRAM IC			
IC103	1B		No stock	ROM IC (See exploded view)			
IC201			PCM1754DB	MOS-IC			
IC301	1B		Impossible to replace	MOS-IC (See exploded view)			
IC401			BD6538G	MOS-IC			
IC402			MFI341S2162	MICROPROCESSOR IC			
Q91			2SA1576A	TRANSISTOR			
Q92			DTC114YUA	DIGITAL TRANSISTOR			
Q501,502			DTC124EUA	DIGITAL TRANSISTOR			

ELECTRIC UNIT (X34-677x-xx)

C2			CD04AZ1C332M2	ELECTRO	3300UF	16WV	
C10			CD04AY1A221M	ELECTRO	220UF	10WV	
C12			CK73GB1A105K	CHIP C	1.0UF	K	
C20 ,21			CK73GB1A105K	CHIP C	1.0UF	K	
C30			CD04AJ1C101M	ELECTRO	100UF	16WV	
C31			CK73FB0J106K	CHIP C	10UF	K	
C33			C90-6851-05	ELECTRO	220UF	25WV	
C41			CD04AZ1C332M2	ELECTRO	3300UF	16WV	
C50			CD04AS1C220M	ELECTRO	22UF	16WV	
C71			CK73FB0J106K	CHIP C	10UF	K	
C72			CK73GB1A474K	CHIP C	0.47UF	K	
C73			CK73EB1H475K	CHIP C	4.7UF	K	
C74			CK73GB1H102K	CHIP C	1000PF	K	
C75 ,76			CK73GB1H104K	CHIP C	0.10UF	K	
C79			CK73GB1H103K	CHIP C	0.010UF	K	
C81 ,82			CK73GB1H102K	CHIP C	1000PF	K	
C83			CD04AS1V100M	ELECTRO	10UF	35WV	
C84			CD04AS1C220M	ELECTRO	22UF	16WV	
C92			CK73GB1H103K	CHIP C	0.010UF	K	
C110			CK73GB1H104K	CHIP C	0.10UF	K	
C111			CK73GB1A105K	CHIP C	1.0UF	K	
C112			CK73FB1A335K	CHIP C	3.3UF	K	
C131			CK73GB1A105K	CHIP C	1.0UF	K	
C132			CK73GB1H223K	CHIP C	0.022UF	K	
C133			CK73GB1H103K	CHIP C	0.010UF	K	
C170,171			CK73GB1H103K	CHIP C	0.010UF	K	K
C204			CK73GB1A105K	CHIP C	1.0UF	K	
C206			CD04BA1E330M	ELECTRO	33UF	25WV	
C208			CK73GB1C224K	CHIP C	0.22UF	K	
C210			CK73GB1C224K	CHIP C	0.22UF	K	
C212			CK73GB1C224K	CHIP C	0.22UF	K	
C214			CK73GB1C224K	CHIP C	0.22UF	K	
C217			CK73FB1C105K	CHIP C	1.0UF	K	
C222			CK73GB1A105K	CHIP C	1.0UF	K	
C240,241			CK73GB1A105K	CHIP C	1.0UF	K	
C242-247			CK73GB1H103K	CHIP C	0.010UF	K	
C249			CK73GB0J225K	CHIP C	2.2UF	K	
C250			CD04AS1V100M	ELECTRO	10UF	35WV	
C251			CD04AS0J470M	ELECTRO	47UF	6.3WV	
C253-256			CK73GB1H103K	CHIP C	0.010UF	K	
C257			CC73GCH1H120J	CHIP C	12PF	J	
C259			CC73GCH1H120J	CHIP C	12PF	J	
C260			CK73GB1A105K	CHIP C	1.0UF	K	
C261			CK73GB1A474K	CHIP C	0.47UF	K	
C262			CK73GB1A105K	CHIP C	1.0UF	K	
C263			CK73GB1A474K	CHIP C	0.47UF	K	
C264-266			CK73GB1A105K	CHIP C	1.0UF	K	
C271,272			CK73GB1A105K	CHIP C	1.0UF	K	
C276			CD04AS1H2R2M	ELECTRO	2.2UF	50WV	
C277			CK73GB1H103K	CHIP C	0.010UF	K	
C280-285			CK73GB1A105K	CHIP C	1.0UF	K	
C286			CD04AS1C470M	ELECTRO	47UF	16WV	
C288,289			CK73GB1A105K	CHIP C	1.0UF	K	
C300			CK73GB1H104K	CHIP C	0.10UF	K	
C302,303			CC73GCH1H220J	CHIP C	22PF	J	
C304-306			CK73GB1H103K	CHIP C	0.010UF	K	
C307			CK73GB1H102K	CHIP C	1000PF	K	
C310			CK73GB1H103K	CHIP C	0.010UF	K	
C314,315			CK73GB1H103K	CHIP C	0.010UF	K	
C316			CK73GB1H104K	CHIP C	0.10UF	K	
C335			CK73GB1H104K	CHIP C	0.10UF	K	
C336,337			CK73GB0J475K	CHIP C	4.7UF	K	

K: KIV-BT900 **K1**: KIV-700 **M1**: KIV-700 **E1**: KIV-700
(**E** : Europe **K** : North America **M** : Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-677x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C400			CK73FB1E474K	CHIP C	0.47UF	K	
C401			CD04AT0J470M	ELECTRO	47UF	6.3WV	
C402			CK73FB1E474K	CHIP C	0.47UF	K	
C404			CK73GB1H103K	CHIP C	0.010UF	K	
C440			CD04AS1V100M	ELECTRO	10UF	35WV	
C443			CD04AS1V100M	ELECTRO	10UF	35WV	
C450			CD04AS1V100M	ELECTRO	10UF	35WV	
C453			CD04AS1V100M	ELECTRO	10UF	35WV	
C460			CD04AS1V100M	ELECTRO	10UF	35WV	
C463			CD04AS1V100M	ELECTRO	10UF	35WV	
C470,471			CK73GB1A105K	CHIP C	1.0UF	K	
C472			CD04AS0J470M	ELECTRO	47UF	6.3WV	
C482-485			CK73GB1H103K	CHIP C	0.010UF	K	
C502			CK73GB0J225K	CHIP C	2.2UF	K	KK1E1
C503			CC73GCH1H271J	CHIP C	270PF	J	KK1E1
C505			CK73GB1H103K	CHIP C	0.010UF	K	KK1E1
C506,507			CC73GCH1H120J	CHIP C	12PF	J	KK1E1
C551,552			CK73GB1H103K	CHIP C	0.010UF	K	
C604			CK73GB1H104K	CHIP C	0.10UF	K	K
C606			CK73FB0J106K	CHIP C	10UF	K	K
C607,608			CC73GCH1H101J	CHIP C	100PF	J	K
C610-612			CK73GB1H104K	CHIP C	0.10UF	K	K
C613			CK73FB0J106K	CHIP C	10UF	K	K
C616			CK73GB1H104K	CHIP C	0.10UF	K	K
C631			CD04BK0J331M	ELECTRO	330UF	6.3WV	K
C701			CK73GB1H104K	CHIP C	0.10UF	K	
C702			CK73EB1H475K	CHIP C	4.7UF	K	
C703			CK73GB1H104K	CHIP C	0.10UF	K	
C704			CK73GB1A474K	CHIP C	0.47UF	K	
C705			CK73FB0J106K	CHIP C	10UF	K	
C706,707			CK73GB1H102K	CHIP C	1000PF	K	
C708			CD04AS1C220M	ELECTRO	22UF	16WV	
C709			CK73GB1H104K	CHIP C	0.10UF	K	
C710			CD04AS1C220M	ELECTRO	22UF	16WV	
C711			CK73GB1H104K	CHIP C	0.10UF	K	
C712			CD04AS1C220M	ELECTRO	22UF	16WV	
C713			CK73GB1H104K	CHIP C	0.10UF	K	
C714			CD04AS1C220M	ELECTRO	22UF	16WV	
C715-719			CK73GB1A105K	CHIP C	1.0UF	K	
C721-725			CK73GB1A105K	CHIP C	1.0UF	K	
C726			CD04AS1C220M	ELECTRO	22UF	16WV	
C727			CK73GB1H103K	CHIP C	0.010UF	K	
C729			CK73GB1H103K	CHIP C	0.010UF	K	
C730			CK73GB1A105K	CHIP C	1.0UF	K	
C731			CK73GB1H103K	CHIP C	0.010UF	K	
C733			CK73GB1H103K	CHIP C	0.010UF	K	
C735-738			CK73EB1A106K	CHIP C	10UF	K	
C739			CD04AS1C220M	ELECTRO	22UF	16WV	
C740			CD04AS1C101M	ELECTRO	100UF	16WV	
C743,744			CK73GB1A105K	CHIP C	1.0UF	K	
C747			CK73GB1A105K	CHIP C	1.0UF	K	
C749			CK73GB1A105K	CHIP C	1.0UF	K	
C751			CK73GB1A105K	CHIP C	1.0UF	K	
C753			CK73GB1A105K	CHIP C	1.0UF	K	
C754			CC73GCH1H101J	CHIP C	100PF	J	

Ref. No.	Add	New	Parts No.	Description				Destination
C755			CK73FB1C105K	CHIP C	1.0UF	K		
C768			CC73GCH1H100D	CHIP C	10PF	D		
C770			CK73GB1H103K	CHIP C	0.010UF	K		
C771			CK73GB1A105K	CHIP C	1.0UF	K		
CN5			E41-1700-05	PIN ASSY				
CN6		✻	E41-3192-05	FLAT CABLE CONNECTOR				
CN72			E40-9747-05	PIN ASSY				
CN602			E41-1699-05	PIN ASSY				K
CN701		✻	E41-3192-05	FLAT CABLE CONNECTOR				
CN702		✻	E41-2872-05	PIN ASSY				
CN705			E41-1700-05	PIN ASSY				
CN900			E41-3043-05	PIN ASSY				K
⚠ J1			E58-0991-05	RECTANGULAR RECEPTACLE				
J400			E56-0855-05	CYLINDRICAL RECEPTACLE				
J420			E63-0972-05	PIN JACK				
J470			E11-0625-05	PHONE JACK				
W481	2B		E30-6438-05	CORD WITH PLUG				
F41			F53-0367-05	FUSE				
⚠ L1			L33-2436-05	CHOKE COIL ASSY				
L70			L33-2462-05	SMALL FIXED INDUCTOR				
L71			L92-0639-05	CHIP FERRITE				
L73			L92-0639-05	CHIP FERRITE				
L600			L92-0662-05	CHIP FERRITE				K
L700			L92-0639-05	CHIP FERRITE				
L701			L33-2462-05	SMALL FIXED INDUCTOR				
L704			L92-0639-05	CHIP FERRITE				
X240			L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ)				
X300			L78-0872-05	RESONATOR (12MHZ)				
X301			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)				
X500			L77-3825-05	CRYSTAL RESONATOR (4.332MHZ)				KK1E1
K	2B		N80-3008-48	PAN HEAD TAPTITE SCREW				
L	2B		N83-3005-48	PAN HEAD TAPTITE SCREW				
M	2B		N83-3008-48	PAN HEAD TAPTITE SCREW				
N	2B		N83-3016-48	PAN HEAD TAPTITE SCREW				
P	3B		N86-2604-43	BINDING HEAD TAPTITE SCREW				
CP301-303			RK74HB1J101J	CHIP-COM	100	J	1/16W	
CP304			RK74GA1J101J	CHIP-COM	100	J	1/16W	K
CP306			RK74GA1J472J	CHIP-COM	4.7K	J	1/16W	
CP501			RK74HB1J222J	CHIP-COM	2.2K	J	1/16W	KK1E1
R1 ,2			RK73EB2E103J	CHIP R	10K	J	1/4W	
R10			RK73GH2A243D	CHIP R	24K	D	1/10W	
R11			RK73GH2A432D	CHIP R	4.3K	D	1/10W	
R12			RK73FB2B221J	CHIP R	220	J	1/8W	
R22			RK73GB2A1R0J	CHIP R	1.0	J	1/10W	
R33			RK73FB2B123J	CHIP R	12K	J	1/8W	
R52			RK73FB2B272J	CHIP R	2.7K	J	1/8W	
R71			RK73GH2A133D	CHIP R	13K	D	1/10W	
R72			RK73GH2A823D	CHIP R	82K	D	1/10W	
R73			RK73GB2A103J	CHIP R	10K	J	1/10W	
R74			RK73GH2A153D	CHIP R	15K	D	1/10W	
R83			RK73GB2A362J	CHIP R	3.6K	J	1/10W	
R84			RK73GB2A432J	CHIP R	4.3K	J	1/10W	
R85			RK73GB2A562J	CHIP R	5.6K	J	1/10W	

K: KIV-BT900 **K1**: KIV-700 **M1**: KIV-700 **E1**: KIV-700
(**E** : Europe **K** : North America **M** : Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-677x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R86			RK73GB2A2R2J	CHIP R	2.2	J 1/10W	
R87			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R90 ,91			RK73GB2A103J	CHIP R	10K	J 1/10W	
R96			RK73GB2A183J	CHIP R	18K	J 1/10W	
R97			RK73GB2A104J	CHIP R	100K	J 1/10W	
R98			RK73FB2B203J	CHIP R	20K	J 1/8W	
R99			RK73EB2E473J	CHIP R	47K	J 1/4W	
R100			RK73FB2B683J	CHIP R	68K	J 1/8W	
R101			RK73GB2A473J	CHIP R	47K	J 1/10W	
R102-104			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R110,111			RK73PB2H561J	CHIP R	560	J 1/2W	
R112			RK73GB2A223J	CHIP R	22K	J 1/10W	
R113,114			RK73PB2H561J	CHIP R	560	J 1/2W	
R115			RK73FB2B472J	CHIP R	4.7K	J 1/8W	
R116			RK73GB2A223J	CHIP R	22K	J 1/10W	KK1M1
R117			RK73GB2A000J	CHIP R	0.0	J 1/10W	E1
R118,119			RK73PB2H221J	CHIP R	220	J 1/2W	KK1M1
R120			RK73FB2B472J	CHIP R	4.7K	J 1/8W	
R130,131			RK73GB2A104J	CHIP R	100K	J 1/10W	
R132			RK73GB2A473J	CHIP R	47K	J 1/10W	
R160			RK73EB2E471J	CHIP R	470	J 1/4W	
R201			RK73GB2A333J	CHIP R	33K	J 1/10W	
R202			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R208			RK73GB2A100JH	CHIP R	10	J 1/10W	
R209			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R210			RK73GB2A221J	CHIP R	220	J 1/10W	
R212			RK73GB2A223J	CHIP R	22K	J 1/10W	
R213			RK73GB2A133J	CHIP R	13K	J 1/10W	
R242-247			RK73GB2A101JH	CHIP R	100	J 1/10W	
R248			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R249			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	
R260			RK73GB2A103J	CHIP R	10K	J 1/10W	
R300			RK73GB2A225J	CHIP R	2.2M	J 1/10W	
R302			RK73GB2A103J	CHIP R	10K	J 1/10W	
R303,304			RK73GB2A104J	CHIP R	100K	J 1/10W	
R306			RK73GB2A473J	CHIP R	47K	J 1/10W	
R308,309			RK73GB2A473J	CHIP R	47K	J 1/10W	
R312			RK73GB2A101J	CHIP R	100	J 1/10W	
R313			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R314			RK73GB2A223J	CHIP R	22K	J 1/10W	E1
R315			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R317			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R318			RK73GB2A473J	CHIP R	47K	J 1/10W	
R319			RK73GB2A104J	CHIP R	100K	J 1/10W	
R320			RK73GB2A333J	CHIP R	33K	J 1/10W	
R321			RK73GB2A473J	CHIP R	47K	J 1/10W	
R323			RK73GB2A473J	CHIP R	47K	J 1/10W	
R324			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R325			RK73GB2A104J	CHIP R	100K	J 1/10W	
R326			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R327,328			RK73GB2A104J	CHIP R	100K	J 1/10W	
R330			RK73GB2A104J	CHIP R	100K	J 1/10W	
R331			RK73GB2A222J	CHIP R	2.2K	J 1/10W	KK1M1
R331,332			RK73GB2A222J	CHIP R	2.2K	J 1/10W	E1
R333			RK73GB2A104J	CHIP R	100K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R335			RK73GB2A184J	CHIP R	180K	J 1/10W	
R336			RK73GB2A471J	CHIP R	470	J 1/10W	
R337			RK73GB2A225J	CHIP R	2.2M	J 1/10W	
R338			RK73GB2A184J	CHIP R	180K	J 1/10W	
R340			RK73GB2A473J	CHIP R	47K	J 1/10W	
R341			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R352			RK73GB2A223J	CHIP R	22K	J 1/10W	KK1E1
R353,354			RK73GB2A223J	CHIP R	22K	J 1/10W	M1
R354			RK73GB2A223J	CHIP R	22K	J 1/10W	KK1
R355			RK73GB2A223J	CHIP R	22K	J 1/10W	E1
R356			RK73GB2A223J	CHIP R	22K	J 1/10W	K
R357			RK73GB2A223J	CHIP R	22K	J 1/10W	K1E1M1
R358,359			RK73GB2A104J	CHIP R	100K	J 1/10W	
R360			RK73GB2A223J	CHIP R	22K	J 1/10W	
R361			RK73GB2A104J	CHIP R	100K	J 1/10W	
R362			RK73GB2A473J	CHIP R	47K	J 1/10W	
R363			RK73GB2A101J	CHIP R	100	J 1/10W	
R364,365			RK73GB2A103J	CHIP R	10K	J 1/10W	
R366			RK73GB2A473J	CHIP R	47K	J 1/10W	
R400-404			RK73EB2E432J	CHIP R	4.3K	J 1/4W	
R405			RK73EB2E101J	CHIP R	100	J 1/4W	
R406			RK73EB2E100J	CHIP R	10	J 1/4W	
R407			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R408			RK73EB2E100J	CHIP R	10	J 1/4W	
R409			RK73EB2E432J	CHIP R	4.3K	J 1/4W	
R410			RK73EB2E101J	CHIP R	100	J 1/4W	
R440			RK73FB2B181J	CHIP R	180	J 1/8W	
R441			RK73GB2A331J	CHIP R	330	J 1/10W	
R442,443			RK73GB2A223J	CHIP R	22K	J 1/10W	
R444			RK73FB2B181J	CHIP R	180	J 1/8W	
R445			RK73GB2A331J	CHIP R	330	J 1/10W	
R450			RK73FB2B181J	CHIP R	180	J 1/8W	
R451			RK73GB2A331J	CHIP R	330	J 1/10W	
R452,453			RK73GB2A223J	CHIP R	22K	J 1/10W	
R454			RK73FB2B181J	CHIP R	180	J 1/8W	
R455			RK73GB2A331J	CHIP R	330	J 1/10W	
R460			RK73FB2B181J	CHIP R	180	J 1/8W	
R461			RK73GB2A331J	CHIP R	330	J 1/10W	
R462,463			RK73GB2A223J	CHIP R	22K	J 1/10W	
R464			RK73FB2B181J	CHIP R	180	J 1/8W	
R465			RK73GB2A331J	CHIP R	330	J 1/10W	
R470			RK73EB2E101J	CHIP R	100	J 1/4W	
R471			RK73GB2A123J	CHIP R	12K	J 1/10W	
R472			RK73EB2E101J	CHIP R	100	J 1/4W	
R473			RK73GB2A123J	CHIP R	12K	J 1/10W	
R474			RK73EB2E470J	CHIP R	47	J 1/4W	
R475			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R480,481			RK73GB2A471J	CHIP R	470	J 1/10W	
R482			RK73FB2B821J	CHIP R	820	J 1/8W	
R483			RK73GB2A223J	CHIP R	22K	J 1/10W	
R505			RK73GB2A102J	CHIP R	1.0K	J 1/10W	KK1E1
R507-509			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R521-523			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R551,552			RK73GB2A473J	CHIP R	47K	J 1/10W	
R553,554			RK73GB2A104J	CHIP R	100K	J 1/10W	

K: KIV-BT900 **K1**: KIV-700 **M1**: KIV-700 **E1**: KIV-700
(**E** : Europe **K** : North America **M** : Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-677x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R603			RK73GB2A2R2J	CHIP R 2.2	J	1/10W	K
R606,607			RK73GB2A103J	CHIP R 10K	J	1/10W	K
R610,611			RK73GB2A473J	CHIP R 47K	J	1/10W	K
R612,613			RK73GB2A223J	CHIP R 22K	J	1/10W	K
R614			RK73GB2A473J	CHIP R 47K	J	1/10W	K
R617			RK73GB2A473J	CHIP R 47K	J	1/10W	K
R620			RK73GB2A472J	CHIP R 4.7K	J	1/10W	K
R633,634			RK73GB2A331J	CHIP R 330	J	1/10W	K
R635,636			RK73EB2E101J	CHIP R 100	J	1/4W	K
R701			RK73GB2A333J	CHIP R 33K	J	1/10W	
R702			RK73GB2A473J	CHIP R 47K	J	1/10W	
R704			RK73GB2A123J	CHIP R 12K	J	1/10W	
R705			RK73GH2A103D	CHIP R 10K	D	1/10W	
R706,707			RK73GH2A333D	CHIP R 33K	D	1/10W	
R709			RK73GH2A473D	CHIP R 47K	D	1/10W	
R712,713			RK73GB2A331J	CHIP R 330	J	1/10W	
R714,715			RK73GB2A223J	CHIP R 22K	J	1/10W	
R716,717			RK73FB2B181J	CHIP R 180	J	1/8W	
R718			RK73EB2E750J	CHIP R 75	J	1/4W	
R719			RK73GB2A750J	CHIP R 75	J	1/10W	
R720,721			RK73GB2A221J	CHIP R 220	J	1/10W	
R722,723			RK73GB2A101J	CHIP R 100	J	1/10W	
R726			RK73EB2E750J	CHIP R 75	J	1/4W	
R728,729			RK73EB2E101J	CHIP R 100	J	1/4W	
R730			RK73EB2E470J	CHIP R 47	J	1/4W	
R731,732		✻	RK73GB2A123JH	CHIP R 12K	J	1/10W	
R733			RK73GB2A473J	CHIP R 47K	J	1/10W	
R734			RK73EB2E103J	CHIP R 10K	J	1/4W	
R735			RK73GB2A104J	CHIP R 100K	J	1/10W	
D1			S2V60-5009F46	DIODE			
D30			UDZW5.6(B)	ZENER DIODE			
D31			D1FJ4	DIODE			
D41			1SR154-400	DIODE			
D51			1SS355	DIODE			
D52			UDZW10(B)	ZENER DIODE			
D70			CMS14	DIODE			
D80			1SR154-400	DIODE			
D82			RKZ5.6KG(B2)	ZENER DIODE			
D90			RKZ6.2KG(B2)	ZENER DIODE			
D92 ,93			RKZ6.8KG(B2)	ZENER DIODE			
D110			HSU119TRF-E	DIODE			
D111-114			1SR154-400	DIODE			
D130			RKZ4.7KG(B2)	ZENER DIODE			
D200			MC2846-T111	DIODE			
D201			HSU119TRF-E	DIODE			
D263-265			MC2846-T111	DIODE			
D269			RKZ6.8KG(B2)	ZENER DIODE			
D301,302			MC2846-T111	DIODE			
D351			HSU119TRF-E	DIODE			
D400,401			RKZ6.2KG(B2)	ZENER DIODE			
D403,404			RKZ6.2KG(B2)	ZENER DIODE			
D406			RKZ6.2KG(B2)	ZENER DIODE			
D408-410			RKZ6.8KG(B2)	ZENER DIODE			
D441			MC2846-T111	DIODE			

Ref. No.	Add	New	Parts No.	Description	Destination
D461			MC2846-T111	DIODE	
D470,471			RKZ6.8KG(B2)	ZENER DIODE	
D472			UDZW6.8(B)	ZENER DIODE	
D532			DA204U	DIODE	K
D701			CMS14	DIODE	
D702			DAN202U	DIODE	
D703			UDZW16(B)	ZENER DIODE	
D705-707			UDZW6.8(B)	ZENER DIODE	
IC10			M5237ML-CF0J	ANALOGUE IC	
IC20			XC6201P502PR	ANALOGUE IC	
IC70	3B		Impossible to replace	ANALOGUE IC (See exploded view)	
IC170			74AHC1G08GW	MOS-IC	K
IC171			74AHCT1G08GW	MOS-IC	K
IC201			E-TDA7850A	ANALOGUE IC	
IC240			AK7600VF	MOS-IC	
IC300			M24C08-RDW6TP	ROM IC	E1M1
IC300			M24256BRDW6TP	ROM IC	KK1
IC301			XC6120N362N1	MOS-IC	
IC302		✻	W05-1616-00	MICROCONTROLLER IC	K
IC302		✻	W05-1617-00	MICROCONTROLLER IC	K1E1M1
IC303			74HC2G02DP	MOS-IC	
IC304			HD74HC27FP-E	MOS-IC	
IC451			E-TDA7716	ANALOGUE IC	
IC500			E-TDA7478AD	ANALOGUE IC	KK1E1
IC551			TC7WH126FU-F	MOS-IC	
IC552			TC7WT126FU-F	MOS-IC	
IC600			NJM4565V-ZB	ANALOGUE IC	K
IC700	1B		Impossible to replace	ANALOGUE IC (See exploded view)	
IC701		✻	BH7649KS2	ANALOGUE IC	
Q10			DTA124EUA	DIGITAL TRANSISTOR	
Q11			DTC124EUA	DIGITAL TRANSISTOR	
Q12			KTA1046-P	TRANSISTOR	
Q32			2SC4081	TRANSISTOR	
Q33			KTA1046-P	TRANSISTOR	
Q50			2SC4081	TRANSISTOR	
Q51			KTA1046-P	TRANSISTOR	
Q52			DTA124EUA	DIGITAL TRANSISTOR	
Q53			DTC124EUA	DIGITAL TRANSISTOR	
Q80			2SC4081	TRANSISTOR	
Q81			2SC5053	TRANSISTOR	
Q82			DTA124EUA	DIGITAL TRANSISTOR	
Q83			RT1N241M-T111	TRANSISTOR	
Q90			2SC4081	TRANSISTOR	
Q92 ,93			2SC4081	TRANSISTOR	
Q110			DTC114YUA	DIGITAL TRANSISTOR	
Q111			DTA114EUA	DIGITAL TRANSISTOR	
Q112			2SA1576A	TRANSISTOR	
Q113			2SB1188(Q,R)	TRANSISTOR	E1
Q113,114			2SB1188(Q,R)	TRANSISTOR	KK1M1
Q115			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
Q130			RT1N441M-T111	TRANSISTOR	
Q170			RT1N241M-T111	TRANSISTOR	K
Q366			RT1N144M-T111	TRANSISTOR	
Q440			RT1N430M-T111	TRANSISTOR	
Q441			RT1P241M-T111	TRANSISTOR	

K: KIV-BT900 **K1**: KIV-700 **M1**: KIV-700 **E1**: KIV-700
(**E** : Europe **K** : North America **M** : Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-677x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q442			RT1N430M-T111	TRANSISTOR	
Q450,451			RT1N430M-T111	TRANSISTOR	
Q460			RT1N430M-T111	TRANSISTOR	
Q461			RT1P241M-T111	TRANSISTOR	
Q462			RT1N430M-T111	TRANSISTOR	
Q480			DTC124EUA	DIGITAL TRANSISTOR	
Q481			2SA1577	TRANSISTOR	
Q602			RT1N241M-T111	TRANSISTOR	
Q702			DTC144EUA	DIGITAL TRANSISTOR	
Q703			DTA124EUA	DIGITAL TRANSISTOR	
Q704,705			DTC143TUA	DIGITAL TRANSISTOR	
Q706			DTA114YUA	DIGITAL TRANSISTOR	
TH200			PRF18BE471QS2	POSITIVE RESISTOR	
A900	3B		W02-5374-05	ELECTRIC CIRCUIT MODULE	K
A480	2B		X86-4032-70	FRONT-END UNIT	E1
A480	2B		X86-4230-11	FRONT-END UNIT	KK1M1

Ref. No.	Add	New	Parts No.	Description	Destination

K: KIV-BT900 **K1**: KIV-700 **M1**: KIV-700 **E1**: KIV-700
(**E** : Europe **K** : North America **M** : Other Areas)

⚠Indicates safety critical components.