


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

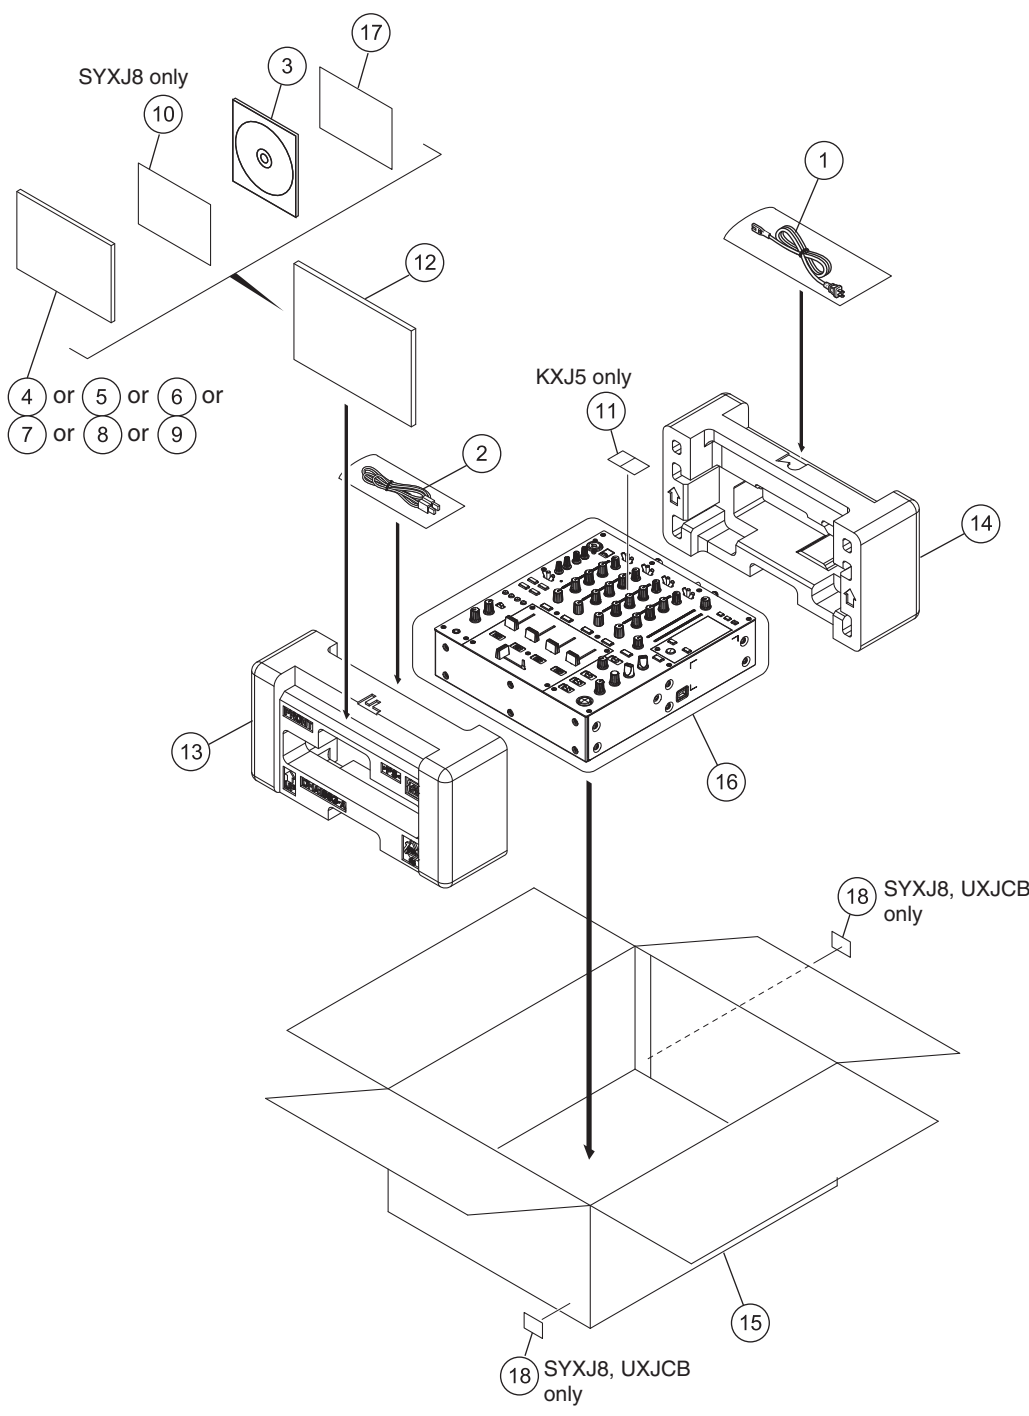

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
⚠	1 AC Power Cord	See Contrast table (2)
	2 USB Cable	DDE1128
	3 Driver Software CD-ROM	DXX2694
	4 Operating Instructions	See Contrast table (2)
	5 Operating Instructions	See Contrast table (2)
	6 Operating Instructions	See Contrast table (2)
	7 Operating Instructions	See Contrast table (2)
	8 Operating Instructions	See Contrast table (2)
	9 Operating Instructions	See Contrast table (2)
NSP	10 Warranty Card (WY)	See Contrast table (2)
NSP	11 Label RCY	See Contrast table (2)
NSP	12 Polyethylene Bag	AHG7117
	13 Packing Pad/A	DHA1883
	14 Packing Pad/B	DHA1884
	15 Packing Case	See Contrast table (2)
	16 Packing Sheet	RHC1023
NSP	17 Leaflet/NI	DRM1367
	18 Label/NI	See Contrast table (2)

(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5
⚠	1	AC Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Operating Instructions (En, Fr, De, It)	DRB1604	Not used	Not used	Not used	Not used
	5	Operating Instructions (NI, Es, Ru)	DRB1605	Not used	Not used	Not used	Not used
	6	Operating Instructions (En)	Not used	DRB1606	Not used	Not used	Not used
	7	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1607	Not used	Not used
	8	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1608	Not used
	9	Operating Instructions (En, Zhcn)	Not used	Not used	Not used	Not used	DRB1609
NSP	10	Warranty Card (WY)	ARY7107	Not used	Not used	Not used	Not used
NSP	11	Label RCY	Not used	Not used	Not used	DRW2487	Not used
	15	Packing Case	DHG3093	DHG3094	DHG3095	DHG3098	DHG3097
	18	Label/NI	DRW2543	DRW2543	Not used	Not used	Not used

Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5
⚠	1	AC Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Operating Instructions (En, Fr, De, It)	DRB1604	Not used	Not used	Not used	Not used
	5	Operating Instructions (NI, Es, Ru)	DRB1605	Not used	Not used	Not used	Not used
	6	Operating Instructions (En)	Not used	DRB1606	Not used	Not used	Not used
	7	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1607	Not used	Not used
	8	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1608	Not used
	9	Operating Instructions (En, Zhcn)	Not used	Not used	Not used	Not used	DRB1609
NSP	10	Warranty Card (WY)	ARY7107	Not used	Not used	Not used	Not used
NSP	11	Label RCY	Not used	Not used	Not used	DRW2487	Not used
	15	Packing Case	DHG3105	DHG3106	DHG3107	DHG3110	DHG3109
	18	Label/NI	DRW2543	DRW2543	Not used	Not used	Not used

A

B

C

D

E

F



(1) EXTERIOR SECION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	USBI Assy	DWX3361	26	Terminal Screw	AKE-031	
2	INPUT Assy	DWX3362	27	Front Panel	DNK6063	A
3	HPJK Assy	DWX3363	28	Knob/MIC	DAA1301	
4	MIC1 Assy	DWX3371	NSP 29	Label	See Contrast table (2)	
5	MTRM Assy	DWX3372	NSP 30	Label	See Contrast table (2)	
6	Short Pin Plug	AKM7008	NSP 31	Caution Label	See Contrast table (2)	
7	Shielded Conn-Cable	DDA1043	NSP 32	V Select Label	See Contrast table (2)	
8	FFC/25P	DDD1597	33	•••••		
9	FFC/22P	DDD1598	34	Flange Nut M9	DBN1008	
10	Connector Assy (J2)	PF04PP-S05	35	Nut M12	DBN1018	
11	Cable (J3)	PF04PP-S17	36	Nut (M12)	NKX2FNI	B
12	Stay/HP	DNF1907	37	Washer	DEC2920	
13	Shield Plate/INP	DNF1908	38	Screw (FE)	See Contrast table (2)	
14	Bracket/USB	DNF1909	39	Screw (M3*5)	DBA1340	
15	Bracket/MIC	DNF1910	40	Screw	BBZ30P060FTB	
16	Stay/INP	DNF1911	41	Screw	BBZ30P060FTC	
17	Cover/PCB	DNK6136	42	Screw	BBZ40P060FTB	
18	Nylon Rivet	AEC1671	43	Screw	BPZ30P080FTB	
19	Locking Mini Clamp	DEC2439	44	Screw	BPZ30P120FTB	
20	Holder	VEC1355	45	Screw	PMH30P100FTB	C
21	USB Cover B	DNK5868				
22	Side Panel L	DNK6061				
23	Side Panel R	See Contrast table (2)				
24	Panel/USB	DNK6120				
25	Knob/POW	See Contrast table (2)				

(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5	
NSP	23	Side Panel R	DNK6062	DNK6062	Not used	DNK6062	DNK6062	
	23	Side Panel R/G	Not used	Not used	DNK6065	Not used	Not used	
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used	
	29	Label	DAL1207	DAL1208	DAL1209	DAL1212	DAL1211	
	30	Label	Not used	DRW1975	Not used	Not used	Not used	
NSP	31	Caution Label	Not used	DRW2429	DRW2430	DRW2542	Not used	E
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used	
	38	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290	
Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5	
NSP	23	Side Panel R	DNK6062	DNK6062	Not used	DNK6062	DNK6062	
	23	Side Panel R/G	Not used	Not used	DNK6065	Not used	Not used	
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used	
	29	Label	DAL1213	DAL1214	DAL1215	DAL1218	DAL1217	
	30	Label	Not used	DRW1975	Not used	Not used	Not used	
NSP	31	Caution Label	Not used	DRW2429	DRW2430	DRW2542	Not used	F
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used	
	38	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436	

9.3 BOTTOM SECTION

A


B

C

D

E

F

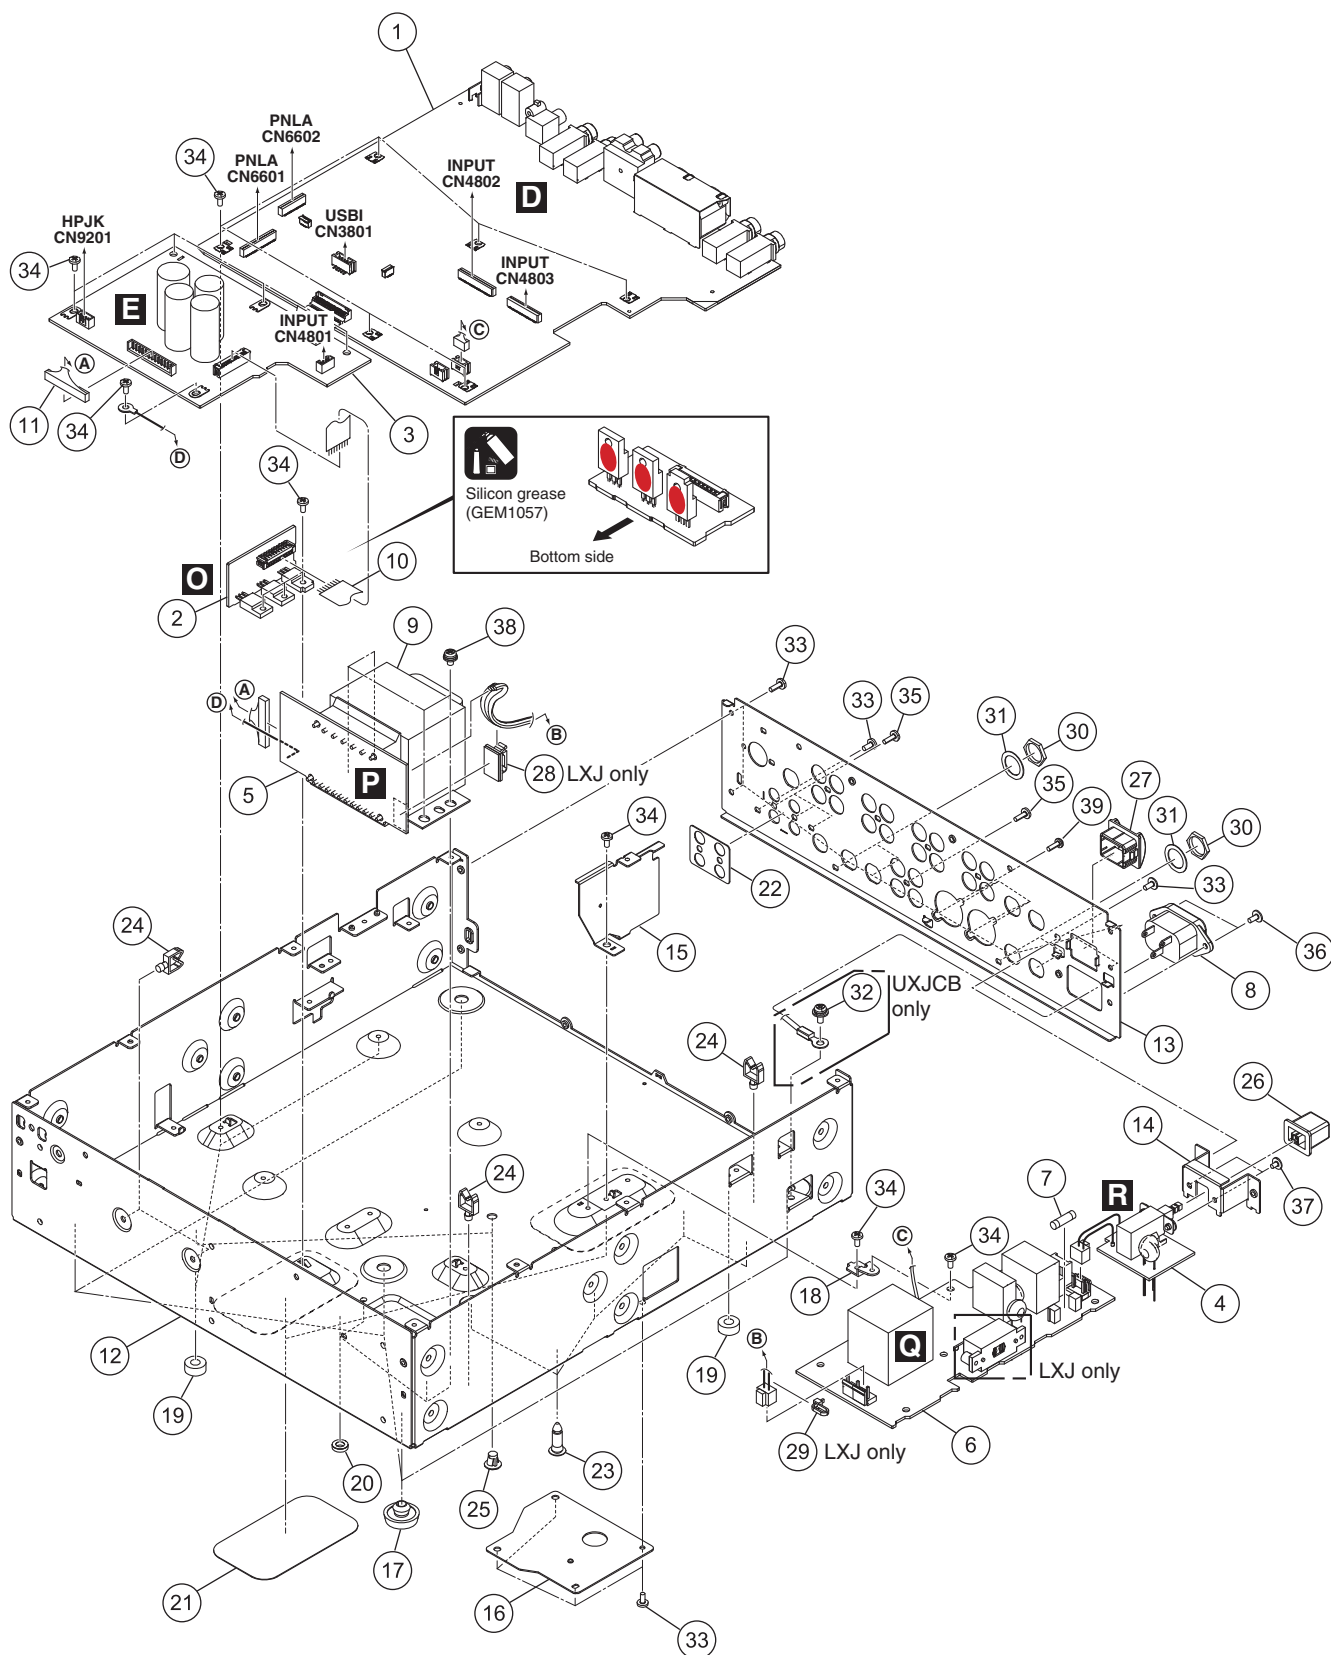

(1) BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
	1 MAIN Assy	DWX3360		21 Sheet/BOT	DEC3404	
	2 REG Assy	DWR1510	NSP 22	Insulating Sheet	DMR1010	A
	3 SEC/HP Assy	DWR1511		23 PCB Holder	PNW2029	
	4 ACSW Assy	DWR1515		24 Holder	VEC1355	
	5 TRANS Assy	See Contrast table (2)	NSP 25	PC Support	VEC1749	
	6 PRIMARY Assy	See Contrast table (2)		26 Power Knob	DAC2306	
⚠	7 Fuse (FU1: T630 mA)	AEK1052		27 Power Knob Guard	DNK4534	
⚠	8 AC Inlet	See Contrast table (2)		28 Locking Wire Saddle	See Contrast table (2)	
⚠	9 Transformer/L (T3101)	See Contrast table (2)		29 Binder	See Contrast table (2)	
	10 Jumper Wire (J1)	D20PYY1010E		30 Nut (M12)	NKX2FNI	
	11 Connector Assy (J4)	PF13EE-S17		31 Washer	DEC2920	B
NSP 12	Chassis	DNA1437		32 Screw	See Contrast table (2)	
	13 Rear Panel	See Contrast table (2)		33 Screw	BBZ30P060FTB	
	14 Bracket PSW	DNF1759		34 Screw	BBZ30P060FTC	
	15 Shield Plate/PW	DNF1906		35 Screw	BPZ30P080FTB	
NSP 16	Plate	DNK6124		36 Screw	IBZ30P080FTB	
	17 Foot (Rubber)	REC-434		37 Screw	IMZ30P040FTC	
NSP 18	PCB Stay (FE)	VNE2489		38 Screw	PMB40P060FTB	
NSP 19	Spacer	AEB7092		39 Screw	PPZ30P080FTB	
	20 Spacer	DEB1998				C

(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5	
	5	TRANS Assy	DWR1516	DWR1517	DWR1512	DWR1516	DWR1516	
	6	PRIMARY Assy	DWR1519	DWR1520	DWR1509	DWR1519	DWR1519	D
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916	
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used	
⚠	9	Transformer/L (T3101)	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256	
	13	Rear Panel	DNC2069	DNC2070	DNC2081	DNC2082	DNC2073	
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used	
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used	
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used	
Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5	
	5	TRANS Assy	DWR1516	DWR1517	DWR1512	DWR1516	DWR1516	
	6	PRIMARY Assy	DWR1519	DWR1520	DWR1509	DWR1519	DWR1519	E
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916	
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used	
⚠	9	Transformer/L (T3101)	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256	
	13	Rear Panel	DNC2069	DNC2070	DNC2081	DNC2082	DNC2073	
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used	
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used	
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used	

9.4 CONTROL PANEL SECTION (1/2)

A


B

C

D

E

F

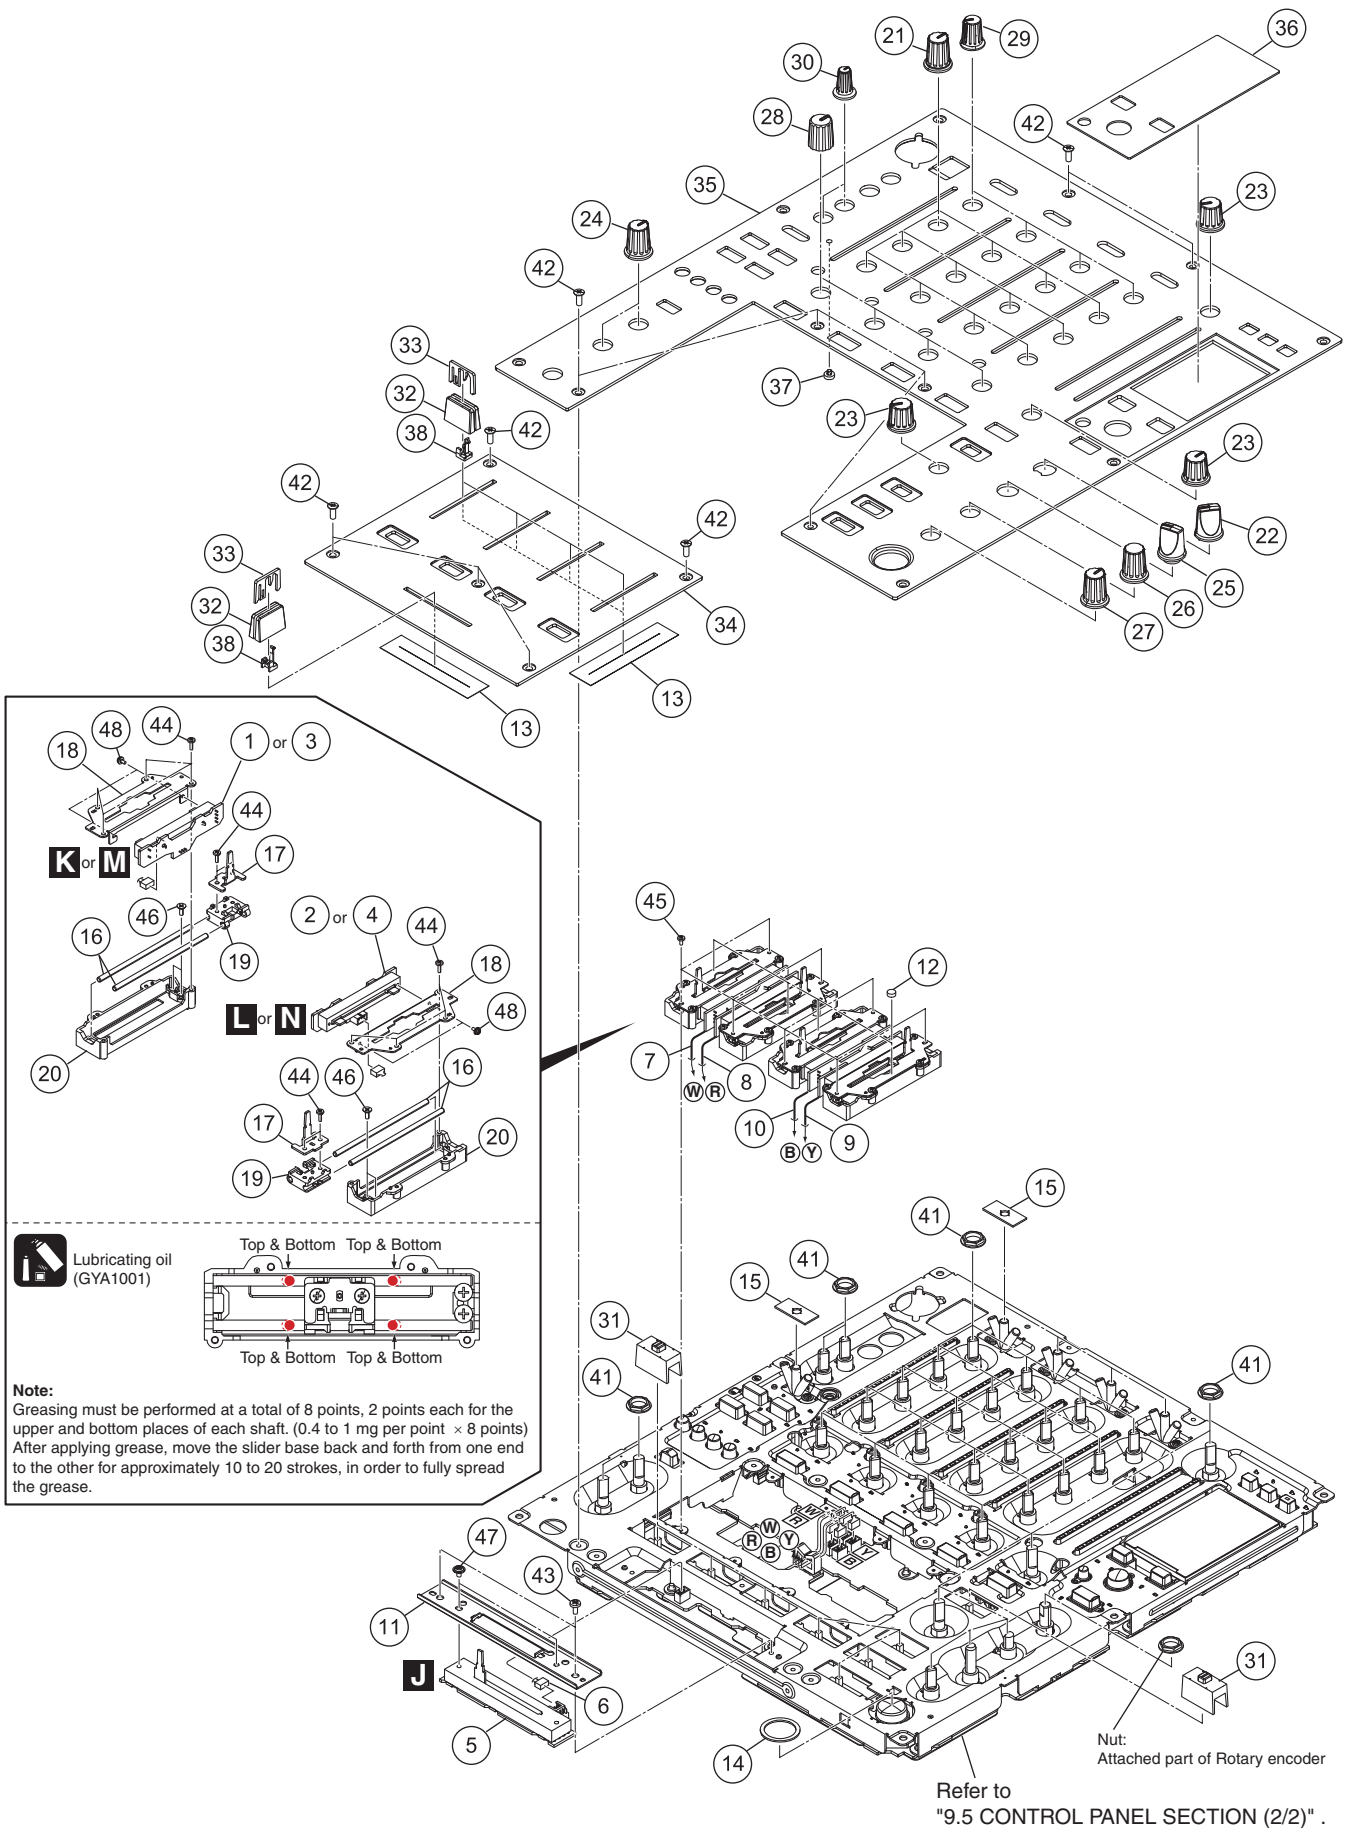

(1) CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	FAD1 Assy	DWX3366	26	Knob (TIME)	DAA1214	
2	FAD2 Assy	DWX3367	27	Rotary Knob (BN)	DAA1220	A
3	FAD3 Assy	DWX3368	28	Rotary SW Knob (HM)	DAA1256	
4	FAD4 Assy	DWX3369	29	Knob/CH	DAA1300	
5	FADC Assy	DWX3370	30	Knob/EQ	DAA1302	
6	Connector Assy	PF03PP-B07	31	Slide SW Cap (W)	DAC2401	
7	Connector Assy	PF03PP-B12	32	Slider Knob 1	DAC2684	
8	Connector Assy	PF03PP2B07	33	Slider Knob 2	DAC2685	
9	Connector Assy	PF03PP4B12	34	Fader Panel	See Contrast table (2)	
10	Connector Assy	PF03PP6B07	35	Control Panel	See Contrast table (2)	
11	CRF Stay	DNF1870	36	Panel/FL	DAH2877	B
12	SW Cushion HH48/2	DEC2538	37	Lens	DNK4532	
13	Fader Packing	DEC2903	38	Slider Knob Stopper	DNK5888	
14	SW Packing (EF)	DEC2929	39	•••••		
15	SW Packing	DED1177	40	•••••		
NSP	16 Guide Shaft (S)	DLA1918	41	Flange Nut M9	DBN1008	
	17 Lever Plate	DNH2954	42	Screw (FE)	See Contrast table (2)	
	18 VR Stay	DNH2955	43	Screw	BBZ30P060FTC	
	19 Slider Base	DNK5851	44	Screw	BPZ20P060FTC	
	20 Shaft Holder	DNK5852	45	Screw	BSZ20P040FTB	C
	21 Rotary SW Knob (B)	DAA1176	46	Screw	CPZ26P080FTC	
	22 Select Knob	DAA1205	47	Screw	IMZ30P040FTC	
	23 Knob (MA)	DAA1210	48	Screw	PMH20P040FTC	
	24 Knob (Black)	DAA1212				
	25 FX SEL Knob	DAA1213				

(2) CONTRAST TABLE


DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5
	34	Fader Panel	DNB1196	DNB1196	DNB1196	DNB1196	DNB1196
	35	Control Panel	DNB1197	DNB1197	DNB1197	DNB1197	DNB1197
	42	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290

Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5
	34	Fader Panel	DNB1201	DNB1201	DNB1201	DNB1201	DNB1201
	35	Control Panel	DNB1202	DNB1202	DNB1202	DNB1202	DNB1202
	42	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

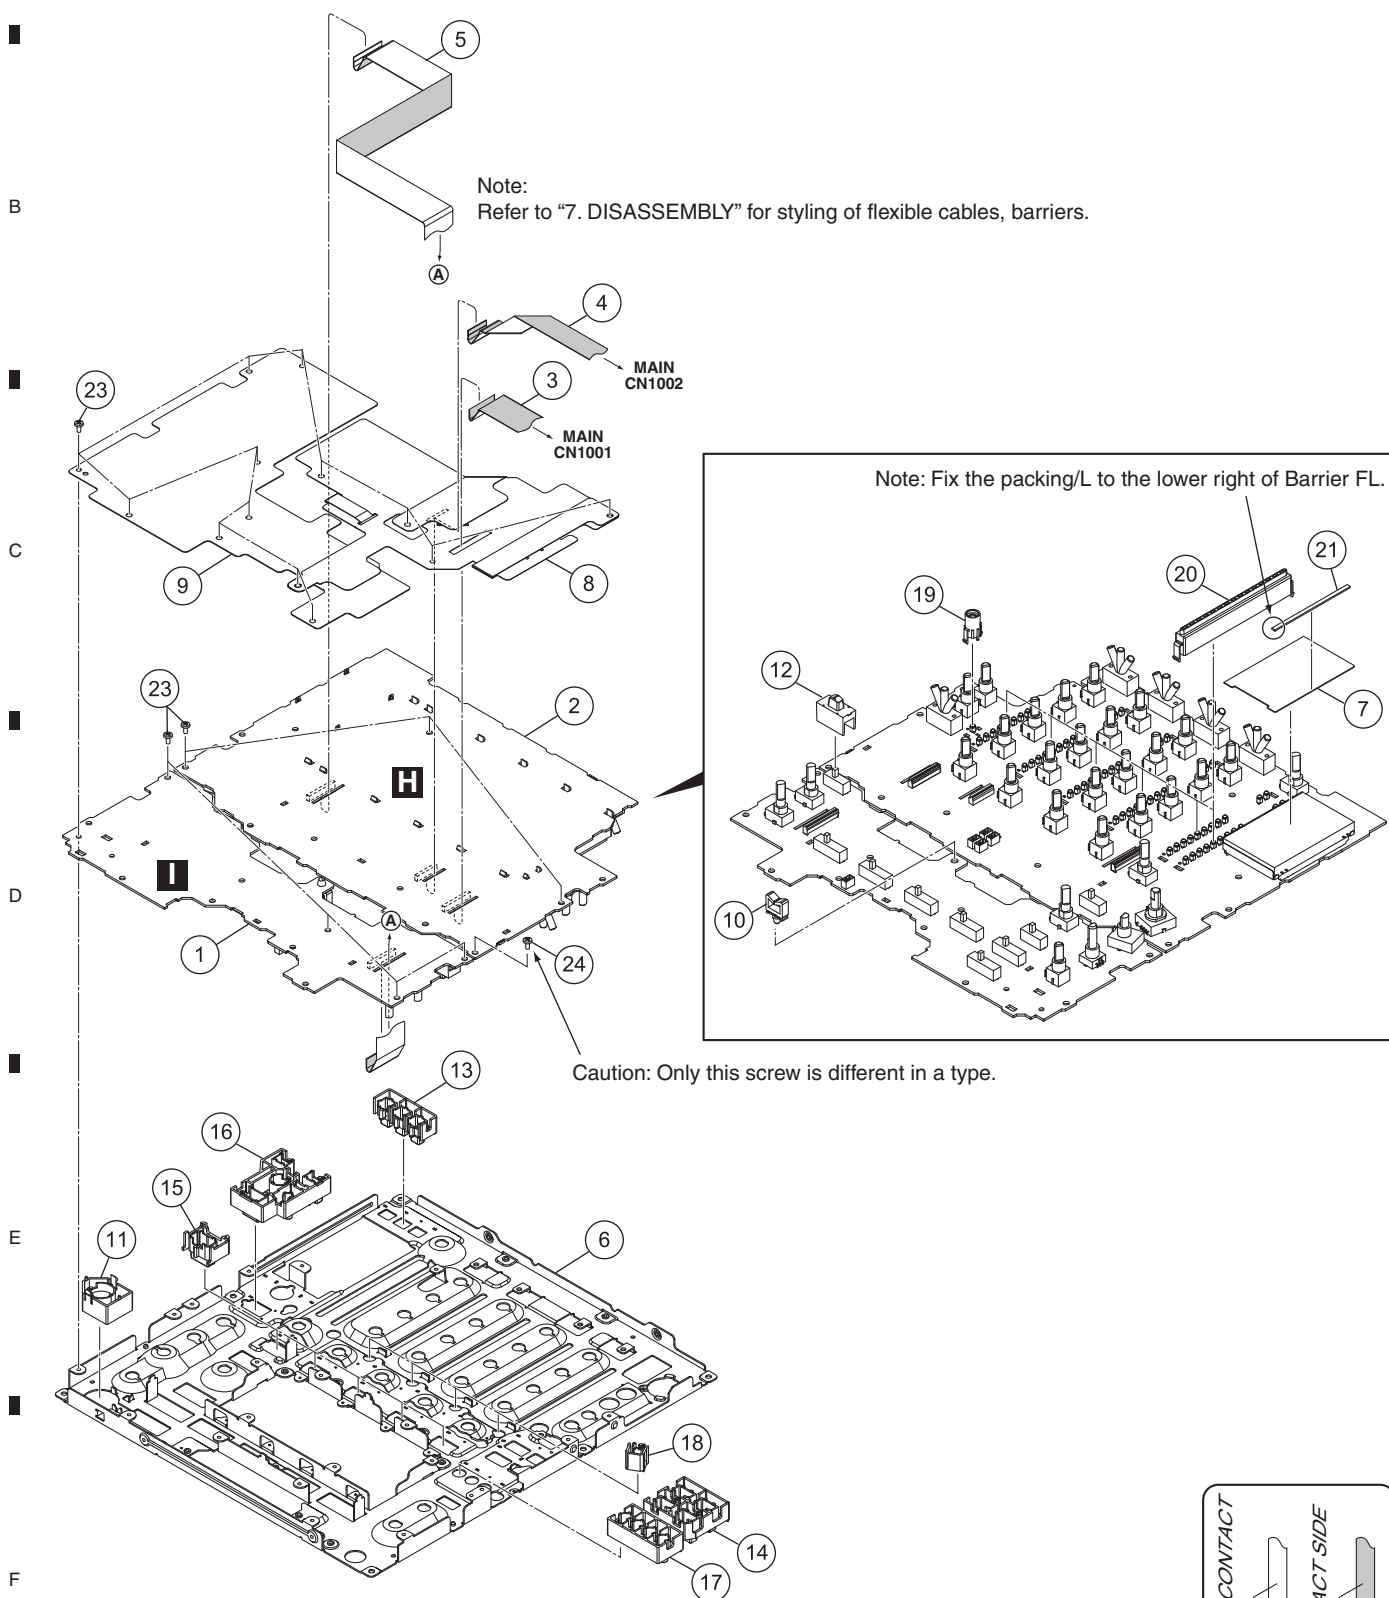

CONTROL PANEL SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.	
1	PNLB Assy	DWX3365	A
2	PNLA Assy	DWX3359	
3	FFC/24P	DDD1599	
4	FFC/17P	DDD1600	
5	FFC/27P	DDD1601	
6	Panel Stay	DND1272	
7	Barrier FL	DEC3351	
8	Barrier/PNL	DMR1007	
9	Barrier/A	DMR1009	
10	Wire Saddle	XEC3100	
11	Effect Knob	DAC2304	B
12	Slide SW Cap	DAC2400	
13	Button (MIDI)	DAC2655	
14	Button/CFX	DAC2837	
15	Button/CUE	DAC2838	
16	Button/TAP	DAC2839	
17	Button/FS	DAC2840	
18	Button/BFX	DAC2841	
19	Lens Holder	DNK4533	
20	Lebel Meter Assy	DXB1882	
21	Packing/L	DEC3416	C
22	•••••		
23	Screw	BBZ30P060FTC	
24	Screw	PBH30P080FTB	
			D
			E
			F

12. PCB PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56×10^1 $\rightarrow$ 561 RD1/4PU $\begin{matrix} 5 & 6 & 1 \end{matrix}$ J

47 k Ω $\rightarrow$ 47×10^3 $\rightarrow$ 473 RD1/4PU $\begin{matrix} 4 & 7 & 3 \end{matrix}$ J

0.5 Ω $\rightarrow$ R50 RN2H $\begin{matrix} R & 5 & 0 \end{matrix}$ K

1 Ω $\rightarrow$ 1R0 RS1P $\begin{matrix} 1 & R & 0 \end{matrix}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562×10^1 $\rightarrow$ 5621 RN1/4PC $\begin{matrix} 5 & 6 & 2 & 1 \end{matrix}$ F

● Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST OF ASSEMBLIES							
NSP	1..MOTHER ASSY	DWM2464	NSP	1..SUB ASSY (SYXJ8, KXJ5, XJCN5)	DWM2471		
	2..MAIN ASSY	DWX3360	NSP	1..SUB ASSY (UXJCB)	DWM2472		
	2..USB1 ASSY	DWX3361	NSP	1..SUB ASSY (LXJ)	DWM2466		
				2..ACSW ASSY	DWR1515		
				2..TRANS ASSY (SYXJ8, KXJ5, XJCN5)	DWR1516		
NSP	1..AUDIO ASSY	DWM2465		2..TRANS ASSY (UXJCB)	DWR1517		
	2..REG ASSY	DWR1510		2..TRANS ASSY (LXJ)	DWR1512		
	2..SEC/HP ASSY	DWR1511		2..PRIMARY ASSY (SYXJ8, KXJ5, XJCN5)	DWR1519		
	2..INPUT ASSY	DWX3362		2..PRIMARY ASSY (UXJCB)	DWR1520		
	2..HPJK ASSY	DWX3363		2..PRIMARY ASSY (LXJ)	DWR1509		
	2..FAD1 ASSY	DWX3366		2..PNLB ASSY	DWX3365		
	2..FAD2 ASSY	DWX3367		2..MIC1 ASSY	DWX3371		
	2..FAD3 ASSY	DWX3368		2..MTRM ASSY	DWX3372		
	2..FAD4 ASSY	DWX3369					
	2..FADC ASSY	DWX3370		1..PNLA ASSY	DWX3359		

CONTRAST OF PCB ASSEMBLIES

P TRANS ASSY

DWR1516, DWR1517 and DWR1512 are constructed the same except for the following:

Mark	Symbol and Description	DWR1516	DWR1517	DWR1512
$\triangle$	JP3102 Board in jumper/2P	DDX1284	DDX1284	Not used
$\triangle$	JP3101 Board in jumper/3P	Not used	Not used	DDX1285

Q PRIMARY ASSY

DWR1519, DWR1520 and DWR1509 are constructed the same except for the following:

Mark	Symbol and Description	DWR1519	DWR1520	DWR1509
$\triangle$	T3001 Transformer	DTT1245	DTT1255	DTT1242
$\triangle$	S3001 Voltage selector	Not used	Not used	AKX7020
$\triangle$	CN3004 Connector	B2P3-VH	B2P3-VH	Not used
$\triangle$	CN3003 Connector (VH)	Not used	Not used	B3P5-VH

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
PARTS LIST (DJM-850-K/SYXJ8)							
A INPUT ASSY							
SEMICONDUCTORS							
	IC 4001,4201	NJM4580D		IC 4401		NJM4565MD	
	IC 4002-4005,4202-4205	NJM2121MD		IC 4601,4603		NJM4580MD	
				IC 4602		TC7SET04FUS1	
				Q 4001-4004,4201-4204		2SK209	
				Q 4005,4006,4205,4206		LTC114EUB	
				Q 4601		LTC124EUB	

Mark	No.	Description	Part No.
	C	4409	CFTLA103J50
	C	4601	CCSRCH222J50
	C	4605	CKSRYB471K50
	C	4606	CCSRCH331J50
	C	4607,4613	CCSRCH471J50
	C	4609,4808	CKSRYB104K16
	C	4610	CCSRCH221J50
	C	4612	CKSRYB331K50
	C	4614,4615,4622,4623	CKSRYB104K25
	C	4616-4619	CEANP100M35
	C	4627,4803,4804	CKSQYB105K25
	C	4628	CCG1236
	C	4801,4802	CEAT101M25
	C	4805,4806,4809	CKSRYB103K50
	C	4807	CEAT101M10
B		MIC1 ASSY	
		<u>SEMICONDUCTORS</u>	
	D	9001-9004	RKZ15KG(B2)
		<u>MISCELLANEOUS</u>	
	JA	9001 CANON CONNECTOR	DKB1108
	CN	9001 PLUG	CKS3533
	O	MIC SHIELD	DNF1849
		<u>RESISTORS</u>	
		All Resistors	RS1/10SR###J
		<u>MISCELLANEOUS</u>	
	VA	9001,9002 VARISTORS	EZJZ1V270RM
		<u>CAPACITORS</u>	
	C	9001,9002	CFTLA103J50
	C	9009	CKSQYB105K25
C		MTRM ASSY	
		<u>MISCELLANEOUS</u>	
	VR	8801,8802 ROTARY VR	DCS1123
	CN	8801 PLUG	CKS3533
D		MAIN ASSY	
		<u>SEMICONDUCTORS</u>	
	IC	201	PCM1691DCA
	IC	301,302,402,1601	NJM4580MD
	IC	303,304	NJM2114D
	IC	401,502,602,1603	NJM4565MD
	IC	503,504	NJM4580D
	IC	601	AK4387ET
	IC	1001	AK4382AVT
	IC	1401	NJM2831F33
	IC	1402	S-1132B33-U5
	IC	1403	NJM2392M
	IC	1404	BD9325FJ
	IC	1405,1408	BD9328EFJ
	IC	1406	NJM2878F3-33
	IC	1407	S-1132B25-U5
	IC	1409,2801	S-80927CNMC-G8X
	IC	1602,1801,1802,2001	NJM4580MD

Mark No. Description**Part No.****Mark No. Description****Part No.**

IC 1604,1804,2004,2204

PCM1804DB

IC 1803,2003,2203

NJM4565MD

IC 2002,2201,2202

NJM4580MD

IC 2401,2402

AK5358AET

IC 2601,2602

TC7SH08FUS1

IC 2603

ADSP-BF525BBCZ-5A

IC 2604

M12L64164A-5TG2M

IC 2802

DYW1807

IC 2803

DYW1806

IC 2804,3004-3006,3204

TC74VHC08FK

IC 3007

XC3S50A-4FTG256C

IC 3008

DYW1808

IC 3201

D810K013BZKB400

IC 3202

M12L2561616A-

IC 3203

TC7SHU04FUS1

IC 3205

TC7SG08FU

IC 3405

AK4114VQ

Q 201,203,208-215

LTC124EUB

Q 202,1204,1205,1403

LSC4081UB

Q 204,205,1402

LSA1576UB

Q 301-304,403,404

2SK209

Q 305-308,401,402

INC2002AC1

Q 405-408,509-516

INC2002AC1

Q 505-508,601,602

2SK209

Q 603,604

INC2002AC1

Q 1201,1202,1206

HN1A01FU

Q 1207

HN1B04FU

Q 1208

LTC114YUB

Q 1401,1405,2802,2803

LTC124EUB

Q 1404

LSC4081UB

Q 1406,2804

LTA124EUB

Q 3401

2SC2412K

D 201-204,302-305

DZ2S180C

D 301,503,1202

1SS352

D 1201,1204,1205

1SS301

D 1203

1SR154-400

D 1403

RB160L-40

D 1406

CMS03

D 1601-1604,1801-1804

1SS302

D 2001-2004,2201-2204

1SS302

D 2401,2402

1SS302

D 2403,2404

RB706F-40

MISCELLANEOUS

L 201 FERRITE CORE

VTF1093

L 1401 INDUCTOR (470 UH)

DTL1123

L 1402,1403 POWER INDUCTOR

ATH7048

L 1404 SMD SPL INDUCTOR

CTH1527

L 2601 COIL

ATH7015

L 2801 CHIP COIL

LCTAW330J2520

L 3201 INDUCTOR

CTF1579

F 2601,3001,3201 EMI FILTER

DTL1106

JA 201,202 2P MINI JACK

VKN1034

JA 301,302 CANON CONNECTOR

DKB1093

JA 401 JACK

DKB1083

JA 502,503 HEADPHONE JACK

DKN1622

JA 601,602 MIC JACK

DKN1614

JA 3401 1P JACK

DKB1089

KN201 SCREW PLATE

VNE1948

KN 1201-1206 WRAPPING TERMINAL

CKF1089

X 2601 CRYSTAL (24 MHz)

DSS1203

X 2801 RESONATOR (20 MHz)

CSS1795

X 3201 CRYSTAL(24.576 MHz)

DSS1204

CN 1001 24P CONNECTOR

VKN1428

CN 1002 17P CONNECTOR

VKN1421

CN 1003 25P CONNECTOR

VKN1429

CN 1004 22P CONNECTOR

VKN1426

CN 1005 19P RECEPTACLE

AKP7199

CN 1201 CONNECTOR

AKM1274

CN 2602 CONNECTOR

AKM1276

CN 2801 CONNECTOR

VKN1933

0 CANON SHIELD

DNF1789

0 PHONE SHIELD

DNF1875

P 301,302 PROTECTOR (1 A)

AEK1073

RESISTORS

R 201,213,214

RS1/10SR0R0J

R 235-251,256-265

RS1/10SR0R0J

R 278-281,283-286

RS1/10SR0R0J

R 301-308,533-540

RN1/16SE3301D

R 309-316,325-332

RN1/16SE2402D

R 317-324

RN1/16SE3001D

R 333-340

RN1/16SE2701D

R 341-344,403,404

RN1/16SE1002D

R 345-352

RN1/16SE5601D

R 354-361

RN1/16SE6801D

R 362-365,419,422

DCN1200

R 367,368,371,372

RN1/16SE2201D

R 401,402,611,612

RS1/16SS3301D

R 405,406,409,410

RS1/16SS2202D

R 407,408,619,620

RS1/16SS2701D

R 413,414

RS1/16SS2401D

R 420,421

RN1/16SE1202D

R 423,424

RN1/16SE3302D

R 425,426

RS1/10SR100J

R 427,428,542,545

DCN1200

R 521,522

RN1/16SE5101D

R 523,524,527,528

RN1/16SE5102D

R 525,526

RN1/16SE4701D

R 529,530

RN1/16SE3901D

R 541,543,544,546

RN1/16SE1102D

R 547,549,550,552

RN1/16SE1102D

R 548,551

DCN1200

R 554,555,558,559

RN1/16SE2201D

R 607,1019,2412,2413

RAB4CQ103J

R 613,614,617,618

RS1/16SS3002D

R 615,616

RS1/16SS3001D

R 621,622

RS1/4SA821J

R 1075,1630,1631,1830

RS1/10SR0R0J

R 1205

RS1/16SS1602D

R 1206

RS1/16SS4302D

R 1210,1239

RS1/16SS4702D

R 1211

RS1/16SS6202D

R 1213,1428,1431,1440

RS1/16SS1002D

R 1214

RS1/16SS1001D

R 1215

RS1/16SS2000D

R 1216

RS1/16SS8200D

R 1228-1230

RS1/4SA130J

R 1231

RS1/16SS2701D

R 1233,1240,1245

RS1/16SS3302D

5			6			7			8		
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.				
	R	1234,1429	RS1/16SS4701D		CAPACITORS						
	R	1235	RS1/16SS2402D		C	202,1621,1821,2019	GCH1998				
	R	1236,1430	RS1/16SS2202D		C	203,222,231-238	CKSSYB104K10			A	
	R	1242,1253	RS1/16SS1003D		C	204,209,214,217	CKSSYB102K50				
	R	1244	RS1/16SS1202D		C	206,211,212,601	CKSSYB103K16				
	R	1247	RS1/16SS6201D		C	208,1203,1207,1212	CKSSYB103K25				
	R	1248	RS1/16SS7500D		C	213,216,219,1408	CKSRYP105K10				
	R	1252	RS1/16SS8202D		C	215,218,220,401	CEVW100M16				
	R	1403	RS1/10SR152J		C	249,605,1005,1201	CKSSYB102K50				
	R	1404,1405	RS1/8SQ1R5J		C	301-304	CCSRCH222J50				
	R	1407	RS1/10SR3902D		C	305-308,523,524	CCSRCH471J50				
	R	1408	RS1/10SR1501D		C	309-316	CCSSCH680J50				
	R	1412,1413,1435	RS1/10SR220J		C	317,321,335,348	CEHVAW101M25				
	R	1415	RS1/10SR183J		C	318-320,322,337	CKSRYP104K25			B	
	R	1421-1425	RS1/10SR153J		C	323-326	CEHVAW471M16				
	R	1426	RS1/16SS7501D		C	327-330	CKSSYB473K16				
	R	1427	RS1/16SS3902D		C	338,339,344,345	CCSSCH101J50				
	R	1438	RS1/16SS2200D		C	340,343,346,409	CKSRYP104K25				
	R	1439	RS1/16SS3301D		C	349-352,531-534	CCSSCH101J50				
	R	1601-1608,1801-1808	RN1/16SE1002D		C	355-358	CEANP470M25				
	R	1609-1612,1809-1812	RN1/16SE1101D		C	359-362,427-430	CFHXSQ472J16				
	R	1613-1616,1813-1816	RN1/16SE2200D		C	402,566,567,608	CEVW100M16				
	R	1617-1628,1817-1828	RN1/16SE2401D		C	403,404	CCSQCH472J50				
	R	1831,2030,2031,2230	RS1/10SR0R0J		C	405,406	CCSRCH821J50				
	R	2001-2008,2201-2208	RN1/16SE1002D		C	407,408,614,617	CKSRYP334K10			C	
	R	2009-2012,2209-2212	RN1/16SE1101D		C	410,412,417,422	CCG1236				
	R	2013-2016,2213-2216	RN1/16SE2200D		C	411,419,420,528	CKSRYP104K25				
	R	2017-2028,2217-2228	RN1/16SE2401D		C	413,414	CCSSCH560J50				
	R	2231,2405,2408,2409	RS1/10SR0R0J		C	415,416,622,623	CKSRYP102K50				
	R	2407,2411,2601,2604	RS1/8SQ0R0J		C	423-426,553-556	CEVWNP100M35				
	R	2426,2606-2608,2611	RS1/10SR0R0J		C	521,522,612,613	CCSRCH272J50				
	R	2627-2632,3217-3219	RAB4CQ820J		C	525,526	CCSSCH270J50				
	R	2634,2843	RAB4CQ103J		C	527,530,535,541	CCG1236				
	R	2642-2645,3202,3203	RAB4CQ680J		C	529,561-564,616	CKSRYP104K25				
	R	2647-2650,2652,2660	RAB4CQ470J		C	543-546,1405	CCSSCH101J50				
	R	2657,2808,2861,2862	RS1/10SR0R0J		C	549-552,626,627	CFHXSQ472J16			D	
	R	2664-2666,3224,3225	RAB4CQ470J		C	557-560	CCSSCH471J50				
	R	2668,3037,3209	RS1/8SQ0R0J		C	602,607,1004	DCH1201				
	R	2803	RS1/10SR474J		C	603,604,1001,1003	CKSSYB104K10				
	R	2818	RAB4CQ222J		C	606,1002,1006,1204	CKSSYB103K16				
	R	2824,2835,2871,3038	RAB4CQ220J		C	609,1626,1629,1635	CEVW100M16				
	R	2827,2845,2850,2863	RAB4CQ0R0J		C	610,611	CCSQCH822J50				
	R	2864	RAB4CQ0R0J		C	615,621,1211,1404	CCG1236				
	R	2870,3226,3230,3427	RS1/10SR0R0J		C	618,620	CCSSCH820J50				
	R	3039	RAB4CQ220J		C	619,1008,1209,1406	CKSRYP104K25				
	R	3042,3046,3050,3063	RAB4CQ330J		C	624,625	CEVWNP100M35			E	
	R	3057,3058,3264,3265	RAB4CQ101J		C	1007	CEVW221M25				
	R	3093-3096,3201,3204	RAB4CQ330J		C	1009-1011,1202,1214	CKSSYB104K10				
	R	3205,3206	RAB4CQ680J		C	1012,1216,1461	CKSRYP104K50				
	R	3207,3208,3211,3212	RAB4CQ330J		C	1205,1206,1208,1410	CCSSCH102J50				
	R	3216	RAB4CQ330J		C	1210,1229-1232,1627	CKSSYB102K50				
	R	3221-3223	RAB4CQ820J		C	1215,1233-1242,1464	CKSSYB103K16				
	R	3228,3229	RAB4CQ470J		C	1217-1228,1402,1407	CKSSYB104K10				
	R	3231	RS1/10SR105J		C	1403	CEVW101M25				
	R	3240	RAB4CQ102J		C	1409,1438,2801,2809	CKSRYP105K10				
	R	3423	RN1/16SE1802D		C	1411,1417,1430,1431	CCSSCH102J50				
	R	3432	RS1/10SR680J		C	1413,1415,1434	CCG1236			F	
	Other Resistors		RS1/16SS###J		C	1416	CEVW101M50				
					C	1418,1419,1422,1423	CKSSYB104K10				
					C	1420	CKSSYB223K16				

Mark	No.	Description	Part No.
A	C	1421	CKSSYB333K16
	C	1424-1427,1435,1441	DCH1201
	C	1428,1429,1436,1437	CKSSYB104K10
	C	1432	CEHVV101M10
	C	1433	CEHVV101M6R3
B	C	1439,1448,1451,1453	CCSSCH102J50
	C	1440,1442-1444,1447	CKSSYB104K10
	C	1445,1446,2405,2408	DCH1201
	C	1449,3035	CCH1565
	C	1450,1452,1454,1456	CKSRYB104K25
C	C	1455,1457,2636	CCSSCH102J50
	C	1465,1605-1608	CKSRYB104K25
	C	1613-1616,1813-1816	CCSSCH101J50
	C	1617,1618,1817,1818	CEVW470M25
	C	1620,1622,1623,1625	CKSSYB104K10
D	C	1624,1631,1824,1831	CKSSYB272K50
	C	1628,1636,1827,1828	CKSSYB102K50
	C	1630,1633,1634,1820	CKSSYB104K10
	C	1632,1637,1832,1836	CKSSYB103K16
	C	1805-1808,2005-2008	CKSRYB104K25
E	C	1822,1823,1825,1830	CKSSYB104K10
	C	1826,1829,1835,2024	CEVW100M16
	C	1833,1834,2018,2020	CKSSYB104K10
	C	1837,2025,2026,2034	CKSSYB102K50
	C	2013-2016,2213-2216	CCSSCH101J50
F	C	2021,2023,2028,2031	CKSSYB104K10
	C	2022,2029,2222,2229	CKSSYB272K50
	C	2027,2033,2224,2227	CEVW100M16
	C	2030,2035,2230,2235	CKSSYB103K16
	C	2032,2218,2220,2221	CKSSYB104K10
G	C	2205-2208	CKSRYB104K25
	C	2219	CCH1998
	C	2223,2228,2231,2232	CKSSYB104K10
	C	2225,2226,2234,2418	CKSSYB102K50
	C	2233	CEVW100M16
H	C	2401-2404	CEVW100M50
	C	2406,2407,2412,2413	CKSSYB104K10
	C	2410,2411,2414,2415	DCH1201
	C	2416,2417,2601,2602	CKSSYB104K10
	C	2419,2421,2423,2424	CKSSYB103K16
I	C	2422,2615,2617,2621	CKSSYB102K50
	C	2603,3020	CEVW101M16
	C	2605,2606,2614,2619	DCH1201
	C	2607,2608,2611,2612	CKSSYB104K10
	C	2609,2610,2819-2827	CKSSYB471K50
J	C	2616,2620,2622,2624	CKSSYB104K10
	C	2618,3253,3254	CCSSCH120J50
	C	2623,2625,2627,2629	CKSSYB102K50
	C	2626,2628,2630,2632	CKSSYB104K10
	C	2631	CCSSCH100D50
K	C	2633,2638,2640,2644	CKSSYB103K16
	C	2634,2671,2814,2815	CKSSYB102K50
	C	2635,2637,2639,2642	CKSSYB104K10
	C	2641,2645,3010-3012	CCSSCH101J50
	C	2643,2647,2649	CKSSYB104K10
L	C	2646,2648,2653-2657	CKSSYB103K16
	C	2661,2662,2670,2802	CKSSYB103K16
	C	2804,2805	CCSSCH6R0D50
	C	2808,3021,3036,3242	DCH1201

Mark	No.	Description	Part No.
M	C	2810-2812,2829,2831	CKSSYB104K10
	C	2813,3044,3209-3211	CKSSYB103K16
	C	2817,3014,3016,3018	CKSSYB102K50
	C	2833,3013,3015,3017	CKSSYB104K10
	C	3019,3022-3034	CKSSYB104K10
N	C	3037-3043,3201,3202	CKSSYB104K10
	C	3203	CEVW470M6R3
	C	3204	CEVW101M4
	C	3205,3206,3252,3255	CKSSYB104K10
	C	3207,3208	CKSSYB471K50
O	C	3212,3214,3216,3218	CKSSYB102K50
	C	3213,3215,3217,3219	CKSSYB103K16
	C	3220,3222,3224,3226	CKSSYB102K50
	C	3221,3223,3225,3227	CKSSYB103K16
	C	3228,3230,3232,3234	CKSSYB102K50
P	C	3229,3231,3233,3235	CKSSYB103K16
	C	3236,3251,3256	CKSSYB102K50
	C	3237,3239,3243-3249	CKSSYB103K16
	C	3238,3250,3257	CCSSCH101J50
	C	3240	CKSSYB105K6R3
Q	C	3258,3262,3263,3405	CKSSYB103K16
	C	3260,3261,3404,3406	CKSSYB104K10
	C	3407,3411,3413,3414	CKSSYB104K10
	C	3408,3409,3415,3417	DCH1201
	C	3410	CKSRYB474K10
R	C	3412,3416	CKSSYB103K16
	C	3418	CKSSYB104K10

SEC/HP ASSY SEMICONDUCTORS

IC 1	S-80927CNMC-G8X
IC 101	NJM4565MD
IC 102	NJM4580D
Q 101,102	2SK209
Q 103,104	INC2002AC1
Q 105,107	KTC3209
Q 106,108	KTA1281
D 1,2	RB060L-40
D 3,4,7,8	RB160L-40
D 5,6,9,10	1SR154-400
D 11,12	RB160L-40
TH 1,2	PTGL05AS3R9K2B51

MISCELLANEOUS

KN 1,2,101 EARTH TERMINAL	AKF7002
CN1 CONNECTOR	B13B-EH
CN2,101 PLUG (4P)	KM200NA4
CN3 19P PLUG	AKM7077
CN4 10PJUMPER CONNECTOR	52147-1010
P 101 POLYSWITCH	RXEF075P

RESISTORS

R 4	RS1/10SR1102D
R 5	RS1/10SR1302D
R 20	RS1/4SA0R0J
R 21,24,25,136	RS1/8SQ0R0J
R 101-104	RN1/16SE3901D
R 105-108	RN1/16SE1502D
R 109-112	RN1/16SE3301D
R 114,115	RN1/16SE5601D

Mark	No.	Description	Part No.
	R 120,121		RN1/16SE3001D
	R 126,127		RD1/2VM471J
	R 128,129		RN1/16SE1001D
	R 130-133		RS2LMF330J
	R 138,139,141		RS1/8SQ0R0J
	Other Resistors		RS1/10SR###J

CAPACITORS

C 1-11	CKSRYB473K50
C 13-15,17-23	CCSRCH102J50
C 24	CEAT682M16
C 25	CEAT682M25
C 27,29,37,38	CKSRYB103K50
C 28,107,108,115	CKSRYB104K25
C 30	CKSRYB102K50
C 31,32	CEAT332M35
C 35,36	CEAT102M25
C 45,46,49,51	CKSRYB103K50
C 47,48	CEAT101M25
C 50	CEAT101M16
C 52	CKSRYB103K50
C 101,102,112,113	CCSRCH471J50
C 103-106	CCSRCH101J50
C 109,110	CEANP100M35
C 114,117	CEAT100M50
C 116	CKSRYB104K25
C 120,125	DCH1165
C 121-124	CKSRYB104K16
C 126,127	CEANP221M16

F USBI ASSY

MISCELLANEOUS

JA 3801	USB CONNECTOR	DKN1237
KN 3801	WRAPPING TERMINAL	CKF1089
CN 3801	L-PLUG (5P)	KM200NA5L

CAPACITORS

C 3801,3802	CCSRCH7R0D50
C 3803,3806	CCSSCH101J50
C 3805	DCH1201

G HPJK ASSY

MISCELLANEOUS

JA 9201	HEADPHONE JACK	DKN1622
CN 9201	L-PLUG (4P)	KM200NA4L
0	PHONE SHIELD	DNF1875

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

CAPACITORS

C 9203,9204	CKSRYB224K25
C 9205	CFTLA103J50

H PNLA ASSY

SEMICONDUCTORS

IC 6601	DYW1809
IC 6602-6604	TC74HC4052AF
IC 6605	NJM2903M

Mark	No.	Description	Part No.
	Q 6601,6638-6649		LSA1576UB
	Q 6602		2SC5712
	Q 6604		LTA114EUB
	Q 6605-6619,6621		LSC4081UB
	Q 6622,6624,6626,6628		LTC143EUB
	Q 6623,6625,6627,6629		2SB1689
	Q 6630,6632,6634,6636		LTC143EUB

Q 6631,6633,6635,6637	2SB1689
Q 6650	LTA143EUB
Q 6655-6658	LSA1576UB
D 6601,6625,6628-6631	SLI-343YYW(TUV)
D 6624,6735	SLI-343U8RC(HJKL)

D 6626,6627,6643,6644	SLI-343U8R(HJK)
D 6632-6640,6649-6657	SLR-343MC(NPQ)
D 6641,6642,6645-6648	SLI-343YYW(TUV)
D 6658,6661-6664	SLI-343YYW(TUV)
D 6659,6660,6678,6679	SLI-343U8R(HJK)

D 6665-6673,6684-6692	SLR-343MC(NPQ)
D 6674-6677,6680-6683	SLI-343YYW(TUV)
D 6693-6695,6698-6701	SLI-343YYW(TUV)
D 6696,6697,6711,6712	SLI-343U8R(HJK)
D 6702-6710,6717-6725	SLR-343MC(NPQ)

D 6713-6716,6727-6731	SLI-343YYW(TUV)
D 6726,6734,6736-6741	SLR343BC4T(JK)
D 6732	SLR343EC4T(LMN)
D 6742-6747,6749-6760	1SS352
D 6762,6763,6771-6778	1SS352

MISCELLANEOUS

L 6601	CHIP COIL	LCTAW330J2520
V 6601	VFD	DEL1071
VR 6601	VARIABLE RESISTOR	DCS1100
VR 6602	POTENTIOMETER	DCS1097
VR 6603-6606	VARIABLE RESISTOR	DCS1100

VR 6607	POTENTIOMETER	DCS1096
VR 6608,6609	VARIABLE RESISTOR	DCS1100
VR 6610,6615,6619	POTENTIOMETER	DCS1095
VR 6611-6614	VARIABLE RESISTOR	DCS1100
VR 6616-6618	VARIABLE RESISTOR	DCS1100

VR 6620	POTENTIOMETER	DCS1095
VR 6621-6624	ROTARY VR	DCS1086
S 6601-6608,6617-6620	TACT SWITCH	DSG1079
S 6612-6616	LEVER SWITCH	DSK1026
S 6621	SLIDE SWITCH	DSH1066

S 6622	ROTARY ENCODER	DSX1068
S 6623-6625,6627,6628	TACT SWITCH	DSG1079
S 6631-6634,6641-6644	TACT SWITCH	DSG1079
X 6601	CRYSTAL RESONATOR (20 MHz)	VSS1167
CN 6601	24P CONNECTOR	VKN1255

CN 6602	17P CONNECTOR	VKN1248
CN 6603	27P CONNECTOR	VKN1258
CN 6609	PLUG (3P)	KM200NA3Y
CN 6610	PLUG (3P)	KM200NA3R
CN 6611	PLUG (3P)	KM200NA3

CN 6612	PLUG (3P)	KM200NA3E
0	FL HOLDER	DNF1869

RESISTORS

R 6616	RS1/10SR1202F
R 6617	RS1/10SR8201D
R 6884,6896-6899	RS1/4SA100J

Mark	No.	Description	Part No.
------	-----	-------------	----------

R	6901-6905	Other Resistors	RS1/4SA100J RS1/10SR###J
---	-----------	-----------------	-----------------------------

CAPACITORS

C	6601,6602,6608,6645	CEAT101M16
C	6603,6604,6609,6611	CKSRYB104K16
C	6606,6622	CCSRCH102J50
C	6607,6623,6629,6640	CKSRYB103K50
C	6610,6612	CKSRYB104K50

C	6614-6617	CCSRCH101J50
C	6618,6619,6624,6625	CKSRYB104K16
C	6620,6621	CCG1205
C	6626,6631	CKSRYB105K10
C	6627	DCH1201

C	6628,6630,6632,6633	CKSRYB104K16
C	6634,6635	CCSRCH6R0D50
C	6641-6644,6654-6663	CKSRYB104K16
C	6664-6675,6685-6696	CKSRYB471K50
C	6676,6679,6680	CKSRYB104K16

C	6697-6719	CKSRYB104K16
C	6720-6725	CKSRYB103K50
C	6728	CCG1255

PNLB ASSY

SEMICONDUCTORS

Q	7002	LSC4081UB
D	7005,7007	SLI-343YYW(TUV)
D	7012-7027	1SS352

MISCELLANEOUS

VR 7001,7004	POTENTIOMETER	DCS1096
VR 7002	POTENTIOMETER	DCS1097
VR 7003	VARIABLE RESISTOR	DCS1100
S 7001	12MM GS ENCODER	DSX1064
S 7002	ROTARY SWITCH	DSG1098

S 7007	TACT SWITCH	DSG1079
S 7008,7014	SLIDE SWITCH	DSH1066
S 7009-7013,7015	SLIDE SWITCH	DSH1058
CN 7001	27P CONNECTOR	VKN1258
CN 7002	PLUG (3P)	KM200NA3

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

CAPACITORS

C 7002,7005,7008,7010	CKSRYB104K16
C 7004,7006	CEAT470M25
C 7007,7009	CKSRYB103K50
C 7012,7015,7016,7018	CKSRYB104K16

FADC ASSY

MISCELLANEOUS

VR 8001	VARIABLE RESISTOR	DCV1006
CN 8001	L-PLUG (3P)	KM200NA3L

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

Mark	No.	Description	Part No.
------	-----	-------------	----------

FAD1 ASSY

MISCELLANEOUS

VR 7201	SLIDE VR	DCV1027
CN 7201	PLUG (3P)	KM200NA3

FAD2 ASSY

MISCELLANEOUS

VR 7401	SLIDE VR	DCV1027
CN 7401	PLUG (3P)	KM200NA3R

FAD3 ASSY

MISCELLANEOUS

VR 7601	SLIDE VR	DCV1027
CN 7601	PLUG (3P)	KM200NA3E

FAD4 ASSY

MISCELLANEOUS

VR 7801	SLIDE VR	DCV1027
CN 7801	PLUG (3P)	KM200NA3Y

REG ASSY

SEMICONDUCTORS

IC 5001	BA05T
IC 5002	NJM7815FA
IC 5003	NJM7915FA
D 5004,5005	RB501V-40

MISCELLANEOUS

CN 5001	10PJUMPER CONNECTOR	52147-1010
---------	---------------------	------------

CAPACITORS

C 5001-5003,5010,5011	CKSRYB103K50
C 5004-5006	CKSRYB104K16
C 5007	CCG1205
C 5008,5009	CKSQYB105K25
C 5013,5014,5016	CKSRYB102K50

C 5015	CKSRYB103K50
--------	--------------

TRANS ASSY

MISCELLANEOUS

JP 3102	BOARD IN JUMPER/2P	DDX1284
---------	--------------------	---------

CAPACITORS

C 3101-3104,3106,3107	CKSRYB104K50
C 3110,3111	CKSRYB104K50

PRIMARY ASSY

SEMICONDUCTORS

Q 3001	KTC3209
D 3001	1SS302
D 3002	1SS352
D 3003-3006	1SR154-400

MISCELLANEOUS

L 3001	FILTER	DTL1131
H 3001,3002	FUSE CLIP	AKR1004

Mark	No.	Description	Part No.
	KN 3001	EARTH TERMINAL	AKF7002
⚠	RY 3001	RELAY	ASR7029
⚠	T 3001	TRANSFOMER (SY)	DTT1245
⚠	CN 3001	AC CODE SOCKET	RKP1751
⚠	CN 3002,3004	CONNECTOR	B2P3-VH
	JP 3001	CONNECTOR ASSY	PF03PG-Q07

RESISTORS

R 3002	RS1/10SR330J
Other Resistors	RS1/10SR####F

CAPACITORS

⚠ C 3001	ACE7027
⚠ C 3003	ACG7030
C 3004,3005	CKSRYB473K50
C 3006	CEAT222M25
C 3007	CKSRYB103K50

R ACSW ASSY

MISCELLANEOUS

⚠ S 9401	SWITCH	DSA1037
⚠ 0	MASK	DEC3212
⚠ JP 9401	CONNECTOR ASSY 2P	DKP3847

CAPACITORS

⚠ C 9401	ACG7030
----------	---------