
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING (DEH-P840MP)

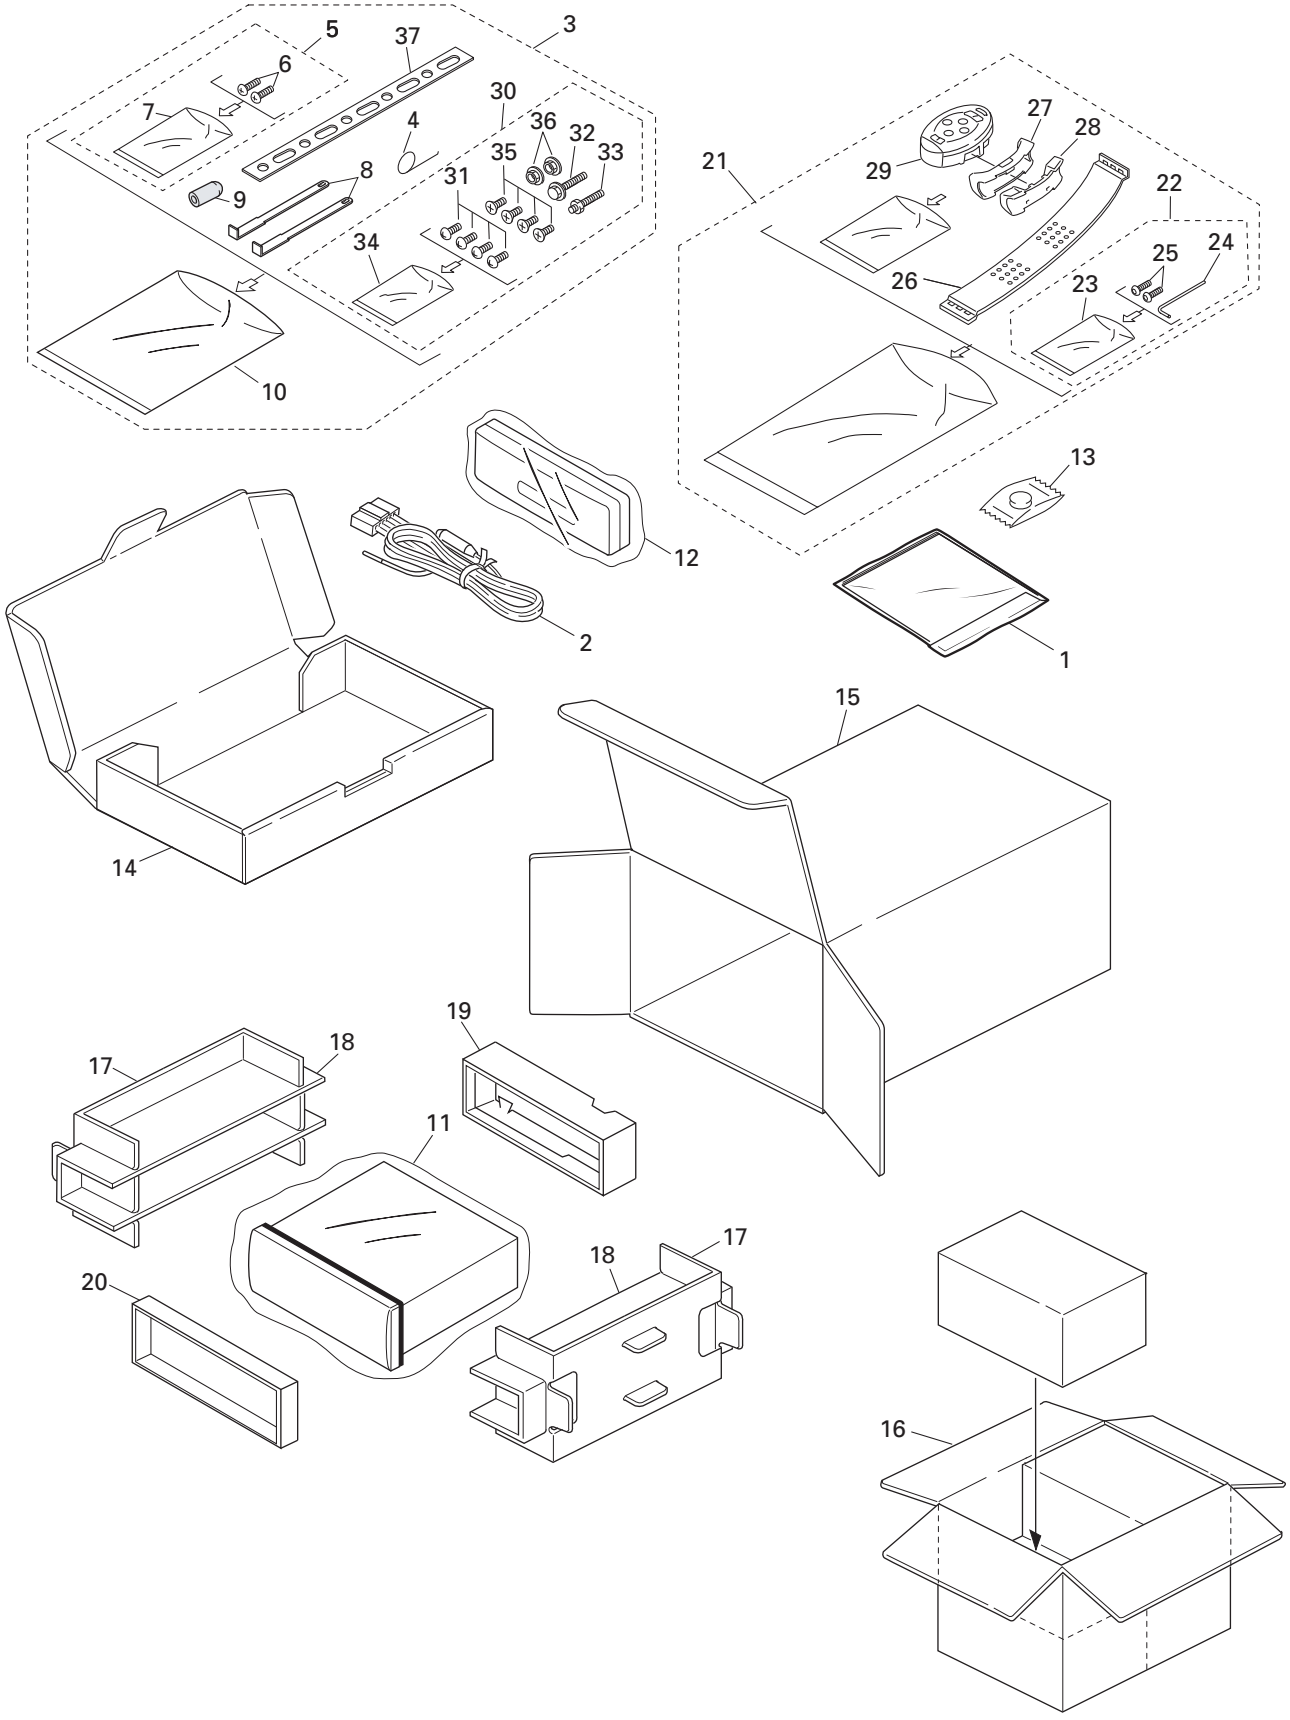

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)


● PACKING SECTION PARTS LIST (DEH-P840MP)

Mark	No.	Description	Part No.
	1-1	Owner's Manual	CRD3569
	1-2	Installation Manual	CRD3570
*	1-3	Caution Card	CRP1268
*	1-4	Warranty Card	CRY1070
	1-5	Polyethylene Bag	CEG1116
	2	Cord Assy	CDE6563
	3	Accessory Assy	CEA3142
	4	Spring	CBH1650
	5	Screw Assy	CEA3140
	6	Screw	BPZ20P060FMC
*	7	Polyethylene Bag	CEG-127
	8	Handle	CNC5395
	9	Bush	CNV3930
*	10	Polyethylene Bag	CEG-158
	11	Polyethylene Bag	CEG1185
	12	Case Assy	CXB8574
*	13	Battery	CEX1030
	14	Sub Carton	CHA3258
	15	Carton	CHG4661
	16	Contain Box	CHL4661
	17	Protector	CHP2538
	18	Protector	CHP2539
	19	Protector	CHP2541
	20	Protector	CHP2546
	21	Remote Control Assy	CXB9202
	22	Screw Assy	CZE3169
*	23	Polyethylene Bag	CEG-127
*	24	Hexagonal Wrench	CZE3176
*	25	Screw	RMZ30H060FBK
	26	Belt	CZN7661
	27	Holder Assy	CZX3172
	28	Holder Assy	CZX3173
	29	Remote Control Assy	CZX3257
	30	Screw Assy	CEA3144
	31	Screw	BMZ50P060FMC
	32	Screw	CBA-102
	33	Screw	CBA1002
*	34	Polyethylene Bag	CEG-127
	35	Screw	CMZ50P060FMC
	36	Nut	NF50FMC
	37	Strap	CNC5402

● Owner's Manual, Installation Manual

Part No.	Language
CRD3569	English, French
CRD3570	English, French

2.2 PACKING (DEH-P8400MP)

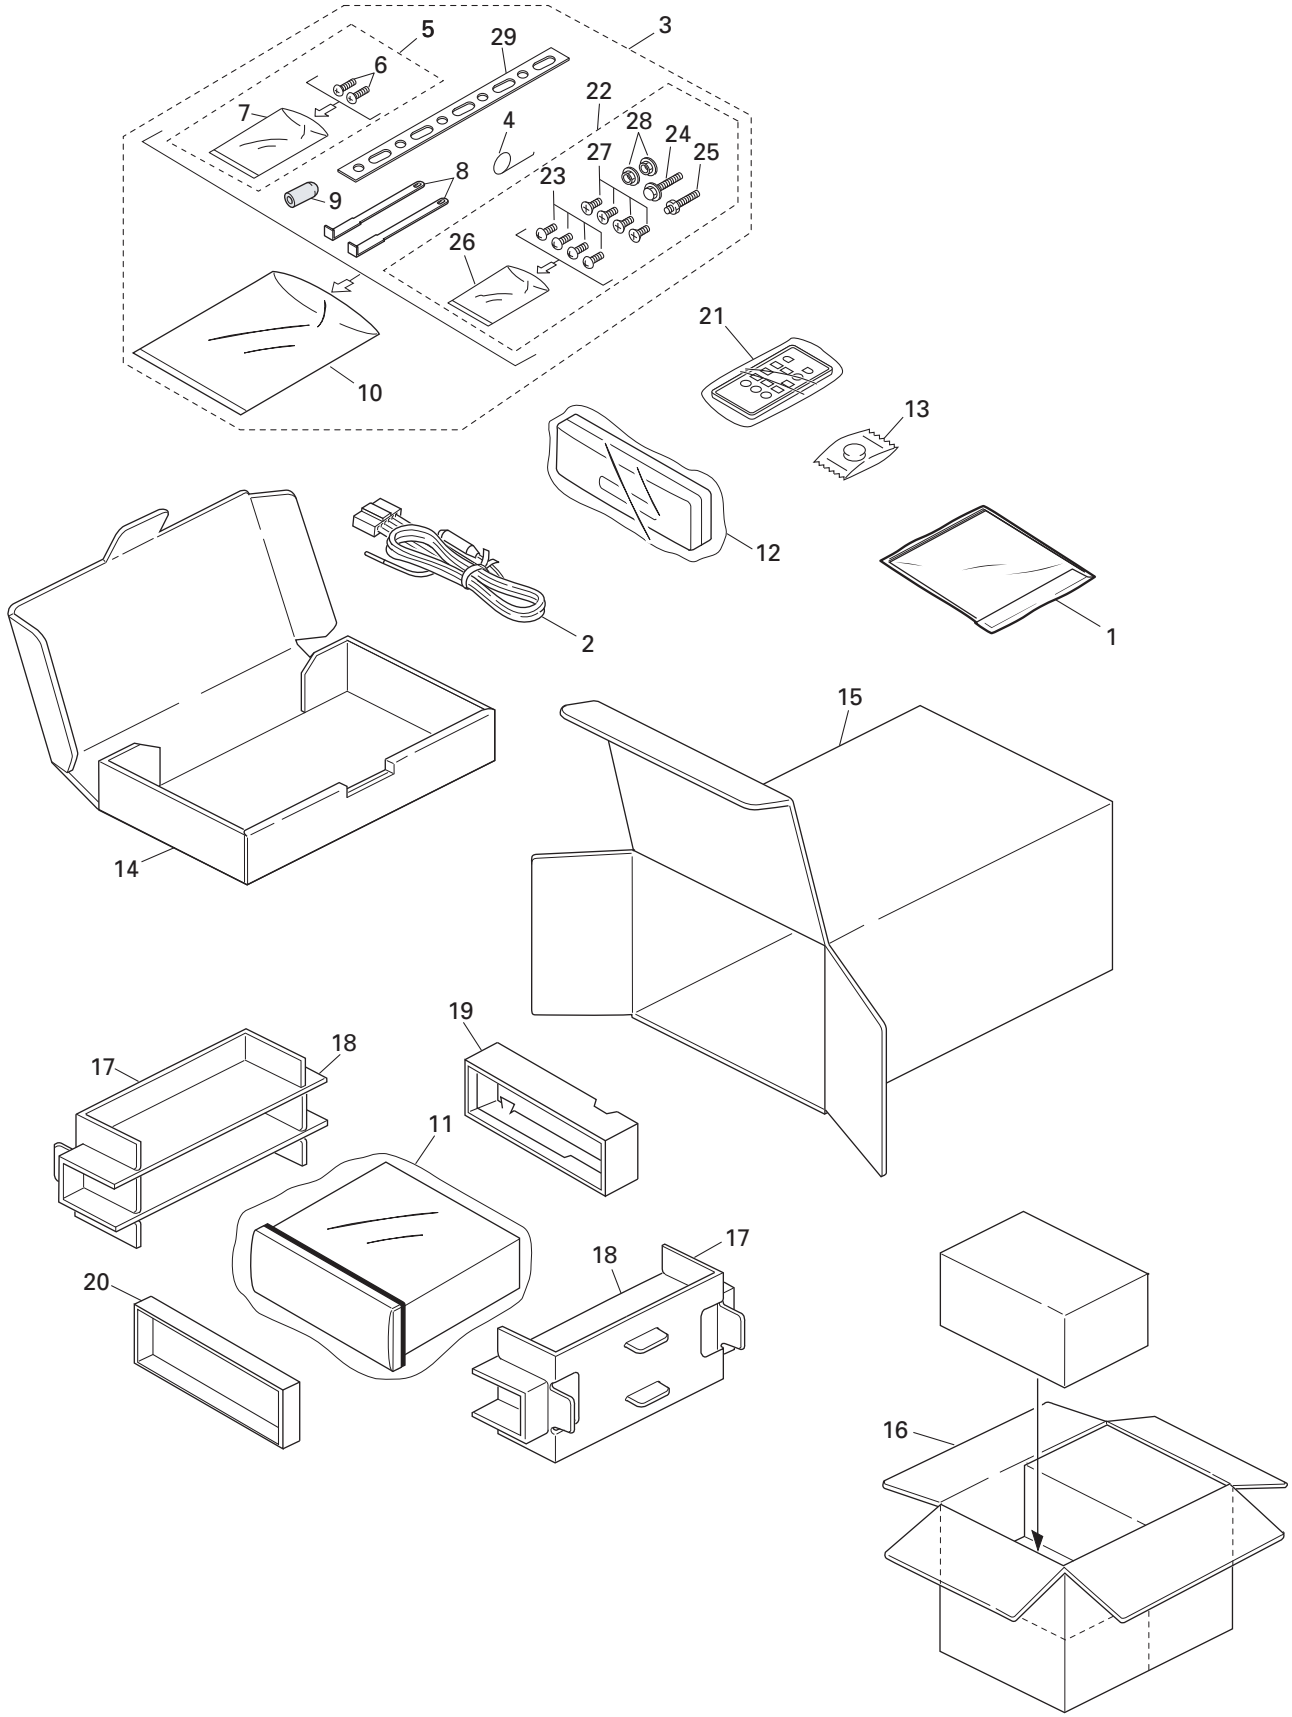


● PACKING SECTION PARTS LIST (DEH-P8400MP)

Mark	No.	Description	Part No.
	1-1	Owner's Manual	CRD3571
	1-2	Installation Manual	CRD3572
*	1-3	Caution Card	CRP1268
*	1-4	Card	ARY1048
	1-5	Polyethylene Bag	CEG1116
	2	Cord Assy	CDE6563
	3	Accessory Assy	CEA3142
	4	Spring	CBH1650
	5	Screw Assy	CEA3140
	6	Screw	BPZ20P060FMC
*	7	Polyethylene Bag	CEG-127
	8	Handle	CNC5395
	9	Bush	CNV3930
*	10	Polyethylene Bag	CEG-158
	11	Polyethylene Bag	CEG1185
	12	Case Assy	CXB8574
*	13	Battery	CEX1065
	14	Sub Carton	CHA3258
	15	Carton	CHG4662
	16	Contain Box	CHL4662
	17	Protector	CHP2538
	18	Protector	CHP2539
	19	Protector	CHP2541
	20	Protector	CHP2546
	21	Remote Control Unit	CXB8743
	22	Screw Assy	CEA3144
	23	Screw	BMZ50P060FMC
	24	Screw	CBA-102
	25	Screw	CBA1002
*	26	Polyethylene Bag	CEG-127
	27	Screw	CMZ50P060FMC
	28	Nut	NF50FMC
	29	Strap	CNC5402

● Owner's Manual, Installation Manual

Part No.	Language
CRD3571	English, French
CRD3572	English, French

2.3 PACKING (DEH-P8450MP)

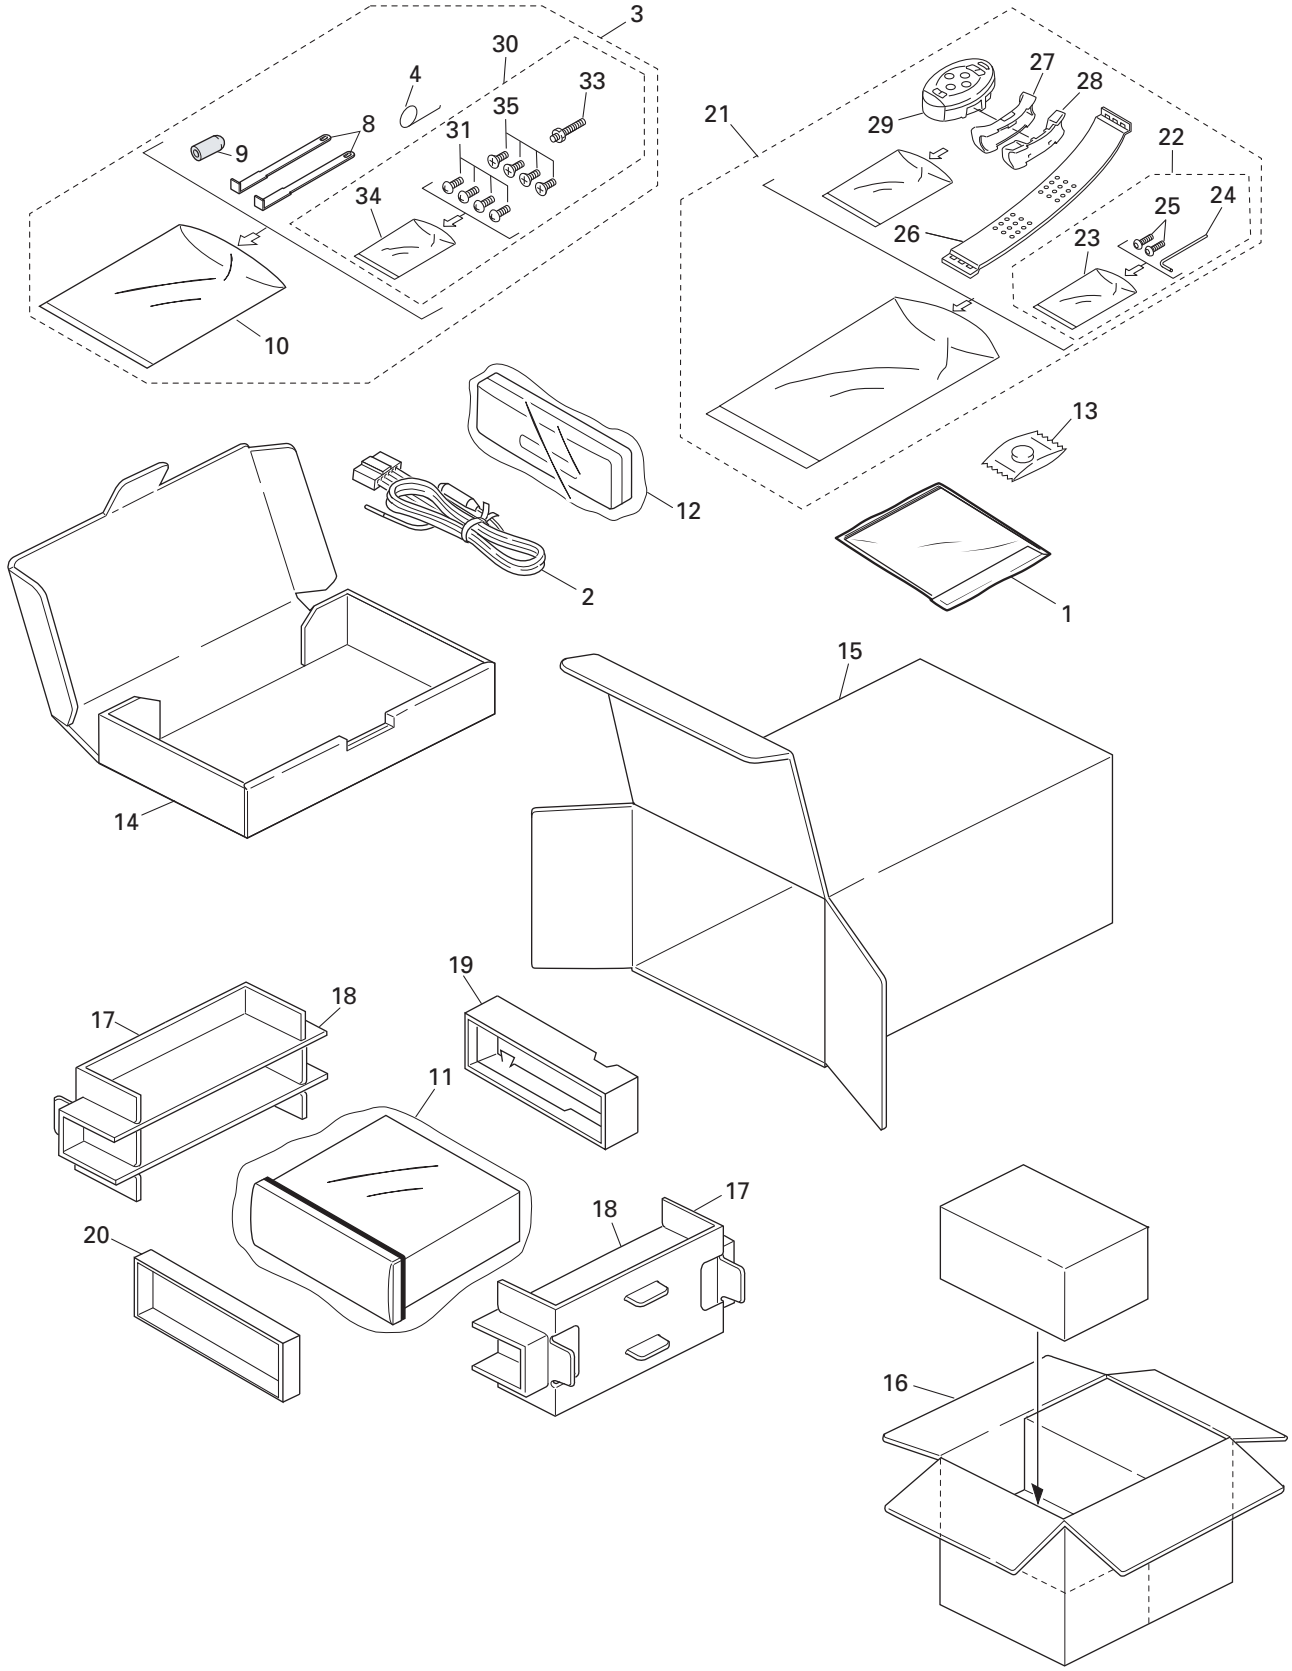


● PACKING SECTION PARTS LIST (DEH-P8450MP)

Mark	No.	Description	Part No.
	1-1	Owner's Manual	CRD3573
	1-2	Owner's Manual	CRD3574
	1-3	Installation Manual	CRD3575
*	1-4	Caution Card	CRP1268
	1-5	Polyethylene Bag	CEG1116
	2	Cord Assy	CDE6563
	3	Accessory Assy	CEA3143
	4	Spring	CBH1650
	5-7	•••••	
	8	Handle	CNC5395
	9	Bush	CNV3930
*	10	Polyethylene Bag	CEG-158
	11	Polyethylene Bag	CEG1088
	12	Case Assy	CXB8574
*	13	Battery	CEX1030
	14	Sub Carton	CHA3258
	15	Carton	CHG4663
	16	Contain Box	CHL4663
	17	Protector	CHP2538
	18	Protector	CHP2539
	19	Protector	CHP2541
	20	Protector	CHP2546
	21	Remote Control Assy	CXB9202
	22	Screw Assy	CZE3169
*	23	Polyethylene Bag	CEG-127
*	24	Hexagonal Wrench	CZE3176
*	25	Screw	RMZ30H060FBK
	26	Belt	CZN7661
	27	Holder Assy	CZX3172
	28	Holder Assy	CZX3173
	29	Remote Control Assy	CZX3257
	30	Screw Assy	CEA2941
	31	Screw	BMZ50P060FMC
	32	•••••	
	33	Screw	CBA1002
*	34	Polyethylene Bag	CEG-127
	35	Screw	CMZ50P060FMC

● Owner's Manual, Installation Manual

Part No.	Language
CRD3573	English, Spanish
CRD3574	Portuguese(B), Arabic
CRD3575	English, Spanish, Portuguese(B), Arabic

2.4 EXTERIOR(1)

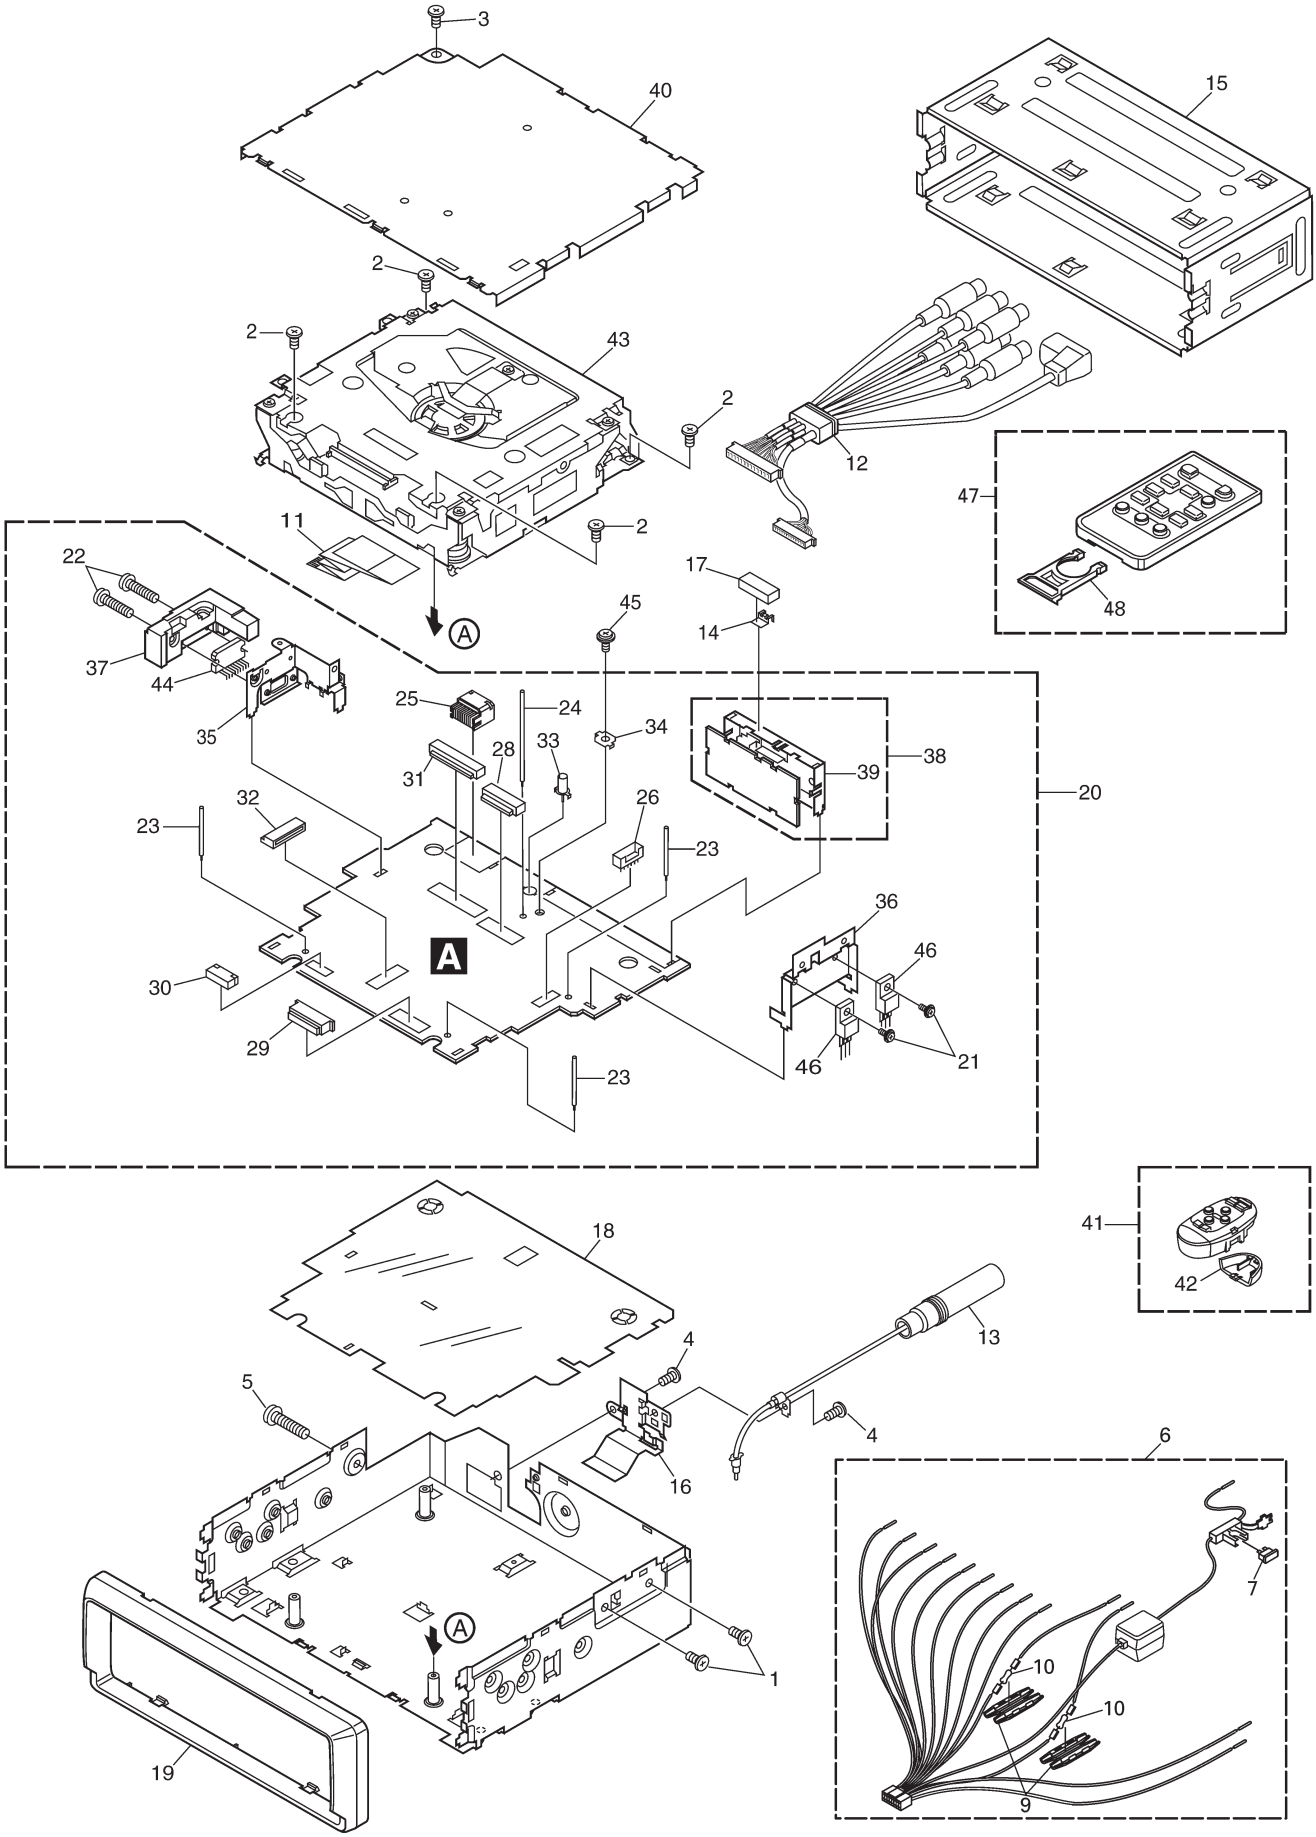

(1) EXTERIOR(1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BMZ26P040FMC
	2	Screw	BSZ26P060FMC
	3	Screw	BSZ30P050FZK
	4	Screw	BSZ30P080FMC
	5	Screw	BSZ30P160FMC
	6	Cord Assy	CDE6563
	7	Fuse(10A)	CEK1136
	8	•••••	
	9	Cap	CNS1472
	10	Resistor	RS1/2PMF102J
	11	Flat Cable	CDE7021
	12	Cord Assy	CDE7026
	13	Antenna Cable	CDH1266
	14	Holder	CNC6469
	15	Holder	CNC8659
	16	Holder	CNC9708
	17	Cushion	CNM4870
	18	Insulator	CNM7543
	19	Panel	CNS6863
	20	Tuner Amp Unit	See Contrast table(2)
	21	Screw	ASZ26P080FMC
	22	Screw	BMZ26P140FMC
	23	Clamper	CEF1008
	24	Clamper	CEF1009
	25	Plug(CN981)	CKM1278
	26	Plug(CN811)	CKS-787
	27	•••••	
*	28	Plug(CN101)	CKS1058
	29	Connector(CN832)	CKS1082
*	30	Connector(CN831)	CKS2211
	31	Connector(CN351)	CKS3606
	32	Connector(CN723)	CKS3835
	33	Pin Jack(CN402)	CKX1046
	34	Holder	CNC5399
	35	Holder	CNC9711
	36	Holder	CNC9713
	37	Heat Sink	CNR1615
	38	FM/AM Tuner Unit	CWE1563
	39	Holder	CNC8815
	40	Case Unit	CXB8524
	41	Remote Control Assy	See Contrast table(2)
	42	Cover	See Contrast table(2)
	43	CD Mechanism Module(S9MP3)	CXK5556
	44	IC(IC301)	PAL007A
	45	Screw	ISS26P055FUC
	46	Transistor(Q752,921)	2SD2396
	47	Remote Control Unit	See Contrast table(2)
	48	Cover	See Contrast table(2)

(2) CONTRAST TABLE

DEH-P840MP/XN/UC, DEH-P8400MP/XN/UC and DEH-P8450MP/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P840MP/XN/UC	DEH-P8400MP/XN/UC	DEH-P8450MP/XN/ES
20	Tuner Amp Unit	CWM8042	CWM8043	CWM8044
41	Remote Control Assy	CZX3257	Not used	CZX3257
42	Cover	CZN7655	Not used	CZN7655
47	Remote Control Unit	Not used	CXB8743	Not used
48	Cover	Not used	CNS7068	Not used

2.5 EXTERIOR(2)

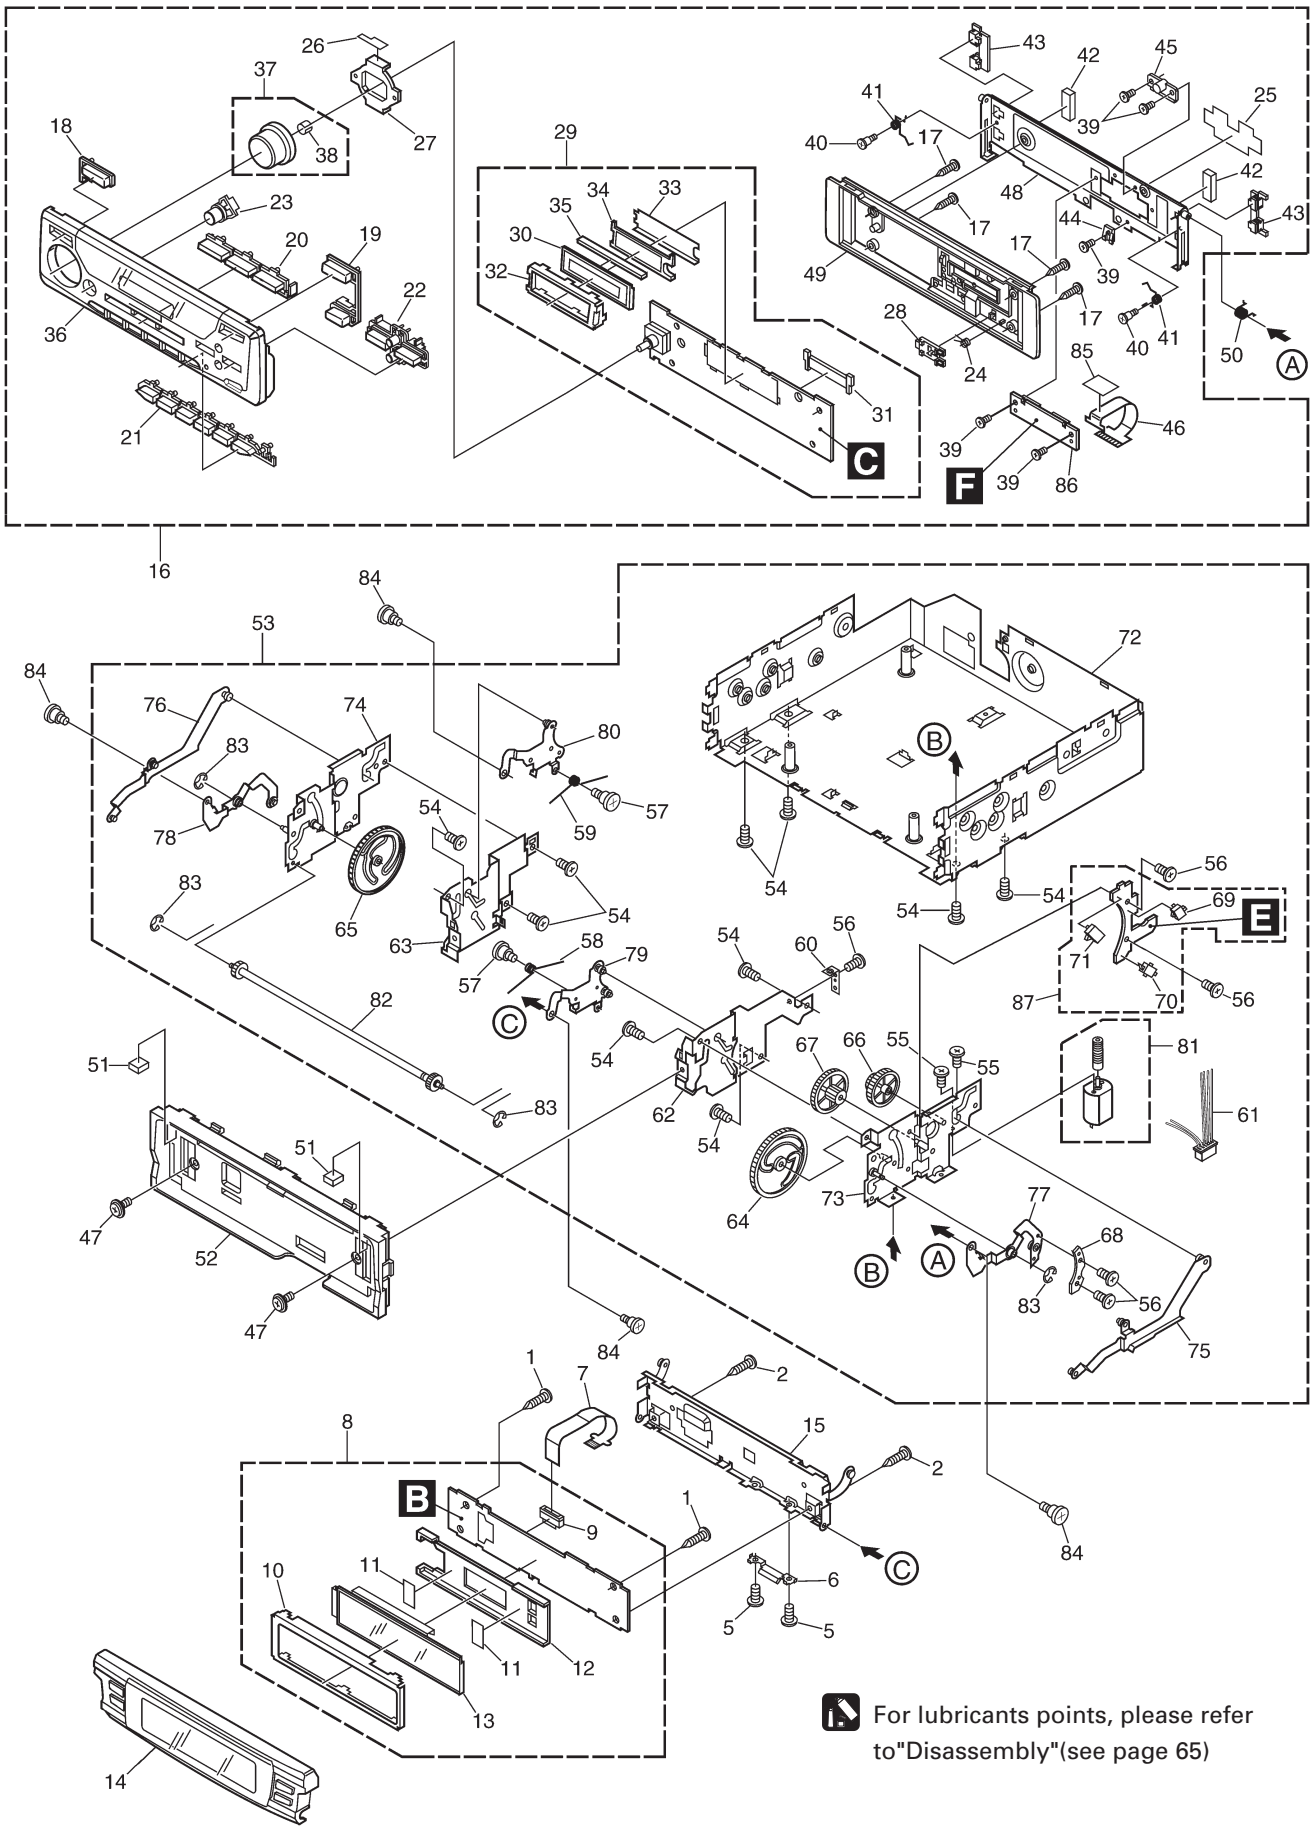

(1) EXTERIOR(2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BPZ20P060FMC
	2	Screw	BPZ20P080FZK
	3,4	•••••	
	5	Screw(M2x2)	CBA1250
	6	Holder	CNC9800
	7	Flexible PCB	CNP6498
	8	Keyboard Unit(OEL)	See Contrast table(2)
	9	Connector(CN1801)	CKS4175
	10	Holder	CNC9649
	11	Tape	CNM7514
	12	Holder	CNV6916
	13	OEL Unit	MXS8018
	14	Sub Grille Assy	See Contrast table(2)
	15	Case Unit	CXB7967
	16	Detach Grille Assy	See Contrast table(2)
	17	Screw	BPZ20P080FZK
	18	Button(EJECT)	CAC7241
	19	Button(OPEN/BAND)	CAC7242
	20	Button(SRC/PAUSE/CLK)	CAC7244
	21	Button(1-6)	CAC7246
	22	Button(CROSS)	CAC7247
	23	Button(EQ)	CAC7248
	24	Spring	CBH2543
	25	Insulator	CNM7649
	26	Sheet	CNM7824
	27	Lighting Conductor	CNV6913
	28	Arm	CNV6963
	29	Keyboard Unit(LCD)	CWM8056
	30	LCD(LCD1901)	CAW1704
	31	Connector(CN1901)	CKS4549
	32	Holder	CNC9648
	33	Sheet	CNM7512
	34	Lighting Conductor	CNV6914
	35	Connector	CNV6915
	36	Grille Unit	See Contrast table(2)
	37	Knob Assy	CXB8026
	38	Spring	CBL1321
	39	Screw(M2x2)	CBA1250
	40	Screw	CBA1561
	41	Spring	CBH2530
	42	Cushion	CNM7551
	43	Arm	CNV6962
	44	Guide	CNV6967
	45	Guide	CNV6968
	46	Flexible PCB	CNP6869
	47	Screw	ISS26P055FUC
	48	Case Unit	CXB7968
	49	Cover Unit	CXB8127
	50	Spring	CBH2545
	51	Cushion	CNM7550
	52	Panel Unit	CXB7953
	53	Drive Unit	CXB8138
	54	Screw	BMZ26P040FMC
	55	Screw(M2x3)	CBA1061
	56	Screw(M2x2)	CBA1250
	57	Screw(M2x1.4)	CBA1562
	58	Spring	CBH2525
	59	Spring	CBH2526
	60	Spring	CBL1557
	61	Cord	CDE6737
	62	Holder	CNC9678
	63	Holder	CNC9679
	64	Gear	CNV6932
	65	Gear	CNV6933
	66	Gear	CNV6935
	67	Gear	CNV6936
	68	Lever	CNV6937
	69	Switch(S951)	CSN1051
	70	Spring Switch(S952)	CSN1052
	71	Switch(S953)	CSN1058
	72	Chassis Unit	CXB7956
	73	Holder Unit	CXB7959
	74	Holder Unit	CXB7960
	75	Arm Unit	CXB7961
	76	Arm Unit	CXB7962
	77	Arm Unit	CXB7963
	78	Arm Unit	CXB7964
	79	Arm Unit	CXB7965
	80	Arm Unit	CXB7966
	81	Motor Unit(M951)	CXB8939
	82	Gear Unit	CXB8940
	83	Washer	YE15FUC
	84	Screw	CBA1559
	85	Sheet	CNM7839
	86	PCB	CNX3607
	87	Switch Unit	CWS1370

(2) CONTRAST TABLE

DEH-P840MP/XN/UC, DEH-P8400MP/XN/UC and DEH-P8450MP/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P840MP/XN/UC	DEH-P8400MP/XN/UC	DEH-P8450MP/XN/ES
8	Keyboard Unit(OEL)	CWM8051	CWM8052	CWM8052
14	Sub Grille Assy	CXB9363	CXB9362	CXB9364
16	Detach Grille Assy	CXB8092	CXB8093	CXB8094
36	Grille Unit	CXB7942	CXB7941	CXB7943

2.6 CD MECHANISM MODULE

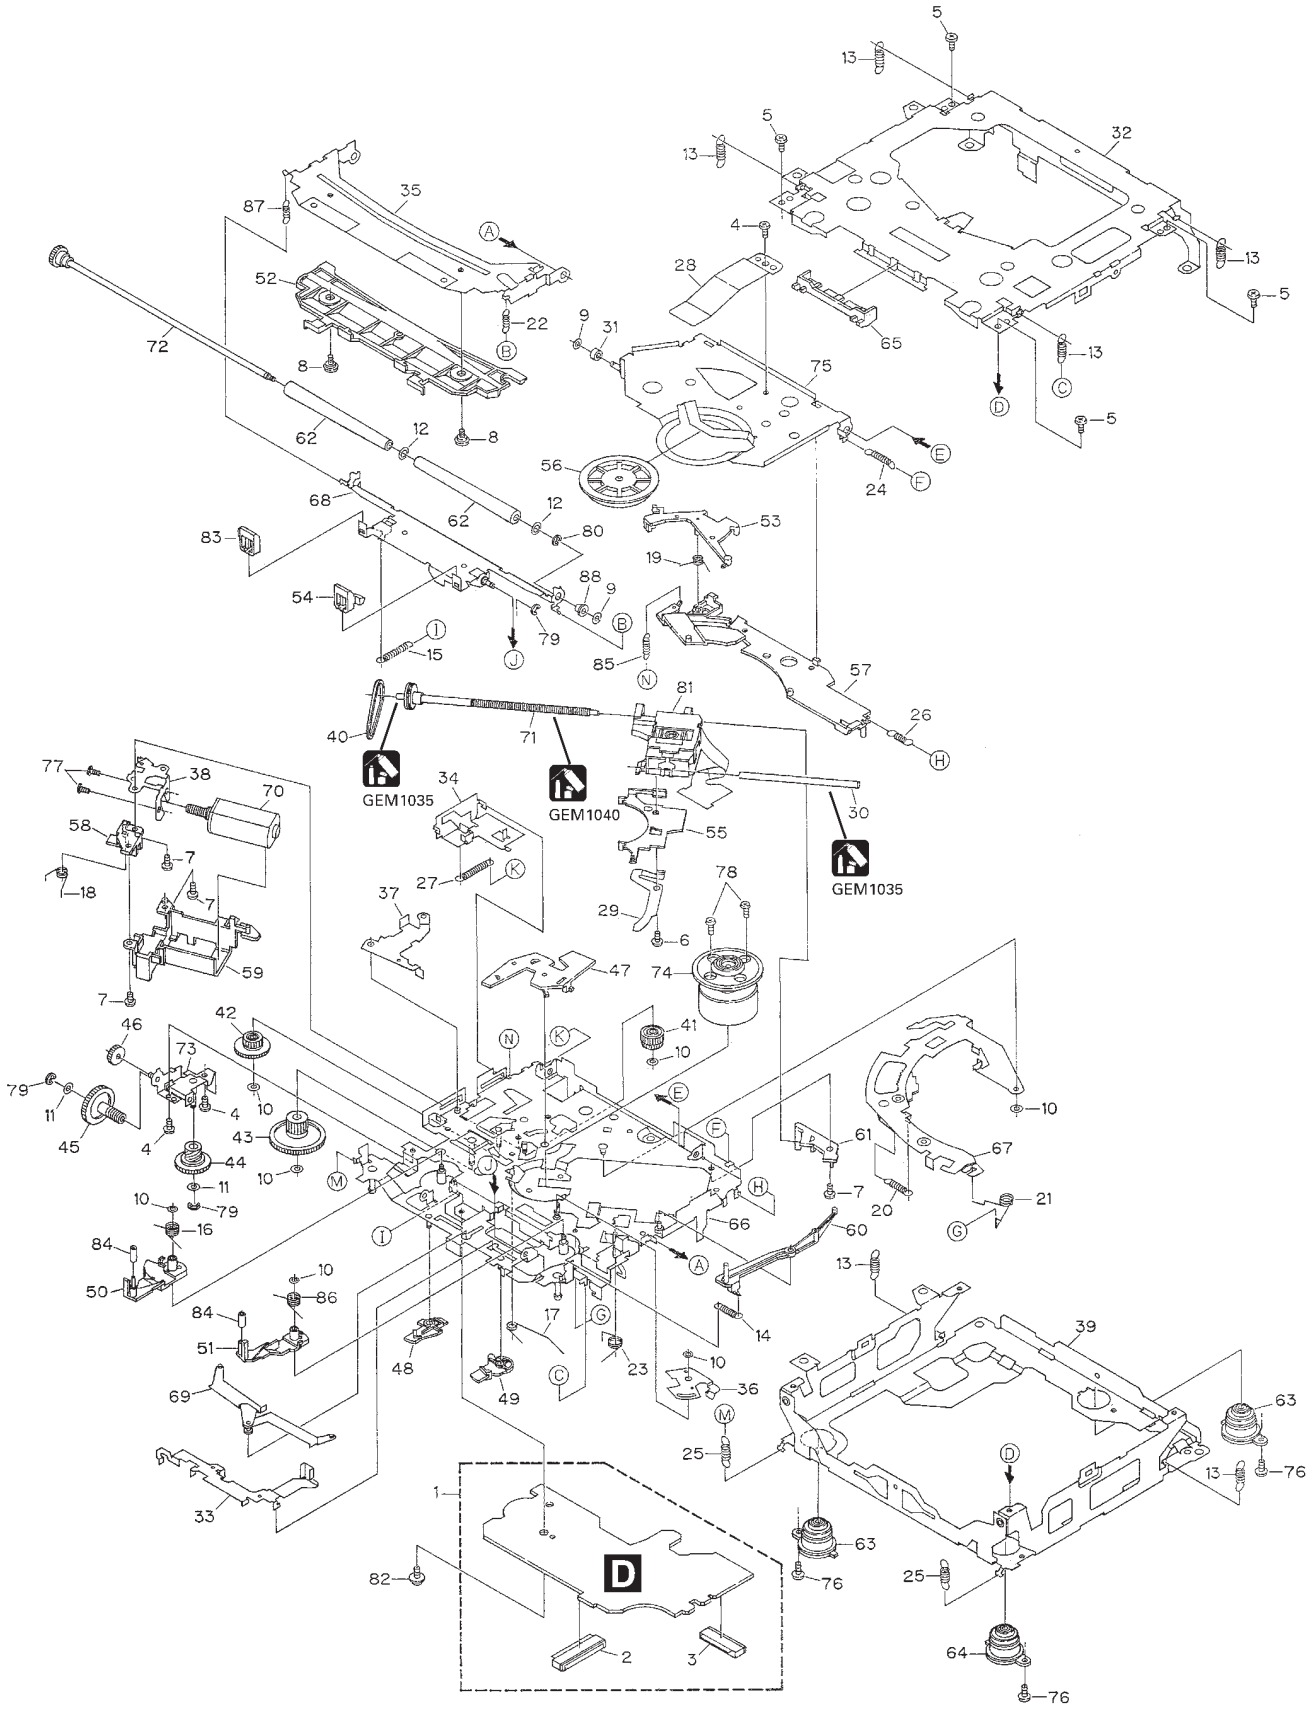

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S9MP3)	CWX2618
	2	Connector(CN901)	CKS4188
	3	Connector(CN101)	CKS3486
	4	Screw	BMZ20P025FMC
	5	Screw	BSZ20P040FMC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1527
	8	Screw	CBA1545
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1039
	12	Washer	CBF1060
	13	Spring	CBH2378
	14	Spring	CBH2379
	15	Spring	CBH2514
	16	Spring	CBH2533
	17	Spring	CBH2382
	18	Spring	CBH2383
	19	Spring	CBH2384
	20	Spring	CBH2527
	21	Spring	CBH2386
	22	Spring	CBH2537
	23	Spring	CBH2390
	24	Spring	CBH2391
	25	Spring	CBH2523
	26	Spring	CBH2426
	27	Spring	CBH2444
	28	Spring	CBL1561
	29	Spring	CBL1553
	30	Shaft	CLA3845
	31	Roller	CLA3910
	32	Frame	CNC9654
	33	Lever	CNC9664
	34	Lever	CNC8949
	35	Arm	CNC9661
	36	Arm	CNC9016
	37	Arm	CNC9017
	38	Bracket	CNC9123
	39	Frame	CNC9656
	40	Belt	CNT1086
	41	Gear	CNV6886
	42	Gear	CNV6316
	43	Gear	CNV6317
	44	Gear	CNV6318
	45	Gear	CNV6319
	46	Gear	CNV6320
	47	Arm	CNV6322
	48	Arm	CNV6323
	49	Arm	CNV6324
	50	Arm	CNV6888
	51	Arm	CNV6889
	52	Guide	CNV6327
	53	Arm	CNV6924
	54	Guide	CNV6921
	55	Rack	CNV6923
	56	Clamper	CNV6331
	57	Arm	CNV6332
	58	Guide	CNV6333
	59	Cover	CNV6334
	60	Arm	CNV6335
	61	Guide	CNV6336
	62	Roller	CNV6338
	63	Damper	CNV6175
	64	Damper	CNV6662
	65	Guide	CNV6925
	66	Chassis Unit	CXB7980
*	67	Arm Unit	CXB7983
	68	Arm Unit	CXB7984
	69	Arm Unit	CXB7985
	70	Motor Unit(M2)	CXB5903
	71	Screw Unit	CXB5904
	72	Gear Unit	CXB8076
	73	Bracket Unit	CXB7982
	74	Motor Unit(M1)	CXB6007
	75	Arm Unit	CXB8504
	76	Screw(M2x5)	EBA1028
	77	Screw	JFZ20P020FMC
	78	Screw	JGZ17P020FZK
	79	Washer	YE15FUC
	80	Washer	YE20FUC
	81	Pickup Unit(Service)(P9MP3)	CXX1550
	82	Screw	IMS26P030FMC
	83	Guide	CNV6922
	84	Roller	CNV6887
	85	Spring	CBH2509
	86	Spring	CBH2512
	87	Spring	CBH2536
	88	Collar	CNV6906

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM8042(DEH-P840MP/XN/UC)
: CWM8043(DEH-P8400MP/XN/UC)
: CWM8044(DEH-P8450MP/XN/ES)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	102	IC	HA12187FP
IC	131	IC	PML009A
IC	251	IC	BA3834F
IC	301	IC	PAL007A
IC	571	IC	PA2028A
IC	601	IC (DEH-P840MP, P8400MP)	PD5741A
IC	601	IC (DEH-P8450MP)	PD5740A
IC	651	IC	S-80735ANDZI
IC	811	IC	BA6288FS
IC	871	IC	NJM2360M
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	251	Transistor	2SA1037K
Q	252	Transistor	DTC144EK
Q	253	Transistor	2SC2412K
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	352	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	501	Transistor	2SC2412K
Q	503	Transistor	IMD2A
Q	651	Transistor	2SC2412K
Q	751	Transistor	IMD2A
Q	752	Transistor	2SD2396
Q	811	Transistor	2SD1760F5
Q	812	Transistor	IMD3A
Q	831	Transistor	2SB808
Q	832	Transistor	DTC114EK
Q	833	Transistor	2SA1037K
Q	834	Transistor	DTC114EK
Q	835	Transistor	DTC114EK
Q	836	Transistor	2SC2412K
Q	837	Transistor	IMD2A
Q	871	Transistor	2SD1760F5
Q	872	Transistor	IMD2A
Q	901	Transistor	2SD1760F5
Q	902	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	912	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	2SB1238
Q	923	Transistor	DTC114EK
Q	931	Transistor	IMX1
Q	941	Transistor	DTC114EK
Q	951	Transistor	2SA1037K
Q	961	Transistor	2SC2412K
Q	962	Transistor	2SD1767
Q	963	Transistor	IMD2A
Q	971	Transistor	2SB808
Q	972	Transistor	DTC114EK
D	231	Diode	RB706F-40
D	301	Diode	1SR139-400
D	501	Diode	DAN202U
D	502	Diode	HZS9L(A2)
D	503	Diode	1SS133
D	751	Diode	HZS9L(B1)
D	811	Diode	HZS7L(B2)
D	812	Diode	1SS133
D	813	Diode	1SS133
D	833	Diode	DAN202U
D	834	Diode	DAP202U
D	835	Diode	DAN202U
D	836	Diode	DAP202U
D	837	Diode	DAN202U
D	838	Diode	DAP202U
D	839	Diode Network	DA204U
D	841	Diode	HZS6L(A2)
D	842	Diode	HZS9L(A1)
D	871	Diode	RB411D
D	872	Diode	HZS11L(A1)
D	901	Diode	HZS6L(B1)
D	902	Diode	1SR139-400
D	911	Diode	HZS6L(B2)
D	921	Diode	HZS9L(B3)
D	931	Diode	HZS7L(C3)
D	932	Diode	HZS7L(A1)
D	941	Diode	1SR139-400
D	951	Diode	DAN202U
D	964	Diode	HZS11L(A1)
D	981	Diode	1SR139-400
D	982	Diode	1SR139-400
D	983	Diode	1SR139-400
ZNR	401	Surge Protector	DSP-201M-A21F
L	105	Ferri-Inductor	LAU2R2K
L	401	Inductor	LCTB4R7K2125
L	402	Inductor	LAU1R0K
L	403	Inductor	LAU100K
L	572	Ferri-Inductor	LAU101K
L	601	Inductor	LAU100K
L	701	Inductor	LAU100K
L	831	Inductor	LAU100K
L	872	Inductor	CTF1510
L	951	Inductor	CTF1530
L	971	Inductor	LAU100K

=====Circuit Symbol and No.		===Part Name	Part No.
X	601	Radiator 10.00MHz	CSS1475
IL	961	Lamp 14V 40mA	CEL1593
VR	231	Semi-fixed 10kΩ(B)	CCP1229
MIC	231	Microphone	CPM1011
		FM/AM Tuner Unit	CWE1563
SP	601	Buzzer	CPV1050

RESISTORS

R	101		RS1/16S181J
R	102		RS1/16S181J
R	103		RS1/16S223J
R	104		RS1/16S223J
R	105		RS1/16S102J
R	106		RS1/16S102J
R	113		RS1/16S150J
R	114		RS1/16S470J
R	115		RS1/16S101J
R	116		RS1/16S101J
R	117		RS1/16S222J
R	118		RS1/16S103J
R	119		RS1/16S332J
R	120		RS1/16S562J
R	131		RS1/16S102J
R	132		RS1/16S102J
R	133		RS1/16S102J
R	134		RS1/16S102J
R	139		RS1/16S101J
R	140		RS1/16S101J
R	141		RS1/16S101J
R	142		RS1/16S101J
R	143		RS1/16S101J
R	144		RS1/16S101J
R	145		RAB4C102J
R	231		RS1/16S222J
R	233		RS1/16S560J
R	234		RS1/16S104J
R	235		RS1/16S104J
R	251		RS1/16S102J
R	252		RS1/16S104J
R	253		RS1/16S473J
R	254		RAB4C102J
R	255		RS1/16S224J
R	256		RS1/16S224J
R	257		RS1/16S104J
R	258		RS1/16S102J
R	259		RS1/16S103J
R	260		RS1/16S103J
R	261		RS1/16S223J
R	262		RS1/16S822J
R	301		RS1/16S103J
R	302		RS1/16S103J
R	303		RS1/16S103J
R	304		RS1/16S331J
R	351		RS1/16S820J
R	352		RS1/16S820J
R	353		RS1/16S820J
R	354		RS1/16S820J
R	355		RS1/16S820J
R	356		RS1/16S820J
R	357		RS1/16S223J
R	358		RS1/16S223J
R	359		RS1/16S223J
R	360		RS1/16S223J
R	361		RS1/16S223J
R	362		RS1/16S223J
R	363		RS1/16S471J
R	364		RS1/16S471J
R	365		RS1/16S471J

=====Circuit Symbol and No.		===Part Name	Part No.
R	366		RS1/16S471J
R	367		RS1/16S471J
R	368		RS1/16S471J
R	369		RS1/16S0R0J
R	370		RS1/16S0R0J
R	371		RS1/16S0R0J
R	372		RS1/16S0R0J
R	373		RS1/16S0R0J
R	374		RS1/16S0R0J
R	401		RS1/16S272J
R	402		RS1/16S272J
R	403		RS1/16S162J
R	404		RS1/16S162J
R	405		RS1/16S0R0J
R	406		RS1/16S0R0J
R	407		RS1/16S473J
R	408		RS1/16S473J
R	409		RS1/16S681J
R	410		RS1/16S681J
R	412		RS1/16S681J
R	413		RS1/16S103J
R	414		RS1/16S681J
R	415		RS1/16S681J
R	416		RS1/16S681J
R	417		RS1/16S393J
R	418		RS1/16S473J
R	419		RS1/16S472J
R	420		RS1/16S473J
R	421		RS1/16S473J
R	422		RS1/16S473J
R	423		RS1/16S222J
R	424		RS1/16S222J
R	501		RS1/16S103J
R	502		RS1/16S473J
R	503		RS1/16S223J
R	504		RS1/16S223J
R	505		RS1/16S102J
R	571		RS1/16S103J
R	572		RS1/16S103J
R	601		RS1/16S472J
R	607		RS1/16S682J
R	608		RS1/16S102J
R	609		RS1/16S0R0J
R	611		RS1/16S104J
R	612		RS1/16S0R0J
R	613		RS1/16S104J
R	614		RS1/16S104J
R	615		RS1/16S104J
R	621		RS1/16S0R0J
R	625		RS1/16S473J
R	626	(DEH-P8400MP)	RS1/16S104J
R	627		RS1/16S104J
R	628	(DEH-P840MP, P8450MP)	RS1/16S104J
R	629		RS1/16S104J
R	630		RS1/16S102J
R	651		RS1/16S102J
R	652		RS1/16S102J
R	653		RS1/16S222J
R	654		RS1/16S473J
R	655		RS1/16S183J
R	723		RS1/16S682J
R	724		RS1/16S221J
R	725		RS1/16S221J
R	726		RS1/16S221J
R	727		RS1/16S221J

Circuit Symbol and No.		Part Name	Part No.
R	728		RS1/16S221J
R	730		RS1/16S221J
R	731		RS1/16S473J
R	732		RS1/16S682J
R	733		RS1/16S682J
R	751		RD1/4PU271J
R	753		RD1/4PU221J
R	811		RS1/16S102J
R	812		RS1/16S102J
R	813		RD1/4PU391J
R	814		RAB4C102J
R	831		RS1/16S102J
R	832		RS1/16S472J
R	833		RS1/16S222J
R	834		RS1/16S222J
R	835		RS1/16S472J
R	836		RS1/16S103J
R	837		RS1/16S222J
R	838		RS1/16S222J
R	839		RS1/16S473J
R	840		RS1/16S104J
R	841		RS1/16S222J
R	842		RS1/16S222J
R	843		RS1/16S222J
R	844		RS1/16S222J
R	845		RS1/16S103J
R	846		RS1/16S104J
R	847		RS1/16S104J
R	848		RS1/16S222J
R	852		RS1/16S332J
R	872		RD1/4PU302J
R	873		RD1/4PU302J
R	874		RS1/16S0R0J
R	875		RS1/16S391J
R	876		RS1/16S121J
R	877		RS1/16S1R0J
R	878		RS1/16S331J
R	879		RS1/16S331J
R	901		RS1/16S223J
R	902		RS1/16S821J
R	903		RS1/16S821J
R	904		RS1/16S0R0J
R	913		RS1/16S681J
R	914		RS1/16S681J
R	921		RD1/4PU221J
R	922		RS1/16S122J
R	924		RD1/4PU272J
R	925		RS1/16S223J
R	931		RS1/16S104J
R	932		RS1/16S473J
R	933		RS1/16S103J
R	934		RS1/16S473J
R	935		RS1/16S472J
R	941		RS1/16S103J
R	951		RS1/16S102J
R	952		RS1/16S472J
R	953		RS1/16S472J
R	954		RS1/16S153J
R	961		RS1/16S1R0J
R	962		RS1/16S103J
R	963		RS1/16S682J
R	964		RD1/4PU391J
R	965		RS1/16S1R0J
R	971		RS1/16S472J
R	972		RS1/16S102J
R	973		RS1/16S472J

CAPACITORS

Circuit Symbol and No.		Part Name	Part No.
C	112		CKSRYB104K16
C	131		CEAL1R0M50
C	132		CEAL1R0M50
C	133		CEALR22M50
C	134		CEALR22M50
C	135		CEAL1R0M50
C	136		CEAL1R0M50
C	137		CEAL1R0M50
C	138		CEAL1R0M50
C	139		CEJQ470M10
C	140		CKSRYB104K16
C	141		CEALNP4R7M16
C	142		CEALNP4R7M16
C	145		CEALNP4R7M16
C	146		CEALNP4R7M16
C	147		CEALNP4R7M16
C	148		CEALNP4R7M16
C	149		CEALNP4R7M16
C	150		CEALNP4R7M16
C	157		CEAL100M16
C	159		CCSQCH152J50
C	160		CCSQCH152J50
C	161		CCSQCH152J50
C	162		CCSQCH152J50
C	231		CEJQ100M16
C	232		CEJQ220M25
C	233		CEAL100M16
C	234		CKSRYB474K10
C	235		CKSRYB474K10
C	251		CKSRYB104K16
C	252		CKSRYB104K16
C	253		CKSRYB103K50
C	254		CEJQ1R0M50
C	255		CKSRYB104K16
C	256		CKSRYB104K16
C	257		CKSRYB224K10
C	258		CKSRYB104K16
C	301		CKSRYB474K10
C	302		CKSRYB474K10
C	303		CKSRYB474K10
C	304		CKSRYB474K10
C	305		CKSRYB474K10
C	306		CKSRYB474K10
C	307		CKSRYB474K10
C	308		CKSRYB474K10
C	309		CEHAR330M10
C	310	3300µF/16V	CCH1433
C	311		CKSRYB104K16
C	312		CEHAR100M16
C	313		CKSQYB225K10
C	314		CKSQYB225K10
C	351		CEAL100M16
C	352		CEAL100M16
C	353		CEAL100M16
C	354		CEAL100M16
C	355		CEAL100M16
C	356		CEAL100M16
C	357		CKSRYB222K50
C	358		CKSRYB222K50
C	359		CKSRYB222K50
C	360		CKSRYB222K50
C	361		CKSRYB222K50
C	362		CKSRYB222K50
C	401		CKSRYB183K50
C	402		CKSRYB183K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	408		CKSRYB473K50
C	409		CKSRYB103K50
C	411		CEJQ101M10
C	413		CKSRYB223K50
C	414		CKSRYB472K50
C	415		CKSRYB223K50
C	416		CEJQ220M10
C	501		CEJQ220M16
C	571		CKSRYB105K10
C	572		CKSRYB105K10
C	573		CKSRYB105K10
C	574		CKSRYB105K10
C	575		CKSRYB105K10
C	576		CKSRYB105K10
C	580		CEAL4R7M35
C	582		CEJQ101M16
C	583		CASAQ3R3M16
C	585		CKSYB684K25
C	586		CEAL100M16
C	587		CKSQYB225K10
C	588		CEJQ330M25
C	589		CEJQ330M25
C	601		CEAL4R7M35
C	602		CKSRYB103K50
C	603		CCSRCH180J50
C	604		CCSRCH101J50
C	605		CCSRCH220J50
C	652		CKSRYB104K16
C	653		CKSRYB105K10
C	702	470µF/16V	CCH1331
C	751		CKSRYB102K50
C	752		CEJQ101M16
C	753		CKSRYB473K50
C	811		CCSRCH101J50
C	812		CEJQ220M10
C	813		CKSRYB104K16
C	814		CKSRYB102K50
C	815		CKSRYB102K50
C	816		CCSRCH101J50
C	833		CKSRYB104K16
C	837		CKSRYB103K50
C	872	4.7µF	CCG1111
C	873		CEJQ100M50
C	874		CEJQ330M25
C	875		CKSRYB103K50
C	876		CCSRCH331J50
C	877		CEJQ470M16
C	878		CKSRYB104K16
C	879		CKSRYB104K16
C	880		CEJQ101M10
C	901		CEJQ470M10
C	902		CKSRYB103K50
C	903		CKSRYB472K50
C	904	470µF/16V	CCH1331
C	905	470µF/16V	CCH1331
C	911		CEJQ470M10
C	912		CKSRYB472K50
C	921		CEJQ221M10
C	922		CKSRYB103K50
C	923		CEJQ101M16
C	931		CKSRYB104K25
C	941		CKSRYB105K10
C	970		CKSRYB473K50
C	972		CCSRCH101J50

B Unit Number : CWM8051(DEH-P840MP/XN/UC)
: CWM8052(DEH-P8400MP/XN/UC)
(DEH-P8450MP/XN/ES)
Unit Name : Keyboard Unit(OEL)

MISCELLANEOUS

IC	1801	IC	PD5745A
IC	1802	IC (DEH-P840MP)	PD8091A
IC	1802	IC (DEH-P8400MP, P8450MP)	PD8092A
IC	1805	IC	S-818A33AUC-BGN
IC	1806	IC	TC7SET08FU
Q	1806	Transistor	2SC4617
Q	1807	Transistor	2SD1664
D	1803	Diode	1SS355
D	1804	Diode	DAN202U
D	1805	Diode	DAP202U
L	1801	Inductor	CTF1530
L	1803	Inductor	CTF1530
TH	1901	Thermistor	CCX1037
X	1801	Radiator 10.0MHz	CSS1577
S	1801	Switch	CSG1107
S	1802	Switch	CSG1107
S	1803	Switch	CSG1107
S	1804	Switch	CSG1107
VR	1801	Semi-fixed 15kΩ(B)	CCP1230
		OEL Unit	MXS8018

RESISTORS

R	1805		RS1/16S0R0J
R	1807		RS1/16S222J
R	1808		RS1/16S222J
R	1809		RS1/16S820J
R	1815		RS1/16S222J
R	1816		RS1/16S0R0J
R	1817		RS1/16S154J
R	1818		RS1/16S473J
R	1819		RS1/16S473J
R	1820		RAB4C102J
R	1821		RS1/16S473J
R	1822		RS1/16S333J
R	1823		RS1/16S222J
R	1824		RS1/16S682J
R	1825		RS1/16S393J
R	1826		RS1/16S0R0J
R	1827		RS1/16S683J
R	1828		RS1/16S0R0J
R	1830		RS1/16S392J
R	1831		RAB4C101J
R	1832		RS1/16S473J
R	1833		RS1/16S473J
R	1834		RS1/16S102J
R	1835		RS1/16S102J
R	1836		RS1/16S101J
R	1837		RAB4C101J
R	1838		RS1/16S101J
R	1839		RAB4C101J
R	1840		RAB4C101J
R	1841		RAB4C101J
R	1842		RAB4C101J
R	1843		RAB4C101J
R	1844		RAB4C101J
R	1845		RAB4C101J
R	1846		RAB4C101J
R	1847		RS1/16S682J
R	1848		RS1/16S473J

=====Circuit Symbol and No.		===Part Name	Part No.
CAPACITORS			
C	1805		CKSRYB102K50
C	1806		CSZSR4R7M10
C	1807		CSZSR4R7M10
C	1808		CKSRYB103K50
C	1809		CKSRYB104K25
C	1811		CKSRYB473K50
C	1812		CKSRYB103K50
C	1813		CSZSR4R7M10
C	1814		CKSRYB104K16
C	1815		CKSRYB104K25
C	1816		CKSRYB104K25
C	1817		CKSRYB104K25
C	1819		CKSRYB104K16
C	1820		CKSRYB103K50
C	1821		CKSRYB103K50

C Unit Number : CWM8056
Unit Name : Keyboard Unit(LCD)

MISCELLANEOUS

IC	1901	IC	RS-140
IC	1902	IC	PD6340A
D	1903	LED	NSSW440-9159
D	1905	LED	CL190UBX
D	1906	LED	CL190UBX
D	1907	LED	CL190UBX
D	1908	LED	CL190UBX
D	1909	LED	CL190UBX
D	1910	LED	CL190UBX
D	1911	LED	CL190UBX
L	1902	Inductor	CTF1530
X	1901	Ceramic Resonator 4.97MHz	CSS1422
S	1901	Switch	CSG1110
S	1902	Encoder	CSD1042
S	1903	Switch	CSG1110
S	1904	Push Switch	CSG1111
S	1905	Push Switch	CSG1111
S	1906	Push Switch	CSG1111
S	1907	Push Switch	CSG1111
S	1908	Switch	CSG1107
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Push Switch	CSG1112
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Switch	CSG1107
S	1918	Push Switch	CSG1112
S	1919	Push Switch	CSG1112
LCD	1901	LCD	CAW1704

RESISTORS

R	1901		RS1/16S222J
R	1902		RS1/16S222J
R	1903		RS1/16S104J
R	1904		RS1/16S103J
R	1905		RS1/16S121J
R	1906		RS1/16S2R2J
R	1907		RS1/16S101J
R	1908		RS1/16S101J
R	1910		RS1/16S0R0J
R	1918		RS1/16S560J

=====Circuit Symbol and No.		===Part Name	Part No.
R	1920		RS1/16S560J
R	1922		RS1/16S560J
R	1924		RS1/16S271J
R	1926		RS1/16S271J
R	1928		RS1/16S331J
R	1929		RS1/16S331J
R	1930		RS1/16S271J

CAPACITORS

C	1901		CKSRYB104K25
C	1903		CSZSR4R7M10
C	1904		CKSRYB104K16
C	1905		CCSRCH101J50
C	1908		CKSRYB104K16
C	1909		CKSRYB104K16
C	1910		CKSRYB104K16
C	1911		CKSRYB104K16
C	1912		CKSRYB104K16
C	1913		CKSRYB104K16
C	1914		CKSRYB104K16

E Unit Number :
Unit Name : Switch PCB

MISCELLANEOUS

S	951	Switch(OPEN)	CSN1051
S	952	Spring Switch(CLOSE)	CSN1052
S	953	Switch(EJECT)	CSN1058

D Unit Number : CWX2618
Unit Name : CD Core Unit(S9MP3)

MISCELLANEOUS

IC	201	IC	UPD63760GJ
IC	202	IC	MSM51V4265EP-70TS
IC	203	IC	BA033SFP
IC	301	IC	BA5996FM
IC	501	IC	UPD61002GC
IC	502	IC	BA25BC0WFP
IC	701	IC	PE5269A
IC	702	IC	TC74VHCT08AFT
IC	703	IC	S-818A33AUC-BGN
IC	704	IC	PD9023A
Q	101	Transistor	2SB1132
Q	601	Transistor	DTC323TK
Q	602	Transistor	DTC323TK
Q	603	Transistor	2SB709A
Q	701	Transistor	UN2111
D	101	Diode	1SS355
D	201	Diode	1SR154-400
D	202	Diode	1SR154-400
D	203	Diode	1SR154-400
D	501	Diode	1SR154-400
D	502	Diode	1SR154-400
D	503	Diode	1SR154-400
D	504	Diode	1SR154-400
D	601	Chip Diode	MA151WA
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
L	204	Inductor	CTF1546
L	701	Inductor	CTF1546
L	702	Inductor	LCYBR22J1608
TH	701	Thermistor	CCX1037
X	201	Ceramic Resonator 16.93MHz	CSS1569
X	202	Ceramic Resonator 24.57MHz	CSS1570
X	701	Ceramic Resonator 16.00MHz	CSS1576
S	901	Spring Switch (HOME)	CSN1051
S	902	Spring Switch (CLAMP)	CSN1052

Circuit Symbol and No.		Part Name	Part No.
S	903	Spring Switch (DSCSNS)	CSN1051
S	904	Spring Switch (12EJ)	CSN1052
S	905	Spring Switch (8EJ)	CSN1051

RESISTORS

R	101	RS1/10S1R5J
R	102	RS1/10S1R5J
R	103	RS1/10S1R5J
R	104	RS1/10S1R5J
R	105	RS1/10S1R5J
R	201	RS1/16SS102J
R	202	RS1/16SS333J
R	203	RS1/16SS333J
R	204	RS1/16SS333J
R	206	RS1/16SS0R0J
R	208	RS1/16SS0R0J
R	210	RS1/16SS0R0J
R	212	RS1/16SS221J
R	213	RS1/16SS1002D
R	214	RS1/16SS1002D
R	215	RS1/16SS1002D
R	216	RS1/16SS1002D
R	217	RS1/16SS1002D
R	218	RS1/16SS1002D
R	219	RS1/16SS1002D
R	220	RS1/16SS1002D
R	221	RS1/16SS103J
R	222	RS1/16SS103J
R	223	RS1/16SS103J
R	224	RS1/16SS103J
R	225	RS1/16SS103J
R	226	RS1/16SS393J
R	227	RS1/16SS103J
R	228	RS1/16SS182J
R	229	RS1/16SS103J
R	233	RS1/16SS183J
R	237	RS1/16SS104J
R	238	RS1/16SS473J
R	301	RS1/16SS183J
R	302	RS1/16SS822J
R	303	RS1/16SS0R0J
R	304	RS1/16SS183J
R	305	RS1/16SS822J
R	306	RS1/16SS0R0J
R	307	RS1/16SS183J
R	308	RS1/16SS822J
R	309	RS1/16SS183J
R	310	RS1/16SS822J
R	311	RS1/16SS0R0J
R	501	RS1/16SS221J
R	502	RS1/16SS221J
R	503	RS1/16SS221J
R	504	RAB4CQ223J
R	505	RAB4CQ223J
R	506	RAB4CQ223J
R	507	RS1/16SS223J
R	508	RS1/16SS223J
R	509	RS1/16SS102J
R	510	RS1/16SS223J
R	511	RS1/16SS223J
R	512	RS1/16SS223J
R	601	RS1/16S101J
R	602	RS1/16S101J
R	603	RS1/16S223J
R	604	RS1/16S223J

Circuit Symbol and No.		Part Name	Part No.
R	605		RS1/16SS103J
R	701		RS1/16SS0R0J
R	707		RS1/16SS0R0J
R	708		RS1/16SS102J
R	709		RS1/16SS102J
R	710		RS1/16SS102J
R	711		RS1/16SS102J
R	712		RS1/16SS102J
R	713		RS1/16SS102J
R	714		RS1/16SS473J
R	715		RAB4CQ221J
R	716		RAB4CQ221J
R	717		RAB4CQ221J
R	718		RAB4CQ221J
R	719		RAB4CQ221J
R	720		RS1/16SS471J
R	721		RS1/16SS471J
R	722		RAB4CQ221J
R	723		RS1/16SS102J
R	724		RN1/16SE1302D
R	725		RS1/16SS222J
R	726		RS1/16SS103J
R	727		RS1/16SS473J
R	728		RS1/16SS473J
R	729		RS1/16SS223J
R	730		RS1/16SS473J
R	731		RS1/16SS104J
R	732		RS1/16SS104J
R	733		RS1/16SS104J
R	734		RS1/16SS472J
R	735		RS1/16SS473J
R	737		RAB4CQ473J
R	739		RAB4CQ473J
R	740		RS1/16SS473J
R	741		RS1/16SS104J
R	742		RS1/16SS104J
R	745		RS1/16SS473J
R	746		RS1/16SS104J
R	747		RS1/16SS104J
R	748		RS1/16SS104J
R	750		RS1/16SS473J
R	801		RS1/16SS104J
R	802		RS1/16SS473J
R	803		RS1/16SS273J
R	901		RS1/16SS221J
R	902		RS1/16SS221J
R	903		RS1/16SS221J
R	904		RS1/16SS221J
R	905		RS1/16SS221J
R	906		RS1/16SS221J

CAPACITORS

C	101	CKSSYB104K10
C	102	CKSSYB104K10
C	103	CEV101M16
C	104	CEV101M4
C	105	CKSSYB104K10
C	106	CKSRYB102K50
C	108	CKSSYB104K10
C	109	CEV100M16
C	201	CKSSYB471K50
C	202	CKSSYB104K10
C	203	CKSSYB104K10
C	204	CEV220M6R3
C	205	CKSSYB103K16
C	206	CKSSYB103K16
C	207	CEV221M4

=====Circuit Symbol and No.		===Part Name	Part No.
C	208		CKSSYB104K10
C	209		CKSSYB104K10
C	210		CKSSYB104K10
C	211		CKSSYB104K10
C	216		CKSSYB332K50
C	217		CKSSYB104K10
C	218		CKSSYB223K16
C	219		CKSSYB104K10
C	220		CKSSYB103K16
C	221		CKSSYB104K10
C	222		CCSSCH270J50
C	223		CCSSCJ3R0C50
C	224		CKSSYB104K10
C	225		CKSSYB103K16
C	226		CCSSCH680J50
C	227		CCSSCH470J50
C	228		CKSSYB682K25
C	230		CKSSYB104K10
C	232		CKSSYB104K10
C	233	47µF/6.3V	CCH1436
C	234		CEV221M4
C	235		CKSRYB224K16
C	237		CKSSYB104K10
C	238		CKSSYB104K10
C	240		CCSSCH100D50
C	301		CKSSYB331K50
C	302		CKSSYB331K50
C	303		CKSSYB472K25
C	304		CKSSYB472K25
C	305		CEV101M16
C	306		CKSRYB224K16
C	501		CKSSYB104K10
C	502		CKSSYB471K50
C	503		CKSSYB104K10
C	504	47µF/6.3V	CCH1436
C	505		CKSRYB224K16
C	506		CKSSYB104K10
C	508		CKSSYB104K10
C	509		CKSSYB104K10
C	510		CKSSYB104K10
C	511		CKSSYB104K10
C	601		CCSRCH102J50
C	602		CCSRCH102J50
C	603		CSZS4R7M10
C	604		CSZS4R7M10
C	701		CKSSYB104K10
C	702		CKSSYB471K50
C	703		CKSSYB103K16
C	704		CEV1R0M50
C	705		CKSSYB104K10
C	706		CKSSYB471K50
C	707		CKSSYB104K10
C	708		CKSSYB104K10
C	709		CKSSYB103K16
C	710		CKSSYB104K10
C	711	10µF/10V	CCH1349
C	712		CKSRYB224K16
C	713		CKSSYB104K10
C	714		CKSSYB104K10
C	715		CKSSYB103K16
C	716		CKSSYB103K16
C	901		CKSSYB104K10
C	903		CCSRCH101J50

=====Circuit Symbol and No.		===Part Name	Part No.

Miscellaneous Parts List

		Pickup Unit(Service)(P9MP3)	CXX1550
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB5903
M	951	Motor Unit(AUTOMATIC FLAP)	CXB8939