


9. EXPLODED VIEWS AND PARTS LIST

NOTES :

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to ▽ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

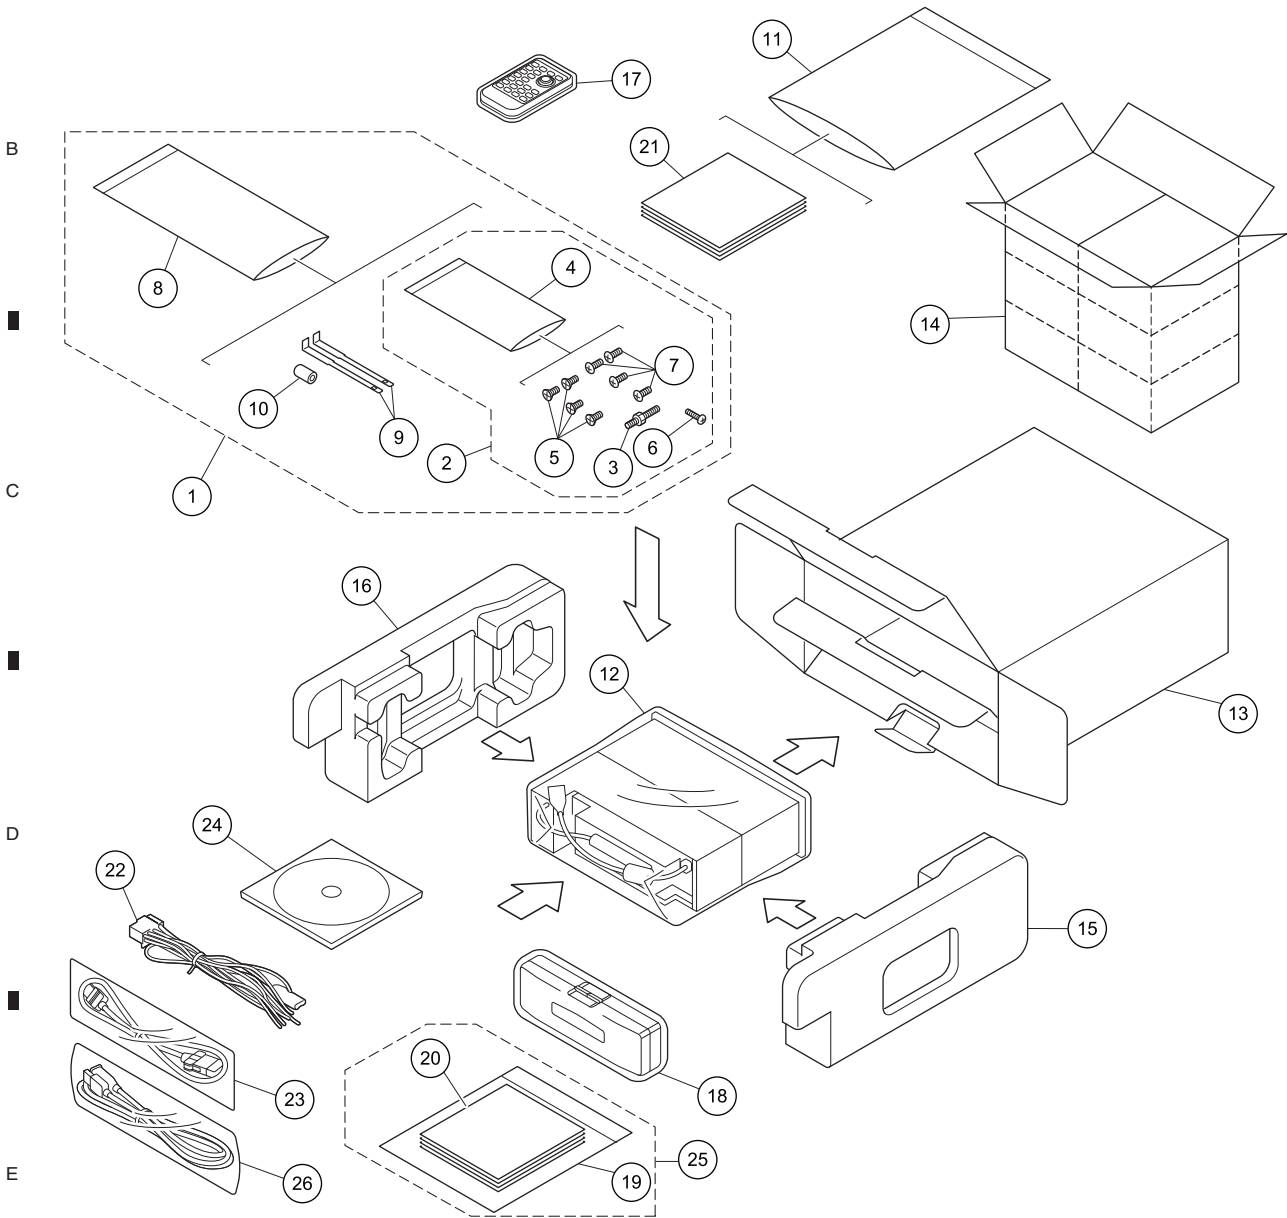

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
* 1	Accessory Assy	See Contrast table (2)	11	Polyethylene Bag	CEG1116
2	Screw Assy	See Contrast table (2)	12	Polyethylene Bag	See Contrast table (2)
3	Screw	CBA1650	13	Unit Box	See Contrast table (2)
* 4	Polyethylene Bag	CEG-127	14	Contain Box	See Contrast table (2)
5	Screw	CRZ50P090FTC	15	Protector	CHP3502
6	Screw	See Contrast table (2)	16	Protector	CHP3503
7	Screw	TRZ50P080FTC	17	Remote Control Unit	CXC9113
8	Polyethylene Bag	CEG1160	18	Case Assy	QXA3049
9	Handle	CND3707	* 19	Polyethylene Bag	CEG1250
10	Bush	CNV3930			

Mark No.	Description	Part No.
20	Quick Start Guide	See Language table (3)
21-1	Installation Manual	See Contrast table (2)
21-2	Caution Card	CRP1310
* 21-3	Caution Card	See Contrast table (2)
* 21-4	Caution Card	CRP1366
* 21-5	Caution Card	XRP7002
* 21-6	Caution Card	See Contrast table (2)
* 21-7	Warranty Card	See Contrast table (2)
* 21-8	Service Network	See Contrast table (2)
22	Cord Assy	XDP7004
23	Cord Assy	See Contrast table (2)
24	CD-ROM (Operation Manual)	See Contrast table (2)
25	Owner's Manual Assy	See Contrast table (2)
26	Cord Assy	CDP1040

(2) CONTRAST TABLE

DEH-P600UB/XN/UC, DEH-P6000UB/XN/UC, DEH-P6050UB/XN/ES and DEH-P6050UB/XN/ES1 are constructed the same except for the following:

Mark	No.	Description	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	DEH-P6050UB/XN/ES	DEH-P6050UB/XN/ES1
*	1	Accessory Assy	CEA7316	CEA7316	CEA7317	CEA7317
	2	Screw Assy	CEA5322	CEA5322	CEA3849	CEA3849
	6	Screw	JPZ20P060FTB	JPZ20P060FTB	Not used	Not used
	12	Polyethylene Bag	CEG1368	CEG1368	CEG1227	CEG1227
	13	Unit Box	CHG6390	CHG6389	CHG6392	CHG6408
	14	Contain Box	CHL6390	CHL6389	CHL6392	CHL6408
	21-1	Installation Manual	CRD4255	CRD4257	CRD4260	CRD4260
*	21-3	Caution Card	CRP1365	CRP1365	CRP1364	CRP1364
*	21-6	Caution Card	Not used	CRP1294	Not used	Not used
*	21-7	Warranty Card	CRY1070	CRY1246	Not used	CRY1250
*	21-8	Service Network	Not used	Not used	Not used	CRY1251
	23	Cord Assy	CDP1041	Not used	Not used	Not used
	24	CD-ROM (Operation Manual)	CPJ1215	CPJ1216	CPJ1217	CPJ1217
	25	Owner's Manual Assy	CXC9691	CXC9692	CXC9693	CXC9693

(3) Language of Quick Start Guide


Mark	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	Language
*	CRB2608	CRB2610	English
*	CRB2609	CRB2611	French
Mark	DEH-P6050UB/XN/ES, /ES1		Language
*	CRB2612		English
*	CRB2613		Spanish
*	CRB2614		Portuguese(B)
*	CRB2615		Traditional Chinese
*	CRB2616		Arabic

(4) CONTENTS OF CD-ROM (Operation Manual)

Mark	DEH-P600UB/XN/UC (CPJ1215)	DEH-P6000UB/XN/UC (CPJ1216)	Language
*	CRB2569	CRB2571	English
*	CRB2570	CRB2572	French
Mark	DEH-P6050UB/XN/ES, /ES1 (CPJ1217)		Language
*	CRB2573		English
*	CRB2574		Spanish
*	CRB2575		Portuguese(B)
*	CRB2576		Traditional Chinese
*	CRB2577		Arabic

All operation manuals are supplied in PDF files by the CD-ROM. No printed papers are available.

9.2 EXTERIOR(1)

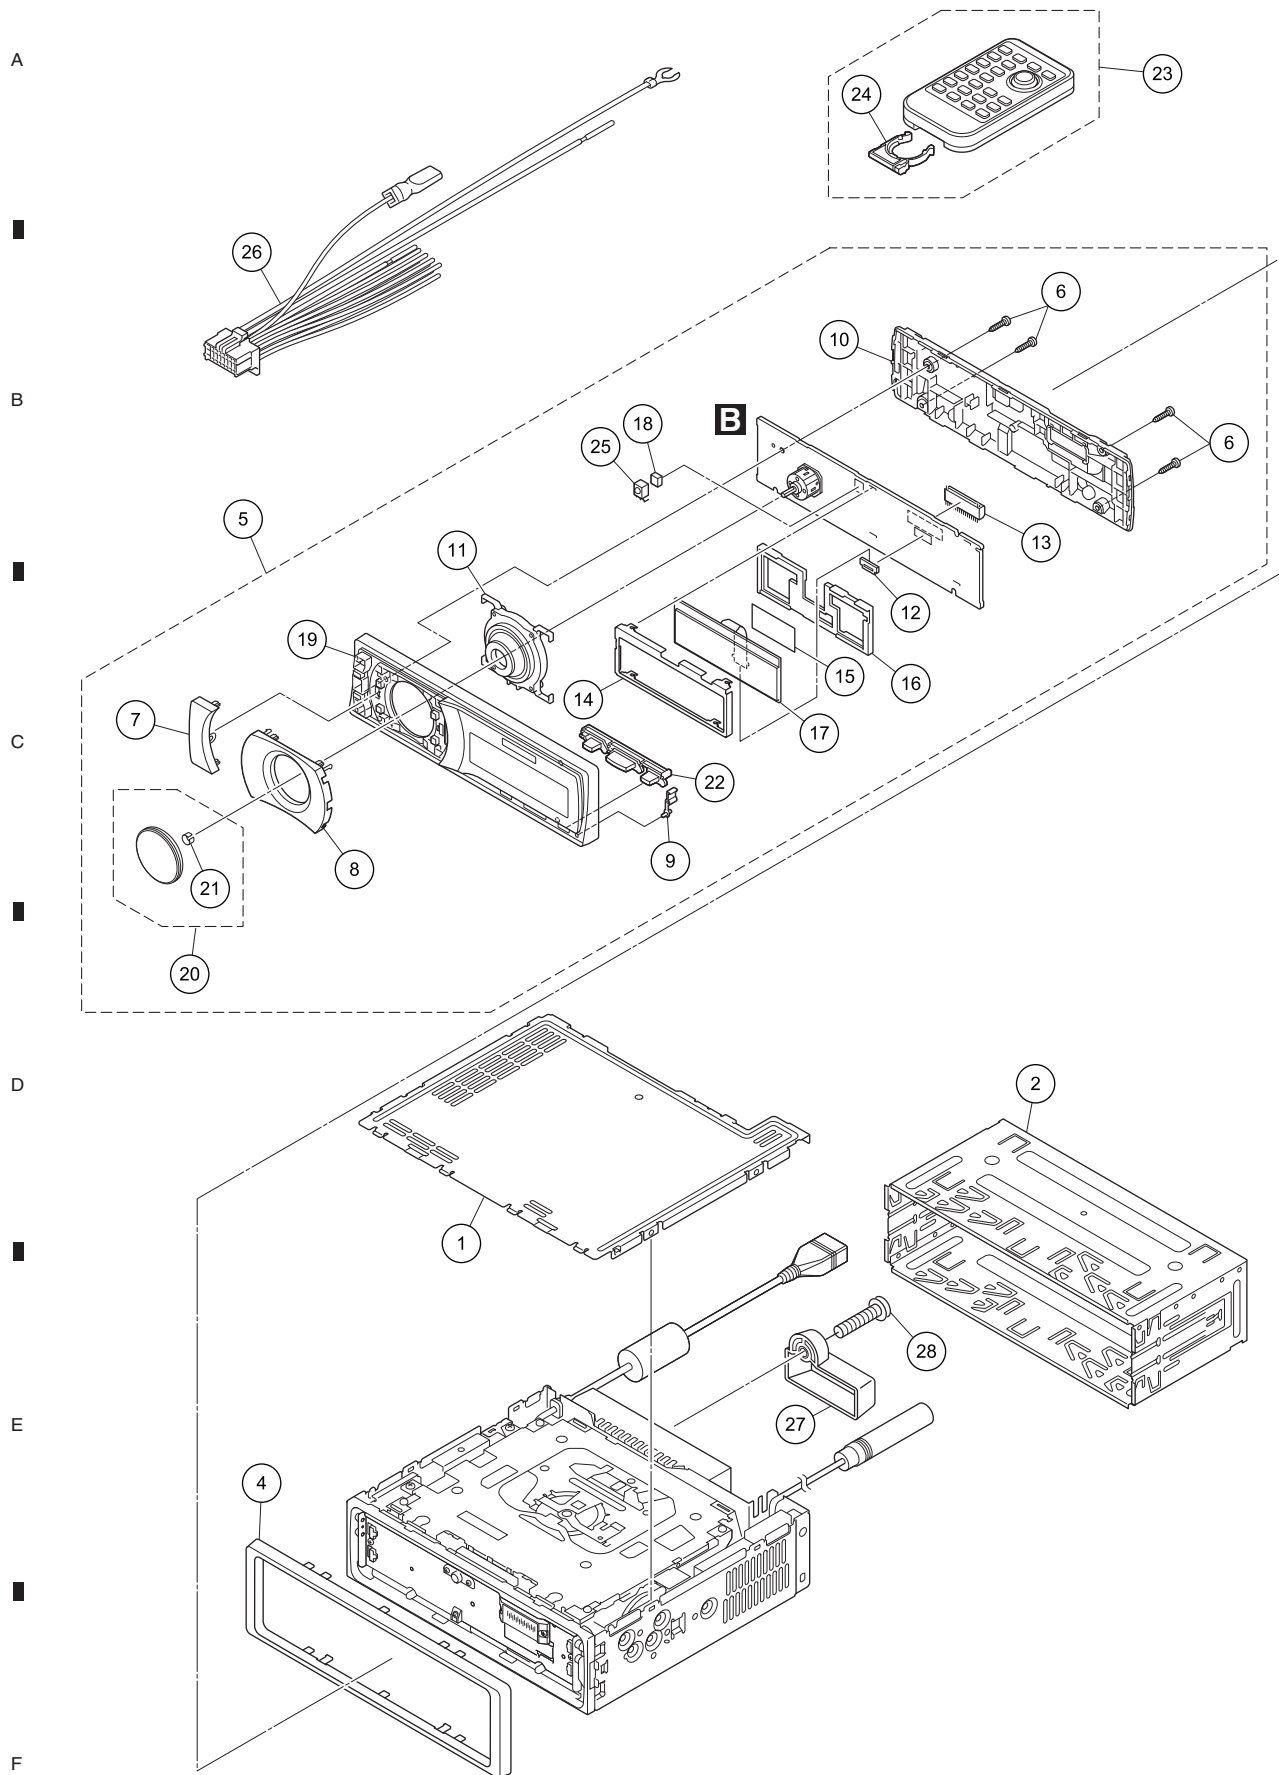

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Case	CNB3466	15	Double Side Tape	CNM8673	
	2	Holder	CND3598				
	3			16	Holder	CNV9886	A
	4	Panel	See Contrast tabel (2)	17	OEL Unit	MXS8260	
	5	Detach Grille Assy	See Contrast tabel (2)	18	Spacer	CNN2403	
				19	Grille Unit	See Contrast tabel (2)	
	6	Screw	BPZ20P080FTB	20	Knob Unit	See Contrast tabel (2)	
	7	Button(SRC, BAND)	CAI1661				
(2)	8	Button Unit (DISP, S.Rtrv, RDM, SW)	See Contrast tabel	21	Spring	XBL7005	
	9	Button(Reset)	CAI1676	22	Button Unit(CLOCK, LIST, OPEN)	CXC8936	
	10	Cover	CNS9294	23	Remote Control Unit	CXC9113	
				24	Cover	CZN5357	
	11	Lighting Conductor	CNV9883	25	IC(IC1931)	GP1UX31RK	B
	12	Connector(CN1961)	CKS5545				
	13	Connector(CN1801)	CKS5662	26	Cord Assy	XDP7004	
	14	Holder	CND4267	27	Holder	See Contrast tabel (2)	
				28	Screw	See Contrast tabel (2)	

(2) CONTRAST TABLE
 DEH-P600UB/XN/UC, DEH-P6000UB/XN/UC, DEH-P6050UB/XN/ES and DEH-P6050UB/XN/ES1
 are constructed the same except for the following:

Mark	No.	Description	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	DEH-P6050UB/XN/ES DEH-P6050UB/XN/ES1
	4	Panel	CNS9342	CNS9319	CNS9319
	5	Detach Grille Assy	CXC8930	CXC8929	CXC8931
	8	Button Unit (DISP, S.Rtrv, RDM, SW)	CXC8880	CAI1672 (Button)	CXC9427
	19	Grille Unit	CXC8879	CXC8873	CXC8874
	20	Knob Unit	CXC8883	CXC8911	CXC8883
	27	Holder	Not used	CNV7619	Not used
	28	Screw	Not used	BMZ40P140FTC	Not used

1 2 3 4

9.3 EXTERIOR(2)

A


B

C

D

E

F

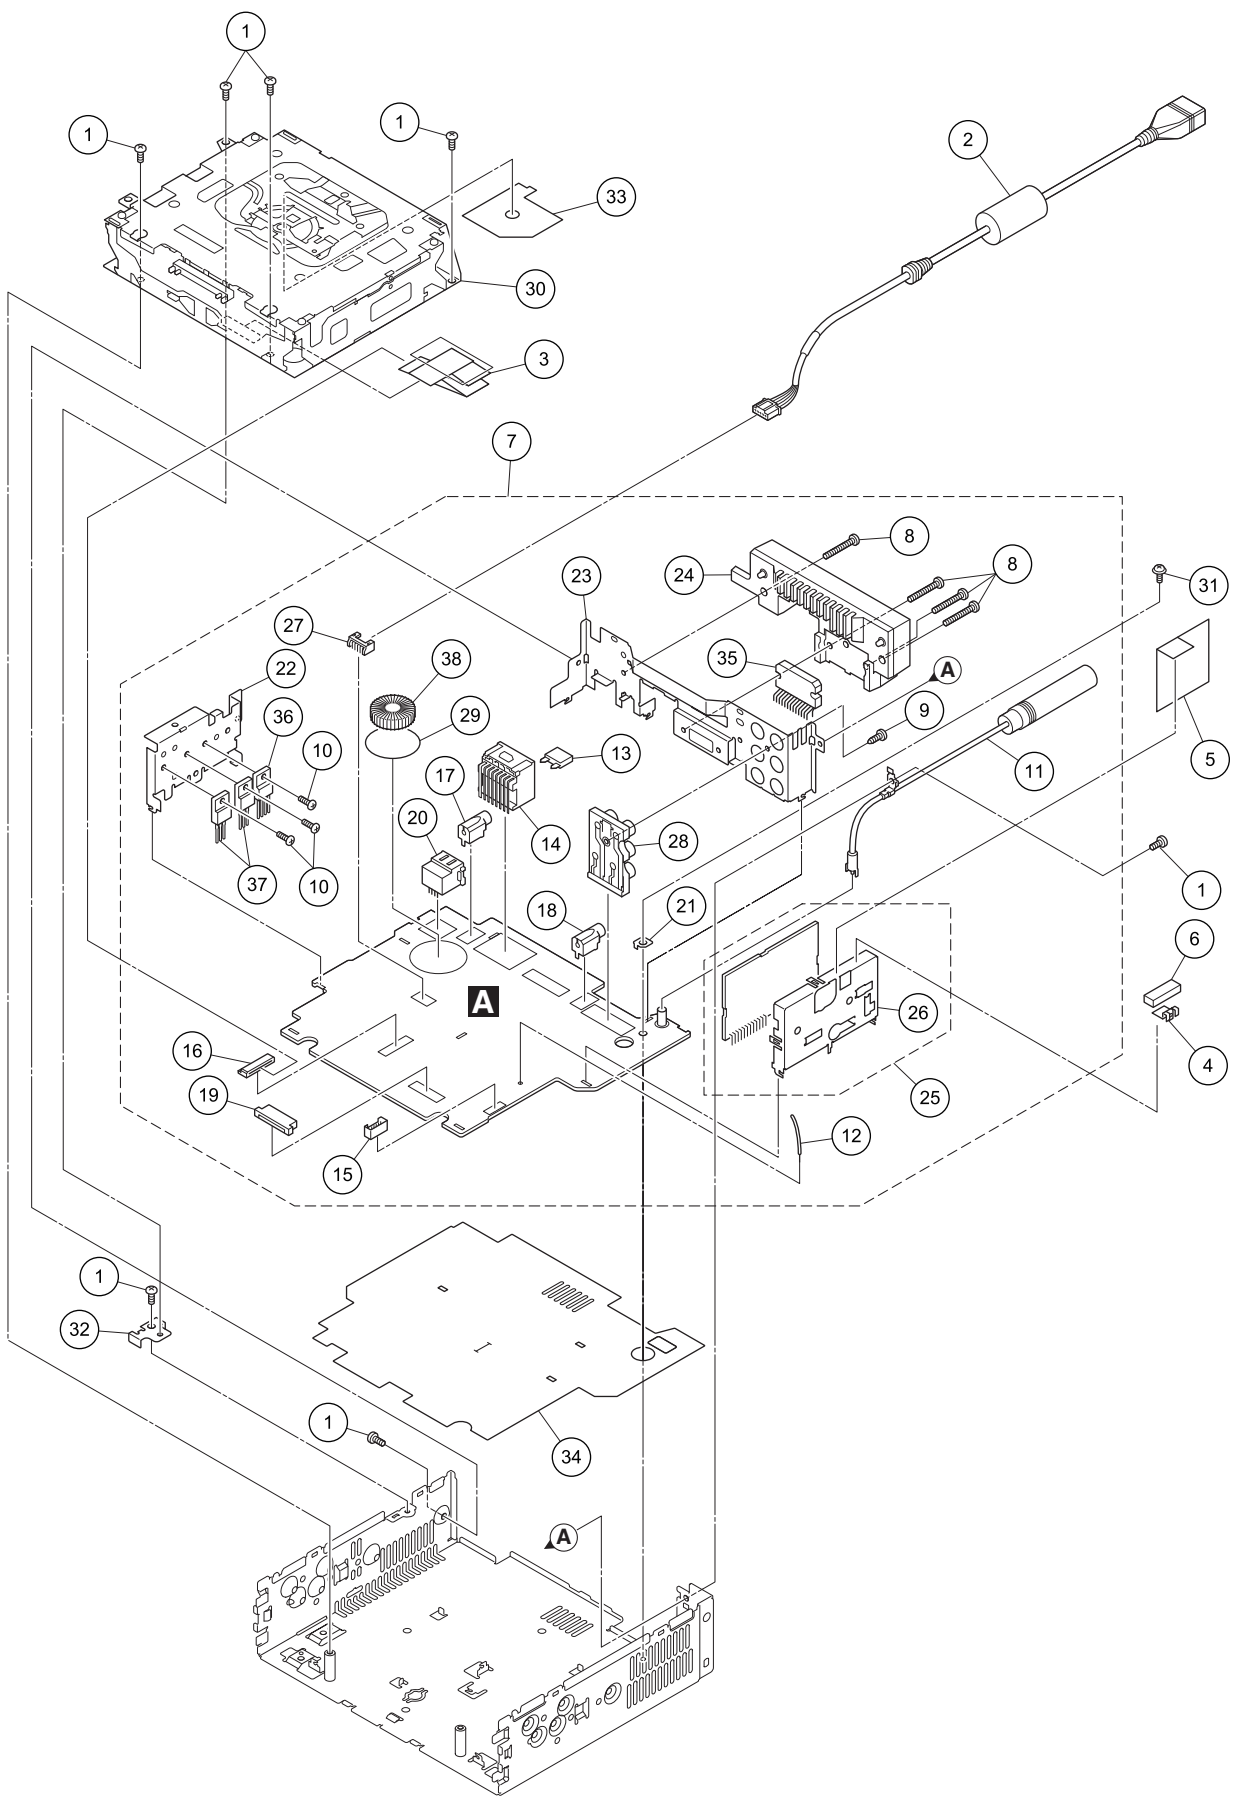


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
	1	Screw	BSZ26P060FTC		21	Holder(CN401)	CNC5399	A
	2	Cord Assy	CDE8351		22	Holder	CND3133	
	3	Cable	CDE8549		23	Holder	See Contrast table (2)	
	4	Earth Plate	CND2171		24	Heat Sink	CNR1940	
	5	Insulator	CNM8790		25	FM/AM Tuner Unit(Y401)	CWE2098	
	6	Cushion	CNM9126		26	Holder	CND4324	
	7	Tuner Amp Unit	See Contrast table (2)		27	Plug(CN781)	KM200NA5L	
	8	Screw	BMZ26P180FTC		28	Pin Jack(CN302)	XKB7001	
	9	Screw	BPZ26P070FTC		29	Insulator	XNM7031	
	10	Screw	BSZ26P060FTC		30	CD Mechanism Module(S10.5)	CXK5770	
	11	Antenna Cable(CN402)	CDH1336		31	Screw	ISS26P055FTC	B
	12	Clamper	CEF1048		32	Holder	XNC7014	
⚠	13	Fuse(10 A)	YEK5001		33	Insulator	XNM7106	
	14	Plug(CN981)	CKM1376		34	Insulator	XNM7114	
	15	Plug(CN871)	CKS-786		35	IC(IC351)	PAL007C	
	16	Connector(CN701)	CKS3833		36	IC(IC911)	NJM2388F84	
	17	Connector(CN151)	See Contrast table (2)		37	Transistor(Q751,Q901)	2SD2396	
	18	Connector(CN181)	CKS4124		38	Choke Coil(L981)	CTH1280	
	19	Connector(CN801)	CKS4811					C
	20	Connector(CN101)	CKS5271					

(2) CONTRAST TABLE
 DEH-P600UB/XN/UC, DEH-P6000UB/XN/UC, DEH-P6050UB/XN/ES and DEH-P6050UB/XN/ES1
 are constructed the same except for the following:

Mark	No.	Description	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	DEH-P6050UB/XN/ES DEH-P6050UB/XN/ES1
	7	Tuner Amp Unit	CWN3149	CWN3148	CWE3150
	17	Connector(CN151)	CKS4124	CKS4124	Not used
	23	Holder	CND4255	CND4255	CND4256

△


F



DRIVE UNIT SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw(M2.6 x 4)	CBA1828	
2	Screw(M2 x 2.5)	CBA1924	A
3	Screw(M2 x 2)	CBA1871	
4	Screw(M2 x 1.9)	CBA1935	
5	Spring	CBH2530	
6	Connector	CKS5273	
7	Arm	CNV6962	
8	Guide	CNV6967	
9	Guide	CNV8048	
10	Case Unit	CXC6483	
11	Screw(M2 x 3.5)	XBA7002	B
12	Holder	XNC7019	
13	Flexible PCB	XNP7026	
14	Drive Unit	CXC8854	
15	Screw	BMZ26P040FTC	
16	Screw(M2 x 2)	CBA1871	
17	Cord	CDE7392	
18	Gear	CNV7752	
19	Gear	CNV7753	
20	Gear	CNV7754	C
21	Gear	CNV7755	
22	Switch Unit	CWS1389	
23	Switch	CSN1051	
24	Spring Switch	CSN1052	
25	Arm Unit	CXC2199	
26	Arm Unit	CXC6623	
27	Arm Unit	CXC6624	
28	Screw	JFZ20P020FTC	
29	Spring	XBL7003	D
30	Holder	XNC7017	
31	Insulator	XNM7119	
32	Holder Unit	XXA7399	
33	Motor Unit	XXA7400	
34	Holder Unit	XXA7401	
35	Arm Unit	XXA7403	
36	Gear Unit	XXA7424	
37	Shaft	XLA7001	
38	Washer	YE15FTC	E
39	Panel Unit	CXC8925	
* 40	Chassis Unit	CXC8855	

9.5 CD MECHANISM MODULE

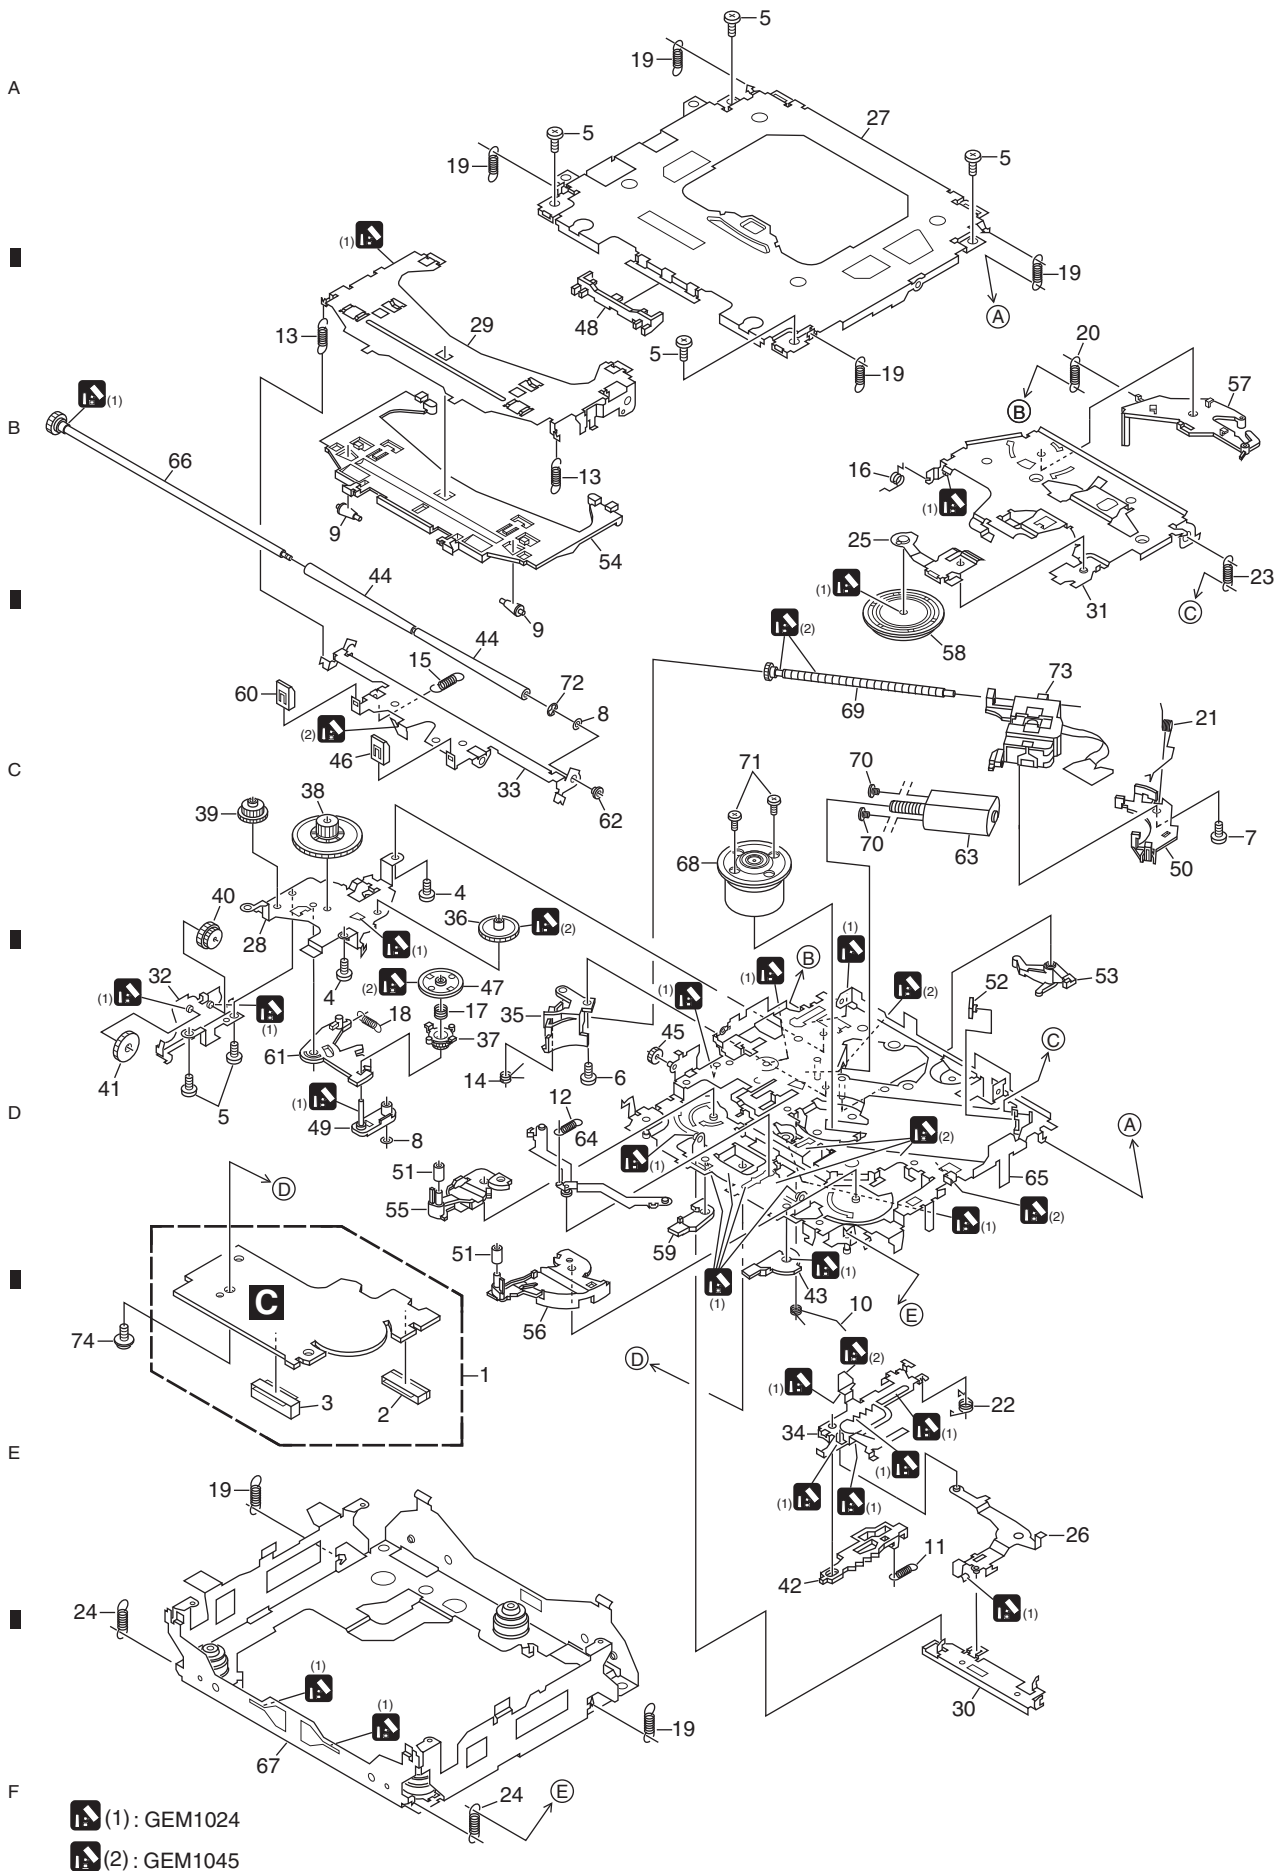

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.5COMP2-iPod)	CWX3526	50	Rack	CNV8342	
2	Connector(CN101)	CKS4182				
3	Connector(CN701)	CKS4186	51	Roller	CNV8343	A
4	Screw	BMZ20P025FTC	52	Holder	CNV8344	
5	Screw	BSZ20P040FTC	53	Arm	CNV8345	
			54	Guide	CNV9498	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	Roller	CNV9499	57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
			59	Arm	CNV8386	
11	Spring	CBH2612	60	Guide	CNV8396	B
12	Spring	CBH2614				
13	Spring	CBH2616	61	Arm	CNV8413	
14	Spring	CBH2617	62	Collar	CNV8938	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
			64	Arm Unit	CXC4027	
16	Spring	CBH2855	65	Chassis Unit	CXC4028	
17	Spring	CBH2937				
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXC4031	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
			69	Screw Unit	CXC6359	C
21	Spring	CBH2856	70	Screw	JFZ20P020FTC	
22	Spring	CBH2857				
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
			74	Screw	IMS26P030FTC	
26	Arm	CND1909				
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND3831				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV7201				
36	Gear	CNV7207				
37	Gear	CNV7208				
38	Gear	CNV7209				
39	Gear	CNV7210				E
40	Gear	CNV7211				
41	Gear	CNV7212				
42	Rack	CNV7214				
43	Arm	CNV7216				
44	Roller	CNV7218				
45	Gear	CNV7219				
46	Guide	CNV7361				
47	Gear	CNV7595				F
48	Guide	CNV7799				
49	Arm	CNV7805				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/OSOOOJ,RS1/OOSOOOJ

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Unit Number : CWN3149(P600UB)	
Unit Number : CWN3148(P6000UB)	
Unit Number : CWN3150(P6050UB)	
Unit Name : Tuner Amp Unit	
Unit Number : (P600UB)	
Unit Number : (P6000UB)	
Unit Number : (P6050UB)	
Unit Name : Keyboard Unit	
Unit Number : CWX3526	
Unit Name : CD Core Unit	
(S10.5COMP2-iPod)	
Unit Number : CWS1389	
Unit Name : Switch Unit	

A

Unit Number : CWN3149(P600UB)
Unit Number : CWN3148(P6000UB)
Unit Number : CWN3150(P6050UB)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,90,62) IC	HA12241FP
IC 181	(A,113,110) IC	NJM2794V
IC 201	(A,124,85) IC	PML017A
IC 351	(A,90,136) IC	PAL007C
IC 451	(B,152,82) IC	NJM2885DL1-33
IC 501	(A,54,59) Regulator IC	BD9781HFP
IC 601	(A,126,47) IC	PEG430B8
IC 651	(A,139,63) IC	S-80835CNNB-B8U
IC 731	(B,59,37) IC	NJM2885DL1-33
IC 781	(B,65,71) IC	R5523N001B
IC 851	(A,40,24) IC	NJM2360M

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
IC 871	(A,149,17) IC
IC 911	(A,16,80) IC
IC 951	(A,71,105) IC(P600UB)
Q 101	(A,19,118) Transistor
Q 241	(A,106,80) Transistor
Q 242	(A,111,78) Transistor
Q 301	(A,124,107) Transistor
Q 302	(A,144,124) Transistor
Q 303	(A,130,124) Transistor
Q 304	(A,90,89) Transistor
Q 351	(A,98,85) Chip Transistor
Q 352	(A,98,81) Chip Transistor
Q 381	(A,91,100) Transistor
Q 651	(A,138,37) Transistor
Q 751	(A,15,55) Transistor
Q 752	(A,23,49) Transistor
Q 821	(A,43,43) Transistor
Q 822	(A,36,45) Transistor
Q 831	(A,85,15) Chip Transistor
Q 841	(A,103,26) Transistor
Q 851	(A,23,35) Transistor
Q 852	(A,28,30) Transistor
Q 871	(A,63,9) Transistor
Q 872	(A,50,8) Transistor
Q 901	(A,15,71) Transistor
Q 902	(B,29,71) Transistor
Q 921	(A,79,65) Transistor
Q 931	(B,111,63) Chip Transistor
Q 961	(A,89,105) Transistor
D 181	(A,122,123) Diode
D 182	(A,122,125) Diode
D 201	(A,138,69) Diode Network
D 241	(A,107,87) Diode
D 301	(A,71,92) Diode
D 381	(A,68,92) Diode
D 382	(A,98,77) Diode
D 453	(A,148,89) Diode
D 501	(A,43,90) Diode
D 502	(A,44,62) Diode
D 751	(A,22,52) Diode
D 801	(B,97,22) Diode
BA6288FS	
NJM2388F84	
TPD1018F	
UMF23N	
2SD1767	
UMD3N	
IMH23	
IMH23	
UMD3N	
DTC114EUA	
DTC114EUA	
2SC3052-12	
2SC3052-12	
2SD2396	
UMD3N	
2SD1767	
UMD3N	
DTC114EUA	
UMF23N	
2SD1760F5	
UMD3N	
2SD1760F5	
UMD3N	
2SD2396	
UMD3N	
UMX1N	
DTC114EUA	
2SA1576A	
MALS068X	
MALS068X	
DA204U	
HZS12L(B1)	
1SS133	
HZS9L(A3)	
DAN202U	
1SR154-400	
1SR154-400	
RB060L-40	
HZS7L(C3)	
DAP202U	

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
	D 802 (B,102,22) Diode	DAN202U	R 181 (A,117,124)	RS1/16S181J
	D 803 (B,97,14) Diode	DAP202U	R 182 (A,114,124)	RS1/16S181J
	D 804 (B,102,14) Diode	DAN202U	R 183 (A,115,121)	RS1/16S223J
A	D 805 (B,97,27) Diode	DAP202U	R 184 (A,118,121)	RS1/16S223J
	D 806 (B,102,27) Diode	DAN202U	R 201 (A,119,75)	RAB4C102J
	D 821 (A,35,42) Diode	HZS11L(A1)	R 202 (A,115,75)	RS1/16S101J
	D 831 (A,89,10) LED	SMLE12BC7T(NP)	R 203 (A,117,75)	RS1/16S101J
	D 851 (A,38,17) Diode	RB551V-30	R 242 (A,109,75)	RS1/16S182J
			R 301 (A,130,107)	RS1/16S390J
			R 302 (A,118,107)	RS1/16S390J
	D 852 (A,35,32) Diode	HZS11L(A1)		
	D 871 (A,149,27) Diode	1SS133		
	D 872 (A,149,24) Diode	1SS133	R 303 (A,150,124)	RS1/16S390J
	D 873 (A,53,9) Diode	HZS7L(B3)	R 304 (A,136,124)	RS1/16S390J
	D 901 (A,22,67) Diode	HZS6L(B1)	R 305 (A,138,124)	RS1/16S390J
			R 306 (A,124,124)	RS1/16S390J
B	D 902 (A,24,93) Diode	MPG06G-6415G50	R 307 (B,81,84)	RS1/16S102J
	D 921 (A,65,92) Diode	HZS7L(C3)		
	D 922 (A,85,69) Diode	HZS7L(B2)	R 308 (A,129,107)	RS1/16S223J
	D 931 (A,99,68) Diode	MPG06G-6415G50	R 309 (A,120,107)	RS1/16S223J
	D 941 (A,85,91) Diode(P6000UB, P6050)	MPG06G-6415G50	R 310 (A,149,124)	RS1/16S223J
			R 311 (A,134,124)	RS1/16S223J
			R 312 (A,140,124)	RS1/16S223J
	D 942 (A,81,91) Diode(P6000UB, P6050)	MPG06G-6415G50		
	D 952 (A,74,91) Diode(P600UB)	MPG06G-6415G50		
	D 953 (A,78,91) Diode(P600UB)	MPG06G-6415G50	R 313 (A,125,124)	RS1/16S223J
	D 961 (A,89,111) Diode	DAN202U	R 314 (B,129,125)	RS1/16S0R0J
	D 981 (A,60,109) Diode	MPG06G-6415G50	R 316 (B,139,125)	RS1/16S0R0J
			R 351 (B,130,95)	RS1/16S472J
			R 352 (B,127,93)	RS1/16S472J
C	D 982 (A,64,106) Diode	MPG06G-6415G50		
	ZNR401 (B,158,145) Surge Protector	IMSA-6801-01Y901		
	L 201 (A,122,71) Inductor	LCTAW2R2J2520	R 353 (A,95,115)	RS1/16S182J
	L 401 (B,170,145) Inductor	LCTAW220J2520	R 354 (A,95,118)	RS1/16S272J
	L 402 (A,154,109) Inductor	LAU1R0K	R 355 (A,98,115)	RS1/16S182J
			R 356 (A,98,118)	RS1/16S272J
			R 357 (A,98,79)	RS1/16S472J
	L 403 (A,157,100) Inductor	LAU2R2K		
	L 501 (A,44,69) Inductor	CTH1385		
	L 601 (A,98,53) Ferri-Inductor	LAU100K	R 358 (A,93,115)	RS1/16S182J
	L 781 (A,57,74) Inductor	CTF1713	R 359 (A,95,117)	RS1/16S272J
	L 782 (A,71,33) Inductor	CTF1379	R 360 (A,100,115)	RS1/16S182J
			R 361 (A,98,117)	RS1/16S272J
			R 362 (A,95,84)	RS1/16S103J
	L 841 (A,112,31) Ferri-Inductor	LAU100K		
	L 852 (A,30,21) Inductor	CTF1660		
D	L 961 (A,89,118) Inductor	LCTAW2R2J2520	R 363 (A,97,87)	RS1/16S103J
	L 981 (A,35,109) Choke Coil 600 μ H	CTH1280	R 364 (A,95,89)	RS1/16S331J
	X 601 (A,125,63) Crystal Resonator 15.000 MHz	CSS1653	R 365 (B,88,84)	RS1/16S101J
			R 366 (A,108,115)	RS1/16S103J
			R 381 (A,91,96)	RS1/16S473J
	⚠FU301 (B,123,129) Fuse 3 A	CEK1286		
	⚠ Fuse 10A	YEK5001		
	SP601 (A,147,68) Buzzer	CPV1062	R 382 (A,99,74)	RS1/16S223J
	Y 401 (A,167,148) FM/AM Tuner Unit	CWE2098	R 383 (A,91,97)	RS1/16S104J
			R 401 (B,170,111)	RS1/16S681J
			R 403 (A,159,110)	RS1/16S681J
			R 405 (B,164,117)	RS1/16S681J

RESISTORS

	R 101 (B,23,128)	RS1/16S620J		
E	R 102 (B,24,125)	RS1/16S101J	R 406 (B,163,129)	RS1/16S681J
	R 103 (B,23,131)	RS1/16S101J	R 407 (B,162,129)	RS1/16S681J
	R 104 (A,20,120)	RS1/16S222J	R 502 (B,39,59)	RS1/10SR471J
	R 105 (A,11,118)	RS1/16S181J	R 503 (A,46,54)	RS1/16S3302F
			R 504 (A,45,52)	RS1/16S333J
	R 106 (A,14,118)	RS1/16S181J		
	R 107 (A,14,117)	RS1/16S223J	R 505 (A,43,54)	RS1/16S8201F
	R 108 (A,11,117)	RS1/16S223J	R 506 (A,45,55)	RS1/16S683J
	R 113 (A,14,115)	RS1/10SR102J	R 507 (A,45,60)	RS1/16S823J
	R 114 (A,11,115)	RS1/10SR102J	R 601 (A,113,47)	RS1/16S104J
			R 602 (A,113,43)	RS1/16S104J
	R 115 (A,19,115)	RS1/16S562J		
	R 116 (A,87,56)	RS1/10SR102J	R 603 (A,113,45)	RS1/10SR102J
F	R 117 (A,17,115)	RS1/16S332J	R 604 (B,119,37)	RS1/16S681J
	R 151 (B,29,131) (P600UB, P6000UB)	RS1/16S102J	R 605 (A,116,61)	RS1/16S472J
	R 152 (B,29,129) (P600UB, P6000UB)	RS1/16S102J	R 606 (A,116,59)	RS1/16S472J
			R 607 (A,118,33)	RS1/16S104J

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 608 (A,123,28)	RS1/16S104J	R 901 (B,19,70)	RS1/16S223J
R 609 (B,118,51)	RS1/16S222J	R 902 (B,28,73)	RS1/16S681J
R 610 (B,121,55)	RS1/16S473J	R 903 (B,32,73)	RS1/16S681J
R 611 (B,126,60)	RS1/16S0R0J	R 911 (B,19,88)	RS1/16S473J
R 612 (B,124,37)	RS1/16S472J	R 921 (A,78,69)	RS1/16S104J
R 613 (B,131,56)	RS1/16S473J	R 922 (A,81,64)	RS1/16S103J
R 614 (B,149,53)	RS1/16S104J	R 923 (A,79,69)	RS1/16S473J
R 615 (B,132,63)	RS1/16S102J	R 924 (A,82,64)	RS1/16S223J
R 616 (B,110,55)	RS1/16S104J	R 925 (A,88,73)	RS1/16S472J
R 617 (B,103,59)	RS1/16S104J	R 931 (B,116,65)	RS1/16S103J
R 618 (A,123,68)	RS1/10SR102J	R 955 (A,112,68) (P600UB)	RS1/16S103J
R 619 (B,103,61)	RS1/16S104J	R 961 (A,90,102)	RS1/10SR102J
R 620 (B,134,51)	RS1/16S103J	R 962 (A,89,108)	RS1/16S472J
R 621 (B,142,49)	RS1/16S473J	R 964 (A,88,114)	RS1/16S153J
R 622 (B,103,57)	RS1/16S223J	R 982 (A,62,126) (P600UB)	RS1/16S0R0J
R 623 (B,135,46)	RS1/16S104J	R 983 (A,74,125)	RS1/4SA102J
R 624 (B,135,42) (P6050UB)	RS1/16S104J	R 984 (A,68,125)	RS1/4SA102J
R 625 (A,140,43) (P600UB, P6000UB)	RS1/16S0R0J	CAPACITORS	
R 626 (B,135,44) (P6000UB)	RS1/16S104J	C 101 (B,17,132)	CKSRYB104K16
R 627 (A,140,44) (P600UB)	RS1/16S0R0J	C 102 (B,26,121)	CKSRYB102K50
R 628 (A,117,34)	RS1/16S104J	C 103 (B,26,123)	CKSRYB102K50
R 629 (A,106,66)	RS1/16S473J	C 181 (B,122,125)	CKSRYB104K16
R 641 (A,140,31)	RS1/16S104J	C 182 (A,115,122)	CKSRYB472K50
R 651 (A,140,59)	RS1/16S183J	C 183 (A,118,122)	CKSRYB472K50
R 652 (A,137,33)	RS1/16S473J	C 184 (A,114,117)	CKSRYB105K10
R 653 (A,135,62)	RS1/10SR102J	C 185 (A,115,117)	CKSRYB105K10
R 654 (A,136,35)	RS1/10SR102J	C 186 (A,117,117)	CKSRYB105K10
R 701 (B,63,44)	RS1/16S473J	C 187 (A,118,117)	CKSRYB105K10
R 702 (A,89,39)	RAB4C472J	C 188 (A,114,105)	CKSRYB104K16
R 703 (B,63,42)	RS1/16S104J	C 189 (A,113,102)	CEJQ220M16
R 704 (B,90,44)	RS1/16S221J	C 201 (A,126,75)	CEJQ470M16
R 705 (B,70,44)	RS1/16S221J	C 202 (B,126,77)	CKSRYB104K16
R 706 (B,90,41)	RS1/16S221J	C 203 (A,137,67)	CCSRCH470J50
R 707 (B,69,42)	RS1/16S221J	C 205 (A,127,71)	CKSRYB474K10
R 708 (B,90,39)	RS1/16S221J	C 206 (A,132,76)	CEJQ100M16
R 709 (B,70,40)	RS1/16S102J	C 207 (B,110,78)	CKSRYB105K10
R 751 (A,22,55)	RD1/4PU102J	C 208 (B,108,76)	CKSRYB105K10
R 784 (B,92,54)	RS1/16S103J	C 209 (B,107,71)	CKSRYB105K10
R 801 (B,106,24)	RS1/16S222J	C 210 (B,109,73)	CKSRYB105K10
R 802 (B,114,27)	RS1/16S222J	C 211 (B,139,85)	CKSRYB224K16
R 803 (B,112,14)	RS1/16S222J	C 212 (B,140,82)	CKSRYB224K16
R 804 (B,116,27)	RS1/16S222J	C 213 (B,84,71)	CKSRYB105K10
R 805 (B,116,14)	RS1/16S222J	C 214 (B,88,75)	CKSRYB105K10
R 806 (B,108,16)	RS1/16S222J	C 215 (B,88,73)	CKSRYB105K10
R 807 (B,112,27)	RS1/16S104J	C 216 (B,83,74)	CKSRYB105K10
R 808 (B,102,17)	RS1/16S104J	C 217 (A,114,84)	CKSQYB475K10
R 821 (A,41,39)	RS1/16S473J	C 218 (A,135,84)	CKSQYB475K10
R 822 (A,44,39)	RS1/16S1R0J	C 219 (A,112,88)	CKSQYB475K10
R 824 (A,41,47)	RS1/10SR561J	C 220 (A,137,88)	CKSQYB475K10
R 831 (A,89,16)	RS1/16S331J	C 221 (A,115,91)	CKSQYB475K10
R 842 (A,100,24)	RS1/10SR102J	C 222 (A,135,92)	CKSQYB475K10
R 843 (A,100,25)	RS1/16S472J	C 224 (A,119,97)	CEJQ100M16
R 851 (A,48,24)	RD1/4PU272J	C 241 (A,113,97)	CEJQ470M16
R 853 (B,42,24)	RS1/16S101J	C 242 (B,113,93)	CKSRYB104K16
R 854 (B,42,22)	RS1/16S101J	C 243 (A,104,87)	CKSRYB224K16
R 855 (A,39,29)	RS1/10SR821J	C 255 (B,128,80)	CKSRYB104K16
R 856 (A,36,27)	RS1/16S1R0J	C 301 (A,129,102)	CEJQ100M16
R 857 (A,24,30)	RS1/10SR561J	C 302 (A,123,102)	CEJQ100M16
R 871 (A,51,11)	RS1/10SR102J		
R 875 (A,145,35)	RAB4C102J		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 303 (A,146,120) CEJQ100M16
 C 304 (A,133,120) CEJQ100M16
 C 305 (A,140,120) CEJQ100M16
 A C 306 (A,126,120) CEJQ100M16
 C 307 (A,78,83) CEJQ220M16

C 875 (A,70,10) CKSRYB104K16
 C 877 (A,56,7) CKSRYB224K16
 C 901 (A,21,74) CEHAR220M16
 C 902 (B,25,75) CKSRYB104K16
 C 903 (B,22,64) CKSRYB103K50

C 352 (A,95,121) CKSRYB474K10
 C 353 (A,98,121) CKSRYB474K10
 C 354 (A,100,121) CKSRYB474K10
 C 355 (A,93,121) CKSRYB474K10
 C 356 (A,85,83) CEJQ330M10

C 904 (A,31,86) 1 500 μ /16 V CCH1201
 C 911 (A,22,85) CEHAS101M10
 C 912 (B,19,84) CKSRYB103K50
 C 913 (A,18,98) CEJQ101M16
 C 931 (B,116,63) CKSRYB105K16

C 357 (A,95,124) CKSQYB474K16
 C 358 (A,98,124) CKSQYB474K16
 C 359 (A,100,124) CKSQYB474K16
 C 360 (A,93,124) CKSQYB474K16
 B C 361 (A,95,128) CKSQYB225K10

C 941 (B,87,91) (P6000UB,P6050UB) CKSRYB473K50
 C 952 (A,71,109) (P600UB) CKSRYB103K50
 C 953 (B,75,85) (P600UB) CKSRYB473K50
 C 961 (A,90,114) CKSRYB104K16
 C 981 (B,52,138) CKSRYB104K16

C 362 (A,99,128) CKSQYB225K10
 C 364 (A,91,83) CEJQ100M16
 C 365 (B,97,144) CKSRYB104K16
 C 366 (A,54,118) 3 300 μ F/16 V CCH1486
 C 402 (B,164,106) CKSRYB103K50

C 982 (B,54,138) CKSRYB104K16

B**Unit Number : (P600UB)****Unit Number : (P6000UB)****Unit Number : (P6050UB)****Unit Name : Keyboard Unit****MISCELLANEOUS**

C 403 (B,164,111) CKSRYB103K50
 C 404 (A,160,143) CKSRYB103K50
 C 405 (A,157,105) CEJQ470M6R3
 C 406 (A,157,115) CEJQ101M16
 C 451 (A,155,89) CEJQ220M16

IC 1901 (B,96,23) IC PEG432A
 IC 1921 (A,148,25) IC(P600UB) PD8178A
 (A,148,25) IC(P6000UB) PD8177A
 (A,148,25) IC(P6050UB) PD8180A
 IC 1931 (A,77,35) IC GP1UX31RK

C 452 (B,148,87) CKSRYB103K50
 C 453 (B,147,74) CKSYB475K16
 C 501 (A,37,59) 100 μ F/6.3 V CCH1804
 C 502 (A,42,79) CEJQ221M16
 C 503 (A,48,52) CKSRYB221K50

IC 1951 (B,75,14) IC S-1200B33-M5
 Q 1831 (B,61,29) Transistor UMD3N
 Q 1832 (B,20,11) Digital Transistor DTC143EUA
 Q 1833 (B,33,10) Transistor DTC123JU
 Q 1961 (A,133,18) Transistor 2SC4617

C 504 (A,52,65) CKSRYB105K16
 C 506 (A,45,57) CKSRYB102K50
 C 507 (A,47,59) CKSRYB104K16
 C 603 (B,123,66) CCSRCH180J50
 C 604 (B,127,66) CCSRCH180J50

Q 1962 (A,126,17) Transistor 2SD1664
 D 1831 (A,60,12) LED SMLE12BC7T(NP)
 D 1832 (A,8,35) LED SMLE12BC7T(NP)
 D 1833 (A,153,5) LED SMLE12BC7T(NP)
 D 1834 (A,111,5) LED SMLE12BC7T(NP)

D C 606 (A,107,57) CEJQ100M16
 C 607 (B,126,55) CKSRYB103K50
 C 651 (A,137,62) CKSRYB105K10
 C 652 (A,138,34) CKSRYB104K16
 C 701 (B,82,20) CKSRYB104K16

D 1835 (A,132,5) LED SMLE12BC7T(NP)
 D 1836 (A,23,12) LED SMLE12BC7T(NP)
 D 1837 (A,23,34) LED SMLE12BC7T(NP)
 D 1838 (A,8,11) LED SMLE12BC7T(NP)
 D 1839 (A,60,34) LED SMLE12BC7T(NP)

C 731 (A,57,45) CEJQ220M16
 C 732 (B,57,43) CKSRYB103K50
 C 733 (B,56,28) CKSRYB474K10
 C 751 (A,66,48) CEJQ101M16
 C 752 (B,80,47) CKSRYB102K50

D 1901 (B,84,16) Diode 1SS355
 L 1951 (B,81,10) Inductor CTF1617
 L 1961 (A,131,18) Inductor CTF1617
 TH1961 (A,136,22) Thermistor CCX1037
 X 1901 (B,83,19) Ceramic Resonator 16.000 MHz CSS1616

E C 753 (B,23,50) CKSRYB473K50
 C 781 (B,63,76) CKSRYB104K16
 C 782 (B,60,69) CKSRYB104K16
 C 821 (B,35,44) CKSRYB473K50
 C 841 (B,120,27) CKSRYB473K50

S 1801 (A,162,6) Push Switch CSG1155
 S 1811 (A,42,23) Switch (MULTI CONTROL) CSX1120
 S 1831 (A,58,8) Push Switch CSG1155
 S 1832 (A,10,38) Push Switch CSG1155
 S 1833 (A,157,5) Push Switch CSG1155

C 852 (A,51,19) CEJQ470M25
 C 853 (B,47,29) CKSRYB103K50
 C 854 (A,42,19) CCSRCH331J50
 C 855 (A,42,29) CKSRYB104K16
 C 856 (A,42,34) CEJQ101M16

S 1834 (A,115,5) Push Switch CSG1155
 S 1835 (A,139,5) Push Switch CSG1155
 S 1836 (A,25,8) Push Switch CSG1155
 S 1837 (A,25,38) Push Switch CSG1155
 S 1838 (A,10,8) Push Switch CSG1155

F C 858 (B,34,34) CKSRYB104K16
 C 871 (B,149,29) CCSRCH101J50
 C 872 (B,146,32) CKSRYB102K50
 C 873 (B,149,22) CCSRCH101J50
 C 874 (A,73,7) CEJQ220M16

1

2

3

4

5		6	7		8
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
S 1839	(A,58,38) Push Switch	CSG1155	C 1951	(B,75,18)	CKSRYB105K10
RESISTORS			C 1952	(B,77,10)	CKSRYB105K10
R 1801	(B,102,38)	RS1/16S222J	C 1953	(B,81,12)	CKSRYB105K10
R 1802	(B,102,36)	RS1/16S222J	C 1963	(A,113,22)	CKSRYB104K16
R 1803	(B,157,28)	RS1/16S333J	C 1964	(B,121,19)	CKSRYB104K16
R 1811	(B,54,27)	RS1/16S103J			
R 1812	(B,29,26)	RS1/16S333J	C 1965	(A,127,22)	CKSRYB104K25
			C 1966	(A,124,21)	CKSRYB104K25
R 1813	(B,29,28)	RS1/16S103J	C Unit Number : CWX3526 Unit Name : CD Core Unit (S10.5COMP2-iPod)		
R 1814	(B,54,24)	RS1/16S102J			
R 1815	(B,52,30)	RS1/16S332J			
R 1816	(B,29,23)	RS1/16S102J	MISCELLANEOUS		
R 1818	(B,66,11)	RS1/16S103J	IC 201	(A,36,46) IC	PE5611B
R 1819	(B,54,16)	RS1/16S222J	IC 202	(A,24,30) IC	S-93C66BD0I-J8
R 1834	(B,66,6)	RS1/16S821J	IC 205	(B,25,47) IC	341S2094
R 1835	(B,20,15)	RS1/16S821J	IC 301	(A,29,15) IC	BA5839FP
R 1836	(B,18,14)	RS1/16S152J	Q 101	(B,58,70) Transistor	2SA1577
R 1839	(B,29,14)	RS1/16S681J	Q 102	(B,49,58) Chip Transistor	2SB1689
R 1840	(B,30,14)	RS1/16S681J	Q 201	(B,27,54) Transistor	2SA1577
R 1841	(B,30,11)	RS1/16S271J	X 201	(A,23,38) Ceramic Resonator 16.934 MHz	CSS1603
R 1843	(B,32,14)	RS1/16S681J	X 204	(B,17,45) Oscillator 32.768 kHz	CSS1735
R 1844	(B,34,14)	RS1/16S681J	X 205	(B,34,63) Oscillator 48.000 MHz	CSS1753
R 1901	(A,98,33)	RS1/16S103J	S 901	(A,55,37) Switch(HOME)	CSN1067
R 1902	(A,93,25)	RS1/16S473J	S 903	(B,20,59) Switch(DSCSNS)	CSN1067
R 1903	(B,81,15)	RS1/16S154J	S 904	(B,41,68) Switch(12EJ)	CSN1068
R 1904	(B,84,27)	RAB4CQ102J	S 905	(B,25,70) Switch(8EJ)	CSN1068
R 1905	(B,66,21)	RS1/16S104J	RESISTORS		
R 1906	(B,95,34)	RAB4CQ473J	R 101	(B,61,74)	RS1/10SR2R4J
R 1907	(B,93,11)	RAB4CQ102J	R 102	(B,61,72)	RS1/10SR2R4J
R 1908	(A,93,16)	RS1/16S221J	R 103	(B,61,71)	RS1/10SR2R7J
R 1909	(B,98,34)	RAB4CQ473J	R 104	(B,54,67)	RS1/16SS222J
R 1910	(B,141,13)	RAB4CQ101J	R 105	(B,45,58)	RS1/16SS102J
R 1911	(B,134,13)	RAB4CQ101J			
R 1912	(B,130,15)	RAB4CQ101J	R 107	(B,52,60)	RS1/16SS105J
R 1913	(A,102,33)	RS1/16S101J	R 201	(A,20,33)	RS1/16S472J
R 1914	(B,102,34)	RS1/16S101J	R 202	(A,27,33)	RS1/16SS473J
R 1915	(B,147,26)	RAB4CQ101J	R 203	(A,51,44)	RS1/16S473J
R 1916	(A,147,16)	RAB4CQ101J	R 204	(A,24,58)	RS1/16SS221J
R 1917	(A,144,16)	RAB4CQ101J	R 206	(B,10,27)	RS1/16SS104J
R 1918	(A,131,30)	RAB4CQ101J			
R 1919	(A,106,33)	RAB4CQ101J	R 210	(B,10,23)	RS1/16SS102J
R 1920	(A,108,23)	RAB4CQ101J	R 214	(B,50,50)	RS1/16SS472J
R 1931	(B,84,30)	RS1/16S101J	R 216	(B,49,49)	RS1/16SS472J
R 1932	(B,75,36)	RS1/16S103J	R 221	(A,51,48)	RS1/16SS103J
R 1933	(B,72,27)	RS1/16S2R2J	R 222	(A,51,46)	RS1/16SS103J
R 1951	(B,75,10)	RS1/16S222J			
R 1961	(A,135,25)	RS1/16S333J	R 223	(B,14,43)	RS1/16SS473J
R 1962	(A,135,18)	RS1/16S183J	R 225	(A,51,50)	RS1/16SS103J
R 1963	(A,137,23)	RS1/16S563J	R 226	(A,51,51)	RS1/16SS393J
R 1964	(A,111,22)	RS1/16S392J	R 227	(B,48,52)	RS1/16SS562J
R 1965	(A,108,20)	RAB4CQ101J	R 228	(B,45,52)	RS1/16SS122J
R 1966	(A,128,22)	RS1/16S5101D			
CAPACITORS			R 229	(B,47,54)	RS1/16SS472J
C 1901	(A,89,23)	CKSRYB103K50	R 230	(B,22,25)	RS1/16SS0R0J
C 1902	(B,81,17)	CKSRYF104Z25	R 232	(B,46,52)	RS1/16SS122J
C 1903	(B,106,25)	CKSRYB103K50	R 233	(B,26,59)	RS1/16SS103J
C 1921	(B,157,31)	CKSRYB103K50	R 234	(B,23,26)	RS1/16SS473J
C 1931	(B,78,26)	CKSYB106K6R3	R 235	(A,26,59)	RS1/16SS473J
			R 237	(A,24,35)	RS1/16SS151J

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 240 (B,14,26)
R 241 (B,14,25)
R 243 (A,22,25)
R 244 (B,22,55)

RS1/16S473J
RS1/16SS103J
RS1/16S0R0J
RS1/16SS473J

C 218 (A,50,52)
C 219 (A,47,54)
C 220 (A,48,54)
C 221 (A,46,54)
C 222 (B,46,54)
C 223 (B,48,54)

CKSSYB473K10
CKSSYB104K10
CKSSYB182K50
CKSSYB104K10
CCSSCH560J50
CCSSCH4R0C50

R 250 (B,25,52)
R 251 (B,22,51)
R 252 (B,21,48)
R 254 (A,26,64)
R 255 (A,26,63)

RS1/16SS101J
RS1/16SS101J
RS1/16SS101J
RS1/16SS104J
RS1/16SS104J

C 224 (A,45,56)
C 226 (A,42,59)
C 227 (A,42,61)
C 228 (B,41,62)
C 229 (B,48,60)

CKSSYB104K10
CCSSCH680J50
CCSSCH470J50
CKSSYB103K16
CKSSYB104K10

R 256 (A,26,62)
R 259 (A,28,66)
R 261 (A,26,65)
R 262 (A,30,60)
R 263 (A,28,63)

RS1/16SS104J
RS1/16SS0R0J
RS1/16SS104J
RS1/16SS0R0J
RS1/16SS0R0J

C 236 (A,50,58)
C 239 (B,47,52)
C 240 (A,38,61)
C 243 (B,22,41)
C 250 (A,52,48)

CKSSYB104K10
CCSSCH220J50
CKSSYB104K10
CKSQYB475K6R3
CKSSYB102K50

R 273 (B,19,48)
R 274 (B,18,51)
R 275 (B,19,51)
R 276 (B,20,51)
R 277 (B,24,52)

RS1/16SS103J
RS1/16SS104J
RS1/16SS104J
RS1/16SS104J
RS1/16SS103J

C 251 (A,52,46)
C 260 (A,28,61)
C 261 (B,34,67)
C 262 (B,32,66)
C 290 (B,22,43)

CKSSYB102K50
CKSSYB104K10
CCSSCH8R0D50
CCSSCH8R0D50
CKSSYB104K10

R 278 (B,27,51)
R 279 (B,23,52)
R 282 (A,30,61)
R 283 (A,29,61)
R 284 (B,30,63)

RS1/16SS1003D
RS1/16SS104J
RS1/16SS240J
RS1/16SS240J
RS1/16SS153J

C 291 (B,17,42)
C 292 (B,17,48)
C 293 (B,44,61)
C 294 (B,25,41)
C 295 (B,56,61)

CCSSCH5R0C50
CCSSCH5R0C50
CKSSYB102K50
CKSSYB103K16
CKSQYB106K6R3

R 285 (B,28,63)
R 289 (B,19,45)
R 291 (B,43,62)
R 292 (B,25,43)
R 293 (B,27,52)

RS1/16SS153J
RS1/16SS0R0J
RS1/16SS272J
RS1/16SS221J
RS1/16SS472J

C 296 (B,56,63)
C 303 (A,36,19)
C 304 (A,36,21)
C 307 (A,22,11)
C 308 (B,11,18)

CKSQYB106K6R3
CKSSYB472K25
CKSSYB223K16
CKSRYB104K16
CKSRYB105K10

R 294 (A,32,63)
R 295 (B,55,64)
R 307 (A,35,19)
R 308 (A,38,19)
R 309 (A,35,21)

RS1/16SS471J
RS1/16SS103J
RS1/16SS183J
RS1/16SS183J
RS1/16SS183J

C 703 (B,15,35)
C 704 (B,12,36)
C 711 (A,31,25)

CCSSCH101J50
CKSSYB102K50
CKSSYB104K10

R 310 (A,38,22)
R 601 (B,30,31)
R 602 (B,27,31)
R 606 (B,28,23)
R 701 (B,12,37)

RS1/16SS183J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/16S0R0J
RS1/16SS221J

R 702 (A,24,56)
R 708 (B,15,37)
R 712 (B,15,54)
R 713 (B,15,53)

RS1/16SS221J
RS1/16S0R0J
RS1/16SS0R0J
RS1/16SS0R0J

CAPACITORS

C 106 (B,57,67)
C 201 (A,27,30)
C 202 (A,28,57)
C 204 (A,24,59)
C 205 (B,27,41)
C 206 (A,23,41)

CKSQYB475K6R3
CKSRYB104K16
CKSSYB104K10
CKSSYB103K16
CKSQYB475K6R3
CKSSYB104K10

C 207 (A,25,38)
C 209 (B,36,35)
C 210 (B,29,37)
C 211 (A,28,35)
C 212 (A,29,30)

CKSRYB104K16
CEVW220M6R3
CKSSYB104K10
CKSSYB104K10
CKSRYB104K16

C 213 (A,46,39)
C 214 (A,29,34)
C 216 (A,51,52)
C 217 (A,48,52)

CKSSYB104K10
CKSSYB104K10
CKSSYB332K50
CKSSYB104K10

D**Unit Number : CWS1389****Unit Name : Switch Unit****MISCELLANEOUS**

S 1 (A,6,14) Switch(OPEN) CSN1051
S 2 (A,32,12) Spring Switch(CLOSE) CSN1052

Miscellaneous Parts List

M 1 Pickup Unit(P10.5)(Service) CXX1942
M 2 Motor Unit(SPINDLE) CXC7134
Motor Unit(LOADING/CARRIAGE)CXC4026
Motor Unit(FLAP) XXA7400