

EXPLODED VIEW

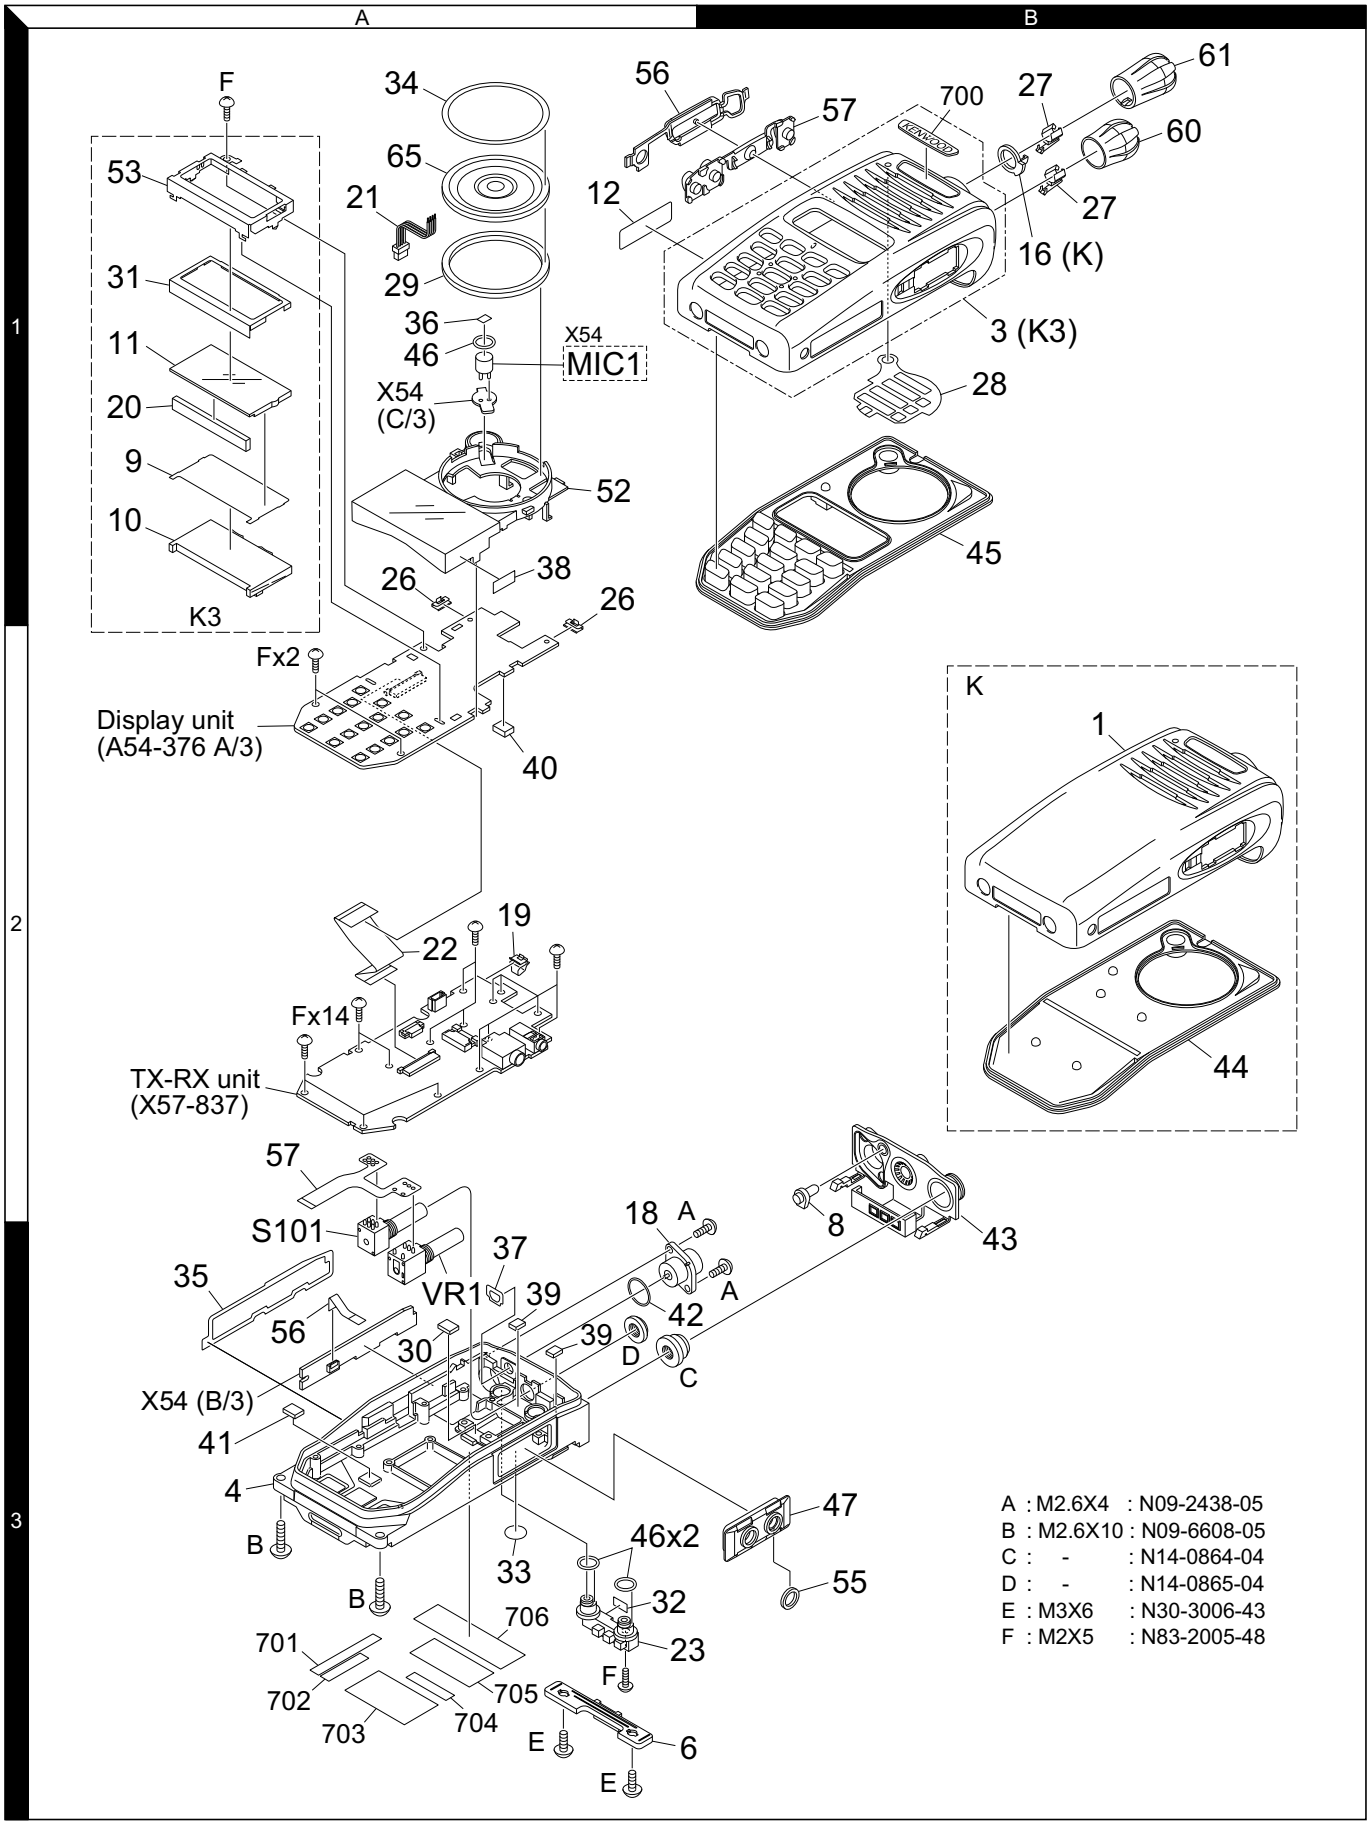

A : M2.6X4 : N09-2438-05
B : M2.6X10 : N09-6608-05
C : - : N14-0864-04
D : - : N14-0865-04
E : M3X6 : N30-3006-43
F : M2X5 : N83-2005-48

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

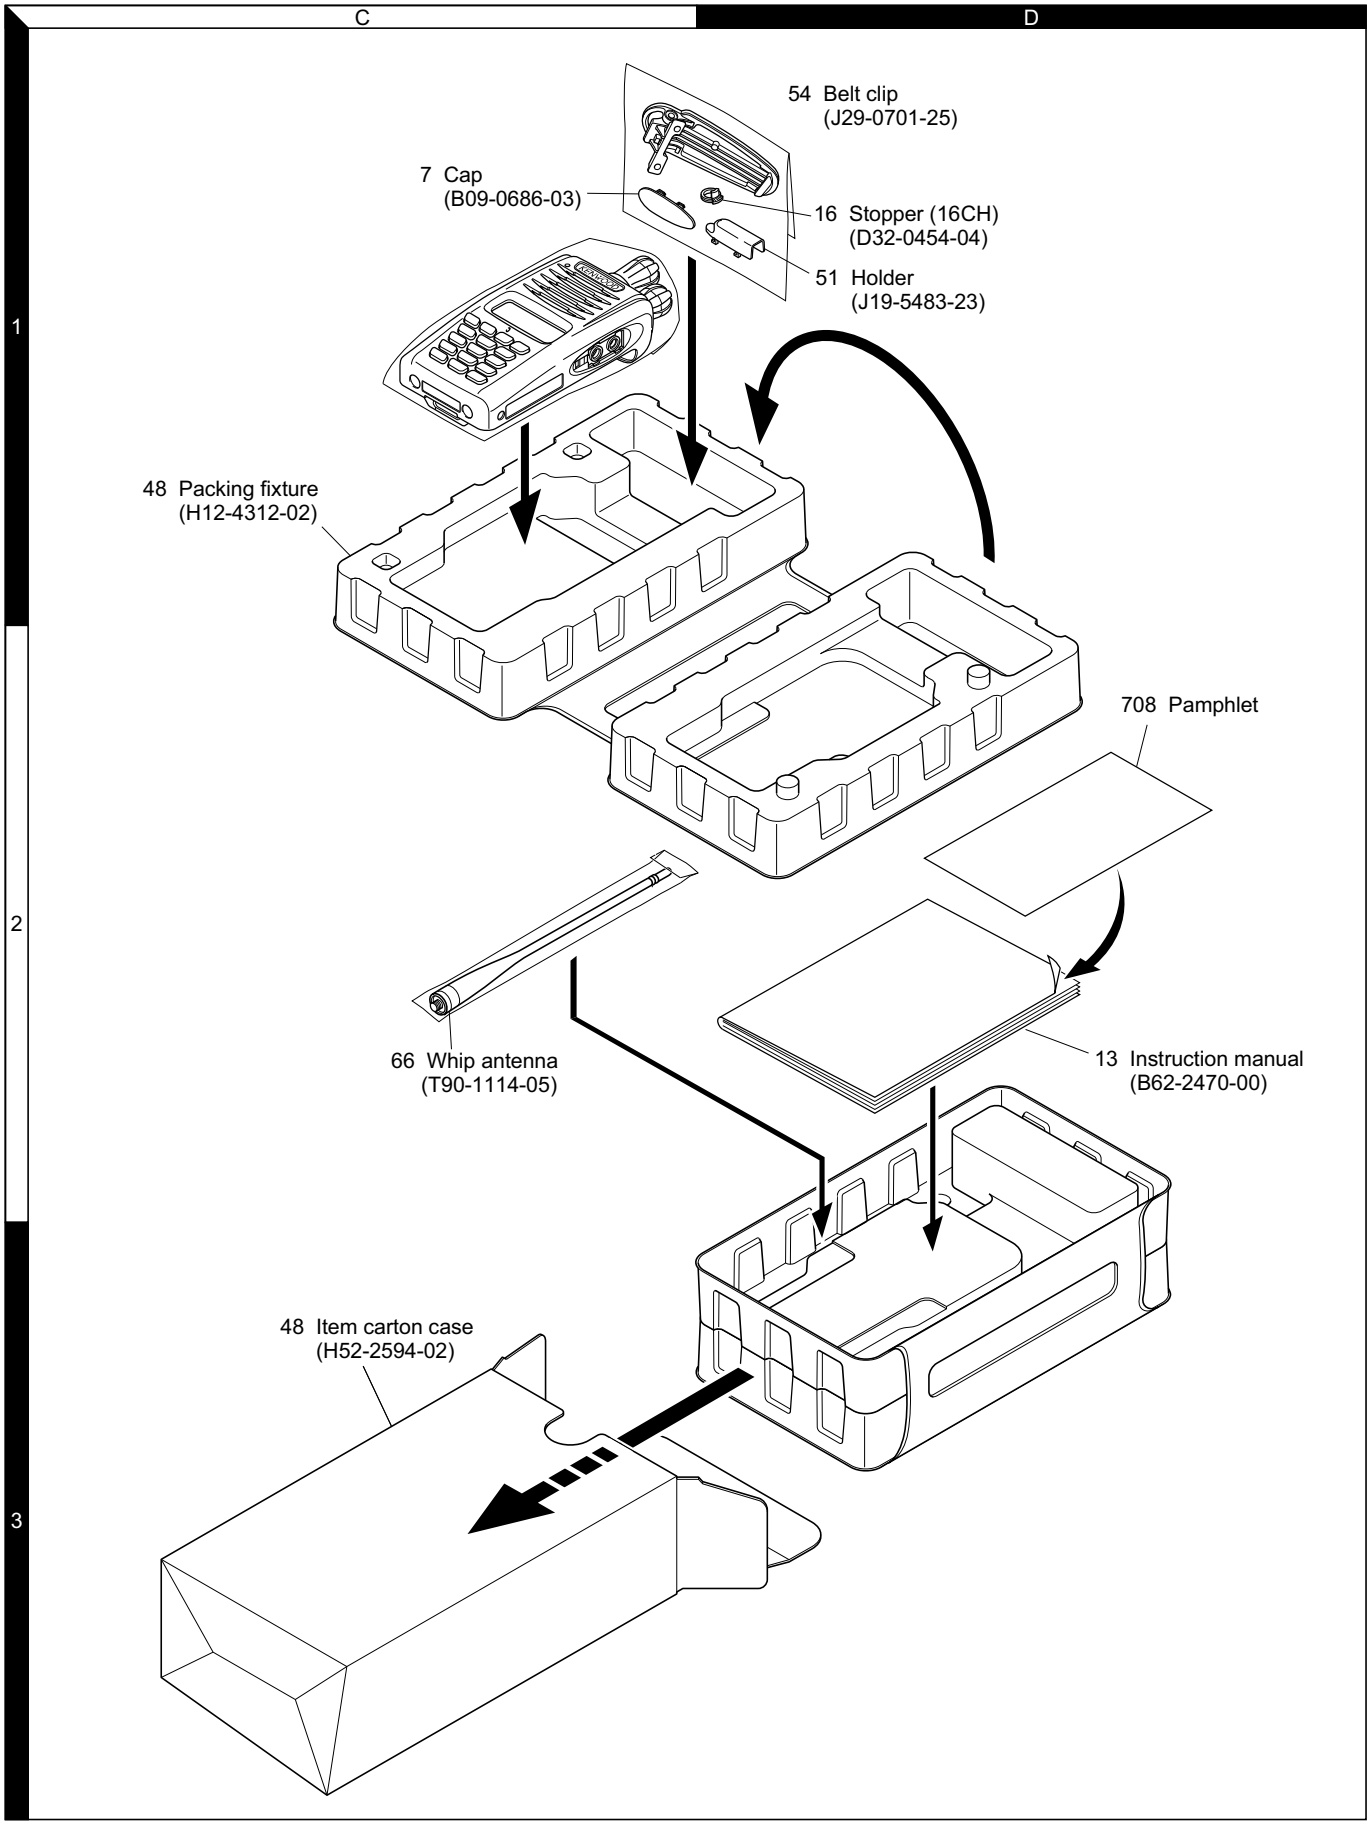

Parts with the exploded numbers larger than 700 are not supplied.

NX-420

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

NX-420
DISPLAY UNIT (X54-3760-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
			NX-420		
1	2B		A02-4130-13	PLASTIC CABINET ASSY	K
3	2B		A02-4132-13	PLASTIC CABINET ASSY(16KEY)	K3
4	1B		A10-4148-01	CHASSIS	
6	3A		B01-0694-13	ESCUTCHEON	
7	1C		B09-0686-03	CAP (ACCESSORY)	
8	1A		B11-1869-04	ILLUMINATION GUIDE(TX/BUSY)	
9	1A		B11-1890-04	FILTER(LCD)	K3
10	1A		B11-1891-02	ILLUMINATION GUIDE(LCD)	K3
11	1A		B38-0935-05	LCD	K3
12	1A		B42-7417-04	STICKER	
13	2D	✻	B62-2470-00	INSTRUCTION MANUAL (ACCESSORY)	
16	1B,1D		D32-0454-04	STOPPER(16CH)	
18	3A		E04-0467-15	RF COAXIAL RECEPTACLE(SMA)	
19	2A		E23-1363-04	TERMINAL(ANT)	
20	1A		E29-1232-05	INTER CONNECTOR(LCD)	K3
21	1A		E37-1532-15	LEAD WIRE WITH CONNECTOR	
22	1A		E37-1537-05	FLAT CABLE(X57-X54)	
23	2A		E72-0435-03	TERMINAL BLOCK	
26	1A		G02-1864-04	EARTH SPRING(X54)	
27	1B		G09-0443-04	KNOB SPRING(VOL/SEL)	
28	1B		G10-1827-04	FIBROUS SHEET(SP)	
29	1A		G11-4272-14	RUBBER CUSHION(SP)	
30	3A		G11-4315-14	SHEET(Q106)	
31	1A		G11-4335-14	SHEET(LCD)	K3
32	1A		G11-4368-04	SHEET(TERMINAL BLOCK)	
33	3A		G11-4500-04	SHEET(AIR)	
34	1A		G11-4527-04	SHEET(SP)	
35	3A		G11-4543-04	SHEET(PTT)	
36	1A		G11-4558-04	SHEET(ECM)	
37	3A		G11-4561-04	SHEET(TX/BUSY)	
38	1A		G11-4562-04	SHEET(SP HOLDER)	
39	1A		G13-2068-04	CUSHION(VOL/SEL)	
40	2A		G13-2220-04	CUSHION(X54)	
41	2A		G13-2249-04	CUSHION	
42	3A		G53-1603-04	PACKING(SMA)	
43	2B		G53-1862-02	PACKING(TOP/BATT)	
44	2B		G53-1863-01	PACKING	K
45	1B		G53-1865-11	PACKING(16 KEY)	K3
46	1B		G53-1866-04	PACKING(TERMINAL)	
47	1A		G53-1885-03	PACKING(JACK)	
48	1C		H12-4312-02	PACKING FIXTURE	
49	3C	✻	H52-2594-02	ITEM CARTON CASE	
51	1D		J19-5483-23	HOLDER (ACCESSORY)	
52	1A		J19-5547-01	HOLDER(FG-SP)	
53	1A		J21-8631-03	MOUNTING HARDWARE(LCD)	K3
54	1D		J29-0701-25	BELT CLIP (ACCESSORY)	
55	1A		J69-0370-04	RING(JACK)	
56	3A		J87-0027-05	FPC(PTT)	
57	2A		J87-0040-05	FPC(VOL/SEL)	
58	1A		K29-9485-13	KNOB(VOLUME)	
59	1B		K29-9486-13	KNOB(SELECTOR)	
60	1B		K29-9500-03	KNOB(PTT)	
61	1B		K29-9501-03	BUTTON KNOB(PTT)	
A	3A		N09-2438-05	BINDING HEAD SCREW(ANT)	
B	3A		N09-6608-05	SPECIAL SCREW	
C	3A		N14-0864-04	CIRCULAR NUT(VOLUME)	
D	3A		N14-0865-04	CIRCULAR NUT(SELECTOR)	
E	3A		N30-3006-43	PAN HEAD MACHINE SCREW	
F	1A,2A,3A		N83-2005-48	PAN HEAD TAPTITE SCREW(X54/57)	
VR1	3A		R31-0685-05	VARIABLE RESISTOR(VOLUME)	
S101	2A		S60-0448-05	ROTARY SWITCH(SELECTOR)	
65	1A		T07-0787-05	SPEAKER	
66	1D	✻	T90-1114-05	WHIP ANTENNA (ACCESSORY)	
		✻	X57-8370-11	TX-RX UNIT(FOR SERVICE)	
				DISPLAY UNIT (X54-3760-XX) -10: K3 -12: K,	
D1			B30-2278-05	LED(RED/YELLOW)	
D7 -14			B30-2337-05	LED(YELLOW)	K3
D18 ,19			B30-2210-05	LED	K3
C1			CK73HB1H471K	CHIP C 470PF K	
C2			CK73HB1H681K	CHIP C 680PF K	
C3			CC73HCH1H270J	CHIP C 27PF J	
C4			CK73HB1H471K	CHIP C 470PF K	
C5			CK73HB1A104K	CHIP C 0.10UF K	
C6			CK73HB1H102K	CHIP C 1000PF K	
C7 ,8			CC73HCH1H470J	CHIP C 47PF J	
C10			CC73HCH1H101J	CHIP C 100PF J	
C11			CK73HB1H681K	CHIP C 680PF K	
C13			CC73HCH1H101J	CHIP C 100PF J	
C15			CK73HB1E103K	CHIP C 0.010UF K	
C16			CK73HB1H102K	CHIP C 1000PF K	
C19			CK73HB1A104K	CHIP C 0.10UF K	
C20			CK73HB1H102K	CHIP C 1000PF K	
C21			CK73HB1E103K	CHIP C 0.010UF K	
C22			CK73HB1A224K	CHIP C 0.22UF K	
C23			CC73HCH1H470J	CHIP C 47PF J	
C25			CK73HB1A224K	CHIP C 0.22UF K	
C26			CC73HCH1H470J	CHIP C 47PF J	
C28 ,29			CC73HCH1H470J	CHIP C 47PF J	
C30			CK73HB0J105K	CHIP C 1.0UF K	
C31			CC73HCH1H470J	CHIP C 47PF J	
C32			CK73HB1H122K	CHIP C 1200PF K	
C33 ,34			CC73HCH1H470J	CHIP C 47PF J	
C35			CK73HB1A104K	CHIP C 0.10UF K	
C36			CC73HCH1H470J	CHIP C 47PF J	
C37			CK73HB1H472K	CHIP C 4700PF K	
C38			CC73HCH1H181J	CHIP C 180PF J	
C39			CK73HB1A104K	CHIP C 0.10UF K	
C40			CC73HCH1H470J	CHIP C 47PF J	

PARTS LIST

DISPLAY UNIT (X54-3760-XX)
TX-RX UNIT (X57-8370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C42 -44			CC73HCH1H470J	CHIP C 47PF J	
C45			CK73HB1H102K	CHIP C 1000PF K	
C47			CK73HB1A104K	CHIP C 0.10UF K	
C48			CK73HB0J105K	CHIP C 1.0UF K	
C49			CK73HB1H102K	CHIP C 1000PF K	
C52 ,53			CK73HB1A104K	CHIP C 0.10UF K	
C54			CK73HB1H331K	CHIP C 330PF K	
C58			CC73HCH1H680J	CHIP C 68PF J	
C62			CC73HCH1H101J	CHIP C 100PF J	
C63 ,64			CK73HB0J105K	CHIP C 1.0UF K	
C67			CK73HB1H102K	CHIP C 1000PF K	
C68			CK73HB1E103K	CHIP C 0.010UF K	
C70			CK73HB0J105K	CHIP C 1.0UF K	
C71			CK73HB1A104K	CHIP C 0.10UF K	
C73			CK73GB0J106K	CHIP C 10UF K	
C74			CK73HB0J105K	CHIP C 1.0UF K	
C78			CK73HB1E103K	CHIP C 0.010UF K	
C79			CK73HB1A473K	CHIP C 0.047UF K	
C83			CK73HB1H102K	CHIP C 1000PF K	
C84			CK73HB1A473K	CHIP C 0.047UF K	
C85			CK73HB1H681K	CHIP C 680PF K	
C90			CK73HB1E103K	CHIP C 0.010UF K	
C91			CK73HB1H471K	CHIP C 470PF K	
C92			CK73HB1H102K	CHIP C 1000PF K	
C93 ,94			CK73HB1E103K	CHIP C 0.010UF K	
CN5			E40-6893-05	FLAT CABLE CONNECTOR(24P)	
CN6			E40-6883-05	FLAT CABLE CONNECTOR(6P)	
L1 ,2			L92-0408-05	CHIP FERRITE	
L3			L92-0138-05	CHIP FERRITE	K3
CP1			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP2			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP3			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP4 ,5			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP6			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP7 -9			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP10			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP11-13			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP14			RK74HA1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R2			RK73HB1J103J	CHIP R 10K J 1/16W	
R3			RK73HB1J391J	CHIP R 390 J 1/16W	
R4			RK73HB1J823J	CHIP R 82K J 1/16W	
R5			RK73HB1J100J	CHIP R 10 J 1/16W	
R6			RK73HB1J821J	CHIP R 820 J 1/16W	
R7			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R8			RK73HB1J153J	CHIP R 15K J 1/16W	
R9			RK73HB1J333J	CHIP R 33K J 1/16W	
R10			RK73HB1J000J	CHIP R 0 J 1/16W	
R11 ,12			RK73HB1J334J	CHIP R 330K J 1/16W	
R13			RK73HB1J471J	CHIP R 470 J 1/16W	
R14			RK73HB1J334J	CHIP R 330K J 1/16W	
R15			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R16			RK73HB1J470J	CHIP R 47 J 1/16W	
R17			RK73HB1J104J	CHIP R 100K J 1/16W	
R18			RK73HB1J393J	CHIP R 39K J 1/16W	
R19 ,20			RK73HB1J224J	CHIP R 220K J 1/16W	
R21 ,22			RK73HB1J563J	CHIP R 56K J 1/16W	
R23			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R24			RK73HB1J000J	CHIP R 0 J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R26			RK73HB1J683J	CHIP R 68K J 1/16W	
R28 -30			RK73HB1J000J	CHIP R 0 J 1/16W	
R33 -35			RK73HB1J104J	CHIP R 100K J 1/16W	
R37			RK73HB1J154J	CHIP R 150K J 1/16W	
R39 ,40			RK73HB1J103J	CHIP R 10K J 1/16W	
R41 ,42			RK73HB1J683J	CHIP R 68K J 1/16W	
R44 ,45			RK73HB1J104J	CHIP R 100K J 1/16W	
R47			RK73HB1J223J	CHIP R 22K J 1/16W	
R50			RK73HB1J223J	CHIP R 22K J 1/16W	
R52			RK73HB1J471J	CHIP R 470 J 1/16W	
R53			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R61 -64			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R65			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R66			RK73HB1J000J	CHIP R 0 J 1/16W	
R67			RK73HB1J471J	CHIP R 470 J 1/16W	
R69			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R70 -72			RK73HB1J103J	CHIP R 10K J 1/16W	
R73			RK73GB2A433J	CHIP R 43K J 1/10W	
R74			RK73HB1J121J	CHIP R 120 J 1/16W	
R75			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R76			RK73HB1J681J	CHIP R 680 J 1/16W	
R77			RK73HB1J103J	CHIP R 10K J 1/16W	
R78			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R79			RK73HB1J563J	CHIP R 56K J 1/16W	
R81			RK73HB1J000J	CHIP R 0 J 1/16W	
R82			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R83			RK73HB1J000J	CHIP R 0 J 1/16W	
R83 ,84			RK73HB1J000J	CHIP R 0 J 1/16W	
R86			RK73HB1J000J	CHIP R 0 J 1/16W	
R88			RK73HB1J000J	CHIP R 0 J 1/16W	
S1 -4			S70-0516-05	TACT SWITCH	
S5 -20			S70-0519-05	TACT SWITCH	K3
MIC1			T91-0673-05	MIC ELEMENT	
D2			KDR731	DIODE	
D3 ,4			DA221	DIODE	
D15			HN2S03FE	DIODE	K3
D16			1SS388F	DIODE	K3
IC1 ,2			TC75W51FK(F)	MOS-IC	
IC4			R2A20178NP	MICROCONTROLLER IC	
IC6			TC75W51FK(F)	MOS-IC	
IC8			LC75857W-E	MOS-IC	K3
Q1			UMG9N	TRANSISTOR	
Q2			SSM3K15TE(F)	FET	
Q3			KTC4075E(Y,GR)	TRANSISTOR	
Q4			2SC4738(GR)F	TRANSISTOR	
Q5			2SA1832(GR)F	TRANSISTOR	
Q6			2SA1362-F(GR)	TRANSISTOR	K3
Q7 ,8			2SC5383-T111	TRANSISTOR	K3
TH1			ERTJ0EV104H	THERMISTOR(100K)	

TX-RX UNIT (X57-8370-10)

C100			CC73HCH1H101J	CHIP C 100PF J	
C102			CK73HB1E103K	CHIP C 0.010UF K	
C103-108			CC73HCH1H101J	CHIP C 100PF J	
C110,111			CC73HCH1H080B	CHIP C 8.0PF B	
C112			CK73HB1E104K	CHIP C 0.10UF K	

PARTS LIST

TX-RX UNIT (X57-8370-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C113			CC73HCH1H100B	CHIP C	10PF	B	
C114-119			CC73HCH1H101J	CHIP C	100PF	J	
C120			CK73HB1E104K	CHIP C	0.10UF	K	
C121			CC73HCH1H120J	CHIP C	12PF	J	
C122,123			CK73HB1E104K	CHIP C	0.10UF	K	
C124			CC73HCH1H101J	CHIP C	100PF	J	
C126			CC73HCH1H090B	CHIP C	9.0PF	B	
C129			CS77BA1A4R7M	CHIP TNTL	4.7UF	10WV	
C130			CC73HCH1H101J	CHIP C	100PF	J	
C133			CC73HCH1H101J	CHIP C	100PF	J	
C136			CC73HCH1H100B	CHIP C	10PF	B	
C138			CC73GCH1H820J	CHIP C	82PF	J	
C140			CK73GB1E105K	CHIP C	1.0UF	K	
C141			CC73HCH1H101J	CHIP C	100PF	J	
C143			CC73HCH1H101J	CHIP C	100PF	J	
C145			CC73HCH1H270G	CHIP C	27PF	G	
C146-148			CC73HCH1H101J	CHIP C	100PF	J	
C150,151			CC73HCH1H101J	CHIP C	100PF	J	
C152			C93-0941-05	CHIP C	18PF	G	
C153			CK73HB1E103K	CHIP C	0.010UF	K	
C154			CC73GCH1H060B	CHIP C	6.0PF	B	
C155			CK73HB1E104K	CHIP C	0.10UF	K	
C156			CK73GB1E105K	CHIP C	1.0UF	K	
C157			CC73GCH1H040B	CHIP C	4.0PF	B	
C158			CK73HB1E103K	CHIP C	0.010UF	K	
C159			CC73HCH1H101J	CHIP C	100PF	J	
C161			CC73HCH1H101J	CHIP C	100PF	J	
C164			CC73HCH1H101J	CHIP C	100PF	J	
C168			CC73HCH1H101J	CHIP C	100PF	J	
C169			CC73GCH1H101J	CHIP C	100PF	J	
C171			CC73HCH1H101J	CHIP C	100PF	J	
C172			CC73GCH1H020B	CHIP C	2.0PF	B	
C173			CC73HCH1H020B	CHIP C	2.0PF	B	
C175			CC73GCH1H101J	CHIP C	100PF	J	
C177			CC73GCH1H101J	CHIP C	100PF	J	
C178			CC73GCH1H2R5B	CHIP C	2.5PF	B	
C181			CC73HCH1H101J	CHIP C	100PF	J	
C182			CC73GCH1H2R5B	CHIP C	2.5PF	B	
C183			CC73GCH1H150G	CHIP C	15PF	G	
C185			CC73GCH1H150G	CHIP C	15PF	G	
C190			CC73HCH1H040B	CHIP C	4.0PF	B	
C191			CC73HCH1H050B	CHIP C	5.0PF	B	
C192			CC73HCH1H101J	CHIP C	100PF	J	
C200			CK73HB1A105K	CHIP C	1.0UF	K	
C202			CK73HB1E103K	CHIP C	0.010UF	K	
C203			CC73HCH1H101J	CHIP C	100PF	J	
C204			CC73HCH1H040B	CHIP C	4.0PF	B	
C205			CC73HCH1H330J	CHIP C	33PF	J	
C207			CC73HCH1H010B	CHIP C	1.0PF	B	
C208			CK73HB1E103K	CHIP C	0.010UF	K	
C209			CC73HCH1H010B	CHIP C	1.0PF	B	
C210			CC73HCH1H030B	CHIP C	3.0PF	B	
C211			CC73HCH1H101J	CHIP C	100PF	J	
C212			CC73HCH1H330J	CHIP C	33PF	J	
C213			CC73HCH1H020B	CHIP C	2.0PF	B	
C214			CC73HCH1H040B	CHIP C	4.0PF	B	
C215			CC73HCH1H010B	CHIP C	1.0PF	B	
C216,217			CC73HCH1H040B	CHIP C	4.0PF	B	
C218			CC73HCH1H030B	CHIP C	3.0PF	B	
C219			CC73HCH1H101J	CHIP C	100PF	J	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C221			CC73HCH1H030B	CHIP C	3.0PF	B	
C222			CC73HCH1H101J	CHIP C	100PF	J	
C224			CC73HCH1H080B	CHIP C	8.0PF	B	
C226			CC73HCH1H101J	CHIP C	100PF	J	
C227			CK73HB1E104K	CHIP C	0.10UF	K	
C228			CK73HB1E103K	CHIP C	0.010UF	K	
C229			CC73HCH1H151J	CHIP C	150PF	J	
C230-232			CC73HCH1H101J	CHIP C	100PF	J	
C234			CC73HCH1H020B	CHIP C	2.0PF	B	
C236			CC73HCH1H100B	CHIP C	10PF	B	
C237,238			CC73HCH1H101J	CHIP C	100PF	J	
C239			CK73HB1E103K	CHIP C	0.010UF	K	
C240			CC73HCH1H270J	CHIP C	27PF	J	
C300			CK73HB1E103K	CHIP C	0.010UF	K	
C301			CK73HB1A104K	CHIP C	0.10UF	K	
C302			CC73HCH1H100B	CHIP C	10PF	B	
C303			CK73HB1E103K	CHIP C	0.010UF	K	
C306			CC73HCH1H100B	CHIP C	10PF	B	
C307			CC73HCH1H101J	CHIP C	100PF	J	
C309			CC73HCH1H101J	CHIP C	100PF	J	
C310			CC73HCH1H151J	CHIP C	150PF	J	
C312			CC73HCH1H330G	CHIP C	33PF	G	
C313-315			CK73HB1A104K	CHIP C	0.10UF	K	
C316			CK73FB1C106K	CHIP C	10UF	K	
C317			CC73HCH1H680J	CHIP C	68PF	J	
C318			CK73HB1A104K	CHIP C	0.10UF	K	
C319			CK73HB1E103K	CHIP C	0.010UF	K	
C320-322			CK73HB1A104K	CHIP C	0.10UF	K	
C323			CK73FB1C106K	CHIP C	10UF	K	
C325			CC73HCH1H100B	CHIP C	10PF	B	
C326			CK73HB1A104K	CHIP C	0.10UF	K	
C327			CK73HB1E103K	CHIP C	0.010UF	K	
C329-332			CK73HB1A104K	CHIP C	0.10UF	K	
C333			CK73GB1A474K	CHIP C	0.47UF	K	
C334			CK73HB1E103K	CHIP C	0.010UF	K	
C335			CC73HCH1H470J	CHIP C	47PF	J	
C336,337			CC73HCH1H101J	CHIP C	100PF	J	
C338,339			CK73HB1E103K	CHIP C	0.010UF	K	
C340			CC73HCH1H330J	CHIP C	33PF	J	
C341			CC73HCH1H030B	CHIP C	3.0PF	B	
C342			CC73HCH1H101J	CHIP C	100PF	J	
C343			CC73HCH1H470J	CHIP C	47PF	J	
C344			CC73HCH1H180G	CHIP C	18PF	G	
C346			CC73HCH1H060B	CHIP C	6.0PF	B	
C347			CK73HB1E103K	CHIP C	0.010UF	K	
C400			CK73HB1E103K	CHIP C	0.010UF	K	
C401			CC73HCH1H101J	CHIP C	100PF	J	
C402			CC73HCH1H100B	CHIP C	10PF	B	
C403			CK73HB1E103K	CHIP C	0.010UF	K	
C404			CC73HCH1H100B	CHIP C	10PF	B	
C405			CK73HB1H102K	CHIP C	1000PF	K	
C406			CK73HB1E103K	CHIP C	0.010UF	K	
C407			CC73HCH1H101J	CHIP C	100PF	J	
C410			CC73HCH1H100B	CHIP C	10PF	B	
C411,412			CK73HB1E103K	CHIP C	0.010UF	K	
C413			CC73HCH1H101J	CHIP C	100PF	J	
C414			CK73HB1E103K	CHIP C	0.010UF	K	
C415-422			CC73HCH1H101J	CHIP C	100PF	J	
C423			CK73HB1A104K	CHIP C	0.10UF	K	
C424			CC73HCH1H101J	CHIP C	100PF	J	

PARTS LIST

TX-RX UNIT (X57-8370-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C425			CK73HB1A104K	CHIP C	0.10UF	K	
C426-429			CC73HCH1H101J	CHIP C	100PF	J	
C430			CK73HB1E103K	CHIP C	0.010UF	K	
C431			CS77MA1VR15M	CHIP TNTL	0.15UF	35WV	
C432			C93-0787-05	CHIP C	0.1UF	J	
C433			CS77BA1D100M	CHIP TNTL	10UF	20WV	
C435			CC73HCH1H101J	CHIP C	100PF	J	
C436			C93-1906-05	FILM CAP	0.047UF	J	
C437			CK73HB1H102K	CHIP C	1000PF	K	
C438			CK73HB1A104K	CHIP C	0.10UF	K	
C439-441			CC73HCH1H101J	CHIP C	100PF	J	
C442,443			CK73HB1H471K	CHIP C	470PF	K	
C444			CC73HCH1H101J	CHIP C	100PF	J	
C445			CK73HB1A104K	CHIP C	0.10UF	K	
C446			CK73HB1H472K	CHIP C	4700PF	K	
C448			CK73HB1A105K	CHIP C	1.0UF	K	
C449			CC73HCH1H070B	CHIP C	7.0PF	B	
C450			CC73HCH1H060B	CHIP C	6.0PF	B	
C451			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C452			CC73HCH1H010B	CHIP C	1.0PF	B	
C454,455			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C456			CC73HCH1H101J	CHIP C	100PF	J	
C457			CC73HCH1H040B	CHIP C	4.0PF	B	
C458			CC73HCH1H030B	CHIP C	3.0PF	B	
C459			CC73HCH1H060B	CHIP C	6.0PF	B	
C460			CC73HCH1H050B	CHIP C	5.0PF	B	
C461			CS77BP1A100M	CHIP TNTL	10UF	10WV	
C462,463			CC73HCH1H050B	CHIP C	5.0PF	B	
C464			CC73HCH1H101J	CHIP C	100PF	J	
C465			CC73GCH1H101J	CHIP C	100PF	J	
C466			CC73HCH1H101J	CHIP C	100PF	J	
C467			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C468			CK73GB0J475K	CHIP C	4.7UF	K	
C469			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C470			CC73HCH1H101J	CHIP C	100PF	J	
C472			CC73HCH1H101J	CHIP C	100PF	J	
C473			CC73HCH1H100B	CHIP C	10PF	B	
C474			CC73HCH1H101J	CHIP C	100PF	J	
C475			CC73HCH1H040B	CHIP C	4.0PF	B	
C476-478			CC73HCH1H101J	CHIP C	100PF	J	
C479			CC73HCH1H020B	CHIP C	2.0PF	B	
C480			CC73HCH1H120J	CHIP C	12PF	J	
C481			CC73HCH1H020B	CHIP C	2.0PF	B	
C482			CC73HCH1H150J	CHIP C	15PF	J	
C483			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C484			CC73HCH1H101J	CHIP C	100PF	J	
C486-488			CC73HCH1H101J	CHIP C	100PF	J	
C489			CC73HCH1H020B	CHIP C	2.0PF	B	
C492,493			CC73HCH1H040B	CHIP C	4.0PF	B	
C494			CC73HCH1H120J	CHIP C	12PF	J	
C495			CC73HCH1H050B	CHIP C	5.0PF	B	
C496			CC73HCH1H101J	CHIP C	100PF	J	
C500			CK73HB1H102K	CHIP C	1000PF	K	
C501			CC73HCH1H220G	CHIP C	22PF	G	
C503			CC73HCH1H101J	CHIP C	100PF	J	
C506			CK73HB1A105K	CHIP C	1.0UF	K	
C508			CK73HB1A105K	CHIP C	1.0UF	K	
C509			CK73GB0J475K	CHIP C	4.7UF	K	
C510			CC73HCH1H101J	CHIP C	100PF	J	
C511			CK73HB1H682K	CHIP C	6800PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C512			CK73HB1A104K	CHIP C	0.10UF	K	
C513,514			CC73HCH1H101J	CHIP C	100PF	J	
C515			CK73HB1H682K	CHIP C	6800PF	K	
C516-520			CC73HCH1H101J	CHIP C	100PF	J	
C521,522			CK73HB1A105K	CHIP C	1.0UF	K	
C523			CK73GB0J106K	CHIP C	10UF	K	
C524			CC73HCH1H101J	CHIP C	100PF	J	
C525			CK73HB1A105K	CHIP C	1.0UF	K	
C526			CK73GB0J106K	CHIP C	10UF	K	
C527			CK73HB1H102K	CHIP C	1000PF	K	
C529			CS77BP1A100M	CHIP TNTL	10UF	10WV	
C530			CK73HB1H102K	CHIP C	1000PF	K	
C531			CK73GB1E105K	CHIP C	1.0UF	K	
C532			CK73GB0J106K	CHIP C	10UF	K	
C533			CK73HB1A224K	CHIP C	0.22UF	K	
C534			CC73HCH1H560J	CHIP C	56PF	J	
C535			CK73HB1H102K	CHIP C	1000PF	K	
C536			CC73HCH1H101J	CHIP C	100PF	J	
C537			CK73HB1E103K	CHIP C	0.010UF	K	
C539,540			CK73HB1A105K	CHIP C	1.0UF	K	
C541			CK73HB1H102K	CHIP C	1000PF	K	
C542			CK73HB1H682K	CHIP C	6800PF	K	
C543			CK73HB1H102K	CHIP C	1000PF	K	
C545,546			CC73HCH1H101J	CHIP C	100PF	J	
C547			CK73HB1H102K	CHIP C	1000PF	K	
C548			CK73HB1A104K	CHIP C	0.10UF	K	
C549			CK73FB1E475K	CHIP C	4.7UF	K	
C550			CK73HB1A104K	CHIP C	0.10UF	K	
C551			CK73FB1C106K	CHIP C	10UF	K	
C552			CC73HCH1H101J	CHIP C	100PF	J	
C553			CK73GB1E105K	CHIP C	1.0UF	K	
C554			CK73HB1H102K	CHIP C	1000PF	K	
C563			CC73HCH1H101J	CHIP C	100PF	J	
C601,602			CK73GB0J106K	CHIP C	10UF	K	
C605,606			CK73HB1A104K	CHIP C	0.10UF	K	
C607			CK73HB1E103K	CHIP C	0.010UF	K	
C608			CK73HB1H102K	CHIP C	1000PF	K	
C609-611			CC73HCH1H470J	CHIP C	47PF	J	
C614			CC73HCH1H470J	CHIP C	47PF	J	
C618			CC73HCH1H470J	CHIP C	47PF	J	
C621-628			CC73HCH1H470J	CHIP C	47PF	J	
C629			CK73HB1H102K	CHIP C	1000PF	K	
C631			CK73HB1A105K	CHIP C	1.0UF	K	
C632			CK73HB1E103K	CHIP C	0.010UF	K	
C633			CC73HCH1H101J	CHIP C	100PF	J	
C634			CK73HB1H102K	CHIP C	1000PF	K	
C635-639			CK73HB1A104K	CHIP C	0.10UF	K	
C640			CK73HB1E103K	CHIP C	0.010UF	K	
C641			CK73HB1A105K	CHIP C	1.0UF	K	
C642			CK73HB1A104K	CHIP C	0.10UF	K	
C643			CK73HB1E103K	CHIP C	0.010UF	K	
C644			CK73HB1A683K	CHIP C	0.068UF	K	
C645			CK73HB1E103K	CHIP C	0.010UF	K	
C646			CK73HB1C473K	CHIP C	0.047UF	K	
C647			CK73HB1A105K	CHIP C	1.0UF	K	
C648,649			CK73HB1E103K	CHIP C	0.010UF	K	
C650			CK73HB1A104K	CHIP C	0.10UF	K	
C651,652			CK73HB1E103K	CHIP C	0.010UF	K	
C654-657			CC73HCH1H470J	CHIP C	47PF	J	
C658			CK73HB1A104K	CHIP C	0.10UF	K	
C660			CK73HB1E103K	CHIP C	0.010UF	K	

PARTS LIST

TX-RX UNIT (X57-8370-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C661			CK73HB1A104K	CHIP C	0.10UF	K	
C663			CK73GB0J106K	CHIP C	10UF	K	
C664			CK73HB1E103K	CHIP C	0.010UF	K	
C665			CK73HB1H102K	CHIP C	1000PF	K	
C666			CK73HB1E103K	CHIP C	0.010UF	K	
C667			CK73HB1A105K	CHIP C	1.0UF	K	
C668,669			CK73HB1A104K	CHIP C	0.10UF	K	
C670			CK73HB1H682K	CHIP C	6800PF	K	
C671			CK73GB0J106K	CHIP C	10UF	K	
C672			CC73HCH1H030B	CHIP C	3.0PF	B	
C673			CK73HB1E103K	CHIP C	0.010UF	K	
C674			CK73HB1A105K	CHIP C	1.0UF	K	
C675			CK73HB1A104K	CHIP C	0.10UF	K	
C677			CK73HB1E103K	CHIP C	0.010UF	K	
C678			CK73HB1A105K	CHIP C	1.0UF	K	
C679			CK73HB1A104K	CHIP C	0.10UF	K	
C681			CK73HB1E103K	CHIP C	0.010UF	K	
C682,683			CK73HB1H102K	CHIP C	1000PF	K	
C684,685			CK73HB1E103K	CHIP C	0.010UF	K	
C902			CK73HB1A105K	CHIP C	1.0UF	K	
C903			CC73HCH1H101J	CHIP C	100PF	J	
C904			CC73HCH1H221J	CHIP C	220PF	J	
C905			CK73HB1H102K	CHIP C	1000PF	K	
C906			CK73GB1E105K	CHIP C	1.0UF	K	
C907			CK73HB1A105K	CHIP C	1.0UF	K	
C908			CK73HB1A104K	CHIP C	0.10UF	K	
C909			CK73GB1E105K	CHIP C	1.0UF	K	
C910			CK73GB0J106K	CHIP C	10UF	K	
C911			CC73HCH1H101J	CHIP C	100PF	J	
C912			CK73HB1A474K	CHIP C	0.47UF	K	
C914			C92-0973-05	CHIP TNTL	220UF	6.3WV	
C915			CC73HCH1H101J	CHIP C	100PF	J	
C916			CC73HCH1H470J	CHIP C	47PF	J	
C917-921			CC73HCH1H101J	CHIP C	100PF	J	
C923			CC73HCH1H470J	CHIP C	47PF	J	
C924			CC73HCH1H101J	CHIP C	100PF	J	
CN500			E40-6573-05	FLAT CABLE CONNECTOR			
CN600			E40-6893-05	FLAT CABLE CONNECTOR			
CN604			E40-6568-05	FLAT CABLE CONNECTOR			
CN902			E41-2359-05	PIN ASSY(4P)			
J900			E11-0484-05	3.5D PHONE JACK(EXT MIC))			
CN500			E40-6573-05	FLAT CABLE CONNECTOR			
CN600			E40-6893-05	FLAT CABLE CONNECTOR			
CN604			E40-6568-05	FLAT CABLE CONNECTOR			
CN902			E41-2359-05	PIN ASSY(4P)			
J900			E11-0484-05	3.5D PHONE JACK(EXT MIC))			
J901			E11-0715-05	2.5D PHONE JACK(EXT SP)			
F500			F53-0324-15	FUSE(2.5A)			
F900			F53-0319-15	FUSE(1A)			
CF300			L72-1017-05	CERAMIC FILTER(450KHZ/F)			
CF301			L72-1040-05	CERAMIC FILTER(450KHZ/C)			
L100			L40-1575-71	SMALL FIXED INDUCTOR(15NH)			
L101			L40-8265-71	SMALL FIXED INDUCTOR(8.2NH)			
L102			L92-0163-05	BEADS CORE			
L103			L40-6865-71	SMALL FIXED INDUCTOR(6.8NH)			
L104		✻	L40-3963-71	SMALL FIXED INDUCTOR(3.9NH)			
L105			L92-0162-05	BEADS CORE			
L108			L41-3978-45	SMALL FIXED INDUCTOR(39NH)			

Ref. No.	Address	New parts	Parts No.	Description	Destination
L109			L92-0408-05	CHIP FERRITE	
L112			L34-4550-05	AIR-CORE COIL(7.5T)	
L113			L92-0149-05	CHIP FERRITE	
L114			L41-6878-43	SMALL FIXED INDUCTOR(68NH)	
L115			L40-3975-71	SMALL FIXED INDUCTOR(39NH)	
L116			L34-4563-05	AIR-CORE COIL(3T)	
L117			L41-7568-45	SMALL FIXED INDUCTOR(7.5NH)	
L118			L79-1468-05	FILTER MODULE	
L119			L34-4563-05	AIR-CORE COIL(3T)	
L120			L34-4564-05	AIR-CORE COIL(4T)	
L190		✻	L33-3032-05	CHOKE COIL	
L191		✻	L40-1263-57	SMALL FIXED INDUCTOR(1.2NH)	
L202			L92-0446-05	BEADS CORE	
L203			L40-1075-92	SMALL FIXED INDUCTOR(10NH)	
L204			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	
L205			L40-6865-71	SMALL FIXED INDUCTOR(6.8NH)	
L206			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	
L207			L40-5663-71	SMALL FIXED INDUCTOR(5.6NH)	
L208			L41-8768-45	SMALL FIXED INDUCTOR(8.7NH)	
L210			L40-8265-71	SMALL FIXED INDUCTOR(8.2NH)	
L211			L41-7568-45	SMALL FIXED INDUCTOR(7.5NH)	
L212			L79-1928-05	FILTER	
L213			L92-0446-05	BEADS CORE	
L214			L41-1665-45	SMALL FIXED INDUCTOR(1.6NH)	
L215			L41-1278-45	SMALL FIXED INDUCTOR(12NH)	
L216			L41-6868-45	SMALL FIXED INDUCTOR(6.8NH)	
L217			L79-1928-05	FILTER	
L218			L41-5165-45	SMALL FIXED INDUCTOR(5.1NH)	
L219			L41-1665-45	SMALL FIXED INDUCTOR(1.6NH)	
L300			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L303			L40-5675-92	SMALL FIXED INDUCTOR(56NH)	
L304			L40-1085-57	SMALL FIXED INDUCTOR(100NH)	
L305			L40-3391-37	SMALL FIXED INDUCTOR(3.300UH)	
L306			L92-0162-05	BEADS CORE	
L307			L40-2281-86	SMALL FIXED INDUCTOR(0.22UH)	
L400			L92-0163-05	BEADS CORE	
L401			L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)	
L403,404			L92-0163-05	BEADS CORE	
L405-409			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L410			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L411,412			L33-0745-05	SMALL FIXED INDUCTOR	
L413,414			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L415			L92-0446-05	BEADS CORE	
L416,417			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L418			L40-2763-71	SMALL FIXED INDUCTOR(2.7NH)	
L419			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	
L420			L40-2263-71	SMALL FIXED INDUCTOR(2.2NH)	
L421			L40-3363-71	SMALL FIXED INDUCTOR(3.3NH)	
L422			L40-2263-71	SMALL FIXED INDUCTOR(2.2NH)	
L423-426			L40-1075-71	SMALL FIXED INDUCTOR(10NH)	
L427			L40-2775-71	SMALL FIXED INDUCTOR(27NH)	
L428,429			L40-1075-71	SMALL FIXED INDUCTOR(10NH)	
L500			L92-0163-05	BEADS CORE	
L501			L33-1494-05	SMALL FIXED INDUCTOR(4.7UH)	
L502			L92-0149-05	CHIP FERRITE	
L503			L92-0162-05	BEADS CORE	
L504,505			L92-0467-05	CHIP FERRITE	
L506			L33-1530-05	SMALL FIXED INDUCTOR(15UH)	
L507			L41-1092-02	SMALL FIXED INDUCTOR(1.0UH)	
L601-603			L92-0408-05	CHIP FERRITE	

PARTS LIST

TX-RX UNIT (X57-8370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L605-607			L92-0444-05	CHIP FERRITE	
L608			L92-0162-05	BEADS CORE	
L609			L92-0163-05	BEADS CORE	
L610-612			L92-0444-05	CHIP FERRITE	
L900,901			L92-0408-05	CHIP FERRITE	
L902,903			L92-0163-05	BEADS CORE	
L904			L92-0408-05	CHIP FERRITE	
L906			L92-0408-05	CHIP FERRITE	
X400			L77-3073-05	TCXO(16.8MHZ)	
X600			L77-3015-05	TCXO(18.432MHZ)	
XF300			L71-0655-05	MCF(49.95MHZ)	
CP400			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP500			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP501			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP600			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP601-603			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP604			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP605			RK74HB1J000J	CHIP-COM 0 J 1/16W	
CP606			RK74HB1J104J	CHIP-COM 100K J 1/16W	
R1			RK73HB1J000J	CHIP R 0 J 1/16W	
R2			RK73HB1J000J	CHIP R 0 J 1/16W	
R100,101			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R103			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R104			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R105			RK73HB1J000J	CHIP R 0 J 1/16W	
R106			RK73HB1J330J	CHIP R 33 J 1/16W	
R107			RK73HB1J103J	CHIP R 10K J 1/16W	
R108			RK73HB1J331J	CHIP R 330 J 1/16W	
R110			RK73HB1J220J	CHIP R 22 J 1/16W	
R111			RK73HB1J390J	CHIP R 39 J 1/16W	
R113			RK73HB1J331J	CHIP R 330 J 1/16W	
R114			RK73HB1J273J	CHIP R 27K J 1/16W	
R115			RK73HB1J471J	CHIP R 470 J 1/16W	
R116			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R117			RK73HB1J120J	CHIP R 12 J 1/16W	
R118			RK73HB1J471J	CHIP R 470 J 1/16W	
R119			RK73HB1J103J	CHIP R 10K J 1/16W	
R120			RK73HB1J000J	CHIP R 0 J 1/16W	
R121			RK73HB1J561J	CHIP R 560 J 1/16W	
R122			RK73HB1J103J	CHIP R 10K J 1/16W	
R123			RK73HB1J561J	CHIP R 560 J 1/16W	
R124			RK73HB1J103J	CHIP R 10K J 1/16W	
R125			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R127			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R128			RK73HB1J331J	CHIP R 330 J 1/16W	
R129			RK73GB2A000J	CHIP R 0 J 1/10W	
R130			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R131			RK73HB1J103J	CHIP R 10K J 1/16W	
R132,133			RK73EB2HR22F	CHIP R 0.22 F 1/2W	
R136			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R137			RK73HB1J103J	CHIP R 10K J 1/16W	
R138,139			RK73HH1J154D	CHIP R 150K D 1/16W	
R141,142			RK73HH1J154D	CHIP R 150K D 1/16W	
R143			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R144,145			RK73HH1J154D	CHIP R 150K D 1/16W	
R146			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R147			RK73HB1J271J	CHIP R 270 J 1/16W	
R148			RK73HB1J474J	CHIP R 470K J 1/16W	
R149			RK73HB1J473J	CHIP R 47K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R150			RK73HB1J000J	CHIP R 0 J 1/16W	
R151			RK73HB1J271J	CHIP R 270 J 1/16W	
R152			RK73FB2B000J	CHIP R 0 J 1/8W	
R153			RK73HB1J104J	CHIP R 100K J 1/16W	
R154			RK73HB1J184J	CHIP R 180K J 1/16W	
R155			RK73HB1J104J	CHIP R 100K J 1/16W	
R158			RK73HB1J000J	CHIP R 0 J 1/16W	
R160			RK73EB2E823J	CHIP R 82K J 1/4W	
R200			RK73HB1J151J	CHIP R 150 J 1/16W	
R201			RK73HB1J471J	CHIP R 470 J 1/16W	
R202			RK73HB1J120J	CHIP R 12 J 1/16W	
R203			RK73HB1J471J	CHIP R 470 J 1/16W	
R204			RK73HB1J180J	CHIP R 18 J 1/16W	
R205			RK73HB1J271J	CHIP R 270 J 1/16W	
R206,207			RK73HB1J474J	CHIP R 470K J 1/16W	
R208			RK73HB1J000J	CHIP R 0 J 1/16W	
R209			RK73HB1J560J	CHIP R 56 J 1/16W	
R210			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R211			RK73HB1J333J	CHIP R 33K J 1/16W	
R212			RK73HB1J683J	CHIP R 68K J 1/16W	
R213			RK73HB1J104J	CHIP R 100K J 1/16W	
R214			RK73HB1J683J	CHIP R 68K J 1/16W	
R215,216			RK73HB1J474J	CHIP R 470K J 1/16W	
R217			RK73HB1J271J	CHIP R 270 J 1/16W	
R300			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R301			RK73HB1J561J	CHIP R 560 J 1/16W	
R303			RK73HB1J000J	CHIP R 0 J 1/16W	
R304			RK73HB1J100J	CHIP R 10 J 1/16W	
R305			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R306			RK73HH1J334D	CHIP R 330K D 1/16W	
R308			RK73HB1J000J	CHIP R 0 J 1/16W	
R309			RK73GB2A821J	CHIP R 820 J 1/10W	
R310			RK73HB1J000J	CHIP R 0 J 1/16W	
R313			RK73HB1J103J	CHIP R 10K J 1/16W	
R317,318			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R319			RK73HB1J274J	CHIP R 270K J 1/16W	
R321			RK73HB1J104J	CHIP R 100K J 1/16W	
R322			RK73HB1J103J	CHIP R 10K J 1/16W	
R323			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R324			RK73HB1J223J	CHIP R 22K J 1/16W	
R325			RK73HB1J183J	CHIP R 18K J 1/16W	
R326			RK73HB1J103J	CHIP R 10K J 1/16W	
R327			RK73HB1J393J	CHIP R 39K J 1/16W	
R328			RK73HB1J391J	CHIP R 390 J 1/16W	
R329			RK73HB1J103J	CHIP R 10K J 1/16W	
R330			RK73HB1J104J	CHIP R 100K J 1/16W	
R331			RK73HB1J221J	CHIP R 220 J 1/16W	
R333			RK73HB1J564J	CHIP R 560K J 1/16W	
R334			RK73HB1J103J	CHIP R 10K J 1/16W	
R335			RK73HB1J221J	CHIP R 220 J 1/16W	
R336			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R337			RK73HB1J104J	CHIP R 100K J 1/16W	
R338			RK73HB1J103J	CHIP R 10K J 1/16W	
R340			RK73HB1J101J	CHIP R 100 J 1/16W	
R400			RK73HB1J100J	CHIP R 10 J 1/16W	
R401			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R405			RK73HB1J100J	CHIP R 10 J 1/16W	
R406,407			RK73HB1J000J	CHIP R 0 J 1/16W	
R408			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R409			RK73HB1J100J	CHIP R 10 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8370-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
R410			RK73HB1J473J	CHIP R	47K	J 1/16W	
R411			RK73HB1J470J	CHIP R	47	J 1/16W	
R412			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R413			RK73HH1J393D	CHIP R	39K	D 1/16W	
R414			RK73HH1J473D	CHIP R	47K	D 1/16W	
R415			RK73HB1J100J	CHIP R	10	J 1/16W	
R416			RK73HB1J106J	CHIP R	10M	J 1/16W	
R417			RK73HH1J474D	CHIP R	470K	D 1/16W	
R418			RK73HB1J106J	CHIP R	10M	J 1/16W	
R419,420			RK73HB1J000J	CHIP R	0	J 1/16W	
R421			RK73HH1J121D	CHIP R	120	D 1/16W	
R422			RK73HH1J391D	CHIP R	390	D 1/16W	
R423			RK73HB1J473J	CHIP R	47K	J 1/16W	
R424			RK73HB1J683J	CHIP R	68K	J 1/16W	
R425			RK73HB1J103J	CHIP R	10K	J 1/16W	
R426			RK73HB1J104J	CHIP R	100K	J 1/16W	
R427			RK73HB1J000J	CHIP R	0	J 1/16W	
R428			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R429			RK73HB1J000J	CHIP R	0	J 1/16W	
R430			RK73HB1J224J	CHIP R	220K	J 1/16W	
R431			RK73HB1J124J	CHIP R	120K	J 1/16W	
R432			RK73HB1J183J	CHIP R	18K	J 1/16W	
R433			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R434,435			RK73HB1J000J	CHIP R	0	J 1/16W	
R436			RK73HB1J104J	CHIP R	100K	J 1/16W	
R438			RK73HB1J823J	CHIP R	82K	J 1/16W	
R439,440			RK73HB1J473J	CHIP R	47K	J 1/16W	
R441			RK73HB1J104J	CHIP R	100K	J 1/16W	
R442			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R444,445			RN73HH1J221D	CHIP R	220	D 1/16W	
R446			RK73HB1J474J	CHIP R	470K	J 1/16W	
R447			RN73HH1J220D	CHIP R	22	D 1/16W	
R449			RK73HB1J104J	CHIP R	100K	J 1/16W	
R450			RK73HB1J000J	CHIP R	0	J 1/16W	
R451			RN73HH1J220D	CHIP R	22	D 1/16W	
R452			RK73HB1J474J	CHIP R	470K	J 1/16W	
R453			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R454			RK73HB1J101J	CHIP R	100	J 1/16W	
R455			RK73HB1J473J	CHIP R	47K	J 1/16W	
R456			RK73HB1J104J	CHIP R	100K	J 1/16W	
R458,459			RK73HB1J101J	CHIP R	100	J 1/16W	
R460			RK73HB1J000J	CHIP R	0	J 1/16W	
R462,463			RK73HB1J101J	CHIP R	100	J 1/16W	
R464			RK73HB1J103J	CHIP R	10K	J 1/16W	
R465			RK73HB1J682J	CHIP R	6.8K	J 1/16W	
R466			RK73HB1J271J	CHIP R	270	J 1/16W	
R467			RK73HB1J331J	CHIP R	330	J 1/16W	
R469			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R470,471			RK73HB1J000J	CHIP R	0	J 1/16W	
R500			RK73HH1J274D	CHIP R	270K	D 1/16W	
R501			RK73GB2A000J	CHIP R	0	J 1/10W	
R502			RK73HH1J184D	CHIP R	180K	D 1/16W	
R504,505			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R506			RK73HB1J000J	CHIP R	0	J 1/16W	
R507			RK73HB1J683J	CHIP R	68K	J 1/16W	
R508			RK73GB2A2R2J	CHIP R	2.2	J 1/10W	
R510			RK73HB1J100J	CHIP R	10	J 1/16W	
R511			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R512			RK73HH1J683D	CHIP R	68K	D 1/16W	
R513			RK73HH1J333D	CHIP R	33K	D 1/16W	

Ref. No.	Address	New parts	Parts No.	Description			Destination
R514			RK73HB1J471J	CHIP R	470	J 1/16W	
R515			RK73GB2A000J	CHIP R	0	J 1/10W	
R516			RK73HH1J394D	CHIP R	390K	D 1/16W	
R517			RK73HH1J154D	CHIP R	150K	D 1/16W	
R518			RK73HB1J103J	CHIP R	10K	J 1/16W	
R520-522			RK73HB1J474J	CHIP R	470K	J 1/16W	
R523			RK73GB2A1R0J	CHIP R	1	J 1/10W	
R524			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R526			RK73HB1J474J	CHIP R	470K	J 1/16W	
R527-530			RK73HB1J104J	CHIP R	100K	J 1/16W	
R531			RK73HB1J000J	CHIP R	0	J 1/16W	
R532			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R533-536			RK73HB1J474J	CHIP R	470K	J 1/16W	
R538			RK73HB1J474J	CHIP R	470K	J 1/16W	
R541			RK73HB1J103J	CHIP R	10K	J 1/16W	
R542			RK73HB1J474J	CHIP R	470K	J 1/16W	
R543			RK73HB1J103J	CHIP R	10K	J 1/16W	
R545			RK73HB1J000J	CHIP R	0	J 1/16W	
R600-602			RK73HB1J000J	CHIP R	0	J 1/16W	
R604			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R605			RK73HB1J104J	CHIP R	100K	J 1/16W	
R606			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R607			RK73HB1J563J	CHIP R	56K	J 1/16W	
R609			RK73HB1J101J	CHIP R	100	J 1/16W	
R610,611			RK73HB1J000J	CHIP R	0	J 1/16W	
R612			RK73HB1J103J	CHIP R	10K	J 1/16W	
R613-615			RK73HB1J101J	CHIP R	100	J 1/16W	
R616			RK73HB1J103J	CHIP R	10K	J 1/16W	
R617,618			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R619			RK73HB1J101J	CHIP R	100	J 1/16W	
R620			RK73HB1J823J	CHIP R	82K	J 1/16W	
R621			RK73HB1J563J	CHIP R	56K	J 1/16W	
R622			RK73HB1J184J	CHIP R	180K	J 1/16W	
R623			RK73HB1J474J	CHIP R	470K	J 1/16W	
R624			RK73HB1J223J	CHIP R	22K	J 1/16W	
R625			RK73GB2A000J	CHIP R	0	J 1/10W	
R626,627			RK73HB1J103J	CHIP R	10K	J 1/16W	
R628			RK73HB1J153J	CHIP R	15K	J 1/16W	
R629,630			RK73HB1J100J	CHIP R	10	J 1/16W	
R631			RK73HB1J103J	CHIP R	10K	J 1/16W	
R632,633			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R634			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R635			RK73HB1J000J	CHIP R	0	J 1/16W	
R638,639			RK73HB1J220J	CHIP R	22	J 1/16W	
R640			RK73HB1J000J	CHIP R	0	J 1/16W	
R641			RK73HB1J474J	CHIP R	470K	J 1/16W	
R642			RK73HB1J000J	CHIP R	0	J 1/16W	
R643			RK73HB1J104J	CHIP R	100K	J 1/16W	
R644,645			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R646			RK73HH1J104D	CHIP R	100K	D 1/16W	
R647			RK73HH1J103D	CHIP R	10K	D 1/16W	
R648			RK73HB1J104J	CHIP R	100K	J 1/16W	
R649			RK73HB1J183J	CHIP R	18K	J 1/16W	
R650-652			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R653			RK73HB1J474J	CHIP R	470K	J 1/16W	
R654,655			RK73HB1J000J	CHIP R	0	J 1/16W	
R801			RK73HB1J000J	CHIP R	0	J 1/16W	
R803			RK73HB1J000J	CHIP R	0	J 1/16W	
R901			RK73HB1J103J	CHIP R	10K	J 1/16W	
R902			RK73HB1J563J	CHIP R	56K	J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8370-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R904			RK73HB1J473J	CHIP R 47K J 1/16W	
R905			RK73GB2A104J	CHIP R 100K J 1/10W	
R906			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R907			RK73HB1J473J	CHIP R 47K J 1/16W	
R908			RK73HH1J271D	CHIP R 270 D 1/16W	
R909			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R910			RK73HB1J103J	CHIP R 10K J 1/16W	
R911			RK73HB1J473J	CHIP R 47K J 1/16W	
R912			RK73HH1J334D	CHIP R 330K D 1/16W	
R913			RK73HB1J274J	CHIP R 270K J 1/16W	
R914			RK73HB1J473J	CHIP R 47K J 1/16W	
R916			RK73HB1J273J	CHIP R 27K J 1/16W	
R917			RK73HB1J101J	CHIP R 100 J 1/16W	
R918			RK73HB1J681J	CHIP R 680 J 1/16W	
R919			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R920			RK73HB1J104J	CHIP R 100K J 1/16W	
R956,957			RK73HB1J101J	CHIP R 100 J 1/16W	
D100			UDZW5.1(B)	ZENER DIODE	
D102,103			HVC131	DIODE	
D104,105			RN142S	DIODE	
D200			HSB88AS-E	DIODE	
D400			DA221	DIODE	
D402,403			1SV323F	VARIABLE CAPACITANCE DIODE	
D404,405			1SV325F	VARIABLE CAPACITANCE DIODE	
D406,407			HVC376B	VARIABLE CAPACITANCE DIODE	
D408,409			1SV278F	VARIABLE CAPACITANCE DIODE	
D410			HSC119	DIODE	
D411,412			RN142S	DIODE	
D500			1SR154-400	DIODE	
D501,502			1SS388F	DIODE	
D503			HRB0502A	DIODE	
D505			1SS388F	DIODE	
D506		✻	DA3S103E	DIODE	
D900			1SS416	DIODE	
D901		✻	DA3S103E	DIODE	
IC100			NJM12904RB1	MOS-IC	
IC200			CMY210	MOS-IC	
IC301			TK10931VTL-G	ANALOGUE IC	
IC302			BU7242NUX	MOS-IC	
IC400			SKY72310-362	MOS-IC	
IC401			XC221A1200MRG	MOS-IC	
IC402			BU7462NUX	MOS-IC	
IC500,501			NJM2878F4-33	BI-POLAR IC	
IC502			XC9235A15CM-G	MOS-IC	
IC503			NJM2878F4-33	BI-POLAR IC	
IC504			XC6209B502P-G	MOS-IC	
IC505			LT1616ES6-PBF	ANALOGUE IC	
IC506			XC61CC5602N-G	MOS-IC	
IC600			**Note1**	ROM IC	
IC601			**Note1**	DSP	
IC602			BU7445HFV	MOS-IC	
IC603			**Note1**	SRAM IC	
IC604			XC6119C29ANR	MOS-IC	
IC605			KXUD9-2050	MOS-IC	
IC606			SM5023CNDH-G	MOS-IC	
IC607			**Note1**	ASIC	
IC608,609			TC7SH08FU-F	MOS-IC	
IC900			XC6209B502P-G	MOS-IC	
IC901			TA7368FG	MOS-IC	

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q101			2SC5636	TRANSISTOR	
Q102			2SK3077F	FET	
Q103			2SC5383-T111	TRANSISTOR	
Q104			RD01MUS1-T113	FET	
Q105			FK330301	FET	
Q106			RD07MUS2BT122	FET	
Q107			LTC014EEBFS8	TRANSISTOR	
Q108		✻	FJ330301	FET	
Q109			FK330301	FET	
Q200			BB505CES-TL-E	FET	
Q300,301			2SC5108(Y)F	TRANSISTOR	
Q401,402			MCH3914(8)-H	FET	
Q403			2SC5383-T111	TRANSISTOR	
Q404			EM6M1	FET	
Q405			2SC5636	TRANSISTOR	
Q406		✻	FJ330301	FET	
Q407,408			2SC5636	TRANSISTOR	
Q500			2SJ648-A	FET	
Q501			FK330301	FET	
Q502			LTC014EEBFS8	TRANSISTOR	
Q503			EM6M1	FET	
Q504			2SA1955A-F	TRANSISTOR	
Q505			EMD5	TRANSISTOR	
Q506,507		✻	FC694301	FET	
Q508			EMD12	TRANSISTOR	
Q509			LTC014EEBFS8	TRANSISTOR	
Q600			FK330301	FET	
Q900,901			LTC014EEBFS8	TRANSISTOR	
Q902			2SA1362-F(GR)	TRANSISTOR	
Q903			FK330301	FET	
Q904			DMG6968U	FET	
Q905			UPA672T-A	FET	
Q906			DMG6968U	FET	
TH100			ERTJ0EV104H	THERMISTOR(100K)	
TH400			ERTJ0EV104H	THERMISTOR(100K)	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.