
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

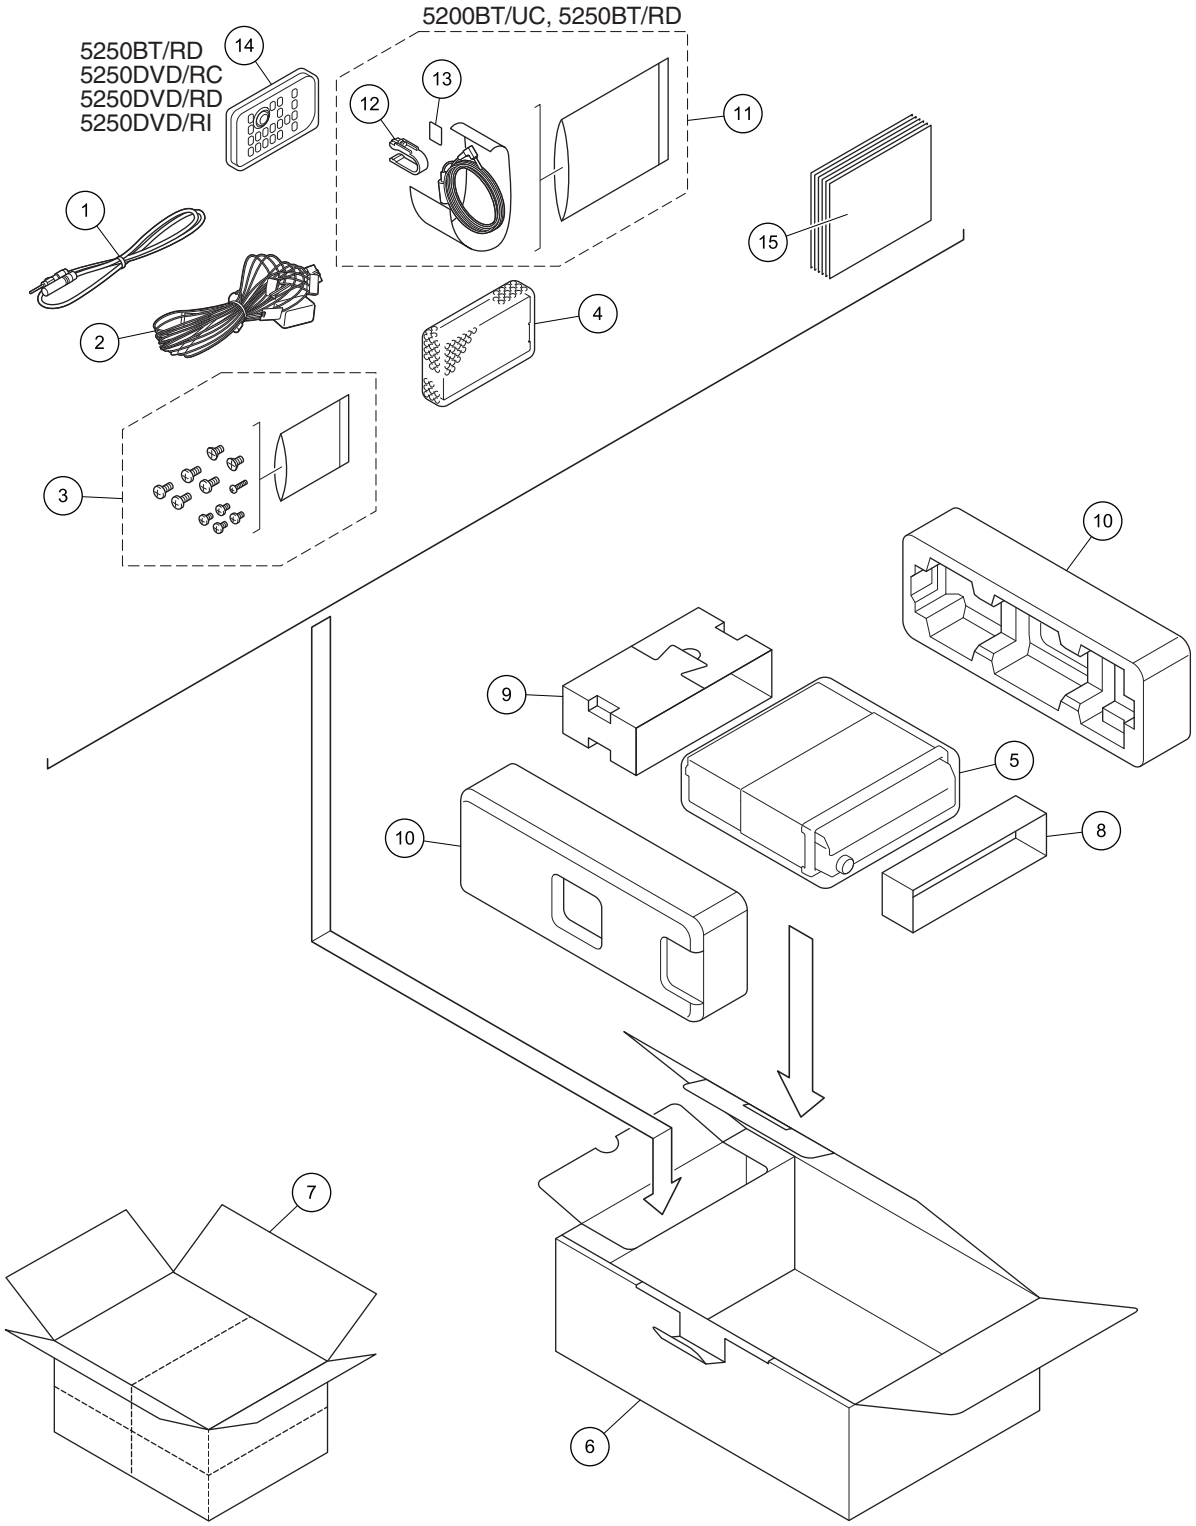

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Antenna Cable	CDH1376
	2	Cord Assy	CDP1288
	3	Screw Assy	CEC4353
	4	Aircap	CEG1081
	5	Polyethylene Bag	See Contrast table (2)
	6	Unit Box	See Contrast table (2)
	7	Contain Box	See Contrast table (2)
	8	Protector	CHP2540
	9	Protector	CHP3992
	10	Protector	CHP3993
	11	Microphone Assy	See Contrast table (2)
	12	Clip Holder	See Contrast table (2)
	13	Cushion	See Contrast table (2)
	14	Remote Control Unit	See Contrast table (2)
	15-1	Owner's Manual	See Contrast table (2)
	15-2	Owner's Manual	See Contrast table (2)
	15-3	Owner's Manual	See Contrast table (2)
	15-4	Installation Manual	See Contrast table (2)
*	15-5	Warranty Card	See Contrast table (2)

(2) CONTRAST TABLE

AVH-P5200BT/XNUC, AVH-P5250BT/XNRD, AVH-P5200DVD/XNUC, AVH-P5250DVD/XNRC, AVH-P5250DVD/XNRD and AVH-P5250DVD/XNRI are constructed the same except for the following:


Mark	No.	Description	AVH-P5200BT/XNUC	AVH-P5250BT/XNRD	AVH-P5200DVD/XNUC
	5	Polyethylene Bag	CEG1185	CEG1042	CEG1185
	6	Unit Box	CHG7311	CHG7312	CHG7313
	7	Contain Box	CHL7311	CHL7312	CHL7313
	11	Microphone Assy	CPM1083	CPM1083	Not Used
	12	Clip Holder	CZN7912	CZN7912	Not Used
	13	Cushion	CZN7913	CZN7913	Not Used
	14	Remote Control Unit	Not Used	CXE2833	Not Used
	15-1	Owner's Manual	CRB3314	CRB3322	CRB3314
	15-2	Owner's Manual	CRB3315	CRB3323	CRB3315
	15-3	Owner's Manual	CRB3316	CRB3326	CRB3316
	15-4	Installation Manual	CRD4484	CRD4487	CRD4484
*	15-5	Warranty Card	CRY1276	Not Used	CRY1276

Mark	No.	Description	AVH-P5250DVD/XNRC	AVH-P5250DVD/XNRD	AVH-P5250DVD/XNRI
	5	Polyethylene Bag	CEG1042	CEG1042	CEG1042
	6	Unit Box	CHG7315	CHG7316	CHG7317
	7	Contain Box	CHL7315	CHL7316	CHL7317
	11	Microphone Assy	Not Used	Not Used	Not Used
	12	Clip Holder	Not Used	Not Used	Not Used
	13	Cushion	Not Used	Not Used	Not Used
	14	Remote Control Unit	CXE2833	CXE2833	CXE2833
	15-1	Owner's Manual	CRB3319	CRB3322	CRB3319
	15-2	Owner's Manual	CRB3320	CRB3323	CRB3324
	15-3	Owner's Manual	CRB3321	CRB3326	Not Used
	15-4	Installation Manual	CRD4486	CRD4487	CRD4488
*	15-5	Warranty Card	Not Used	Not Used	Not Used

Owner's Manual,Installation Manual

Part No.	Language
CRB3314	English
CRB3315	French
CRB3316	Spanish(Espanol)
CRD4484	English, French.Spanish(Espanol)
CRB3319	English
CRB3320	Korean
CRB3321	Traditional Chinese
CRD4486	English, Korean, Traditional Chinese
CRB3322	English
CRB3323	Spanish(Espanol)
CRB3326	Portuguese(B)
CRD4487	English, Spanish(Espanol), Portuguese(B)
CRB3324	Arabic
CRD4488	English, Arabic

9.2 EXTERIOR(1)

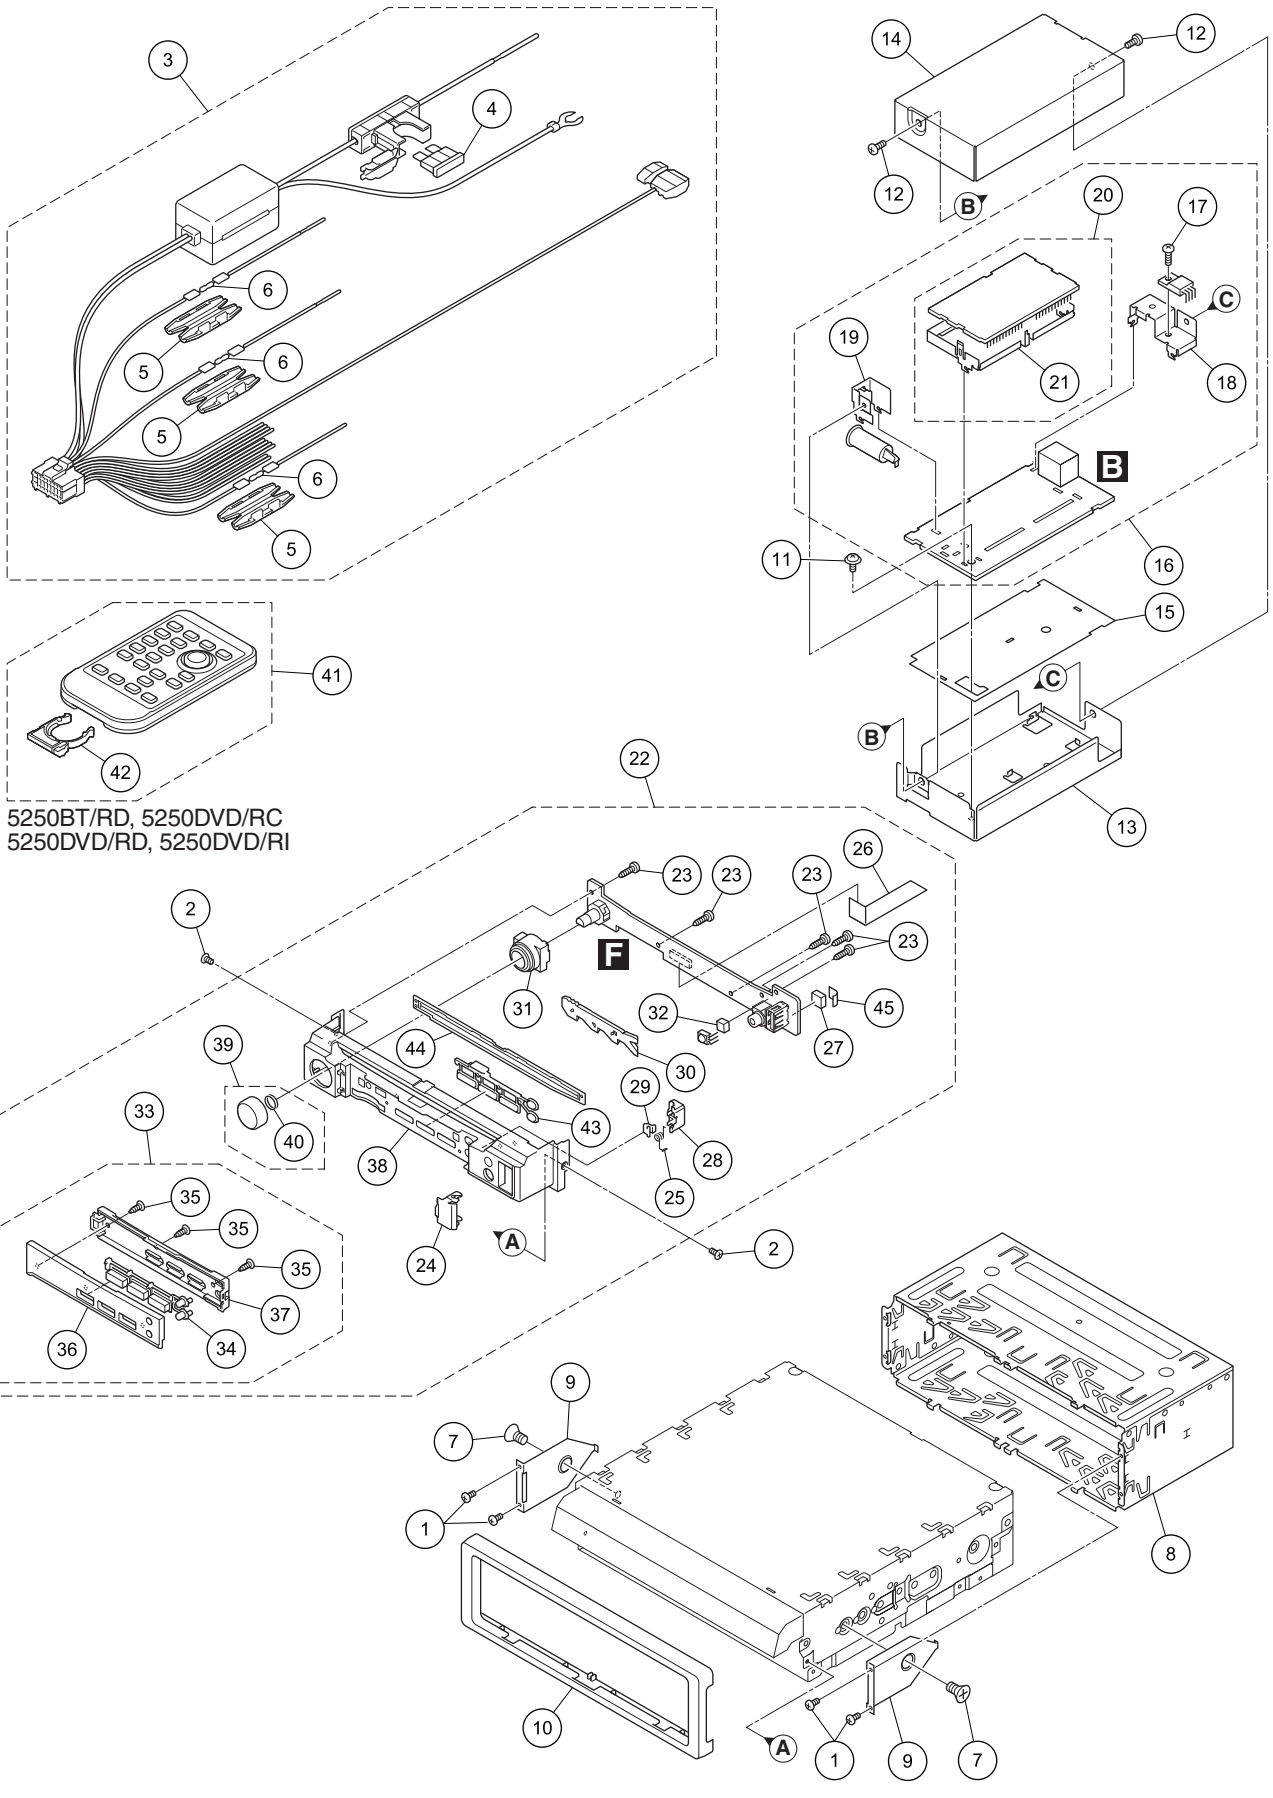

(1) EXTERIOR(1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ20P025FTC
	2	Screw(M2 x 3)	CBA1877
	3	Cord Assy	CDP1288
⚠	4	Fuse(10 A)	CEK1136
	5	Cap	CNS1472
	6	Resistor	RS1/2PMF102J
	7	Screw	CMZ50P060FTC
	8	Holder	CND3854
	9	Bracket	CND3855
	10	Panel	CNS9453
	11	Screw	ASZ26P050FTC
	12	Screw	BSZ26P050FTC
	13	Chassis	CNA3037
	14	Case	CNB3468
	15	Insulator	CNN3118
	16	Tuner Box Unit	See Contrast table (2)
	17	Screw	BSZ26P060FTC
	18	Holder	CND4282
	19	Holder	CND4283
	20	FM/AM Tuner Unit	See Contrast table (2)
	21	Holder	CND4325
	22	Grille Assy	See Contrast table (2)
	23	Screw	BPZ20P060FTC
	24	Door(USB)	CAT2914
	25	Spring	CBH2997
	26	FFC	CDE9140
	27	Cushion	CNN3420
	28	Holder	CNV9890
	29	Arm	CNV9891
	30	Lighting Conductor	CNW1805
	31	Lighting Conductor	CNW1806
	32	Cushion	CNN3049
	33	Detach Grille Assy	See Contrast table (2)
	34	Button(SRC, <, >)	CAI2734
	35	Screw(M2 x 6)	CBA2132
	36	Grille	See Contrast table (2)
	37	Cover	CNU1124
	38	Grille Unit	See Contrast table (2)
	39	Knob Unit	CXE2698
	40	Spring	YBL5010
	41	Remote Control Unit	See Contrast table (2)
	42	Cover	See Contrast table (2)
	43	Button	CAI2735
	44	Cover	CNN3221
	45	Sheet	CNN3421


(2) CONTRAST TABLE

AVH-P5200BT/XNUC, AVH-P5250BT/XNRD, AVH-P5200DVD/XNUC, AVH-P5250DVD/XNRC, AVH-P5250DVD/XNRD and AVH-P5250DVD/XNRI are constructed the same except for the following:

Mark	No.	Description	AVH-P5200BT/XNUC	AVH-P5250BT/XNRD	AVH-P5200DVD/XNUC
	16	Tuner Box Unit	CWN3129	CWN3130	CWN3129
	20	FM/AM Tuner Unit	CWE2095	CWE2096	CWE2095
	22	Grille Assy	CXE2638	CXE2639	CXE2633
	33	Detach Grille Assy	CXE2648	CXE2649	CXE2643
	36	Grille	CNU1115	CNU1116	CNU1119
	38	Grille Unit	CXE2696	CXE2696	CXE2697
	41	Remote Control Unit	Not Used	CXE2833	Not Used
	42	Cover	Not Used	CZN5357	Not Used

Mark	No.	Description	AVH-P5250DVD/XNRC	AVH-P5250DVD/XNRD	AVH-P5250DVD/XNRI
	16	Tuner Box Unit	CWN3130	CWN3130	CWN3130
	20	FM/AM Tuner Unit	CWE2096	CWE2096	CWE2096
	22	Grille Assy	CXE2634	CXE2634	CXE2634
	33	Detach Grille Assy	CXE2644	CXE2644	CXE2644
	36	Grille	CNU1120	CNU1120	CNU1120
	38	Grille Unit	CXE2697	CXE2697	CXE2697
	41	Remote Control Unit	CXE2833	CXE2833	CXE2833
	42	Cover	CZN5357	CZN5357	CZN5357

9.3 EXTERIOR(2)

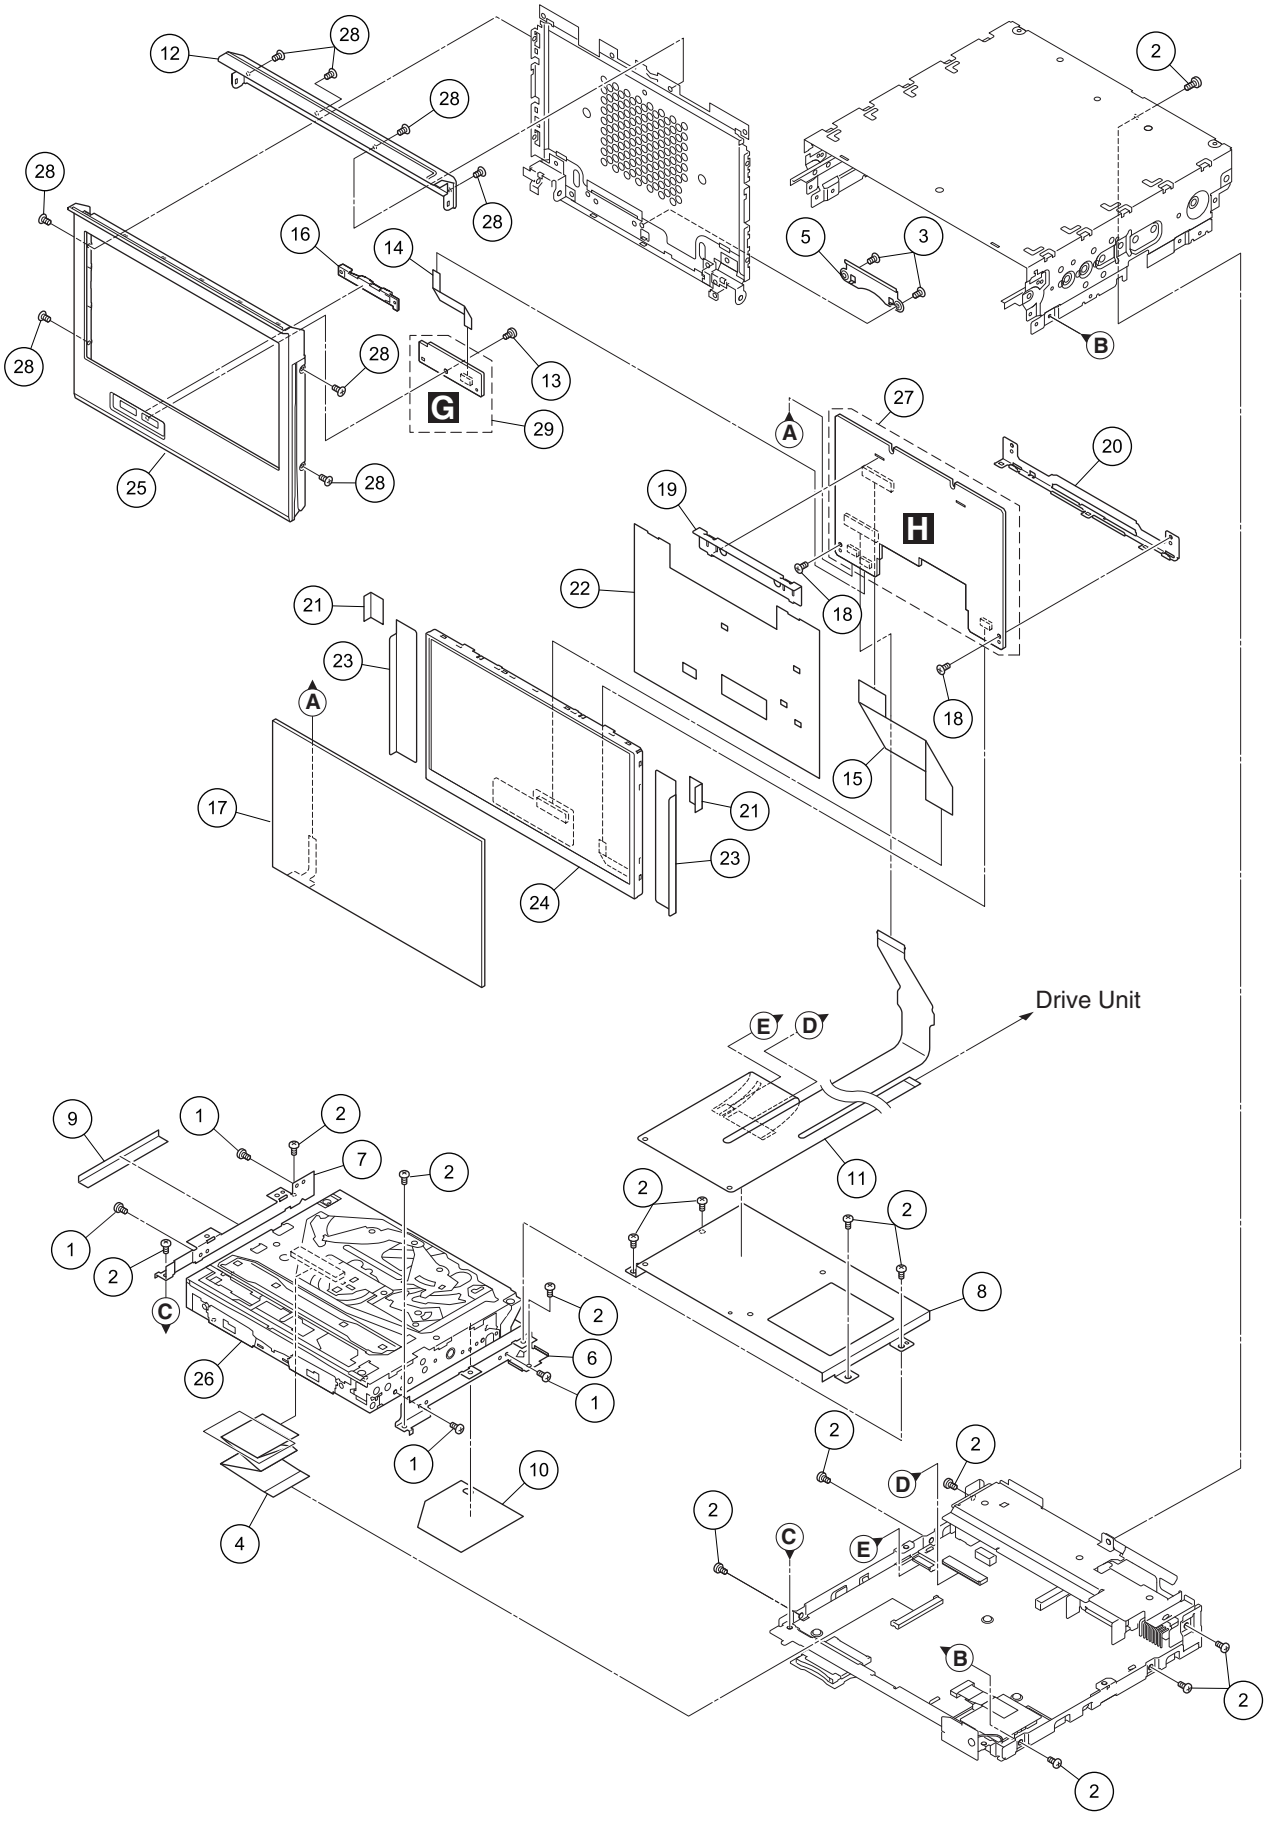

(1) EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ20P025FTC
	2	Screw	BMZ26P040FTC
	3	Screw(M2 x 1.4)	CBA2042
	4	FFC	CDE9143
	5	Holder	CND3271
	6	Bracket	CND3842
	7	Bracket	CND3843
	8	Bracket	CND3845
	9	Insulator	CNN2007
	10	Insulator	CNN2764
	11	Flexible PCB	CNQ3554
	12	Cover	CNU1130
	13	Screw	BPZ20P060FTC
	14	FFC	CDE9146
	15	FFC	CDE9147
	16	Lighting Conductor	CNW1807
	17	Touch Panel	CSX1151
	18	Screw(M2 x 2)	CBA1872
	19	Holder	CND5507
	20	Holder	CND5508
	21	Sheet	CNN1750
	22	Insulator	CNN3223
	23	Sheet	CNN3305
	24	LCD	CWX3866
	25	Grille Unit	CXE2699
	26	DVD Mechanism Module(MS7)	CXK6900
	27	Monitor Unit	See Contrast table (2)
	28	Screw(M2 x 2)	CBA1872
	29	Grille Assy	See Contrast table (2)


(2) CONTRAST TABLE

AVH-P5200BT/XNUC, AVH-P5250BT/XNRD, AVH-P5200DVD/XNUC, AVH-P5250DVD/XNRC, AVH-P5250DVD/XNRD and AVH-P5250DVD/XNRI are constructed the same except for the following:

Mark	No.	Description	AVH-P5200BT/XNUC	AVH-P5250BT/XNRD	AVH-P5200DVD/XNUC
	27	Monitor Unit	CXX2841(Service)	CXX2841(Service)	CWN4992
	29	Grille Assy	CXE2638	CXE2639	CXE2633

Mark	No.	Description	AVH-P5250DVD/XNRC	AVH-P5250DVD/XNRD	AVH-P5250DVD/XNRI
	27	Monitor Unit	CWN4992	CWN4992	CWN4992
	29	Grille Assy	CXE2634	CXE2634	CXE2634

9.4 EXTERIOR(3)

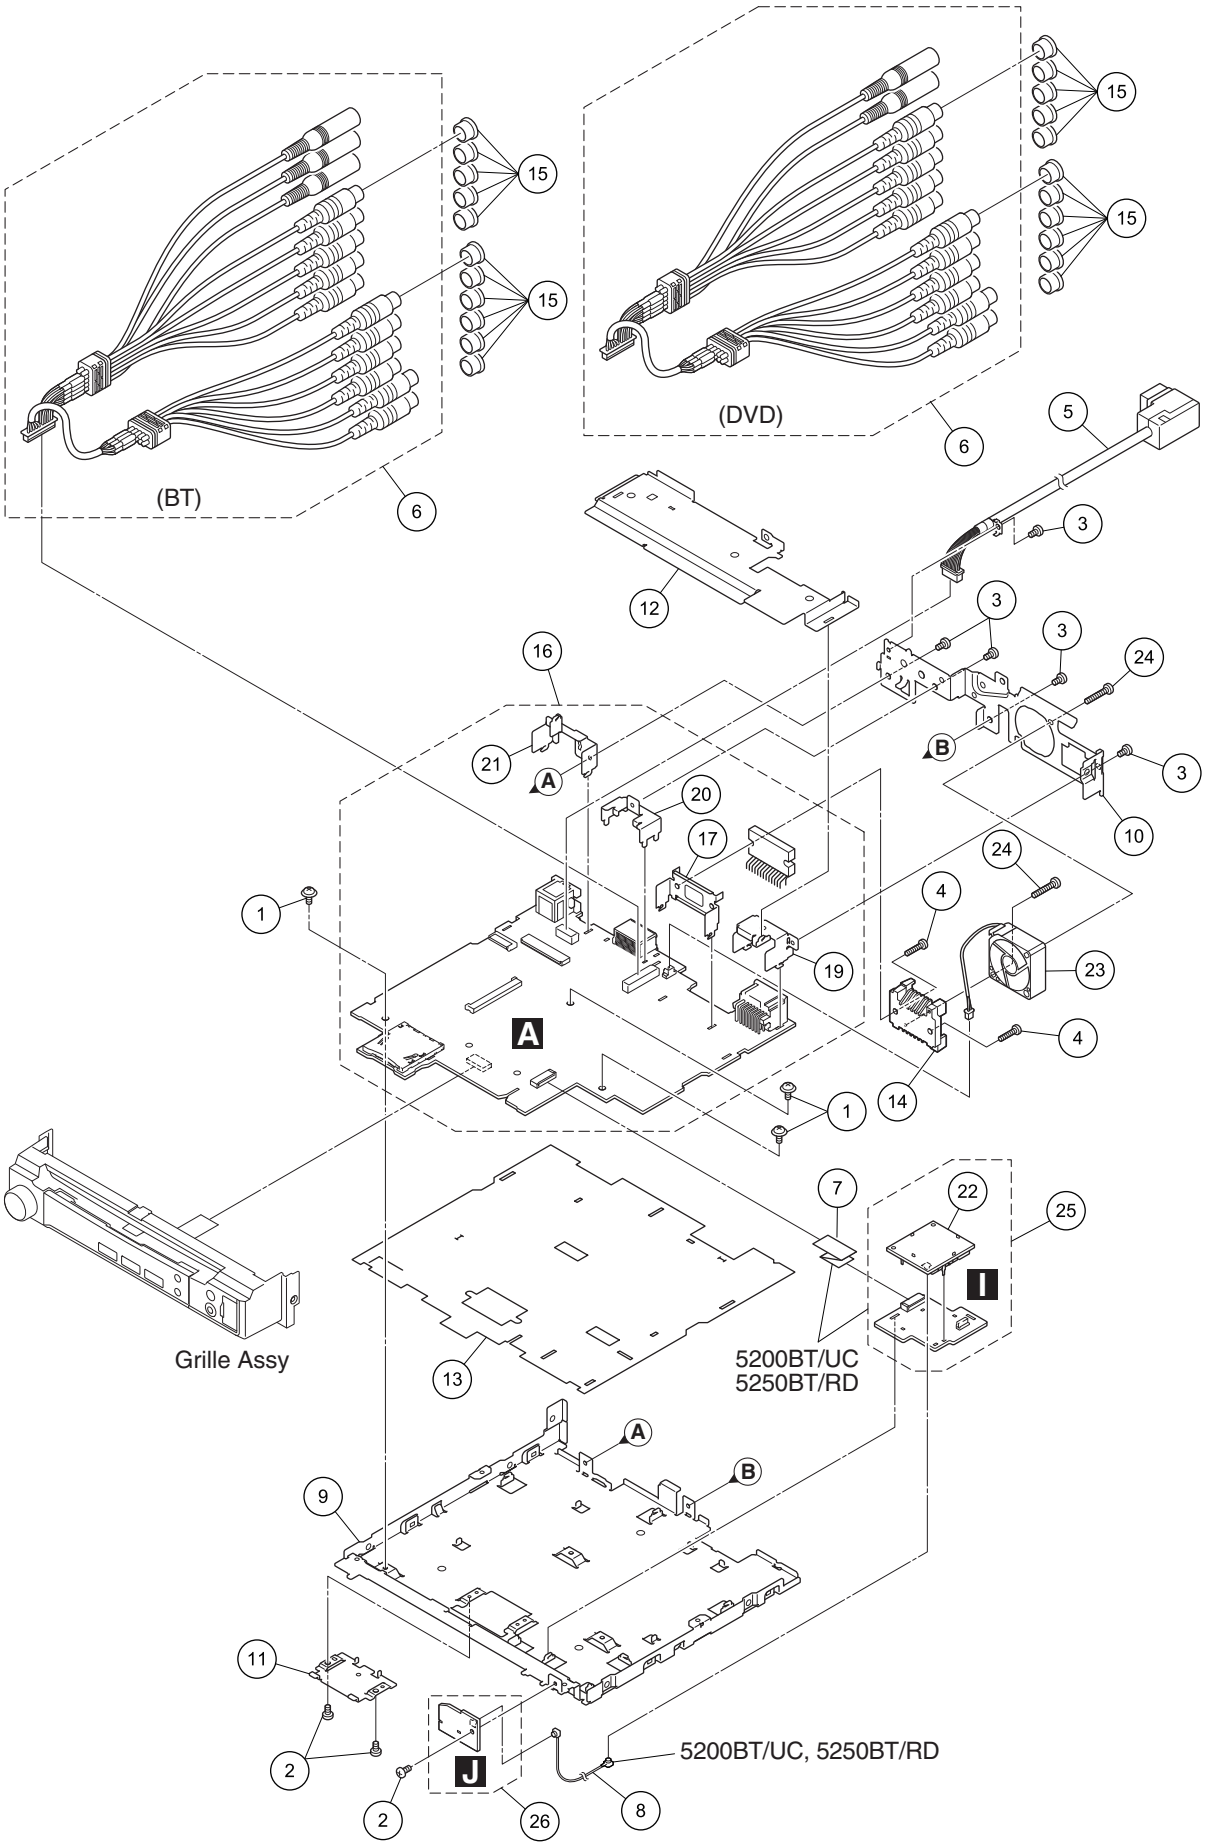

(1) EXTERIOR(3) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	AMZ26P040FTC
	2	Screw	BMZ20P025FTC
	3	Screw	BMZ26P040FTC
	4	Screw	BMZ26P120FTC
	5	Cord Assy	CDE8529
	6	Cord Assy	See Contrast table (2)
	7	FFC	See Contrast table (2)
	8	Cord Assy	See Contrast table (2)
	9	Case	CNB3631
	10	Panel	See Contrast table (2)
	11	Holder	CND4167
	12	Holder	CND5511
	13	Insulator	CNN3224
	14	Heat Sink	CNR1941
	15	Cap	CNV6727
	16	DVD Amp Unit	See Contrast table (2)
	17	Holder	CND4276
	18	•••••	
	19	Holder	CND5509
	20	Holder	CND5512
	21	Holder	CND5510
	22	Bluetooth Module	See Contrast table (2)
	23	Fan Motor	CXM1262
	24	Screw	PMZ20P160FTC
	25	Monitor Unit(BT PCB)	See Contrast table (2)
	26	Monitor Unit(BT ANT PCB)	See Contrast table (2)

(2) CONTRAST TABLE


AVH-P5200BT/XNUC, AVH-P5250BT/XNRD, AVH-P5200DVD/XNUC, AVH-P5250DVD/XNRC, AVH-P5250DVD/XNRD and AVH-P5250DVD/XNRI are constructed the same except for the following:

Mark	No.	Description	AVH-P5200BT/XNUC	AVH-P5250BT/XNRD	AVH-P5200DVD/XNUC
	6	Cord Assy	CDE9141	CDE9141	CDE9142
	7	FFC	CDE9144	CDE9144	Not Used
	8	Cord Assy	CDE9145	CDE9145	Not Used
	10	Panel	CNB3651	CNB3632	CNB3651
	16	DVD Amp Unit	CXX2838(Service)	CXX2839(Service)	CWN4979
	22	Bluetooth Module	CWX3865	CWX3865	Not Used
	25	Monitor Unit(BT PCB)	CXX2841(Service)	CXX2841(Service)	Not Used
	26	Monitor Unit(BT ANT PCB)	CXX2841(Service)	CXX2841(Service)	Not Used

Mark	No.	Description	AVH-P5250DVD/XNRC	AVH-P5250DVD/XNRD	AVH-P5250DVD/XNRD
	6	Cord Assy	CDE9142	CDE9142	CDE9142
	7	FFC	Not Used	Not Used	Not Used
	8	Cord Assy	Not Used	Not Used	Not Used
	10	Panel	CNB3632	CNB3632	CNB3632
	16	DVD Amp Unit	CWN4980	CWN4981	CWN4982
	22	Bluetooth Module	Not Used	Not Used	Not Used
	25	Monitor Unit(BT PCB)	Not Used	Not Used	Not Used
	26	Monitor Unit(BT ANT PCB)	Not Used	Not Used	Not Used

9.5 EXTERIOR(4)


The application position of grease is referred to page 122 and page 123.

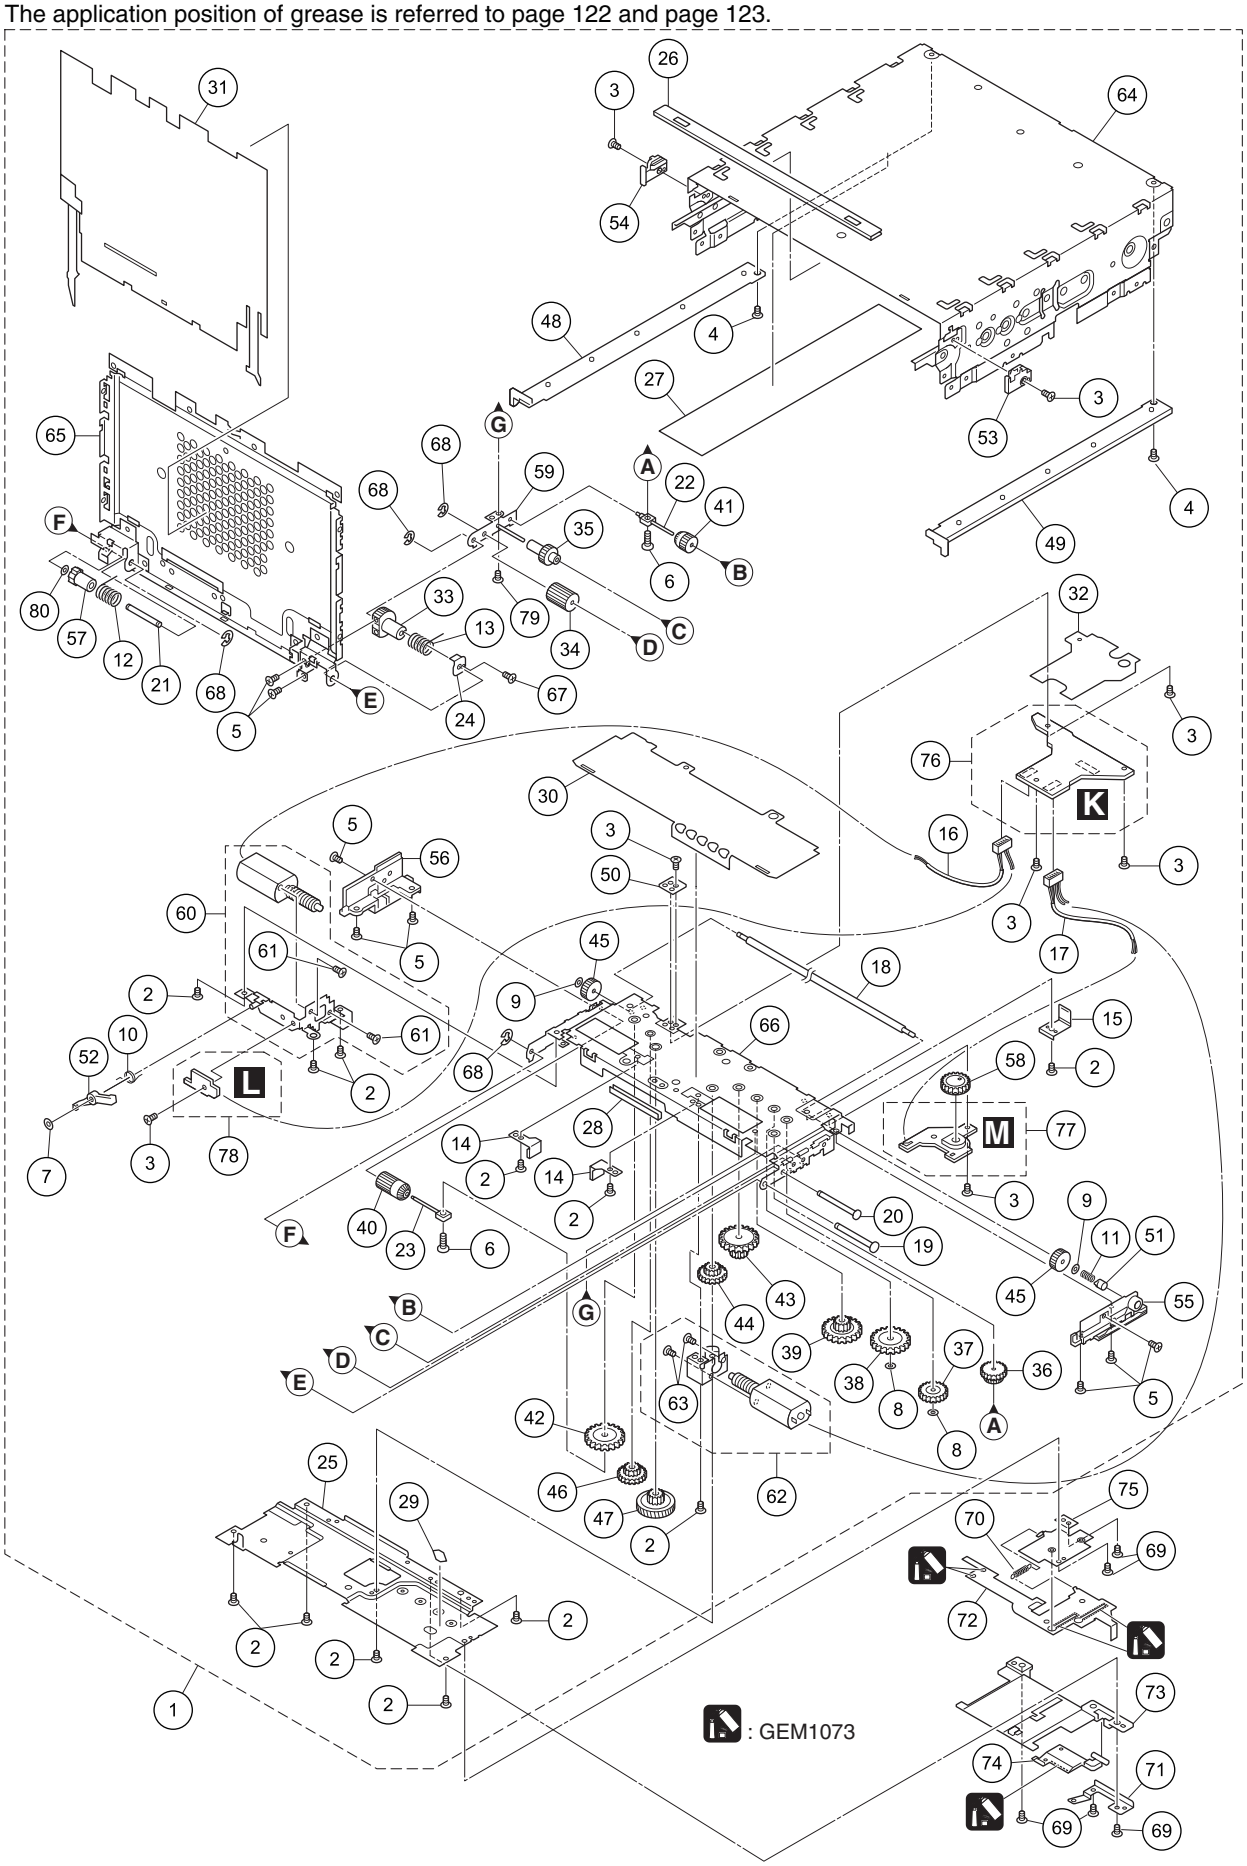

EXTERIOR(4) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Drive Unit	CXC9160
	2	Screw(M2 x 2)	CBA2129
	3	Screw(M2 x 1.5)	CBA1615
	4	Screw(M2 x 2)	CBA1872
	5	Screw(M2 x 3)	CBA1877
	6	Screw(M2.3 x 6)	CBA2027
	7	Washer	CBF1037
	8	Washer	CBF1039
	9	Washer	CBF1064
	10	Spring	CBH2906
	11	Spring	CBH2907
	12	Spring	CBH3004
	13	Spring	CBH3007
	14	Spring	CBL1723
	15	Spring	CBL1734
	16	Cord	CDE8127
	17	Cord	CDE8128
	18	Shaft	CLA4651
	19	Shaft	CLA4661
	20	Shaft	CLA4662
	21	Shaft	CLA4666
	22	Shaft	CLA4814
	23	Shaft	CLA4821
	24	Holder	CND3245
	25	Cover	CND3252
	26	Sheet	CNN2791
	27	Sheet	CNN1056
	28	Sheet	CNN1065
	29	Insulator	CNN1068
	30	Sheet	CNN1349
	31	Insulator	CNN1583
	32	Insulator	CNN2168
	33	Gear	CNR1855
	34	Gear	CNR1856
	35	Gear	CNR1857
	36	Gear	CNR1859
	37	Gear	CNR1860
	38	Gear	CNR1861
	39	Gear	CNR1862
	40	Gear	CNR1864
	41	Gear	CNR1925
	42	Gear	CNR1926
	43	Gear	CNV8980
	44	Gear	CNV8981
	45	Gear	CNV8983
	46	Gear	CNW2004
	47	Gear	CNW2005
	48	Rack	CNV8995
	49	Rack	CNV8996
	50	Guide	CNV8999
	51	Lever	CNV9000
	52	Arm	CNV9001
	53	Guide	CNV9003
	54	Guide	CNV9004
	55	Guide	CNV9534
	56	Guide	CNV9535
	57	Shaft	CLA4665
	58	Gear	CNW1055
	59	Holder Unit	CXC6145
	60	Motor Unit(SLIDE)	CXC6638
	61	Screw	JGZ20P025FTC
	62	Motor Unit(ANGLE)	CXC6639
	63	Screw	JGZ20P025FTC
	64	Chassis Unit	CXC7638
	65	Case Unit	CXC7640
	66	Frame Unit	CXC9184
	67	Screw	JFZ17P025FTC
	68	Washer	YE15FTC
	69	Screw(M2 x 3)	CBA1877
	70	Spring	CBH2750
	71	Spring	CBL1766
	72	Lever	CND4077
	73	Cover	CNV9643
	74	Arm	CNV9644
	75	Bracket Unit	CXC7978
*	76	Main PCB Unit	EWX1005
*	77	Volume PCB Unit	EWX1006
*	78	Switch PCB Unit	EWX1007
	79	Screw(M2 x 2)	CBA1955
	80	Spacer	CNN2051

9.6 DVD MECHANISM MODULE

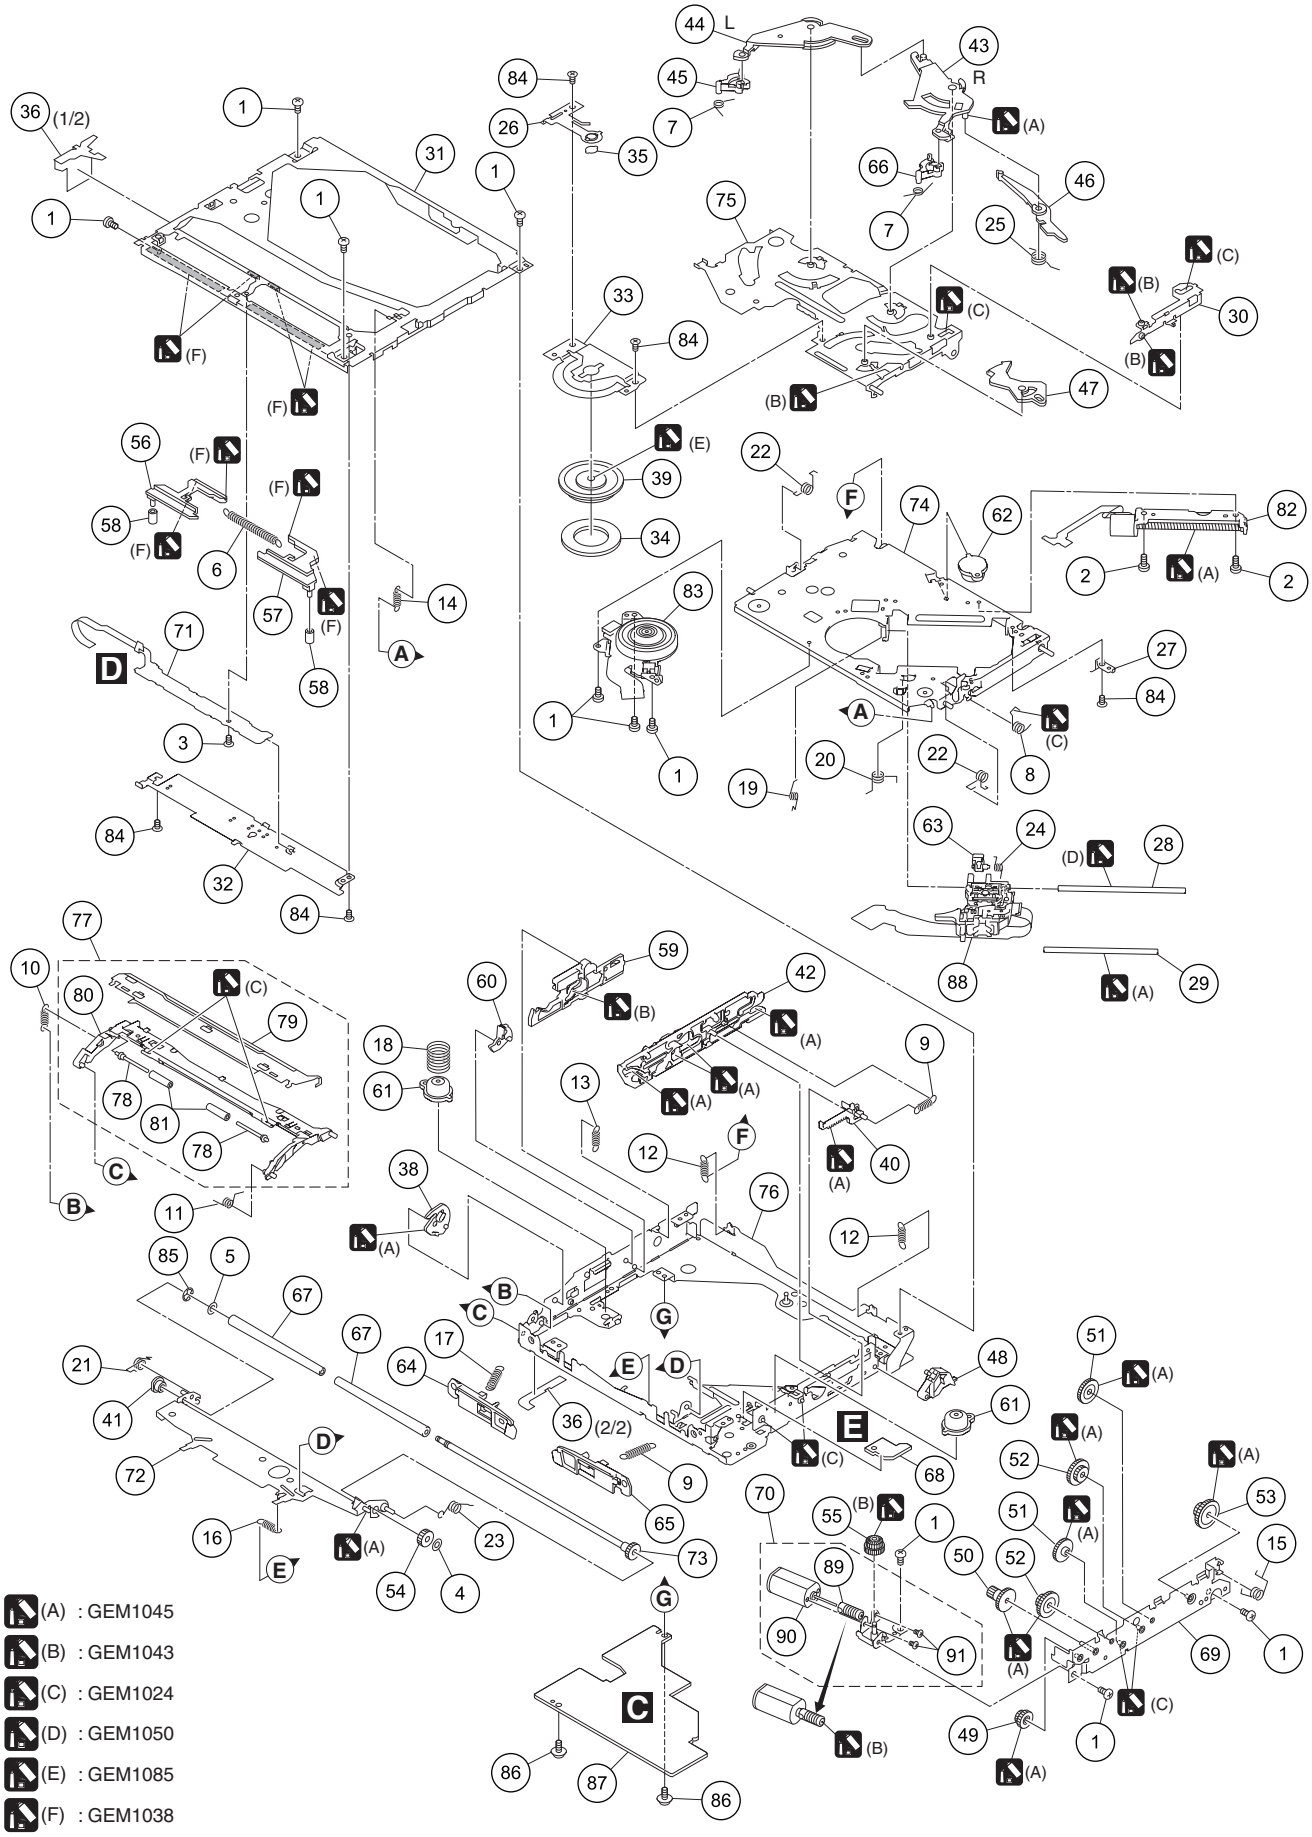

DVD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ20P020FTC
	2	Screw	BMZ20P025FNI
	3	Screw	CBA1787
	4	Washer	CBF1038
	5	Washer	CBF1064
	6	Spring	CBH2589
	7	Spring	CBH2590
	8	Spring	CBH2592
	9	Spring	CBH2593
	10	Spring	CBH2596
	11	Spring	CBH2597
	12	Spring	CBH2599
	13	Spring	CBH2600
	14	Spring	CBH2601
	15	Spring	CBH2604
	16	Spring	CBH2605
	17	Spring	CBH2710
	18	Spring	CBH2711
	19	Spring	CBH2890
	20	Spring	CBH2935
	21	Spring	CBH3022
	22	Spring	CBH3023
	23	Spring	CBH3024
	24	Spring	CBH3025
	25	Spring	CBH3031
	26	Spring	CBL1689
	27	Spring	CBL1726
	28	Shaft	CLA4918
	29	Shaft	CLA4919
	30	Lever	CNC9933
	31	Frame	CND2250
	32	Holder	CND2251
	33	Holder	CND5006
	34	Sheet	CNM6883
	35	Sheet	CNM9407
	36	Sheet	CNM9658
	37	•••••	
	38	Cam	CNV7156
	39	Clamper	CNV7158
	40	Rack	CNV7175
	41	Collar	CNV8845
	42	Lever	CNV8865
	43	Arm	CNV8867
	44	Arm	CNV8868
	45	Arm	CNV8870
	46	Arm	CNV8871
	47	Arm	CNV8872
	48	Arm	CNV8873
	49	Gear	CNV8874
	50	Gear	CNV8875
	51	Gear	CNV8876
	52	Gear	CNV8877
	53	Gear	CNV8878
	54	Gear	CNV8879
	55	Gear	CNV8880
	56	Lever	CNV8903
	57	Lever	CNV8904
	58	Roller	CNV8905
	59	Lever	CNV8908
	60	Arm	CNV8909
	61	Damper	CNV9061
	62	Damper	CNV9062
	63	Rack	CNV9063
	64	Arm	CNV9116
	65	Arm	CNV9117
	66	Arm	CNV9577
	67	Roller	CNW1816
	68	Compound Unit(B)	CWX3559
	69	Bracket Unit	CXB8685
	70	Motor Unit(LOAD)(M1)	CXC4912
	71	Compound Unit(A)	CWX3864
	72	Arm Unit	CXC5486
	73	Roller Unit	CXC5708
	74	Chassis Unit	CXC6443
	75	Arm Unit	CXC7872
	76	Frame Unit	CXE2486
	77	Guide Unit	CXE2585
	78	Shaft	CLA4771
	79	Holder	CND5456
	80	Guide	CNV9569
	81	Collar	CNV9570
	82	Motor(STEPPING)(M2)	CXM1364
	83	Motor(SPDL)(M3)	CXM1405
	84	Screw	JFZ20P018FTC
	85	Washer	YE20FTC
	86	Screw	IMS20P030FTC
	87	DVD Core Unit(MS7)	YWX5010
	88	Pickup Unit(Service)	CXX2558
	89	Gear	CNV8913
	90	Motor	CXM1321
	91	Screw	JFZ14P020FTC

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

H:AVH-P5200BT/XNUC
I:AVH-P5250BT/XNRD
B:AVH-P5200DVD/XNUC
C:AVH-P5250DVD/XNRC
D:AVH-P5250DVD/XNRD
E:AVH-P5250DVD/XNRI
Unit Number : CXX2838(H)
Unit Number : CXX2839(I)
Unit Name : DVD Amp Unit(Service)
Unit Number : CWN4979(B)
Unit Number : CWN4980(C)
Unit Number : CWN4981(D)
Unit Number : CWN4982(E)
Unit Name : DVD Amp Unit
Unit Number : CWN3129(H,B)
Unit Number : CWN3130(I,C,D,E)
Unit Name : Tuner BOX Unit
Unit Number : CWN4996
Unit Name : Keyboard Unit
Unit Number : CXX2841(H,I)
Unit Name : Monitor Unit(Service)
Unit Number : CWN4992(B,C,D,E)
Unit Name : Monitor Unit
Unit Number : EWM5101
Unit Name : Main PCB Unit
Unit Number :
Unit Name : Switch PCB Unit
Unit Number :
Unit Name : Volume PCB Unit
Unit Number : YWX5010
Unit Name : DVD Core Unit(MS7)
Unit Number : CWX3864
Unit Name : Compound Unit(A)
Unit Number : CWX3559
Unit Name : Compound Unit(B)

Circuit Symbol and No. **Part No.**

A

Unit Number : CXX2838(H)
Unit Number : CXX2839(I)
Unit Name : DVD Amp Unit(Service)
Unit Number : CWN4979(B)
Unit Number : CWN4980(C)
Unit Number : CWN4981(D)
Unit Number : CWN4982(E)
Unit Name : DVD Amp Unit

MISCELLANEOUS

IC 151	(A,128,158) IC	PA2030A
IC 201	(B,118,123) IC	PML020A
IC 251	(B,66,137) IC	BH7649KS2
IC 301	(B,30,156) IC	HA12241FP
IC 351	(A,74,150) IC	NJM2138V
IC 481	(B,60,172) L-MOS And Gate(I,C,D,E)	TC7SET08FUS1
IC 511	(A,82,49) IC	BH2227AFV
IC 521	(A,118,72) IC	R5523N001B
IC 522	(A,93,49) IC	TC7MBL6126SFK
IC 601	(A,130,109) IC	S-80827CNNB-B8M
IC 602	(A,151,94) IC(H,B)	PE5721A8
	(A,151,94) IC(I,C,D,E)	PE5723A8
IC 801	(A,85,80) IC	MN2DS0018MAUB
IC 802	(A,96,64) Logic IC	TC7SZU04FU
IC 901	(B,72,82) SDRAM(64M)	K4S641632N-LC75
IC 921	(B,109,82) Flash ROM Unit	CWW2021
IC 922	(B,109,95) Flash ROM Unit	CWW2020
IC 923	(B,107,69) IC	TC74LCX16373FT
IC 924	(B,108,60) IC	TC7SZ08FU
IC 941	(A,109,98) D/A Converter	PCM1753DBQ
IC 951	(A,107,64) IC	341S2162
IC 1001	(B,158,131) IC	S-812C33AUA-C2N
IC 1201	(B,88,130) IC	BA00DD0WHFP
IC 1221	(B,93,111) IC	S-1200B50-M5
IC 1501	(B,27,55) IC	BD9017KV
IC 1621	(B,97,120) IC	TK11840L
IC 1761	(B,53,66) IC	PQ012GN01Z

Circuit Symbol and No.		Part No.
IC 1771	(B,49,49) IC	NJM2855DL1-33
IC 1781	(B,116,54) Regulator IC(H,I)	S-1132B33-U5
IC 2001	(A,17,138) IC	TC74VHCT08AFTS1
Q 121	(A,141,122) Transistor	LTC114EUB
Q 122	(B,148,128) Transistor	UMX1N
Q 123	(A,159,120) Transistor	UMT1N
Q 124	(A,148,125) Transistor	LTC114EUB
Q 125	(B,148,133) Transistor	LSC4081UB
Q 153	(B,152,119) Transistor	UMH1N
Q 154	(B,146,124) Transistor	LSC4081UB
Q 155	(A,115,145) Transistor	UMD3N
Q 161	(B,140,118) Chip Digital Transistor	LTA124EUB
Q 162	(B,140,124) Chip Digital Transistor	LTA124EUB
Q 163	(B,143,118) Transistor	2SC4116
Q 164	(A,136,129) Transistor	UMD2N
Q 301	(B,25,153) Transistor	UMF23N
Q 401	(B,83,153) Transistor	RT3C99M
Q 441	(A,100,142) Transistor	RT3C99M
Q 442	(A,100,146) Transistor	RT3C99M
Q 443	(A,100,137) Transistor	RT3C99M
Q 481	(B,62,175) Transistor(I,C,D,E)	LSA1576UB
Q 541	(A,93,31) Transistor	LSA1576UB
Q 542	(A,93,39) Transistor	LSA1576UB
Q 543	(A,99,31) Transistor	UMF23N
Q 544	(A,93,35) Transistor	UMF23N
Q 545	(A,86,31) Transistor	LTA114EUB
Q 546	(A,85,37) Transistor	2SD2114K
Q 601	(B,144,90) Transistor	LSC4081UB
Q 751	(B,50,85) Transistor	UMD3N
Q 752	(B,55,85) Transistor	RT3C99M
Q 781	(B,28,145) Transistor(H,B)	UMH1N
Q 782	(A,26,141) Transistor(H,B)	UMH1N
Q 941	(B,88,103) Transistor	UMD3N
Q 942	(B,93,101) Transistor	RT3C99M
Q 951	(A,107,58) Transistor	UMD22N
Q 961	(B,47,37) Chip Transistor	2SB1689
Q 981	(B,47,125) Transistor	FMG12
Q 982	(B,43,123) Transistor	UMF5N
Q 983	(B,41,123) Transistor	UMF5N
Q 1001	(B,165,131) Transistor	2SB1184F5
Q 1002	(A,161,157) Transistor	2SD1664
Q 1101	(A,26,163) Transistor	2SA2060
Q 1102	(B,29,164) Transistor	LSC4081UB
Q 1501	(B,31,69) FET	HAT2210RJ
Q 1502	(B,14,51) FET	HAT2210RJ
Q 1621	(A,93,125) Transistor	LSC4081UB
Q 1622	(A,95,118) FET	RSF014N03
Q 1623	(A,103,114) Transistor	LTC143EUB
Q 1741	(A,103,161) Transistor	UMF5N
Q 1742	(A,105,154) Transistor	LTC114EUB
Q 1743	(A,108,154) Transistor	LTC114EUB
Q 1744	(B,103,164) Transistor	2SD1760F5
D 101	(A,154,153) Diode	1SR154-400
D 102	(A,154,157) Diode	1SR154-400
D 121	(A,139,122) Diode	1SS352
D 122	(B,144,134) Diode	HZU7L(A1)
D 123	(B,152,134) Diode	HZU7L(C3)
D 124	(A,157,125) Diode	DAN202U
D 125	(A,163,125) Diode	DAN202U
D 126	(A,146,122) Diode	RKZ5.6KG(B2)

Circuit Symbol and No.		Part No.
D 127	(B,150,134) Diode	RKZ20KG(B2)
D 151	(B,134,144) Diode	1SR154-400
D 152	(B,137,144) Diode	1SR154-400
D 153	(B,143,124) Diode	DAN202U
D 154	(B,139,136) Diode	1SS352
D 155	(B,148,119) Diode	1SS352
D 156	(B,141,136) Diode	RKZ8.2KG(B2)
D 161	(A,135,133) Diode	DAN202U
D 331	(A,60,158) Diode	DZ2S068C
D 332	(A,62,158) Diode	DZ2S068C
D 333	(A,57,158) Diode	DZ2S068C
D 334	(A,59,158) Diode	DZ2S068C
D 361	(A,78,144) Diode	RKZ2.4KG(B)
D 402	(B,95,159) Diode	DZ2S068C
D 403	(B,95,160) Diode	DZ2S068C
D 407	(A,100,158) Diode(H,I)	DZ2S068C
D 408	(A,100,159) Diode(H,I)	DZ2S068C
D 481	(B,56,175) Diode(I,C,D,E)	DZ2S068C
D 551	(A,99,38) Diode	RKZ3.9KG(B2)
D 566	(A,78,36) Diode	DZ2S068C
D 601	(A,134,109) Diode	1SS352
D 602	(B,148,111) Diode	RB751V-40
D 603	(B,150,111) Diode	RB501V-40
D 781	(A,32,145) Diode(H,B)	RSB6R8F2
D 782	(A,34,145) Diode(H,B)	RSB6R8F2
D 783	(A,34,158) Diode	RSB6R8F2
D 784	(A,37,145) Diode	RSB6R8F2
D 785	(A,40,145) Diode	RSB6R8F2
D 786	(A,43,145) Diode	RSB6R8F2
D 787	(B,41,155) Diode	DZ2S068C
D 788	(B,36,155) Diode	DZ2S068C
D 981	(B,50,120) Diode	1SS352
D 1001	(A,167,158) Diode	RB160M-30
D 1002	(A,163,152) Diode	RKZ18KG(B2)
D 1501	(B,35,60) Diode	RB551V-30
D 1502	(B,17,57) Diode	RB551V-30
D 1503	(B,23,115) Diode	RB050LA-30
D 1504	(B,20,115) Diode	RB050LA-30
D 1621	(A,99,123) Diode	HZU13(B1)
D 1622	(A,92,119) Diode	RB551V-30
D 1741	(A,105,157) Diode	RKZ6.8KG(B2)
D 1742	(A,108,157) Diode	RKZ8.2KG(B2)
D 1743	(B,94,165) Diode	RKZ9.1KG(B2)
D 1771	(B,53,43) Diode	1SR154-400
D 1781	(B,117,47) Diode(H,I)	1SR154-400
L 121	(A,163,122) Chip Coil	BTH1101
L 122	(A,154,122) Chip Coil	BTH1101
L 123	(A,144,122) Inductor	CTF1295
L 301	(B,34,156) Inductor	CTF1389
L 351	(A,71,145) Inductor	CTF1379
L 481	(B,57,172) Inductor(I,C,D,E)	CTF1389
L 482	(B,62,171) Inductor(I,C,D,E)	CTF1379
L 521	(A,89,51) Inductor	CTF1713
L 781	(A,32,157) Inductor	CTF1748
L 801	(A,69,83) Inductor	CTF1743
L 802	(A,74,64) Inductor	CTF1778
L 803	(A,74,95) Chip Ferrite Bead	DTL1107
L 901	(B,70,67) Inductor	CTF1473
L 921	(B,95,88) Inductor	CTF1473
L 922	(B,97,103) Inductor	CTF1473

Circuit Symbol and No.		Part No.
L 923	(B,111,58) Inductor	CTF1473
L 981	(B,44,117) Inductor	CTF1473
L 1501	(A,27,60) Choke Coil 6.8 uH	CTH1434
L 1502	(A,27,46) Inductor	CTH1253
L 1503	(B,27,74) Inductor	CTF1661
L 1504	(B,27,68) Inductor	CTF1661
L 1505	(B,10,56) Inductor	CTF1661
L 1506	(B,9,51) Inductor	CTF1661
L 1507	(A,14,107) Choke Coil 6.8 uH	CTH1434
L 1621	(A,94,113) Inductor	ATH7061
L 1622	(A,98,113) Inductor	CTF1735
L 1731	(A,51,117) Inductor	CTH1262
X 601	(A,130,98) Oscillator 3.932 16 MHz	CSS1790
X 801	(A,76,99) Oscillator 27.000 MHz	CSS1791
X 802	(A,98,59) Oscillator 48.000 MHz	CSS1793
⚠P331	(A,53,159) Poly Switch	MINISMDC075F/24
⚠P402	(A,85,149) Poly Switch	MINISMDC075F/24
⚠P441	(A,85,142) Poly Switch	MINISMDC075F/24
⚠P781	(A,49,159) Fuse 0.5 A	CEK1278
⚠P1101	(A,26,157) Fuse 1.25 A	CEK1281
⚠P1501	(A,23,71) Fuse 6.3 A	CEK1262
⚠P1611	(A,57,54) Fuse 2.5 A	CEK1285
⚠P1651	(A,54,52) Fuse 1.75 A	CEK1283
⚠P1711	(A,57,57) Fuse 1.75 A	CEK1283
⚠P1721	(A,53,59) Fuse 2.5 A	CEK1285
⚠P1731	(A,59,114) Fuse 1.75 A	CEK1283
⚠P1741	(A,93,166) Fuse 0.5 A	CEK1278
⚠P2001	(A,21,132) Fuse 2 A	CEK1284
BZ601	(A,123,36) Buzzer	CPV1063
CN101	(A,159,165) Plug	CKM1516
CN331	(A,67,172) Connector	CKS4497
CN401	(A,92,150) Connector	CKS5492
CN561	(B,87,55) Connector	CKS5858
CN751	(A,48,88) Connector	CKS6025
CN781	(A,38,152) Connector	CKS4674
CN795	(A,119,53) Connector(H,I)	CKS3878
CN961	(A,48,22) Connector	CKS6180
CN1741	(A,98,165) Connector	CKS4822
CN2001	(A,17,125) Connector	CKS5543
CN2021	(A,38,135) Connector	CKS5732
JA301	(A,17,164) Connector	CKS3414
JA481	(A,45,165) Jack(I,C,D,E)	CKN1050

RESISTORS

R 121	(A,137,121)	RS1/16SS103J
R 122	(A,159,126)	RS1/16SS473J
R 123	(B,145,132)	RS1/16SS103J
R 124	(B,154,132)	RS1/16SS104J
R 125	(A,161,120)	RS1/16SS473J
R 126	(B,145,134)	RS1/16SS473J
R 127	(B,154,134)	RS1/16SS473J
R 128	(A,155,120)	RS1/16SS473J
R 130	(A,160,126)	RS1/16SS473J
R 131	(A,161,122)	RS1/16SS472J
R 132	(A,150,124)	RS1/16SS104J
R 133	(B,145,136)	RS1/16SS472J
R 134	(A,157,122)	RS1/16SS103J
R 135	(A,144,119)	RS1/16SS103J
R 136	(A,166,122)	RS1/16SS153J
R 139	(B,147,136)	RS1/16SS103J
R 140	(B,146,136)	RS1/16SS103J
R 152	(B,139,132)	RS1/16SS102J
R 153	(B,152,121)	RS1/16SS683J
R 154	(B,150,121)	RS1/16SS152J
R 155	(B,150,119)	RS1/16SS683J
R 156	(B,152,122)	RS1/16SS101J
R 157	(B,146,121)	RS1/16SS103J
R 158	(B,141,129)	RS1/16SS104J
R 159	(B,142,129)	RS1/16SS473J
R 160	(A,117,145)	RS1/16SS103J
R 161	(A,112,145)	RS1/16SS473J
R 162	(B,142,121)	RS1/16SS473J
R 163	(B,144,121)	RS1/16SS472J
R 201	(B,105,113)	RS1/16SS0R0J
R 202	(A,130,120)	RS1/16SS182J
R 203	(A,127,136)	RS1/16SS182J
R 204	(A,129,120)	RS1/16SS272J
R 205	(A,126,136)	RS1/16SS272J
R 206	(A,131,123)	RS1/16SS182J
R 207	(A,129,136)	RS1/16SS182J
R 208	(A,132,123)	RS1/16SS272J
R 209	(A,130,136)	RS1/16SS272J
R 223	(B,112,133)	RS1/16SS473J
R 227	(A,109,114)	RS1/16SS272J
R 228	(A,109,113)	RS1/16SS272J
R 229	(A,111,114)	RS1/16SS562J
R 252	(B,78,145)	RS1/16SS0R0J
R 253	(B,63,127)	RS1/16SS471J
R 254	(B,62,127)	RS1/16SS471J
R 255	(B,60,127)	RS1/16SS471J
R 256	(B,78,138)	RS1/16SS471J
R 257	(B,78,139)	RS1/16SS471J
R 259	(A,65,148)	RS1/16SS75R0F
R 260	(B,78,132)	RS1/16SS471J
R 261	(B,78,133)	RS1/16SS471J
R 262	(B,58,129)	RS1/16SS471J
R 263	(B,58,131)	RS1/16SS471J
R 264	(B,58,132)	RS1/16SS471J
R 265	(B,78,136)	RS1/16SS471J
R 266	(B,78,135)	RS1/16SS471J
R 267	(A,62,144)	RS1/16SS0R0J
R 301	(B,24,150)	RS1/16SS562J
R 302	(B,26,150)	RS1/16SS332J
R 303	(B,26,163)	RS1/16SS150J
R 304	(B,26,161)	RS1/16SS470J
R 305	(B,27,163)	RS1/16SS101J
R 306	(B,26,159)	RS1/16SS101J
R 307	(B,30,161)	RS1/16SS102J
R 308	(A,30,115)	RS1/16SS102J
R 309	(B,19,137)	RS1/16SS181J
R 310	(B,23,150)	RS1/16SS181J
R 311	(B,25,159)	RS1/16SS222J
R 312	(B,22,150)	RS1/16SS223J
R 313	(B,20,137)	RS1/16SS223J
R 314	(B,21,137)	RS1/16SS102J
R 315	(B,21,150)	RS1/16SS102J
R 332	(A,59,162)	RS1/16SS471J
R 333	(A,57,162)	RS1/16SS471J
R 334	(A,62,162)	RS1/16SS102J

Circuit Symbol and No.		Part No.
R 335	(A,60,162)	RS1/16SS102J
R 351	(A,77,155)	RS1/16SS472J
R 352	(A,78,155)	RS1/16SS472J
R 353	(A,67,148)	RS1/16SS273J
R 354	(A,69,155)	RS1/16SS472J
R 355	(A,80,155)	RS1/16SS472J
R 356	(A,79,155)	RS1/16SS472J
R 357	(A,80,148)	RS1/16SS472J
R 358	(A,80,151)	RS1/16SS472J
R 359	(A,81,155)	RS1/16SS472J
R 360	(A,75,155)	RS1/16SS472J
R 361	(A,74,144)	RS1/16SS561J
R 364	(A,72,155)	RS1/16SS472J
R 365	(A,67,155)	RS1/16SS472J
R 366	(A,65,155)	RS1/16SS472J
R 367	(A,68,151)	RS1/16SS472J
R 368	(A,68,155)	RS1/16SS273J
R 369	(A,77,153)	RS1/16SS101J
R 370	(A,80,161)	RS1/16SS221J
R 371	(A,77,161)	RS1/16SS221J
R 372	(A,70,161)	RS1/16SS221J
R 373	(A,67,161)	RS1/16SS750J
R 375	(A,71,153)	RS1/16SS101J
R 376	(A,71,146)	RS1/16SS101J
R 377	(A,79,147)	RS1/16SS101J
R 378	(A,70,155)	RS1/16SS472J
R 401	(B,99,160)	RS1/16SS102J
R 402	(B,99,159)	RS1/16SS102J
R 403	(B,81,151)	RS1/16SS821J
R 404	(B,81,154)	RS1/16SS821J
R 405	(B,86,152)	RS1/16SS223J
R 406	(B,86,154)	RS1/16SS223J
R 407	(B,96,154)	RS1/16SS750J
R 408	(B,96,152)	RS1/16SS750J
R 441	(B,99,139)	RS1/16SS390J
R 442	(B,99,136)	RS1/16SS390J
R 443	(B,99,144)	RS1/16SS390J
R 444	(B,99,141)	RS1/16SS390J
R 445	(B,99,134)	RS1/16SS390J
R 446	(B,99,131)	RS1/16SS390J
R 447	(B,99,138)	RS1/16SS223J
R 448	(B,99,137)	RS1/16SS223J
R 449	(B,99,143)	RS1/16SS223J
R 450	(B,99,142)	RS1/16SS223J
R 451	(B,99,133)	RS1/16SS223J
R 452	(B,99,132)	RS1/16SS223J
R 453	(B,84,151)	RS1/16SS472J
R 454	(B,82,151)	RS1/16SS472J
R 455	(A,101,139)	RS1/16SS472J
R 456	(A,99,139)	RS1/16SS472J
R 457	(A,101,144)	RS1/16SS472J
R 458	(A,99,144)	RS1/16SS472J
R 459	(A,99,149)	RS1/16SS472J
R 460	(A,99,148)	RS1/16SS472J
R 461	(B,53,130)	RS1/16SS223J
R 462	(B,53,133)	RS1/16SS223J
R 481	(B,60,168)(I,C,D,E)	RS1/16SS0R0J
R 482	(B,60,169)(I,C,D,E)	RS1/16SS473J
R 483	(B,57,174)(I,C,D,E)	RS1/16SS121J
R 484	(B,62,172)(I,C,D,E)	RS1/16SS104J
R 485	(B,64,172)(I,C,D,E)	RS1/16SS103J
R 503	(A,86,54)	RS1/16SS333J
R 511	(A,89,46)	RS1/10SR0R0J
R 522	(A,119,66)	RS1/16SS472J
R 541	(A,95,31)	RS1/16SS104J
R 542	(A,96,39)	RS1/16SS104J
R 543	(A,97,31)	RS1/16SS473J
R 544	(A,97,39)	RS1/16SS473J
R 545	(A,100,34)	RS1/16SS104J
R 546	(A,90,36)	RS1/16SS104J
R 547	(A,98,34)	RS1/16SS473J
R 548	(A,90,34)	RS1/16SS473J
R 549	(A,84,34)	RS1/16SS103J
R 550	(A,90,38)	RS1/16SS472J
R 551	(A,88,33)	RS1/16SS102J
R 552	(A,100,36)	RS1/16SS152J
R 553	(A,102,36)	RS1/16SS122J
R 554	(A,102,34)	RS1/16SS333J
R 555	(A,102,32)	RS1/16SS104J
R 602	(B,164,95)	RS1/16SS0R0J
R 603	(A,130,87)	RS1/16SS102J
R 609	(A,133,108)	RS1/16SS104J
R 611	(A,135,88)	RS1/16SS102J
R 612	(B,138,95)	RS1/16SS104J
R 614	(B,138,96)	RS1/16SS104J
R 615	(A,135,106)	RS1/16SS0R0J
R 618	(A,135,82)	RS1/16SS473J
R 619	(B,138,97)	RS1/16SS102J
R 620	(B,141,95)	RS1/16SS473J
R 623	(B,139,110)	RS1/16SS472J
R 624	(B,138,110)	RS1/16SS472J
R 625	(A,139,111)	RS1/16SS471J
R 626	(A,140,111)	RS1/16SS471J
R 627	(B,141,85)	RS1/16SS473J
R 628	(B,142,82)	RS1/16SS473J
R 629	(B,142,85)	RS1/16SS473J
R 630	(B,143,85)	RS1/16SS473J
R 631	(B,144,103)	RS1/16SS152J
R 632	(B,151,85)	RS1/16SS182J
R 633	(B,152,85)	RS1/16SS182J
R 635	(B,141,101)	RS1/16SS104J
R 636	(B,161,110)	RS1/16SS104J
R 637	(B,168,88)	RS1/16SS473J
R 638	(B,168,87)	RS1/16SS473J
R 639	(B,141,91)	RS1/16SS104J
R 640	(B,141,90)	RS1/16SS473J
R 641	(B,141,89)	RS1/16SS473J
R 642	(B,129,88)	RS1/16SS473J
R 643	(A,133,97)	RS1/16SS100J
R 645	(A,124,86)	RS1/16SS472J
R 646	(B,138,86)	RS1/16SS472J
R 647	(B,138,85)	RS1/16SS472J
R 648	(B,148,103)(B,C,D,E)	RS1/16SS473J
R 649	(B,149,103)(I,C,D)	RS1/16SS473J
R 650	(B,150,103)(I,D,E)	RS1/16SS473J
R 655	(A,129,75)	RS1/16SS333J
R 660	(A,154,110)	RS1/16SS473J
R 661	(B,154,85)(H,I)	RS1/16SS473J
R 665	(B,155,85)	RS1/16SS473J
R 667	(B,168,86)(H,B)	RS1/16SS223J

Circuit Symbol and No.		Part No.
R 668	(B,164,98)	RS1/16SS104J
R 671	(A,160,111)	RS1/16SS0R0J
R 673	(A,159,111)	RS1/16SS0R0J
R 675	(A,144,110)	RS1/16SS101J
R 679	(B,152,82)	RS1/16SS221J
R 680	(B,151,82)	RS1/16SS221J
R 681	(A,136,103)	RS1/16SS101J
R 684	(B,141,94)	RS1/16SS104J
R 685	(B,141,93)	RS1/16SS104J
R 688	(B,135,92)	RS1/16SS273J
R 689	(A,135,93)	RS1/16SS0R0J
R 691	(A,135,89)	RS1/16SS473J
R 697	(A,148,78)	RS1/16SS182J
R 698	(A,149,78)	RS1/16SS182J
R 701	(A,160,78)	RS1/16SS101J
R 702	(B,156,85)	RS1/16SS473J
R 703	(A,162,78)	RS1/16SS471J
R 704	(A,167,83)	RS1/16SS471J
R 705	(B,164,102)(H,B)	RS1/16SS223J
R 706	(B,164,103)(H,B)	RS1/16SS223J
R 707	(B,164,101)(H,B)	RS1/16SS223J
R 708	(A,167,85)	RS1/16SS471J
R 709	(A,167,105)	RS1/16SS223J
R 710	(B,160,110)	RS1/16SS104J
R 711	(B,154,103)	RS1/16SS473J
R 712	(B,146,112)	RS1/16SS103J
R 713	(B,152,112)	RS1/16SS104J
R 716	(A,138,111)	RS1/16SS153J
R 717	(B,164,104)	RS1/16SS223J
R 722	(B,148,85)	RS1/16SS104J
R 723	(B,149,85)	RS1/16SS104J
R 724	(B,150,85)	RS1/16SS471J
R 729	(A,167,94)	RS1/16SS0R0J
R 730	(A,167,95)	RS1/16SS0R0J
R 734	(B,153,110)(H,I)	RS1/16SS473J
R 735	(B,154,110)(E)	RS1/16SS473J
R 736	(B,155,110)(C)	RS1/16SS473J
R 751	(B,47,86)	RS1/16SS102J
R 752	(B,50,83)	RS1/16SS471J
R 753	(A,55,82)	RS1/16SS102J
R 754	(A,55,83)	RS1/16SS221J
R 755	(A,55,84)	RS1/16SS221J
R 756	(A,55,85)	RS1/16SS221J
R 757	(A,55,86)	RS1/16SS221J
R 760	(A,55,92)	RS1/16SS0R0J
R 761	(A,55,98)(I,C,D,E)	RS1/16SS101J
R 762	(B,52,83)	RS1/16SS472J
R 763	(B,52,84)	RS1/16SS472J
R 770	(A,135,101)	RS1/10SR0R0J
R 771	(A,132,85)	RS1/10SR0R0J
R 772	(A,152,77)	RS1/10SR0R0J
R 773	(A,167,102)	RS1/10SR0R0J
R 774	(A,151,111)	RS1/10SR0R0J
R 781	(A,47,150)	RS1/16SS0R0J
R 783	(A,31,157)	RS1/16SS0R0J
R 784	(B,32,147)(H,B)	RS1/16SS0R0J
R 785	(B,27,143)(H,B)	RS1/16SS0R0J
R 786	(A,24,141)(H,B)	RS1/16SS0R0J
R 787	(A,28,142)(H,B)	RS1/16SS0R0J
R 788	(A,40,142)	RS1/16SS0R0J
R 789	(A,41,142)	RS1/16SS0R0J

Circuit Symbol and No.		Part No.
R 791	(A,42,142)	RS1/16SS0R0J
R 792	(A,46,150)(H,B)	RS1/16SS124J
R 793	(A,48,150)(H,B)	RS1/16SS124J
R 801	(A,97,95)	RS1/10SR0R0J
R 802	(A,68,98)	RS1/16SS0R0J
R 803	(A,70,79)	RS1/16SS104J
R 804	(A,67,82)	RS1/16SS101J
R 805	(A,75,97)	RS1/16SS122J
R 806	(A,77,97)	RS1/16SS105J
R 807	(A,92,59)	RS1/16SS181J
R 808	(A,81,101)	RS1/16SS101J
R 809	(A,81,100)	RS1/16SS101J
R 810	(A,81,99)	RS1/16SS101J
R 811	(A,82,97)	RS1/16SS221J
R 812	(B,90,95)	RS1/10SR24R0D
R 813	(B,92,95)	RS1/10SR24R0D
R 814	(B,93,95)	RS1/16SS153J
R 815	(B,89,95)	RS1/16SS153J
R 816	(B,84,67)	RS1/16SS103J
R 817	(B,85,67)	RS1/16SS103J
R 818	(B,86,73)	RS1/16SS103J
R 819	(B,86,67)	RS1/16SS103J
R 820	(A,90,99)	RS1/16SS1002D
R 821	(B,86,98)	RS1/16SS2000D
R 822	(A,88,99)	RS1/16SS3002D
R 823	(A,91,99)	RS1/16SS2402D
R 824	(B,89,68)	RS1/16SS103J
R 825	(B,90,69)	RS1/16SS103J
R 826	(A,113,66)	RS1/16SS104J
R 827	(A,109,71)	RS1/16SS101J
R 828	(A,104,56)	RS1/16SS221J
R 829	(B,99,57)	RS1/16SS104J
R 830	(A,107,55)	RS1/16SS221J
R 831	(B,89,76)	RS1/16SS0R0J
R 833	(B,88,73)	RS1/16SS104J
R 834	(A,91,59)	RS1/16SS181J
R 835	(B,95,77)	RS1/16SS472J
R 836	(A,106,74)	RS1/16SS104J
R 837	(A,102,69)	RS1/16SS104J
R 838	(B,95,78)	RS1/16SS102J
R 839	(B,95,79)	RS1/16SS102J
R 841	(A,95,62)	RS1/16SS105J
R 842	(A,94,62)	RS1/16SS681J
R 843	(A,102,68)	RS1/16SS221J
R 844	(A,107,77)	RS1/16SS221J
R 845	(A,111,77)	RS1/16SS104J
R 846	(A,111,71)	RS1/16SS102J
R 847	(A,103,58)	RS1/16SS103J
R 848	(A,109,77)	RS1/10SR472J
R 849	(A,77,61)	RS1/16SS220J
R 850	(A,75,64)	RS1/16SS220J
R 851	(A,73,64)	RS1/16SS220J
R 852	(A,70,67)	RS1/16SS101J
R 853	(A,76,61)	RS1/16SS220J
R 855	(A,72,64)	RS1/16SS220J
R 856	(A,74,62)	RS1/16SS391J
R 866	(A,102,58)	RS1/16SS103J
R 867	(B,92,68)	RS1/16SS104J
R 868	(A,70,68)	RS1/16SS101J
R 871	(A,66,94)	RS1/16SS0R0J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 872	(B,99,73)	RS1/16SS473J	R 991	(B,41,120)	RS1/16SS103J
R 873	(B,97,73)	RS1/16SS101J	R 992	(B,42,120)	RS1/16SS103J
R 874	(A,70,69)	RS1/16SS101J	R 993	(B,40,120)	RS1/16SS103J
R 875	(A,70,70)	RS1/16SS101J	R 1001	(B,160,135)	RS1/16SS391J
R 901	(B,81,90)	RAB4CQ560J	R 1002	(A,166,155)	RS1/10SR2R2J
R 902	(B,81,85)	RAB4CQ560J	R 1003	(A,166,152)	RS1/10SR2R2J
R 903	(B,81,80)	RAB4CQ560J	R 1004	(A,168,155)	RS1/10SR2R2J
R 904	(B,81,77)	RAB4CQ560J	R 1005	(A,168,152)	RS1/10SR2R2J
R 905	(B,81,74)	RAB4CQ560J	R 1006	(A,165,156)	RS1/16SS911J
R 906	(B,63,90)	RAB4CQ560J	R 1101	(A,26,159)	RS1/16SS103J
R 907	(B,63,85)	RAB4CQ560J	R 1102	(A,29,158)	RS1/4SA391J
R 908	(B,63,77)	RAB4CQ560J	R 1103	(B,27,167)	RS1/16SS103J
R 909	(B,63,74)	RAB4CQ560J	R 1104	(B,27,168)	RS1/16SS562J
R 910	(B,63,81)	RS1/16SS560J	R 1105	(A,32,162)	RS1/4SA391J
R 911	(B,63,80)	RS1/16SS0R0J	R 1201	(B,82,128)	RS1/16SS5602D
R 924	(B,122,81)	RS1/16SS221J	R 1202	(B,82,130)	RS1/16SS0R0J
R 925	(B,97,77)	RS1/16SS104J	R 1203	(B,82,132)	RS1/16SS1002D
R 926	(B,122,94)	RS1/16SS221J	R 1204	(B,94,128)	RS1/16SS102J
R 927	(B,97,97)	RS1/16SS104J	R 1205	(B,94,130)	RS1/16SS683J
R 929	(B,97,90)	RS1/16SS472J	R 1503	(B,35,52)	RS1/16SS221J
R 930	(B,105,61)	RS1/16SS331J	R 1504	(B,37,53)	RS1/16SS2202D
R 933	(A,91,63)	RAB4CQ151J	R 1505	(B,35,53)	RS1/16SS3302D
R 934	(A,88,64)	RAB4CQ151J	R 1506	(B,35,54)	RS1/16SS1002D
R 935	(A,84,63)	RAB4CQ151J	R 1507	(B,35,51)	RS1/16SS103J
R 936	(A,81,63)	RAB4CQ151J	R 1508	(B,30,63)	RS1/10SR2R2J
R 937	(A,70,71)	RS1/16SS151J	R 1509	(B,31,63)	RS1/10SR6R8J
R 941	(A,104,97)	RS1/16SS821J	R 1512	(B,27,48)	RS1/16SS104J
R 942	(A,104,96)	RS1/16SS821J	R 1513	(B,26,48)	RS1/16SS102J
R 943	(A,96,99)	RS1/16SS104J	R 1514	(B,22,47)	RS1/16SS822J
R 944	(A,96,97)	RS1/16SS104J	R 1515	(B,18,54)	RS1/10SR2R2J
R 945	(A,103,101)	RS1/16SS0R0J	R 1516	(B,13,57)	RS1/10SR6R8J
R 946	(B,84,120)	RS1/16SS102J	R 1517	(B,20,48)	RS1/16SS8202D
R 947	(B,91,103)	RS1/16SS472J	R 1518	(B,22,48)	RS1/16SS1001D
R 948	(B,93,103)	RS1/16SS472J	R 1519	(B,22,49)	RS1/16SS331J
R 952	(A,112,63)	RS1/16SS102J	R 1520	(B,22,50)	RS1/16SS9101D
R 953	(A,103,65)	RS1/16SS101J	R 1522	(B,35,63)	RS1/10SR2R2J
R 954	(A,103,64)	RS1/16SS101J	R 1523	(B,20,57)	RS1/10SR2R2J
R 955	(A,110,60)	RS1/16SS104J	R 1621	(A,96,123)	RS1/16SS681J
R 956	(A,104,61)	RS1/16SS1003F	R 1622	(B,102,123)	RS1/16SS0R0J
R 958	(A,112,65)	RS1/16SS103J	R 1623	(B,102,122)	RS1/16SS3003D
R 961	(B,45,37)	RS1/16SS103J	R 1624	(B,100,122)	RS1/16SS1102D
R 962	(B,57,33)	RS1/16SS0R0J	R 1625	(B,94,119)	RS1/16SS512J
R 963	(B,51,33)	RS1/16SS0R0J	R 1626	(B,94,118)	RS1/16SS0R0J
R 964	(B,45,33)	RS1/16SS0R0J	R 1627	(B,101,119)	RS1/16SS621J
R 965	(B,36,33)	RS1/16SS0R0J	R 1628	(A,101,112)	RS1/16SS0R0J
R 966	(B,33,33)	RS1/16SS0R0J	R 1629	(A,100,115)	RS1/10SR4701D
R 967	(B,51,37)	RS1/16SS102J	R 1661	(A,18,144)	RS1/16SS0R0J
R 968	(B,42,36)	RAB4CQ223J	R 1741	(A,106,164)	RS1/16SS271J
R 969	(B,53,36)	RAB4CQ223J	R 1742	(A,105,164)	RS1/16SS271J
R 970	(B,46,35)	RS1/16SS681J	R 1743	(A,105,166)	RS1/16SS271J
R 971	(A,61,40)	RS1/16SS101J	R 1744	(A,102,166)	RS1/16SS473J
R 972	(A,58,39)	RS1/16SS101J	R 1745	(A,102,164)	RS1/16SS103J
R 973	(A,45,40)	RS1/16SS101J	R 2001	(B,20,123)	RS1/16SS102J
R 974	(A,43,40)	RS1/16SS101J	R 2002	(B,18,123)	RS1/16SS102J
R 975	(A,58,40)	RS1/16SS220J	R 2003	(B,16,123)	RS1/16SS102J
R 981	(B,50,127)	RS1/16SS102J	R 2004	(B,13,123)	RS1/16SS102J
R 986	(B,45,127)	RS1/16SS102J	R 2005	(B,14,123)	RS1/16SS102J
R 987	(B,43,127)	RS1/16SS105J	R 2006	(B,12,123)	RS1/16SS102J
R 988	(B,41,127)	RS1/16SS105J	R 2007	(A,15,132)	RS1/16SS102J
R 990	(B,43,120)	RS1/16SS103J	R 2008	(A,16,132)	RS1/16SS102J

Circuit Symbol and No.			Part No.
R 2009	(A,17,132)		RS1/16SS102J

CAPACITORS

C 121	(A,152,126)		CKSRYB104K50
C 122	(A,142,125)		CKSRYB105K10
C 123	(A,139,125)		CKSRYB104K50
C 124	(B,144,137)		CKSRYB104K50
C 125	(A,146,125)		CKSRYB104K50
C 126	(A,155,126)		CKSRYB103K50
C 127	(A,166,126)		CKSRYB104K50
C 128	(A,144,125)		CKSRYB104K50
C 151	(A,125,143)		CKSRYB474K16
C 152	(A,127,143)		CKSRYB474K16
C 153	(A,132,143)		CKSRYB474K16
C 154	(A,130,143)		CKSRYB474K16
C 155	(A,125,147)		CKSQYB474K16
C 156	(A,127,147)		CKSQYB474K16
C 157	(A,132,147)		CKSQYB474K16
C 158	(A,130,147)		CKSQYB474K16
C 159	(B,140,141)		CKSQYB104K50
C 160	(A,148,134)		CEVLW470M16
C 161	(B,150,123)	4.7 uF	CCG1201
C 162	(B,126,146)		CKSQYB225K16
C 163	(A,146,156)		CKSRYB104K50
C 164	(B,121,146)	10 uF	CCG1236
C 165	(B,130,146)		CKSQYB225K16
C 166	(B,148,123)	10 uF	DCH1201
C 167	(A,154,145)		CEAT102M16(P30)
C 168	(A,140,134)		CEVLW470M16
C 206	(B,118,114)(H,I)		CKSRYB105K10
C 207	(B,120,114)		CKSRYB105K10
C 208	(B,118,133)		CKSRYB105K10
C 211	(B,116,114)		CKSRYB105K10
C 212	(B,117,133)		CKSRYB105K10
C 213	(B,115,114)		CKSRYB105K10
C 214	(B,115,133)		CKSRYB105K10
C 215	(B,113,114)		CKSRYB105K10
C 216	(B,112,114)		CKSRYB105K10
C 217	(B,126,113)		CKSRYB105K10
C 218	(B,129,116)		CKSRYB105K10
C 219	(B,124,133)		CKSRYB105K10
C 220	(B,122,133)		CKSRYB105K10
C 221	(B,120,133)		CKSRYB105K10
C 222	(B,109,118)		CKSQYB225K10
C 225	(B,109,120)		CKSRYB474K16
C 226	(B,107,122)	10 uF	CCG1182
C 227	(B,106,120)		CKSSYB104K10
C 228	(A,115,118)		CEVLW470M16
C 229	(B,114,133)		CKSSYB104K10
C 231	(B,129,126)		CKSRYB104K16
C 232	(A,122,129)		CEVLW470M16
C 233	(B,129,123)	10 uF	CCG1182
C 234	(B,124,114)		CCSQCH223J50
C 235	(B,122,114)		CCSQCH223J50
C 237	(B,110,122)		CCSSCH100D50
C 238	(B,126,124)		CCSSCH100D50
C 251	(B,73,125)		CKSRYB105K10
C 252	(B,70,125)		CKSRYB105K10

Circuit Symbol and No.			Part No.
C 253	(B,68,125)		CKSRYB105K10
C 254	(B,65,125)		CKSRYB105K10
C 255	(B,63,125)		CKSRYB105K10
C 256	(B,60,125)		CKSRYB105K10
C 257	(B,55,129)		CKSRYB105K10
C 258	(B,55,132)		CKSRYB105K10
C 259	(B,55,135)		CKSRYB105K10
C 260	(B,55,138)		CKSRYB105K10
C 264	(B,59,127)		CKSSYB104K10
C 265	(B,69,127)		CKSSYB104K10
C 266	(A,72,124)		CEVLW220M16
C 270	(B,62,125)		CKSRYB105K10
C 271	(B,76,135)		CKSRYB105K10
C 272	(B,76,136)		CKSRYB105K10
C 273	(B,76,138)		CKSRYB105K10
C 274	(B,76,139)		CKSRYB105K10
C 275	(B,55,131)		CKSRYB105K10
C 276	(B,76,142)		CKSRYB105K10
C 277	(B,76,144)		CKSRYB105K10
C 279	(B,71,147)		CKSRYB105K10
C 280	(B,55,137)		CKSRYB105K10
C 283	(B,76,133)		CKSRYB105K10
C 284	(B,76,132)		CKSRYB105K10
C 287	(B,58,142)		CKSSYB104K10
C 288	(A,60,139)		CEVLW220M16
C 289	(B,58,137)		CKSSYB104K10
C 290	(A,73,139)		CEVLW220M16
C 291	(B,70,146)		CKSSYB104K10
C 293	(B,67,147)		CKSRYB104K16
C 294	(B,64,147)		CKSRYB104K16
C 301	(B,27,161)		CKSSYB102K50
C 302	(B,26,157)		CKSSYB102K50
C 303	(B,29,161)		CKSSYB104K10
C 304	(B,25,166)		CKSRYB104K50
C 305	(B,26,165)		CKSSYB471K50
C 306	(B,25,163)		CKSSYB471K50
C 351	(A,79,148)		CCSSCH6R0D50
C 352	(A,79,151)		CCSSCH6R0D50
C 353	(A,68,148)		CCSSCH6R0D50
C 354	(A,69,151)		CCSSCH6R0D50
C 355	(A,77,146)	2.2 uF	CCG1218
C 356	(A,74,145)		CKSSYB104K10
C 358	(A,81,159)		CKSQYB106K6R3
C 359	(A,79,159)	22 uF	DCH1256
C 360	(A,77,159)	22 uF	DCH1256
C 361	(A,75,159)		CKSQYB106K6R3
C 362	(A,72,159)		CKSQYB106K6R3
C 363	(A,70,159)	22 uF	DCH1256
C 364	(A,67,159)		CKSQYB106K6R3
C 365	(A,65,159)		CKSQYB106K6R3
C 366	(A,85,161)		CKSRYB104K50
C 401	(B,92,156)		CKSRYB104K50
C 402	(B,79,151)	4.7 uF	CCG1201
C 403	(B,79,154)	4.7 uF	CCG1201
C 404	(B,92,153)		CKSRYB104K50
C 405	(B,85,157)		CKSRYB104K50
C 413	(A,74,114)		CKSSYB104K10
C 415	(B,43,156)		CKSSYB104K16
C 416	(A,35,160)		CKSSYB104K10
C 441	(B,102,138)	4.7 uF	CCG1201

Circuit Symbol and No.		Part No.
C 442	(B,102,136) 4.7 uF	CCG1201
C 443	(B,102,143) 4.7 uF	CCG1201
C 444	(B,102,141) 4.7 uF	CCG1201
C 445	(B,102,134) 4.7 uF	CCG1201
C 446	(B,102,132) 4.7 uF	CCG1201
C 482	(B,60,174)(I,C,D,E)	CKSSYB104K10
C 514	(A,86,46)	CKSQYB225K10
C 521	(A,93,46)	CKSSYB104K10
C 522	(A,119,69)	CKSSYB104K10
C 523	(A,119,67)	CKSRYB105K10
C 524	(A,117,69)	CKSSYB105K6R3
C 541	(A,101,32)	CKSSYB471K50
C 562	(A,80,36)	CKSRYB104K50
C 563	(A,85,52)	CCSRCH101J50
C 564	(A,80,55)	CKSQYB225K16
C 601	(A,131,107)	CKSRYB105K10
C 602	(A,135,100)	CKSSYB104K10
C 603	(B,142,100)	CKSQYB475K6R3
C 604	(A,135,85)	CKSSYB104K10
C 605	(A,135,105)	CKSSYB104K10
C 606	(A,151,110)	CKSSYB104K10
C 607	(A,152,79)	CKSSYB104K10
C 608	(A,166,100)	CKSSYB104K10
C 609	(A,133,99)	CCSSCH150J50
C 610	(A,133,95)	CCSSCH150J50
C 611	(B,141,110)	CKSSYB104K10
C 612	(A,145,110)	CKSSYB103K16
C 614	(B,149,82)	CKSSYB104K10
C 615	(B,150,82)	CKSSYB104K10
C 616	(B,147,103)	CKSSYB681K50
C 751	(A,56,79)	CKSSYB104K10
C 752	(A,57,76)	CKSSYB104K10
C 781	(A,50,159)	CKSSYB103K16
C 782	(A,46,153)(H,B)	CKSRYB224K16
C 783	(A,48,153)(H,B)	CKSRYB224K16
C 793	(A,109,42)(H,I)	CEVLW221M4
C 794	(A,109,35)(H,I)	CEVLW221M4
C 801	(A,71,81)	CKSSYB104K10
C 802	(A,71,90)	CKSSYB104K10
C 803	(A,71,87)	CKSSYB104K10
C 804	(A,70,84)	CKSSYB104K10
C 805	(A,71,77)	CKSSYB104K10
C 806	(A,71,75)	CKSSYB104K10
C 807	(A,71,72)	CKSSYB104K10
C 808	(A,75,96)	CCSSCH120J50
C 809	(A,76,95)	CKSSYB104K10
C 810	(B,76,68)	CKSSYB104K10
C 811	(A,79,97)	CCSSCH100D50
C 812	(A,79,95)	CKSSYB104K10
C 813	(B,82,92)	CKSSYB104K10
C 814	(B,80,69)	CKSSYB104K10
C 815	(A,87,97)	CKSRYB105K10
C 816	(A,82,66)	CKSSYB104K10
C 817	(B,84,92)	CKSSYB104K10
C 818	(A,89,99)	CKSSYB104K10
C 819	(A,91,97)	CKSSYB104K10
C 820	(A,90,97)	CKSRYB105K10
C 821	(B,89,72)	CKSSYB104K10
C 822	(A,89,95)	CKSSYB104K10
C 823	(B,91,72)	CKSSYB104K10
C 824	(B,93,69)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 825	(A,96,62)	CKSSYB104K10
C 826	(A,106,77)	CKSSYB103K16
C 827	(A,83,97)	CCSSCH100D50
C 832	(A,100,91)	CKSSYB104K10
C 833	(B,95,83)	CKSSYB104K10
C 834	(B,96,75)	CKSSYB104K10
C 835	(A,100,83)	CKSSYB104K10
C 836	(A,100,94)	CKSQYB106K6R3
C 837	(A,100,85)	CKSSYB104K10
C 838	(A,95,59)	CCSSCH8R0D50
C 839	(A,99,64)	CCSSCH150J50
C 840	(A,70,96)	CKSQYB106K6R3
C 841	(A,68,94)	CKSQYB106K6R3
C 901	(B,80,93)	CKSSYB104K10
C 902	(B,75,95)	CKSSYB104K10
C 903	(B,82,87)	CKSSYB104K10
C 904	(B,81,83)	CKSSYB104K10
C 905	(B,78,70)	CKSSYB104K10
C 906	(A,67,84)	CKSSYB104K10
C 907	(A,69,90)	CKSSYB104K10
C 908	(B,68,67)	CKSSYB102K50
C 909	(B,66,68)	CKSQYB106K6R3
C 921	(B,122,82)	CKSSYB103K16
C 922	(B,97,81)	CKSSYB104K10
C 923	(B,97,86)	CKSQYB475K6R3
C 924	(B,122,95)	CKSSYB103K16
C 925	(B,97,95)	CKSSYB104K10
C 926	(B,101,103)	CKSQYB475K6R3
C 927	(A,105,76)	CKSSYB104K10
C 928	(A,104,68)	CKSSYB104K10
C 929	(A,110,75)	CKSSYB104K10
C 930	(B,109,63)	CKSSYB104K10
C 931	(B,111,60)	CKSSYB104K10
C 941	(A,101,99)	CCSRCH182J50
C 942	(A,101,97)	CCSRCH182J50
C 943	(A,104,99)	CKSSYB104K10
C 944	(A,99,97)	CKSQYB475K6R3
C 945	(A,99,100)	CKSQYB475K6R3
C 946	(A,114,97) 10 uF	DCH1201
C 951	(A,112,64)	CKSSYB104K10
C 952	(A,112,68)	CKSSYB104K10
C 961	(B,44,41)	CKSQYB225K10
C 964	(B,50,37)	CKSSYB104K10
C 970	(A,61,41)	CCSSCH100D50
C 971	(A,60,40)	CCSSCH100D50
C 972	(A,46,41)	CCSSCH100D50
C 973	(A,44,41)	CCSSCH100D50
C 974	(A,58,41)	CCSSCH100D50
C 981	(B,50,125)	CKSSYB473K16
C 982	(B,45,125)	CKSSYB473K16
C 983	(B,42,127)	CKSSYB102K50
C 984	(B,40,127)	CKSSYB102K50
C 985	(B,45,119)	CKSSYB104K10
C 1001	(A,162,134)	CEVLW470M6R3
C 1002	(B,159,135)	CKSSYB103K16
C 1003	(B,158,135)	CKSRYB103K50
C 1004	(A,165,145)	CEAT102M16(P30)
C 1005	(A,165,152)	CKSRYB104K50
C 1101	(A,35,163)	CKSRYB104K50
C 1102	(A,13,149)	CEAT471M16

Circuit Symbol and No.		Part No.
C 1201	(A,88,122)	CEVLW470M16
C 1202	(B,87,122)	CKSSYB103K25
C 1203	(B,90,121)	CKSYB105K35
C 1221	(B,89,111)	CKSRYB105K10
C 1222	(B,97,111)	CKSRYB105K16
C 1501	(B,23,63)	CKSYB105K35
C 1502	(A,44,60)	CKSSYB102K50
C 1503	(B,38,66) 10 uF	CCG1236
C 1504	(A,42,59)	CKSRYB104K16
C 1505	(A,42,46)	CKSRYB104K16
C 1506	(A,35,47) 10 uF	CCG1236
C 1507	(B,37,52)	CKSSYB391K50
C 1508	(B,35,50)	CCSSCH121J50
C 1509	(B,37,50)	CKSRYB332K50
C 1510	(B,36,71) 10 uF	CCG1236
C 1511	(B,34,56) 4.7 uF	CCG1201
C 1512	(B,34,51)	CKSSYB223K16
C 1513	(B,33,63)	CKSRYB104K25
C 1514	(A,44,46)	CKSSYB102K50
C 1515	(B,14,45) 10 uF	CCG1236
C 1516	(B,20,59)	CKSRYB104K25
C 1517	(B,24,48)	CKSSYB223K16
C 1518	(B,19,45)	CKSRYB332K50
C 1519	(B,22,46)	CCSSCH470J50
C 1520	(B,14,41) 10 uF	CCG1236
C 1521	(B,20,54) 4.7 uF	CCG1201
C 1522	(B,20,51)	CKSQYB334K50
C 1523	(B,21,66)	CKSYB105K35
C 1524	(B,18,45)	CKSRYB821K50
C 1525	(A,37,47) 10 uF	CCG1236
C 1526	(A,10,63) 3 300 uF/16 V	CCH1732
C 1527	(A,40,47) 10 uF	CCG1236
C 1528	(A,35,58) 22 uF	CCG1254
C 1529	(A,37,58) 22 uF	CCG1254
C 1530	(A,40,58) 10 uF	CCG1236
C 1621	(A,96,125)	CKSSYB104K16
C 1624	(B,102,121)	CKSSYB103K16
C 1625	(A,95,120) 4.7 uF	CCG1222
C 1626	(B,97,123)	CKSRYB104K16
C 1627	(B,101,120)	CKSSYB104K16
C 1628	(A,98,115) 4.7 uF	CCG1222
C 1629	(A,102,112)	CCSSCH271J50
C 1630	(A,99,113)	CKSSYB104K16
C 1661	(A,13,141)	CKSSYB104K10
C 1731	(A,34,119)	CKSSYB104K10
C 1732	(A,39,117)	CEVLW101M10
C 1733	(A,57,116)	CKSSYB104K10
C 1741	(A,93,172)	CEVLW100M16
C 1742	(B,95,163)	CKSSYB103K16
C 1743	(A,93,165)	CKSSYB103K16
C 1761	(B,45,64)	CKSRYB105K10
C 1763	(B,50,72)	CKSQYB106K6R3
C 1771	(B,45,54)	CKSQYB225K10
C 1772	(B,48,43)	CKSRYB334K10
C 1781	(B,118,59)(H,I)	CKSSYB104K10
C 1782	(B,115,50)(H,I)	CKSSYB104K10
C 2001	(A,20,137)	CKSSYB104K10

B

Unit Number : CWN3129(H,B)
Unit Number : CWN3130(I,C,D,E)
Unit Name : Tuner BOX Unit

MISCELLANEOUS

IC 1	(B,64,36) IC	NJM2391DL1-33
IC 3	(A,93,9) IC	NJM2388F84
IC 5	(B,48,32) IC	TC7WH08FU
Q 1	(B,79,23) Transistor	2SC4081
Q 2	(B,76,7) Transistor	2SC4081
D 1	(B,70,37) Diode	S1G-6904G2P
D 2	(B,73,37) Diode	S1G-6904G2P
D 3	(B,76,37) Diode	S1G-6904G2P
L 1	(B,25,7) Inductor	LCTAW220J2520
L 2	(B,57,34) Inductor	CTF1379
L 3	(B,41,8) Inductor	LCTAW1R0J3225
L 4	(B,65,25) Inductor	LCTAW1R0J3225
P 1	(B,21,7) Surge Protector	IMSA-6801-01Y901
JA1	(A,10,39) Antenna Jack	CKX1056
JA2	(A,98,38) Connector	CKS4663
U 1	(A,23,15) FM/AM Tuner Unit(H,B)	CWE2095
	(A,23,15) FM/AM Tuner Unit(I,C,D,E)	CWE2096

RESISTORS

R 2	(B,31,22)	RS1/16S681J
R 3	(B,46,22)(H,B)	RS1/16S681J
R 4	(B,55,26)	RS1/16S681J
R 9	(B,43,22)	RS1/16S681J
R 10	(B,41,22)	RS1/16S681J
R 11	(B,38,22)	RS1/16S681J
R 12	(B,35,22)	RS1/16S681J
R 13	(B,78,8)	RS1/16S472J
R 14	(B,81,23)	RS1/16S472J
R 17	(B,100,17)	RS1/16S333J
R 24	(B,70,21)(H,B)	RS1/16S681J
R 25	(B,72,21)(H,B)	RS1/16S681J
R 26	(B,73,21)(H,B)	RS1/16S681J
R 27	(B,76,21)(H,B)	RS1/16S681J
R 28	(B,100,15)	RS1/16S102J
R 29	(B,102,15)	RS1/16S474J
R 35	(B,50,38)	RS1/16S102J
R 36	(B,46,38)	RS1/16S271J
R 37	(B,47,29)(I,C,D,E)	RS1/16S473J
R 39	(B,78,21)	RS1/16S274J
R 40	(B,74,9)	RS1/16S274J
R 41	(B,78,25)	RS1/16S224J
R 42	(B,72,7)	RS1/16S224J

CAPACITORS

C 1	(B,30,8)	CKSRYB103K50
C 3	(B,58,27)	CKSRYB103K50
C 4	(B,59,25)	CKSQYB475K10
C 6	(B,66,21)	CKSRYB103K50
C 9	(B,49,22)	CKSRYB103K50
C 10	(B,64,27)	CKSRYB103K50
C 11	(B,69,31)	CKSQYB475K10
C 12	(B,47,22)	CKSRYB102K50

Circuit Symbol and No.		Part No.
C 13	(B,32,8)	CKSRYB104K16
C 14	(B,29,8)	CKSRYB102K50
C 15	(B,79,5)	CKSRYB103K50
C 17	(B,98,16)	CKSYB105K35
C 18	(B,38,7) 10 uF	CCG1236
C 21	(B,79,28)	CKSRYB474K10
C 22	(B,80,8)	CKSRYB474K10
C 23	(B,61,8) 10 uF	CCG1236
C 24	(B,52,32)	CKSRYB104K16
C 25	(B,81,21)	CKSRYB104K16
C 26	(B,76,10)	CKSRYB104K16
C 27	(B,82,6) 10 uF	CCG1236

Keyboard Unit
Consists of
Panel PCB
Keyboard PCB

F G

Unit Number : CWN4996
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 3001	(A,146,17) Remote IC	GP1UXC14RK
Q 3001	(B,70,9) Transistor	UMX1N
Q 3002	(B,67,8) Transistor	LSC4081UB
Q 3003	(B,35,11) Transistor	UMX1N
Q 3004	(B,29,14) Transistor	LSC4081UB
D 3001	(B,137,10) Diode	DZ2S068C
D 3004	(B,137,4) Diode	DZ2S068C
D 3005	(B,137,5) Diode	DZ2S068C
D 3007	(B,130,14) Diode	HZM6.8Z4MWA
D 3009	(A,62,14) Chip LED	NSSM038A-6430
D 3010	(A,25,12) Chip LED	NSSM038A-6430
D 3500	(A,44,10) Chip LED	NSSM038A-6430
S 3001	(A,53,14) Switch	CSN1057
S 3002	(A,43,14) Push Switch	CSG1155
S 3003	(A,14,12) Encoder	CSD1168
S 3004	(A,124,15) Push Switch	CSG1155
S 3005	(A,124,6) Push Switch	CSG1155
S 3006	(A,77,7) Push Switch	CSG1155
S 3007	(A,110,7) Push Switch	CSG1155
S 3008	(A,94,7) Push Switch	CSG1155
S 3500	(A,31,15) Push Switch	CSG1155
S 3501	(A,14,15) Push Switch	CSG1155
CN3001	(B,82,12) Connector	CKS5858
CN3002	(A,158,13) Connector	YKS5032
CN3500	(B,37,6) Connector	CKS5695
JA3001	(A,145,9) Jack	CKN1084

RESISTORS

R 3002	(B,130,10)	RS1/16SS223J
R 3004	(B,125,6)	RS1/16SS750J
R 3005	(B,69,6)	RS1/16SS103J
R 3006	(B,130,6)	RS1/16SS223J
R 3007	(B,70,8)	RS1/16SS151J
R 3008	(B,70,7)	RS1/16SS101J
R 3009	(B,70,6)	RS1/16SS0R0J
R 3010	(B,133,7)	RS1/16SS0R0J
R 3011	(B,132,8)	RS1/16SS0R0J
R 3012	(B,133,6)	RS1/16SS0R0J
R 3013	(B,133,5)	RS1/16SS0R0J
R 3014	(B,132,10)	RS1/16SS0R0J
R 3015	(B,73,8)	RS1/16SS181J
R 3016	(B,74,6)	RS1/16SS101J
R 3017	(B,74,4)	RS1/16SS101J
R 3018	(B,72,7)	RS1/16SS103J
R 3019	(B,162,25)	RS1/16SS101J
R 3022	(B,67,6)	RS1/16SS103J
R 3023	(B,66,6)	RS1/16SS151J
R 3024	(B,65,6)	RS1/16SS151J
R 3025	(B,64,6)	RS1/16SS0R0J
R 3027	(B,39,12)	RS1/16SS103J
R 3028	(B,36,9)	RS1/16SS151J
R 3029	(B,37,9)	RS1/16SS101J
R 3030	(B,39,9)	RS1/16SS0R0J
R 3031	(B,107,13)	RS1/16SS152J
R 3032	(B,25,10)	RS1/16SS181J
R 3033	(B,25,11)	RS1/16SS101J
R 3034	(B,25,12)	RS1/16SS101J
R 3035	(B,39,13)	RS1/16SS103J
R 3037	(B,107,12)	RS1/16SS183J
R 3039	(B,31,13)	RS1/16SS103J
R 3040	(B,25,13)	RS1/16SS151J
R 3041	(B,25,14)	RS1/16SS151J
R 3042	(B,25,15)	RS1/16SS0R0J
R 3043	(B,103,4)	RS1/16SS152J
R 3044	(B,103,5)	RS1/16SS222J
R 3501	(B,30,12)	RS1/16SS822J
R 3502	(B,29,12)	RS1/16SS123J

CAPACITORS

C 3002	(B,159,24)	CKSQYB106K6R3
C 3003	(A,32,13)	CKSRYB104K16
C 3004	(A,32,12)	CKSRYB104K16
C 3005	(A,32,15)	CKSRYB104K16
C 3006	(B,64,11)	CKSRYB104K16
C 3007	(B,64,9)	CKSRYB104K16
C 3008	(B,64,8)	CKSRYB104K16
C 3009	(B,137,8)	CKSRYB104K50
C 3011	(B,133,15)	CKSQYB225K16
C 3012	(B,123,13) 4.7 uF	CCG1201
C 3013	(B,146,16)	CKSRYB105K16
C 3014	(B,97,11)	CKSRYB103K50
C 3500	(A,32,5)	CKSRYB104K16
C 3501	(A,38,5)	CKSRYB104K16
C 3502	(A,31,5)	CKSRYB104K16

Monitor Unit(Service)
Consists of
Monitor PCB
BT PCB
BT ANT PCB

H I J

Unit Number : CXX2841(H,I)

Unit Name : Monitor Unit(Service)

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 5201	(A,125,68) Regulator IC	PQ1LA125MSPQ
IC 5202	(A,128,61) Regulator IC	S-1172B34-E6
IC 5301	(A,95,34) IC	NJM2505AF
IC 5311	(A,97,43) IC	TC75S57FU
IC 5312	(A,89,43) L-MOS And Gate	TC7SET08FUS1
IC 5401	(A,22,67) Flash ROM Unit	CWW2191
IC 5501	(A,78,43) EEPROM IC	S-93C66BD0I-I8
IC 5502	(A,57,59) IC	MN103SH13UB
IC 5503	(A,64,77) Logic IC	TC7SHU04FUS1
IC 5701	(A,15,25) IC	TK61222CQ6
IC 5702	(A,9,28) L-MOS And Gate	TC7SET08FUS1
IC 8001	(B,21,23) IC	NJM4558V
Q 5201	(A,128,80) Transistor	UMX2N
Q 5701	(A,6,35) Transistor	LSC4081UB
Q 5702	(A,11,31) Transistor	LTC114EUB
Q 5703	(A,10,49) FET	RSQ025P03
Q 5705	(A,29,26) Transistor	LSC4081UB
Q 5801	(A,111,55) Transistor	UMX1N
Q 5802	(A,119,50) Transistor	LSC4081UB
Q 5805	(A,95,38) Transistor	LSC4081UB
Q 5806	(A,100,46) Transistor	LSC4081UB
Q 5807	(A,99,49) Transistor	LSC4081UB
Q 5808	(A,86,34) Transistor	LSA1576UB
D 5201	(A,129,68) Diode	1SR154-400
D 5701	(A,28,31) Diode	RB160M-60
D 5702	(A,9,23) Diode	1SS352
D 8001	(B,30,23) Diode	DZ2S068C
D 8002	(B,30,25) Diode	DZ2S068C
D 8003	(B,30,26) Diode	DZ2S068C
L 5002	(A,105,20) Inductor	CTF1469
L 5301	(A,96,49) Inductor	CTF1545
L 5302	(A,92,38) Inductor	CTF1545
L 5303	(A,97,45) Inductor	CTF1545
L 5304	(A,90,32) Inductor	CTF1545
L 5305	(A,93,32) Inductor	CTF1545
L 5401	(A,31,49) Inductor	CTF1545
L 5501	(A,52,39) Inductor	CTF1473
L 5502	(A,74,41) Inductor	CTF1545
L 5503	(A,75,51) Inductor	CTF1545
L 5504	(A,75,77) Inductor	CTF1473
L 5505	(A,74,54) Inductor	CTF1545
L 5506	(A,84,78) Inductor	CTF1473
L 5507	(A,37,76) Inductor	CTF1473
L 5508	(A,65,71) Inductor	CTF1545
L 5509	(A,63,72) Inductor	CTF1545
L 5510	(A,61,75) Inductor	CTF1545
L 5511	(A,50,79) Inductor	CTF1545
L 5512	(A,77,54) Inductor	CTF1748
L 5513	(A,48,75) Inductor	CTF1545
L 5514	(A,47,71) Inductor	CTF1545
L 5515	(A,44,69) Inductor	CTF1545
L 5516	(A,39,68) Inductor	CTF1545
L 5517	(A,38,62) Inductor	CTF1545
L 5518	(A,40,60) Inductor	CTF1545
L 5519	(A,41,51) Inductor	CTF1545
L 5520	(A,51,45) Inductor	CTF1545
L 5601	(A,88,79) Inductor	CTF1473
L 5602	(A,94,59) Inductor	CTF1748
L 5603	(A,97,58) Inductor	CTF1748
L 5701	(A,5,41) Inductor	CTF1545
L 5702	(A,18,40) Choke Coil 10 uH	CTH1435
L 5704	(A,12,29) Inductor	CTF1748
X 5501	(A,78,59) Oscillator 33 MHz	CSS1792
X 5502	(A,71,75) Oscillator 9.597 MHz	CSS1787
CN5002	(A,117,34) Connector	CKS6008
CN5101	(A,121,14) Connector	CKS5561
CN5601	(A,102,74) Connector	CKS6062
CN5701	(A,17,16) Connector	CKS5561
CN5802	(A,109,11) Connector	CKS5695
CN8001	(A,4,27) Connector	CKS3878
CN8002	(A,36,31) Connector	CKS6192
CN8601	(B,27,18) Connector	CKS5749

RESISTORS

R 5200	(A,120,80)	RS1/16SS0R0J
R 5204	(A,126,81)	RS1/16SS473J
R 5205	(A,121,64)	RS1/8SQ0R0J
R 5206	(A,118,58)	RS1/8SQ0R0J
R 5207	(A,118,56)	RS1/16SS103J
R 5208	(A,128,83)	RS1/16SS104J
R 5210	(A,129,76)	RS1/16SS562J
R 5211	(A,128,78)	RS1/16SS101J
R 5214	(A,124,55)	RS1/16SS102J
R 5215	(A,120,84)	RS1/10SR470J
R 5216	(A,120,83)	RS1/10SR470J
R 5300	(A,89,34)	RS1/16SS472J
R 5301	(A,102,37)	RS1/16SS101J
R 5302	(A,102,34)	RS1/16SS101J
R 5303	(A,89,35)	RS1/16SS751J
R 5304	(A,99,39)	RS1/16SS472J
R 5305	(A,103,45)	RS1/16SS472J
R 5306	(A,102,48)	RS1/16SS472J
R 5311	(A,103,42)	RS1/16SS271J
R 5312	(A,101,42)	RS1/16SS684J
R 5313	(A,95,41)	RS1/16SS1502D
R 5314	(A,96,41)	RS1/16SS1002D
R 5315	(A,89,36)	RS1/16SS472J
R 5316	(A,88,34)	RS1/16SS471J
R 5317	(A,92,41)	RS1/16SS102J
R 5318	(A,92,43)	RS1/16SS102J
R 5319	(A,103,49)	RS1/16SS272J
R 5320	(A,101,40)	RS1/16SS272J
R 5321	(A,104,45)	RS1/16SS272J
R 5322	(A,87,41)	RS1/16SS682J
R 5323	(A,83,53)	RS1/16SS103J
R 5324	(A,82,53)	RS1/16SS103J
R 5325	(A,85,41)	RS1/16SS103J
R 5401	(A,31,48)	RS1/16SS103J
R 5402	(A,20,81)	RS1/16SS220J
R 5403	(A,19,81)	RS1/16SS102J
R 5501	(A,71,51)	RS1/16SS103J
R 5503	(A,54,76)	RS1/16SS0R0J
R 5509	(A,77,45)	RS1/16SS563J
R 5511	(A,75,45)	RAB4CQ102J
R 5512	(A,79,54)	RS1/16SS271J

Circuit Symbol and No.		Part No.
R 5513	(A,79,49)	RS1/16SS471J
R 5514	(A,81,50)	RS1/16SS471J
R 5515	(A,79,50)	RS1/16SS181J
R 5516	(A,79,48)	RS1/16SS271J
R 5517	(A,81,48)	RS1/16SS271J
R 5518	(A,59,42)	RS1/16SS1002D
R 5520	(A,81,60)	RS1/16SS103J
R 5521	(A,48,43)	RS1/16SS473J
R 5522	(A,81,63)	RS1/16SS271J
R 5523	(A,87,59)	RS1/16SS271J
R 5524	(A,37,48)	RAB4CQ103J
R 5530	(A,90,60)	RS1/16SS101J
R 5531	(A,80,65)	RS1/16SS101J
R 5532	(A,41,48)	RAB4CQ103J
R 5533	(A,48,49)	RS1/16SS103J
R 5534	(A,82,55)	RS1/16SS101J
R 5536	(A,87,64)	RS1/16SS101J
R 5537	(A,86,65)	RS1/16SS101J
R 5539	(A,78,69)	RS1/16SS101J
R 5540	(A,75,70)	RS1/16SS101J
R 5543	(A,55,76)	RS1/16SS103J
R 5544	(A,56,79)	RS1/16SS102J
R 5545	(A,46,76)	RS1/16SS0R0J
R 5546	(A,67,77)	RS1/16SS105J
R 5547	(A,61,78)	RS1/16SS220J
R 5548	(A,68,78)	RS1/16SS332J
R 5549	(A,65,74)	RS1/10SR0R0J
R 5550	(A,77,71)	RAB4CQ101J
R 5551	(A,90,66)	RAB4CQ101J
R 5552	(A,87,62)	RAB4CQ101J
R 5555	(A,91,53)	RS1/16SS103J
R 5556	(A,90,55)	RS1/16SS103J
R 5557	(A,56,80)	RS1/16SS0R0J
R 5560	(A,83,47)	RS1/16SS103J
R 5561	(A,85,51)	RS1/16SS103J
R 5570	(A,73,61)	RS1/16SS471J
R 5701	(A,23,34)	RS1/10SR1203D
R 5702	(A,23,32)	RS1/10SR1002F
R 5703	(A,8,22)	RS1/16SS101J
R 5704	(A,17,31)	RS1/16SS101J
R 5705	(A,19,31)	RS1/16SS0R0J
R 5706	(A,18,31)	RS1/16SS0R0J
R 5707	(A,32,39)	RS1/16SS3301F
R 5708	(A,9,32)	RS1/16SS102J
R 5709	(A,23,26)	RS1/10SR1203D
R 5710	(A,21,25)	RS1/10SR8201F
R 5711	(A,20,23)	RS1/10SR6202D
R 5713	(A,29,22)	RS1/16SS472J
R 5714	(A,16,31)	RS1/16SS223J
R 5716	(A,10,52)	RS1/16SS562J
R 5717	(A,9,35)	RS1/16SS562J
R 5718	(A,23,22)	RS1/10SR4700D
R 5719	(A,12,27)	RS1/16SS152J
R 5720	(A,11,22)	RS1/16SS221J
R 5722	(A,8,32)	RS1/16SS103J
R 5723	(A,10,20)	RS1/10SR1203D
R 5724	(A,7,20)	RS1/10SR0R0J
R 5725	(A,11,27)	RS1/16SS152J
R 5726	(A,29,23)	RS1/16SS103J
R 5727	(A,27,23)	RS1/16SS472J
R 5728	(A,28,21)	RS1/16SS332J
R 5729	(A,6,25)	RS1/16SS273J
R 5730	(A,5,38)	RS1/16SS473J
R 5731	(A,6,23)	RS1/16SS0R0J
R 5801	(A,111,57)	RS1/16SS271J
R 5802	(A,111,58)	RS1/16SS221J
R 5803	(A,111,59)	RS1/16SS0R0J
R 5804	(A,109,54)	RS1/16SS103J
R 5811	(A,113,53)	RS1/16SS391J
R 5812	(A,115,53)	RS1/16SS391J
R 5813	(A,116,54)	RS1/16SS0R0J
R 5814	(A,114,54)	RS1/16SS103J
R 5821	(A,117,49)	RS1/16SS331J
R 5822	(A,115,49)	RS1/16SS181J
R 5823	(A,115,50)	RS1/16SS121J
R 5824	(A,116,51)	RS1/16SS103J
R 5833	(A,98,39)	RS1/16SS391J
R 5834	(A,103,47)	RS1/16SS391J
R 5835	(A,102,50)	RS1/16SS391J
R 5870	(A,26,50)	RAB4CQ180J
R 5871	(A,28,52)	RS1/16SS180J
R 5873	(A,26,53)	RS1/16SS180J
R 5875	(A,25,53)	RS1/16SS180J
R 5877	(A,24,53)	RS1/16SS180J
R 5878	(A,23,50)	RS1/16SS180J
R 5879	(A,22,54)	RS1/16SS180J
R 5880	(A,22,51)	RS1/16SS180J
R 5881	(A,21,54)	RS1/16SS180J
R 5882	(A,19,50)	RS1/16SS180J
R 5883	(A,20,54)	RS1/16SS180J
R 5884	(A,17,50)	RS1/16SS180J
R 5885	(A,18,54)	RS1/16SS180J
R 5886	(A,16,54)	RS1/16SS680J
R 5889	(A,17,54)	RS1/16SS680J
R 8001	(B,18,27)	RS1/16SS102J
R 8004	(B,22,32)	RS1/16SS102J
R 8005	(B,27,20)	RS1/16SS0R0J
R 8006	(B,32,23)	RS1/16SS102J
R 8007	(B,34,24)	RS1/16SS101J
R 8011	(B,34,22)	RS1/16SS101J
R 8012	(B,24,23)	RS1/16SS223J
R 8013	(B,24,31)	RS1/16SS223J
R 8014	(B,20,18)	RS1/16SS103J
R 8015	(B,23,19)	RS1/16SS103J
R 8016	(B,19,28)	RS1/16SS223J
R 8017	(B,24,29)	RS1/16SS223J

CAPACITORS

C 5001	(A,26,14)		CKSSYB102K50
C 5002	(A,84,45)		CKSRYB105K10
C 5003	(A,105,21)		CKSRYB105K10
C 5004	(A,50,42)		CKSSYB104K10
C 5005	(A,85,54)		CKSRYB105K10
C 5006	(A,86,54)		CKSSYB104K10
C 5007	(A,29,40)		CKSSYB104K10
C 5008	(A,114,16)	10 uF	DCH1201
C 5201	(A,124,64)		CKSSYB103K16
C 5202	(A,126,72)		CKSRYB105K10
C 5203	(A,133,62)		CKSQYB106K6R3

Circuit Symbol and No.		Part No.
C 5208	(A,121,61)	CKSRYB105K10
C 5209	(A,122,58)	CKSSYB104K10
C 5210	(A,123,57)	CKSQYB475K6R3
C 5211	(A,121,69)	CKSQYB475K6R3
C 5212	(A,121,75)	CKSRYB105K10
C 5301	(A,99,34) 10 uF	DCH1201
C 5302	(A,99,36) 10 uF	DCH1201
C 5303	(A,93,34)	CKSSYB104K10
C 5304	(A,89,32)	CKSSYB104K10
C 5305	(A,91,35) 10 uF	DCH1201
C 5307	(A,89,41)	CKSSYB104K10
C 5308	(A,97,41)	CKSSYB104K10
C 5314	(A,94,41)	CKSSYB104K10
C 5401	(A,23,45)	CKSQYB475K6R3
C 5402	(A,31,47)	CKSSYB104K10
C 5403	(A,21,47)	CKSSYB104K10
C 5501	(A,49,75)	CKSRYB105K10
C 5502	(A,39,67)	CKSRYB105K10
C 5503	(A,81,43)	CKSSYB104K10
C 5504	(A,84,34) 10 uF	DCH1201
C 5505	(A,71,44)	CSZS100M10
C 5506	(A,58,39)	CSZS100M10
C 5507	(A,59,41)	CKSSYB104K10
C 5508	(A,61,40)	CKSSYB104K10
C 5509	(A,63,39)	CKSSYB104K10
C 5510	(A,64,40)	CKSSYB104K10
C 5511	(A,67,40)	CKSSYB104K10
C 5512	(A,68,40)	CKSSYB104K10
C 5513	(A,62,45)	CKSSYB104K10
C 5516	(A,64,42)	CKSSYB104K10
C 5517	(A,67,44)	CKSSYB104K10
C 5518	(A,60,42)	CKSSYB104K10
C 5519	(A,68,46)	CKSSYB471K50
C 5521	(A,91,45) 10 uF	DCH1201
C 5522	(A,72,48)	CKSSYB104K10
C 5523	(A,72,55)	CKSSYB104K10
C 5524	(A,87,39) 10 uF	DCH1201
C 5525	(A,57,42)	CCSSCH330J50
C 5526	(A,93,48) 10 uF	DCH1201
C 5527	(A,63,44)	CKSSYB104K10
C 5528	(A,73,51)	CKSSYB104K10
C 5529	(A,65,45)	CKSSYB104K10
C 5530	(A,76,57)	CCSSCH9R0D50
C 5531	(A,76,60)	CCSSCH120J50
C 5532	(A,52,45)	CKSSYB104K10
C 5533	(A,70,63)	CKSSYB104K10
C 5534	(A,38,53)	CKSSYB104K10
C 5535	(A,74,65)	CKSSYB104K10
C 5536	(A,49,49)	CKSSYB104K10
C 5537	(A,69,66)	CKSSYB104K10
C 5538	(A,63,71)	CKSSYB104K10
C 5539	(A,43,52)	CKSSYB104K10
C 5540	(A,62,72)	CKSSYB104K10
C 5541	(A,62,74)	CKSSYB104K10
C 5542	(A,35,66)	CSZSR470M10
C 5543	(A,55,81)	CKSSYB102K50
C 5544	(A,44,65)	CKSSYB104K10
C 5545	(A,38,64)	CKSSYB103K16
C 5546	(A,51,77)	CKSRYB105K10
C 5547	(A,40,61)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 5548	(A,40,62)	CKSSYB104K10
C 5549	(A,41,64)	CKSSYB104K10
C 5550	(A,42,67)	CKSRYB105K10
C 5551	(A,48,71)	CKSSYB104K10
C 5552	(A,50,75)	CKSSYB104K10
C 5553	(A,52,73)	CKSSYB104K10
C 5554	(A,70,46)	CKSSYB104K10
C 5555	(A,36,56)	CSZSR470M10
C 5556	(A,69,72)	CCSSCH180J50
C 5557	(A,40,73)	CSZSR470M10
C 5558	(A,71,77)	CCSSCH180J50
C 5560	(A,64,76)	CKSSYB104K10
C 5601	(A,87,76) 10 uF	DCH1201
C 5602	(A,88,74)	CKSSYB104K10
C 5701	(A,14,31)	CKSRYB105K16
C 5702	(A,10,41) 10 uF	CCG1236
C 5703	(A,6,50) 10 uF	CCG1236
C 5704	(A,10,53)	CKSRYB104K16
C 5705	(A,24,30) 10 uF	CCG1236
C 5706	(A,13,34)	CKSSYB104K16
C 5707	(A,13,31)	CKSRYB105K10
C 5708	(A,20,22)	CKSRYB474K10
C 5710	(A,10,19)	CKSRYB105K10
C 5711	(A,20,32)	CKSSYB104K10
C 5713	(A,8,46) 10 uF	CCG1236
C 5714	(A,8,43) 10 uF	CCG1236
C 5715	(A,24,28) 10 uF	CCG1236
C 5716	(A,11,25)	CKSSYB104K10
C 5718	(A,8,30)	CKSSYB104K10
C 5805	(A,93,37)	CKSSYB104K10
C 5806	(A,98,45)	CKSSYB104K10
C 5807	(A,97,48)	CKSSYB104K10
C 5808	(A,100,37)	CKSSYB102K50
C 8001	(B,28,31)	CKSRYB105K10
C 8002	(B,28,29)	CKSRYB105K10
C 8006	(A,6,6)	CKSQYB106K6R3
C 8007	(B,38,25)	CKSRYB105K10
C 8008	(B,28,27)	CKSSYB104K10
C 8009	(B,29,22)	CKSSYB104K10
C 8010	(B,18,24)	CKSSYB104K10
C 8011	(B,23,18)	CKSSYB105K6R3
C 8012	(B,19,29)	CCSSCH471J50
C 8013	(B,25,23)	CCSSCH471J50
C 8601	(B,15,17)	CCFSSCH1R1B16
C 8602	(B,15,13)	CCFSSCH1R1B16

H

Unit Number : CWN4992(B,C,D,E)
Unit Name : Monitor Unit

MISCELLANEOUS

IC 5201	(A,125,68)	Regulator IC	PQ1LA125MSPQ
IC 5202	(A,128,61)	Regulator IC	S-1172B34-E6
IC 5301	(A,95,34)	IC	NJM2505AF
IC 5311	(A,97,43)	IC	TC75S57FU
IC 5312	(A,89,43)	L-MOS And Gate	TC7SET08FUS1
IC 5401	(A,22,67)	Flash ROM Unit	CWW2644
IC 5501	(A,78,43)	EEPROM IC	S-93C66BD0I-I8
IC 5502	(A,57,59)	IC	MN103SH13UB

Circuit Symbol and No.		Part No.
IC 5503	(A,64,77) Logic IC	TC7SHU04FUS1
IC 5701	(A,15,25) IC	TK61222CQ6
IC 5702	(A,9,28) L-MOS And Gate	TC7SET08FUS1
Q 5201	(A,128,80) Transistor	UMX2N
Q 5701	(A,6,35) Transistor	LSC4081UB
Q 5702	(A,11,31) Transistor	LTC114EUB
Q 5703	(A,10,49) FET	RSQ025P03
Q 5705	(A,29,26) Transistor	LSC4081UB
Q 5801	(A,111,55) Transistor	UMX1N
Q 5802	(A,119,50) Transistor	LSC4081UB
Q 5805	(A,95,38) Transistor	LSC4081UB
Q 5806	(A,100,46) Transistor	LSC4081UB
Q 5807	(A,99,49) Transistor	LSC4081UB
Q 5808	(A,86,34) Transistor	LSA1576UB
D 5201	(A,129,68) Diode	1SR154-400
D 5701	(A,28,31) Diode	RB160M-60
D 5702	(A,9,23) Diode	1SS352
L 5002	(A,105,20) Inductor	CTF1469
L 5301	(A,96,49) Inductor	CTF1545
L 5302	(A,92,38) Inductor	CTF1545
L 5303	(A,97,45) Inductor	CTF1545
L 5304	(A,90,32) Inductor	CTF1545
L 5305	(A,93,32) Inductor	CTF1545
L 5401	(A,31,49) Inductor	CTF1545
L 5501	(A,52,39) Inductor	CTF1473
L 5502	(A,74,41) Inductor	CTF1545
L 5503	(A,75,51) Inductor	CTF1545
L 5504	(A,75,77) Inductor	CTF1473
L 5505	(A,74,54) Inductor	CTF1545
L 5506	(A,84,78) Inductor	CTF1473
L 5507	(A,37,76) Inductor	CTF1473
L 5508	(A,65,71) Inductor	CTF1545
L 5509	(A,63,72) Inductor	CTF1545
L 5510	(A,61,75) Inductor	CTF1545
L 5511	(A,50,79) Inductor	CTF1545
L 5512	(A,77,54) Inductor	CTF1748
L 5513	(A,48,75) Inductor	CTF1545
L 5514	(A,47,71) Inductor	CTF1545
L 5515	(A,44,69) Inductor	CTF1545
L 5516	(A,39,68) Inductor	CTF1545
L 5517	(A,38,62) Inductor	CTF1545
L 5518	(A,40,60) Inductor	CTF1545
L 5519	(A,41,51) Inductor	CTF1545
L 5520	(A,51,45) Inductor	CTF1545
L 5601	(A,88,79) Inductor	CTF1473
L 5602	(A,94,59) Inductor	CTF1748
L 5603	(A,97,58) Inductor	CTF1748
L 5701	(A,5,41) Inductor	CTF1545
L 5702	(A,18,40) Choke Coil 10 uH	CTH1435
L 5704	(A,12,29) Inductor	CTF1748
X 5501	(A,78,59) Oscillator 33 MHz	CSS1792
X 5502	(A,71,75) Oscillator 9.597 MHz	CSS1787
CN5002	(A,117,34) Connector	CKS6008
CN5101	(A,121,14) Connector	CKS5561
CN5601	(A,102,74) Connector	CKS6062
CN5701	(A,17,16) Connector	CKS5561
CN5802	(A,109,11) Connector	CKS5695

RESISTORS

Circuit Symbol and No.		Part No.
R 5200	(A,120,80)	RS1/16SS0R0J
R 5204	(A,126,81)	RS1/16SS473J
R 5205	(A,121,64)	RS1/8SQ0R0J
R 5206	(A,118,58)	RS1/8SQ0R0J
R 5207	(A,118,56)	RS1/16SS103J
R 5208	(A,128,83)	RS1/16SS104J
R 5210	(A,129,76)	RS1/16SS562J
R 5211	(A,128,78)	RS1/16SS101J
R 5214	(A,124,55)	RS1/16SS102J
R 5215	(A,120,84)	RS1/10SR470J
R 5216	(A,120,83)	RS1/10SR470J
R 5300	(A,89,34)	RS1/16SS472J
R 5301	(A,102,37)	RS1/16SS101J
R 5302	(A,102,34)	RS1/16SS101J
R 5303	(A,89,35)	RS1/16SS751J
R 5304	(A,99,39)	RS1/16SS472J
R 5305	(A,103,45)	RS1/16SS472J
R 5306	(A,102,48)	RS1/16SS472J
R 5311	(A,103,42)	RS1/16SS271J
R 5312	(A,101,42)	RS1/16SS684J
R 5313	(A,95,41)	RS1/16SS1502D
R 5314	(A,96,41)	RS1/16SS1002D
R 5315	(A,89,36)	RS1/16SS472J
R 5316	(A,88,34)	RS1/16SS471J
R 5317	(A,92,41)	RS1/16SS102J
R 5318	(A,92,43)	RS1/16SS102J
R 5319	(A,103,49)	RS1/16SS272J
R 5320	(A,101,40)	RS1/16SS272J
R 5321	(A,104,45)	RS1/16SS272J
R 5322	(A,87,41)	RS1/16SS682J
R 5323	(A,83,53)	RS1/16SS103J
R 5324	(A,82,53)	RS1/16SS103J
R 5325	(A,85,41)	RS1/16SS103J
R 5401	(A,31,48)	RS1/16SS103J
R 5402	(A,20,81)	RS1/16SS220J
R 5403	(A,19,81)	RS1/16SS102J
R 5501	(A,71,51)	RS1/16SS103J
R 5503	(A,54,76)	RS1/16SS0R0J
R 5509	(A,77,45)	RS1/16SS563J
R 5511	(A,75,45)	RAB4CQ102J
R 5512	(A,79,54)	RS1/16SS271J
R 5513	(A,79,49)	RS1/16SS471J
R 5514	(A,81,50)	RS1/16SS471J
R 5515	(A,79,50)	RS1/16SS181J
R 5516	(A,79,48)	RS1/16SS271J
R 5517	(A,81,48)	RS1/16SS271J
R 5518	(A,59,42)	RS1/16SS1002D
R 5520	(A,81,60)	RS1/16SS103J
R 5521	(A,48,43)	RS1/16SS473J
R 5522	(A,81,63)	RS1/16SS271J
R 5523	(A,87,59)	RS1/16SS271J
R 5524	(A,37,48)	RAB4CQ103J
R 5530	(A,90,60)	RS1/16SS101J
R 5531	(A,80,65)	RS1/16SS101J
R 5532	(A,41,48)	RAB4CQ103J
R 5533	(A,48,49)	RS1/16SS103J
R 5534	(A,82,55)	RS1/16SS101J
R 5536	(A,87,64)	RS1/16SS101J
R 5537	(A,86,65)	RS1/16SS101J
R 5539	(A,78,69)	RS1/16SS101J

Circuit Symbol and No.		Part No.
R 5540	(A,75,70)	RS1/16SS101J
R 5543	(A,55,76)	RS1/16SS103J
R 5544	(A,56,79)	RS1/16SS102J
R 5545	(A,46,76)	RS1/16SS0R0J
R 5546	(A,67,77)	RS1/16SS105J
R 5547	(A,61,78)	RS1/16SS220J
R 5548	(A,68,78)	RS1/16SS332J
R 5549	(A,65,74)	RS1/10SR0R0J
R 5550	(A,77,71)	RAB4CQ101J
R 5551	(A,90,66)	RAB4CQ101J
R 5552	(A,87,62)	RAB4CQ101J
R 5555	(A,91,53)	RS1/16SS103J
R 5556	(A,90,55)	RS1/16SS103J
R 5557	(A,56,80)	RS1/16SS0R0J
R 5560	(A,83,47)	RS1/16SS103J
R 5561	(A,85,51)	RS1/16SS103J
R 5570	(A,73,61)	RS1/16SS471J
R 5701	(A,23,34)	RS1/10SR1203D
R 5702	(A,23,32)	RS1/10SR1002F
R 5703	(A,8,22)	RS1/16SS101J
R 5704	(A,17,31)	RS1/16SS101J
R 5705	(A,19,31)	RS1/16SS0R0J
R 5706	(A,18,31)	RS1/16SS0R0J
R 5707	(A,32,39)	RS1/16SS3301F
R 5708	(A,9,32)	RS1/16SS102J
R 5709	(A,23,26)	RS1/10SR1203D
R 5710	(A,21,25)	RS1/10SR8201F
R 5711	(A,20,23)	RS1/10SR6202D
R 5713	(A,29,22)	RS1/16SS472J
R 5714	(A,16,31)	RS1/16SS223J
R 5716	(A,10,52)	RS1/16SS562J
R 5717	(A,9,35)	RS1/16SS562J
R 5718	(A,23,22)	RS1/10SR4700D
R 5719	(A,12,27)	RS1/16SS152J
R 5720	(A,11,22)	RS1/16SS221J
R 5722	(A,8,32)	RS1/16SS103J
R 5723	(A,10,20)	RS1/10SR1203D
R 5724	(A,7,20)	RS1/10SR0R0J
R 5725	(A,11,27)	RS1/16SS152J
R 5726	(A,29,23)	RS1/16SS103J
R 5727	(A,27,23)	RS1/16SS472J
R 5728	(A,28,21)	RS1/16SS332J
R 5729	(A,6,25)	RS1/16SS273J
R 5730	(A,5,38)	RS1/16SS473J
R 5731	(A,6,23)	RS1/16SS0R0J
R 5801	(A,111,57)	RS1/16SS271J
R 5802	(A,111,58)	RS1/16SS221J
R 5803	(A,111,59)	RS1/16SS0R0J
R 5804	(A,109,54)	RS1/16SS103J
R 5811	(A,113,53)	RS1/16SS391J
R 5812	(A,115,53)	RS1/16SS391J
R 5813	(A,116,54)	RS1/16SS0R0J
R 5814	(A,114,54)	RS1/16SS103J
R 5821	(A,117,49)	RS1/16SS331J
R 5822	(A,115,49)	RS1/16SS181J
R 5823	(A,115,50)	RS1/16SS121J
R 5824	(A,116,51)	RS1/16SS103J
R 5833	(A,98,39)	RS1/16SS391J
R 5834	(A,103,47)	RS1/16SS391J
R 5835	(A,102,50)	RS1/16SS391J

Circuit Symbol and No.		Part No.
R 5870	(A,26,50)	RAB4CQ180J
R 5871	(A,28,52)	RS1/16SS180J
R 5873	(A,26,53)	RS1/16SS180J
R 5875	(A,25,53)	RS1/16SS180J
R 5877	(A,24,53)	RS1/16SS180J
R 5878	(A,23,50)	RS1/16SS180J
R 5879	(A,22,54)	RS1/16SS180J
R 5880	(A,22,51)	RS1/16SS180J
R 5881	(A,21,54)	RS1/16SS180J
R 5882	(A,19,50)	RS1/16SS180J
R 5883	(A,20,54)	RS1/16SS180J
R 5884	(A,17,50)	RS1/16SS180J
R 5885	(A,18,54)	RS1/16SS180J
R 5886	(A,16,54)	RS1/16SS680J
R 5889	(A,17,54)	RS1/16SS680J

CAPACITORS

C 5001	(A,26,14)	CKSSYB102K50
C 5002	(A,84,45)	CKSRYB105K10
C 5003	(A,105,21)	CKSRYB105K10
C 5004	(A,50,42)	CKSSYB104K10
C 5005	(A,85,54)	CKSRYB105K10
C 5006	(A,86,54)	CKSSYB104K10
C 5007	(A,29,40)	CKSSYB104K10
C 5008	(A,114,16) 10 uF	DCH1201
C 5201	(A,124,64)	CKSSYB103K16
C 5202	(A,126,72)	CKSRYB105K10
C 5203	(A,133,62)	CKSQYB106K6R3
C 5208	(A,121,61)	CKSRYB105K10
C 5209	(A,122,58)	CKSSYB104K10
C 5210	(A,123,57)	CKSQYB475K6R3
C 5211	(A,121,69)	CKSQYB475K6R3
C 5212	(A,121,75)	CKSRYB105K10
C 5301	(A,99,34) 10 uF	DCH1201
C 5302	(A,99,36) 10 uF	DCH1201
C 5303	(A,93,34)	CKSSYB104K10
C 5304	(A,89,32)	CKSSYB104K10
C 5305	(A,91,35) 10 uF	DCH1201
C 5307	(A,89,41)	CKSSYB104K10
C 5308	(A,97,41)	CKSSYB104K10
C 5314	(A,94,41)	CKSSYB104K10
C 5401	(A,23,45)	CKSQYB475K6R3
C 5402	(A,31,47)	CKSSYB104K10
C 5403	(A,21,47)	CKSSYB104K10
C 5501	(A,49,75)	CKSRYB105K10
C 5502	(A,39,67)	CKSRYB105K10
C 5503	(A,81,43)	CKSSYB104K10
C 5504	(A,84,34) 10 uF	DCH1201
C 5505	(A,71,44)	CSZS100M10
C 5506	(A,58,39)	CSZS100M10
C 5507	(A,59,41)	CKSSYB104K10
C 5508	(A,61,40)	CKSSYB104K10
C 5509	(A,63,39)	CKSSYB104K10
C 5510	(A,64,40)	CKSSYB104K10
C 5511	(A,67,40)	CKSSYB104K10
C 5512	(A,68,40)	CKSSYB104K10
C 5513	(A,62,45)	CKSSYB104K10
C 5516	(A,64,42)	CKSSYB104K10
C 5517	(A,67,44)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 5518	(A,60,42)	CKSSYB104K10
C 5519	(A,68,46)	CKSSYB471K50
C 5521	(A,91,45) 10 uF	DCH1201
C 5522	(A,72,48)	CKSSYB104K10
C 5523	(A,72,55)	CKSSYB104K10
C 5524	(A,87,39) 10 uF	DCH1201
C 5525	(A,57,42)	CCSSCH330J50
C 5526	(A,93,48) 10 uF	DCH1201
C 5527	(A,63,44)	CKSSYB104K10
C 5528	(A,73,51)	CKSSYB104K10
C 5529	(A,65,45)	CKSSYB104K10
C 5530	(A,76,57)	CCSSCH9R0D50
C 5531	(A,76,60)	CCSSCH120J50
C 5532	(A,52,45)	CKSSYB104K10
C 5533	(A,70,63)	CKSSYB104K10
C 5534	(A,38,53)	CKSSYB104K10
C 5535	(A,74,65)	CKSSYB104K10
C 5536	(A,49,49)	CKSSYB104K10
C 5537	(A,69,66)	CKSSYB104K10
C 5538	(A,63,71)	CKSSYB104K10
C 5539	(A,43,52)	CKSSYB104K10
C 5540	(A,62,72)	CKSSYB104K10
C 5541	(A,62,74)	CKSSYB104K10
C 5542	(A,35,66)	CSZSR470M10
C 5543	(A,55,81)	CKSSYB102K50
C 5544	(A,44,65)	CKSSYB104K10
C 5545	(A,38,64)	CKSSYB103K16
C 5546	(A,51,77)	CKSRYB105K10
C 5547	(A,40,61)	CKSSYB104K10
C 5548	(A,40,62)	CKSSYB104K10
C 5549	(A,41,64)	CKSSYB104K10
C 5550	(A,42,67)	CKSRYB105K10
C 5551	(A,48,71)	CKSSYB104K10
C 5552	(A,50,75)	CKSSYB104K10
C 5553	(A,52,73)	CKSSYB104K10
C 5554	(A,70,46)	CKSSYB104K10
C 5555	(A,36,56)	CSZSR470M10
C 5556	(A,69,72)	CCSSCH180J50
C 5557	(A,40,73)	CSZSR470M10
C 5558	(A,71,77)	CCSSCH180J50
C 5560	(A,64,76)	CKSSYB104K10
C 5601	(A,87,76) 10 uF	DCH1201
C 5602	(A,88,74)	CKSSYB104K10
C 5701	(A,14,31)	CKSRYB105K16
C 5702	(A,10,41) 10 uF	CCG1236
C 5703	(A,6,50) 10 uF	CCG1236
C 5704	(A,10,53)	CKSRYB104K16
C 5705	(A,24,30) 10 uF	CCG1236
C 5706	(A,13,34)	CKSSYB104K16
C 5707	(A,13,31)	CKSRYB105K10
C 5708	(A,20,22)	CKSRYB474K10
C 5710	(A,10,19)	CKSRYB105K10
C 5711	(A,20,32)	CKSSYB104K10
C 5713	(A,8,46) 10 uF	CCG1236
C 5714	(A,8,43) 10 uF	CCG1236
C 5715	(A,24,28) 10 uF	CCG1236
C 5716	(A,11,25)	CKSSYB104K10
C 5718	(A,8,30)	CKSSYB104K10
C 5805	(A,93,37)	CKSSYB104K10
C 5806	(A,98,45)	CKSSYB104K10
C 5807	(A,97,48)	CKSSYB104K10
C 5808	(A,100,37)	CKSSYB102K50

K

Unit Number : EWM5101
Unit Name : Main PCB Unit

MISCELLANEOUS

IC 101	Regulator	BA00CC0WFP
IC 102	IC	BA6247FP
IC 103	Photo-interrupter	GP2L24B
IC 104	IC	TC7W14FU
IC 105	Photo-interrupter	GP2L24B
Q 101	Chip Transistor	DTC124EUA
D 101	Diode	UDZS5R6(B)

RESISTORS

R 101	RS1/16S102J
R 102	RS1/16S3302D
R 103	RS1/16S3900D
R 104	RS1/16S4701D
R 105	RS1/16S471J
R 106	RS1/16S102J
R 107	RS1/16S102J
R 108	RS1/16S102J
R 109	RS1/16S102J
R 110	RS1/16S102J
R 111	RS1/16S562J
R 112	RS1/16S102J
R 113	RS1/16S102J
R 114	RS1/16S102J
R 115	RS1/16S562J
R 116	RS1/16S102J
R 117	RS1/16S472J

CAPACITORS

C 101	CKSYB475K16
C 102	CKSYB475K16
C 103	CKSRYB104K16
C 104	CKSRYB104K16
C 105	CKSRYB223K16
C 106	CKSRYB104K16
C 107	CKSRYB223K16
C 108	CEVW101M16
C 109	CKSRYB104K16
C 110	CCSRCH102J50
C 111	CCSRCH102J50

L

Unit Number :
Unit Name : Switch PCB Unit

S 101	Switch(Angle SW)	CSN1068

M

Unit Number :
Unit Name : Volume PCB Unit

Circuit Symbol and No.			Part No.
VR101	Volume(Angle sense)		CCW1025

C

Unit Number : YWX5010
Unit Name : DVD Core Unit(MS7)

MISCELLANEOUS

IC 1004	(B,85,55)	IC	NJM2885DL1-33
IC 1005	(B,88,64)	IC	R1232D121B
IC 1201	(A,27,16)	IC	BD8217EFV
IC 1401	(B,64,35)	Flash ROM Unit	CWW2238
IC 1402	(A,86,21)	Flash ROM Unit	CWW2239
IC 1480	(B,63,14)	SDRAM(64M)	K4S641632N-LC75
IC 1501	(A,62,21)	IC	MN2DS0018MAUB
IC 1801	(B,44,18)	D/A Converter	PCM1753DBQ
IC 1900	(B,38,11)	IC	S-1200B50-M5
IC 1901	(B,73,59)	Regulator IC	S-1133B50-U5
Q 1101	(B,64,52)	Transistor	LSC4081UB
Q 1102	(B,68,50)	Transistor	LSC4081UB
Q 1103	(B,64,57)	Transistor	2SB1132
Q 1104	(B,64,45)	Transistor	2SB1132
L 1003	(B,83,62)	Inductor	CTF1757
L 1004	(B,85,71)	Inductor	CTF1295
L 1500	(A,45,15)	Inductor	CTF1387
L 1512	(A,59,6)	Inductor	CTF1743
L 1900	(A,92,71)	Inductor	CTF1487
L 1901	(A,84,71)	Inductor	CTF1558
L 1902	(A,78,68)	Inductor	CTF1734
X 1501	(A,45,12)	Oscillator 27.000 MHz	CSS1768
F 1900	(A,89,72)	Chip EMI Filter	DTF1106
F 1901	(A,85,73)	Chip EMI Filter	DTL1106
CN1101	(A,42,44)	Connector	CKS5775
CN1201	(A,25,36)	Connector	CKS5859
CN1301	(B,91,13)	Connector	CKS5705
CN1901	(A,74,57)	Connector	CKS6025

RESISTORS

R 1101	(B,61,50)	RS1/16SS104J
R 1102	(B,67,52)	RS1/16SS104J
R 1103	(B,67,54)	RS1/16SS391J
R 1104	(B,62,52)	RS1/16SS511J
R 1105	(B,70,49)	RS1/16SS391J
R 1106	(B,69,52)	RS1/16SS561J
R 1109	(B,68,54)	RS1/16SS3R3J
R 1110	(B,60,49)	RS1/16SS3R3J
R 1111	(B,60,59)	RS1/10SR2R2J
R 1112	(B,60,54)	RS1/10SR2R2J
R 1113	(B,70,47)	RS1/10SR2R2J
R 1114	(B,67,44)	RS1/10SR2R2J
R 1115	(B,60,56)	RS1/10SR2R2J
R 1116	(B,60,57)	RS1/10SR2R2J
R 1117	(B,67,46)	RS1/10SR2R2J
R 1118	(B,67,47)	RS1/10SR2R2J
R 1200	(A,33,9)	RS1/16SS753J
R 1201	(A,33,8)	RS1/16SS753J
R 1205	(A,34,22)	RS1/16SS1R0J
R 1210	(B,19,18)	RS1/16SS101J
R 1211	(A,19,13)	RS1/16SS102J

Circuit Symbol and No.		Part No.
R 1212	(A,20,12)	RS1/16SS102J
R 1213	(B,23,21)	RS1/10SR1R0J
R 1214	(B,22,20)	RS1/10SR1R0J
R 1215	(B,24,21)	RS1/10SR1R0J
R 1216	(B,27,21)	RS1/10SR1R0J
R 1218	(A,18,12)	RS1/16SS1R0J
R 1219	(A,18,13)	RS1/16SS1R0J
R 1222	(A,19,9)	RS1/16SS1R0J
R 1223	(A,19,8)	RS1/16SS1R0J
R 1226	(A,22,28)	RS1/16SS101J
R 1303	(B,90,22)	RS1/16SS0R0J
R 1304	(B,89,23)	RS1/16SS563J
R 1305	(B,89,24)	RS1/16SS243J
R 1306	(B,90,24)	RS1/16SS683J
R 1307	(B,89,22)	RS1/16SS243J
R 1314	(B,86,23)	RAB4CQ822J
R 1401	(B,75,32)	RS1/16SS221J
R 1402	(B,53,31)	RS1/16SS104J
R 1405	(B,79,14)	RS1/16SS104J
R 1406	(B,80,11)	RS1/16SS472J
R 1480	(B,56,22)	RAB4CQ560J
R 1481	(B,61,23)	RAB4CQ560J
R 1482	(B,65,22)	RAB4CQ560J
R 1483	(B,68,22)	RAB4CQ560J
R 1484	(B,71,22)	RAB4CQ560J
R 1485	(B,54,6)	RAB4CQ560J
R 1486	(B,59,6)	RAB4CQ560J
R 1487	(B,68,6)	RAB4CQ560J
R 1488	(B,72,6)	RAB4CQ560J
R 1489	(B,63,6)	RS1/16SS560J
R 1490	(B,54,22)	RS1/16SS560J
R 1501	(A,47,11)	RS1/16SS122J
R 1503	(A,47,13)	RS1/16SS105J
R 1504	(A,43,15)	RS1/16SS100J
R 1505	(A,48,15)	RS1/16SS101J
R 1506	(A,41,16)	RS1/16SS101J
R 1507	(A,42,17)	RS1/16SS101J
R 1508	(A,47,17)	RS1/16SS221J
R 1509	(A,66,39)	RS1/16SS102J
R 1510	(A,66,36)	RS1/16SS102J
R 1512	(A,61,6)	RS1/16SS101J
R 1513	(A,68,44)	RS1/16SS103J
R 1514	(A,68,38)	RS1/16SS183J
R 1515	(A,71,39)	RS1/16SS472J
R 1516	(A,66,42)	RS1/16SS104J
R 1517	(A,78,17)	RS1/16SS103J
R 1518	(A,78,25)	RS1/16SS103J
R 1519	(A,77,29)	RS1/16SS102J
R 1522	(A,66,41)	RS1/16SS104J
R 1523	(A,67,39)	RS1/16SS221J
R 1524	(A,74,43)	RS1/16SS472J
R 1525	(A,69,38)	RS1/16SS223J
R 1526	(A,70,40)	RS1/16SS103J
R 1527	(A,69,36)	RS1/16SS223J
R 1528	(A,79,19)	RS1/16SS103J
R 1529	(A,77,20)	RS1/16SS103J
R 1530	(B,54,28)	RS1/16SS104J
R 1531	(A,67,41)	RS1/16SS391J
R 1534	(A,74,39)	RS1/16SS221J
R 1535	(A,78,29)	RS1/16SS101J

Circuit Symbol and No.		Part No.
R 1536	(A,72,39)	RS1/16SS104J
R 1537	(A,73,41)	RS1/16SS104J
R 1538	(A,64,7)	RS1/16SS104J
R 1539	(A,79,32)	RS1/16SS101J
R 1540	(A,73,40)	RS1/16SS221J
R 1541	(A,75,41)	RS1/16SS221J
R 1542	(A,76,34)	RS1/16SS104J
R 1543	(A,70,38)	RS1/16SS561J
R 1544	(A,77,34)	RS1/16SS104J
R 1545	(A,78,21)	RS1/16SS103J
R 1546	(A,78,23)	RS1/16SS103J
R 1548	(A,77,30)	RS1/16SS101J
R 1550	(B,49,27)	RS1/16SS6801D
R 1551	(B,50,26)	RS1/16SS4702D
R 1556	(A,61,48)	RS1/16SS472J
R 1600	(A,44,26)	RS1/16SS0R0J
R 1601	(A,47,24)	RS1/16SS123J
R 1602	(A,43,25)	RS1/16SS123J
R 1603	(A,42,28)	RN1/16SE1002D
R 1604	(A,54,38)	RS1/16SS105J
R 1605	(A,54,36)	RS1/16SS105J
R 1611	(A,47,25)	RS1/16SS105J
R 1702	(A,48,22)	RS1/16SS3002D
R 1704	(A,42,22)	RS1/16SS2402D
R 1705	(A,41,19)	RS1/16SS1002D
R 1706	(A,42,20)	RS1/16SS101J
R 1708	(B,52,23)	RS1/16SS2000D
R 1801	(B,35,13)	RS1/16S0R0J
R 1803	(B,39,21)	RS1/16SS821J
R 1804	(B,39,20)	RS1/16SS821J
R 1805	(B,32,17)	RS1/16SS104J
R 1806	(B,36,16)	RS1/16SS104J
R 1905	(A,81,66)	RS1/16SS101J
R 1910	(A,79,69)	RS1/16SS101J
R 1911	(A,69,49)	RS1/16SS101J
R 1915	(A,64,48)	RS1/16SS0R0J

CAPACITORS

C 1008	(B,79,63)	10 uF	DCH1201
C 1009	(B,79,64)	10 uF	DCH1201
C 1010	(B,79,55)		CKSQYB225K10
C 1011	(B,78,53)		CKSRYB105K10
C 1013	(B,84,66)	10 uF	DCH1201
C 1014	(B,83,68)	10 uF	DCH1201
C 1101	(B,70,54)	10 uF	DCH1201
C 1104	(B,61,53)		CKSSYB104K10
C 1105	(B,61,49)		CKSSYB104K10
C 1106	(B,62,60)		CKSSYB103K16
C 1107	(B,65,42)		CKSSYB103K16
C 1108	(A,38,35)		CKSSYB103K16
C 1109	(A,39,34)		CKSRYB224K10
C 1110	(A,37,37)		CKSSYB103K16
C 1111	(A,41,36)		CKSRYB224K10
C 1112	(B,60,45)	22 uF	CCG1178
C 1113	(B,68,57)	22 uF	CCG1178
C 1201	(B,28,17)		CKSYB475K16
C 1202	(B,28,20)		CKSSYB104K16
C 1205	(A,33,23)		CKSSYB103K16
C 1206	(A,36,23)		CKSRYB104K16

Circuit Symbol and No.		Part No.
C 1207	(A,33,20)	CKSRYB104K16
C 1208	(A,33,15)	CKSSYB104K16
C 1212	(A,32,25)	CKSSYB104K16
C 1213	(B,22,26)	CKSSYB222K50
C 1214	(B,22,28)	CKSRYB104K16
C 1218	(A,19,10)	CKSRYB104K16
C 1219	(A,21,9)	CKSRYB104K16
C 1220	(B,23,13)	CEVW101M16
C 1401	(B,76,32)	CKSSYB103K16
C 1403	(B,53,34)	CKSSYB104K10
C 1404	(B,51,37)	CKSQYB475K6R3
C 1408	(B,82,14)	CKSSYB104K10
C 1409	(B,79,15)	CKSQYB475K6R3
C 1480	(B,51,20)	CKSSYB104K10
C 1481	(B,51,21)	CKSSYB104K10
C 1482	(B,59,21)	CKSSYB104K10
C 1484	(B,63,21)	CKSSYB104K10
C 1485	(B,74,22)	CKSSYB104K10
C 1487	(B,62,6)	CKSSYB104K10
C 1488	(B,57,6)	CKSSYB104K10
C 1489	(B,75,18)	CKSQYB106K6R3
C 1501	(B,47,31)	CKSQYB106K6R3
C 1502	(B,83,20)	CKSQYB106K6R3
C 1503	(A,63,6)	CKSSYB104K10
C 1504	(A,53,7)	CKSSYB104K10
C 1505	(A,56,7)	CKSSYB104K10
C 1506	(A,58,7)	CKSSYB104K10
C 1507	(A,65,7)	CKSSYB104K10
C 1508	(A,69,7)	CKSSYB104K10
C 1509	(A,71,7)	CKSSYB104K10
C 1510	(A,47,9)	CCSSCH120J50
C 1511	(A,48,11)	CKSSYB104K10
C 1512	(A,45,14)	CCSSCH100D50
C 1513	(B,76,12)	CKSSYB104K10
C 1514	(A,48,14)	CKSSYB104K10
C 1515	(A,48,17)	CKSSYB104K10
C 1516	(B,76,15)	CKSSYB104K10
C 1517	(A,77,18)	CKSSYB104K10
C 1518	(B,77,23)	CKSSYB104K10
C 1519	(A,77,28)	CKSSYB104K10
C 1520	(A,78,32)	CKSSYB104K10
C 1521	(A,62,36)	CKSSYB104K10
C 1522	(A,68,36)	CKSSYB104K10
C 1523	(A,70,36)	CKSSYB471K50
C 1524	(A,68,40)	CKSSYB473K10
C 1525	(A,69,40)	CKSSYB103K16
C 1526	(A,67,37)	CKSSYB103K16
C 1528	(A,72,38)	CCSSCH471J16
C 1529	(A,69,42)	CKSSYB103K16
C 1530	(B,50,27)	CKSSYB104K10
C 1531	(A,71,41)	CKSSYB473K16
C 1601	(A,44,28)	CKSSYB103K16
C 1602	(A,48,23)	CCSSCH101J50
C 1603	(A,43,24)	CCSSCH101J50
C 1604	(A,45,24)	CCSSCH680J50
C 1605	(A,41,25)	CCSSCH680J50
C 1606	(A,40,29)	CKSSYB104K10
C 1607	(A,50,38)	CKSQYB106K6R3
C 1608	(A,47,33)	CKSRYB105K10
C 1609	(A,54,40)	CKSSYB104K10

Circuit Symbol and No.			Part No.
C 1610	(A,55,38)		CKSSYB104K10
C 1611	(A,55,36)		CKSSYB104K10
C 1612	(A,55,40)		CKSSYB104K10
C 1613	(A,56,40)		CKSSYB104K10
C 1614	(A,57,40)		CKSSYB104K10
C 1615	(A,57,38)		CKSSYB104K10
C 1616	(A,57,36)		CKSSYB104K10
C 1617	(A,58,36)		CKSSYB104K10
C 1618	(A,60,38)		CCSSCH101J50
C 1619	(A,59,36)		CKSSYB562K25
C 1620	(A,60,36)		CKSSYB224K6R3
C 1621	(A,61,38)		CKSSYB224K6R3
C 1622	(A,62,38)		CKSSYB333K16
C 1623	(A,48,33)		CKSRYB105K10
C 1624	(A,61,40)		CKSSYB104K10
C 1625	(A,60,40)		CKSSYB104K10
C 1628	(A,47,26)		CKSSYB103K16
C 1700	(A,48,21)		CKSSYB104K10
C 1701	(A,47,19)		CKSSYB104K10
C 1702	(A,41,23)		CKSRYB105K10
C 1703	(A,44,22)		CKSSYB104K10
C 1704	(A,40,22)		CKSSYB104K10
C 1801	(A,82,50)		CKSSYB104K10
C 1802	(B,50,16)	10 uF	DCH1201
C 1805	(B,38,15)		CKSSYB104K10
C 1808	(B,32,19)		CCSRCH182J50
C 1809	(B,35,19)		CCSRCH182J50
C 1810	(B,33,18)		CKSQYB475K6R3
C 1811	(B,36,18)		CKSQYB475K6R3
C 1901	(B,35,10)		CKSRYB105K10
C 1902	(B,39,8)		CKSRYB105K16
C 1903	(B,33,7)		CKSSYB104K10
C 1904	(A,70,46)		CCSSCH101J50
C 1905	(A,86,70)		CKSSYB102K50
C 1906	(B,75,63)		CKSSYB104K16
C 1907	(B,70,58)		CKSQYB475K10
C 1908	(A,90,70)		CKSSYB102K50

Circuit Symbol and No.		Part No.
	Pickup Unit(Service)	CXX2558
M 1	Motor Unit(LOADING)	CXC4912
M 2	Motor(STEPPNG)	CXM1364
M 3	Motor(SPINDLE)	CXM1405
	Fan Motor	CXM1262
	Motor Unit(SLIDE)	CXC6638
	Motor Unit(ANGLE)	CXC6639

D

Unit Number : CWX3864
Unit Name : Compound Unit(A)

MISCELLANEOUS

S 1201	Switch(12 cm)	CSN1067
S 1202	Switch(8 cm)	CSN1067
S 1203	Spring Switch(DISC SENS)	CSN1069
S 1204	Spring Switch(DISC SENS)	CSN1070
S 1205	Switch(8 cm)	CSN1068

E

Unit Number : CWX3559
Unit Name : Compound Unit(B)

MISCELLANEOUS

S 1206	Switch(CLAMP)	CSN1067

Miscellaneous Parts List