
2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*


2.1 PACKING

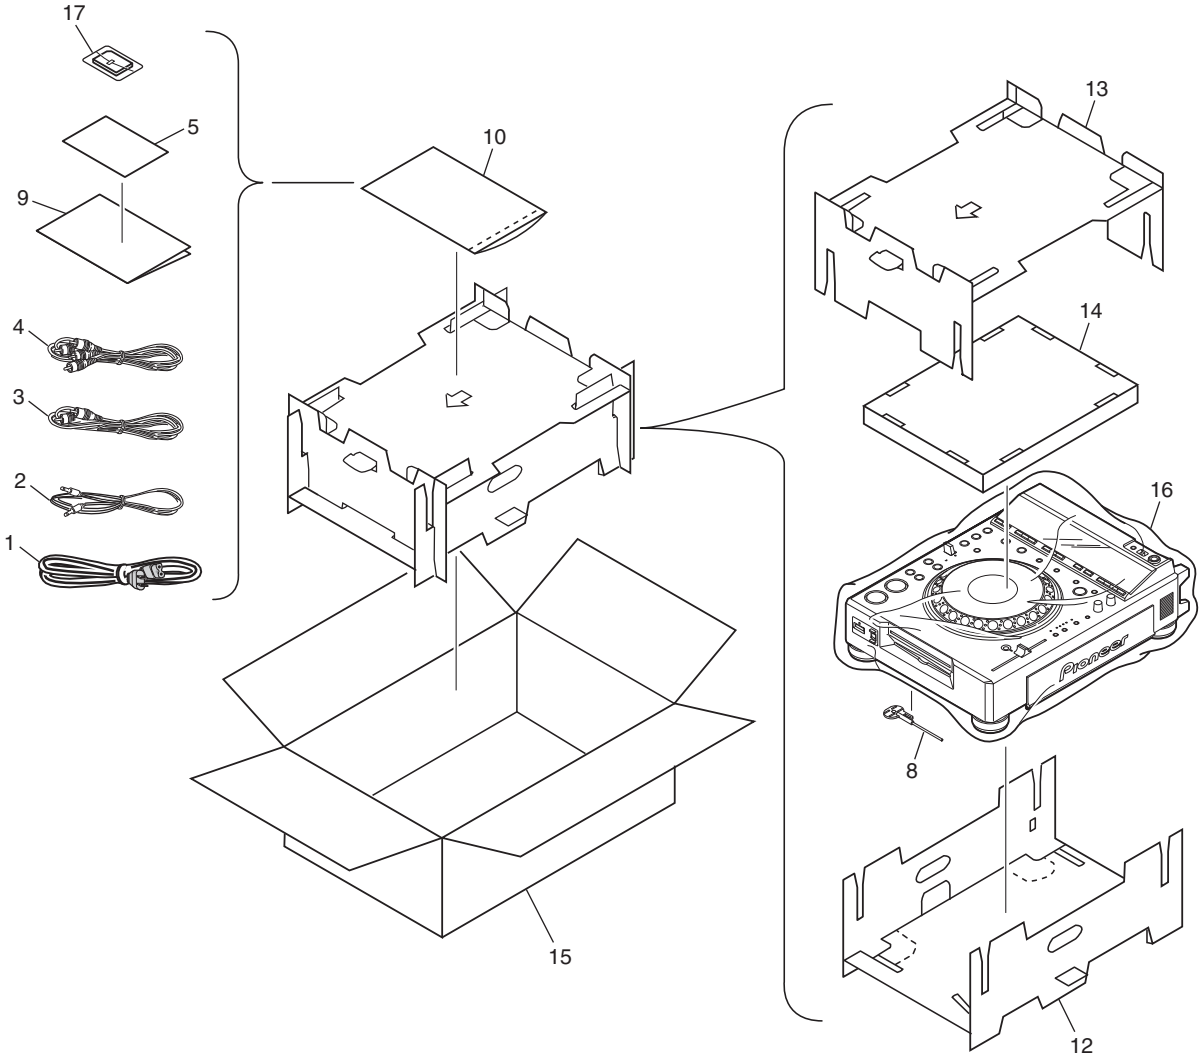

PACKING Parts List

Mark	No.	Description	Part No.
⚠	1	Power Cord	ADG7021
	2	Control Cord (L= 1m)	PDE-319
	3	Audio Cable (L= 1.5m)	VDE1064
	4	Video Cable (L=1.5m)	VDE1065
NSP	5	Warranty Card	ARY7043
	6	• • • • •	
	7	• • • • •	
	8	Forced Eject Pin	DEX1013
	9	Operating Instructions(English)	DRB1358
NSP	10	Polyethylene Bag (230 x 340 x 0.05)	VHL-014
	11	• • • • •	
	12	Pad (A)	DHA1596
	13	Pad (B)	DHA1597
	14	Pad (C)	DHA1598
	15	Packing Case	DHG2425
	16	Mirror mat Sheet	VHL1012
	17	SD Memory Card	DWX2369


2.2 EXTERIOR SECTION

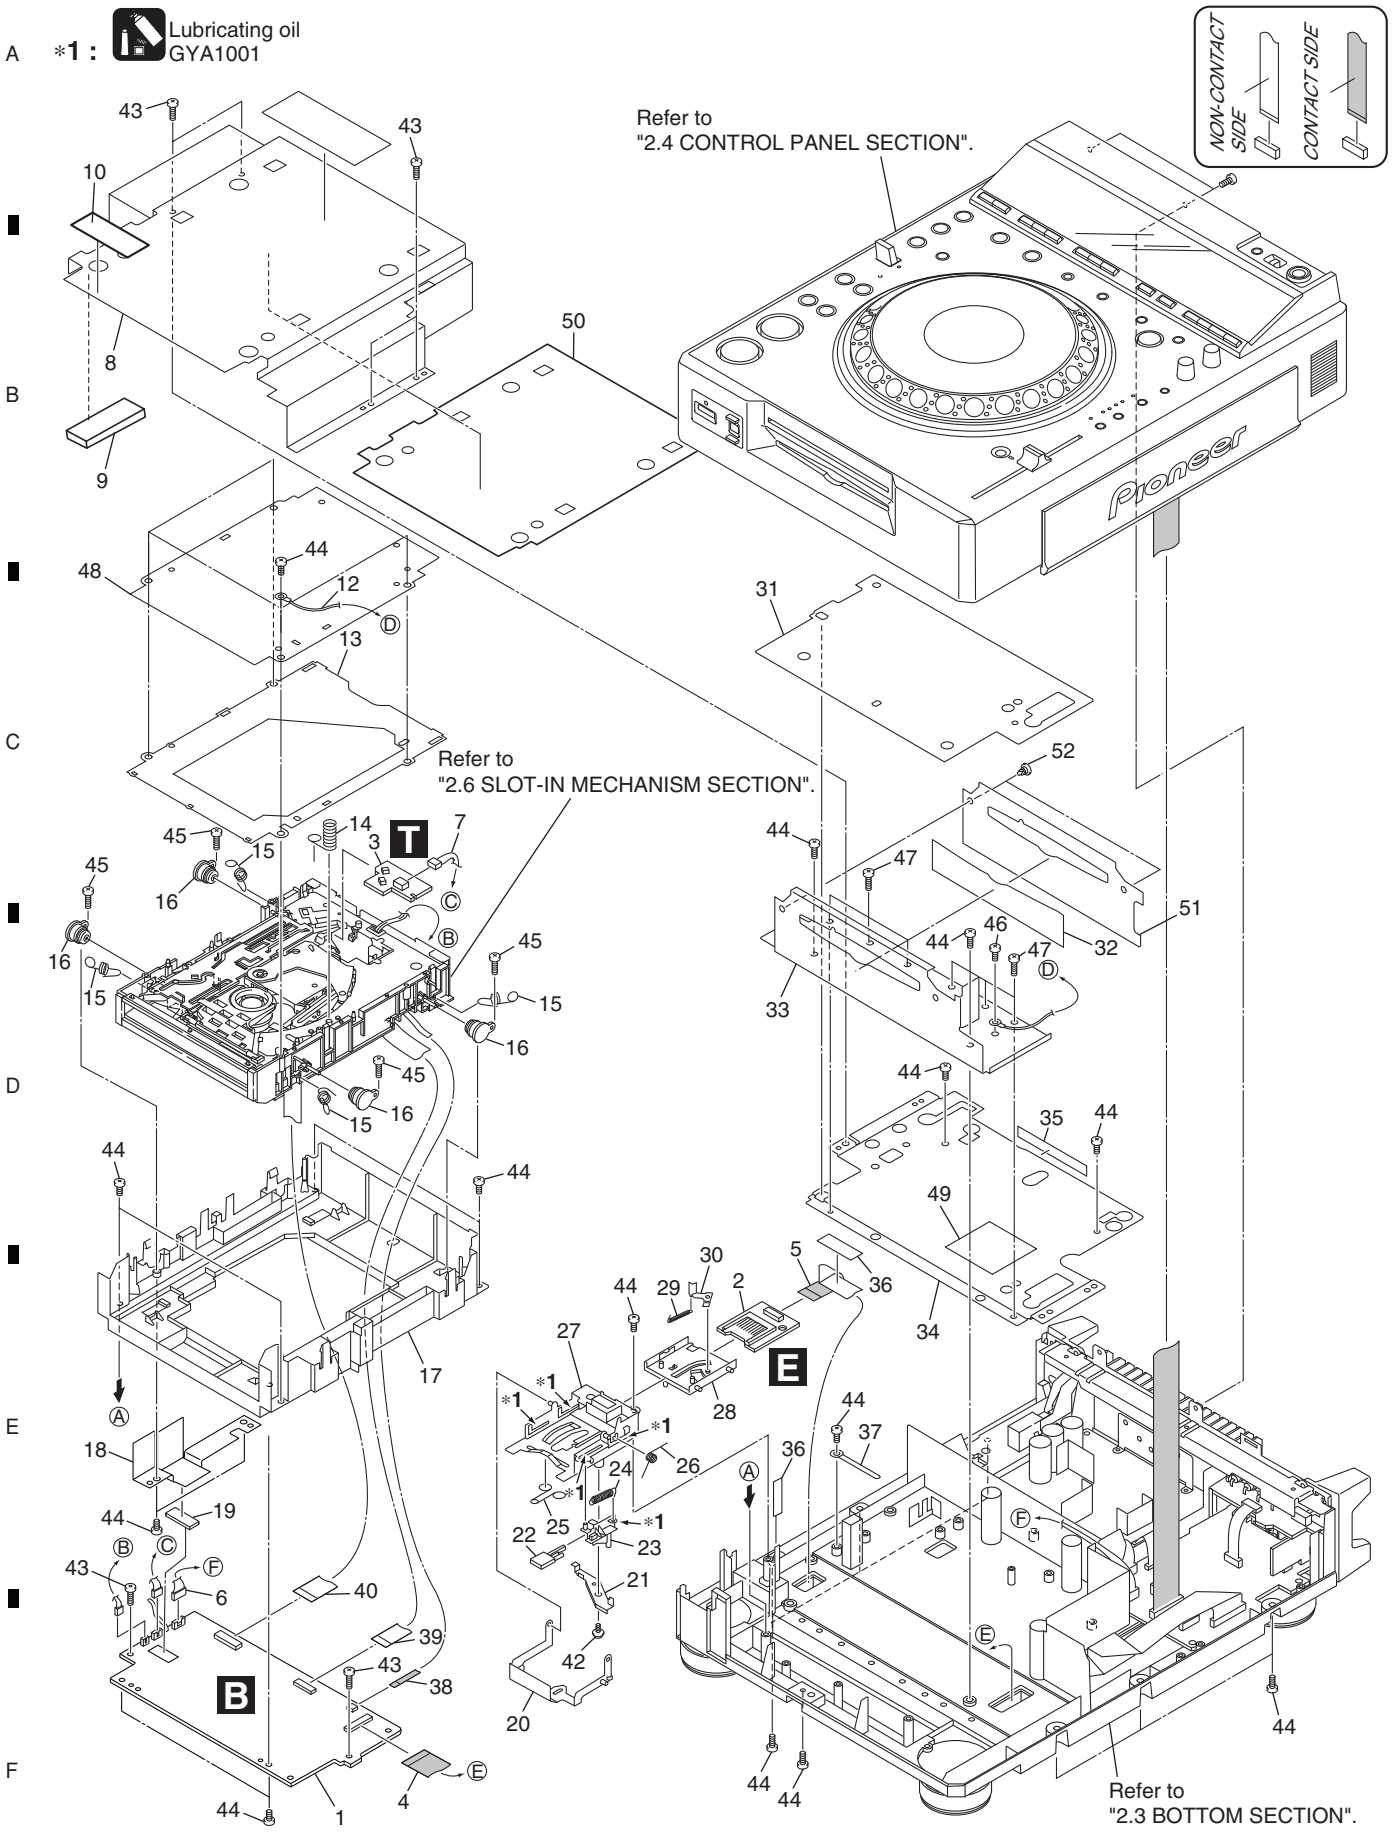

EXTERIOR SECTION Parts List

Mark	No.	Description	Part No.
	1	DVPL Assy	DWX2341
	2	SDCB Assy	DWX2344
	3	SLMB Assy	DWS1344
	4	40P Flexible Cable/60V	DDD1252
	5	13P Flexible Cable/60V	DDD1253
	6	Connector Assy	PF04EE-D40
	7	Connector Assy	PF03PP-B30
NSP	8	Earth Plate (CU)	DNE2587
	9	Gascket 9 x 3L40	DEC2688
	10	Gascket 7 x 1L40	DEC2689
	11	Sheet C	DEC2695
	12	Earth Lead Unit/300V	DDF1010
	13	Mechanism Holder Plate	DNH2339
	14	Earth Spring	DBH1398
	15	Float Spring (G11)	DBH1526
	16	Damper	CNV6011
	17	Mechanism Base	DNK4240
	18	Driver Heatsink Plate	DNH2586
NSP	19	Silicone Rubber D5L	DEB1456
	20	Card Flap	DNK3998
	21	Eject Arm	DNH2617
	22	Card Ejector	DNK4241
	23	Eject Lever	DNK3999
	24	Lever Spring	DBH1498
	25	Carriage Spring	DBH1497
	26	Flap Spring	DBH1499
	27	Base Holder	DNK3996
	28	Carriage Base	DNK3997
	29	Hook Spring	DBH1496
	30	Lock Hook Assy	DXB1764
	31	Insulation Sheet	DEC2616
	32	EMI Sheet A	DEC2672
NSP	33	Front Plate	DNH2590
NSP	34	Shield Plate	DNH2591
	35	Gascket 9 x 3L85	DEC2674
	36	Lead Tape R4	DEB1529
	37	Cord Clamper	RNH-184
	38	4P Flexible Cable/60V	DDD1258
	39	26P Flexible Cable/60V	DDD1257
	40	13P Flexible Cable/60V	DDD1256
	41	• • • • •	
	42	Screw	PBA1062
	43	Screw	BBZ30P120FMC
	44	Screw	BPZ30P080FZK
	45	Screw	BPZ30P140FMC
	46	Screw	BBZ30P060FMC
	47	Screw	BBZ30P080FNI
	48	EMI Sheet B	DEC2673
	49	Sheet B	DEC2693
	50	Sheet C	DEC2695
	51	Front Cover	DEC2678
	52	Plastic Rivet	DEC1704


2.3 BOTTOM SECTION

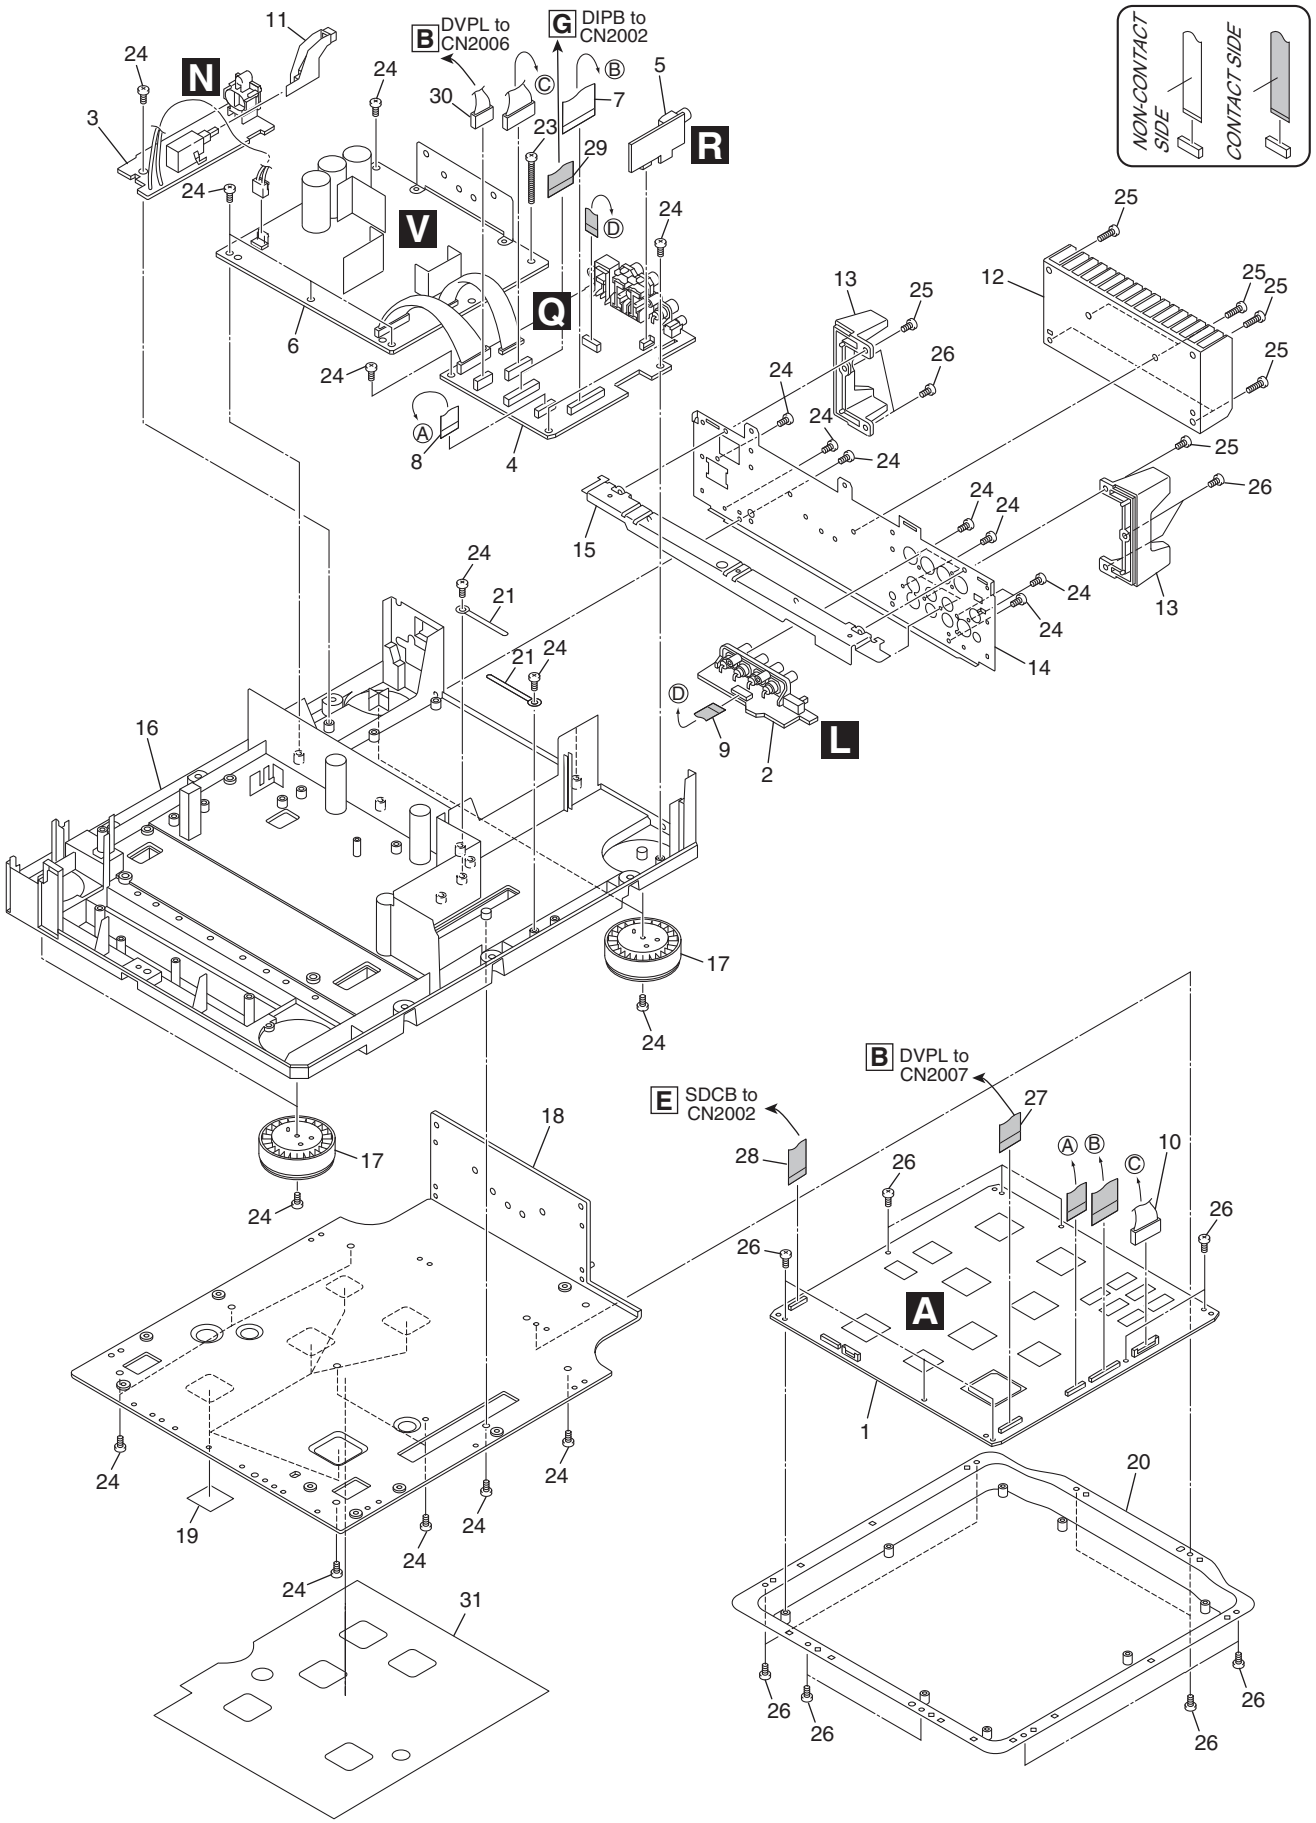

BOTTOM SECTION Parts List

Mark	No.	Description	Part No.
⚠	1	MAIN Assy	DWG1570
	2	CMPB Assy	DWG1577
	3	PSWB Assy	DWS1345
	4	MJCB Assy	DWG1573
	5	DOUT Assy	DWG1574
⚠	6	SW POWER SUPPLY Assy	DWR1378
	7	30P Flexible Cable	DDD1248
	8	17P Flexible Cable	DDD1249
	9	12P Flexible Cable	DDD1250
	10	Connector Assy	PF10PP-D12
	11	Power Knob	DNK4238
	12	Heatsink	DNG1088
	13	Rear Protector	DNK4242
	14	Rear Panel (KUC)	DNC1668
	15	Rear Stay	DNH2603
NSP	16	Chassis	DNK4239
	17	Insulator	DNK4248
	18	Heatsink Plate Assy	DXB1803
	19	Sheet	DEC2694
	20	Bottom Case Assy (KUC)	DXB1794
	21	Cord Clamper	RNH-184
	22	• • • • •	
	23	Screw	BBZ30P200FMC
	24	Screw	BPZ30P080FZK
	25	Screw	BBZ30P120FMC
	26	Screw	BBZ30P060FMC
	27	40P Flexible Cable	DDD1252
	28	13P Flexible Cable	DDD1253
	29	22P Flexible Cable	DDD1251
	30	4P Flexible Cable	PF04EE-D040
	31	Sheet	DEC2691

2.4 CONTROL PANEL SECTION

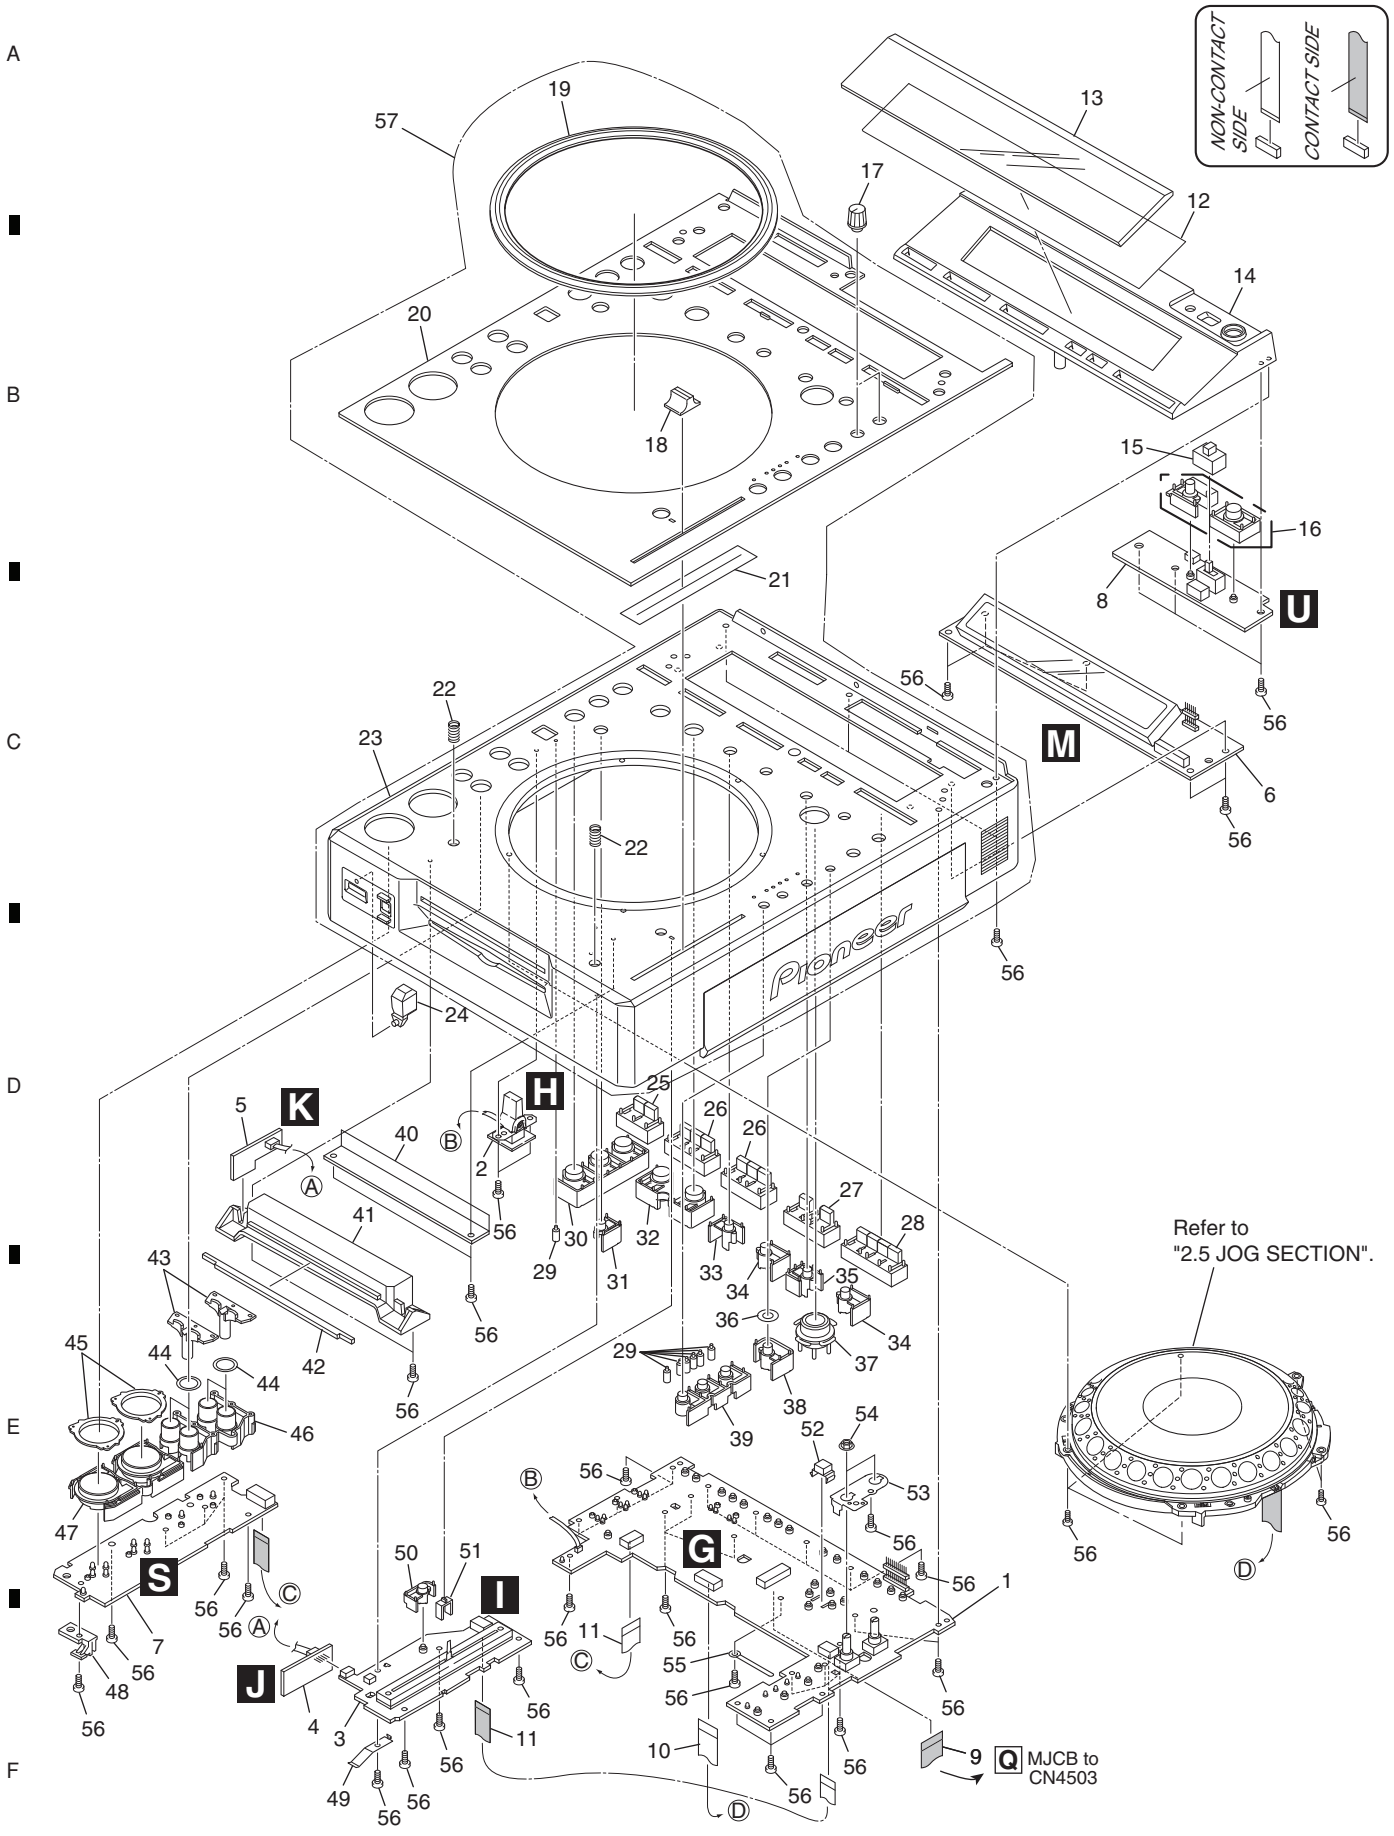



CONTROL PANEL SECTION Parts List

Mark	No.	Description	Part No.
	1	DIPB Assy	DWG1575
	2	RSWB Assy	DWS1346
	3	SLDB Assy	DWS1347
	4	LED 1 Assy	DWG1578
	5	LED 2 Assy	DWG1579
	6	MFLB Assy	DWG1576
	7	KSWB Assy	DWS1343
	8	EJTB Assy	DWS1348
	9	22P Flexible Cable	DDD1251
	10	13P Flexible Cable	DDD1255
	11	9P Flexible Cable	DDD1254
	12	Main FL Filter (PC)	DEC2609
	13	Display Panel (PMMA)	DAH2265
	14	Top Panel (ABS)	DNK4246
	15	SW Knob B	DAC2012
	16	Eject Knob	DAC2170
	17	Rotary Knob	DAA1163
	18	Slide Knob	DNK2936
	19	JOG Ring	DNB1130
	20	Top Panel (AL)	DNB1127
	21	Slide VR Packin	DED1172
	22	Earth coil Spring	DBH1527
	23	Control Panel Assy	DXB1801
	24	Card Lens	DNK4254
	25	Set Knob 1	DAC2161
	26	Set Knob 2	DAC2162
	27	Set Knob 3	DAC2163
	28	Set Knob 4	DAC2164
	29	Tempo Lens	DNK4256
	30	Set Knob (H.C)	DAC2155
	31	REC Knob	DAC2158
	32	Set Knob (Loop)	DAC2166
	33	Reloop Knob	DAC2167
	34	Ennter Knob	DAC2169
	35	CALL Knob	DAC2168
	36	Sheet 1	DED1169
	37	Cross Key 2	DAC2171
	38	Change Knob	DAC2172
	39	Set Knob (TEMPO)	DAC2160
	40	Reinforcement Plate	DNH2602
	41	Reflector	DNK4249
	42	Front Lens	DNK4251
	43	Ring Lens (SEARCH)	DNK4253
	44	Sheet 2	DED1170
	45	Ring Lens	DNK4252
	46	Set Knob (SEARCH)	DAC2157
	47	Set Knob (PLAY) Assy	DXB1799
	48	Card Stopper	DNK4250
	49	Earth Plate (CU)	DBK1224
	50	Reset knob	DAC2159
	51	LED Lens	DNK4255
	52	Cross Key Holder	DNK4262
	53	VR Stay	DNF1663
	54	Flange Nut M9	DBN1004
	55	Cord Clamper (steel)	RNH-184
	56	Screw	BPZ30P080FZK
	57	Control Panel Assy-S	DXX2548

2.5 JOG SECTION

∗1 : Lubricating oil GYA1001

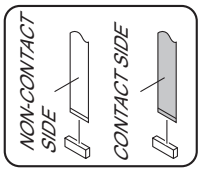


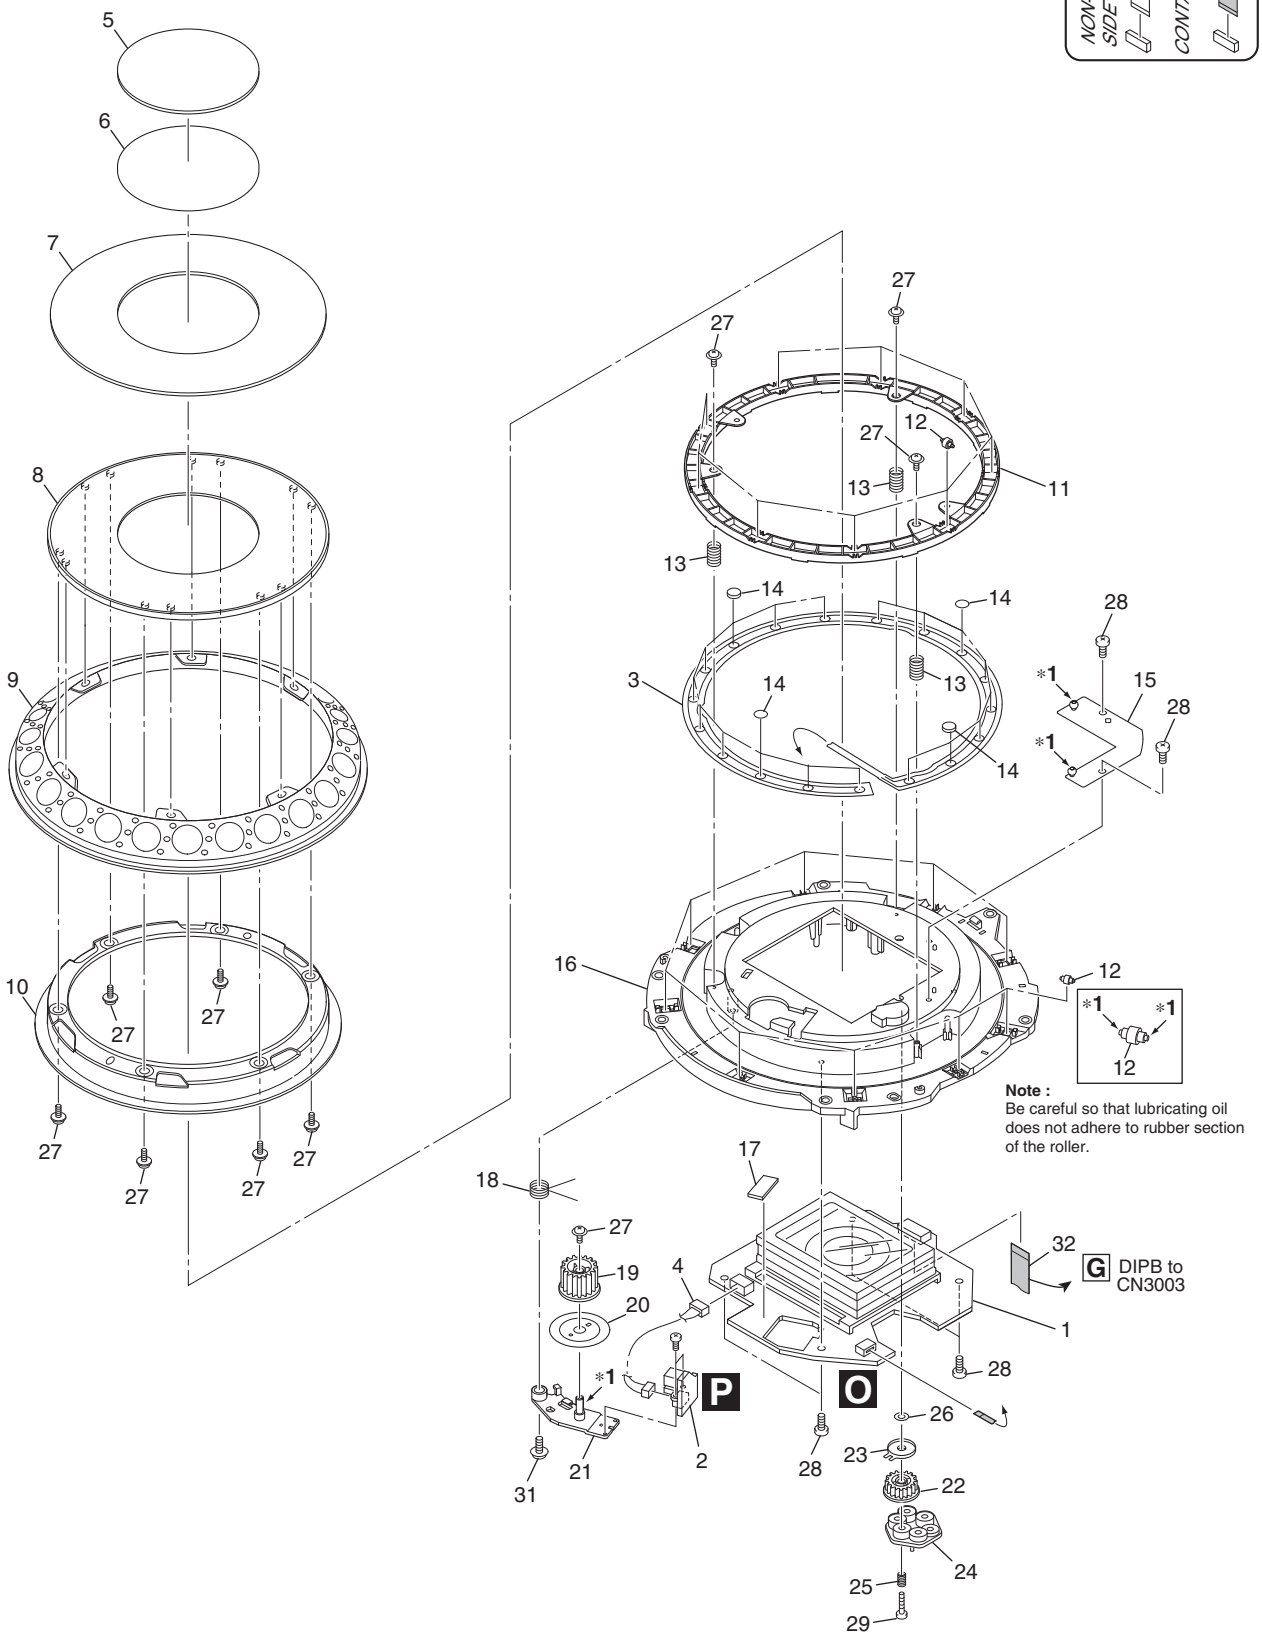

JOG SECTION Parts List

Mark	No.	Description	Part No.
	1	JFLB Assy	DWG1571
	2	JOGB Assy	DWG1572
	3	Sheet SW	DSX1060
	4	Connector Assy	PF04PP-B07
	5	Jog Panel (PMMA)	DAH2264
	6	JOG FL Filter (PC)	DEC2608
	7	JOG Plate	DNB1126
	8	JOG A	DNK4243
	9	JOG B	DNK4244
	10	JOG C	DNK4174
	11	SW Ring	DNK4070
	12	Roller A Assy	DXB1825
	13	SW Spring 31	DBH1528
	14	SW Cushion HH48/2	DEC2538
	15	JOG Stay Assy	DXB1780
	16	JOG Holder 2	DNK4175
	17	Spacer	DEC2554
	18	Arm Spring	DBH1503
	19	Deceleration Gear	DNK4066
	20	ENC Plate	DEC2498
	21	Gear Arm	DNK4065
	22	Gear	DNK4176
	23	Smoother	DNK4177
	24	Adjust Plate	DNK4178
	25	Gear Spring 200	DBH1525
	26	Washer	WA42D080D050
	27	Screw	PBA1062
	28	Screw	BPZ30P080FZK
	29	Screw	BPZ20P100FMC
	30	Screw	BPZ20P060FMC
	31	Screw	IPZ30P100FMC
	32	13P Fiexible Cable	52492-1320

2.6 SLOT-IN MECHANISM SECTION

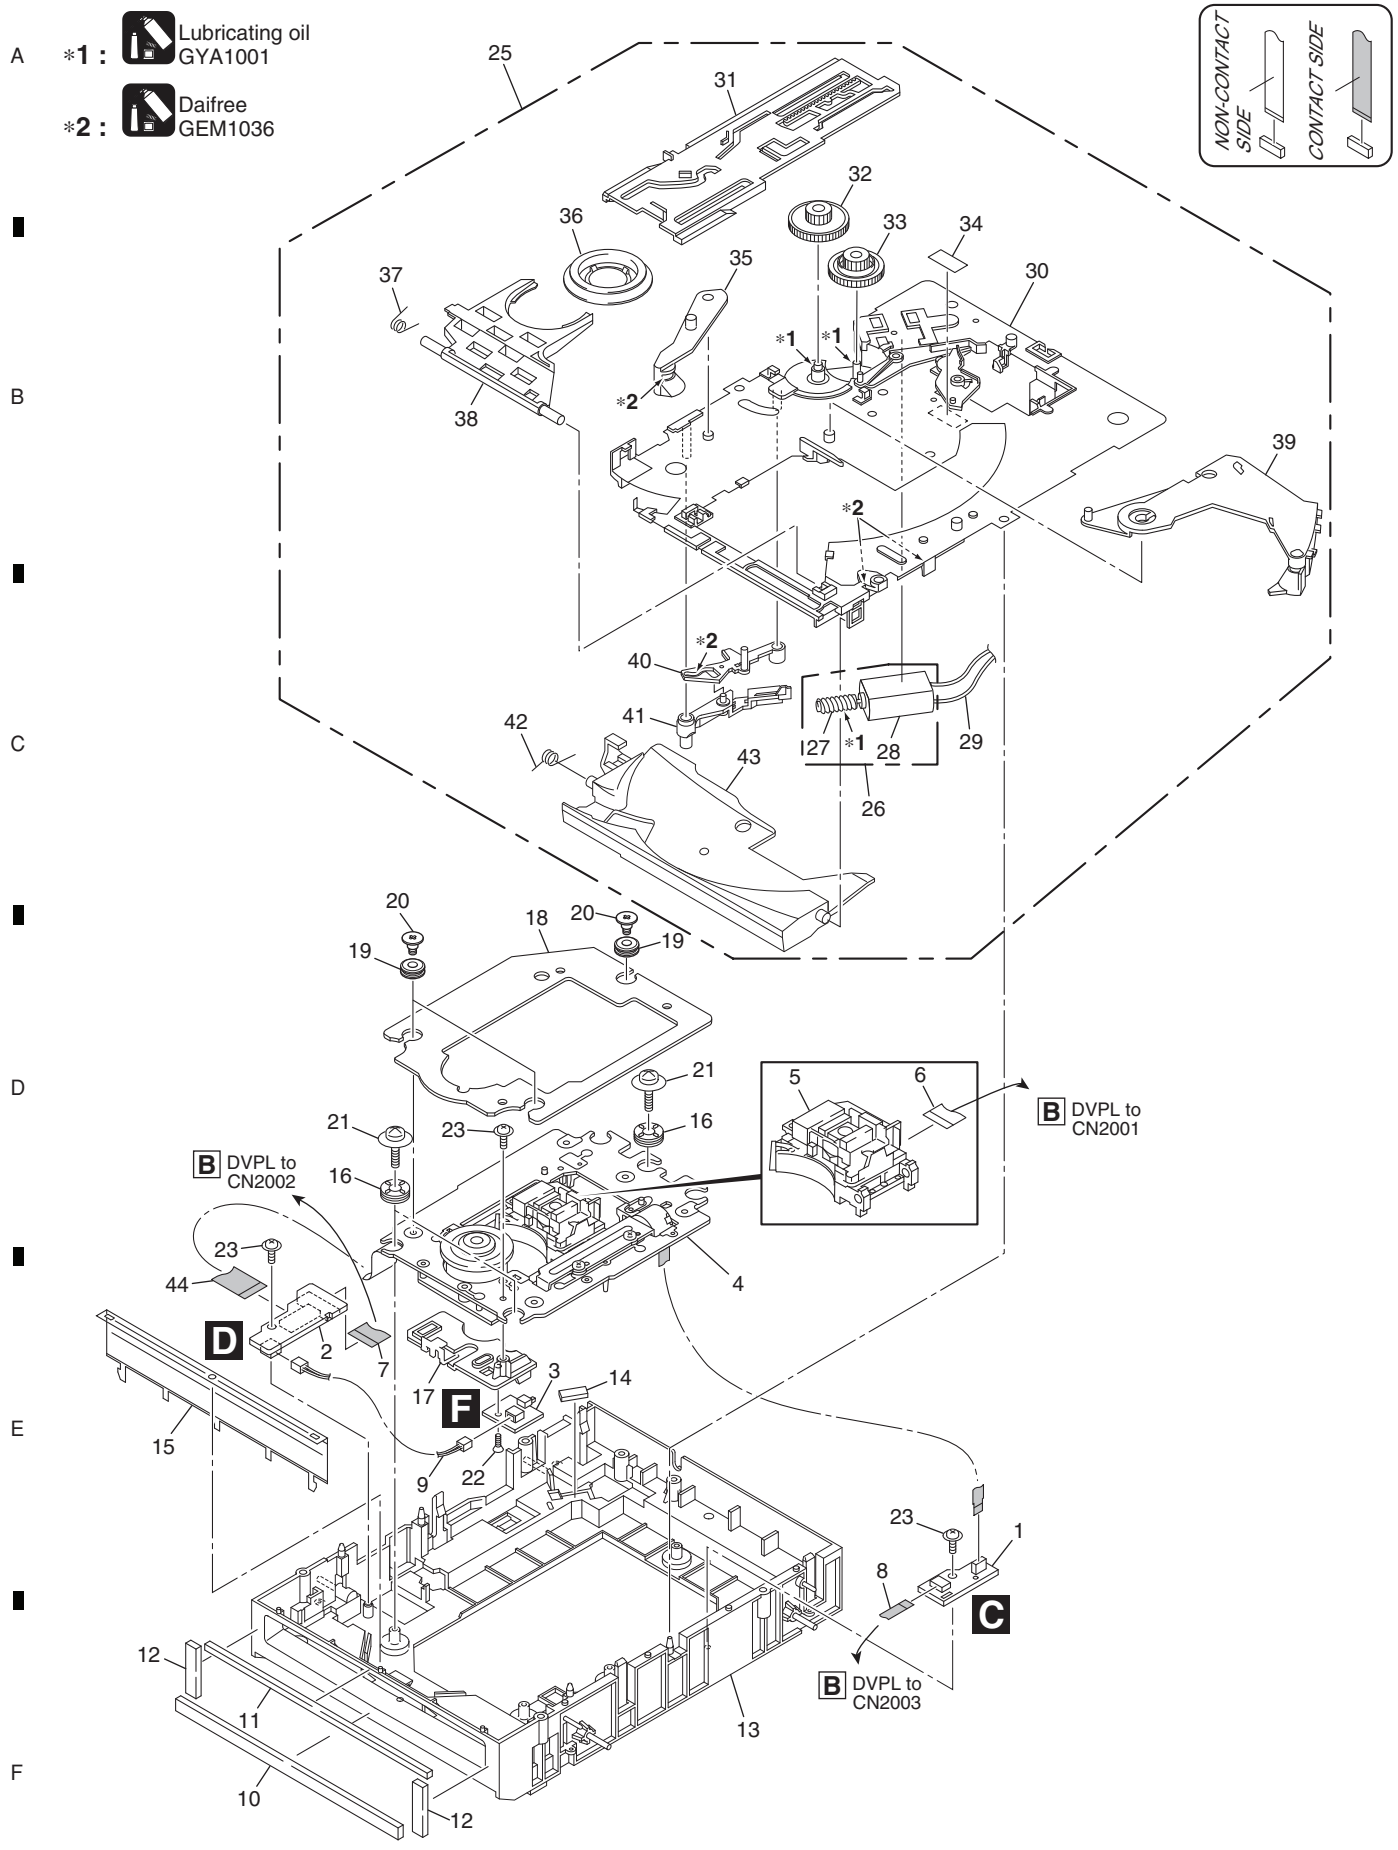

SLOT-IN MECHANISM SECTION Parts List

Mark	No.	Description	Part No.
	1	STCN Assy	DWX2342
	2	SPCN Assy	DWX2343
	3	INSW Assy	DWS1342
	4	Traverse Mechanism G11 Assy-S	DXX2541
NSP	5	Pickup Assy	OWY8037
	6	26P Flexible Cable	DDD1257
	7	13P Flexible Cable	DDD1256
	8	4P Flexible Cable	DDD1258
	9	Connector Assy	DKP3667
	10	Vessel Cushion A	DEC2633
	11	Vessel Cushion B	DEC2634
	12	Vessel Cushion C	DEC2635
	13	Float Base (G11) Assy	DXB1793
	14	Spacer POR (T3)	DEB1566
	15	Front Sheet	DED1132
	16	Float Rubber D3	DEB1404
	17	Inside SW Base	DNK4236
	18	Weight G11	DNH2583
NSP	19	DRA Rubber G5	DEB1454
NSP	20	DRA Screw R (G7)	DBA1151
	21	Float Fastener	DBA1139
	22	Screw	VBA1062
	23	Screw	IPZ20P060FMC
	24	• • • • •	
NSP	25	Slot-in Mechanism G5 assy	DXA1906
	26	Loading Motor Assy-S	DEA1008
NSP	27	Worm Gear	DNK3910
NSP	28	DC Motor	DXM1093
	29	Connector Assy	PF02PY-B32
	30	Loading Base Assy-S	DEA1022
	31	Main Cam	DNK3407
	32	Driver Gear	DNK3912
	33	Loading Gear	DNK3911
	34	SW Lever Spacer	DEC2420
	35	Loading Lever	DNK3406
	36	Clamper D4 Assy	DXA1881
	37	Clamper Spring	DBH1374
	38	Clamper Arm	DNK3576
	39	Eject Lever	DNK3684
	40	Lever A	DNK3564
	41	Lever B	DNK3558
	42	Guide Spring	DBH1375
	43	Disc Guide	DNK3914
NSP	44	13P Spindole Flexibl Cable	

5. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	→ *56 x 10[1]* →	*561*	*RD1/4PU 5 6 1 J*
47k Ω	→ *47 x 10[3]* →	*473*	*RD1/4PU 4 7 3 J*
0.5 Ω	→ *R50*		*RN2H R 5 0 K*
1 Ω	→ *1R0*		*RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	→ *562 x 10[1]* →	*5621*	*RN1/4PC 5 6 2 1 F*

LIST OF PCB ASSEMBLIES

Mark	Symbol and Description	DVJ-X1 /KUC
	1..MAIN ASSY	DWG1570
NSP	1..DVPB ASSY	DWM2175
	2..DVPL ASSY	DWX2341
	2..STCN ASSY	DWX2342
	2..SPCN ASSY	DWX2343
	2..SDCB ASSY	DWX2344
NSP	1..SUB1 ASSY	DWM2176
	2..DIPB ASSY	DWG1575
	2..MFLB ASSY	DWG1576
	2..CMPB ASSY	DWG1577
	2..LED1 ASSY	DWG1578
	2..LED2 ASSY	DWG1579
	2..PSWB ASSY	DWS1345
	2..RSWB ASSY	DWS1346
	2..SLDB ASSY	DWS1347
NSP	1..SUB2 ASSY	DWM2181
	2..JFLB ASSY	DWG1571
	2..JOGB ASSY	DWG1572
	2..MJCB ASSY	DWG1573
	2..DOUT ASSY	DWG1574
	2..KSWB ASSY	DWS1343
	2..SLMB ASSY	DWS1344
	2..EJTB ASSY	DWS1348
	1..INSW ASSY	DWS1342
⚠	1..SW POWER SUPPLY ASSY	DWR1378

PARTS LIST OF DVJ-X1/ KUC

Mark	No.	Description	Part No.
A		**MAIN ASSY**	
		SEMICONDUCTORS	
	IC1502,IC1506		ADV7172KST
	IC1707		BU2288FV
	IC113		DYW1734
	IC111		HD6417709SHF200B
	IC1508		HY57V161610DTC-8
	IC103,IC109,IC1301-IC1312		K4S561632E-TC75
	IC702,IC703		K4S561632E-TC75
	IC1105,IC303,IC904-IC907		K4S641632F-TC75
	IC1501,IC1505		LA73054
	IC1104		LM1881M
	IC117		M51957BFP
	IC305		M65774BFPA
	IC1103,IC1108,IC1708,IC504		MM1561JF
	IC1504,IC301,IC302		MM1562FF
	IC1512		NJM2068M
	IC1507		NJM78L05UA
	IC1703		NJU7013F
	IC1510		PCM1742KE
	IC1513		PD0274A
	IC903		PD6449A
	IC701		PE5337A
	IC1511		PM0033A

Mark No.	Description	Part No.
IC121,IC902		PQ070XZ02ZP
IC1102		SN74LV08APW
IC1702		TC4W53FU
IC1503		TC74HC4053AFT
IC108		TC74LCX16245AFT
IC114		TC74LCX32FT
IC104,IC110,IC112,IC115,IC120		TC74LCX541FT
IC101,IC102		TC74VHC04FT
IC123		TC74VHC125FT
IC1509		TC74VHC157FT
IC1101		TC7S66FU
IC122,IC1704		TC7SH04FU
IC105,IC116,IC118,IC124,IC1514		TC7SH08FU
IC1705		TC7SH08FU
IC1701,IC901		TC7SHU04FU
IC106,IC107		TC7SZ08FU
IC306,IC307		TC7SZ126FU
IC119		TC7SZU04FU
IC908		TC7WH125FU
IC1706		TC7WH34FU
IC503		TE4300PF
IC507		TK11116CS
IC505		TMS320DA150PGE160
IC1106,IC1107		XC2S150E-6PQ208C
IC304		XC2S50-5PQ208C
IC506		XCA56367PV150
Q1501,Q1503-Q1505,Q1507,Q1508		2SA1576A
Q1510-Q1515,Q1517		2SA1576A
Q1518,Q1519,Q1521		2SD2114K
Q1516,Q1523		DTC114YK
Q1701		DTC124EUA
Q1502,Q1506,Q1509		RN4982
D502,D504,D506,D508		DAN202K
D501,D503,D505,D507		DAP202K
D1701		KV1837K
D1501		UDZS6.2B

COILS AND FILTERS

F106,F109,F110,F1509-F1511 CHIP BEAD	DTF1069
F1716,F1717,F509,F703,F906 CHIP BEAD	DTF1069
F910 CHIP BEAD	DTF1069
F1708-F1715 CHIP BEAD	DTF1070
L101	LCYA1R5J2520
L1701	LCYA2R2J2520
F101,F102,F1101-F1106 EMI FILTER	VTF1171
F111,F112,F1301-F1304 EMI FILTER	VTF1171
F1501-F1504,F1701-F1706 EMI FILTER	VTF1171
F301-F306,F501-F507 EMI FILTER	VTF1171
F701,F702,F706,F901-F905 EMI FILTER	VTF1171

CAPACITORS

C905	CCSRCH100D50
C1622,C1633	CCSRCH101J50
C169	CCSRCH102J50
C904	CCSRCH120J50
C1727-C1729	CCSRCH221J50
C1720	CCSRCH330J50
C1108,C1119,C115,C1184,C1548	CCSRCH471J50
C1743,C309,C312,C516	CCSRCH471J50
C1723	CCSRCH4R0C50
C167,C168	CCSRCH7R0D50
C103,C1107,C111,C1110,C1111	CEHVW101M6R3
C1128,C1171,C1181,C1182,C1301	CEHVW101M6R3
C1386,C1504,C1536,C1538,C1541	CEHVW101M6R3
C1549,C1593,C1619,C1627	CEHVW101M6R3
C164-C166,C1702,C1704,C1706	CEHVW101M6R3
C1731,C1740,C304,C306,C308	CEHVW101M6R3
C311,C368,C377,C501,C503	CEHVW101M6R3
C513,C515,C524,C553,C558	CEHVW101M6R3
C560,C710,C734,C906,C907	CEHVW101M6R3
C916,C979,C986,C987	CEHVW101M6R3
C1509,C1530,C1546,C1580	CEHVW470M10
C1586,C1588,C1603,C1604,C1613	CEVW470M16
C1620,C1632,C1708,C1710,C1714	CEVW470M16
C1118	CEVWNP1R0M50
C1623,C1634	CEVWNP220M16
C1170,C1173,C125,C140,C1501	CKSRYB103K50
C1534,C1599,C1606,C1629,C1635	CKSRYB103K50
C1724,C1725,C318,C370,C502	CKSRYB103K50
C538,C539,C546,C729,C909	CKSRYB103K50
C101,C102,C104-C108	CKSRYB104K16
C1101,C1102,C1104-C1106,C1109	CKSRYB104K16
C1112-C1117,C112,C1120-C1127	CKSRYB104K16
C1129,C113,C1130-C1139,C114	CKSRYB104K16
C1140-C1159,C116,C1160-C1169	CKSRYB104K16
C117,C1172,C1174-C1179,C118	CKSRYB104K16
C1180,C1183,C1185,C119-C124	CKSRYB104K16
C126-C130,C1302-C1309,C131	CKSRYB104K16
C1310-C1319,C132,C1320-C1329	CKSRYB104K16
C133,C1330-C1339,C134	CKSRYB104K16
C1340-C1349,C135,C1350-C1359	CKSRYB104K16
C136,C1360-C1369,C137	CKSRYB104K16
C1370-C1379,C138,C1380-C1385	CKSRYB104K16
C139,C141,C142,C144-C150	CKSRYB104K16
C1503,C1506,C1507,C151	CKSRYB104K16
C1511-C1513,C1515,C1516	CKSRYB104K16
C1518,C1519,C152,C1520-C1522	CKSRYB104K16
C1524,C1525,C1527,C1528,C153	CKSRYB104K16
C1533,C1535,C1537,C154,C1540	CKSRYB104K16
C1543,C1544,C155,C1550-C1556	CKSRYB104K16
C1558,C1559,C156,C1560-C1566	CKSRYB104K16
C1568,C1569,C157,C1570,C1571	CKSRYB104K16
C1573,C1574,C1576-C1578,C158	CKSRYB104K16
C1582,C1584,C1585,C1587,C1589	CKSRYB104K16
C159,C1590,C1592,C1594-C1598	CKSRYB104K16
C160,C1600-C1602,C1605	CKSRYB104K16
C1607-C1609,C161,C1610-C1612	CKSRYB104K16
C1614-C1618,C1625,C1626,C1628	CKSRYB104K16
C1630,C1631,C1636,C1637,C170	CKSRYB104K16
C1701,C1703,C1705,C1707,C1709	CKSRYB104K16
C171,C1711-C1713,C1715-C1717	CKSRYB104K16
C1719,C1726,C1732-C1734,C1736	CKSRYB104K16
C1741,C1742,C301-C303,C305	CKSRYB104K16
C307,C310,C313-C317	CKSRYB104K16
C319-C367,C369,C371-C376	CKSRYB104K16
C378,C5001-C5020,C5024	CKSRYB104K16
C5037-C5052,C5054,C5055	CKSRYB104K16

Mark	No.	Description	Part No.
	C5057,C5058,C5070,C5073		CKSRYB104K16
	C5076-C5079,C508,C5080		CKSRYB104K16
	C5083-C5086,C5089-C5091,C512		CKSRYB104K16
A	C514,C518-C523,C525-C537		CKSRYB104K16
	C540,C541,C544,C545		CKSRYB104K16
	C547-C552,C554-C557,C559		CKSRYB104K16
	C561		CKSRYB104K16
	C1510,C1517,C1526,C1531		CKSRYB105K10
	C109,C110,C1547,C1557,C1575		CKSRYB105K6R3
	C1581,C162,C163,C1721		CKSRYB105K6R3
	C504-C507,C517,C543		CKSRYB105K6R3
	C701-C709,C712-C728		CKSRYB105K6R3
	C730-C733,C736-C746		CKSRYB105K6R3
	C901-C903,C908,C910-C915		CKSRYB105K6R3
B	C917-C978,C980-C985		CKSRYB105K6R3
	C1621,C1624		CKSRYB152K50
	C542		CKSRYB222K50
	C1735		CKSRYB332K50
	C1737		CKSRYB472K50
	VC1701 (20pF)		VCM1012

RESISTORS

	R1129,R1132,R1139,R1145,R511	RAB4C0R0J
	R921,R924,R928,R931,R933	RAB4C101J
	R701,R712,R719,R727	RAB4C102J
C	R743,R744,R808,R813,R814	RAB4C102J
	R102,R104-R106,R113,R120	RAB4C103J
	R124,R125,R145,R155,R164	RAB4C103J
	R167,R177,R189-R196,R703	RAB4C103J
	R718,R725,R733,R967	RAB4C103J
	R1108-R1111,R1115-R1117	RAB4C220J
	R1120-R1123,R1128,R1130,R1131	RAB4C220J
	R1133-R1138,R1140,R1144,R1146	RAB4C220J
	R1148,R115,R1152,R1159,R116	RAB4C220J
	R1167-R1169,R117,R1170	RAB4C220J
	R118,R119,R123,R127	RAB4C220J
D	R136-R138,R141-R144	RAB4C220J
	R147-R154,R157,R159	RAB4C220J
	R161-R163,R165,R166,R168	RAB4C220J
	R176,R178-R186,R197,R198	RAB4C220J
	R202,R210,R301,R302	RAB4C220J
	R306,R307,R310,R311	RAB4C220J
	R317,R318,R320,R322,R323	RAB4C220J
	R326,R327,R331,R332	RAB4C220J
	R335,R336,R338,R339,R346	RAB4C220J
	R348,R349,R351,R352,R357	RAB4C220J
E	R363-R365,R367,R369,R370	RAB4C220J
	R372,R373,R375-R377,R379	RAB4C220J
	R383,R385,R387,R542,R543	RAB4C220J
	R560,R578,R579,R704	RAB4C220J
	R709-R711,R752,R758-R760	RAB4C220J
	R769,R776,R782,R789,R790	RAB4C220J
	R795,R797,R798,R802,R803	RAB4C220J
	R805,R823,R830,R910,R911	RAB4C220J
	R507,R508,R563	RAB4C223J
	R515,R522-R524	RAB4C330J
	R573,R574,R584,R586	RAB4C472J
F	R112,R203,R204,R819-R822	RAB4C560J
	R824-R829,R925,R929,R932	RAB4C560J
	R937,R939-R944,R947,R948	RAB4C560J

Mark	No.	Description	Part No.
	R950,R954-R964		RAB4C560J
	R1519,R1527,R1529		RS1/16S1000F
	R232,R908,R914		RS1/16S1001F
	R1550		RS1/16S1201F
	R1504,R1513,R1515,R1549,R1561		RS1/16S1500F
	R1573,R1740,R1741		RS1/16S1500F
	R1605,R1627		RS1/16S1502F
	R1606,R1628		RS1/16S2201F
	R229		RS1/16S2700F
	R1546		RS1/16S3001F
	R220		RS1/16S3300F
	R1638,R1640,R1743		RS1/16S3301F
	R1510,R1525,R1544,R1572		RS1/16S4701F
	R1639,R1641		RS1/16S5601F
	R1555,R1568,R1584		RS1/16S56R0F
	R1509,R1524,R1543,R1571		RS1/16S6800F
	R1604		RS1/16S75R0F
	R1609,R1625		RS1/16S8201F
	VR1501		CCP1436
	Other Resistors		RS1/16S###J

OTHERS

	X501 CERAMIC OSCILLATOR	CSS1616
	X101 CRYSTAL RESONATOR (65.975MHz)	DSS1144
	X1701 CRYSTAL RESONATOR (27.000MHz)	VSS1146
	X901 CRYSTAL RESONATOR (27.000MHz)	VSS1159
	CN1701 PH CONNECTOR	B10B-PH-SM3
	CN102 PH CONNECTOR	B6B-PH-SM3
	CN501 13P FFC CONNECTOR	VKN1417
	CN1702 17P FFC CONNECTOR	VKN1421
	CN1703 30P FFC CONNECTOR	VKN1434
	CN701 40P FFC CONNECTOR	VKN1794
	KN1701-KN1708 EARTH METAL FITTING	VNF1109

B DVPL ASSY

SEMICONDUCTORS

	IC2000	AN22022A
	IC2200	BD7905BFS
⚠	IC2303 FUSE (0.125A)	DEK1086
	IC2300	MM1478DFBE
	IC2100	MN103S71F
	IC2101	PEA006B8
	IC2301	PQ070XZ02ZP
	Q2001, Q2002	2SA1577
	Q2202	2SJ599-Z
	Q2201	DTC124EK
	Q2003	UM5K1N

COILS AND FILTERS

	L2300 CHIP COIL	OTL1009
	L2101-L2116 CHIP BEAD	VTL1075

CAPACITORS

	C2113	CCSRCH101J50
	C2016, C2204, C2205	CCSRCH151J50
	C2308, C2310	CEHAR100M16
	C2207, C2303, C2305	CEHAR101M10

Mark No.	Description	Part No.
	C2020, C2022, C2302, C2312	CEHAR470M16
	C2014, C2114, C2115, C2121, C2139	CKSRYB102K50
	C2146, C2149, C2150, C2154	CKSRYB102K50
	C2218-C2220	CKSRYB102K50
	C2109, C2211	CKSRYB103K50
	C2000-C2004, C2006-C2008, C2013	CKSRYB104K16
	C2015, C2021, C2023, C2101	CKSRYB104K16
	C2105-C2108, C2110, C2111	CKSRYB104K16
	C2116, C2117, C2120, C2122	CKSRYB104K16
	C2127-C2132, C2138, C2141, C2142	CKSRYB104K16
	C2203, C2206, C2301, C2304	CKSRYB104K16
	C2306, C2307, C2309, C2313	CKSRYB104K16
	C2320, C2321, C2323	CKSRYB104K16
	C2100, C2102-C2104, C2300	CKSRYB105K6R3
	C2118	CKSRYB122K50
	C2124, C2136, C2137, C2140	CKSRYB182K50
	C2125	CKSRYB222K50
	C2010, C2112	CKSRYB273K16
	C2123, C2135	CKSRYB471K50
	C2119, C2208, C2209	CKSRYB472K50
	C2011, C2134	CKSRYB473K16
	C2133	CKSRYB474K10
	C2009	CKSRYB561K50
	C2126	CKSRYB562K50
	C2202, C2315	DCH1195
RESISTORS		
	R2010	DCN1130
	R2011, R2302-R2304	DCN1133
	R2114, R2115, R2201-R2203	DCN1143
	R2151-R2154, R2163	RAB4C0R0J
	R2117	RAB4C103J
	R2155	RAB4C560J
	R2305	RS1/16S1001F
	R2112	RS1/16S1502F
	R2306	RS1/16S2000F
	R2214, R2215	RS1/4S2R0J
	Other Resistors	RS1/16S###J
OTHERS		
CN2005	KR CONNECTOR 2P	B2B-PH-K
CN2004	KR CONNECTOR 3P	B3B-PH-K
CN2008	4P TOP POST	B4B-EH
CN2007	40P FFC CONNECTOR	DKN1196
CN2003	4P FFC CONNECTOR	DKN1223
CN2002	13P FFC CONNECTOR	DKN1275
X2100	CHIP CERALOCK (16.93MHz)	DSS1107
0	PCB BINDER	VEF1040
KN2001, KN2002	WRAPPING TERMINAL	VNF1084

C STCN ASSY

OTHERS

CN2404	4P FFC CONNECTOR	DKN1223
CN2405	4P FFC CONNECTOR	VKN1409

D SPCN ASSY

OTHERS

Mark No.	Description	Part No.
CN2402	12P FFC CONNECTOR	DKN1205
CN2401	13P FFC CONNECTOR	DKN1275
CN2403	ZR CONNECTOR	S2B-ZR-SM3A

E SDCB ASSY

SWITCHES AND RELAYS

	S2501	DSG1074

CAPACITORS

	C2501	CKSRYB104K16

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

CN2501	SD CONNECTOR	DKN1241
CN2502	FLEXIBLE CONNECTOR	SFW13R-2ST

F INSW ASSY

SWITCHES AND RELAYS

	S5001	CSN1031

OTHERS

CN5001	ZR CONNECTOR	S2B-ZR-SM3A

G DIPB ASSY

SEMICONDUCTORS

	IC3004	PEG012A
	IC3003	PST994D
	IC3001, IC3002	TC7SET08FU
	IC3006, IC3007	TC7WH34FU
	Q3002-Q3020	DTC124EUA
	D3005, D3007, D3009, D3011, D3021	SLI-343URCW
	D3012-D3015, D3019, D3022-D3024	SLI-343YCW
	D3003	SLR-343BBT
	D3006, D3008, D3010	SLR-343EBT
	D3016-D3018, D3020	TLGE68TG

SWITCHES AND RELAYS

	S3001-S3003, S3007-S3009	DSG1079
	S3004-S3006, S3010-S3032	VSG1024

CAPACITORS

	C3017, C3022	CCSRCH101J50
	C3002	CEAT331M10
	C3004	CEAT470M16
	C3047	CEHAS101M10
	C3011	CEHAT470M16
	C3012, C3015, C3018, C3020, C3023	CKSRYB102K50
	C3025	CKSRYB102K50
	C3005-C3007, C3009, C3027-C3031	CKSRYB103K50
	C3036, C3044, C3045	CKSRYB103K50
	C3003, C3013, C3014, C3032, C3033	CKSRYB104K16
	C3010	CKSRYB105K10
	C3008	CKSRYB221K50

RESISTORS

	VR3001, VR3002 (10KB)	DCS1045
	Other Resistors	RS1/16S###J

Mark	No.	Description	Part No.
OTHERS			
	X3001	CERAMIC RESONATOR	DSS1147
	0	2P CABLE HOLDER	51048-0200
	CN3004, CN3005	FFC CONNECTOR 9P	52492-0920
	CN3003	FFC CONNECTOR 13P	52492-1320
	CN3002	FFC CONNECTOR 22P	52492-2220
	CN3001	B TO B CONNECTOR 16P	DKN1286
	J3006	JUMPER WIRE 2P	D20PYY0210E
	J3302	JUMPER WIRE 2P	D20PYY0225E

H HRSWB ASSY

SWITCHES AND RELAYS			
	S3101		DSK1021
OTHERS			
	0	2P CABLE HOLDER	51048-0200

I ISLDB ASSY

SEMICONDUCTORS			
	Q3201		DTC124EUA
	D3201-D3204		1SS355
	D3205		TLGE68TG
SWITCHES AND RELAYS			
	S3201		VSG1024
CAPACITORS			
	C3208		CCSRCH101J50
	C3203		CKSRYB103K50
	C3201, C3204, C3207		CKSRYB104K16
RESISTORS			
	VR3201		DCV1013
	VR3202 (1 kohm)		RCP1110
	Other Resistors		RS1/16S###J
OTHERS			
	CN3201	FFC CONNECTOR 9P	52492-0920
	CN3202	BOTTOM CONNECTOR	53095-0510

J JLED1 ASSY

SEMICONDUCTORS			
	D3301		NSPB500-0008
CAPACITORS			
	C3301		CKSRYB103K50
RESISTORS			
	All Resistors		RS1/16S###J
OTHERS			
	0	2P CABLE HOLDER	51048-0200
	CN3301	BOTTOM CONNECTOR	52084-0510

K KLED2 ASSY

SEMICONDUCTORS			
	D3303		NSPB500-0008
CAPACITORS			
	C3302		CKSRYB103K50
OTHERS			
	0	2P CABLE HOLDER	51048-0200

L LCMPB ASSY

SEMICONDUCTORS			
	D3701, D3702		1SS355
SWITCHES AND RELAYS			
	S3701		DSH1025
CAPACITORS			
	C3701, C3706		CEAT102M6R3
	C3703, C3704		CEAT471M6R3
	C3709, C3710		CKSRYB104K16
RESISTORS			
	R3701, R3703, R3704, R3706		RS1/16S75R0F
	Other Resistors		RS1/16S###J
OTHERS			
	JA3701	BNC SOCKET 4P	AKX1053
	CN3701	12P FFC CONNECTOR	VKN1272

M MMFLB ASSY

SEMICONDUCTORS			
	Q3401		2SB1237X
	D3403		1SS355
	D3401		UDZS8.2B
CAPACITORS			
	C3404-C3407		CCSRCH221J50
	C3401, C3409		CEAT470M16
	C3408		CEAT470M63
	C3402		CKSRYB104K16
RESISTORS			
	All Resistors		RS1/16S###J
OTHERS			
	V3401	FL TUBE	DEL1052
	CN3402	B TO B CONNECTOR 6P	DKN1287
	0	FL HOLDER	DNF1688
	CN3401	B TO B CONNECTOR 16P	VKN1368

N NPSWB ASSY

SWITCHES AND RELAYS			
	⚠S4301		RSA1001
OTHERS			
	⚠AN4301	1P AC INLET	AKP7032
	⚠J4301	CONNECTOR ASSY	DKP3566
	0	PCB BINDER	VEF1040

O OJFLB ASSY

SEMICONDUCTORS			
	IC4001		UPD16306B
	Q4001		2SB1237X
	Q4002-Q4008		2SC4081
	Q4009		2SD2395

Mark No.	Description	Part No.
D4003, D4006		1SS355
D4001		UDZS10B
D4004		UDZS20B
D4005		UDZS22B

CAPACITORS

C4012-C4015		CCSRCH181J50
C4011		CEAT470M16
C4005, C4006		CEHAT100M50
C4001		CEHAT470M16
C4018		CKSRYB102K50
C4002-C4004, C4007-C4010		CKSRYB103K50

RESISTORS

R4031, R4032		RD1/2VM101J
Other Resistors		RS1/16S###J

OTHERS

CN4001	FFC CONNECTOR 13P	52492-1320
CN4003	FLEXIBLE CONNECTOR	5597-03APB
V4001	FL TUBE	DEL1053
0	FL HOLDER	DNK3959
CN4002	KR CONNECTOR	S4B-PH-K

PJOGB ASSY

SEMICONDUCTORS

D4101		GP1A038RBK

CAPACITORS

C4101, C4102		CKSRYB104K16

RESISTORS

All Resistors		RS1/16S###J

OTHERS

CN4101	KR CONNECTOR	B4B-PH-K

QMJCB ASSY

SEMICONDUCTORS

⚠IC4501, IC4507 (250mA)		AEK7002
⚠IC4508 (500mA)		AEK7005
⚠IC4504 (800mA)		AEK7008
⚠IC4514 (1.6A)		AEK7012
⚠IC4506 (2A)		AEK7013
⚠IC4510, IC4511 (2.5A)		AEK7014
⚠IC4512 (3A)		AEK7015
⚠IC4513		ICP-N20
IC4503		TC7SET04FU
IC4515		TC7SET08FU
Q4504		2SC1740S
Q4503		2SD1859X
Q4505, Q4506		2SD2114K
D4509, D4510		1SS355
D4511		NNCD6.2MF
D4501, D4503		UDZS5.6B

CAPACITORS

C4531		CEANP220M10
C4507, C4512, C4516, C4517		CEAT102M6R3
C4521		CEAT221M10
C4520		CEAT221M25
C4529		CEAT470M10
C4504, C4506		CKSRYB103K50
C4508, C4509, C4513, C4530		CKSRYB104K16
C4522, C4523		CQMA152J50

RESISTORS

R4506		RD1/2VM271J
R4511		RD1/2VM470J
R4553-R4562		RS1/10S0R0J
R4518, R4519, R4522-R4525, R4538		RS1/16S75R0F
Other Resistors		RS1/16S###J

OTHERS

0	11P CABLE HOLDER	51048-1100
JA4502	4P MINI DIN SOCKET	AKP7116
4505	BNC SOCKET	AKX1054
CN4505	KR CONNECTOR	B10B-PH-K
CN4507	4P TOP POST	B4B-EH
J4502	JUMPER WIRE 11P	D20PYY1110E
JA4504	2P PIN JACK	DKB1045
J4504	CONNECTOR ASSY 11P	DKP3664
CN4503	FFC CONNECTOR 22P	HLEM22S-1
CN4509	4P PLUG	KM200IB4
JA4501	REMOTE CONTROL JACK	RKN1004
JA4503	2P PIN JACK	VKB1123
CN4506	12P FFC CONNECTOR	VKN1243
CN4508	17P FFC CONNECTOR	VKN1248
CN4501	30P FFC CONNECTOR	VKN1261

RDOUT ASSY

SEMICONDUCTORS

Q4601		2SC2412K

CAPACITORS

C4602		CEAT470M16
C4601		CKSRYB103K50
C4603		CKSRYB104K16

RESISTORS

R4602		RS1/16S1801F
R4603		RS1/16S3901F
Other Resistors		RS1/16S###J

OTHERS

CN4602	4P SOCKET	KP200IB4L
JA4601	1P PIN JACK (AU, BLK)	VKB1074

SKSWB ASSY

SEMICONDUCTORS

Q4201-Q4203		DTC124EUA
D4214, D4216		NSPB500-0008
D4213		SLI-343URCW
D4201-D4204		SLI-343YCW
D4207-D4209, D4211		SLR-343BBT

SWITCHES AND RELAYS

S4201, S4202		DSG1079
S4203-S4206		VSG1024

CAPACITORS

C4209		CCSRCH101J50
C4203-C4208		CKSRYB103K50

Mark	No.	Description	Part No.
		RESISTORS	
		All Resistors	RS1/16S###J
		OTHERS	
	CN4201	FFC CONNECTOR 9P	52492-0920
		TSLMB ASSY	
		SWITCHES AND RELAYS	
	S4701, S4702		DSG1017
		OTHERS	
	CN4701	KR CONNECTOR	S3B-PH-K
		UEJTB ASSY	
		SWITCHES AND RELAYS	
	S3503		DSH1049
	S3501, S3502		VSG1024
		CAPACITORS	
	C3501		CCSRCH101J50
	C3503		CKSRYB103K50
	C3502		CKSRYB104K16
		RESISTORS	
		All Resistors	RS1/16S###J
		OTHERS	
	CN3502	7P FFC CONNECTOR	VKN1267
	CN3501	B TOB CONNECTOR 6P	VKN1358