


TS-990S


EXPLODED VIEW (MAIN BODY UPPER SIDE)

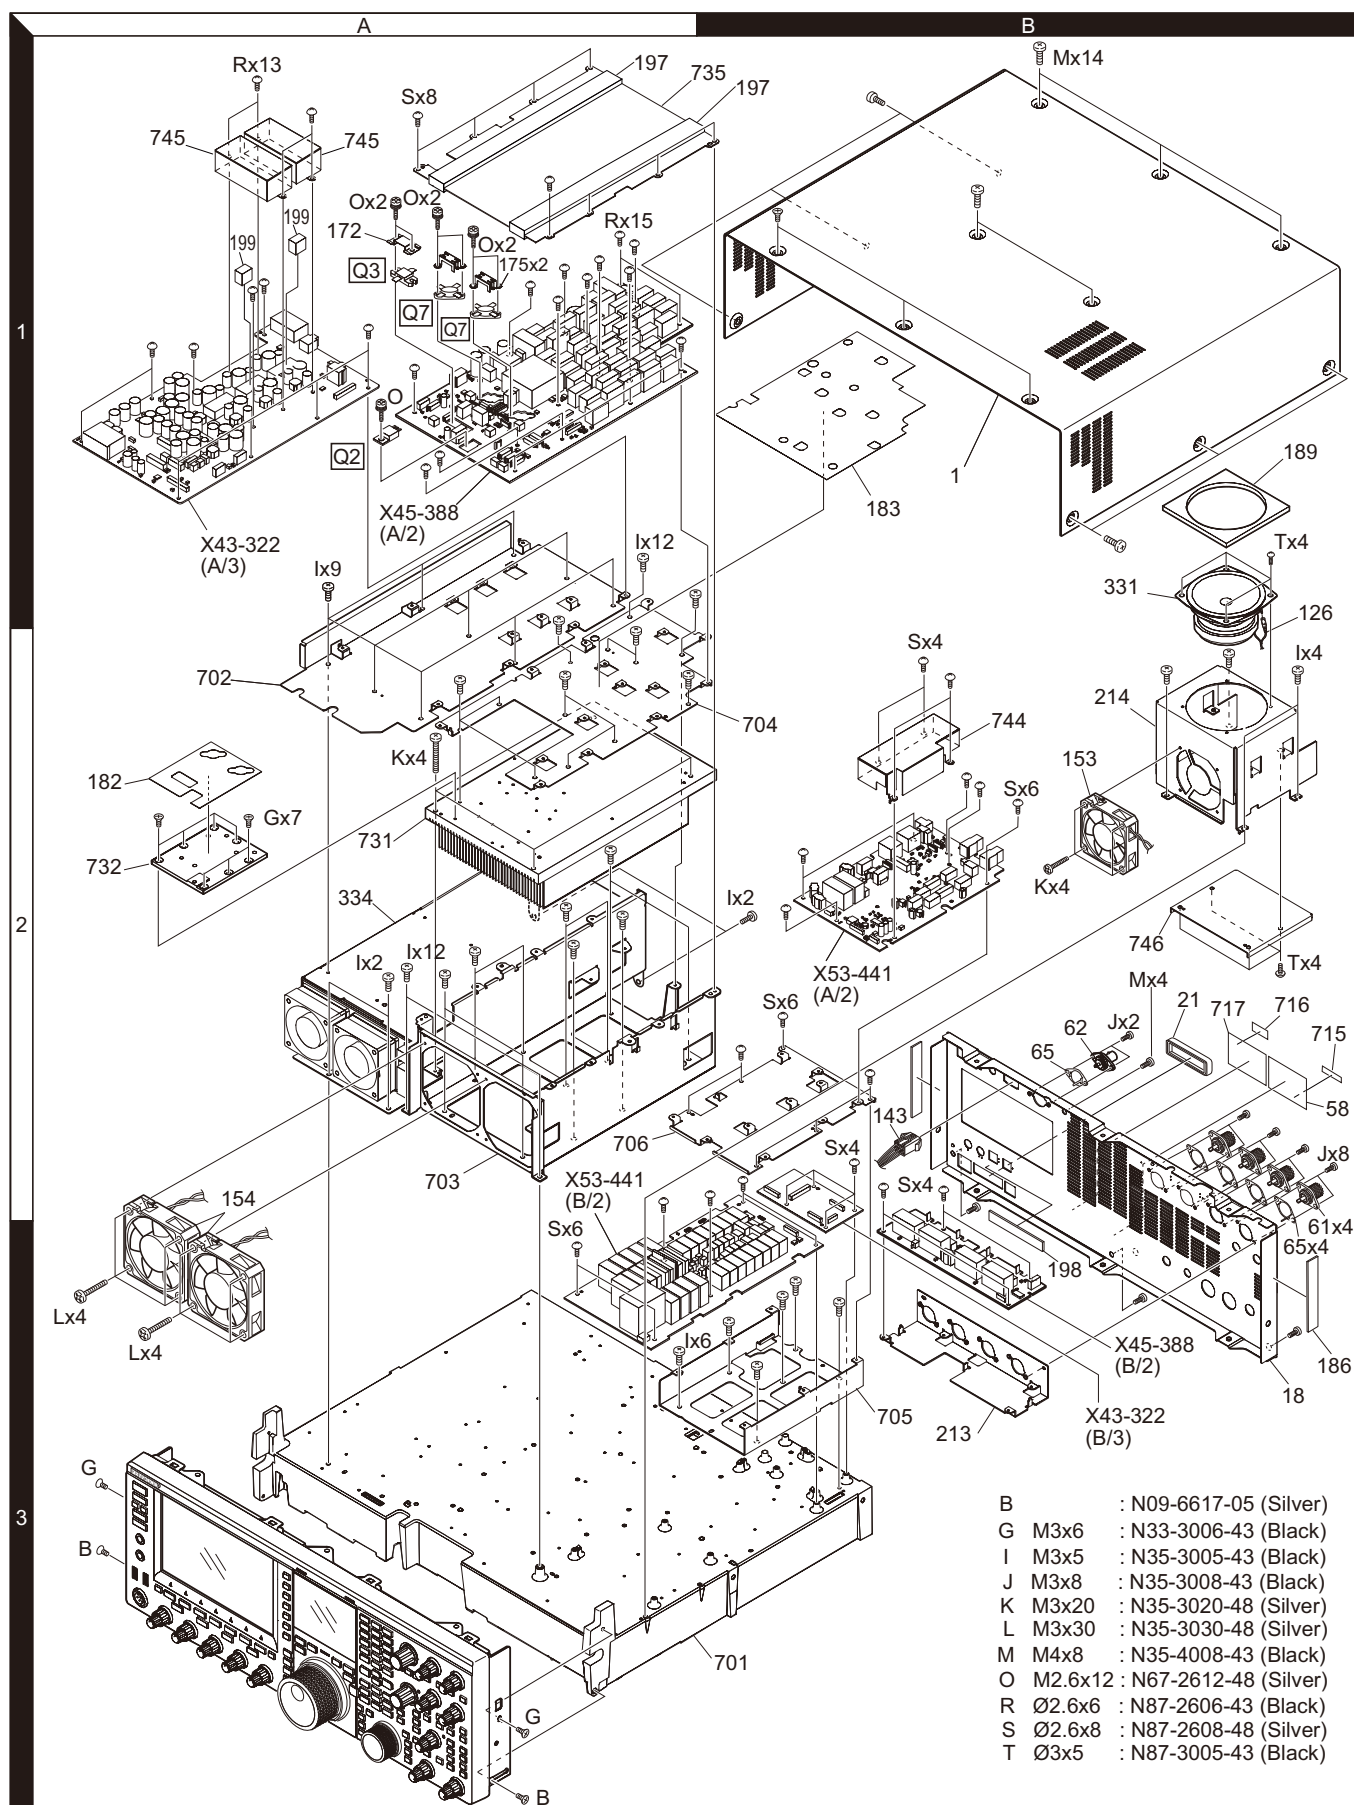


Parts with the exploded numbers larger than 700 are not supplied.

If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB. These parts must be ordered separately.


EXPLODED VIEW (MAIN BODY LOWER SIDE)

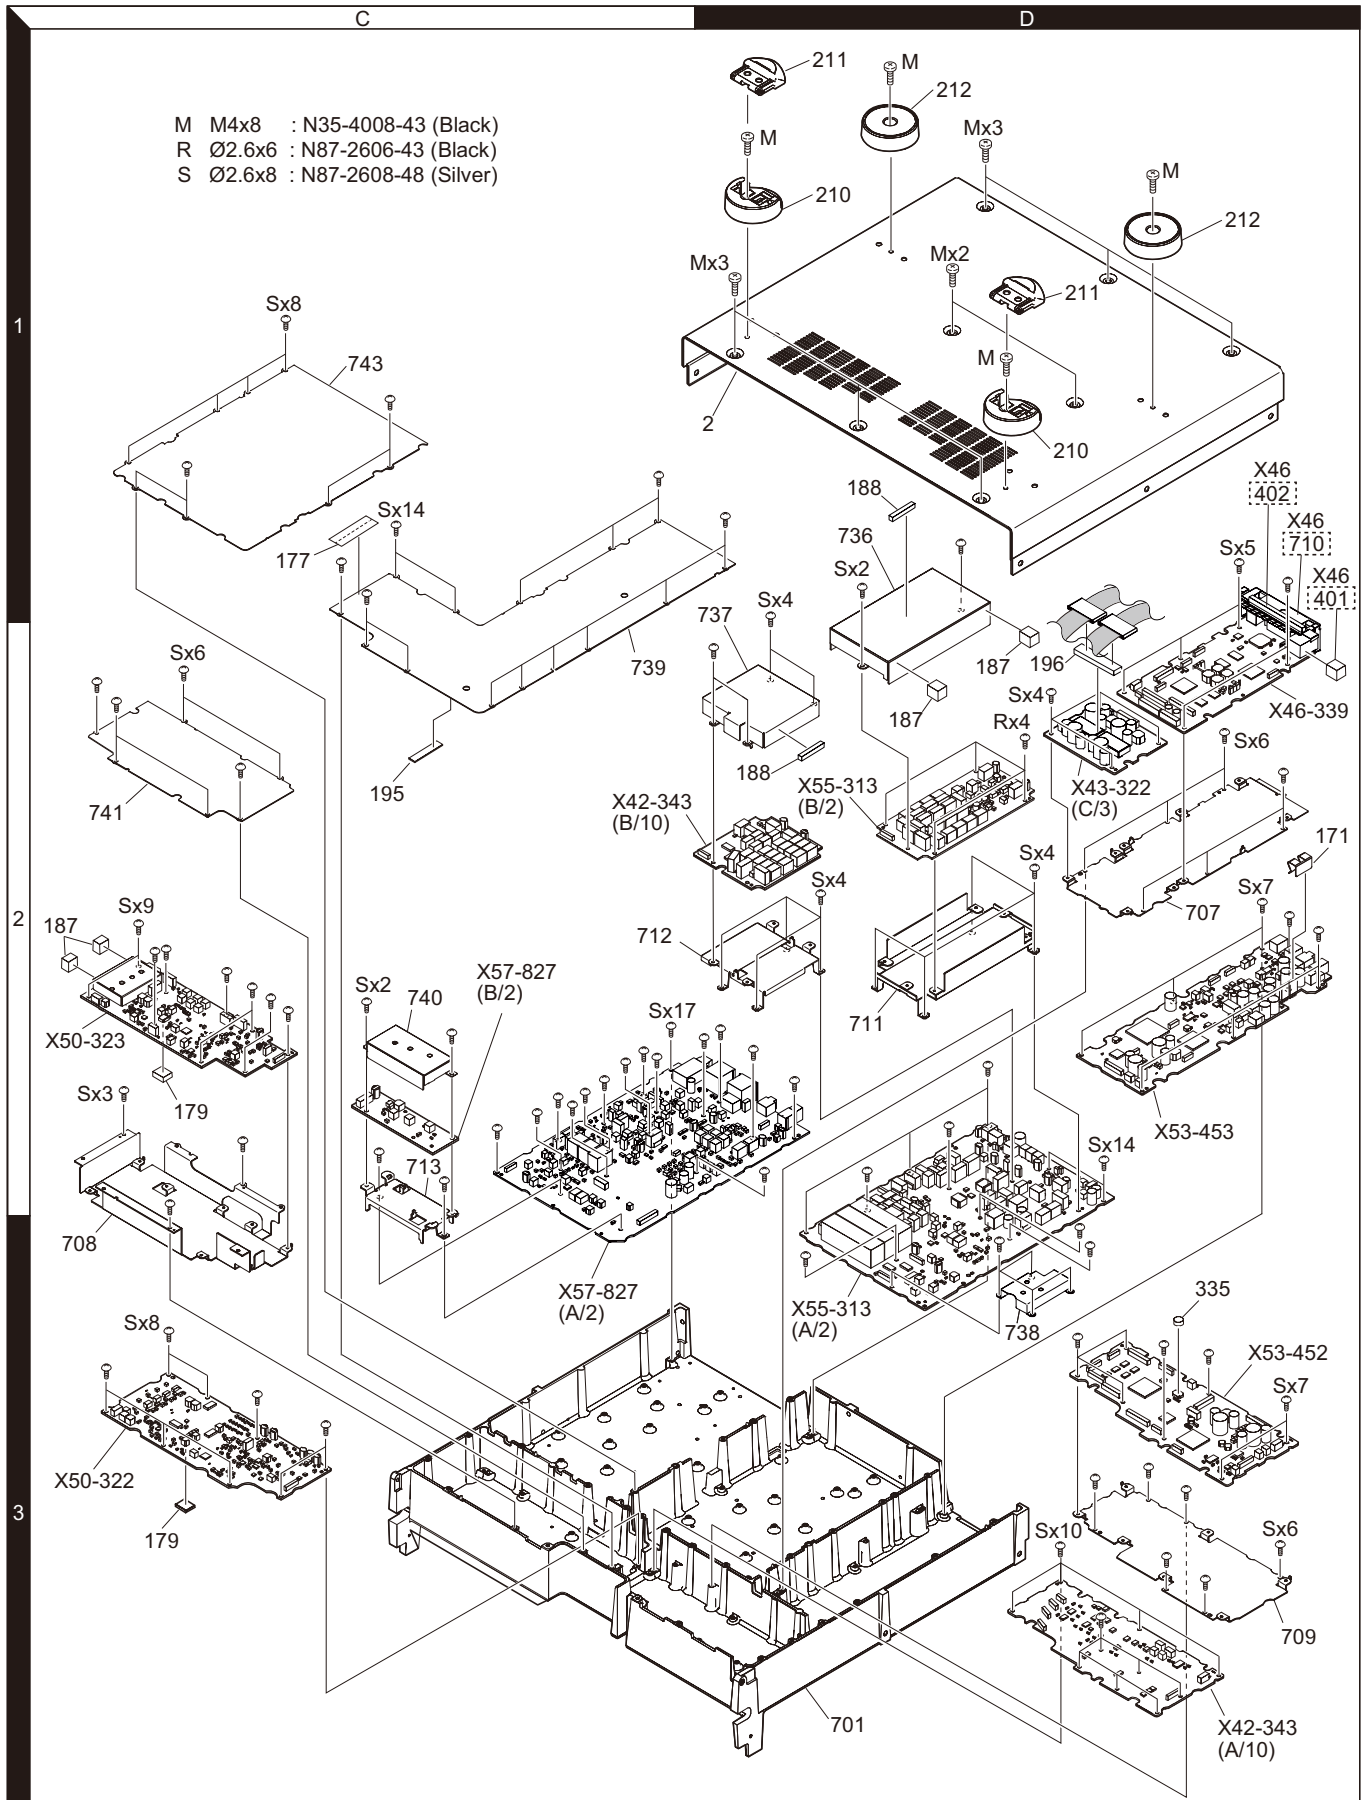

EXPLODED VIEW (PANEL 1/2)

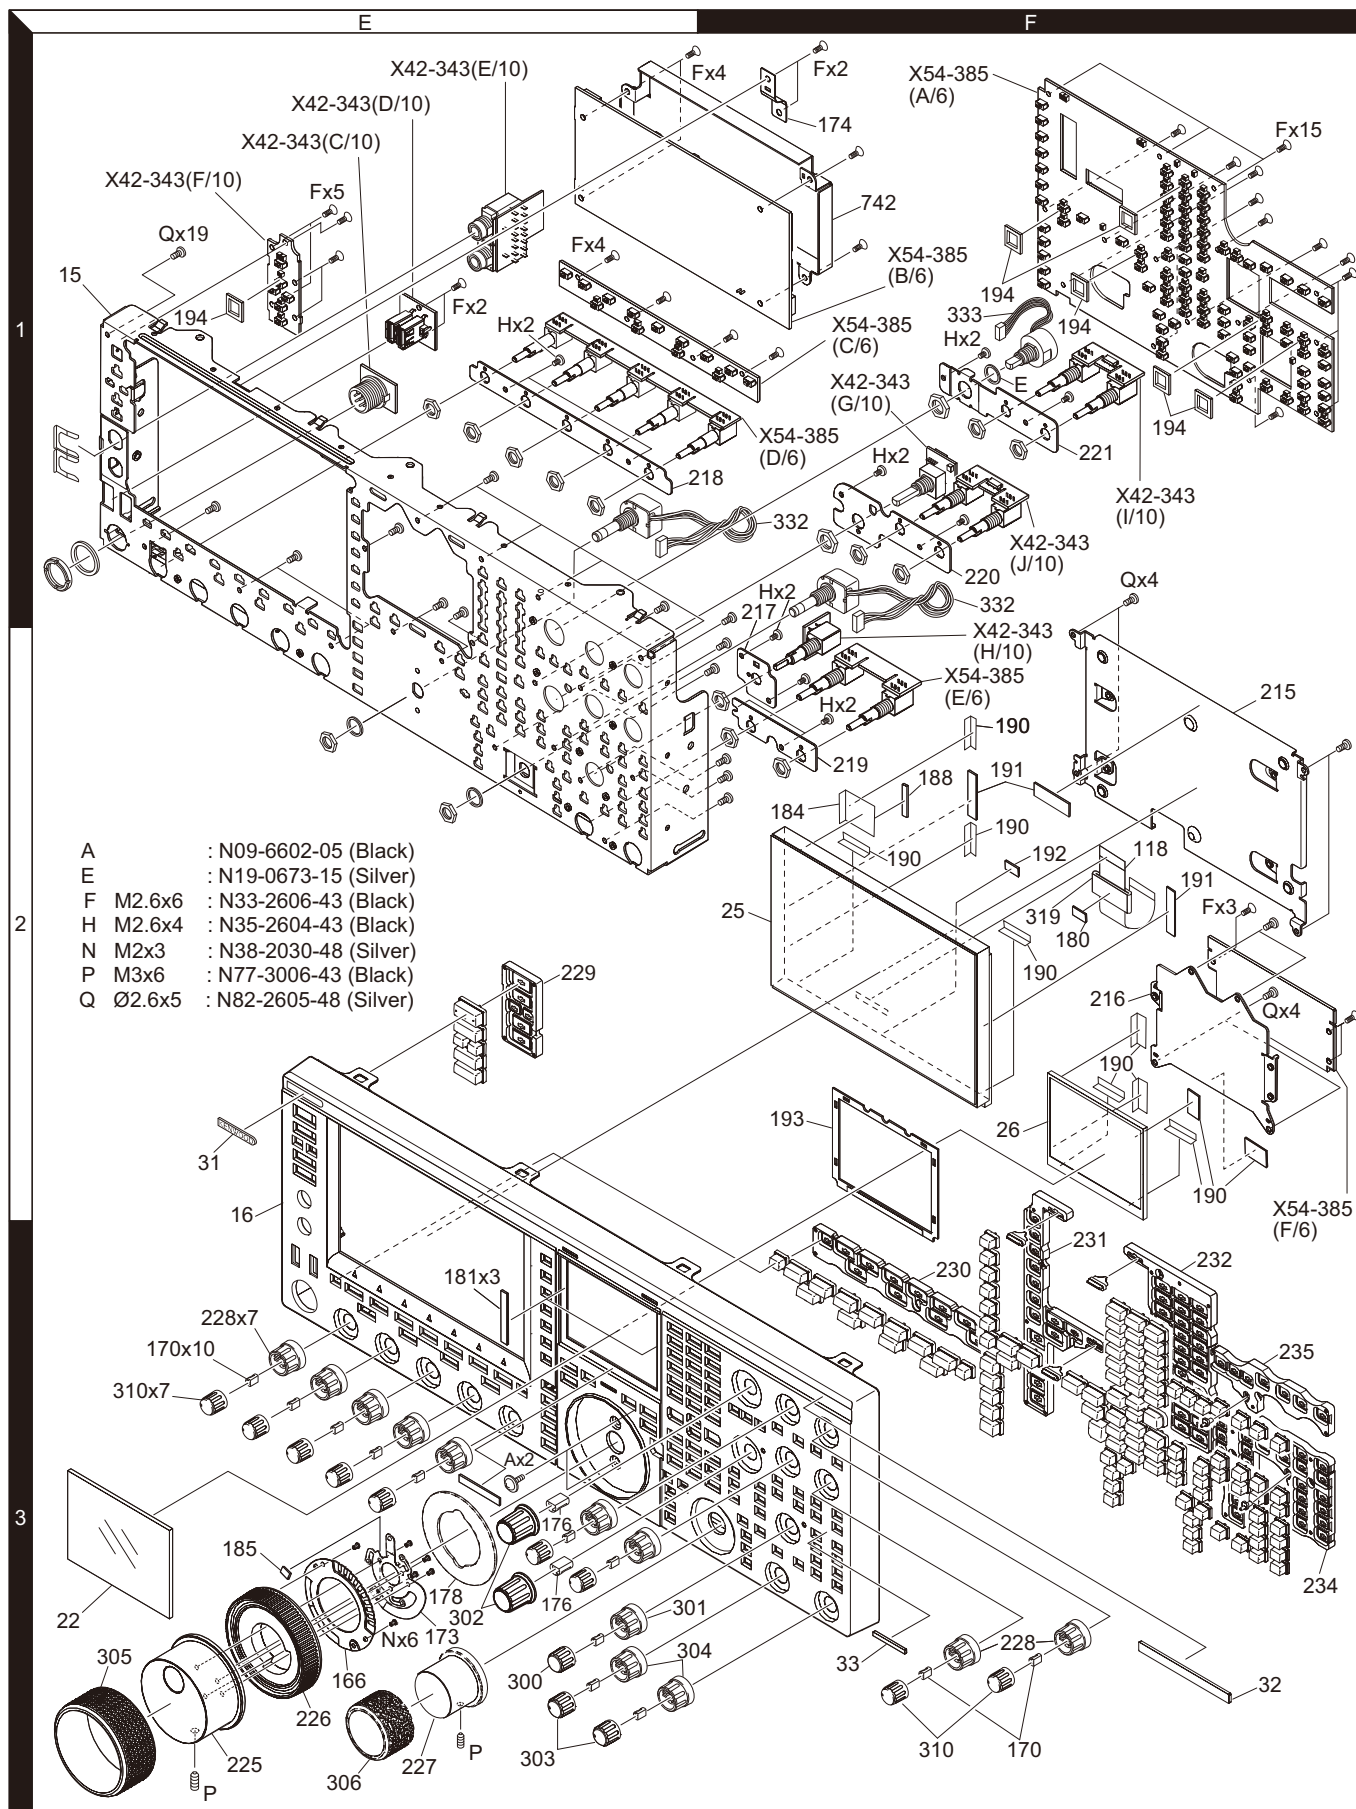


EXPLODED VIEW (PANEL 2/2)

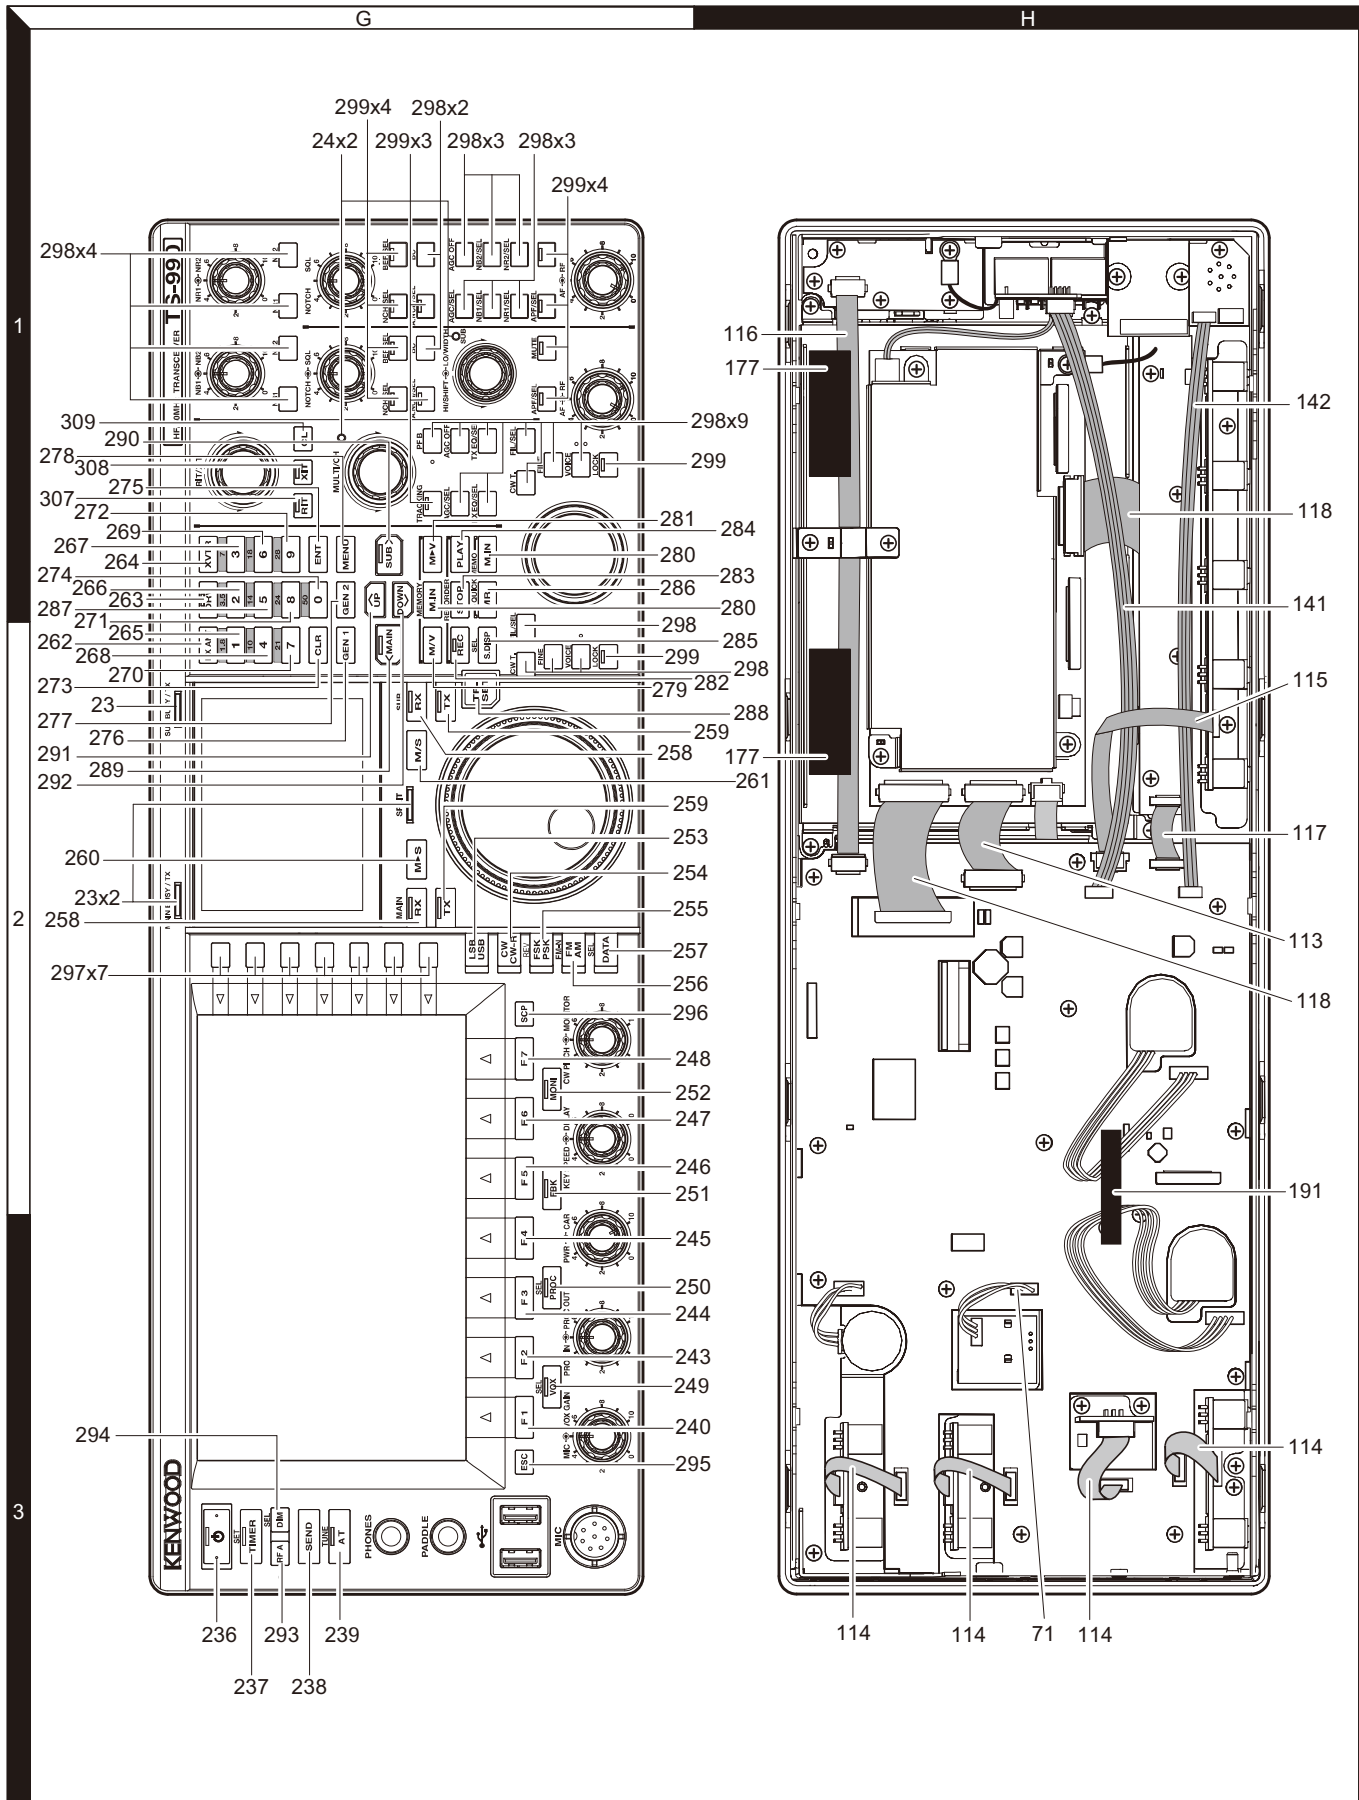


Parts with the exploded numbers larger than 700 are not supplied.

TS-990S

EXPLODED VIEW (WIRING - UPPER SIDE)

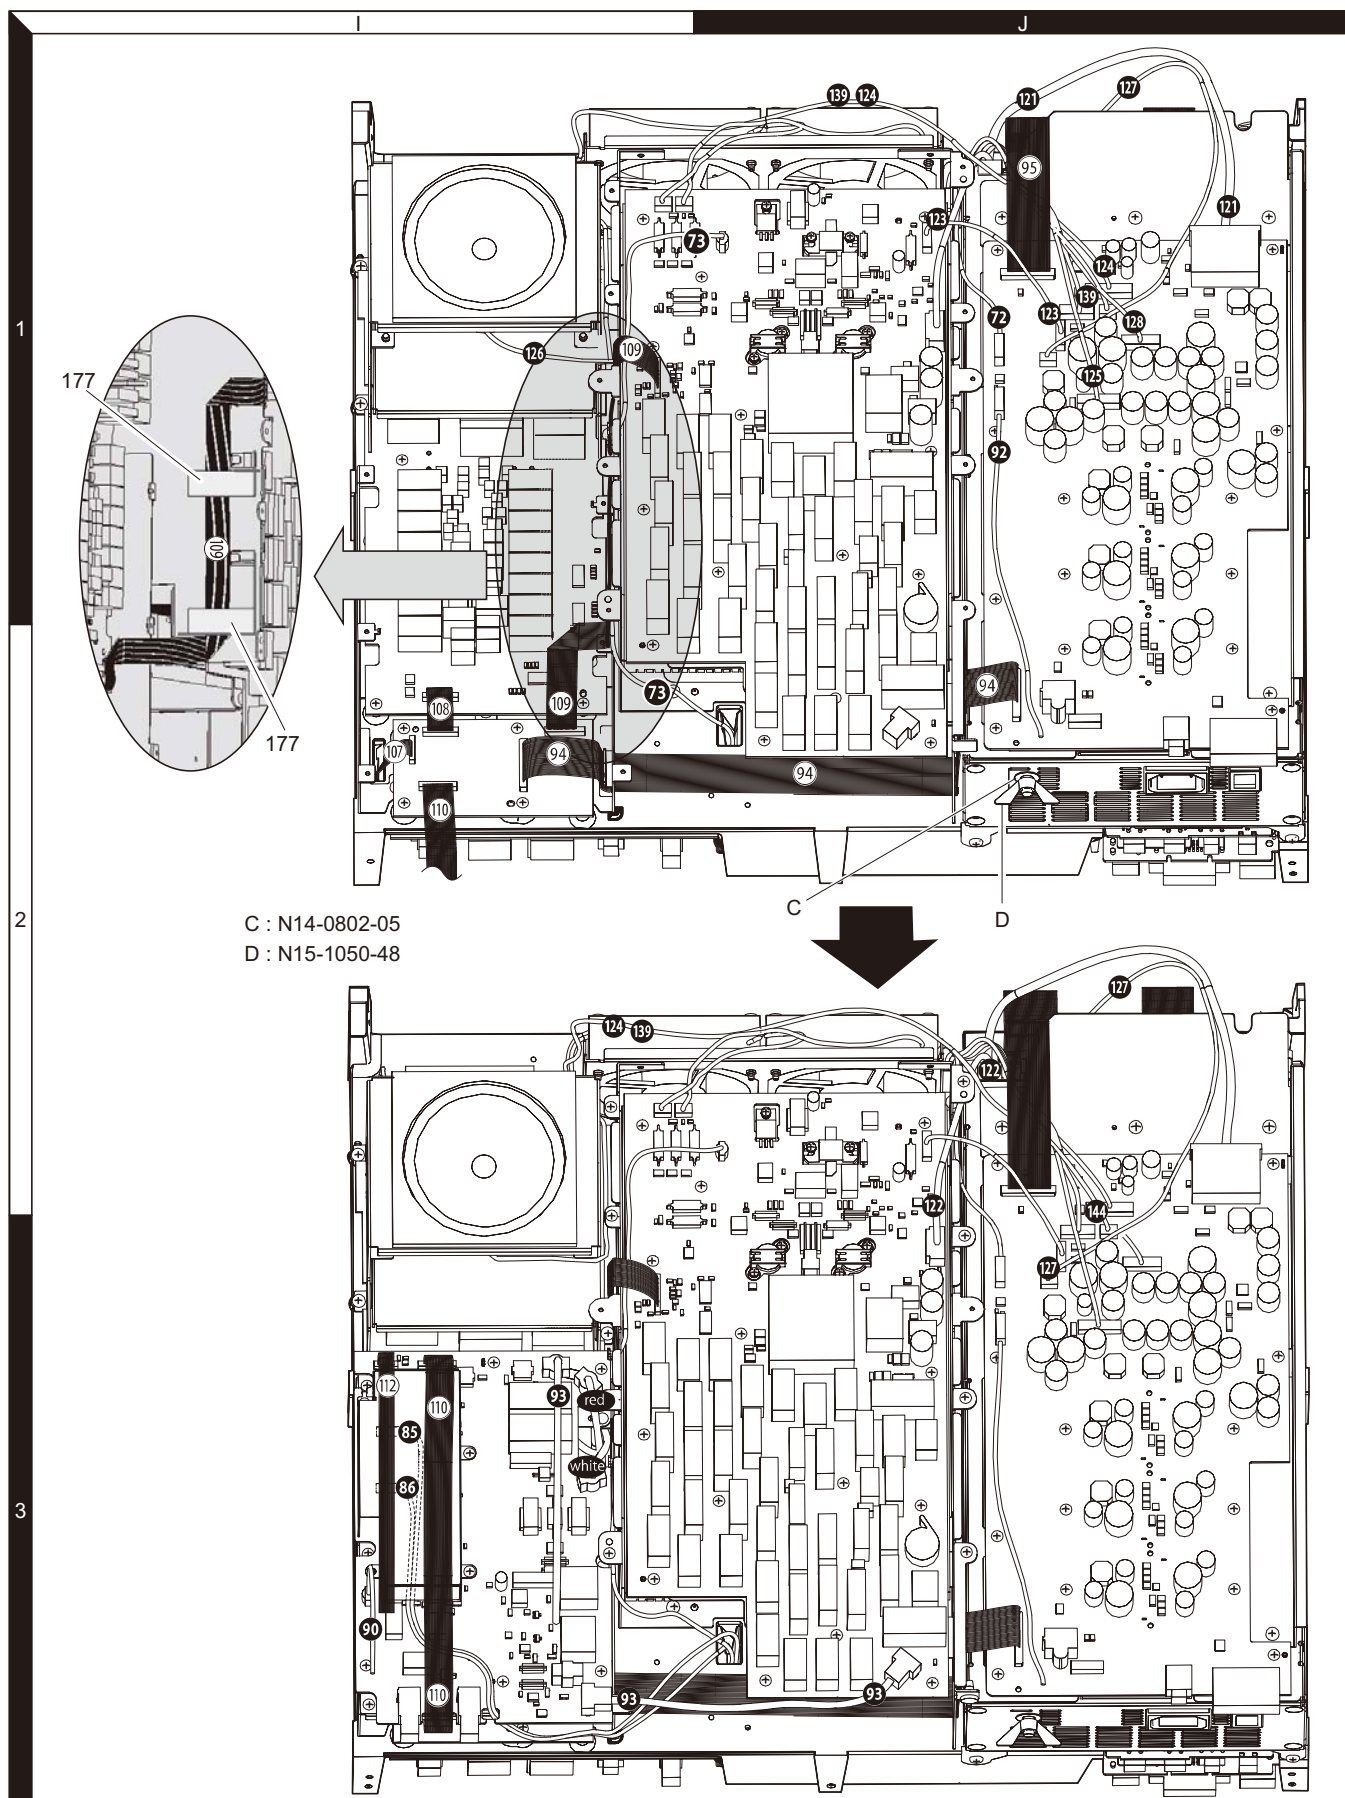

EXPLODED VIEW (WIRING - LOWER SIDE)

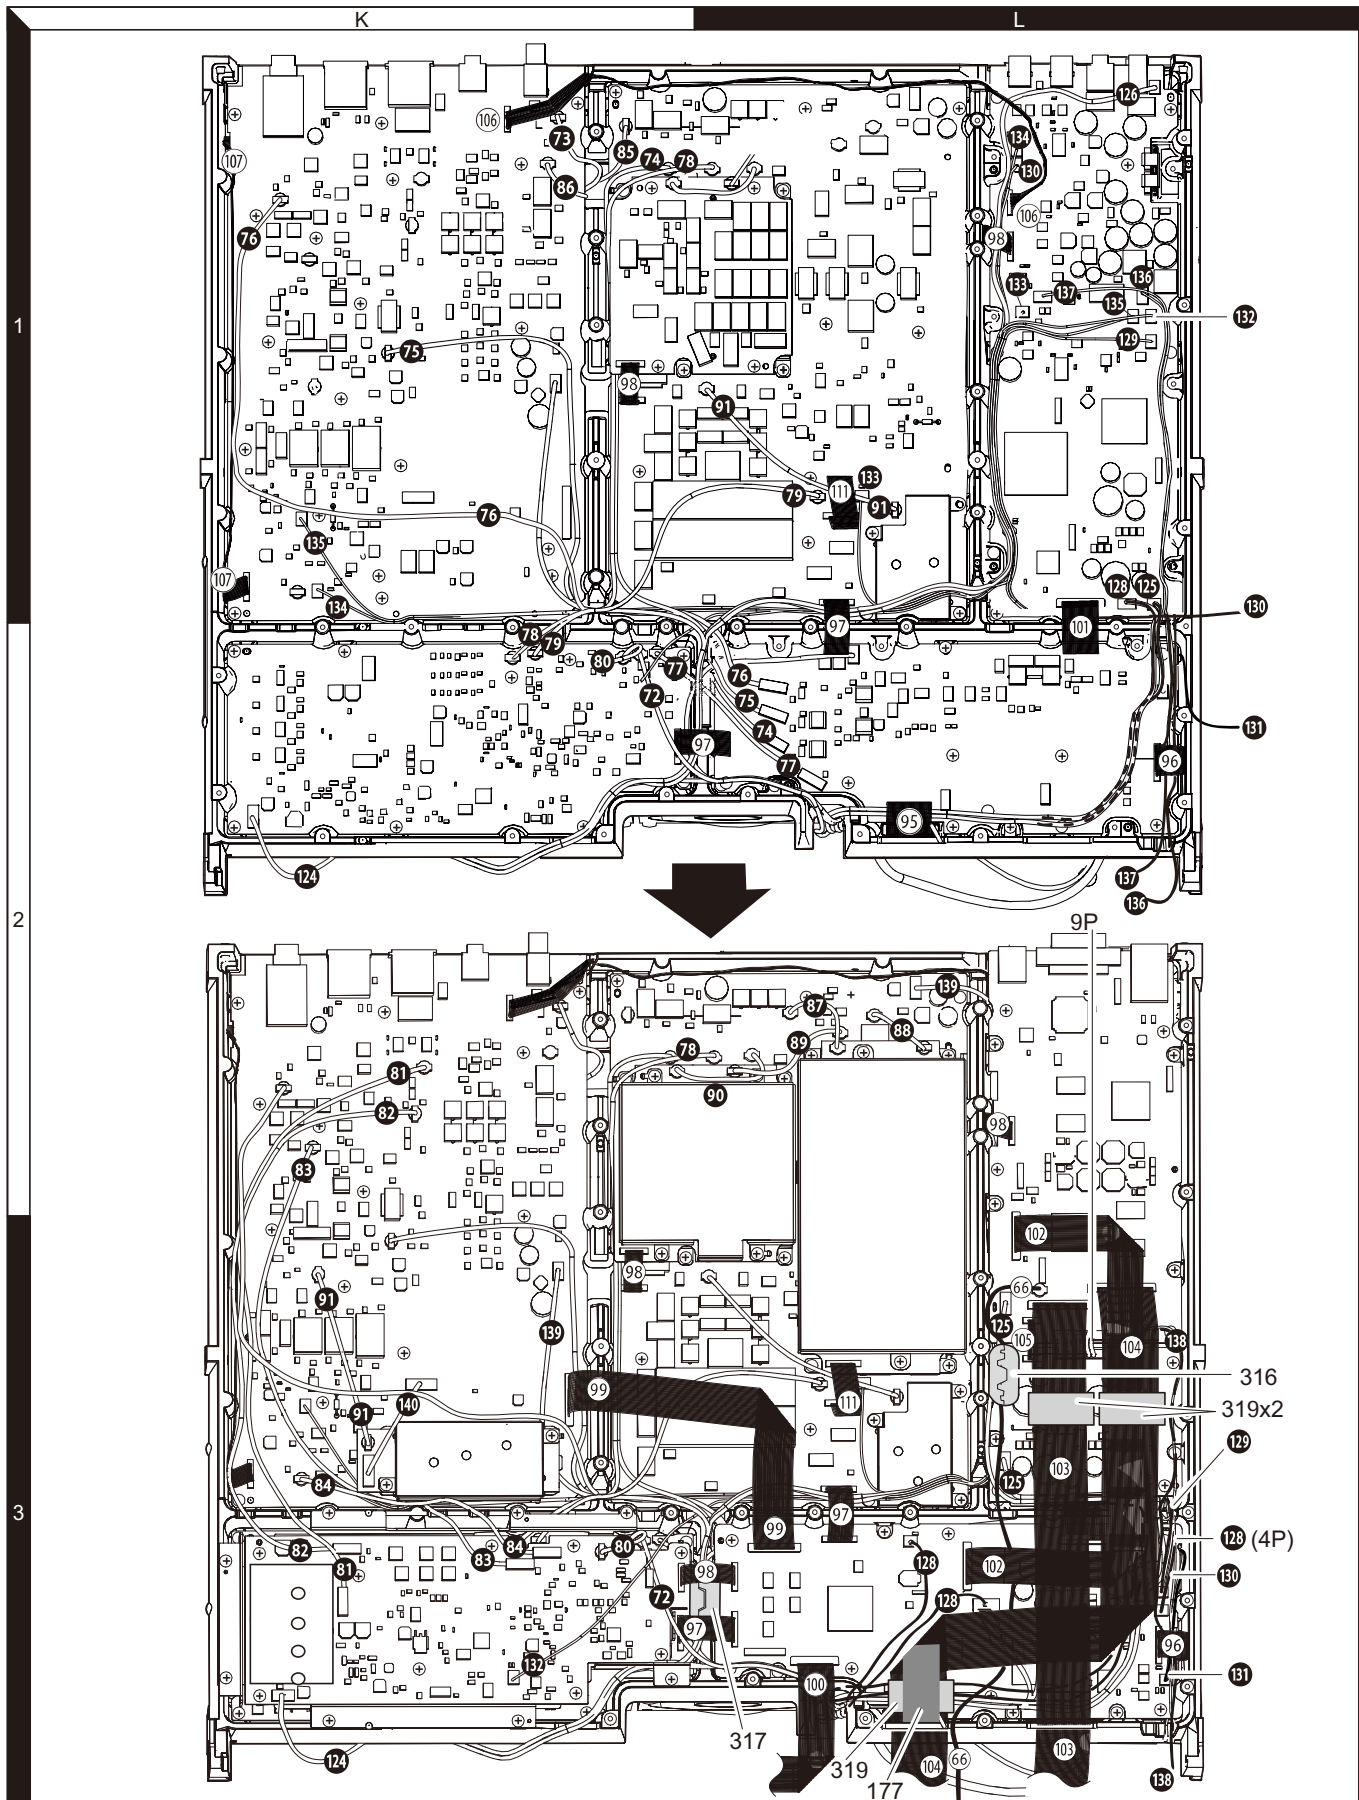


M N

1

2

3

PACKING

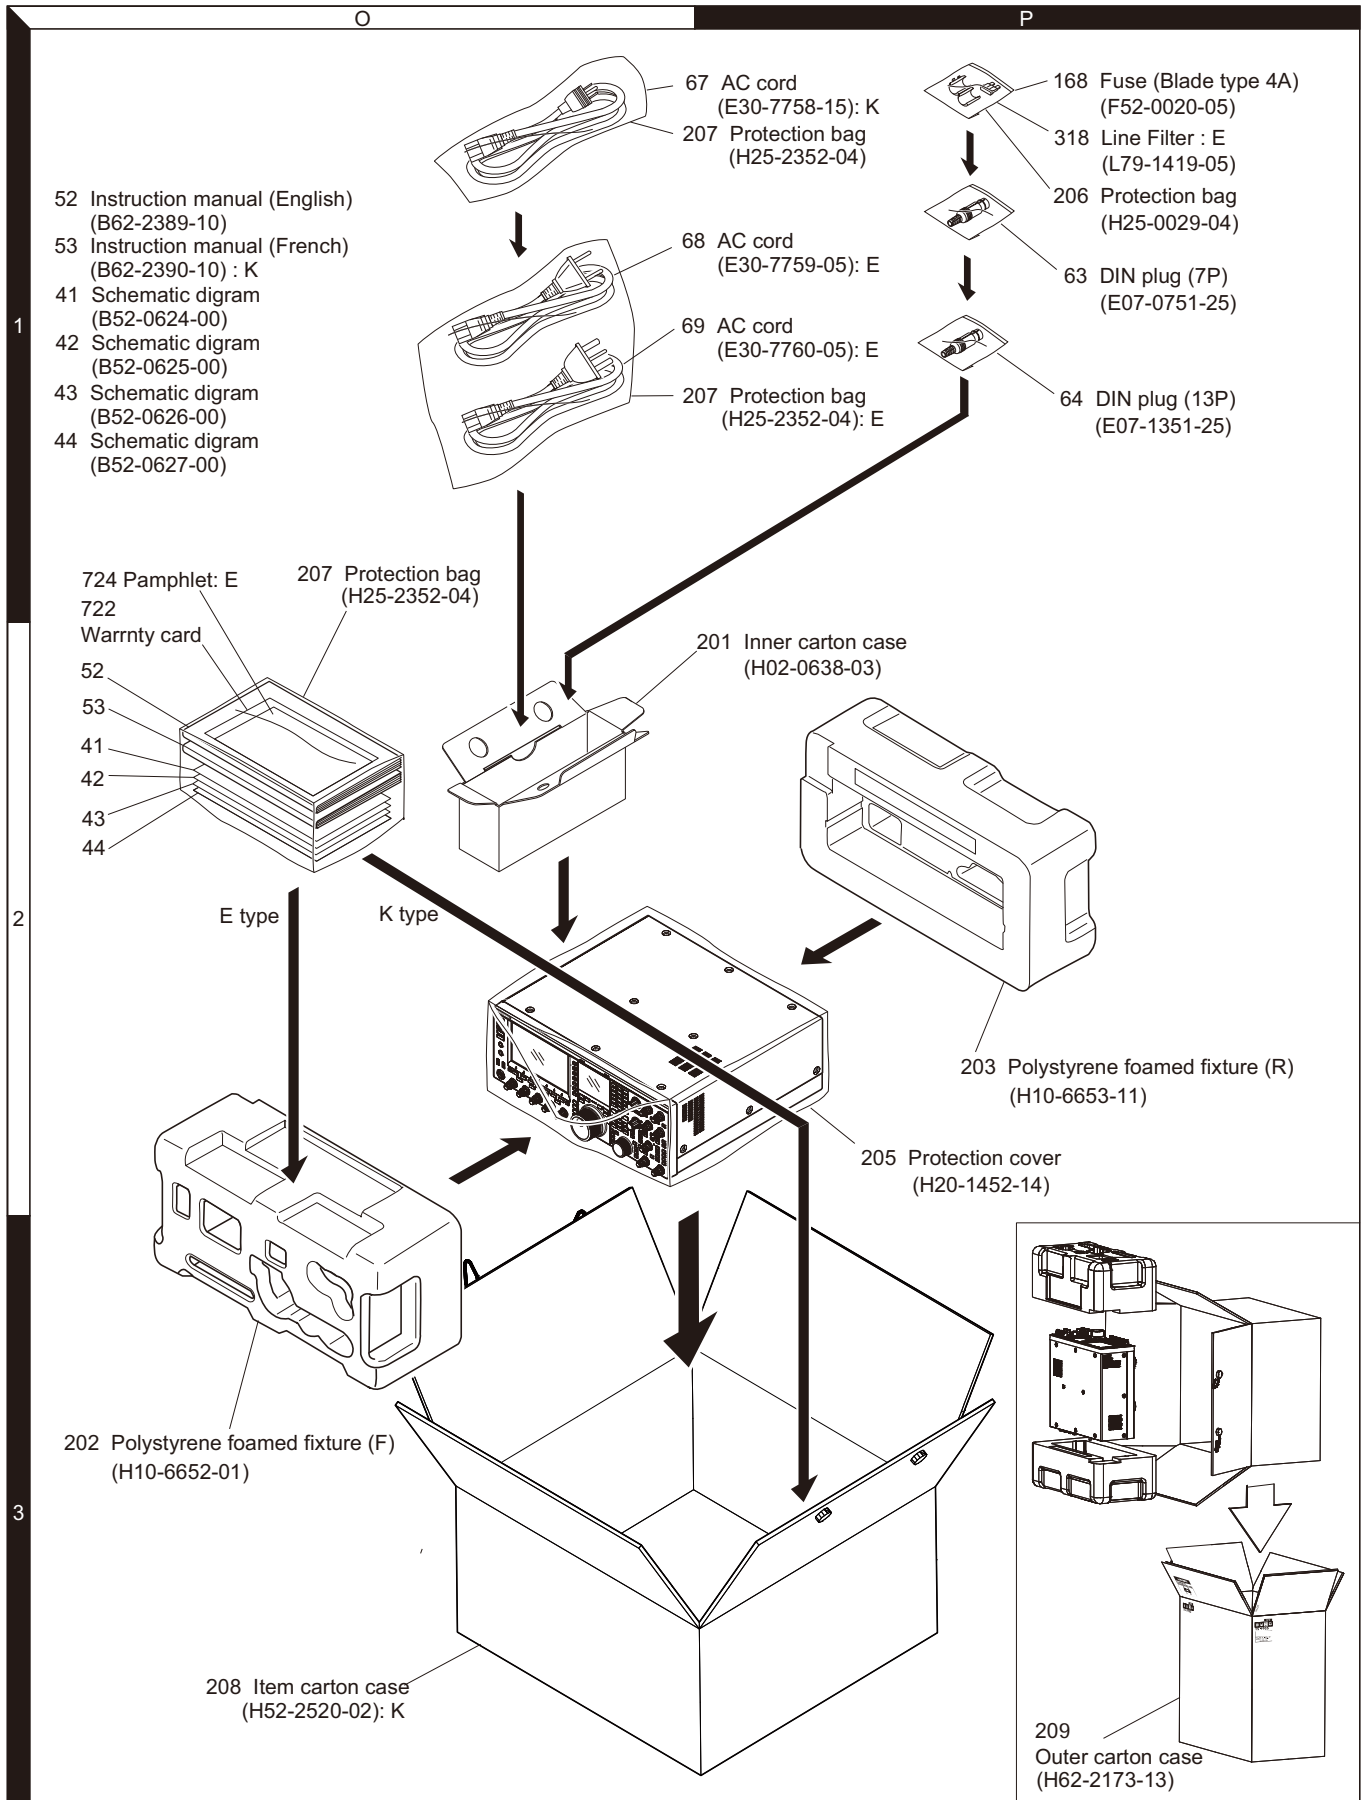

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New Parts. △ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

C : China

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

TS-990S

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
TS-990S						89	2L	*	E37-1570-05	LEAD WIRE WITH MINIPIN PLUG	
1	1B	*	A01-2234-12	METALLIC CABINET(UPPER)		90	3I,2L,1N	*	E37-1571-15	LEAD WIRE WITH MINIPIN PLUG	
2	1D	*	A01-2235-02	METALLIC CABINET(LOWER)		91	1L,3K	*	E37-1572-05	LEAD WIRE WITH MINIPIN PLUG	
15	1E	*	A22-2527-01	SUB PANEL		92	1J,1M	*	E37-1573-05	LEAD WIRE WITH MINIPIN PLUG	
16	3E	*	A62-1194-11	PANEL		93	3J,1N	*	E37-1577-05	LEAD WIRE WITH MINIPIN PLUG	
18	3B	*	A82-0089-21	REAR PANEL		94	2I	*	E37-1579-05	FLAT CABLE	
21	2B	*	B09-0761-05	CAP(DVI CN)		95	1J,2L,2M	*	E37-1580-15	FLAT CABLE	
22	3E	*	B10-6011-03	FRONT GLASS(SUB DISP)		96	2L,3L	*	E37-1581-05	FLAT CABLE	
23	2G	*	B11-1898-03	ILLUMINATION GUIDE(TX/RX,SPLIT)		97	1L,2L,3L	*	E37-1582-05	FLAT CABLE	
24	1G	*	B11-1899-03	ILLUMINATION GUIDE(MULTI,HI/LO)		98	1K,2L,3L	*	E37-1583-05	FLAT CABLE	
25	2F	*	B38-0943-05	LCD ASSY(7INCH TFT)		99	3K,3L	*	E37-1585-15	FLAT CABLE	
26	2F	*	B38-0944-05	LCD ASSY(3.5INCH TFT)		100	3L,2M	*	E37-1586-15	FLAT CABLE	
31	2E	*	B43-0336-04	BADGE(KENWOOD)		101	2L	*	E37-1587-05	FLAT CABLE	
32	3F	*	B43-1667-03	BADGE(TS-990)		102	3L	*	E37-1588-05	FLAT CABLE	
33	3F	*	B43-1668-04	BADGE(SUB RECEIVER)		103	3L,2M	*	E37-1590-05	FLAT CABLE	
41	2O	*	B52-0624-00	SCHEMATIC DIAGRAM ACCESSORY		104	3L,2M	*	E37-1591-05	FLAT CABLE	
42	2O	*	B52-0625-00	SCHEMATIC DIAGRAM ACCESSORY		105	3L	*	E37-1592-05	FLAT CABLE	
43	2O	*	B52-0626-00	SCHEMATIC DIAGRAM ACCESSORY		106	1K,1L	*	E37-1593-15	FLAT CABLE	
44	2O	*	B52-0627-00	SCHEMATIC DIAGRAM ACCESSORY		107	2I,1K	*	E37-1594-15	FLAT CABLE	
52	2O	*	B62-2389-10	INSTRUCTION MANUAL(ENGLISH)		108	2I	*	E37-1595-05	FLAT CABLE	
53	2O	*	B62-2390-10	INSTRUCTION MANUAL(FRENCH)	K	109	1I,2I	*	E37-1596-15	FLAT CABLE	
-		*	B62-2391-10	INSTRUCTION MANUAL(SPANISH)	E	110	2I,3I,1N	*	E37-1597-05	FLAT CABLE	
-		*	B62-2392-10	INSTRUCTION MANUAL(GERMAN)	E	111	1L,3L	*	E37-1598-05	FLAT CABLE	
-		*	B62-2393-10	INSTRUCTION MANUAL(ITALIAN)	E	112	3I,1N	*	E37-1600-05	FLAT CABLE	
-		*	B62-2394-10	INSTRUCTION MANUAL(DUTCH)	E	113	2H	*	E37-1601-05	FLAT CABLE	
△ 58	2B	*	B72-2779-14	MODEL NAME-PLATE	K	114	3H	*	E37-1602-05	FLAT CABLE	
△ 58	2B	*	B72-2780-14	MODEL NAME-PLATE	E	115	2H	*	E37-1603-05	FLAT CABLE	
61	2B		E04-0167-15	RF COAXIAL RECEPTACLE(M)		116	3I	*	E37-1604-05	FLAT CABLE	
62	2B		E04-0454-15	RF COAXIAL RECEPTACLE(BNC)		117	2H	*	E37-1605-05	FLAT CABLE	
63	1P		E07-0751-25	DIN PLUG(7P) ACCESSORY		118	2F,1H,2H	*	E37-1606-05	FLAT CABLE	
64	1P		E07-1351-25	DIN PLUG(13P) ACCESSORY		121	1J,2M	*	E37-1610-05	LEAD WIRE WITH CONNECTOR	
65	2B		E23-1164-04	EARTH LUG(ANT/BNC)		122	2J,2M	*	E37-1611-05	LEAD WIRE WITH CONNECTOR	
66	3L, 2M		E30-7582-05	TRUNK CABLE(APP-PANEL)		123	1J,2M	*	E37-1612-05	LEAD WIRE WITH CONNECTOR	
△ 67	1O	*	E30-7758-15	AC POWER CORD(K-TYPE)	K	124	2I,2K,2N	*	E37-1613-05	LEAD WIRE WITH CONNECTOR	
△ 68	1O	*	E30-7759-05	AC POWER CORD(E-TYPE)	E	125	1J,1L,3L	*	E37-1614-25	LEAD WIRE WITH CONNECTOR	
△ 69	1O	*	E30-7760-05	AC POWER CORD(E(T)-TYPE)	E	126	1B,1I,1L,2N	*	E37-1615-15	LEAD WIRE WITH CONNECTOR	
71	3H		E37-1507-05	LEAD WIRE WITH CONNECTOR		127	1J,2I,2M	*	E37-1616-15	LEAD WIRE WITH CONNECTOR	
72	1J,2K,3K	*	E37-1552-05	LEAD WIRE WITH MINIPIN PLUG		128	1J,1L,3L	*	E37-1617-05	LEAD WIRE WITH CONNECTOR	
73	1I,2I,1K	*	E37-1553-05	LEAD WIRE WITH MINIPIN PLUG		129	1L,3L	*	E37-1618-05	LEAD WIRE WITH CONNECTOR	
74	1K,2L	*	E37-1554-05	LEAD WIRE WITH MINIPIN PLUG		130	1L,3L	*	E37-1619-05	LEAD WIRE WITH CONNECTOR	
75	1K,2L	*	E37-1555-05	LEAD WIRE WITH MINIPIN PLUG		131	2L,3L	*	E37-1620-05	LEAD WIRE WITH CONNECTOR	
76	1K,2L	*	E37-1556-05	LEAD WIRE WITH MINIPIN PLUG		132	1L,3K	*	E37-1621-05	LEAD WIRE WITH CONNECTOR	
77	2K,2L	*	E37-1558-05	LEAD WIRE WITH MINIPIN PLUG		133	1L	*	E37-1622-05	LEAD WIRE WITH CONNECTOR	
78	1K,2K	*	E37-1559-05	LEAD WIRE WITH MINIPIN PLUG		134	1K,1L	*	E37-1623-05	LEAD WIRE WITH CONNECTOR	
79	1L,2K	*	E37-1560-05	LEAD WIRE WITH MINIPIN PLUG		135	1K,1L	*	E37-1624-05	LEAD WIRE WITH CONNECTOR	
80	2K,3K	*	E37-1561-05	LEAD WIRE WITH MINIPIN PLUG		136	1L,2L,3M	*	E37-1625-05	LEAD WIRE WITH CONNECTOR	
81	2K,3K	*	E37-1562-05	LEAD WIRE WITH MINIPIN PLUG		137	1L,2L,2M	*	E37-1626-05	LEAD WIRE WITH CONNECTOR	
82	2K,3K	*	E37-1563-05	LEAD WIRE WITH MINIPIN PLUG		138	3L,2M,3M	*	E37-1627-05	LEAD WIRE WITH CONNECTOR	
83	2K,3K	*	E37-1564-05	LEAD WIRE WITH MINIPIN PLUG		139	2I,3K,2N	*	E37-1628-15	LEAD WIRE WITH CONNECTOR	
84	3K	*	E37-1565-05	LEAD WIRE WITH MINIPIN PLUG		140	3K	*	E37-1629-05	LEAD WIRE WITH CONNECTOR	
85	3I,1K	*	E37-1566-05	LEAD WIRE WITH MINIPIN PLUG		141	1H	*	E37-1630-05	LEAD WIRE WITH CONNECTOR	
86	3I,1K	*	E37-1567-05	LEAD WIRE WITH MINIPIN PLUG		142	1H	*	E37-1631-05	LEAD WIRE WITH CONNECTOR	
87	2L	*	E37-1568-05	LEAD WIRE WITH MINIPIN PLUG		143	2B	*	E37-1634-05	LEAD WIRE WITH CONNECTOR	
88	2L	*	E37-1569-05	LEAD WIRE WITH MINIPIN PLUG	△	144	2J	*	E37-1665-05	LEAD WIRE WITH CONNECTOR	
						153	2B	*	F09-1307-05	FANMOTOR(AT)	

PARTS LIST

TS-990S

	Ref. No.	Address	New parts	Parts No.	Description	Destination		Ref. No.	Address	New parts	Parts No.	Description	Destination
Δ	154	3A	*	F09-1309-05	FANMOTOR(FINAL)			230	3F	*	K29-9508-02	KEY TOP(KEY AREA 2)	
	166	3E	*	F10-3198-03	SHIELDING PLATE(MAIN-TORQUE)			231	3F	*	K29-9509-02	KEY TOP(KEY AREA 3)	
Δ	168	1P		F52-0020-05	FUSE(BLADE TYPE)(4A) ACCESSORY			232	3F	*	K29-9510-01	KEY TOP(KEY AREA 4)	
	170	3E,3F		G02-0505-05	KNOB SPRING(INNER KNOB)			234	3F	*	K29-9511-02	KEY TOP(KEY AREA 5)	
	171	2D		G02-0791-14	FLAT SPRING(AUDIO IC)			235	3F	*	K29-9512-03	KEY TOP(KEY AREA 6)	
	172	1A		G02-1838-14	EARTH SPRING(FINAL FET)			236	3G	*	K29-9514-02	BUTTON KNOB(POWER)	
	173	3E	*	G02-1869-03	FLAT SPRING(MAIN TORQUE)			237	3G	*	K29-9515-02	BUTTON KNOB(TIMER)	
	174	1F	*	G02-1871-04	FLAT SPRING(7INCH NOISE)			238	3G	*	K29-9516-02	BUTTON KNOB(SEND)	
	175	1A	*	G02-1875-04	EARTH SPRING(FINAL FET)			239	3G	*	K29-9517-02	BUTTON KNOB(AT)	
	176	3E		G09-0405-05	KNOB SPRING(MULTI,RIT)			240	3G	*	K29-9518-12	BUTTON KNOB(F1)	
	177	1C,1H,1I,3L		G10-1278-04	FIBROUS SHEET(FLAT CABLE)			243	3G	*	K29-9519-12	BUTTON KNOB(F2)	
	178	3E	*	G10-1836-04	FIBROUS SHEET(MAIN TORQUE)			244	3G	*	K29-9520-12	BUTTON KNOB(F3)	
	179	2C,3C		G11-4510-04	RUBBER SHEET(DDS)			245	3G	*	K29-9521-12	BUTTON KNOB(F4)	
	180	2F		G11-4520-04	SHEET(PANEL CORE)			246	2G	*	K29-9522-12	BUTTON KNOB(F5)	
	181	3E	*	G11-4570-14	SHEET(SUB DISP)			247	2G	*	K29-9523-12	BUTTON KNOB(F6)	
	182	2A	*	G11-4577-04	SHEET(FINAL F01)			248	2G	*	K29-9524-12	BUTTON KNOB(F7)	
	183	1B	*	G11-4596-03	SHEET(FINAL PCB)			249	3G	*	K29-9525-02	BUTTON KNOB(VOX)	
	184	2F	*	G11-4619-04	SHEET(7INCH)			250	3G	*	K29-9526-02	BUTTON KNOB(PROC)	
	185	3E	*	G11-4621-04	SHEET(MAIN KNOB)			251	2G	*	K29-9527-02	BUTTON KNOB(FBK)	
	186	3B	*	G11-4623-04	RUBBER SHEET(REAR PANEL)			252	2G	*	K29-9528-02	BUTTON KNOB(MONI)	
	187	2C,2D	*	G13-1878-15	CONDUCTIVE CUSHION(TX VCO,BPF)			253	2G	*	K29-9529-02	BUTTON KNOB(LSB/USB)	
	188	1D,2D,2F		G13-2102-04	CONDUCTIVE CUSHION(7IN,BPF,PRE)			254	2G	*	K29-9530-02	BUTTON KNOB(CW)	
	189	1B	*	G13-2372-14	CUSHION(SP)			255	2G	*	K29-9531-02	BUTTON KNOB(FSK/PSK)	
	190	2F	*	G13-2375-04	CUSHION(7INCH FRONT)			256	2G	*	K29-9532-02	BUTTON KNOB(FM/AM)	
	191	2F,2H	*	G13-2376-04	CUSHION(7INCH REAR)			257	2G	*	K29-9533-02	BUTTON KNOB(DATA)	
	192	2F	*	G13-2377-04	CUSHION(7INCH REAR)			258	2G	*	K29-9534-02	BUTTON KNOB(RX)	
	193	2F	*	G13-2379-04	CUSHION(3.5 FRONT)			259	2G	*	K29-9535-02	BUTTON KNOB(TX)	
	194	1E,1F	*	G13-2380-04	CUSHION(ON PCB)			260	2G	*	K29-9536-02	BUTTON KNOB(M>S)	
	195	2C	*	G13-2421-04	CUSHION(L PLATE)			261	2G	*	K29-9537-02	BUTTON KNOB(M/S)	
	196	2D	*	G13-2433-04	CUSHION(ON S-CASE)			262	2G	*	K29-9538-01	BUTTON KNOB(RX ANT)	
	197	1A	*	G13-2434-04	CONDUCTIVE CUSHION(UPPER CASE)			263	1G	*	K29-9539-01	BUTTON KNOB(DRV)	
	198	2B	*	G13-2436-04	CONDUCTIVE CUSHION(REAR PANEL)			264	1G	*	K29-9540-01	BUTTON KNOB(XVTR)	
	199	1A	*	G13-2437-04	CONDUCTIVE CUSHION(DCDC CASE)			265	2G	*	K29-9541-01	BUTTON KNOB(1)	
	201	2O		H02-0638-03	INNER CARTON CASE ACCESSORY			266	1G	*	K29-9542-01	BUTTON KNOB(2)	
	202	3O	*	H10-6652-01	POLYSTYRENE FOAMED FIXTURE(FRONT)			267	1G	*	K29-9543-01	BUTTON KNOB(3)	
	203	2P	*	H10-6653-11	POLYSTYRENE FOAMED FIXTURE(REAR)			268	2G	*	K29-9544-01	BUTTON KNOB(4)	
	205	2P	*	H20-1452-14	PROTECTION COVER(BODY)			269	1G	*	K29-9545-01	BUTTON KNOB(6)	
	206	1P		H25-0029-04	PROTECTION BAG (60/110/0.07)			270	2G	*	K29-9546-01	BUTTON KNOB(7)	
	207	1O,2O		H25-2352-04	PROTECTION BAG (250/350/0.07)			271	1G	*	K29-9547-01	BUTTON KNOB(8)	
	208	3O	*	H52-2520-02	ITEM CARTON CASE		K	272	1G	*	K29-9548-01	BUTTON KNOB(9)	
	209	3P	*	H62-2173-13	OUTER CARTON CASE			273	2G	*	K29-9549-01	BUTTON KNOB(CLR)	
	210	1D	*	J02-1310-02	FOOT(FRONT BASE)			274	1G	*	K29-9550-01	BUTTON KNOB(0)	
	211	1D	*	J02-1311-02	FOOT(FRONT LEVER)			275	1G	*	K29-9551-01	BUTTON KNOB(ENT)	
	212	1D	*	J02-1312-03	FOOT(REAR)			276	2G	*	K29-9552-01	BUTTON KNOB(GEN1)	
	213	3B	*	J21-8645-03	MOUNTING HARDWARE(ANT HOLDER)			277	1G	*	K29-9553-01	BUTTON KNOB(GEN2)	
	214	2B	*	J21-8646-02	MOUNTING HARDWARE(SP)			278	1G	*	K29-9554-01	BUTTON KNOB(MENU)	
	215	2F	*	J21-8647-12	MOUNTING HARDWARE(7TFT)			279	2G	*	K29-9555-01	BUTTON KNOB(M/V)	
	216	2F	*	J21-8648-03	MOUNTING HARDWARE(3.5TFT)			280	1G	*	K29-9556-01	BUTTON KNOB(M.IN)	
	217	2F	*	J21-8649-04	MOUNTING HARDWARE(HI/LO AREA)			281	1G	*	K29-9557-01	BUTTON KNOB(M>V)	
	218	1E	*	J21-8650-03	MOUNTING HARDWARE(VR AREA1)			282	2G	*	K29-9558-01	BUTTON KNOB(REC)	
	219	2F	*	J21-8651-03	MOUNTING HARDWARE(VR AREA2)			283	1G	*	K29-9559-01	BUTTON KNOB(STOP)	
	220	1F	*	J21-8652-03	MOUNTING HARDWARE(VR AREA3)			284	1G	*	K29-9560-01	BUTTON KNOB(PLAY)	
	221	1F	*	J21-8653-03	MOUNTING HARDWARE(VR AREA4)			285	2G	*	K29-9561-01	BUTTON KNOB(S.DISP)	
	-			J61-0307-05	BAND			286	1G	*	K29-9562-01	BUTTON KNOB(MR)	
	225	3E	*	K21-1109-13	KNOB(MAIN UPPER)			287	1G	*	K29-9564-02	BUTTON KNOB(5)	
	226	3E	*	K21-1110-03	KNOB(MAIN LOWER)			288	2G	*	K29-9565-02	BUTTON KNOB(TF SET)	
	227	3E	*	K21-1111-13	KNOB(SUB KNOB)			289	2G	*	K29-9566-02	BUTTON KNOB(<MAIN)	
	228	3E,3F		K29-9390-03	KNOB(VR SMALL IN)			290	1G	*	K29-9567-02	BUTTON KNOB(SUB>)	
	229	2E	*	K29-9507-03	KEY TOP(KEY AREA 1)			291	1G	*	K29-9568-02	BUTTON KNOB(UP)	
								292	1G	*	K29-9569-02	BUTTON KNOB(DOWN)	

PARTS LIST

TS-990S
ACCESSORY UNIT (X42-3430-00)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
293	3G	*	K29-9570-02	BUTTON KNOB(PF A)	E
294	3G	*	K29-9571-02	BUTTON KNOB(DIM)	
295	3G	*	K29-9572-02	BUTTON KNOB(ESC)	
296	2G	*	K29-9573-02	BUTTON KNOB(SCOPE)	
297	2G	*	K29-9574-12	BUTTON KNOB(FUNC-7TFT)	
298	1G,2G	*	K29-9575-02	BUTTON KNOB(NO PRINT)	
299	1G,2G	*	K29-9576-02	BUTTON KNOB(ILLUMI)	
300	3E	*	K29-9577-03	KNOB(HI/LO INNER)	
301	3E	*	K29-9578-13	KNOB(HI/LO OUTER)	
302	3E	*	K29-9579-02	KNOB(MULTI,RIT)	
303	3E	*	K29-9580-03	KNOB(VR BIG IN)	
304	3E	*	K29-9581-13	KNOB(VR BIG OUT)	
305	3E	*	K29-9582-03	KNOB RING(MAIN KNOB)	
306	3E	*	K29-9583-03	KNOB RING(SUB KNOB)	
307	1G	*	K29-9592-02	BUTTON KNOB(RIT)	
308	1G	*	K29-9593-02	BUTTON KNOB(XIT)	
309	1G	*	K29-9594-02	BUTTON KNOB(CL)	
310	3E,3F	*	K29-9596-03	KNOB(VR-SMAL-OUT)	
315	3M		L79-1407-05	LINE FILTER(PANEL)	
316	3L		L79-1417-05	LINE FILTER(HOSOCOAXIAL)	
317	3L		L79-1419-05	LINE FILTER	
318	1P		L79-1419-05	LINE FILTER(ACC)	
319	2F,3L	*	L92-0493-05	FERRITE CORE(P,7IN,S FFC)	
A	3E		N09-6602-05	SPECIAL SCREW(PANEL)	
B	3A	*	N09-6617-05	SPECIAL SCREW(SUB PANEL)	
C	2J		N14-0802-05	WING NUT(ACDC-GND)	
D	2J	*	N15-1050-48	FLAT WASHER(ACDC-GND)	
E	1F		N19-0673-15	SPECIAL WASHER(RIT)	
F	1E,1F,2F		N33-2606-43	OVAL HEAD MACHINE SCREW(PANEL-PCB)	
G	2A,3A		N33-3006-43	OVAL HEAD MACHINE SCREW(FINAL,SUB-P)	
H	1E,2E,2F		N35-2604-43	BINDING HEAD MACHINE SCREW(PANEL-PCB)	
I	1A,2B,3B		N35-3005-43	BINDING HEAD MACHINE SCREW(SHIELD ETC)	
J	2B		N35-3008-43	BINDING HEAD MACHINE SCREW(ANT/BNC)	
K	2A,2B		N35-3020-48	BINDING HEAD MACHINE SCREW(60-FAN,HEAT)	
L	3A	*	N35-3030-48	BINDING HEAD MACHINE SCREW(80-FAN)	
M	1B,2B,2D		N35-4008-43	BINDING HEAD MACHINE SCREW(CABINET,SUB)	
N	3E	*	N38-2030-48	PAN HEAD MACHINE SCREW(MAIN KNOB)	
O	1A		N67-2612-48	PAN HEAD SEMS SCREW(FINAL)	
P	3E		N77-3006-43	HEXAGON SOCKET HEAD SET SCREW(MAIN/SUB)	
Q	1E,1F,2F		N82-2605-48	BINDING HEAD TAPTITE SCREW(PANEL)	
R	1A,2D		N87-2606-43	BRAZIER HEAD TAPTITE SCREW(BODY-PCB)	
S	1A,1C,2D		N87-2608-48	BRAZIER HEAD TAPTITE SCREW(BODY)	
T	1B,2B		N87-3005-43	BRAZIER HEAD TAPTITE SCREW(SPEAKER)	
331	1B	*	T07-0797-05	SPEAKER	
332	1E,1F		W02-1836-15	ENCODER(MAIN,SUB)	
333	1F		W02-3727-05	ENCODER(RIT)	
334	2A	*	W02-3765-05	ELECTRIC CIRCUIT MODULE(AC/DC UNIT)	
335	3D		W09-0971-05	LITHIUM CELL(COTROL UNIT)	
-		*	X46-3390-01	DIGITAL UNIT(FOR SERVICE)	

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
ACCESSORY UNIT (X42-3430-00)					
D609		*	B30-2352-05	LED(GREEN)	
D610		*	B30-2350-05	LED(YELLOW)	
D611,612		*	B30-2352-05	LED(GREEN)	
D613		*	B30-2350-05	LED(YELLOW)	
C1			CK73GB1H103K	CHIP C 0.010UF	K
C2			CK73GB1E105K	CHIP C 1.0UF	K
C3 ,4			CK73GB1H104K	CHIP C 0.10UF	K
C5			CS77MA1VR33M	CHIP TNTL 0.33UF	35WV
C6			CK73FB1C106K	CHIP C 10UF	K
C7 -10			CK73GB1H103K	CHIP C 0.010UF	K
C11			CK73GB1H104K	CHIP C 0.10UF	K
C12			CE32BM1C220M	CHIP EL 22UF	16WV
C13			CK73GB1H104K	CHIP C 0.10UF	K
C14			CK73GB1H103K	CHIP C 0.010UF	K
C15 -18			CK73GB1H104K	CHIP C 0.10UF	K
C19			CK73GB1H103K	CHIP C 0.010UF	K
C20			CE32BM1C220M	CHIP EL 22UF	16WV
C21 -23			CK73GB1H103K	CHIP C 0.010UF	K
C24			CC73GCH1H560J	CHIP C 56PF	J
C25 -27			CK73GB1H104K	CHIP C 0.10UF	K
C28			CK73GB1H103K	CHIP C 0.010UF	K
C29			CC73GCH1H070D	CHIP C 7.0PF	D
C30 -33			CK73GB1H104K	CHIP C 0.10UF	K
C34			CC73GCH1H101J	CHIP C 100PF	J
C35 ,36			CK73GB1H104K	CHIP C 0.10UF	K
C37			CC73GCH1H070D	CHIP C 7.0PF	D
C38 ,39			CK73GB1H103K	CHIP C 0.010UF	K
C40			CC73GCH1H560J	CHIP C 56PF	J
C41			CK73GB1H103K	CHIP C 0.010UF	K
C42			CK73GB1H104K	CHIP C 0.10UF	K
C43			CK73FB1C106K	CHIP C 10UF	K
C44			CK73GB1H103K	CHIP C 0.010UF	K
C45			CC73GCH1H560J	CHIP C 56PF	J
C46			CK73GB1H104K	CHIP C 0.10UF	K
C48			CK73GB1H104K	CHIP C 0.10UF	K
C49 -51			CK73GB1H103K	CHIP C 0.010UF	K
C52			CC73GCH1H330J	CHIP C 33PF	J
C53			CC73GCH1H820J	CHIP C 82PF	J
C54 -56			CK73GB1H103K	CHIP C 0.010UF	K
C57			CC73GCH1H390J	CHIP C 39PF	J
C58			CC73GCH1H270J	CHIP C 27PF	J
C59 -61			CK73GB1H104K	CHIP C 0.10UF	K
C62 -65			CK73GB1H103K	CHIP C 0.010UF	K
C66			CC73GCH1H390J	CHIP C 39PF	J
C67			CK73GB1H104K	CHIP C 0.10UF	K
C68 -70			CC73GCH1H101J	CHIP C 100PF	J
C71			CC73GCH1H050C	CHIP C 5.0PF	C
C72 -74			CC73GCH1H100D	CHIP C 10PF	D
C75			CC73GCH1H820J	CHIP C 82PF	J
C76 ,77			CK73GB1H104K	CHIP C 0.10UF	K
C78			CC73GCH1H050C	CHIP C 5.0PF	C
C80 -82			CC73GCH1H330J	CHIP C 33PF	J
C83			CC73GCH1H820J	CHIP C 82PF	J
C84			CK73GB1H103K	CHIP C 0.010UF	K
C85 -87			CK73FB1C106K	CHIP C 10UF	K
C88			CK73GB1H102K	CHIP C 1000PF	K
C89 -94			CK73GB1H103K	CHIP C 0.010UF	K
C96			CK73GB1H104K	CHIP C 0.10UF	K

PARTS LIST

ACCESSORY UNIT (X42-3430-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C97			CC73GCH1H471J	CHIP C 470PF J		C200			CK73GB1H104K	CHIP C 0.10UF K	
C98			CE32CL1C100M	CHIP EL 10UF 16WV		C203-205			CK73GB1H103K	CHIP C 0.010UF K	
C99			CK73FB1C106K	CHIP C 10UF K		C206			CC73GCH1H560G	CHIP C 56PF G	
C100			CK73GB1H103K	CHIP C 0.010UF K		C207			CK73GB1H103K	CHIP C 0.010UF K	
C101			CK73FB1C106K	CHIP C 10UF K		C208			CK73GB1H104K	CHIP C 0.10UF K	
C102			CK73GB1H103K	CHIP C 0.010UF K		C209			CK73GB1E105K	CHIP C 1.0UF K	
C103			CK73FB1C106K	CHIP C 10UF K		C210			CK73GB1H103K	CHIP C 0.010UF K	
C104,105			CK73GB1H103K	CHIP C 0.010UF K		C211			CC73GCH1H060B	CHIP C 6.0PF B	
C110-113			CK73GB1H104K	CHIP C 0.10UF K		C212			CK73GB1H103K	CHIP C 0.010UF K	
C114			CK73GB1H103K	CHIP C 0.010UF K		C213			CC73GCH1H390J	CHIP C 39PF J	
C115-117			CK73GB1H104K	CHIP C 0.10UF K		C214			CK73GB1H103K	CHIP C 0.010UF K	
C118-120			CK73GB1H103K	CHIP C 0.010UF K		C215			CK73GB1H102K	CHIP C 1000PF K	
C121-123			CK73GB1H104K	CHIP C 0.10UF K		C216,217			CC73GCH1H560G	CHIP C 56PF G	
C124			CC73GCH1H680G	CHIP C 68PF G		C218			CC73GCH1H050C	CHIP C 5.0PF C	
C125			CC73GCH1H391J	CHIP C 390PF J		C219			CK73GB1E105K	CHIP C 1.0UF K	
C126			CC73GCH1H020B	CHIP C 2.0PF B		C220			CC73GCH1H820J	CHIP C 82PF J	
C127			CC73GCH1H330J	CHIP C 33PF J		C221			CC73GCH1H050C	CHIP C 5.0PF C	
C128			CC73GCH1H150G	CHIP C 15PF G		C222			CK73GB1E105K	CHIP C 1.0UF K	
C129			CC73GCH1H561J	CHIP C 560PF J		C223			CK73GB1H103K	CHIP C 0.010UF K	
C130			CC73GCH1H820J	CHIP C 82PF J		C224			CC73GCH1H390J	CHIP C 39PF J	
C131			CC73GCH1H331J	CHIP C 330PF J		C225			CC73GCH1H090B	CHIP C 9.0PF B	
C132			CC73GCH1H820G	CHIP C 82PF G		C226,227			CK73GB1H103K	CHIP C 0.010UF K	
C133			CC73GCH1H050B	CHIP C 5.0PF B		C229-231			CK73GB1H103K	CHIP C 0.010UF K	
C134-136			CK73GB1H104K	CHIP C 0.10UF K		C232			CC73GCH1H020C	CHIP C 2.0PF C	
C138,139			CK73GB1H104K	CHIP C 0.10UF K		C233,234			CK73GB1H103K	CHIP C 0.010UF K	
C141			CC73GCH1H040B	CHIP C 4.0PF B		C236			CK73GB1E105K	CHIP C 1.0UF K	
C143			CK73GB1H104K	CHIP C 0.10UF K		C238			CK73GB1H103K	CHIP C 0.010UF K	
C146-148			CK73GB1H104K	CHIP C 0.10UF K		C241			CC73GCH1H020C	CHIP C 2.0PF C	
C150			CC73GCH1H681J	CHIP C 680PF J		C243			CK73GB1H103K	CHIP C 0.010UF K	
C151			CC73GCH1H391J	CHIP C 390PF J		C244			CC73GCH1H020C	CHIP C 2.0PF C	
C153			CC73GCH1H680J	CHIP C 68PF J		C246			CC73GCH1H220J	CHIP C 22PF J	
C155			CC73GCH1H471J	CHIP C 470PF J		C248,249			CK73GB1H103K	CHIP C 0.010UF K	
C156			CC73GCH1H820G	CHIP C 82PF G		C250			CK73GB1H104K	CHIP C 0.10UF K	
C157			CC73GCH1H330J	CHIP C 33PF J		C251			CC73GCH1H220J	CHIP C 22PF J	
C158			CC73GCH1H050B	CHIP C 5.0PF B		C253			CC73GCH1H101J	CHIP C 100PF J	
C159			CC73GCH1H561J	CHIP C 560PF J		C254			CC73GCH1H330J	CHIP C 33PF J	
C161			CC73GCH1H680J	CHIP C 68PF J		C255			CC73GCH1H180G	CHIP C 18PF G	
C163			CC73GCH1H271J	CHIP C 270PF J		C256			CC73GCH1H030C	CHIP C 3.0PF C	
C164			CC73GCH1H820J	CHIP C 82PF J		C257			CC73GCH1H680J	CHIP C 68PF J	
C165			CK73GB1H103K	CHIP C 0.010UF K		C258			CC73GCH1H060B	CHIP C 6.0PF B	
C166			CK73GB1H104K	CHIP C 0.10UF K		C259			CC73GCH1H030C	CHIP C 3.0PF C	
C167			CC73GCH1H331J	CHIP C 330PF J		C260			CK73GB1H103K	CHIP C 0.010UF K	
C169			CK73GB1H104K	CHIP C 0.10UF K		C261			CC73GCH1H180G	CHIP C 18PF G	
C170			CC73GCH1H680G	CHIP C 68PF G		C262			CC73GCH1H680J	CHIP C 68PF J	
C171			CC73GCH1H150G	CHIP C 15PF G		C263			CC73GCH1H681J	CHIP C 680PF J	
C172			CK73GB1H103K	CHIP C 0.010UF K		C264			CC73GCH1H101J	CHIP C 100PF J	
C173			CC73GCH1H080B	CHIP C 8.0PF B		C266			CK73FB1C106K	CHIP C 10UF K	
C174,175			CK73GB1H103K	CHIP C 0.010UF K		C267			CK73GB1H103K	CHIP C 0.010UF K	
C176,177			CK73GB1H104K	CHIP C 0.10UF K		C269			CC73GCH1H390G	CHIP C 39PF G	
C178			CK73GB1H103K	CHIP C 0.010UF K		C270			CK73GB1H104K	CHIP C 0.10UF K	
C181			CK73FB1C106K	CHIP C 10UF K		C272,273			CK73GB1H104K	CHIP C 0.10UF K	
C183			CC73GCH1H560G	CHIP C 56PF G		C275			CK73GB1H473K	CHIP C 0.047UF K	
C184-186			CK73GB1H103K	CHIP C 0.010UF K		C276			CC73GCH1H060B	CHIP C 6.0PF B	
C187			CK73GB1H333K	CHIP C 0.033UF K		C277-279			CK73GB1H104K	CHIP C 0.10UF K	
C189			CK73GB1H104K	CHIP C 0.10UF K		C280			CK73FB1C106K	CHIP C 10UF K	
C192			CK73GB1H103K	CHIP C 0.010UF K		C281,282			CK73GB1H103K	CHIP C 0.010UF K	
C194			CK73GB1H103K	CHIP C 0.010UF K		C283			CC73GCH1H390G	CHIP C 39PF G	
C195,196			CK73FB1C106K	CHIP C 10UF K		C284			CK73GB1H104K	CHIP C 0.10UF K	
C198		*	CC73GCH1H100B	CHIP C 10PF B		C285			CK73GB1H103K	CHIP C 0.010UF K	
C199			CK73FB1C106K	CHIP C 10UF K		C286			CC73GCH1H470G	CHIP C 47PF G	

PARTS LIST

ACCESSORY UNIT (X42-3430-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C287			CK73GB1H104K	CHIP C 0.10UF K		C448			CK73HB1H103K	CHIP C 0.010UF K	
C288			CK73GB1E105K	CHIP C 1.0UF K		C449			CK73GB1H104K	CHIP C 0.10UF K	
C289-291			CK73GB1H103K	CHIP C 0.010UF K		C450			CC73GCH1H090B	CHIP C 9.0PF B	
C292			CK73GB1H104K	CHIP C 0.10UF K		C451			CC73GCH1H080B	CHIP C 8.0PF B	
C293			CK73GB1E105K	CHIP C 1.0UF K		C452			CC73GCH1H471J	CHIP C 470PF J	
C294			CC73GCH1H330J	CHIP C 33PF J		C454			CK73GB1H104K	CHIP C 0.10UF K	
C295			CK73GB1H103K	CHIP C 0.010UF K		C455			CK73HB1H103K	CHIP C 0.010UF K	
C296			CK73GB1H102K	CHIP C 1000PF K		C456			CC73GCH1H221J	CHIP C 220PF J	
C297,298			CC73GCH1H470G	CHIP C 47PF G		C457			CK73GB1H103K	CHIP C 0.010UF K	
C299			CC73GCH1H030C	CHIP C 3.0PF C		C458			CC73GCH1H080B	CHIP C 8.0PF B	
C300			CC73GCH1H680J	CHIP C 68PF J		C459			CC73GCH1H090B	CHIP C 9.0PF B	
C301			CK73GB1H104K	CHIP C 0.10UF K		C460,461			CK73GB1H104K	CHIP C 0.10UF K	
C302			CC73GCH1H030C	CHIP C 3.0PF C		C462			CC73GCH1H080B	CHIP C 8.0PF B	
C303			CC73GCH1H330J	CHIP C 33PF J		C463			CC73GCH1H221J	CHIP C 220PF J	
C304-306			CK73GB1H103K	CHIP C 0.010UF K		C466			CK73HB1H103K	CHIP C 0.010UF K	
C308			CK73GB1H103K	CHIP C 0.010UF K		C467			CK73GB1H103K	CHIP C 0.010UF K	
C309			CC73GCH1H020C	CHIP C 2.0PF C		C468			CC73GCH1H221J	CHIP C 220PF J	
C311,312			CK73GB1H103K	CHIP C 0.010UF K		C469			CK73GB1H104K	CHIP C 0.10UF K	
C313			CK73GB1E105K	CHIP C 1.0UF K		C470			CC73GCH1H080B	CHIP C 8.0PF B	
C317			CK73GB1H103K	CHIP C 0.010UF K		C471		*	C93-1910-05	CHIP C 68PF F	
C318			CC73GCH1H020C	CHIP C 2.0PF C		C472			CK73HB1H103K	CHIP C 0.010UF K	
C321			CK73GB1H103K	CHIP C 0.010UF K		C473,474			CK73GB1H104K	CHIP C 0.10UF K	
C322			CC73GCH1H020C	CHIP C 2.0PF C		C475			CC73GCH1H080B	CHIP C 8.0PF B	
C324			CK73GB1H103K	CHIP C 0.010UF K		C476			CC73GCH1H471J	CHIP C 470PF J	
C325			CC73GCH1H220J	CHIP C 22PF J		C477			CC73GCH1H080B	CHIP C 8.0PF B	
C326			CK73GB1H103K	CHIP C 0.010UF K		C478			CK73GB1H103K	CHIP C 0.010UF K	
C328,329			CK73GB1E105K	CHIP C 1.0UF K		C479			CK73HB1H103K	CHIP C 0.010UF K	
C330			CK73GB1H103K	CHIP C 0.010UF K		C480		*	C93-1911-05	CHIP C 120PF F	
C331			CK73GB1H104K	CHIP C 0.10UF K		C481			CC73GCH1H080B	CHIP C 8.0PF B	
C332			CC73GCH1H331J	CHIP C 330PF J		C482			CK73GB1H104K	CHIP C 0.10UF K	
C333			CC73GCH1H181J	CHIP C 180PF J		C483			CC73GCH1H080B	CHIP C 8.0PF B	
C334			CC73GCH1H331J	CHIP C 330PF J		C484			CC73GCH1H470G	CHIP C 47PF G	
C401			CK73GB1H104K	CHIP C 0.10UF K		C485			CK73GB1H103K	CHIP C 0.010UF K	
C413-417			CK73GB1H104K	CHIP C 0.10UF K		C486		*	C93-1911-05	CHIP C 120PF F	
C418			CK73GB1H103K	CHIP C 0.010UF K		C487		*	C93-1509-05	CHIP C 100PF F	
C419			CC73GCH1H470G	CHIP C 47PF G		C488-490			CK73GB1H104K	CHIP C 0.10UF K	
C420			CK73GB1H104K	CHIP C 0.10UF K		C491			CK73GB1H103K	CHIP C 0.010UF K	
C421			CK73GB1H103K	CHIP C 0.010UF K		C492			CK73GB1H104K	CHIP C 0.10UF K	
C422			CC73GCH1H0R5B	CHIP C 0.5PF B		C493,494		*	C93-1912-05	CHIP C 180PF F	
C423			CK73GB1H104K	CHIP C 0.10UF K		C495,496			CK73GB1H104K	CHIP C 0.10UF K	
C424			CK73GB1H103K	CHIP C 0.010UF K		C497			CK73GB1H103K	CHIP C 0.010UF K	
C425			CC73GCH1H010B	CHIP C 1.0PF B		C498		*	C93-1911-05	CHIP C 120PF F	
C426			CK73GB1H104K	CHIP C 0.10UF K		C499,500			CK73GB1H104K	CHIP C 0.10UF K	
C427			CK73GB1H103K	CHIP C 0.010UF K		C501			CK73GB1H103K	CHIP C 0.010UF K	
C428			CC73GCH1H020B	CHIP C 2.0PF B		C502		*	C93-1509-05	CHIP C 100PF F	
C429			CK73GB1H104K	CHIP C 0.10UF K		C503			CK73GB1H104K	CHIP C 0.10UF K	
C430			CK73GB1H103K	CHIP C 0.010UF K		C504,505			CK73GB1H103K	CHIP C 0.010UF K	
C431			CC73GCH1H040B	CHIP C 4.0PF B		C506,507			CK73GB1H104K	CHIP C 0.10UF K	
C432			CK73GB1H104K	CHIP C 0.10UF K		C508			CK73GB1H103K	CHIP C 0.010UF K	
C433			CC73GCH1H470G	CHIP C 47PF G		C509,510			CK73GB1H104K	CHIP C 0.10UF K	
C434			CC73GCH1H040B	CHIP C 4.0PF B		C511			CK73GB1H103K	CHIP C 0.010UF K	
C435			CK73GB1H103K	CHIP C 0.010UF K		C514-519			CC73GCH1H080B	CHIP C 8.0PF B	
C436			CK73GB1H104K	CHIP C 0.10UF K		C522-525			CC73GCH1H090B	CHIP C 9.0PF B	
C438			CC73GCH1H080B	CHIP C 8.0PF B		C526			CC73GCH1H560G	CHIP C 56PF G	
C440			CK73HB1H103K	CHIP C 0.010UF K		C528			CC73GCH1H470G	CHIP C 47PF G	
C441			CK73GB1H104K	CHIP C 0.10UF K		C530			CC73GCH1H090B	CHIP C 9.0PF B	
C442			CC73GCH1H040B	CHIP C 4.0PF B		C531			CC73GCH1H220G	CHIP C 22PF G	
C444			CC73GCH1H221J	CHIP C 220PF J		C601,602			CK73GB1H103K	CHIP C 0.010UF K	
C445			CK73GB1H104K	CHIP C 0.10UF K		C603			CK73GB1C474K	CHIP C 0.47UF K	
C446			CK73GB1H103K	CHIP C 0.010UF K		C604			CK73GB1H102K	CHIP C 1000PF K	

PARTS LIST

ACCESSORY UNIT (X42-3430-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C606			CK73GB1H102K	CHIP C 1000PF K		L51			L41-1295-33	SMALL FIXED INDUCTOR(1.2UH)	
C607			CK73GB1H103K	CHIP C 0.010UF K		L52			L34-4612-05	AIR-CORE COIL(6T)	
C608,609			CK73GB1H104K	CHIP C 0.10UF K		L53			L41-5685-33	SMALL FIXED INDUCTOR(0.56UH)	
C610-612			CK73GB1H102K	CHIP C 1000PF K		L54 -56			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
C614-618			CK73GB1H103K	CHIP C 0.010UF K		L57			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C619			CK73GB1H102K	CHIP C 1000PF K		L58		*	L41-2798-60	SMALL FIXED INDUCTOR(2.7UH)	
-			E23-1176-04	EARTH LUG		L59			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
-		*	E37-1666-05	LEAD WIRE WITH TERMINAL		L60			L34-4614-05	AIR-CORE COIL(8T)	
CN1			E41-1683-05	PIN ASSY		L61			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
CN2 -4		*	E04-0490-05	PIN SOCKET		L62			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
CN6		*	E04-0490-05	PIN SOCKET		L63			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
CN10			E40-6852-05	PIN ASSY		L64			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
CN12			E40-6852-05	PIN ASSY		L65 ,66			L41-1595-33	SMALL FIXED INDUCTOR(1.5UH)	
CN35		*	E40-6908-05	FLAT CABLE CONNECTOR		L67			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
CN36			E41-1682-05	PIN ASSY		L68			L39-1553-05	TOROIDAL COIL	
CN37-40			E23-1330-05	TERMINAL		L69			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
CN401			E04-0491-05	PIN SOCKET		L70			L39-1480-15	TOROIDAL COIL	
CN402			E41-3176-05	FLAT CABLE CONNECTOR		L71			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
CN446		*	E04-0491-05	PIN SOCKET		L73			L39-1480-15	TOROIDAL COIL	
CN601			E41-1683-05	PIN ASSY		L74			L41-2785-33	SMALL FIXED INDUCTOR(0.27UH)	
CN602			E41-2741-05	PIN ASSY		L75		*	L34-4961-05	COIL	
CN603			E41-1690-05	PIN ASSY		L76 ,77			L41-1288-60	SMALL FIXED INDUCTOR(120NH)	
CN604			E41-1684-05	PIN ASSY		L78			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
CN606			E41-3177-05	FLAT CABLE CONNECTOR		L79			L34-4961-05	COIL	
CN607		*	E41-2736-05	PIN ASSY		L80			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
CN608-610		*	E40-6921-05	FLAT CABLE CONNECTOR		L81		*	L41-2798-60	SMALL FIXED INDUCTOR(2.7UH)	
CN614		*	E41-2736-05	PIN ASSY		L82			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
J601			E06-0858-25	RF COAXIAL RECEPTADLE(ROUND)		L83			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
J602,603			E11-0705-15	PHONE JACK(9P)		L84			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
J604,605		*	E58-0549-05	RECTANGULAR RECEPTACLE		L85			L34-4613-05	AIR-CORE COIL(7T)	
F1 -4			F53-0363-05	FUSE(0.5A)		L86			L39-1480-15	TOROIDAL COIL	
CF1 ,2			L72-1026-05	CERAMIC FILTER		L87			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L1 ,2			L40-1085-92	SMALL FIXED INDUCTOR(100NH)		L88			L41-1288-60	SMALL FIXED INDUCTOR(120NH)	
L3 ,4			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L89 ,90			L41-1595-33	SMALL FIXED INDUCTOR(1.5UH)	
L7 ,8		*	L39-1802-05	TOROIDAL COIL		L91			L41-1288-60	SMALL FIXED INDUCTOR(120NH)	
L9			L41-2285-33	SMALL FIXED INDUCTOR(0.22UH)		L92			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L10			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L95			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L11 ,12			L41-2785-33	SMALL FIXED INDUCTOR(0.27UH)		L96			L41-2285-33	SMALL FIXED INDUCTOR(0.22UH)	
L13 -16			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L97 ,98			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)	
L18			L41-1288-60	SMALL FIXED INDUCTOR(120NH)		L401			L92-0408-05	CHIP FERRITE	
L19			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)		L402-420			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L20 ,21			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L421		*	L41-1015-44	SMALL FIXED INDUCTOR(100UH)	
L22 -24			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L422			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L25			L39-1554-05	TOROIDAL COIL		L423			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
L26 -30			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)		L424			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L31 -33			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L425			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
L34			L39-1480-15	TOROIDAL COIL		L426		*	L41-1015-44	SMALL FIXED INDUCTOR(100UH)	
L35			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L427			L39-1575-05	TOROIDAL COIL	
L36			L39-1555-05	TOROIDAL COIL		L428			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L37 ,38			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L429		*	L39-1586-05	TOROIDAL COIL	
L39			L41-8285-33	SMALL FIXED INDUCTOR(0.82UH)		L432		*	L39-1801-05	TOROIDAL COIL	
L40			L34-4612-05	AIR-CORE COIL(6T)		L433			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L41			L41-5685-33	SMALL FIXED INDUCTOR(0.56UH)		L434			L34-4616-05	AIR-CORE COIL(10T)	
L42			L34-4612-05	AIR-CORE COIL(6T)		L435			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L44 ,45			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L436			L34-4614-05	AIR-CORE COIL(8T)	
L46			L34-4612-05	AIR-CORE COIL(6T)		L601-603			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	
L48			L41-1295-33	SMALL FIXED INDUCTOR(1.2UH)		L604-618			L92-0467-05	CHIP FERRITE	
L49			L41-8285-33	SMALL FIXED INDUCTOR(0.82UH)		XF1		*	L71-0534-25	CRYSTAL FILTER(10.7MHZ)	
						R1 ,2			RK73GB2A390J	CHIP R 39 J 1/10W	

PARTS LIST

ACCESSORY UNIT (X42-3430-00)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R3 ,4			RK73GB2A102J	CHIP R 1.0K J 1/10W		R103			RK73GB2A560J	CHIP R 56 J 1/10W	
R6 ,7			RK73GB2A102J	CHIP R 1.0K J 1/10W		R104			RK73GB2A000J	CHIP R 0 J 1/10W	
R8			RK73GB2A560J	CHIP R 56 J 1/10W		R105			RK73GB2A331J	CHIP R 330 J 1/10W	
R10 ,11			RK73FB2B330J	CHIP R 33 J 1/8W		R106			RK73GB2A221J	CHIP R 220 J 1/10W	
R12			RK73GB2A390J	CHIP R 39 J 1/10W		R107			RK73GB2A331J	CHIP R 330 J 1/10W	
R14			RK73GB2A102J	CHIP R 1.0K J 1/10W		R108			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R17 ,18			RK73GB2A152J	CHIP R 1.5K J 1/10W		R109-111			RK73GB2A104J	CHIP R 100K J 1/10W	
R19			RK73GB2A102J	CHIP R 1.0K J 1/10W		R112			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R20			RK73GB2A121J	CHIP R 120 J 1/10W		R113			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A224J	CHIP R 220K J 1/10W		R114			RK73GB2A331J	CHIP R 330 J 1/10W	
R22			RK73GB2A121J	CHIP R 120 J 1/10W		R115			RK73GB2A101J	CHIP R 100 J 1/10W	
R23 ,24			RK73GB2A100J	CHIP R 10 J 1/10W		R116			RK73GB2A331J	CHIP R 330 J 1/10W	
R25			RK73FB2B470J	CHIP R 47 J 1/8W		R117			RK73GB2A101J	CHIP R 100 J 1/10W	
R27			RK73GB2A100J	CHIP R 10 J 1/10W		R118			RK73GB2A391J	CHIP R 390 J 1/10W	
R28			RK73GB2A000J	CHIP R 0 J 1/10W		R119,120			RK73GB2A471J	CHIP R 470 J 1/10W	
R31			RK73GB2A102J	CHIP R 1.0K J 1/10W		R121			RK73GB2A470J	CHIP R 47 J 1/10W	
R33			RK73GB2A103J	CHIP R 10K J 1/10W		R122,123			RK73GB2A331J	CHIP R 330 J 1/10W	
R34			RK73GB2A222J	CHIP R 2.2K J 1/10W		R124			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W		R127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R36			RK73GB2A222J	CHIP R 2.2K J 1/10W		R128,129			RK73GB2A391J	CHIP R 390 J 1/10W	
R37			RK73GB2A100J	CHIP R 10 J 1/10W		R132-135			RK73GB2A153J	CHIP R 15K J 1/10W	
R39			RK73GB2A271J	CHIP R 270 J 1/10W		R137,138			RK73GB2A470J	CHIP R 47 J 1/10W	
R40			RK73GB2A181J	CHIP R 180 J 1/10W		R140			RK73GB2A221J	CHIP R 220 J 1/10W	
R41			RK73GB2A103J	CHIP R 10K J 1/10W		R141			RK73GB2A271J	CHIP R 270 J 1/10W	
R42			RK73GB2A222J	CHIP R 2.2K J 1/10W		R143			RK73FB2B181J	CHIP R 180 J 1/8W	
R45			RK73GB2A180J	CHIP R 18 J 1/10W		R146			RK73GB2A470J	CHIP R 47 J 1/10W	
R46			RK73GB2A330J	CHIP R 33 J 1/10W		R147			RK73GB2A271J	CHIP R 270 J 1/10W	
R47			RK73GB2A471J	CHIP R 470 J 1/10W		R148			RK73GB2A473J	CHIP R 47K J 1/10W	
R48			RK73GB2A271J	CHIP R 270 J 1/10W		R149			RK73FB2B151J	CHIP R 150 J 1/8W	
R49			RK73GB2A471J	CHIP R 470 J 1/10W		R150			RK73GB2A103J	CHIP R 10K J 1/10W	
R50			RK73GB2A181J	CHIP R 180 J 1/10W		R151			RK73GB2A390J	CHIP R 39 J 1/10W	
R53			RK73GB2A000J	CHIP R 0 J 1/10W		R152			RK73GB2A000J	CHIP R 0 J 1/10W	
R55			RK73GB2A270J	CHIP R 27 J 1/10W		R153			RK73GB2A270J	CHIP R 27 J 1/10W	
R58			RK73GB2A471J	CHIP R 470 J 1/10W		R154			RK73GB2A390J	CHIP R 39 J 1/10W	
R59 -61			RK73GB2A270J	CHIP R 27 J 1/10W		R155			RK73GB2A560J	CHIP R 56 J 1/10W	
R62			RK73GB2A471J	CHIP R 470 J 1/10W		R156			RK73GB2A103J	CHIP R 10K J 1/10W	
R64			RK73GB2A474J	CHIP R 470K J 1/10W		R157-160			RK73GB2A101J	CHIP R 100 J 1/10W	
R65			RK73GB2A000J	CHIP R 0 J 1/10W		R161			RK73GB2A103J	CHIP R 10K J 1/10W	
R66			RK73GB2A474J	CHIP R 470K J 1/10W		R162			RK73GB2A101J	CHIP R 100 J 1/10W	
R67			RK73GB2A000J	CHIP R 0 J 1/10W		R163			RK73GB2A103J	CHIP R 10K J 1/10W	
R68			RK73GB2A474J	CHIP R 470K J 1/10W		R165			RK73FB2B181J	CHIP R 180 J 1/8W	
R69			RK73GB2A000J	CHIP R 0 J 1/10W		R166			RK73GB2A101J	CHIP R 100 J 1/10W	
R70			RK73GB2A471J	CHIP R 470 J 1/10W		R167			RK73GB2A103J	CHIP R 10K J 1/10W	
R71 -73			RK73GB2A470J	CHIP R 47 J 1/10W		R168			RK73GB2A100J	CHIP R 10 J 1/10W	
R75			RK73GB2A000J	CHIP R 0 J 1/10W		R171			RK73GB2A103J	CHIP R 10K J 1/10W	
R76			RK73GB2A471J	CHIP R 470 J 1/10W		R172			RK73GB2A270J	CHIP R 27 J 1/10W	
R79 ,80			RK73EB2E331J	CHIP R 330 J 1/4W		R173			RK73GB2A390J	CHIP R 39 J 1/10W	
R81 -83			RK73GB2A153J	CHIP R 15K J 1/10W		R174			RK73GB2A560J	CHIP R 56 J 1/10W	
R84 ,85			RK73GB2A222J	CHIP R 2.2K J 1/10W		R175			RK73GB2A000J	CHIP R 0 J 1/10W	
R86 -88			RK73GB2A153J	CHIP R 15K J 1/10W		R176			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R89 -91			RK73GB2A392J	CHIP R 3.9K J 1/10W		R177			RK73GB2A271J	CHIP R 270 J 1/10W	
R92 ,93			RK73GB2A100J	CHIP R 10 J 1/10W		R180			RK73FB2B181J	CHIP R 180 J 1/8W	
R94			RK73GB2A271J	CHIP R 270 J 1/10W		R181			RK73GB2A271J	CHIP R 270 J 1/10W	
R95			RK73GB2A000J	CHIP R 0 J 1/10W		R182			RK73GB2A3R3J	CHIP R 3.3 J 1/10W	
R96 ,97			RK73GB2A100J	CHIP R 10 J 1/10W		R183			RK73GB2A470J	CHIP R 47 J 1/10W	
R98			RK73GB2A332J	CHIP R 3.3K J 1/10W		R184			RK73GB2A104J	CHIP R 100K J 1/10W	
R99			RK73GB2A182J	CHIP R 1.8K J 1/10W		R185			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R100			RK73FB2B100J	CHIP R 10 J 1/8W		R186			RK73GB2A103J	CHIP R 10K J 1/10W	
R101			RK73GB2A821J	CHIP R 820 J 1/10W		R187			RK73FB2B220J	CHIP R 22 J 1/8W	
R102			RK73GB2A000J	CHIP R 0 J 1/10W		R188			RK73GB2A391J	CHIP R 390 J 1/10W	

PARTS LIST

ACCESSORY UNIT (X42-3430-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R190			RK73GB2A101J	CHIP R 100 J 1/10W		R271			RK73GB2A000J	CHIP R 0 J 1/10W	
R192			RK73GB2A000J	CHIP R 0 J 1/10W		R272			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R194			RK73FB2B100J	CHIP R 10 J 1/8W		R273			RK73GB2A331J	CHIP R 330 J 1/10W	
R195			RK73GB2A471J	CHIP R 470 J 1/10W		R274			RK73GB2A000J	CHIP R 0 J 1/10W	
R198			RK73GB2A222J	CHIP R 2.2K J 1/10W		R275			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R199			RK73GB2A681J	CHIP R 680 J 1/10W		R277			RK73GB2A470J	CHIP R 47 J 1/10W	
R201			RK73GB2A470J	CHIP R 47 J 1/10W		R278			RK73GB2A000J	CHIP R 0 J 1/10W	
R202			RK73GB2A153J	CHIP R 15K J 1/10W		R279,280			RK73EB2E000J	CHIP R 0 J 1/4W	
R203			RK73GB2A682J	CHIP R 6.8K J 1/10W		R281			RK73GB2A000J	CHIP R 0 J 1/10W	
R204			RK73GB2A153J	CHIP R 15K J 1/10W		R282,283			RK73EB2E000J	CHIP R 0 J 1/4W	
R205			RK73GB2A682J	CHIP R 6.8K J 1/10W		R284			RK73GB2A000J	CHIP R 0 J 1/10W	
R206			RK73GB2A470J	CHIP R 47 J 1/10W		R285,286			RK73EB2E000J	CHIP R 0 J 1/4W	
R208			RK73GB2A101J	CHIP R 100 J 1/10W		R287-289			RK73FB2B000J	CHIP R 0 J 1/8W	
R210			RK73GB2A470J	CHIP R 47 J 1/10W		R290-295			RK73GB2A151J	CHIP R 150 J 1/10W	
R211			RK73GB2A153J	CHIP R 15K J 1/10W		R296			RK73GB2A000J	CHIP R 0 J 1/10W	
R212			RK73GB2A682J	CHIP R 6.8K J 1/10W		R297,298			RK73GB2A121J	CHIP R 120 J 1/10W	
R214			RK73GB2A100J	CHIP R 10 J 1/10W		R400			RK73GB2A103J	CHIP R 10K J 1/10W	
R217,218			RK73GB2A000J	CHIP R 0 J 1/10W		R403			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R221			RK73GB2A103J	CHIP R 10K J 1/10W		R404-406			RK73GB2A103J	CHIP R 10K J 1/10W	
R222			RK73GB2A000J	CHIP R 0 J 1/10W		R407-412			RK73GB2A000J	CHIP R 0 J 1/10W	
R223			RK73GB2A103J	CHIP R 10K J 1/10W		R413			RK73GB2A820J	CHIP R 82 J 1/10W	
R224-227			RK73GB2A101J	CHIP R 100 J 1/10W		R414			RK73GB2A103J	CHIP R 10K J 1/10W	
R229			RK73GB2A102J	CHIP R 1.0K J 1/10W		R415			RK73GB2A180J	CHIP R 18 J 1/10W	
R231			RK73GB2A561J	CHIP R 560 J 1/10W		R416			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R232			RK73GB2A151J	CHIP R 150 J 1/10W		R417			RK73GB2A103J	CHIP R 10K J 1/10W	
R233			RK73GB2A000J	CHIP R 0 J 1/10W		R418			RK73EB2E680J	CHIP R 68 J 1/4W	
R234			RK73GB2A471J	CHIP R 470 J 1/10W		R419			RK73EB2E560J	CHIP R 56 J 1/4W	
R235			RK73GB2A220J	CHIP R 22 J 1/10W		R420			RK73GB2A103J	CHIP R 10K J 1/10W	
R237			RK73GB2A122J	CHIP R 1.2K J 1/10W		R421			RK73EB2E680J	CHIP R 68 J 1/4W	
R238			RK73GB2A000J	CHIP R 0 J 1/10W		R422			RK73EB2E820J	CHIP R 82 J 1/4W	
R239			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R423			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R240			RK73GB2A100J	CHIP R 10 J 1/10W		R424			RK73GB2A103J	CHIP R 10K J 1/10W	
R241			RK73GB2A472J	CHIP R 4.7K J 1/10W		R425			RK73EB2E680J	CHIP R 68 J 1/4W	
R242			RK73GB2A100J	CHIP R 10 J 1/10W		R426			RK73EB2E820J	CHIP R 82 J 1/4W	
R243			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R427			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R244			RK73GB2A103J	CHIP R 10K J 1/10W		R428			RK73GB2A180J	CHIP R 18 J 1/10W	
R245			RK73GB2A220J	CHIP R 22 J 1/10W		R429			RK73GB2A820J	CHIP R 82 J 1/10W	
R246,247			RK73GB2A221J	CHIP R 220 J 1/10W		R431-454			RK73HB1J100J	CHIP R 10 J 1/16W	
R248			RK73GB2A391J	CHIP R 390 J 1/10W		R601-604			RK73FB2B470J	CHIP R 47 J 1/8W	
R249,250			RK73GB2A000J	CHIP R 0 J 1/10W		R607,608			RK73PB2H220J	CHIP R 22 J 1/2W	
R251			RK73GB2A560J	CHIP R 56 J 1/10W		R611			RK73GB2A101J	CHIP R 100 J 1/10W	
R252			RK73EB2E221J	CHIP R 220 J 1/4W		R612			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R253			RK73GB2A681J	CHIP R 680 J 1/10W		R613			RK73FB2B000J	CHIP R 0 J 1/8W	
R254			RK73GB2A000J	CHIP R 0 J 1/10W		R614			RK73GB2A121J	CHIP R 120 J 1/10W	
R255			RK73GB2A470J	CHIP R 47 J 1/10W		R615			RK73GB2A681J	CHIP R 680 J 1/10W	
R256			RK73GB2A153J	CHIP R 15K J 1/10W		R616,617			RK73GB2A561J	CHIP R 560 J 1/10W	
R257			RK73GB2A682J	CHIP R 6.8K J 1/10W		VR601-604		*	R31-0687-05	VARIABLE RESISTOR(100k)	
R258			RK73GB2A153J	CHIP R 15K J 1/10W		K401-406			S76-0459-05	RELAY	
R259			RK73GB2A682J	CHIP R 6.8K J 1/10W		K407		*	S76-0476-05	RELAY	
R260			RK73GB2A472J	CHIP R 4.7K J 1/10W		K408			S76-0459-05	RELAY	
R261			RK73GB2A220J	CHIP R 22 J 1/10W		K409,410		*	S76-0476-05	RELAY	
R262			RK73GB2A470J	CHIP R 47 J 1/10W		K411			S76-0459-05	RELAY	
R263			RK73GB2A473J	CHIP R 47K J 1/10W		K412		*	S76-0476-05	RELAY	
R264			RK73GB2A472J	CHIP R 4.7K J 1/10W		K413			S76-0459-05	RELAY	
R265			RK73GB2A101J	CHIP R 100 J 1/10W		K414		*	S76-0476-05	RELAY	
R266			RK73GB2A000J	CHIP R 0 J 1/10W		K415			S76-0459-05	RELAY	
R267			RK73GB2A153J	CHIP R 15K J 1/10W		K416		*	S76-0476-05	RELAY	
R268			RK73GB2A682J	CHIP R 6.8K J 1/10W		K417-424			S76-0459-05	RELAY	
R269			RK73GB2A472J	CHIP R 4.7K J 1/10W		S601-604			S70-0439-15	TACT SWITCH	
R270			RK73GB2A470J	CHIP R 47 J 1/10W							

PARTS LIST

ACCESSORY UNIT (X42-3430-00)

DC-DC UNIT (X43-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
S606			S70-0439-15	TACT SWITCH		Q49			2SC4226-A(R24)	TRANSISTOR	
S608			S70-0439-15	TACT SWITCH		Q50			LTC043ZEBFS8	TRANSISTOR	
S607			T99-0653-05	ROTARY ENCODER(MULT,CLICK TYPE)		Q51			2SB1694	TRANSISTOR	
D1			MC2848-T111	DIODE		Q401-418			RT5N234C-T112	TRANSISTOR	
D2 -4			HVC131	DIODE		Q419			INK0010AU1-T1	FET	
D6			HVC131	DIODE		Q420-422			LTC043ZEBFS8	TRANSISTOR	
D8			HVC131	DIODE		Q423-428			RT5N234C-T112	TRANSISTOR	
D9			MC2848-T111	DIODE		Q430			INK0010AU1-T1	FET	
D10 -13			HVC131	DIODE		S605		*	W02-3772-05	ENCODER	
D14			1SS388F	DIODE							
D15			1SV228-F	VARIABLE CAPACITANCE DIODE							
D16 -19			HVC131	DIODE							
D20 ,21			HSM88ASR-E	DIODE							
D22			1SS388F	DIODE							
D23			1SV228-F	VARIABLE CAPACITANCE DIODE							
D24 ,25			HSM88ASR-E	DIODE							
D26			MC2848-T111	DIODE							
D401-418			MC2858-T111	DIODE							
D419-421			HVC131	DIODE							
D422			MC2858-T111	DIODE							
D423-425			HVC131	DIODE							
D426-431			MC2858-T111	DIODE							
D601-603			DA2S101	DIODE							
D607,608			RSB12JS2	ZENER DIODE							
IC1 -3			AD9835BRUZ	MOS-IC							
IC4			Note1	MOS-IC							
IC5			TC7WT125FUF	MOS-IC							
IC6			Note1	MOS-IC							
IC7 ,8			TC7WT125FUF	MOS-IC							
IC9		*	BA4580RFVM	BI-POLAR IC							
IC10			NJU6368PF1	MOS-IC							
IC11,12			XC6209B502P-G	MOS-IC							
IC401		*	S25C256A0IU8U	MOS-IC							
IC402-404			TC74HC4094AFF	MOS-IC							
Q1 ,2			LTC043ZEBFS8	TRANSISTOR							
Q3 ,4			2SB1694	TRANSISTOR							
Q5			LTC043ZEBFS8	TRANSISTOR							
Q7 ,8			2SC5551AF	TRANSISTOR							
Q9			2SB1694	TRANSISTOR							
Q11			2SC4617(R)	TRANSISTOR							
Q12			2SC5551AF	TRANSISTOR							
Q14 -16			2SC4617(R)	TRANSISTOR							
Q17 -20			2SK1740-4	FET							
Q21			2SB1694	TRANSISTOR							
Q22			LTC043ZEBFS8	TRANSISTOR							
Q23 -25			2SC4617(R)	TRANSISTOR							
Q26			2SB1694	TRANSISTOR							
Q27			LTC043ZEBFS8	TRANSISTOR							
Q29 ,30			2SC4617(R)	TRANSISTOR							
Q31 -33			LTC043ZEBFS8	TRANSISTOR							
Q37			LTC043ZEBFS8	TRANSISTOR							
Q38			MCH3914(7)-H	FET							
Q39			2SC5551AF	TRANSISTOR							
Q40 ,41			2SC4649(N,P)	TRANSISTOR							
Q43			2SC4226-A(R24)	TRANSISTOR							
Q44 ,45			2SC5551AF	TRANSISTOR							
Q46			MCH3914(7)-H	FET							
Q47 ,48			2SC4649(N,P)	TRANSISTOR							
DC-DC UNIT (X43-3220-00)											
C1			CK73GB1H103K	CHIP C	0.010UF	K					
C2			CK73GB1H104K	CHIP C	0.10UF	K					
C3			CK73GB1H103K	CHIP C	0.010UF	K					
C4 -8			CK73GB1H102K	CHIP C	1000PF	K					
C9			CK73EB1H104K	CHIP C	0.10UF	K					
C10 -12			CD04AZ1E471M	ELECTRO	470UF	25WV					
C13 -15			CK73GB1H102K	CHIP C	1000PF	K					
C16 ,17		*	C90-4163-05	ELECTRO	470U	25WV					
C20 ,21			CK73GB1H103K	CHIP C	0.010UF	K					
C22			CK73GB1H104K	CHIP C	0.10UF	K					
C23 ,24			CK73GB1H103K	CHIP C	0.010UF	K					
C25			CK73GB1H102K	CHIP C	1000PF	K					
C26 -28			CK73GB1H103K	CHIP C	0.010UF	K					
C29			CK73GB1H102K	CHIP C	1000PF	K					
C30			CK73GB1H103K	CHIP C	0.010UF	K					
C31			CK73GB1H102K	CHIP C	1000PF	K					
C40			CD04AZ1C471M	ELECTRO	470UF	16WV					
C41 ,42			CK73GB1A105K	CHIP C	1.0UF	K					
C43 ,44			CD04AZ1C221M	ELECTRO	220UF	16WV					
C45			CD04AY1E470M	ELECTRO	47UF	25WV					
C46			CK73GB1H104K	CHIP C	0.10UF	K					
C51			CK73EB1C226M	CHIP C	22UF	M					
C53 ,54			CK73GB1H102K	CHIP C	1000PF	K					
C55			CK73GB1H104K	CHIP C	0.10UF	K					
C56 ,57			CK73GB1H102K	CHIP C	1000PF	K					
C58 ,59			CK73GB1H104K	CHIP C	0.10UF	K					
C60			CK73EB1C226M	CHIP C	22UF	M					
C63			CK73EB1C226M	CHIP C	22UF	M					
C66			CK73EB1C226M	CHIP C	22UF	M					
C69			CK73EB1C226M	CHIP C	22UF	M					
C72			CK73GB1H102K	CHIP C	1000PF	K					
C73			CK73GB1H104K	CHIP C	0.10UF	K					
C80 -85			CK73EB1E106K	CHIP C	10UF	K					
C90			CD04AZ1V101M	ELECTRO	100UF	35WV					
C91			CK73EB1E106K	CHIP C	10UF	K					
C92 -95			CK73FB1E475K	CHIP C	4.7UF	K					
C100,101			CD04BQ1E331M	ELECTRO	330UF	25WV					
C102			CK73GB1H102K	CHIP C	1000PF	K					
C103-105			C93-1875-05	CHIP C	22UF	M					
C106			CK73GB1C225K	CHIP C	2.2UF	K					
C109			CC73GCH1H471J	CHIP C	470PF	J					
C110			CK73EB1H474K	CHIP C	0.47UF	K					
C112			CK73HB1E104K	CHIP C	0.10UF	K					
C113-116			C93-1875-05	CHIP C	22UF	M					
C117,118			CD04BQ1E331M	ELECTRO	330UF	25WV					

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

DC-DC UNIT (X43-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C120,121			CD04BQ1E331M	ELECTRO 330UF 25WV		C290			CK73GB1H222K	CHIP C 2200PF K	
C122			CK73GB1H102K	CHIP C 1000PF K		C291			CK73GB1H332K	CHIP C 3300PF K	
C123-125			C93-1875-05	CHIP C 22UF M		C292,293			CD04AY1E470M	ELECTRO 47UF 25WV	
C126			CK73GB1C225K	CHIP C 2.2UF K		C294			CK73GB1H103K	CHIP C 0.010UF K	
C129			CC73GCH1H471J	CHIP C 470PF J		C300-303			C93-1875-05	CHIP C 22UF M	
C130			CK73EB1H474K	CHIP C 0.47UF K		C320-323			C93-1875-05	CHIP C 22UF M	
C132			CK73HB1E104K	CHIP C 0.10UF K		C340-343			C93-1875-05	CHIP C 22UF M	
C133-136			C93-1875-05	CHIP C 22UF M		C400			CK73HB1H102K	CHIP C 1000PF K	
C137,138			CD04BQ1E331M	ELECTRO 330UF 25WV		C418			CK73GB1H104K	CHIP C 0.10UF K	
C140,141			CD04BQ1E331M	ELECTRO 330UF 25WV		C419			CK73HB1H102K	CHIP C 1000PF K	
C142			CK73GB1H102K	CHIP C 1000PF K		C420			CK73GB1H104K	CHIP C 0.10UF K	
C143-145			C93-1875-05	CHIP C 22UF M		C421			CK73HB1H102K	CHIP C 1000PF K	
C146			CK73GB1C225K	CHIP C 2.2UF K		C422			CK73GB1H104K	CHIP C 0.10UF K	
C149			CC73GCH1H471J	CHIP C 470PF J		C423			CK73HB1H102K	CHIP C 1000PF K	
C150			CK73EB1H474K	CHIP C 0.47UF K		C424			CK73GB1H104K	CHIP C 0.10UF K	
C152			CK73HB1E104K	CHIP C 0.10UF K		C425			CK73HB1H102K	CHIP C 1000PF K	
C153-156			C93-1875-05	CHIP C 22UF M		C448			CK73GB1H104K	CHIP C 0.10UF K	
C157,158			CD04BQ1E331M	ELECTRO 330UF 25WV		C449			CK73HB1H102K	CHIP C 1000PF K	
C160,161		*	C90-4163-05	ELECTRO 470U 25WV		C450			CK73GB1H104K	CHIP C 0.10UF K	
C162			CK73EB1E106K	CHIP C 10UF K		C451			CK73HB1H102K	CHIP C 1000PF K	
C163			CK73GB1H104K	CHIP C 0.10UF K		C452			CK73HB1H103K	CHIP C 0.010UF K	
C164			CK73GB1H102K	CHIP C 1000PF K		C454			CK73HB1H103K	CHIP C 0.010UF K	
C165,166		*	C90-4163-05	ELECTRO 470U 25WV		C472			CK73GB1H104K	CHIP C 0.10UF K	
C167			CK73FB1C106K	CHIP C 10UF K		C473			CK73HB1H102K	CHIP C 1000PF K	
C170-173			CK73EB1E106K	CHIP C 10UF K		C477			CK73GB1H104K	CHIP C 0.10UF K	
C180-183		*	C90-4163-05	ELECTRO 470U 25WV		C478			CK73HB1H102K	CHIP C 1000PF K	
C190,191			CK73EB1E106K	CHIP C 10UF K		C508			CK73GB1H104K	CHIP C 0.10UF K	
C193,194			CK73EB1E106K	CHIP C 10UF K		C509			CK73HB1H102K	CHIP C 1000PF K	
C195-198		*	C90-4163-05	ELECTRO 470U 25WV		C510			CK73GB1H104K	CHIP C 0.10UF K	
C200-207			CK73GB1H102K	CHIP C 1000PF K		C511			CK73HB1H102K	CHIP C 1000PF K	
C208-212			CK73GB1A105K	CHIP C 1.0UF K		C512			CK73GB1H104K	CHIP C 0.10UF K	
C213			CK73GB1H102K	CHIP C 1000PF K		C513			CK73HB1H102K	CHIP C 1000PF K	
C220,221			CK73GB1H104K	CHIP C 0.10UF K		C514			CK73GB1H104K	CHIP C 0.10UF K	
C222			CC73GCH1H220J	CHIP C 22PF J		C515			CK73HB1H102K	CHIP C 1000PF K	
C223,224			CC73GCH1H101J	CHIP C 100PF J		C535			CK73GB1H104K	CHIP C 0.10UF K	
C225			CK73FB1H103K	CHIP C 0.010UF K		C536			CK73HB1H102K	CHIP C 1000PF K	
C226-228			CK73FB1H102K	CHIP C 1000PF K		C537			CK73GB1H104K	CHIP C 0.10UF K	
C230-233			CK73HB1H102K	CHIP C 1000PF K		C538			CK73HB1H102K	CHIP C 1000PF K	
C235			CK73HB1H102K	CHIP C 1000PF K		C843,844			CD04BQ1E331M	ELECTRO 330UF 25WV	
C237-241			CK73HB1H102K	CHIP C 1000PF K		C845-847			C93-1875-05	CHIP C 22UF M	
C242			CK73GB1H104K	CHIP C 0.10UF K		C848			CK73GB1H102K	CHIP C 1000PF K	
C243			CK73HB1H102K	CHIP C 1000PF K		C850			CK73EB1H474K	CHIP C 0.47UF K	
C245,246			CK73HB1H102K	CHIP C 1000PF K		C851			CK73GB1C225K	CHIP C 2.2UF K	
C247,248			CC73HCH1H100D	CHIP C 10PF D		C852			CC73GCH1H471J	CHIP C 470PF J	
C249,250			CK73HB1H102K	CHIP C 1000PF K		C854			CK73HB1E104K	CHIP C 0.10UF K	
C251-253			CC73HCH1H101J	CHIP C 100PF J		C855-857			C93-1875-05	CHIP C 22UF M	
C254			CK73HB1H102K	CHIP C 1000PF K		C859,860			CD04BQ1E331M	ELECTRO 330UF 25WV	
C255-259			CC73HCH1H101J	CHIP C 100PF J		C861			CK73GB1H104K	CHIP C 0.10UF K	
C260-263			CK73HB1H102K	CHIP C 1000PF K		C863,864			CD04BQ1E331M	ELECTRO 330UF 25WV	
C264			CK73GB1H104K	CHIP C 0.10UF K		C865-867			C93-1875-05	CHIP C 22UF M	
C265			CK73GB1H102K	CHIP C 1000PF K		C868			CK73GB1H102K	CHIP C 1000PF K	
C266			CK73GB1H103K	CHIP C 0.010UF K		C870			CK73EB1H474K	CHIP C 0.47UF K	
C267			CK73GB1H104K	CHIP C 0.10UF K		C871			CK73GB1C225K	CHIP C 2.2UF K	
C270			CK73HB1H102K	CHIP C 1000PF K		C872			CC73GCH1H471J	CHIP C 470PF J	
C271,272			CC73HCH1H100D	CHIP C 10PF D		C874			CK73HB1E104K	CHIP C 0.10UF K	
C273-280			CK73HB1H102K	CHIP C 1000PF K		C875-877			C93-1875-05	CHIP C 22UF M	
C281-284			CC73HCH1H101J	CHIP C 100PF J		C879,880			CD04BQ1E331M	ELECTRO 330UF 25WV	
C285-287			CK73HB1H102K	CHIP C 1000PF K		C881-888			C93-1875-05	CHIP C 22UF M	
C288			CD04AY1E470M	ELECTRO 47UF 25WV							
C289			CK73FB1H103K	CHIP C 0.010UF K		CN1			E40-6916-05	PIN ASSY	

PARTS LIST

DC-DC UNIT (X43-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
CN16			E40-6527-05	PIN ASSY		L200,201			L92-0639-05	CHIP FERRITE	
CN80			E41-1690-05	PIN ASSY		L220,221			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
CN90			E40-6525-05	PIN ASSY		L230-232			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
CN170			E41-1683-05	PIN ASSY		L270,271			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
CN174			E41-1687-05	PIN ASSY		L807			L33-3001-05	CHOKE COIL	
CN180			E41-1688-05	PIN ASSY		L808			L33-1598-05	CHOKE COIL	
CN190			E41-1689-05	PIN ASSY		L809			L33-1595-05	CHOKE COIL	
CN220			E04-0191-05	PIN SOCKET		L810			L33-3001-05	CHOKE COIL	
CN222			E04-0191-05	PIN SOCKET		L811			L33-1598-05	CHOKE COIL	
CN226			E40-6528-05	PIN ASSY		L812			L33-1595-05	CHOKE COIL	
CN230			E40-6912-05	FLAT CABLE CONNECTOR		L813-820			L92-0639-05	CHIP FERRITE	
CN270			E40-6912-05	FLAT CABLE CONNECTOR		-			N82-3008-48	BINDING HEAD TAPTITE SCREW	
CN400			E40-6912-05	FLAT CABLE CONNECTOR		R1			RK73FB2B153J	CHIP R 15K J 1/8W	
CN440			E40-6908-05	FLAT CABLE CONNECTOR		R2			RK73FB2B332J	CHIP R 3.3K J 1/8W	
CN470			E40-6909-05	FLAT CABLE CONNECTOR		R3			RK73FB2B100J	CHIP R 10 J 1/8W	
CN500			E40-6917-05	FLAT CABLE CONNECTOR		R4			RK73GB2A223J	CHIP R 22K J 1/10W	
CN530			E41-3176-05	FLAT CABLE CONNECTOR		R5			RK73GB2A103J	CHIP R 10K J 1/10W	
CN803			E40-6905-05	FLAT CABLE CONNECTOR		R6			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CN804			E41-1683-05	PIN ASSY		R7			RK73EB2E000J	CHIP R 0 J 1/4W	
J200			E58-0529-05	D SUB SOCKET(9P)		R8 -10			R92-3625-05	RESISTOR 0.1 J 1/3W	
J220			E11-0455-05	3.5D PHONE JACK(3P)		R20 ,21			RK73GB2A103J	CHIP R 10K J 1/10W	
W801			E37-1548-05	LEAD WIRE WITH CONNECTOR		R22			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
△ F225			F52-0020-05	FUSE(BLADE TYPE)(4A)		R23			RK73GB2A182J	CHIP R 1.8K J 1/10W	
F1			F53-0407-05	FUSE(3.5A)		R24			RK73GB2A122J	CHIP R 1.2K J 1/10W	
F2			F53-0404-05	FUSE(10A)		R25			RK73GB2A223J	CHIP R 22K J 1/10W	
F3			F53-0407-05	FUSE(3.5A)		R27 ,28			RK73GB2A473J	CHIP R 47K J 1/10W	
F4			F53-0456-05	FUSE(5A)		R29			RK73GB2A331J	CHIP R 330 J 1/10W	
F80			F53-0407-05	FUSE(3.5A)		R30			RK73GB2A473J	CHIP R 47K J 1/10W	
F90			F53-0407-05	FUSE(3.5A)		R31			RK73GB2A223J	CHIP R 22K J 1/10W	
F170			F53-0407-05	FUSE(3.5A)		R32			RK73GB2A331J	CHIP R 330 J 1/10W	
F180			F53-0407-05	FUSE(3.5A)		R33 ,34			RK73GB2A473J	CHIP R 47K J 1/10W	
F190,191			F53-0407-05	FUSE(3.5A)		R35			RK73GB2A223J	CHIP R 22K J 1/10W	
F270-272			F53-0388-05	FUSE(1.25A)		R50			RK73FB2B103J	CHIP R 10K J 1/8W	
F801			F53-0363-05	FUSE(0.5A)		R52			RK73FB2B123J	CHIP R 12K J 1/8W	
-			G11-4535-04	SHEET		R53 -55			RK73FB2B100J	CHIP R 10 J 1/8W	
△ CN225			J13-0605-05	FUSE HOLDER		R56 ,57			RK73FB2B101J	CHIP R 100 J 1/8W	
L1 ,2			L33-1595-05	CHOKE COIL		R59			RK73EB2E000J	CHIP R 0 J 1/4W	
L3			L33-1598-05	CHOKE COIL		R60			RK73FB2B100J	CHIP R 10 J 1/8W	
L40 ,41			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		R61 ,62			RK73FB2B473J	CHIP R 47K J 1/8W	
L50 -57			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		R63 ,64			RK73FB2B101J	CHIP R 100 J 1/8W	
L80 ,81			L33-1595-05	CHOKE COIL		R65			RK73FB2B100J	CHIP R 10 J 1/8W	
L90 ,91			L33-1595-05	CHOKE COIL		R66 ,67			RK73FB2B101J	CHIP R 100 J 1/8W	
L100			L33-3028-05	CHOKE COIL		R68			RK73FB2B123J	CHIP R 12K J 1/8W	
L101			L33-1593-05	CHOKE COIL		R69			RK73FB2B103J	CHIP R 10K J 1/8W	
L102			L33-1595-05	CHOKE COIL		R70			RK73FB2B123J	CHIP R 12K J 1/8W	
L120			L33-3001-05	CHOKE COIL		R71			RK73FB2B103J	CHIP R 10K J 1/8W	
L121			L33-1593-05	CHOKE COIL		R72 ,73			RK73FB2B123J	CHIP R 12K J 1/8W	
L122			L33-1595-05	CHOKE COIL		R74 ,75			RK73FB2B103J	CHIP R 10K J 1/8W	
L140			L33-3001-05	CHOKE COIL		R100			R92-3625-05	RESISTOR 0.1 J 1/3W	
L141			L33-1598-05	CHOKE COIL		R101-104			RK73PB2H1R0J	CHIP R 1 J 1/2W	
L142			L33-1595-05	CHOKE COIL		R105			RK73GB2A223J	CHIP R 22K J 1/10W	
L160-163			L33-1598-05	CHOKE COIL		R107			RK73GB2A103J	CHIP R 10K J 1/10W	
L170			L33-1595-05	CHOKE COIL		R108			RK73GB2A184J	CHIP R 180K J 1/10W	
L180,181			L33-1598-05	CHOKE COIL		R109			RK73GH2A124D	CHIP R 120K D 1/10W	
L190			L33-1595-05	CHOKE COIL		R110			RK73GH2A133D	CHIP R 13K D 1/10W	
L192,193			L33-1595-05	CHOKE COIL		R111-113			RK73EB2E000J	CHIP R 0 J 1/4W	
L194,195			L33-1598-05	CHOKE COIL		R120			R92-3625-05	RESISTOR 0.1 J 1/3W	
						R121-124			RK73PB2H1R0J	CHIP R 1 J 1/2W	

PARTS LIST

DC-DC UNIT (X43-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R125			RK73GB2A103J	CHIP R 10K J 1/10W		R440			RK73EB2E000J	CHIP R 0 J 1/4W	
R127			RK73GB2A103J	CHIP R 10K J 1/10W		R441-448			RK73HB1J000J	CHIP R 0 J 1/16W	
R128			RK73GB2A184J	CHIP R 180K J 1/10W		R449			RK73EB2E000J	CHIP R 0 J 1/4W	
R129			RK73GH2A823D	CHIP R 82K D 1/10W		R450			RK73HB1J000J	CHIP R 0 J 1/16W	
R130			RK73GH2A153D	CHIP R 15K D 1/10W		R470			RK73EB2E000J	CHIP R 0 J 1/4W	
R131-135			RK73EB2E000J	CHIP R 0 J 1/4W		R471-485			RK73HB1J000J	CHIP R 0 J 1/16W	
R140			R92-3625-05	RESISTOR 0.1 J 1/3W		R486			RK73EB2E000J	CHIP R 0 J 1/4W	
R141-144			RK73PB2H1R0J	CHIP R 1 J 1/2W		R500-506			RK73HB1J000J	CHIP R 0 J 1/16W	
R145			RK73GB2A103J	CHIP R 10K J 1/10W		R507			RK73EB2E000J	CHIP R 0 J 1/4W	
R147			RK73GB2A103J	CHIP R 10K J 1/10W		R508			RK73HB1J000J	CHIP R 0 J 1/16W	
R148			RK73GB2A184J	CHIP R 180K J 1/10W		R509,510			RK73EB2E000J	CHIP R 0 J 1/4W	
R149			RK73GH2A393D	CHIP R 39K D 1/10W		R530,531			RK73HB1J000J	CHIP R 0 J 1/16W	
R150			RK73GH2A123D	CHIP R 12K D 1/10W		R532			RK73EB2E000J	CHIP R 0 J 1/4W	
R151-155			RK73EB2E000J	CHIP R 0 J 1/4W		R533-535			RK73HB1J000J	CHIP R 0 J 1/16W	
R162			RK73GB2A473J	CHIP R 47K J 1/10W		R536			RK73EB2E000J	CHIP R 0 J 1/4W	
R163			RK73GB2A103J	CHIP R 10K J 1/10W		R839			RK73EB2E000J	CHIP R 0 J 1/4W	
R164			RK73GB2A102J	CHIP R 1.0K J 1/10W		R841-844			RK73PB2H1R0J	CHIP R 1 J 1/2W	
R170			RK73EB2E000J	CHIP R 0 J 1/4W		R848			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R180			RK73EB2E000J	CHIP R 0 J 1/4W		R849			RK73GB2A184J	CHIP R 180K J 1/10W	
R182			R92-3625-05	RESISTOR 0.1 J 1/3W		R850			RK73GB2A103J	CHIP R 10K J 1/10W	
R190			RK73EB2E000J	CHIP R 0 J 1/4W		R852			RK73GH2A513D	CHIP R 51K D 1/10W	
R194			R92-3625-05	RESISTOR 0.1 J 1/3W		R853			RK73GH2A393D	CHIP R 39K D 1/10W	
R200-207			RK73GB2A000J	CHIP R 0 J 1/10W		R854			RK73GB2A000J	CHIP R 0 J 1/10W	
R209			RK73EB2E000J	CHIP R 0 J 1/4W		R855			RK73EB2E000J	CHIP R 0 J 1/4W	
R220			RK73FB2B473J	CHIP R 47K J 1/8W		R856			RK73GB2A473J	CHIP R 47K J 1/10W	
R221			RK73FB2B000J	CHIP R 0 J 1/8W		R857			RK73GB2A103J	CHIP R 10K J 1/10W	
R222,223			RK73EB2E101J	CHIP R 100 J 1/4W		R860			RK73EB2E000J	CHIP R 0 J 1/4W	
R230			RK73EB2E000J	CHIP R 0 J 1/4W		R862-865			RK73PB2H1R0J	CHIP R 1 J 1/2W	
R231-238			RK73HB1J101J	CHIP R 100 J 1/16W		R867			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R239-242			RK73HB1J000J	CHIP R 0 J 1/16W		R868			RK73GB2A184J	CHIP R 180K J 1/10W	
R243			RK73HB1J101J	CHIP R 100 J 1/16W		R869			RK73GB2A103J	CHIP R 10K J 1/10W	
R245			RK73HB1J000J	CHIP R 0 J 1/16W		R870			RK73GH2A273D	CHIP R 27K D 1/10W	
R246			RK73HB1J101J	CHIP R 100 J 1/16W		R871			RK73GH2A473D	CHIP R 47K D 1/10W	
R247-250			RK73HB1J100J	CHIP R 10 J 1/16W		R872			RK73GB2A000J	CHIP R 0 J 1/10W	
R251-254			RK73HB1J101J	CHIP R 100 J 1/16W		R885,886			RK73GB2A104J	CHIP R 100K J 1/10W	
R255			RK73GB2A000J	CHIP R 0 J 1/10W		R887-894			RK73EB2E000J	CHIP R 0 J 1/4W	
R256-259			RK73HB1J100J	CHIP R 10 J 1/16W		R895,896			RK73GB2A000J	CHIP R 0 J 1/10W	
R260-262			RK73HB1J101J	CHIP R 100 J 1/16W		D1			1SR154-400	DIODE	
R263			RK73EB2E000J	CHIP R 0 J 1/4W		D2			DZ2J039(M)	ZENER DIODE	
R264			RK73GH2A152D	CHIP R 1.5K D 1/10W		D20			DZ2S160(M)	ZENER DIODE	
R270			RK73EB2E000J	CHIP R 0 J 1/4W		D21			DZ2J056(M)	ZENER DIODE	
R273			RK73EB2E000J	CHIP R 0 J 1/4W		D40			RB080L-30	DIODE	
R275			RK73HB1J101J	CHIP R 100 J 1/16W		D100			RB080L-30	DIODE	
R278,279			RK73HB1J100J	CHIP R 10 J 1/16W		D120			RB080L-30	DIODE	
R280			RK73GH2A152D	CHIP R 1.5K D 1/10W		D140			RB080L-30	DIODE	
R281			RK73HB1J100J	CHIP R 10 J 1/16W		D220,221			DZ2J033(M)	ZENER DIODE	
R282			RK73GH2A152D	CHIP R 1.5K D 1/10W		D222			CSA70-401L	SURGE ABSORBER	
R283			RK73HB1J100J	CHIP R 10 J 1/16W		D223,224			1SS388F	DIODE	
R284-289			RK73HB1J101J	CHIP R 100 J 1/16W		D225,226			DA3S101F	DIODE	
R290-293			RK73HB1J100J	CHIP R 10 J 1/16W		D230			DZ2J039(M)	ZENER DIODE	
R294-296			RK73HB1J101J	CHIP R 100 J 1/16W		D270			1SS226-F	DIODE	
R297,298			RK73EB2E000J	CHIP R 0 J 1/4W		D271			DZ2J120(M)	ZENER DIODE	
R299			RK73GB2A272J	CHIP R 2.7K J 1/10W		D805			RB080L-30	DIODE	
R300			RK73GB2A473J	CHIP R 47K J 1/10W		D807			RB080L-30	DIODE	
R301,302			RK73GB2A223J	CHIP R 22K J 1/10W		IC20			BU4845FVE	MOS-IC	
R303			RK73GB2A471J	CHIP R 470 J 1/10W		IC21			TC7WH74FU-F	MOS-IC	
R307			RK73GB2A000J	CHIP R 0 J 1/10W		IC22			TC7WH126FU-F	MOS-IC	
R327			RK73GB2A000J	CHIP R 0 J 1/10W		IC23			BU4845FVE	MOS-IC	
R347			RK73GB2A000J	CHIP R 0 J 1/10W		IC24			TC7SH08FU-F	MOS-IC	
R400-417			RK73HB1J000J	CHIP R 0 J 1/16W							

PARTS LIST

DC-DC UNIT (X43-3220-00)

FINAL UNIT (X45-3880-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC40			MM3273DU	MOS-IC		C43			C93-1882-05	CHIP C 33PF 630WV	
IC50			TC74HC4052AFT	MOS-IC		C45			CK73GB1H102K	CHIP C 1000PF K	
IC100			Note1	ANALOGUE IC		C46 -49			CK73FB1H102K	CHIP C 1000PF K	
IC120			Note1	ANALOGUE IC		C50			CC73GCH1H101J	CHIP C 100PF J	
IC140			Note1	ANALOGUE IC		C51			CK73GB1H104K	CHIP C 0.10UF K	
IC200			ADM3202ARUZ	MOS-IC		C55			CK73GB1H103K	CHIP C 0.010UF K	
IC803,804			Note1	ANALOGUE IC		C56 ,57			C93-1878-05	CHIP C 15PF 630WV	
Q1			LTC023YEBFS8	TRANSISTOR		C58			CC73GCH1H101J	CHIP C 100PF J	
Q2			TPCA8104	FET		C59			C93-1902-05	CHIP C 1.0UF 50WV	
Q20			LSCR523EBFS8	TRANSISTOR		C60			C93-1903-05	CHIP C 4700PF 100WV	
Q160			LTC014EEBFS8	TRANSISTOR		C61			C93-1902-05	CHIP C 1.0UF 50WV	
Q161			RP1A090ZP	TRANSISTOR		C62			C93-1903-05	CHIP C 4700PF 100WV	
Q270			2SD2704K	TRANSISTOR		C63			CK73GB1H103K	CHIP C 0.010UF K	
Q271			2SA1037AK	TRANSISTOR		C64			CK73FB1C105K	CHIP C 1.0UF K	
Q272			2SD2704K	TRANSISTOR		C65			C93-1903-05	CHIP C 4700PF 100WV	
Q807			TPC6111-F	FET		C67			C93-1903-05	CHIP C 4700PF 100WV	
Q808			LTC043TEBFS8	TRANSISTOR		C68			CK73GB1H103K	CHIP C 0.010UF K	
FINAL UNIT (X45-3880-00)						C69			CK73GB1H102K	CHIP C 1000PF K	
C2			C93-1823-05	CHIP C 1000PF 630WV		C70			CK73FB1H102K	CHIP C 1000PF K	
C3			CK73GB1H104K	CHIP C 0.10UF K		C71 ,72			CK73GB1H103K	CHIP C 0.010UF K	
C5			CK73GB1H104K	CHIP C 0.10UF K		C78			CK73GB1H103K	CHIP C 0.010UF K	
C6			CK73EB1E106K	CHIP C 10UF K		C80			C93-1874-05	CHIP C 0.1UF 630WV	
C7			CC73GCH1H470J	CHIP C 47PF J		C81			CK73FB1H102K	CHIP C 1000PF K	
C8			CK73GB1H103K	CHIP C 0.010UF K		C82			C93-1874-05	CHIP C 0.1UF 630WV	
C9 ,10			CC73FCH1H100D	CHIP C 10PF D		C83			CK73FB1C105K	CHIP C 1.0UF K	
C11 ,12			CK73GB1H104K	CHIP C 0.10UF K		C85			C93-1823-05	CHIP C 1000PF 630WV	
C13			CK73GB1H103K	CHIP C 0.010UF K		C86			CD04AZ2A101M	ELECTRO 100UF 100WV	
C14			CK73GB1E105K	CHIP C 1.0UF K		C87			C93-1908-05	CHIP C 0.47UF 250WV	
C15			CK73GB1H104K	CHIP C 0.10UF K		C88			CK73GB1H102K	CHIP C 1000PF K	
C16			CD04AY1E470M	ELECTRO 47UF 25WV		C89			CK73FB1H102K	CHIP C 1000PF K	
C17			CK73FB1E104K	CHIP C 0.10UF K		C90 ,91			C93-1823-05	CHIP C 1000PF 630WV	
C18			CK73GB1H104K	CHIP C 0.10UF K		C92			C93-1901-05	CHIP C 0.22UF 250WV	
C19 ,20			CC73FCH1H221J	CHIP C 220PF J		C93 -95			CK73GB1H102K	CHIP C 1000PF K	
C21			CK73GB1E105K	CHIP C 1.0UF K		C96			CK73FB1H102K	CHIP C 1000PF K	
C22			CC73FCH1H221J	CHIP C 220PF J		C97			C93-1823-05	CHIP C 1000PF 630WV	
C23			CK73GB1H103K	CHIP C 0.010UF K		C98			CK73GB1H102K	CHIP C 1000PF K	
C24			CC73FCH1H221J	CHIP C 220PF J		C100			C93-1823-05	CHIP C 1000PF 630WV	
C27			CK73GB1H104K	CHIP C 0.10UF K		C101			C93-1909-05	CHIP C 68000PF 630WV	
C29			CK73GB1H103K	CHIP C 0.010UF K		C102,103			CM73F2H560J	CHIP C 56PF J	
C31			CK73EB1H104K	CHIP C 0.10UF K		C104			C93-1823-05	CHIP C 1000PF 630WV	
C32			CK73GB1H102K	CHIP C 1000PF K		C107			C93-1901-05	CHIP C 0.22UF 250WV	
C33			CK73FB1H104K	CHIP C 0.10UF K		C108			CK73GB1H102K	CHIP C 1000PF K	
C34			C93-1807-05	CHIP C 0.01UF 100WV		C109			CK73GB1H103K	CHIP C 0.010UF K	
C35			CK73FB1H103K	CHIP C 0.010UF K		C110			CK73FB1H103K	CHIP C 0.010UF K	
C36			CD04AY1E470M	ELECTRO 47UF 25WV		C111			CD04AZ2A101M	ELECTRO 100UF 100WV	
C37			CK73FB1H104K	CHIP C 0.10UF K		C112			CK73EB1E106K	CHIP C 10UF K	
C38			CK73GB1H104K	CHIP C 0.10UF K		C113			CK73FB1H103K	CHIP C 0.010UF K	
C40			CK73GB1H104K	CHIP C 0.10UF K		C114			C93-1908-05	CHIP C 0.47UF 250WV	
						C115			C93-1823-05	CHIP C 1000PF 630WV	
						C116			C93-1908-05	CHIP C 0.47UF 250WV	
						C117			C93-1823-05	CHIP C 1000PF 630WV	
						C121-128			CK73FB1H103K	CHIP C 0.010UF K	
						C129			CK73GB1H103K	CHIP C 0.010UF K	
						C130,131			CC73FCH1H100D	CHIP C 10PF D	
						C132			CC73FCH1H101J	CHIP C 100PF J	
						C133-141			CK73FB1H103K	CHIP C 0.010UF K	
						C142			C93-1817-05	CHIP C 330PF 630WV	
						C144			C93-1815-05	CHIP C 220PF 630WV	
						C147			C93-1884-05	CHIP C 47PF 630WV	
						C149			C93-1878-05	CHIP C 15PF 630WV	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

FINAL UNIT (X45-3880-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C150,151			C93-1811-05	CHIP C 100PF 630WV		C225			C93-1898-05	CHIP C 680PF 630WV	
C152			C93-1892-05	CHIP C 220PF 630WV		C226			C93-1880-05	CHIP C 22PF 630WV	
C153			C93-1889-05	CHIP C 120PF 630WV		C228			C93-1895-05	CHIP C 390PF 630WV	
C154			C93-1898-05	CHIP C 680PF 630WV		C229			C93-1814-05	CHIP C 180PF 630WV	
C155			C93-1812-05	CHIP C 120PF 630WV		C230			C93-1884-05	CHIP C 47PF 630WV	
C156			C93-1877-05	CHIP C 12PF 630WV		C231			C93-1882-05	CHIP C 33PF 630WV	
C157,158			C93-1887-05	CHIP C 82PF 630WV		C232			C93-1884-05	CHIP C 47PF 630WV	
C159			C93-1877-05	CHIP C 12PF 630WV		C233		*	C93-1881-05	CHIP C 27PF 630WV	
C161			C93-1892-05	CHIP C 220PF 630WV		C234			C93-1884-05	CHIP C 47PF 630WV	
C163			C93-1889-05	CHIP C 120PF 630WV		C235			C93-1885-05	CHIP C 56PF 630WV	
C165			C93-1895-05	CHIP C 390PF 630WV		C236			C93-1884-05	CHIP C 47PF 630WV	
C166			C93-1885-05	CHIP C 56PF 630WV		C237			C93-1816-05	CHIP C 270PF 630WV	
C167			C93-1883-05	CHIP C 39PF 630WV		C240			C93-1817-05	CHIP C 330PF 630WV	
C169			C93-1895-05	CHIP C 390PF 630WV		C242-250			CK73FB1H103K	CHIP C 0.010UF K	
C170			CK73FB1H103K	CHIP C 0.010UF K		C253			CK73FB1C105K	CHIP C 1.0UF K	
C171			C93-1814-05	CHIP C 180PF 630WV		C254			CK73GB1H103K	CHIP C 0.010UF K	
C172			C93-1889-05	CHIP C 120PF 630WV		C255			CK73FB1C105K	CHIP C 1.0UF K	
C173,174		*	C93-1891-05	CHIP C 180PF 630WV		C256			C93-1823-05	CHIP C 1000PF 630WV	
C175			C93-1884-05	CHIP C 47PF 630WV		C257			CK73GB1H104K	CHIP C 0.10UF K	
C177			C93-1886-05	CHIP C 68PF 630WV		C258			CK73GB1H103K	CHIP C 0.010UF K	
C179			C93-1879-05	CHIP C 18PF 630WV		C259,260			CK73GB1H102K	CHIP C 1000PF K	
C180			C93-1811-05	CHIP C 100PF 630WV		C261			CK73FB1H103K	CHIP C 0.010UF K	
C181			C93-1883-05	CHIP C 39PF 630WV		C263			CK73GB1H102K	CHIP C 1000PF K	
C182			C93-1887-05	CHIP C 82PF 630WV		C265			CK73GB1H102K	CHIP C 1000PF K	
C183			C93-1817-05	CHIP C 330PF 630WV		C266			CK73EB1E106K	CHIP C 10UF K	
C184			C93-1887-05	CHIP C 82PF 630WV		C267			CC73FCH1H221J	CHIP C 220PF J	
C185			C93-1879-05	CHIP C 18PF 630WV		C300			CC73FCH1H122J	CHIP C 1200PF J	
C186			CC73GCH1H221J	CHIP C 220PF J		C301			CK73FB1H103K	CHIP C 0.010UF K	
C187			C93-1811-05	CHIP C 100PF 630WV		C302			CC73FCH1H122J	CHIP C 1200PF J	
C188			C93-1816-05	CHIP C 270PF 630WV		C303			CK73FB1H103K	CHIP C 0.010UF K	
C189			C93-1814-05	CHIP C 180PF 630WV		C305			CC45SL3A220J	CERAMIC 22PF J	
C190			C93-1817-05	CHIP C 330PF 630WV		C306-309			CC73FCH1H221J	CHIP C 220PF J	
C191			C93-1814-05	CHIP C 180PF 630WV		C310			CK73FB1H103K	CHIP C 0.010UF K	
C192			C93-1811-05	CHIP C 100PF 630WV		C311			CK73GB1H103K	CHIP C 0.010UF K	
C193			C93-1880-05	CHIP C 22PF 630WV		C312			CK73GB1H104K	CHIP C 0.10UF K	
C194			C93-1813-05	CHIP C 150PF 630WV		C500			CK73GB1H104K	CHIP C 0.10UF K	
C195			CC45FSL3A151J	CERAMIC 150PF J		C501,502			C93-1902-05	CHIP C 1.0UF 50WV	
C196			C93-1816-05	CHIP C 270PF 630WV		C503,504			C93-1903-05	CHIP C 4700PF 100WV	
C197			C93-1814-05	CHIP C 180PF 630WV		C506,507			C93-1873-05	CHIP C 10000PF 630WV	
C198			C93-1889-05	CHIP C 120PF 630WV		C508,509			C93-1909-05	CHIP C 68000PF 630WV	
C199			C93-1896-05	CHIP C 470PF 630WV		C510			C93-1873-05	CHIP C 10000PF 630WV	
C200			C93-1816-05	CHIP C 270PF 630WV		C513			C93-1877-05	CHIP C 12PF 630WV	
C201,202			C93-1811-05	CHIP C 100PF 630WV		C514			C93-1878-05	CHIP C 15PF 630WV	
C203			C93-1884-05	CHIP C 47PF 630WV		C515			C93-1879-05	CHIP C 18PF 630WV	
C204			C93-1817-05	CHIP C 330PF 630WV		C516,517			C93-1877-05	CHIP C 12PF 630WV	
C205			C93-1882-05	CHIP C 33PF 630WV		C518			C93-1886-05	CHIP C 68PF 630WV	
C206		*	C93-1881-05	CHIP C 27PF 630WV		C520			C93-1812-05	CHIP C 120PF 630WV	
C208			C93-1887-05	CHIP C 82PF 630WV		C521			C93-1811-05	CHIP C 100PF 630WV	
C209			C93-1884-05	CHIP C 47PF 630WV		C522			C93-1812-05	CHIP C 120PF 630WV	
C211			C93-1812-05	CHIP C 120PF 630WV		C523			C93-1885-05	CHIP C 56PF 630WV	
C212			C93-1883-05	CHIP C 39PF 630WV		C524		*	C93-1891-05	CHIP C 180PF 630WV	
C213			C93-1811-05	CHIP C 100PF 630WV		C527			C93-1884-05	CHIP C 47PF 630WV	
C214			C93-1879-05	CHIP C 18PF 630WV		C528		*	C93-1888-05	CHIP C 100PF 630WV	
C216			C93-1817-05	CHIP C 330PF 630WV		C550			C93-1908-05	CHIP C 0.47UF 250WV	
C218			C93-1879-05	CHIP C 18PF 630WV		C551			C93-1873-05	CHIP C 10000PF 630WV	
C219			C93-1877-05	CHIP C 12PF 630WV		C570			CK73GB1H102K	CHIP C 1000PF K	
C220			C93-1895-05	CHIP C 390PF 630WV		C600			C93-1892-05	CHIP C 220PF 630WV	
C222			C93-1813-05	CHIP C 150PF 630WV		C601		*	C93-1891-05	CHIP C 180PF 630WV	
C223			C93-1896-05	CHIP C 470PF 630WV		C603			C93-1890-05	CHIP C 150PF 630WV	
C224			CC45FSL3A820J	CERAMIC 82PF J		C604			C93-1813-05	CHIP C 150PF 630WV	

PARTS LIST

FINAL UNIT (X45-3880-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C605			C93-1819-05	CHIP C 470PF 630WV		L47			L39-1529-15	TOROIDAL COIL	
C606,607			C93-1815-05	CHIP C 220PF 630WV		L48			L39-1528-15	TOROIDAL COIL	
C608			C93-1812-05	CHIP C 120PF 630WV		L49			L39-1592-15	TOROIDAL COIL	
C609			C93-1886-05	CHIP C 68PF 630WV		L50			L39-1531-15	TOROIDAL COIL	
C610			C93-1811-05	CHIP C 100PF 630WV		L51			L39-1530-15	TOROIDAL COIL	
C611			C93-1878-05	CHIP C 15PF 630WV		L52			L34-4949-05	AIR-CORE COIL(3.5T)	
C612			C93-1811-05	CHIP C 100PF 630WV		L53			L39-1525-15	TOROIDAL COIL	
C613			C93-1890-05	CHIP C 150PF 630WV		L54			L39-1527-15	TOROIDAL COIL	
C800-807			C93-1877-05	CHIP C 12PF 630WV		L56			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C808			CK73FB1C105K	CHIP C 1.0UF K		L57			L39-1808-05	TOROIDAL COIL	
C809			CK73FB1E104K	CHIP C 0.10UF K		L58			L39-1540-15	TOROIDAL COIL	
C810-817			CK73FB1H103K	CHIP C 0.010UF K		L59			L39-1526-15	TOROIDAL COIL	
C818			CC73FCH1H100D	CHIP C 10PF D		L60 ,61			L39-1529-15	TOROIDAL COIL	
C819			CC73FCH1H101J	CHIP C 100PF J		L62			L39-1592-15	TOROIDAL COIL	
C820			CC73FCH1H100D	CHIP C 10PF D		L70 -75			L92-0639-05	CHIP FERRITE	
C821-828			CK73FB1H103K	CHIP C 0.010UF K		L80 -83			L92-0444-05	CHIP FERRITE	
C850,851			C93-1876-05	CHIP C 10PF 630WV		L84 -86			L92-0155-05	CHIP FERRITE	
C852			C93-1877-05	CHIP C 12PF 630WV		L800-808			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C853			C93-1878-05	CHIP C 15PF 630WV		L850		*	L34-4970-05	AIR-CORE COIL(3.5T)	
CN2			E04-0154-05	PIN SOCKET		R1			RK73GB2A101J	CHIP R 100 J 1/10W	
CN16			E41-1683-05	PIN ASSY		R2			RK73EB2E000J	CHIP R 0 J 1/4W	
CN18			E41-1683-05	PIN ASSY		R3			RK73FB2B103J	CHIP R 10K J 1/8W	
CN32			E41-1734-05	PIN ASSY		R4			RK73FB2B680J	CHIP R 68 J 1/8W	
CN35			E40-6909-05	FLAT CABLE CONNECTOR		R6			RK73FB2B561J	CHIP R 560 J 1/8W	
CN36			E40-6527-05	PIN ASSY		R8			RK73GB2A473J	CHIP R 47K J 1/10W	
CN801-804			E23-1310-05	TEST TERMINAL		R10			RK73FB2B561J	CHIP R 560 J 1/8W	
CN815			E04-0490-05	PIN SOCKET		R11 ,12			RK73GB2A101J	CHIP R 100 J 1/10W	
CN816			E40-6914-05	FLAT CABLE CONNECTOR		R13			RK73GB2A121J	CHIP R 120 J 1/10W	
J1			E63-0405-05	PIN JACK		R16			RK73GB2A000J	CHIP R 0 J 1/10W	
J800			E63-0406-05	PIN JACK		R17			RK73GB2A470J	CHIP R 47 J 1/10W	
F1			F53-0388-05	FUSE(1.25A)		R18			RK73GB2A101J	CHIP R 100 J 1/10W	
L1 ,2			L92-0447-05	BEADS CORE		R19			RK73FB2B222J	CHIP R 2.2K J 1/8W	
L5			L92-0641-05	FERRITE CORE		R20			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L6		*	L39-1813-05	TOROIDAL COIL		R21			RK73GB2A100J	CHIP R 10 J 1/10W	
L7			L92-0641-05	FERRITE CORE		R22			R92-3625-05	RESISTOR 0.1 J 1/3W	
L8			L39-1809-05	TOROIDAL COIL		R24 -30			RK73GB2A473J	CHIP R 47K J 1/10W	
L9 -12			L41-4705-33	SMALL FIXED INDUCTOR(47UH)		R32			RK73FB2B121J	CHIP R 120 J 1/8W	
L15			L41-4705-33	SMALL FIXED INDUCTOR(47UH)		R33			RK73EB2E5R6J	CHIP R 5.6 J 1/4W	
L16			L39-1581-05	TOROIDAL COIL		R35			RS14DB3DR22J	FL-PROOF RS 0.22 J 2W	
L17		*	L39-1813-05	TOROIDAL COIL		R36			RK73EB2E5R6J	CHIP R 5.6 J 1/4W	
L18			L39-1582-05	TOROIDAL COIL		R37			RS14DB3A471J	FL-PROOF RS 470 J 1W	
L19		*	L39-1813-05	TOROIDAL COIL		R38			RK73FB2B471J	CHIP R 470 J 1/4W	
L20		*	L39-1583-15	TOROIDAL COIL		R39			RK73FB2B000J	CHIP R 0 J 1/8W	
L22 -30			L41-4705-33	SMALL FIXED INDUCTOR(47UH)		R42			RK73EB2E392J	CHIP R 3.9K J 1/4W	
L31			L39-1532-15	TOROIDAL COIL		R46			RK73GB2A473J	CHIP R 47K J 1/10W	
L32			L39-1525-15	TOROIDAL COIL		R47			RK73GB2A104J	CHIP R 100K J 1/10W	
L33			L39-1531-15	TOROIDAL COIL		R48			RK73GB2A000J	CHIP R 0 J 1/10W	
L34			L39-1592-15	TOROIDAL COIL		R49			RK73FB2B000J	CHIP R 0 J 1/8W	
L35			L34-4947-05	AIR-CORE COIL(3.5T)		R51			RK73FB2B103J	CHIP R 10K J 1/8W	
L36			L34-4945-05	AIR-CORE COIL(4.5T)		R52			RK73GB2A333J	CHIP R 33K J 1/10W	
L37			L39-1527-15	TOROIDAL COIL		R53			RK73FB2B222J	CHIP R 2.2K J 1/8W	
L38			L39-1526-15	TOROIDAL COIL		R54			RK73FB2B000J	CHIP R 0 J 1/8W	
L39 ,40			L39-1527-15	TOROIDAL COIL		R55			RK73FB2B472J	CHIP R 4.7K J 1/8W	
L41 ,42			L39-1530-15	TOROIDAL COIL		R56			RK73GB2A104J	CHIP R 100K J 1/10W	
L43			L34-4948-05	AIR-CORE COIL(3.5T)		R57			RK73GB2A333J	CHIP R 33K J 1/10W	
L44			L39-1524-15	TOROIDAL COIL		R58			RK73GB2A103J	CHIP R 10K J 1/10W	
L45			L39-1525-15	TOROIDAL COIL		R59			RK73GB2A100J	CHIP R 10 J 1/10W	
L46			L39-1527-15	TOROIDAL COIL		R60			RK73FB2B222J	CHIP R 2.2K J 1/8W	
						R65			RK73GB2A222J	CHIP R 2.2K J 1/10W	

PARTS LIST

FINAL UNIT (X45-3880-00)
DIGITAL UNIT (X46-3390-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R68 ,69 R70 ,71 R72 ,73 R74 ,75 R76			RK73FB2B682J RS14DB3A4R7J RS14DB3A470J RK73FB2B683J RK73GB2A222J	CHIP R 6.8K J 1/8W FL-PROOF RS 4.7 J 1W FL-PROOF RS 47 J 1W CHIP R 68K J 1/8W CHIP R 2.2K J 1/10W	
R78 ,79 R80 ,81 R82 R83 R84			RS14DB3D180J R92-3706-05 RS14DB3D5R6J RS14DB3D220J RS14DB3D560J	FL-PROOF RS 18 J 2W CARBON FILM RESISTOR 10M FL-PROOF RS 5.6 J 2W FL-PROOF RS 22 J 2W FL-PROOF RS 56 J 2W	
R89 R94 R95 R96 R97			RK73GB2A221J RK73GH2A224D RK73GH2A103D RK73GB2A222J RK73GB2A393J	CHIP R 220 J 1/10W CHIP R 220K D 1/10W CHIP R 10K D 1/10W CHIP R 2.2K J 1/10W CHIP R 39K J 1/10W	
R98 R99 R100 R101 R102			RK73GB2A104J RK73GB2A124J RK73GB2A222J RK73GB2A104J RK73GB2A000J	CHIP R 100K J 1/10W CHIP R 120K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 0 J 1/10W	
R103 R104 R105 R110,111 R120-125			RK73GB2A392J RS14DB3D101J RK73EB2E2R2J RK73GB2A474J RK73FB2B102J	CHIP R 3.9K J 1/10W FL-PROOF RS 100 J 2W CHIP R 2.2 J 1/4W CHIP R 470K J 1/10W CHIP R 1.0K J 1/8W	
R150 R151 R152,153 R154,155 R157			RK73FB2B103J RS14DB3D470J RK73GB2A103J RK73GB2A000J RK73GB2A000J	CHIP R 10K J 1/8W FL-PROOF RS 47 J 2W CHIP R 10K J 1/10W CHIP R 0 J 1/10W CHIP R 0 J 1/10W	
R505 R506 R507,508 R510-515 R530,531			RK73FB2B561J RK73FB2B391J RK73FB2B472J RK73GB2A000J RK73EB2E000J	CHIP R 560 J 1/8W CHIP R 390 J 1/8W CHIP R 4.7K J 1/8W CHIP R 0 J 1/10W CHIP R 0 J 1/4W	
R570-572 R801-804 R805-807 VR1 ,2 VR3 ,4			RK73PB2H102J R92-0150-05 RK73GB2A101J R12-6736-05 R12-6740-05	CHIP R 1.0K J 1/2W JUMPER REST 0 OHM CHIP R 100 J 1/10W TRIMMING POT.(2.2K) TRIMMING POT.(10K)	
K1 K2 -15 K16 K17 ,18 K801-804			S76-0464-05 S76-0479-05 S76-0464-05 S76-0479-05 S76-0464-05	RELAY RELAY RELAY RELAY RELAY	
K805-808			S76-0424-05	RELAY	
D1 ,2 D3 D5 D8 -17 D19			DAN202U RB480Y-90 DAN202U DAN202U 1SS388F	DIODE DIODE DIODE DIODE DIODE	
D50 D51 D501 D800-807 D808			HVC131 DAN202U 1SS388F 1SS355 CG5600	DIODE DIODE DIODE DIODE SURGE ABSORBER	
IC1 IC3 IC5			M62353AGPDF5J NJM12904V INA193AIDBVT	MOS-IC MOS-IC ANALOGUE IC	

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC6 ,7 IC8 IC800 Q2 Q3	1A 1A		TC74HC4094AFF NJM12904V TC74HC4094AFF RD06HHF1-102 RD100HHF1-102	MOS-IC MOS-IC MOS-IC FET FET	
Q4 Q5 Q6 Q7 Q9 ,10	1A		2SK1830F 2SC4116(GR)F 2SA1586(Y,GR)F VRF150MP DTC123YE	FET TRANSISTOR TRANSISTOR FET(PAIR A/2, B/2) DIGITAL TRANSISTOR	
Q11 -13 Q14 -23 Q24 Q25 Q26			2SB1188(Q,R) DTC123YE DTB143EK DTC123YE DTB143EK	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q27 Q500 Q502 Q800-807 TH1 ,2			DTC123YE 2SK1830F DTC123YE DTC123YE NCP18XH103F0S	DIGITAL TRANSISTOR FET DIGITAL TRANSISTOR DIGITAL TRANSISTOR THERMISTOR	
TH3 ,4			NCP18WM474J0S	THERMISTOR	
DIGITAL UNIT (X46-3390-00)					
C1 ,2 C3 C4 C31 -41 C42 ,43			CK73HB0J105K CK73HB1A224K CK73HB1A104K CK73HB1A104K CK73FB0J106K	CHIP C 1.0UF K CHIP C 0.22UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 10UF K	
C51 ,52 C53 -76 C94 -97 C110 C120			CK73FB0J106K CK73HB1A104K CK73FB0J106K CK73HB1A104K CK73HB1A104K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C121,122 C123 C126 C127 C128			CK73FB0J106K CK73HB1A104K CK73FB0J106K CK73HB1A104K CK73FB0J106K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K	
C129 C130 C131 C132 C133			CK73HB1A104K CK73FB0J106K CK73HB1A104K CK73FB0J106K CK73HB1A104K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K	
C141,142 C143,144 C145 C146 C147-177			CK73HB1A104K CC73HCH1H150J CK73HB1A104K CK73HB1H102K CK73HB1A104K	CHIP C 0.10UF K CHIP C 15PF J CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K	
C181 C182 C183 C184 C185			C93-1875-05 CK73HB1H102K CE32BQ0J221M C93-1875-05 CK73HB1H102K	CHIP C 22UF M CHIP C 1000PF K CHIP EL 220UF 6.3WV CHIP C 22UF M CHIP C 1000PF K	

PARTS LIST

DIGITAL UNIT (X46-3390-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C193-196			CC73HCH1H220J	CHIP C 22PF J		C604,605			CC73HCH1H080D	CHIP C 8.0PF D	
C201,202			CK73HB0J105K	CHIP C 1.0UF K		C606			CK73HB1A104K	CHIP C 0.10UF K	
C204			CK73HB1A104K	CHIP C 0.10UF K		C607			CK73GB0J475K	CHIP C 4.7UF K	
C206			CK73HB1A104K	CHIP C 0.10UF K		C608			CK73HB1A104K	CHIP C 0.10UF K	
C236-246			CK73HB1A104K	CHIP C 0.10UF K		C609			CK73GB0J475K	CHIP C 4.7UF K	
C247,248			CK73FB0J106K	CHIP C 10UF K		C610			CC73HCH1H471J	CHIP C 470PF J	
C251,252			CK73FB0J106K	CHIP C 10UF K		C611-614			CC73HCH1H100D	CHIP C 10PF D	
C253-276			CK73HB1A104K	CHIP C 0.10UF K		C615			CK73HB1E223K	CHIP C 0.022UF K	
C278-281			CK73FB0J106K	CHIP C 10UF K		C681			CK73HB1A104K	CHIP C 0.10UF K	
C341,342			CK73HB1A104K	CHIP C 0.10UF K		C683-685			CK73HB1A104K	CHIP C 0.10UF K	
C343,344			CC73HCH1H150J	CHIP C 15PF J		C688			CK73HB1H102K	CHIP C 1000PF K	
C345			CK73HB1H102K	CHIP C 1000PF K		C701			CK73HB0J105K	CHIP C 1.0UF K	
C350-379			CK73HB1A104K	CHIP C 0.10UF K		C702			CK73HB1H222K	CHIP C 2200PF K	
C384			CE32BQJ221M	CHIP EL 220UF 6.3WV		C703			CK73HB0J105K	CHIP C 1.0UF K	
C385			C93-1875-05	CHIP C 22UF M		C704			CK73GB0J106K	CHIP C 10UF K	
C386			CK73HB1H102K	CHIP C 1000PF K		C705			CK73HB1H102K	CHIP C 1000PF K	
C388			C93-1875-05	CHIP C 22UF M		C706			CK73HB1A104K	CHIP C 0.10UF K	
C389			CK73HB1H102K	CHIP C 1000PF K		C707			CK73FB0J106K	CHIP C 10UF K	
C391,392			CC73HCH1H120J	CHIP C 12PF J		C708			CK73HB1H102K	CHIP C 1000PF K	
C395			CK73HB1E103K	CHIP C 0.010UF K		C709			CK73FB0J106K	CHIP C 10UF K	
C401			CK73FB0J106K	CHIP C 10UF K		C710			CK73HB1H102K	CHIP C 1000PF K	
C402-405			CK73HB0J105K	CHIP C 1.0UF K		C711			CC73HCH1H200J	CHIP C 20PF J	
C406			CK73FB0J106K	CHIP C 10UF K		C712			CC73HCH1H180J	CHIP C 18PF J	
C407-409			CK73HB1A104K	CHIP C 0.10UF K		C713			CK73FB0J106K	CHIP C 10UF K	
C410			CK73FB0J106K	CHIP C 10UF K		C714			CK73HB1H102K	CHIP C 1000PF K	
C411,412			CK73HB1A104K	CHIP C 0.10UF K		C715			CK73FB0J106K	CHIP C 10UF K	
C420-424			CK73HB1A104K	CHIP C 0.10UF K		C716			CK73HB1H102K	CHIP C 1000PF K	
C425-427			CC73HCH1H220J	CHIP C 22PF J		C717			CK73FB0J106K	CHIP C 10UF K	
C428-430			CC73HCH1H330J	CHIP C 33PF J		C718			CK73HB1H102K	CHIP C 1000PF K	
C431-433			CC73HCH1H220J	CHIP C 22PF J		C719-721			CK73FB0J106K	CHIP C 10UF K	
C434			CK73HB1A104K	CHIP C 0.10UF K		C722			CK73HB1H102K	CHIP C 1000PF K	
C436,437			CK73HB1A104K	CHIP C 0.10UF K		C723,724			CK73HB1A104K	CHIP C 0.10UF K	
C438,439			CK73HB1H221K	CHIP C 220PF K		C725			CK73HB0J105K	CHIP C 1.0UF K	
C451			CK73FB0J106K	CHIP C 10UF K		C726-728			CK73HB1A104K	CHIP C 0.10UF K	
C452			CK73HB1A104K	CHIP C 0.10UF K		C729			CK73HB0J105K	CHIP C 1.0UF K	
C453			CK73HB1H222K	CHIP C 2200PF K		C730-732			CK73HB1A104K	CHIP C 0.10UF K	
C454			CC73HCH1H331J	CHIP C 330PF J		C733			CK73HB1H102K	CHIP C 1000PF K	
C456			CK73GB1C225K	CHIP C 2.2UF K		C734			CK73GB1E105K	CHIP C 1.0UF K	
C457			CK73HB1A104K	CHIP C 0.10UF K		C735			CK73HB1A104K	CHIP C 0.10UF K	
C458			CK73GB1C225K	CHIP C 2.2UF K		C736			CK73HB0J105K	CHIP C 1.0UF K	
C459			CC73HCH1H331J	CHIP C 330PF J		C737			CK73HB1A104K	CHIP C 0.10UF K	
C460			CK73HB1A104K	CHIP C 0.10UF K		C738,739			CC73HCH1H220J	CHIP C 22PF J	
C461			CK73HB1H182K	CHIP C 1800PF K		C740,741			CK73HB1H222K	CHIP C 2200PF K	
C462			CK73HB1A104K	CHIP C 0.10UF K		C742			CK73HB0J105K	CHIP C 1.0UF K	
C463			CK73GB1C225K	CHIP C 2.2UF K		C743			CK73HB1H102K	CHIP C 1000PF K	
C464			CC73HCH1H331J	CHIP C 330PF J		C744			CK73GB0J106K	CHIP C 10UF K	
C465			CK73HB1H182K	CHIP C 1800PF K		C745			CK73HB0J105K	CHIP C 1.0UF K	
C466			CK73HB1H222K	CHIP C 2200PF K		C746			CK73HB1H472K	CHIP C 4700PF K	
C467			CK73HB1A104K	CHIP C 0.10UF K		C747			CK73HB1A104K	CHIP C 0.10UF K	
C468			CC73HCH1H331J	CHIP C 330PF J		C750,751			CK73HB1H102K	CHIP C 1000PF K	
C469-471			CK73GB1C225K	CHIP C 2.2UF K		C752			CK73GB0J106K	CHIP C 10UF K	
C472			CK73FB0J106K	CHIP C 10UF K		C753			CK73HB0J105K	CHIP C 1.0UF K	
C473-475			CK73HB1E103K	CHIP C 0.010UF K		C760-763			CK73HB0J105K	CHIP C 1.0UF K	
C501-504			CK73HB1A104K	CHIP C 0.10UF K		C821			CK73HB1A104K	CHIP C 0.10UF K	
C505,506			C90-6990-05	ELECTRO 220UF 10WV		C823			CK73HB1A104K	CHIP C 0.10UF K	
C570			CK73GB1E105K	CHIP C 1.0UF K		C831			CK73HB1A104K	CHIP C 0.10UF K	
C571,572			CK73HB0J105K	CHIP C 1.0UF K		CN1			E41-1684-05	PIN ASSY	
C601			CK73HB0J105K	CHIP C 1.0UF K		CN2			E40-6532-05	PIN ASSY	
C602			CK73HB1A104K	CHIP C 0.10UF K		CN3			E40-6905-05	FLAT CABLE CONNECTOR	
C603			CK73HB0J105K	CHIP C 1.0UF K							

PARTS LIST

DIGITAL UNIT (X46-3390-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
CN4			E40-6910-05	FLAT CABLE CONNECTOR		CP22-24			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CN6			E40-6914-05	FLAT CABLE CONNECTOR		CP25			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CN11			E41-3176-05	FLAT CABLE CONNECTOR		CP26-31			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CN225			E40-6913-05	FLAT CABLE CONNECTOR		CP33			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CN228			E40-6914-05	FLAT CABLE CONNECTOR		CP34,35			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CN501			E41-1690-05	PIN ASSY		CP38-50			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CN651			E40-6949-05	FLAT CABLE CONNECTOR		CP51-55			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CN652			E04-0193-05	PIN SOCKET		CP57			RK74HA1J220J	CHIP-COM 22 J 1/16W	
J401		*	E58-0548-05	RECTANGULAR RECEPTACLE		CP58-60			RK74HA1J101J	CHIP-COM 100 J 1/16W	
J601			E58-0544-05	MODULAR JACK		CP61,62			RK74HA1J220J	CHIP-COM 22 J 1/16W	
J701			E58-0537-05	RECTANGULAR RECEPTACLE		CP63			RK74HA1J000J	CHIP-COM 0 J 1/16W	
W701			E37-1544-05	PROCESSED LEAD WIRE		CP64,65			RK74HA1J680J	CHIP-COM 68 J 1/16W	
F1			F53-0367-05	FUSE(1.0A)		CP66			RK74HA1J000J	CHIP-COM 0 J 1/16W	
F2 ,3			F53-0360-05	FUSE(0.25A)		CP67			RK74HA1J151J	CHIP-COM 150 J 1/16W	
F401			F53-0360-05	FUSE(0.25A)		CP68			RK74HA1J680J	CHIP-COM 68 J 1/16W	
F601			F53-0317-15	FUSE(4A)		CP69			RK74HA1J000J	CHIP-COM 0 J 1/16W	
401	2D		G13-1878-15	CONDUCTIVE CUSHION		CP70			RK74HA1J220J	CHIP-COM 22 J 1/16W	
402	2D	*	G13-2435-04	CONDUCTIVE CUSHION(DVI COVER)		CP71			RK74HA1J101J	CHIP-COM 100 J 1/16W	
L1 ,2			L33-1595-05	CHOKO COIL		CP72			RK74HA1J000J	CHIP-COM 0 J 1/16W	
L10 -19			L92-0639-05	CHIP FERRITE		CP73			RK74HA1J101J	CHIP-COM 100 J 1/16W	
L201,202			L33-1595-05	CHOKO COIL		R1 -20			RK73HB1J220J	CHIP R 22 J 1/16W	
L301-325			L92-0491-05	CHIP FERRITE		R22			RK73HB1J220J	CHIP R 22 J 1/16W	
L326			L92-0545-05	CHIP FERRITE		R23 ,24			RK73HB1J100J	CHIP R 10 J 1/16W	
L401,402			L92-0639-05	CHIP FERRITE		R25			RK73HB1J220J	CHIP R 22 J 1/16W	
L403			L41-8275-32	SMALL FIXED INDUCTOR(0.082UH)		R27 -29			RK73HB1J000J	CHIP R 0 J 1/16W	
L404-409			L41-8275-33	SMALL FIXED INDUCTOR(0.082UH)		R30 -51			RK73HB1J220J	CHIP R 22 J 1/16W	
L412-415		*	L92-0494-05	CHIP FERRITE		R52 -59			RK73HB1J101J	CHIP R 100 J 1/16W	
L451			L92-0639-05	CHIP FERRITE		R60 -81			RK73HB1J220J	CHIP R 22 J 1/16W	
L501,502			L92-0639-05	CHIP FERRITE		R82 -86			RK73HB1J101J	CHIP R 100 J 1/16W	
L601,602			L92-0639-05	CHIP FERRITE		R88 ,89			RK73HB1J101J	CHIP R 100 J 1/16W	
L603,604		*	L33-3033-05	CHOKO COIL		R90 ,91			RK73GB2A000J	CHIP R 0 J 1/10W	
L651			L79-1974-05	FILTER		R92			RK73GH2A49R9D	CHIP R 49.9 D 1/10W	
L652-670			L92-0490-05	CHIP FERRITE		R93 ,94			RK73GH2A102D	CHIP R 1.0K D 1/10W	
L671			L92-0639-05	CHIP FERRITE		R95			RK73HB1J221J	CHIP R 220 J 1/16W	
L672			L92-0492-05	CHIP FERRITE		R96			RK73HB1J104J	CHIP R 100K J 1/16W	
L701,702			L92-0639-05	CHIP FERRITE		R97 ,98			RK73HB1J223J	CHIP R 22K J 1/16W	
L705			L92-0639-05	CHIP FERRITE		R99 ,100			RK73HB1J000J	CHIP R 0 J 1/16W	
L707			L92-0639-05	CHIP FERRITE		R101,102			RK73HB1J470J	CHIP R 47 J 1/16W	
X1			L77-3078-05	CRYSTAL RESONATOR(26.0000MHZ)		R103,104			RK73HB1J102J	CHIP R 1.0K J 1/16W	
X201			L77-3078-05	CRYSTAL RESONATOR(26.0000MHZ)		R105,106			RK73HB1J101J	CHIP R 100 J 1/16W	
X202			L77-2979-05	CRYSTAL RESONATOR(12.288MHZ)		R107-109			RK73HB1J000J	CHIP R 0 J 1/16W	
X601			L77-3067-05	CRYSTAL RESONATOR(25MHZ)		R110-115			RK73HB1J470J	CHIP R 47 J 1/16W	
X701			L77-3813-05	CRYSTAL RESONATOR(24.0000MHZ)		R116-118			RK73HB1J103J	CHIP R 10K J 1/16W	
X702			L77-2951-05	CRYSTAL RESONATOR(12MHZ)		R120,121			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CP1 ,2			RK74HA1J220J	CHIP-COM 22 J 1/16W		R122			RK73HB1J332J	CHIP R 3.3K J 1/16W	
CP3 ,4			RK74HA1J101J	CHIP-COM 100 J 1/16W		R123,124			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CP5 ,6			RK74HA1J220J	CHIP-COM 22 J 1/16W		R125			RK73HB1J103J	CHIP R 10K J 1/16W	
CP7			RK74HA1J000J	CHIP-COM 0 J 1/16W		R126,127			RK73HB1J220J	CHIP R 22 J 1/16W	
CP8			RK74HA1J680J	CHIP-COM 68 J 1/16W		R128,129			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CP9			RK74HA1J151J	CHIP-COM 150 J 1/16W		R130-142			RK73HB1J220J	CHIP R 22 J 1/16W	
CP10			RK74HA1J680J	CHIP-COM 68 J 1/16W		R143			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CP11,12			RK74HA1J151J	CHIP-COM 150 J 1/16W		R144,145			RK73HB1J220J	CHIP R 22 J 1/16W	
CP15			RK74HA1J000J	CHIP-COM 0 J 1/16W		R146-153			RK73HB1J103J	CHIP R 10K J 1/16W	
CP16			RK74HA1J101J	CHIP-COM 100 J 1/16W		R154			RK73HB1J101J	CHIP R 100 J 1/16W	
CP17			RK74HA1J000J	CHIP-COM 0 J 1/16W		R155			RK73HB1J103J	CHIP R 10K J 1/16W	
CP18			RK74HA1J101J	CHIP-COM 100 J 1/16W		R156			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CP19,20			RK74HB1J103J	CHIP-COM 10K J 1/16W		R157-159			RK73GB2A000J	CHIP R 0 J 1/10W	
CP21			RK74HA1J220J	CHIP-COM 22 J 1/16W		R160			RK73HB1J472J	CHIP R 4.7K J 1/16W	
						R161			RK73HB1J103J	CHIP R 10K J 1/16W	
						R164-166			RK73HB1J000J	CHIP R 0 J 1/16W	

PARTS LIST

DIGITAL UNIT (X46-3390-00)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R170,171			RK73HB1J220J	CHIP R 22 J 1/16W		R376-378			RK73HB1J000J	CHIP R 0 J 1/16W	
R172-174			RK73HB1J472J	CHIP R 4.7K J 1/16W		R380-387			RK73HB1J330J	CHIP R 33 J 1/16W	
R175-177			RK73HB1J000J	CHIP R 0 J 1/16W		R398			RK73HB1J000J	CHIP R 0 J 1/16W	
R178			RK73HB1J221J	CHIP R 220 J 1/16W		R401			RK73GB2A103J	CHIP R 10K J 1/10W	
R179			RK73HB1J000J	CHIP R 0 J 1/16W		R403,404			RK73GB2A103J	CHIP R 10K J 1/10W	
R180			RK73HB1J101J	CHIP R 100 J 1/16W		R405,406			RK73GB2A470J	CHIP R 47 J 1/10W	
R181,182			RK73HB1J000J	CHIP R 0 J 1/16W		R407,408			RK73GB2A103J	CHIP R 10K J 1/10W	
R183			RK73HB1J680J	CHIP R 68 J 1/16W		R409			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R184			RK73HB1J102J	CHIP R 1.0K J 1/16W		R420			RK73GH2A561D	CHIP R 560 D 1/10W	
R185			RK73HB1J000J	CHIP R 0 J 1/16W		R421-423			RK73GB2A151J	CHIP R 150 J 1/10W	
R186			RK73HB1J472J	CHIP R 4.7K J 1/16W		R424			RK73GH2A8870D	CHIP R 887 D 1/10W	
R187			RK73HB1J102J	CHIP R 1.0K J 1/16W		R425,426			RK73GB2A470J	CHIP R 47 J 1/10W	
R189			RK73HB1J473J	CHIP R 47K J 1/16W		R427			RK73GB2A103J	CHIP R 10K J 1/10W	
R190,191			RK73HB1J000J	CHIP R 0 J 1/16W		R428,429			RK73HB1J220J	CHIP R 22 J 1/16W	
R193			RK73HB1J101J	CHIP R 100 J 1/16W		R431-433			RK73GB2A151J	CHIP R 150 J 1/10W	
R194			RK73HB1J000J	CHIP R 0 J 1/16W		R434,435			RK73GB2A470J	CHIP R 47 J 1/10W	
R196			RK73HB1J472J	CHIP R 4.7K J 1/16W		R436			RK73GB2A000J	CHIP R 0 J 1/10W	
R197			RK73HB1J102J	CHIP R 1.0K J 1/16W		R437			RK73GB2A470J	CHIP R 47 J 1/10W	
R198,199			RK73HB1J101J	CHIP R 100 J 1/16W		R438			RK73HB1J000J	CHIP R 0 J 1/16W	
R201-220			RK73HB1J220J	CHIP R 22 J 1/16W		R447			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R222			RK73HB1J220J	CHIP R 22 J 1/16W		R451-456			RK73HB1J223J	CHIP R 22K J 1/16W	
R223,224			RK73HB1J100J	CHIP R 10 J 1/16W		R457-468			RK73HB1J183J	CHIP R 18K J 1/16W	
R225			RK73HB1J220J	CHIP R 22 J 1/16W		R501-504			RK73GB2A330J	CHIP R 33 J 1/10W	
R227			RK73HB1J102J	CHIP R 1.0K J 1/16W		R505-508			RK73GB2A153J	CHIP R 15K J 1/10W	
R230-281			RK73HB1J220J	CHIP R 22 J 1/16W		R509,510			RK73HB1J223J	CHIP R 22K J 1/16W	
R282,283			RK73HB1J102J	CHIP R 1.0K J 1/16W		R511,512			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R285			RK73HB1J000J	CHIP R 0 J 1/16W		R571,572			RK73HB1J223J	CHIP R 22K J 1/16W	
R290,291			RK73GB2A000J	CHIP R 0 J 1/10W		R573-576			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R292			RK73GH2A49R9D	CHIP R 49.9 D 1/10W		R601-603			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R293,294			RK73GH2A102D	CHIP R 1.0K D 1/10W		R604-607			RK73GH2A49R9D	CHIP R 49.9 D 1/10W	
R300			RK73GB2A000J	CHIP R 0 J 1/10W		R609			RK73GB2A151J	CHIP R 150 J 1/10W	
R301			RK73HB1J102J	CHIP R 1.0K J 1/16W		R610			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R302			RK73HB1J000J	CHIP R 0 J 1/16W		R611			RK73EB2E000J	CHIP R 0 J 1/4W	
R303			RK73HB1J221J	CHIP R 220 J 1/16W		R612,613			RK73GB2A271J	CHIP R 270 J 1/10W	
R304			RK73HB1J101J	CHIP R 100 J 1/16W		R614			RK73GB2A103J	CHIP R 10K J 1/10W	
R306,307			RK73HB1J000J	CHIP R 0 J 1/16W		R615			RK73GH2A1212D	CHIP R 12.1K D 1/10W	
R308			RK73HB1J102J	CHIP R 1.0K J 1/16W		R620			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R309-311			RK73HB1J000J	CHIP R 0 J 1/16W		R621			RK73HB1J101J	CHIP R 100 J 1/16W	
R312			RK73HB1J102J	CHIP R 1.0K J 1/16W		R622			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R314			RK73HB1J472J	CHIP R 4.7K J 1/16W		R660-675			RK73HB1J680J	CHIP R 68 J 1/16W	
R315			RK73HB1J473J	CHIP R 47K J 1/16W		R676-678			RK73HB1J121J	CHIP R 120 J 1/16W	
R316			RK73HB1J472J	CHIP R 4.7K J 1/16W		R679			RK73HB1J560J	CHIP R 56 J 1/16W	
R320			RK73HB1J103J	CHIP R 10K J 1/16W		R680,681			RK73HB1J101J	CHIP R 100 J 1/16W	
R321-324			RK73HB1J221J	CHIP R 220 J 1/16W		R683			RK73GB2A470J	CHIP R 47 J 1/10W	
R326,327			RK73HB1J220J	CHIP R 22 J 1/16W		R684			RK73HB1J473J	CHIP R 47K J 1/16W	
R328,329			RK73HB1J472J	CHIP R 4.7K J 1/16W		R685			RK73HB1J103J	CHIP R 10K J 1/16W	
R330-342			RK73HB1J220J	CHIP R 22 J 1/16W		R686,687			RK73GB2A000J	CHIP R 0 J 1/10W	
R344,345			RK73HB1J220J	CHIP R 22 J 1/16W		R701			RK73HB1J153J	CHIP R 15K J 1/16W	
R346-353			RK73HB1J103J	CHIP R 10K J 1/16W		R702,703			RK73HB1J223J	CHIP R 22K J 1/16W	
R355-358			RK73HB1J472J	CHIP R 4.7K J 1/16W		R704			RK73HB1J153J	CHIP R 15K J 1/16W	
R359			RK73HB1J103J	CHIP R 10K J 1/16W		R705			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R364,365			RK73HB1J220J	CHIP R 22 J 1/16W		R706			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R366			RK73HB1J000J	CHIP R 0 J 1/16W		R707,708			RK73HB1J220J	CHIP R 22 J 1/16W	
R367			RK73HB1J221J	CHIP R 220 J 1/16W		R709			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R368			RK73HB1J472J	CHIP R 4.7K J 1/16W		R710			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R369			RK73HB1J000J	CHIP R 0 J 1/16W		R711-714			RK73HB1J101J	CHIP R 100 J 1/16W	
R370			RK73HB1J102J	CHIP R 1.0K J 1/16W		R715,716			RK73HB1J000J	CHIP R 0 J 1/16W	
R371			RK73HB1J000J	CHIP R 0 J 1/16W		R717			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R372			RK73HB1J101J	CHIP R 100 J 1/16W		R718			RK73HB1J103J	CHIP R 10K J 1/16W	
R375			RK73HB1J100J	CHIP R 10 J 1/16W		R719			RK73HB1J102J	CHIP R 1.0K J 1/16W	

PARTS LIST

DIGITAL UNIT (X46-3390-00)
PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R720-722			RK73HB1J103J	CHIP R 10K J 1/16W		D702			RB080L-30	DIODE	
R723			RK73HB1J105J	CHIP R 1.0M J 1/16W		IC1			Note1	MCU	
R724			RK73HB1J103J	CHIP R 10K J 1/16W		IC2 ,3			Note1	DRAM IC	
R725			RK73HB1J105J	CHIP R 1.0M J 1/16W		IC6			AK4387ET	MOS-IC	
R726			RK73HB1J103J	CHIP R 10K J 1/16W		IC7			WM8782ASEDSRV	MOS-IC	
R727			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC8			Note1	ROM IC	
R729			RK73HB1J473J	CHIP R 47K J 1/16W		IC9			TC7SH08FU-F	MOS-IC	
R731			RK73HB1J473J	CHIP R 47K J 1/16W		IC201			Note1	MCU	
R733			RK73HB1J473J	CHIP R 47K J 1/16W		IC202,203			Note1	DRAM IC	
R734-736			RK73HB1J104J	CHIP R 100K J 1/16W		IC208			Note1	ROM IC	
R737			RK73HB1J103J	CHIP R 10K J 1/16W		IC209			TC7WU04FU-F	MOS-IC	
R738			RK73HB1J473J	CHIP R 47K J 1/16W		IC401			AD9889BBSTZ80	MOS-IC	
R740			RK73HB1J105J	CHIP R 1.0M J 1/16W		IC402			ADV7125KSTZ50	MOS-IC	
R741			RK73HB1J000J	CHIP R 0 J 1/16W		IC403			TC7WT126FU-F	MOS-IC	
R742			RK73GH2A123D	CHIP R 12K D 1/10W		IC451-453			NJM2100V-ZB	MOS-IC	
R743,744			RK73HB1J000J	CHIP R 0 J 1/16W		IC501			BD6516F	MOS-IC	
R745			RK73HB1J101J	CHIP R 100 J 1/16W		IC502,503			TUSB1106PWR	MOS-IC	
R746			RK73HB1J104J	CHIP R 100K J 1/16W		IC601			Note1	MOS-IC	
R747			RK73FB2B000J	CHIP R 0 J 1/8W		IC651,652			TC74VHC541FK	MOS-IC	
R748			RK73HB1J104J	CHIP R 100K J 1/16W		IC653			TC74VCX541FK	MOS-IC	
R749			RK73HB1J105J	CHIP R 1.0M J 1/16W		IC701			Note1	MOS-IC	
R750,751			RK73HB1J153J	CHIP R 15K J 1/16W		IC702			CP2102SX0567	MOS-IC	
R752,753			RK73HB1J223J	CHIP R 22K J 1/16W		IC703			PCM2903B	MOS-IC	
R754,755			RK73HB1J153J	CHIP R 15K J 1/16W		IC704			BD82001FVJ	MOS-IC	
R756			RK73HB1J472J	CHIP R 4.7K J 1/16W		IC705			TC7SH08FU-F	MOS-IC	
R761,762			RK73HB1J223J	CHIP R 22K J 1/16W		IC706			NJM2100V-ZB	MOS-IC	
R763			RK73HB1J153J	CHIP R 15K J 1/16W		IC707			TC75S51FE(F)	MOS-IC	
R817			RK73HB1J473J	CHIP R 47K J 1/16W		IC708,709			MM3273DU	MOS-IC	
R818			RK73HB1J103J	CHIP R 10K J 1/16W		Q1			SSM3K15TE(F)	FET	
R821			RK73HB1J473J	CHIP R 47K J 1/16W		Q651			TPC6111-F	FET	
R822			RK73HB1J103J	CHIP R 10K J 1/16W		Q652			LTC043TEBFS8	TRANSISTOR	
R831			RK73HB1J473J	CHIP R 47K J 1/16W		Q701-703			HN7G01FU-F(A)	TRANSISTOR	
R832			RK73HB1J333J	CHIP R 33K J 1/16W		Q803			TPC6111-F	FET	
R833,834			RK73HB1J103J	CHIP R 10K J 1/16W		Q804			LTC043TEBFS8	TRANSISTOR	
R901,902			RK73HB1J101J	CHIP R 100 J 1/16W		Q805			TPC6111-F	FET	
R904-909			RK73HB1J101J	CHIP R 100 J 1/16W		Q806			LTC043TEBFS8	TRANSISTOR	
R911			RK73HB1J103J	CHIP R 10K J 1/16W		Q808			SSM3J36TU	FET	
R912			RK73HB1J102J	CHIP R 1.0K J 1/16W		Q809			LTC043TEBFS8	TRANSISTOR	
R913-917			RK73HB1J000J	CHIP R 0 J 1/16W							
R922			RK73HB1J472J	CHIP R 4.7K J 1/16W							
R931			RK73HB1J103J	CHIP R 10K J 1/16W							
R933,934			RK73HB1J223J	CHIP R 22K J 1/16W							
R935,936			RK73HB1J102J	CHIP R 1.0K J 1/16W							
R937			RK73GB2A000J	CHIP R 0 J 1/10W							
R952-954			RK73HB1J103J	CHIP R 10K J 1/16W							
R956-963			RK73HB1J220J	CHIP R 22 J 1/16W							
R964-969			RK73HB1J330J	CHIP R 33 J 1/16W							
R974,975			RK73HB1J103J	CHIP R 10K J 1/16W							
R976			RK73HB1J105J	CHIP R 1.0M J 1/16W							
R977			RK73HB1J561J	CHIP R 560 J 1/16W							
R978,979			RK73HB1J000J	CHIP R 0 J 1/16W							
R980			RK73HB1J103J	CHIP R 10K J 1/16W							
R981,982			RK73HB1J330J	CHIP R 33 J 1/16W							
R983-986			RK73HB1J221J	CHIP R 220 J 1/16W							
R987,988			RK73HB1J101J	CHIP R 100 J 1/16W							
D1			RB501VM-40	DIODE							
D402-406			RSB12JS2	ZENER DIODE							
D420-422			1SS226-F	DIODE							
D601-604			RSB12JS2	ZENER DIODE							
D701			RSB12JS2	ZENER DIODE							

PLL UNIT (MAIN) (X50-3220-00)

C1			CK73GB1H102K	CHIP C 1000PF	K
C5			CC73GCH1H470J	CHIP C 47PF	J
C6 ,7			CC73GCH1H101J	CHIP C 100PF	J
C8			CK73GB1H102K	CHIP C 1000PF	K
C9			CC73GCH1H101J	CHIP C 100PF	J
C10			CK73GB1H102K	CHIP C 1000PF	K
C11 -13			CC73GCH1H101J	CHIP C 100PF	J
C14			CK73GB1H102K	CHIP C 1000PF	K
C15			CC73GCH1H101J	CHIP C 100PF	J
C16			CK73GB1H102K	CHIP C 1000PF	K

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C19			CK73GB1H104K	CHIP C 0.10UF K		C90			CC73GCH1H820J	CHIP C 82PF J	
C20			CK73GB1H102K	CHIP C 1000PF K		C91			CC73GCH1H0R5B	CHIP C 0.5PF B	
C21			CC73GCH1H101J	CHIP C 100PF J		C92			CC73GCH1H331J	CHIP C 330PF J	
C22			CK73GB1H472K	CHIP C 4700PF K		C93			CK73GB1H102K	CHIP C 1000PF K	
C23			CK73GB1H102K	CHIP C 1000PF K		C94			CK73GB1H104K	CHIP C 0.10UF K	
C24			CC73GCH1H101J	CHIP C 100PF J		C95			CC73GCH1H180J	CHIP C 18PF J	
C25			CK73FB1H153K	CHIP C 0.015UF K		C96			CK73GB1H103K	CHIP C 0.010UF K	
C26			CK73GB1H104K	CHIP C 0.10UF K		C97			CE32BM1C220M	CHIP EL 22UF 16WV	
C27			CE32BM1C220M	CHIP EL 22UF 16WV		C98			CC73GCH1H820J	CHIP C 82PF J	
C28			CS77BA1A100M	CHIP TNTL 10UF 10WV		C99			CK73GB1H103K	CHIP C 0.010UF K	
C29			CK73GB1H472K	CHIP C 4700PF K		C100			CC73GCH1H470J	CHIP C 47PF J	
C30			CK73GB1E105K	CHIP C 1.0UF K		C101			CK73GB1H103K	CHIP C 0.010UF K	
C31			CK73GB1C473K	CHIP C 0.047UF K		C102			CC73GCH1H180J	CHIP C 18PF J	
C32			CC73GCH1H101J	CHIP C 100PF J		C103			CC73GCH1H820J	CHIP C 82PF J	
C33			CK73FB1H153K	CHIP C 0.015UF K		C104			CC73GCH1H471J	CHIP C 470PF J	
C34			CK73GB1H102K	CHIP C 1000PF K		C106			CK73GB1H102K	CHIP C 1000PF K	
C35			CC73GCH1H471J	CHIP C 470PF J		C107			CK73EB1E106K	CHIP C 10UF K	
C36			CK73EB1E106K	CHIP C 10UF K		C108,109			CC73GCH1H270J	CHIP C 27PF J	
C37			CK73GB1H104K	CHIP C 0.10UF K		C110			CK73GB1H102K	CHIP C 1000PF K	
C38			CC73GCH1H060B	CHIP C 6.0PF B		C111			CC73GCH1H121J	CHIP C 120PF J	
C39			CC73GCH1H680J	CHIP C 68PF J		C112			CK73GB1H102K	CHIP C 1000PF K	
C40			CK73GB1H104K	CHIP C 0.10UF K		C113			CC73GCH1H221J	CHIP C 220PF J	
C41			CK73EB1E106K	CHIP C 10UF K		C114,115			CC73GCH1H101J	CHIP C 100PF J	
C43			CK73FB1H153K	CHIP C 0.015UF K		C116,117			CC73GCH1H150J	CHIP C 15PF J	
C44			CC73GCH1H120J	CHIP C 12PF J		C118			CK73GB1H104K	CHIP C 0.10UF K	
C45			CK73GB1H104K	CHIP C 0.10UF K		C119			CK73GB1H103K	CHIP C 0.010UF K	
C46			CK73EB1E106K	CHIP C 10UF K		C120			CC73GCH1H100C	CHIP C 10PF C	
C47			CK73GB1H104K	CHIP C 0.10UF K		C121			CK73GB1H104K	CHIP C 0.10UF K	
C48			CK73EB1E106K	CHIP C 10UF K		C122,123			CK73GB1H102K	CHIP C 1000PF K	
C49 -52			CK73GB1H104K	CHIP C 0.10UF K		C124			CK73FB0J106K	CHIP C 10UF K	
C54			CK73GB1H104K	CHIP C 0.10UF K		C125			CK73GB1H103K	CHIP C 0.010UF K	
C55			CC73GCH1H680J	CHIP C 68PF J		C126			CK73GB1H102K	CHIP C 1000PF K	
C56			CK73GB1H104K	CHIP C 0.10UF K		C127			CK73GB1E105K	CHIP C 1.0UF K	
C57			CC73GCH1H101J	CHIP C 100PF J		C128,129			CK73GB1H104K	CHIP C 0.10UF K	
C58 ,59			CK73GB1H103K	CHIP C 0.010UF K		C130-132			CK73EB1E106K	CHIP C 10UF K	
C60			CK73EB1E106K	CHIP C 10UF K		C133			CC73GCH1H220J	CHIP C 22PF J	
C61			CC73GCH1H090B	CHIP C 9.0PF B		C134			CC73GCH1H030B	CHIP C 3.0PF B	
C62			CK73GB1H104K	CHIP C 0.10UF K		C136			CC73GCH1H120J	CHIP C 12PF J	
C64			CC73GCH1H120G	CHIP C 12PF G		C137			CC73GCH1H560J	CHIP C 56PF J	
C65			CC73GCH1H040B	CHIP C 4.0PF B		C138			CK73GB1E105K	CHIP C 1.0UF K	
C66			CE32BM1C220M	CHIP EL 22UF 16WV		C139			CK73GB1H102K	CHIP C 1000PF K	
C67 ,68			CK73GB1H104K	CHIP C 0.10UF K		C140			CK73GB1H104K	CHIP C 0.10UF K	
C69			CC73GCH1H180J	CHIP C 18PF J		C141			CC73GCH1H100C	CHIP C 10PF C	
C70			CK73EB1E106K	CHIP C 10UF K		C142			CC73GCH1H471J	CHIP C 470PF J	
C71 ,72			CK73GB1H104K	CHIP C 0.10UF K		C143			CC73GCH1H100C	CHIP C 10PF C	
C73			CK73GB1H102K	CHIP C 1000PF K		C144,145			CK73GB1H104K	CHIP C 0.10UF K	
C74			CC73GCH1H050B	CHIP C 5.0PF B		C146			CC73GCH1H150J	CHIP C 15PF J	
C75			CK73GB1H103K	CHIP C 0.010UF K		C147			CC73GCH1H030B	CHIP C 3.0PF B	
C76			CC73GCH1H180J	CHIP C 18PF J		C148			CK73GB1H104K	CHIP C 0.10UF K	
C77			CK73GB1E105K	CHIP C 1.0UF K		C149			CK73GB1H102K	CHIP C 1000PF K	
C78			CC73GCH1H060B	CHIP C 6.0PF B		C150			CK73GB1H472K	CHIP C 4700PF K	
C79			CK73GB1H104K	CHIP C 0.10UF K		C151			CK73GB1H103K	CHIP C 0.010UF K	
C80			CK73GB1C473K	CHIP C 0.047UF K		C152			CK73GB1H104K	CHIP C 0.10UF K	
C81			CC73GCH1H060B	CHIP C 6.0PF B		C153			CC73GCH1H120J	CHIP C 12PF J	
C82			CC73GCH1H270J	CHIP C 27PF J		C155			CK73GB1H102K	CHIP C 1000PF K	
C83 -85			CK73GB1H104K	CHIP C 0.10UF K		C156			CK73GB1H104K	CHIP C 0.10UF K	
C86			CC73GCH1H270J	CHIP C 27PF J		C157			CC73GCH1H100C	CHIP C 10PF C	
C87			CK73GB1H102K	CHIP C 1000PF K		C158-160			CK73GB1H104K	CHIP C 0.10UF K	
C88			CK73GB1E105K	CHIP C 1.0UF K		C161			CK73GB1H102K	CHIP C 1000PF K	
C89			CK73GB1H104K	CHIP C 0.10UF K		C162			CK73GB1H104K	CHIP C 0.10UF K	

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C164			CK73GB1H104K	CHIP C 0.10UF K		C236			CK73GB1H103K	CHIP C 0.010UF K	
C165			CK73GB1H102K	CHIP C 1000PF K		C237			CC73GCH1H331J	CHIP C 330PF J	
C166			CC73GCH1H390J	CHIP C 39PF J		C238			CK73GB1H102K	CHIP C 1000PF K	
C167,168			CK73GB1H104K	CHIP C 0.10UF K		C239,240			CK73GB1H103K	CHIP C 0.010UF K	
C169			CC73GCH1H820J	CHIP C 82PF J		C241			CC73GCH1H470J	CHIP C 47PF J	
C170,171			CK73GB1H103K	CHIP C 0.010UF K		C242-245			CK73GB1H102K	CHIP C 1000PF K	
C172			CC73GCH1H680J	CHIP C 68PF J		C246			CC73GCH1H271J	CHIP C 270PF J	
C173			CK73GB1H104K	CHIP C 0.10UF K		C247			CK73GB1H102K	CHIP C 1000PF K	
C175			CK73GB1H223K	CHIP C 0.022UF K		C248,249			CC73GCH1H020B	CHIP C 2.0PF B	
C176			CK73GB1H104K	CHIP C 0.10UF K		C250			CK73EB1E106K	CHIP C 10UF K	
C177			CK73EB1E106K	CHIP C 10UF K		C251			CK73GB1H103K	CHIP C 0.010UF K	
C179			CK73GB1H103K	CHIP C 0.010UF K		C252			CK73EB1E106K	CHIP C 10UF K	
C180			CK73GB1H104K	CHIP C 0.10UF K		C253			CK73GB1H103K	CHIP C 0.010UF K	
C181,182			CK73GB1H103K	CHIP C 0.010UF K		C254			CC73GCH1H221J	CHIP C 220PF J	
C183,184			CK73GB1H104K	CHIP C 0.10UF K		C255			CK73GB1H104K	CHIP C 0.10UF K	
C185			C93-1906-05	PLASTIC FILM 0.047UF J		C256,257			CK73GB1H102K	CHIP C 1000PF K	
C186			CK73GB1H103K	CHIP C 0.010UF K		C258,259			CK73GB1H103K	CHIP C 0.010UF K	
C187			CK73GB1H104K	CHIP C 0.10UF K		C260			CC73GCH1H121J	CHIP C 120PF J	
C188			CK73GB1H103K	CHIP C 0.010UF K		C261			CK73GB1H104K	CHIP C 0.10UF K	
C189			CK73EB1E106K	CHIP C 10UF K		C262			CC73GCH1H221J	CHIP C 220PF J	
C190			CS77MA1D6R8M	CHIP TNTL 6.8UF 20WV		C263			CK73GB1H104K	CHIP C 0.10UF K	
C191,192			CC73GCH1H471J	CHIP C 470PF J		C264			CC73GCH1H391J	CHIP C 390PF J	
C193			CC73GCH1H330G	CHIP C 33PF G		C265			CE32BM1C101M	CHIP EL 100UF 16WV	
C194			CC73GCH1H060B	CHIP C 6.0PF B		C266			CK73GB1H104K	CHIP C 0.10UF K	
C195			CC73GCH1H330G	CHIP C 33PF G		C267,268			CC73GCH1H681J	CHIP C 680PF J	
C196			CC73GCH1H040B	CHIP C 4.0PF B		C269			CE32BM1C101M	CHIP EL 100UF 16WV	
C197			CK73GB1H103K	CHIP C 0.010UF K		C270			CC73GCH1H391J	CHIP C 390PF J	
C198			CC73GCH1H181J	CHIP C 180PF J		C271			CC73GCH1H100C	CHIP C 10PF C	
C199			CK73GB1H102K	CHIP C 1000PF K		C272			CK73GB1H102K	CHIP C 1000PF K	
C200			CS77MA1D6R8M	CHIP TNTL 6.8UF 20WV		C273			CK73GB1E105K	CHIP C 1.0UF K	
C201			CE32BM1C101M	CHIP EL 100UF 16WV		C274			CC73GCH1H120J	CHIP C 12PF J	
C202			CK73GB1H104K	CHIP C 0.10UF K		C275			CC73GCH1H220G	CHIP C 22PF G	
C203			CK73GB1H103K	CHIP C 0.010UF K		C276			CC73GCH1H060B	CHIP C 6.0PF B	
C205			CC73GCH1H100C	CHIP C 10PF C		C277			CC73GCH1H150G	CHIP C 15PF G	
C206			CC73GCH1H150G	CHIP C 15PF G		C278			CC73GCH1H120G	CHIP C 12PF G	
C207			CK73GB1H104K	CHIP C 0.10UF K		C279			CK73GB1H102K	CHIP C 1000PF K	
C208			CK73GB1H103K	CHIP C 0.010UF K		C280			CK73GB1H104K	CHIP C 0.10UF K	
C209			CC73GCH1H331J	CHIP C 330PF J		C281			CK73GB1H103K	CHIP C 0.010UF K	
C210			CC73GCH1H471J	CHIP C 470PF J		C282			CK73GB1H102K	CHIP C 1000PF K	
C211			CC73GCH1H270J	CHIP C 27PF J		C283			CK73GB1C473K	CHIP C 0.047UF K	
C212			CE32BM1C101M	CHIP EL 100UF 16WV		C284			CK73GB1H103K	CHIP C 0.010UF K	
C213			CK73GB1H104K	CHIP C 0.10UF K		C285			CC73GCH1H220G	CHIP C 22PF G	
C214			CK73GB1H103K	CHIP C 0.010UF K		C286			CC73GCH1H120G	CHIP C 12PF G	
C215			CC73GCH1H391J	CHIP C 390PF J		C287			CK73GB1H104K	CHIP C 0.10UF K	
C216,217			CC73GCH1H390G	CHIP C 39PF G		C288			CK73GB1H102K	CHIP C 1000PF K	
C218			CK73GB1H102K	CHIP C 1000PF K		C289			CK73GB1H472K	CHIP C 4700PF K	
C219			CK73FB0J106K	CHIP C 10UF K		C290,291			CK73GB1H104K	CHIP C 0.10UF K	
C220			CK73GB1H103K	CHIP C 0.010UF K		C292			CC73GCH1H330G	CHIP C 33PF G	
C221,222			CK73GB1E105K	CHIP C 1.0UF K		C293			CC73GCH1H390G	CHIP C 39PF G	
C223			CC73GCH1H030B	CHIP C 3.0PF B		C294,295			CK73GB1E105K	CHIP C 1.0UF K	
C224			CC73GCH1H181J	CHIP C 180PF J		C296			CC73GCH1H391J	CHIP C 390PF J	
C225			CC73GCH1H270J	CHIP C 27PF J		C297,298			CC73GCH1H180G	CHIP C 18PF G	
C226			CK73GB1H104K	CHIP C 0.10UF K		C299,300			CC73GCH1H150G	CHIP C 15PF G	
C227			CK73GB1H102K	CHIP C 1000PF K		C301			CC73GCH1H681J	CHIP C 680PF J	
C228			CK73GB1H103K	CHIP C 0.010UF K		C302			CK73GB1H102K	CHIP C 1000PF K	
C229,230			CC73GCH1H390G	CHIP C 39PF G		C304			CC73GCH1H391J	CHIP C 390PF J	
C231,232			CC73GCH1H330G	CHIP C 33PF G		C305			CK73GB1H472K	CHIP C 4700PF K	
C233			CS77MA1V0R1M	CHIP TNTL 0.1UF 35WV		C306			CK73GB1C473K	CHIP C 0.047UF K	
C234			CK73EB1E106K	CHIP C 10UF K		C307			CK73GB1H104K	CHIP C 0.10UF K	
C235			CK73GB1H104K	CHIP C 0.10UF K		C308-311			CK73GB1H102K	CHIP C 1000PF K	

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C312,313			CC73GCH1H020B	CHIP C 2.0PF B		C402			CC73GCH1H391J	CHIP C 390PF J	
C314,315			CK73EB1E106K	CHIP C 10UF K		C403			CK73GB1H103K	CHIP C 0.010UF K	
C316			CK73GB1H103K	CHIP C 0.010UF K		C405			CC73GCH1H681J	CHIP C 680PF J	
C317			CK73EB1E106K	CHIP C 10UF K		C406			CC73GCH1H221J	CHIP C 220PF J	
C318			CK73GB1H103K	CHIP C 0.010UF K		C408			CC73GCH1H331J	CHIP C 330PF J	
C319			CK73GB1H104K	CHIP C 0.10UF K		C409			CS77BA1A100M	CHIP TNTL 10UF 10WV	
C320-324			CK73GB1H103K	CHIP C 0.010UF K		C410			CC73GCH1H121J	CHIP C 120PF J	
C325,326			CK73GB1H102K	CHIP C 1000PF K		C411			CC73GCH1H681J	CHIP C 680PF J	
C327,328			CK73GB1H103K	CHIP C 0.010UF K		C412			CC73GCH1H471J	CHIP C 470PF J	
C329			CK73GB1H472K	CHIP C 4700PF K		C413,414			CK73GB1H103K	CHIP C 0.010UF K	
C330			CK73GB1H102K	CHIP C 1000PF K		C415			CC73GCH1H391J	CHIP C 390PF J	
C331,332			CK73GB1H103K	CHIP C 0.010UF K		C416			CC73GCH1H470J	CHIP C 47PF J	
C333			CC73GCH1H270J	CHIP C 27PF J		C417			CC73GCH1H561J	CHIP C 560PF J	
C334,335			CK73GB1H472K	CHIP C 4700PF K		C418			CC73GCH1H331J	CHIP C 330PF J	
C336			CK73GB1H102K	CHIP C 1000PF K		C419			CK73GB1H103K	CHIP C 0.010UF K	
C337			CC73GCH1H120J	CHIP C 12PF J		C420			CC73GCH1H821J	CHIP C 820PF J	
C338			CK73GB1H103K	CHIP C 0.010UF K		C421			CC73GCH1H470J	CHIP C 47PF J	
C339			CC73GCH1H101J	CHIP C 100PF J		C422			CC73GCH1H331J	CHIP C 330PF J	
C340			CC73GCH1H271J	CHIP C 270PF J		C423			CK73GB1E105K	CHIP C 1.0UF K	
C341			CC73GCH1H270J	CHIP C 27PF J		C424-427			CK73GB1H103K	CHIP C 0.010UF K	
C342			CK73GB1H102K	CHIP C 1000PF K		C428-431			CK73GB1H102K	CHIP C 1000PF K	
C343			CK73GB1H472K	CHIP C 4700PF K		C433-437			CK73GB1H103K	CHIP C 0.010UF K	
C344,345			CK73GB1H103K	CHIP C 0.010UF K		C438			CK73GB1E105K	CHIP C 1.0UF K	
C346			CK73GB1E105K	CHIP C 1.0UF K		C439-448			CK73GB1H103K	CHIP C 0.010UF K	
C347			CC73GCH1H101J	CHIP C 100PF J		C449			CK73GB1H104K	CHIP C 0.10UF K	
C348			CK73GB1H472K	CHIP C 4700PF K		C450			CK73GB1H103K	CHIP C 0.010UF K	
C349			CK73GB1H102K	CHIP C 1000PF K		C451			CK73GB1E105K	CHIP C 1.0UF K	
C351			CK73GB1H102K	CHIP C 1000PF K		C452,453			CK73GB1H103K	CHIP C 0.010UF K	
C352			CC73GCH1H331J	CHIP C 330PF J		C454			CK73GB1E105K	CHIP C 1.0UF K	
C353			CK73GB1E105K	CHIP C 1.0UF K		C455			CK73GB1H104K	CHIP C 0.10UF K	
C354,355			CK73GB1H103K	CHIP C 0.010UF K		C456-466			CK73GB1H103K	CHIP C 0.010UF K	
C356			CK73GB1H104K	CHIP C 0.10UF K		C467			CK73GB1H472K	CHIP C 4700PF K	
C357			CC73GCH1H331J	CHIP C 330PF J		C468			CK73GB1H102K	CHIP C 1000PF K	
C358			CC73GCH1H090B	CHIP C 9.0PF B		C469-471			CK73GB1H103K	CHIP C 0.010UF K	
C359			CK73GB1H104K	CHIP C 0.10UF K		C472			CC73GCH1H330J	CHIP C 33PF J	
C360-362			CK73GB1H103K	CHIP C 0.010UF K		C473			CC73GCH1H820J	CHIP C 82PF J	
C363			CE32BM1C220M	CHIP EL 22UF 16WV		C474			CC73GCH1H330J	CHIP C 33PF J	
C364			CK73GB1H103K	CHIP C 0.010UF K		C475			CC73GCH1H101J	CHIP C 100PF J	
C366			CK73GB1H104K	CHIP C 0.10UF K		C476			CK73GB1H103K	CHIP C 0.010UF K	
C367,368			CK73GB1H103K	CHIP C 0.010UF K		C477			CC73GCH1H680J	CHIP C 68PF J	
C369			CK73GB1E105K	CHIP C 1.0UF K		C478			CC73GCH1H820J	CHIP C 82PF J	
C370			CK73GB1H102K	CHIP C 1000PF K		C479			CC73GCH1H220J	CHIP C 22PF J	
C371,372			CK73GB1H103K	CHIP C 0.010UF K		C480			CC73GCH1H680J	CHIP C 68PF J	
C373-377			CK73GB1H102K	CHIP C 1000PF K		C482			CK73GB1H104K	CHIP C 0.10UF K	
C378-385			CK73GB1H103K	CHIP C 0.010UF K		C483			CK73GB1H102K	CHIP C 1000PF K	
C386			CK73GB1C473K	CHIP C 0.047UF K		C484			CC73GCH1H101J	CHIP C 100PF J	
C387			CK73GB1H102K	CHIP C 1000PF K		C485,486			CC73GCH1H680J	CHIP C 68PF J	
C388			CK73GB1C473K	CHIP C 0.047UF K		C487			CK73GB1H103K	CHIP C 0.010UF K	
C389			CK73GB1H102K	CHIP C 1000PF K		C488			CC73GCH1H220J	CHIP C 22PF J	
C390			CK73GB1C473K	CHIP C 0.047UF K		C489			CC73GCH1H121J	CHIP C 120PF J	
C391			CK73GB1H102K	CHIP C 1000PF K		C490			CC73GCH1H681J	CHIP C 680PF J	
C392			CK73GB1C473K	CHIP C 0.047UF K		C491			CC73GCH1H471J	CHIP C 470PF J	
C393			CK73GB1H102K	CHIP C 1000PF K		C492			CC73GCH1H331J	CHIP C 330PF J	
C394			CK73GB1E105K	CHIP C 1.0UF K		C493			CC73GCH1H151J	CHIP C 150PF J	
C395			CK73GB1C473K	CHIP C 0.047UF K		C494,495			CC73GCH1H181J	CHIP C 180PF J	
C396			CK73GB1H102K	CHIP C 1000PF K		C496			CC73GCH1H151J	CHIP C 150PF J	
C397			CK73GB1H104K	CHIP C 0.10UF K		C497			CC73GCH1H680J	CHIP C 68PF J	
C399			CC73GCH1H821J	CHIP C 820PF J		C498			CC73GCH1H821J	CHIP C 820PF J	
C400			CC73GCH1H471J	CHIP C 470PF J		C499			CC73GCH1H561J	CHIP C 560PF J	
C401			CC73GCH1H561J	CHIP C 560PF J		C500			CC73GCH1H391J	CHIP C 390PF J	

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C501,502			CC73GCH1H561J	CHIP C 560PF J		C572			CC73GCH1H270J	CHIP C 27PF J	
C503			CC73GCH1H331J	CHIP C 330PF J		C573			CC73GCH1H090B	CHIP C 9.0PF B	
C504			CC73GCH1H181J	CHIP C 180PF J		C574			CC73GCH1H100C	CHIP C 10PF C	
C505			CC73GCH1H120J	CHIP C 12PF J		C575			CC73GCH1H330J	CHIP C 33PF J	
C506			CC73GCH1H680J	CHIP C 68PF J		C576			CC73GCH1H270J	CHIP C 27PF J	
C507			CK73GB1H103K	CHIP C 0.010UF K		C577			CK73GB1H103K	CHIP C 0.010UF K	
C508			CC73GCH1H680J	CHIP C 68PF J		C578,579			CC73GCH1H181J	CHIP C 180PF J	
C509			CC73GCH1H221J	CHIP C 220PF J		C580			CC73GCH1H121J	CHIP C 120PF J	
C510			CK73GB1H104K	CHIP C 0.10UF K		C581			CC73GCH1H151J	CHIP C 150PF J	
C511			CC73GCH1H271J	CHIP C 270PF J		C582			CC73GCH1H181J	CHIP C 180PF J	
C512			CC73GCH1H221J	CHIP C 220PF J		C583			CC73GCH1H101J	CHIP C 100PF J	
C513			CC73GCH1H121J	CHIP C 120PF J		C584			CC73GCH1H820J	CHIP C 82PF J	
C514-516			CC73GCH1H820J	CHIP C 82PF J		C585			CK73GB1H102K	CHIP C 1000PF K	
C517			CC73GCH1H560J	CHIP C 56PF J		C586			CC73GCH1H181J	CHIP C 180PF J	
C518			CC73GCH1H120J	CHIP C 12PF J		C587			CC73GCH1H390J	CHIP C 39PF J	
C519			CK73GB1H103K	CHIP C 0.010UF K		C588			CC73GCH1H330J	CHIP C 33PF J	
C520			CK73GB1H102K	CHIP C 1000PF K		C589			CC73GCH1H220J	CHIP C 22PF J	
C521			CC73GCH1H821J	CHIP C 820PF J		C590			CC73GCH1H470J	CHIP C 47PF J	
C522			CC73GCH1H471J	CHIP C 470PF J		C591			CC73GCH1H560J	CHIP C 56PF J	
C523,524			CC73GCH1H681J	CHIP C 680PF J		C592			CC73GCH1H330J	CHIP C 33PF J	
C525			CC73GCH1H331J	CHIP C 330PF J		C593			CC73GCH1H180J	CHIP C 18PF J	
C526			CC73GCH1H271J	CHIP C 270PF J		C594			CK73EB1E106K	CHIP C 10UF K	
C527			CK73EB1E106K	CHIP C 10UF K		C595			CK73GB1C473K	CHIP C 0.047UF K	
C528			CC73GCH1H121J	CHIP C 120PF J		C596			CC73GCH1H331J	CHIP C 330PF J	
C529			CK73GB1H472K	CHIP C 4700PF K		C597			CC73GCH1H271J	CHIP C 270PF J	
C530			CC73GCH1H271J	CHIP C 270PF J		C598			CC73GCH1H181J	CHIP C 180PF J	
C531			CC73GCH1H181J	CHIP C 180PF J		C599,600			CC73GCH1H121J	CHIP C 120PF J	
C532			CC73GCH1H121J	CHIP C 120PF J		C601			CC73GCH1H101J	CHIP C 100PF J	
C533-535			CC73GCH1H820J	CHIP C 82PF J		C602			CC73GCH1H820J	CHIP C 82PF J	
C536			CC73GCH1H560J	CHIP C 56PF J		C604			CC73GCH1H271J	CHIP C 270PF J	
C537-540			CK73GB1H103K	CHIP C 0.010UF K		C605			CC73GCH1H221J	CHIP C 220PF J	
C541			CK73GB1H102K	CHIP C 1000PF K		C606			CC73GCH1H151J	CHIP C 150PF J	
C542			CC73GCH1H821J	CHIP C 820PF J		C607			CC73GCH1H101J	CHIP C 100PF J	
C543			CC73GCH1H471J	CHIP C 470PF J		C608			CC73GCH1H330J	CHIP C 33PF J	
C544,545			CC73GCH1H561J	CHIP C 560PF J		C609			CC73GCH1H820J	CHIP C 82PF J	
C546			CC73GCH1H331J	CHIP C 330PF J		C610			CC73GCH1H330J	CHIP C 33PF J	
C547			CC73GCH1H271J	CHIP C 270PF J		C611			CC73GCH1H180J	CHIP C 18PF J	
C548			CK73GB1H103K	CHIP C 0.010UF K		C612			CC73GCH1H220J	CHIP C 22PF J	
C550			CK73GB1H103K	CHIP C 0.010UF K		C613			CC73GCH1H271J	CHIP C 270PF J	
C551			CC73GCH1H271J	CHIP C 270PF J		C614			CC73GCH1H331J	CHIP C 330PF J	
C552			CC73GCH1H221J	CHIP C 220PF J		C615			CC73GCH1H221J	CHIP C 220PF J	
C553			CC73GCH1H121J	CHIP C 120PF J		C616			CC73GCH1H181J	CHIP C 180PF J	
C554			CC73GCH1H151J	CHIP C 150PF J		C617			CC73GCH1H121J	CHIP C 120PF J	
C555			CC73GCH1H181J	CHIP C 180PF J		C618			CC73GCH1H151J	CHIP C 150PF J	
C556			CC73GCH1H820J	CHIP C 82PF J		C619			CC73GCH1H101J	CHIP C 100PF J	
C557			CC73GCH1H560J	CHIP C 56PF J		C620			CC73GCH1H820J	CHIP C 82PF J	
C558			CC73GCH1H821J	CHIP C 820PF J		C622			CK73GB1H102K	CHIP C 1000PF K	
C559			CC73GCH1H561J	CHIP C 560PF J		C623			CC73GCH1H181J	CHIP C 180PF J	
C560			CC73GCH1H391J	CHIP C 390PF J		C624,625			CC73GCH1H121J	CHIP C 120PF J	
C561			CC73GCH1H331J	CHIP C 330PF J		C626			CC73GCH1H820J	CHIP C 82PF J	
C562			CC73GCH1H181J	CHIP C 180PF J		C627			CC73GCH1H100C	CHIP C 10PF C	
C563			CK73GB1H103K	CHIP C 0.010UF K		C628,629			CC73GCH1H330J	CHIP C 33PF J	
C564			CC73GCH1H681J	CHIP C 680PF J		C630			CC73GCH1H270J	CHIP C 27PF J	
C565			CC73GCH1H471J	CHIP C 470PF J		C631			CC73GCH1H220J	CHIP C 22PF J	
C566			CC73GCH1H331J	CHIP C 330PF J		C632			CC73GCH1H181J	CHIP C 180PF J	
C567			CC73GCH1H181J	CHIP C 180PF J		C633			CC73GCH1H270J	CHIP C 27PF J	
C568			CC73GCH1H151J	CHIP C 150PF J		C634			CC73GCH1H101J	CHIP C 100PF J	
C569			CC73GCH1H101J	CHIP C 100PF J		C635			CC73GCH1H680J	CHIP C 68PF J	
C570			CC73GCH1H121J	CHIP C 120PF J		C636			CC73GCH1H101J	CHIP C 100PF J	
C571			CC73GCH1H470J	CHIP C 47PF J		C637			CC73GCH1H470J	CHIP C 47PF J	

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C638			CC73GCH1H270J	CHIP C 27PF J		L26			L41-3388-08	SMALL FIXED INDUCTOR(330NH)	
C640			CK73GB1H102K	CHIP C 1000PF K		L27			L41-1285-14	SMALL FIXED INDUCTOR(120NH)	
C641-647			CK73GB1H103K	CHIP C 0.010UF K		L28			L41-1885-14	SMALL FIXED INDUCTOR(180NH)	
C650-653			CK73GB1H103K	CHIP C 0.010UF K		L29			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)	
C656-658			CC73GCH1H680J	CHIP C 68PF J		L30			L41-1885-14	SMALL FIXED INDUCTOR(180NH)	
C660-662			CK73GB1H103K	CHIP C 0.010UF K		L32			L41-1285-14	SMALL FIXED INDUCTOR(120NH)	
C664-666			CC73GCH1H680J	CHIP C 68PF J		L33			L41-5685-33	SMALL FIXED INDUCTOR(0.56UH)	
C667-669			CK73GB1H104K	CHIP C 0.10UF K		L34			L40-3375-92	SMALL FIXED INDUCTOR(33NH)	
C670-672			CC73GCH1H220J	CHIP C 22PF J		L36			L41-2285-33	SMALL FIXED INDUCTOR(0.22UH)	
C674-676			CC73GCH1H101J	CHIP C 100PF J		L37			L41-1275-08	SMALL FIXED INDUCTOR(12NH)	
C680-682			CC73GCH1H820J	CHIP C 82PF J		L38			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
C683,684			C93-1803-05	CHIP C 10UF M		L39			L41-3305-33	SMALL FIXED INDUCTOR(33UH)	
C685-687			CC73GCH1H330J	CHIP C 33PF J		L40			L41-3363-08	SMALL FIXED INDUCTOR(3.3NH)	
C689,690			CC73GCH1H010B	CHIP C 1.0PF B		L41			L41-6865-08	SMALL FIXED INDUCTOR(6.8NH)	
C692			CC73GCH1H100C	CHIP C 10PF C		L42			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
C693			CC73GCH1H010B	CHIP C 1.0PF B		L45			L41-3391-08	SMALL FIXED INDUCTOR(3.3NH)	
C694,695			CK73EB1E106K	CHIP C 10UF K		L46			L41-1275-08	SMALL FIXED INDUCTOR(12NH)	
C696			CE32BM1C220M	CHIP EL 22UF 16WV		L47			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C697			CK73GB1H103K	CHIP C 0.010UF K		L48			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
C698,699			CK73GB1H102K	CHIP C 1000PF K		L49			L41-3395-33	SMALL FIXED INDUCTOR(3.3UH)	
C700			CK73GB1E105K	CHIP C 1.0UF K		L50			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)	
C710			CC73GCH1H100C	CHIP C 10PF C		L51			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
C711			CC73GCH1H390J	CHIP C 39PF J		L52			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C712			CC73GCH1H560J	CHIP C 56PF J		L53 ,54			L41-2798-60	SMALL FIXED INDUCTOR(2.7UH)	
C713,714			CK73GB1E105K	CHIP C 1.0UF K		L55			L41-1085-08	SMALL FIXED INDUCTOR(100NH)	
C715			CK73GB1H103K	CHIP C 0.010UF K		L56			L41-6888-08	SMALL FIXED INDUCTOR(680NH)	
C716			CK73GB1E105K	CHIP C 1.0UF K		L57			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C717			CK73GB1H103K	CHIP C 0.010UF K		L58			L34-4613-05	AIR-CORE COIL(7T)	
C718			CK73GB1E105K	CHIP C 1.0UF K		L59			L34-4612-05	AIR-CORE COIL(6T)	
C719			CC73GCH1H221J	CHIP C 220PF J		L60			L41-4778-08	SMALL FIXED INDUCTOR(47NH)	
C720			CC73GCH1H331J	CHIP C 330PF J		L61			L41-3305-33	SMALL FIXED INDUCTOR(33UH)	
C721,722			C93-1803-05	CHIP C 10UF M		L62			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
C723			CC73GCH1H271J	CHIP C 270PF J		L63			L41-6888-08	SMALL FIXED INDUCTOR(680NH)	
TC1 -5			C05-0384-05	CERAMIC TRIMMER CAPACITOR(10P)		L64			L41-1085-08	SMALL FIXED INDUCTOR(100NH)	
CN1			E40-6907-05	FLAT CABLE CONNECTOR		L65 -68			L41-1598-60	SMALL FIXED INDUCTOR(1.5UH)	
CN19-22			E04-0491-05	PIN SOCKET		L69			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)	
CN33			E04-0491-05	PIN SOCKET		L70			L41-5685-33	SMALL FIXED INDUCTOR(0.56UH)	
CN34			E41-1684-05	PIN ASSY		L71 ,72			L41-1295-33	SMALL FIXED INDUCTOR(1.2UH)	
CN50-52			E23-1330-05	TERMINAL		L73			L41-3305-33	SMALL FIXED INDUCTOR(33UH)	
CF1			L72-1026-05	CERAMIC FILTER		L74			L41-1295-33	SMALL FIXED INDUCTOR(1.2UH)	
L6			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L75 ,76			L41-2298-60	SMALL FIXED INDUCTOR(2.2UH)	
L8			L41-3375-33	SMALL FIXED INDUCTOR(0.033UH)		L78			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L9			L92-0639-05	CHIP FERRITE		L79			L41-2205-33	SMALL FIXED INDUCTOR(22UH)	
L10			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L80			L34-4611-15	AIR-CORE COIL(10T)	
L11			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L81			L34-4610-15	AIR-CORE COIL(9T)	
L12			L41-1575-06	SMALL FIXED INDUCTOR(15NH)		L84			L41-1295-33	SMALL FIXED INDUCTOR(1.2UH)	
L13			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L85			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L14			L41-1575-06	SMALL FIXED INDUCTOR(15NH)		L86			L41-1295-33	SMALL FIXED INDUCTOR(1.2UH)	
L15			L33-0695-05	SMALL FIXED INDUCTOR(1MH)		L87 -90			L41-1598-60	SMALL FIXED INDUCTOR(1.5UH)	
L16			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L91			L41-3305-33	SMALL FIXED INDUCTOR(33UH)	
L17			L41-2285-33	SMALL FIXED INDUCTOR(0.22UH)		L92			L41-5685-14	SMALL FIXED INDUCTOR(560NH)	
L18			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L93			L41-3975-33	SMALL FIXED INDUCTOR(0.039UH)	
L19			L41-2785-09	SMALL FIXED INDUCTOR(270NH)		L94 -96			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L20			L41-3388-08	SMALL FIXED INDUCTOR(330NH)		L97 ,98			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L21			L41-2785-33	SMALL FIXED INDUCTOR(0.27UH)		L99			L41-8285-33	SMALL FIXED INDUCTOR(0.82UH)	
L22			L34-4606-15	AIR-CORE COIL		L100			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L23			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L101,102			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L24			L41-3388-08	SMALL FIXED INDUCTOR(330NH)		L103			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)	
L25			L39-1480-15	TOROIDAL COIL		L105,106			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
						L108			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L110-112			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L175			L41-2285-14	SMALL FIXED INDUCTOR(220NH)	
L114			L41-2298-60	SMALL FIXED INDUCTOR(2.2UH)		L176			L41-2785-14	SMALL FIXED INDUCTOR(270NH)	
L115			L40-1088-67	SMALL FIXED INDUCTOR(100NH)		L177			L41-2285-14	SMALL FIXED INDUCTOR(220NH)	
L116			L41-1895-09	SMALL FIXED INDUCTOR(1800NH)		L178			L41-1885-14	SMALL FIXED INDUCTOR(180NH)	
L117			L41-5685-33	SMALL FIXED INDUCTOR(0.56UH)		L179			L41-8275-33	SMALL FIXED INDUCTOR(0.082UH)	
L118			L41-1895-09	SMALL FIXED INDUCTOR(1800NH)		L180			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)	
L119			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)		L181			L41-4785-14	SMALL FIXED INDUCTOR(470NH)	
L120			L41-2298-60	SMALL FIXED INDUCTOR(2.2UH)		L182			L41-3988-14	SMALL FIXED INDUCTOR(390NH)	
L121			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)		L183			L41-2785-14	SMALL FIXED INDUCTOR(270NH)	
L122			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)		L184			L41-1885-14	SMALL FIXED INDUCTOR(180NH)	
L123			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L185,186			L41-2285-14	SMALL FIXED INDUCTOR(220NH)	
L124,125			L41-1598-60	SMALL FIXED INDUCTOR(1.5UH)		L187			L41-1885-14	SMALL FIXED INDUCTOR(180NH)	
L126			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L188			L41-5675-33	SMALL FIXED INDUCTOR(0.056UH)	
L127			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L189			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
L128			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)		L190			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)	
L129			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L191			L41-6885-14	SMALL FIXED INDUCTOR(680NH)	
L130			L41-1885-33	SMALL FIXED INDUCTOR(0.18UH)		L192			L41-3988-14	SMALL FIXED INDUCTOR(390NH)	
L131			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)		L193-195			L41-2785-14	SMALL FIXED INDUCTOR(270NH)	
L132			L41-1885-33	SMALL FIXED INDUCTOR(0.18UH)		L196			L41-1885-14	SMALL FIXED INDUCTOR(180NH)	
L133			L41-2285-33	SMALL FIXED INDUCTOR(0.22UH)		L197			L41-1285-14	SMALL FIXED INDUCTOR(120NH)	
L134			L41-3985-33	SMALL FIXED INDUCTOR(0.39UH)		L198			L41-8275-33	SMALL FIXED INDUCTOR(0.082UH)	
L135			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L200			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)	
L136			L41-8285-14	SMALL FIXED INDUCTOR(820NH)		L204-206			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L137			L41-5685-14	SMALL FIXED INDUCTOR(560NH)		L207			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)	
L138			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		L210-212			L41-1885-33	SMALL FIXED INDUCTOR(0.18UH)	
L139			L41-3988-14	SMALL FIXED INDUCTOR(390NH)		L213-215			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	
L140			L41-3385-14	SMALL FIXED INDUCTOR(330NH)		L217			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)	
L141			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		L219			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L142			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L220			L41-5685-14	SMALL FIXED INDUCTOR(560NH)	
L143			L41-3985-33	SMALL FIXED INDUCTOR(0.39UH)		L221			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L144			L41-8285-14	SMALL FIXED INDUCTOR(820NH)		L222			L41-8285-14	SMALL FIXED INDUCTOR(820NH)	
L145			L41-5685-14	SMALL FIXED INDUCTOR(560NH)		X1			L77-3083-05	TCXO(19.2MHZ)	
L146			L41-3988-14	SMALL FIXED INDUCTOR(390NH)		X2			L77-3068-05	VCXO(20MHZ)	
L147			L41-2285-14	SMALL FIXED INDUCTOR(220NH)		R1 -9			RK73GB2A101J	CHIP R 100 J 1/10W	
L148,149			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		R10			RK73GB2A000J	CHIP R 0 J 1/10W	
L150			L41-1885-14	SMALL FIXED INDUCTOR(180NH)		R11			RK73GB2A180J	CHIP R 18 J 1/10W	
L151			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		R12			RK73GB2A000J	CHIP R 0 J 1/10W	
L152			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		R13			RK73GB2A101J	CHIP R 100 J 1/10W	
L153			L41-8285-14	SMALL FIXED INDUCTOR(820NH)		R14			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L154			L41-5685-14	SMALL FIXED INDUCTOR(560NH)		R15 ,16			RK73GB2A470J	CHIP R 47 J 1/10W	
L155			L41-3988-14	SMALL FIXED INDUCTOR(390NH)		R17			RK73GB2A153J	CHIP R 15K J 1/10W	
L156			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		R18			RK73GB2A682J	CHIP R 6.8K J 1/10W	
L157			L41-3988-14	SMALL FIXED INDUCTOR(390NH)		R21			RK73GB2A000J	CHIP R 0 J 1/10W	
L158			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		R22			RK73GB2A152J	CHIP R 1.5K J 1/10W	
L159			L41-1885-14	SMALL FIXED INDUCTOR(180NH)		R23			RK73GB2A101J	CHIP R 100 J 1/10W	
L160			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		R24			RK73GB2A000J	CHIP R 0 J 1/10W	
L161			L41-8285-14	SMALL FIXED INDUCTOR(820NH)		R25 ,26			RK73GB2A153J	CHIP R 15K J 1/10W	
L162			L41-5685-14	SMALL FIXED INDUCTOR(560NH)		R27			RK73GB2A101J	CHIP R 100 J 1/10W	
L163			L41-3385-14	SMALL FIXED INDUCTOR(330NH)		R28			RK73GB2A221J	CHIP R 220 J 1/10W	
L164			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		R29			RK73GB2A000J	CHIP R 0 J 1/10W	
L165			L39-1480-15	TOROIDAL COIL		R30			RK73GB2A221J	CHIP R 220 J 1/10W	
L166			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		R32			RK73GB2A271J	CHIP R 270 J 1/10W	
L167			L41-3988-14	SMALL FIXED INDUCTOR(390NH)		R33			RK73GB2A103J	CHIP R 10K J 1/10W	
L168			L41-1885-14	SMALL FIXED INDUCTOR(180NH)		R34			RK73GB2A000J	CHIP R 0 J 1/10W	
L169			L41-1285-14	SMALL FIXED INDUCTOR(120NH)		R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L170			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		R36			RK73GB2A000J	CHIP R 0 J 1/10W	
L171			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)		R37			RK73GB2A180J	CHIP R 18 J 1/10W	
L172			L41-6885-14	SMALL FIXED INDUCTOR(680NH)		R38			RK73GB2A101J	CHIP R 100 J 1/10W	
L173			L41-5685-14	SMALL FIXED INDUCTOR(560NH)		R39			RK73GB2A123J	CHIP R 12K J 1/10W	
L174			L41-3988-14	SMALL FIXED INDUCTOR(390NH)							

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R43			RK73GB2A000J	CHIP R 0 J 1/10W		R118			RK73GB2A821J	CHIP R 820 J 1/10W	
R45			RK73GB2A821J	CHIP R 0 J 1/10W		R119,120			RK73GB2A102J	CHIP R 10K J 1/10W	
R46			RK73GB2A000J	CHIP R 150 J 1/10W		R121			RK73GB2A103J	CHIP R 10 J 1/10W	
R47 ,48			RK73GB2A151J	CHIP R 100 J 1/10W		R122			RK73GB2A100J	CHIP R 10K J 1/10W	
R49 -51			RK73GB2A101J	CHIP R 100 J 1/10W		R123			RK73GB2A103J	CHIP R 10 J 1/10W	
R52			RK73GB2A103J	CHIP R 100 J 1/10W		R124			RK73GB2A391J	CHIP R 390 J 1/10W	
R53 ,54			RK73GB2A101J	CHIP R 1.0K J 1/10W		R125,126			RK73GB2A153J	CHIP R 15K J 1/10W	
R55			RK73GB2A102J	CHIP R 220 D 1/16W		R127			RK73GB2A120J	CHIP R 12 J 1/10W	
R56			RN73GE1J221D	CHIP R 100 J 1/10W		R128			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R57			RK73GB2A101J	CHIP R 0 J 1/10W		R129			RK73GB2A391J	CHIP R 390 J 1/10W	
R58 ,59			RK73GB2A000J	CHIP R 10 J 1/10W		R130,131			RK73GB2A000J	CHIP R 0 J 1/10W	
R60			RK73GB2A100J	CHIP R 120K J 1/10W		R132			RK73GB2A564J	CHIP R 560K J 1/10W	
R61			RK73GB2A124J	CHIP R 0 J 1/10W		R133			RK73GH2A154D	CHIP R 150K D 1/10W	
R62			RK73GB2A000J	CHIP R 3.9K J 1/10W		R134			RK73GB2A101J	CHIP R 100 J 1/10W	
R63			RK73GB2A392J	CHIP R 100 J 1/10W		R135			RK73GB2A000J	CHIP R 0 J 1/10W	
R64 ,65			RK73GB2A101J	CHIP R 220 J 1/10W		R136			RK73GB2A104J	CHIP R 100K J 1/10W	
R66 ,67			RK73GB2A221J	CHIP R 47 J 1/10W		R137,138			RK73GB2A101J	CHIP R 100 J 1/10W	
R68			RK73GB2A470J	CHIP R 150 D 1/16W		R139			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R69			RN73GE1J151D	CHIP R 1.0K J 1/10W		R140			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R70			RK73GB2A102J	CHIP R 18 J 1/10W		R141			RK73GB2A104J	CHIP R 100K J 1/10W	
R71			RK73GB2A180J	CHIP R 0 J 1/10W		R142			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R73			RK73GB2A000J	CHIP R 0 J 1/10W		R143			RK73GH2A393D	CHIP R 39K D 1/10W	
R75			RK73GB2A000J	CHIP R 1.0K J 1/10W		R144			RK73GB2A101J	CHIP R 100 J 1/10W	
R76			RK73GB2A102J	CHIP R 47K J 1/10W		R145			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R77			RK73GB2A473J	CHIP R 100 J 1/10W		R146			RK73GB2A101J	CHIP R 100 J 1/10W	
R78			RK73GB2A101J	CHIP R 27K J 1/10W		R147,148			RK73GB2A000J	CHIP R 0 J 1/10W	
R79			RK73GB2A273J	CHIP R 39K J 1/10W		R149			RK73GB2A101J	CHIP R 100 J 1/10W	
R80			RK73GB2A393J	CHIP R 1.0K J 1/10W		R150			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R82			RK73GB2A102J	CHIP R 0 J 1/10W		R151			RK73GB2A101J	CHIP R 100 J 1/10W	
R83			RK73GB2A000J	CHIP R 100 J 1/10W		R152			RK73GB2A104J	CHIP R 100K J 1/10W	
R84 ,85			RK73GB2A101J	CHIP R 330 J 1/10W		R153,154			RK73GB2A101J	CHIP R 100 J 1/10W	
R86			RK73GB2A331J	CHIP R 68 J 1/10W		R157			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R87			RK73GB2A680J	CHIP R 100 J 1/10W		R158			RK73GB2A153J	CHIP R 15K J 1/10W	
R88 ,89			RK73GB2A101J	CHIP R 100 J 1/10W		R159			RK73GB2A103J	CHIP R 10K J 1/10W	
R90			RK73GB2A102J	CHIP R 1.0K J 1/10W		R160			RK73GB2A000J	CHIP R 0 J 1/10W	
R91			RK73GB2A000J	CHIP R 0 J 1/10W		R161			RK73GB2A474J	CHIP R 470K J 1/10W	
R92 ,93			RK73GB2A153J	CHIP R 15K J 1/10W		R162			RK73GB2A104J	CHIP R 100K J 1/10W	
R94			RK73GB2A000J	CHIP R 0 J 1/10W		R163			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R95			RK73GB2A103J	CHIP R 10K J 1/10W		R164			RK73GB2A151J	CHIP R 150 J 1/10W	
R96			RK73GB2A000J	CHIP R 0 J 1/10W		R165,166			RK73GB2A000J	CHIP R 0 J 1/10W	
R97			RN73GH1J333D	CHIP R 33K D 1/16W		R167			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R98			RK73GB2A470J	CHIP R 47 J 1/10W		R168			RK73GB2A121J	CHIP R 120 J 1/10W	
R99			RK73GB2A100J	CHIP R 10 J 1/10W		R169,170			RN73GH1J103D	CHIP R 10K D 1/16W	
R100			RK73GB2A102J	CHIP R 1.0K J 1/10W		R171			RK73GB2A331J	CHIP R 330 J 1/10W	
R101			RK73GB2A333J	CHIP R 33K J 1/10W		R172			RK73GB2A101J	CHIP R 100 J 1/10W	
R102			RK73GB2A223J	CHIP R 22K J 1/10W		R173			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R103			RK73GB2A822J	CHIP R 8.2K J 1/10W		R174			RN73GH1J272D	CHIP R 2.7K D 1/16W	
R104			RK73GB2A683J	CHIP R 68K J 1/10W		R175			RK73GB2A000J	CHIP R 0 J 1/10W	
R106			RK73GB2A473J	CHIP R 47K J 1/10W		R176			RK73GB2A474J	CHIP R 470K J 1/10W	
R107			RK73GB2A470J	CHIP R 47 J 1/10W		R177			RK73GB2A000J	CHIP R 0 J 1/10W	
R108			RK73GB2A101J	CHIP R 100 J 1/10W		R178			RK73GB2A104J	CHIP R 100K J 1/10W	
R109			RK73GB2A180J	CHIP R 18 J 1/10W		R179			RK73GB2A101J	CHIP R 100 J 1/10W	
R110			RK73GB2A181J	CHIP R 180 J 1/10W		R180			RK73GB2A121J	CHIP R 120 J 1/10W	
R111			RK73GB2A180J	CHIP R 18 J 1/10W		R181,182			RK73GB2A000J	CHIP R 0 J 1/10W	
R112			RK73GB2A561J	CHIP R 560 J 1/10W		R183			RK73GB2A100J	CHIP R 10 J 1/10W	
R113			RK73GB2A000J	CHIP R 0 J 1/10W		R184			RK73GB2A471J	CHIP R 470 J 1/10W	
R114			RK73GB2A100J	CHIP R 10 J 1/10W		R185			RK73GB2A560J	CHIP R 56 J 1/10W	
R115			RK73GB2A181J	CHIP R 180 J 1/10W		R186			RK73GB2A104J	CHIP R 100K J 1/10W	
R116			RK73GB2A104J	CHIP R 100K J 1/10W		R187			RK73GB2A121J	CHIP R 120 J 1/10W	
R117			RK73GB2A471J	CHIP R 470 J 1/10W		R188,189			RN73GE1J391D	CHIP R 390 D 1/16W	

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R190			RK73GB2A470J	CHIP R 47 J 1/10W		R268			RK73GB2A560J	CHIP R 56 J 1/10W	
R191,192			RK73GB2A102J	CHIP R 1.0K J 1/10W		R269			RK73GB2A221J	CHIP R 220 J 1/10W	
R193			RK73GB2A560J	CHIP R 56 J 1/10W		R270			RK73GB2A560J	CHIP R 56 J 1/10W	
R194,195			RK73GB2A000J	CHIP R 0 J 1/10W		R271,272			RK73GB2A100J	CHIP R 10 J 1/10W	
R196			RK73GB2A470J	CHIP R 47 J 1/10W		R273			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R197			RK73GB2A153J	CHIP R 15K J 1/10W		R274			RK73GB2A000J	CHIP R 0 J 1/10W	
R198			RK73GB2A104J	CHIP R 100K J 1/10W		R275			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R199			RK73GB2A102J	CHIP R 1.0K J 1/10W		R276			RK73GB2A471J	CHIP R 470 J 1/10W	
R200			RK73GB2A104J	CHIP R 100K J 1/10W		R277			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R201			RK73GB2A102J	CHIP R 1.0K J 1/10W		R278			RK73GB2A471J	CHIP R 470 J 1/10W	
R202,203			RK73GB2A000J	CHIP R 0 J 1/10W		R279			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R204,205			RK73GB2A101J	CHIP R 100 J 1/10W		R280			RK73GB2A471J	CHIP R 470 J 1/10W	
R206			RK73GB2A331J	CHIP R 330 J 1/10W		R281,282			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R207			RK73GB2A101J	CHIP R 100 J 1/10W		R283			RK73GB2A101J	CHIP R 100 J 1/10W	
R208			RK73GB2A331J	CHIP R 330 J 1/10W		R284			RK73GB2A103J	CHIP R 10K J 1/10W	
R209			RK73GB2A102J	CHIP R 1.0K J 1/10W		R285-289			RK73GB2A821J	CHIP R 820 J 1/10W	
R210			RK73GB2A560J	CHIP R 56 J 1/10W		R290,291			RK73GB2A101J	CHIP R 100 J 1/10W	
R211			RK73GB2A682J	CHIP R 6.8K J 1/10W		R292			RK73GB2A821J	CHIP R 820 J 1/10W	
R212			RK73GB2A332J	CHIP R 3.3K J 1/10W		R293			RK73GB2A101J	CHIP R 100 J 1/10W	
R214			RK73GB2A820J	CHIP R 82 J 1/10W		R294			RK73GB2A821J	CHIP R 820 J 1/10W	
R215			RK73GB2A472J	CHIP R 4.7K J 1/10W		R295			RK73GB2A101J	CHIP R 100 J 1/10W	
R216			RK73GB2A100J	CHIP R 10 J 1/10W		R296			RK73GB2A821J	CHIP R 820 J 1/10W	
R217			RK73GB2A561J	CHIP R 560 J 1/10W		R297			RK73GB2A101J	CHIP R 100 J 1/10W	
R218			RK73GB2A471J	CHIP R 470 J 1/10W		R298			RK73GB2A821J	CHIP R 820 J 1/10W	
R219			RK73GB2A101J	CHIP R 100 J 1/10W		R299			RK73GB2A101J	CHIP R 100 J 1/10W	
R220			RK73GB2A560J	CHIP R 56 J 1/10W		R300			RK73GB2A821J	CHIP R 820 J 1/10W	
R221			RK73GB2A151J	CHIP R 150 J 1/10W		R301,302			RK73GB2A101J	CHIP R 100 J 1/10W	
R222,223			RN73GH1J103D	CHIP R 10K D 1/16W		R303			RK73GB2A821J	CHIP R 820 J 1/10W	
R224			RK73GB2A470J	CHIP R 47 J 1/10W		R305			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R225			RK73GB2A153J	CHIP R 15K J 1/10W		R306			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R226			RK73GB2A682J	CHIP R 6.8K J 1/10W		R307			RK73GB2A000J	CHIP R 0 J 1/10W	
R227,228			RK73GB2A000J	CHIP R 0 J 1/10W		R308			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R229-232			RK73GB2A101J	CHIP R 100 J 1/10W		R309			RN73GH1J392D	CHIP R 3.9K D 1/16W	
R233			RK73GB2A271J	CHIP R 270 J 1/10W		R310-313			RK73GB2A101J	CHIP R 100 J 1/10W	
R234,235			RK73GB2A000J	CHIP R 0 J 1/10W		R314			RK73GB2A000J	CHIP R 0 J 1/10W	
R236			RK73GB2A180J	CHIP R 18 J 1/10W		R315			RK73GB2A121J	CHIP R 120 J 1/10W	
R237			RK73GB2A271J	CHIP R 270 J 1/10W		R316			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R238,239			RN73GE1J391D	CHIP R 390 D 1/16W		R317			RK73GB2A560J	CHIP R 56 J 1/10W	
R240			RK73GB2A180J	CHIP R 18 J 1/10W		R318			RK73GB2A474J	CHIP R 470K J 1/10W	
R241-244			RK73GB2A102J	CHIP R 1.0K J 1/10W		R319			RK73GB2A121J	CHIP R 120 J 1/10W	
R245			RK73GB2A180J	CHIP R 18 J 1/10W		R322			RK73GB2A000J	CHIP R 0 J 1/10W	
R246			RK73GB2A102J	CHIP R 1.0K J 1/10W		R323			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R247			RK73GB2A271J	CHIP R 270 J 1/10W		R324-327			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R248			RK73GB2A180J	CHIP R 18 J 1/10W		R328			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R249			RK73GB2A150J	CHIP R 15 J 1/10W		R330			RK73GB2A821J	CHIP R 820 J 1/10W	
R250			RK73GB2A271J	CHIP R 270 J 1/10W		R331			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R251			RK73GB2A180J	CHIP R 18 J 1/10W		R332			RK73GB2A180J	CHIP R 18 J 1/10W	
R252			RK73GB2A470J	CHIP R 47 J 1/10W		R333			RK73GB2A000J	CHIP R 0 J 1/10W	
R253			RK73GB2A153J	CHIP R 15K J 1/10W		R334			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R254			RK73GB2A682J	CHIP R 6.8K J 1/10W		R335			RK73GB2A000J	CHIP R 0 J 1/10W	
R256			RK73GB2A150J	CHIP R 15 J 1/10W		R336			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R257			RK73GB2A153J	CHIP R 15K J 1/10W		R337			RK73GB2A471J	CHIP R 470 J 1/10W	
R258			RK73GB2A682J	CHIP R 6.8K J 1/10W		R338			RK73GB2A104J	CHIP R 100K J 1/10W	
R259			RK73GB2A101J	CHIP R 100 J 1/10W		R339			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R260			RK73GB2A123J	CHIP R 12K J 1/10W		R340			RK73GB2A471J	CHIP R 470 J 1/10W	
R262			RK73GB2A6R8J	CHIP R 6.8 J 1/10W		R341			RK73GB2A100J	CHIP R 10 J 1/10W	
R263			RK73GB2A470J	CHIP R 47 J 1/10W		R342			RK73GB2A471J	CHIP R 470 J 1/10W	
R264			RK73GB2A101J	CHIP R 100 J 1/10W		R343			RK73GB2A000J	CHIP R 0 J 1/10W	
R265			RK73GB2A821J	CHIP R 820 J 1/10W		R344			RK73GB2A471J	CHIP R 470 J 1/10W	
R266,267			RK73GB2A102J	CHIP R 1.0K J 1/10W		R345			RK73GB2A000J	CHIP R 0 J 1/10W	

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R346			RK73GB2A100J	CHIP R 10 J 1/10W		R449			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R348			RK73GB2A000J	CHIP R 0 J 1/10W		R450			RK73GB2A101J	CHIP R 100 J 1/10W	
R350-356			RK73GB2A000J	CHIP R 0 J 1/10W		R451			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R357			RK73GB2A682J	CHIP R 6.8K J 1/10W		R452			RK73GB2A101J	CHIP R 100 J 1/10W	
R358			RK73GB2A332J	CHIP R 3.3K J 1/10W		R453			RK73GB2A000J	CHIP R 0 J 1/10W	
R359-365			RK73GB2A152J	CHIP R 1.5K J 1/10W		R461			RK73GB2A000J	CHIP R 0 J 1/10W	
R366,367			RK73GB2A682J	CHIP R 6.8K J 1/10W		R463			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R368			RK73GB2A100J	CHIP R 10 J 1/10W		R464			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R369			RK73GB2A101J	CHIP R 100 J 1/10W		R465			RK73GB2A273J	CHIP R 27K J 1/10W	
R370			RK73GB2A221J	CHIP R 220 J 1/10W		R466,467			RK73GB2A103J	CHIP R 10K J 1/10W	
R371			RK73GB2A683J	CHIP R 68K J 1/10W		R468			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R373-375			RK73GB2A471J	CHIP R 470 J 1/10W		R469			RK73GB2A273J	CHIP R 27K J 1/10W	
R377			RK73GB2A561J	CHIP R 560 J 1/10W		R470,471			RK73GB2A000J	CHIP R 0 J 1/10W	
R378			RK73GB2A471J	CHIP R 470 J 1/10W		R473			RK73GB2A473J	CHIP R 47K J 1/10W	
R379			RK73GB2A561J	CHIP R 560 J 1/10W		R474			RK73GB2A271J	CHIP R 270 J 1/10W	
R380			RK73GB2A222J	CHIP R 2.2K J 1/10W		R475-478			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R381			RK73GB2A560J	CHIP R 56 J 1/10W		R479			RK73GB2A271J	CHIP R 270 J 1/10W	
R382,383			RK73GB2A120J	CHIP R 12 J 1/10W		R480-482			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R384			RK73GB2A100J	CHIP R 10 J 1/10W		R483			RK73GB2A101J	CHIP R 100 J 1/10W	
R385			RK73GB2A000J	CHIP R 0 J 1/10W		R484			RK73GB2A560J	CHIP R 56 J 1/10W	
R386-388			RK73GB2A100J	CHIP R 10 J 1/10W		R486			RK73GB2A103J	CHIP R 10K J 1/10W	
R389			RK73GB2A000J	CHIP R 0 J 1/10W		R487,488			RK73GB2A560J	CHIP R 56 J 1/10W	
R390-392			RK73GB2A471J	CHIP R 470 J 1/10W		R489			RK73GB2A331J	CHIP R 330 J 1/10W	
R394			RK73GB2A561J	CHIP R 560 J 1/10W		R490			RK73GB2A100J	CHIP R 10 J 1/10W	
R395			RK73GB2A471J	CHIP R 470 J 1/10W		R492			RK73GB2A000J	CHIP R 0 J 1/10W	
R396			RK73GB2A561J	CHIP R 560 J 1/10W		D3 ,4			HZU3BLL	ZENER DIODE	
R397			RK73GB2A222J	CHIP R 2.2K J 1/10W		D5 ,6			1SV283F	VARIABLE CAPACITANCE DIODE	
R398			RK73GB2A100J	CHIP R 10 J 1/10W		D7			HVC131	DIODE	
R399			RK73GB2A101J	CHIP R 100 J 1/10W		D8			1SS388F	DIODE	
R400,401			RK73GB2A153J	CHIP R 15K J 1/10W		D9			HSC277	DIODE	
R402			RK73GB2A682J	CHIP R 6.8K J 1/10W		D10			1SR154-400	DIODE	
R403			RK73GB2A103J	CHIP R 10K J 1/10W		D11			HSC277	DIODE	
R404			RK73GB2A101J	CHIP R 100 J 1/10W		D12			HVC131	DIODE	
R405			RK73GB2A102J	CHIP R 1.0K J 1/10W		D13			HSM88AS-E	DIODE	
R406			RK73GB2A470J	CHIP R 47 J 1/10W		D14 ,15			1SV228-F	VARIABLE CAPACITANCE DIODE	
R407			RK73GB2A100J	CHIP R 10 J 1/10W		D16			HSM88AS-E	DIODE	
R408,409			RK73GB2A000J	CHIP R 0 J 1/10W		D17 -20			HSC277	DIODE	
R410			RK73GB2A102J	CHIP R 1.0K J 1/10W		D21 ,22			1SV228-F	VARIABLE CAPACITANCE DIODE	
R411			RK73GB2A392J	CHIP R 3.9K J 1/10W		D23			HSC277	DIODE	
R412			RK73GB2A102J	CHIP R 1.0K J 1/10W		D24			1SS388F	DIODE	
R413,414			RK73GB2A123J	CHIP R 12K J 1/10W		D25 -27			HSC277	DIODE	
R415			RK73GB2A000J	CHIP R 0 J 1/10W		D28 ,29			HVC131	DIODE	
R416			RK73GB2A102J	CHIP R 1.0K J 1/10W		D33			HVC131	DIODE	
R417			RK73GB2A000J	CHIP R 0 J 1/10W		D34			1SS388F	DIODE	
R418			RK73GB2A102J	CHIP R 1.0K J 1/10W		D37 -48			HVC131	DIODE	
R421-427			RK73GB2A152J	CHIP R 1.5K J 1/10W		D49			RB715F	DIODE	
R428			RK73GB2A330J	CHIP R 33 J 1/10W		D50 -56			HVC131	DIODE	
R429,430			RK73GB2A000J	CHIP R 0 J 1/10W		D57			1SR154-400	DIODE	
R431			RK73GB2A821J	CHIP R 820 J 1/10W		IC2			Note1	MOS-IC	
R432			RK73GB2A221J	CHIP R 220 J 1/10W		IC3			AD9951YSVZ	MOS-IC	
R433			RK73GB2A101J	CHIP R 100 J 1/10W		IC4			TC7W125FU-F	MOS-IC	
R434			RK73GB2A221J	CHIP R 220 J 1/10W		IC5			TA4805BF	MOS-IC	
R435			RK73GB2A123J	CHIP R 12K J 1/10W		IC6			TK71733S	BI-POLAR IC	
R436			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC7			TA48M033F-SNQ	ANALOGUE IC	
R437-439			RK73GB2A123J	CHIP R 12K J 1/10W		IC8			XC6219B182PR-G	MOS-IC	
R440			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC9			UPC2710TB-A	ANALOGUE IC	
R442-444			RK73GB2A100J	CHIP R 10 J 1/10W		IC10,11			TC7W125FU-F	MOS-IC	
R445,446			RK73GB2A821J	CHIP R 820 J 1/10W		IC12			TA75S01F-F	MOS-IC	
R447			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC13			AD9835BRUZ	MOS-IC	
R448			RK73GB2A331J	CHIP R 330 J 1/10W		IC14			TC75S59F-F	MOS-IC	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

PLL UNIT (MAIN) (X50-3220-00)

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC15,16			TC74HC4094AFF	MOS-IC		Q64 -66			LTC044EEBFS8	TRANSISTOR	
IC17			Note1	MOS-IC		Q68			DTA123EE	DIGITAL TRANSISTOR	
IC18			Note1	MOS-IC		Q69			LTC044EEBFS8	TRANSISTOR	
IC19			TC7WG74FK-F	MOS-IC		Q70			DTA123EE	DIGITAL TRANSISTOR	
IC20			TC74AC390F-F	MOS-IC		Q71			LTC044EEBFS8	TRANSISTOR	
IC21,22			TC7WG74FK-F	MOS-IC		Q72			DTA123EE	DIGITAL TRANSISTOR	
IC23			TC7WZ04FU-F	MOS-IC		Q73			LTC044EEBFS8	TRANSISTOR	
IC24,25			TC7WG74FK-F	MOS-IC		Q74			DTA123EE	DIGITAL TRANSISTOR	
IC26			AD9835BRUZ	MOS-IC		Q75			LTC044EEBFS8	TRANSISTOR	
IC27			BA00DD0WHFP	ANALOGUE IC		Q76			DTA123EE	DIGITAL TRANSISTOR	
IC28			TC7W125FU-F	MOS-IC		Q77			LTC044EEBFS8	TRANSISTOR	
Q1			2SC5108(Y)F	TRANSISTOR		Q78 -82			2SC4617(R)	TRANSISTOR	
Q2			2SC4617(R)	TRANSISTOR		Q84 -86			2SC4617(R)	TRANSISTOR	
Q3			2SC4649(N,P)	TRANSISTOR		Q88			LTC044EEBFS8	TRANSISTOR	
Q4			MCH3914(7)-H	FET		Q90			SSM3J332R	FET	
Q5			2SC4617(R)	TRANSISTOR		Q91 -98			LTC044EEBFS8	TRANSISTOR	
Q6			2SC5108(Y)F	TRANSISTOR		Q99			2SC3357-A(RF)	TRANSISTOR	
Q8			2SC5108(Y)F	TRANSISTOR		PLL UNIT (SUB) (X50-3230-00)					
Q9 ,10			2SC4617(R)	TRANSISTOR		C4			CC73GCH1H470J	CHIP C	47PF J
Q11			3SK294-FP	FET		C5 ,6			CC73GCH1H101J	CHIP C	100PF J
Q12			LTC044EEBFS8	TRANSISTOR		C7			CK73GB1H102K	CHIP C	1000PF K
Q13			DTA123EE	DIGITAL TRANSISTOR		C8			CC73GCH1H101J	CHIP C	100PF J
Q14			LTC044EEBFS8	TRANSISTOR		C9			CK73GB1H102K	CHIP C	1000PF K
Q17 -19			2SC4116(BL)F	TRANSISTOR		C10 -12			CC73GCH1H101J	CHIP C	100PF J
Q20			SSM3K15TE(F)	FET		C13 ,14			CK73GB1H102K	CHIP C	1000PF K
Q21			SSM3J332R	FET		C17			CK73GB1E105K	CHIP C	1.0UF K
Q22 -24			SSM3K15TE(F)	FET		C18 ,19			CK73EB1E106K	CHIP C	10UF K
Q25 ,26			MCH3914(7)-H	FET		C20			CK73GB1C104K	CHIP C	0.10UF K
Q27			2SC4617(R)	TRANSISTOR		C21			CK73GB1H103K	CHIP C	0.010UF K
Q28			SSM3J332R	FET		C22			CK73GB1E105K	CHIP C	1.0UF K
Q29			LTC044EEBFS8	TRANSISTOR		C23 ,24			CK73EB1E106K	CHIP C	10UF K
Q30			2SC4116(BL)F	TRANSISTOR		C25			CE32BM1C220M	CHIP EL	22UF 16WV
Q31			SSM3K15TE(F)	FET		C42 ,43			CK73GB1C473K	CHIP C	0.047UF K
Q32			SSM3J332R	FET		C44			CK73GB1H103K	CHIP C	0.010UF K
Q33			SSM3K15TE(F)	FET		C45			CK73EB1E106K	CHIP C	10UF K
Q34			2SC4617(R)	TRANSISTOR		C47 ,48			CK73GB1H102K	CHIP C	1000PF K
Q35			2SC4649(N,P)	TRANSISTOR		C49 ,50			CK73GB1C473K	CHIP C	0.047UF K
Q36 ,37			SSM3K15TE(F)	FET		C52			CC73GCH1H560J	CHIP C	56PF J
Q38 ,39			MCH3914(7)-H	FET		C53			CK73GB1E105K	CHIP C	1.0UF K
Q40			DTA123EE	DIGITAL TRANSISTOR		C54 -57			CK73GB1H102K	CHIP C	1000PF K
Q41			LTC044EEBFS8	TRANSISTOR		C58			CK73GB1C473K	CHIP C	0.047UF K
Q42			DTA123EE	DIGITAL TRANSISTOR		C59 ,60			CK73GB1H103K	CHIP C	0.010UF K
Q43			LTC044EEBFS8	TRANSISTOR		C61			CC73GCH1H101J	CHIP C	100PF J
Q44 ,45			2SC4649(N,P)	TRANSISTOR		C62			CE32BM1C220M	CHIP EL	22UF 16WV
Q46			2SC4617(R)	TRANSISTOR		C63			CK73EB1E106K	CHIP C	10UF K
Q47			DTA123EE	DIGITAL TRANSISTOR		C64			CK73GB1C473K	CHIP C	0.047UF K
Q48			LTC044EEBFS8	TRANSISTOR		C65			CK73EB1E106K	CHIP C	10UF K
Q49			DTA123EE	DIGITAL TRANSISTOR		C66			CC73GCH1H560J	CHIP C	56PF J
Q50			LTC044EEBFS8	TRANSISTOR							
Q51			2SC3357-A(RF)	TRANSISTOR							
Q52			DTA123EE	DIGITAL TRANSISTOR							
Q53			LTC044EEBFS8	TRANSISTOR							
Q54			DTA123EE	DIGITAL TRANSISTOR							
Q55			LTC044EEBFS8	TRANSISTOR							
Q56			DTA123EE	DIGITAL TRANSISTOR							
Q57			LTC044EEBFS8	TRANSISTOR							
Q60			SSM3J332R	FET							
Q61			DTA123EE	DIGITAL TRANSISTOR							
Q62			LTC044EEBFS8	TRANSISTOR							
Q63			SSM3K15TE(F)	FET							

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C67			CC73GCH1H151J	CHIP C 150PF J		C140			CE32BM1C220M	CHIP EL 22UF 16WV	
C68 -70			CK73GB1H103K	CHIP C 0.010UF K		C141			CC73GCH1H120J	CHIP C 12PF J	
C71			CK73EB1E106K	CHIP C 10UF K		C142			CK73EB1E106K	CHIP C 10UF K	
C72			CE32BM1C220M	CHIP EL 22UF 16WV		C143			CK73GB1C104K	CHIP C 0.10UF K	
C73			CC73GCH1H271J	CHIP C 270PF J		C144			CK73GB1H472K	CHIP C 4700PF K	
C74			CK73GB1E105K	CHIP C 1.0UF K		C145			CC73GCH1H471J	CHIP C 470PF J	
C75			CC73GCH1H151J	CHIP C 150PF J		C146			CC73GCH1H151J	CHIP C 150PF J	
C76 ,77			CK73GB1C473K	CHIP C 0.047UF K		C147			CC73GCH1H390J	CHIP C 39PF J	
C78			CK73GB1H472K	CHIP C 4700PF K		C148			CC73GCH1H090B	CHIP C 9.0PF B	
C79			CK73GB1H102K	CHIP C 1000PF K		C149			CK73GB1H103K	CHIP C 0.010UF K	
C80			CK73GB1C473K	CHIP C 0.047UF K		C150			CC73GCH1H070B	CHIP C 7.0PF B	
C81			CK73GB1H472K	CHIP C 4700PF K		C151,152			CK73GB1H103K	CHIP C 0.010UF K	
C82			CK73GB1H102K	CHIP C 1000PF K		C153			CC73GCH1H070B	CHIP C 7.0PF B	
C83			CS77MA1V0R1M	CHIP TNTL 0.1UF 35WV		C154,155			CK73EB1E106K	CHIP C 10UF K	
C84			CK73GB1C473K	CHIP C 0.047UF K		C156			CK73GB1H103K	CHIP C 0.010UF K	
C85			CK73FB1H153K	CHIP C 0.015UF K		C157			CC73GCH1H050B	CHIP C 5.0PF B	
C86			CK73GB1H472K	CHIP C 4700PF K		C158			CK73GB1C473K	CHIP C 0.047UF K	
C87			CK73GB1H102K	CHIP C 1000PF K		C159,160			CC73GCH1H020B	CHIP C 2.0PF B	
C89			CK73GB1H102K	CHIP C 1000PF K		C161			CC73GCH1H120J	CHIP C 12PF J	
C90			CS77BA1A100M	CHIP TNTL 10UF 10WV		C162			CC73GCH1H090B	CHIP C 9.0PF B	
C91			CC73GCH1H390J	CHIP C 39PF J		C163			CC73GCH1H100C	CHIP C 10PF C	
C92 ,93			CK73GB1H102K	CHIP C 1000PF K		C164			CK73GB1H103K	CHIP C 0.010UF K	
C94			CK73GB1C473K	CHIP C 0.047UF K		C165			CC73GCH1H100C	CHIP C 10PF C	
C95			CK73GB1H102K	CHIP C 1000PF K		C166			CC73GCH1H120G	CHIP C 12PF G	
C96			CS77MA1VR47M	CHIP TNTL 0.47UF 35WV		C167			CC73GCH1H040B	CHIP C 4.0PF B	
C97			CE32BM1C101M	CHIP EL 100UF 16WV		C168,169			CK73GB1E105K	CHIP C 1.0UF K	
C98			CS77MA1D010M	CHIP TNTL 1.0UF 20WV		C170			CC73GCH1H151J	CHIP C 150PF J	
C99			CC73GCH1H680J	CHIP C 68PF J		C171			CC73GCH1H390G	CHIP C 39PF G	
C101			CK73GB1H102K	CHIP C 1000PF K		C172			CC73GCH1H330G	CHIP C 33PF G	
C102			CC73GCH1H390J	CHIP C 39PF J		C173			CK73GB1H102K	CHIP C 1000PF K	
C103			CK73FB1H153K	CHIP C 0.015UF K		C174			CK73EB1E106K	CHIP C 10UF K	
C104			CC73GCH1H390J	CHIP C 39PF J		C175			CK73GB1C473K	CHIP C 0.047UF K	
C105			CK73EB1E106K	CHIP C 10UF K		C176			CC73GCH1H050B	CHIP C 5.0PF B	
C106			CK73GB1C104K	CHIP C 0.10UF K		C177			CK73GB1C473K	CHIP C 0.047UF K	
C107			CE32BM1C101M	CHIP EL 100UF 16WV		C178,179			CC73GCH1H100C	CHIP C 10PF C	
C108			CK73EB1E106K	CHIP C 10UF K		C180,181			CC73GCH1H220G	CHIP C 22PF G	
C109			CS77MA1VR47M	CHIP TNTL 0.47UF 35WV		C184			CC73GCH1H060B	CHIP C 6.0PF B	
C110			CK73EB1E106K	CHIP C 10UF K		C185			CC73GCH1H120J	CHIP C 12PF J	
C112			CK73GB1H472K	CHIP C 4700PF K		C186			CC73GCH1H101J	CHIP C 100PF J	
C113			CK73GB1C104K	CHIP C 0.10UF K		C187			CK73EB1E106K	CHIP C 10UF K	
C114			CC73GCH1H680J	CHIP C 68PF J		C188			CK73GB1H103K	CHIP C 0.010UF K	
C116			CC73GCH1H680J	CHIP C 68PF J		C189			CC73GCH1H060B	CHIP C 6.0PF B	
C117			CK73GB1C104K	CHIP C 0.10UF K		C190-193			CK73GB1H102K	CHIP C 1000PF K	
C118			CK73GB1H102K	CHIP C 1000PF K		C194			CK73GB1H103K	CHIP C 0.010UF K	
C119			CC73GCH1H101J	CHIP C 100PF J		C196			CK73EB1E106K	CHIP C 10UF K	
C120			CK73FB1H153K	CHIP C 0.015UF K		C197			CK73GB1C473K	CHIP C 0.047UF K	
C122			CK73GB1H103K	CHIP C 0.010UF K		C199,200			CC73GCH1H020B	CHIP C 2.0PF B	
C123			CK73GB1C473K	CHIP C 0.047UF K		C201,202			CK73GB1C473K	CHIP C 0.047UF K	
C125			CC73GCH1H040B	CHIP C 4.0PF B		C203			CC73GCH1H470J	CHIP C 47PF J	
C126			CC73GCH1H270G	CHIP C 27PF G		C204			CC73GCH1H471J	CHIP C 470PF J	
C127			CC73GCH1H030B	CHIP C 3.0PF B		C205			CK73EB1E106K	CHIP C 10UF K	
C128			CC73GCH1H220G	CHIP C 22PF G		C206			CK73GB1H103K	CHIP C 0.010UF K	
C129			CK73GB1H102K	CHIP C 1000PF K		C207			CK73EB1E106K	CHIP C 10UF K	
C130			CK73EB1E106K	CHIP C 10UF K		C208			CK73GB1H103K	CHIP C 0.010UF K	
C131			CK73GB1C104K	CHIP C 0.10UF K		C209			CK73GB1C473K	CHIP C 0.047UF K	
C132,133			CC73GCH1H101J	CHIP C 100PF J		C210			CK73GB1E105K	CHIP C 1.0UF K	
C134			CK73GB1H103K	CHIP C 0.010UF K		C211			CC73GCH1H0R5B	CHIP C 0.5PF B	
C135			CK73GB1H472K	CHIP C 4700PF K		C212,213			CK73GB1H103K	CHIP C 0.010UF K	
C136			CK73GB1H102K	CHIP C 1000PF K		C214			CC73GCH1H120J	CHIP C 12PF J	
C137			CK73GB1H103K	CHIP C 0.010UF K		C215			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C216			CK73GB1H223K	CHIP C 0.022UF K		C297			CK73GB1H103K	CHIP C 0.010UF K	
C217			CC73GCH1H470J	CHIP C 47PF J		C298			CC73GCH1H080B	CHIP C 8.0PF B	
C218,219			CC73GCH1H331J	CHIP C 330PF J		C299			CC73GCH1H391J	CHIP C 390PF J	
C220			CK73GB1E105K	CHIP C 1.0UF K		C300,301			CK73GB1E105K	CHIP C 1.0UF K	
C221			CK73GB1C473K	CHIP C 0.047UF K		C302			CK73GB1C104K	CHIP C 0.10UF K	
C223			CC73GCH1H101J	CHIP C 100PF J		C303			CK73GB1H102K	CHIP C 1000PF K	
C224			CK73GB1H102K	CHIP C 1000PF K		C304,305			CK73GB1C104K	CHIP C 0.10UF K	
C225			CC73GCH1H101J	CHIP C 100PF J		C306			CC73GCH1H330J	CHIP C 33PF J	
C226			CK73GB1H102K	CHIP C 1000PF K		C307,308			CC73GCH1H390G	CHIP C 39PF G	
C227			CK73EB1E106K	CHIP C 10UF K		C309			CC73GCH1H120J	CHIP C 12PF J	
C228			CC73GCH1H390J	CHIP C 39PF J		C310,311			CC73GCH1H180G	CHIP C 18PF G	
C229			CC73GCH1H150J	CHIP C 15PF J		C312,313			CC73GCH1H120G	CHIP C 12PF G	
C231			CC73GCH1H150J	CHIP C 15PF J		C314			CC73GCH1H150J	CHIP C 15PF J	
C232			CK73GB1H102K	CHIP C 1000PF K		C315			CK73GB1H103K	CHIP C 0.010UF K	
C233			CK73GB1C473K	CHIP C 0.047UF K		C316			CC73GCH1H821J	CHIP C 820PF J	
C235			CC73GCH1H680J	CHIP C 68PF J		C317			CC73GCH1H470J	CHIP C 47PF J	
C236			CC73GCH1H221J	CHIP C 220PF J		C318-321			CK73GB1H102K	CHIP C 1000PF K	
C237			CC73GCH1H101J	CHIP C 100PF J		C322			CC73GCH1H390J	CHIP C 39PF J	
C238,239			CK73GB1H102K	CHIP C 1000PF K		C323,324			CC73GCH1H020B	CHIP C 2.0PF B	
C241			CC73GCH1H220J	CHIP C 22PF J		C325			CC73GCH1H150J	CHIP C 15PF J	
C242			CC73GCH1H030B	CHIP C 3.0PF B		C326			CK73EB1E106K	CHIP C 10UF K	
C243			CK73GB1C104K	CHIP C 0.10UF K		C327			CK73GB1H103K	CHIP C 0.010UF K	
C244			CK73EB1E106K	CHIP C 10UF K		C328			CK73EB1E106K	CHIP C 10UF K	
C245			CC73GCH1H560J	CHIP C 56PF J		C329			CK73GB1H103K	CHIP C 0.010UF K	
C246			CC73GCH1H390J	CHIP C 39PF J		C330			CC73GCH1H470J	CHIP C 47PF J	
C247			CK73GB1H103K	CHIP C 0.010UF K		C331			CC73GCH1H391J	CHIP C 390PF J	
C248			CK73GB1C104K	CHIP C 0.10UF K		C332-337			CK73GB1H103K	CHIP C 0.010UF K	
C249			CK73GB1C473K	CHIP C 0.047UF K		C338			CC73GCH1H100C	CHIP C 10PF C	
C250-253			CK73GB1C104K	CHIP C 0.10UF K		C339			CC73GCH1H330J	CHIP C 33PF J	
C254			CK73GB1E105K	CHIP C 1.0UF K		C340			CC73GCH1H080B	CHIP C 8.0PF B	
C255			CC73GCH1H150J	CHIP C 15PF J		C341			CK73GB1H102K	CHIP C 1000PF K	
C256			CC73GCH1H030B	CHIP C 3.0PF B		C342-346			CK73GB1H103K	CHIP C 0.010UF K	
C257			CK73GB1H103K	CHIP C 0.010UF K		C347			CK73GB1C473K	CHIP C 0.047UF K	
C260			CC73GCH1H100C	CHIP C 10PF C		C348-351			CK73GB1H103K	CHIP C 0.010UF K	
C262			CK73GB1H103K	CHIP C 0.010UF K		C352			CK73GB1E105K	CHIP C 1.0UF K	
C264			CK73GB1H103K	CHIP C 0.010UF K		C353			CK73GB1H102K	CHIP C 1000PF K	
C265			CC73GCH1H070B	CHIP C 7.0PF B		C354			CC73GCH1H101J	CHIP C 100PF J	
C266			CC73GCH1H180G	CHIP C 18PF G		C355			CK73GB1H472K	CHIP C 4700PF K	
C267			CC73GCH1H1R5B	CHIP C 1.5PF B		C356			CC73GCH1H471J	CHIP C 470PF J	
C268			CC73GCH1H160G	CHIP C 16PF G		C357			CC73GCH1H270J	CHIP C 27PF J	
C269			CK73GB1H103K	CHIP C 0.010UF K		C358			CK73GB1H102K	CHIP C 1000PF K	
C270			CK73GB1C473K	CHIP C 0.047UF K		C359			CC73GCH1H681J	CHIP C 680PF J	
C271			CK73GB1C104K	CHIP C 0.10UF K		C360			CK73GB1H102K	CHIP C 1000PF K	
C273			CK73GB1H103K	CHIP C 0.010UF K		C361			CK73GB1C473K	CHIP C 0.047UF K	
C274			CK73GB1C473K	CHIP C 0.047UF K		C362			CK73EB1E106K	CHIP C 10UF K	
C275,276			CK73GB1C104K	CHIP C 0.10UF K		C363			CC73GCH1H820J	CHIP C 82PF J	
C277			CK73GB1H103K	CHIP C 0.010UF K		C364,365			CK73GB1H102K	CHIP C 1000PF K	
C280			CK73GB1H103K	CHIP C 0.010UF K		C366			CC73GCH1H391J	CHIP C 390PF J	
C282			CC73GCH1H060B	CHIP C 6.0PF B		C367			CK73GB1H102K	CHIP C 1000PF K	
C283			CK73GB1H103K	CHIP C 0.010UF K		C368			CK73GB1H472K	CHIP C 4700PF K	
C284			CC73GCH1H040B	CHIP C 4.0PF B		C369			CS77MA1V0R1M	CHIP TNTL 0.1UF 35WV	
C285			CK73GB1H103K	CHIP C 0.010UF K		C370			CK73GB1H472K	CHIP C 4700PF K	
C287			CK73GB1E105K	CHIP C 1.0UF K		C371			CC73GCH1H820J	CHIP C 82PF J	
C288,289			CC73GCH1H180J	CHIP C 18PF J		C372			CK73GB1C104K	CHIP C 0.10UF K	
C290			CC73GCH1H270J	CHIP C 27PF J		C373			CC73GCH1H560J	CHIP C 56PF J	
C291			CK73GB1C473K	CHIP C 0.047UF K		C374			CC73GCH1H330J	CHIP C 33PF J	
C292			CK73GB1H102K	CHIP C 1000PF K		C375			CC73GCH1H680J	CHIP C 68PF J	
C293			CC73GCH1H100C	CHIP C 10PF C		C376			CK73GB1H102K	CHIP C 1000PF K	
C294			CK73GB1H103K	CHIP C 0.010UF K		C377			CK73GB1C473K	CHIP C 0.047UF K	
C295,296			CC73GCH1H1R5B	CHIP C 1.5PF B		C378			CK73GB1H472K	CHIP C 4700PF K	

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C379			CS77MA1D4R7M	CHIP TNL 4.7UF 20WV		C445			CC73GCH1H100C	CHIP C 10PF C	
C380			CC73GCH1H101J	CHIP C 100PF J		C446			CK73EB1E106K	CHIP C 10UF K	
C381			CC73GCH1H270J	CHIP C 27PF J		C447			CC73GCH1H220J	CHIP C 22PF J	
C382			CK73GB1H102K	CHIP C 1000PF K		C448			CC73GCH1H330J	CHIP C 33PF J	
C383			CC73GCH1H680J	CHIP C 68PF J		C449,450			CC73GCH1H560J	CHIP C 56PF J	
C384			CK73EB1E106K	CHIP C 10UF K		C451			CC73GCH1H820J	CHIP C 82PF J	
C385			CK73GB1H102K	CHIP C 1000PF K		C452			CC73GCH1H040B	CHIP C 4.0PF B	
C386			CC73GCH1H270J	CHIP C 27PF J		C453			CC73GCH1H100C	CHIP C 10PF C	
C387			CK73GB1C104K	CHIP C 0.10UF K		C454			CK73GB1H472K	CHIP C 4700PF K	
C388			CS77MA1D4R7M	CHIP TNL 4.7UF 20WV		C455			CC73GCH1H681J	CHIP C 680PF J	
C389			CK73GB1H102K	CHIP C 1000PF K		C456			CK73GB1H102K	CHIP C 1000PF K	
C390,391			CC73GCH1H680J	CHIP C 68PF J		C457			CC73GCH1H150J	CHIP C 15PF J	
C392			CC73GCH1H270J	CHIP C 27PF J		C458			CC73GCH1H220J	CHIP C 22PF J	
C393			CC73GCH1H330J	CHIP C 33PF J		C459,460			CC73GCH1H080B	CHIP C 8.0PF B	
C394			CC73GCH1H560J	CHIP C 56PF J		C461			CK73GB1H103K	CHIP C 0.010UF K	
C396			CK73GB1H102K	CHIP C 1000PF K		C462			CC73GCH1H030B	CHIP C 3.0PF B	
C397			CC73GCH1H120J	CHIP C 12PF J		C463			CK73GB1H102K	CHIP C 1000PF K	
C398			CC73GCH1H820J	CHIP C 82PF J		C464			CC73GCH1H270J	CHIP C 27PF J	
C399			CC73GCH1H270J	CHIP C 27PF J		C465			CC73GCH1H330J	CHIP C 33PF J	
C400			CC73GCH1H120J	CHIP C 12PF J		C466,467			CC73GCH1H560J	CHIP C 56PF J	
C401			CC73GCH1H271J	CHIP C 270PF J		C468			CC73GCH1H820J	CHIP C 82PF J	
C402			CK73GB1H103K	CHIP C 0.010UF K		C469			CC73GCH1H561J	CHIP C 560PF J	
C403			CK73EB1E106K	CHIP C 10UF K		C470			CC73GCH1H680J	CHIP C 68PF J	
C404,405			CK73GB1H102K	CHIP C 1000PF K		C471			CK73GB1H102K	CHIP C 1000PF K	
C406			CS77MA1VR33M	CHIP TNL 0.33UF 35WV		C472			CC73GCH1H060B	CHIP C 6.0PF B	
C407			CC73GCH1H080B	CHIP C 8.0PF B		C473			CC73GCH1H120J	CHIP C 12PF J	
C408			CK73GB1H102K	CHIP C 1000PF K		C474			CC73GCH1H090B	CHIP C 9.0PF B	
C409			CC73GCH1H560J	CHIP C 56PF J		C475			CC73GCH1H100C	CHIP C 10PF C	
C410			CC73GCH1H271J	CHIP C 270PF J		C476			CK73GB1H102K	CHIP C 1000PF K	
C411			CC73GCH1H181J	CHIP C 180PF J		C477			CK73GB1H472K	CHIP C 4700PF K	
C412			CK73GB1H102K	CHIP C 1000PF K		C478,479			CC73GCH1H150J	CHIP C 15PF J	
C413			CC73GCH1H270J	CHIP C 27PF J		C480,481			CC73GCH1H270J	CHIP C 27PF J	
C414			CC73GCH1H180J	CHIP C 18PF J		C482			CC73GCH1H470J	CHIP C 47PF J	
C415			CC73GCH1H221J	CHIP C 220PF J		C483			CC73GCH1H181J	CHIP C 180PF J	
C416			CC73GCH1H680J	CHIP C 68PF J		C484			CC73GCH1H040B	CHIP C 4.0PF B	
C417			CK73GB1H102K	CHIP C 1000PF K		C485			CC73GCH1H680J	CHIP C 68PF J	
C418			CC73GCH1H1R5B	CHIP C 1.5PF B		C486			CK73GB1H103K	CHIP C 0.010UF K	
C419			CC73GCH1H270J	CHIP C 27PF J		C487			CC73GCH1H560J	CHIP C 56PF J	
C420			CC73GCH1H120J	CHIP C 12PF J		C488			CK73GB1H102K	CHIP C 1000PF K	
C421			CC73GCH1H330J	CHIP C 33PF J		C489			CC73GCH1H030B	CHIP C 3.0PF B	
C422			CC73GCH1H220J	CHIP C 22PF J		C490			CC73GCH1H470J	CHIP C 47PF J	
C423			CC73GCH1H181J	CHIP C 180PF J		C491			CK73GB1H102K	CHIP C 1000PF K	
C424,425			CC73GCH1H680J	CHIP C 68PF J		C492			CC73GCH1H470J	CHIP C 47PF J	
C426			CC73GCH1H470J	CHIP C 47PF J		C493			CK73GB1H472K	CHIP C 4700PF K	
C427			CK73GB1C473K	CHIP C 0.047UF K		C494			CC73GCH1H121J	CHIP C 120PF J	
C428,429			CK73GB1H103K	CHIP C 0.010UF K		C495			CK73GB1H103K	CHIP C 0.010UF K	
C430			CK73GB1H102K	CHIP C 1000PF K		C496			CE32BM1C101M	CHIP EL 100UF 16WV	
C431			CC73GCH1H090B	CHIP C 9.0PF B		C497			CC73GCH1H121J	CHIP C 120PF J	
C432			CC73GCH1H030B	CHIP C 3.0PF B		C498			CK73GB1C473K	CHIP C 0.047UF K	
C433			CC73GCH1H560J	CHIP C 56PF J		C499			CC73GCH1H470J	CHIP C 47PF J	
C434			CC73GCH1H270J	CHIP C 27PF J		C500			CK73GB1H103K	CHIP C 0.010UF K	
C435			CC73GCH1H390J	CHIP C 39PF J		C501			CC73GCH1H330J	CHIP C 33PF J	
C436,437			CC73GCH1H270J	CHIP C 27PF J		C502			CC73GCH1H151J	CHIP C 150PF J	
C438			CC73GCH1H181J	CHIP C 180PF J		C503-505			CK73GB1H102K	CHIP C 1000PF K	
C439			CC73GCH1H470J	CHIP C 47PF J		C506			CC73GCH1H470J	CHIP C 47PF J	
C440			CC73GCH1H561J	CHIP C 560PF J		C507			CC73GCH1H560J	CHIP C 56PF J	
C441			CK73GB1H102K	CHIP C 1000PF K		C508			CK73GB1H102K	CHIP C 1000PF K	
C442			CC73GCH1H150J	CHIP C 15PF J		C509			CC73GCH1H330J	CHIP C 33PF J	
C443			CC73GCH1H180J	CHIP C 18PF J		C510			CK73GB1H102K	CHIP C 1000PF K	
C444			CC73GCH1H090B	CHIP C 9.0PF B		C511			CE32BM1C101M	CHIP EL 100UF 16WV	

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C512			CC73GCH1H121J	CHIP C 120PF J		CN66			E41-1682-05	PIN ASSY	
C513			CC73GCH1H220J	CHIP C 22PF J		CF1			L72-1026-05	CERAMIC FILTER	
C514			CC73GCH1H470J	CHIP C 47PF J		L4			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C515			CK73GB1H102K	CHIP C 1000PF K		L5			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
C516			CC73GCH1H390J	CHIP C 39PF J		L6 ,7			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
						L8 ,9			L41-2785-33	SMALL FIXED INDUCTOR(0.27UH)	
C517			CC73GCH1H240J	CHIP C 24PF J		L10 ,11			L41-1595-33	SMALL FIXED INDUCTOR(1.5UH)	
C518			CC73GCH1H560J	CHIP C 56PF J		L12 ,13			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
C519,520			CK73GB1H472K	CHIP C 4700PF K		L14			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
C521			CC73GCH1H120J	CHIP C 12PF J		L15			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
C522-524			CK73GB1H102K	CHIP C 1000PF K		L16 ,17			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
						L18			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
C525			CC73GCH1H680J	CHIP C 68PF J		L19 ,20			L41-2798-60	SMALL FIXED INDUCTOR(2.7UH)	
C526			CC73GCH1H101J	CHIP C 100PF J		L21			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
C527			CC73GCH1H220J	CHIP C 22PF J		L22			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C528			CC73GCH1H470J	CHIP C 47PF J		L24			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C529			CC73GCH1H240J	CHIP C 24PF J		L26			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
						L27			L41-2285-33	SMALL FIXED INDUCTOR(0.22UH)	
C530			CK73GB1H472K	CHIP C 4700PF K		L28			L41-2785-09	SMALL FIXED INDUCTOR(270NH)	
C531			CC73GCH1H390J	CHIP C 39PF J		L30 ,31			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C532			CC73GCH1H120J	CHIP C 12PF J		L33			L41-3388-08	SMALL FIXED INDUCTOR(330NH)	
C533			CK73GB1H472K	CHIP C 4700PF K		L34			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C534			CK73GB1H103K	CHIP C 0.010UF K		L35			L34-4614-05	AIR-CORE COIL(8T)	
						L36			L34-4613-05	AIR-CORE COIL(7T)	
C535			CC73GCH1H100C	CHIP C 10PF C		L37			L34-4606-15	AIR-CORE COIL	
C536-539			CK73GB1H102K	CHIP C 1000PF K		L38			L41-3388-08	SMALL FIXED INDUCTOR(330NH)	
C540			CC73GCH1H180J	CHIP C 18PF J		L39 -42			L41-1598-60	SMALL FIXED INDUCTOR(1.5UH)	
C541			CK73GB1H102K	CHIP C 1000PF K		L44			L41-3388-08	SMALL FIXED INDUCTOR(330NH)	
C542			CC73GCH1H470J	CHIP C 47PF J		L46			L41-1595-33	SMALL FIXED INDUCTOR(1.5UH)	
						L47			L39-1480-15	TOROIDAL COIL	
C543			CK73GB1H472K	CHIP C 4700PF K		L48			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
C544			CC73GCH1H220J	CHIP C 22PF J		L49			L41-3375-33	SMALL FIXED INDUCTOR(0.033UH)	
C545			CC73GCH1H100C	CHIP C 10PF C		L50			L41-2295-33	SMALL FIXED INDUCTOR(2.2UH)	
C546			CK73GB1H102K	CHIP C 1000PF K		L51			L40-3375-92	SMALL FIXED INDUCTOR(33NH)	
C547			CC73GCH1H180J	CHIP C 18PF J		L53			L41-4795-33	SMALL FIXED INDUCTOR(4.7UH)	
						L55			L41-1275-08	SMALL FIXED INDUCTOR(12NH)	
C548			CK73GB1H102K	CHIP C 1000PF K		L56			L92-0639-05	CHIP FERRITE	
C549			CK73GB1H472K	CHIP C 4700PF K		L57			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
C550			CC73GCH1H220J	CHIP C 22PF J		L58			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C551-553			CK73GB1H102K	CHIP C 1000PF K		L59			L41-4795-33	SMALL FIXED INDUCTOR(4.7UH)	
C554			CC73GCH1H560J	CHIP C 56PF J		L60			L41-3363-08	SMALL FIXED INDUCTOR(3.3NH)	
						L61			L41-6865-08	SMALL FIXED INDUCTOR(6.8NH)	
C555			CK73GB1H102K	CHIP C 1000PF K		L62			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
C556			CC73GCH1H560J	CHIP C 56PF J		L63			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C557-559			CK73GB1H102K	CHIP C 1000PF K		L64 ,65			L41-2298-60	SMALL FIXED INDUCTOR(2.2UH)	
C560,561			CK73GB1H103K	CHIP C 0.010UF K		L66			L41-1275-08	SMALL FIXED INDUCTOR(12NH)	
C565			CK73GB1H102K	CHIP C 1000PF K		L67			L41-2295-33	SMALL FIXED INDUCTOR(2.2UH)	
						L69			L39-1480-15	TOROIDAL COIL	
C572			CC73GCH1H080B	CHIP C 8.0PF B		L71			L34-4816-05	COIL	
C573			CC73GCH1H120G	CHIP C 12PF G		L72			L34-4612-05	AIR-CORE COIL(6T)	
C574			CC73GCH1H100C	CHIP C 10PF C		L73			L34-4611-15	AIR-CORE COIL(10T)	
C575			CK73GB1H103K	CHIP C 0.010UF K		L75			L41-6875-33	SMALL FIXED INDUCTOR(0.068UH)	
C577-580			CK73GB1H103K	CHIP C 0.010UF K		L76			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)	
						L77			L40-1588-67	SMALL FIXED INDUCTOR(150NH)	
C581,582			CS77BB21A470M	CHIP TNTL 47UF 10WV		L78 -81			L41-1598-60	SMALL FIXED INDUCTOR(1.5UH)	
C583			CK73GB1H103K	CHIP C 0.010UF K		L82			L41-3375-33	SMALL FIXED INDUCTOR(0.033UH)	
C584			CK73EB1E106K	CHIP C 10UF K		L83			L41-1595-33	SMALL FIXED INDUCTOR(1.5UH)	
C588,589			CK73GB1H102K	CHIP C 1000PF K		L84			L40-1088-67	SMALL FIXED INDUCTOR(100NH)	
C695			CK73GB1H102K	CHIP C 1000PF K		L85			L40-8278-67	SMALL FIXED INDUCTOR(82NH)	
C708-711			CK73GB1E105K	CHIP C 1.0UF K							
C712-714			C93-1803-05	CHIP C 10UF M							
C715			CC73GCH1H101J	CHIP C 100PF J							
TC1 -5			C05-0384-05	CERAMIC TRIMMER CAPACITOR(10P)							
CN1			E41-3176-05	FLAT CABLE CONNECTOR							
CN35			E41-1684-05	PIN ASSY							
CN42			E04-0491-05	PIN SOCKET							
CN59			E04-0490-05	PIN SOCKET							
CN63-65			E04-0490-05	PIN SOCKET							

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L86			L41-6875-33	SMALL FIXED INDUCTOR(0.068UH)		L152			L41-3975-33	SMALL FIXED INDUCTOR(0.039UH)	
L87			L39-1480-15	TOROIDAL COIL		L153			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L88			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)		L154			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
L89			L41-8285-33	SMALL FIXED INDUCTOR(0.82UH)		L155			L41-3375-33	SMALL FIXED INDUCTOR(0.033UH)	
L90			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)		L156			L41-3975-33	SMALL FIXED INDUCTOR(0.039UH)	
L91			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L157			L41-3375-33	SMALL FIXED INDUCTOR(0.033UH)	
L92			L41-6885-33	SMALL FIXED INDUCTOR(0.68UH)		L158			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L93			L40-1288-67	SMALL FIXED INDUCTOR(120NH)		L159			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L94			L41-3391-08	SMALL FIXED INDUCTOR(3.3NH)		L160			L41-2295-33	SMALL FIXED INDUCTOR(2.2UH)	
L95			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L161,162			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L96			L41-1085-14	SMALL FIXED INDUCTOR(100NH)		L163,164			L41-8275-33	SMALL FIXED INDUCTOR(0.082UH)	
L97			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L165			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)	
L98			L41-1085-14	SMALL FIXED INDUCTOR(100NH)		L167,168			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L99			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L169			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
L100			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)		L170			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
L101			L41-1085-14	SMALL FIXED INDUCTOR(100NH)		X1			L77-1906-05	CRYSTAL RESONATOR(15.6MHZ)	
L102			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		R2 -13			RK73GB2A101J	CHIP R 100 J 1/10W	
L103			L40-1288-67	SMALL FIXED INDUCTOR(120NH)		R16			RK73GB2A000J	CHIP R 0 J 1/10W	
L104			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)		R17			RN73GH1J333D	CHIP R 33K D 1/16W	
L105			L41-3975-33	SMALL FIXED INDUCTOR(0.039UH)		R18			RN73GH1J272D	CHIP R 2.7K D 1/16W	
L106			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)		R19			RN73GH1J392D	CHIP R 3.9K D 1/16W	
L107			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)		R20			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
L108			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)		R29			RK73GB2A000J	CHIP R 0 J 1/10W	
L109			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		R31			RK73GB2A103J	CHIP R 10K J 1/10W	
L110			L41-2275-33	SMALL FIXED INDUCTOR(0.022UH)		R32 -34			RK73GB2A101J	CHIP R 100 J 1/10W	
L111			L41-8285-33	SMALL FIXED INDUCTOR(0.82UH)		R35			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
L112			L34-4936-05	COIL		R36			RK73GB2A100J	CHIP R 10 J 1/10W	
L113			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)		R37			RK73GB2A101J	CHIP R 100 J 1/10W	
L114			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		R38			RK73GB2A822J	CHIP R 8.2K J 1/10W	
L115			L41-2275-33	SMALL FIXED INDUCTOR(0.022UH)		R39			RK73GB2A153J	CHIP R 15K J 1/10W	
L116			L34-4936-05	COIL		R42			RK73GB2A391J	CHIP R 390 J 1/10W	
L117			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)		R44 -49			RK73GB2A101J	CHIP R 100 J 1/10W	
L118			L41-8275-33	SMALL FIXED INDUCTOR(0.082UH)		R50			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L119			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R55 -60			RK73GB2A101J	CHIP R 100 J 1/10W	
L120			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)		R61			RK73GB2A153J	CHIP R 15K J 1/10W	
L121			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R62			RK73GB2A822J	CHIP R 8.2K J 1/10W	
L122			L41-1085-14	SMALL FIXED INDUCTOR(100NH)		R63			RK73GB2A470J	CHIP R 47 J 1/10W	
L123			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)		R64			RK73GB2A100J	CHIP R 10 J 1/10W	
L124			L41-3385-33	SMALL FIXED INDUCTOR(0.33UH)		R65			RK73GB2A180J	CHIP R 18 J 1/10W	
L125			L41-5678-14	SMALL FIXED INDUCTOR(56NH)		R66			RK73GB2A331J	CHIP R 330 J 1/10W	
L126			L41-8275-14	SMALL FIXED INDUCTOR(82NH)		R67			RK73GB2A683J	CHIP R 68K J 1/10W	
L127,128			L41-1085-14	SMALL FIXED INDUCTOR(100NH)		R68			RK73GB2A101J	CHIP R 100 J 1/10W	
L129			L34-4936-05	COIL		R69 -71			RK73GB2A000J	CHIP R 0 J 1/10W	
L130			L41-2785-33	SMALL FIXED INDUCTOR(0.27UH)		R72			RK73GB2A470J	CHIP R 47 J 1/10W	
L131			L41-5678-14	SMALL FIXED INDUCTOR(56NH)		R73			RK73GB2A153J	CHIP R 15K J 1/10W	
L132			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R74			RK73GB2A682J	CHIP R 6.8K J 1/10W	
L133,134			L40-1288-67	SMALL FIXED INDUCTOR(120NH)		R75			RK73GB2A122J	CHIP R 1.2K J 1/10W	
L135			L34-4936-05	COIL		R76			RK73GB2A000J	CHIP R 0 J 1/10W	
L136			L41-3385-33	SMALL FIXED INDUCTOR(0.33UH)		R77			RK73GB2A331J	CHIP R 330 J 1/10W	
L137			L41-5678-14	SMALL FIXED INDUCTOR(56NH)		R78			RK73GB2A683J	CHIP R 68K J 1/10W	
L138			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R80			RK73GB2A101J	CHIP R 100 J 1/10W	
L139,140			L41-1085-14	SMALL FIXED INDUCTOR(100NH)		R81			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L141			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		R82			RK73GB2A101J	CHIP R 100 J 1/10W	
L142			L41-2285-14	SMALL FIXED INDUCTOR(220NH)		R83			RK73GB2A152J	CHIP R 1.5K J 1/10W	
L144			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		R84			RK73GB2A000J	CHIP R 0 J 1/10W	
L145,146			L41-2785-14	SMALL FIXED INDUCTOR(270NH)		R85			RK73GB2A221J	CHIP R 220 J 1/10W	
L147			L41-2285-14	SMALL FIXED INDUCTOR(220NH)		R86 ,87			RK73GB2A000J	CHIP R 0 J 1/10W	
L148,149			L34-4936-05	COIL		R88			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L150			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)		R89 ,90			RK73GB2A153J	CHIP R 15K J 1/10W	
L151			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)							

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R91			RK73GB2A101J	CHIP R 100 J 1/10W		R172			RK73GB2A393J	CHIP R 39K J 1/10W	
R92			RK73GB2A000J	CHIP R 0 J 1/10W		R173			RK73GB2A180J	CHIP R 18 J 1/10W	
R93			RK73GB2A221J	CHIP R 220 J 1/10W		R174			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R94 ,95			RK73GB2A103J	CHIP R 10K J 1/10W		R175			RK73GB2A101J	CHIP R 100 J 1/10W	
R96			RK73GB2A123J	CHIP R 12K J 1/10W		R176			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R97 ,98			RK73GB2A153J	CHIP R 15K J 1/10W		R177			RK73GB2A470J	CHIP R 47 J 1/10W	
R100			RK73GB2A102J	CHIP R 1.0K J 1/10W		R178			RK73GB2A180J	CHIP R 18 J 1/10W	
R101			RK73GB2A392J	CHIP R 3.9K J 1/10W		R179			RK73GB2A103J	CHIP R 10K J 1/10W	
R102			RK73GB2A102J	CHIP R 1.0K J 1/10W		R180			RK73GB2A000J	CHIP R 0 J 1/10W	
R103			RK73GB2A000J	CHIP R 0 J 1/10W		R181			RK73GB2A180J	CHIP R 18 J 1/10W	
R105			RK73GB2A101J	CHIP R 100 J 1/10W		R182			RK73GB2A101J	CHIP R 100 J 1/10W	
R106			RN73GH1J103D	CHIP R 10K D 1/16W		R183			RK73GB2A470J	CHIP R 47 J 1/10W	
R107			RN73GH1J473D	CHIP R 47K D 1/16W		R184			RK73GB2A103J	CHIP R 10K J 1/10W	
R108			RN73GH1J103D	CHIP R 10K D 1/16W		R185			RK73GB2A331J	CHIP R 330 J 1/10W	
R109			RN73GH1J473D	CHIP R 47K D 1/16W		R187			RK73GB2A000J	CHIP R 0 J 1/10W	
R110			RK73GB2A472J	CHIP R 4.7K J 1/10W		R188			RK73GB2A101J	CHIP R 100 J 1/10W	
R111			RK73GB2A102J	CHIP R 1.0K J 1/10W		R189			RK73GB2A000J	CHIP R 0 J 1/10W	
R112,113			RK73GB2A153J	CHIP R 15K J 1/10W		R190			RK73GB2A103J	CHIP R 10K J 1/10W	
R114			RK73GB2A392J	CHIP R 3.9K J 1/10W		R191			RK73GB2A101J	CHIP R 100 J 1/10W	
R115			RK73GB2A103J	CHIP R 10K J 1/10W		R192			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R116			RK73GB2A102J	CHIP R 1.0K J 1/10W		R193			RK73GB2A153J	CHIP R 15K J 1/10W	
R117,118			RN73GH1J473D	CHIP R 47K D 1/16W		R194			RK73GB2A104J	CHIP R 100K J 1/10W	
R119			RK73GB2A102J	CHIP R 1.0K J 1/10W		R195			RK73GB2A331J	CHIP R 330 J 1/10W	
R120-123			RK73GB2A101J	CHIP R 100 J 1/10W		R196			RK73GB2A391J	CHIP R 390 J 1/10W	
R124			RK73GB2A103J	CHIP R 10K J 1/10W		R197,198			RK73GB2A000J	CHIP R 0 J 1/10W	
R125			RK73GB2A223J	CHIP R 22K J 1/10W		R199			RK73GB2A104J	CHIP R 100K J 1/10W	
R126			RK73GB2A100J	CHIP R 10 J 1/10W		R200			RN73GH1J103D	CHIP R 10K D 1/16W	
R128			RK73GB2A470J	CHIP R 47 J 1/10W		R201			RK73GB2A000J	CHIP R 0 J 1/10W	
R129			RK73GB2A101J	CHIP R 100 J 1/10W		R202			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R131			RK73GB2A101J	CHIP R 100 J 1/10W		R203			RK73GB2A100J	CHIP R 10 J 1/10W	
R132			RK73GB2A222J	CHIP R 2.2K J 1/10W		R204			RK73GB2A000J	CHIP R 0 J 1/10W	
R133			RK73GB2A102J	CHIP R 1.0K J 1/10W		R205			RK73GB2A104J	CHIP R 100K J 1/10W	
R135,136			RK73GB2A180J	CHIP R 18 J 1/10W		R207			RK73GB2A101J	CHIP R 100 J 1/10W	
R137			RK73GB2A101J	CHIP R 100 J 1/10W		R208			RK73GB2A470J	CHIP R 47 J 1/10W	
R138			RK73GB2A100J	CHIP R 10 J 1/10W		R209			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R139,140			RN73GH1J103D	CHIP R 10K D 1/16W		R212			RK73GB2A104J	CHIP R 100K J 1/10W	
R141			RK73GB2A331J	CHIP R 330 J 1/10W		R213			RK73GB2A181J	CHIP R 180 J 1/10W	
R142			RN73GE1J221D	CHIP R 220 D 1/16W		R214			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R143			RK73GB2A180J	CHIP R 18 J 1/10W		R215			RK73GB2A331J	CHIP R 330 J 1/10W	
R144			RK73GB2A822J	CHIP R 8.2K J 1/10W		R216			RK73GB2A470J	CHIP R 47 J 1/10W	
R145			RK73GB2A153J	CHIP R 15K J 1/10W		R217			RK73GB2A000J	CHIP R 0 J 1/10W	
R146			RK73GB2A822J	CHIP R 8.2K J 1/10W		R218			RN73GH1J103D	CHIP R 10K D 1/16W	
R147			RK73GB2A153J	CHIP R 15K J 1/10W		R219			RN73GH1J473D	CHIP R 47K D 1/16W	
R148			RK73GB2A470J	CHIP R 47 J 1/10W		R220			RN73GH1J103D	CHIP R 10K D 1/16W	
R149			RK73GB2A391J	CHIP R 390 J 1/10W		R221			RN73GH1J473D	CHIP R 47K D 1/16W	
R150			RK73GB2A331J	CHIP R 330 J 1/10W		R222,223			RK73GB2A151J	CHIP R 150 J 1/10W	
R151			RK73GB2A103J	CHIP R 10K J 1/10W		R224			RK73GB2A000J	CHIP R 0 J 1/10W	
R152,153			RK73GB2A000J	CHIP R 0 J 1/10W		R225			RK73GB2A224J	CHIP R 220K J 1/10W	
R154			RK73GB2A331J	CHIP R 330 J 1/10W		R226,227			RN73GH1J473D	CHIP R 47K D 1/16W	
R155			RN73GE1J151D	CHIP R 150 D 1/16W		R228			RK73GB2A101J	CHIP R 100 J 1/10W	
R157,158			RN73GE1J391D	CHIP R 390 D 1/16W		R229			RK73GB2A000J	CHIP R 0 J 1/10W	
R161,162			RK73GB2A102J	CHIP R 1.0K J 1/10W		R230			RK73GB2A101J	CHIP R 100 J 1/10W	
R163			RK73GB2A000J	CHIP R 0 J 1/10W		R231			RK73GB2A000J	CHIP R 0 J 1/10W	
R164			RK73GB2A102J	CHIP R 1.0K J 1/10W		R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R165			RK73GB2A000J	CHIP R 0 J 1/10W		R233			RK73GB2A470J	CHIP R 47 J 1/10W	
R166			RK73GB2A101J	CHIP R 100 J 1/10W		R234			RK73GB2A101J	CHIP R 100 J 1/10W	
R167,168			RK73GB2A153J	CHIP R 15K J 1/10W		R237			RK73GB2A000J	CHIP R 0 J 1/10W	
R169			RK73GB2A470J	CHIP R 47 J 1/10W		R238			RK73GB2A470J	CHIP R 47 J 1/10W	
R170			RK73GB2A000J	CHIP R 0 J 1/10W		R239			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R171			RK73GB2A273J	CHIP R 27K J 1/10W		R241			RK73GB2A102J	CHIP R 1.0K J 1/10W	

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R242			RK73GB2A180J	CHIP R 18 J 1/10W		R316-320			RK73GB2A000J	CHIP R 0 J 1/10W	
R244			RK73GB2A000J	CHIP R 0 J 1/10W		R321			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R245,246			RN73GH1J103D	CHIP R 10K D 1/16W		R322-324			RK73GB2A000J	CHIP R 0 J 1/10W	
R247			RK73GB2A391J	CHIP R 390 J 1/10W		R325-327			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R248-250			RK73GB2A000J	CHIP R 0 J 1/10W		R328			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R251-253			RK73GB2A102J	CHIP R 1.0K J 1/10W		R329			RK73GB2A180J	CHIP R 18 J 1/10W	
R254			RK73GB2A100J	CHIP R 10 J 1/10W		R330			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R255			RK73GB2A102J	CHIP R 1.0K J 1/10W		R331			RK73GB2A271J	CHIP R 270 J 1/10W	
R256,257			RN73GE1J391D	CHIP R 390 D 1/16W		R333,334			RK73GB2A180J	CHIP R 18 J 1/10W	
R258,259			RK73GB2A102J	CHIP R 1.0K J 1/10W		R335			RK73GB2A271J	CHIP R 270 J 1/10W	
R260			RK73GB2A152J	CHIP R 1.5K J 1/10W		R336			RK73GB2A180J	CHIP R 18 J 1/10W	
R261			RK73GB2A101J	CHIP R 100 J 1/10W		R337			RK73GB2A153J	CHIP R 15K J 1/10W	
R262,263			RK73GB2A153J	CHIP R 15K J 1/10W		R338			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R264			RK73GB2A000J	CHIP R 0 J 1/10W		R339			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R265			RK73GB2A220J	CHIP R 22 J 1/10W		R340			RK73GB2A470J	CHIP R 47 J 1/10W	
R266			RK73GB2A101J	CHIP R 100 J 1/10W		R341			RK73GB2A101J	CHIP R 100 J 1/10W	
R267			RK73GB2A271J	CHIP R 270 J 1/10W		R342			RK73GB2A470J	CHIP R 47 J 1/10W	
R268			RK73GB2A000J	CHIP R 0 J 1/10W		R343,344			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R269			RK73GB2A220J	CHIP R 22 J 1/10W		R345			RK73GB2A473J	CHIP R 47K J 1/10W	
R270			RK73GB2A680J	CHIP R 68 J 1/10W		R346			RK73GB2A561J	CHIP R 560 J 1/10W	
R271			RK73GB2A102J	CHIP R 1.0K J 1/10W		R347			RK73GB2A101J	CHIP R 100 J 1/10W	
R272			RK73GB2A220J	CHIP R 22 J 1/10W		R348			RK73GB2A471J	CHIP R 470 J 1/10W	
R273			RK73GB2A101J	CHIP R 100 J 1/10W		R349			RK73GB2A103J	CHIP R 10K J 1/10W	
R274			RK73GB2A220J	CHIP R 22 J 1/10W		R350			RK73GB2A000J	CHIP R 0 J 1/10W	
R275			RK73GB2A153J	CHIP R 15K J 1/10W		R352			RK73GB2A000J	CHIP R 0 J 1/10W	
R276			RK73GB2A682J	CHIP R 6.8K J 1/10W		R353			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R277			RK73GB2A103J	CHIP R 10K J 1/10W		R354			RK73GB2A120J	CHIP R 12 J 1/10W	
R278			RK73GB2A821J	CHIP R 820 J 1/10W		R355,356			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R279,280			RK73GB2A470J	CHIP R 47 J 1/10W		R357			RK73GB2A473J	CHIP R 47K J 1/10W	
R281			RK73GB2A153J	CHIP R 15K J 1/10W		R358			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R282			RK73GB2A682J	CHIP R 6.8K J 1/10W		R359			RK73GB2A471J	CHIP R 470 J 1/10W	
R283			RK73GB2A271J	CHIP R 270 J 1/10W		R360			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R284			RK73GB2A152J	CHIP R 1.5K J 1/10W		R361			RK73GB2A101J	CHIP R 100 J 1/10W	
R285			RK73GB2A100J	CHIP R 10 J 1/10W		R362			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R287			RK73GB2A102J	CHIP R 1.0K J 1/10W		R363-366			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R288			RK73GB2A470J	CHIP R 47 J 1/10W		R367			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R289			RK73GB2A153J	CHIP R 15K J 1/10W		R368			RK73GB2A821J	CHIP R 820 J 1/10W	
R290			RK73GB2A682J	CHIP R 6.8K J 1/10W		R369			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R291			RK73GB2A101J	CHIP R 100 J 1/10W		R370			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R292			RK73GB2A104J	CHIP R 100K J 1/10W		R371			RK73GB2A101J	CHIP R 100 J 1/10W	
R293			RK73GB2A271J	CHIP R 270 J 1/10W		R372			RK73GB2A271J	CHIP R 270 J 1/10W	
R294			RK73GB2A000J	CHIP R 0 J 1/10W		R373,374			RK73GB2A121J	CHIP R 120 J 1/10W	
R295			RK73GB2A821J	CHIP R 820 J 1/10W		R375			RK73GB2A151J	CHIP R 150 J 1/10W	
R296			RK73GB2A152J	CHIP R 1.5K J 1/10W		R376			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R297			RK73GB2A000J	CHIP R 0 J 1/10W		R377			RK73GB2A180J	CHIP R 18 J 1/10W	
R298			RK73GB2A474J	CHIP R 470K J 1/10W		R378,379			RK73GB2A470J	CHIP R 47 J 1/10W	
R299			RK73GB2A103J	CHIP R 10K J 1/10W		R380			RK73GB2A390J	CHIP R 39 J 1/10W	
R300-302			RK73GB2A101J	CHIP R 100 J 1/10W		R381			RK73GB2A271J	CHIP R 270 J 1/10W	
R303			RK73GB2A681J	CHIP R 680 J 1/10W		R382,383			RK73GB2A121J	CHIP R 120 J 1/10W	
R304			RK73GB2A821J	CHIP R 820 J 1/10W		R384			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R305			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R385			RK73GB2A151J	CHIP R 150 J 1/10W	
R306			RK73GB2A821J	CHIP R 820 J 1/10W		R386			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R307			RK73GB2A180J	CHIP R 18 J 1/10W		R387			RK73GB2A470J	CHIP R 47 J 1/10W	
R308,309			RK73GB2A152J	CHIP R 1.5K J 1/10W		R388			RK73GB2A153J	CHIP R 15K J 1/10W	
R310			RK73GB2A104J	CHIP R 100K J 1/10W		R389			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R311			RK73GB2A101J	CHIP R 100 J 1/10W		R390			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R312			RK73GB2A000J	CHIP R 0 J 1/10W		R391			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R313			RK73GB2A152J	CHIP R 1.5K J 1/10W		R392-394			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R314			RK73GB2A104J	CHIP R 100K J 1/10W		R395,396			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R315			RK73GB2A152J	CHIP R 1.5K J 1/10W		R397			RK73GB2A153J	CHIP R 15K J 1/10W	

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R399			RK73GB2A271J	CHIP R 270 J 1/10W		D52 -55			HVC131	DIODE	
R400			RK73GB2A102J	CHIP R 1.0K J 1/10W		D56			1SV312-F	DIODE	
R401			RK73GB2A470J	CHIP R 47 J 1/10W		D57 -59			1SS388F	DIODE	
R402			RK73GB2A180J	CHIP R 18 J 1/10W		D60			1SR154-400	DIODE	
R403			RK73GB2A101J	CHIP R 100 J 1/10W		D63			HSC277	DIODE	
R404			RK73GB2A821J	CHIP R 820 J 1/10W		IC1			Note1	MOS-IC	
R405			RK73GB2A272J	CHIP R 2.7K J 1/10W		IC2			TA4805BF	MOS-IC	
R406			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC3			TA48M033F-SNQ	ANALOGUE IC	
R407			RK73GB2A180J	CHIP R 18 J 1/10W		IC5 ,6			TC74HC4094AFF	MOS-IC	
R408,409			RK73GB2A271J	CHIP R 270 J 1/10W		IC7 -9			TC7W125FU-F	MOS-IC	
R410			RK73GB2A180J	CHIP R 18 J 1/10W		IC10			Note1	MOS-IC	
R411			RK73GB2A152J	CHIP R 1.5K J 1/10W		IC11,12			AD9835BRUZ	MOS-IC	
R412			RK73GB2A470J	CHIP R 47 J 1/10W		IC13			XC6219B182PR-G	MOS-IC	
R413,414			RK73GB2A271J	CHIP R 270 J 1/10W		IC14			AD9951YSVZ	MOS-IC	
R415			RK73GB2A180J	CHIP R 18 J 1/10W		IC15			UPC2710TB-A	ANALOGUE IC	
R416			RK73GB2A152J	CHIP R 1.5K J 1/10W		IC16			Note1	MOS-IC	
R417,418			RK73GB2A271J	CHIP R 270 J 1/10W		IC17			BA00DD0WHFP	ANALOGUE IC	
R419			RK73GB2A180J	CHIP R 18 J 1/10W		IC18			TC7W125FU-F	MOS-IC	
R420			RK73GB2A271J	CHIP R 270 J 1/10W		IC20			TC7S66FUF	MOS-IC	
R421			RK73GB2A821J	CHIP R 820 J 1/10W		Q1 -3			2SC4617(R)	TRANSISTOR	
R422,423			RK73GB2A101J	CHIP R 100 J 1/10W		Q4			2SC4649(N,P)	TRANSISTOR	
R424			RK73GB2A000J	CHIP R 0 J 1/10W		Q5			2SC4617(R)	TRANSISTOR	
R426,427			RK73GB2A000J	CHIP R 0 J 1/10W		Q6 ,7			RN47A5-F	TRANSISTOR	
R428			RK73GB2A103J	CHIP R 10K J 1/10W		Q8			2SC4116(BL)F	TRANSISTOR	
R636			RK73GB2A000J	CHIP R 0 J 1/10W		Q9 ,10			LTC044EEBFS8	TRANSISTOR	
R639			RK73GB2A000J	CHIP R 0 J 1/10W		Q11			2SC5108(Y)F	TRANSISTOR	
R642			RK73GB2A000J	CHIP R 0 J 1/10W		Q12 ,13			2SC4617(R)	TRANSISTOR	
R645,646			RK73GB2A000J	CHIP R 0 J 1/10W		Q14 ,15			SSM3K15TE(F)	FET	
R647			RK73GB2A101J	CHIP R 100 J 1/10W		Q16 -18			MCH3914(7)-H	FET	
R648,649			RK73GB2A560J	CHIP R 56 J 1/10W		Q19 -21			2SC4617(R)	TRANSISTOR	
R650			RK73GB2A470J	CHIP R 47 J 1/10W		Q23 ,24			2SC5108(Y)F	TRANSISTOR	
R654-657			RK73GB2A560J	CHIP R 56 J 1/10W		Q25			2SC4617(R)	TRANSISTOR	
D2 ,3			1SV228-F	VARIABLE CAPACITANCE DIODE		Q26 ,27			RN47A5-F	TRANSISTOR	
D4			HVC350B	VARIABLE CAPACITANCE DIODE		Q28			UMX2N	TRANSISTOR	
D5			1SV283F	VARIABLE CAPACITANCE DIODE		Q29			2SC4617(R)	TRANSISTOR	
D6 ,7			HSC277	DIODE		Q30			LTA014EEBFS8	TRANSISTOR	
D8			1SV283F	VARIABLE CAPACITANCE DIODE		Q31 -33			LTC044EEBFS8	TRANSISTOR	
D9 ,10			HSC277	DIODE		Q34			2SC5108(Y)F	TRANSISTOR	
D11			KV1470-G	VARIABLE CAPACITANCE DIODE		Q35			LTA014EEBFS8	TRANSISTOR	
D12 ,13			1SV228-F	VARIABLE CAPACITANCE DIODE		Q36			LTC044EEBFS8	TRANSISTOR	
D14 ,15			HSC277	DIODE		Q37 ,38			SSM3K15TE(F)	FET	
D16			HVC131	DIODE		Q39 ,40			MCH3914(7)-H	FET	
D17 ,18			HSC277	DIODE		Q41			LTA014EEBFS8	TRANSISTOR	
D19			RB715F	DIODE		Q42			LTC044EEBFS8	TRANSISTOR	
D20			MC2858-T111	DIODE		Q43			LTA014EEBFS8	TRANSISTOR	
D21			HSC277	DIODE		Q44			LTC044EEBFS8	TRANSISTOR	
D22 ,23			HVC131	DIODE		Q45			LTA014EEBFS8	TRANSISTOR	
D24			MC2858-T111	DIODE		Q46			LTC044EEBFS8	TRANSISTOR	
D25 -27			HVC131	DIODE		Q47			LTA014EEBFS8	TRANSISTOR	
D28 -30			HSC277	DIODE		Q48			LTC044EEBFS8	TRANSISTOR	
D32 -34			HVC131	DIODE		Q49 ,50			2SC4617(R)	TRANSISTOR	
D35			HSC277	DIODE		Q51			2SC4649(N,P)	TRANSISTOR	
D36			HVC131	DIODE		Q52			2SC4617(R)	TRANSISTOR	
D38			MC2858-T111	DIODE		Q53			UMX2N	TRANSISTOR	
D39			1SR154-400	DIODE		Q54 ,55			2SC4116(BL)F	TRANSISTOR	
D40			HSC277	DIODE		Q56 ,57			2SC4649(N,P)	TRANSISTOR	
D43			HSC277	DIODE		Q58			2SC4116(BL)F	TRANSISTOR	
D44 -47			HVC131	DIODE		Q59			RN47A5-F	TRANSISTOR	
D48 -51			HSC277	DIODE		Q60			2SC4649(N,P)	TRANSISTOR	
						Q61			2SC5108(Y)F	TRANSISTOR	

PARTS LIST

PLL UNIT (SUB) (X50-3230-00)

AT UNIT (X53-4410-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
Q62			RN47A5-F	TRANSISTOR		C83			CK73FB1E104K	CHIP C 0.10UF K	
Q63 ,64			SSM3K15TE(F)	FET		C84 ,85			CK73FB1C105K	CHIP C 1.0UF K	
Q65			2SC4617(R)	TRANSISTOR		C86			CC73GCH1H101J	CHIP C 100PF J	
Q66			2SC4116(BL)F	TRANSISTOR		C87			CC73GCH1H100D	CHIP C 10PF D	
Q68			RN47A5-F	TRANSISTOR		C88			CC73GCH1H101J	CHIP C 100PF J	
AT UNIT (X53-4410-00)						C89			CK73GB1E104K	CHIP C 0.10UF K	
C1			CC73GCH1H040B	CHIP C 4.0PF B		C90			CK73GB1E105K	CHIP C 1.0UF K	
C4			CK73FB1H103K	CHIP C 0.010UF K		C93			CK73EB1E106K	CHIP C 10UF K	
C17			CK73FB1H103K	CHIP C 0.010UF K		C95			CK73GB1H103K	CHIP C 0.010UF K	
C18			CK73FB1H472K	CHIP C 4700PF K		C96			CK73EB1E106K	CHIP C 10UF K	
C19			CK73FB1H102K	CHIP C 1000PF K		C97			C93-1873-05	CHIP C 10000PF 630WV	
C20			CK73FB1H103K	CHIP C 0.010UF K		C98			CK73GB1E103K	CHIP C 0.010UF K	
C21			C93-0553-05	CHIP C 3.0PF C		C99			CK73GB1E105K	CHIP C 1.0UF K	
C22			C93-1880-05	CHIP C 22PF 630WV		C100			CK73EB1E106K	CHIP C 10UF K	
C23			C93-0553-05	CHIP C 3.0PF C		C101			CK73FB1H102K	CHIP C 1000PF K	
C24			C93-1880-05	CHIP C 22PF 630WV		C102			CK73EB1E106K	CHIP C 10UF K	
C26 ,27			CK73FB1H103K	CHIP C 0.010UF K		C103			CK73FB1E104K	CHIP C 0.010UF K	
C29 ,30			CK73GB1H222K	CHIP C 2200PF K		C105,106			CK73GB1H103K	CHIP C 0.010UF K	
C32 ,33			CK73FB1H103K	CHIP C 0.010UF K		C108			CK73FB1H102K	CHIP C 1000PF K	
C38			CK73GB1H103K	CHIP C 0.010UF K		C109-112			CK73GB1H103K	CHIP C 0.010UF K	
C39			CK73GB1H102K	CHIP C 1000PF K		C113			C93-0555-05	CHIP C 5.0PF C	
C40			CK73FB1H102K	CHIP C 1000PF K		C114			CC73FCH1H101J	CHIP C 100PF J	
C41			CK73GB1H102K	CHIP C 1000PF K		C115			CK73GB1H102K	CHIP C 1000PF K	
C42			CK73FB1H102K	CHIP C 1000PF K		C116,117			CK73GB1H103K	CHIP C 0.010UF K	
C43 ,44			CK73FB1H103K	CHIP C 0.010UF K		C118			CD04AY1E470M	ELECTRO 47UF 25WV	
C45			CK73FB1H102K	CHIP C 1000PF K		C119			CK73FB1H103K	CHIP C 0.010UF K	
C46 -48			CK73FB1E104K	CHIP C 0.10UF K		C120			C93-0555-05	CHIP C 5.0PF C	
C49			CK73FB1C105K	CHIP C 1.0UF K		C121			CC73FCH1H820J	CHIP C 82PF J	
C50			CK73FB1E104K	CHIP C 0.10UF K		C122			CK73FB1E104K	CHIP C 0.10UF K	
C51			C93-0715-05	CHIP C 1000PF 630WV		C123,124			CK73GB1H103K	CHIP C 0.010UF K	
C52			C93-1908-05	CHIP C 0.47UF 250WV		C125			CK73FB1H102K	CHIP C 1000PF K	
C53 -55			CK73FB1H103K	CHIP C 0.010UF K		C126			CK73FB1E104K	CHIP C 0.10UF K	
C59			CK73FB1C105K	CHIP C 1.0UF K		C130-133			CK73FB1C105K	CHIP C 1.0UF K	
C60			CK73FB1H102K	CHIP C 1000PF K		C141			CC73GCH1H390G	CHIP C 39PF G	
C61			CK73FB1E104K	CHIP C 0.10UF K		C143			CC73GCH1H050B	CHIP C 5.0PF B	
C62			C93-0715-05	CHIP C 1000PF 630WV		C147			CC73FCH1H030B	CHIP C 3.0PF B	
C63			C93-1908-05	CHIP C 0.47UF 250WV		C150-152			CC73FCH1H102J	CHIP C 1000PF J	
C64			C93-1873-05	CHIP C 10000PF 630WV		C153			CC73GCH1H100D	CHIP C 10PF D	
C65			CK73FB1H102K	CHIP C 1000PF K		C154			CC73FCH1H102J	CHIP C 1000PF J	
C66 ,67			CK73FB1E104K	CHIP C 0.10UF K		C155			CC73GCH1H100D	CHIP C 10PF D	
C68			CC73FCH1H820J	CHIP C 82PF J		C156			CC73FCH1H102J	CHIP C 1000PF J	
C69			CK73FB1H103K	CHIP C 0.010UF K		C157			CC73GCH1H101J	CHIP C 100PF J	
C70			CK73FB1C105K	CHIP C 1.0UF K		C160,161			CK73GB1H103K	CHIP C 0.010UF K	
C71			CK73FB1E104K	CHIP C 0.10UF K		C171			CC73GCH1H470J	CHIP C 47PF J	
C72 ,73			CK73FB1H103K	CHIP C 0.010UF K		C172			CC73GCH1H080B	CHIP C 8.0PF B	
C74			CK73FB1H472K	CHIP C 4700PF K		C173			CC73GCH1H470J	CHIP C 47PF J	
C75			CK73FB1H102K	CHIP C 1000PF K		C176,177			C93-1909-05	CHIP C 68000PF 630WV	
C76			CK73FB1H103K	CHIP C 0.010UF K		C180			CC73GCH1H180G	CHIP C 18PF G	
C78			CK73FB1H103K	CHIP C 0.010UF K		C181-183			CC73GCH1H390G	CHIP C 39PF G	
C80			CK73FB1H103K	CHIP C 0.010UF K		C184			CC73GCH1H270G	CHIP C 27PF G	
C81 ,82			CK73GB1H102K	CHIP C 1000PF K		C185-187			CC73GCH1H390G	CHIP C 39PF G	
						C188,189			CC73GCH1H020B	CHIP C 2.0PF B	
						C190			CC73GCH1H220G	CHIP C 22PF G	
						C201-206			C91-3115-05	HV C 10PF 2KWV	
						C207,208			CK73FB1H103K	CHIP C 0.010UF K	
						C209,210			C91-3115-05	HV C 10PF 2KWV	
						C211,212			CK73FB1H103K	CHIP C 0.010UF K	
						C213			C91-3211-05	HV C 10PF 6KWV	
						C214,215			CK73FB1H103K	CHIP C 0.010UF K	
						C216			C91-3210-05	HV C 18PF 6KWV	

PARTS LIST

AT UNIT (X53-4410-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C217,218			CK73FB1H103K	CHIP C 0.010UF K		J4 -6			E63-0406-05	PIN JACK	
C219,220			C91-3210-05	HV C 18PF 6KWV		J7			E63-0405-05	PIN JACK	
C221,222			CK73FB1H103K	CHIP C 0.010UF K		W201			E37-1575-05	LEAD WIRE WITH MINIPIN PLUG	
C223			C91-3209-05	HV C 56PF 6KWV		W202			E37-1576-05	LEAD WIRE WITH MINIPIN PLUG	
C224			C91-3210-05	HV C 18PF 6KWV							
C225,226			CK73FB1H103K	CHIP C 0.010UF K		L9			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C227			C91-3193-05	HV C 150PF 6KWV		L11 ,12			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C228,229			CK73FB1H103K	CHIP C 0.010UF K		L14 ,15			L39-1810-05	TOROIDAL COIL	
C230,231			C91-3123-05	HV C 150PF 3KWV		L17			L33-2600-05	CHOKE COIL	
C232,233			CK73FB1H103K	CHIP C 0.010UF K		L18			L39-1594-05	TOROIDAL COIL	
C240-245			C91-3115-05	HV C 10PF 2KWV		L19 -22			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C246,247			CK73FB1H103K	CHIP C 0.010UF K		L24			L39-1812-05	TOROIDAL COIL	
C248,249			C91-3115-05	HV C 10PF 2KWV		L25			L39-1574-05	TOROIDAL COIL	
C250,251			CK73FB1H103K	CHIP C 0.010UF K		L27			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C252			C91-3211-05	HV C 10PF 6KWV		L28			L39-1579-05	TOROIDAL COIL	
C253,254			CK73FB1H103K	CHIP C 0.010UF K		L29			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C255			C91-3210-05	HV C 18PF 6KWV		L30 -33			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C256,257			CK73FB1H103K	CHIP C 0.010UF K		L34			L33-2600-05	CHOKE COIL	
C258,259			C91-3210-05	HV C 18PF 6KWV		L35			L33-1554-05	CHOKE COIL	
C260,261			CK73FB1H103K	CHIP C 0.010UF K		L36			L41-1585-32	SMALL FIXED INDUCTOR(0.15UH)	
C262			C91-3210-05	HV C 18PF 6KWV		L38 -40			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C263			C91-3209-05	HV C 56PF 6KWV		L50 -52			L34-4616-05	AIR-CORE COIL(10T)	
C264,265			CK73FB1H103K	CHIP C 0.010UF K		L53			L34-4615-05	AIR-CORE COIL(9T)	
C266			C91-3193-05	HV C 150PF 6KWV		L55 -57			L92-0444-05	CHIP FERRITE	
C267,268			CK73FB1H103K	CHIP C 0.010UF K		L201-208			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C269,270			C91-3123-05	HV C 150PF 3KWV		L240-247			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C271,272			CK73FB1H103K	CHIP C 0.010UF K		L270			L33-1552-05	SMALL FIXED INDUCTOR(22UH)	
C273			CK73FB1E104K	CHIP C 0.10UF K		L281			L39-1543-05	TOROIDAL COIL	
C274			CK73FB1H102K	CHIP C 1000PF K		L282			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C275			CK73FB1E104K	CHIP C 0.10UF K		L283			L34-4923-05	AIR-CORE COIL(5.5T)	
C276			CK73FB1H102K	CHIP C 1000PF K		L284			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C277			CK73FB1E104K	CHIP C 0.10UF K		L285			L34-4922-05	AIR-CORE COIL(3.5T)	
C280-297			CK73FB1H103K	CHIP C 0.010UF K		L286			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C300,301			CC73GCH1H100D	CHIP C 10PF D		L287			L34-4922-05	AIR-CORE COIL(3.5T)	
C302			CC73GCH1H101J	CHIP C 100PF J		L288			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C303			CK73FB1H103K	CHIP C 0.010UF K		L289			L34-4921-05	AIR-CORE COIL(2.5T)	
C320			CC73GCH1H100D	CHIP C 10PF D		L290			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C321,322			CC73GCH1H101J	CHIP C 100PF J		L291			L34-4919-05	AIR-CORE COIL(1.5T)	
C323			CK73FB1H103K	CHIP C 0.010UF K		L292			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C330,331			CK73FB1E104K	CHIP C 0.10UF K		L293			L34-4919-05	AIR-CORE COIL(1.5T)	
C332			CK73FB1H102K	CHIP C 1000PF K		L294			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C340-342			CC73GCH1H100D	CHIP C 10PF D		L296			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C343			CK73FB1H103K	CHIP C 0.010UF K		L297		*	L34-4969-05	AIR-CORE COIL(2.5T)	
C360			CC73GCH1H101J	CHIP C 100PF J		L298			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
C361,362			CC73GCH1H100D	CHIP C 10PF D		L299			L34-4919-05	AIR-CORE COIL(1.5T)	
C363			CC73GCH1H101J	CHIP C 100PF J		L303-309			L92-0444-05	CHIP FERRITE	
C364			CC73GCH1H100D	CHIP C 10PF D		L330			L33-1552-05	SMALL FIXED INDUCTOR(22UH)	
C365,366			CC73GCH1H101J	CHIP C 100PF J		R5 ,6			RK73GB2A103J	CHIP R 10K J 1/10W	
C367-372			CK73GB1H103K	CHIP C 0.010UF K		R7 ,8			RK73GB2A104J	CHIP R 100K J 1/10W	
C373-375			CK73FB1H103K	CHIP C 0.010UF K		R10 ,11			RK73GB2A473J	CHIP R 47K J 1/10W	
C376-379			CK73GB1H103K	CHIP C 0.010UF K		R12 ,13		*	RK73EB2E224J	CHIP R 220K J 1/4W	
TC1			C05-0370-05	CERAMIC TRIMMER CAPACITOR(20P)		R14 -16			RK73FB2B103J	CHIP R 10K J 1/8W	
CN17,18			E04-0491-05	PIN SOCKET		R17			RK73FB2B102J	CHIP R 1.0K J 1/8W	
CN24			E40-6914-05	FLAT CABLE CONNECTOR		R18			RK73FB2B103J	CHIP R 10K J 1/8W	
CN37			E04-0491-05	PIN SOCKET		R19 -21			RK73PB2H6R8J	CHIP R 6.8 J 1/2W	
CN47			E40-6917-05	FLAT CABLE CONNECTOR		R24			RK73PB2H6R8J	CHIP R 6.8 J 1/2W	
CN360			E40-6908-05	FLAT CABLE CONNECTOR		R26			RK73FB2B473J	CHIP R 47K J 1/8W	
CN381			E41-1700-05	PIN ASSY		R28			RK73EB2E101J	CHIP R 100 J 1/4W	
J1 ,2			E13-0166-25	PIN JACK		R29			RK73GB2A101J	CHIP R 100 J 1/10W	
						R30			RK73GB2A333J	CHIP R 33K J 1/10W	

PARTS LIST

AT UNIT (X53-4410-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R31 -34			RK73FB2B104J	CHIP R 100K J 1/8W		K14 ,15			S76-0424-05	RELAY	
R35 -37			RK73GB2A101J	CHIP R 100 J 1/10W		K16			S76-0472-05	RELAY	
R70			RK73GB2A221J	CHIP R 220 J 1/10W		K17			S76-0458-05	RELAY	
R71 -77			RK73HB1J100J	CHIP R 10 J 1/16W		K18 ,19			S76-0464-05	RELAY	
R78 ,79			RK73PB2H820J	CHIP R 82 J 1/2W		K201-208			S76-0480-05	RELAY	
R80 ,81			RK73FB2B101J	CHIP R 100 J 1/8W		K240-247			S76-0480-05	RELAY	
R82 ,83			RK73GB2A102J	CHIP R 1.0K J 1/10W		K280-288			S76-0473-05	RELAY	
R84 ,85			RK73FB2B101J	CHIP R 100 J 1/8W		D4			1SS355	DIODE	
R87 ,88			RK73GB2A104J	CHIP R 100K J 1/10W		D9			1SS355	DIODE	
R89 -92			RK73GB2A000J	CHIP R 0 J 1/10W		D10 ,11			1SS372F	DIODE	
R93 ,94			RK73GB2A103J	CHIP R 10K J 1/10W		D12 -15			1SS355	DIODE	
R95			RK73FB2B000J	CHIP R 0 J 1/8W		D18	*		CG5350	SURGE ABSORBER	
R96 ,97			RK73GB2A471J	CHIP R 470 J 1/10W		D19			RM4C	DIODE	
R98			RK73FB2B103J	CHIP R 10K J 1/8W		D20 -22			1SS355	DIODE	
R100,101			RK73GB2A102J	CHIP R 1.0K J 1/10W		D23 ,24			CG590	SURGE ABSORBER	
R105			RK73FB2B000J	CHIP R 0 J 1/8W		D33 ,34			1SS355	DIODE	
R108,109			RK73GB2A105J	CHIP R 1.0M J 1/10W		D36 ,37			HSM88ASR-E	DIODE	
R112			RS14DB3A470J	FL-PROOF RS 47 J 1W		D38			CG590	SURGE ABSORBER	
R117			RS14DB3A470J	FL-PROOF RS 47 J 1W		D40			DZ2J062(M)	ZENER DIODE	
R118			RK73GB2A000J	CHIP R 0 J 1/10W		D57 ,58			RB480Y-90	DIODE	
R126			RK73FB2B180J	CHIP R 18 J 1/8W		D201-208			DAN202U	DIODE	
R127			RK73GB2A223J	CHIP R 22K J 1/10W		D240-247			DAN202U	DIODE	
R130,131			RK73GB2A103J	CHIP R 10K J 1/10W		D280-288			DAN202U	DIODE	
R132			RK73FB2B101J	CHIP R 100 J 1/8W		D360			DAN202U	DIODE	
R133			RK73FB2B103J	CHIP R 10K J 1/8W		IC2			TC7SHU04F-F	MOS-IC	
R134			RK73GB2A223J	CHIP R 22K J 1/10W		IC3			TA75S393F-F	MOS-IC	
R135			RK73GB2A000J	CHIP R 0 J 1/10W		IC4			TC7WH74FU-F	MOS-IC	
R136,137			RS14DB3A1R0J	FL-PROOF RS 1 J 1W		IC7			TC7SHU04F-F	MOS-IC	
R140,141			RK73FB2B000J	CHIP R 0 J 1/8W		IC8			TC74HC4094AFF	MOS-IC	
R146,147			RK73FB2B104J	CHIP R 100K J 1/8W		IC300			TC74HC4094AFF	MOS-IC	
R150			RK73FB2B000J	CHIP R 0 J 1/8W		IC320			TC74HC4094AFF	MOS-IC	
R151			RK73GB2A100J	CHIP R 10 J 1/10W		IC340			TC74HC4094AFF	MOS-IC	
R152			RK73FB2B472J	CHIP R 4.7K J 1/8W		Q12 ,13			2SC4617(R,S)	TRANSISTOR	
R153,154	*		RK73EB2E224J	CHIP R 220K J 1/4W		Q18			2SC4617(R,S)	TRANSISTOR	
R169			RK73GB2A103J	CHIP R 10K J 1/10W		Q19			2SB1188(Q,R)	TRANSISTOR	
R170			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q20			2SD2153(V,W)	TRANSISTOR	
R171			RK73GB2A103J	CHIP R 10K J 1/10W		Q25 ,26			2SK520-A(K44)	FET	
R172			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q27			DTC123YE	DIGITAL TRANSISTOR	
R173			RK73GB2A103J	CHIP R 10K J 1/10W		Q28			DTB143EK	DIGITAL TRANSISTOR	
R174			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q31	*		LTA043XUBFS8	TRANSISTOR	
R175			RK73GB2A103J	CHIP R 10K J 1/10W		Q50 -57			LTC024EUBFS8	TRANSISTOR	
R176			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q60 -63			2SA1586(Y,GR)F	TRANSISTOR	
R304-306			RK73GB2A101J	CHIP R 100 J 1/10W		Q64	*		LTA043XUBFS8	TRANSISTOR	
R324-326			RK73GB2A101J	CHIP R 100 J 1/10W		Q66 ,67	*		LTA043XUBFS8	TRANSISTOR	
R331			RK73GB2A473J	CHIP R 47K J 1/10W		Q300-307			DTC123YE	DIGITAL TRANSISTOR	
R340			RK73GB2A104G	CHIP R 100K G 1/10W		Q320-327			DTC123YE	DIGITAL TRANSISTOR	
R342			RK73GB2A103J	CHIP R 10K J 1/10W		Q340,341			2SK1830F	FET	
R347-349			RK73GB2A152J	CHIP R 1.5K J 1/10W		Q342-349			DTC123YE	DIGITAL TRANSISTOR	
R354			RK73GB2A473J	CHIP R 47K J 1/10W							
R360			RK73GB2A000J	CHIP R 0 J 1/10W							
R361-366			RK73GB2A101J	CHIP R 100 J 1/10W							
R370,371			RK73FB2B000J	CHIP R 0 J 1/8W							
R400-405			RK73FB2B000J	CHIP R 0 J 1/8W							
VR1			R12-6742-05	TRIMMING POT.(22K)							
K9			S76-0472-05	RELAY							
K10			S76-0424-05	RELAY							
K11			S76-0472-05	RELAY							
K12			S76-0424-05	RELAY							
K13			S76-0472-05	RELAY							

PARTS LIST

CONTROL UNIT (X53-452X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
CONTROL UNIT (X53-452X-XX) 0-11: K 2-71: E					
C2			CK73FB0J106K	CHIP C 10UF K	
C8 ,9			CD04BQ1E331M	ELECTRO 330UF 25WV	
C10			CK73GB1H102K	CHIP C 1000PF K	
C11			C93-1875-05	CHIP C 22UF M	
C14			CK73GB1C225K	CHIP C 2.2UF K	
C16			CC73GCH1H471J	CHIP C 470PF J	
C17			CK73GB1A474K	CHIP C 0.47UF K	
C18			CK73HB1E104K	CHIP C 0.10UF K	
C19			C93-0912-05	CHIP C 100UF M	
C23			CD04BQ1E331M	ELECTRO 330UF 25WV	
C25 ,26			CK73HB1E104K	CHIP C 0.10UF K	
C29			C93-0912-05	CHIP C 100UF M	
C30 ,31			CK73HB1H102K	CHIP C 1000PF K	
C32 ,33			CC73HCH1H330J	CHIP C 33PF J	
C34 ,35			CC73HCH1H101J	CHIP C 100PF J	
C36 -40			CK73GB1H104K	CHIP C 0.10UF K	
C41 ,42			CC73HCH1H101J	CHIP C 100PF J	
C43 -45			CK73HB1H102K	CHIP C 1000PF K	
C46 -49			CC73HCH1H101J	CHIP C 100PF J	
C50 -54			CK73GB1H104K	CHIP C 0.10UF K	
C55 -59			CK73HB1H102K	CHIP C 1000PF K	
C60			CK73GB1H104K	CHIP C 0.10UF K	
C61			CK73HB1H102K	CHIP C 1000PF K	
C62 ,63			CC73HCH1H330J	CHIP C 33PF J	
C64 ,65			CC73HCH1H101J	CHIP C 100PF J	
C66			CK73GB1H104K	CHIP C 0.10UF K	
C67			CC73HCH1H101J	CHIP C 100PF J	
C68			CK73HB1H102K	CHIP C 1000PF K	
C69 ,70			CK73GB1H104K	CHIP C 0.10UF K	
C71			CK73HB1H102K	CHIP C 1000PF K	
C72			CK73GB1H102K	CHIP C 1000PF K	
C73			CK73HB1H102K	CHIP C 1000PF K	
C74			CK73GB1H102K	CHIP C 1000PF K	
C75 -88			CK73HB1H102K	CHIP C 1000PF K	
C89			CC73HCH1H101J	CHIP C 100PF J	
C90 ,91			CK73HB1H102K	CHIP C 1000PF K	
C92			CC73HCH1H101J	CHIP C 100PF J	
C93			CK73GB1H104K	CHIP C 0.10UF K	
C94			CK73FB0J106K	CHIP C 10UF K	
C95			CC73HCH1H101J	CHIP C 100PF J	
C96			CK73GB1H104K	CHIP C 0.10UF K	
C97			CC73HCH1H101J	CHIP C 100PF J	
C98			CK73GB1H104K	CHIP C 0.10UF K	
C99			CK73HB1H102K	CHIP C 1000PF K	
C100			CK73GB1H102K	CHIP C 1000PF K	
C101			CK73HB1H102K	CHIP C 1000PF K	
C102-104			CK73GB1H104K	CHIP C 0.10UF K	
C105-107			CC73HCH1H101J	CHIP C 100PF J	
C108			CK73HB1H102K	CHIP C 1000PF K	
C109-112			CC73HCH1H101J	CHIP C 100PF J	
C113			CK73GB1H104K	CHIP C 0.10UF K	
C114-117			CC73HCH1H101J	CHIP C 100PF J	
C118			CK73GB1H104K	CHIP C 0.10UF K	
C119,120			CC73HCH1H101J	CHIP C 100PF J	
C121			CC73GCH1H120J	CHIP C 12PF J	
C122			CC73HCH1H101J	CHIP C 100PF J	
C123			CK73HB1H102K	CHIP C 1000PF K	
C124			CC73GCH1H120J	CHIP C 12PF J	
C125			CK73HB1H102K	CHIP C 1000PF K	
C126			CK73GB1H104K	CHIP C 0.10UF K	
C127,128			CC73HCH1H101J	CHIP C 100PF J	
C129-134			CK73HB1H102K	CHIP C 1000PF K	
C135			CK73GB1H104K	CHIP C 0.10UF K	
C136-139			CK73HB1H102K	CHIP C 1000PF K	
C140			CK73GB1H104K	CHIP C 0.10UF K	
C141,142			CK73HB1H102K	CHIP C 1000PF K	
C143			CK73GB1H104K	CHIP C 0.10UF K	
C144			CK73HB1H102K	CHIP C 1000PF K	
C145			CK73GB1H104K	CHIP C 0.10UF K	
C146-150			CK73HB1H102K	CHIP C 1000PF K	
C151			CK73GB1H104K	CHIP C 0.10UF K	
C152			CK73HB1H102K	CHIP C 1000PF K	
C153			CK73GB1A105K	CHIP C 1.0UF K	
C158-161			CK73HB1H102K	CHIP C 1000PF K	
C162			CK73GB1H104K	CHIP C 0.10UF K	
C163			CK73HB1H102K	CHIP C 1000PF K	
C164			CC73GCH1H020C	CHIP C 2.0PF C	
C165,166			CC73HCH1H101J	CHIP C 100PF J	
C167			CC73GCH1H010C	CHIP C 1.0PF C	
C168,169			CC73HCH1H101J	CHIP C 100PF J	
C170			CK73HB1H102K	CHIP C 1000PF K	
C171,172			CC73HCH1H101J	CHIP C 100PF J	
C173,174			CK73HB1H102K	CHIP C 1000PF K	
C175,176			CC73HCH1H330J	CHIP C 33PF J	
C177-211			CK73HB1H102K	CHIP C 1000PF K	
C212-214			CC73HCH1H101J	CHIP C 100PF J	
C216			CC73HCH1H101J	CHIP C 100PF J	
C217,218			CK73HB1H102K	CHIP C 1000PF K	
C219			CK73GB1A105K	CHIP C 1.0UF K	
C220-240			CK73HB1H102K	CHIP C 1000PF K	
C241			CK73GB1A105K	CHIP C 1.0UF K	
C243			CK73HB1H102K	CHIP C 1000PF K	
C244			CK73GB1A105K	CHIP C 1.0UF K	
C246			CK73HB1H102K	CHIP C 1000PF K	
C247			CK73GB1A105K	CHIP C 1.0UF K	
C248			CK73HB1H102K	CHIP C 1000PF K	
C249			CK73GB1A105K	CHIP C 1.0UF K	
C250-257			CK73HB1H102K	CHIP C 1000PF K	
C258-264			CC73HCH1H101J	CHIP C 100PF J	
C265,266			CK73HB1H102K	CHIP C 1000PF K	
C267			CC73HCH1H101J	CHIP C 100PF J	
C268-279			CK73HB1H102K	CHIP C 1000PF K	
C290			CK73HB1H102K	CHIP C 1000PF K	
C291			CK73GB1H153K	CHIP C 0.015UF K	
C292			CK73HB1H102K	CHIP C 1000PF K	
C293			CK73HB1E103K	CHIP C 0.010UF K	
C294,295			CK73HB1E104K	CHIP C 0.10UF K	
C296-299			C93-1875-05	CHIP C 22UF M	
C382-386			CK73FB0J106K	CHIP C 10UF K	
C390-398			CK73HB1E104K	CHIP C 0.10UF K	
C400			CK73HB1E104K	CHIP C 0.10UF K	
C401			CC73HCH1H120J	CHIP C 12PF J	
C402,403			CK73HB1E104K	CHIP C 0.10UF K	
C410			CK73HB1E103K	CHIP C 0.010UF K	
C411			CC73HCH1H100D	CHIP C 10PF D	
C412			CK73HB1H102K	CHIP C 1000PF K	
C415			CK73HB1E104K	CHIP C 0.10UF K	
C417,418			CC73HCH1H180J	CHIP C 18PF J	

PARTS LIST

CONTROL UNIT (X53-452X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C419-422			CK73HB1E104K	CHIP C 0.10UF K		CN69			J19-5386-05	HOLDER	
C425-435			CK73HB1E104K	CHIP C 0.10UF K		L1 -9			L92-0639-05	CHIP FERRITE	
C438,439			CK73HB1E104K	CHIP C 0.10UF K		L10			L33-3001-05	CHOKE COIL	
C441			CK73HB1E104K	CHIP C 0.10UF K		L11			L33-1598-05	CHOKE COIL	
C443-445			CK73HB1E104K	CHIP C 0.10UF K		L13			L92-0639-05	CHIP FERRITE	
						L30			L92-0639-05	CHIP FERRITE	
C448			CK73HB1E104K	CHIP C 0.10UF K							
C449			CK73FB0J106K	CHIP C 10UF K		L32 -37			L92-0639-05	CHIP FERRITE	
C450,451			CK73HB1E104K	CHIP C 0.10UF K		L38			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C452			CK73FB0J106K	CHIP C 10UF K		L39 ,40			L92-0639-05	CHIP FERRITE	
C462			CC73HCH1H470J	CHIP C 47PF J		L380			L92-0641-05	FERRITE CORE	
						L381			L33-1554-05	CHOKE COIL	
C463			CK73HB0J224K	CHIP C 0.22UF K							
C465			CK73FB0J106K	CHIP C 10UF K		L382			L92-0378-05	CHIP FERRITE	
C466			CK73HB1E104K	CHIP C 0.10UF K		L383,384			L33-1554-05	CHOKE COIL	
C467			CK73GB1H104K	CHIP C 0.10UF K		L385			L92-0639-05	CHIP FERRITE	
C468			CK73FB0J106K	CHIP C 10UF K		X30			L77-2974-05	CRYSTAL RESONATOR(11.0592MHZ)	
						X31			L77-1802-05	CRYSTAL RESONATOR(32768HZ)	
C474-483			CK73HB1E104K	CHIP C 0.10UF K							
C484,485			CK73HB1E103K	CHIP C 0.010UF K		X380			L77-3070-05	CRYSTAL RESONATOR(24.576MH)	
C486			CK73HB1E104K	CHIP C 0.10UF K		X381			L77-3080-05	CRYSTAL RESONATOR(18.432MHZ)	
C487			CK73FB0J106K	CHIP C 10UF K							
C488			CK73HB1E104K	CHIP C 0.10UF K							
C489			CC73HCH1H121J	CHIP C 120PF J		CP34,35			RK74HB1J100J	CHIP-COM 10 J 1/16W	
C490			CK73HB1E104K	CHIP C 0.10UF K		CP37-39			RK74HB1J000J	CHIP-COM 0 J 1/16W	
C491			CK73FB0J106K	CHIP C 10UF K		CP40-42			RK74GB1J473J	CHIP-COM 47K J 1/16W	
C492			CC73HCH1H121J	CHIP C 120PF J		CP50-52			RK74HA1J470J	CHIP-COM 47 J 1/16W	
C493			CK73HB1E104K	CHIP C 0.10UF K		CP53-58			RK74HA1J101J	CHIP-COM 100 J 1/16W	
C495			CK73FB0J106K	CHIP C 10UF K		CP386,387			RK74HB1J000J	CHIP-COM 0 J 1/16W	
C496,497			CK73HB1H821K	CHIP C 820PF K		R2			RK73EB2E000J	CHIP R 0 J 1/4W	
C498			CK73HB1E104K	CHIP C 0.10UF K		R7 -10			RK73PB2H1R0J	CHIP R 1 J 1/2W	
C499,500			CK73FB0J106K	CHIP C 10UF K		R12			RK73GB2A103J	CHIP R 10K J 1/10W	
C501			CK73HB1E104K	CHIP C 0.10UF K		R14			RK73HB1J000J	CHIP R 0 J 1/16W	
C503,504			CK73HB1E104K	CHIP C 0.10UF K		R15			RK73GB2A103J	CHIP R 10K J 1/10W	
C505			CK73FB0J106K	CHIP C 10UF K		R16			RK73GB2A184J	CHIP R 180K J 1/10W	
C508			CK73HB1E104K	CHIP C 0.10UF K		R17			RK73GH2A273D	CHIP R 27K D 1/10W	
C509			CK73FB0J106K	CHIP C 10UF K		R18			RK73GH2A473D	CHIP R 47K D 1/10W	
C510			CK73HB1E104K	CHIP C 0.10UF K		R20			RK73GB2A101J	CHIP R 100 J 1/10W	
C512			CC73HCH1H560J	CHIP C 56PF J		R21			RK73HB1J000J	CHIP R 0 J 1/16W	
C513			CK73HB1E104K	CHIP C 0.10UF K		R30			RK73HB1J470J	CHIP R 47 J 1/16W	
C514			CK73HB1E103K	CHIP C 0.010UF K		R31 ,32			RK73GB2A473J	CHIP R 47K J 1/10W	
C515			CK73HB1H122K	CHIP C 1200PF K		R33			RK73HB1J470J	CHIP R 47 J 1/16W	
C516			CK73FB0J106K	CHIP C 10UF K		R34 ,35			RK73GB2A473J	CHIP R 47K J 1/10W	
C550,551			CK73GB1A105K	CHIP C 1.0UF K		R36			RK73HB1J470J	CHIP R 47 J 1/16W	
						R37 -39			RK73GB2A473J	CHIP R 47K J 1/10W	
						R40 -44			RK73HB1J470J	CHIP R 47 J 1/16W	
						R45 -48			RK73GB2A103J	CHIP R 10K J 1/10W	
						R49 -51			RK73HB1J470J	CHIP R 47 J 1/16W	
CN1			E41-1684-05	PIN ASSY							
CN2			E41-1685-05	PIN ASSY							
CN3			E41-1682-05	PIN ASSY							
CN32			E40-6907-05	FLAT CABLE CONNECTOR		R52 -54			RK73GB2A473J	CHIP R 47K J 1/10W	
CN37			E40-6911-05	FLAT CABLE CONNECTOR		R55			RK73HB1J470J	CHIP R 47 J 1/16W	
						R56 ,57			RK73GB2A473J	CHIP R 47K J 1/10W	
CN43			E40-6907-05	FLAT CABLE CONNECTOR		R58			RK73HB1J470J	CHIP R 47 J 1/16W	
CN47			E41-3176-05	FLAT CABLE CONNECTOR		R59 ,60			RK73GB2A473J	CHIP R 47K J 1/10W	
CN63			E40-6727-05	FLAT CABLE CONNECTOR							
CN65			E40-6910-05	FLAT CABLE CONNECTOR		R61 ,62			RK73HB1J470J	CHIP R 47 J 1/16W	
CN70			E40-6912-05	FLAT CABLE CONNECTOR		R64 ,65			RK73GB2A473J	CHIP R 47K J 1/10W	
						R66			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CN71,72			E40-6910-05	FLAT CABLE CONNECTOR		R67 ,68			RK73GB2A473J	CHIP R 47K J 1/10W	
CN73			E40-6908-05	FLAT CABLE CONNECTOR		R69 -72			RK73GB2A103J	CHIP R 10K J 1/10W	
CN382			E40-6914-05	FLAT CABLE CONNECTOR							
CN450,451			E41-1682-05	PIN ASSY		R73			RK73GB2A473J	CHIP R 47K J 1/10W	
CN453			E41-1682-05	PIN ASSY		R76 ,77			RK73GB2A473J	CHIP R 47K J 1/10W	
						R78			RK73GB2A000J	CHIP R 0 J 1/10W	
F380			F53-0360-05	FUSE(0.25A)		R79 -84			RK73HB1J470J	CHIP R 47 J 1/16W	
-			G11-4535-04	SHEET		R85			RK73GB2A101J	CHIP R 100 J 1/10W	

PARTS LIST

CONTROL UNIT (X53-452X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R86 -92			RK73HB1J470J	CHIP R 47 J 1/16W		R191			RK73GB2A473J	CHIP R 47K J 1/10W	
R93 ,94			RK73GB2A103J	CHIP R 10K J 1/10W		R192			RK73HB1J470J	CHIP R 47 J 1/16W	
R95			RK73HB1J470J	CHIP R 47 J 1/16W		R193			RK73GB2A473J	CHIP R 47K J 1/10W	
R96			RK73GB2A101J	CHIP R 100 J 1/10W		R194-197			RK73HB1J470J	CHIP R 47 J 1/16W	
R97			RK73HB1J470J	CHIP R 47 J 1/16W		R198			RK73GB2A101J	CHIP R 100 J 1/10W	
R98			RK73GB2A103J	CHIP R 10K J 1/10W		R199,200			RK73GB2A103J	CHIP R 10K J 1/10W	
R99			RK73HB1J470J	CHIP R 47 J 1/16W		R201			RK73HB1J000J	CHIP R 0 J 1/16W	
R100			RK73GB2A103J	CHIP R 10K J 1/10W		R202			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R101-115			RK73HB1J470J	CHIP R 47 J 1/16W		R203,204			RK73GB2A473J	CHIP R 47K J 1/10W	
R116			RK73GB2A105J	CHIP R 1.0M J 1/10W		R206			RK73GB2A473J	CHIP R 47K J 1/10W	
R117,118			RK73HB1J000J	CHIP R 0 J 1/16W		R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	
R119-122			RK73HB1J470J	CHIP R 47 J 1/16W		R209			RK73GB2A473J	CHIP R 47K J 1/10W	
R123			RK73GB2A473J	CHIP R 47K J 1/10W		R210			RK73GB2A103J	CHIP R 10K J 1/10W	
R124,125			RK73GB2A105J	CHIP R 1.0M J 1/10W		R211-213			RK73HB1J470J	CHIP R 47 J 1/16W	
R126-129			RK73GB2A473J	CHIP R 47K J 1/10W		R214			RK73HB1J000J	CHIP R 0 J 1/16W	
R131,132			RK73HB1J000J	CHIP R 0 J 1/16W		R215-218			RK73HB1J470J	CHIP R 47 J 1/16W	
R133,134			RK73HB1J470J	CHIP R 47 J 1/16W		R219			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R135			RK73HB1J000J	CHIP R 0 J 1/16W		R220-222			RK73GB2A103J	CHIP R 10K J 1/10W	
R136			RK73HB1J470J	CHIP R 47 J 1/16W		R223,224			RK73HB1J000J	CHIP R 0 J 1/16W	
R137			RK73GB2A473J	CHIP R 47K J 1/10W		R225,226			RK73HB1J470J	CHIP R 47 J 1/16W	
R138			RK73HB1J470J	CHIP R 47 J 1/16W		R227			RK73GB2A000J	CHIP R 0 J 1/10W	
R139			RK73GB2A103J	CHIP R 10K J 1/10W		R228			RK73HB1J470J	CHIP R 47 J 1/16W	
R140			RK73HB1J470J	CHIP R 47 J 1/16W		R229			RK73GB2A473J	CHIP R 47K J 1/10W	
R141			RK73GB2A105J	CHIP R 1.0M J 1/10W		R230			RK73GB2A000J	CHIP R 0 J 1/10W	
R142-144			RK73HB1J470J	CHIP R 47 J 1/16W		R231,232			RK73HB1J470J	CHIP R 47 J 1/16W	
R145-147			RK73GB2A473J	CHIP R 47K J 1/10W		R233			RK73HB1J000J	CHIP R 0 J 1/16W	
R148			RK73GB2A103J	CHIP R 10K J 1/10W		R234,235			RK73HB1J470J	CHIP R 47 J 1/16W	
R149,150			RK73HB1J470J	CHIP R 47 J 1/16W		R237,238			RK73HB1J470J	CHIP R 47 J 1/16W	
R151			RK73GB2A103J	CHIP R 10K J 1/10W		R239-242			RK73EB2E000J	CHIP R 0 J 1/4W	
R152			RK73HB1J000J	CHIP R 0 J 1/16W		R243			RK73FB2B000J	CHIP R 0 J 1/8W	
R153			RK73HB1J470J	CHIP R 47 J 1/16W		R244			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R154			RK73GB2A103J	CHIP R 10K J 1/10W		R245-248			RK73HB1J470J	CHIP R 47 J 1/16W	
R155			RK73HB1J000J	CHIP R 0 J 1/16W		R249,250			RK73HB1J100J	CHIP R 10 J 1/16W	
R156			RK73HB1J470J	CHIP R 47 J 1/16W		R251-254			RK73HB1J470J	CHIP R 47 J 1/16W	
R157,158			RK73GB2A473J	CHIP R 47K J 1/10W		R256			RK73HB1J470J	CHIP R 47 J 1/16W	
R159			RK73HB1J470J	CHIP R 47 J 1/16W		R257			RK73HB1J100J	CHIP R 10 J 1/16W	
R160			RK73GB2A473J	CHIP R 47K J 1/10W		R258-274			RK73HB1J470J	CHIP R 47 J 1/16W	
R161			RK73HB1J470J	CHIP R 47 J 1/16W		R276-290			RK73HB1J470J	CHIP R 47 J 1/16W	
R162			RK73GB2A000J	CHIP R 0 J 1/10W		R292-294			RK73HB1J470J	CHIP R 47 J 1/16W	
R163,164			RK73HB1J470J	CHIP R 47 J 1/16W		R296-330			RK73HB1J470J	CHIP R 47 J 1/16W	
R166			RK73GB2A105J	CHIP R 1.0M J 1/10W		R331			RK73HB1J473J	CHIP R 47K J 1/16W	
R167			RK73HB1J470J	CHIP R 47 J 1/16W		R332			R92-0150-05	JUMPER REST 0 OHM	E
R169			RK73GB2A000J	CHIP R 0 J 1/10W		R334			RK73HB1J473J	CHIP R 47K J 1/16W	
R170			RK73HB1J470J	CHIP R 47 J 1/16W		R335			RK73GB2A000J	CHIP R 0 J 1/10W	
R172,173			RK73HB1J470J	CHIP R 47 J 1/16W		R336-344			RK73HB1J470J	CHIP R 47 J 1/16W	
R174			RK73GB2A103J	CHIP R 10K J 1/10W		R345,346			RK73HB1J473J	CHIP R 47K J 1/16W	
R175			RK73HB1J470J	CHIP R 47 J 1/16W		R349			RK73GB2A000J	CHIP R 0 J 1/10W	
R176			RK73HB1J000J	CHIP R 0 J 1/16W		R350			RK73GB2A000J	CHIP R 0 J 1/10W	
R177			RK73GB2A102J	CHIP R 1.0K J 1/10W		R351-353			RK73HB1J470J	CHIP R 47 J 1/16W	
R178			RK73GB2A473J	CHIP R 47K J 1/10W		R354-356			RK73GB2A101J	CHIP R 100 J 1/10W	
R179			RK73HB1J470J	CHIP R 47 J 1/16W		R357			RK73HB1J000J	CHIP R 0 J 1/16W	
R180,181			RK73GB2A103J	CHIP R 10K J 1/10W		R358,359			RK73GB2A103J	CHIP R 10K J 1/10W	
R182			RK73HB1J000J	CHIP R 0 J 1/16W		R360			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R183			RK73HB1J470J	CHIP R 47 J 1/16W		R361			RK73GB2A103J	CHIP R 10K J 1/10W	
R184			RK73GB2A473J	CHIP R 47K J 1/10W		R362-364			RK73HB1J000J	CHIP R 0 J 1/16W	
R185			RK73HB1J470J	CHIP R 47 J 1/16W		R366,367			RK73HB1J103J	CHIP R 10K J 1/16W	
R186			RK73HB1J472J	CHIP R 4.7K J 1/16W		R368,369			RK73HB1J101J	CHIP R 100 J 1/16W	
R188			RK73HB1J470J	CHIP R 47 J 1/16W		R370-372			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R189			RK73GB2A473J	CHIP R 47K J 1/10W		R373			RK73HB1J470J	CHIP R 47 J 1/16W	
R190			RK73HB1J470J	CHIP R 47 J 1/16W		R380-382			RK73EB2E000J	CHIP R 0 J 1/4W	

PARTS LIST

CONTROL UNIT (X53-452X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R385			RK73FB2B000J	CHIP R 0 J 1/8W		R504,505			RK73HB1J333J	CHIP R 33K J 1/16W	
R387			RK73HB1J105J	CHIP R 1.0M J 1/16W		R506			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R388-400			RK73HB1J000J	CHIP R 0 J 1/16W		R507,508			RK73HB1J333J	CHIP R 33K J 1/16W	
R401,402			RK73HB1J472J	CHIP R 4.7K J 1/16W		R509,510			RK73HB1J103J	CHIP R 10K J 1/16W	
R403			RK73HB1J105J	CHIP R 1.0M J 1/16W		R511			RK73HB1J223J	CHIP R 22K J 1/16W	
R404			RK73HB1J473J	CHIP R 47K J 1/16W		R512-515			RK73HB1J101J	CHIP R 100 J 1/16W	
R406			RK73HB1J000J	CHIP R 0 J 1/16W		R516			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R407			RK73HB1J472J	CHIP R 4.7K J 1/16W		R517			RK73HB1J473J	CHIP R 47K J 1/16W	
R408-410			RK73HB1J473J	CHIP R 47K J 1/16W		R518-521			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R411,412			RK73HB1J000J	CHIP R 0 J 1/16W		R522			RK73HB1J223J	CHIP R 22K J 1/16W	
R414,415			RK73HB1J473J	CHIP R 47K J 1/16W		R523			RK73FB2B000J	CHIP R 0 J 1/8W	
R416			RK73GB2A105J	CHIP R 1.0M J 1/10W		R525			RK73FB2B000J	CHIP R 0 J 1/8W	
R417			RK73HB1J473J	CHIP R 47K J 1/16W		R526,527			RK73HB1J101J	CHIP R 100 J 1/16W	
R418			RK73GB2A105J	CHIP R 1.0M J 1/10W		R528			RK73HB1J000J	CHIP R 0 J 1/16W	
R419			RK73HB1J471J	CHIP R 470 J 1/16W		R529			RK73HB1J101J	CHIP R 100 J 1/16W	
R420-422			RK73HB1J000J	CHIP R 0 J 1/16W		R530			RK73HB1J000J	CHIP R 0 J 1/16W	
R423			RK73HB1J101J	CHIP R 100 J 1/16W		R531			RK73HB1J333J	CHIP R 33K J 1/16W	
R424,425			RK73HB1J000J	CHIP R 0 J 1/16W		R532			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R426			RK73GB2A000J	CHIP R 0 J 1/10W		R533			RK73GB2A000J	CHIP R 0 J 1/10W	
R427			RK73HB1J470J	CHIP R 47 J 1/16W		R534			RK73FB2B000J	CHIP R 0 J 1/8W	
R430			RK73HB1J000J	CHIP R 0 J 1/16W		R535			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R431-433			RK73HB1J473J	CHIP R 47K J 1/16W		R536			RK73HB1J473J	CHIP R 47K J 1/16W	
R434-439			RK73HB1J000J	CHIP R 0 J 1/16W		R537			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R440,441			RK73HB1J473J	CHIP R 47K J 1/16W		R539			RK73HB1J000J	CHIP R 0 J 1/16W	
R442			RK73HB1J472J	CHIP R 4.7K J 1/16W		R548			RK73HB1J473J	CHIP R 47K J 1/16W	
R443			RK73HB1J101J	CHIP R 100 J 1/16W		R549			RK73HB1J101J	CHIP R 100 J 1/16W	
R444			RK73HB1J473J	CHIP R 47K J 1/16W		R569			RK73HB1J473J	CHIP R 47K J 1/16W	
R445			RK73HB1J000J	CHIP R 0 J 1/16W		R570,571			RK73GB2A000J	CHIP R 0 J 1/10W	
R446			RK73HB1J473J	CHIP R 47K J 1/16W		D1			RB080L-30	DIODE	
R448			RK73HB1J000J	CHIP R 0 J 1/16W		D30 -32			1SS388F	DIODE	
R449			RK73HB1J473J	CHIP R 47K J 1/16W		D380			1SS388F	DIODE	
R450			RK73HB1J000J	CHIP R 0 J 1/16W		IC1			Note1	ANALOGUE IC	
R451			RK73HB1J470J	CHIP R 47 J 1/16W		IC2			MM3273DU	MOS-IC	
R452			RK73HB1J000J	CHIP R 0 J 1/16W		IC30			TC74HC4052AFT	MOS-IC	
R453			RK73HB1J473J	CHIP R 47K J 1/16W		IC31-34			TC74VHC373FT	MOS-IC	
R454			RK73HB1J000J	CHIP R 0 J 1/16W		IC35			TC74HC4052AFT	MOS-IC	
R455			RK73HB1J473J	CHIP R 47K J 1/16W		IC36-39			TC74VHC373FT	MOS-IC	
R456			RK73HB1J000J	CHIP R 0 J 1/16W		IC40			HD74LV2G34AUS	MOS-IC	
R457			RK73HB1J473J	CHIP R 47K J 1/16W		IC41			TC7WT125FUF	MOS-IC	
R458			RK73HB1J000J	CHIP R 0 J 1/16W		IC42,43			TC74VHC373FT	MOS-IC	
R459			RK73HB1J470J	CHIP R 47 J 1/16W		IC44			XC6118N31BMRG	MOS-IC	
R460			RK73HB1J000J	CHIP R 0 J 1/16W		IC45			TC7SH32FU-F	MOS-IC	
R462			RK73HB1J473J	CHIP R 47K J 1/16W		IC46			F56104VDFKEUA	MCU	
R463			RK73HB1J000J	CHIP R 0 J 1/16W		IC47			S25C256A0IJ8U	MOS-IC	
R464			RK73FB2B000J	CHIP R 0 J 1/8W		IC48			HD74LV2G34AUS	MOS-IC	
R465-467			RK73HB1J000J	CHIP R 0 J 1/16W		IC49			R2223T	MOS-IC	
R471			RK73GB2A000J	CHIP R 0 J 1/10W		IC380			F2136ACNFKEVA	MCU	
R472			RK73HB1J101J	CHIP R 100 J 1/16W		IC381			Note1	DSP	
R473-482			RK73HB1J000J	CHIP R 0 J 1/16W		IC382			AK5385BVF	MOS-IC	
R483,484			RK73HB1J470J	CHIP R 47 J 1/16W		IC384			NJM2732V	BI-POLAR IC	
R485,486			RK73HB1J101J	CHIP R 100 J 1/16W		IC385			NJM2100V-ZB	MOS-IC	
R487,488			RK73HB1J100J	CHIP R 10 J 1/16W		IC386			WM8782ASEDSRV	MOS-IC	
R489-491			RK73HB1J000J	CHIP R 0 J 1/16W		IC387			NJM2732V	BI-POLAR IC	
R492,493			RK73HB1J220J	CHIP R 22 J 1/16W		IC388,389			TC74VHC373FT	MOS-IC	
R495			RK73FB2B000J	CHIP R 0 J 1/8W		IC390			E29LV80CB7TIP	ROM IC	
R496,497			RK73HB1J223J	CHIP R 22K J 1/16W		Q380			SSM3J36TU	FET	
R498			RK73FB2B000J	CHIP R 0 J 1/8W		Q381			LTC043TEBFS8	TRANSISTOR	
R499,500			RK73HB1J223J	CHIP R 22K J 1/16W							
R501,502			RK73HB1J473J	CHIP R 47K J 1/16W							
R503			RK73HB1J472J	CHIP R 4.7K J 1/16W							

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

DSP UNIT (X53-4530-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination
DSP UNIT (X53-4530-00)					
C1 ,2			CD04BQ1E331M	ELECTRO 330UF 25WV	
C3			CK73GB1H103K	CHIP C 0.010UF K	
C4			C93-1875-05	CHIP C 22UF M	
C7			CK73GB1C225K	CHIP C 2.2UF K	
C8			CC73HCH1H471J	CHIP C 470PF J	
C9			CK73GB1A474K	CHIP C 0.47UF K	
C10			CK73HB1A104K	CHIP C 0.10UF K	
C14			C93-0912-05	CHIP C 100UF M	
C15			CD04BQ1E331M	ELECTRO 330UF 25WV	
C22 ,23			CK73GB1A105K	CHIP C 1.0UF K	
C24 ,25			CK73HB1H102K	CHIP C 1000PF K	
C28			CC73HCH1H220J	CHIP C 22PF J	
C29 -32			C93-1875-05	CHIP C 22UF M	
C50 ,51			CK73GB1C225K	CHIP C 2.2UF K	
C52 ,53			CK73GB1H332K	CHIP C 3300PF K	
C54			CE32CL1C470M	CHIP EL 47UF 16WV	
C55 ,56			CE32CL1H4R7M	CHIP EL 4.7UF 50WV	
C57			CK73GB1H104K	CHIP C 0.10UF K	
C59			CD04AZ1E471M	ELECTRO 470UF 25WV	
C60			CE32CL1C470M	CHIP EL 47UF 16WV	
C61			CD04AZ1V101M	ELECTRO 100UF 35WV	
C62			CK73GB1H104K	CHIP C 0.10UF K	
C63 ,64			CD04AZ1E471M	ELECTRO 470UF 25WV	
C65			CD04AZ1V101M	ELECTRO 100UF 35WV	
C67			CK73GB1H103K	CHIP C 0.010UF K	
C68			CD04AZ1E471M	ELECTRO 470UF 25WV	
C70			CD04AZ1E471M	ELECTRO 470UF 25WV	
C71 ,72			CK73GB1H103K	CHIP C 0.010UF K	
C73 -77			CD04AZ1E471M	ELECTRO 470UF 25WV	
C78 ,79			CK73GB1H104K	CHIP C 0.10UF K	
C80			CK73GB1H103K	CHIP C 0.010UF K	
C81			CK73GB1H104K	CHIP C 0.10UF K	
C82			CK73GB1H103K	CHIP C 0.010UF K	
C83 -87			CK73GB1H104K	CHIP C 0.10UF K	
C88 ,89			CK73GB1C225K	CHIP C 2.2UF K	
C100			CK73GB0J106K	CHIP C 10UF K	
C108,109			CK73HB1H102K	CHIP C 1000PF K	
C115-124			CK73HB1H102K	CHIP C 1000PF K	
C127			CK73GB1H104K	CHIP C 0.10UF K	
C128,129			CC73HCH1H180J	CHIP C 18PF J	
C131-136			CK73HB1H102K	CHIP C 1000PF K	
C200-209			CK73HB1A104K	CHIP C 0.10UF K	
C210			CC73HCH1H120J	CHIP C 12PF J	
C211			CK73HB1A104K	CHIP C 0.10UF K	
C212			CK73HB1E103K	CHIP C 0.010UF K	
C213			CC73GCH1H100D	CHIP C 10PF D	
C214			CK73HB1H102K	CHIP C 1000PF K	
C216-241			CK73HB1A104K	CHIP C 0.10UF K	
C242,243			CK73GB0J106K	CHIP C 10UF K	
C245,246			CK73GB0J106K	CHIP C 10UF K	
C249-256			CK73HB1A104K	CHIP C 0.10UF K	
C258			CK73HB1A104K	CHIP C 0.10UF K	
C264			CC73HCH1H680J	CHIP C 68PF J	
C300-311			CK73HB1A104K	CHIP C 0.10UF K	
C314			CK73GB0J106K	CHIP C 10UF K	
C316-318			CK73GB0J106K	CHIP C 10UF K	
C319-340			CK73HB1A104K	CHIP C 0.10UF K	
C342-346			CK73HB1A104K	CHIP C 0.10UF K	
C347			CK73HB1H102K	CHIP C 1000PF K	
C348			CK73HB1E103K	CHIP C 0.010UF K	
C349-362			CK73HB1A104K	CHIP C 0.10UF K	
C363			CK73HB1E103K	CHIP C 0.010UF K	
C364			CK73HB1H102K	CHIP C 1000PF K	
C366			CC73HCH1H680J	CHIP C 68PF J	
C369,370			CC73HCH1H680J	CHIP C 68PF J	
C380-383			CK73HB1A104K	CHIP C 0.10UF K	
C384			CK73HB1E103K	CHIP C 0.010UF K	
C385,386			CK73GB0J106K	CHIP C 10UF K	
C387			CK73HB1A104K	CHIP C 0.10UF K	
C388,389			CK73GB0J106K	CHIP C 10UF K	
C390-392			CK73HB1A104K	CHIP C 0.10UF K	
C395			CK73HB1A104K	CHIP C 0.10UF K	
C397			CK73HB1H472K	CHIP C 4700PF K	
C400			CK73HB1E103K	CHIP C 0.010UF K	
C401			CK73GB0J106K	CHIP C 10UF K	
C402,403			CK73HB1A104K	CHIP C 0.10UF K	
C404			CK73GB0J106K	CHIP C 10UF K	
C406-410			CK73HB1A104K	CHIP C 0.10UF K	
C411,412			CC73HCH1H470J	CHIP C 47PF J	
C413			CK73HB1A104K	CHIP C 0.10UF K	
C414			CK73GB0J106K	CHIP C 10UF K	
C415-420			CK73HB1A104K	CHIP C 0.10UF K	
C421-424			CK73GB0J106K	CHIP C 10UF K	
C425,426			CK73HB1A104K	CHIP C 0.10UF K	
C427			CK73GB0J106K	CHIP C 10UF K	
C429			CK73GB1C224K	CHIP C 0.22UF K	
C430-432			CK73HB1A104K	CHIP C 0.10UF K	
C434			CK73HB1A104K	CHIP C 0.10UF K	
C435,436			CK73GB0J106K	CHIP C 10UF K	
C437,438			CK73HB1A104K	CHIP C 0.10UF K	
C439			CK73GB0J106K	CHIP C 10UF K	
C440,441			CK73HB1A104K	CHIP C 0.10UF K	
C442			CK73GB1C225K	CHIP C 2.2UF K	
C443-452			CK73GB0J106K	CHIP C 10UF K	
C454-456			CK73GB0J106K	CHIP C 10UF K	
C459,460			CK73HB1A104K	CHIP C 0.10UF K	
C461			CK73GB0J106K	CHIP C 10UF K	
C462,463			CK73HB1A104K	CHIP C 0.10UF K	
C464			CK73GB0J106K	CHIP C 10UF K	
C467			CK73HB1A104K	CHIP C 0.10UF K	
C468			CC73HCH1H470J	CHIP C 47PF J	
C469			CK73HB1H222K	CHIP C 2200PF K	
C471			CK73GB0J106K	CHIP C 10UF K	
C472			CK73GB1C224K	CHIP C 0.22UF K	
C473			CD04AZ1E471M	ELECTRO 470UF 25WV	
C474			CK73HB1A104K	CHIP C 0.10UF K	
C476			CK73GB0J106K	CHIP C 10UF K	
C477,478			CK73HB1A104K	CHIP C 0.10UF K	
C479			CK73GB0J106K	CHIP C 10UF K	
C481			CK73HB1A104K	CHIP C 0.10UF K	
C483			CK73GB0J106K	CHIP C 10UF K	
C485			CK73GB0J106K	CHIP C 10UF K	
C492			CC73HCH1H220J	CHIP C 22PF J	
C510,511			CK73HB1H472K	CHIP C 4700PF K	
C650			CK73HB1H152K	CHIP C 1500PF K	
C651			CC73HCH1H181J	CHIP C 180PF J	
C652-655			CK73GB1C225K	CHIP C 2.2UF K	
C656			CK73HB1A104K	CHIP C 0.10UF K	

PARTS LIST

DSP UNIT (X53-4530-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C657			CK73HB1E223K	CHIP C 0.022UF K		C753			CK73GB0J106K	CHIP C 10UF K	
C658			CK73HB1H152K	CHIP C 1500PF K		C754			CK73HB1A104K	CHIP C 0.10UF K	
C659			CC73HCH1H181J	CHIP C 180PF J		C755			CK73HB1H122K	CHIP C 1200PF K	
C660			CK73HB1E103K	CHIP C 0.010UF K		C756			CK73GB1C225K	CHIP C 2.2UF K	
C661			CK73GB0J106K	CHIP C 10UF K		C757			CK73HB1H122K	CHIP C 1200PF K	
C662			CK73HB1A104K	CHIP C 0.10UF K		C758,759			CK73HB1A683K	CHIP C 0.068UF K	
C663			CK73HB1H222K	CHIP C 2200PF K		C760,761			CK73HB1E103K	CHIP C 0.010UF K	
C664			CK73HB1H681K	CHIP C 680PF K		C762			CK73HB1H222K	CHIP C 2200PF K	
C665,666			CK73HB1H821K	CHIP C 820PF K		C763,764			CK73HB1A104K	CHIP C 0.10UF K	
C667			CK73HB1H682K	CHIP C 6800PF K		C765			CK73GB0J475K	CHIP C 4.7UF K	
C668			CC73HCH1H331J	CHIP C 330PF J		C766			CK73GB1C225K	CHIP C 2.2UF K	
C669			CK73HB1H682K	CHIP C 6800PF K		C767			CE32CL1C470M	CHIP EL 47UF 16WV	
C670			CC73HCH1H331J	CHIP C 330PF J		C768			CK73GB1C225K	CHIP C 2.2UF K	
C671			CK73HB1A104K	CHIP C 0.10UF K		C769			CK73GB1A105K	CHIP C 1.0UF K	
C672			CK73HB1E103K	CHIP C 0.010UF K		C770			CC73HCH1H331J	CHIP C 330PF J	
C673			CK73HB1H152K	CHIP C 1500PF K		C771,772			CK73HB1A104K	CHIP C 0.10UF K	
C674			CC73HCH1H181J	CHIP C 180PF J		C774			CK73GB1C225K	CHIP C 2.2UF K	
C675			CC73HCH1H151J	CHIP C 150PF J		C775			CK73HB1E103K	CHIP C 0.010UF K	
C676,677			CK73HB1A104K	CHIP C 0.10UF K		C776			CK73GB0J106K	CHIP C 10UF K	
C678			CC73HCH1H151J	CHIP C 150PF J		C777			CK73GB1C225K	CHIP C 2.2UF K	
C679,680			CK73HB1A104K	CHIP C 0.10UF K		C778			CK73HB1E103K	CHIP C 0.010UF K	
C681			CC73HCH1H331J	CHIP C 330PF J		C779			CK73GB1C225K	CHIP C 2.2UF K	
C682,683			CK73HB1A104K	CHIP C 0.10UF K		C780			CE32CL1C470M	CHIP EL 47UF 16WV	
C684			CC73HCH1H151J	CHIP C 150PF J		C781			CK73GB1A105K	CHIP C 1.0UF K	
C685,686			CK73HB1A104K	CHIP C 0.10UF K		C782			CK73GB1C225K	CHIP C 2.2UF K	
C687			CK73HB1H682K	CHIP C 6800PF K		C783			CC73HCH1H331J	CHIP C 330PF J	
C688			CK73HB1H152K	CHIP C 1500PF K		C784			CK73GB0J106K	CHIP C 10UF K	
C689			CC73HCH1H181J	CHIP C 180PF J		C785			CK73HB1H102K	CHIP C 1000PF K	
C690			CK73GB0J475K	CHIP C 4.7UF K		C786			CK73HB1H681K	CHIP C 680PF K	
C691			CK73GB1C225K	CHIP C 2.2UF K		C787			CK73HB1A104K	CHIP C 0.10UF K	
C692			CK73GB0J475K	CHIP C 4.7UF K		C788			CK73GB0J106K	CHIP C 10UF K	
C693,694			CK73GB1C225K	CHIP C 2.2UF K		C789			CK73HB1A104K	CHIP C 0.10UF K	
C695,696			CK73HB1H681K	CHIP C 680PF K		C790			CK73GB0J106K	CHIP C 10UF K	
C697,698			CK73HB1E153K	CHIP C 0.015UF K		C791			CK73HB1A104K	CHIP C 0.10UF K	
C699-702			CK73GB1C225K	CHIP C 2.2UF K		C793			CC73HCH1H820J	CHIP C 82PF J	
C703,704			CC73HCH1H151J	CHIP C 150PF J		C794,795			CK73HB1A104K	CHIP C 0.10UF K	
C705			CC73HCH1H331J	CHIP C 330PF J		C796			CC73HCH1H151J	CHIP C 150PF J	
C706			CC73HCH1H121J	CHIP C 120PF J		C797-799			CK73HB1A104K	CHIP C 0.10UF K	
C708,709			CK73HB1A104K	CHIP C 0.10UF K		C800			CC73HCH1H151J	CHIP C 150PF J	
C710,711			CK73GB1H104K	CHIP C 0.10UF K		C801			CK73GB1C225K	CHIP C 2.2UF K	
C712,713			CK73HB1A104K	CHIP C 0.10UF K		C802			CC73HCH1H331J	CHIP C 330PF J	
C715,716			CK73HB1A104K	CHIP C 0.10UF K		C804			CK73GB0J106K	CHIP C 10UF K	
C717-720			CK73HB1E103K	CHIP C 0.010UF K		C805			CK73HB1E103K	CHIP C 0.010UF K	
C721			CC73HCH1H151J	CHIP C 150PF J		C806			CC73HCH1H121J	CHIP C 120PF J	
C722,723			CK73HB1A104K	CHIP C 0.10UF K		C807			CC73HCH1H151J	CHIP C 150PF J	
C724			CC73HCH1H151J	CHIP C 150PF J		C808			CK73HB1E103K	CHIP C 0.010UF K	
C725,726			CK73HB1H821K	CHIP C 820PF K		C809			CK73GB0J475K	CHIP C 4.7UF K	
C727			CK73HB1H182K	CHIP C 1800PF K		C810			CC73HCH1H121J	CHIP C 120PF J	
C728			CK73HB1H821K	CHIP C 820PF K		C811			CK73GB0J106K	CHIP C 10UF K	
C729			CK73HB1H472K	CHIP C 4700PF K		C812			CK73HB1H182K	CHIP C 1800PF K	
C730,731			CK73HB1A104K	CHIP C 0.10UF K		C813			CK73HB1A104K	CHIP C 0.10UF K	
C732			CK73HB1H472K	CHIP C 4700PF K		C814,815			CK73GB1C225K	CHIP C 2.2UF K	
C733,734			CK73HB1A104K	CHIP C 0.10UF K		C817			CK73GB1C225K	CHIP C 2.2UF K	
C735-738			CK73GB1C225K	CHIP C 2.2UF K		C818			CK73HB1E103K	CHIP C 0.010UF K	
C743,744			CK73GB0J475K	CHIP C 4.7UF K		C819			CK73HB1H182K	CHIP C 1800PF K	
C745,746			CC73HCH1H121J	CHIP C 120PF J		C820			CK73GB1C225K	CHIP C 2.2UF K	
C747			CK73HB1E103K	CHIP C 0.010UF K		C821			CK73HB1A104K	CHIP C 0.10UF K	
C748,749			CK73GB1C225K	CHIP C 2.2UF K		C822			CK73HB1H182K	CHIP C 1800PF K	
C750			CK73HB1A104K	CHIP C 0.10UF K		C823			CK73GB1C225K	CHIP C 2.2UF K	
C751,752			CK73HB1H222K	CHIP C 2200PF K		C824			CK73HB1A104K	CHIP C 0.10UF K	

PARTS LIST

DSP UNIT (X53-4530-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C825			CK73GB1C225K	CHIP C 2.2UF K		C905			CK73HB1H102K	CHIP C 1000PF K	
C826			CK73HB1H821K	CHIP C 820PF K		C908			CK73HB1E103K	CHIP C 0.010UF K	
C827			CC73HCH1H101J	CHIP C 100PF J		C910			CK73HB1H102K	CHIP C 1000PF K	
C828			CK73HB1A104K	CHIP C 0.10UF K		C911			CK73GB1A105K	CHIP C 1.0UF K	
C829			CK73HB1H821K	CHIP C 820PF K		C912			CK73HB1H102K	CHIP C 1000PF K	
C830			CK73GB1C225K	CHIP C 2.2UF K		C913			CK73HB1H122K	CHIP C 1200PF K	
C831			CC73HCH1H121J	CHIP C 120PF J		C914			CC73HCH1H391J	CHIP C 390PF J	
C832			CK73HB1E103K	CHIP C 0.010UF K		C916			CK73HB1A104K	CHIP C 0.10UF K	
C833			CC73HCH1H121J	CHIP C 120PF J		C917			CK73HB1E103K	CHIP C 0.010UF K	
C834			CK73GB1C225K	CHIP C 2.2UF K		C920			CK73HB1H222K	CHIP C 2200PF K	
C835,836			CK73HB1A104K	CHIP C 0.10UF K		C922			CK73HB1A684K	CHIP C 0.68UF K	
C837			CC73HCH1H121J	CHIP C 120PF J		C924			CK73GB0J106K	CHIP C 10UF K	
C838			CK73HB1E103K	CHIP C 0.010UF K		C925			CK73HB1A104K	CHIP C 0.10UF K	
C840			CK73HB1H561K	CHIP C 560PF K		C931			CK73GB1C225K	CHIP C 2.2UF K	
C841			CK73GB0J106K	CHIP C 10UF K		C933			CK73HB1E223K	CHIP C 0.022UF K	
C842,843			CK73HB1A104K	CHIP C 0.10UF K		C942,943			CK73HB1H272K	CHIP C 2700PF K	
C844			CK73HB1H821K	CHIP C 820PF K		C944,945			CC73HCH1H471J	CHIP C 470PF J	
C845			CK73GB1C225K	CHIP C 2.2UF K		C946,947			CK73HB1E103K	CHIP C 0.010UF K	
C846			CK73HB1A104K	CHIP C 0.10UF K		C948			CK73HB1A104K	CHIP C 0.10UF K	
C847			CC73HCH1H471J	CHIP C 470PF J		C949			CC73HCH1H331J	CHIP C 330PF J	
C849			CK73GB0J106K	CHIP C 10UF K		C950			CK73HB1H222K	CHIP C 2200PF K	
C850			CK73GB1C225K	CHIP C 2.2UF K		C951			CK73GB1C225K	CHIP C 2.2UF K	
C851			CK73HB1A104K	CHIP C 0.10UF K		C952			CK73HB1H182K	CHIP C 1800PF K	
C852			CC73HCH1H471J	CHIP C 470PF J		C953			CK73HB1E103K	CHIP C 0.010UF K	
C853			CK73HB1H821K	CHIP C 820PF K		C954			CK73GB1A105K	CHIP C 1.0UF K	
C854			CK73GB1C225K	CHIP C 2.2UF K		CN1			E41-1682-05	PIN ASSY	
C855			CK73HB1H821K	CHIP C 820PF K		CN2			E41-1683-05	PIN ASSY	
C856			CK73HB1H122K	CHIP C 1200PF K		CN50			E41-1682-05	PIN ASSY	
C857			CK73HB1H222K	CHIP C 2200PF K		CN101			E40-6910-05	FLAT CABLE CONNECTOR	
C858			CK73GB0J106K	CHIP C 10UF K		CN112			E40-6914-05	FLAT CABLE CONNECTOR	
C859			CK73HB1E103K	CHIP C 0.010UF K		CN662,663			E41-1682-05	PIN ASSY	
C860,861			CK73HB1A104K	CHIP C 0.10UF K		CN665,666			E41-1682-05	PIN ASSY	
C862			CK73HB1H222K	CHIP C 2200PF K		CN667			E41-1684-05	PIN ASSY	
C863			CK73GB0J106K	CHIP C 10UF K		CN668			E41-1683-05	PIN ASSY	
C864,865			CK73HB1A104K	CHIP C 0.10UF K		CN669,670			E41-1682-05	PIN ASSY	
C867			CK73HB1H821K	CHIP C 820PF K		CN671			E40-6914-05	FLAT CABLE CONNECTOR	
C869,870			CK73GB0J106K	CHIP C 10UF K		CN672			E41-3176-05	FLAT CABLE CONNECTOR	
C871			CC73HCH1H470J	CHIP C 47PF J		J50			E11-0414-15	3.5D PHONE JACK(3P)	
C872,873			CK73HB1A104K	CHIP C 0.10UF K		J51			E11-0455-05	3.5D PHONE JACK(3P)	
C874			CK73GB0J106K	CHIP C 10UF K		F1			F53-0360-05	FUSE(0.25A)	
C875			CK73HB1A104K	CHIP C 0.10UF K		-			G11-4535-04	SHEET	
C876			CK73HB1E103K	CHIP C 0.010UF K		L1			L33-3001-05	CHOKE COIL	
C877			CK73GB1C225K	CHIP C 2.2UF K		L2			L33-1598-05	CHOKE COIL	
C878			CC73HCH1H560J	CHIP C 56PF J		L4 -10			L92-0639-05	CHIP FERRITE	
C879			CK73HB1A104K	CHIP C 0.10UF K		L50			L33-1553-05	CHOKE COIL	
C880			CK73GB0J106K	CHIP C 10UF K		L51			L41-1005-32	SMALL FIXED INDUCTOR(10UH)	
C882			CK73HB1H182K	CHIP C 1800PF K		L52			L33-1553-05	CHOKE COIL	
C883			CK73HB1E103K	CHIP C 0.010UF K		L53			L41-1005-32	SMALL FIXED INDUCTOR(10UH)	
C884			CK73GB1C225K	CHIP C 2.2UF K		L55 -57			L92-0639-05	CHIP FERRITE	
C887			CK73HB1A104K	CHIP C 0.10UF K		L200			L92-0378-05	CHIP FERRITE	
C888			CK73GB0J106K	CHIP C 10UF K		L201			L33-1554-05	CHOKE COIL	
C889			CK73HB1H122K	CHIP C 1200PF K		L202			L92-0639-05	CHIP FERRITE	
C890			CK73GB1C225K	CHIP C 2.2UF K		L300			L92-0639-05	CHIP FERRITE	
C895			CK73GB0J106K	CHIP C 10UF K		L301			L33-1554-05	CHOKE COIL	
C896			CK73HB1E103K	CHIP C 0.010UF K		L302			L92-0378-05	CHIP FERRITE	
C897,898			CK73HB1E223K	CHIP C 0.022UF K		L380			L41-4701-44	SMALL FIXED INDUCTOR(47UH)	
C899,900			CK73HB1H682K	CHIP C 6800PF K		L650			L33-1554-05	CHOKE COIL	
C901			CC73HCH1H560J	CHIP C 56PF J		L651-653			L92-0639-05	CHIP FERRITE	
C902			CK73HB1E103K	CHIP C 0.010UF K							
C903			CK73HB1A104K	CHIP C 0.10UF K							

PARTS LIST

DSP UNIT (X53-4530-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L654			L41-1005-39	SMALL FIXED INDUCTOR(10UH)		R123			RK73HB1J473J	CHIP R 47K J 1/16W	
L655			L41-1005-32	SMALL FIXED INDUCTOR(10UH)		R128-130			RK73HB1J000J	CHIP R 0 J 1/16W	
L657,658			L41-1005-39	SMALL FIXED INDUCTOR(10UH)		R131			RK73HB1J473J	CHIP R 47K J 1/16W	
L701-703			L92-0639-05	CHIP FERRITE		R133			RK73HB1J473J	CHIP R 47K J 1/16W	
X100			L77-3080-05	CRYSTAL RESONATOR(18.432MHZ)		R137			RK73HB1J472J	CHIP R 4.7K J 1/16W	
X200			L77-3070-05	CRYSTAL RESONATOR(24.576MHZ)		R138			RK73HB1J473J	CHIP R 47K J 1/16W	
X300		*	L77-3120-05	TCXO(24.576MHZ)		R141			RK73HB1J473J	CHIP R 47K J 1/16W	
CP50-55			RK74HA1J101J	CHIP-COM 100 J 1/16W		R143			RK73HB1J000J	CHIP R 0 J 1/16W	
CP56-58			RK74HA1J470J	CHIP-COM 47 J 1/16W		R144			RK73HB1J473J	CHIP R 47K J 1/16W	
CP59-61			RK74HA1J101J	CHIP-COM 100 J 1/16W		R146			RK73HB1J473J	CHIP R 47K J 1/16W	
CP62			RK74HA1J000J	CHIP-COM 0 J 1/16W		R148			RK73HB1J473J	CHIP R 47K J 1/16W	
CP63-71			RK74HA1J101J	CHIP-COM 100 J 1/16W		R150			RK73HB1J473J	CHIP R 47K J 1/16W	
CP229,230			RK74HB1J470J	CHIP-COM 47 J 1/16W		R154			RK73HB1J473J	CHIP R 47K J 1/16W	
CP333			RK74HB1J470J	CHIP-COM 47 J 1/16W		R156			RK73HB1J473J	CHIP R 47K J 1/16W	
CP335			RK74HB1J470J	CHIP-COM 47 J 1/16W		R158			RK73HB1J000J	CHIP R 0 J 1/16W	
R1 ,2			RK73EB2E000J	CHIP R 0 J 1/4W		R159			RK73HB1J473J	CHIP R 47K J 1/16W	
R4			RK73EB2E000J	CHIP R 0 J 1/4W		R161			RK73HB1J101J	CHIP R 100 J 1/16W	
R6			RK73EB2E000J	CHIP R 0 J 1/4W		R162			RK73HB1J473J	CHIP R 47K J 1/16W	
R7 -9			RK73PB2H1R0J	CHIP R 1 J 1/2W		R164			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R12			RK73GB2A103J	CHIP R 10K J 1/10W		R165			RK73HB1J473J	CHIP R 47K J 1/16W	
R13			RK73EB2E000J	CHIP R 0 J 1/4W		R167			RK73HB1J000J	CHIP R 0 J 1/16W	
R15			RK73GB2A103J	CHIP R 10K J 1/10W		R168			RK73HB1J470J	CHIP R 47 J 1/16W	
R16			RK73HB1J184J	CHIP R 180K J 1/16W		R173,174			RK73HB1J000J	CHIP R 0 J 1/16W	
R17			RK73GH2A223D	CHIP R 22K D 1/10W		R177-181			RK73HB1J473J	CHIP R 47K J 1/16W	
R18			RK73GH2A473D	CHIP R 47K D 1/10W		R187-192			RK73HB1J470J	CHIP R 47 J 1/16W	
R24			RK73HB1J000J	CHIP R 0 J 1/16W		R193			RK73HB1J473J	CHIP R 47K J 1/16W	
R25 ,26			RK73EB2E000J	CHIP R 0 J 1/4W		R194			RK73HB1J101J	CHIP R 100 J 1/16W	
R31			RK73HB1J000J	CHIP R 0 J 1/16W		R198			RK73HB1J473J	CHIP R 47K J 1/16W	
R32			RK73GH2A362D	CHIP R 3.6K D 1/10W		R200-202			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R50			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R203			RK73HB1J000J	CHIP R 0 J 1/16W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W		R204,205			RK73HB1J473J	CHIP R 47K J 1/16W	
R52			RK73HB1J104J	CHIP R 100K J 1/16W		R206			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R55 ,56			RK73GB2A102J	CHIP R 1.0K J 1/10W		R207			RK73HB1J000J	CHIP R 0 J 1/16W	
R57			RK73EB2E000J	CHIP R 0 J 1/4W		R208			RK73HB1J101J	CHIP R 100 J 1/16W	
R58			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R210			RK73HB1J000J	CHIP R 0 J 1/16W	
R60			RK73GB2A102J	CHIP R 1.0K J 1/10W		R213			RK73HB1J101J	CHIP R 100 J 1/16W	
R61			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R215			RK73HB1J471J	CHIP R 470 J 1/16W	
R62			RK73GB2A102J	CHIP R 1.0K J 1/10W		R216-218			RK73HB1J000J	CHIP R 0 J 1/16W	
R65 ,66			RK73GB2A103J	CHIP R 10K J 1/10W		R220-222			RK73HB1J000J	CHIP R 0 J 1/16W	
R67			RK73EB2E331J	CHIP R 330 J 1/4W		R224			RK73HB1J473J	CHIP R 47K J 1/16W	
R68			RK73GB2A151J	CHIP R 150 J 1/10W		R225			RK73HB1J000J	CHIP R 0 J 1/16W	
R69			RK73EB2E331J	CHIP R 330 J 1/4W		R226			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R70			RK73GB2A470J	CHIP R 47 J 1/10W		R227			RK73HB1J101J	CHIP R 100 J 1/16W	
R71			RK73GB2A151J	CHIP R 150 J 1/10W		R228			RK73HB1J473J	CHIP R 47K J 1/16W	
R72 ,73			RK73GB2A470J	CHIP R 47 J 1/10W		R229			RK73HB1J000J	CHIP R 0 J 1/16W	
R74			RK73EB2E680J	CHIP R 68 J 1/4W		R231			RK73HB1J000J	CHIP R 0 J 1/16W	
R75 -77			RK73GB2A472J	CHIP R 4.7K J 1/10W		R232			RK73HB1J473J	CHIP R 47K J 1/16W	
R78			RK73EB2E680J	CHIP R 68 J 1/4W		R233			RK73HB1J000J	CHIP R 0 J 1/16W	
R79 -81			RK73GB2A472J	CHIP R 4.7K J 1/10W		R234			RK73HB1J101J	CHIP R 100 J 1/16W	
R82			RK73HB1J682J	CHIP R 6.8K J 1/16W		R235			RK73HB1J470J	CHIP R 47 J 1/16W	
R83			RK73GB2A103J	CHIP R 10K J 1/10W		R237			RK73HB1J101J	CHIP R 100 J 1/16W	
R84			RK73HB1J682J	CHIP R 6.8K J 1/16W		R239			RK73HB1J470J	CHIP R 47 J 1/16W	
R86			RK73FB2B182J	CHIP R 1.8K J 1/8W		R240,241			RK73HB1J101J	CHIP R 100 J 1/16W	
R90			RK73GB2A102J	CHIP R 1.0K J 1/10W		R242			RK73HB1J000J	CHIP R 0 J 1/16W	
R91			RK73GB2A101J	CHIP R 100 J 1/10W		R243			RK73HB1J101J	CHIP R 100 J 1/16W	
R101			RK73HB1J473J	CHIP R 47K J 1/16W		R244			RK73HB1J473J	CHIP R 47K J 1/16W	
R103-113			RK73HB1J470J	CHIP R 47 J 1/16W		R246			RK73HB1J101J	CHIP R 100 J 1/16W	
R114			RK73HB1J473J	CHIP R 47K J 1/16W		R249-251			RK73HB1J101J	CHIP R 100 J 1/16W	
R118,119			RK73HB1J470J	CHIP R 47 J 1/16W		R252			RK73HB1J000J	CHIP R 0 J 1/16W	
						R254			RK73HB1J000J	CHIP R 0 J 1/16W	

PARTS LIST

DSP UNIT (X53-4530-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R255-257			RK73HB1J151J	CHIP R 150 J 1/16W		R392			RK73HB1J101J	CHIP R 100 J 1/16W	
R258-260			RK73HB1J000J	CHIP R 0 J 1/16W		R393			RK73HB1J470J	CHIP R 47 J 1/16W	
R261,262			RK73HB1J221J	CHIP R 220 J 1/16W		R396-398			RK73HB1J000J	CHIP R 0 J 1/16W	
R263,264			RK73HB1J101J	CHIP R 100 J 1/16W		R401-406			RK73HB1J000J	CHIP R 0 J 1/16W	
R265,266			RK73HB1J100J	CHIP R 10 J 1/16W		R410			RK73HB1J000J	CHIP R 0 J 1/16W	
R267			RK73HB1J101J	CHIP R 100 J 1/16W		R413-426			RK73HB1J473J	CHIP R 47K J 1/16W	
R276			RK73HB1J000J	CHIP R 0 J 1/16W		R428			RK73HB1J000J	CHIP R 0 J 1/16W	
R293			RK73HB1J473J	CHIP R 47K J 1/16W		R432			RK73HB1J000J	CHIP R 0 J 1/16W	
R300			RK73HB1J472J	CHIP R 4.7K J 1/16W		R436			RK73HB1J000J	CHIP R 0 J 1/16W	
R301,302			RK73HB1J473J	CHIP R 47K J 1/16W		R437-440			RK73HB1J221J	CHIP R 220 J 1/16W	
R303			RK73HB1J472J	CHIP R 4.7K J 1/16W		R441			RK73HB1J220J	CHIP R 22 J 1/16W	
R305-307			RK73HB1J473J	CHIP R 47K J 1/16W		R451-464			RK73HB1J473J	CHIP R 47K J 1/16W	
R308			RK73HB1J472J	CHIP R 4.7K J 1/16W		R465			RK73HB1J000J	CHIP R 0 J 1/16W	
R309-311			RK73HB1J000J	CHIP R 0 J 1/16W		R479			RK73HB1J000J	CHIP R 0 J 1/16W	
R312			RK73HB1J472J	CHIP R 4.7K J 1/16W		R484,485			RK73HB1J000J	CHIP R 0 J 1/16W	
R313			RK73HB1J473J	CHIP R 47K J 1/16W		R493			RK73HB1J000J	CHIP R 0 J 1/16W	
R314			RK73HB1J101J	CHIP R 100 J 1/16W		R495			RK73HB1J000J	CHIP R 0 J 1/16W	
R315			RK73HB1J000J	CHIP R 0 J 1/16W		R500			RK73HB1J000J	CHIP R 0 J 1/16W	
R317			RK73HB1J101J	CHIP R 100 J 1/16W		R504			RK73HB1J473J	CHIP R 47K J 1/16W	
R318			RK73HB1J151J	CHIP R 150 J 1/16W		R505			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R319,320			RK73HB1J000J	CHIP R 0 J 1/16W		R506-513			RK73HB1J473J	CHIP R 47K J 1/16W	
R324			RK73HB1J000J	CHIP R 0 J 1/16W		R517,518			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R326			RK73HB1J000J	CHIP R 0 J 1/16W		R524,525			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R327			RK73HB1J4R7J	CHIP R 4.7 J 1/16W		R530,531			RK73HB1J000J	CHIP R 0 J 1/16W	
R328			RK73HB1J000J	CHIP R 0 J 1/16W		R536-539			RK73HB1J000J	CHIP R 0 J 1/16W	
R329			RK73HB1J4R7J	CHIP R 4.7 J 1/16W		R543,544			RK73HB1J000J	CHIP R 0 J 1/16W	
R330			RK73HB1J101J	CHIP R 100 J 1/16W		R557,558			RK73HB1J000J	CHIP R 0 J 1/16W	
R331,332			RK73HB1J000J	CHIP R 0 J 1/16W		R567-569			RK73HB1J473J	CHIP R 47K J 1/16W	
R334			RK73HB1J000J	CHIP R 0 J 1/16W		R580-587			RK73HB1J000J	CHIP R 0 J 1/16W	
R335			RK73HB1J101J	CHIP R 100 J 1/16W		R589			RK73HB1J000J	CHIP R 0 J 1/16W	
R336-339			RK73HB1J000J	CHIP R 0 J 1/16W		R591			RK73HB1J000J	CHIP R 0 J 1/16W	
R340			RK73HB1J4R7J	CHIP R 4.7 J 1/16W		R592,593			RK73HB1J680J	CHIP R 68 J 1/16W	
R341			RK73HB1J000J	CHIP R 0 J 1/16W		R594			RK73HB1J331J	CHIP R 330 J 1/16W	
R342			RK73HB1J470J	CHIP R 47 J 1/16W		R600-607			RK73HB1J470J	CHIP R 47 J 1/16W	
R343			RK73HB1J151J	CHIP R 150 J 1/16W		R616			RK73HB1J473J	CHIP R 47K J 1/16W	
R344			RK73HB1J000J	CHIP R 0 J 1/16W		R617			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R345-348			RK73HB1J151J	CHIP R 150 J 1/16W		R650			RK73HB1J000J	CHIP R 0 J 1/16W	
R349			RK73HB1J000J	CHIP R 0 J 1/16W		R651,652			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R350			RK73HB1J220J	CHIP R 22 J 1/16W		R653			RK73HB1J000J	CHIP R 0 J 1/16W	
R351			RK73HB1J000J	CHIP R 0 J 1/16W		R654,655			RK73HB1J220J	CHIP R 22 J 1/16W	
R352,353			RK73HB1J151J	CHIP R 150 J 1/16W		R656			RK73HB1J103J	CHIP R 10K J 1/16W	
R354			RK73HB1J000J	CHIP R 0 J 1/16W		R657			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R355-357			RK73HB1J473J	CHIP R 47K J 1/16W		R658			RK73HB1J000J	CHIP R 0 J 1/16W	
R358			RK73HB1J000J	CHIP R 0 J 1/16W		R659			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R359			RK73HB1J100J	CHIP R 10 J 1/16W		R660,661			RK73HB1J103J	CHIP R 10K J 1/16W	
R360			RK73HB1J473J	CHIP R 47K J 1/16W		R662			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R361			RK73HB1J101J	CHIP R 100 J 1/16W		R663			RK73HB1J103J	CHIP R 10K J 1/16W	
R362			RK73HB1J000J	CHIP R 0 J 1/16W		R664			RK73HB1J223J	CHIP R 22K J 1/16W	
R366-368			RK73HB1J101J	CHIP R 100 J 1/16W		R665,666			RK73HB1J103J	CHIP R 10K J 1/16W	
R373			RK73HB1J000J	CHIP R 0 J 1/16W		R667-670			RK73HB1J183J	CHIP R 18K J 1/16W	
R375			RK73HB1J101J	CHIP R 100 J 1/16W		R671			RK73HB1J000J	CHIP R 0 J 1/16W	
R376			RK73HB1J104J	CHIP R 100K J 1/16W		R672,673			RK73HB1J103J	CHIP R 10K J 1/16W	
R377			RK73HB1J101J	CHIP R 100 J 1/16W		R674			RK73HB1J000J	CHIP R 0 J 1/16W	
R380			RK73HB1J000J	CHIP R 0 J 1/16W		R675			RK73HB1J821J	CHIP R 820 J 1/16W	
R381			RK73HB1J680J	CHIP R 68 J 1/16W		R676			RK73HB1J183J	CHIP R 18K J 1/16W	
R383-385			RK73HB1J000J	CHIP R 0 J 1/16W		R677-684			RK73HB1J223J	CHIP R 22K J 1/16W	
R386			RK73HB1J221J	CHIP R 220 J 1/16W		R685			RK73HB1J821J	CHIP R 820 J 1/16W	
R388,389			RK73HB1J680J	CHIP R 68 J 1/16W		R686			RK73HB1J103J	CHIP R 10K J 1/16W	
R390			RK73HB1J101J	CHIP R 100 J 1/16W		R687-690			RK73HB1J183J	CHIP R 18K J 1/16W	
R391			RK73HB1J470J	CHIP R 47 J 1/16W		R691			RK73GB2A103J	CHIP R 10K J 1/10W	

PARTS LIST

DSP UNIT (X53-4530-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R692,693			RK73HB1J183J	CHIP R 18K J 1/16W		R799			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R694			RK73GB2A103J	CHIP R 10K J 1/10W		R800,801			RK73HB1J223J	CHIP R 22K J 1/16W	
R695,696			RK73HB1J183J	CHIP R 18K J 1/16W		R802			RK73HB1J000J	CHIP R 0 J 1/16W	
R697			RK73HB1J152J	CHIP R 1.5K J 1/16W		R804			RK73HB1J000J	CHIP R 0 J 1/16W	
R698			RK73HB1J332J	CHIP R 3.3K J 1/16W		R805			RK73HB1J223J	CHIP R 22K J 1/16W	
R699			RK73HB1J821J	CHIP R 820 J 1/16W		R806,807			RK73HB1J103J	CHIP R 10K J 1/16W	
R700			RK73HB1J183J	CHIP R 18K J 1/16W		R809			RK73HB1J183J	CHIP R 18K J 1/16W	
R701			RK73HB1J103J	CHIP R 10K J 1/16W		R810,811			RK73HB1J000J	CHIP R 0 J 1/16W	
R702			RK73HB1J822J	CHIP R 8.2K J 1/16W		R812			RK73HB1J470J	CHIP R 47 J 1/16W	
R703			RK73HB1J103J	CHIP R 10K J 1/16W		R813-815			RK73HB1J223J	CHIP R 22K J 1/16W	
R704			RK73HB1J821J	CHIP R 820 J 1/16W		R816			RK73HB1J000J	CHIP R 0 J 1/16W	
R705			RK73HB1J822J	CHIP R 8.2K J 1/16W		R818,819			RK73HB1J000J	CHIP R 0 J 1/16W	
R706			RK73HB1J103J	CHIP R 10K J 1/16W		R820			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R707			RK73HB1J223J	CHIP R 22K J 1/16W		R821			RK73HB1J153J	CHIP R 15K J 1/16W	
R710,711			RK73HB1J332J	CHIP R 3.3K J 1/16W		R822			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R712			RK73HB1J223J	CHIP R 22K J 1/16W		R825,826			RK73HB1J000J	CHIP R 0 J 1/16W	
R713,714			RK73HB1J103J	CHIP R 10K J 1/16W		R831,832			RK73HB1J183J	CHIP R 18K J 1/16W	
R715,716			RK73HB1J332J	CHIP R 3.3K J 1/16W		R833			RK73HB1J223J	CHIP R 22K J 1/16W	
R717-720			RK73HB1J223J	CHIP R 22K J 1/16W		R834			RK73HB1J000J	CHIP R 0 J 1/16W	
R722			RK73HB1J123J	CHIP R 12K J 1/16W		R838-840			RK73HB1J000J	CHIP R 0 J 1/16W	
R723-727			RK73HB1J223J	CHIP R 22K J 1/16W		R841,842			RK73HB1J183J	CHIP R 18K J 1/16W	
R729			RK73HB1J123J	CHIP R 12K J 1/16W		R843			RK73HB1J000J	CHIP R 0 J 1/16W	
R730			RK73HB1J223J	CHIP R 22K J 1/16W		R845			RK73HB1J223J	CHIP R 22K J 1/16W	
R731			RK73HB1J100J	CHIP R 10 J 1/16W		R846			RK73GH2A362D	CHIP R 3.6K D 1/10W	
R732			RK73HB1J332J	CHIP R 3.3K J 1/16W		R847			RK73HB1J183J	CHIP R 18K J 1/16W	
R733			RK73HB1J272J	CHIP R 2.7K J 1/16W		R848,849			RK73HB1J000J	CHIP R 0 J 1/16W	
R735			RK73HB1J332J	CHIP R 3.3K J 1/16W		R850			RK73HB1J223J	CHIP R 22K J 1/16W	
R736			RK73HB1J272J	CHIP R 2.7K J 1/16W		R851,852			RK73HB1J220J	CHIP R 22 J 1/16W	
R737-748			RK73HB1J183J	CHIP R 18K J 1/16W		R853,854			RK73HB1J183J	CHIP R 18K J 1/16W	
R749,750			RK73HB1J332J	CHIP R 3.3K J 1/16W		R855			RK73HB1J223J	CHIP R 22K J 1/16W	
R753,754			RK73GH2A222D	CHIP R 2.2K D 1/10W		R857			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R755			RK73HB1J223J	CHIP R 22K J 1/16W		R858			RK73HB1J103J	CHIP R 10K J 1/16W	
R756,757			RK73HB1J103J	CHIP R 10K J 1/16W		R859,860			RK73HB1J183J	CHIP R 18K J 1/16W	
R758			RK73HB1J183J	CHIP R 18K J 1/16W		R861			RK73HB1J223J	CHIP R 22K J 1/16W	
R759			RK73HB1J223J	CHIP R 22K J 1/16W		R862			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R760			RK73HB1J183J	CHIP R 18K J 1/16W		R863			RK73HB1J333J	CHIP R 33K J 1/16W	
R761			RK73HB1J223J	CHIP R 22K J 1/16W		R866			RK73HB1J333J	CHIP R 33K J 1/16W	
R762			RK73GH2A222D	CHIP R 2.2K D 1/10W		R867			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R763-765			RK73HB1J332J	CHIP R 3.3K J 1/16W		R868			RK73HB1J183J	CHIP R 18K J 1/16W	
R766			RK73HB1J182J	CHIP R 1.8K J 1/16W		R870			RK73HB1J183J	CHIP R 18K J 1/16W	
R767			RK73HB1J332J	CHIP R 3.3K J 1/16W		R872,873			RK73HB1J223J	CHIP R 22K J 1/16W	
R768			RK73HB1J182J	CHIP R 1.8K J 1/16W		R874			RK73HB1J183J	CHIP R 18K J 1/16W	
R769			RK73HB1J223J	CHIP R 22K J 1/16W		R875,876			RK73HB1J223J	CHIP R 22K J 1/16W	
R772			RK73HB1J102J	CHIP R 1.0K J 1/16W		R877			RK73HB1J333J	CHIP R 33K J 1/16W	
R775			RK73HB1J104J	CHIP R 100K J 1/16W		R881			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R776			RK73HB1J183J	CHIP R 18K J 1/16W		R882			RK73HB1J333J	CHIP R 33K J 1/16W	
R777			RK73HB1J473J	CHIP R 47K J 1/16W		R885			RK73HB1J223J	CHIP R 22K J 1/16W	
R778,779			RK73HB1J223J	CHIP R 22K J 1/16W		R886-888			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R781,782			RK73HB1J183J	CHIP R 18K J 1/16W		R889			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R783			RK73HB1J103J	CHIP R 10K J 1/16W		R890,891			RK73HB1J183J	CHIP R 18K J 1/16W	
R785			RK73GH2A362D	CHIP R 3.6K D 1/10W		R892			RK73HB1J103J	CHIP R 10K J 1/16W	
R786			RK73HB1J473J	CHIP R 47K J 1/16W		R893			RK73HB1J223J	CHIP R 22K J 1/16W	
R787,788			RK73HB1J220J	CHIP R 22 J 1/16W		R894			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R789,790			RK73HB1J103J	CHIP R 10K J 1/16W		R895			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R791,792			RK73HB1J100J	CHIP R 10 J 1/16W		R896			RK73HB1J183J	CHIP R 18K J 1/16W	
R793			RK73HB1J000J	CHIP R 0 J 1/16W		R897			RK73HB1J103J	CHIP R 10K J 1/16W	
R794			RK73GH2A472D	CHIP R 4.7K D 1/10W		R899			RK73HB1J103J	CHIP R 10K J 1/16W	
R795			RK73GH2A222D	CHIP R 2.2K D 1/10W		R900,901			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R796			RK73HB1J223J	CHIP R 22K J 1/16W		R902			RK73HB1J223J	CHIP R 22K J 1/16W	
R797,798			RK73HB1J000J	CHIP R 0 J 1/16W		R904			RK73HB1J103J	CHIP R 10K J 1/16W	

PARTS LIST

DSP UNIT (X53-4530-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R905			RK73HB1J472J	CHIP R 4.7K J 1/16W		D1			RB080L-30	DIODE	
R906			RK73HB1J333J	CHIP R 33K J 1/16W		D50 -52			DA2S101	DIODE	
R907			RK73HB1J273J	CHIP R 27K J 1/16W		D100			1SS388F	DIODE	
R908			RK73HB1J333J	CHIP R 33K J 1/16W		D656			RB080L-30	DIODE	
R909			RK73HB1J472J	CHIP R 4.7K J 1/16W		IC1			Note1	ANALOGUE IC	
R910			RK73HB1J392J	CHIP R 3.9K J 1/16W		IC50			NJM2768BM-ZB	MOS-IC	
R911			RK73HB1J273J	CHIP R 27K J 1/16W		IC51,52			LA4425A	MOS-IC	
R912			RK73HB1J392J	CHIP R 3.9K J 1/16W		IC101			F2136ACNFKEVA	MCU	
R913			RK73HB1J822J	CHIP R 8.2K J 1/16W		IC200,201			TC74VHC373FT	MOS-IC	
R914			RK73HB1J333J	CHIP R 33K J 1/16W		IC202			Note1	DSP	
R916,917			RK73HB1J183J	CHIP R 18K J 1/16W		IC203			E29LV80CB7TIP	ROM IC	
R918			RK73HB1J333J	CHIP R 33K J 1/16W		IC300			Note1	DSP	
R920,921			RK73HB1J183J	CHIP R 18K J 1/16W		IC301			E29LV32BB7TIP	SRAM IC	
R922			RK73HB1J223J	CHIP R 22K J 1/16W		IC302			TC74VHC541FT	MOS-IC	
R924			RK73HB1J123J	CHIP R 12K J 1/16W		IC322		*	TC7WHU04FK-F	MOS-IC	
R925			RK73HB1J223J	CHIP R 22K J 1/16W		IC380			TC74VHC74FT	MOS-IC	
R927			RK73HB1J103J	CHIP R 10K J 1/16W		IC381-383			HD74LV2G34AUS	MOS-IC	
R930-932			RK73HB1J223J	CHIP R 22K J 1/16W		IC385-388			AK4387ET	MOS-IC	
R934,935			RK73HB1J183J	CHIP R 18K J 1/16W		IC389			WM8782ASEDSRV	MOS-IC	
R937			RK73HB1J103J	CHIP R 10K J 1/16W		IC390,391			AK4396VF	MOS-IC	
R938,939			RK73HB1J223J	CHIP R 22K J 1/16W		IC392			AK5385BVF	MOS-IC	
R943,944			RK73HB1J183J	CHIP R 18K J 1/16W		IC397			AK4387ET	MOS-IC	
R945			RK73HB1J103J	CHIP R 10K J 1/16W		IC398			AK5385BVF	MOS-IC	
R946			RK73HB1J223J	CHIP R 22K J 1/16W		IC399			TC7SH00FU-F	MOS-IC	
R948			RK73HB1J333J	CHIP R 33K J 1/16W		IC650,651			NJM2732V	BI-POLAR IC	
R949			RK73HB1J682J	CHIP R 6.8K J 1/16W		IC652-656			NJM2100V-ZB	MOS-IC	
R950			RK73HB1J103J	CHIP R 10K J 1/16W		IC657			NJM2732V	BI-POLAR IC	
R952			RK73HB1J104J	CHIP R 100K J 1/16W		IC658			M62353AGPDF5J	MOS-IC	
R954			RK73HB1J103J	CHIP R 10K J 1/16W		IC659-661			NJM2732V	BI-POLAR IC	
R958			RK73HB1J682J	CHIP R 6.8K J 1/16W		IC662,663			NJM2100V-ZB	MOS-IC	
R960			RK73HB1J223J	CHIP R 22K J 1/16W		IC664,665			NJM2172V-ZB	MOS-IC	
R961,962			RK73HB1J4R7J	CHIP R 4.7 J 1/16W		IC666,667			NJM2732V	BI-POLAR IC	
R967			RK73HB1J333J	CHIP R 33K J 1/16W		IC668,669			NJM2100V-ZB	MOS-IC	
R968			RK73HB1J682J	CHIP R 6.8K J 1/16W		IC670-673			NJM2732V	BI-POLAR IC	
R970,971			RK73HB1J331J	CHIP R 330 J 1/16W		IC674			BA4580RFVM	BI-POLAR IC	
R972			RK73HB1J472J	CHIP R 4.7K J 1/16W		IC675			NJM2732V	BI-POLAR IC	
R974			RK73HB1J223J	CHIP R 22K J 1/16W		IC678			NJM2732V	BI-POLAR IC	
R975			RK73HB1J222J	CHIP R 2.2K J 1/16W		IC679			NJM2100V-ZB	MOS-IC	
R976			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC681			NJM2100V-ZB	MOS-IC	
R977			RK73HB1J123J	CHIP R 12K J 1/16W		IC682			NJM2732V	BI-POLAR IC	
R978			RK73HB1J222J	CHIP R 2.2K J 1/16W		IC683			BA4580RFVM	BI-POLAR IC	
R980,981			RK73HB1J183J	CHIP R 18K J 1/16W		IC684			TC7W66FK-F	MOS-IC	
R982			RK73HB1J682J	CHIP R 6.8K J 1/16W		IC685			BA4580RFVM	BI-POLAR IC	
R983			RK73HB1J334J	CHIP R 330K J 1/16W		IC686			TC7W66FK-F	MOS-IC	
R984			RK73HB1J183J	CHIP R 18K J 1/16W		Q51 ,52			2SC5566-E	TRANSISTOR	
R985			RK73HB1J472J	CHIP R 4.7K J 1/16W		Q53 -55			2SB1694	TRANSISTOR	
R986			RK73HB1J223J	CHIP R 22K J 1/16W		Q56 -58			LTC043ZEBFS8	TRANSISTOR	
R987			RK73HB1J103J	CHIP R 10K J 1/16W		Q100			SSM3J05FU-F	FET	
R988			RK73HB1J102J	CHIP R 1.0K J 1/16W		Q101			LTC043TEBFS8	TRANSISTOR	
R989,990			RK73HB1J473J	CHIP R 47K J 1/16W		Q652			LTC043ZEBFS8	TRANSISTOR	
R992			RK73HB1J183J	CHIP R 18K J 1/16W		Q653,654			RT5P431C-T112	TRANSISTOR	
R993			RK73HB1J223J	CHIP R 22K J 1/16W		Q655			LTC043ZEBFS8	TRANSISTOR	
R994,995			RK73HB1J183J	CHIP R 18K J 1/16W		A650		*	W02-3778-05	OSCILLATING MODULE	
R996			RK73HB1J000J	CHIP R 0 J 1/16W		A651		*	W02-3779-05	OPTIC RECEIVING MODULE	
R997			RK73HB1J102J	CHIP R 1.0K J 1/16W							
R998			RK73HB1J104J	CHIP R 100K J 1/16W							
R999			RK73HB1J103J	CHIP R 10K J 1/16W							
K50 ,51			S76-0458-05	RELAY							
K52			S76-0424-05	RELAY							

PARTS LIST

DISPLAY UNIT (X54-3850-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
DISPLAY UNIT (X54-3850-00)											
D9 -11		*	B30-2352-05	LED(GREEN)		C337-339			CK73FB1C106K	CHIP C 10UF K	
D12		*	B30-2350-05	LED(YELLOW)		C340			CK73GB1H104K	CHIP C 0.10UF K	
D13 -18		*	B30-2352-05	LED(GREEN)		C351-356			CK73HB1H102K	CHIP C 1000PF K	
D20 -24		*	B30-2352-05	LED(GREEN)		C357,358			CK73FB1C106K	CHIP C 10UF K	
D25		*	B30-2351-05	LED(RED)		C359,360			CK73GB1E105K	CHIP C 1.0UF K	
D26 -28		*	B30-2352-05	LED(GREEN)		C361			CK73GB1H102K	CHIP C 1000PF K	
D29		*	B30-2351-05	LED(RED)		C362			CK73GB1E105K	CHIP C 1.0UF K	
D31		*	B30-2350-05	LED(YELLOW)		C363			CK73FB1C106K	CHIP C 10UF K	
D32		*	B30-2352-05	LED(GREEN)		C364			CK73GB1H104K	CHIP C 0.10UF K	
D34		*	B30-2352-05	LED(GREEN)		C365			CK73FB1C106K	CHIP C 10UF K	
D36		*	B30-2350-05	LED(YELLOW)		C366,367			CK73GB1H104K	CHIP C 0.10UF K	
D37 -42		*	B30-2352-05	LED(GREEN)		C368			CK73GB1H103K	CHIP C 0.010UF K	
D43		*	B30-2351-05	LED(RED)		C369,370			CK73FB1C106K	CHIP C 10UF K	
D44		*	B30-2352-05	LED(GREEN)		C371			CK73GB1E105K	CHIP C 1.0UF K	
D45 ,46		*	B30-2350-05	LED(YELLOW)		C372			CK73GB1H104K	CHIP C 0.10UF K	
D47 -51		*	B30-2352-05	LED(GREEN)		C373			CK73GB1H103K	CHIP C 0.010UF K	
D52		*	B30-2350-05	LED(YELLOW)		C374			CK73FB1C106K	CHIP C 10UF K	
D61 -63		*	B30-2352-05	LED(GREEN)		C375			CK73GB1H104K	CHIP C 0.10UF K	
D501-504		*	B30-2352-05	LED(GREEN)		C376			CK73FB1C106K	CHIP C 10UF K	
						C377			CK73GB1H104K	CHIP C 0.10UF K	
C11			CK73GB1H102K	CHIP C 1000PF K		C378			CC73GCH1H152J	CHIP C 1500PF J	
C13 -16			CK73GB1H102K	CHIP C 1000PF K		C379			CK73GB1H103K	CHIP C 0.010UF K	
C17 ,18			CK73GB1E105K	CHIP C 1.0UF K		C380			CK73GB1E105K	CHIP C 1.0UF K	
C19 -25			CK73GB1H102K	CHIP C 1000PF K		C381			CK73FB1C106K	CHIP C 10UF K	
C26			CK73GB1E105K	CHIP C 1.0UF K		C382			CC73GCH1H151J	CHIP C 150PF J	
C27 -32			CK73GB1H102K	CHIP C 1000PF K		C383			CK73GB1H103K	CHIP C 0.010UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K		C384			CK73GB1E105K	CHIP C 1.0UF K	
C46			CK73GB1H104K	CHIP C 0.10UF K		C385,386			CK73GB1H104K	CHIP C 0.10UF K	
C47 ,48			CC73GCH1H180J	CHIP C 18PF J		C387			CC73GCH1H101J	CHIP C 100PF J	
C49			CK73GB1H104K	CHIP C 0.10UF K		C388			CK73GB1H103K	CHIP C 0.010UF K	
C50			CK73GB1H102K	CHIP C 1000PF K		C390			CE32BQ1H100M	CHIP EL 10UF 50WV	
C52			CK73GB1H104K	CHIP C 0.10UF K		C391			CK73GB1C224K	CHIP C 0.22UF K	
C55			CK73GB1H104K	CHIP C 0.10UF K		C392			CE32BQ1H100M	CHIP EL 10UF 50WV	
C56			CK73FB1C106K	CHIP C 10UF K		C395			CC73GCH1H471J	CHIP C 470PF J	
C58			CK73FB1C106K	CHIP C 10UF K		C397			CK73GB1E105K	CHIP C 1.0UF K	
C59 -70			CK73GB1H102K	CHIP C 1000PF K		C398			CC73GCH1H151J	CHIP C 150PF J	
C71 -73			CK73GB1H104K	CHIP C 0.10UF K		C399			CK73GB1H103K	CHIP C 0.010UF K	
C74 -85			CK73GB1H102K	CHIP C 1000PF K		C400			CC73GCH1H560J	CHIP C 56PF J	
C87			C93-0912-05	CHIP C 100UF M		C401			CK73GB1H104K	CHIP C 0.10UF K	
C88			CK73GB1H102K	CHIP C 1000PF K		C402			CC73GCH1H101J	CHIP C 100PF J	
C90			CK73GB1E105K	CHIP C 1.0UF K		C403			CK73EB1H475K	CHIP C 4.7UF K	
C91			CK73GB1H102K	CHIP C 1000PF K		C404			CK73GB1C224K	CHIP C 0.22UF K	
C92 -94			CK73GB1H104K	CHIP C 0.10UF K		C411			CC73GCH1H560J	CHIP C 56PF J	
C95 -103			CK73GB1H102K	CHIP C 1000PF K		C436-439			CE32BM1E101M	CHIP EL 100UF 25WV	
C104			CC73GCH1H101J	CHIP C 100PF J		C462			CC73GCH1H471J	CHIP C 470PF J	
C105-116			CK73GB1H102K	CHIP C 1000PF K		C501			CK73GB1H103K	CHIP C 0.010UF K	
C117			CK73GB1E105K	CHIP C 1.0UF K		C502			CC73HCH1H330J	CHIP C 33PF J	
C120			CK73GB1H102K	CHIP C 1000PF K		C506-530			CC73HCH1H330J	CHIP C 33PF J	
C121			CK73GB1E105K	CHIP C 1.0UF K		C531			CK73FB1C106K	CHIP C 10UF K	
C122-139			CC73GCH1H101J	CHIP C 100PF J		C533			CC73HCH1H220J	CHIP C 22PF J	
C162			CK73GB1H102K	CHIP C 1000PF K					E37-1666-05	LEAD WIRE WITH TERMINAL	
C163			CK73GB1E105K	CHIP C 1.0UF K		CN1			E41-3191-05	FLAT CABLE CONNECTOR	
C164			CK73GB1H102K	CHIP C 1000PF K		CN2 ,3			E40-6527-05	PIN ASSY	
C171-173			CK73GB1H104K	CHIP C 0.10UF K		CN4			E41-2673-05	PIN ASSY	
C201,202			CE32BM1E101M	CHIP EL 100UF 25WV		CN5			E41-2736-05	PIN ASSY	
C205-226			CK73GB1H102K	CHIP C 1000PF K		CN6			E40-6919-05	FLAT CABLE CONNECTOR	
C301			CK73GB1E105K	CHIP C 1.0UF K		CN141			E40-6727-05	FLAT CABLE CONNECTOR	
C302			CK73GB1H103K	CHIP C 0.010UF K		CN259			E41-3176-05	FLAT CABLE CONNECTOR	
C303,304			CK73GB1E105K	CHIP C 1.0UF K		CN260-262			E40-6919-05	FLAT CABLE CONNECTOR	
						CN263			E40-6910-05	FLAT CABLE CONNECTOR	

PARTS LIST

DISPLAY UNIT (X54-3850-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
CN264			E41-2741-05	PIN ASSY		R36			RK73GB2A332J	CHIP R 3.3K J 1/10W	
CN265			E41-2736-05	PIN ASSY		R44 -47			RK73GB2A473J	CHIP R 47K J 1/10W	
CN266			E41-3177-05	FLAT CABLE CONNECTOR		R49			RK73GB2A000J	CHIP R 0 J 1/10W	
CN267			E40-6922-05	FLAT CABLE CONNECTOR		R50 -53			RK73GB2A473J	CHIP R 47K J 1/10W	
CN301			E40-6525-05	PIN ASSY		R56			RK73GB2A000J	CHIP R 0 J 1/10W	
CN302			E41-3191-05	FLAT CABLE CONNECTOR		R57 -60			RK73GB2A473J	CHIP R 47K J 1/10W	
CN303			E41-3192-05	FLAT CABLE CONNECTOR		R61			RK73GB2A103J	CHIP R 10K J 1/10W	
CN405			E40-6913-05	FLAT CABLE CONNECTOR		R62			RK73GB2A000J	CHIP R 0 J 1/10W	
CN406			E40-6949-05	FLAT CABLE CONNECTOR		R63			RK73EB2E000J	CHIP R 0 J 1/4W	
CN465			E41-2332-05	FLAT CABLE CONNECTOR		R65			RK73GB2A561J	CHIP R 560 J 1/10W	
CN466			E41-2874-05	PIN ASSY		R67			RK73GB2A473J	CHIP R 47K J 1/10W	
CN467			E40-6920-05	FLAT CABLE CONNECTOR		R68			RK73GB2A332J	CHIP R 3.3K J 1/10W	
CN468			E04-0193-05	PIN SOCKET		R69			RK73GB2A000J	CHIP R 0 J 1/10W	
CN501			E41-3176-05	FLAT CABLE CONNECTOR		R70 ,71			RK73GB2A473J	CHIP R 47K J 1/10W	
CN502			E41-3346-05	FLAT CABLE CONNECTOR		R72			RK73GB2A105J	CHIP R 1.0M J 1/10W	
CN503			E40-6921-05	FLAT CABLE CONNECTOR		R73			RK73GB2A332J	CHIP R 3.3K J 1/10W	
CN504		*	E41-3405-05	FLAT CABLE CONNECTOR		R74			RK73GB2A105J	CHIP R 1.0M J 1/10W	
CN587			E40-6912-05	FLAT CABLE CONNECTOR		R75			RK73GB2A391J	CHIP R 390 J 1/10W	
L1			L92-0639-05	CHIP FERRITE		R76			RK73GB2A561J	CHIP R 560 J 1/10W	
L4			L92-0639-05	CHIP FERRITE		R78			RK73GB2A392J	CHIP R 3.9K J 1/10W	
L9			L92-0639-05	CHIP FERRITE		R79			RK73GB2A154J	CHIP R 150K J 1/10W	
L10 ,11			L92-0641-05	FERRITE CORE		R80			RK73GB2A473J	CHIP R 47K J 1/10W	
L13			L33-1554-05	CHOKE COIL		R82			RK73GB2A561J	CHIP R 560 J 1/10W	
L14			L92-0467-05	CHIP FERRITE		R83			RK73GB2A391J	CHIP R 390 J 1/10W	
L15			L92-0639-05	CHIP FERRITE		R84			RK73GB2A561J	CHIP R 560 J 1/10W	
L16			L33-3023-05	CHOKE COIL		R85			RK73GB2A000J	CHIP R 0 J 1/10W	
L17 -22			L92-0639-05	CHIP FERRITE		R86			RK73GB2A473J	CHIP R 47K J 1/10W	
L31 ,32			L92-0639-05	CHIP FERRITE		R88			RK73GB2A561J	CHIP R 560 J 1/10W	
L301			L33-3022-05	CHOKE COIL		R89			RK73GB2A000J	CHIP R 0 J 1/10W	
L302			L33-1597-05	CHOKE COIL		R90 ,91			RK73GB2A473J	CHIP R 47K J 1/10W	
L303			L92-0639-05	CHIP FERRITE		R92			RK73GB2A000J	CHIP R 0 J 1/10W	
L304,305			L92-0641-05	FERRITE CORE		R94			RK73GB2A561J	CHIP R 560 J 1/10W	
L310			L33-1597-05	CHOKE COIL		R96			RK73GB2A561J	CHIP R 560 J 1/10W	
L311			L33-3022-05	CHOKE COIL		R97			RK73GB2A473J	CHIP R 47K J 1/10W	
L312			L41-1001-62	SMALL FIXED INDUCTOR(10UH)		R99			RK73GB2A272J	CHIP R 2.7K J 1/10W	
L313			L33-1600-05	CHOKE COIL		R100			RK73EB2E000J	CHIP R 0 J 1/4W	
L314		*	L92-0492-05	CHIP FERRITE		R101,102			RK73GB2A473J	CHIP R 47K J 1/10W	
L316			L92-0639-05	CHIP FERRITE		R103			RK73GB2A391J	CHIP R 390 J 1/10W	
L501			L41-1505-33	SMALL FIXED INDUCTOR(15UH)		R104			RK73GB2A561J	CHIP R 560 J 1/10W	
X1			L77-2974-05	CRYSTAL RESONATOR(11.0592MHZ)		R106			RK73GB2A272J	CHIP R 2.7K J 1/10W	
CP1 ,2			RK75GB1JR00	CHIP-COM 0 1/16W		R107,108			RK73GB2A000J	CHIP R 0 J 1/10W	
CP3 ,4			RK74GB1J101J	CHIP-COM 100 J 1/16W		R110			RK73GB2A272J	CHIP R 2.7K J 1/10W	
CP5			RK74GB1J103J	CHIP-COM 10K J 1/16W		R111			RK73GB2A561J	CHIP R 560 J 1/10W	
CP7 ,8			RK74GB1J103J	CHIP-COM 10K J 1/16W		R113			RK73GB2A561J	CHIP R 560 J 1/10W	
CP9 -11			RK75GB1JR00	CHIP-COM 0 1/16W		R115			RK73GB2A682J	CHIP R 6.8K J 1/10W	
CP12-22			RK74GB1J101J	CHIP-COM 100 J 1/16W		R116-121			RK73GB2A561J	CHIP R 560 J 1/10W	
CP301			RK75GB1JR00	CHIP-COM 0 1/16W		R122			RK73GB2A272J	CHIP R 2.7K J 1/10W	
CP302			RK74GB1J101J	CHIP-COM 100 J 1/16W		R123			RK73EB2E000J	CHIP R 0 J 1/4W	
CP303-309			RK74GB1J220J	CHIP-COM 22 J 1/16W		R124			RK73GB2A561J	CHIP R 560 J 1/10W	
CP311			RK75GB1JR00	CHIP-COM 0 1/16W		R125,126			RK73GB2A272J	CHIP R 2.7K J 1/10W	
CP312-315			RK74HB1J000J	CHIP-COM 0 J 1/16W		R127-129			RK73GB2A561J	CHIP R 560 J 1/10W	
CP317			RK75GB1JR00	CHIP-COM 0 1/16W		R130			RK73GB2A392J	CHIP R 3.9K J 1/10W	
CP502-507			RK74GB1J101J	CHIP-COM 100 J 1/16W		R131			RK73GB2A561J	CHIP R 560 J 1/10W	
R1			RK73GB2A000J	CHIP R 0 J 1/10W		R132			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R2 -13			RK73GB2A101J	CHIP R 100 J 1/10W		R133			RK73GB2A561J	CHIP R 560 J 1/10W	
R18 -23			RK73GB2A101J	CHIP R 100 J 1/10W		R134			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R24 ,25			RK73GB2A000J	CHIP R 0 J 1/10W		R135-137			RK73GB2A470J	CHIP R 47 J 1/10W	
R26			RK73GB2A101J	CHIP R 100 J 1/10W		R138-153			RK73GB2A101J	CHIP R 100 J 1/10W	
R34 ,35			RK73GB2A101J	CHIP R 100 J 1/10W		R154			RK73GB2A000J	CHIP R 0 J 1/10W	
						R155			RK73GB2A332J	CHIP R 3.3K J 1/10W	

PARTS LIST

DISPLAY UNIT (X54-3850-00)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R156			RK73GB2A103J	CHIP R 10K J 1/10W		R371			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R157			RK73GB2A101J	CHIP R 100 J 1/10W		R373			RK73GB2A000J	CHIP R 0 J 1/10W	
R158			RK73GB2A103J	CHIP R 10K J 1/10W		R375			RK73GB2A220J	CHIP R 22 J 1/10W	
R159,160			RK73GB2A473J	CHIP R 47K J 1/10W		R378			RK73GB2A820J	CHIP R 82 J 1/10W	
R162-169			RK73HB1J000J	CHIP R 0 J 1/16W		R379-381			RK73HB1J000J	CHIP R 0 J 1/16W	
R171,172			RK73GB2A103J	CHIP R 10K J 1/10W		R382			RK73HB1J680J	CHIP R 68 J 1/16W	
R301			RK73GB2A473J	CHIP R 47K J 1/10W		R383-398			RK73HB1J000J	CHIP R 0 J 1/16W	
R302			RK73PB2H2R2J	CHIP R 2.2 J 1/2W		R399			RK73GB2A000J	CHIP R 0 J 1/10W	
R303			RK73PB2H330J	CHIP R 33 J 1/2W		R501-504			RK73GB2A561J	CHIP R 560 J 1/10W	
R304			RK73GH2A912D	CHIP R 9.1K D 1/10W		R505-508			RK73HB1J000J	CHIP R 0 J 1/16W	
R305			RK73PB2H330J	CHIP R 33 J 1/2W		R512			RK73GB2A000J	CHIP R 0 J 1/10W	
R306,307			RK73HB1J000J	CHIP R 0 J 1/16W		R514			RK73GB2A000J	CHIP R 0 J 1/10W	
R308			RK73PB2H330J	CHIP R 33 J 1/2W		R517			RK73GB2A101J	CHIP R 100 J 1/10W	
R309			RK73GH2A473D	CHIP R 47K D 1/10W		R521			RK73GB2A101J	CHIP R 100 J 1/10W	
R310,311			RK73HB1J101J	CHIP R 100 J 1/16W		R524			RK73GB2A000J	CHIP R 0 J 1/10W	
R312			RK73PB2H330J	CHIP R 33 J 1/2W		R525			RK73GB2A271J	CHIP R 270 J 1/10W	
R314-318			RK73GB2A473J	CHIP R 47K J 1/10W		VR501-507	*		R31-0687-05	VARIABLE RESISTOR(100k)	
R319			RK73GB2A000J	CHIP R 0 J 1/10W		S1 -91			S70-0439-15	TACT SWITCH	
R320			RK73GB2A473J	CHIP R 47K J 1/10W		S501-513			S70-0439-15	TACT SWITCH	
R321			RK73GB2A121J	CHIP R 120 J 1/10W		D1 -8			DA2S101	DIODE	
R322			RK73EB2E100J	CHIP R 10 J 1/4W		D19			RB501VM-40	DIODE	
R323			RK73GH2A563D	CHIP R 56K D 1/10W		D53			1SS348-F	DIODE	
R324			RK73GB2A000J	CHIP R 0 J 1/10W		D54			MINISMD C05002F	VARISTOR	
R325,326			RK73GB2A473J	CHIP R 47K J 1/10W		D55			1SS355	DIODE	
R327			RK73GB2A104J	CHIP R 100K J 1/10W		D56			1SS348-F	DIODE	
R328			RK73GB2A473J	CHIP R 47K J 1/10W		D301-303			DB2J317	DIODE	
R329			RK73GB2A102J	CHIP R 1.0K J 1/10W		D306			RB162M-40	DIODE	
R331			RK73GB2A121J	CHIP R 120 J 1/10W		D307,308			RSB12JS2	ZENER DIODE	
R332			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC5			MM3273DU	MOS-IC	
R333,334			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC6			F3651KDFCKEXA	MCU	
R335			RK73GH2A562D	CHIP R 5.6K D 1/10W		IC7			TC74HC4094AFF	MOS-IC	
R336			RK73GH2A153D	CHIP R 15K D 1/10W		IC9 -11			TC74VHC4051AT	MOS-IC	
R338			RK73EB2E100J	CHIP R 10 J 1/4W		IC12			TC7SET125FU-F	MOS-IC	
R339			RK73GH2A563D	CHIP R 56K D 1/10W		IC301			TC7SH08FU-F	MOS-IC	
R340			RK73GB2A473J	CHIP R 47K J 1/10W		IC302			BA00DD0WHFP	ANALOGUE IC	
R341			RK73GH2A564D	CHIP R 560K D 1/10W		IC303-305			TC7SH08FU-F	MOS-IC	
R342			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC306,307			Note1	ANALOGUE IC	
R343			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q1 ,2			LTC043ZEBFS8	TRANSISTOR	
R344			RK73GB2A473J	CHIP R 47K J 1/10W		Q4			TPC6111-F	FET	
R345			RK73GH2A913D	CHIP R 91K D 1/10W		Q7			LTC043ZEBFS8	TRANSISTOR	
R346			RK73GB2A104J	CHIP R 100K J 1/10W		Q10			LTC043ZEBFS8	TRANSISTOR	
R347-349			RK73GB2A473J	CHIP R 47K J 1/10W		Q12			LTC043ZEBFS8	TRANSISTOR	
R350			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q14			LTC043ZEBFS8	TRANSISTOR	
R351			RK73GB2A000J	CHIP R 0 J 1/10W		Q16 -24			LTC043ZEBFS8	TRANSISTOR	
R352-354			RK73HB1J000J	CHIP R 0 J 1/16W		Q26 ,27			LTC043ZEBFS8	TRANSISTOR	
R356			RK73GH2A243D	CHIP R 24K D 1/10W		Q29			LTC043ZEBFS8	TRANSISTOR	
R357			RK73GH2A124D	CHIP R 120K D 1/10W		Q31 -55			LTC043ZEBFS8	TRANSISTOR	
R358			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q301,302			TPC6111-F	FET	
R359			RK73GB2A473J	CHIP R 47K J 1/10W		Q303,304			2SA2018	TRANSISTOR	
R360			RK73GB2A000J	CHIP R 0 J 1/10W		Q305,306			2SC5585	TRANSISTOR	
R361			RK73GH2A914D	CHIP R 910K D 1/10W		Q307			LTA014YEBFS8	TRANSISTOR	
R362			RK73GH2A473D	CHIP R 47K D 1/10W		Q308			DSC90010(S)	TRANSISTOR	
R363			RK73GH2A683D	CHIP R 68K D 1/10W							
R364			RK73GH2A100D	CHIP R 10 D 1/10W							
R365			RK73GH2A220D	CHIP R 22 D 1/10W							
R366			RK73GH2A100D	CHIP R 10 D 1/10W							
R367			RK73GH2A220D	CHIP R 22 D 1/10W							
R368			RK73GH2A223D	CHIP R 22K D 1/10W							
R369			RK73GB2A4R7J	CHIP R 4.7 J 1/10W							
R370			RK73GB2A224J	CHIP R 220K J 1/10W							

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

RX UNIT (X55-313X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
RX UNIT (X55-313X-XX) 0-00: K 2-71: E						C117			CE32CL1C470M	CHIP EL 47UF 16WV	
C3 ,4			CK73GB1H102K	CHIP C 1000PF K		C118,119			CK73GB1H103K	CHIP C 0.010UF K	
C5 ,6			CK73GB1H104K	CHIP C 0.10UF K		C121			CK73GB1H104K	CHIP C 0.10UF K	
C7			CK73GB1E105K	CHIP C 1.0UF K		C122			CK73GB1H103K	CHIP C 0.010UF K	
C8			CD04BQ1C471M	ELECTRO 470UF 16WV		C123			CK73GB1H102K	CHIP C 1000PF K	
C10 ,11			CK73GB1H103K	CHIP C 0.010UF K		C125			CK73GB1H104K	CHIP C 0.10UF K	
C12			CK73GB1E105K	CHIP C 1.0UF K		C126,127			CK73GB1H103K	CHIP C 0.010UF K	
C13			CK73EB1H104K	CHIP C 0.10UF K		C129,130			CK73GB1E105K	CHIP C 1.0UF K	
C14 -19			CK73GB1H104K	CHIP C 0.10UF K		C132,133			CK73GB1H104K	CHIP C 0.10UF K	
C20			CK73EB1H104K	CHIP C 0.10UF K		C135			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H104K	CHIP C 0.10UF K		C137,138			CK73GB1H104K	CHIP C 0.10UF K	
C22			CK73GB1H102K	CHIP C 1000PF K		C139			CK73GB1E105K	CHIP C 1.0UF K	
C23			CK73GB1H104K	CHIP C 0.10UF K		C140			CC73GCH1H470J	CHIP C 47PF J	
C24			CK73GB1H103K	CHIP C 0.010UF K		C141			CK73GB1H103K	CHIP C 0.010UF K	
C26 ,27			CK73GB1H104K	CHIP C 0.10UF K		C142			CC73GCH1H221J	CHIP C 220PF J	
C28			CD04AZ1E471M	ELECTRO 470UF 25WV		C143,144			CK73GB1H103K	CHIP C 0.010UF K	
C29			CK73GB1H102K	CHIP C 1000PF K		C145,146			CK73GB1E105K	CHIP C 1.0UF K	
C30			CC73GCH1H180J	CHIP C 18PF J		C147			CK73GB1H104K	CHIP C 0.10UF K	
C31			CC73GCH1H330J	CHIP C 33PF J		C148			CK73GB1H103K	CHIP C 0.010UF K	
C32			CC73FCH1H152J	CHIP C 1500PF J		C149			CK73GB1E105K	CHIP C 1.0UF K	
C33			CC73FCH1H472J	CHIP C 4700PF J		C150			CC73GCH1H090D	CHIP C 9.0PF D	
C35			CK73GB1E105K	CHIP C 1.0UF K		C151			CK73GB1H104K	CHIP C 0.10UF K	
C36			CC73FCH1H152J	CHIP C 1500PF J		C152			CC73GCH1H090D	CHIP C 9.0PF D	
C37			CK73GB1H104K	CHIP C 0.10UF K		C153			CK73GB1H104K	CHIP C 0.10UF K	
C38			CK73GB1H103K	CHIP C 0.010UF K		C154			CK73GB1H102K	CHIP C 1000PF K	
C40			CK73GB1H104K	CHIP C 0.10UF K		C155			CC73GCH1H101J	CHIP C 100PF J	
C43			CK73GB1H104K	CHIP C 0.10UF K		C156			CK73GB1H103K	CHIP C 0.010UF K	
C45			CK73GB1H102K	CHIP C 1000PF K		C157			CK73GB1H104K	CHIP C 0.10UF K	
C47			CC73GCH1H222J	CHIP C 2200PF J		C160,161			CK73GB1H104K	CHIP C 0.10UF K	
C49			CK73HB1H102K	CHIP C 1000PF K		C162			CK73GB1E105K	CHIP C 1.0UF K	
C50			CC73FCH1H332J	CHIP C 3300PF J		C163-165			CK73GB1H104K	CHIP C 0.10UF K	
C68			CC73GCH1H221J	CHIP C 220PF J		C167			CK73GB1H104K	CHIP C 0.10UF K	
C70			CC73GCH1H222J	CHIP C 2200PF J		C168			CK73GB1H102K	CHIP C 1000PF K	
C71			CK73GB1H103K	CHIP C 0.010UF K		C170			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73GB1H104K	CHIP C 0.10UF K		C171-174			CK73GB1H103K	CHIP C 0.010UF K	
C73 -75			CC73HCH1H560J	CHIP C 56PF J		C175			CC73GCH1H330J	CHIP C 33PF J	
C76			CK73GB1H104K	CHIP C 0.10UF K		C176			CK73GB1H103K	CHIP C 0.010UF K	
C77			CK73GB1H103K	CHIP C 0.010UF K		C177			CK73GB1H104K	CHIP C 0.10UF K	
C78			CK73GB1H153K	CHIP C 0.015UF K		C178			CC73GCH1H020B	CHIP C 2.0PF B	
C79			CC73HCH1H560J	CHIP C 56PF J		C179,180			CK73GB1H103K	CHIP C 0.010UF K	
C80			CK73GB1E105K	CHIP C 1.0UF K		C182			CC73GCH1H101J	CHIP C 100PF J	
C85			CK73GB1H103K	CHIP C 0.010UF K		C183			CK73GB1H103K	CHIP C 0.010UF K	
C87			CK73GB1H103K	CHIP C 0.010UF K		C185			CC73GCH1H270J	CHIP C 27PF J	
C90			CK73GB1E105K	CHIP C 1.0UF K		C186			CK73GB1E474K	CHIP C 0.47UF K	
C92			CK73GB1H103K	CHIP C 0.010UF K		C187			CK73GB1H104K	CHIP C 0.10UF K	
C95 ,96			CK73GB1H104K	CHIP C 0.10UF K		C188			CC73GCH1H330J	CHIP C 33PF J	
C98			CK73GB1H104K	CHIP C 0.10UF K		C191			CC73GCH1H050B	CHIP C 5.0PF B	
C100			CK73HB1H102K	CHIP C 1000PF K		C192			CC73GCH1H270J	CHIP C 27PF J	
C101,102			CK73GB1H104K	CHIP C 0.10UF K		C194,195			CK73GB1H104K	CHIP C 0.10UF K	
C103			CK73GB1E105K	CHIP C 1.0UF K		C197			CK73GB1H102K	CHIP C 1000PF K	
C104			CK73GB1H104K	CHIP C 0.10UF K		C198			CK73GB1H103K	CHIP C 0.010UF K	
C105			CK73GB1E105K	CHIP C 1.0UF K		C199			CK73GB1H104K	CHIP C 0.10UF K	
C106			CK73GB1H104K	CHIP C 0.10UF K		C201			CK73GB1H103K	CHIP C 0.010UF K	
C108			CK73GB1H104K	CHIP C 0.10UF K		C205			CK73GB1H473K	CHIP C 0.047UF K	
C110,111			CK73GB1H104K	CHIP C 0.10UF K		C206			CK73GB1H103K	CHIP C 0.010UF K	
C112			CK73GB1H103K	CHIP C 0.010UF K		C207			CC73GCH1H101J	CHIP C 100PF J	
C113			CC73GCH1H220J	CHIP C 22PF J		C208,209			CK73GB1H103K	CHIP C 0.010UF K	
C115			CK73GB1E105K	CHIP C 1.0UF K		C211			CK73GB1H103K	CHIP C 0.010UF K	
C116			CK73GB1H103K	CHIP C 0.010UF K		C213			CK73GB1H103K	CHIP C 0.010UF K	
						C214			CC73GCH1H100D	CHIP C 10PF D	

PARTS LIST

RX UNIT (X55-313X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C215			CK73GB1H103K	CHIP C 0.010UF K		C320,321			CC73GCH1H390J	CHIP C 39PF J	
C216			CK73GB1H102K	CHIP C 1000PF K		C322			CC73GCH1H820J	CHIP C 82PF J	
C218			CK73GB1E105K	CHIP C 1.0UF K		C323			CK73GB1H223K	CHIP C 0.022UF K	
C219-223			CK73GB1H103K	CHIP C 0.010UF K		C325,326			CC73GCH1H020B	CHIP C 2.0PF B	
C224,225			CK73GB1H102K	CHIP C 1000PF K		C327			CC73GCH1H070B	CHIP C 7.0PF B	
C226			CK73GB1H103K	CHIP C 0.010UF K		C329			CC73GCH1H120J	CHIP C 12PF J	
C227			CK73GB1E105K	CHIP C 1.0UF K		C330			CK73GB1H104K	CHIP C 0.10UF K	
C228			CK73GB1H103K	CHIP C 0.010UF K		C333,334			CK73GB1H104K	CHIP C 0.10UF K	
C230			CC73GCH1H331J	CHIP C 330PF J		C335			CC73GCH1H330J	CHIP C 33PF J	
C231			CK73GB1H104K	CHIP C 0.10UF K		C336,337			CC73GCH1H390J	CHIP C 39PF J	
C233			CC73GCH1H331J	CHIP C 330PF J		C338,339			CK73GB1H104K	CHIP C 0.10UF K	
C235			CK73GB1H102K	CHIP C 1000PF K		C340			CC73GCH1H050B	CHIP C 5.0PF B	
C238			CC73GCH1H151J	CHIP C 150PF J		C341,342			CC73GCH1H020B	CHIP C 2.0PF B	
C239			CC73GCH1H560J	CHIP C 56PF J		C343-345			CK73GB1H104K	CHIP C 0.10UF K	
C242			CK73GB1H103K	CHIP C 0.010UF K		C346			CC73GCH1H270J	CHIP C 27PF J	
C244			CK73GB1H103K	CHIP C 0.010UF K		C347-355			CK73GB1H103K	CHIP C 0.010UF K	
C245			CC73GCH1H391J	CHIP C 390PF J		C356,357			CC73GCH1H271J	CHIP C 270PF J	
C246			CC73GCH1H150J	CHIP C 15PF J		C358			CC73GCH1H151J	CHIP C 150PF J	
C247,248			CK73GB1H103K	CHIP C 0.010UF K		C359			CK73GB1H223K	CHIP C 0.022UF K	
C250,251			CK73GB1H103K	CHIP C 0.010UF K		C360			CC73GCH1H100C	CHIP C 10PF C	
C252			CK73GB1E105K	CHIP C 1.0UF K		C361			CK73GB1H104K	CHIP C 0.10UF K	
C254,255			CK73GB1H103K	CHIP C 0.010UF K		C362			CK73GB1E105K	CHIP C 1.0UF K	
C257,258			CK73GB1H103K	CHIP C 0.010UF K		C363			CC73GCH1H391J	CHIP C 390PF J	
C259			CK73GB1E105K	CHIP C 1.0UF K		C364			CC73GCH1H150J	CHIP C 15PF J	
C260-262			CK73GB1H103K	CHIP C 0.010UF K		C366			CK73GB1E105K	CHIP C 1.0UF K	
C263			CK73GB1H104K	CHIP C 0.10UF K		C367			CK73FB1A106K	CHIP C 10UF K	
C264,265			CK73GB1H103K	CHIP C 0.010UF K		C369,370			CK73GB1H103K	CHIP C 0.010UF K	
C266			CK73GB1E105K	CHIP C 1.0UF K		C371			CK73GB1E105K	CHIP C 1.0UF K	
C267			CK73GB1H104K	CHIP C 0.10UF K		C372			CK73GB1H103K	CHIP C 0.010UF K	
C268,269			CC73GCH1H100D	CHIP C 10PF D		C373			CK73GB1H222K	CHIP C 2200PF K	
C270			CK73GB1H103K	CHIP C 0.010UF K		C374			CC73GCH1H331J	CHIP C 330PF J	
C271			CK73GB1H104K	CHIP C 0.10UF K		C375			CK73GB1E105K	CHIP C 1.0UF K	
C272			CK73GB1H103K	CHIP C 0.010UF K		C377			CK73GB1H103K	CHIP C 0.010UF K	
C273			CK73GB1H102K	CHIP C 1000PF K		C378			CK73GB1H104K	CHIP C 0.10UF K	
C274-277			CK73GB1H103K	CHIP C 0.010UF K		C379			CK73FB1A106K	CHIP C 10UF K	
C278			CK73GB1H102K	CHIP C 1000PF K		C380			CK73GB1H103K	CHIP C 0.010UF K	
C280			CC73GCH1H470J	CHIP C 47PF J		C381			CK73GB1E105K	CHIP C 1.0UF K	
C281			CK73GB1H103K	CHIP C 0.010UF K		C382			CK73GB1H223K	CHIP C 0.022UF K	
C282			CC73GCH1H150J	CHIP C 15PF J		C383			CK73GB1H103K	CHIP C 0.010UF K	
C283			CK73GB1H103K	CHIP C 0.010UF K		C384			CK73GB1H104K	CHIP C 0.10UF K	
C284			CK73GB1H104K	CHIP C 0.10UF K		C385-387			CK73GB1H103K	CHIP C 0.010UF K	
C285,286			CK73GB1H103K	CHIP C 0.010UF K		C388			CC73GCH1H181J	CHIP C 180PF J	
C287			CK73GB1H104K	CHIP C 0.10UF K		C389-391			CK73GB1H103K	CHIP C 0.010UF K	
C288			CK73GB1H103K	CHIP C 0.010UF K		C398			CC73GCH1H391J	CHIP C 390PF J	
C289			CC73GCH1H121J	CHIP C 120PF J		C399			CC73GCH1H560J	CHIP C 56PF J	
C290			CK73GB1E105K	CHIP C 1.0UF K		C400			CK73FB1A106K	CHIP C 10UF K	
C291			CK73GB1H102K	CHIP C 1000PF K		C401			CK73GB1H103K	CHIP C 0.010UF K	
C292			CC73GCH1H560J	CHIP C 56PF J		C402			CK73GB1H104K	CHIP C 0.10UF K	
C293-299			CK73GB1H103K	CHIP C 0.010UF K		C403			CK73GB1E105K	CHIP C 1.0UF K	
C300			CC73GCH1H121J	CHIP C 120PF J		C405			CC73GCH1H121J	CHIP C 120PF J	
C301-306			CK73GB1H103K	CHIP C 0.010UF K		C406,407			CC73GCH1H390G	CHIP C 39PF G	
C307			CK73GB1H104K	CHIP C 0.10UF K		C408			CC73GCH1H821J	CHIP C 820PF J	
C308,309			CK73GB1H103K	CHIP C 0.010UF K		C409			CC73GCH1H391J	CHIP C 390PF J	
C310			CK73GB1H104K	CHIP C 0.10UF K		C410			CC73GCH1H121J	CHIP C 120PF J	
C311			CE32CL1C220M	CHIP EL 22UF 16WV		C411			CC73GCH1H821J	CHIP C 820PF J	
C312			CC73GCH1H221J	CHIP C 220PF J		C412			CC73GCH1H101J	CHIP C 100PF J	
C313-316			CK73GB1H104K	CHIP C 0.10UF K		C413			CK73GB1H103K	CHIP C 0.010UF K	
C317			CK73GB1H103K	CHIP C 0.010UF K		C414			CC73GCH1H100C	CHIP C 10PF C	
C318			CK73GB1E105K	CHIP C 1.0UF K		C415			CC73GCH1H391J	CHIP C 390PF J	
C319			CC73GCH1H330J	CHIP C 33PF J		C416			CC73GCH1H680G	CHIP C 68PF G	

PARTS LIST

RX UNIT (X55-313X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C417			CC73GCH1H100C	CHIP C 10PF C		C597			CC73GCH1H100C	CHIP C 10PF C	
C418			CC73GCH1H331J	CHIP C 330PF J		C598			CC73GCH1H330G	CHIP C 33PF G	
C419			CC73GCH1H680G	CHIP C 68PF G		C599			CC73GCH1H020B	CHIP C 2.0PF B	
C420			CC73GCH1H100C	CHIP C 10PF C		C600			CC73GCH1H271J	CHIP C 270PF J	
C421			CC73GCH1H391J	CHIP C 390PF J		C601			CC73GCH1H391J	CHIP C 390PF J	
C422			CK73GB1H103K	CHIP C 0.010UF K		C602			CC73GCH1H102J	CHIP C 1000PF J	
C423			CC73GCH1H102J	CHIP C 1000PF J		C603			CC73GCH1H181J	CHIP C 180PF J	
C424			CK73GB1E105K	CHIP C 1.0UF K		C604			CC73GCH1H121J	CHIP C 120PF J	
C425			CC73GCH1H102J	CHIP C 1000PF J		C606			CC73GCH1H181J	CHIP C 180PF J	
C426-428			CK73HB1H102K	CHIP C 1000PF K		C607			CK73GB1H104K	CHIP C 0.10UF K	
C501-506			CK73GB1H104K	CHIP C 0.10UF K		C608			CC73GCH1H100B	CHIP C 10PF B	
C507-511			CK73GB1H103K	CHIP C 0.010UF K		C609			CK73GB1H103K	CHIP C 0.010UF K	
C516			CC73GCH1H122J	CHIP C 1200PF J		C610			CC73GCH1H331J	CHIP C 330PF J	
C517			CC73GCH1H471J	CHIP C 470PF J		C611			CC73GCH1H391J	CHIP C 390PF J	
C518			CC73GCH1H821J	CHIP C 820PF J		C612			CC73GCH1H121J	CHIP C 120PF J	
C519			CC73GCH1H152J	CHIP C 1500PF J		C613			CC73GCH1H100C	CHIP C 10PF C	
C520			CC73GCH1H821J	CHIP C 820PF J		C614			CC73GCH1H221J	CHIP C 220PF J	
C522			CC73GCH1H561J	CHIP C 560PF J		C615			CK73GB1E105K	CHIP C 1.0UF K	
C523			CC73GCH1H470J	CHIP C 47PF J		C617			CK73GB1E105K	CHIP C 1.0UF K	
C524,525			CC73GCH1H101J	CHIP C 100PF J		C618			CC73GCH1H391J	CHIP C 390PF J	
C531			CK73GB1E105K	CHIP C 1.0UF K		C619			CK73GB1E105K	CHIP C 1.0UF K	
C532			CC73GCH1H070B	CHIP C 7.0PF B		C620			CC73GCH1H270G	CHIP C 27PF G	
C533			CC73GCH1H100C	CHIP C 10PF C		C621			CC73GCH1H560J	CHIP C 56PF J	
C535			CC73GCH1H080B	CHIP C 8.0PF B		C622			CC73GCH1H471J	CHIP C 470PF J	
C536			CC73GCH1H050B	CHIP C 5.0PF B		C623-626			CC73GCH1H102J	CHIP C 1000PF J	
C537			CC73GCH1H470J	CHIP C 47PF J		C627			CC73GCH1H121J	CHIP C 120PF J	
C538			CC73GCH1H102J	CHIP C 1000PF J		C629			CC73GCH1H121J	CHIP C 120PF J	
C539			CC73GCH1H220J	CHIP C 22PF J		C630			CC73GCH1H100B	CHIP C 10PF B	
C540			CC73GCH1H820J	CHIP C 82PF J		C631			CC73GCH1H090B	CHIP C 9.0PF B	
C541			CC73GCH1H020B	CHIP C 2.0PF B		C632			CC73GCH1H471J	CHIP C 470PF J	
C542			CC73GCH1H680J	CHIP C 68PF J		C633			CC73GCH1H560J	CHIP C 56PF J	
C543			CC73GCH1H560J	CHIP C 56PF J		C634-636			CC73GCH1H102J	CHIP C 1000PF J	
C544			CC73GCH1H561J	CHIP C 560PF J		C637			CC73GCH1H330G	CHIP C 33PF G	
C545			CC73GCH1H220J	CHIP C 22PF J		C638			CC73GCH1H100B	CHIP C 10PF B	
C548			CC73GCH1H122J	CHIP C 1200PF J		C639			CC73GCH1H100C	CHIP C 10PF C	
C549			CC73GCH1H471J	CHIP C 470PF J		C640			CC73GCH1H330J	CHIP C 33PF J	
C550			CC73GCH1H821J	CHIP C 820PF J		C641			CC73GCH1H680G	CHIP C 68PF G	
C552			CC73GCH1H152J	CHIP C 1500PF J		C642			CC73GCH1H271J	CHIP C 270PF J	
C553			CC73GCH1H821J	CHIP C 820PF J		C643			CC73GCH1H270G	CHIP C 27PF G	
C554			CK73GB1H104K	CHIP C 0.10UF K		C644-646			CK73GB1E105K	CHIP C 1.0UF K	
C555			CC73GCH1H470J	CHIP C 47PF J		C647			CC73GCH1H040B	CHIP C 4.0PF B	
C556,557			CC73GCH1H101J	CHIP C 100PF J		C648			CC73GCH1H680J	CHIP C 68PF J	
C559			CC73GCH1H561J	CHIP C 560PF J		C649			CC73GCH1H390G	CHIP C 39PF G	
C561			CK73GB1H103K	CHIP C 0.010UF K		C650			CC73GCH1H330G	CHIP C 33PF G	
C562-566			CC73GCH1H102J	CHIP C 1000PF J		C651			CC73GCH1H390J	CHIP C 39PF J	
C568-572			CK73GB1H104K	CHIP C 0.10UF K		C652			CC73GCH1H220G	CHIP C 22PF G	
C573-577			CK73GB1H103K	CHIP C 0.010UF K		C653			CC73GCH1H330G	CHIP C 33PF G	
C578-582			CK73GB1H104K	CHIP C 0.10UF K		C654			CC73GCH1H470G	CHIP C 47PF G	
C584			CK73GB1H104K	CHIP C 0.10UF K		C655-658			CC73GCH1H102J	CHIP C 1000PF J	
C585			CC73GCH1H102J	CHIP C 1000PF J		C659			CC73GCH1H101J	CHIP C 100PF J	
C586			CC73GCH1H471J	CHIP C 470PF J		C660			CC73GCH1H270J	CHIP C 27PF J	
C587			CK73GB1H103K	CHIP C 0.010UF K		C662			CC73GCH1H121J	CHIP C 120PF J	
C588			CC73GCH1H121J	CHIP C 120PF J		C663			CC73GCH1H102J	CHIP C 1000PF J	
C589			CC73GCH1H2R5B	CHIP C 2.5PF B		C664			CK73GB1E105K	CHIP C 1.0UF K	
C590			CK73GB1E105K	CHIP C 1.0UF K		C665			CC73GCH1H391J	CHIP C 390PF J	
C591			CC73GCH1H471J	CHIP C 470PF J		C666			CK73GB1E105K	CHIP C 1.0UF K	
C592			CC73GCH1H560J	CHIP C 56PF J		C667			CC73GCH1H181J	CHIP C 180PF J	
C593			CK73GB1H103K	CHIP C 0.010UF K		C668			CK73GB1E105K	CHIP C 1.0UF K	
C594			CC73GCH1H270J	CHIP C 27PF J		C670			CK73GB1E105K	CHIP C 1.0UF K	
C596			CC73GCH1H121J	CHIP C 120PF J		C671			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

RX UNIT (X55-313X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C672			CC73GCH1H101G	CHIP C 100PF G		CN86			E40-6852-05	PIN ASSY	
C674			CC73GCH1H391J	CHIP C 390PF J		CN89			E04-0491-05	PIN SOCKET	
C675			CC73GCH1H221J	CHIP C 220PF J		CN93			E40-6852-05	PIN ASSY	
C676			CC73GCH1H101J	CHIP C 100PF J		CN104			E04-0491-05	PIN SOCKET	
C677			CC73GCH1H121J	CHIP C 120PF J		CN109			E04-0491-05	PIN SOCKET	
C678			CC73GCH1H330J	CHIP C 33PF J		CN115			E40-6852-05	PIN ASSY	
C679			CK73GB1H103K	CHIP C 0.010UF K		CN129			E40-6852-05	PIN ASSY	
C680,681			CK73GB1H104K	CHIP C 0.10UF K		CN137			E41-1682-05	PIN ASSY	
C682-685			CC73GCH1H102J	CHIP C 1000PF J		CN153-155			E40-6959-05	PIN ASSY	
C686-689			CK73GB1H104K	CHIP C 0.10UF K		CN158-162			E23-1330-05	TERMINAL	
C690			CC73GCH1H180G	CHIP C 18PF G		CN501			E04-0491-05	PIN SOCKET	
C691			CK73GB1E105K	CHIP C 1.0UF K		CN520			E40-6907-05	FLAT CABLE CONNECTOR	
C692			CC73GCH1H470G	CHIP C 47PF G		CN534			E04-0491-05	PIN SOCKET	
C693			CC73GCH1H101J	CHIP C 100PF J		CN535,536			E23-1330-05	TERMINAL	
C694			CC73GCH1H390J	CHIP C 39PF J		CN539-543			E23-1330-05	TERMINAL	
C695,696			CC73GCH1H101J	CHIP C 100PF J		F1			F53-0388-05	FUSE(1.25A)	
C697			CC73GCH1H121J	CHIP C 120PF J		F2			F53-0363-05	FUSE(0.5A)	
C698			CC73GCH1H101J	CHIP C 100PF J		-		*	G11-4628-04	SHEET(IFRESPONSE)	
C699			CC73GCH1H181J	CHIP C 180PF J		CF1			L72-0376-05	CERAMIC FILTER(455KHZ)	
C700			CC73GCH1H560G	CHIP C 56PF G		CF2			L72-0372-05	CERAMIC FILTER(455KHZ)	
C701			CC73GCH1H030B	CHIP C 3.0PF B		L1			L33-1554-05	CHOKE COIL	
C702			CC73GCH1H181J	CHIP C 180PF J		L2 ,3			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
C704			CC73GCH1H090B	CHIP C 9.0PF B		L4			L33-1557-05	CHOKE COIL	
C705			CC73GCH1H100C	CHIP C 10PF C		L5			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C706			CC73GCH1H560G	CHIP C 56PF G		L6			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
C707			CC73GCH1H150G	CHIP C 15PF G		L7 -9			L34-4941-05	COIL	
C708			CC73GCH1H820G	CHIP C 82PF G		L10			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C709			CC73GCH1H271J	CHIP C 270PF J		L11			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C710			CC73GCH1H560G	CHIP C 56PF G		L12			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
C712			CC73GCH1H271J	CHIP C 270PF J		L13			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
C713			CC73GCH1H680G	CHIP C 68PF G		L14 ,15			L41-6891-44	SMALL FIXED INDUCTOR(6.8UH)	
C715			CC73GCH1H331J	CHIP C 330PF J		L16			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C716			CK73GB1H103K	CHIP C 0.010UF K		L17			L41-1505-44	SMALL FIXED INDUCTOR(15UH)	
C717,718			CC73GCH1H020C	CHIP C 2.0PF C		L18			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C719			CK73GB1E105K	CHIP C 1.0UF K		L19			L41-1505-44	SMALL FIXED INDUCTOR(15UH)	
C720			CC73GCH1H680J	CHIP C 68PF J		L20 ,21			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C721			CC73GCH1H050B	CHIP C 5.0PF B		L22			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
C722			CC73GCH1H820G	CHIP C 82PF G		L23			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
TC1 ,2			C05-0216-05	CERAMIC TRIMMER CAPACITOR(10P)		L24			L41-1005-44	SMALL FIXED INDUCTOR(10UH)	
TC501-505			C05-0216-05	CERAMIC TRIMMER CAPACITOR(10P)		L25			L41-1015-44	SMALL FIXED INDUCTOR(100UH)	
TC506			C05-0608-05	CERAMIC TRIMMER CAPACITOR(50P)		L26 ,27			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
TC507			C05-0609-05	CERAMIC TRIMMER CAPACITOR(25P)		L28			L41-1005-44	SMALL FIXED INDUCTOR(10UH)	
TC508,509			C05-0216-05	CERAMIC TRIMMER CAPACITOR(10P)		L30			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
TC510			C05-0609-05	CERAMIC TRIMMER CAPACITOR(25P)		L32			L39-1590-05	TOROIDAL COIL	
TC511-513			C05-0216-05	CERAMIC TRIMMER CAPACITOR(10P)		L33 ,34			L33-1594-05	CHOKE COIL	
TC514-516			C05-0609-05	CERAMIC TRIMMER CAPACITOR(25P)		L35			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
CN1			E18-0254-05	SOCKET		L36			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
CN2			E04-0491-05	PIN SOCKET		L37			L41-1088-60	SMALL FIXED INDUCTOR(100NH)	
CN11			E41-1684-05	PIN ASSY		L38			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)	
CN13			E04-0491-05	PIN SOCKET		L39 ,40			L39-1591-05	TOROIDAL COIL	
CN22			E40-6907-05	FLAT CABLE CONNECTOR		L41 ,42			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
CN26			E04-0491-05	PIN SOCKET		L43			L34-4938-05	COIL	
CN28			E40-6907-05	FLAT CABLE CONNECTOR		L44			L39-1590-05	TOROIDAL COIL	
CN50			E40-5487-05	PIN ASSY		L45			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
CN53			E04-0491-05	PIN SOCKET		L46			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
CN60			E40-5487-05	PIN ASSY		L47			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
CN70			E41-3176-05	FLAT CABLE CONNECTOR		L49			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
CN80,81			E04-0491-05	PIN SOCKET		L50			L39-1575-05	TOROIDAL COIL	

PARTS LIST

RX UNIT (X55-313X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L52			L34-4938-05	COIL		L511			L39-1589-05	TOROIDAL COIL	
L53			L39-1575-05	TOROIDAL COIL		L512,513			L39-1588-05	TOROIDAL COIL	
L55			L39-1596-05	TOROIDAL COIL		L514			L39-1586-05	TOROIDAL COIL	
L56			L34-4938-05	COIL		L515			L39-1587-05	TOROIDAL COIL	
L59 ,60			L39-1595-05	TOROIDAL COIL		L516-520			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L61			L41-1005-44	SMALL FIXED INDUCTOR(10UH)		L521			L39-1588-05	TOROIDAL COIL	
L67		*	L41-6888-60	SMALL FIXED INDUCTOR(680NH)		L522			L39-1586-05	TOROIDAL COIL	
L69			L41-2215-32	SMALL FIXED INDUCTOR(220UH)		L523			L39-1585-05	TOROIDAL COIL	
L70		*	L41-6888-60	SMALL FIXED INDUCTOR(680NH)		L524			L39-1584-05	TOROIDAL COIL	
L71			L33-0695-05	SMALL FIXED INDUCTOR(1MH)		L525			L34-4613-05	AIR-CORE COIL(7T)	
L72			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L526			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L73			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L527-529			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L74			L39-1811-05	TOROIDAL COIL		L530-534			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L75			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L535			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
L76			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L536			L34-4960-05	COIL	
L77			L39-1576-05	TOROIDAL COIL		L538			L34-4613-05	AIR-CORE COIL(7T)	
L78			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L539,540			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L79			L39-1576-05	TOROIDAL COIL		L541			L34-4612-05	AIR-CORE COIL(6T)	
L80			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L542			L34-4614-05	AIR-CORE COIL(8T)	
L81			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L543			L34-4613-05	AIR-CORE COIL(7T)	
L82 ,83			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L544			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L84 -89			L41-2215-32	SMALL FIXED INDUCTOR(220UH)		L545			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L90			L39-1480-15	TOROIDAL COIL		L546			L41-2788-60	SMALL FIXED INDUCTOR(270NH)	
L91			L41-1595-33	SMALL FIXED INDUCTOR(1.5UH)		L547			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
L92			L41-4705-33	SMALL FIXED INDUCTOR(47UH)		L548		*	L41-3378-60	SMALL FIXED INDUCTOR(33NH)	
L93			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L549			L41-1298-60	SMALL FIXED INDUCTOR(1.2UH)	
L94			L34-4960-05	COIL		L550			L34-4612-05	AIR-CORE COIL(6T)	
L95			L34-4959-05	COIL		L551			L34-4614-05	AIR-CORE COIL(8T)	
L96			L34-4958-05	COIL		L552			L41-1898-60	SMALL FIXED INDUCTOR(1.8UH)	
L97			L34-4960-05	COIL		L553			L41-2798-60	SMALL FIXED INDUCTOR(2.7UH)	
L98			L34-4959-05	COIL		L554		*	L41-3378-60	SMALL FIXED INDUCTOR(33NH)	
L99			L34-4958-05	COIL		L555			L41-3398-60	SMALL FIXED INDUCTOR(3.3UH)	
L100-102			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L556			L34-4613-05	AIR-CORE COIL(7T)	
L103			L34-4946-05	COIL		L557			L34-4612-05	AIR-CORE COIL(6T)	
L104			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L558			L34-4614-05	AIR-CORE COIL(8T)	
L105			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L559			L41-1888-60	SMALL FIXED INDUCTOR(180NH)	
L106			L39-1597-05	TOROIDAL COIL		L560			L41-2788-60	SMALL FIXED INDUCTOR(270NH)	
L107			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L561			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
L108			L39-1598-05	TOROIDAL COIL		L562		*	L41-3378-60	SMALL FIXED INDUCTOR(33NH)	
L109			L41-1598-60	SMALL FIXED INDUCTOR(1.5UH)		L563			L41-1298-60	SMALL FIXED INDUCTOR(1.2UH)	
L110,111			L34-4960-05	COIL		L564			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L112			L41-2215-32	SMALL FIXED INDUCTOR(220UH)		L565			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L115			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L566			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L116			L41-4788-60	SMALL FIXED INDUCTOR(470NH)		L567			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
L118		*	L41-6888-60	SMALL FIXED INDUCTOR(680NH)		L568,569			L41-1888-60	SMALL FIXED INDUCTOR(180NH)	
L119		*	L41-4798-60	SMALL FIXED INDUCTOR(4.7UH)		L570			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
L120		*	L41-6888-60	SMALL FIXED INDUCTOR(680NH)		L571			L41-2788-60	SMALL FIXED INDUCTOR(270NH)	
L121			L41-1898-60	SMALL FIXED INDUCTOR(1.8UH)		L572-574			L41-3988-60	SMALL FIXED INDUCTOR(390NH)	
L122			L41-5688-60	SMALL FIXED INDUCTOR(560NH)		L576			L41-3388-60	SMALL FIXED INDUCTOR(330NH)	
L123			L41-2288-60	SMALL FIXED INDUCTOR(220NH)		L577			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
L124			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L579			L41-1588-60	SMALL FIXED INDUCTOR(150NH)	
L125,126		*	L41-3978-60	SMALL FIXED INDUCTOR(39NH)		L580		*	L41-6888-60	SMALL FIXED INDUCTOR(680NH)	
L127,128			L41-2295-33	SMALL FIXED INDUCTOR(2.2UH)		L581		*	L41-3378-60	SMALL FIXED INDUCTOR(33NH)	
L129		*	L41-3978-60	SMALL FIXED INDUCTOR(39NH)		L582,583			L41-2295-33	SMALL FIXED INDUCTOR(2.2UH)	
L501-505			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L584		*	L41-6888-60	SMALL FIXED INDUCTOR(680NH)	
L506			L39-1588-05	TOROIDAL COIL		XF1			L71-0677-05	MCF(8.248M/15KHZ)	
L507			L39-1586-05	TOROIDAL COIL		XF3			L71-0677-05	MCF(8.248M/15KHZ)	
L508			L39-1585-05	TOROIDAL COIL		XF4			L71-0676-05	MCF(8.248M/6KHZ)	
L509			L39-1584-05	TOROIDAL COIL		XF5			L71-0674-05	CRYSTAL FILTER(8.248M/500HZ)	
L510			L34-4613-05	AIR-CORE COIL(7T)		XF6			L71-0673-05	CRYSTAL FILTER(8.248M/270HZ)	

PARTS LIST

RX UNIT (X55-313X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
XF8			L71-0675-05	CRYSTAL FILTER(8.248M/2.7KHZ)		R81			RK73GB2A220J	CHIP R 22 J 1/10W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W		R82			RK73GB2A221J	CHIP R 220 J 1/10W	
R2			RK73EB2E680J	CHIP R 68 J 1/4W		R83			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R3			RK73EB2E470J	CHIP R 47 J 1/4W		R84			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R4			RK73GB2A103J	CHIP R 10K J 1/10W		R85			RK73GB2A223J	CHIP R 22K J 1/10W	
R5			RK73EB2E151J	CHIP R 150 J 1/4W		R86			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GB2A222J	CHIP R 2.2K J 1/10W		R87			RK73FB2B471J	CHIP R 470 J 1/8W	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W		R88			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R8 ,9			RK73FB2B221J	CHIP R 220 J 1/8W		R89 ,90			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R10 ,11			RK73GB2A103J	CHIP R 10K J 1/10W		R91			RK73GB2A473J	CHIP R 47K J 1/10W	
R12			RK73GB2A473J	CHIP R 47K J 1/10W		R93			RK73GB2A683J	CHIP R 68K J 1/10W	
R13			RK73FB2B330J	CHIP R 33 J 1/8W		R94			RK73GB2A390J	CHIP R 39 J 1/10W	
R14			RK73GB2A471J	CHIP R 470 J 1/10W		R95			RK73GB2A103J	CHIP R 10K J 1/10W	
R15			RK73EB2E680J	CHIP R 68 J 1/4W		R97			RK73GB2A223J	CHIP R 22K J 1/10W	
R16			RK73FB2B330J	CHIP R 33 J 1/8W		R99			RK73GB2A103J	CHIP R 10K J 1/10W	
R17			RK73EB2E680J	CHIP R 68 J 1/4W		R100-102			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R18			RK73EB2E560J	CHIP R 56 J 1/4W		R103			RK73GB2A103J	CHIP R 10K J 1/10W	
R19			RK73GB2A000J	CHIP R 0 J 1/10W		R104			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R20			RK73GB2A271J	CHIP R 270 J 1/10W		R108			RK73GB2A271J	CHIP R 270 J 1/10W	
R21			RK73GB2A180J	CHIP R 18 J 1/10W		R109			RK73GB2A470J	CHIP R 47 J 1/10W	
R22			RK73GB2A271J	CHIP R 270 J 1/10W		R110			RK73GB2A101J	CHIP R 100 J 1/10W	
R23 ,24			RK73FB2B221J	CHIP R 220 J 1/8W		R111			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R25			RK73GB2A122J	CHIP R 1.2K J 1/10W		R112			RK73GB2A123J	CHIP R 12K J 1/10W	
R26			RK73GB2A181J	CHIP R 180 J 1/10W		R113			RK73GB2A103J	CHIP R 10K J 1/10W	
R27			RK73GB2A331J	CHIP R 330 J 1/10W		R114			RK73GB2A221J	CHIP R 220 J 1/10W	
R28 ,29			RK73GB2A120J	CHIP R 12 J 1/10W		R115			RK73GB2A154J	CHIP R 150K J 1/10W	
R30			RK73GB2A100J	CHIP R 10 J 1/10W		R116			RK73GB2A333J	CHIP R 33K J 1/10W	
R32			RK73GB2A472J	CHIP R 4.7K J 1/10W		R117			RK73GB2A471J	CHIP R 470 J 1/10W	
R33			RK73GB2A154J	CHIP R 150K J 1/10W		R118			RK73GB2A563J	CHIP R 56K J 1/10W	
R34			RK73GB2A000J	CHIP R 0 J 1/10W		R119			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R35			RK73GB2A222J	CHIP R 2.2K J 1/10W		R120			RK73GB2A101J	CHIP R 100 J 1/10W	
R36			RK73GB2A101J	CHIP R 100 J 1/10W		R121			RK73GB2A271J	CHIP R 270 J 1/10W	
R37			RK73GB2A471J	CHIP R 470 J 1/10W		R122			RK73GB2A681J	CHIP R 680 J 1/10W	
R41			RK73GB2A562J	CHIP R 5.6K J 1/10W		R123,124			RK73GB2A470J	CHIP R 47 J 1/10W	
R42			RK73GB2A152J	CHIP R 1.5K J 1/10W		R126,127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R43			RK73GB2A151J	CHIP R 150 J 1/10W		R128			RK73GB2A101J	CHIP R 100 J 1/10W	
R44			RK73GB2A682J	CHIP R 6.8K J 1/10W		R129			RK73GB2A000J	CHIP R 0 J 1/10W	
R45			RK73GB2A152J	CHIP R 1.5K J 1/10W		R130			RK73GB2A101J	CHIP R 100 J 1/10W	
R47			RK73GB2A102J	CHIP R 1.0K J 1/10W		R134			RK73GB2A000J	CHIP R 0 J 1/10W	
R48 ,49			RK73GB2A47R7J	CHIP R 4.7 J 1/10W		R141,142			RK73GB2A000J	CHIP R 0 J 1/10W	
R50			RK73FB2B330J	CHIP R 33 J 1/8W		R143			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R51			RK73GB2A472J	CHIP R 4.7K J 1/10W		R147			RK73FB2B330J	CHIP R 33 J 1/8W	
R52 ,53			RK73FB2B470J	CHIP R 47 J 1/8W		R148			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R54			RK73GB2A100J	CHIP R 10 J 1/10W		R149			RK73GB2A471J	CHIP R 470 J 1/10W	
R55			RK73GB2A221J	CHIP R 220 J 1/10W		R150			RK73GB2A101J	CHIP R 100 J 1/10W	
R56			RK73GB2A220J	CHIP R 22 J 1/10W		R153			RK73GB2A270J	CHIP R 27 J 1/10W	
R57			RK73GB2A102J	CHIP R 1.0K J 1/10W		R154			RK73GB2A47R7J	CHIP R 4.7 J 1/10W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W		R155			RK73GB2A471J	CHIP R 470 J 1/10W	
R59			RK73GB2A47R7J	CHIP R 4.7 J 1/10W		R156			RK73FB2B470J	CHIP R 47 J 1/8W	
R62			RK73GB2A682J	CHIP R 6.8K J 1/10W		R157			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R63 ,64			RK73GB2A102J	CHIP R 1.0K J 1/10W		R158			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R65 -67			RK73GB2A101J	CHIP R 100 J 1/10W		R159			RK73GB2A561J	CHIP R 560 J 1/10W	
R68 ,69			RK73FB2B470J	CHIP R 47 J 1/8W		R160			RK73GB2A151J	CHIP R 150 J 1/10W	
R70			RK73GB2A682J	CHIP R 6.8K J 1/10W		R161			RK73GB2A000J	CHIP R 0 J 1/10W	
R71			RK73GB2A152J	CHIP R 1.5K J 1/10W		R162			RK73GB2A103J	CHIP R 10K J 1/10W	
R72			RK73GB2A682J	CHIP R 6.8K J 1/10W		R163			RK73EB2E221J	CHIP R 220 J 1/4W	
R73			RK73GB2A152J	CHIP R 1.5K J 1/10W		R164			RK73GB2A681J	CHIP R 680 J 1/10W	
R74			RK73GB2A473J	CHIP R 47K J 1/10W		R167			RK73GB2A000J	CHIP R 0 J 1/10W	
R77 -79			RK73GB2A000J	CHIP R 0 J 1/10W		R168			RK73GB2A102J	CHIP R 1.0K J 1/10W	
						R170			RK73EB2E470J	CHIP R 47 J 1/4W	

PARTS LIST

RX UNIT (X55-313X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R171			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R258			RK73GB2A470J	CHIP R 47 J 1/10W	
R172			RK73GB2A102J	CHIP R 1.0K J 1/10W		R259			RK73GB2A103J	CHIP R 10K J 1/10W	
R173			RK73GB2A103J	CHIP R 10K J 1/10W		R261			RK73GB2A101J	CHIP R 100 J 1/10W	
R174			RK73GB2A222J	CHIP R 2.2K J 1/10W		R262			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R175			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R263			RK73GB2A000J	CHIP R 0 J 1/10W	
R176			RK73GB2A100J	CHIP R 10 J 1/10W		R265,266			RK73GB2A103J	CHIP R 10K J 1/10W	
R177			RK73GB2A472J	CHIP R 4.7K J 1/10W		R267			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R178			RK73GB2A152J	CHIP R 1.5K J 1/10W		R268			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R180			RK73GB2A470J	CHIP R 47 J 1/10W		R269			RK73GB2A333J	CHIP R 33K J 1/10W	
R181			RK73GB2A101J	CHIP R 100 J 1/10W		R270			RK73GB2A000J	CHIP R 0 J 1/10W	
R182			RK73GB2A331J	CHIP R 330 J 1/10W		R272			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R183			RK73GB2A103J	CHIP R 10K J 1/10W		R273-282			RK73GB2A101J	CHIP R 100 J 1/10W	
R184			RK73GB2A151J	CHIP R 150 J 1/10W		R283			RK73GB2A000J	CHIP R 0 J 1/10W	K
R185			RK73GB2A270J	CHIP R 27 J 1/10W		R284,285			RK73GB2A000J	CHIP R 0 J 1/10W	E
R186,187			RK73GB2A471J	CHIP R 470 J 1/10W		R285			RK73GB2A000J	CHIP R 0 J 1/10W	K
R188,189			RK73GB2A221J	CHIP R 220 J 1/10W		R286,287			RK73GB2A103J	CHIP R 10K J 1/10W	
R190			RK73GB2A180J	CHIP R 18 J 1/10W		R288			RK73GB2A100J	CHIP R 10 J 1/10W	
R191,192			RK73GB2A271J	CHIP R 270 J 1/10W		R289,290			RK73GB2A271J	CHIP R 270 J 1/10W	
R193			RK73GB2A681J	CHIP R 680 J 1/10W		R291			RK73GB2A180J	CHIP R 18 J 1/10W	
R194			RK73GB2A103J	CHIP R 10K J 1/10W		R292			RK73GB2A393J	CHIP R 39K J 1/10W	
R195			RK73GB2A471J	CHIP R 470 J 1/10W		R293			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R196,197			RK73GB2A152J	CHIP R 1.5K J 1/10W		R294			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R199			RK73GB2A222J	CHIP R 2.2K J 1/10W		R296			RK73GB2A680J	CHIP R 68 J 1/10W	
R200,201			RK73GB2A103J	CHIP R 10K J 1/10W		R297			RK73GB2A220J	CHIP R 22 J 1/10W	
R202			RK73GB2A822J	CHIP R 8.2K J 1/10W		R298,299			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R205,206			RK73GB2A223J	CHIP R 22K J 1/10W		R300			RK73GB2A271J	CHIP R 270 J 1/10W	
R207			RK73GB2A222J	CHIP R 2.2K J 1/10W		R301			RK73GB2A000J	CHIP R 0 J 1/10W	
R208,209			RK73GB2A000J	CHIP R 0 J 1/10W		R303			RK73GB2A000J	CHIP R 0 J 1/10W	
R211			RK73GB2A473J	CHIP R 47K J 1/10W		R305			RK73GB2A000J	CHIP R 0 J 1/10W	
R214,215			RK73GB2A103J	CHIP R 10K J 1/10W		R306			RK73GB2A470J	CHIP R 47 J 1/10W	
R216-218			RK73FB2B221J	CHIP R 220 J 1/8W		R308			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R219			RK73GB2A334J	CHIP R 330K J 1/10W		R309			RK73GB2A684J	CHIP R 680K J 1/10W	
R221			RK73GB2A223J	CHIP R 22K J 1/10W		R310			RK73GB2A103J	CHIP R 10K J 1/10W	
R222			RK73GB2A122J	CHIP R 1.2K J 1/10W		R311			RK73FB2B330J	CHIP R 33 J 1/8W	
R223-229			RK73GB2A103J	CHIP R 10K J 1/10W		R312			RK73EB2E680J	CHIP R 68 J 1/4W	
R230,231			RK73GB2A473J	CHIP R 47K J 1/10W		R314			RK73GB2A103J	CHIP R 10K J 1/10W	
R232			RK73GB2A333J	CHIP R 33K J 1/10W		R315			RK73GB2A100J	CHIP R 10 J 1/10W	
R233			RK73GB2A102J	CHIP R 1.0K J 1/10W		R316			RK73GB2A270J	CHIP R 27 J 1/10W	
R234,235			RK73GB2A473J	CHIP R 47K J 1/10W		R319			RK73GB2A000J	CHIP R 0 J 1/10W	
R236			RK73GB2A104J	CHIP R 100K J 1/10W		R501			RK73FB2B121J	CHIP R 120 J 1/8W	
R237			RK73GB2A684J	CHIP R 680K J 1/10W		R502			RK73FB2B151J	CHIP R 150 J 1/8W	
R238			RK73GB2A682J	CHIP R 6.8K J 1/10W		R503-509			RK73GB2A103J	CHIP R 10K J 1/10W	
R239			RK73GB2A223J	CHIP R 22K J 1/10W		R510-512			RK73FB2B330J	CHIP R 33 J 1/8W	
R240			RK73GB2A684J	CHIP R 680K J 1/10W		R513-515			RK73EB2E680J	CHIP R 68 J 1/4W	
R241			RK73EB2E331J	CHIP R 330 J 1/4W		R516,517			RK73FB2B330J	CHIP R 33 J 1/8W	
R242			RK73GB2A683J	CHIP R 68K J 1/10W		R518			RK73GB2A330J	CHIP R 33 J 1/10W	
R243			RK73GB2A473J	CHIP R 47K J 1/10W		R519			RK73FB2B330J	CHIP R 33 J 1/8W	
R244			RK73GB2A273J	CHIP R 27K J 1/10W		R520			RK73GB2A330J	CHIP R 33 J 1/10W	
R245			RK73GB2A183J	CHIP R 18K J 1/10W		R521			RK73GB2A220J	CHIP R 22 J 1/10W	
R246			RK73GB2A470J	CHIP R 47 J 1/10W		R522			RK73FB2B330J	CHIP R 33 J 1/8W	
R247			RK73GB2A273J	CHIP R 27K J 1/10W		R523			RK73GB2A330J	CHIP R 33 J 1/10W	
R248			RK73GB2A000J	CHIP R 0 J 1/10W		R524-527			RK73EB2E680J	CHIP R 68 J 1/4W	
R249			RK73GB2A683J	CHIP R 68K J 1/10W		R528			RK73FB2B121J	CHIP R 120 J 1/8W	
R250			RK73GB2A104J	CHIP R 100K J 1/10W		R529			RK73FB2B151J	CHIP R 150 J 1/8W	
R251			RK73GB2A223J	CHIP R 22K J 1/10W		R530,531			RK73GB2A103J	CHIP R 10K J 1/10W	
R252			RK73GB2A103J	CHIP R 10K J 1/10W		R532			RK73GB2A000J	CHIP R 0 J 1/10W	
R253			RK73GB2A220J	CHIP R 22 J 1/10W		R533-535			RK73GB2A220J	CHIP R 22 J 1/10W	
R255			RK73GB2A103J	CHIP R 10K J 1/10W		VR2			R32-0350-05	SEMI FIXED VARIABLE RESISTOR(10K)	
R256			RK73GB2A000J	CHIP R 0 J 1/10W		K1 -4			S76-0459-05	RELAY	
R257			RK73GB2A123J	CHIP R 12K J 1/10W							

PARTS LIST

RX UNIT (X55-313X-XX)
TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
K5			S76-0476-05	RELAY		Q22			LTC043ZEBFS8	TRANSISTOR	
K6 -9			S76-0459-05	RELAY		Q23			2SB1694	TRANSISTOR	
K10			S76-0476-05	RELAY		Q24			2SC4226-A(R24)	TRANSISTOR	
K11 -16			S76-0459-05	RELAY		Q25 ,26			2SC5551AF	TRANSISTOR	
K17			S76-0476-05	RELAY		Q27			2SB1188(Q,R)	TRANSISTOR	
K501-505			S76-0459-05	RELAY		Q28			2SC4226-A(R24)	TRANSISTOR	
K506		*	S76-0482-05	RELAY		Q29			RT5N234C-T112	TRANSISTOR	
K507-511			S76-0459-05	RELAY		Q30			2SC4226-A(R24)	TRANSISTOR	
K512		*	S76-0482-05	RELAY		Q31			RT5N234C-T112	TRANSISTOR	
D1			EZJZ1V500AA	VARISTOR		Q32			2SK1824-A	FET	
D2 ,3			MC2858-T111	DIODE		Q33			2SC4226-A(R24)	TRANSISTOR	
D4 ,5			L8103R	DIODE		Q34		*	LTA043EEBFS8	TRANSISTOR	
D6			HVC131	DIODE		Q35			LSCR523EBFS8	TRANSISTOR	
D7 ,8			RLS245	DIODE		Q36 ,37			2SC4226-A(R24)	TRANSISTOR	
D10 ,11			MC2858-T111	DIODE		Q38			LTA014EEBFS8	TRANSISTOR	
D12 -14			HVC131	DIODE		Q39			LTC043ZEBFS8	TRANSISTOR	
D15			MC2858-T111	DIODE		Q40			2SB1694	TRANSISTOR	
D16			HVC131	DIODE		Q42			LTC043ZEBFS8	TRANSISTOR	
D17 -20			MC2858-T111	DIODE		Q43			2SB1694	TRANSISTOR	
D21			RB706F-40	DIODE		Q44 ,45			LTC043ZEBFS8	TRANSISTOR	
D22 ,23			1SS388F	DIODE		Q46			2SC5551AF	TRANSISTOR	
D24 ,25			MC2858-T111	DIODE		Q47			LTC043ZEBFS8	TRANSISTOR	
D26 -29			HVC131	DIODE		Q48			SSM3K15AMFV	FET	
D30			L204BBB	DIODE		Q49			2SC5551AF	TRANSISTOR	
D31			MC2858-T111	DIODE		Q50			2SB1694	TRANSISTOR	
D32 ,33			HSM88ASR-E	DIODE		Q51			RT5N234C-T112	TRANSISTOR	
D34 -39			MC2858-T111	DIODE		Q52			2SC5551AF	TRANSISTOR	
D40 ,41			1SS226-F	DIODE		Q53 ,54			LTC043ZEBFS8	TRANSISTOR	
D42 ,43			MC2858-T111	DIODE		Q55			2SC4725	TRANSISTOR	
D44 -49			HVC131	DIODE		Q56 -61			RT5N234C-T112	TRANSISTOR	
D50			MC2858-T111	DIODE		Q62 -64			LTC043ZEBFS8	TRANSISTOR	
D52 -55			1SS388F	DIODE		Q65			2SK1830F	FET	
D56 ,57			HVC131	DIODE		Q66 -68			LTC043ZEBFS8	TRANSISTOR	
D501-506			MC2858-T111	DIODE		Q69			2SK1830F	FET	
D507-522			HVC131	DIODE		Q70			3SK293-F	FET	
IC1			M62353AGPDF5J	MOS-IC		Q71			LTC043ZEBFS8	TRANSISTOR	
IC2 -5			TC74HC4094AFF	MOS-IC		Q72			LTC014EEBFS8	TRANSISTOR	
IC7			SN74CBT3125PW	MOS-IC		Q73			RT5N234C-T112	TRANSISTOR	
IC8			TC74AC86FT	MOS-IC		Q74 -77			LTC043ZEBFS8	TRANSISTOR	
IC9			NJM2591V	BI-POLAR IC		Q501-506			RT5N234C-T112	TRANSISTOR	
IC10			BA4580RFVM	BI-POLAR IC		Q507-513			LTC043ZEBFS8	TRANSISTOR	
IC11			TC4W53FU-F	MOS-IC		TH1 ,2			157-101-65001	THERMISTOR	
IC12			NJM2732V	BI-POLAR IC		TH3 ,4			NCP18WB473J0S	THERMISTOR	
IC13			NJM12904V	MOS-IC							
Q1 -3			RT5N234C-T112	TRANSISTOR							
Q4			LTC043ZEBFS8	TRANSISTOR							
Q5			2SB1188(Q,R)	TRANSISTOR							
Q6			RT5N234C-T112	TRANSISTOR							
Q7 ,8			LTC043ZEBFS8	TRANSISTOR							
Q9			RT5N234C-T112	TRANSISTOR							
Q10 ,11			2SC5551AF	TRANSISTOR							
Q12 ,13			RT5N234C-T112	TRANSISTOR							
Q14			LTC043ZEBFS8	TRANSISTOR							
Q15			2SB1694	TRANSISTOR							
Q16			2SC4725	TRANSISTOR							
Q18			2SC5551AF	TRANSISTOR							
Q19			LTC043ZEBFS8	TRANSISTOR							
Q20			2SC5551AF	TRANSISTOR							
Q21			2SC4226-A(R24)	TRANSISTOR							
TX-RX UNIT (X57-827X-XX) 0-00: K 2-71: E											
C3 -7			CK73HB1H103K	CHIP C	0.010UF	K					
C9 ,10			CK73HB1H103K	CHIP C	0.010UF	K					
C13 ,14			CK73HB1H103K	CHIP C	0.010UF	K					
C27			CK73HB1H103K	CHIP C	0.010UF	K					
C51 -54			CK73HB1H103K	CHIP C	0.010UF	K					

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C55 -63			CK73GB1H104K	CHIP C 0.10UF K		C225			CC73GCH1H222J	CHIP C 2200PF J	
C101			CK73HB1H103K	CHIP C 0.010UF K		C226			CK73GB1H104K	CHIP C 0.10UF K	
C102			CK73GB1E474K	CHIP C 0.47UF K		C227			CK73GB1H103K	CHIP C 0.010UF K	
C103			CK73GB1H102K	CHIP C 1000PF K		C228			CK73GB1E105K	CHIP C 1.0UF K	
C104			CK73GB1E474K	CHIP C 0.47UF K		C229			CK73GB1H103K	CHIP C 0.010UF K	
C105			CK73GB1H102K	CHIP C 1000PF K		C230			CK73GB1H153K	CHIP C 0.015UF K	
C106			CC73GCH1H471J	CHIP C 470PF J		C231,232			CK73GB1H103K	CHIP C 0.010UF K	
C107			CK73GB1H472K	CHIP C 4700PF K		C233			CK73GB1E105K	CHIP C 1.0UF K	
C108			CC73GCH1H471J	CHIP C 470PF J		C235			CC73FCH1H392J	CHIP C 3900PF J	
C109			CK73GB1H472K	CHIP C 4700PF K		C236			CK73GB1H104K	CHIP C 0.10UF K	
C111			CD04AZ1V101M	ELECTRO 100UF 35WV		C237			CK73GB1E105K	CHIP C 1.0UF K	
C113			CK73GB1E105K	CHIP C 1.0UF K		C238			CC73GCH1H122J	CHIP C 1200PF J	
C115			CK73GB1H103K	CHIP C 0.010UF K		C239			CK73GB1E105K	CHIP C 1.0UF K	
C116			CK73GB1H102K	CHIP C 1000PF K		C240			CC73FCH1H392J	CHIP C 3900PF J	
C117			CK73FB1E475K	CHIP C 4.7UF K		C241			CK73GB1H104K	CHIP C 0.10UF K	
C118			CK73GB1H104K	CHIP C 0.10UF K		C243			CC73GCH1H222J	CHIP C 2200PF J	
C119			CK73GB1H473K	CHIP C 0.047UF K		C244			CK73GB1H104K	CHIP C 0.10UF K	
C120			CK73FB1E475K	CHIP C 4.7UF K		C245			CC73GCH1H102J	CHIP C 1000PF J	
C122			CK73GB1E105K	CHIP C 1.0UF K		C246			CC73GCH1H471J	CHIP C 470PF J	
C124			CK73FB1E475K	CHIP C 4.7UF K		C247			CC73GCH1H102J	CHIP C 1000PF J	
C125			CK73GB1H102K	CHIP C 1000PF K		C248			CC73GCH1H222J	CHIP C 2200PF J	
C126			CK73FB1E475K	CHIP C 4.7UF K		C249			CK73GB1H104K	CHIP C 0.10UF K	
C127			CK73GB1H104K	CHIP C 0.10UF K		C250			CC73GCH1H102J	CHIP C 1000PF J	
C128			CK73GB1H473K	CHIP C 0.047UF K		C251			CK73GB1H104K	CHIP C 0.10UF K	
C129			CK73FB1E475K	CHIP C 4.7UF K		C252			CC73GCH1H102J	CHIP C 1000PF J	
C131			CK73GB1E105K	CHIP C 1.0UF K		C253			CC73GCH1H471J	CHIP C 470PF J	
C133			CK73FB1E475K	CHIP C 4.7UF K		C254,255			CC73GCH1H102J	CHIP C 1000PF J	
C134			CK73GB1H102K	CHIP C 1000PF K		C256			CK73GB1H104K	CHIP C 0.10UF K	
C136,137			CK73GB1E474K	CHIP C 0.47UF K		C257			CC73GCH1H680J	CHIP C 68PF J	
C138,139			CK73GB1H102K	CHIP C 1000PF K		C258			CK73GB1H104K	CHIP C 0.10UF K	
C140,141			CC73GCH1H471J	CHIP C 470PF J		C259			CC73GCH1H120J	CHIP C 12PF J	
C142,143			CK73GB1H472K	CHIP C 4700PF K		C260			CC73GCH1H680J	CHIP C 68PF J	
C144			CK73GB1H102K	CHIP C 1000PF K		C261			CC73GCH1H102J	CHIP C 1000PF J	
C145			CK73GB1H103K	CHIP C 0.010UF K		C262			CC73GCH1H120J	CHIP C 12PF J	
C146-148			CK73GB1H102K	CHIP C 1000PF K		C263			CC73GCH1H680J	CHIP C 68PF J	
C149,150			CK73GB1H103K	CHIP C 0.010UF K		C264			CC73GCH1H102J	CHIP C 1000PF J	
C151			CK45FE3A222Z	CERAMIC 2200PF Z		C265			CK73GB1H104K	CHIP C 0.10UF K	
C152			CK73GB1H103K	CHIP C 0.010UF K		C266			CC73GCH1H102J	CHIP C 1000PF J	
C153-155			CK73GB1H102K	CHIP C 1000PF K		C267			CK73GB1H104K	CHIP C 0.10UF K	
C156			CK73GB1H103K	CHIP C 0.010UF K		C268			CC73GCH1H102J	CHIP C 1000PF J	
C157-159			CK73GB1H102K	CHIP C 1000PF K		C269			CC73GCH1H151J	CHIP C 150PF J	
C162,163			CK73GB1H103K	CHIP C 0.010UF K		C270,271			CC73GCH1H102J	CHIP C 1000PF J	
C201-204			CK73GB1H103K	CHIP C 0.010UF K		C272			CK73GB1H104K	CHIP C 0.10UF K	
C205			CC73GCH1H560J	CHIP C 56PF J		C273			CC73GCH1H821J	CHIP C 820PF J	
C206			CC73GCH1H090D	CHIP C 9.0PF D		C274			CK73GB1H104K	CHIP C 0.10UF K	
C207			CC73GCH1H560J	CHIP C 56PF J		C275			CC73GCH1H102J	CHIP C 1000PF J	
C208,209			CK73EB1H104K	CHIP C 0.10UF K		C276			CC73GCH1H101J	CHIP C 100PF J	
C210-212			CK73GB1H103K	CHIP C 0.010UF K		C277			CC73GCH1H102J	CHIP C 1000PF J	
C213			CK73GB1E105K	CHIP C 1.0UF K		C278			CC73GCH1H821J	CHIP C 820PF J	
C214			CK73GB1H103K	CHIP C 0.010UF K		C279			CK73GB1H104K	CHIP C 0.10UF K	
C215			CC73GCH1H150J	CHIP C 15PF J	E	C280			CC73GCH1H470J	CHIP C 47PF J	
C216			CC73GCH1H270J	CHIP C 27PF J	E	C281			CK73GB1H104K	CHIP C 0.10UF K	
C217			CC73FCH1H152J	CHIP C 1500PF J		C282			CC73GCH1H050C	CHIP C 5.0PF C	
C218			CK73GB1E105K	CHIP C 1.0UF K		C283			CC73GCH1H470J	CHIP C 47PF J	
C219			CC73FCH1H472J	CHIP C 4700PF J		C284			CC73GCH1H102J	CHIP C 1000PF J	
C220			CK73GB1H103K	CHIP C 0.010UF K		C285			CC73GCH1H050C	CHIP C 5.0PF C	
C221			CC73FCH1H152J	CHIP C 1500PF J		C286			CC73GCH1H470J	CHIP C 47PF J	
C222			CC73GCH1H222J	CHIP C 2200PF J		C287			CC73GCH1H102J	CHIP C 1000PF J	
C223			CC73FCH1H332J	CHIP C 3300PF J		C288			CK73GB1H104K	CHIP C 0.10UF K	
C224			CC73GCH1H221J	CHIP C 220PF J		C289			CC73GCH1H271J	CHIP C 270PF J	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C290			CK73GB1H104K	CHIP C 0.10UF K		C370			CE32CL1C100M	CHIP EL 10UF 16WV	
C291			CC73GCH1H102J	CHIP C 1000PF J		C371			CK73GB1H104K	CHIP C 0.10UF K	
C292			CC73GCH1H680J	CHIP C 68PF J		C373			CK73GB1H102K	CHIP C 1000PF K	
C293			CC73GCH1H102J	CHIP C 1000PF J		C374			CC73GCH1H471J	CHIP C 470PF J	
C294			CC73GCH1H331J	CHIP C 330PF J		C375,376			CK73GB1H103K	CHIP C 0.010UF K	
C295			CK73GB1H104K	CHIP C 0.10UF K		C377			CK73GB1H104K	CHIP C 0.10UF K	
C296			CC73GCH1H151J	CHIP C 150PF J		C378			CK73GB1H103K	CHIP C 0.010UF K	
C297			CK73GB1H104K	CHIP C 0.10UF K		C379			CK73GB1H104K	CHIP C 0.10UF K	
C298			CC73GCH1H102J	CHIP C 1000PF J		C380			CK73GB1H472K	CHIP C 4700PF K	
C299			CC73GCH1H330J	CHIP C 33PF J		C381			CK73GB1H103K	CHIP C 0.010UF K	
C300			CK73GB1H102K	CHIP C 1000PF K		C382,383			CK73GB1H104K	CHIP C 0.10UF K	
C301			CC73GCH1H151J	CHIP C 150PF J		C384			CK73GB1H472K	CHIP C 4700PF K	
C302			CK73GB1H104K	CHIP C 0.10UF K		C385			CK73GB1H103K	CHIP C 0.010UF K	
C303			CC73GCH1H270J	CHIP C 27PF J		C388			CC73GCH1H271J	CHIP C 270PF J	
C304			CK73GB1H104K	CHIP C 0.10UF K		C389			CC73GCH1H220J	CHIP C 22PF J	
C305			CC73GCH1H102J	CHIP C 1000PF J		C390			CC73GCH1H470J	CHIP C 47PF J	
C306			CC73GCH1H560J	CHIP C 56PF J		C391			CC73GCH1H221J	CHIP C 220PF J	
C307			CC73GCH1H102J	CHIP C 1000PF J		C392			CK73GB1H103K	CHIP C 0.010UF K	
C308			CC73GCH1H680J	CHIP C 68PF J		C393			CC73GCH1H271J	CHIP C 270PF J	
C309			CK73GB1H104K	CHIP C 0.10UF K		C394			CC73GCH1H470J	CHIP C 47PF J	
C310			CC73GCH1H120J	CHIP C 12PF J		C395			CC73GCH1H150J	CHIP C 15PF J	
C311			CC73GCH1H150J	CHIP C 15PF J		C396			CC73GCH1H390J	CHIP C 39PF J	
C312			CK73GB1H104K	CHIP C 0.10UF K		C397			CC73GCH1H270J	CHIP C 27PF J	
C313			CC73GCH1H271J	CHIP C 270PF J		C398			CC73GCH1H390J	CHIP C 39PF J	
C314			CC73GCH1H102J	CHIP C 1000PF J		C399			CK73GB1H103K	CHIP C 0.010UF K	
C315			CC73GCH1H090D	CHIP C 9.0PF D		C400			CC73GCH1H150J	CHIP C 15PF J	
C316			CC73GCH1H102J	CHIP C 1000PF J		C401			CC73GCH1H560J	CHIP C 56PF J	
C317			CC73GCH1H271J	CHIP C 270PF J		C402			CC73GCH1H330J	CHIP C 33PF J	
C318			CC73GCH1H680J	CHIP C 68PF J		C403			CC73GCH1H820J	CHIP C 82PF J	
C319,320			CK73GB1H104K	CHIP C 0.10UF K		C404			CC73GCH1H390J	CHIP C 39PF J	
C321			CK73GB1H102K	CHIP C 1000PF K		C405			CC73GCH1H270J	CHIP C 27PF J	
C322,323			CK73GB1H103K	CHIP C 0.010UF K		C406-408			CK73GB1H104K	CHIP C 0.10UF K	
C324			CK73GB1H104K	CHIP C 0.10UF K		C410			CK73GB1H103K	CHIP C 0.010UF K	
C325			CK73GB1E105K	CHIP C 1.0UF K		C412			CC73GCH1H020C	CHIP C 2.0PF C	
C326			CK73GB1H103K	CHIP C 0.010UF K		C413			CK73GB1H104K	CHIP C 0.10UF K	
C327			CC73GCH1H101J	CHIP C 100PF J		C414			CC73GCH1H471J	CHIP C 470PF J	
C329,330			CK73GB1E105K	CHIP C 1.0UF K		C415			CK73GB1H102K	CHIP C 1000PF K	
C331			CK73GB1H103K	CHIP C 0.010UF K		C416,417			CK73GB1H103K	CHIP C 0.010UF K	
C332			CK73GB1E105K	CHIP C 1.0UF K		C418,419			CK73GB1H104K	CHIP C 0.10UF K	
C333			CK73GB1H104K	CHIP C 0.10UF K		C420			CK73GB1H103K	CHIP C 0.010UF K	
C334			CK73GB1H103K	CHIP C 0.010UF K		C421			CK73GB1H472K	CHIP C 4700PF K	
C335			CK73GB1H104K	CHIP C 0.10UF K		C422			CK73GB1H104K	CHIP C 0.10UF K	
C336			CK73GB1H103K	CHIP C 0.010UF K		C423			CK73GB1H103K	CHIP C 0.010UF K	
C347,348			CC73GCH1H271J	CHIP C 270PF J		C424,425			CK73GB1H104K	CHIP C 0.10UF K	
C349			CK73GB1H103K	CHIP C 0.010UF K		C426			CK73GB1H472K	CHIP C 4700PF K	
C351			CC73GCH1H330J	CHIP C 33PF J		C427,428			CC73GCH1H270J	CHIP C 27PF J	
C352			CC73GCH1H560J	CHIP C 56PF J		C429,430			CC73GCH1H102J	CHIP C 1000PF J	
C353			CC73GCH1H820J	CHIP C 82PF J		C431			CC73GCH1H020C	CHIP C 2.0PF C	
C354			CC73GCH1H151J	CHIP C 150PF J		C432			CK73GB1H103K	CHIP C 0.010UF K	
C355			CC73GCH1H470J	CHIP C 47PF J		C433			CC73GCH1H330J	CHIP C 33PF J	
C356			CC73GCH1H560J	CHIP C 56PF J		C434			CC73GCH1H221J	CHIP C 220PF J	
C357			CC73GCH1H680J	CHIP C 68PF J		C435			CC73GCH1H820J	CHIP C 82PF J	
C358			CC73GCH1H330J	CHIP C 33PF J		C436			CC73GCH1H100D	CHIP C 10PF D	
C359			CC73GCH1H221J	CHIP C 220PF J		C437-439			CK73GB1H103K	CHIP C 0.010UF K	
C360			CC73GCH1H681J	CHIP C 680PF J		C440			CC73GCH1H680J	CHIP C 68PF J	
C361			CC73GCH1H470J	CHIP C 47PF J		C441			CK73GB1H103K	CHIP C 0.010UF K	
C362-364			CK73GB1H104K	CHIP C 0.10UF K		C442			CK73GB1H102K	CHIP C 1000PF K	
C366			CK73GB1H103K	CHIP C 0.010UF K		C443			CC73GCH1H010C	CHIP C 1.0PF C	
C367			CK73GB1H102K	CHIP C 1000PF K		C446			CK73GB1H102K	CHIP C 1000PF K	
C369			CK73GB1H104K	CHIP C 0.10UF K		C447			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C448			CC73GCH1H180J	CHIP C 18PF J		C550			CC73GCH1H680J	CHIP C 68PF J	
C449			CC73GCH1H060D	CHIP C 6.0PF D		C551			CC73GCH1H101J	CHIP C 100PF J	
C450			CK73GB1E105K	CHIP C 1.0UF K		C552			CC73GCH1H680J	CHIP C 68PF J	
C451			CC73GCH1H090D	CHIP C 9.0PF D		C555			CC73GCH1H680J	CHIP C 68PF J	
C452,453			CK73GB1H103K	CHIP C 0.010UF K		C556			CC73GCH1H101J	CHIP C 100PF J	
C454			CK73GB1E105K	CHIP C 1.0UF K		C557			CC73GCH1H820J	CHIP C 82PF J	
C455			CK73GB1H103K	CHIP C 0.010UF K		C558,559			CK73GB1H103K	CHIP C 0.010UF K	
C456			CC73GCH1H020C	CHIP C 2.0PF C		C564-569			CK73GB1H103K	CHIP C 0.010UF K	
C457-459			CK73GB1H103K	CHIP C 0.010UF K		C572			CK73GB1H103K	CHIP C 0.010UF K	
C461			CC73GCH1H220J	CHIP C 22PF J		C573			CK73HB1H103K	CHIP C 0.010UF K	
C462-466			CK73GB1H103K	CHIP C 0.010UF K		C574			CK73GB1H103K	CHIP C 0.010UF K	
C467			CK73GB1H102K	CHIP C 1000PF K		C575			CK73GB1E105K	CHIP C 1.0UF K	
C468			CC73GCH1H090D	CHIP C 9.0PF D		C581-584			CK73GB1H103K	CHIP C 0.010UF K	
C469			CK73GB1H103K	CHIP C 0.010UF K		C585			CK73GB1H104K	CHIP C 0.10UF K	
C470			CC73GCH1H330J	CHIP C 33PF J		C586			CK73GB1E105K	CHIP C 1.0UF K	
C471			CK73GB1E105K	CHIP C 1.0UF K		C587			CK73GB1H103K	CHIP C 0.010UF K	
C472			CK73GB1H103K	CHIP C 0.010UF K		C588			CK73GB1H104K	CHIP C 0.10UF K	
C473,474			CC73GCH1H560J	CHIP C 56PF J		C589			CK73GB1H103K	CHIP C 0.010UF K	
C475			CK73GB1H103K	CHIP C 0.010UF K		C601			CK73GB1H103K	CHIP C 0.010UF K	
C476			CC73GCH1H560J	CHIP C 56PF J		C602			CC73GCH1H470J	CHIP C 47PF J	
C477,478			CK73GB1H102K	CHIP C 1000PF K		C603,604			CK73GB1H103K	CHIP C 0.010UF K	
C481,482			CK73GB1H103K	CHIP C 0.010UF K		C605			CC73GCH1H101J	CHIP C 100PF J	
C483			CC73GCH1H151J	CHIP C 150PF J		C606			CK73GB1H103K	CHIP C 0.010UF K	
C484,485			CK73GB1H103K	CHIP C 0.010UF K		C607			CK73GB1E105K	CHIP C 1.0UF K	
C486			CK73GB1E105K	CHIP C 1.0UF K		C608-613			CK73GB1H103K	CHIP C 0.010UF K	
C487			CK73GB1H104K	CHIP C 0.10UF K		C614			CK73GB1H102K	CHIP C 1000PF K	
C488			CK73GB1E105K	CHIP C 1.0UF K		C615,616			CK73GB1H103K	CHIP C 0.010UF K	
C489			CC73GCH1H151J	CHIP C 150PF J		C617			CC73GCH1H151J	CHIP C 150PF J	
C490			CK73GB1H103K	CHIP C 0.010UF K		C618			C93-1886-05	CHIP C 68PF J	
C498			CK73GB1H104K	CHIP C 0.10UF K		C619			CC73GCH1H151J	CHIP C 150PF J	
C499,500			CC73GCH1H100D	CHIP C 10PF D		C620			CK73GB1E105K	CHIP C 1.0UF K	
C501			CK73GB1H102K	CHIP C 1000PF K		C621			CK73GB1H103K	CHIP C 0.010UF K	
C503,504			CK73GB1H103K	CHIP C 0.010UF K		C622			CK73GB1E105K	CHIP C 1.0UF K	
C507,508			CK73GB1H103K	CHIP C 0.010UF K		C623			CC73GCH1H100D	CHIP C 10PF D	
C509			CC73GCH1H820J	CHIP C 82PF J		C624			CK73HB1H103K	CHIP C 0.010UF K	
C510			CC73GCH1H220J	CHIP C 22PF J		C626			CK73GB1H103K	CHIP C 0.010UF K	
C513			CC73GCH1H220J	CHIP C 22PF J		C627			CK73GB1H104K	CHIP C 0.10UF K	
C514			CC73GCH1H820J	CHIP C 82PF J		C628,629			CK73GB1H103K	CHIP C 0.010UF K	
C515-518			CK73GB1H103K	CHIP C 0.010UF K		C630			CK73GB1H104K	CHIP C 0.10UF K	
C519			CC73GCH1H680J	CHIP C 68PF J		C631			CC73GCH1H820J	CHIP C 82PF J	
C520			CC73GCH1H390J	CHIP C 39PF J		C632-637			CK73GB1H104K	CHIP C 0.10UF K	
C521			CC73GCH1H100D	CHIP C 10PF D		C638			CC73GCH1H270J	CHIP C 27PF J	
C522			CC73GCH1H180J	CHIP C 18PF J		C639,640			CC73GCH1H271J	CHIP C 270PF J	
C523			CC73GCH1H150J	CHIP C 15PF J		C641			CC73GCH1H151J	CHIP C 150PF J	
C524			CC73GCH1H270J	CHIP C 27PF J		C642			CC73GCH1H391J	CHIP C 390PF J	
C525			CC73GCH1H680J	CHIP C 68PF J		C643-646			CK73GB1H104K	CHIP C 0.10UF K	
C526-529			CK73GB1H103K	CHIP C 0.010UF K		C647			CK73GB1E105K	CHIP C 1.0UF K	
C530			CC73GCH1H820J	CHIP C 82PF J		C648			CC73GCH1H100D	CHIP C 10PF D	
C531			CC73GCH1H560J	CHIP C 56PF J		C649			CK73GB1H104K	CHIP C 0.10UF K	
C532,533			CC73GCH1H060D	CHIP C 6.0PF D		C650			CK73FB1A106K	CHIP C 10UF K	
C534			CC73GCH1H560J	CHIP C 56PF J		C651			CK73GB1E105K	CHIP C 1.0UF K	
C535			CC73GCH1H121J	CHIP C 120PF J		C652			CK73GB1H222K	CHIP C 2200PF K	
C536-539			CK73GB1H103K	CHIP C 0.010UF K		C653			CC73GCH1H331J	CHIP C 330PF J	
C540			CC73GCH1H820J	CHIP C 82PF J		C654			CK73FB1A106K	CHIP C 10UF K	
C541			CC73GCH1H470J	CHIP C 47PF J		C655			CK73GB1H103K	CHIP C 0.010UF K	
C542			CC73GCH1H030C	CHIP C 3.0PF C		C656			CK73GB1E105K	CHIP C 1.0UF K	
C543			CC73GCH1H020C	CHIP C 2.0PF C		C659			CK73FB1A106K	CHIP C 10UF K	
C544			CC73GCH1H560J	CHIP C 56PF J		C660			CK73GB1E105K	CHIP C 1.0UF K	
C545			CC73GCH1H101J	CHIP C 100PF J		C661			CK73HB1H103K	CHIP C 0.010UF K	
C546-549			CK73GB1H103K	CHIP C 0.010UF K		C662			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C663,664			CK73GB1H104K	CHIP C 0.10UF K		C788			CK73GB1H102K	CHIP C 1000PF K	
C701			CK73GB1H103K	CHIP C 0.010UF K		C789			CK73GB1H103K	CHIP C 0.010UF K	
C703			CK73GB1H103K	CHIP C 0.010UF K		C790			CK73GB1H102K	CHIP C 1000PF K	
C705,706			CK73GB1H103K	CHIP C 0.010UF K		C791			CC73GCH1H180J	CHIP C 18PF J	
C707			CE32CL1C100M	CHIP EL 10UF 16WV		C792			CK73GB1H103K	CHIP C 0.010UF K	
C708			CK73HB1H103K	CHIP C 0.010UF K		C793			CC73GCH1H390J	CHIP C 39PF J	
C709			CC73GCH1H102J	CHIP C 1000PF J		C794			CK73GB1H102K	CHIP C 1000PF K	
C710			CC73GCH1H100D	CHIP C 10PF D		C795,796			CK73GB1E105K	CHIP C 1.0UF K	
C711			CK73FB1A225K	CHIP C 2.2UF K		C801			CK73GB1H102K	CHIP C 1000PF K	
C712			CK73GB1E105K	CHIP C 1.0UF K		C802			CK73GB1H103K	CHIP C 0.010UF K	
C714			CC73GCH1H330J	CHIP C 33PF J		C803			CC73GCH1H101J	CHIP C 100PF J	
C715			CK73GB1H103K	CHIP C 0.010UF K		C804			CK73GB1H103K	CHIP C 0.010UF K	
C716			CC73GCH1H180J	CHIP C 18PF J		C805			CC73GCH1H101J	CHIP C 100PF J	
C717-719			CK73GB1H103K	CHIP C 0.010UF K		C806			CK73GB1E474K	CHIP C 0.47UF K	
C720			CK73GB1E105K	CHIP C 1.0UF K		C807			CC73GCH1H101J	CHIP C 100PF J	
C721			CC73GCH1H102J	CHIP C 1000PF J		C808			CK73HB1H103K	CHIP C 0.010UF K	
C722,723			CK73GB1H103K	CHIP C 0.010UF K		C809			CC73GCH1H101J	CHIP C 100PF J	
C724,725			CK73GB1H102K	CHIP C 1000PF K		C810			CK73HB1H103K	CHIP C 0.010UF K	
C726			CK73GB1H103K	CHIP C 0.010UF K		C811			CS77MA1C3R3M	CHIP TNL 3.3UF 16WV	
C727			CC73GCH1H220J	CHIP C 22PF J		C812			CK73GB1E105K	CHIP C 1.0UF K	
C728-732			CK73GB1H103K	CHIP C 0.010UF K		C813			CE32CL1V4R7M	CHIP EL 4.7UF 35WV	
C733			CC73GCH1H050C	CHIP C 5.0PF C		C814			CC73GCH1H101J	CHIP C 100PF J	
C735			CK73GB1E105K	CHIP C 1.0UF K		C815			CK73GB1H333K	CHIP C 0.033UF K	
C737,738			CK73GB1H102K	CHIP C 1000PF K		C816,817			CK73GB1H103K	CHIP C 0.010UF K	
C739,740			CC73GCH1H470J	CHIP C 47PF J		C818			CK73HB1H103K	CHIP C 0.010UF K	
C741			CK73GB1H102K	CHIP C 1000PF K		C819			CK73GB1H103K	CHIP C 0.010UF K	
C742			CK73GB1H103K	CHIP C 0.010UF K		C825			CK73GB1H103K	CHIP C 0.010UF K	
C743			CK73GB1H104K	CHIP C 0.10UF K		C826,827			CK73GB1E105K	CHIP C 1.0UF K	
C744			CK73GB1H102K	CHIP C 1000PF K		C828			CK73GB1H104K	CHIP C 0.10UF K	
C745-747			CK73GB1H103K	CHIP C 0.010UF K		C829			CK73GB1H103K	CHIP C 0.010UF K	
C748			CC73GCH1H020C	CHIP C 2.0PF C		C830			CK73GB1H102K	CHIP C 1000PF K	
C749			CC73GCH1H470J	CHIP C 47PF J		C831			CK73HB1H103K	CHIP C 0.010UF K	
C750-753			CK73GB1H103K	CHIP C 0.010UF K		C832,833			CC73GCH1H100D	CHIP C 10PF D	
C754,755			CK73GB1H102K	CHIP C 1000PF K		C881			CC73GCH1H100D	CHIP C 10PF D	
C756			CK73GB1H103K	CHIP C 0.010UF K		C882			CC73GCH1H020C	CHIP C 2.0PF C	
C757			CC73GCH1H020C	CHIP C 2.0PF C		C883,884			CK73GB1H103K	CHIP C 0.010UF K	
C758			CK73GB1H102K	CHIP C 1000PF K		C886			CK73GB1H103K	CHIP C 0.010UF K	
C759			CK73GB1H103K	CHIP C 0.010UF K		C887			CK73GB1H102K	CHIP C 1000PF K	
C763			CK73GB1H103K	CHIP C 0.010UF K		C888			CK73GB1H103K	CHIP C 0.010UF K	
C764			CK73GB1H104K	CHIP C 0.10UF K		C889			CC73GCH1H470J	CHIP C 47PF J	
C765			CK73GB1H103K	CHIP C 0.010UF K		C890			CK73GB1H102K	CHIP C 1000PF K	
C766			CK73GB1H104K	CHIP C 0.10UF K		C891			CK73GB1H103K	CHIP C 0.010UF K	
C767,768			CK73GB1H103K	CHIP C 0.010UF K		C893			CK73GB1H103K	CHIP C 0.010UF K	
C769			CC73GCH1H120J	CHIP C 12PF J		C894			CK73GB1E105K	CHIP C 1.0UF K	
C770			CC73GCH1H471J	CHIP C 470PF J		C895			CC73GCH1H430J	CHIP C 43PF J	
C771			CC73GCH1H060D	CHIP C 6.0PF D		C896			CC73GCH1H080D	CHIP C 8.0PF D	
C772			CK73GB1H103K	CHIP C 0.010UF K		C897			CK73GB1H103K	CHIP C 0.010UF K	
C773			CK73GB1E105K	CHIP C 1.0UF K		C899-901			CK73GB1H103K	CHIP C 0.010UF K	
C774			CC73GCH1H120J	CHIP C 12PF J		C902			CC73GCH1H390J	CHIP C 39PF J	
C776			CE32CL1V4R7M	CHIP EL 4.7UF 35WV		C903			CC73GCH1H090D	CHIP C 9.0PF D	
C777			CC73GCH1H330J	CHIP C 33PF J		C904			CK73GB1H103K	CHIP C 0.010UF K	
C778			CK73GB1H104K	CHIP C 0.10UF K		C906			CK73GB1H103K	CHIP C 0.010UF K	
C779			CK73GB1H103K	CHIP C 0.010UF K		C908			CC73GCH1H080D	CHIP C 8.0PF D	
C780			CK73GB1H104K	CHIP C 0.10UF K		C909			CK73GB1H103K	CHIP C 0.010UF K	
C781			CK73GB1E105K	CHIP C 1.0UF K		C910			CC73GCH1H390J	CHIP C 39PF J	
C782			CK73GB1H103K	CHIP C 0.010UF K		C911			CK73GB1H103K	CHIP C 0.010UF K	
C783			CE32CL1V4R7M	CHIP EL 4.7UF 35WV		C913			CC73GCH1H100D	CHIP C 10PF D	
C784			CC73GCH1H150J	CHIP C 15PF J		C914,915			CK73GB1H103K	CHIP C 0.010UF K	
C785,786			CK73GB1E105K	CHIP C 1.0UF K		C916			CK73GB1H102K	CHIP C 1000PF K	
C787			CK73GB1H103K	CHIP C 0.010UF K		C918			CK73GB1E105K	CHIP C 1.0UF K	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C919,920			CK73GB1H103K	CHIP C 0.010UF K		J700			E13-0166-25	PIN JACK	
C921			CK73GB1E105K	CHIP C 1.0UF K		F951			F53-0388-05	FUSE(1.25A)	
C923			CE32CL1C470M	CHIP EL 47UF 16WV		F952			F53-0367-05	FUSE(1.0A)	
C924			CK73GB1H103K	CHIP C 0.010UF K		F953-955			F53-0363-05	FUSE(0.5A)	
C925			CK73GB1E474K	CHIP C 0.47UF K							
C951			CD04BQ1C471M	ELECTRO 470UF 16WV		CF601			L72-0376-05	CERAMIC FILTER	
C952			CK73GB1H102K	CHIP C 1000PF K		CF602			L72-0372-05	CERAMIC FILTER	
C953			CK73GB1E105K	CHIP C 1.0UF K		L101,102			L92-0639-05	CHIP FERRITE	
C954			CK73GB1H102K	CHIP C 1000PF K		L103,104			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
C955			CK73GB1E105K	CHIP C 1.0UF K		L105-107			L92-0639-05	CHIP FERRITE	
C957			CD04AZ1E471M	ELECTRO 470UF 25WV		L108,109			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
C958,959			CK73GB1H102K	CHIP C 1000PF K		L110			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)	
C960			CK73GB1H104K	CHIP C 0.10UF K		L111-113			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	
C961,962			CK73GB1H102K	CHIP C 1000PF K		L201,202			L41-2215-32	SMALL FIXED INDUCTOR(220UH)	
C963			CK73GB1H104K	CHIP C 0.10UF K		L203			L41-1585-32	SMALL FIXED INDUCTOR(0.15UH)	
C965			CK73GB1H104K	CHIP C 0.10UF K		L204,205			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	E
C966			CK73GB1H102K	CHIP C 1000PF K		L206,207			L34-4940-05	COIL	
C968			CK73GB1H104K	CHIP C 0.10UF K		L208			L34-4939-05	COIL	
C969			CE32CL1C220M	CHIP EL 22UF 16WV		L209			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C970			CK73GB1H104K	CHIP C 0.10UF K		L210,211			L41-6891-44	SMALL FIXED INDUCTOR(6.8UH)	
C973-975			CK73GB1H104K	CHIP C 0.10UF K		L212,213			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C978			CE32CL1C220M	CHIP EL 22UF 16WV		L214,215			L41-1505-44	SMALL FIXED INDUCTOR(15UH)	
C979			CK73GB1H104K	CHIP C 0.10UF K		L216			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
C980			CE32CL1C220M	CHIP EL 22UF 16WV		L217			L41-1898-60	SMALL FIXED INDUCTOR(1.8UH)	
C981			CK73GB1H104K	CHIP C 0.10UF K		L218			L34-4940-05	COIL	
C983			CK73HB1H103K	CHIP C 0.010UF K		L219			L41-1898-60	SMALL FIXED INDUCTOR(1.8UH)	
C986			CK73HB1H103K	CHIP C 0.010UF K		L220			L41-1298-60	SMALL FIXED INDUCTOR(1.2UH)	
C988-990			CK73HB1H103K	CHIP C 0.010UF K		L221			L34-4939-05	COIL	
TC201			C05-0378-05	CERAMIC TRIMMER CAPACITOR(20P)		L222			L41-1298-60	SMALL FIXED INDUCTOR(1.2UH)	
-			E18-0254-05	SOCKET		L223			L41-1098-60	SMALL FIXED INDUCTOR(1UH)	
CN1			E40-6911-05	FLAT CABLE CONNECTOR		L224			L41-1898-60	SMALL FIXED INDUCTOR(1.8UH)	
CN2			E40-6914-05	FLAT CABLE CONNECTOR		L225			L41-1098-60	SMALL FIXED INDUCTOR(1UH)	
CN3			E41-3176-05	FLAT CABLE CONNECTOR		L226-228			L34-4941-05	COIL	
CN4			E41-1683-05	PIN ASSY		L229			L41-3388-60	SMALL FIXED INDUCTOR(330NH)	
CN200			E04-0491-05	PIN SOCKET		L230			L41-2298-60	SMALL FIXED INDUCTOR(2.2UH)	
CN210			E40-5487-05	PIN ASSY		L231			L41-3388-60	SMALL FIXED INDUCTOR(330NH)	
CN220			E40-5487-05	PIN ASSY		L232			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
CN230			E40-6852-05	PIN ASSY		L233			L41-1898-60	SMALL FIXED INDUCTOR(1.8UH)	
CN300			E04-0491-05	PIN SOCKET		L234			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
CN350			E04-0491-05	PIN SOCKET		L235-237			L34-4942-05	COIL	
CN360			E40-6852-05	PIN ASSY		L238			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
CN370			E40-6852-05	PIN ASSY		L239			L41-1098-60	SMALL FIXED INDUCTOR(1UH)	
CN400			E04-0491-05	PIN SOCKET		L240,241			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
CN450			E04-0491-05	PIN SOCKET		L242			L41-1098-60	SMALL FIXED INDUCTOR(1UH)	
CN460			E40-6852-05	PIN ASSY		L243			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
CN470			E40-6852-05	PIN ASSY		L244			L41-1588-60	SMALL FIXED INDUCTOR(150NH)	
CN500			E04-0491-05	PIN SOCKET		L245			L41-2788-60	SMALL FIXED INDUCTOR(270NH)	
CN600			E41-1682-05	PIN ASSY		L246			L41-1588-60	SMALL FIXED INDUCTOR(150NH)	
CN700			E41-1682-05	PIN ASSY		L247			L34-4943-05	COIL	
CN800			E04-0491-05	PIN SOCKET		L248			L34-4608-15	AIR-CORE COIL(7T)	
CN850			E04-0491-05	PIN SOCKET		L249			L41-1098-60	SMALL FIXED INDUCTOR(1UH)	
CN900			E04-0491-05	PIN SOCKET		L250			L34-4608-15	AIR-CORE COIL(7T)	
CN910			E41-1686-05	PIN ASSY		L251,252			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
CN920			E41-1686-05	PIN ASSY		L253			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
CN950			E04-0491-05	PIN SOCKET		L254			L39-1556-05	TOROIDAL COIL	
J1			E11-0455-05	3.5D PHONE JACK(3P)		L255			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
J2			E56-0408-15	DIN SOCKET		L256			L41-1585-33	SMALL FIXED INDUCTOR(0.15UH)	
J3			E06-0752-15	DIN SOCKET		L257			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
J4			E11-0705-15	PHONE JACK(9P)		L351			L41-2288-60	SMALL FIXED INDUCTOR(220NH)	
						L352			L34-4938-05	COIL	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L353,354			L41-2288-60	SMALL FIXED INDUCTOR(220NH)		L506			L41-1898-60	SMALL FIXED INDUCTOR(1.8UH)	
L355			L34-4938-05	COIL		L507			L41-1895-33	SMALL FIXED INDUCTOR(1.8UH)	
L356			L39-1554-05	TOROIDAL COIL		L508			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L357			L39-1480-15	TOROIDAL COIL		L510			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L358			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L511			L39-1599-05	TOROIDAL COIL	
L359			L39-1555-05	TOROIDAL COIL		L512			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L360,361			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L513			L39-1598-05	TOROIDAL COIL	
L362			L41-4705-33	SMALL FIXED INDUCTOR(47UH)		L515			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L363			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L516			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L364		*	L41-5688-60	SMALL FIXED INDUCTOR(560NH)		L517			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L366		*	L41-5688-60	SMALL FIXED INDUCTOR(560NH)		L518-520			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L368,369			L34-4937-05	COIL		L601			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L370			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L602			L39-1480-15	TOROIDAL COIL	
L371,372		*	L41-5688-60	SMALL FIXED INDUCTOR(560NH)		L603,604			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L373			L41-3388-60	SMALL FIXED INDUCTOR(330NH)		L605			L40-8281-86	SMALL FIXED INDUCTOR(0.82UH)	
L374			L40-8281-86	SMALL FIXED INDUCTOR(0.82UH)		L606			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L401			L41-1288-60	SMALL FIXED INDUCTOR(120NH)		L607			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L402			L41-1088-60	SMALL FIXED INDUCTOR(100NH)		L608			L34-4946-05	COIL	
L403			L39-1493-15	TOROIDAL COIL		L609			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L404			L39-1480-15	TOROIDAL COIL		L701			L40-1001-86	SMALL FIXED INDUCTOR(10UH)	
L405			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L702,703			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L406			L34-4709-05	COIL		L704			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L407			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L706			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L408			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L707			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L409			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)		L708			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L410			L41-1095-33	SMALL FIXED INDUCTOR(1.0UH)		L709-711			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L411			L41-1088-60	SMALL FIXED INDUCTOR(100NH)		L712			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L412			L41-6878-60	SMALL FIXED INDUCTOR(68NH)		L714			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	
L413			L41-8278-60	SMALL FIXED INDUCTOR(82NH)		L715			L41-3385-33	SMALL FIXED INDUCTOR(0.33UH)	
L414			L41-1878-60	SMALL FIXED INDUCTOR(18NH)		L716			L41-1885-33	SMALL FIXED INDUCTOR(0.18UH)	
L415			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L720,721			L34-4818-05	COIL	
L416			L41-1088-60	SMALL FIXED INDUCTOR(100NH)		L724			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L417-419			L34-4818-05	COIL		L725			L39-1476-05	TOROIDAL COIL	
L420			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L726			L39-1480-15	TOROIDAL COIL	
L421			L39-1553-05	TOROIDAL COIL		L727			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L422			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L728			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
L423,424			L39-1480-15	TOROIDAL COIL		L729			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	
L425			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L730			L41-2785-33	SMALL FIXED INDUCTOR(0.27UH)	
L426			L41-4785-33	SMALL FIXED INDUCTOR(0.47UH)		L731			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	
L427			L41-1288-60	SMALL FIXED INDUCTOR(120NH)		L732			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L428			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L733			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L429			L41-2288-60	SMALL FIXED INDUCTOR(220NH)		L741			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L430			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L881			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	
L431			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L882			L41-4795-33	SMALL FIXED INDUCTOR(4.7UH)	
L471,472			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L883			L41-2285-33	SMALL FIXED INDUCTOR(0.22UH)	
L473			L40-1281-86	SMALL FIXED INDUCTOR(0.12UH)		L884			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L481			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L885			L34-4938-05	COIL	
L482			L41-1098-60	SMALL FIXED INDUCTOR(1UH)		L886			L41-4705-33	SMALL FIXED INDUCTOR(47UH)	
L483,484			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L887,888			L34-4938-05	COIL	
L485			L41-1098-60	SMALL FIXED INDUCTOR(1UH)		L889			L33-0695-05	SMALL FIXED INDUCTOR(1MH)	
L490			L39-1480-15	TOROIDAL COIL		L951			L33-1557-05	CHOKE COIL	
L491			L39-1571-05	TOROIDAL COIL		L952			L33-1554-05	CHOKE COIL	
L492			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		L953,954			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L493,494			L41-1005-33	SMALL FIXED INDUCTOR(10UH)		L955			L41-1015-33	SMALL FIXED INDUCTOR(100UH)	
L495,496			L41-6895-33	SMALL FIXED INDUCTOR(6.8UH)		L956,957			L41-1005-33	SMALL FIXED INDUCTOR(10UH)	
L497			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		XF351			L71-0656-15	MCF(11.374M/6KHZ)	
L498,499			L41-5695-33	SMALL FIXED INDUCTOR(5.6UH)		XF401			L71-0605-05	MCF(73.095M/15KHZ)	
L500,501			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		XF481			L71-0230-15	MCF(10695KHZ)	
L502,503			L41-5695-33	SMALL FIXED INDUCTOR(5.6UH)		XF482			L71-0664-05	MCF(10.695MHZ)	
L504,505			L41-1015-33	SMALL FIXED INDUCTOR(100UH)		XF484			L71-0569-15	CRYSTAL FILTER(10.695M/2.7KHZ)	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
XF485			L71-0657-05	CRYSTAL FILTER(11.374M/2.7KHZ)		R210			RK73GB2A222J	CHIP R 2.2K J 1/10W	
XF486			L71-0658-05	CRYSTAL FILTER(11.374M/500HZ)		R211			RK73EB2E151J	CHIP R 150 J 1/4W	
R1 -5			RK73GB2A101J	CHIP R 100 J 1/10W		R212			RK73GB2A103J	CHIP R 10K J 1/10W	
R6 ,7			RK73GB2A000J	CHIP R 0 J 1/10W		R213,214			RK73EB2E151J	CHIP R 150 J 1/4W	
R8 ,9			RK73HB1J000J	CHIP R 0 J 1/16W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	
R10 -12			RK73GB2A000J	CHIP R 0 J 1/10W		R216			RK73FB2B330J	CHIP R 33 J 1/8W	
R13 -17			RK73HB1J000J	CHIP R 0 J 1/16W		R217			RK73EB2E330J	CHIP R 33 J 1/4W	
R18			RK73GB2A222J	CHIP R 2.2K J 1/10W		R218			RK73GB2A471J	CHIP R 470 J 1/10W	
R51 -53			RK73GB2A103J	CHIP R 10K J 1/10W		R219			RK73EB2E560J	CHIP R 56 J 1/4W	
R99 ,100			RK73GB2A104J	CHIP R 100K J 1/10W		R220			RK73GB2A103J	CHIP R 10K J 1/10W	
R101			RK73GB2A123J	CHIP R 12K J 1/10W		R221			RK73FB2B330J	CHIP R 33 J 1/8W	
R102			RK73GB2A183J	CHIP R 18K J 1/10W		R222			RK73EB2E560J	CHIP R 56 J 1/4W	
R103,104			RK73GB2A000J	CHIP R 0 J 1/10W		R223			RK73GB2A103J	CHIP R 10K J 1/10W	
R105			RK73GB2A183J	CHIP R 18K J 1/10W		R224			RK73GB2A560J	CHIP R 56 J 1/10W	
R107			RK73GB2A123J	CHIP R 12K J 1/10W		R225			RK73FB2B330J	CHIP R 33 J 1/8W	
R108			RK73GB2A332J	CHIP R 3.3K J 1/10W		R226			RK73EB2E680J	CHIP R 68 J 1/4W	
R110			RK73GB2A332J	CHIP R 3.3K J 1/10W		R227			RK73GB2A103J	CHIP R 10K J 1/10W	
R111			RK73GB2A101J	CHIP R 100 J 1/10W		R228			RK73GB2A560J	CHIP R 56 J 1/10W	
R115			RK73GB2A123J	CHIP R 12K J 1/10W		R229			RK73FB2B330J	CHIP R 33 J 1/8W	
R116			RK73GB2A392J	CHIP R 3.9K J 1/10W		R230			RK73EB2E680J	CHIP R 68 J 1/4W	
R117			RK73GB2A562J	CHIP R 5.6K J 1/10W		R231			RK73GB2A103J	CHIP R 10K J 1/10W	
R118			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R232			RK73GB2A560J	CHIP R 56 J 1/10W	
R119			RK73GB2A682J	CHIP R 6.8K J 1/10W		R233			RK73FB2B330J	CHIP R 33 J 1/8W	
R120,121			RK73GB2A000J	CHIP R 0 J 1/10W		R234			RK73EB2E680J	CHIP R 68 J 1/4W	
R124			RK73GB2A104J	CHIP R 100K J 1/10W		R235			RK73GB2A103J	CHIP R 10K J 1/10W	
R125			RK73GB2A101J	CHIP R 100 J 1/10W		R236			RK73FB2B330J	CHIP R 33 J 1/8W	
R126			RK73GB2A471J	CHIP R 470 J 1/10W		R237			RK73GB2A560J	CHIP R 56 J 1/10W	
R127			RK73GB2A682J	CHIP R 6.8K J 1/10W		R238			RK73EB2E680J	CHIP R 68 J 1/4W	
R128,129			RK73GB2A000J	CHIP R 0 J 1/10W		R239			RK73GB2A103J	CHIP R 10K J 1/10W	
R132			RK73GB2A104J	CHIP R 100K J 1/10W		R240			RK73GB2A560J	CHIP R 56 J 1/10W	
R133			RK73GB2A101J	CHIP R 100 J 1/10W		R241			RK73FB2B330J	CHIP R 33 J 1/8W	
R134			RK73GB2A471J	CHIP R 470 J 1/10W		R242			RK73EB2E680J	CHIP R 68 J 1/4W	
R143,144			RK73GB2A332J	CHIP R 3.3K J 1/10W		R243			RK73GB2A103J	CHIP R 10K J 1/10W	
R145			RK73GB2A101J	CHIP R 100 J 1/10W		R244			RK73GB2A560J	CHIP R 56 J 1/10W	
R146			RK73GB2A474J	CHIP R 470K J 1/10W		R245			RK73FB2B330J	CHIP R 33 J 1/8W	
R147			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R246			RK73EB2E680J	CHIP R 68 J 1/4W	
R148			RK73GB2A223J	CHIP R 22K J 1/10W		R247			RK73GB2A103J	CHIP R 10K J 1/10W	
R149			RK73GB2A221J	CHIP R 220 J 1/10W		R248			RK73GB2A560J	CHIP R 56 J 1/10W	
R150			RK73GB2A153J	CHIP R 15K J 1/10W		R249			RK73FB2B330J	CHIP R 33 J 1/8W	
R152			RK73GB2A472J	CHIP R 4.7K J 1/10W		R250			RK73EB2E680J	CHIP R 68 J 1/4W	
R153			RK73GB2A103J	CHIP R 10K J 1/10W		R251			RK73GB2A103J	CHIP R 10K J 1/10W	
R154,155			RK73GB2A101J	CHIP R 100 J 1/10W		R252			RK73GB2A560J	CHIP R 56 J 1/10W	
R156			RK73GB2A152J	CHIP R 1.5K J 1/10W		R253			RK73FB2B330J	CHIP R 33 J 1/8W	
R157			RK73GB2A102J	CHIP R 1.0K J 1/10W		R254			RK73EB2E680J	CHIP R 68 J 1/4W	
R162			RK73GB2A183J	CHIP R 18K J 1/10W		R255			RK73GB2A103J	CHIP R 10K J 1/10W	
R165			RK73GB2A183J	CHIP R 18K J 1/10W		R256			RK73GB2A560J	CHIP R 56 J 1/10W	
R166,167			RK73GB2A103J	CHIP R 10K J 1/10W		R257			RK73FB2B330J	CHIP R 33 J 1/8W	
R168-170			RK73GB2A152J	CHIP R 1.5K J 1/10W		R258			RK73EB2E680J	CHIP R 68 J 1/4W	
R171-173			RK73GB2A101J	CHIP R 100 J 1/10W		R259			RK73GB2A103J	CHIP R 10K J 1/10W	
R175			RK73GB2A153J	CHIP R 15K J 1/10W		R260			RK73GB2A560J	CHIP R 56 J 1/10W	
R201			RK73EB2E101J	CHIP R 100 J 1/4W		R261			RK73FB2B330J	CHIP R 33 J 1/8W	
R202			RK73EB2E470J	CHIP R 47 J 1/4W		R262			RK73EB2E680J	CHIP R 68 J 1/4W	
R203			RK73EB2E560J	CHIP R 56 J 1/4W		R263			RK73GB2A103J	CHIP R 10K J 1/10W	
R204			RK73EB2E151J	CHIP R 150 J 1/4W		R264			RK73GB2A560J	CHIP R 56 J 1/10W	
R205			RK73GB2A101J	CHIP R 100 J 1/10W		R265			RK73FB2B330J	CHIP R 33 J 1/8W	
R206			RK73GB2A222J	CHIP R 2.2K J 1/10W		R266			RK73EB2E680J	CHIP R 68 J 1/4W	
R207			RK73EB2E181J	CHIP R 180 J 1/4W		R267			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R208			RK73EB2E151J	CHIP R 150 J 1/4W		R268			RK73EB2E121J	CHIP R 120 J 1/4W	
R209			RK73GB2A472J	CHIP R 4.7K J 1/10W		R269			RK73EB2E101J	CHIP R 100 J 1/4W	
						R270			RK73GB2A562J	CHIP R 5.6K J 1/10W	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R271,272			RK73EB2E221J	CHIP R 220 J 1/4W		R447			RK73GB2A220J	CHIP R 22 J 1/10W	
R273			RK73GB2A682J	CHIP R 6.8K J 1/10W		R448			RK73GB2A100J	CHIP R 10 J 1/10W	
R274			RK73GB2A122J	CHIP R 1.2K J 1/10W		R449			RK73GB2A220J	CHIP R 22 J 1/10W	
R275			RK73GB2A471J	CHIP R 470 J 1/10W		R450			RK73GB2A331J	CHIP R 330 J 1/10W	
R276			RK73GB2A821J	CHIP R 820 J 1/10W		R451			RK73GB2A180J	CHIP R 18 J 1/10W	
R277			RK73GB2A100J	CHIP R 10 J 1/10W		R452			RK73GB2A331J	CHIP R 330 J 1/10W	
R278			RK73FB2B390J	CHIP R 39 J 1/8W		R453			RK73GB2A103J	CHIP R 10K J 1/10W	
R279			RK73GB2A151J	CHIP R 150 J 1/10W		R471,472			RK73GB2A331J	CHIP R 330 J 1/10W	
R280			RK73GB2A820J	CHIP R 82 J 1/10W		R474			RK73GB2A000J	CHIP R 0 J 1/10W	
R281			RK73GB2A181J	CHIP R 180 J 1/10W		R481			RK73FB2B471J	CHIP R 470 J 1/8W	
R282,283			RK73FB2B271J	CHIP R 270 J 1/8W		R482			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R351			RK73FB2B271J	CHIP R 270 J 1/8W		R483			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R352			RK73GB2A472J	CHIP R 4.7K J 1/10W		R484			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R354,355			RK73EB2E331J	CHIP R 330 J 1/4W		R485			RK73GB2A150J	CHIP R 15 J 1/10W	
R358,359			RK73GB2A100J	CHIP R 10 J 1/10W		R486			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R360			RK73GB2A271J	CHIP R 270 J 1/10W		R487			RK73GB2A101J	CHIP R 100 J 1/10W	
R362,363			RK73GB2A100J	CHIP R 10 J 1/10W		R488			RK73EB2E221J	CHIP R 220 J 1/4W	
R364			RK73GB2A332J	CHIP R 3.3K J 1/10W		R489			RK73GB2A221J	CHIP R 220 J 1/10W	
R365			RK73GB2A182J	CHIP R 1.8K J 1/10W		R490			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R366			RK73GB2A100J	CHIP R 10 J 1/10W		R491			RK73GB2A103J	CHIP R 10K J 1/10W	
R367			RK73GB2A821J	CHIP R 820 J 1/10W		R492			RK73GB2A331J	CHIP R 330 J 1/10W	
R368,369			RK73GB2A561J	CHIP R 560 J 1/10W		R493			RK73GB2A391J	CHIP R 390 J 1/10W	
R370			RK73GB2A151J	CHIP R 150 J 1/10W		R494			RK73GB2A681J	CHIP R 680 J 1/10W	
R371			RK73GB2A681J	CHIP R 680 J 1/10W		R495			RK73GB2A101J	CHIP R 100 J 1/10W	
R372,373			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R496			RK73GB2A681J	CHIP R 680 J 1/10W	
R374			RK73FB2B100J	CHIP R 10 J 1/8W		R497			RK73GB2A391J	CHIP R 390 J 1/10W	
R377			RK73GB2A000J	CHIP R 0 J 1/10W		R498			RK73GB2A101J	CHIP R 100 J 1/10W	
R379			RK73GB2A103J	CHIP R 10K J 1/10W		R499			RK73GB2A103J	CHIP R 10K J 1/10W	
R380			RK73GB2A470J	CHIP R 47 J 1/10W		R500			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R401			RK73FB2B271J	CHIP R 270 J 1/8W		R501			RK73GB2A000J	CHIP R 0 J 1/10W	
R403,404			RK73GB2A681J	CHIP R 680 J 1/10W		R502			RK73GB2A101J	CHIP R 100 J 1/10W	
R405,406			RK73GB2A100J	CHIP R 10 J 1/10W		R503			RK73GB2A000J	CHIP R 0 J 1/10W	
R407			RK73GB2A271J	CHIP R 270 J 1/10W		R504			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R408-410			RK73GB2A100J	CHIP R 10 J 1/10W		R505			RK73GB2A101J	CHIP R 100 J 1/10W	
R412			RK73EB2E561J	CHIP R 560 J 1/4W		R506			RK73GB2A103J	CHIP R 10K J 1/10W	
R413			RK73GB2A121J	CHIP R 120 J 1/10W		R507			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R414			RK73GB2A560J	CHIP R 56 J 1/10W		R508			RK73GB2A000J	CHIP R 0 J 1/10W	
R415			RK73GB2A121J	CHIP R 120 J 1/10W		R509			RK73GB2A101J	CHIP R 100 J 1/10W	
R416			RK73GB2A471J	CHIP R 470 J 1/10W		R510			RK73GB2A000J	CHIP R 0 J 1/10W	
R417,418			RK73GB2A151J	CHIP R 150 J 1/10W		R511			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R419,420			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R512			RK73FB2B101J	CHIP R 100 J 1/8W	
R421			RK73FB2B180J	CHIP R 18 J 1/8W		R513			RK73GB2A103J	CHIP R 10K J 1/10W	
R422			RK73GB2A102J	CHIP R 1.0K J 1/10W		R514			RK73GB2A561J	CHIP R 560 J 1/10W	
R423			RK73GB2A470J	CHIP R 47 J 1/10W		R515			RK73GB2A220J	CHIP R 22 J 1/10W	
R424,425			RK73GB2A471J	CHIP R 470 J 1/10W		R516			RK73GB2A101J	CHIP R 100 J 1/10W	
R428,429			RK73GB2A331J	CHIP R 330 J 1/10W		R517			RK73GB2A220J	CHIP R 22 J 1/10W	
R430			RK73FB2B220J	CHIP R 22 J 1/8W		R518			RK73GB2A561J	CHIP R 560 J 1/10W	
R431			RK73GB2A101J	CHIP R 100 J 1/10W		R519			RK73FB2B101J	CHIP R 100 J 1/8W	
R432			RK73GB2A222J	CHIP R 2.2K J 1/10W		R520			RK73GB2A103J	CHIP R 10K J 1/10W	
R433			RK73GB2A681J	CHIP R 680 J 1/10W		R522			RK73GB2A000J	CHIP R 0 J 1/10W	
R437			RK73GB2A471J	CHIP R 470 J 1/10W		R523			RK73GB2A101J	CHIP R 100 J 1/10W	
R438			RK73GB2A331J	CHIP R 330 J 1/10W		R524			RK73GB2A000J	CHIP R 0 J 1/10W	
R439			RK73GB2A271J	CHIP R 270 J 1/10W		R526			RK73FB2B101J	CHIP R 100 J 1/8W	
R440			RK73GB2A330J	CHIP R 33 J 1/10W		R527			RK73GB2A103J	CHIP R 10K J 1/10W	
R441			RK73GB2A221J	CHIP R 220 J 1/10W		R528			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R442			RK73FB2B331J	CHIP R 330 J 1/8W		R529			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R443			RK73GB2A330J	CHIP R 33 J 1/10W		R530			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R444			RK73GB2A124J	CHIP R 120K J 1/10W		R531			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R445			RK73GB2A000J	CHIP R 0 J 1/10W		R532			RK73FB2B331J	CHIP R 330 J 1/8W	
R446			RK73GB2A102J	CHIP R 1.0K J 1/10W		R533			RK73GB2A104J	CHIP R 100K J 1/10W	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R535			RK73GB2A104J	CHIP R 100K J 1/10W		R656			RK73GB2A103J	CHIP R 10K J 1/10W	
R536			RK73GB2A220J	CHIP R 22 J 1/10W		R657			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R537			RK73GB2A103J	CHIP R 10K J 1/10W		R658,659			RK73GB2A223J	CHIP R 22K J 1/10W	
R538			RK73GB2A471J	CHIP R 470 J 1/10W		R660			RK73GB2A183J	CHIP R 18K J 1/10W	
R539			RK73GB2A470J	CHIP R 47 J 1/10W		R661			RK73GB2A273J	CHIP R 27K J 1/10W	
R540,541			RK73GB2A103J	CHIP R 10K J 1/10W		R663-666			RK73GB2A473J	CHIP R 47K J 1/10W	
R542			RK73GB2A682J	CHIP R 6.8K J 1/10W		R667			RK73GB2A103J	CHIP R 10K J 1/10W	
R543			RK73GB2A122J	CHIP R 1.2K J 1/10W		R668			RK73GB2A471J	CHIP R 470 J 1/10W	
R546			RK73GB2A393J	CHIP R 39K J 1/10W		R675			RK73GB2A000J	CHIP R 0 J 1/10W	
R547			RK73GB2A682J	CHIP R 6.8K J 1/10W		R701			RK73GB2A680J	CHIP R 68 J 1/10W	
R549			RK73GB2A151J	CHIP R 150 J 1/10W		R702			RK73GB2A470J	CHIP R 47 J 1/10W	
R550			RK73GB2A390J	CHIP R 39 J 1/10W		R703			RK73GB2A471J	CHIP R 470 J 1/10W	
R551			RK73GB2A151J	CHIP R 150 J 1/10W		R704			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R552			RK73GB2A330J	CHIP R 33 J 1/10W		R705			RK73GB2A820J	CHIP R 82 J 1/10W	
R553			RK73GB2A120J	CHIP R 12 J 1/10W		R706,707			RK73GB2A223J	CHIP R 22K J 1/10W	
R554			RK73GB2A561J	CHIP R 560 J 1/10W		R708			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R555			RK73GB2A151J	CHIP R 150 J 1/10W		R709			RK73GB2A000J	CHIP R 0 J 1/10W	
R556			RK73GB2A821J	CHIP R 820 J 1/10W		R710			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R557,558			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		R711,712			RK73GB2A471J	CHIP R 470 J 1/10W	
R559			RK73GB2A120J	CHIP R 12 J 1/10W		R713			RK73GB2A681J	CHIP R 680 J 1/10W	
R561			RK73GB2A101J	CHIP R 100 J 1/10W		R714			RK73GB2A101J	CHIP R 100 J 1/10W	
R562			RK73GB2A331J	CHIP R 330 J 1/10W		R715			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R563			RK73GB2A151J	CHIP R 150 J 1/10W		R716			RK73GB2A224J	CHIP R 220K J 1/10W	
R564			RK73GB2A471J	CHIP R 470 J 1/10W		R717			RK73GB2A331J	CHIP R 330 J 1/10W	
R601			RK73GB2A471J	CHIP R 470 J 1/10W		R718			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R602,603			RK73GB2A221J	CHIP R 220 J 1/10W		R719,720			RK73GB2A101J	CHIP R 100 J 1/10W	
R604			RK73GB2A472J	CHIP R 4.7K J 1/10W		R721			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R605			RK73GB2A471J	CHIP R 470 J 1/10W		R722			RK73GB2A330J	CHIP R 33 J 1/10W	
R607			RK73GB2A000J	CHIP R 0 J 1/10W		R723			RK73GB2A000J	CHIP R 0 J 1/10W	
R609			RK73GB2A103J	CHIP R 10K J 1/10W		R724			RK73GB2A330J	CHIP R 33 J 1/10W	
R610			RK73GB2A222J	CHIP R 2.2K J 1/10W		R725			RK73GB2A103J	CHIP R 10K J 1/10W	
R611			RK73GB2A152J	CHIP R 1.5K J 1/10W		R726			RK73GB2A184J	CHIP R 180K J 1/10W	
R612			RK73GB2A470J	CHIP R 47 J 1/10W		R727			RK73GB2A563J	CHIP R 56K J 1/10W	
R613			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R728			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R614			RK73GB2A270J	CHIP R 27 J 1/10W		R729			RK73GB2A123J	CHIP R 12K J 1/10W	
R616			RK73GB2A000J	CHIP R 0 J 1/10W		R730			RK73GB2A471J	CHIP R 470 J 1/10W	
R618			RK73GB2A223J	CHIP R 22K J 1/10W		R731			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R619			RK73GB2A000J	CHIP R 0 J 1/10W		R732			RK73GB2A151J	CHIP R 150 J 1/10W	
R621			RK73GB2A223J	CHIP R 22K J 1/10W		R733			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R622			RK73GB2A472J	CHIP R 4.7K J 1/10W		R736			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R623			RK73GB2A563J	CHIP R 56K J 1/10W		R737			RK73GB2A470J	CHIP R 47 J 1/10W	
R625,626			RK73GB2A471J	CHIP R 470 J 1/10W		R738			RK73GB2A331J	CHIP R 330 J 1/10W	
R627			RK73GB2A682J	CHIP R 6.8K J 1/10W		R741			RK73GB2A100J	CHIP R 10 J 1/10W	
R629			RK73GB2A334J	CHIP R 330K J 1/10W		R742			RK73GB2A331J	CHIP R 330 J 1/10W	
R630			RK73GB2A223J	CHIP R 22K J 1/10W		R744			RK73GB2A390J	CHIP R 39 J 1/10W	
R631			RK73GB2A122J	CHIP R 1.2K J 1/10W		R745			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R632			RK73GB2A273J	CHIP R 27K J 1/10W		R746			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R633			RK73GB2A102J	CHIP R 1.0K J 1/10W		R747			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R634			RK73GB2A104J	CHIP R 100K J 1/10W		R748			RK73GB2A471J	CHIP R 470 J 1/10W	
R635			RK73GB2A684J	CHIP R 680K J 1/10W		R749			RK73GB2A103J	CHIP R 10K J 1/10W	
R636			RK73GB2A103J	CHIP R 10K J 1/10W		R751			RK73GB2A331J	CHIP R 330 J 1/10W	
R637,638			RK73GB2A152J	CHIP R 1.5K J 1/10W		R752			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R640,641			RK73GB2A103J	CHIP R 10K J 1/10W		R753			RK73GB2A824J	CHIP R 820K J 1/10W	
R644,645			RK73GB2A000J	CHIP R 0 J 1/10W		R754			RK73GB2A470J	CHIP R 47 J 1/10W	
R648,649			RK73GB2A103J	CHIP R 10K J 1/10W		R755			RK73GB2A820J	CHIP R 82 J 1/10W	
R651			RK73GB2A103J	CHIP R 10K J 1/10W		R756			RK73GB2A101J	CHIP R 100 J 1/10W	
R652			RK73GB2A684J	CHIP R 680K J 1/10W		R757			RK73GB2A470J	CHIP R 47 J 1/10W	
R653			RK73GB2A473J	CHIP R 47K J 1/10W		R758			RK73EB2E820J	CHIP R 82 J 1/4W	
R654			RK73GB2A273J	CHIP R 27K J 1/10W		R759			RK73GB2A681J	CHIP R 680 J 1/10W	
R655			RK73GB2A223J	CHIP R 22K J 1/10W		R760			RK73GB2A102J	CHIP R 1.0K J 1/10W	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R761			RK73GB2A471J	CHIP R 470 J 1/10W		R835			RK73GB2A153J	CHIP R 15K J 1/10W	
R762			RK73GB2A000J	CHIP R 0 J 1/10W		R836			RK73GB2A474J	CHIP R 470K J 1/10W	
R764			RK73GB2A000J	CHIP R 0 J 1/10W		R837			RK73GB2A100J	CHIP R 10 J 1/10W	
R765,766			RK73GB2A100J	CHIP R 10 J 1/10W		R838			RK73GB2A104J	CHIP R 100K J 1/10W	
R767			RK73GB2A471J	CHIP R 470 J 1/10W		R839			RK73GB2A333J	CHIP R 33K J 1/10W	
R768			RK73GB2A102J	CHIP R 1.0K J 1/10W		R840			RK73GB2A104J	CHIP R 100K J 1/10W	
R769,770			RK73GB2A471J	CHIP R 470 J 1/10W		R841			RK73GB2A123J	CHIP R 12K J 1/10W	
R771			RK73GB2A151J	CHIP R 150 J 1/10W		R842			RK73GB2A333J	CHIP R 33K J 1/10W	
R772			RK73FB2B473J	CHIP R 47K J 1/8W		R843			RK73GB2A183J	CHIP R 18K J 1/10W	
R773			RK73FB2B821J	CHIP R 820 J 1/8W		R844			RK73GB2A334J	CHIP R 330K J 1/10W	
R774-776			RK73GB2A103J	CHIP R 10K J 1/10W		R851			RK73GB2A333J	CHIP R 33K J 1/10W	
R777			RK73FB2B821J	CHIP R 820 J 1/8W		R852			RK73GB2A821J	CHIP R 820 J 1/10W	
R778			RK73GB2A6R8J	CHIP R 6.8 J 1/10W		R853			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R779			RK73GB2A472J	CHIP R 4.7K J 1/10W		R854			RK73GB2A393J	CHIP R 39K J 1/10W	
R780			RK73GB2A471J	CHIP R 470 J 1/10W		R855			RK73GB2A473J	CHIP R 47K J 1/10W	
R781			RK73GB2A000J	CHIP R 0 J 1/10W		R856			RK73GB2A000J	CHIP R 0 J 1/10W	
R782			RK73GB2A101J	CHIP R 100 J 1/10W		R858			RK73GB2A101J	CHIP R 100 J 1/10W	
R783			RK73GB2A331J	CHIP R 330 J 1/10W		R859			RK73GB2A000J	CHIP R 0 J 1/10W	
R785			RK73GB2A000J	CHIP R 0 J 1/10W		R860			RK73GB2A223J	CHIP R 22K J 1/10W	
R787			RK73FB2B221J	CHIP R 220 J 1/8W		R861			RK73GB2A103J	CHIP R 10K J 1/10W	
R788			RK73GB2A000J	CHIP R 0 J 1/10W		R862			RK73GB2A224J	CHIP R 220K J 1/10W	
R789			RK73GB2A102J	CHIP R 1.0K J 1/10W		R863			RK73GB2A104J	CHIP R 100K J 1/10W	
R790			RK73GB2A470J	CHIP R 47 J 1/10W		R864			RK73GB2A183J	CHIP R 18K J 1/10W	
R791			RK73GB2A000J	CHIP R 0 J 1/10W		R865			RK73GB2A394J	CHIP R 390K J 1/10W	
R792			RK73GB2A470J	CHIP R 47 J 1/10W		R866,867			RK73GB2A184J	CHIP R 180K J 1/10W	
R793			RK73GB2A000J	CHIP R 0 J 1/10W		R868			RK73GB2A394J	CHIP R 390K J 1/10W	
R794			RK73GB2A562J	CHIP R 5.6K J 1/10W		R869			RK73GB2A101J	CHIP R 100 J 1/10W	
R795			RK73GB2A473J	CHIP R 47K J 1/10W		R870			RK73GB2A000J	CHIP R 0 J 1/10W	
R796			RK73GB2A184J	CHIP R 180K J 1/10W		R871			RK73GB2A103J	CHIP R 10K J 1/10W	
R797			RK73GB2A103J	CHIP R 10K J 1/10W		R882			RK73GB2A101J	CHIP R 100 J 1/10W	
R798			RK73GB2A472J	CHIP R 4.7K J 1/10W		R883			RK73GB2A154J	CHIP R 150K J 1/10W	
R799			RK73GB2A471J	CHIP R 470 J 1/10W		R884			RK73GB2A101J	CHIP R 100 J 1/10W	
R800			RK73GB2A103J	CHIP R 10K J 1/10W		R885			RK73GB2A471J	CHIP R 470 J 1/10W	
R801			RK73GB2A224J	CHIP R 220K J 1/10W		R889			RK73GB2A104J	CHIP R 100K J 1/10W	
R802			RK73GB2A104J	CHIP R 100K J 1/10W		R890			RK73GB2A221J	CHIP R 220 J 1/10W	
R803			RK73GB2A472J	CHIP R 4.7K J 1/10W		R891,892			RK73GB2A101J	CHIP R 100 J 1/10W	
R804			RK73GB2A103J	CHIP R 10K J 1/10W		R893			RK73GB2A221J	CHIP R 220 J 1/10W	
R805			RK73GB2A273J	CHIP R 27K J 1/10W		R894			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R806			RK73GB2A104J	CHIP R 100K J 1/10W		R895			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R807			RK73GB2A563J	CHIP R 56K J 1/10W		R896			RK73GB2A101J	CHIP R 100 J 1/10W	
R808			RK73GB2A333J	CHIP R 33K J 1/10W		R897			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R809,810			RK73GB2A104J	CHIP R 100K J 1/10W		R898,899			RK73GB2A473J	CHIP R 47K J 1/10W	
R811,812			RK73GB2A471J	CHIP R 470 J 1/10W		R902			RK73GB2A220J	CHIP R 22 J 1/10W	
R813,814			RK73GB2A103J	CHIP R 10K J 1/10W		R903			RK73GB2A221J	CHIP R 220 J 1/10W	
R815,816			RK73GB2A473J	CHIP R 47K J 1/10W		R904			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R817			RK73GB2A104J	CHIP R 100K J 1/10W		R905			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R818			RK73GB2A124J	CHIP R 120K J 1/10W		R906			RK73GB2A101J	CHIP R 100 J 1/10W	
R819			RK73GB2A102J	CHIP R 1.0K J 1/10W		R907			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R820,821			RK73GB2A331J	CHIP R 330 J 1/10W		R908			RK73GB2A223J	CHIP R 22K J 1/10W	
R822			RK73GB2A105J	CHIP R 1.0M J 1/10W		R909,910			RK73GB2A473J	CHIP R 47K J 1/10W	
R823			RK73GB2A471J	CHIP R 470 J 1/10W		R911			RK73GB2A683J	CHIP R 68K J 1/10W	
R824			RK73GB2A333J	CHIP R 33K J 1/10W		R912			RK73GB2A103J	CHIP R 10K J 1/10W	
R825			RK73GB2A100J	CHIP R 10 J 1/10W		R913			RK73GB2A223J	CHIP R 22K J 1/10W	
R826,827			RK73GB2A104J	CHIP R 100K J 1/10W		R914			RK73GB2A270J	CHIP R 27 J 1/10W	
R828			RK73GB2A224J	CHIP R 220K J 1/10W		R915			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R829			RK73GB2A101J	CHIP R 100 J 1/10W		R916			RK73GB2A473J	CHIP R 47K J 1/10W	
R830			RK73GB2A100J	CHIP R 10 J 1/10W		R917			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R831			RK73GB2A123J	CHIP R 12K J 1/10W		R918			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R832			RK73GB2A103J	CHIP R 10K J 1/10W		R919			RK73GB2A153J	CHIP R 15K J 1/10W	
R833,834			RK73GB2A104J	CHIP R 100K J 1/10W		R920			RK73GB2A221J	CHIP R 220 J 1/10W	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R921			RK73GB2A103J	CHIP R 10K J 1/10W		D601,602			HSM88ASR-E	DIODE	
R922			RK73GB2A333J	CHIP R 33K J 1/10W		D603,604			1SS226-F	DIODE	
R923			RK73GB2A563J	CHIP R 56K J 1/10W		D605-607			MC2858-T111	DIODE	
R924			RK73GB2A102J	CHIP R 1.0K J 1/10W		D701			MC2858-T111	DIODE	
R925			RK73GB2A271J	CHIP R 270 J 1/10W		D702			DA2S101	DIODE	
R926			RK73GB2A681J	CHIP R 680 J 1/10W		D703			RN731V	DIODE	
R928			RK73GB2A000J	CHIP R 0 J 1/10W		D704			DA204U	DIODE	
R951,952			RK73GB2A222J	CHIP R 2.2K J 1/10W		D705			RN731V	DIODE	
R954-957			RK73GB2A472J	CHIP R 4.7K J 1/10W		D706			HVC131	DIODE	
R959-962			RK73GB2A472J	CHIP R 4.7K J 1/10W		D707			RN731V	DIODE	
R963,964			RK73GB2A102J	CHIP R 1.0K J 1/10W		D708-710			HVC131	DIODE	
R965			RK73GB2A473J	CHIP R 47K J 1/10W		D711,712			EDZ18B	ZENER DIODE	
R966			RK73GB2A103J	CHIP R 10K J 1/10W		D713,714			RN142S	DIODE	
R967			RK73GB2A102J	CHIP R 1.0K J 1/10W		D715-718			HVC131	DIODE	
R968			RK73GB2A473J	CHIP R 47K J 1/10W		D801			DA2S101	DIODE	
R969,970			RK73GB2A102J	CHIP R 1.0K J 1/10W		D802			DZ2J120(M)	ZENER DIODE	
R971			RK73GB2A473J	CHIP R 47K J 1/10W		D803			DA2S101	DIODE	
R972,973			RK73GB2A103J	CHIP R 10K J 1/10W		D804			DZ2J033(M)	ZENER DIODE	
R974,975			RK73GB2A682J	CHIP R 6.8K J 1/10W		D805			DA2S101	DIODE	
R977,978			RK73GB2A472J	CHIP R 4.7K J 1/10W		D808,809			1SS388F	DIODE	
R991			RK73GB2A000J	CHIP R 0 J 1/10W	K E	D881			RB706F-40	DIODE	
R992			RK73GB2A000J	CHIP R 0 J 1/10W		D882,883			1SS388F	DIODE	
VR401			R32-0346-05	SEMI FIXED VARIABLE RESISTOR(4.7K)		IC51-54			TC74HC4094AFF	MOS-IC	
K101			S51-1420-05	RELAY		IC55			M62353AGPDF5J	MOS-IC	
K201,202			S76-0459-05	RELAY		IC101			BA2904FVM	MOS-IC	
D103,104			1SS226-F	DIODE		IC481			BA2904FVM	MOS-IC	
D105			EDZ18B	ZENER DIODE		IC601			BA4580RFVM	BI-POLAR IC	
D106,107			1SS388F	DIODE		IC602			NJM2591V	BI-POLAR IC	
D110			DA3S101F	DIODE		IC603			NJM2732V	BI-POLAR IC	
D111			EDZ18B	ZENER DIODE		IC604			TC4W53FU-F	MOS-IC	
D112			EDZ4.3B	ZENER DIODE		IC701,702			TA4107F-F	MOS-IC	
D113			DA2S101	DIODE		IC801-804			BA2904FVM	MOS-IC	
D114			DZ2J062(M)	ZENER DIODE		Q102			LTC043ZEBFS8	TRANSISTOR	
D115			DA2S101	DIODE		Q103			2SK1824-A	FET	
D116			MC2858-T111	DIODE		Q104			2SC4617(R)	TRANSISTOR	
D117			DZ2J062(M)	ZENER DIODE		Q105			2SK1824-A	FET	
D118,119			DA2S101	DIODE		Q106			2SC4617(R)	TRANSISTOR	
D120,121			DZ2J062(M)	ZENER DIODE		Q107			LTC043ZEBFS8	TRANSISTOR	
D171,172			DA2S101	DIODE		Q108			2SK1824-A	FET	
D200			EZJZ1V500AA	VARISTOR		Q109			LTC014EEBFS8	TRANSISTOR	
D201,202			MC2858-T111	DIODE		Q110			LTC043ZEBFS8	TRANSISTOR	
D204,205			RLS245	DIODE		Q111			2SB1188(Q,R)	TRANSISTOR	
D207,208			HVC131	DIODE		Q171			2SK1824-A	FET	
D209			MC2858-T111	DIODE		Q172			LTC043ZEBFS8	TRANSISTOR	
D210-240			HVC131	DIODE		Q201,202			RT5N234C-T112	TRANSISTOR	
D251,252			L8103R	DIODE		Q203			2SC6046-T112	TRANSISTOR	
D351			HVC131	DIODE		Q204			LSCR523EBFS8	TRANSISTOR	
D353,354			HVC131	DIODE		Q205-218			LTC043ZEBFS8	TRANSISTOR	
D401			HVC131	DIODE		Q219			2SC5551AF	TRANSISTOR	
D403,404			HVC131	DIODE		Q220			LTC043ZEBFS8	TRANSISTOR	
D405,406			HSM88ASR-E	DIODE		Q351-354			2SK1740-4	FET	
D407			HVC131	DIODE		Q355,356			2SC5551AF	TRANSISTOR	
D408			MC2858-T111	DIODE		Q358			LTC014EEBFS8	TRANSISTOR	
D409-411			HVC131	DIODE		Q401-404			2SK1740-4	FET	
D481-484			HVC131	DIODE		Q405,406			2SC5551AF	TRANSISTOR	
D487-496			HVC131	DIODE		Q408			2SC5551AF	TRANSISTOR	
D501			L204BBB	DIODE		Q409			LTC014EEBFS8	TRANSISTOR	
D502			MC2858-T111	DIODE		Q410			2SC3356-A	TRANSISTOR	
D503-506			HVC131	DIODE		Q481			2SC5551AF	TRANSISTOR	
						Q482,483			LTC043ZEBFS8	TRANSISTOR	

PARTS LIST

TX-RX UNIT (X57-827X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
Q484-486			LSCR523EBFS8	TRANSISTOR							
Q487-490			LTC043ZEBFS8	TRANSISTOR							
Q491			3SK293-F	FET							
Q492,493			LTC043ZEBFS8	TRANSISTOR							
Q494,495			2SC5551AF	TRANSISTOR							
Q601			2SC4725	TRANSISTOR							
Q602,603			2SK1830F	FET							
Q604			LTC043ZEBFS8	TRANSISTOR							
Q701			LTC043ZEBFS8	TRANSISTOR							
Q702			2SC4725	TRANSISTOR							
Q703			3SK293-F	FET							
Q704			2SK1830F	FET							
Q705			2SC3356-A	TRANSISTOR							
Q706			3SK293-F	FET							
Q707			NESG260234	TRANSISTOR							
Q708,709			SSM3K15AMFV	FET							
Q710			RT5P431C-T112	TRANSISTOR							
Q801			SSM3K15AMFV	FET							
Q802,803			2SC4617(R)	TRANSISTOR							
Q806,807			LTC043ZEBFS8	TRANSISTOR							
Q881-884			2SC4226-A(R24)	TRANSISTOR							
Q885			LSCR523EBFS8	TRANSISTOR							
Q886,887			2SC4226-A(R24)	TRANSISTOR							
Q888			LSCR523EBFS8	TRANSISTOR							
Q889			2SK1824-A	FET							
Q890			2SC4226-A(R24)	TRANSISTOR							
Q891,892			LSCR523EBFS8	TRANSISTOR							
Q893			2SC4226-A(R24)	TRANSISTOR							
Q894			LTA014EEBFS8	TRANSISTOR							
Q951			2SB1188(Q,R)	TRANSISTOR							
Q952,953			LTC043ZEBFS8	TRANSISTOR							
Q954			2SB1694	TRANSISTOR							
Q955			SSM3K15AMFV	FET							
Q956,957			2SB1694	TRANSISTOR							
Q958			LTC043ZEBFS8	TRANSISTOR							
Q959			SSM3K15AMFV	FET							
Q960			2SB1694	TRANSISTOR							
Q961			2SB1188(Q,R)	TRANSISTOR							
Q962			LTC043ZEBFS8	TRANSISTOR							
Q963			2SB1694	TRANSISTOR							
Q964			SSM3K15AMFV	FET							
Q965			2SB1188(Q,R)	TRANSISTOR							
Q966,967			LTC043ZEBFS8	TRANSISTOR							
Q968			SSM3K15AMFV	FET							
Q969,970			RT5P431C-T112	TRANSISTOR							
Q971			SSM3K15AMFV	FET							
Q972			2SB1694	TRANSISTOR							
Q973			LTC043ZEBFS8	TRANSISTOR							
Q974			2SB1694	TRANSISTOR							
Q975			2SK1830F	FET							
TH401			157-101-65001	THERMISTOR							
TH481,482			157-101-65001	THERMISTOR							
TH601,602			NCP18WB473J0S	THERMISTOR							
TH701			157-302-65801	THERMISTOR							
TH702,703			157-102-65001	THERMISTOR							