


1234

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

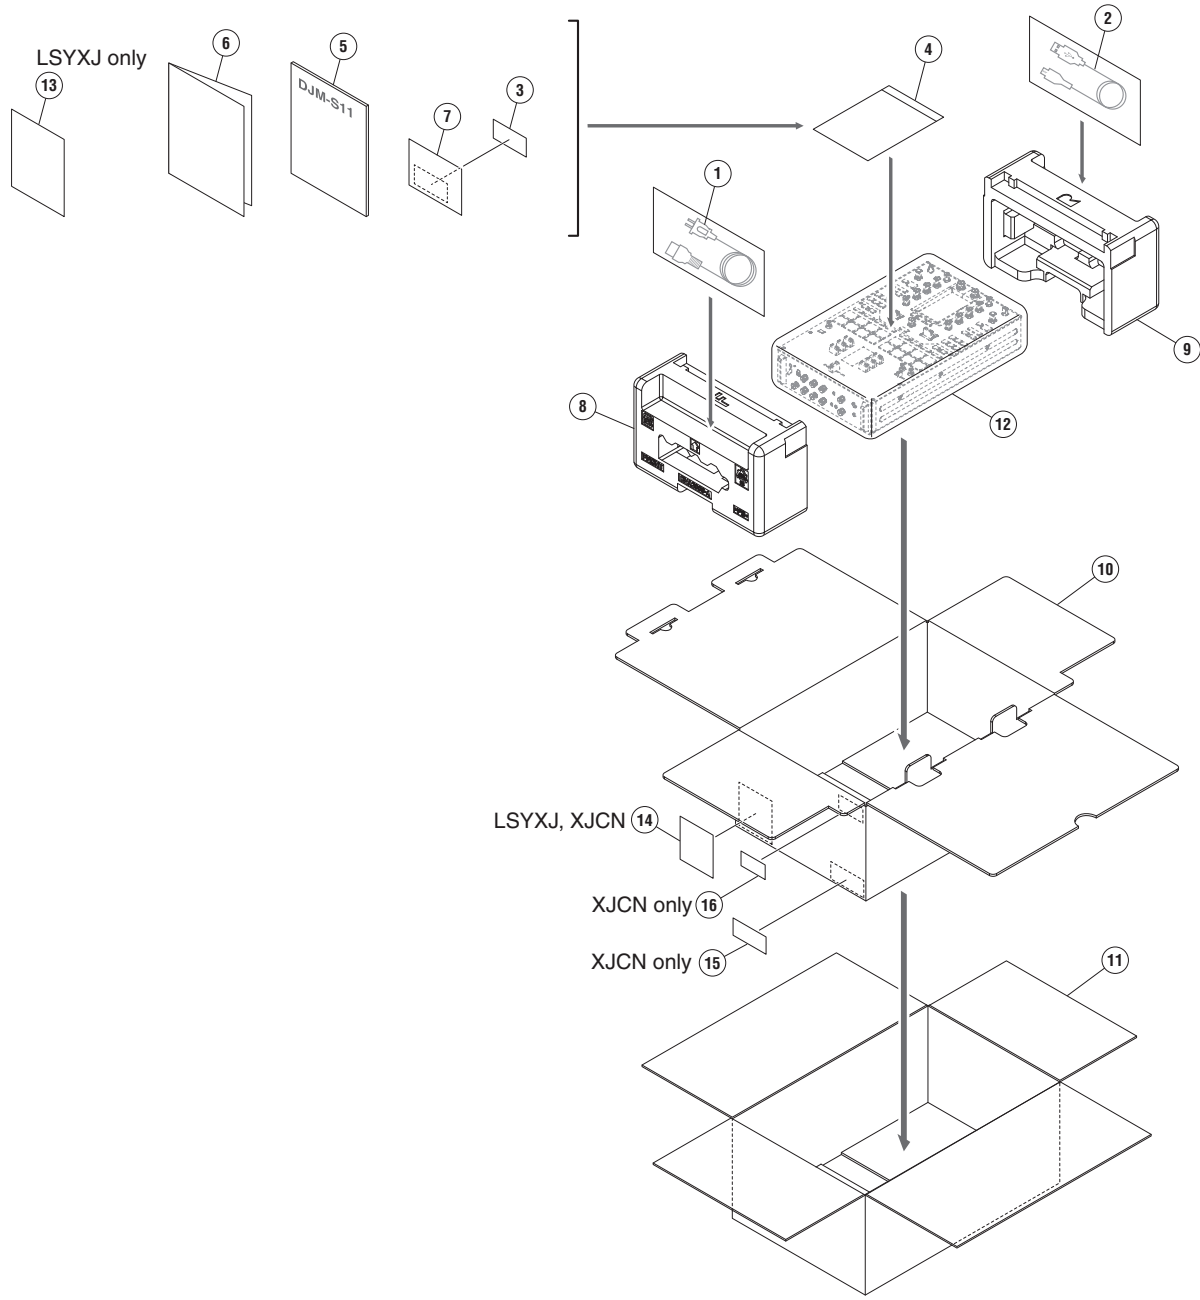

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power cord	See Contrast table (2)	10	Packing Case	See Contrast table (2)
	2 USB cable	DDE1150	11	Master Carton	See Contrast table (2)
NSP	3 Serato DJ Pro Expansion Pack voucher		12	Packing Sheet	RHC1023
NSP	4 Polyethylene Bag	AHG7117	NSP 13	Warranty	See Contrast table (2)
			14	Label	See Contrast table (2)
	5 Quick Start Guide	See Contrast table (2)	15	Label	See Contrast table (2)
	6 Precautions for Use	See Contrast table (2)	16	Label	See Contrast table (2)
NSP	7 Leaflet	DRM1434			
	8 Packing Pad	DHA2006			
	9 Packing Pad	DHA2007			

(2) CONTRAST TABLE

DJM-S11/LSYXJ, DJM-S11/UXJCB, DJM-S11/XJCN, DJM-S11-SE/LSYXJ and DJM-S11-SE/UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S11 /LSYXJ	DJM-S11 /UXJCB	DJM-S11 /XJCN	DJM-S11-SE /LSYXJ	DJM-S11-SE /UXJCB
⚠	1	Power cord	ADG1244	DDG1108	DDG1114	ADG1244	DDG1108
	5	Quick Start Guide	DRH1583	DRH1583	DRH1584	DRH1583	DRH1583
	6	Precautions for Use	DRH1596	DRH1596	DRH1598	DRH1596	DRH1596
	10	Packing Case	DHG3757	DHG3757	DHG3757	DHG3793	DHG3793
	11	Master Carton	DHG3758	DHG3765	DHG3767	DHG3795	DHG3794
NSP	13	Warranty	DRY1274	Not used	Not used	DRY1274	Not used
	14	Label	DRW2857	Not used	DRW2859	DRW2969	Not used
	15	Label	Not used	Not used	DRW2966	Not used	Not used
	16	Label	Not used	Not used	DRW2953	Not used	Not used

9.2 EXTERIOR SECTION

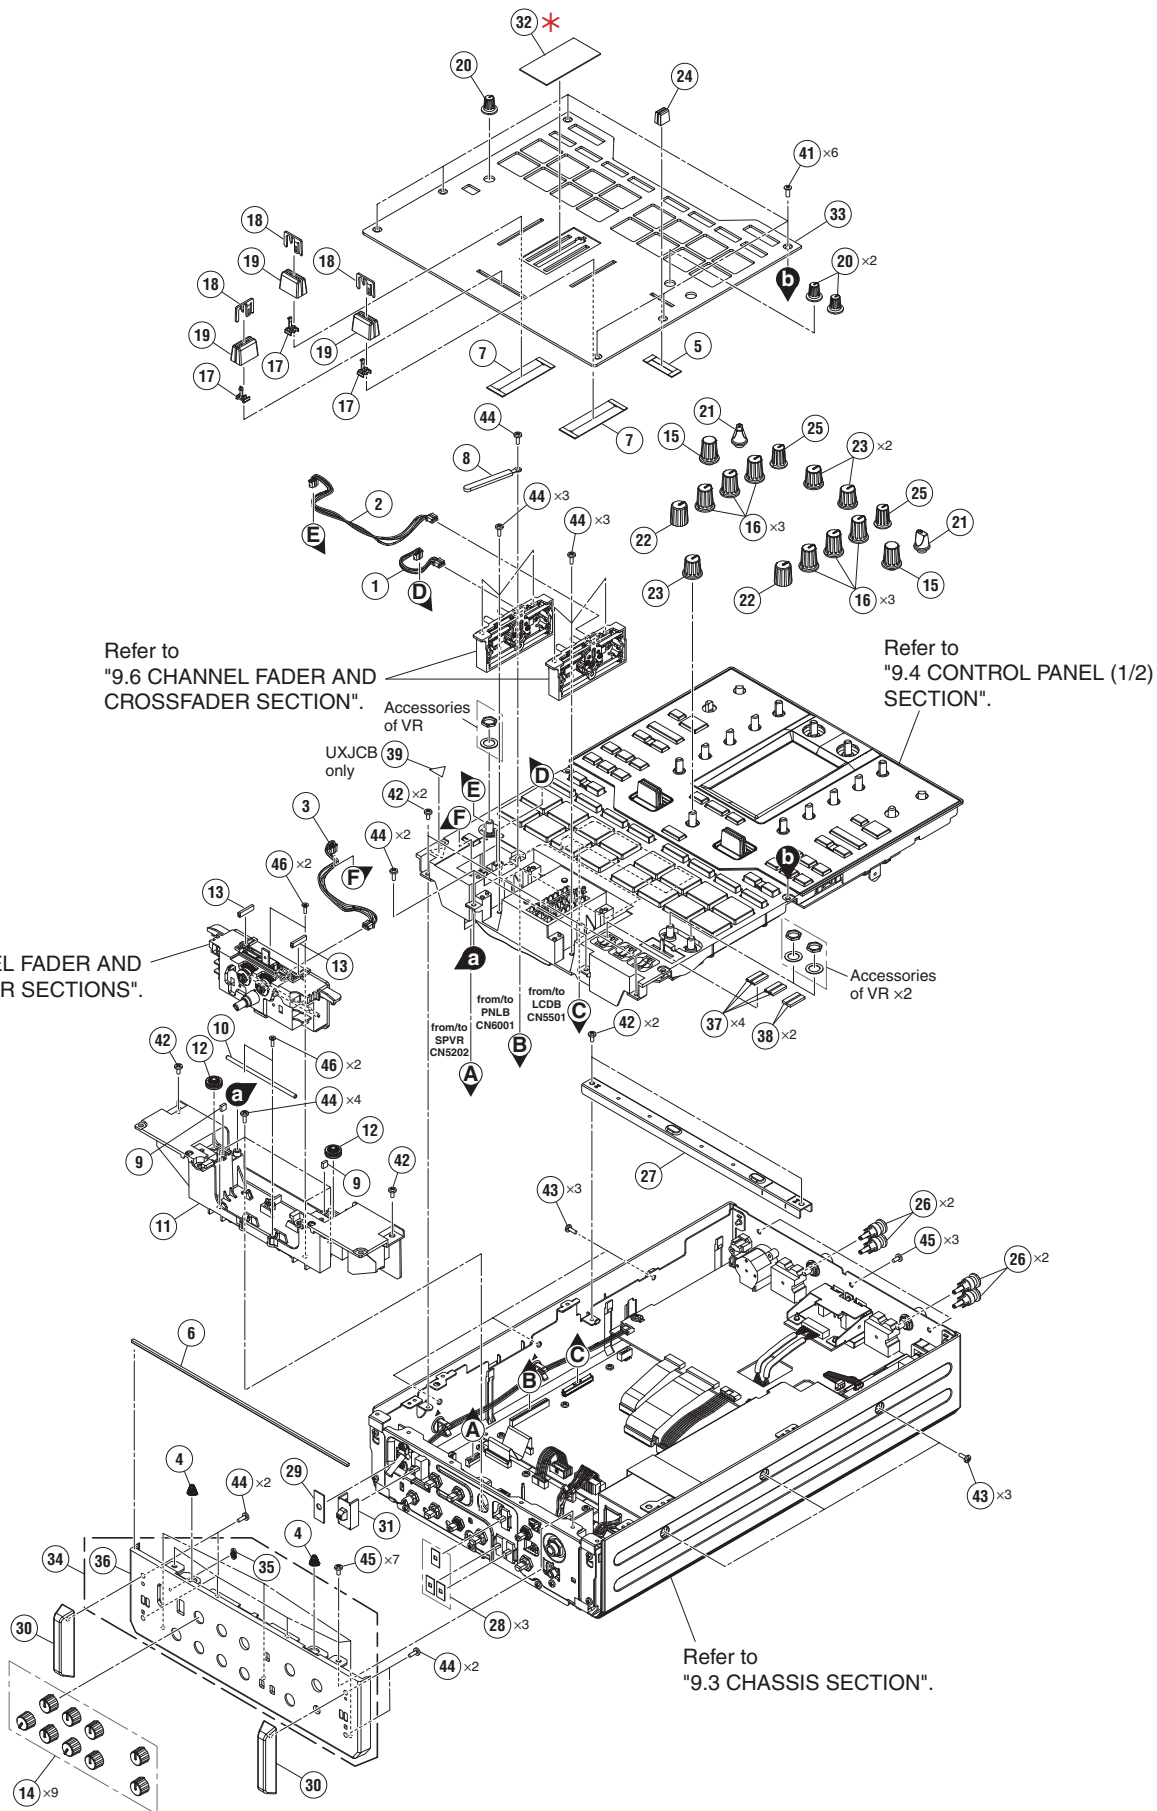

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Connector Assy	PF03PP2B05	26	RCA Plug	DKM1026	
2	Connector Assy	PF03PP-B20	27	Stay	DNF1944	A
3	Connector Assy	PF03PP4B12	28	Slide SW Packing (B)	DEC2590	
4	Spring	DBH1810	29	Packing	DED1190	
5	Fader Packing (B)	DEC2572	30	Guard	DNK6441	
6	Cushion	DEC3639	31	Cap/MIC	DAC2773	
7	Packing	DEC3908	32	Plate	See Contrast table (2)	
8	Cord Clamper	DEX1025	33	Panel	See Contrast table (2)	
9	Cushion	DEC3640	34	1..Panel	See Contrast table (2)	
10	Guide Bar	VLL1514	NSP 35	2..Lens STANDBY	DNK5729	
11	Holder	DNK6981	36	2..Panel	See Contrast table (2)	B
12	Damper/SI	DEB2008	37	Fader bumper A	GNK1010	
13	Fader bumper C	DEC3605	38	Fader bumper B	DEC3809	
14	Knob	DAA1456	NSP 39	Label	See Contrast table (2)	
15	Knob	DAA1344	40	•••••		
16	Knob	DAA1434	41	Screw	DBA1451	
17	Stopper	DNK6440	42	Screw	BBZ30P060FTC	
18	Slider Knob 2	DAC2685	43	Screw	BBZ30P080FTB	
19	Knob	See Contrast table (2)	44	Screw	BPZ30P080FNI	
20	Knob	DAA1346	45	Screw	BSZ30P060FTB	C
21	Knob	DAA1415	46	Screw	CPZ26P080FTC	
22	Knob/CL	DAA1320				
23	Knob	DAA1435				
24	Knob	DAC3088				
25	Knob	DAA1408				

(2) CONTRAST TABLE

DJM-S11 and DJM-S11-SE are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S11 /LSYXJ	DJM-S11 /UXJCB	DJM-S11 /XJCN	DJM-S11-SE /LSYXJ	DJM-S11-SE /UXJCB
	19	Knob	DAC3233	DAC3233	DAC3233	DAC3238	DAC3238
	32	Plate	DAH3300*	DAH3300*	DAH3300*	DAH3332	DAH3332
	33	Panel	DNB1278	DNB1278	DNB1278	DNB1281	DNB1281
	34	Panel	DXA2395	DXA2395	DXA2395	DXA2409	DXA2409
	36	Panel	DNK6926	DNK6926	DNK6926	DNK6976	DNK6976
NSP	39	Label	Not used	DRW1975	Not used	Not used	DRW1975

* Use DEA1124 for the panels used in the first lot of products.




The serial numbers of the affected products are as follows.

DJM-S11/LSYXJ: 1 to 605

DJM-S11/UXJCB: 1 to 1600

DJM-S11/XJCN: Not applicable

A

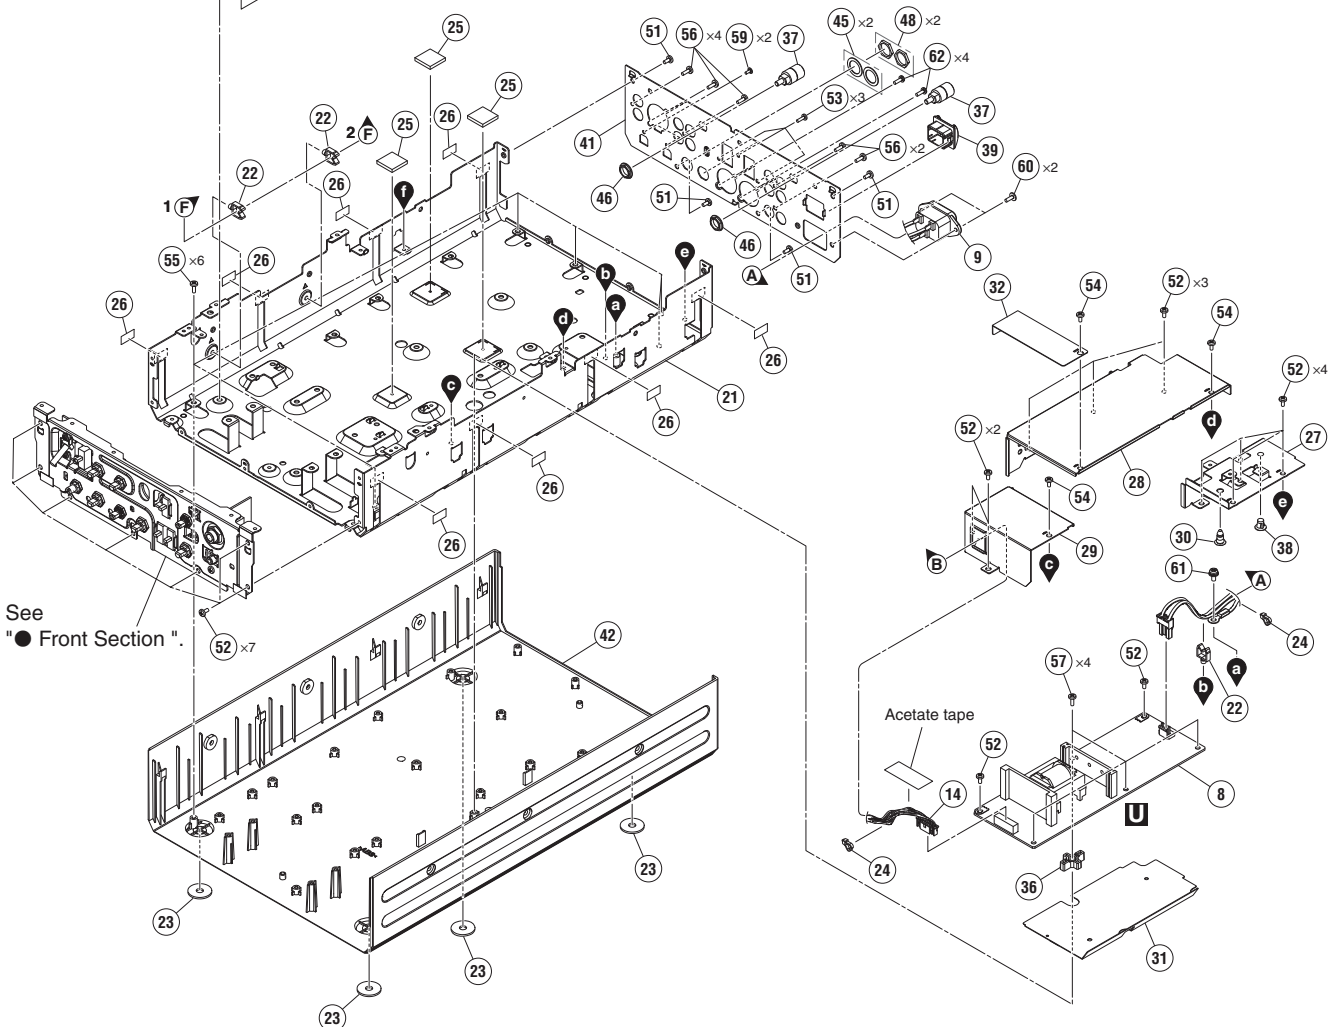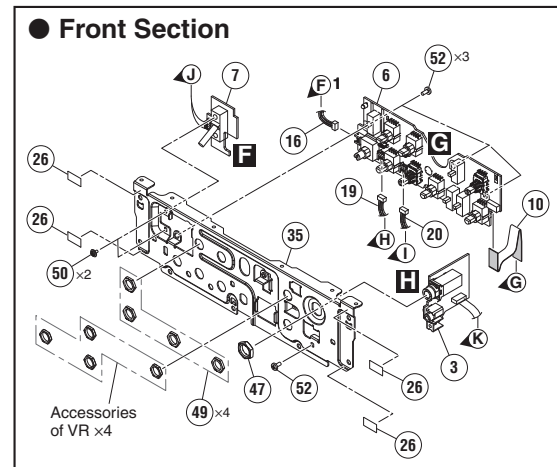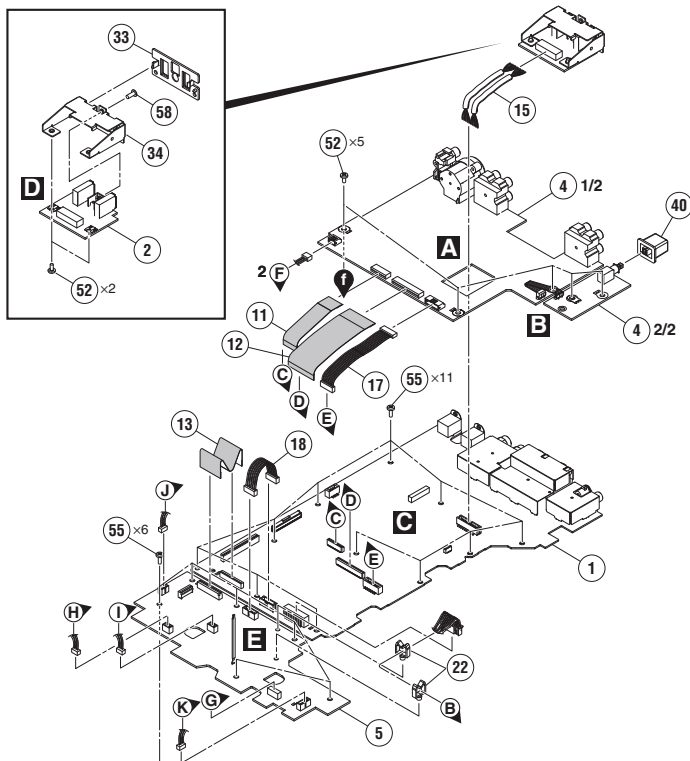

(1) CHASSIS SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MAIN Assy	See Contrast table (2)	31	Sheet	DEC3903	
2	USBA Assy	DWX4421	32	Sheet	DEC3905	A
3	HPJK Assy	DWX4426	33	Holder	DNK6918	
4	INPUT Assy	DWX4428	34	Stay	DNF2078	
5	HPAMP Assy	DWX4429	35	Stay	DNF2079	
6	FRVR Assy	DWX4425	36	Spacer	DNK6975	
7	MCSW Assy	DWX4432	37	Earth Terminal	DKE1019	
⚠ 8	SW POWER SUPPLY	DWR1548	NSP 38	PC Support	VEC1749	
⚠ 9	AC Inlet	DKP3984	39	Power Knob Guard	DNK4534	
10	FFC	DDD1702	40	Power Knob	DAC2306	
11	FFC	DDD1973	41	Rear Panel	DNC2140	B
12	FFC	DDD1974	42	Chassis	DNK6917	
13	FFC	DDD1694	43	•••••		
14	Crimp Connector	DDC1025	44	•••••		
15	Shielded Conn-Cable	DDA1075	45	Washer	DEC2920	
16	Shielded Conn-Cable	DDA1100	46	Flange Nut M9	DBN1008	
17	Connector Assy	PF07PP-D07	47	Nut M12	DBN1018	
18	Connector Assy	PF06PP-D05	48	Nut (M12)	NKX2FNI	
19	Connector Assy	PF03PP-B05	49	Nut	NK90FTC	
20	Connector Assy	PF03PP-B07	50	Screw	AMZ26P040FTC	C
21	Chassis	DNA1477	51	Screw	BBZ30P060FTB	
22	Holder	VEC1355	52	Screw	BBZ30P060FTC	
23	Cushion	DEC3177	53	Screw	BBZ30P080FTB	
24	Cable tie	ZCA-SKB90BK	54	Screw	BMZ30P060FTB	
25	Sheet	DEC3618	55	Screw	BPZ30P080FNI	
26	Sheet	DEC3968	56	Screw	BPZ30P080FTB	
27	Shield Case	DNF2075	57	Screw	BPZ30P100FTB	
28	Shield Case	DNF2076	58	Screw (FE)	DBA1290	
29	Shield Case	DNF2077	59	Screw (M3*5)	DBA1340	D
NSP 30	PCB Holder	PNW1706	60	Screw	IBZ30P080FTB	
			61	Screw	PMH40P080FTC	
			62	Screw	PPZ30P080FTB	



(2) CONTRAST TABLE

DJM-S11 and DJM-S11-SE are constructed the same except for the following:



Mark	No.	Symbol and Description	DJM-S11	DJM-S11-SE
	1	MAIN Assy	DWX4415	DWX4513

9.4 CONTROL PANEL (1/2) SECTION

A • Bottom view

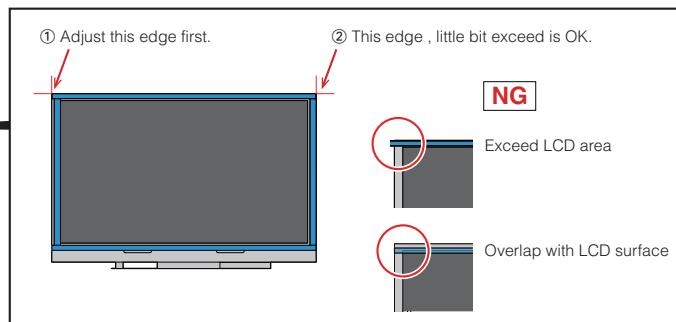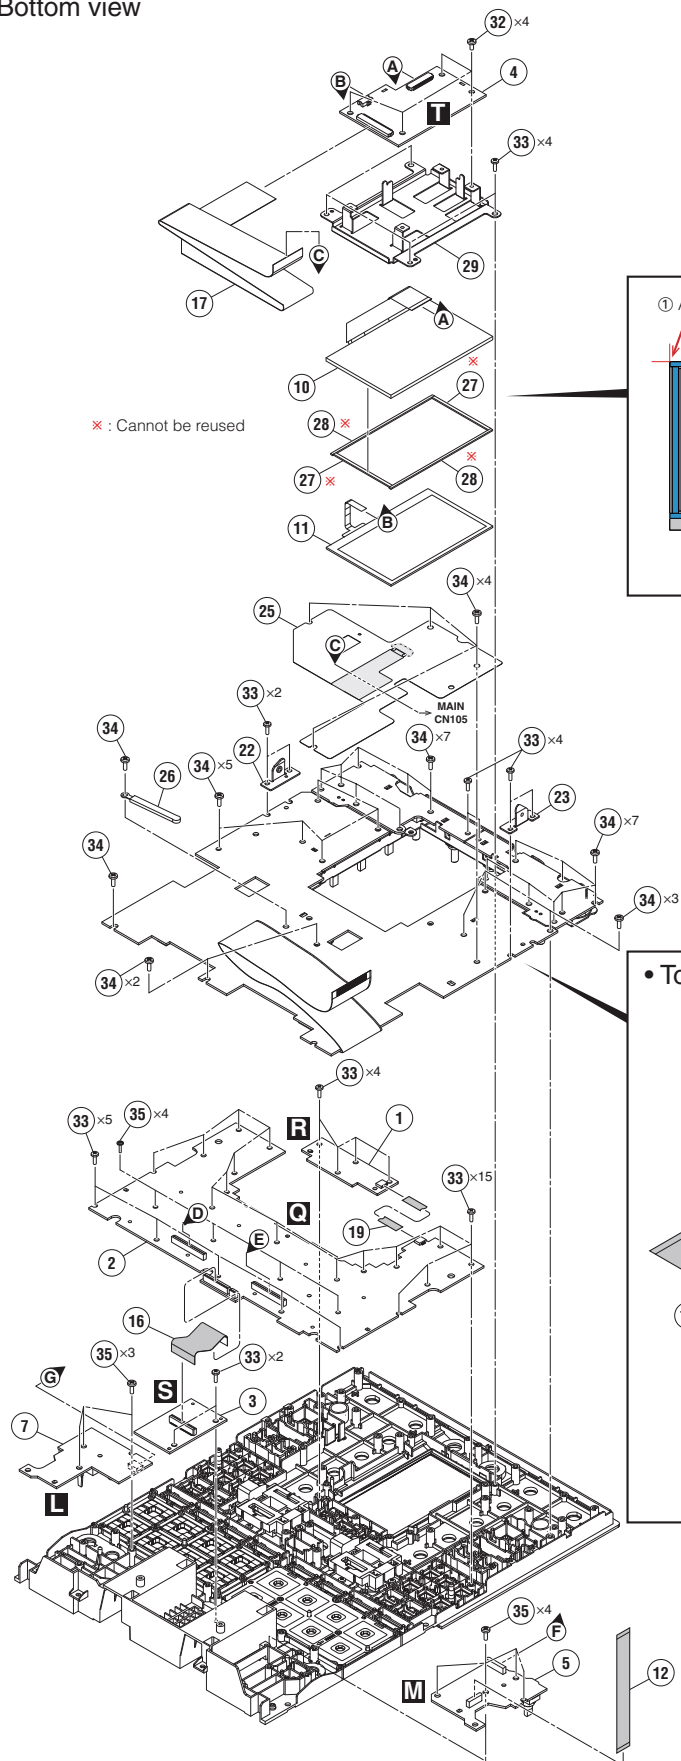

• Top view

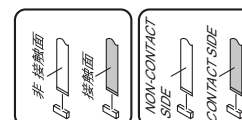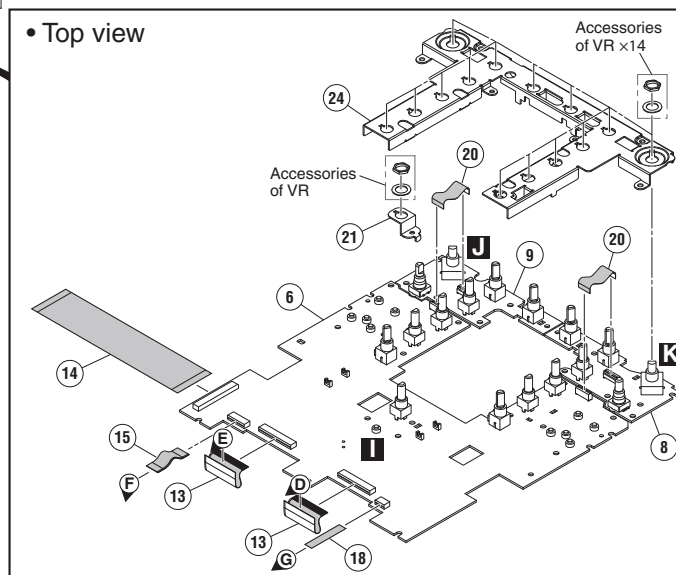

9.5 CONTROL PANEL (2/2) SECTION

A • Bottom view

Refer to "7. DISASSEMBLY"



Lubricating oil

B


C

D


E

F


• Layout position

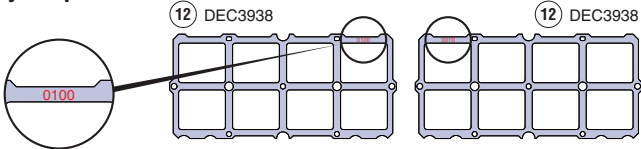



Printed thickness value

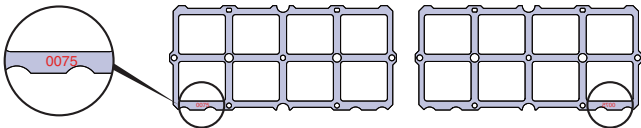


Position when stacked

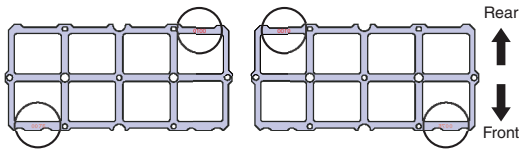


⇒: Front side

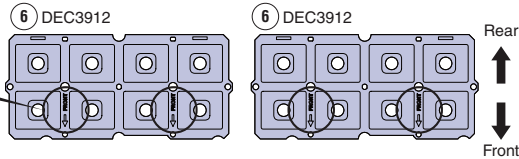

• Cut position

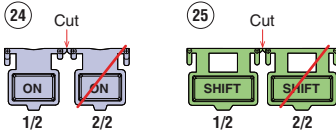

• Top view

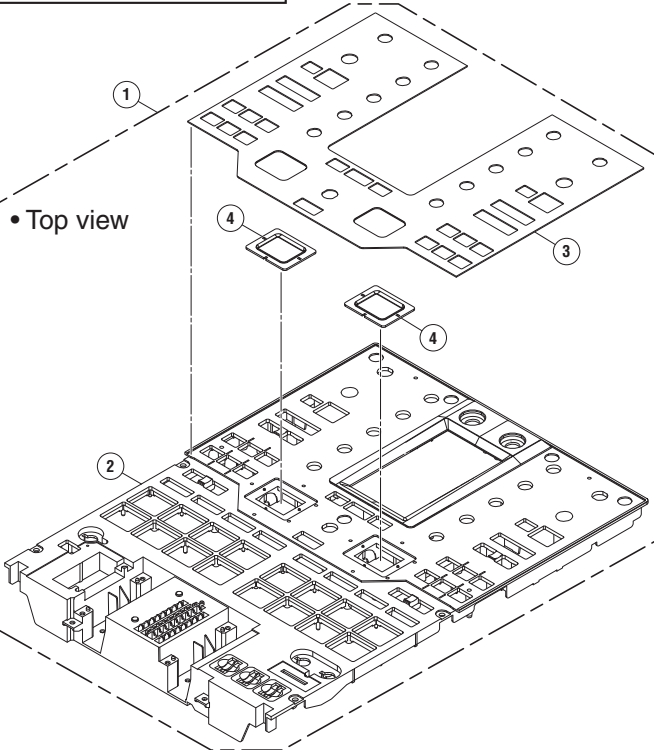

(1) CONTROL PANEL (2/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	1..Service Panel Assy	See Contrast table (2)	16	Button	DAC3576
2	2..Panel	See Contrast table (2)	17	Button	DAC3529
3	2..Panel	See Contrast table (2)	18	Button	DAC3530
4	2..Panel	See Contrast table (2)	19	Button	DAC3531
5	Sheet	DEC3910	20	Button	DAC3532
6	Sheet	DEC3912	21	Button	DAC3533
7	Spacer	DEC3913	22	Button	DAC3094
8	Lever Spring	DBH1702	23	Button	DAC3535
9	Lever Cap	DNK5344	24	Button	DAC3536
10	Holder	DNK6923	25	Button	DAC3537
11	Packing/LCD	DEC3565	26	Lever	DAC3081
12	Spacer	DEC3938	27	Screw	BPZ26P080FTC
13	Button	DEB2079			
14	Button	DAC3528			
15	Button	DAC3090			

(2) CONTRAST TABLE

DJM-S11 and DJM-S11-SE are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S11	DJM-S11-SE
	1	Service Panel Assy	DEA1105	DEA1106
	2	Panel	DNK6919	DNK6977
	3	Panel	DNK6920	DNK6978
	4	Panel	DNK6436	DNK6979


9.6 CHANNEL FADER and CROSSFADER SECTIONS

• Crossfader Section

Refer to "7. DISASSEMBLY"



Lubricating oil

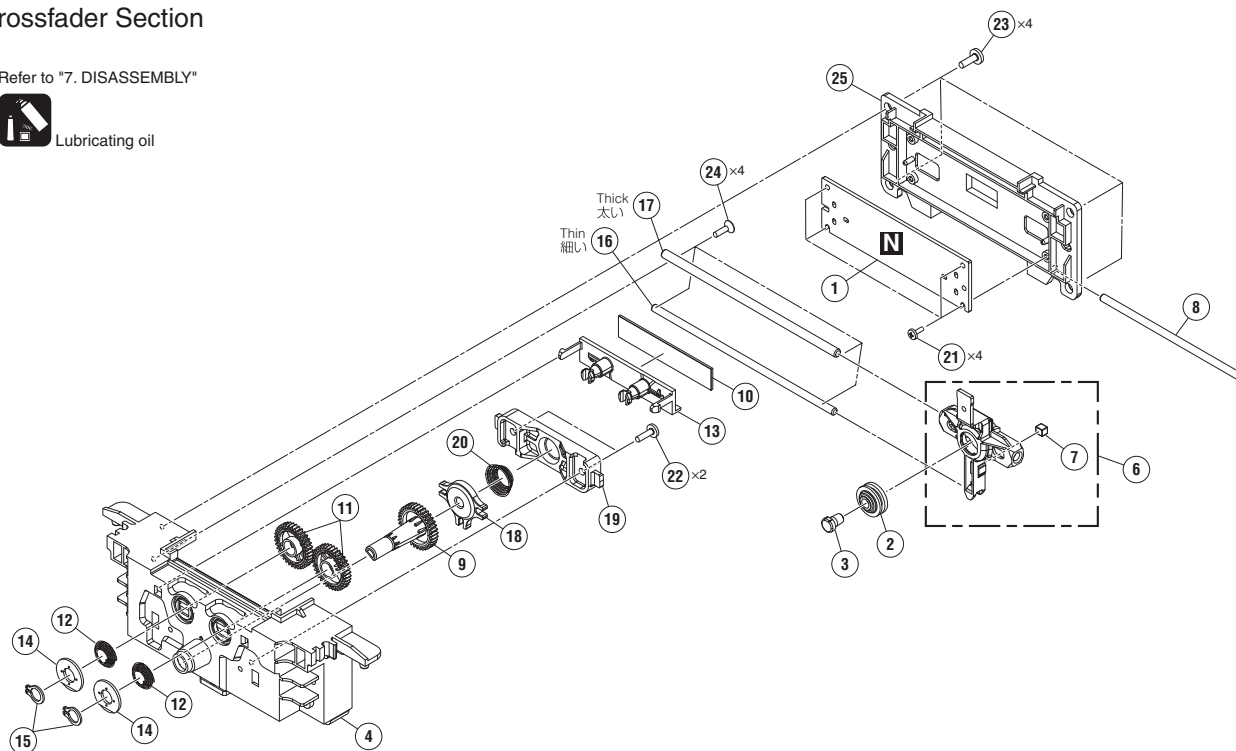


• Channel fader Section

Refer to "7. DISASSEMBLY"



Lubricating oil

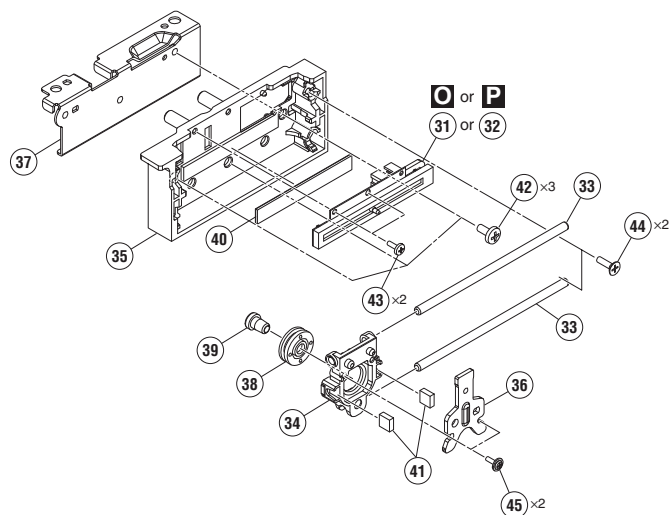

CHANNEL FADER and CROSSFADER SECTIONS PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
Crossfader Section			
	1 CRFD Assy	DWX4418	A
	2 Damper	DEB2032	
	3 Brake	DNK6427	
	4 Holder	DNK6921	
	5 •••••		
	6 1..Slider Service Assy	DEA1107	■
NSP	7 2..Magnet	DMG1018	
	8 Guide Bar	VLL1514	
	9 Gear	DNK6431	
	10 Felt	DEC3597	B
	11 Gear	DNK6430	
	12 Spring	DBH1809	
	13 Brake	DNK6428	
	14 Bush (MA)	DNK5086	
	15 Washer	YC60FAC	■
	16 Shaft	DLA2240	
	17 Shaft	DLA2274	
	18 Brake	DNK6445	
	19 Plate	DNK6446	
	20 Spring/TRQ	DBH1792	C
	21 Screw	BPZ20P050FTC	
	22 Screw	BPZ26P080FTC	
	23 Screw	BPZ30P080FNI	
	24 Screw	CPZ26P080FTC	■
	25 Holder	DNK6432	
	26 •••••		
	27 •••••		
	28 •••••		
	29 •••••		D
	30 •••••		
CH Fader Section			
	31 C1FD Assy	DWX4416	■
	32 C2FD Assy	DWX4417	
	33 Shaft	DLA2273	
	34 Slider	DNK6426	
	35 Holder	DNK6924	
	36 Lever	DNH3211	E
	37 Stay	DNF2080	
	38 Damper	DEB2032	
	39 Brake	DNK6427	
	40 Felt	DEC3917	■
NSP	41 Cushion	DEC3356	
	42 Screw	BBZ30P060FTC	
	43 Screw	BPZ20P050FTC	
	44 Screw	CPZ26P080FTC	
	45 Screw	IPZ20P050FTC	F

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part.
Therefore, when replacing, be sure to use parts of identical designation.
● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56×10^1 $\rightarrow$ 561 RD1/4PU $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} J$
47 k Ω $\rightarrow$ 47×10^3 $\rightarrow$ 473 RD1/4PU $\begin{bmatrix} 4 \\ 7 \end{bmatrix} \begin{bmatrix} 3 \\ 0 \end{bmatrix} J$
0.5 Ω $\rightarrow$ R50 RN2H $\begin{bmatrix} R \\ 5 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$
1 Ω $\rightarrow$ 1R0 RSIP $\begin{bmatrix} 1 \\ 0 \end{bmatrix} \begin{bmatrix} R \\ 0 \end{bmatrix} K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562×10^1 $\rightarrow$ 5621 RN1/4PC $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 2 \\ 1 \end{bmatrix} F$

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST OF ASSEMBLIES							
NSP	1..	INPUT ASSY	DWM2752	IC	7501,7502		NJM4580MD
	2..	INPUT ASSY	DWX4428	IC	7601		TC74HC4051AF
	2..	HPAMP ASSY	DWX4429	Q	7101,7102,7104,7105		2SK209
	2..	FRVR ASSY	DWX4425	Q	7103,7203,7303,7304		LSCR523UB
	2..	PNLL ASSY	DWX4431	Q	7201,7202,7204,7205		2SK209
				Q	7301,7302,7501-7504		2SK209
	2..	MCSW ASSY	DWX4432	Q	7505-7508,7525-7528		INC2002AC1
NSP	1..	MOTHER ASSY (DJM-S11)	DWM2749	Q	7509,7511,7513,7515		LSCR523UB
NSP	1..	MOTHER ASSY (DJM-S11-SE)	DWM2781	Q	7510,7512,7514,7516		LSAR523UB
	2..	MAIN ASSY (DJM-S11)	DWX4415	Q	7517,7519,7521,7523		2SD1767
	2..	MAIN ASSY (DJM-S11-SE)	DWX4513	Q	7518,7520,7522,7524		2SB1189
	2..	TAPB ASSY	DWX4433	D	7105,7205,7501-7508		1SS355L@V
NSP	1..	PAD ASSY	DWM2750	D	7601		LTL17KRH5D-P
	2..	PADB ASSY	DWX4419	MISCELLANEOUS			
	2..	C1FD ASSY	DWX4416	L	7301,7401 CHIP SOLID INDUCTOR		XTL3010
	2..	C2FD ASSY	DWX4417	JA	7101,7201 4P PIN JACK		DKB1090
	2..	CRFD ASSY	DWX4418	JA	7301 XLR SOCKET		DKB1124
				JA	7351 RCA JACK		DKB1122
	2..	LVM T ASSY	DWX4423	RY	7101,7201 RELAY		DSR1023
	2..	LCDB ASSY	DWX4420	S	7001 PUSH SW		ASG1102
	2..	USBA ASSY	DWX4421	S	7601-7604 SLIDE SWITCH		DSH1066
	2..	SPVR ASSY	DWX4422	S	7701 ENCODER SW		DSX1080
NSP	1..	PANEL ASSY	DWM2751	S	7702 ROTARY SWITCH		DSG1099
	2..	PNLB ASSY	DWX4424	S	7801 LEVER SWITCH		DSK1055
	2..	HPJK ASSY	DWX4426	CN	7001 15P CONNECTOR		VKN1275
	2..	HPFD ASSY	DWX4427	CN	7002 29P CONNECTOR		VKN1289
	2..	PNLR ASSY	DWX4430	CN	7003 L-PLUG(7P)		KM200NA7L
$\triangle$	1..	SW POWER SUPPLY	DWR1548	CN	7004,7602-7604 L-PLUG(3P)		KM200NA3L
				CN	7401,7701 11P CONNECTOR		VKN1242
				CN	7402,7403,7408 PLUG(3P)		KM200NA3
				CN	7404 23P CONNECTOR		VKN1254
				CN	7405 9P CONNECTOR		VKN1824
				CN	7406 PLUG(5P)		KM200NA5
				CN	7407 PLUG(6P)		KM200NA6
				CN	7601 9P CONNECTOR		VKN1852
				JP	7001 CONNECTOR ASSY		PF03GG-B05
				JP	7801 CONNECTOR ASSY		PF03PG-B10
				VA	7101-7105,7201-7205 VARISTORS		EZJZ1V270RM
				VA	7301-7306,7351-7353 VARISTORS		EZJZ1V270RM
INPUT ASSY				RESISTORS			
SEMICONDUCTORS				R	7101,7102,7201,7202		RN1/16SE1500D
	IC	7101,7103-7105,7201	NJM4580MD	R	7103,7104,7203,7204		RS1/10SR1000D
	IC	7102,7202	NJM4585M	R	7107,7108,7117,7118		RS1/10SR4702D
	IC	7203-7205,7301,7351	NJM4580MD	R	7111-7114,7211-7214		RN1/16SE1201D
	IC	7401	NJM4565MD	R	7119,7121,7123,7124		RN1/16SE1501D

Mark No. Description**Part No.****Mark No. Description****Part No.**

A

IC 2103,3003 TC74VHC74FK
 IC 3001,3002 CS5381-KZ
 IC 3004,3005 NJM8080RB1S1
 IC 3201,3301 AK5358AET
 IC 3401 ES9016K2M@V
 IC 3405-3408,3411 NJM4580MD
 IC 3409,3410 NJM4585M
 IC 3601,3801 AK4387ET

JA 3601,3602 6.5 DIA JACK DKN1669
 KN101-111 WRAPPING TERMINAL CKF1089
 S 3901-3903 PUSH SWITCH CSG1155
 X 1401 CRYSTAL OSCILLATOR (24 MHz) CWX4280
 X 1601,1602 RESONATOR (24.000 MHz) CSS1773

X 2101 CRYSTAL OSCILLATOR (24.576 MHz) ASS7102
 CN101 CONNECTOR DKN1666
 CN102 CONNECTOR AKM1277
 CN103 23P CONNECTOR VKN1427
 CN104 39P CONNECTOR VKN2097

IC 3602-3604,3802 NJM4580MD
 Q 101 LTC043EEB
 Q 102 LTC124EUB
 Q 103,106,107,404 2SC4154-11
 Q 104,402,403,607 LTC024EEB

CN105 FFC/FPC CONNECTOR CKS6543
 CN106 15P CONNECTOR VKN1419
 CN107 29P CONNECTOR VKN1433
 CN108 CONNECTOR AKM1278
 CN109 CONNECTOR AKM1281

B

Q 105 LSC4081UB
 Q 108,109,611,612 ISA1602AM1
 Q 110,608-610 LTC023JEB
 Q 111,112,114 HN1A01FUS1
 Q 113,115 HN1C01FUS1

CN3901 04P CONNECTOR RKN1045
 VA 3401-3408,3601-3605 VARISTORS EZJZ1V270RM

RESISTORS

Q 401 2SB1689
 Q 402,403 RN1103S1
 Q 405 2SC4154-11
 Q 411,412 RN1903S1
 Q 601 RSR020P05

R 167,414 RS1/16SS3302D
 R 168 RS1/16SS2401D
 R 205,206,208,209 RS1/16SS1002D
 R 212,215,219,227 RS1/16SS1002D
 R 213,220 RS1/16SS2002D

C

Q 602 RSQ045N03
 Q 603 LTC014EEB
 Q 604 RSQ035P03
 Q 605,606 RSQ030P03
 Q 613,1603,3304,3401 LTC024EEB

R 221,226 RS1/16SS1802D
 R 222 RS1/16SS2702D
 R 223 RS1/16SS4702D
 R 224,642 RS1/16SS2202D
 R 231,1910,1911,3613 RS1/10SR0R0J

Q 614,615 2SB1188
 Q 1602,3303,3403,3404 LTA024EEB
 Q 3301,3302,3405-3418 INC2002AC1
 Q 3402 LTC024EEB
 Q 3601-3608 INC2002AC1

R 401,426,1202,1203 RS1/16SS1001D
 R 413 RS1/16SS4302D
 R 415,601,605,623 RS1/16SS1502D
 R 416,420,625 RS1/16SS8201D
 R 417 RS1/16SS1102D

D

D 102 RB160M-30
 D 104-106,109,110 1SS355L@V
 D 107,108,111 DAN202UM
 D 112-115,608,3601 1SS355L@V
 D 403 UDZV5R1

R 418 RS1/16SS5600F
 R 419,422,425 RS1/16SS2201D
 R 423,1627,1669 RS1/16SS6801D
 R 427 RS1/16SS3301D
 R 428,602,606,626 RS1/16SS1002D

D 603,606,611,614 RB162MM-40TF
 D 604,605 RB501VM-40
 D 609,613,3402 RB551VM-30
 D 3001-3008 DAN217UM
 D 3201,3301,3302 RB548W

R 430-432 RS1/4SA560J
 R 438 RS1/10SR221J
 R 441 RS1/16SS4701D
 R 442 RS1/16SS1202D
 R 443,444 RS1/16SS2701D

MISCELLANEOUS

L 401,405 CHOKE COIL (22 uH) CTH1561
 L 402 INDUCTOR CTH1253
 L 403 INDUCTOR CTH1619
 L 404,603,604 POWER INDUCTOR ATH7011
 L 601,602 SMD SPL INDUCTOR CTH1533

R 455,456,668 RS1/10SR472J
 R 457,458 RS1/10SR331J
 R 603 RS1/16SS1803D
 R 604 RS1/16SS5101D
 R 607,608 RS1/10SR6200D

L 801-803 SMD SPL INDUCTOR CTH1531
 L 1601,1602,1607,1618 COIL ATH7015
 L 1616,1617 CHOKE COIL DTH1219
 L 1801 CHIP SOLID INDUCTOR QTL1013
 L 1802 SMD FERRITE BEADS CTF1823

R 609,3415,3418 RS1/10SR75R0D
 R 610 RS1/10SR1200D
 R 611,619,639 RS1/16SS3002D
 R 612,620,640 RS1/16SS6802D
 R 615,617 RS1/10SR220J

L 1803 POWER INDUCTOR ATH7011
 F 1601-1604 EMI FILTER CCG1352
 JA 1601,1602 USB CONNECTOR DKN1237
 JA 3401,3402 CANON CONNECTOR DKB1093
 JA 3403 RCA JACK DKB1120

R 618,647 RS1/10SR105J
 R 622 RS1/16SS9101D
 R 624 RS1/16SS1503D
 R 629,631,3455-3458 RS1/10SR103J
 R 632,637,654 RS1/16SS1002D

R 633 RS1/16SS5601D

5			6			7			8				
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.		Mark	No.	Description	Part No.	
	R 634		RS1/16SS5102D		C 116 (1 uF)		DCE1030						
	R 636		RS1/16SS1502D		C 117,128,441,446		0402B103K160CT						
	R 643,646,3515-3518		RS1/10SR100J		C 118,122 (150 uF/16 V)		DCH1356						A
	R 648		RS1/16SS1203D										
	R 649		RS1/16SS2703D		C 125		CEVW331M35						
	R 651		RS1/16SS6201D		C 130,131		0402B103K250CT						
	R 652		RS1/16SS3001D		C 137		CKSSYB104K16						
	R 653		RS1/16SS6202D		C 137,139,142,146		0402B104K160CT						
	R 667		RS1/16SS1000D		C 140,141,143,144		0603B104K250CT						
	R 674		RS1/16SS10R0D		C 145,662 (10 uF)		ACG7115						
	R 679		RS1/4SA2R2J		C 148-150,174,176		0402B104K160CT						
	R 1201		RS1/16SS49R9F		C 175,177,185		CC0402KRX7R9BB102						
	R 1206		RS1/16SS2400F		C 187,2103,2106		CCSSCH102J50						
	R 1601,1666		RS1/8SQ0R0J		C 401-405,407-409		0805X106K250CT						
	R 1705		RS1/10SR102J		C 406,602,615,616		CC0805KKX7R8BB105						B
	R 2121		RG1608Q100D@V		C 410-413,479,485		0402B104K160CT						
	R 3019,3020		RS1/10SR5R1J		C 414-417,440		CC0402KRX7R9BB102						
	R 3301,3302,3414,3417		RS1/10SR3301D		C 422-425,432-437		0402B104K250CT						
	R 3303,3304		RS1/10SR1802D		C 426,471,473,626		0402X105K250CT						
	R 3305,3306		RS1/10SR8200D		C 429-431,484		CC0402KRX7R7BB153						
	R 3413,3416		RS1/10SR1002D		C 438		CC0402KRX7R9BB222						
	R 3420,3422,3424,3426		RG1608P821D@V		C 439,677		CC0402JRNPO9BN561						
	R 3427,3428,3433,3434		RS1/10SR513J		C 450,685,702		CC0603KRX5R6BB225						
	R 3435-3438,3443-3446		RS1/10SR223J		C 452-454,456,480		CC0402KRX7R9BB102						
	R 3439-3442		RS1/10SR1201D		C 457-459,461,482		0402B104K250CT						C
	R 3447-3450,3609,3610		RS1/10SR3601D		C 462,466,491,492 (10 uF)		CCG1192						
	R 3451-3454		RS1/10SR3902D		C 463-465,467,631		CC0603KRX5R5BB106						
	R 3459-3462,3475-3482		RS1/10SR3901D		C 469,655,663 (47 uF/16 V)		CCH1961						
	R 3467-3470		RS1/10SR2200D		C 483,490,653,658		0402B104K250CT						
	R 3483-3488,3497,3498		RS1/10SR3301D		C 486,1807,1808		0402N471J500CT						
	R 3489-3496		RS1/10SR6801D		C 489,607,608,642		CC0402KRX7R9BB102						
	R 3499,3500,3503,3504 (330 ohm)		DCN1200		C 496,497,659,668		0402B103K160CT						
	R 3501,3502		RS1/10SR3300D		C 498-501,511,686 (10 uF)		CCG1192						
	R 3505-3508,3618-3625		RS1/10SR2201D		C 504,508 (4.7 uF)		ACG7114						
	R 3509-3514		RS1/10SR183J		C 505,644,673		0402B104K160CT						
	R 3519,3520		RS1/10SR104J		C 601,636,650		CC0805KKX7R9BB334						D
	R 3521,3522,3606-3608		RS1/10SR100J		C 603		0402N271J500CT						
	R 3612,3614,3815,3817		RS1/10SR2202D		C 605		CC0402KRX5R7BB225						
	R 3615,3616,3631-3638		RS1/10SR5601D		C 609,610,3303		CC0402KRX7R8BB103						
	R 3617,3651,3809		RS1/10SR100J		C 612,613,638,639		CC0603KRX7R8BB104						
	R 3626		RS1/10SR473J		C 614		0603B473K500CT						
	R 3639-3642 (330 ohm)		DCN1200		C 619,630,674,684		0805X106K250CT						
	R 3643,3645		RS1/10SR3901D		C 620,621,648,649		CEHVAV101M25						
	R 3644,3646		RS1/10SR2701D		C 623		CC0402JRNPO9BN221						
	R 3647-3650		RS1/10SR222J		C 624,625 (0.47 uF)		ACE7114						
	R 3653-3657,3807,3810		RS1/10SR0R0J		C 627,680,681		0402X105K250CT						
	R 3812,3813		RS1/10SR5101D		C 629,645,646,651		CC0805KKX7R8BB105						E
	R 3818,3819		RS1/10SR5601D		C 635		CC0402KRX7R7BB223						
	R 1629 (DJM-S11 only)	RS1/16SS103J			C 637,664,691,1602		CC0402JRNPO9BN101						
	R 1628 (DJM-S11-SE only)	RS1/16SS102J			C 640,641 (10 uF)		CCG1236						
	Other Resistors		RS1/16SS###J		C 643,660,698,699		CC0402KRX7R9BB102						
CAPACITORS					C 656,3026,3027		CC0603KRX7R8BB104						
	C 101,102,105,107		0402B104K160CT		C 657		CEHVW470M25						
	C 104,493,502,503 (100 uF/16 V)		CCH1565		C 661,700,701,709		0402B104K250CT						
	C 108		CCSSCH101J50		C 665		0603X474K250CT						
	C 109,111,123,126		0402B104K160CT		C 666		CC0603KRX7R6BB334						
	C 110,134,135		0402B102K500CT		C 668,1835		CKSSYB103K16						
	C 112,512,652 (0.01 uF)		ACE7113		C 683		CC0805KKX7R8BB105						F
	C 114 (0.1 uF)		ACE7100		C 689		CC0402JRNPO9BN820						
					C 692-694,1403,1621		0402B104K160CT						

Mark	No.	Description	Part No.
A	C	695,696,803-809 (10 uF)	CCG1192
	C	697,710,812-815	0402B103K160CT
	C	703,704,3602,3603	CEVW101M16
	C	801,802,810,811	0402B104K250CT
	C	816,817,833,834 (10 uF)	CCG1192
	C	818,826,830,836	0402B104K250CT
	C	819-825,827-829	0402B103K160CT
	C	831,832,835	0402B103K160CT
B	C	837-841,843	0402B103K160CT
	C	842,844,848,852	0402B104K250CT
	C	845-847,849-851	0402B103K160CT
	C	853,866-873,876	0402B103K160CT
	C	854-861,888	0402B104K250CT
	C	862-864,899,1201	0402X105K250CT
	C	874,875,884,886 (10 uF)	CCG1192
	C	877,1001,1002,1404	0402B103K160CT
	C	878-880,883,885	0402X225K160CT
	C	881,882,887,891	CC0603KRX5R5BB475
	C	889,893,894,897 (10 uF)	CCG1192
	C	890,892,896	0402X225K160CT
C	C	895,3420	CC0603KRX5R5BB475
	C	898,1864 (680 uF/6.3 V)	DCH1360
	C	1202,1426,1641,1687	0402X105K250CT
	C	1203-1207,1220,1401	0402B104K250CT
	C	1208,1606,1607,1650 (10 uF)	CCG1192
	C	1209-1219	0402B224K160CT
	C	1402,1604,1605,1623	CC0402KRX7R9BB102
	C	1405-1408	0402B472K500CT
	C	1413,1427,1428,1601	0402B104K250CT
	C	1420,1421,1429,1430	0402B103K160CT
	C	1603,1646,1647,1840	CC0402JRNPO9BN101
	C	1608-1610,1614,1617	0402B104K250CT
D	C	1611-1613,1616,1619	0402B103K160CT
	C	1615,1659	CC0402JRNPO9BN120
	C	1618,1664	0402N150J500CT
	C	1620,1625,1627,1631	0402B104K250CT
	C	1622,1668	CC0402JRNPO9BN470
	C	1624,1626,1630,1632	0402B103K160CT
	C	1634,1637,1639,1644	CC0402KRX7R9BB102
	C	1635,1638,1640,1642	0402B104K250CT
	C	1636,1655-1657,1660	0402B103K160CT
	C	1643,1652-1654,1658	0402B104K250CT
	C	1645,1648,1649,1669	CC0402KRX7R9BB102
	C	1651,1801-1804,1845 (10 uF)	CCG1192
E	C	1661,1666,1671,1673	0402B104K250CT
	C	1665,1670,1672,1676	0402B103K160CT
	C	1667,3001,3008,3009	0402B104K160CT
	C	1677,1681,1684,1686	0402B104K250CT
	C	1678,1682,1690-1693	0402B103K160CT
	C	1680,1683,1685,1810	CC0402KRX7R9BB102
	C	1696,1697	0402N7ROC500CT
	C	1698,1700,1805,1806	0402B104K250CT
	C	1699,1701,1809,1811	0402B103K160CT
	C	1710,1711,1842,1865	0402X105K250CT
	C	1812,1815,1817,1819	CC0402KRX7R9BB102
	C	1814,1816,1818,1820	0402B103K160CT
F	C	1821,1824,1826,1828	CC0402KRX7R9BB102
	C	1822,1823,1825,1827	0402B103K160CT
	C	1829,1831,1833,1835	0402B103K160CT

Mark	No.	Description	Part No.
	C	1830,1832,1834,1836	CC0402KRX7R9BB102
	C	1837-1839,1841	0402B103K160CT
	C	1843,1844,2101,2104	0402B104K250CT
	C	1846,3002,3003,3201 (10 uF)	CCG1192
	C	1849-1863,3004,3005	0402B103K160CT
	C	2107,2111,2112,3477	CC0402KRX7R9BB102
	C	2108-2110,2113,2114	0402B104K250CT
	C	3010-3015,3213,3315	0402B103K160CT
	C	3016-3019	CC0603JRNPO9BN222
	C	3020,3022 (330 uF/25 V)	DCH1354
	C	3021,3023-3025 (100 uF/16 V)	CCH1565
	C	3028,3029,3032,3033	0402N102J500CT
	C	3030,3031,3202,3206	0402B104K250CT
	C	3034,3035	CC0603KRX7R9BB103
	C	3044,3046,3048,3203	0402N102J500CT
	C	3045,3047,3049,3212	0402B104K160CT
	C	3204	CEVW470M6R3
	C	3205,3306,3307	CEVW220M16
	C	3207,3210,3211,3216	0402N102J500CT
	C	3208,3301,3310 (10 uF)	CCG1192
	C	3209,3302,3308,3311	0402B104K250CT
	C	3217,3314,3319,3478	0402B104K160CT
	C	3304,3309,3312,3313	0402N102J500CT
	C	3305	CEHVAW470M6R3
	C	3318,3407-3409,3483	0402N102J500CT
	C	3401-3403,3606,3610	0402B104K250CT
	C	3404-3406	CC0402KRX7R8BB103
	C	3410-3412,3427-3430	CC0603KRX7R8BB104
	C	3416-3418 (47 uF/16 V)	CCH1961
	C	3419,3601,3801	0402B103K160CT
	C	3421,3422	CC0603KRX5R8BB105
	C	3423-3426 (2 200 pF)	ACE7121
	C	3431,3432 (100 uF/25 V)	CCH2000
	C	3437-3440,3449-3451	CC0603KRX7R8BB104
	C	3441-3444,3643-3646 (4 700 pF)	ACE7115
	C	3452-3455,3458-3461	CC0603JRNPO9BN101
	C	3456,3457,3462,3615	CC0603KRX7R8BB104
	C	3463-3466 (470 uF/16 V)	CCH1680
	C	3467,3468	CEVW101M25
	C	3469-3474 (470 pF)	ACE7119
	C	3479,3647	CC0402KRX7R9BB102
	C	3480,3484,3486,3488	0402B104K160CT
	C	3485,3487,3489,3608	0402N102J500CT
	C	3490,3609,3648,3819	0402B104K160CT
	C	3604	CEVW220M6R3
	C	3605,3607	0603N182J500CT
	C	3611,3635-3638,3809	CEVW101M16
	C	3612,3613,3627-3634	CC0603JRNPO9BN101
	C	3614,3617	CEVW470M25
	C	3616,3623-3626	CC0603KRX7R8BB104
	C	3653,3818,3825	0402N102J500CT
	C	3802	CEHVAW220M6R3
	C	3803,3806,3816,3817	0402B104K250CT
	C	3810,3811	CEVW470M16
	C	3812,3813	CC0603JRNPO9BN102
	C	3814,3815	CC0603JRNPO9BN101
	C	3826	0402B104K160CT

Mark	No.	Description	Part No.
PAD ASSY			
Consists of			
PADB ASSY			
C1FD ASSY			
C2FD ASSY			
CRFD ASSY			
LVMT ASSY			
LCDB ASSY			
USBA ASSY			
SPVR ASSY			

DMNOPQRT

PAD ASSY

SEMICONDUCTORS			
IC	4101		DYW2203
*Part number of the initial firmware equipped			
IC	4201-4203		TC74HC151AF
IC	4801,4802		EQ-730L
IC	4803		NJM12904V
IC	5501-5503		74LCX541FT
Q	4101		RT3T22M
Q	4301-4303,4307-4311		HN1A01FUS1
Q	4304-4306,4316-4318		LTC014YEB
Q	4312,4324,4336,4348		2SB1689
Q	4313-4315,4319-4323		HN1A01FUS1
Q	4325-4327,4331-4335		HN1A01FUS1
Q	4328-4330,4340,4341		LTC014YEB
Q	4337-4339,4342,4343		HN1A01FUS1
Q	4344,4349,4350		LTC014YEB
Q	4345-4347,4351,4352		HN1A01FUS1
Q	4353-4361,4402-4410		LTC023JEB
Q	4362-4364,4368-4372		HN1A01FUS1
Q	4365-4367,4377,4378		LTC014YEB
Q	4373,4382,4391,4400		2SB1689
Q	4374-4376,4379-4381		HN1A01FUS1
Q	4383-4385,4388-4390		HN1A01FUS1
Q	4386,4387,4392,4396		LTC014YEB
Q	4393-4395,4397-4399		HN1A01FUS1
Q	4401		LTC014YEB
Q	4901,4902,4905,4906		LTC023JEB
Q	4903,4904,4907,4908		2SAR502UB
Q	4909,4910,4913,4914		LTC023JEB
Q	4911,4912,4915,4916		2SAR502UB
Q	4917-4926		LSCR523UB
Q	5501		LTC043EEB
D	4301-4303,4308-4310		NSSM124F-A21107
D	4304-4307,4311,4312		SMLE12BC7T
D	4313-4315,4318-4320		NSSM124F-A21107
D	4316,4317,4321-4324		SMLE12BC7T
D	4325-4327,4329-4331		NSSM124F-A21107
D	4328,4332,4336,4340		SML-D12V8W
D	4333-4335,4337-4339		NSSM124F-A21107
D	4901,4921		FC-1608SXXK630D08
D	4902,4912,4922,4931		SML-D12V8W
D	4903-4906,4913-4916		SML-D12Y8W
D	4907-4910,4917-4920		SML-D12M8W(NP)
D	4923-4926,4932-4935		SML-D12Y8W
D	4927-4930,4936-4939		SML-D12M8W(NP)
D	5201		NSSM124F-A21107
D	5504,5505,5507-5512		1SS355L@V

Mark	No.	Description	Part No.
D	5701-5706		EZAEG2N50A
MISCELLANEOUS			
L	4001	POWER INDUCTOR	ATH7011
L	5510	INDUCTOR	CTF1639
L	5525	CHIP BEEDS FILTER	BTX1047
JA	5701,5702	USB JACK	DKB1129
KN	5501	WRAPPING TERMINAL	CKF1089
KN	5701	SCREW PLATE	VNE1948
S	4201-4205,4207-4209	PUSH SWITCH	CSG1155
S	4206,4210,4217,4221	TACT SWITCH	DSG1134
S	4211-4216,4218-4220	PUSH SWITCH	CSG1155
S	4222-4224,5201	PUSH SWITCH	CSG1155
X	4101	CRYSTAL RESONATOR (16 MHz)	BSS1146
CN	4001,4002	31P CONNECTOR	VKN1435
CN	4003	04P CONNECTOR	RKN1045
CN	4004,4901	23P CONNECTOR	VKN1427
CN	4601,4701,4801	CONNECTOR	AKM1274
NSP	CN 5201	CONNECTOR	CKS3856
NSP	CN 5202	CONNECTOR	CKS3852
	CN 5203	PLUG(3P)	KM200NA3R
	CN 5204	PLUG(3P)	KM200NA3
	CN 5205	PLUG(3P)	KM200NA3Y
	CN 5501	FFC/FPC CONNECTOR	CKS6646
	CN 5502	FFC/FPC CONNECTOR	CKS6644
	CN 5503	FFC/FPC CONNECTOR	CKS6625
	CN 5701	CONNECTOR	AKM1296
	VA 4801,4802,5201,5202	VARISTORS	EZJZ1V270RM
	VA 5204-5206,5208	VARISTORS	EZJZ1V270RM
RESISTORS			
R	4101,4102,4106-4108		RAB4CQ101J
R	4111,4118,4122,4125		RAB4CQ101J
R	4113		RS1/10SR105J
R	4127-4131		RAB4CQ101J
R	4307-4309,4337-4339		RS1/10SR180J
R	4316-4318,4350-4352		RS1/10SR330J
R	4328,4358,4388,4418		RS1/10SR151J
R	4329,4330,4359,4360		RS1/10SR101J
R	4367-4369,4397-4399		RS1/10SR180J
R	4380-4382,4412-4414		RS1/10SR330J
R	4389,4390,4419,4420		RS1/10SR101J
R	4433-4435,4463-4465		RS1/10SR180J
R	4446-4448,4473-4475		RS1/10SR330J
R	4454,4479,4504,4529		RS1/10SR151J
R	4455,4456,4480,4481		RS1/10SR101J
R	4472,4491,4516,4532		RS1/10SR181J
R	4488-4490,4513-4515		RS1/10SR180J
R	4498-4500,4523-4525		RS1/10SR330J
R	4505,4506,4530,4531		RS1/10SR101J
R	4601,4602,4701,4702		RS1/10SR0R0J
R	4805		RS1/16SS5102D
R	4807		RS1/16SS1502D
R	4808		RS1/16SS2001D
R	4925		RS1/10SR121J
R	4926-4930		RS1/10SR101J
R	4931-4934		RS1/10SR620J
R	5201		RS1/10SR821J
VR	4601,4701	VARIABLE RESISTOR	CCW1024
VR	5201	ROTARY VR	DCS1117
		Other Resistors	RS1/16SS###J

Mark	No.	Description	Part No.
------	-----	-------------	----------

CAPACITORS

A

C	4001,4002	CEVW221M10
C	4003,4005,4103,4105	0402B104K250CT
C	4101,4102	0805X106K250CT
C	4104,4209-4211,4213	0402N471J500CT
C	4106,4204,4205,4214	0402B103K250CT

C	4107	0402N100J500CT
C	4108,4110,4219,4238	0402B104K250CT
C	4109,5517	0402N120J500CT
C	4111,5509-5513,5515	0402N470J500CT
C	4215,4226,4227,4234	0402B103K250CT

B

C	4221-4223,4225,4231	0402N471J500CT
C	4228-4230,4245,4248	0402N101J500CT
C	4233,4236,4237	0402N471J500CT
C	4235,4246,4247,4254	0402B103K250CT
C	4240-4242,4244,4250	0402N471J500CT

C	4249,4269-4271	0402N101J500CT
C	4252,4253,4256,4262	0402N471J500CT
C	4255,4266,4267,4276	0402B103K250CT
C	4257,4602,4702	0402B104K250CT
C	4263,4265,4268	0402N471J500CT

C

C	4277,5502,5711,5712	0402B103K250CT
C	4601,4701	0402B471K500CT
C	4801-4803,4902,5202	0402B104K250CT
C	4901,5501	CEVW101M16
C	5201,5506-5508,5533 (10 uF)	CCG1192

C	5205,5503-5505,5534	0402B104K250CT
C	5516,5518,5519,5521	0402N470J500CT
C	5522,5525,5527,5528	0402N470J500CT
C	5530,5531	0402N470J500CT
C	5535,5713,5714	0402B102K500CT

C	5536 (10 uF)	CCG1236
C	5537,5538	0603B104K250CT
C	5701,5702	0402N4R0C500CT

D

PANEL ASSY

Consists of

PNLB ASSY

HPJK ASSY

HPFD ASSY

PNLR ASSY

HIKL

PANEL ASSY

SEMICONDUCTORS

E

IC	6101	PST8430N
IC	6102	DYW2202
*Part number of the initial firmware equipped		
IC	6201	TC74HC151AF
IC	6301,6302	TC74HC4051AF
IC	6801	NJM2903M

Q	6101,6201-6204	RT1P241M-11
Q	6401-6408	RT1N237M
Q	6409,6410	HN1A01FUS1
Q	6801	RT1P431M
D	6401-6408	LTL17KSL5D-P

F

D	6409,6410	SLR343BD2T
---	-----------	------------

MISCELLANEOUS

L	6101 CHIP COIL (33 uH)	LCTAW330J2520
---	------------------------	---------------

Mark	No.	Description	Part No.
------	-----	-------------	----------

JA	6601	6.5 DIA JACK	DKN1669
JA	6602	STEREO MINI JACK	XKN3017
KN	6601	SCREW PLATE	VNE1948
S	6201-6211	TACT SWITCH	DSG1079

S	6801	ENCODER SW	DSX1080
S	6802	ROTARY SWITCH	DSG1099
X	6101	CRYSTAL RESONATOR (16.000 MHz)	DSS1149
CN	6001	39P CONNECTOR	VKN2098
CN	6002	15P CONNECTOR	VKN1275

CN	6003,6004	31P CONNECTOR	VKN1291
CN	6005,6701	7P CONNECTOR	VKN1267
CN	6006,6007,6801	11P CONNECTOR	VKN1242
JP	6601	CONNECTOR ASS'Y	PF05PG-D07
PC	6201-6204	PHOTO INTERRUPTER	GP1S094HCZ0F

VA	6601-6606,6704-6706	VARISTORS	EZJZ1V270RM
----	---------------------	-----------	-------------

RESISTORS

VR	6301-6304,6307,6803	ROTARY VR	DCS1078
VR	6305,6306	ROTARY VR	DCS1126
VR	6701	ROTARY VR	DCS1117
VR	6702	VARIABLE RESISTOR	DCV1014
VR	6703	ROTARY VR	DCS1116

VR	6801,6802	ROTARY VR	DCS1104
All Resistors			RS1/10SR###J

CAPACITORS

C	6001,6002	CKSQYB106K6R3
C	6003	0603X105K250CT
C	6004,6103,6124,6126	0603B104K250CT
C	6005,6151,6153	0603N470J500CT
C	6012,6104-6122,6129	0603N471J500CT

C	6101,6102,6123,6125 (10 uF)	DCH1263
C	6127,6134,6144-6149	0603B103K500CT
C	6130,6137,6139,6215	0603N471J500CT
C	6131-6133,6136	0603N222J500CT
C	6135,6138	0603N120J500CT

C	6140,6141,6204,6211	0603B104K250CT
C	6142,6301,6304-6306	0603B102K500CT
C	6214,6217,6219,6302	0603B104K250CT
C	6216,6218,6221-6224	0603N471J500CT
C	6225-6227	0603N101J500CT

C	6303,6307,6309,6310	0603B104K250CT
C	6308,6311,6312	0603B102K500CT
C	6313,6314,6319,6320	0603B104K250CT
C	6315-6318,6321-6324	0603B102K500CT
C	6327-6333	0603B102K500CT

C	6334,6601-6604	0603B104K250CT
C	6605,6607	0603B103K500CT
C	6701-6703,6801-6803	0603B104K250CT
C	6808-6810	0603B104K250CT

U

SW POWER SUPPLY

There is no service parts.