

## 2. EXPLODED VIEWS AND PARTS LIST


NOTES : • Parts marked by " \* " are generally unavailable because they are not in our Master Spare Parts List.

• Screw adjacent to ▽ mark on the product are used for disassembly.

• For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

### 2.1 PACKING(DEH-P760MP,P7600MP)

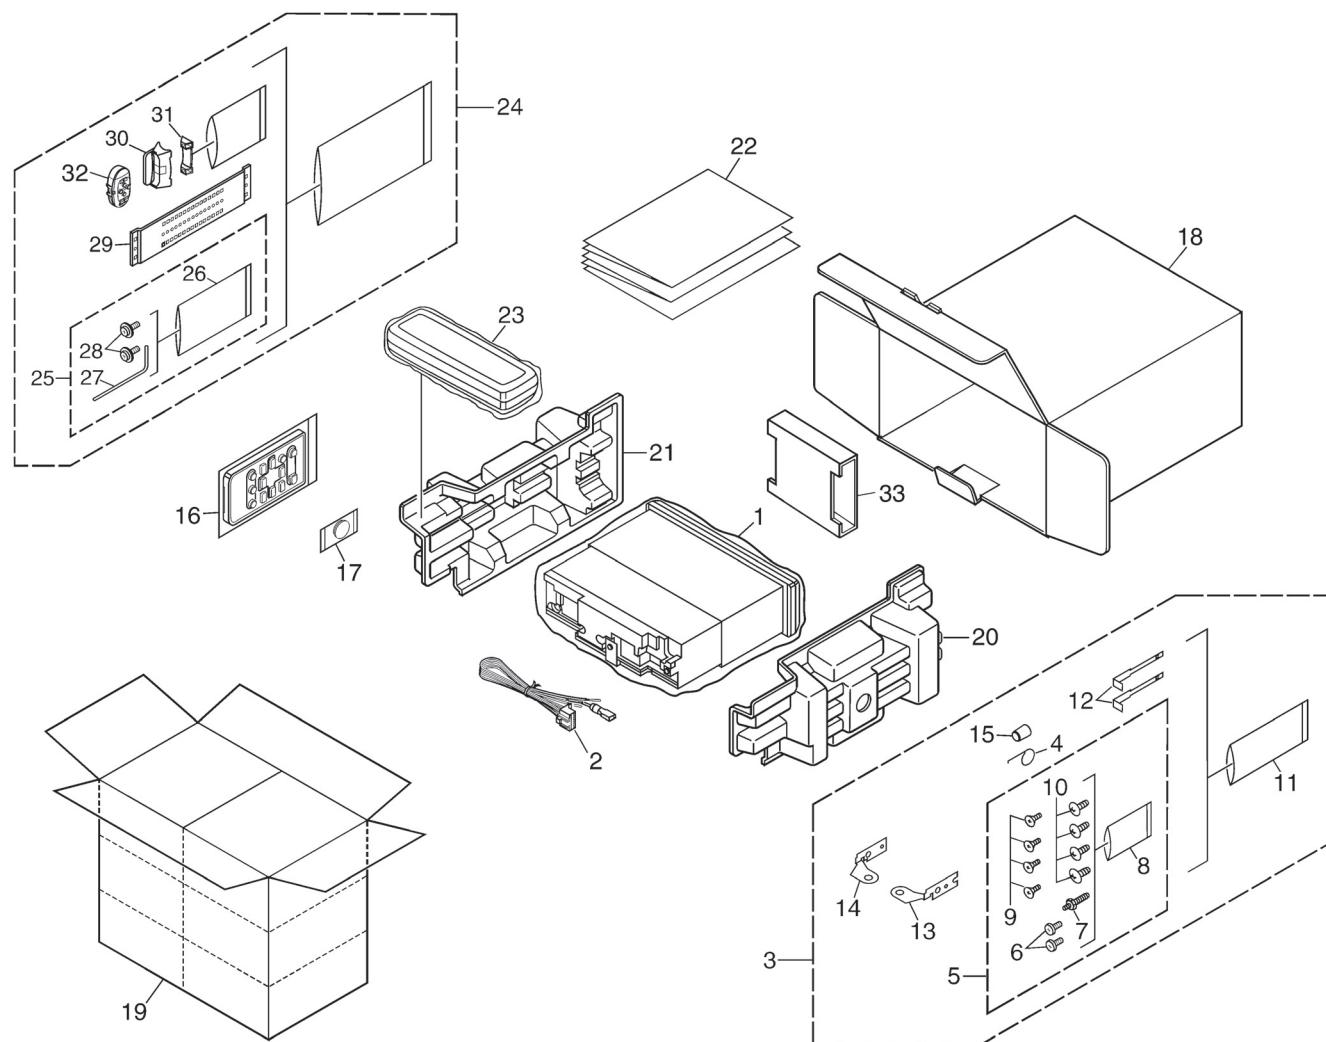

## (1) PACKING(DEH-P760MP,DEH-P7600MP) SECTION PARTS LIST

| Mark No. | Description         | Part No.              | Mark No. | Description         | Part No.              |
|----------|---------------------|-----------------------|----------|---------------------|-----------------------|
| 1        | Polyethylene Bag    | CEG1173               | 21       | Protector           | CHP2664               |
| 2        | Cord Assy           | CDE7154               | 22-1     | Owner's Manual      | See Contrast table(2) |
| 3        | Accessory Assy      | CEA3376               | 22-2     | Installation Manual | See Contrast table(2) |
| 4        | Spring              | CBH1650               | 22-3     | Warranty Card       | See Contrast table(2) |
| 5        | Screw Assy          | CEA3848               | *        | 22-4 Card           | See Contrast table(2) |
| 6        | Fixing screw        | BPZ20P060FZK          | *        | 22-5 Caution Card   | CRP1207               |
| 7        | Screw               | CBA1650               | *        | 22-6 Caution Card   | See Contrast table(2) |
| * 8      | Polyethylene Bag    | CEG-127               | *        | 22-7 Caution Card   | XRP7001               |
| 9        | Screw               | CRZ50P090FTC          | 23       | Case Assy           | CXB3520               |
| 10       | Screw               | TRZ50P080FTC          | 24       | Remote Control Assy | See Contrast table(2) |
| * 11     | Polyethylene Bag    | CEG-158               | 25       | Screw Assy          | See Contrast table(2) |
| 12       | Handle              | CNC5395               | *        | 26 Polyethylene Bag | See Contrast table(2) |
| 13       | Holder              | CND1249               | *        | 27 Hexagonal Wrench | See Contrast table(2) |
| 14       | Holder              | CND1250               | *        | 28 Screw            | See Contrast table(2) |
| 15       | Bush                | CNV3930               | 29       | Belt                | See Contrast table(2) |
| 16       | Remote Control Assy | See Contrast table(2) | 30       | Holder Assy         | See Contrast table(2) |
| * 17     | Battery             | See Contrast table(2) | 31       | Holder Assy         | See Contrast table(2) |
| 18       | Carton              | See Contrast table(2) | 32       | Remote Control Assy | See Contrast table(2) |
| 19       | Contain Box         | See Contrast table(2) | 33       | Inner Box           | XHW7001               |
| 20       | Protector           | CHP2663               |          |                     |                       |

## (2) CONTRAST TABLE


DEH-P760MP/XN/UC and DEH-P7600MP/XN/UC are constructed the same except for the following:

| Mark | NO   | Description         | DEH-P760MP/XN/UC | DEH-P7600MP/XN/UC |
|------|------|---------------------|------------------|-------------------|
| *    | 16   | Remote Control Assy | Not used         | CXC3173           |
|      | 17   | Battery             | Not used         | CEK1065           |
|      | 18   | Carton              | XHG7024          | XHG7025           |
|      | 19   | Contain Box         | XHL7024          | XHL7025           |
|      | 22-1 | Owner's Manual      | XRD7040          | XRD7042           |
| *    | 22-2 | Installation Manual | XRD7041          | XRD7043           |
|      | 22-3 | Warranty Card       | CRY1070          | Not used          |
|      | 22-4 | Card                | Not used         | ARY1048           |
|      | 22-6 | Caution Card        | Not used         | CRP1294           |
|      | 24   | Remote Control Assy | CXB9202          | Not used          |
| *    | 25   | Screw Assy          | CZE3169          | Not used          |
|      | 26   | Polyethylene Bag    | CEG-127          | Not used          |
|      | 27   | Hexagonal Wrench    | CZE3176          | Not used          |
|      | 28   | Screw               | RMZ30H060FBK     | Not used          |
|      | 29   | Belt                | CZN7661          | Not used          |
|      | 30   | Holder Assy         | CZX3172          | Not used          |
|      | 31   | Holder Assy         | CZX3173          | Not used          |
|      | 32   | Remote Control Assy | CZX3257          | Not used          |

### Owner's Manual,Installation Manual

| Part No.                                    | Language               |
|---------------------------------------------|------------------------|
| XRD7040,<br>XRD7041,<br>XRD7042,<br>XRD7043 | English,French,Spanish |


## 2.2 PACKING(DEH-P7650MP)

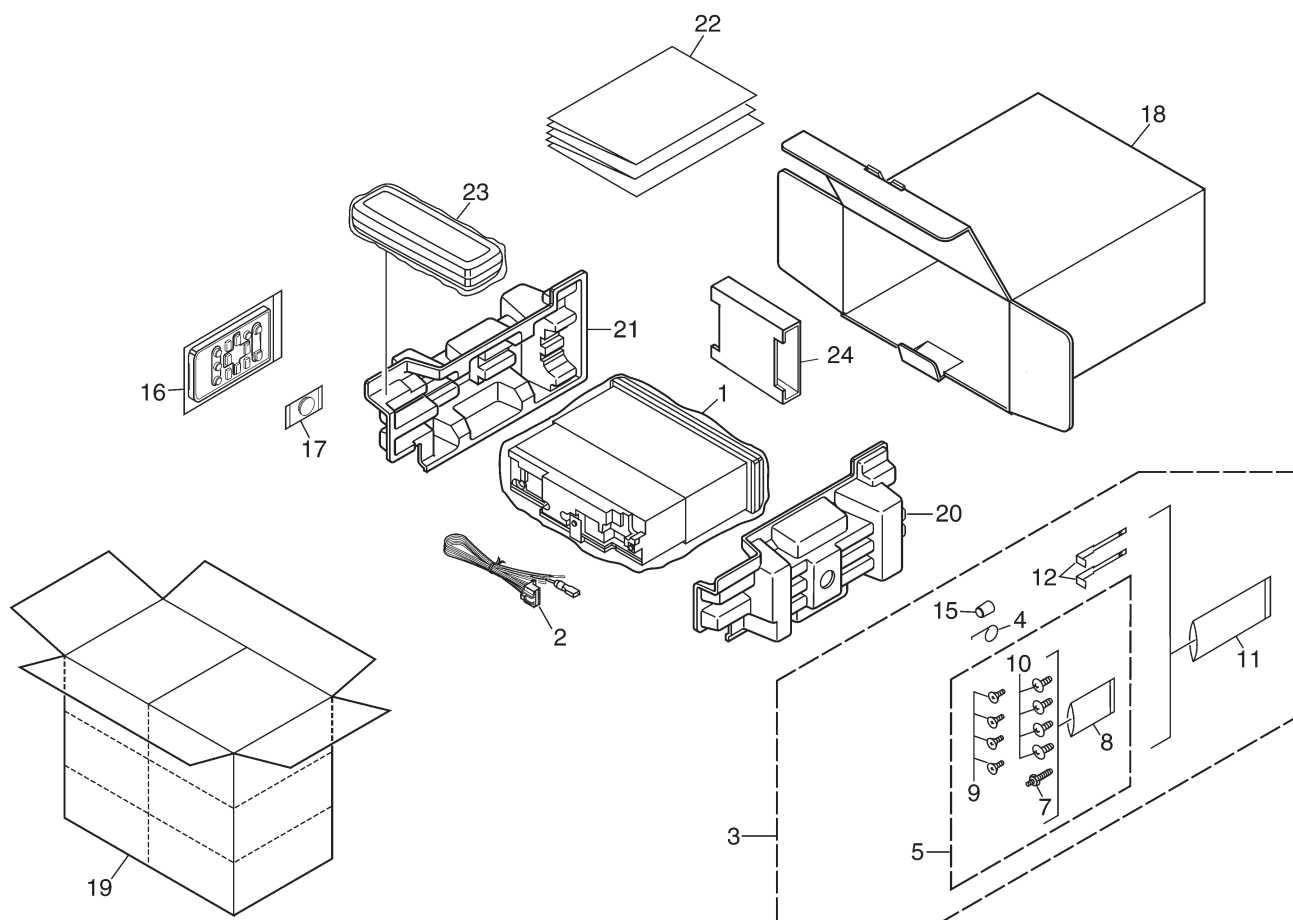




## 2.3 EXTERIOR


A

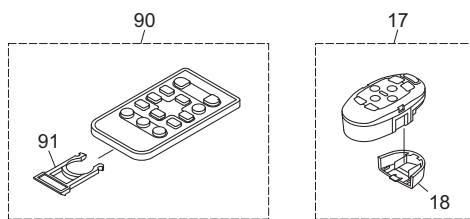





B

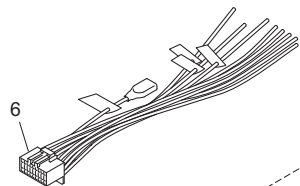


C

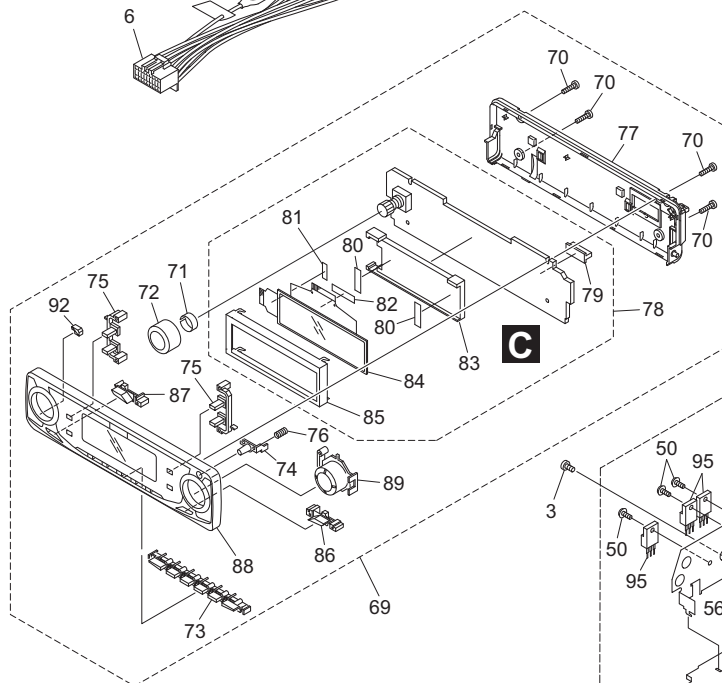


D

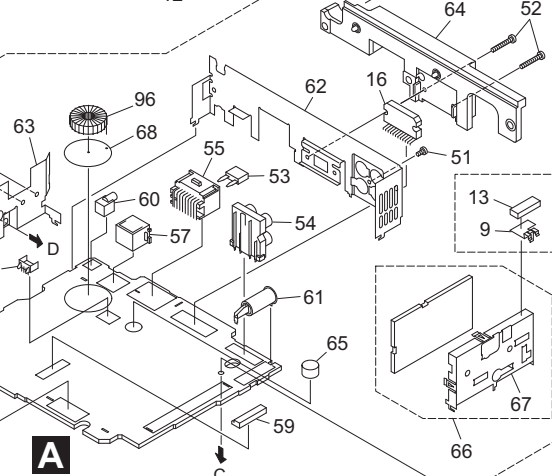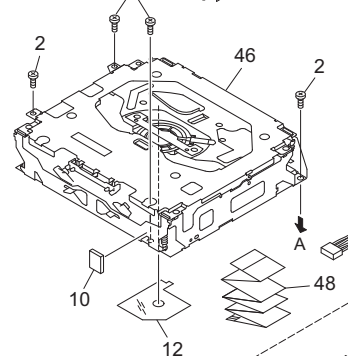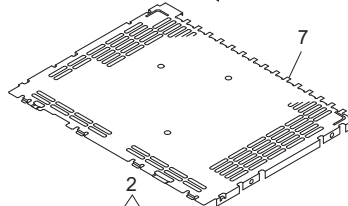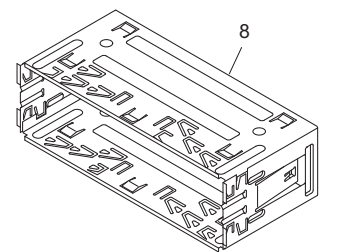

E

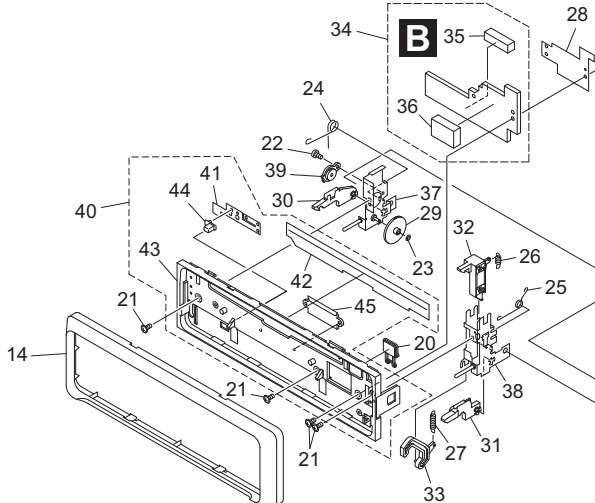

F

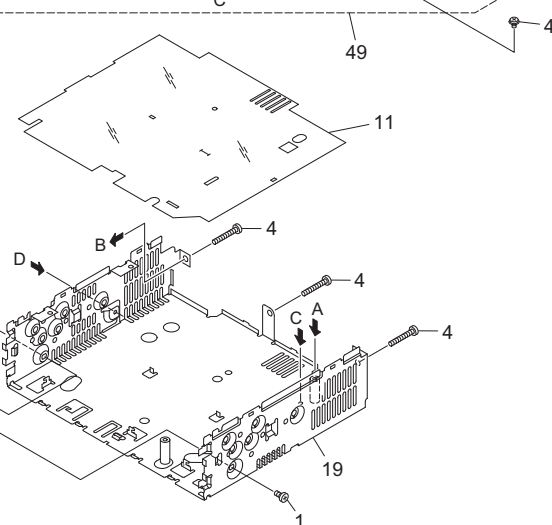

## (1) EXTERIOR SECTION PARTS LIST

| Mark No. | Description                          | Part No.              | Mark No. | Description                         | Part No.              |   |
|----------|--------------------------------------|-----------------------|----------|-------------------------------------|-----------------------|---|
| 1        | Screw                                | BMZ30P040FZK          | 51       | Screw                               | BPZ26P080FTC          | A |
| 2        | Screw                                | BSZ26P060FTC          | 52       | Screw                               | BSZ26P160FTC          |   |
| 3        | Screw                                | BSZ30P060FTC          | 53       | Fuse(10A)                           | CEK1208               |   |
| 4        | Screw                                | BSZ30P200FTC          | 54       | Pin Jack(CN352)                     | CKB1051               |   |
| 5        | Cord Assy                            | CDE7129               | 55       | Plug(CN901)                         | CKM1376               |   |
| 6        | Cord Assy                            | CDE7154               | 56       | Plug(CN351)                         | CKS1238               |   |
| 7        | Case                                 | CNB2870               | 57       | Connector(CN101)                    | CKS3408               |   |
| 8        | Holder                               | CNC8659               | 58       | Plug(CN801)                         | CKS3537               |   |
| 9        | Earth Plate                          | CNC8915               | 59       | Connector(CN651)                    | CKS3837               |   |
| 10       | Insulator                            | CNM7682               | 60       | Connector(CN161)                    | See Contrast table(2) | B |
| 11       | Insulator                            | CNM7935               | 61       | Antenna Jack(CN401)                 | CKX1056               |   |
| 12       | Insulator                            | CNM8174               | 62       | Holder                              | See Contrast table(2) |   |
| 13       | Cushion                              | CNM8890               | 63       | Holder                              | CND1352               |   |
| 14       | Panel                                | See Contrast table(2) | 64       | Heat Sink                           | CNR1668               |   |
| 15       | Cap                                  | CNV6727               | 65       | Microphone(CN751)                   | CPM1011               |   |
| 16       | .....                                |                       | 66       | FM/AM Tuner Unit                    | CWE1646               |   |
| 17       | Remote Control Assy                  | See Contrast table(2) | 67       | Holder                              | CND1054               |   |
| 18       | Cover                                | See Contrast table(2) | 68       | Insulator                           | XNM7031               |   |
| 19       | Chassis Unit                         | CXB9528               | 69       | Detachable Assy                     | See Contrast table(2) | C |
| 20       | Button(EJECT)                        | CAC7752               | 70       | Screw                               | BPZ20P100FZK          |   |
| 21       | Screw(M2x4.5)                        | CBA1647               | 71       | Spring                              | CBL1470               |   |
| 22       | Screw(M2x4)                          | CBA1649               | 72       | Knob                                | See Contrast table(2) |   |
| 23       | Washer                               | CBF1038               | 73       | Button(1-6)                         | XAC7005               |   |
| 24       | Spring                               | CBH2650               | 74       | Button(OPEN)                        | See Contrast table(2) |   |
| 25       | Spring                               | CBH2651               | 75       | Button(TEXT/SCRL/AUDIO/FUNC)XAC7041 |                       |   |
| 26       | Spring                               | CBH2652               | 76       | Spring                              | XBH7001               |   |
| 27       | Spring                               | CBH2653               | 77       | Cover                               | XNS7013               |   |
| 28       | Holder                               | CND1254               | 78       | Keyboard Unit                       | See Contrast table(2) | D |
| 29       | Gear                                 | CNV5997               | 79       | Connector(CN1901)                   | CKS4524               |   |
| 30       | Arm                                  | CNV7400               | 80       | Cushion                             | CNM6633               |   |
| 31       | Arm                                  | CNV7401               | 81       | Spacer                              | CNM7697               |   |
| 32       | Arm                                  | CNV7402               | 82       | Spacer                              | CNM7698               |   |
| 33       | Arm                                  | CNV7403               | 83       | Holder                              | CNV6910               |   |
| 34       | Panel Unit                           | CWM8758               | 84       | OEL Unit                            | MXS8201               |   |
| 35       | Socket(CN1950)                       | CKS3550               | 85       | Holder                              | XNC7006               |   |
| 36       | Connector(CN1951)                    | CKS4806               | 86       | Button Unit(EQ-EX)                  | XXA7007               |   |
| 37       | Holder Unit                          | CXB9501               | 87       | Button Unit(EQ)                     | XXA7008               | E |
| 38       | Holder Unit                          | CXB9502               | 88       | Sub Grille Assy                     | See Contrast table(2) |   |
| 39       | Damper Unit                          | CXB9503               | 89       | Sub Button Assy                     | See Contrast table(2) |   |
| 40       | Panel Unit(Service)                  | CXX1691               | 90       | Remote Control Unit                 | See Contrast table(2) |   |
| 41       | Spring                               | CBL1512               | 91       | Cover                               | See Contrast table(2) |   |
| 42       | Cover                                | CNM6854               | 92       | Cushion                             | XNM7041               |   |
| 43       | Panel                                | CNS7245               | 93,94    | .....                               |                       |   |
| 44       | Pin                                  | CNV6486               | 95       | Transistor(Q651,911,921)            | 2SD 2396              |   |
| 45       | Lighting Conductor                   | CNV6487               | 96       | Choke Coil(L301)                    | CTH1280               |   |
| 46       | CD Mechanism Module(S10CODE2)CXK5665 |                       |          |                                     |                       | F |
| 47       | Screw                                | ISS26P055FTC          |          |                                     |                       |   |
| 48       | Cable                                | XDE7002               |          |                                     |                       |   |
| 49       | Tuner Amp Unit                       | See Contrast table(2) |          |                                     |                       |   |
| 50       | Screw                                | ASZ26P060FTC          |          |                                     |                       |   |

**(2) CONTRAST TABLE**

DEH-P760MP/XN/UC , DEH-P7600MP/XN/UC and DEH-P7650MP/XN/ES are constructed the same except for the following:

| Mark | NO | Description         | DEH-P760MP/XN/UC | DEH-P7600MP/XN/UC | DEH-P7650MP/XN/ES |
|------|----|---------------------|------------------|-------------------|-------------------|
| A    | 14 | Panel               | CNS6935          | XNS7070           | CNS6935           |
|      | 17 | Remote Control Assy | CZX3257          | Not used          | Not used          |
|      | 18 | Cover               | CZN7655          | Not used          | Not used          |
|      | 49 | Tuner Amp Unit      | XWM7045          | XWM7046           | XWM7047           |
|      | 60 | Connector(CN161)    | CKS4124          | CKS4124           | Not used          |
|      | 62 | Holder              | CND1270          | CND1270           | CND1239           |
|      | 69 | Detachable Assy     | XXA7167          | XXA7168           | XXA7169           |
|      | 72 | Knob                | XAA7012          | XAA7018           | XAA7012           |
|      | 74 | Button              | XAC7026          | XAC7012           | XAC7026           |
|      | 78 | Keyboard Unit       | XWM7053          | XWM7052           | XWM7052           |
|      | 88 | Sub Grille Assy     | XXA7160          | XXA7161           | XXA7162           |
|      | 89 | Sub Button Assy     | XXA7226          | XXA7227           | XXA7226           |
|      | 90 | Remote Control Unit | Not used         | CXC3173           | CXC3173           |
|      | 91 | Cover               | Not used         | CNS7068           | CNS7068           |
| B    |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
| C    |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
| D    |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
| E    |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
| F    |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |
|      |    |                     |                  |                   |                   |



# CD MECHANISM MODULE SECTION PARTS LIST

| Mark No. | Description          | Part No.     | Mark No. | Description               | Part No.     |   |
|----------|----------------------|--------------|----------|---------------------------|--------------|---|
| 1        | CD Core Unit(S10WMA) | CWX2851      | 51       | Gear                      | CNV7208      | A |
| 2        | Connector(CN101)     | CKS4182      | 52       | Gear                      | CNV7209      |   |
| 3        | Connector(CN901)     | CKS4017      | 53       | Gear                      | CNV7210      |   |
| 4        | Screw                | BMZ20P035FTC | 54       | Gear                      | CNV7211      |   |
| 5        | Screw                | BSZ20P040FTC | 55       | Gear                      | CNV7212      |   |
| 6        | Screw(M2x4)          | CBA1362      | 56       | Rack                      | CNV7214      |   |
| 7        | Screw(M2x3)          | CBA1511      | 57       | Arm                       | CNV7215      |   |
| 8        | Screw(M2x3)          | CBA1527      | 58       | Arm                       | CNV7216      |   |
| 9        | .....                |              | 59       | Guide                     | CNV7217      |   |
| 10       | Washer               | CBF1038      | 60       | Roller                    | CNV7218      | B |
| 11       | Washer               | CBF1060      | 61       | Gear                      | CNV7219      |   |
| 12       | Spring               | CBH2390      | 62       | Arm                       | CNV7221      |   |
| 13       | Spring               | CBH2606      | 63       | Arm                       | CNV7220      |   |
| 14       | Spring               | CBH2607      | 64       | Arm                       | CNV7222      |   |
| 15       | Spring               | CBH2608      | 65       | Damper                    | CNV7313      |   |
| 16       | Spring               | CBH2609      | 66       | Damper                    | CNV7314      |   |
| 17       | Spring               | CBH2610      | 67       | Arm                       | CNV7341      |   |
| 18       | Spring               | CBH2735      | 68       | Arm                       | CNV7342      |   |
| 19       | Spring               | CBH2612      | 69       | Guide                     | CNV7360      |   |
| 20       | Spring               | CBH2613      | 70       | Guide                     | CNV7361      | C |
| 21       | Spring               | CBH2614      | 71       | Holder                    | CNV7437      |   |
| 22       | Spring               | CBH2615      | 72       | Arm                       | CNV7805      |   |
| 23       | Spring               | CBH2616      | 73       | Gear                      | CNV7595      |   |
| 24       | Spring               | CBH2617      | 74       | Damper                    | CNV7618      |   |
| 25       | Spring               | CBH2620      | 75       | Motor Unit(M1)            | CXB6007      |   |
| 26       | Spring               | CBH2621      | 76       | Chassis Unit              | CXC2318      |   |
| 27       | Spring               | CBH2641      | 77       | Screw Unit                | CXB8729      |   |
| 28       | Spring               | CBH2642      | 78       | Gear Unit                 | CXC2397      |   |
| 29       | Spring               | CBH2643      | 79       | Arm Unit                  | CXC2316      | D |
| 30       | Spring               | CBH2659      | 80       | Arm                       | CND1896      |   |
| 31       | Spring               | CBH2688      | 81       | Arm                       | CND1894      |   |
| 32       | .....                |              | 82       | Motor Unit(M2)            | CXB8933      |   |
| 33       | Shaft                | CLA4441      | 83       | Bracket                   | CNC9985      |   |
| 34       | Frame                | CNC9962      | 84       | .....                     |              |   |
| 35       | Frame                | CNC9963      | 85       | Screw(M2x5)               | EBA1028      |   |
| 36       | Bracket              | CNC9966      | 86       | Screw                     | JFZ20P020FTC |   |
| 37       | Bracket              | CND1895      | 87       | Screw                     | JGZ17P022FTC | E |
| 38       | Arm                  | CNC9968      | 88       | .....                     |              |   |
| 39       | Arm                  | CND1909      | 89       | Washer                    | YE20FTC      |   |
| 40       | Lever                | CND2032      | 90       | Pickup Unit(P10)(Service) | CXX1641      |   |
| 41       | Lever                | CNC9984      | 91       | Screw                     | IMS26P030FTC |   |
| 42       | Sheet                | CNM8134      | 92       | Spring                    | CBL1635      |   |
| 43       | Collar               | CNV7798      | 93       | Clamper                   | CNV7197      |   |
| 44       | Guide                | CNV7799      |          |                           |              |   |
| 45       | Arm                  | CNV7800      |          |                           |              |   |
| 46       | Rack                 | CNV7199      |          |                           |              |   |
| 47       | Holder               | CNV7201      |          |                           |              | F |
| 48       | Holder               | CNV7202      |          |                           |              |   |
| 49       | Arm                  | CNV7203      |          |                           |              |   |
| 50       | Gear                 | CNV7207      |          |                           |              |   |

## 5. ELECTRICAL PARTS LIST

### NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

**Circuit Symbol and No.**

**Part No.**

**Circuit Symbol and No.**

**Part No.**

D 133 Diode DAN202U  
D 134 Diode DAP202U

D 301 Diode S5688G  
D 302 Diode S5688G  
D 303 Diode S5688G  
D 304 Diode S5688G  
D 401 Diode S5688G

D 402 Diode S5688G  
D 403 Diode S5688G  
D 650 Diode HZS6L(C1)  
D 651 Diode HZS9L(B1)  
D 751 Diode RB706F-40

D 803 Diode Network DA204U  
D 804 Diode DAN202U  
D 805 Diode DAP202U  
D 806 Diode DAN202U  
D 807 Diode DAP202U

D 808 Diode HZS11L(A1)  
D 851 Diode HZS11L(A1)  
D 852 Diode RB411D  
D 911 Diode S5688G  
D 912 Diode HZS6L(B1)

D 921 Diode HZS9L(B3)  
D 931 Diode HZS7L(A1)  
D 932 Diode HZS7L(C3)  
D 937 Diode MA111  
D 951 Diode DAN202U

D 981 Diode DAN202U  
D 982 Diode HZS9L(A2)  
L 101 Inductor LAU2R2K  
L 201 Ferri-Inductor LAU4R7K  
L 301 Choke Coil 600μH CTH1280

L 401 Ferri-Inductor LAU4R7K  
L 403 Inductor LAU1R0K  
L 404 Inductor LAU1R0K  
L 405 Inductor LAUR47K  
L 406 Inductor CTF1385  
L 601 Ferri-Inductor LAU100K

L 683 Ferri-Inductor LAU100K  
L 802 Inductor CTF1382  
L 852 Inductor CTF1510  
L 853 Inductor CTF1489  
L 951 Inductor LAU2R2K

X 601 Radiator 10.00MHz CSS1599  
S 802 Switch(DETACH SENSE) CSN1039  
VR751 Semi-fixed 10kΩ(B) CCP1229  
FU351 Fuse 3A CEK1286  
FU353 Fuse 3A CEK1286

**A**

**Unit Number:XWM7045(P760MP)**

**Unit Number:XWM7046(P7600MP)**

**Unit Number:XWM7047(P7650MP/ES)**

**Unit Name:Tuner Amp Unit**

### MISCELLANEOUS

IC 101 IC HA12240FP  
IC 131 IC NJM4558MD  
IC 201 IC PML009A  
IC 301 IC PAL007A  
IC 401 IC NJM2391DL1-33

IC 601 IC PD5921A  
IC 602 IC S-80835CNUA-B8U  
IC 801 IC TC7SET08FU  
IC 851 IC NJM2360M  
Q 101 Transistor 2SA1576

Q 102 Transistor DTC114EU  
Q 301 Transistor DTC124EU  
Q 351 Transistor UMH3N  
Q 352 Transistor UMH3N  
Q 353 Transistor UMH3N

Q 650 Transistor 2SD1760F5  
Q 651 Transistor 2SD2396  
Q 652 Transistor UMD2N  
Q 653 Transistor UMD2N  
Q 803 Transistor 2SD1767

Q 804 Transistor UMD2N  
Q 805 Transistor DTC143EU  
Q 807 Transistor 2SA1576  
Q 808 Transistor DTC114EU  
Q 851 Transistor 2SD1760F5

Q 852 Transistor UMD2N  
Q 911 Transistor 2SD2396  
Q 913 Transistor UMD2N  
Q 921 Transistor 2SD2396  
Q 922 Transistor DTC114EU

Q 923 Transistor 2SB1243  
Q 931 Transistor UMX1N  
Q 932 Transistor DTC114EU  
Q 951 Transistor 2SA1576  
Q 981 Transistor 2SC4081

Q 982 Transistor UMD2N  
D 131 Diode Network DA204U  
D 132 Diode Network DA204U

| <u>Circuit Symbol and No.</u> |                  | <u>Part No.</u> | <u>Circuit Symbol and No.</u> |                  | <u>Part No.</u> |
|-------------------------------|------------------|-----------------|-------------------------------|------------------|-----------------|
| BZ641                         | Buzzer           | CPV1062         |                               |                  |                 |
| AR401                         | Surge Protector  | DSP-201M-S00B   | R 410                         |                  | RS1/16S681J     |
|                               | FM/AM Tuner Unit | CWE1646         | R 416                         |                  | RS1/16S681J     |
|                               | Fuse 10A         | CEK1208         | R 417                         |                  | RS1/16S681J     |
|                               |                  |                 | R 419                         |                  | RS1/16S681J     |
|                               |                  |                 | R 421                         |                  | RS1/16S681J     |
| <b><u>RESISTORS</u></b>       |                  |                 |                               |                  |                 |
| R 101                         |                  | RS1/16S101J     | R 601                         | (P760MP,P7650MP) | RS1/16S104J     |
| R 102                         |                  | RS1/16S620J     | R 602                         | (P7600MP)        | RS1/16S104J     |
| R 103                         |                  | RS1/16S101J     | R 603                         | (P760MP,P7600MP) | RS1/16S104J     |
| R 104                         |                  | RS1/16S222J     | R 604                         | (P7650MP)        | RS1/16S104J     |
| R 105                         |                  | RS1/16S102J     | R 605                         |                  | RS1/16S0R0J     |
| R 106                         |                  | RS1/16S472J     | R 606                         |                  | RS1/16S104J     |
| R 107                         |                  | RS1/16S223J     | R 607                         |                  | RS1/16S822J     |
| R 108                         |                  | RS1/16S472J     | R 608                         |                  | RS1/16S221J     |
| R 109                         |                  | RS1/16S821J     | R 609                         |                  | RS1/16S221J     |
| R 110                         |                  | RS1/16S821J     | R 610                         |                  | RS1/16S682J     |
| R 111                         |                  | RS1/16S223J     | R 611                         |                  | RS1/16S682J     |
| R 112                         |                  | RS1/16S223J     | R 612                         |                  | RS1/16S104J     |
| R 113                         |                  | RS1/16S102J     | R 613                         |                  | RS1/16S102J     |
| R 114                         |                  | RS1/16S102J     | R 616                         |                  | RS1/16S473J     |
| R 115                         |                  | RS1/16S472J     | R 617                         |                  | RS1/16S102J     |
| R 133                         |                  | RS1/16S563J     | R 618                         | (P7650MP)        | RS1/16S104J     |
| R 134                         |                  | RS1/16S104J     | R 630                         |                  | RS1/16S104J     |
| R 139                         |                  | RS1/16S563J     | R 632                         |                  | RS1/16S104J     |
| R 140                         |                  | RS1/16S104J     | R 641                         |                  | RS1/16S102J     |
| R 147                         |                  | RS1/16S474J     | R 645                         |                  | RS1/16S271J     |
| R 148                         |                  | RS1/16S474J     | R 651                         |                  | RD1/4PU221J     |
| R 161                         | (P760MP,P7600MP) | RS1/16S102J     | R 652                         |                  | RD1/4PU221J     |
| R 162                         | (P760MP,P7600MP) | RS1/16S102J     | R 656                         |                  | RS1/16S102J     |
| R 163                         | (P760MP,P7600MP) | RS1/16S103J     | R 657                         |                  | RS1/16S102J     |
| R 164                         | (P760MP,P7600MP) | RS1/16S103J     | R 665                         |                  | RD1/4PU0R0J     |
| R 165                         | (P7650MP)        | RS1/16S104J     | R 666                         |                  | RS1/16S0R0J     |
| R 201                         |                  | RAB4C102J       | R 669                         |                  | RS1/16S0R0J     |
| R 241                         |                  | RS1/16S102J     | R 671                         |                  | RS1/16S0R0J     |
| R 242                         |                  | RS1/16S102J     | R 672                         |                  | RS1/16S0R0J     |
| R 247                         |                  | RS1/16S101J     | R 676                         |                  | RS1/16S102J     |
| R 248                         |                  | RS1/16S101J     | R 677                         |                  | RS1/16S104J     |
| R 249                         |                  | RS1/16S101J     | R 678                         |                  | RS1/16S102J     |
| R 250                         |                  | RS1/16S101J     | R 680                         |                  | RS1/16S222J     |
| R 301                         |                  | RS1/16S103J     | R 681                         |                  | RS1/16S104J     |
| R 302                         |                  | RS1/16S103J     | R 689                         |                  | RS1/16S0R0J     |
| R 303                         |                  | RS1/16S153J     | R 751                         |                  | RS1/16S104J     |
| R 304                         |                  | RS1/16S331J     | R 752                         |                  | RS1/16S222J     |
| R 351                         |                  | RS1/16S821J     | R 753                         |                  | RS1/16S561J     |
| R 352                         |                  | RS1/16S821J     | R 754                         |                  | RS1/16S104J     |
| R 353                         |                  | RS1/16S821J     | R 802                         |                  | RS1/16S222J     |
| R 354                         |                  | RS1/16S821J     | R 803                         |                  | RS1/16S472J     |
| R 355                         |                  | RS1/16S821J     | R 804                         |                  | RS1/16S1R0J     |
| R 356                         |                  | RS1/16S821J     | R 805                         |                  | RS1/16S391J     |
| R 357                         |                  | RS1/16S223J     | R 806                         |                  | RS1/16S391J     |
| R 358                         |                  | RS1/16S223J     | R 807                         |                  | RS1/16S473J     |
| R 359                         |                  | RS1/16S223J     | R 808                         |                  | RS1/16S473J     |
| R 360                         |                  | RS1/16S223J     | R 809                         |                  | RS1/16S102J     |
| R 361                         |                  | RS1/16S223J     | R 810                         |                  | RS1/16S222J     |
| R 362                         |                  | RS1/16S223J     | R 811                         |                  | RS1/16S222J     |
| R 403                         |                  | RS1/16S681J     | R 812                         |                  | RS1/16S222J     |
| R 405                         |                  | RS1/16S681J     | R 813                         |                  | RS1/16S222J     |
| R 406                         |                  | RS1/16S681J     | R 814                         |                  | RS1/16S222J     |
| R 407                         |                  | RS1/16S681J     | R 815                         |                  | RS1/16S473J     |
| R 408                         |                  | RS1/16S681J     | R 816                         |                  | RS1/16S104J     |
|                               |                  |                 | R 817                         |                  | RD1/4PU391J     |

**Circuit Symbol and No.****Part No.****Circuit Symbol and No.****Part No.**

|   |       |             |       |              |
|---|-------|-------------|-------|--------------|
| A | R 818 | RS1/16S104J | C 207 | CEJQ1R0M50   |
|   | R 819 | RS1/16S222J | C 208 | CEJQ1R0M50   |
|   | R 820 | RS1/16S222J | C 209 | CEJQ1R0M50   |
|   | R 823 | RS1/16S102J | C 210 | CEJQ1R0M50   |
|   | R 824 | RS1/16S473J | C 211 | CEJQ4R7M35   |
|   |       |             | C 212 | CEJQ4R7M35   |
|   | R 825 | RS1/16S102J | C 213 | CEJQ4R7M35   |
|   | R 826 | RS1/16S102J | C 214 | CEJQ4R7M35   |
|   | R 827 | RS1/16S102J |       |              |
|   | R 828 | RS1/16S102J | C 215 | CEJQ4R7M35   |
|   | R 851 | RS1/16S331J | C 216 | CEJQ4R7M35   |
|   |       |             | C 217 | CEJQ4R7M35   |
|   | R 852 | RD1/4PU302J | C 218 | CEJQ4R7M35   |
|   | R 853 | RD1/4PU302J | C 219 | CCSRCH120J50 |
|   | R 854 | RS1/16S121J |       |              |
| B | R 855 | RS1/16S391J | C 220 | CCSRCH120J50 |
|   | R 856 | RS1/16S1R0J | C 221 | CCSRCH120J50 |
|   |       |             | C 222 | CCSRCH120J50 |
|   | R 857 | RS1/16S331J | C 225 | CEJQ100M16   |
|   | R 903 | RS1/16S223J | C 241 | CKSRYB152K50 |
|   | R 912 | RS1/16S222J |       |              |
|   | R 913 | RS1/16S223J | C 242 | CKSRYB152K50 |
|   | R 914 | RS1/16S104J | C 306 | CEJQ330M10   |
|   |       |             | C 307 | CCH1486      |
|   | R 915 | RS1/16S104J | C 309 | CKSRYB104K16 |
|   | R 916 | RS1/16S104J | C 310 | CEJQ100M16   |
|   | R 923 | RS1/16S103J |       |              |
|   | R 924 | RD1/4PU122J | C 311 | CKSYB475K16  |
|   | R 925 | RS1/16S182J | C 312 | CKSYB475K16  |
|   |       |             | C 317 | CKSRYB474K10 |
|   | R 931 | RS1/16S472J | C 318 | CKSRYB474K10 |
|   | R 932 | RS1/16S473J | C 321 | CKSRYB474K10 |
|   | R 933 | RS1/16S103J |       |              |
|   | R 934 | RS1/16S473J | C 322 | CKSRYB474K10 |
|   | R 935 | RS1/16S104J | C 323 | CKSRYB474K10 |
|   |       |             | C 324 | CKSRYB474K10 |
|   | R 936 | RS1/16S103J | C 325 | CKSQYB225K10 |
|   | R 938 | RD1/4PU102J | C 326 | CKSQYB225K10 |
|   | R 939 | RD1/4PU102J |       |              |
|   | R 951 | RD1/4PU153J | C 327 | CKSRYB474K10 |
|   | R 952 | RS1/16S472J | C 328 | CKSRYB474K10 |
|   |       |             | C 351 | CEJQ4R7M35   |
|   | R 953 | RS1/16S472J | C 352 | CEJQ4R7M35   |
|   | R 954 | RS1/16S102J | C 353 | CEJQ4R7M35   |
|   | R 983 | RS1/16S223J |       |              |
|   | R 984 | RS1/16S473J | C 354 | CEJQ4R7M35   |
|   | R 985 | RS1/16S102J | C 355 | CEJQ4R7M35   |
|   |       |             | C 356 | CEJQ4R7M35   |
|   |       |             | C 363 | CKSRYB104K16 |

3300μF/16V

**CAPACITORS**

|  |       |              |       |              |
|--|-------|--------------|-------|--------------|
|  | C 101 | CKSRYB104K16 |       |              |
|  | C 102 | CKSRYB473K25 | C 402 | CEJQ101M10   |
|  | C 131 | CKSRYB104K16 | C 404 | CKSYB475K16  |
|  | C 132 | CKSRYB104K16 | C 406 | CEJQ470M10   |
|  | C 141 | CKSRYB104K16 | C 408 | CKSYB475K16  |
|  |       |              | C 409 | CEJQ1R0M50   |
|  | C 142 | CKSRYB103K50 |       |              |
|  | C 143 | CKSRYB474K10 | C 411 | CCSRCH101J50 |
|  | C 144 | CKSRYB474K10 | C 412 | CCSRCH470J50 |
|  | C 145 | CCSRCH101J50 | C 601 | CEJQ4R7M35   |
|  | C 146 | CCSRCH101J50 | C 602 | CKSQYB105K16 |
|  |       |              | C 603 | CEJQ2R2M50   |
|  | C 147 | CKSRYB104K16 |       |              |
|  | C 201 | CEJQ1R0M50   | C 604 | CCSRCH200J50 |
|  | C 202 | CEJQ1R0M50   | C 605 | CCSRCH200J50 |
|  | C 203 | CKSRYB104K16 | C 609 | CCSRCH101J50 |
|  | C 204 | CKSRYB104K16 | C 644 | CEJQ101M10   |
|  |       |              | C 645 | CKSRYB473K16 |
|  | C 205 | CKSRYB105K10 |       |              |
|  | C 206 | CEJQ470M16   | C 646 | CCSRCH470J50 |
|  |       |              | C 647 | CKSRYB683K16 |

| <u>Circuit Symbol and No.</u> |           | <u>Part No.</u> |
|-------------------------------|-----------|-----------------|
| C 651                         |           | CEJQ101M10      |
| C 652                         |           | CKSRYB473K25    |
| C 654                         |           | CKSRYB152K50    |
| C 655                         |           | CKSRYB152K50    |
| C 657                         | 470μF/16V | CCSRCH470J50    |
| C 658                         |           | CCH1183         |
| C 662                         |           | CCSRCH471J50    |
| C 751                         |           | CEJQ100M16      |
| C 752                         |           | CEJQNP100M16    |
| C 753                         |           | CEJQ220M10      |
| C 754                         |           | CKSRYB474K10    |
| C 756                         |           | CKSRYB474K10    |
| C 805                         |           | CKSRYB473K25    |
| C 806                         |           | CKSRYB473K25    |
| C 807                         |           | CKSRYB473K25    |
| C 851                         |           | CEJQ470M16      |
| C 853                         | 4.7μF     | CCG1111         |
| C 855                         |           | CEJQ100M25      |
| C 856                         |           | CCSRCH331J50    |
| C 857                         |           | CEJQ330M25      |
| C 858                         |           | CKSRYB104K16    |
| C 859                         |           | CEJQ101M10      |
| C 860                         |           | CKSRYB104K16    |
| C 861                         |           | CKSRYB223K50    |
| C 911                         | 470μF/16V | CCH1331         |
| C 912                         |           | CKSRYB472K50    |
| C 913                         |           | CKSRYB103K50    |
| C 914                         |           | CEJQ470M10      |
| C 921                         |           | CEJQ221M10      |
| C 922                         |           | CKSRYB103K50    |
| C 923                         |           | CEJQ101M16      |
| C 931                         |           | CEJQ1R0M50      |
| C 932                         |           | CKSRYB104K16    |

C 910 CKSQYB225K10

**C**

Unit Number:XWM7053(P760MP)

Unit Number:

XWM7052(P7600MP,P7650MP)

Unit Name:Keyboard Unit

#### MISCELLANEOUS

|         |                     |                 |
|---------|---------------------|-----------------|
| IC 1901 | IC                  | RS-140          |
| IC 1902 | IC                  | S-818A33AUC-BGN |
| IC 1940 | IC                  | PD5932A         |
| IC 1990 | IC(P760MP)          | PD8123A         |
| IC 1990 | IC(P7600MP,P7650MP) | PD8119A         |
| Q 1960  | Transistor          | 2SC4617         |
| Q 1961  | Transistor          | 2SC2411K        |
| D 1903  | LED                 | CL-190UB2-X     |
| D 1904  | LED                 | CL-190UB2-X     |
| D 1905  | LED                 | CL-190UB2-X     |
| D 1906  | LED                 | CL-190UB2-X     |
| D 1907  | LED                 | CL-190UB2-X     |
| D 1908  | LED                 | CL-190UB2-X     |
| D 1909  | LED                 | CL-190UB2-X     |
| D 1910  | LED                 | CL-190UB2-X     |

| <u>Circuit Symbol and No.</u> |                    | <u>Part No.</u> |
|-------------------------------|--------------------|-----------------|
| D 1911                        | LED                | CL-190UB2-X     |
| D 1912                        | LED                | CL-190UB2-X     |
| D 1914                        | LED                | CL-195PG-CD     |
| D 1940                        | Diode              | 1SS355          |
| L 1901                        | Inductor           | CTF1530         |
| L 1940                        | Inductor           | CTF1530         |
| TH1960                        | Thermistor         | CCX1037         |
| X 1940                        | Radiator 10.0MHz   | CSS1577         |
| S 1901                        | Encoder(VOLUME)    | XSD7002         |
| S 1902                        | Push Switch        | CSG1112         |
| S 1903                        | Push Switch        | CSG1112         |
| S 1904                        | Push Switch        | CSG1111         |
| S 1905                        | Push Switch        | CSG1111         |
| S 1906                        | Switch             | CSG1110         |
| S 1907                        | Push Switch        | CSG1112         |
| S 1908                        | Switch             | CSG1107         |
| S 1909                        | Switch             | CSG1107         |
| S 1910                        | Switch             | CSG1107         |
| S 1911                        | Switch             | CSG1107         |
| S 1912                        | Switch             | CSG1107         |
| S 1913                        | Switch             | CSG1107         |
| S 1914                        | Push Switch        | CSG1111         |
| S 1915                        | Push Switch        | CSG1111         |
| S 1916                        | Switch             | CSG1110         |
| S 1917                        | Push Switch        | CSG1112         |
| S 1918                        | Switch             | CSG1110         |
| S 1919                        | Switch             | CSG1110         |
| S 1921                        | Switch             | CSG1110         |
| S 1922                        | Switch             | CSG1110         |
| VR1970                        | Semi-fixed 20kΩ(B) | CCP1231         |
| VR1971                        | Semi-fixed 15kΩ(B) | CCP1230         |

#### RESISTORS

|        |             |
|--------|-------------|
| R 1901 | RS1/16S222J |
| R 1902 | RS1/16S222J |
| R 1903 | RS1/16S473J |
| R 1905 | RS1/16S680J |
| R 1906 | RS1/16S680J |
| R 1907 | RS1/16S680J |
| R 1908 | RS1/16S680J |
| R 1909 | RS1/16S680J |
| R 1910 | RS1/16S680J |
| R 1911 | RS1/16S103J |
| R 1912 | RS1/16S682J |
| R 1913 | RS1/16S121J |
| R 1914 | RS1/16S184J |
| R 1915 | RS1/16S2R2J |
| R 1916 | RS1/16S680J |
| R 1917 | RS1/16S680J |
| R 1918 | RS1/16S680J |
| R 1919 | RS1/16S680J |
| R 1920 | RS1/16S181J |
| R 1922 | RS1/16S560J |
| R 1924 | RS1/16S560J |
| R 1940 | RS1/16S222J |
| R 1941 | RS1/16S101J |
| R 1942 | RAB4C101J   |
| R 1943 | RAB4C101J   |
| R 1945 | RAB4C101J   |

**Circuit Symbol and No.****Part No.**

R 1947  
R 1948  
R 1949  
R 1950

RAB4C101J  
RAB4C101J  
RAB4C101J  
RAB4C101J

R 1952  
R 1954  
R 1955  
R 1956  
R 1957

RS1/16S101J  
RAB4C473J  
RS1/16S473J  
RS1/16S103J  
RAB4C101J

R 1958  
R 1959  
R 1960  
R 1961  
R 1962

RS1/16S473J  
RS1/16S154J  
RS1/16S223J  
RS1/16S683J  
RS1/16S392J

R 1963  
R 1980  
R 1991  
R 1992  
R 1993

RS1/16S393J  
RS1/16S473J  
RS1/16S101J  
RS1/16S101J  
RS1/16S101J

R 1994  
R 1995  
R 1996  
R 1997  
R 1998

RS1/16S101J  
RS1/16S473J  
RS1/16S222J  
RS1/16S332J  
RS1/16S102J

R 1999  
R 2104  
R 2105  
R 2106  
R 2107

RS1/16S102J  
RS1/16S101J  
RS1/16S101J  
RS1/16S101J  
RS1/16S101J

R 2108  
R 2109  
R 2110  
R 2111  
R 2112

RS1/16S101J  
RS1/16S101J  
RS1/16S101J  
RS1/16S101J  
RS1/16S102J

R 2113  
R 2114  
R 2115

RS1/16S102J  
RS1/16S102J  
RS1/16S102J

**CAPACITORS**

C 1908  
C 1909  
C 1910  
C 1911  
C 1912

CKSYF106Z10  
CSZSR4R7M16  
CSZSR4R7M10  
CKSRYB104K16  
CKSRYB104K16

C 1913  
C 1914  
C 1915  
C 1916  
C 1917

CKSRYB104K16  
CKSRYB104K16  
CKSRYB104K16  
CKSRYB104K16  
CKSRYB104K16

C 1918  
C 1919  
C 1920  
C 1940  
C 1941

CKSRYB104K16  
CKSRYB104K16  
CKSRYB104K16  
CKSRYB103K50  
CKSRYB473K25

C 1942  
C 1943  
C 1944  
C 1972  
C 1973

CKSRYB105K10  
CKSRYB103K50  
CSZSR4R7M10  
CKSRYB104K16  
CKSRYB104K25

**Circuit Symbol and No.****Part No.**

C 1974  
C 1975  
C 1976  
C 1990  
C 1991

CKSRYB104K25  
CKSRYB104K25  
CKSRYB104K25  
CKSRYB103K50  
CKSRYB104K25

C 1992

CKSRYB104K25

**B****Unit Number:CWM8758****Unit Name:Panel Unit****MISCELLANEOUS**

D 1970 LED  
S 1970 Push Switch(EJECT)

CL220PGC  
CSG1112

**RESISTORS**

R 1970  
R 1971  
R 1972

RS1/16S101J  
RS1/16S101J  
RS1/16S0R0J

**CAPACITORS**

C 1970

CKSRYB104K16

**D****Unit Number:CWX2851****Unit Name:CD CORE UNIT(S10WMA)****MISCELLANEOUS**

IC 201 IC  
IC 203 IC  
IC 301 IC  
IC 501 IC  
IC 701 IC

UPD63761GJ  
NJM2391DL1-33  
BA5835FM  
S-L2980A15MC-C6A  
PE5440A

IC 703 IC  
Q 101 Transistor  
Q 601 Transistor  
Q 603 Transistor  
Q 701 Transistor

S-812C33AUA-C2N  
2SB1132  
IMH20  
2SB709A  
UN2111

D 101 Diode  
D 601 Diode  
L 203 Inductor  
L 207 Inductor  
L 209 Inductor

1SS355  
MA152WA  
CTF1389  
CTF1389  
CTF1389

L 703 Inductor  
X 201 Ceramic Resonator 16.934MHz  
X 701 Ceramic Resonator 4.00MHz  
S 901 Switch(HOME)  
S 902 Switch(CLAMP)

CTF1389  
CSS1603  
CSS1652  
CSN1051  
CSN1051

S 903 Spring Switch(DSCSNS)  
S 904 Switch(12EJ)  
S 905 Switch(8EJ)

CSN1052  
CSN1051  
CSN1051

**RESISTORS**

R 101  
R 102  
R 103  
R 104

RS1/10S1R5J  
RS1/10S1R5J  
RS1/10S1R5J  
RS1/10S1R5J

| <u>Circuit Symbol and No.</u> | <u>Part No.</u> | <u>Circuit Symbol and No.</u> | <u>Part No.</u> |   |
|-------------------------------|-----------------|-------------------------------|-----------------|---|
| R 105                         | RS1/10S1R5J     | R 710                         | RS1/16SS102J    |   |
| R 107                         | RS1/16SS0R0J    | R 711                         | RS1/16SS102J    | A |
| R 201                         | RS1/16SS102J    | R 712                         | RS1/16SS102J    |   |
| R 202                         | RS1/16SS333J    | R 713                         | RS1/16SS102J    |   |
| R 205                         | RS1/16SS473J    | R 714                         | RS1/16SS473J    |   |
| R 207                         | RS1/16SS473J    | R 715                         | RS1/16SS0R0J    |   |
|                               |                 | R 716                         | RS1/16SS472J    |   |
| R 209                         | RS1/16SS473J    |                               |                 |   |
| R 214                         | RS1/16SS472J    | R 719                         | RS1/16SS221J    |   |
| R 216                         | RS1/16SS472J    | R 720                         | RS1/16SS471J    |   |
| R 218                         | RS1/16SS472J    | R 721                         | RS1/16S0R0J     |   |
| R 220                         | RS1/16SS472J    | R 724                         | RS1/16S473J     |   |
|                               |                 | R 725                         | RS1/16SS222J    |   |
| R 221                         | RS1/16SS103J    |                               |                 |   |
| R 222                         | RS1/16SS103J    | R 726                         | RS1/16SS103J    | B |
| R 223                         | RS1/16SS0R0J    | R 727                         | RS1/16SS473J    |   |
| R 224                         | RS1/16SS0R0J    | R 729                         | RS1/16SS223J    |   |
| R 225                         | RS1/16SS103J    | R 730                         | RS1/16SS473J    |   |
|                               |                 | R 731                         | RS1/16SS104J    |   |
| R 226                         | RS1/16SS393J    |                               |                 |   |
| R 227                         | RS1/16SS562J    | R 732                         | RS1/16SS104J    |   |
| R 228                         | RS1/16SS122J    | R 733                         | RS1/16SS104J    |   |
| R 229                         | RS1/16SS472J    | R 735                         | RS1/16SS473J    |   |
| R 231                         | RS1/16SS0R0J    | R 737                         | RS1/16SS104J    |   |
|                               |                 | R 740                         | RS1/16SS473J    |   |
| R 232                         | RS1/16SS122J    |                               |                 |   |
| R 233                         | RS1/16SS0R0J    | R 742                         | RS1/16SS104J    |   |
| R 240                         | RS1/16SS0R0J    | R 745                         | RS1/16SS473J    | C |
| R 241                         | RS1/16SS333J    | R 746                         | RS1/16SS104J    |   |
| R 242                         | RS1/16SS0R0J    | R 750                         | RS1/16SS473J    |   |
|                               |                 | R 754                         | RS1/16SS102J    |   |
| R 243                         | RS1/16SS333J    |                               |                 |   |
| R 245                         | RS1/16SS333J    | R 755                         | RS1/16SS102J    |   |
| R 250                         | RS1/16SS0R0J    | R 756                         | RS1/16SS104J    |   |
| R 256                         | RS1/16SS0R0J    | R 765                         | RAB4CQ221J      |   |
| R 261                         | RS1/16S0R0J     | R 769                         | RAB4CQ221J      |   |
|                               |                 | R 773                         | RAB4CQ221J      |   |
| R 262                         | RS1/16S0R0J     |                               |                 |   |
| R 263                         | RS1/16S0R0J     | R 777                         | RS1/16SS221J    |   |
| R 264                         | RS1/16S0R0J     | R 778                         | RS1/16SS221J    |   |
| R 267                         | RS1/16S0R0J     | R 779                         | RS1/16SS221J    | D |
| R 301                         | RS1/16SS183J    | R 901                         | RAB4CQ221J      |   |
|                               |                 | R 902                         | RS1/16S0R0J     |   |
| R 302                         | RS1/16SS822J    |                               |                 |   |
| R 304                         | RS1/16SS183J    | R 905                         | RS1/16SS221J    |   |
| R 305                         | RS1/16SS822J    | R 906                         | RS1/16SS221J    |   |
| R 307                         | RS1/16SS183J    | R 908                         | RS1/16SS0R0J    |   |
| R 308                         | RS1/16SS183J    | R 910                         | RS1/16SS0R0J    |   |
|                               |                 |                               |                 |   |
| R 309                         | RS1/16SS183J    | <b>CAPACITORS</b>             |                 |   |
| R 310                         | RS1/16SS183J    |                               |                 |   |
| R 501                         | RS1/16SS0R0J    | C 101                         | CKSSYB104K10    |   |
| R 601                         | RS1/16S101J     | C 102                         | CKSSYB104K10    |   |
| R 602                         | RS1/16S101J     | C 103                         | 100μF/16V       | E |
|                               |                 | C 104                         | 47μF/6.3V       |   |
|                               |                 | C 105                         | CKSSYB104K10    |   |
| R 603                         | RS1/16S223J     |                               |                 |   |
| R 604                         | RS1/16S223J     |                               |                 |   |
| R 605                         | RS1/16SS103J    | C 106                         | CCSSCH101J50    |   |
| R 606                         | RS1/16S0R0J     | C 107                         | CKSRYB224K16    |   |
| R 701                         | RS1/16S0R0J     | C 108                         | CKSSYB104K10    |   |
|                               |                 | C 110                         | CKSSYB104K10    |   |
|                               |                 | C 201                         | CKSSYB471K50    |   |
| R 702                         | RS1/16SS0R0J    |                               |                 |   |
| R 703                         | RS1/16SS104J    | C 202                         | CKSSYB104K10    |   |
| R 704                         | RS1/16SS104J    | C 203                         | CKSSYB104K10    |   |
| R 705                         | RS1/16SS221J    | C 204                         | 22μF/6.3V       |   |
| R 706                         | RS1/16SS221J    | C 205                         | CKSSYB104K10    | F |
|                               |                 | C 207                         | 220μF/4V        |   |
| R 707                         | RS1/16SS0R0J    |                               |                 |   |
| R 708                         | RS1/16SS221J    | C 208                         | CKSSYB104K10    |   |
| R 709                         | RS1/16SS473J    |                               |                 |   |

**Circuit Symbol and No.****Part No.****Circuit Symbol and No.****Part No.**

M 2

Motor Unit(LOADING/CARRIAGE)CXB8933

A C 209 CKSSYB104K10  
 C 216 CKSSYB332K50  
 C 217 CKSSYB104K10  
 C 218 CKSSYB223K16

C 219 CKSSYB104K10  
 C 220 CKSSYB103K16  
 C 221 CKSSYB104K10  
 C 222 CCSSCH560J50  
 C 223 CCSSCH5R0C50

B C 224 CKSSYB104K10  
 C 225 CKSSYB103K16  
 C 226 CCSSCH680J50  
 C 227 CCSSCH470J50  
 C 228 CKSSYB682K25

C 230 CKSSYB104K10  
 C 232 CKSSYB104K10  
 C 233 10μF/6.3V CCH1470  
 C 234 220μF/4V CCH1590  
 C 235 CKSRYB224K16

C 237 CKSSYB104K10  
 C 239 CCSSCH330J50  
 C 242 CKSSYB104K10  
 C 246 CKSSYB104K10  
 C 250 CKSRYB102K50

C C 251 CKSRYB102K50  
 C 260 CKSSYB104K10  
 C 301 CKSSYB221K50  
 C 302 CKSSYB221K50  
 C 303 CKSSYB472K25

C 304 CKSSYB103K16  
 C 305 100μF/16V CCH1504  
 C 306 CKSSYB104K10  
 C 307 CKSSYB104K10  
 C 501 CKSRYB224K16

D C 505 CKSQYB475K6R3  
 C 601 CCSRCH102J50  
 C 602 CCSRCH102J50  
 C 603 4.7μF/25V CCH1568  
 C 604 4.7μF/25V CCH1568

C 701 CKSSYB104K10  
 C 702 CKSSYB471K50  
 C 703 CKSSYB103K16  
 C 704 4.7μF/25V CCH1592  
 C 706 CKSSYB104K10

E C 707 CKSSYB104K10  
 C 712 CKSRYB224K16  
 C 713 CKSSYB104K10  
 C 714 CKSSYB104K10  
 C 716 CKSSYB103K16

C 720 CKSQYB225K10  
 C 722 CKSRYB105K10  
 C 903 CKSSYB471K50  
 C 906 CKSRYB224K16  
 C 907 CKSSYB103K16

C 910 CKSQYB225K10

**Miscellaneous Parts List**

M 1 Pickup Unit(P10)(Service) CXX1641  
 Motor Unit(SPINDLE) CXB6007