



EXPLODED VIEW

- B : N09-2292-05
- C : N30-2008-43
- D : N30-2606-48
- E : N30-3016-43
- F : N32-3006-43
- G : N32-4008-43
- H : N67-3008-48
- J : N80-2006-43
- K : N80-2608-43
- L : N87-2608-48

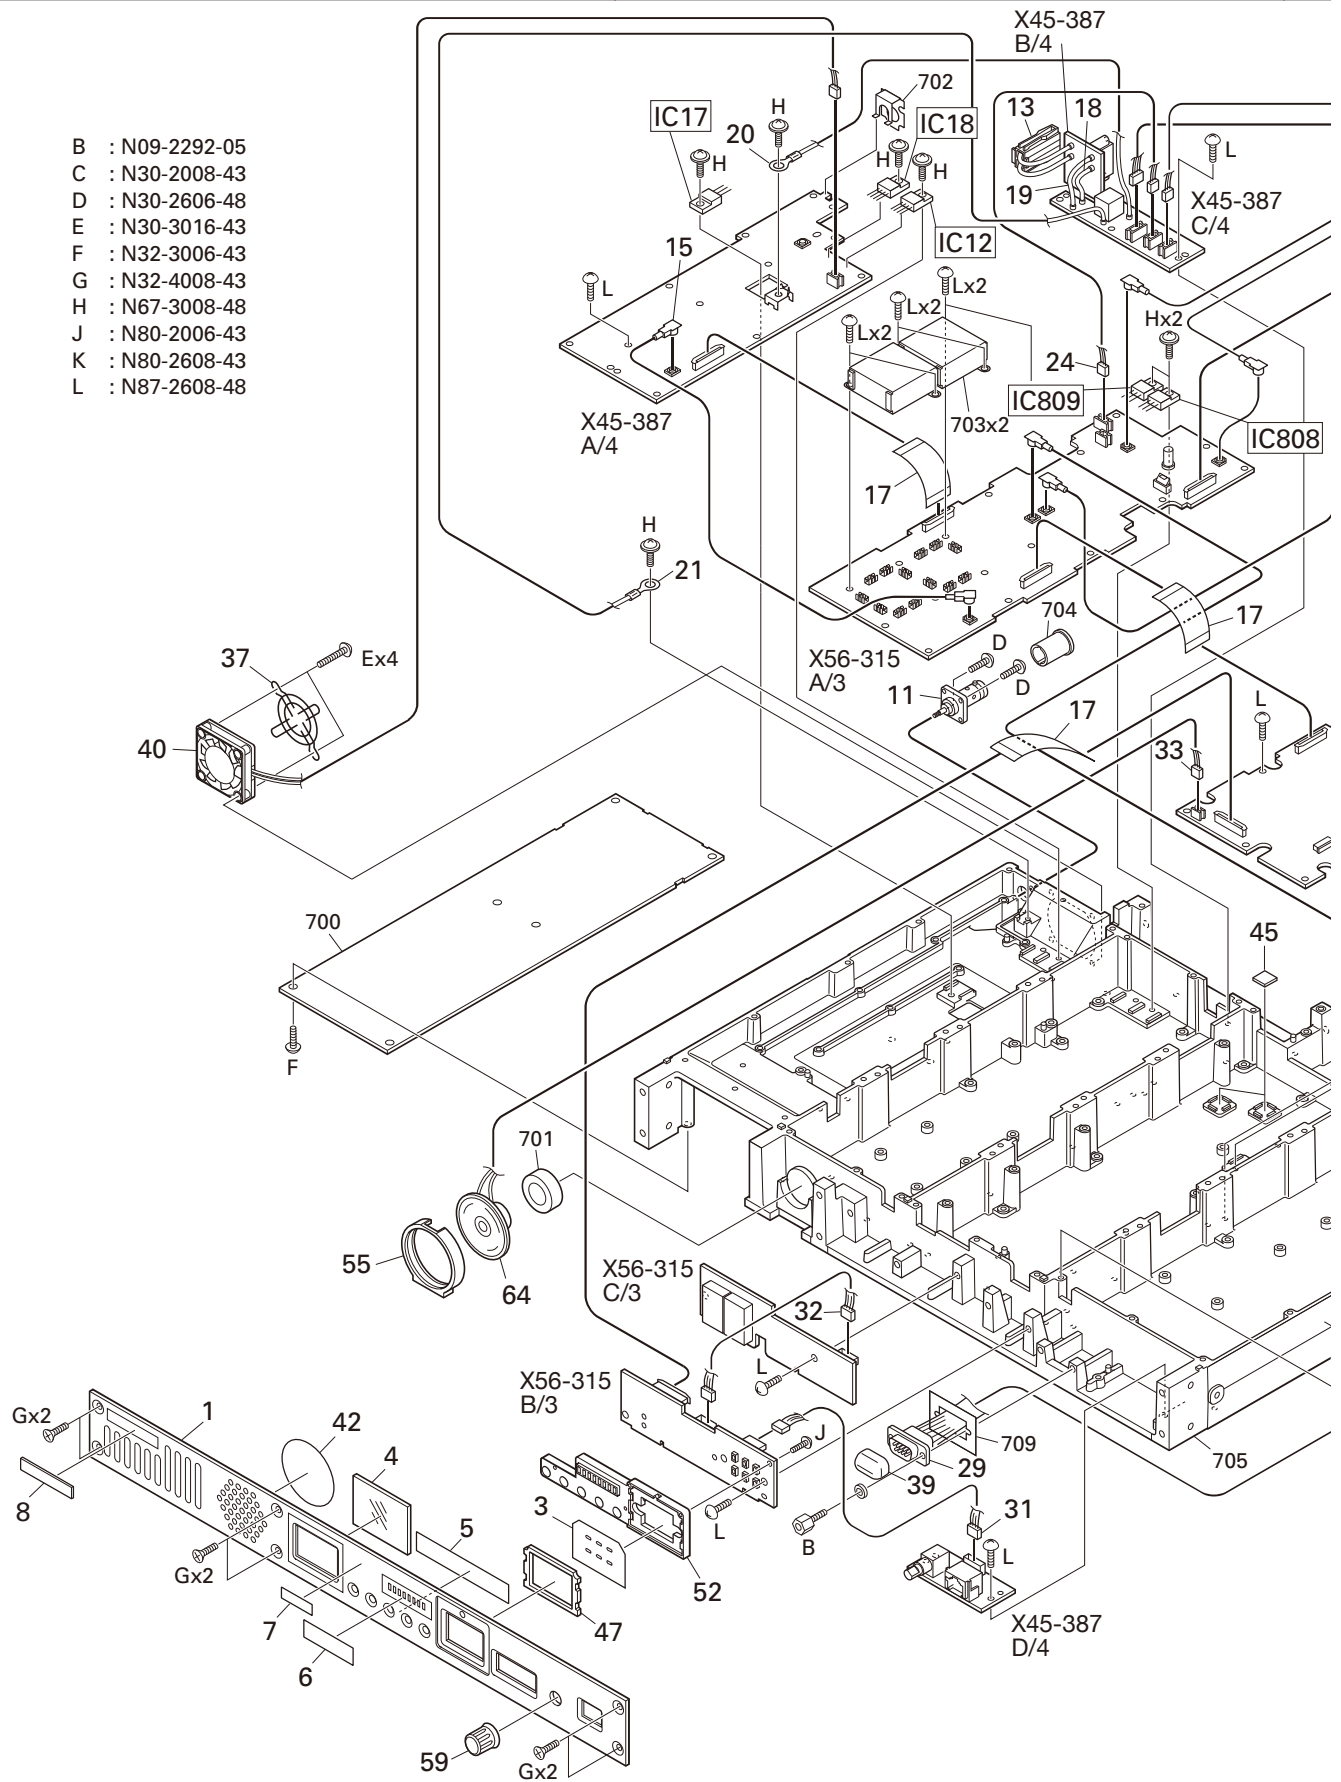


EXPLODED VIEW

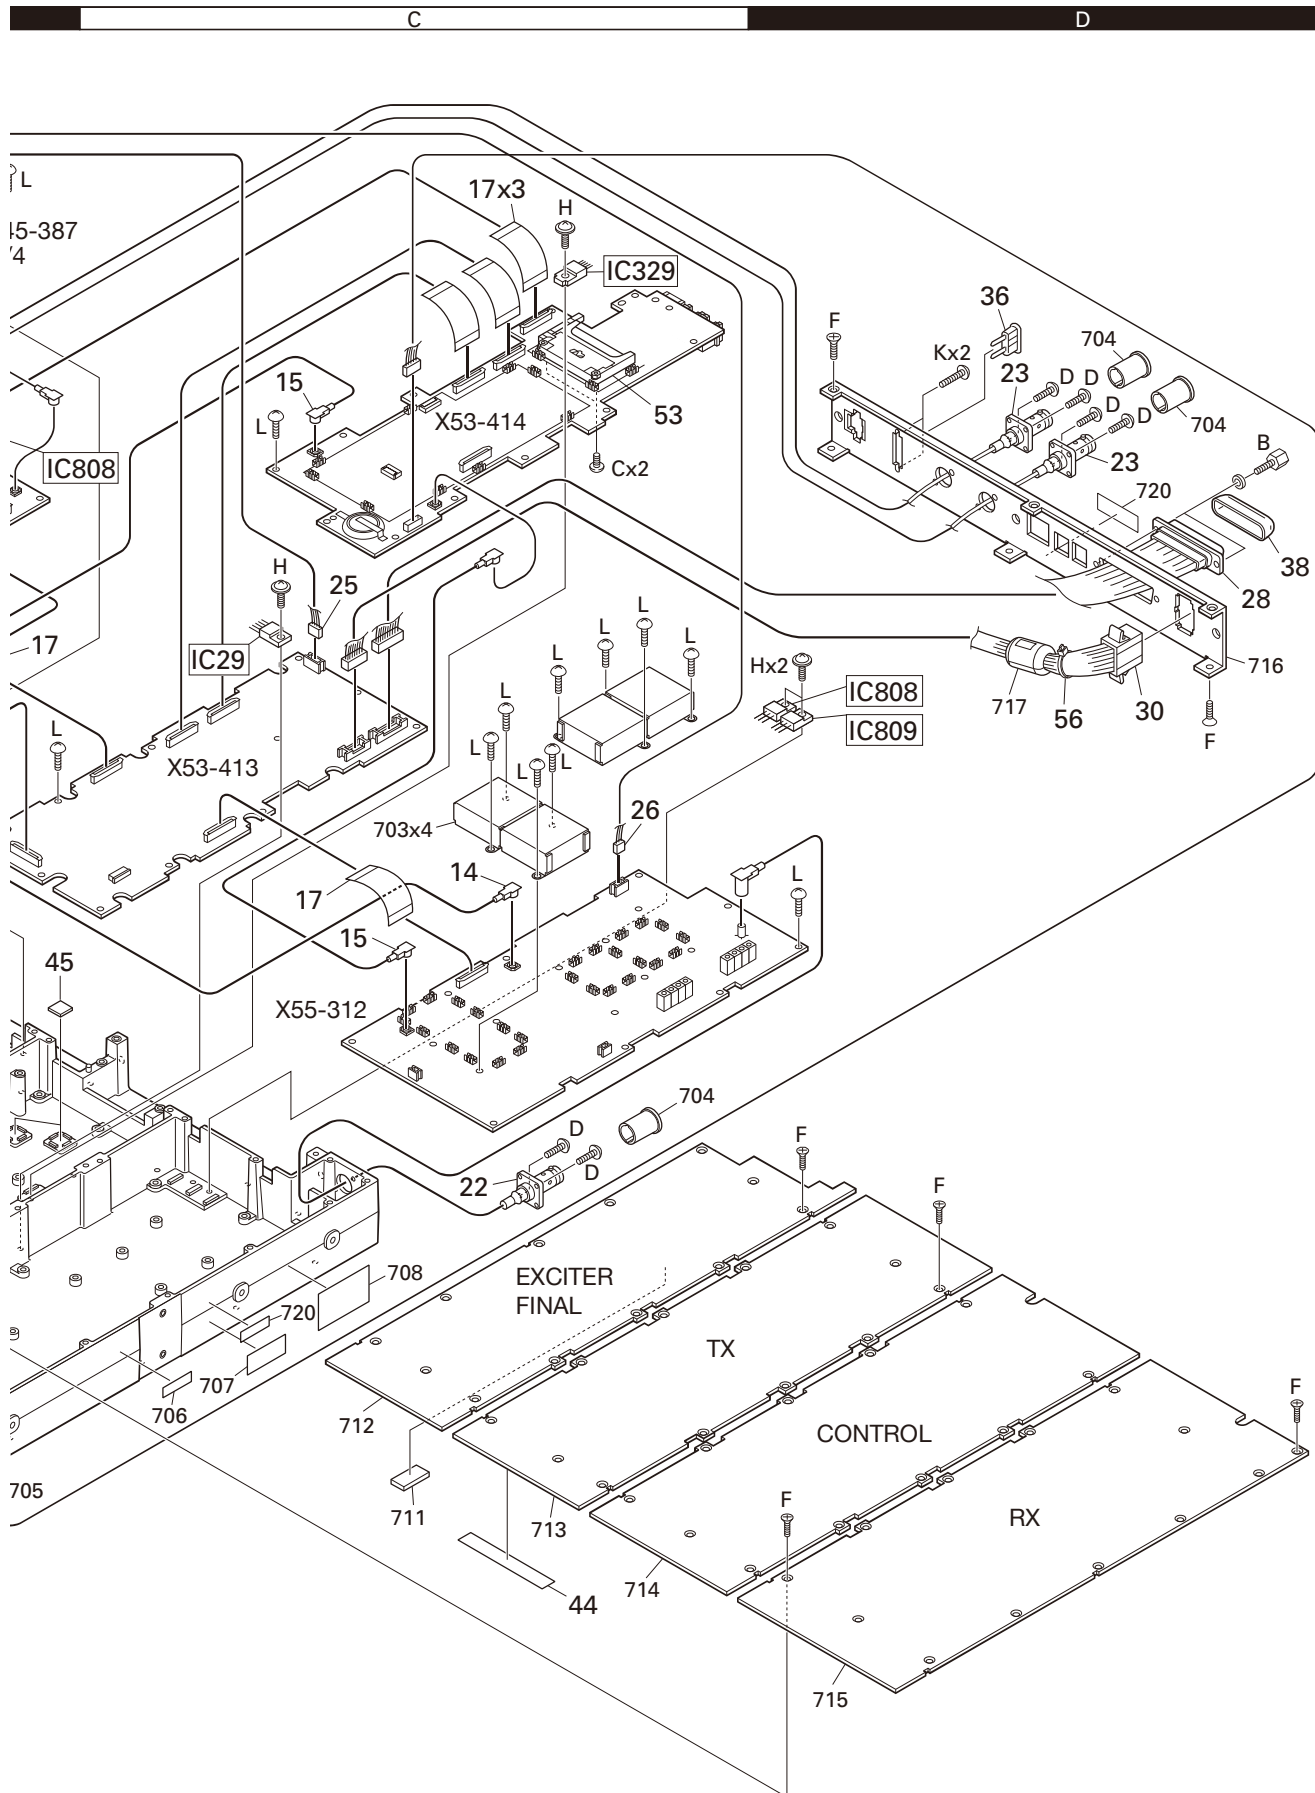

Parts with the exploded numbers larger than 700 are not supplied.

If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB. These parts must be ordered separately.

PACKING

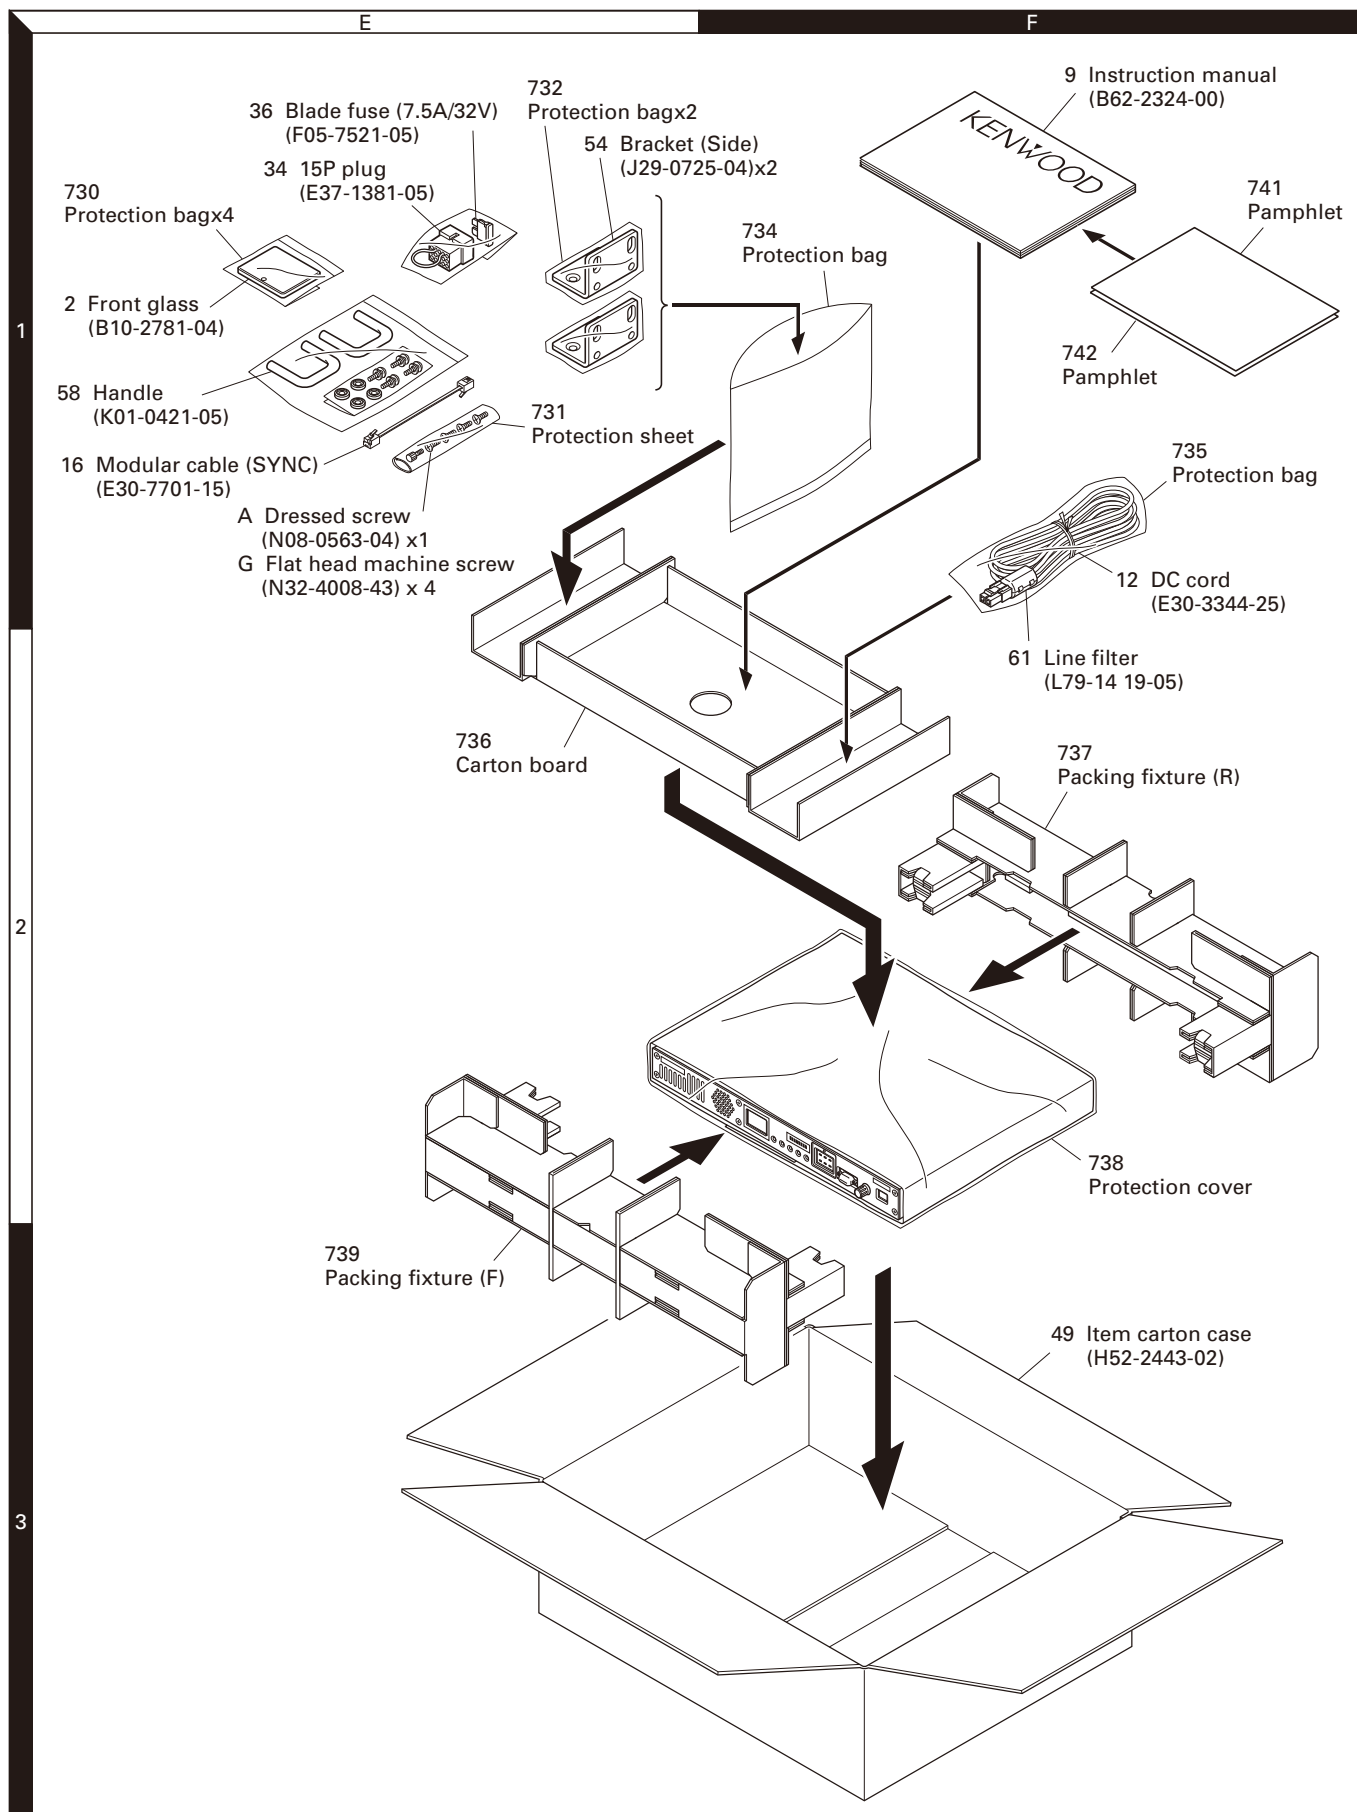

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New Parts. Δ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

C : China

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

NXR-900

FINAL UNIT (X45-3870-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
NXR-900					
1	3A		A62-1142-02	MAIN PANEL	
2	1E		B10-2781-04	FRONT GLASS ACCESSORY	
3	3A		B11-1841-04	FILTER (PF)	
4	3A		B11-1842-04	FILTER (17SEG)	
5	3A		B11-1843-04	FILTER (LED)	
6	3A		B11-1844-04	FILTER (STATUS)	
7	3A		B42-7296-04	STICKER (NEXEDGE)	
8	3A		B43-1188-04	BADGE	
9	1F	*	B62-2324-00	INSTRUCTION MANUAL	
11	2B		E04-0463-05	RF COAXIAL RECEPTACLE (BNC)	
12	1F		E30-3344-25	DC CORD ACCESSORY	
13	1B		E30-7581-05	DC CORD	
14	2C		E30-7582-05	TRUNK CABLE	
15	1B,1C,2C		E30-7583-05	TRUNK CABLE	
16	1E		E30-7701-15	MODULAR CABLE (SYNC)	
17	1B,1C		E37-1295-05	FLAT CABLE (36P)	
18	1B		E37-1299-05	LEAD WIRE WITH TERMINAL (FUSE-DC+)	
19	1B		E37-1300-05	LEAD WIRE WITH TERMINAL (FUSE-DC-)	
20	1B		E37-1301-05	LEAD WIRE WITH TERMINAL (DC-PA+)	
21	1B		E37-1302-05	LEAD WIRE WITH TERMINAL (DC-PA-)	
22	2C		E37-1303-05	LEAD WIRE WITH CONNECTOR (BNC-RX)	
23	1D		E37-1304-05	LEAD WIRE WITH CONNECTOR (BNC-REF)	
24	1B		E37-1305-05	LEAD WIRE WITH CONNECTOR (DC-TX)	
25	1C		E37-1306-05	LEAD WIRE WITH CONNECTOR (DC-CONT)	
26	2C		E37-1307-05	LEAD WIRE WITH CONNECTOR (DC-RX)	
28	1D		E37-1310-05	LEAD WIRE WITH CONNECTOR (DSUB-25P)	
29	3B		E37-1311-05	LEAD WIRE WITH CONNECTOR (DSUB-9P)	
30	2D		E37-1313-05	LEAD WIRE WITH CONNECTOR (ACC15)	
31	3B		E37-1314-05	LEAD WIRE WITH CONNECTOR (DISP-MIC)	
32	3B		E37-1315-05	LEAD WIRE WITH CONNECTOR (DISP-17SEG)	
33	2B		E37-1316-05	LEAD WIRE WITH CONNECTOR (SP)	
34	1E		E37-1381-05	15P PLUG ACCESSORY	
36	1D,1E		F05-7521-05	BLADE FUSE (7.5A/32V) ACCESSORY	
37	2A		F07-1930-05	COVER (FAN)	
38	1D		F09-0445-05	CAP (25P)	
39	3B		F09-0484-05	CAP (9P)	
40	2A		F09-0488-15	FANMOTOR	
42	3A		G10-1343-04	FIBROUS SHEET (FRONT PANEL)	
44	3C		G10-1396-04	FIBROUS SHEET (SHIELDING COVER)	
45	2B		G11-4408-04	RUBBER SHEET (CONT-TR)	
47	3A		G13-2163-04	CUSHION (PF)	
49	3F	*	H52-2443-02	ITEM CARTON CASE	
52	3B	*	J19-5496-12	HOLDER (DISP)	
53	1C		J19-5497-05	HOLDER (COMPACT FLASH)	
54	1E		J29-0725-04	BRACKET (SIDE)	
55	3A		J39-0655-03	SPACER (SP)	
56	2D		J61-0307-05	BAND (DC)	
58	1E		K01-0421-05	HANDLE ACCESSORY	
59	3A		K29-4539-04	KNOB (VOLUME)	
61	1F		L79-1419-05	LINE FILTER (DC)	

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
A	1E		N08-0563-04	DRESSED SCREW (FRONT GLASS)	
B	3B,1D		N09-2292-05	HEXAGON HEAD SCREW (DSUB)	
C	1C		N30-2008-43	PAN HEAD MACHINE SCREW (CF)	
D	2C,1D		N30-2606-48	PAN HEAD MACHINE SCREW (BNC)	
E	2A		N30-3016-43	PAN HEAD MACHINE SCREW (FAN)	
F	2D,3D		N32-3006-43	FLAT HEAD MACHINE SCREW (TOP,REAR)	
G	3A,1E		N32-4008-43	FLAT HEAD MACHINE SCREW (PANEL)	
H	1B,1C		N67-3008-48	PAN HEAD SEMS SCREW (AVR)	
J	3B		N80-2006-43	PAN HEAD TAPTITE SCREW (DISP)	
K	1D		N80-2608-43	PAN HEAD TAPTITE SCREW (FUSE)	
L	1B,2C		N87-2608-48	BRAZIER HEAD TAPTITE SCREW (PCB)	
64	3A		T07-0347-15	SPEAKER	
-			X53-4132-72	SERVICE CONTROL UNIT	
-			X53-4140-11	SERVICE CONTROL UNIT	
-			490-0174-05	ADHESIVE TAPE	
FINAL UNIT (X45-3870-10)					
C1,2			CD04BQ1H101M	ELECTRO 100UF 50WV	
C7,8			CE32BM1V220M	CHIP EL 22UF 35WV	
C10,11			CC73GCH1H470J	CHIP C 47PF J	
C15-17			CK73GB1H103K	CHIP C 0.010UF K	
C21			CC73GCH1H470J	CHIP C 47PF J	
C22			CE32BM1V220M	CHIP EL 22UF 35WV	
C25-27			CK73GB1H103K	CHIP C 0.010UF K	
C28-30			CC73GCH1H470J	CHIP C 47PF J	
C32			CE32BM1V220M	CHIP EL 22UF 35WV	
C33			CE32AU1E100M	CHIP EL 10UF 25WV	
C36			CC73GCH1H470J	CHIP C 47PF J	
C37			CK73GB1H103K	CHIP C 0.010UF K	
C38			CE32AU1E100M	CHIP EL 10UF 25WV	
C39			CC73GCH1H470J	CHIP C 47PF J	
C40			CK73GB1H103K	CHIP C 0.010UF K	
C41,42			CC73GCH1H470J	CHIP C 47PF J	
C45,46			CC73GCH1H470J	CHIP C 47PF J	
C49			CK73GB1H473K	CHIP C 0.047UF K	
C54			CC73GCH1H470J	CHIP C 47PF J	
C58			CC73GCH1H470J	CHIP C 47PF J	
C59			CK73GB1H103K	CHIP C 0.010UF K	
C61			CC73GCH1H470J	CHIP C 47PF J	
C63,64			CC73GCH1H470J	CHIP C 47PF J	
C67			CC73GCH1H470J	CHIP C 47PF J	
C70			CK73GB1H103K	CHIP C 0.010UF K	
C71-75			CC73GCH1H470J	CHIP C 47PF J	
C77,78			CC73GCH1H470J	CHIP C 47PF J	
C80			CK73GB1H103K	CHIP C 0.010UF K	
C83			CC73GCH1H470J	CHIP C 47PF J	
C86			CK73GB1H103K	CHIP C 0.010UF K	
C87			CC73GCH1H050B	CHIP C 5.0PF B	
C89,90			CC73GCH1H470J	CHIP C 47PF J	
C91			CC73GCH1H050B	CHIP C 5.0PF B	
C96			CC73GCH1H470J	CHIP C 47PF J	
C102			CC73GCH1H470J	CHIP C 47PF J	
C104,105			CC73GCH1H470J	CHIP C 47PF J	

PARTS LIST

FINAL UNIT (X45-3870-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C122			C93-0937-05	CHIP C 12PF G		CN4			J13-0071-05	FUSE HOLDER	
C123			C93-0899-05	CHIP C 9.0PF C		L1			L92-0179-05	CHIP FERRITE	
C130		*	C93-0980-05	CHIP C 5.0PF B		L3			L79-0558-05	FILTER	
C132		*	C93-0980-05	CHIP C 5.0PF B		L12			L34-4605-15	AIR-CORE COIL	
C134			CC73GCH1H470J	CHIP C 47PF J		L17			L34-4521-05	AIR-CORE COIL	
C137		*	C93-0871-05	CHIP C 1.0PF B		L18-20			L34-4604-15	AIR-CORE COIL	
C138			CE32CL1V100M	CHIP EL 10UF 35WV		L21,22			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
C148		*	C93-0871-05	CHIP C 1.0PF B		L30			L34-4645-15	AIR-CORE COIL	
C150			CK73GB1H104K	CHIP C 0.10UF K		L31		*	L39-1572-05	ISOLATOR	
C167			CK73GB1H104K	CHIP C 0.10UF K		L900			L92-0447-05	BEADS CORE	
C169,170			CC73GCH1H470J	CHIP C 47PF J		R2			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C187,188			C92-0905-05	OS-CON 47UF 35WV		R9			RK73GB2A101J	CHIP R 100 J 1/10W	
C191			CC73GCH1H470J	CHIP C 47PF J		R11			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
C192			CC73GCH1H020B	CHIP C 2.0PF B		R12			RK73GB2A562J	CHIP R 5.6K J 1/10W	
C193			CC73GCH1H010B	CHIP C 1.0PF B		R13			RK73GB2A103J	CHIP R 10K J 1/10W	
C194,195			CC73GCH1H470J	CHIP C 47PF J		R17			RK73GB2A103J	CHIP R 10K J 1/10W	
C197			CC73GCH1H221J	CHIP C 220PF J		R18			RK73GB2A473J	CHIP R 47K J 1/10W	
C198			CK73GB1H103K	CHIP C 0.010UF K		R20			RK73GB2A224J	CHIP R 220K J 1/10W	
C199			CC73GCH1H470J	CHIP C 47PF J		R21			RK73GB2A103J	CHIP R 10K J 1/10W	
C200			CK73GB1H103K	CHIP C 0.010UF K		R25			RK73GB2A104J	CHIP R 100K J 1/10W	
C202			CC73GCH1H470J	CHIP C 47PF J		R27,28			RK73GB2A824J	CHIP R 820K J 1/10W	
C203			CC73GCH1H221J	CHIP C 220PF J		R29,30			RK73GB2A103J	CHIP R 10K J 1/10W	
C204-211			CC73GCH1H470J	CHIP C 47PF J		R31,32			RK73GB2A104J	CHIP R 100K J 1/10W	
C302		*	C93-0871-05	CHIP C 1.0PF B		R34			RK73GB2A101J	CHIP R 100 J 1/10W	
C303		*	C93-0875-05	CHIP C 1.5PF B		R35,36			RK73GB2A154J	CHIP R 150K J 1/10W	
C304-306			CC73GCH1H470J	CHIP C 47PF J		R38			RK73GB2A101J	CHIP R 100 J 1/10W	
C307		*	C93-0897-05	CHIP C 8.0PF C		R42			RK73GB2A680J	CHIP R 68 J 1/10W	
C308			CK73GB1H102K	CHIP C 1000PF K		R44			RK73GB2A151J	CHIP R 150 J 1/10W	
C309			CK73GB1H103K	CHIP C 0.010UF K		R45			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C310-312			CC73GCH1H470J	CHIP C 47PF J		R46			RK73GB2A223J	CHIP R 22K J 1/10W	
C313			CK73GB1H103K	CHIP C 0.010UF K		R47			RK73GB2A151J	CHIP R 150 J 1/10W	
C320			CC73GCH1H470J	CHIP C 47PF J		R52			RK73GB2A330J	CHIP R 33 J 1/10W	
C321			CK73GB1H103K	CHIP C 0.010UF K		R53			RK73GB2A154J	CHIP R 150K J 1/10W	
C325			CC73GCH1H470J	CHIP C 47PF J		R56,57			RK73GB2A104J	CHIP R 100K J 1/10W	
C326			CK73GB1H103K	CHIP C 0.010UF K		R61			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C327			CK73GB1H333K	CHIP C 0.033UF K		R62			RK73GH2A223D	CHIP R 22K D 1/10W	
C328			CK73GB1H103K	CHIP C 0.010UF K		R63			RK73GH2A563D	CHIP R 56K D 1/10W	
C900			CK73GB1H104K	CHIP C 0.10UF K		R69			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C901			CK73GB1H102K	CHIP C 1000PF K		R70-72			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C902			CC73GCH1H101J	CHIP C 100PF J		R75,76			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C904			CC73GCH1H101J	CHIP C 100PF J		R78			RK73GB2A104J	CHIP R 100K J 1/10W	
C905			CK73FBQJ106K	CHIP C 10UF K		R92			RK73GB2A104J	CHIP R 100K J 1/10W	
C906-908			CK73GB1H102K	CHIP C 1000PF K		R102			RK73GH2A471D	CHIP R 470 D 1/10W	
C909,910			CC73GCH1H101J	CHIP C 100PF J		R105			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C912,913			CC73GCH1H101J	CHIP C 100PF J		R106			RK73GB2A474J	CHIP R 470K J 1/10W	
C914			CK73GB1H104K	CHIP C 0.10UF K		R107-109			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C915			CC73GCH1H101J	CHIP C 100PF J		R110			RK73GB2A394J	CHIP R 390K J 1/10W	
C916			CK73GB1H102K	CHIP C 1000PF K		R121			RK73GH2A103D	CHIP R 10K D 1/10W	
C917-919			CE32BM1V220M	CHIP EL 22UF 35WV		R123			RK73GB2A103J	CHIP R 10K J 1/10W	
CN1			E04-0193-05	PIN SOCKET		R125			R92-1061-05	JUMPER REST 0 OHM	
CN2			E23-0902-05	TERMINAL		R133			RK73GB2A103J	CHIP R 10K J 1/10W	
CN8			E41-2671-05	PIN ASSY		R136			RK73GB2A394J	CHIP R 390K J 1/10W	
CN11			E41-2673-05	PIN ASSY		R137,138			RK73GB2A104J	CHIP R 100K J 1/10W	
CN12			E41-2672-05	PIN ASSY		R140			RK73GB2A104J	CHIP R 100K J 1/10W	
CN15			E41-2672-05	PIN ASSY		R142			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN20			E40-6656-05	PIN ASSY		R144			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN905			E41-1483-05	PIN ASSY		R145			RK73GB2A120J	CHIP R 12 J 1/10W	
J901			E58-0526-05	MODULAR JACK		R151			RK73GB2A000J	CHIP R 0.0 J 1/10W	
F1			F53-0324-15	FUSE (2.5A)		R152			RK73GB2A223J	CHIP R 22K J 1/10W	

PARTS LIST

FINAL UNIT (X45-3870-10)
CONTROL UNIT (X53-4132-71)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R153,154			RK73GB2A471J	CHIP R 470 J 1/10W		C7			CK73GB1H102K	CHIP C 1000PF K	
R155			RK73GB2A101J	CHIP R 100 J 1/10W		C8			CC73GCH1H101J	CHIP C 100PF J	
R156,157			RK73GB2A000J	CHIP R 0.0 J 1/10W		C9			CK73GB1H102K	CHIP C 1000PF K	
R163,164			RK73GB2A122J	CHIP R 1.2K J 1/10W		C10			CC73GCH1H101J	CHIP C 100PF J	
R165			RK73GB2A474J	CHIP R 470K J 1/10W		C12-16			CK73GB1H102K	CHIP C 1000PF K	
R166			RK73GB2A000J	CHIP R 0.0 J 1/10W		C18-28			CK73GB1H102K	CHIP C 1000PF K	
R167			RK73GH2A333D	CHIP R 33K D 1/10W		C29			CC73GCH1H101J	CHIP C 100PF J	
R169,170			RK73GB2A103J	CHIP R 10K J 1/10W		C30-33			CK73GB1H102K	CHIP C 1000PF K	
R202,203			RK73GB2A000J	CHIP R 0.0 J 1/10W		C34			CC73GCH1H101J	CHIP C 100PF J	
R204			RK73GB2A104J	CHIP R 100K J 1/10W		C35			CK73GB1H102K	CHIP C 1000PF K	
R206			RK73GB2A104J	CHIP R 100K J 1/10W		C36			CC73GCH1H101J	CHIP C 100PF J	
R207,208			RK73GB2A473J	CHIP R 47K J 1/10W		C37			CK73GB1H104K	CHIP C 0.10UF K	
R209			RK73GB2A104J	CHIP R 100K J 1/10W		C39-47			CK73GB1H102K	CHIP C 1000PF K	
R900			RK73GB2A000J	CHIP R 0.0 J 1/10W		C49			CC73GCH1H101J	CHIP C 100PF J	
R901			RK73GB2A182J	CHIP R 1.8K J 1/10W		C50-53			CK73GB1H102K	CHIP C 1000PF K	
R902			RK73GB2A000J	CHIP R 0.0 J 1/10W		C54			CC73GCH1H101J	CHIP C 100PF J	
R903			RK73GB2A681J	CHIP R 680 J 1/10W		C55			CK73GB1H102K	CHIP C 1000PF K	
R905,906			RK73GB2A000J	CHIP R 0.0 J 1/10W		C56			CC73GCH1H101J	CHIP C 100PF J	
R907			RK73GH2A153D	CHIP R 15K D 1/10W		C57			CK73GB1H102K	CHIP C 1000PF K	
R909			RK73GB2A000J	CHIP R 0.0 J 1/10W		C58			CC73GCH1H101J	CHIP C 100PF J	
R910			RK73GB2A182J	CHIP R 1.8K J 1/10W		C60-62			CK73GB1H102K	CHIP C 1000PF K	
R911,912			RK73GB2A000J	CHIP R 0.0 J 1/10W		C63			CK73GB1H104K	CHIP C 0.10UF K	
R914			RK73GB2A222J	CHIP R 2.2K J 1/10W		C64			CK73GB1H102K	CHIP C 1000PF K	
R915-917			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		C65			CK73FB0J106K	CHIP C 10UF K	
R918-921			RK73EB2ER39K	CHIP R 0.39 K 1/4W		C66			CK73GB1H102K	CHIP C 1000PF K	
R922			RK73GB2A820J	CHIP R 82 J 1/10W		C67			CK73FB0J106K	CHIP C 10UF K	
VR902			R31-0668-15	VARIABLE RESISTOR (10K)		C68			CK73GB1H102K	CHIP C 1000PF K	
D4			Z5W27V	SURGE ABSORBER		C69			CK73GB1H104K	CHIP C 0.10UF K	
D5			DSM3MA1-RPB	DIODE		C70			CK73GB1H102K	CHIP C 1000PF K	
D6			1SS355	DIODE		C71			CK73FB0J106K	CHIP C 10UF K	
D20-22			HSM88AS-E	DIODE		C72			CK73GB1E105K	CHIP C 1.0UF K	
D23			UDZW4.7(B)	ZENER DIODE		C73			CC73GCH1H101J	CHIP C 100PF J	
D902			AVRM16270MABB	VARIATOR		C74			CK73GB1H104K	CHIP C 0.10UF K	
IC1			LTC6101BIS5-F	ANALOGUE IC		C75			CC73GCH1H101J	CHIP C 100PF J	
IC2			NJM2904E-ZB	ANALOGUE IC		C76			CK73GB1H102K	CHIP C 1000PF K	
IC4			NJM2904E-ZB	ANALOGUE IC		C77		*	C93-1824-05	CHIP C 100UF M	
IC6			NJM2904E-ZB	ANALOGUE IC		C78			CK73FB0J106K	CHIP C 10UF K	
IC7		*	LM56BIMM/NOPB	ANALOGUE IC		C79-82			CK73GB1H104K	CHIP C 0.10UF K	
IC9			S24CS02AFJTBG	ROM IC		C83-86			CK73FB0J106K	CHIP C 10UF K	
IC11			NJM78M05DL1AZB	ANALOGUE IC		C87		*	C93-1824-05	CHIP C 100UF M	
IC12			NJM7805FA-ZB	BI-POLAR IC		C88			CK73GB1H103K	CHIP C 0.010UF K	
IC15			NJM2904E-ZB	ANALOGUE IC		C89,90			CC73GCH1H221J	CHIP C 220PF J	
IC17			NJM7805FA-ZB	BI-POLAR IC		C92			CC73GCH1H100D	CHIP C 10PF D	
IC18			NJM7808FA-ZB	BI-POLAR IC		C95		*	C93-1824-05	CHIP C 100UF M	
IC20		*	AV111-12LF	ANALOGUE IC		C96			CC73GCH1H101J	CHIP C 100PF J	
IC21		*	ADL5604ACPZ	ANALOGUE IC		C97			CK73GB1H104K	CHIP C 0.10UF K	
Q2			SSM3K15TE(F)	FET		C98			CK73FB0J106K	CHIP C 10UF K	
Q3			SSM3J01F	FET		C99			CK73GB1H102K	CHIP C 1000PF K	
Q6			SSM3K15TE(F)	FET		C102			CC73GCH1H150J	CHIP C 15PF J	
Q8			SSM3K15TE(F)	FET		C103			CC73GCH1H101J	CHIP C 100PF J	
Q14			SSM3K15TE(F)	FET		C104-106		*	CD04BQ1H221M	ELECTRO 220UF 50WV	
Q15			2SJ506-E(S)	FET		C107			CK73GB1H102K	CHIP C 1000PF K	
Q22			SSM3K15TE(F)	FET		C108			CK73GB1H104K	CHIP C 0.10UF K	
						C109			CK73GB1H102K	CHIP C 1000PF K	
						C110		*	C93-1824-05	CHIP C 100UF M	
						C111			CK73GB1H104K	CHIP C 0.10UF K	
						C119			CC73GCH1H181J	CHIP C 180PF J	
						C120			CK73GB1H102K	CHIP C 1000PF K	
						C121			CK73FB0J106K	CHIP C 10UF K	
						C122			CC73GCH1H101J	CHIP C 100PF J	
CONTROL UNIT (X53-4132-71)											
C1-5			CK73GB1H102K	CHIP C 1000PF K							
C6			CC73GCH1H101J	CHIP C 100PF J							

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

CONTROL UNIT (X53-4132-71)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C123			CK73GB1H472K	CHIP C 4700PF K		C225			CK73GB1H104K	CHIP C 0.10UF K	
C125			CK73GB1H472K	CHIP C 4700PF K		C226			CK73FB0J106K	CHIP C 10UF K	
C127			CK73GB1H182K	CHIP C 1800PF K		C227			CK73GB1H102K	CHIP C 1000PF K	
C128			CC73GCH1H101J	CHIP C 100PF J		C228			CK73GB1H104K	CHIP C 0.10UF K	
C130		*	CD04BQ1H221M	ELECTRO 220UF 50WV		C229			CC73GCH1H101J	CHIP C 100PF J	
C131			CE32AU1C330M	CHIP EL 33UF 16WV		C230			CK73GB1E105K	CHIP C 1.0UF K	
C133		*	CD04BQ1H221M	ELECTRO 220UF 50WV		C231			CK73GB1H104K	CHIP C 0.10UF K	
C134			CK73GB1H104K	CHIP C 0.10UF K		C233			CK73GB1H103K	CHIP C 0.010UF K	
C137,138			CK73GB1H102K	CHIP C 1000PF K		C234,235			CK73GB1H104K	CHIP C 0.10UF K	
C139,140			CE32AU1C330M	CHIP EL 33UF 16WV		C236			C90-4120-05	ELECTRO 470UF 35WV	
C141			CK73GB1H102K	CHIP C 1000PF K		C237			CK73GB1H104K	CHIP C 0.10UF K	
C144			CE32AU1C330M	CHIP EL 33UF 16WV		C238			CK73GB1H102K	CHIP C 1000PF K	
C145			CK73GB1H182K	CHIP C 1800PF K		C239			C92-0777-05	ELECTRO 1000UF 25WV	
C146			CK73GB1H104K	CHIP C 0.10UF K		C241			CK73GB1H103K	CHIP C 0.010UF K	
C152			CK73GB1H102K	CHIP C 1000PF K		C243			CK73GB1H103K	CHIP C 0.010UF K	
C155			CC73GCH1H181J	CHIP C 180PF J		C244			CK73GB1H104K	CHIP C 0.10UF K	
C157			CE32AU1C330M	CHIP EL 33UF 16WV		C245			CK73FB0J106K	CHIP C 10UF K	
C159			CK73GB1H102K	CHIP C 1000PF K		C246,247			CK73GB1H102K	CHIP C 1000PF K	
C161			CK73GB1H102K	CHIP C 1000PF K		C248,249			CK73GB1H104K	CHIP C 0.10UF K	
C162			CE32AU1C330M	CHIP EL 33UF 16WV		C250			CK73FB0J106K	CHIP C 10UF K	
C165			CK73GB1H102K	CHIP C 1000PF K		C251			CK73GB1H102K	CHIP C 1000PF K	
C166			CE32AU1C330M	CHIP EL 33UF 16WV		C252			CK73FB0J106K	CHIP C 10UF K	
C169			CK73FB0J106K	CHIP C 10UF K		C253-255			CK73GB1H103K	CHIP C 0.010UF K	
C170			CK73GB1H102K	CHIP C 1000PF K		C256			CK73GB1H104K	CHIP C 0.10UF K	
C172			CK73FB0J106K	CHIP C 10UF K		C257			CK73FB0J106K	CHIP C 10UF K	
C173			CC73GCH1H101J	CHIP C 100PF J		C258			CK73GB1H103K	CHIP C 0.010UF K	
C174			CK73GB1H102K	CHIP C 1000PF K		C262			CK73FB0J106K	CHIP C 10UF K	
C175			CC73GCH1H391J	CHIP C 390PF J		C263			CK73GB1H102K	CHIP C 1000PF K	
C177			CC73GCH1H101J	CHIP C 100PF J		C265			CK73GB1H104K	CHIP C 0.10UF K	
C178			CK73FB0J106K	CHIP C 10UF K		C266-270			CK73GB1H103K	CHIP C 0.010UF K	
C188,189			CK73GB1H104K	CHIP C 0.10UF K		C271			CK73FB0J106K	CHIP C 10UF K	
C190			CK73GB1E105K	CHIP C 1.0UF K		C272,273			CK73GB1H103K	CHIP C 0.010UF K	
C192,193			CK73GB1E105K	CHIP C 1.0UF K		C274			CK73GB1H472K	CHIP C 4700PF K	
C194			CC73GCH1H560J	CHIP C 56PF J		C275			CC73GCH1H120J	CHIP C 12PF J	
C195			CC73GCH1H181J	CHIP C 180PF J		C276			CC73GCH1H100D	CHIP C 10PF D	
C196			CC73GCH1H101J	CHIP C 100PF J		C277			CK73GB1H103K	CHIP C 0.010UF K	
C197			CC73GCH1H330J	CHIP C 33PF J		C278			CK73FB0J106K	CHIP C 10UF K	
C199		*	C93-1824-05	CHIP C 100UF M		C279			CK73GB1H103K	CHIP C 0.010UF K	
C200			CK73FB0J106K	CHIP C 10UF K		C280			CC73GCH1H100D	CHIP C 10PF D	
C202			CK73GB1E105K	CHIP C 1.0UF K		C281			CC73GCH1H150J	CHIP C 15PF J	
C203			CC73GCH1H101J	CHIP C 100PF J		C282			CK73GB1H103K	CHIP C 0.010UF K	
C204			CC73GCH1H121J	CHIP C 120PF J		C283			CK73GB1H104K	CHIP C 0.10UF K	
C205			CK73GB1H182K	CHIP C 1800PF K		C284-288			CK73GB1H103K	CHIP C 0.010UF K	
C206		*	C93-1824-05	CHIP C 100UF M		C289			CK73GB1H102K	CHIP C 1000PF K	
C207			CK73GB1H102K	CHIP C 1000PF K		C290-297			CK73GB1H103K	CHIP C 0.010UF K	
C208			CK73FB0J106K	CHIP C 10UF K		C299,300			CK73GB1H103K	CHIP C 0.010UF K	
C209			CK73GB1H103K	CHIP C 0.010UF K		C302			CK73GB1H103K	CHIP C 0.010UF K	
C210			CK73GB1E105K	CHIP C 1.0UF K		C304			CC73GCH1H101J	CHIP C 100PF J	
C211			CK73GB1H392K	CHIP C 3900PF K		C305,306			CK73GB1H102K	CHIP C 1000PF K	
C212			CC73GCH1H120J	CHIP C 12PF J		C307-310			CC73GCH1H101J	CHIP C 100PF J	
C213,214			CK73GB1H103K	CHIP C 0.010UF K		C311,312			CK73GB1H102K	CHIP C 1000PF K	
C215			CK73GB1H104K	CHIP C 0.10UF K		C313			CC73GCH1H101J	CHIP C 100PF J	
C216			CC73GCH1H100D	CHIP C 10PF D		C314			CK73GB1H102K	CHIP C 1000PF K	
C217			CK73GB1H103K	CHIP C 0.010UF K		C315			CC73GCH1H101J	CHIP C 100PF J	
C218			CC73GCH1H471J	CHIP C 470PF J		C316			CK73GB1H102K	CHIP C 1000PF K	
C219			CC73GCH1H100D	CHIP C 10PF D		C317			CK73GB1H103K	CHIP C 0.010UF K	
C220			CK73GB1H103K	CHIP C 0.010UF K		C318			CC73GCH1H101J	CHIP C 100PF J	
C222			CC73GCH1H150J	CHIP C 15PF J		C319			CK73GB1H102K	CHIP C 1000PF K	
C223			CK73GB1H103K	CHIP C 0.010UF K		C320			CK73GB1H103K	CHIP C 0.010UF K	
C224			CK73GB1E105K	CHIP C 1.0UF K		C321			CC73GCH1H101J	CHIP C 100PF J	

PARTS LIST

CONTROL UNIT (X53-4132-71)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C322,323			CK73GB1H102K	CHIP C 1000PF K		C422-424			CK73GB1H102K	CHIP C 1000PF K	
C324			CK73GB1H103K	CHIP C 0.010UF K		C425,426			CC73GCH1H101J	CHIP C 100PF J	
C325			CC73GCH1H101J	CHIP C 100PF J		C427-435			CK73GB1H102K	CHIP C 1000PF K	
C326,327			CK73GB1H102K	CHIP C 1000PF K		C436			CK73GB1E105K	CHIP C 1.0UF K	
C328			CK73GB1H103K	CHIP C 0.010UF K		C437,438			CC73GCH1H101J	CHIP C 100PF J	
C329-331			CK73GB1H102K	CHIP C 1000PF K		C440			CK73GB1H102K	CHIP C 1000PF K	
C332			CK73GB1H103K	CHIP C 0.010UF K		C442			CC73GCH1H101J	CHIP C 100PF J	
C333-339			CK73GB1H102K	CHIP C 1000PF K		C444			CK73GB1H102K	CHIP C 1000PF K	
C340			CK73GB1H103K	CHIP C 0.010UF K		C445			CK73GB1H104K	CHIP C 0.10UF K	
C342,343			CK73GB1H102K	CHIP C 1000PF K		C446			CC73GCH1H391J	CHIP C 390PF J	
C344			CK73GB1H103K	CHIP C 0.010UF K		C447			CC73GCH1H101J	CHIP C 100PF J	
C345			CK73GB1H104K	CHIP C 0.10UF K		C448,449			CK73GB1H102K	CHIP C 1000PF K	
C346,347			CK73GB1H102K	CHIP C 1000PF K		C450			CC73GCH1H101J	CHIP C 100PF J	
C348			CK73GB1H103K	CHIP C 0.010UF K		C452,453			CK73GB1H102K	CHIP C 1000PF K	
C350			CK73GB1H102K	CHIP C 1000PF K		C456,457			CK73GB1H102K	CHIP C 1000PF K	
C351			CK73GB1H103K	CHIP C 0.010UF K		C463			CK73GB1H104K	CHIP C 0.10UF K	
C352,353			CK73GB1H102K	CHIP C 1000PF K		C467,468			CK73GB1H102K	CHIP C 1000PF K	
C354			CK73GB1H103K	CHIP C 0.010UF K		C469,470			CC73GCH1H101J	CHIP C 100PF J	
C355			CC73GCH1H101J	CHIP C 100PF J		C471			CK73GB1H102K	CHIP C 1000PF K	
C356			CK73GB1H102K	CHIP C 1000PF K		C473-475			CK73GB1H102K	CHIP C 1000PF K	
C357			CK73GB1H103K	CHIP C 0.010UF K		C477			CK73GB1E105K	CHIP C 1.0UF K	
C358			CK73GB1H102K	CHIP C 1000PF K		C499			C92-0905-05	OS-CON 47UF 35WV	
C359			CC73GCH1H101J	CHIP C 100PF J		C500			CK73GB1H104K	CHIP C 0.10UF K	
C360			CK73GB1H102K	CHIP C 1000PF K		C510			CK73FB0J106K	CHIP C 10UF K	
C361			CK73GB1H103K	CHIP C 0.010UF K		CN1-3			E40-6656-05	PIN ASSY	
C362			CK73GB1H102K	CHIP C 1000PF K		CN4			E41-2673-05	PIN ASSY	
C363			CC73GCH1H101J	CHIP C 100PF J		CN56,57			E40-6656-05	PIN ASSY	
C364			CK73GB1H102K	CHIP C 1000PF K		CN58			E40-5960-05	PIN ASSY	
C365			CK73GB1H103K	CHIP C 0.010UF K		CN59			E40-6102-05	PIN ASSY	
C366-368			CK73GB1H102K	CHIP C 1000PF K		CN60			E41-2735-05	PIN ASSY	
C369			CK73GB1H103K	CHIP C 0.010UF K		F1,2			F53-0315-15	FUSE(250MA)	
C370-372			CK73GB1H102K	CHIP C 1000PF K		F3			F53-0328-15	FUSE(5A)	
C373			CC73GCH1H101J	CHIP C 100PF J		L3-14			L92-0447-05	BEADS CORE	
C374			CK73GB1H103K	CHIP C 0.010UF K		L15			L33-1476-05	SMALL FIXED INDUCTOR	
C375,376			CK73GB1H102K	CHIP C 1000PF K		L16			L33-1475-05	SMALL FIXED INDUCTOR	
C377			CC73GCH1H101J	CHIP C 100PF J		L17,18			L92-0447-05	BEADS CORE	
C379,380			CK73GB1H102K	CHIP C 1000PF K		L19			L33-1475-05	SMALL FIXED INDUCTOR	
C381			CC73GCH1H101J	CHIP C 100PF J		L20-22			L92-0447-05	BEADS CORE	
C382			CK73GB1H103K	CHIP C 0.010UF K		L32-40			L92-0447-05	BEADS CORE	
C383,384			CK73GB1H102K	CHIP C 1000PF K		L43			L92-0447-05	BEADS CORE	
C385			CC73GCH1H101J	CHIP C 100PF J		L44-49			L92-0467-05	CHIP FERRITE	
C386,387			CK73GB1H102K	CHIP C 1000PF K		X1			L77-1984-05	CRYSTAL RESONATOR (14.7456MHZ)	
C388			CC73GCH1H101J	CHIP C 100PF J		X2			L77-1987-05	CRYSTAL RESONATOR (16.515072MHZ)	
C389,390			CK73GB1H102K	CHIP C 1000PF K		CP8			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C394			C92-0905-05	OS-CON 47UF 35WV		CP10			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C395			CK73GB1H103K	CHIP C 0.010UF K		CP13			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C396-399			CK73GB1H102K	CHIP C 1000PF K		CP19			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C400,401			CE32AU1C330M	CHIP EL 33UF 16WV		CP25,26			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C403			CK73GB1E105K	CHIP C 1.0UF K		R1,2			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C404			CK73FB0J106K	CHIP C 10UF K		R6			RK73GB2A101J	CHIP R 100 J 1/10W	
C405,406			CC73GCH1H101J	CHIP C 100PF J		R7-17			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C407			CK73GB1H102K	CHIP C 1000PF K		R18,19			RK73GB2A101J	CHIP R 100 J 1/10W	
C408-410			CK73GB1E105K	CHIP C 1.0UF K		R21-45			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C413			CK73GB1H104K	CHIP C 0.10UF K		R47-49			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C414			CK73GB1H103K	CHIP C 0.010UF K		R51-61			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C415			CK73GB1H104K	CHIP C 0.10UF K		R62			RK73GB2A101J	CHIP R 100 J 1/10W	
C416			CK73GB1H103K	CHIP C 0.010UF K		R63,64			RK73GB2A332J	CHIP R 3.3K J 1/10W	
C417			CK73GB1E105K	CHIP C 1.0UF K		R65			RK73GB2A123J	CHIP R 12K J 1/10W	
C418-420			CK73GB1H102K	CHIP C 1000PF K							
C421			CC73GCH1H101J	CHIP C 100PF J							

PARTS LIST

CONTROL UNIT (X53-4132-71)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R66			RK73GB2A683J	CHIP R 68K J 1/10W		R167			RK73GB2A473J	CHIP R 47K J 1/10W	
R67			RK73GH2A822D	CHIP R 8.2K D 1/10W		R168			RK73GB2A563J	CHIP R 56K J 1/10W	
R68			RK73GH2A332D	CHIP R 3.3K D 1/10W		R169			RK73GB2A333J	CHIP R 33K J 1/10W	
R69,70			RK73GB2A000J	CHIP R 0.0 J 1/10W		R171			RK73GB2A183J	CHIP R 18K J 1/10W	
R71			RK73GH2A473D	CHIP R 47K D 1/10W		R172,173			RK73GB2A473J	CHIP R 47K J 1/10W	
R72-76			RK73GB2A000J	CHIP R 0.0 J 1/10W		R174			RK73GB2A683J	CHIP R 68K J 1/10W	
R77			RK73GH2A104D	CHIP R 100K D 1/10W		R175			RK73GB2A393J	CHIP R 39K J 1/10W	
R78			RK73GB2A104J	CHIP R 100K J 1/10W		R176			RK73GB2A473J	CHIP R 47K J 1/10W	
R79			RK73GH2A332D	CHIP R 3.3K D 1/10W		R177,178			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R80			RK73GB2A123J	CHIP R 12K J 1/10W		R179			RK73GB2A473J	CHIP R 47K J 1/10W	
R81,82			RK73GB2A563J	CHIP R 56K J 1/10W		R180			RK73GB2A223J	CHIP R 22K J 1/10W	
R83			RK73GB2A124J	CHIP R 120K J 1/10W		R181,182			RK73GB2A103J	CHIP R 10K J 1/10W	
R84			RK73GB2A473J	CHIP R 47K J 1/10W		R183			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R85			RK73GB2A000J	CHIP R 0.0 J 1/10W		R184			RK73GB2A473J	CHIP R 47K J 1/10W	
R86			RK73GB2A473J	CHIP R 47K J 1/10W		R185			RK73GB2A103J	CHIP R 10K J 1/10W	
R87			RK73GB2A223J	CHIP R 22K J 1/10W		R186			RK73GB2A563J	CHIP R 56K J 1/10W	
R88			RK73GB2A000J	CHIP R 0.0 J 1/10W		R187			RK73GB2A223J	CHIP R 22K J 1/10W	
R89			RK73GB2A103J	CHIP R 10K J 1/10W		R190			RK73GB2A393J	CHIP R 39K J 1/10W	
R90			RK73GB2A153J	CHIP R 15K J 1/10W		R191			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R91			RK73GB2A472J	CHIP R 4.7K J 1/10W		R192			RK73GB2A154J	CHIP R 150K J 1/10W	
R92			RK73GB2A562J	CHIP R 5.6K J 1/10W		R193			RK73GB2A103J	CHIP R 10K J 1/10W	
R93,94			RK73GB2A000J	CHIP R 0.0 J 1/10W		R194			RK73GB2A473J	CHIP R 47K J 1/10W	
R95			RK73GB2A470J	CHIP R 47 J 1/10W		R195,196			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R96			RK73GB2A223J	CHIP R 22K J 1/10W		R197			RK73GB2A103J	CHIP R 10K J 1/10W	
R98			RK73GB2A103J	CHIP R 10K J 1/10W		R198			RK73GB2A473J	CHIP R 47K J 1/10W	
R100			RK73GB2A473J	CHIP R 47K J 1/10W		R199			RK73GB2A103J	CHIP R 10K J 1/10W	
R101			RK73GB2A000J	CHIP R 0.0 J 1/10W		R200,201			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R102			RK73GB2A123J	CHIP R 12K J 1/10W		R202			RK73GB2A473J	CHIP R 47K J 1/10W	
R103-105			RK73GB2A473J	CHIP R 47K J 1/10W		R203			RK73GB2A104J	CHIP R 100K J 1/10W	
R106-108			RK73GB2A000J	CHIP R 0.0 J 1/10W		R204			RK73GB2A473J	CHIP R 47K J 1/10W	
R109			RK73GB2A153J	CHIP R 15K J 1/10W		R205			RK73GB2A104J	CHIP R 100K J 1/10W	
R111			RK73GB2A823J	CHIP R 82K J 1/10W		R206			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R112			RK73GB2A123J	CHIP R 12K J 1/10W		R207,208			RK73GB2A473J	CHIP R 47K J 1/10W	
R113			RK73GB2A823J	CHIP R 82K J 1/10W		R209			RK73GB2A103J	CHIP R 10K J 1/10W	
R114			RK73GB2A223J	CHIP R 22K J 1/10W		R210			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R115			RK73GB2A154J	CHIP R 150K J 1/10W		R211,212			RK73GB2A473J	CHIP R 47K J 1/10W	
R116			RK73GB2A223J	CHIP R 22K J 1/10W		R213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R127			RK73GB2A473J	CHIP R 47K J 1/10W		R214			RK73GB2A824J	CHIP R 820K J 1/10W	
R128-130			RK73GB2A000J	CHIP R 0.0 J 1/10W		R215			RK73GB2A473J	CHIP R 47K J 1/10W	
R131-133			RK73GB2A473J	CHIP R 47K J 1/10W		R216,217			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R135			RK73GB2A000J	CHIP R 0.0 J 1/10W		R218,219			RK73GB2A473J	CHIP R 47K J 1/10W	
R137			RK73GB2A102J	CHIP R 1.0K J 1/10W		R220,221			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R138			RK73GB2A473J	CHIP R 47K J 1/10W		R222			RK73GB2A473J	CHIP R 47K J 1/10W	
R141-144			RK73GB2A000J	CHIP R 0.0 J 1/10W		R223			RK73GB2A103J	CHIP R 10K J 1/10W	
R145			RK73GB2A104J	CHIP R 100K J 1/10W		R224			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R146-148			RK73GB2A000J	CHIP R 0.0 J 1/10W		R225			RK73GB2A103J	CHIP R 10K J 1/10W	
R149			RK73GB2A333J	CHIP R 33K J 1/10W		R226			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R150			RK73GB2A563J	CHIP R 56K J 1/10W		R228,229			RK73GB2A824J	CHIP R 820K J 1/10W	
R151			RK73GB2A124J	CHIP R 120K J 1/10W		R230,231			RK73GB2A473J	CHIP R 47K J 1/10W	
R152			RK73GB2A104J	CHIP R 100K J 1/10W		R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R153			RK73GB2A000J	CHIP R 0.0 J 1/10W		R233			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R154,155			RK73GB2A333J	CHIP R 33K J 1/10W		R234,235			RK73GB2A473J	CHIP R 47K J 1/10W	
R156,157			RK73GH2A104D	CHIP R 100K D 1/10W		R237			RK73GB2A473J	CHIP R 47K J 1/10W	
R158			RK73GB2A333J	CHIP R 33K J 1/10W		R240-243			RK73GB2A473J	CHIP R 47K J 1/10W	
R159			RK73GB2A000J	CHIP R 0.0 J 1/10W		R245,246			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R160,161			RK73GB2A563J	CHIP R 56K J 1/10W		R247			RK73GB2A473J	CHIP R 47K J 1/10W	
R162			RK73GB2A224J	CHIP R 220K J 1/10W		R249,250			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R163			RK73GB2A000J	CHIP R 0.0 J 1/10W		R251			RK73GB2A473J	CHIP R 47K J 1/10W	
R165			RK73GB2A104J	CHIP R 100K J 1/10W		R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R166			RK73GB2A333J	CHIP R 33K J 1/10W		R261,262			RK73GB2A473J	CHIP R 47K J 1/10W	

PARTS LIST

CONTROL UNIT (X53-4132-71)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R267-271			RK73GB2A473J	CHIP R 47K J 1/10W		R491-495			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R273			RK73GB2A473J	CHIP R 47K J 1/10W		R501			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R275			RK73GB2A473J	CHIP R 47K J 1/10W		R502			RK73GB2A183J	CHIP R 18K J 1/10W	
R277			RK73GB2A473J	CHIP R 47K J 1/10W		R507-510			RK73GB2A183J	CHIP R 18K J 1/10W	
R279			RK73GB2A103J	CHIP R 10K J 1/10W		R511-515			RK73GB2A123J	CHIP R 12K J 1/10W	
R281			RK73GB2A103J	CHIP R 10K J 1/10W		R522,523			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R283			RK73GB2A000J	CHIP R 0.0 J 1/10W		R524,525			RK73GB2A473J	CHIP R 47K J 1/10W	
R286-288			RK73GB2A000J	CHIP R 0.0 J 1/10W		R526,527			RK73GB2A121J	CHIP R 120 J 1/10W	
R289			RK73GB2A473J	CHIP R 47K J 1/10W		R528-535			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R290			RK73GB2A000J	CHIP R 0.0 J 1/10W		R536			RK73GB2A104J	CHIP R 100K J 1/10W	
R292-294			RK73GB2A000J	CHIP R 0.0 J 1/10W		R540			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R296,297			RK73GB2A473J	CHIP R 47K J 1/10W		R541			RK73GB2A123J	CHIP R 12K J 1/10W	
R299,300			RK73GB2A103J	CHIP R 10K J 1/10W		R552			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R301,302			RK73GB2A104J	CHIP R 100K J 1/10W		D1,2			CMS05-Q	DIODE	
R303-315			RK73GB2A473J	CHIP R 47K J 1/10W		D3,4			DA204U	DIODE	
R316-338			RK73GB2A000J	CHIP R 0.0 J 1/10W		D5			1SS355	DIODE	
R340			RK73GB2A102J	CHIP R 1.0K J 1/10W		D6			02DZ18F-X	ZENER DIODE	
R342-351			RK73GB2A102J	CHIP R 1.0K J 1/10W		D7-11			DA204U	DIODE	
R352			RK73GB2A471J	CHIP R 470 J 1/10W		D12			1SS355	DIODE	
R353-357			RK73GB2A102J	CHIP R 1.0K J 1/10W		D13			02DZ18F-X	ZENER DIODE	
R358			RK73GB2A122J	CHIP R 1.2K J 1/10W		D14-18			DA204U	DIODE	
R359			RK73GB2A000J	CHIP R 0.0 J 1/10W		D20			DA204U	DIODE	
R360			RK73GB2A122J	CHIP R 1.2K J 1/10W		D23			DA204U	DIODE	
R361-377			RK73GB2A000J	CHIP R 0.0 J 1/10W		D24			SMD185F-2	VARISTOR	
R378,379			RK73GB2A122J	CHIP R 1.2K J 1/10W		D25			MINISMDC020F	VARISTOR	
R380			RK73GB2A000J	CHIP R 0.0 J 1/10W		D26			1SS388F	DIODE	
R389-396			RK73GB2A000J	CHIP R 0.0 J 1/10W		D28			1SS355	DIODE	
R398-404			RK73GB2A000J	CHIP R 0.0 J 1/10W		D29			02DZ18F-X	ZENER DIODE	
R406-409			RK73GB2A000J	CHIP R 0.0 J 1/10W		D30			1SS355	DIODE	
R410			RK73GB2A684J	CHIP R 680K J 1/10W		D31			02DZ18F-X	ZENER DIODE	
R411			RK73GB2A224J	CHIP R 220K J 1/10W		D32			1SS355	DIODE	
R412			RK73GB2A103J	CHIP R 10K J 1/10W		D33			02DZ18F-X	ZENER DIODE	
R413			RK73GB2A104J	CHIP R 100K J 1/10W		D36,37			DA204U	DIODE	
R414			RK73GB2A000J	CHIP R 0.0 J 1/10W		D38,39			1SS388F	DIODE	
R415-418			RK73GB2A104J	CHIP R 100K J 1/10W		IC1			BU4094BCFV	MOS-IC	
R419,420			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC2,3			BU4053BCFV	MOS-IC	
R426			RS14KB3D220J	FL-PROOF RS 22 J 2W		IC4			AK4550VTP	MOS-IC	
R427			RK73GB2A223J	CHIP R 22K J 1/10W		IC5			NJM2732V	BI-POLAR IC	
R428-430			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC6		*	XC6209B332P-G	MOS-IC	
R432			RK73GB2A470J	CHIP R 47 J 1/10W		IC7			TA75S01F-F	MOS-IC	
R433			RK73GB2A473J	CHIP R 47K J 1/10W		IC8			M62364FP-F	MOS-IC	
R434			RK73GB2A470J	CHIP R 47 J 1/10W		IC9			NJM2734V	BI-POLAR IC	
R435			RK73GB2A473J	CHIP R 47K J 1/10W		IC10,11			NJM2340RB1	MOS-IC	
R436-446			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC12			NJM2732V	BI-POLAR IC	
R448-454			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC14			BU4053BCFV	MOS-IC	
R455			RK73GB2A104J	CHIP R 100K J 1/10W		IC15			BA33BC0FP	MOS-IC	
R457			RK73GB2A473J	CHIP R 47K J 1/10W		IC16			XC6209B502PR	MOS-IC	
R458,459			RK73GB2A104J	CHIP R 100K J 1/10W		IC17			Note 1 (BGA)	ROM IC	
R460,461			RK73GB2A103J	CHIP R 10K J 1/10W		IC18			XC6201P182MR	MOS-IC	
R467,468			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC19			NJM2732V	BI-POLAR IC	
R469			RK73GB2A103J	CHIP R 10K J 1/10W		IC20,21			NJM2734V	BI-POLAR IC	
R470			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC22			BU4094BCFV	MOS-IC	
R471-473			RK73GB2A104J	CHIP R 100K J 1/10W		IC23			TC7SH00FU-F	MOS-IC	
R474			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC25			TC7S66FUF	MOS-IC	
R475			RK73GB2A104J	CHIP R 100K J 1/10W		IC26			NJM2734V	BI-POLAR IC	
R477			RK73GB2A104J	CHIP R 100K J 1/10W		IC27			TC7SET126FU-F	MOS-IC	
R478			RK73GB2A103J	CHIP R 10K J 1/10W		IC28			TC7SH126FU-F	MOS-IC	
R479			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC29			LA4425A	MOS-IC	
R482			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC30			TC7SH00FU-F	MOS-IC	
R484			RK73GB2A000J	CHIP R 0.0 J 1/10W							

If a part reference number is listed in a shaded box, that part does not come with the PCB.

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

CONTROL UNIT (X53-4132-71)
CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC31			TC7MH4040FK-F	MOS-IC		C352			CK73HB1H102K	CHIP C	1000PF K
IC32,33			TC7SH126FU-F	MOS-IC		C353			CC73HCH1H101J	CHIP C	100PF J
IC34		*	30625MGP490GU	MICROPROCESSOR IC		C354			CK73HB1H102K	CHIP C	1000PF K
IC35			S24CS02AFJTBG	ROM IC		C355			CK73HB1E103K	CHIP C	0.010UF K
IC36			TC7MET541AFK	MOS-IC		C356			CC73HCH1H101J	CHIP C	100PF J
IC37			320VC5402PGE	MICROPROCESSOR IC		C357,358			CK73HB1H102K	CHIP C	1000PF K
IC38			TC7SET08FU-F	MOS-IC		C359,360			CK73HB1A104K	CHIP C	0.10UF K
IC39			TC7SH125FU-F	MOS-IC		C361			CK73HB1H102K	CHIP C	1000PF K
IC40			TC7SH126FU-F	MOS-IC		C362			CK73HB1E103K	CHIP C	0.010UF K
IC41			TC7SH08FU-F	MOS-IC		C364-366			CK73HB1H102K	CHIP C	1000PF K
IC50			TC7SH08FU-F	MOS-IC		C369,370			CK73HB1H102K	CHIP C	1000PF K
Q1			RT1N141M-T111	TRANSISTOR		C371			CK73HB1A104K	CHIP C	0.10UF K
Q2,3			2SJ506-E(S)	FET		C373,374			CK73HB1H102K	CHIP C	1000PF K
Q4,5			2SC4738F	TRANSISTOR		C376-378			CK73HB1H102K	CHIP C	1000PF K
Q6			DTC363EU	DIGITAL TRANSISTOR		C379			CK73HB1A104K	CHIP C	0.10UF K
Q7,8			RT1N141M-T111	TRANSISTOR		C380,381			CK73HB1H102K	CHIP C	1000PF K
Q9			2SJ506-E(S)	FET		C383-386			CK73HB1H102K	CHIP C	1000PF K
Q10			2SC4738F	TRANSISTOR		C387			CK73GB1H103K	CHIP C	0.010UF K
Q11			2SD2114K(W)	TRANSISTOR		C388-390			CK73HB1H102K	CHIP C	1000PF K
Q12			2SC4738F	TRANSISTOR		C391			CK73GB1E105K	CHIP C	1.0UF K
Q13			2SD2114K(W)	TRANSISTOR		C393-395			CK73HB1H102K	CHIP C	1000PF K
Q14			2SC4116(Y)F	TRANSISTOR		C396			CK73GB1H103K	CHIP C	0.010UF K
Q15			2SA1586(Y)F	TRANSISTOR		C397,398			CK73HB1H102K	CHIP C	1000PF K
Q16			2SC4116(Y)F	TRANSISTOR		C399			CK73GB1H104K	CHIP C	0.10UF K
Q17			2SA1586(Y)F	TRANSISTOR		C401			CC73HCH1H101J	CHIP C	100PF J
Q18			2SK1830F	FET		C402			CK73HB1H102K	CHIP C	1000PF K
Q19			HN1L02FU(F)	FET		C403			CC73HCH1H101J	CHIP C	100PF J
Q20			2SA1955A-F	TRANSISTOR		C405,406			CK73HB1H102K	CHIP C	1000PF K
Q21			RT1N441M-T111	TRANSISTOR		C409			CK73HB1H102K	CHIP C	1000PF K
Q22			2SA1955A-F	TRANSISTOR		C410			CC73HCH1H101J	CHIP C	100PF J
Q23			RT1N441M-T111	TRANSISTOR		C412-415			CK73HB1H102K	CHIP C	1000PF K
Q25,26			RT1N441M-T111	TRANSISTOR		C416			CC73HCH1H101J	CHIP C	100PF J
Q27-29			2SD2114K(W)	TRANSISTOR		C417,418			CE32AU1C330M	CHIP EL	33UF 16WV
						C419			CC73HCH1H101J	CHIP C	100PF J
						C420			CK73HB1A104K	CHIP C	0.10UF K
						C421			CK73HB1H102K	CHIP C	1000PF K
						C422			CE32AU1C330M	CHIP EL	33UF 16WV
						C423			CC73HCH1H101J	CHIP C	100PF J
						C424			CK73HB1H102K	CHIP C	1000PF K
						C426-430			CK73HB1H102K	CHIP C	1000PF K
C302			CC73HCH1H101J	CHIP C	100PF J	C432			CC73HCH1H101J	CHIP C	100PF J
C303			CK73HB1H102K	CHIP C	1000PF K	C433			CK73HB1H102K	CHIP C	1000PF K
C305			CK73HB1A104K	CHIP C	0.10UF K	C435-437			CK73HB1H102K	CHIP C	1000PF K
C306			CK73HB1H102K	CHIP C	1000PF K	C438			CK73GB1H103K	CHIP C	0.010UF K
C308,309			CK73HB1H102K	CHIP C	1000PF K	C439			CE32AU1C330M	CHIP EL	33UF 16WV
C311			CK73HB1A104K	CHIP C	0.10UF K	C440-442			CK73HB1H102K	CHIP C	1000PF K
C312-317			CK73HB1H102K	CHIP C	1000PF K	C443,444			CE32AU1C330M	CHIP EL	33UF 16WV
C320			CC73HCH1H101J	CHIP C	100PF J	C445			CK73HB1A104K	CHIP C	0.10UF K
C322,323			CK73HB1H102K	CHIP C	1000PF K	C446			CK73FB1H102K	CHIP C	1000PF K
C324			CC73HCH1H101J	CHIP C	100PF J	C447			CK73HB1A104K	CHIP C	0.10UF K
C326-329			CK73HB1H102K	CHIP C	1000PF K	C448			CE32AU1C330M	CHIP EL	33UF 16WV
C331			CK73HB1H102K	CHIP C	1000PF K	C449,450			CK73HB1A104K	CHIP C	0.10UF K
C333-335			CK73HB1H102K	CHIP C	1000PF K	C453			CK73GB1H103K	CHIP C	0.010UF K
C337			CK73HB1H102K	CHIP C	1000PF K	C461			CK73GB1H103K	CHIP C	0.010UF K
C339			CC73HCH1H101J	CHIP C	100PF J	C462			CK73HB1E103K	CHIP C	0.010UF K
C341,342			CK73HB1H102K	CHIP C	1000PF K	C463			CC73HCH1H100D	CHIP C	10PF D
C343			CC73HCH1H101J	CHIP C	100PF J	C465			CK73GB1H103K	CHIP C	0.010UF K
C344			CK73HB1H102K	CHIP C	1000PF K	C466			CK73GB1H104K	CHIP C	0.10UF K
C345			CC73HCH1H101J	CHIP C	100PF J	C467			CK73GB1H103K	CHIP C	0.010UF K
C346-348			CK73HB1H102K	CHIP C	1000PF K	C468			CK73GB1H104K	CHIP C	0.10UF K
C349			CC73HCH1H101J	CHIP C	100PF J						
C350			CK73HB1H102K	CHIP C	1000PF K						

PARTS LIST

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C469			CC73GCH1H121J	CHIP C 120PF J		C706			CK73HB1H102K	CHIP C 1000PF K	
C471			CK73HB1H102K	CHIP C 1000PF K		C707			CC73HCH1H070D	CHIP C 7.0PF D	
C474			CK73HB1H392K	CHIP C 3900PF K		C708			CK73HB1A104K	CHIP C 0.10UF K	
C475			CK73FB0J106K	CHIP C 10UF K		C709			CK73FB0J106K	CHIP C 10UF K	
C476			CK73HB1A104K	CHIP C 0.10UF K		C710			CK73HB1E103K	CHIP C 0.010UF K	
C477			CC73GCH1H121J	CHIP C 120PF J		C711			CK73FB0J106K	CHIP C 10UF K	
C478			CK73HB1H102K	CHIP C 1000PF K		C712			CK73HB1H102K	CHIP C 1000PF K	
C479			CC73GCH1H121J	CHIP C 120PF J		C713			CK73HB1A104K	CHIP C 0.10UF K	
C480			CK73FB0J106K	CHIP C 10UF K		C714			CK73FB0J106K	CHIP C 10UF K	
C482			CK73HB1A104K	CHIP C 0.10UF K		C715			CK73HB1A104K	CHIP C 0.10UF K	
C484			CS77BA1C010M	CHIP TNTL 1.0UF 16WV		C716			CK73HB1H102K	CHIP C 1000PF K	
C485			CK73GB1H103K	CHIP C 0.010UF K		C717			CK73HB1A104K	CHIP C 0.10UF K	
C486			CC73GCH1H121J	CHIP C 120PF J		C718			CC73HCH1H070D	CHIP C 7.0PF D	
C487			CK73HB1H102K	CHIP C 1000PF K		C719			CK73FB0J106K	CHIP C 10UF K	
C491			CK73FB0J106K	CHIP C 10UF K		C720			CK73HB1A104K	CHIP C 0.10UF K	
C493,494			CK73HB1A104K	CHIP C 0.10UF K		C721			CC73HCH1H100D	CHIP C 10PF D	
C495			CK73GB1E105K	CHIP C 1.0UF K		C722,723			CK73HB1H102K	CHIP C 1000PF K	
C496			CK73HB1C822K	CHIP C 8200PF K		C724			CK73HB1A104K	CHIP C 0.10UF K	
C501			CK73HB1A104K	CHIP C 0.10UF K		C725			CK73HB1H102K	CHIP C 1000PF K	
C504			CK73HB1A104K	CHIP C 0.10UF K		C726			CK73FB0J106K	CHIP C 10UF K	
C506			CK73HB1H472K	CHIP C 4700PF K		C727			CC73HCH1H020B	CHIP C 2.0PF B	
C507			CK73HB1E103K	CHIP C 0.010UF K		C728			CK73HB1E103K	CHIP C 0.010UF K	
C508			CK73HB1A104K	CHIP C 0.10UF K		C729			CC73HCH1H020B	CHIP C 2.0PF B	
C509			CK73GB1E105K	CHIP C 1.0UF K		C730			CK73HB1A104K	CHIP C 0.10UF K	
C515			CK73GB1E105K	CHIP C 1.0UF K		C732			CK73HB1H102K	CHIP C 1000PF K	
C516			CK73HB1H102K	CHIP C 1000PF K		C733-741			CK73HB1A104K	CHIP C 0.10UF K	
C517			CK73HB1A104K	CHIP C 0.10UF K		C742			CK73FB0J106K	CHIP C 10UF K	
C519			CK73HB1C473K	CHIP C 0.047UF K		C743,744			CK73HB1A104K	CHIP C 0.10UF K	
C520			CK73GB1E105K	CHIP C 1.0UF K		C746-750			CK73GB1E105K	CHIP C 1.0UF K	
C521			CK73HB1E103K	CHIP C 0.010UF K		C751			CK73HB1E103K	CHIP C 0.010UF K	
C522-525			CK73HB1A104K	CHIP C 0.10UF K		C754-758			CK73HB1A104K	CHIP C 0.10UF K	
C526-529			CK73FB0J106K	CHIP C 10UF K		C767,768			CK73HB1H102K	CHIP C 1000PF K	
C531			CK73HB1H102K	CHIP C 1000PF K		C769			CK73FB0J106K	CHIP C 10UF K	
C532			CK73HB1A104K	CHIP C 0.10UF K		C770-773			CK73HB1A104K	CHIP C 0.10UF K	
C533-536			CK73HB1H102K	CHIP C 1000PF K		C775			CK73HB1H102K	CHIP C 1000PF K	
C537			CK73FB0J106K	CHIP C 10UF K		C776-780			CK73HB1E103K	CHIP C 0.010UF K	
C538,539			CK73HB1H102K	CHIP C 1000PF K		C781			CK73HB1A104K	CHIP C 0.10UF K	
C543			CK73FB0J106K	CHIP C 10UF K		C782			CC73HCH1H120G	CHIP C 12PF G	
C544-546			CK73HB1H102K	CHIP C 1000PF K		C783			CC73HCH1H100D	CHIP C 10PF D	
C547			CK73FB0J106K	CHIP C 10UF K		C784,785			CK73HB1A104K	CHIP C 0.10UF K	
C548			CK73HB1E103K	CHIP C 0.010UF K		C786			CC73HCH1H150J	CHIP C 15PF J	
C549			CC73HCH1H120G	CHIP C 12PF G		C787			CC73HCH1H100D	CHIP C 10PF D	
C550,551			CC73HCH1H100D	CHIP C 10PF D		C788			CK73FB0J106K	CHIP C 10UF K	
C552			CC73HCH1H150J	CHIP C 15PF J		C789-793			CK73HB1A104K	CHIP C 0.10UF K	
C553			CK73HB1E103K	CHIP C 0.010UF K		C794			CK73FB0J106K	CHIP C 10UF K	
C557			CK73HB1H102K	CHIP C 1000PF K		C795			CK73HB1A104K	CHIP C 0.10UF K	
C565			CK73FB0J106K	CHIP C 10UF K		C796,797			CK73HB1E103K	CHIP C 0.010UF K	
C566			CK73HB1H102K	CHIP C 1000PF K		C798			CK73HB1A104K	CHIP C 0.10UF K	
C567			CK73HB1E103K	CHIP C 0.010UF K		C799,800			CK73HB1E103K	CHIP C 0.010UF K	
C569			CE32AU1C330M	CHIP EL 33UF 16WV		C801			CK73HB1H102K	CHIP C 1000PF K	
C570,571			CK73HB1H102K	CHIP C 1000PF K		C802,803			CK73HB1A104K	CHIP C 0.10UF K	
C572			CE32BM1E470M	CHIP EL 47UF 25WV		C804			CK73FB0J106K	CHIP C 10UF K	
C574			CK73HB1H102K	CHIP C 1000PF K		C805-807			CK73HB1E103K	CHIP C 0.010UF K	
C575-588			CK73HB1E103K	CHIP C 0.010UF K		C808			CK73HB1H102K	CHIP C 1000PF K	
C590-601			CK73HB1E103K	CHIP C 0.010UF K		C809			CK73HB1A104K	CHIP C 0.10UF K	
C700			CK73HB1E103K	CHIP C 0.010UF K		C812			CK73HB1A104K	CHIP C 0.10UF K	
C701			CK73HB1A104K	CHIP C 0.10UF K		C813-815			CK73HB1H102K	CHIP C 1000PF K	
C702			CK73HB1H102K	CHIP C 1000PF K		C816-818			CK73HB1A104K	CHIP C 0.10UF K	
C703			CC73HCH1H150J	CHIP C 15PF J		C819			CK73HB1H102K	CHIP C 1000PF K	
C704,705			CK73FB0J106K	CHIP C 10UF K		C820,821			CK73HB1A104K	CHIP C 0.10UF K	

PARTS LIST

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C822			CK73HB1H102K	CHIP C 1000PF K		R340-350			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C825			CK73HB1H102K	CHIP C 1000PF K		R352-354			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C826,827			CC73HCH1H101J	CHIP C 100PF J		R356-360			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C828			CK73HB1H102K	CHIP C 1000PF K		R361			RK73GB2A104J	CHIP R 100K J 1/10W	
C829			CC73HCH1H101J	CHIP C 100PF J		R362			RK73GB2A681J	CHIP R 680 J 1/10W	
C830			CK73HB1H102K	CHIP C 1000PF K		R363-386			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C831			CC73HCH1H101J	CHIP C 100PF J		R387			RK73HB1J104J	CHIP R 100K J 1/16W	
C832			CK73HB1H102K	CHIP C 1000PF K		R388-390			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C833,834			CK73HB1A104K	CHIP C 0.10UF K		R391			RK73GB2A100J	CHIP R 10 J 1/10W	
C835-837			CK73HB1H102K	CHIP C 1000PF K		R392			RK73HB1J103J	CHIP R 10K J 1/16W	
C838,839			CC73HCH1H101J	CHIP C 100PF J		R393-397			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C841-848			CC73GCH1H470J	CHIP C 47PF J		R398			RK73HB1J104J	CHIP R 100K J 1/16W	
C850			CC73GCH1H470J	CHIP C 47PF J		R399			RK73HB1J151J	CHIP R 150 J 1/16W	
C851-869			CC73HCH1H470J	CHIP C 47PF J		R401			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C870-873			CK73HB1H102K	CHIP C 1000PF K		R403			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN300			E04-0193-05	PIN SOCKET		R404,405			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN302			E04-0193-05	PIN SOCKET		R406			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN400-402			E40-6656-05	PIN ASSY		R408,409			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN713			E41-2263-05	PIN ASSY		R410			RK73GB2A103J	CHIP R 10K J 1/10W	
J700			E58-0516-05	MODULAR JACK		R411			RK73GB2A472J	CHIP R 4.7K J 1/10W	
J701			E58-0515-05	RECTANGULAR RECEPTACLE		R413			RK73GB2A103J	CHIP R 10K J 1/10W	
J702,703			E58-0533-05	MODULAR JACK		R414			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L300-307			L92-0447-05	BEADS CORE		R415			RK73HB1J100J	CHIP R 10 J 1/16W	
L308,309			L41-8285-33	SMALL FIXED INDUCTOR (0.82UH)		R416			RK73HB1J104J	CHIP R 100K J 1/16W	
L310			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R417			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L311,312			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)		R418,419			RK73GB2A104J	CHIP R 100K J 1/10W	
L313-316			L92-0447-05	BEADS CORE		R420			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L317,318			L33-1500-05	CHOKE COIL		R421			RK73HB1J100J	CHIP R 10 J 1/16W	
L319-325			L92-0447-05	BEADS CORE		R423			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L326-329			L92-0467-05	CHIP FERRITE		R424			RK73GB2A681J	CHIP R 680 J 1/10W	
X300			L77-1988-05	VCXO (12.288MHZ)		R425			RK73HB1J000J	CHIP R 0.0 J 1/16W	
X301			L77-1984-05	CRYSTAL RESONATOR (14.7456MHZ)		R428			RK73GB2A100J	CHIP R 10 J 1/10W	
X700			L77-1985-05	CRYSTAL RESONATOR (25.8048MHZ)		R429			RK73GB2A471J	CHIP R 470 J 1/10W	
X701			L77-1802-05	CRYSTAL RESONATOR (32.768KHZ)		R431			RK73HB1J000J	CHIP R 0.0 J 1/16W	
X702			L77-1986-05	CRYSTAL RESONATOR (25MHZ)		R432			RK73GB2A220J	CHIP R 22 J 1/10W	
CP716			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R433			RK73HB1J105J	CHIP R 1.0M J 1/16W	
CP718			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R438			RK73GB2A100J	CHIP R 10 J 1/10W	
CP720			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R439,440			RK73GB2A220J	CHIP R 22 J 1/10W	
CP737			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R441			RK73HB1J823J	CHIP R 82K J 1/16W	
CP739			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R442			RK73HB1J683J	CHIP R 68K J 1/16W	
CP743			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R445			RK73HB1J393J	CHIP R 39K J 1/16W	
CP747			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R446,447			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CP750			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R448			RK73GB2A221J	CHIP R 220 J 1/10W	
CP760			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R449			RK73HB1J683J	CHIP R 68K J 1/16W	
CP762			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R451			RK73HB1J473J	CHIP R 47K J 1/16W	
CP768			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R452-454			RK73HB1J100J	CHIP R 10 J 1/16W	
CP775-778			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R457-461			RK73HB1J473J	CHIP R 47K J 1/16W	
CP783-798			RK75HA1J390J	CHIP-COM 39 J 1/16W		R464			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CP807-811			RK75HA1J104J	CHIP-COM 100K J 1/16W		R469			RK73HB1J470J	CHIP R 47 J 1/16W	
CP813			RK75HA1J104J	CHIP-COM 100K J 1/16W		R470			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CP814,815			RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R474			RK73HB1J100J	CHIP R 10 J 1/16W	
R300,301			RK73GB2A000J	CHIP R 0.0 J 1/10W		R478			RK73HB1J100J	CHIP R 10 J 1/16W	
R302			RK73HB1J000J	CHIP R 0.0 J 1/16W		R479			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R303			RK73GB2A000J	CHIP R 0.0 J 1/10W		R480			RK73HB1J100J	CHIP R 10 J 1/16W	
R309			RK73HB1J000J	CHIP R 0.0 J 1/16W		R481			RK73HB1J473J	CHIP R 47K J 1/16W	
R311-317			RK73HB1J000J	CHIP R 0.0 J 1/16W		R483			RK73HB1J104J	CHIP R 100K J 1/16W	
R318,319			RK73HB1J101J	CHIP R 100 J 1/16W		R484			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R320-337			RK73HB1J000J	CHIP R 0.0 J 1/16W		R485			RK73HB1J100J	CHIP R 10 J 1/16W	
R339			RK73HB1J473J	CHIP R 47K J 1/16W		R486-489			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R491-505			RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R516-518			RK73HB1J473J	CHIP R 47K J 1/16W		R648			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R521			RK73HB1J000J	CHIP R 0.0 J 1/16W		R649			RK73HB1J101J	CHIP R 100 J 1/16W	
R522			RK73HB1J473J	CHIP R 47K J 1/16W		R650			RK73HB1J473J	CHIP R 47K J 1/16W	
R526			RK73HB1J000J	CHIP R 0.0 J 1/16W		R651-653			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R527			RK73HB1J473J	CHIP R 47K J 1/16W		R656,657			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R528,529			RK73HB1J000J	CHIP R 0.0 J 1/16W		R660-664			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R530			RK73HB1J473J	CHIP R 47K J 1/16W		R667,668			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R531,532			RK73HB1J000J	CHIP R 0.0 J 1/16W		R672-674			RK73HB1J473J	CHIP R 47K J 1/16W	
R533,534			RK73HB1J473J	CHIP R 47K J 1/16W		R678,679			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R535-539			RK73HB1J000J	CHIP R 0.0 J 1/16W		R680			RK73HB1J473J	CHIP R 47K J 1/16W	
R540-542			RK73HB1J473J	CHIP R 47K J 1/16W		R685-687			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R543			RK73HB1J000J	CHIP R 0.0 J 1/16W		R690			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R546			RK73HB1J000J	CHIP R 0.0 J 1/16W		R700,701			RK73HB1J103J	CHIP R 10K J 1/16W	
R547,548			RK73HB1J473J	CHIP R 47K J 1/16W		R702,703			RK73HB1J473J	CHIP R 47K J 1/16W	
R549			RK73HB1J000J	CHIP R 0.0 J 1/16W		R709,710			RK73HB1J104J	CHIP R 100K J 1/16W	
R550			RK73HB1J473J	CHIP R 47K J 1/16W		R711			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R551,552			RK73HB1J000J	CHIP R 0.0 J 1/16W		R712-714			RK73HB1J100J	CHIP R 10 J 1/16W	
R553-555			RK73HB1J473J	CHIP R 47K J 1/16W		R715			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R556,557			RK73HB1J000J	CHIP R 0.0 J 1/16W		R716			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R559			RK73HB1J102J	CHIP R 1.0K J 1/16W		R718			RK73HB1J104J	CHIP R 100K J 1/16W	
R560			RK73HB1J103J	CHIP R 10K J 1/16W		R719			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R561			RK73HB1J000J	CHIP R 0.0 J 1/16W		R720			RK73HB1J100J	CHIP R 10 J 1/16W	
R562			RK73HB1J103J	CHIP R 10K J 1/16W		R721			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R564-566			RK73HB1J000J	CHIP R 0.0 J 1/16W		R722			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R567			RK73HB1J473J	CHIP R 47K J 1/16W		R725,726			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R568			RK73HB1J000J	CHIP R 0.0 J 1/16W		R727			RK73HB1J103J	CHIP R 10K J 1/16W	
R569			RK73HB1J224J	CHIP R 220K J 1/16W		R729,730			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R570			RK73HB1J000J	CHIP R 0.0 J 1/16W		R731			RK73HB1J103J	CHIP R 10K J 1/16W	
R573-576			RK73HB1J000J	CHIP R 0.0 J 1/16W		R732			RK73HB1J390J	CHIP R 39 J 1/16W	
R577,578			RK73HB1J473J	CHIP R 47K J 1/16W		R733			RK73HB1J104J	CHIP R 100K J 1/16W	
R579			RK73HB1J000J	CHIP R 0.0 J 1/16W		R734			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R581			RK73HB1J000J	CHIP R 0.0 J 1/16W		R735,736			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R582			RK73HB1J473J	CHIP R 47K J 1/16W		R738			RK73HB1J104J	CHIP R 100K J 1/16W	
R583			RK73HB1J000J	CHIP R 0.0 J 1/16W		R742			RK73HB1J104J	CHIP R 100K J 1/16W	
R584			RK73HB1J473J	CHIP R 47K J 1/16W		R743,744			RK73HB1J153J	CHIP R 15K J 1/16W	
R585,586			RK73HB1J000J	CHIP R 0.0 J 1/16W		R745			RK73HB1J104J	CHIP R 100K J 1/16W	
R587			RK73HB1J473J	CHIP R 47K J 1/16W		R751			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R588			RK73HB1J000J	CHIP R 0.0 J 1/16W		R754			RK73HB1J103J	CHIP R 10K J 1/16W	
R589			RK73HB1J473J	CHIP R 47K J 1/16W		R756			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R590			RK73HB1J000J	CHIP R 0.0 J 1/16W		R758			RK73HB1J103J	CHIP R 10K J 1/16W	
R591			RK73HB1J223J	CHIP R 22K J 1/16W		R759			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R592-600			RK73HB1J000J	CHIP R 0.0 J 1/16W		R760			RK73HB1J103J	CHIP R 10K J 1/16W	
R602			RK73HB1J103J	CHIP R 10K J 1/16W		R761-765			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R604			RK73HB1J103J	CHIP R 10K J 1/16W		R766			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R605-610			RK73HB1J000J	CHIP R 0.0 J 1/16W		R767			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R612-616			RK73HB1J000J	CHIP R 0.0 J 1/16W		R768-770			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R620-623			RK73HB1J000J	CHIP R 0.0 J 1/16W		R772-777			RK73HB1J104J	CHIP R 100K J 1/16W	
R624			RK73HB1J473J	CHIP R 47K J 1/16W		R778			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R626			RK73HB1J473J	CHIP R 47K J 1/16W		R779			RK73HB1J104J	CHIP R 100K J 1/16W	
R627			RK73HB1J000J	CHIP R 0.0 J 1/16W		R780			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R629-631			RK73HB1J000J	CHIP R 0.0 J 1/16W		R781-784			RK73HB1J104J	CHIP R 100K J 1/16W	
R632			RK73HB1J101J	CHIP R 100 J 1/16W		R785			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R634			RK73HB1J473J	CHIP R 47K J 1/16W		R786-788			RK73HB1J104J	CHIP R 100K J 1/16W	
R635,636			RK73HB1J000J	CHIP R 0.0 J 1/16W		R794			RK73HB1J104J	CHIP R 100K J 1/16W	
R637-640			RK73HB1J473J	CHIP R 47K J 1/16W		R796			RK73HB1J104J	CHIP R 100K J 1/16W	
R641			RK73HB1J000J	CHIP R 0.0 J 1/16W		R799-803			RK73HB1J104J	CHIP R 100K J 1/16W	
R642			RK73HB1J101J	CHIP R 100 J 1/16W		R805-808			RK73HB1J103J	CHIP R 10K J 1/16W	
R643			RK73HB1J473J	CHIP R 47K J 1/16W		R816			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R644			RK73HB1J000J	CHIP R 0.0 J 1/16W		R817			RK73HB1J821J	CHIP R 820 J 1/16W	
R646			RK73HB1J473J	CHIP R 47K J 1/16W		R818			RK73HB1J104J	CHIP R 100K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R819			RK73GB2A000J	CHIP R 0.0 J 1/10W		S700			S79-0473-05	DIP SWITCHES	
R820			RK73HB1J103J	CHIP R 10K J 1/16W		D300			1SS388F	DIODE	
R821			RK73HB1J000J	CHIP R 0.0 J 1/16W		D701			1SS388F	DIODE	
R822			RK73HB1J103J	CHIP R 10K J 1/16W		D702			1SS355	DIODE	
R824			RK73HB1J103J	CHIP R 10K J 1/16W		IC300,301			TC7SET126FU-F	MOS-IC	
						IC302			SN65HVD485EDR	MOS-IC	
R826			RK73HB1J103J	CHIP R 10K J 1/16W		IC303			BU4829FVE	MOS-IC	
R827			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC304			TC7SH125FU-F	MOS-IC	
R828			RK73HB1J104J	CHIP R 100K J 1/16W		IC305		*	XC6209B332P-G	MOS-IC	
R829			RK73HB1J113D	CHIP R 11K D 1/16W		IC306			BA15BC0FP	MOS-IC	
R830			RK73HB1J104J	CHIP R 100K J 1/16W		IC307			XC6201P152PR	MOS-IC	
						IC308			XC61CN2702N	MOS-IC	
R832			RK73HB1J104J	CHIP R 100K J 1/16W		IC309			AK4550VTP	MOS-IC	
R833			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC312			ADCS7476A1MF	MOS-IC	
R834			RK73HB1J104J	CHIP R 100K J 1/16W		IC313			TC7WU04FK-F	MOS-IC	
R835			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC314			Note 1 (BGA)	ROM IC	
R837			RK73GH2A49R9D	CHIP R 49.9 D 1/10W		IC315			ADF4001BRUZ	MOS-IC	
						IC318			TC7SH126FU-F	MOS-IC	
R839			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC319-321			TC7SET126FU-F	MOS-IC	
R840			RK73GH2A49R9D	CHIP R 49.9 D 1/10W		IC323,324			Note 1 (BGA)	MICROPROCESSOR IC	
R842-845			RK73HB1J104J	CHIP R 100K J 1/16W		IC325		*	30625MGP490GU	MICROPROCESSOR IC	
R867,868			RK73GH2A24R9D	CHIP R 24.9 D 1/10W							
R869			RK73HB1J331J	CHIP R 330 J 1/16W		IC327			TC7SH08FU-F	MOS-IC	
						IC329			BA33DD0WT	MOS-IC	
R870			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC330			TC7SH126FU-F	MOS-IC	
R871-873			RK73HB1J103J	CHIP R 10K J 1/16W		IC700			L102616LL70LI	SRAM IC	
R874			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC701			RV5C386A	MOS-IC	
R875,876			RK73GH2A24R9D	CHIP R 24.9 D 1/10W		IC702			29PL127JKCDC	ROM IC	
R877,878			RK73HB1J103J	CHIP R 10K J 1/16W		IC703			Note 1 (BGA)	MICROPROCESSOR IC	
						IC704		*	EM639165TS6IG	DRAM IC	
R879			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC705			ADM3202ARUZ	MOS-IC	
R880,881			RK73HB1J104J	CHIP R 100K J 1/16W		IC707		*	EM639165TS6IG	DRAM IC	
R883-885			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC708			BU4829FVE	MOS-IC	
R886			RK73HB1J221J	CHIP R 220 J 1/16W		IC709			TC7SH126FU-F	MOS-IC	
R887			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC710,711			TC7SH00FU-F	MOS-IC	
						IC712,713			TC7SH32FU-F	MOS-IC	
R888			RK73HB1J221J	CHIP R 220 J 1/16W		IC714-716			TC7MA244FK	MOS-IC	
R889			RK73HB1J103J	CHIP R 10K J 1/16W		IC717,718			TC7MA245FK	MOS-IC	
R890			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC719			LAN91C111I-NU	MOS-IC	
R891			RK73HB1J104J	CHIP R 100K J 1/16W		IC720		*	AT93C46DN-SH	ROM IC	
R892,893			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC721			TC7SH08FU-F	MOS-IC	
						IC722			TC7SH32FU-F	MOS-IC	
R894			RK73HB1J103J	CHIP R 10K J 1/16W		IC723			TC7SH00FU-F	MOS-IC	
R895			RK73HB1J151J	CHIP R 150 J 1/16W		IC724			TC7SH125FU-F	MOS-IC	
R896			RK73HB1J101J	CHIP R 100 J 1/16W		IC725			TC7SH126FU-F	MOS-IC	
R897			RK73HB1J104J	CHIP R 100K J 1/16W		IC726			TC7SH08FU-F	MOS-IC	
R902,903			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC727,728			TC7SH126FU-F	MOS-IC	
						Q300			2SC4738F	TRANSISTOR	
R907			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q301			RT1N141M-T111	TRANSISTOR	
R909			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q302			2SA1955A-F	TRANSISTOR	
R910			RK73HB1J473J	CHIP R 47K J 1/16W		Q303			RT1P441M-T111	TRANSISTOR	
R911			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q304,305			2SC4738F	TRANSISTOR	
R912			RK73HB1J473J	CHIP R 47K J 1/16W		Q307,308			2SC4738F	TRANSISTOR	
						Q309			SSM6N16FE-F	FET	
R913,914			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q700			2SC4738F	TRANSISTOR	
R915			RK73HB1J473J	CHIP R 47K J 1/16W		Q702			2SC4738F	TRANSISTOR	
R916-923			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q704,705			2SC4738F	TRANSISTOR	
R924			RK73HB1J104J	CHIP R 100K J 1/16W		Q706			RT1N141M-T111	TRANSISTOR	
R926			RK73HB1J473J	CHIP R 47K J 1/16W		Q707			RT1N441M-T111	TRANSISTOR	
R927-933			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R934,935			RK73HB1J474J	CHIP R 470K J 1/16W							
R936			RK73HB1J104J	CHIP R 100K J 1/16W							
R942			RK73HB1J104J	CHIP R 100K J 1/16W							
R943			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R945-950			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R951			RK73HB1J104J	CHIP R 100K J 1/16W							
R952,953			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R954-957			RK73GB2A000J	CHIP R 0.0 J 1/10W							
R960			RK73GB2A000J	CHIP R 0.0 J 1/10W							

PARTS LIST

CONTROL UNIT (X53-4140-10)
RX UNIT (X55-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
BA300			W09-1004-05	LITHIUM CELL	
RX UNIT (X55-3120-10)					
D6			B30-2230-05	LED (YG)	
C1			CC73GCH1H471J	CHIP C 470PF J	
C2,3			CK73GB1H473K	CHIP C 0.047UF K	
C4			CC73GCH1H820J	CHIP C 82PF J	
C5			CK73GB1H473K	CHIP C 0.047UF K	
C6			CK73GB1H104K	CHIP C 0.10UF K	
C7,8			CC73GCH1H471J	CHIP C 470PF J	
C9,10			CK73GB1H473K	CHIP C 0.047UF K	
C11			CC73GCH1H221J	CHIP C 220PF J	
C14			CC73GCH1H331J	CHIP C 330PF J	
C18			CC73GCH1H181J	CHIP C 180PF J	
C19			CK73GB1H473K	CHIP C 0.047UF K	
C20			CK73FB1E224K	CHIP C 0.22UF K	
C21			CS77BA1E010M	CHIP TNTL 1.0UF 25WV	
C23			CS77CB21C220M	CHIP TNTL 22UF 16WV	
C24			CS77CC1C330M	CHIP TNTL 33UF 16WV	
C25			CC73GCH1H471J	CHIP C 470PF J	
C27			CK73GB1H103K	CHIP C 0.010UF K	
C28			CE32BM1E470M	CHIP EL 47UF 25WV	
C29,30			CC73GCH1H471J	CHIP C 470PF J	
C31			CK73GB1H473K	CHIP C 0.047UF K	
C32			CC73GCH1H101J	CHIP C 100PF J	
C33			CC73GCH1H470J	CHIP C 47PF J	
C34			CC73GCH1H101J	CHIP C 100PF J	
C35,36			CK73GB1H473K	CHIP C 0.047UF K	
C37			CS77CB21C220M	CHIP TNTL 22UF 16WV	
C38			CS77CC1C330M	CHIP TNTL 33UF 16WV	
C39			CC73GCH1H100C	CHIP C 10PF C	
C40			CS77CA1VR15M	CHIP TNTL 0.15UF 35WV	
C41			CC73GCH1H030B	CHIP C 3.0PF B	
C42,43			CC73GCH1H050B	CHIP C 5.0PF B	
C44			CK73GB1H104K	CHIP C 0.10UF K	
C45			CC73GCH1H471J	CHIP C 470PF J	
C46			C93-0787-05	CHIP C 0.1UF J	
C47			CC73GCH1H471J	CHIP C 470PF J	
C48			CK73GB1H103K	CHIP C 0.010UF K	
C49			CE32BM1E470M	CHIP EL 47UF 25WV	
C50			CC73GCH1H471J	CHIP C 470PF J	
C52			CK73GB1H103K	CHIP C 0.010UF K	
C54			CC73GCH1H101J	CHIP C 100PF J	
C55			CC73GCH1H040B	CHIP C 4.0PF B	
C56			CC73GCH1H060B	CHIP C 6.0PF B	
C58			CC73GCH1H101J	CHIP C 100PF J	
C59			CC73GCH1H470J	CHIP C 47PF J	
C60			CK73GB1H104K	CHIP C 0.10UF K	
C61			CC73GCH1H101J	CHIP C 100PF J	
C62,63			CC73GCH1H470J	CHIP C 47PF J	
C64			CS77BA1E010M	CHIP TNTL 1.0UF 25WV	
C65			CC73GCH1H470J	CHIP C 47PF J	
C66			CC73GCH1H060B	CHIP C 6.0PF B	
C68			CC73GCH1H080B	CHIP C 8.0PF B	
C70			CC73GCH1H060B	CHIP C 6.0PF B	
C71,72			CC73GCH1H050B	CHIP C 5.0PF B	
C73			CC73GCH1H0R5C	CHIP C 0.5PF C	
C74			CC73GCH1H050B	CHIP C 5.0PF B	
C76			CK73GB1H104K	CHIP C 0.10UF K	
C77			CC73GCH1H471J	CHIP C 470PF J	
C78			CS77CC1C330M	CHIP TNTL 33UF 16WV	
C79			CC73GCH1H080B	CHIP C 8.0PF B	
C81			CC73GCH1H060B	CHIP C 6.0PF B	
C83			CC73GCH1H040B	CHIP C 4.0PF B	
C84			CK73GB1E105K	CHIP C 1.0UF K	
C85			CK73GB1H104K	CHIP C 0.10UF K	
C86,87			CC73GCH1H471J	CHIP C 470PF J	
C88			CK73GB1H104K	CHIP C 0.10UF K	
C89			CC73GCH1H471J	CHIP C 470PF J	
C90			CC73GCH1H470J	CHIP C 47PF J	
C91			CK73GB1H104K	CHIP C 0.10UF K	
C92			CC73GCH1H050B	CHIP C 5.0PF B	
C93,94			CC73GCH1H470J	CHIP C 47PF J	
C95,96			CC73GCH1H471J	CHIP C 470PF J	
C97,98			CC73GCH1H080B	CHIP C 8.0PF B	
C99			CS77CC1C330M	CHIP TNTL 33UF 16WV	
C100			CK73GB1H104K	CHIP C 0.10UF K	
C101			CC73GCH1H471J	CHIP C 470PF J	
C103			CE32AU1E100M	CHIP EL 10UF 25WV	
C104,105			CK73GB1H104K	CHIP C 0.10UF K	
C106			CC73GCH1H470J	CHIP C 47PF J	
C107			CK73GB1H103K	CHIP C 0.010UF K	
C108			CC73GCH1H470J	CHIP C 47PF J	
C109			CC73GCH1H050B	CHIP C 5.0PF B	
C111			CK73GB1E105K	CHIP C 1.0UF K	
C112			CC73GCH1H471J	CHIP C 470PF J	
C113			CC73GCH1H100C	CHIP C 10PF C	
C114			CC73GCH1H471J	CHIP C 470PF J	
C115,116			CC73GCH1H040B	CHIP C 4.0PF B	
C117			CC73GCH1H471J	CHIP C 470PF J	
C119			CC73GCH1H470J	CHIP C 47PF J	
C124			CC73GCH1H470J	CHIP C 47PF J	
C125			CC73GCH1H040B	CHIP C 4.0PF B	
C126			CK73GB1H104K	CHIP C 0.10UF K	
C127			CC73GCH1H471J	CHIP C 470PF J	
C128			CK73GB1H103K	CHIP C 0.010UF K	
C129			CC73GCH1H471J	CHIP C 470PF J	
C132			CK73GB1H104K	CHIP C 0.10UF K	
C133,134			CC73GCH1H470J	CHIP C 47PF J	
C135			CC73GCH1H471J	CHIP C 470PF J	
C137			CC73GCH1H100C	CHIP C 10PF C	
C138			CC73GCH1H471J	CHIP C 470PF J	
C139			CC73GCH1H030B	CHIP C 3.0PF B	
C140-143			CC73GCH1H040B	CHIP C 4.0PF B	
C144			CC73GCH1H120J	CHIP C 12PF J	
C146			CC73GCH1H180G	CHIP C 18PF G	
C147			CC73GCH1H040B	CHIP C 4.0PF B	
C201-203			CC73GCH1H470J	CHIP C 47PF J	
C204			CC73GCH1H030B	CHIP C 3.0PF B	
C206			CC73GCH1H470J	CHIP C 47PF J	
C209			CK73GB1H103K	CHIP C 0.010UF K	
C211,212			CC73GCH1H470J	CHIP C 47PF J	
C213			CK73GB1H104K	CHIP C 0.10UF K	
C214			CK73GB1H103K	CHIP C 0.010UF K	
C215			CC73GCH1H030B	CHIP C 3.0PF B	
C216			CC73GCH1H101J	CHIP C 100PF J	
C217			CC73GCH1H470J	CHIP C 47PF J	

PARTS LIST

RX UNIT (X55-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C218			CK73GB1H104K	CHIP C 0.10UF K		C375			CK73GB1H103K	CHIP C 0.010UF K	
C219			CC73GCH1H101J	CHIP C 100PF J		C376,377			CC73GCH1H471J	CHIP C 470PF J	
C220,221			CC73GCH1H470J	CHIP C 47PF J		C378			CK73GB1H103K	CHIP C 0.010UF K	
C222			CK73GB1H103K	CHIP C 0.010UF K		C381			CK73GB1H103K	CHIP C 0.010UF K	
C224,225			CC73GCH1H470J	CHIP C 47PF J		C383			CE32AU1C330M	CHIP EL 33UF 16WV	
C226			CK73GB1H103K	CHIP C 0.010UF K		C386			CK73GB1H103K	CHIP C 0.010UF K	
C229			CC73GCH1H470J	CHIP C 47PF J		C388			CK73GB1H103K	CHIP C 0.010UF K	
C230,231			CK73GB1H103K	CHIP C 0.010UF K		C389			CK73GB1H104K	CHIP C 0.10UF K	
C233			CK73GB1H104K	CHIP C 0.10UF K		C390			CK73GB1H103K	CHIP C 0.010UF K	
C234			CK73GB1H103K	CHIP C 0.010UF K		C393			CK73FB1E474K	CHIP C 0.47UF K	
C236-239			CC73GCH1H470J	CHIP C 47PF J		C394			CK73GB1H103K	CHIP C 0.010UF K	
C240			CK73GB1H103K	CHIP C 0.010UF K		C396			CK73GB1H103K	CHIP C 0.010UF K	
C242,243			CC73GCH1H470J	CHIP C 47PF J		C397			CC73GCH1H680G	CHIP C 68PF G	
C244			CC73GCH1H100C	CHIP C 10PF C		C398-400			CK73GB1H103K	CHIP C 0.010UF K	
C245			CC73GCH1H101J	CHIP C 100PF J		C404			CK73GB1H103K	CHIP C 0.010UF K	
C246			CC73GCH1H470J	CHIP C 47PF J		C405,406			CC73GCH1H330G	CHIP C 33PF G	
C247			CC73GCH1H100C	CHIP C 10PF C		C407			CK73FB1E474K	CHIP C 0.47UF K	
C250			CC73GCH1H101J	CHIP C 100PF J		C408			CK73GB1H104K	CHIP C 0.10UF K	
C251			CC73GCH1H470J	CHIP C 47PF J		C409,410			CK73FB1E474K	CHIP C 0.47UF K	
C252			CK73GB1H103K	CHIP C 0.010UF K		C411			CC73GCH1H221J	CHIP C 220PF J	
C253,254			CC73GCH1H470J	CHIP C 47PF J		C412,413			CK73FB1E474K	CHIP C 0.47UF K	
C256			CK73GB1E154K	CHIP C 0.15UF K		C414			CC73GCH1H221J	CHIP C 220PF J	
C257			CK73GB1H103K	CHIP C 0.010UF K		C415			CK73GB1H102K	CHIP C 1000PF K	
C258			CC73GCH1H470J	CHIP C 47PF J		C416			CC73GCH1H471J	CHIP C 470PF J	
C259-262			CK73GB1H103K	CHIP C 0.010UF K		C417-419			CK73FB1E474K	CHIP C 0.47UF K	
C263			CC73GCH1H120J	CHIP C 12PF J		C420			CK73GB1H103K	CHIP C 0.010UF K	
C264			CK73GB1H103K	CHIP C 0.010UF K		C421-423			CK73FB1E474K	CHIP C 0.47UF K	
C266			CC73GCH1H101J	CHIP C 100PF J		C424			CK73GB1H104K	CHIP C 0.10UF K	
C267			CK73GB1H103K	CHIP C 0.010UF K		C425			CC73GCH1H100C	CHIP C 10PF C	
C269			CK73GB1H103K	CHIP C 0.010UF K		C426			CK73FB1E474K	CHIP C 0.47UF K	
C270			CK73GB1H104K	CHIP C 0.10UF K		C427			CC73GCH1H100C	CHIP C 10PF C	
C272-276			CK73GB1H103K	CHIP C 0.010UF K		C428			CK73FB1E474K	CHIP C 0.47UF K	
C277,278			CK73GB1H473K	CHIP C 0.047UF K		C429			CK73GB1H102K	CHIP C 1000PF K	
C280-282			CK73GB1H103K	CHIP C 0.010UF K		C430			CE32AU1E100M	CHIP EL 10UF 25WV	
C283			CC73GCH1H150J	CHIP C 15PF J		C431			CK73FB1H333K	CHIP C 0.033UF K	
C284			CC73GCH1H180G	CHIP C 18PF G		C432,433			CK73FB1E474K	CHIP C 0.47UF K	
C287			CC73GCH1H100C	CHIP C 10PF C		C434	*		C93-1824-05	CHIP C 100UF M	
C288			CC73GCH1H150J	CHIP C 15PF J		C435			CK73FB1E474K	CHIP C 0.47UF K	
C289			CK73GB1H103K	CHIP C 0.010UF K		C436			CC73GCH1H101J	CHIP C 100PF J	
C296			CC73GCH1H220G	CHIP C 22PF G		C439			CK73FB1E474K	CHIP C 0.47UF K	
C297			CC73GCH1H180G	CHIP C 18PF G		C440			CK73FB0J106K	CHIP C 10UF K	
C298			CC73GCH1H680G	CHIP C 68PF G		C441			CK73GB1H102K	CHIP C 1000PF K	
C299,300			CK73GB1H103K	CHIP C 0.010UF K		C442			CK73FB1H333K	CHIP C 0.033UF K	
C306,307			CC73GCH1H330G	CHIP C 33PF G		C443			CK73FB1E474K	CHIP C 0.47UF K	
C312,313			CK73GB1H103K	CHIP C 0.010UF K		C445			CK73GB1H104K	CHIP C 0.10UF K	
C314,315			CK73GB1H473K	CHIP C 0.047UF K		C446			CK73GB1H103K	CHIP C 0.010UF K	
C317,318			CK73GB1H104K	CHIP C 0.10UF K		C447,448			CK73GB1H104K	CHIP C 0.10UF K	
C321,322			CK73FB1E474K	CHIP C 0.47UF K		C449			CK73FB1H333K	CHIP C 0.033UF K	
C324,325			CC73GCH1H150J	CHIP C 15PF J		C450			CC73GCH1H150J	CHIP C 15PF J	
C327			CK73GB1H103K	CHIP C 0.010UF K		C452			CC73GCH1H270G	CHIP C 27PF G	
C329,330			CK73GB1H104K	CHIP C 0.10UF K		C453			CC73GCH1H100C	CHIP C 10PF C	
C331			CK73GB1H103K	CHIP C 0.010UF K		C501,502			CK73GB1H103K	CHIP C 0.010UF K	
C332,333			CK73GB1H104K	CHIP C 0.10UF K		C503			CC73GCH1H270G	CHIP C 27PF G	
C334,335			CK73GB1H103K	CHIP C 0.010UF K		C504			CK73GB1H103K	CHIP C 0.010UF K	
C338,339			CK73GB1H103K	CHIP C 0.010UF K		C505			CK73GB1H473K	CHIP C 0.047UF K	
C365			CC73GCH1H471J	CHIP C 470PF J		C506			CK73GB1H104K	CHIP C 0.10UF K	
C369,370			CK73GB1H103K	CHIP C 0.010UF K		C507			CK73FB1E474K	CHIP C 0.47UF K	
C371			CC73GCH1H471J	CHIP C 470PF J		C508			CK73GB1H103K	CHIP C 0.010UF K	
C372,373			CK73GB1H103K	CHIP C 0.010UF K		C509			CK73FB1E474K	CHIP C 0.47UF K	
C374			CE32AU1C330M	CHIP EL 33UF 16WV		C510			CK73GB1H473K	CHIP C 0.047UF K	

PARTS LIST

RX UNIT (X55-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C511			CK73FB1E474K	CHIP C 0.47UF K		C662			CK73GB1H473K	CHIP C 0.047UF K	
C512,513			CK73GB1H104K	CHIP C 0.10UF K		C663			CK73GB1H102K	CHIP C 1000PF K	
C515			CK73GB1H473K	CHIP C 0.047UF K		C664			CE32BM1E470M	CHIP EL 47UF 25WV	
C516,517			CK73FB1E474K	CHIP C 0.47UF K		C666			CC73GCH1H680G	CHIP C 68PF G	
C518,519			CK73GB1H473K	CHIP C 0.047UF K		C667			CC73GCH1H060B	CHIP C 6.0PF B	
C520			CK73GB1H104K	CHIP C 0.10UF K		C670			CC73GCH1H680G	CHIP C 68PF G	
C521			CK73FB1E474K	CHIP C 0.47UF K		C671			CK73GB1H473K	CHIP C 0.047UF K	
C522,523			CK73GB1H104K	CHIP C 0.10UF K		C672			CC73GCH1H220G	CHIP C 22PF G	
C524			CC73GCH1H470J	CHIP C 47PF J		C673			CC73GCH1H020B	CHIP C 2.0PF B	
C525			CC73GCH1H471J	CHIP C 470PF J		C674,675			CS77CC1C330M	CHIP TNL 33UF 16WV	
C526			CK73GB1E105K	CHIP C 1.0UF K		C676			CK73GB1H102K	CHIP C 1000PF K	
C527			CK73GB1H104K	CHIP C 0.10UF K		C677			CC73GCH1H330G	CHIP C 33PF G	
C528			CC73GCH1H471J	CHIP C 470PF J		C679			CC73GCH1H330G	CHIP C 33PF G	
C529			CK73GB1E105K	CHIP C 1.0UF K		C680			CK73GB1H103K	CHIP C 0.010UF K	
C530			CC73GCH1H180G	CHIP C 18PF G		C681			CC73GCH1H680G	CHIP C 68PF G	
C531			CC73GCH1H050B	CHIP C 5.0PF B		C683,684			CC73GCH1H330G	CHIP C 33PF G	
C532			CC73GCH1H220G	CHIP C 22PF G		C685			CC73GCH1H471J	CHIP C 470PF J	
C533			CC73GCH1H560J	CHIP C 56PF J		C686			CK73GB1H104K	CHIP C 0.10UF K	
C534			CC73GCH1H270G	CHIP C 27PF G		C687			CK73GB1E105K	CHIP C 1.0UF K	
C601,602			CK73GB1H473K	CHIP C 0.047UF K		C688			CC73GCH1H471J	CHIP C 470PF J	
C603			CC73GCH1H820J	CHIP C 82PF J		C689,690			CK73GB1H104K	CHIP C 0.10UF K	
C604,605			CK73GB1H473K	CHIP C 0.047UF K		C691			CC73GCH1H470J	CHIP C 47PF J	
C606			CK73GB1H102K	CHIP C 1000PF K		C692			CK73GB1H102K	CHIP C 1000PF K	
C607			CC73GCH1H101J	CHIP C 100PF J		C693			CK73GB1H104K	CHIP C 0.10UF K	
C608-611			CK73GB1H473K	CHIP C 0.047UF K		C694-697			CK73GB1H102K	CHIP C 1000PF K	
C612			CC73GCH1H471J	CHIP C 470PF J		C698			CK73GB1H473K	CHIP C 0.047UF K	
C613,614			CK73GB1H473K	CHIP C 0.047UF K		C699,700			CK73GB1H102K	CHIP C 1000PF K	
C615			CC73GCH1H471J	CHIP C 470PF J		C701			CE32BM1E470M	CHIP EL 47UF 25WV	
C616			CC73GCH1H080B	CHIP C 8.0PF B		C702			CC73GCH1H220G	CHIP C 22PF G	
C620			CK73GB1H102K	CHIP C 1000PF K		C703			CK73GB1H102K	CHIP C 1000PF K	
C621			CS77CA1ER47M	CHIP TNL 0.47UF 25WV		C704			CC73GCH1H471J	CHIP C 470PF J	
C623			CK73GB1H473K	CHIP C 0.047UF K		C705			CK73GB1E105K	CHIP C 1.0UF K	
C624			CS77CB21C150M	CHIP TNL 15UF 16WV		C706			CK73GB1H104K	CHIP C 0.10UF K	
C625			CK73GB1H102K	CHIP C 1000PF K		C707			CK73GB1E105K	CHIP C 1.0UF K	
C626			CC73GCH1H080B	CHIP C 8.0PF B		C708,709			CC73GCH1H471J	CHIP C 470PF J	
C627-629			CK73GB1H102K	CHIP C 1000PF K		C710			CK73GB1E105K	CHIP C 1.0UF K	
C630			CC73GCH1H471J	CHIP C 470PF J		C711			CC73GCH1H470J	CHIP C 47PF J	
C631			CC73GCH1H120J	CHIP C 12PF J		C801			CE32CL1V100M	CHIP EL 10UF 35WV	
C634			CC73GCH1H080B	CHIP C 8.0PF B		C802			CC73GCH1H471J	CHIP C 470PF J	
C638			CS77BA1E010M	CHIP TNL 1.0UF 25WV		C803			CE32CL1V100M	CHIP EL 10UF 35WV	
C639			CK73GB1H473K	CHIP C 0.047UF K		C804			CE32AU1C330M	CHIP EL 33UF 16WV	
C640			CK73GB1H102K	CHIP C 1000PF K		C805,806			CC73GCH1H471J	CHIP C 470PF J	
C641			CK73GB1H473K	CHIP C 0.047UF K		C807			CE32CL1V100M	CHIP EL 10UF 35WV	
C642,643			CK73GB1H102K	CHIP C 1000PF K		C808			CC73GCH1H471J	CHIP C 470PF J	
C644			CC73GCH1H330G	CHIP C 33PF G		C809			CK73GB1H103K	CHIP C 0.010UF K	
C645			CC73GCH1H180G	CHIP C 18PF G		C811			CC73GCH1H470J	CHIP C 47PF J	
C646			CK73GB1H102K	CHIP C 1000PF K		C813			CC73GCH1H470J	CHIP C 47PF J	
C647			CK73GB1H473K	CHIP C 0.047UF K		C815			CE32BM1E470M	CHIP EL 47UF 25WV	
C648			CC73GCH1H270G	CHIP C 27PF G		C816			CC73GCH1H470J	CHIP C 47PF J	
C649			CE32BM1E470M	CHIP EL 47UF 25WV		C817			CC73GCH1H471J	CHIP C 470PF J	
C650			CC73GCH1H220G	CHIP C 22PF G		C818			CE32CL1V100M	CHIP EL 10UF 35WV	
C651,652			CK73GB1H102K	CHIP C 1000PF K		C819-821			CC73GCH1H471J	CHIP C 470PF J	
C653			CK73GB1H103K	CHIP C 0.010UF K		C822,823			CE32CL1V100M	CHIP EL 10UF 35WV	
C654			CC73GCH1H220G	CHIP C 22PF G		C824			CC73GCH1H470J	CHIP C 47PF J	
C655			CK73GB1H103K	CHIP C 0.010UF K		C828			CK73GB1H104K	CHIP C 0.10UF K	
C656			CC73GCH1H330G	CHIP C 33PF G		C829			CC73GCH1H471J	CHIP C 470PF J	
C658			CC73GCH1H680G	CHIP C 68PF G		C830			CK73GB1H473K	CHIP C 0.047UF K	
C659			CK73GB1H104K	CHIP C 0.10UF K		C831			CC73GCH1H471J	CHIP C 470PF J	
C660			CC73GCH1H220G	CHIP C 22PF G		C832			CE32BM1V220M	CHIP EL 22UF 35WV	
C661			CK73GB1H102K	CHIP C 1000PF K		C833			CC73GCH1H471J	CHIP C 470PF J	

PARTS LIST

RX UNIT (X55-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C834			CK73GB1H103K	CHIP C 0.010UF K		L18			L41-1078-55	SMALL FIXED INDUCTOR (10NH)	
C835-838			CC73GCH1H471J	CHIP C 470PF J		L19			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)	
C839,840			CK73GB1H103K	CHIP C 0.010UF K		L21			L41-1078-55	SMALL FIXED INDUCTOR (10NH)	
C841-843			CK73GB1H473K	CHIP C 0.047UF K		L22,23		*	L41-6865-55	SMALL FIXED INDUCTOR (6.8NH)	
C844			CC73GCH1H471J	CHIP C 470PF J		L24			L92-0140-05	CHIP FERRITE	
C845			CK73GB1H473K	CHIP C 0.047UF K		L25,26			L41-1078-55	SMALL FIXED INDUCTOR (10NH)	
C846			CC73GCH1H471J	CHIP C 470PF J		L27		*	L41-1578-55	SMALL FIXED INDUCTOR (15NH)	
C847			CK73GB1H103K	CHIP C 0.010UF K		L28			L41-1078-55	SMALL FIXED INDUCTOR (10NH)	
C848			CK73GB1H104K	CHIP C 0.10UF K		L29,30		*	L41-2278-55	SMALL FIXED INDUCTOR (22NH)	
C850			CK73GB1H473K	CHIP C 0.047UF K		L34			L41-1078-55	SMALL FIXED INDUCTOR (10NH)	
C851			CK73GB1H104K	CHIP C 0.10UF K		L36			L41-1078-55	SMALL FIXED INDUCTOR (10NH)	
C853			CK73GB1H104K	CHIP C 0.10UF K		L202		*	L41-4778-55	SMALL FIXED INDUCTOR (47NH)	
C854,855			CC73GCH1H471J	CHIP C 470PF J		L203		*	L79-1945-05	DIELECTRIC FILTER	
C856			CE32CL1V100M	CHIP EL 10UF 35WV		L204		*	L41-4778-55	SMALL FIXED INDUCTOR (47NH)	
C857			CK73GB1H104K	CHIP C 0.10UF K		L205		*	L41-3965-55	SMALL FIXED INDUCTOR (3.9NH)	
C859			CK73GB1H104K	CHIP C 0.10UF K		L208			L41-1078-55	SMALL FIXED INDUCTOR (10NH)	
C860			CK73GB1H473K	CHIP C 0.047UF K		L209		*	L41-4778-55	SMALL FIXED INDUCTOR (47NH)	
C861			C92-0904-05	OS-CON 22UF 35WV		L210		*	L79-1945-05	DIELECTRIC FILTER	
C862			CC73GCH1H020B	CHIP C 2.0PF B		L211		*	L41-4778-55	SMALL FIXED INDUCTOR (47NH)	
CN1-4			E23-1280-05	TERMINAL		L212,213		*	L41-2788-55	SMALL FIXED INDUCTOR (270NH)	
CN5			E04-0460-05	RF COAXIAL RECEPTACLE (SMB)		L214			L41-1278-55	SMALL FIXED INDUCTOR (12NH)	
CN6-14			E23-1280-05	TERMINAL		L215		*	L39-1573-05	TOROIDAL COIL	
CN16,17			E23-1280-05	TERMINAL		L218		*	L39-1573-05	TOROIDAL COIL	
CN19			E23-1280-05	TERMINAL		L221			L39-1498-05	TOROIDAL COIL	
CN20-24			E23-1330-05	TERMINAL		L222			L40-1585-92	SMALL FIXED INDUCTOR (150NH)	
CN25,26			E23-1280-05	TERMINAL		L223			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	
CN28			E23-1280-05	TERMINAL		L227			L41-4775-33	SMALL FIXED INDUCTOR (0.047UH)	
CN30			E23-1280-05	TERMINAL		L231,232			L34-4749-05	COIL	
CN32			E23-1280-05	TERMINAL		L245,246			L34-4749-05	COIL	
CN34-36			E23-1280-05	TERMINAL		L249,250			L40-2775-92	SMALL FIXED INDUCTOR (27NH)	
CN38,39			E23-1280-05	TERMINAL		L251,252			L40-1585-92	SMALL FIXED INDUCTOR (150NH)	
CN42			E40-6656-05	PIN ASSY		L253,254			L40-1575-92	SMALL FIXED INDUCTOR (15NH)	
CN43			E04-0193-05	PIN SOCKET		L257,258			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	
CN44			E41-2672-05	PIN ASSY		L278			L40-2775-92	SMALL FIXED INDUCTOR (27NH)	
CN45			E04-0193-05	PIN SOCKET		L279			L92-0138-05	CHIP FERRITE	
CN46,47			E41-2735-05	PIN ASSY		L281			L40-1575-92	SMALL FIXED INDUCTOR (15NH)	
CN61,62			E23-1280-05	TERMINAL		L282			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	
CN68			E04-0193-05	PIN SOCKET		L284,285			L40-1585-92	SMALL FIXED INDUCTOR (150NH)	
CN87-89			E23-1330-05	TERMINAL		L286			L34-4725-05	COIL	
-			F10-3080-04	SHIELDING CASE		L287,288			L92-0138-05	CHIP FERRITE	
CF201			L72-1018-05	CERAMIC FILTER		L290			L41-1278-55	SMALL FIXED INDUCTOR (12NH)	
CF202			L72-1016-05	CERAMIC FILTER		L291,292			L92-0138-05	CHIP FERRITE	
CF203			L72-1018-05	CERAMIC FILTER		L293			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	
CF204			L72-1016-05	CERAMIC FILTER		L501		*	L41-1588-55	SMALL FIXED INDUCTOR (150NH)	
CF501			L72-1027-05	CERAMIC FILTER		L502		*	L41-1088-55	SMALL FIXED INDUCTOR (100NH)	
CF502			L72-1028-05	CERAMIC FILTER		L503		*	L41-8278-55	SMALL FIXED INDUCTOR (82NH)	
L1		*	L41-2288-55	SMALL FIXED INDUCTOR (220NH)		L601		*	L41-8295-33	SMALL FIXED INDUCTOR (8.2UH)	
L2			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)		L602		*	L41-2288-55	SMALL FIXED INDUCTOR (220NH)	
L3,4			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		L603,604			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)	
L5,6			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)		L605,606			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L7,8			L92-0140-05	CHIP FERRITE		L607			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)	
L9			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)		L608			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)	
L10			L34-4610-15	AIR-CORE COIL		L609			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L11			L92-0140-05	CHIP FERRITE		L610,611			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L12			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)		L612,613		*	L41-1588-55	SMALL FIXED INDUCTOR (150NH)	
L13			L41-1078-55	SMALL FIXED INDUCTOR (10NH)		L614			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)	
L14			L92-0140-05	CHIP FERRITE		L615		*	L41-1878-55	SMALL FIXED INDUCTOR (18NH)	
L15,16			L41-1078-55	SMALL FIXED INDUCTOR (10NH)		L617		*	L41-2288-55	SMALL FIXED INDUCTOR (220NH)	
L17			L41-1278-55	SMALL FIXED INDUCTOR (12NH)		L618		*	L41-1878-55	SMALL FIXED INDUCTOR (18NH)	
						L619			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)	

PARTS LIST

RX UNIT (X55-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L620		*	L41-8278-55	SMALL FIXED INDUCTOR (82NH)		R63			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L621-623		*	L41-1588-55	SMALL FIXED INDUCTOR (150NH)		R64			RK73GB2A330J	CHIP R 33 J 1/10W	
L624		*	L41-8278-55	SMALL FIXED INDUCTOR (82NH)		R65			RK73GB2A101J	CHIP R 100 J 1/10W	
L625		*	L41-1588-55	SMALL FIXED INDUCTOR (150NH)		R66			RK73GB2A100J	CHIP R 10 J 1/10W	
L801,802			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R67,68			RK73GB2A000J	CHIP R 0.0 J 1/10W	
XF1		*	L71-0666-05	MCF (73.05MHZ)		R71			RK73GB2A331J	CHIP R 330 J 1/10W	
XF2		*	L71-0667-05	MCF (73.05MHZ)		R72			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R2			RK73GB2A332J	CHIP R 3.3K J 1/10W		R73			RK73GB2A180J	CHIP R 18 J 1/10W	
R3			RK73GB2A682J	CHIP R 6.8K J 1/10W		R74			RK73GB2A101J	CHIP R 100 J 1/10W	
R4			RK73GB2A181J	CHIP R 180 J 1/10W		R77			RK73GB2A331J	CHIP R 330 J 1/10W	
R5			RK73GB2A100J	CHIP R 10 J 1/10W		R78			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R6			RK73GB2A561J	CHIP R 560 J 1/10W		R79			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R8			RK73GB2A470J	CHIP R 47 J 1/10W		R80			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R9			RK73GB2A681J	CHIP R 680 J 1/10W		R81			RK73GB2A271J	CHIP R 270 J 1/10W	
R10			RK73GB2A471J	CHIP R 470 J 1/10W		R84			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R11,12			RK73GB2A000J	CHIP R 0.0 J 1/10W		R85			RK73GB2A331J	CHIP R 330 J 1/10W	
R13			RK73GB2A474J	CHIP R 470K J 1/10W		R86			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R14-16			RK73GB2A000J	CHIP R 0.0 J 1/10W		R87			RK73GB2A100J	CHIP R 10 J 1/10W	
R17			RK73GB2A274J	CHIP R 270K J 1/10W		R89			RK73GB2A391J	CHIP R 390 J 1/10W	
R18			RK73GB2A154J	CHIP R 150K J 1/10W		R90			RK73GB2A120J	CHIP R 12 J 1/10W	
R19			RK73GB2A274J	CHIP R 270K J 1/10W		R91			RK73GB2A391J	CHIP R 390 J 1/10W	
R20			RK73GB2A154J	CHIP R 150K J 1/10W		R92			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R21			RK73GB2A000J	CHIP R 0.0 J 1/10W		R93			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R22-25			RK73GB2A100J	CHIP R 10 J 1/10W		R202			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W		R204			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R27			RK73GB2A151J	CHIP R 150 J 1/10W		R205			RK73GB2A681J	CHIP R 680 J 1/10W	
R28			RK73GB2A102J	CHIP R 1.0K J 1/10W		R206			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R29			RK73GB2A220J	CHIP R 22 J 1/10W		R208			RK73GB2A390J	CHIP R 39 J 1/10W	
R30			RK73GB2A000J	CHIP R 0.0 J 1/10W		R209			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R31			RK73GB2A330J	CHIP R 33 J 1/10W		R210			RK73GB2A100J	CHIP R 10 J 1/10W	
R32			RK73GB2A106J	CHIP R 10M J 1/10W		R212,213			RK73GB2A104J	CHIP R 100K J 1/10W	
R33			RK73GB2A823J	CHIP R 82K J 1/10W		R215			RK73GB2A684J	CHIP R 680K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W		R218			RK73GB2A684J	CHIP R 680K J 1/10W	
R36			RN73GE1J331D	METAL FILM 330 D 1/16W		R219			RK73GB2A103J	CHIP R 10K J 1/10W	
R37			RK73GB2A271J	CHIP R 270 J 1/10W		R220			RK73GB2A123J	CHIP R 12K J 1/10W	
R38			RK73GB2A180J	CHIP R 18 J 1/10W		R224			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R39			RK73GB2A271J	CHIP R 270 J 1/10W		R225			RK73GB2A470J	CHIP R 47 J 1/10W	
R40			RK73GB2A000J	CHIP R 0.0 J 1/10W		R227			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R41			RK73GB2A100J	CHIP R 10 J 1/10W		R229			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R42			RK73GB2A102J	CHIP R 1.0K J 1/10W		R230			RK73GB2A151J	CHIP R 150 J 1/10W	
R43			RK73GB2A473J	CHIP R 47K J 1/10W		R235			RK73GB2A103J	CHIP R 10K J 1/10W	
R44			RK73GB2A100J	CHIP R 10 J 1/10W		R237			RK73GB2A223J	CHIP R 22K J 1/10W	
R45			RK73GB2A470J	CHIP R 47 J 1/10W		R240			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R46			RN73GE1J391D	METAL FILM 390 D 1/16W		R241			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R47			RK73GB2A000J	CHIP R 0.0 J 1/10W		R242			RK73GB2A680J	CHIP R 68 J 1/10W	
R48			RK73GB2A102J	CHIP R 1.0K J 1/10W		R243			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R49			RK73GB2A000J	CHIP R 0.0 J 1/10W		R244			RK73GB2A103J	CHIP R 10K J 1/10W	
R50			RK73GB2A102J	CHIP R 1.0K J 1/10W		R252,253			RK73GB2A103J	CHIP R 10K J 1/10W	
R51			RK73GB2A471J	CHIP R 470 J 1/10W		R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R52			RK73GB2A331J	CHIP R 330 J 1/10W		R255			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R53			RK73GB2A100J	CHIP R 10 J 1/10W		R256			RK73GB2A5R6J	CHIP R 5.6 J 1/10W	
R54			RK73GB2A391J	CHIP R 390 J 1/10W		R258,259			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R55			RK73GB2A392J	CHIP R 3.9K J 1/10W		R261			RK73GB2A470J	CHIP R 47 J 1/10W	
R56			RK73GB2A472J	CHIP R 4.7K J 1/10W		R265			RK73GB2A221J	CHIP R 220 J 1/10W	
R57,58			RK73GB2A271J	CHIP R 270 J 1/10W		R268			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R59			RK73GB2A101J	CHIP R 100 J 1/10W		R269			RK73GB2A100J	CHIP R 10 J 1/10W	
R60			RK73GB2A822J	CHIP R 8.2K J 1/10W		R270			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R61			RK73GB2A472J	CHIP R 4.7K J 1/10W		R272			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R62			RK73GB2A331J	CHIP R 330 J 1/10W		R273			RK73GB2A101J	CHIP R 100 J 1/10W	
						R276-279			RK73GB2A102J	CHIP R 1.0K J 1/10W	

PARTS LIST

RX UNIT (X55-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R280			RK73GB2A272J	CHIP R 2.7K J 1/10W		R416			RK73GB2A273J	CHIP R 27K J 1/10W	
R287			RK73GB2A121J	CHIP R 120 J 1/10W		R417			RK73GB2A103J	CHIP R 10K J 1/10W	
R288,289			RK73GB2A182J	CHIP R 1.8K J 1/10W		R418			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R292,293			RK73GB2A102J	CHIP R 1.0K J 1/10W		R419			RK73GB2A473J	CHIP R 47K J 1/10W	
R295,296			RK73GB2A102J	CHIP R 1.0K J 1/10W		R420			RK73GB2A123J	CHIP R 12K J 1/10W	
R297,298			RK73GB2A101J	CHIP R 100 J 1/10W		R421			RK73GB2A101J	CHIP R 100 J 1/10W	
R299,300			RK73GB2A470J	CHIP R 47 J 1/10W		R422			RK73GB2A474J	CHIP R 470K J 1/10W	
R303,304			RK73GB2A100J	CHIP R 10 J 1/10W		R430,431			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R307-309			RK73GB2A000J	CHIP R 0.0 J 1/10W		R432			RK73GB2A100J	CHIP R 10 J 1/10W	
R312-314			RK73GB2A000J	CHIP R 0.0 J 1/10W		R435-440			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R333			RK73GB2A104J	CHIP R 100K J 1/10W		R441			RK73GB2A121J	CHIP R 120 J 1/10W	
R336			RK73GB2A101J	CHIP R 100 J 1/10W		R442			RK73GB2A560J	CHIP R 56 J 1/10W	
R338,339			RK73GB2A102J	CHIP R 1.0K J 1/10W		R501			RK73GB2A470J	CHIP R 47 J 1/10W	
R340,341			RK73GB2A104J	CHIP R 100K J 1/10W		R502			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R343			RK73GB2A000J	CHIP R 0.0 J 1/10W		R503			RK73GB2A470J	CHIP R 47 J 1/10W	
R346			RK73GB2A221J	CHIP R 220 J 1/10W		R504			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R347			RK73GB2A182J	CHIP R 1.8K J 1/10W		R505			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R349			RK73GB2A102J	CHIP R 1.0K J 1/10W		R506			RK73GB2A271J	CHIP R 270 J 1/10W	
R351			RK73GB2A102J	CHIP R 1.0K J 1/10W		R508			RK73GB2A100J	CHIP R 10 J 1/10W	
R354			RK73GB2A470J	CHIP R 47 J 1/10W		R512			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R355			RK73GB2A101J	CHIP R 100 J 1/10W		R513			RK73GB2A123J	CHIP R 12K J 1/10W	
R357			RK73GB2A151J	CHIP R 150 J 1/10W		R514			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R360			RK73GB2A390J	CHIP R 39 J 1/10W		R515			RK73GB2A183J	CHIP R 18K J 1/10W	
R361			RK73GB2A151J	CHIP R 150 J 1/10W		R516			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R362			RK73GB2A470J	CHIP R 47 J 1/10W		R517			RK73GB2A181J	CHIP R 180 J 1/10W	
R363			RK73GB2A000J	CHIP R 0.0 J 1/10W		R518			RK73GB2A470J	CHIP R 47 J 1/10W	
R364			RK73GB2A101J	CHIP R 100 J 1/10W		R519			RK73GB2A104J	CHIP R 100K J 1/10W	
R365			RK73GB2A470J	CHIP R 47 J 1/10W		R520			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R366-369			RK73GB2A000J	CHIP R 0.0 J 1/10W		R521			RK73GB2A183J	CHIP R 18K J 1/10W	
R372			RK73GB2A332J	CHIP R 3.3K J 1/10W		R522			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R374			RK73GB2A332J	CHIP R 3.3K J 1/10W		R523,524			RK73GB2A103J	CHIP R 10K J 1/10W	
R375			RK73GB2A104J	CHIP R 100K J 1/10W		R525			RK73GB2A471J	CHIP R 470 J 1/10W	
R376,377			RK73GB2A182J	CHIP R 1.8K J 1/10W		R526			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R378,379			RK73GB2A000J	CHIP R 0.0 J 1/10W		R527			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R380			RK73GB2A103J	CHIP R 10K J 1/10W		R528			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R381,382			RK73GB2A473J	CHIP R 47K J 1/10W		R601-603			RK73GB2A180J	CHIP R 18 J 1/10W	
R383			RK73GB2A154J	CHIP R 150K J 1/10W		R604			RK73GB2A100J	CHIP R 10 J 1/10W	
R384,385			RK73GB2A473J	CHIP R 47K J 1/10W		R605			RK73GB2A471J	CHIP R 470 J 1/10W	
R386			RK73GB2A103J	CHIP R 10K J 1/10W		R606			RK73GB2A473J	CHIP R 47K J 1/10W	
R387,388			RK73GB2A471J	CHIP R 470 J 1/10W		R607			RK73GB2A470J	CHIP R 47 J 1/10W	
R389			RK73GB2A223J	CHIP R 22K J 1/10W		R608			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R390			RK73GB2A000J	CHIP R 0.0 J 1/10W		R609,610			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R391			RK73GB2A152J	CHIP R 1.5K J 1/10W		R611			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R392			RK73GB2A223J	CHIP R 22K J 1/10W		R612			RK73GB2A271J	CHIP R 270 J 1/10W	
R393			RK73GB2A122J	CHIP R 1.2K J 1/10W		R613			RK73GB2A100J	CHIP R 10 J 1/10W	
R394			RK73GB2A821J	CHIP R 820 J 1/10W		R614			RK73GB2A101J	CHIP R 100 J 1/10W	
R395,396			RK73GB2A681J	CHIP R 680 J 1/10W		R615			RK73GB2A221J	CHIP R 220 J 1/10W	
R399			RK73GB2A103J	CHIP R 10K J 1/10W		R616			RK73GB2A561J	CHIP R 560 J 1/10W	
R400			RK73GB2A334J	CHIP R 330K J 1/10W		R618			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R402			RK73GB2A560J	CHIP R 56 J 1/10W		R619			RK73GB2A121J	CHIP R 120 J 1/10W	
R403			RK73GB2A223J	CHIP R 22K J 1/10W		R620			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R405			RK73GB2A182J	CHIP R 1.8K J 1/10W		R622			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R406			RK73GB2A332J	CHIP R 3.3K J 1/10W		R623			RK73GB2A101J	CHIP R 100 J 1/10W	
R407			RK73GB2A273J	CHIP R 27K J 1/10W		R625			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R408,409			RK73GB2A000J	CHIP R 0.0 J 1/10W		R626			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R410			RK73GB2A104J	CHIP R 100K J 1/10W		R627			RK73GB2A151J	CHIP R 150 J 1/10W	
R411			RK73GB2A000J	CHIP R 0.0 J 1/10W		R628-632			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R412			RK73GB2A183J	CHIP R 18K J 1/10W		R633			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R413			RK73GB2A103J	CHIP R 10K J 1/10W		R634			RK73GB2A470J	CHIP R 47 J 1/10W	
R415			RK73GB2A000J	CHIP R 0.0 J 1/10W		R635		*	RN73GE1J221D	METAL FILM 220 D 1/16W	

PARTS LIST

RX UNIT (X55-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R636			RK73GB2A000J	CHIP R 0.0 J 1/10W		D203			HSM88AS-E	DIODE	
R638			RK73GB2A100J	CHIP R 10 J 1/10W		D204-207			HSC277	DIODE	
R639			RK73GB2A821J	CHIP R 820 J 1/10W		D210-213			HSC277	DIODE	
R640			RK73GB2A5R6J	CHIP R 5.6 J 1/10W		D214,215		*	DB3J314F0L	DIODE	
R641			RK73GB2A821J	CHIP R 820 J 1/10W		D601			KV1470-G	VARIABLE CAPACITANCE DIODE	
R642			RK73GB2A100J	CHIP R 10 J 1/10W		IC1			LMC7101BIM5	MOS-IC	
R643,644			RK73GB2A104J	CHIP R 100K J 1/10W		IC2			SKY72310-362	MOS-IC	
R645			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC3			LMC7101BIM5	MOS-IC	
R646			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		IC4			NJM2878F4-33	BI-POLAR IC	
R648			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC201			TA75S01F-F	MOS-IC	
R649			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC202		*	AV111-12LF	ANALOGUE IC	
R651			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC204			NJM2732V	BI-POLAR IC	
R652			RK73GB2A682J	CHIP R 6.8K J 1/10W		IC205		*	ADL5801ACPZ	MOS-IC	
R653			RK73GB2A152J	CHIP R 1.5K J 1/10W		IC206			TC7W53FK(F)	MOS-IC	
R654			RK73GB2A330J	CHIP R 33 J 1/10W		IC207		*	UA31136L	MOS-IC	
R655			RK73GB2A101J	CHIP R 100 J 1/10W		IC208,209			AD8051ART	ANALOGUE IC	
R656			RK73GB2A104J	CHIP R 100K J 1/10W		IC210			NJM2732V	BI-POLAR IC	
R657			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC211			TC7W53FK(F)	MOS-IC	
R659,660			RK73GB2A100J	CHIP R 10 J 1/10W		IC501			AD607Z	BI-POLAR IC	
R661			RK73GB2A181J	CHIP R 180 J 1/10W		IC502			AD8051ART	ANALOGUE IC	
R663			RK73GB2A682J	CHIP R 6.8K J 1/10W		IC503			NJM2878F4-33	BI-POLAR IC	
R664			RK73GB2A332J	CHIP R 3.3K J 1/10W		IC601			LMC7101BIM5	MOS-IC	
R665			RK73GB2A470J	CHIP R 47 J 1/10W		IC602			TC7WH126FU-F	MOS-IC	
R666			RK73GB2A100J	CHIP R 10 J 1/10W		IC603			ADF4111BCP7	MOS-IC	
R667			RK73GB2A181J	CHIP R 180 J 1/10W		IC604			TC7WH126FU-F	MOS-IC	
R668-670			RK73GB2A180J	CHIP R 18 J 1/10W		IC605,606			NJM2878F4-33	BI-POLAR IC	
R671			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC801-804			NJM78M05DL1AZB	ANALOGUE IC	
R672			RK73GB2A473J	CHIP R 47K J 1/10W		IC805			BH2220FVM	ANALOGUE IC	
R673			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC806			LM50BIM3/NOPB	MOS-IC	
R674			RK73GB2A473J	CHIP R 47K J 1/10W		IC807			NJM2386ADL3-09	ANALOGUE IC	
R675,676			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC808			NJM7805FA-ZB	BI-POLAR IC	
R677,678			RK73GB2A473J	CHIP R 47K J 1/10W		IC809			NJM7808FA-ZB	BI-POLAR IC	
R679,680			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC810			AD1582	ANALOGUE IC	
R681			RK73GB2A473J	CHIP R 47K J 1/10W		IC811			AD7908BRU	MOS-IC	
R801			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC812			NJM2732V	BI-POLAR IC	
R809			RK73GB2A100J	CHIP R 10 J 1/10W		IC813			S24CS02AFJTBG	ROM IC	
R810-812			RK73GB2A101J	CHIP R 100 J 1/10W		IC814			NJM2732V	BI-POLAR IC	
R813-815			RK73GB2A100J	CHIP R 10 J 1/10W		Q1			2SC4617(R)	TRANSISTOR	
R816			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q2-4			2SC4116(BLJF	TRANSISTOR	
R817			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q5			2SK508NV(K53)	FET	
R819			RK73GB2A103J	CHIP R 10K J 1/10W		Q6			2SC4116(BLJF	TRANSISTOR	
R820-822			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q7			SSM3K15TE(F)	FET	
R825			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q8-11			2SC5108(Y)F	TRANSISTOR	
R828-830			RK73GB2A104J	CHIP R 100K J 1/10W		Q201		*	NESG220034	TRANSISTOR	
R832,833			RK73GB2A104J	CHIP R 100K J 1/10W		Q202			2SC5636	TRANSISTOR	
R834,835			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q203,204		*	NESG220034	TRANSISTOR	
R837			RK73GB2A100J	CHIP R 10 J 1/10W		Q207			SSM3J01F	FET	
R838			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q208,209			SSM3K15TE(F)	FET	
R839,840			RK73GB2A101J	CHIP R 100 J 1/10W		Q210			SSM3J01F	FET	
R842			RK73GB2A101J	CHIP R 100 J 1/10W		Q211		*	NESG220034	TRANSISTOR	
R845			RK73GB2A104J	CHIP R 100K J 1/10W		Q213			SSM3K15TE(F)	FET	
R847,848			RK73GB2A104J	CHIP R 100K J 1/10W		Q214			2SC4617(S)	TRANSISTOR	
R850			RK73GB2A470J	CHIP R 47 J 1/10W		Q215			DTA144EEB	DIGITAL TRANSISTOR	
R851,852			RK73GB2A101J	CHIP R 100 J 1/10W		Q216			SSM3K15TE(F)	FET	
R854			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q501			2SC4725	TRANSISTOR	
R855,856			RK73GB2A104J	CHIP R 100K J 1/10W		Q601,602			2SC4617(R)	TRANSISTOR	
R857-860			RK73GB2A103J	CHIP R 10K J 1/10W		Q603			2SC4725	TRANSISTOR	
D1-3			1SV283F	VARIABLE CAPACITANCE DIODE		Q604		*	2SK2539-7	FET	
D5			DA221	DIODE		Q605			2SC4116(BLJF	TRANSISTOR	
						Q606			2SA1832F	TRANSISTOR	

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

RX UNIT (X55-3120-10)
TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti- nation	Ref. No.	Address	New parts	Parts No.	Description	Desti- nation	
Q607 Q608,609 Q610,611 Q801			SSM3K15TE(F) 2SC4725 SSM3K15TE(F) SSM3K15TE(F)	FET TRANSISTOR FET FET		C85 C86 C87 C88 C89			CC73GCH1H080B CC73GCH1H471J CK73GB1H103K CC73GCH1H070B CC73GCH1H060B	CHIP C CHIP C CHIP C CHIP C CHIP C	8.0PF 470PF 0.010UF 7.0PF 6.0PF	B J K B B
TX UNIT (X56-3150-10)						C90 C91 C92 C93,94 C95			CC73GCH1H030B CE32BM1E470M CC73GCH1H471J CS77CC1C330M CE32CL1V100M	CHIP C CHIP EL CHIP C CHIP TNTL CHIP EL	3.0PF 47UF 470PF 33UF 10UF	B 25WV J 16WV 35WV
D8 D201 D920-924 D925-932			B30-2230-05 B30-2230-05 B30-2265-05 B30-2171-05	LED (YG) LED (YG) LED (BR/PG) LED (D)		C96 C97,98 C99-101 C104 C105,106			CC73GCH1H471J CC73GCH1H070B CC73GCH1H471J CK73GB1H103K CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	470PF 7.0PF 470PF 0.010UF 470PF	J B J K J
C1 C2 C3 C4 C7			CK73GB1H103K CC73GCH1H101J CK73GB1H103K CC73GCH1H101J CK73GB1H104K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 100PF 0.010UF 100PF 0.10UF	K J K J K	C107 C109 C110 C111 C113		CK73GB1H103K CC73GCH1H471J CC73GCH1H020B CC73GCH1H470J CC73GCH1H470J	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 470PF 2.0PF 47PF 47PF	K J B J J
C8 C9 C10 C11-13 C14			CC73GCH1H101J CC73GCH1H471J CK73GB1H103K CC73GCH1H101J CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	100PF 470PF 0.010UF 100PF 470PF	J J K J J	C114 C120 C121 C122-125 C126		CK73GB1H103K CC73GCH1H470J CC73GCH1H070B CC73GCH1H470J CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 47PF 7.0PF 47PF 470PF	K J B J J
C15 C16 C18 C19 C20-23			CK73GB1H103K CC73GCH1H471J CS77CA1ER47M CK73GB1E105K CC73GCH1H471J	CHIP C CHIP C CHIP TNTL CHIP C CHIP C	0.010UF 470PF 0.47UF 1.0UF 470PF	K J 25WV K J	C127 C128 C129 C130 C131		CC73GCH1H470J CK73GB1H103K CC73GCH1H470J CC73GCH1H100C CC73GCH1H070B	CHIP C CHIP C CHIP C CHIP C CHIP C	47PF 0.010UF 47PF 10PF 7.0PF	J K J C B
C24 C25-27 C30 C31 C32			CK73GB1E105K CK73GB1H103K CS77CA1VR22M CS77CC1C330M CC73GCH1H101J	CHIP C CHIP C CHIP TNTL CHIP TNTL CHIP C	1.0UF 0.010UF 0.22UF 33UF 100PF	K K 35WV 16WV J	C132 C133 C136 C137 C138		CC73GCH1H470J CK73GB1H104K CC73GCH1H470J CK73GB1H473K CC73GCH1H470J	CHIP C CHIP C CHIP C CHIP C CHIP C	47PF 0.10UF 47PF 0.047UF 47PF	J K J K J
C33 C34,35 C37,38 C39 C40			CK73GB1E105K CK73GB1H103K CC73GCH1H471J CK73EB1E104K CC73GCH1H221J	CHIP C CHIP C CHIP C CHIP C CHIP C	1.0UF 0.010UF 470PF 0.10UF 220PF	K K J K J	C139 C140 C141 C142 C144		CK73GB1H103K CC73GCH1H471J CC73GCH1H060B CC73GCH1H470J CC73GCH1H010B	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 470PF 6.0PF 47PF 1.0PF	K J B J B
C41 C42,43 C44 C45 C46			CC73GCH1H331J CK73GB1H103K CC73GCH1H680J CK73GB1H104K CC73GCH1H180J	CHIP C CHIP C CHIP C CHIP C CHIP C	330PF 0.010UF 68PF 0.10UF 18PF	J K J K J	C145 C146 C147 C149 C150		CC73GCH1H470J CK73GB1H103K CC73GCH1H471J CC73GCH1H470J CK73GB1H103K	CHIP C CHIP C CHIP C CHIP C CHIP C	47PF 0.010UF 470PF 47PF 0.010UF	J K J J K
C47 C50 C52 C54 C56			CC73GCH1H470J CC73GCH1H090B CC73GCH1H050B CC73GCH1H471J CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	47PF 9.0PF 5.0PF 470PF 470PF	J B B J J	C153 C155 C157 C158-161 C162		CC73GCH1H050B CC73GCH1H100C CC73GCH1H050B CC73GCH1H030B CC73GCH1H080B	CHIP C CHIP C CHIP C CHIP C CHIP C	5.0PF 10PF 5.0PF 3.0PF 8.0PF	B C B B B
C57 C58 C63,64 C65 C67			CC73GCH1H181J CC73GCH1H470J CC73GCH1H0R5B CC73GCH1H471J CC73GCH1H0R5B	CHIP C CHIP C CHIP C CHIP C CHIP C	180PF 47PF 0.5PF 470PF 0.5PF	J J B J B	C163 C164 C166 C168 C169-172		CC73GCH1H150J CC73GCH1H050B CC73GCH1H100C CC73GCH1H050B CC73GCH1H030B	CHIP C CHIP C CHIP C CHIP C CHIP C	15PF 5.0PF 10PF 5.0PF 3.0PF	J B C B B
C68,69 C70 C72 C75 C76			CC73GCH1H060B CC73GCH1H080B CC73GCH1H040B CC73GCH1H471J CK73GB1H103K	CHIP C CHIP C CHIP C CHIP C CHIP C	6.0PF 8.0PF 4.0PF 470PF 0.010UF	B B B J K	C173 C174,175 C177 C178 C179		CC73GCH1H150J CC73GCH1H080B CC73GCH1H010B CC73GCH1H040B CC73GCH1H070B	CHIP C CHIP C CHIP C CHIP C CHIP C	15PF 8.0PF 1.0PF 4.0PF 7.0PF	J B B B B
C77,78 C79,80 C82-84			CC73GCH1H470J CC73GCH1H471J CC73GCH1H471J	CHIP C CHIP C CHIP C	47PF 470PF 470PF	J J J						

PARTS LIST

TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C180			CC73GCH1H040B	CHIP C 4.0PF B		C309			CE32BM1E470M	CHIP EL 47UF 25WV	
C201			CK73FB0J106K	CHIP C 10UF K		C310			CK73GB1H103K	CHIP C 0.010UF K	
C202			CK73GB1H104K	CHIP C 0.10UF K		C311			CK73GB1H223K	CHIP C 0.022UF K	
C203,204			CK73FB0J106K	CHIP C 10UF K		C312-314			CK73GB1H103K	CHIP C 0.010UF K	
C205			CK73GB1H104K	CHIP C 0.10UF K		C316			CC73GCH1H181J	CHIP C 180PF J	
C206,207			CK73GB1H103K	CHIP C 0.010UF K		C317			CC73GCH1H470J	CHIP C 47PF J	
C209			CS77CA1C2R2M	CHIP TNTL 2.2UF 16WV		C318			CS77CA1VR47M	CHIP TNTL 0.47UF 35WV	
C210			CC73GCH1H100C	CHIP C 10PF C		C319			CC73GCH1H331J	CHIP C 330PF J	
C211			CC73GCH1H471J	CHIP C 470PF J		C320			CC73GCH1H180J	CHIP C 18PF J	
C212			CK73GB1H104K	CHIP C 0.10UF K		C321			CC73GCH1H221J	CHIP C 220PF J	
C213			CE32BM1E470M	CHIP EL 47UF 25WV		C323			CC73GCH1H680J	CHIP C 68PF J	
C215			CK73GB1H103K	CHIP C 0.010UF K		C324			CK73GB1H104K	CHIP C 0.10UF K	
C216			CC73GCH1H181J	CHIP C 180PF J		C325			CK73GB1H103K	CHIP C 0.010UF K	
C217-219			CK73GB1H103K	CHIP C 0.010UF K		C328-330			CK73GB1H103K	CHIP C 0.010UF K	
C220			CC73GCH1H471J	CHIP C 470PF J		C331			CK73GB1E105K	CHIP C 1.0UF K	
C222			CK73GB1H102K	CHIP C 1000PF K		C332-340			CK73GB1H103K	CHIP C 0.010UF K	
C223			CK73GB1H104K	CHIP C 0.10UF K		C341			CC73GCH1H680J	CHIP C 68PF J	
C224			CE32CL1V100M	CHIP EL 10UF 35WV		C342			CK73GB1H104K	CHIP C 0.10UF K	
C225		*	C93-1824-05	CHIP C 100UF M		C343			CC73GCH1H221J	CHIP C 220PF J	
C226			CE32CL1V100M	CHIP EL 10UF 35WV		C344			CK73GB1H103K	CHIP C 0.010UF K	
C227			CC73GCH1H121J	CHIP C 120PF J		C345			CC73GCH1H180J	CHIP C 18PF J	
C228			CC73GCH1H100C	CHIP C 10PF C		C346			CC73GCH1H331J	CHIP C 330PF J	
C229			CS77CC1C100M	CHIP TNTL 10UF 16WV		C347			CC73GCH1H470J	CHIP C 47PF J	
C230			CC73GCH1H331J	CHIP C 330PF J		C348			CC73GCH1H181J	CHIP C 180PF J	
C231,232			CS77CB21A470M	CHIP TNTL 47UF 10WV		C349-352			CK73GB1H103K	CHIP C 0.010UF K	
C233			CC73GCH1H221J	CHIP C 220PF J		C353			CC73GCH1H680J	CHIP C 68PF J	
C234			CS77CC1C100M	CHIP TNTL 10UF 16WV		C354			CK73GB1H103K	CHIP C 0.010UF K	
C235			CK73GB1H103K	CHIP C 0.010UF K		C355			CK73GB1H104K	CHIP C 0.10UF K	
C236			CC73GCH1H470J	CHIP C 47PF J		C356			CC73GCH1H221J	CHIP C 220PF J	
C237			CK73GB1H104K	CHIP C 0.10UF K		C357			CC73GCH1H180J	CHIP C 18PF J	
C238			CC73GCH1H180J	CHIP C 18PF J		C358			CC73GCH1H331J	CHIP C 330PF J	
C239			CK73GB1H103K	CHIP C 0.010UF K		C359			CC73GCH1H470J	CHIP C 47PF J	
C240			CK73GB1H104K	CHIP C 0.10UF K		C360			CC73GCH1H181J	CHIP C 180PF J	
C241			CC73GCH1H331J	CHIP C 330PF J		C362-367			CK73GB1H103K	CHIP C 0.010UF K	
C242			CC73GCH1H680J	CHIP C 68PF J		C368			CC73GCH1H680J	CHIP C 68PF J	
C243,244			CK73GB1H103K	CHIP C 0.010UF K		C369,370			CK73GB1H103K	CHIP C 0.010UF K	
C245			CC73GCH1H270J	CHIP C 27PF J		C371			CC73GCH1H680J	CHIP C 68PF J	
C246			CC73GCH1H331J	CHIP C 330PF J		C372,373			CK73GB1H104K	CHIP C 0.10UF K	
C247,248			CK73GB1H104K	CHIP C 0.10UF K		C374			CK73GB1E105K	CHIP C 1.0UF K	
C249,250		*	C93-1824-05	CHIP C 100UF M		C375			CK73GB1H103K	CHIP C 0.010UF K	
C251			CK73GB1H102K	CHIP C 1000PF K		C401			CK73GB1H104K	CHIP C 0.10UF K	
C252-254			CC73GCH1H100C	CHIP C 10PF C		C402			CC73GCH1H100C	CHIP C 10PF C	
C255			CK73GB1H104K	CHIP C 0.10UF K		C404			CC73GCH1H270J	CHIP C 27PF J	
C256			CC73GCH1H471J	CHIP C 470PF J		C407			CC73GCH1H100C	CHIP C 10PF C	
C257			CC73GCH1H100C	CHIP C 10PF C		C408-412			CK73GB1H104K	CHIP C 0.10UF K	
C258,259			CK73GB1H103K	CHIP C 0.010UF K		C413-416			CC73GCH1H560J	CHIP C 56PF J	
C260			CC73GCH1H471J	CHIP C 470PF J		C417-420			CK73GB1H104K	CHIP C 0.10UF K	
C261			CK73GB1H103K	CHIP C 0.010UF K		C421-423			CK73GB1H103K	CHIP C 0.010UF K	
C263-265			CK73GB1H103K	CHIP C 0.010UF K		C424			CK73GB1H104K	CHIP C 0.10UF K	
C266			CK73GB1H104K	CHIP C 0.10UF K		C425			CK73GB1H103K	CHIP C 0.010UF K	
C267			CC73GCH1H471J	CHIP C 470PF J		C426			CK73GB1H104K	CHIP C 0.10UF K	
C268			CK73GB1H103K	CHIP C 0.010UF K		C432			CC73GCH1H100C	CHIP C 10PF C	
C269			CK73GB1E105K	CHIP C 1.0UF K		C433,434			CC73GCH1H471J	CHIP C 470PF J	
C271			CK73GB1H103K	CHIP C 0.010UF K		C435			CK73GB1H104K	CHIP C 0.10UF K	
C301			CK73GB1H104K	CHIP C 0.10UF K		C436-438			CK73GB1H103K	CHIP C 0.010UF K	
C302			CK73GB1H103K	CHIP C 0.010UF K		C439			CK73GB1H104K	CHIP C 0.10UF K	
C303			CC73GCH1H471J	CHIP C 470PF J		C440			CK73GB1H103K	CHIP C 0.010UF K	
C304,305			CK73GB1H104K	CHIP C 0.10UF K		C441			CK73GB1H104K	CHIP C 0.10UF K	
C306			CC73GCH1H471J	CHIP C 470PF J		C442			CK73FB0J106K	CHIP C 10UF K	
C307			CK73GB1H103K	CHIP C 0.010UF K		C443,444			CK73GB1E105K	CHIP C 1.0UF K	

PARTS LIST

TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C501			CC73GCH1H100C	CHIP C 10PF C		C608			CK73GB1H104K	CHIP C 0.10UF K	
C502-504			CK73GB1H104K	CHIP C 0.10UF K		C609			CK73GB1H103K	CHIP C 0.010UF K	
C505			CC73GCH1H221J	CHIP C 220PF J		C610			CK73GB1H104K	CHIP C 0.10UF K	
C506			CC73GCH1H121J	CHIP C 120PF J		C611			CK73GB1H103K	CHIP C 0.010UF K	
C507			CC73GCH1H271J	CHIP C 270PF J		C612,613			CK73GB1H104K	CHIP C 0.10UF K	
C508			CC73GCH1H221J	CHIP C 220PF J		C614,615			CK73GB1H103K	CHIP C 0.010UF K	
C509			CC73GCH1H470J	CHIP C 47PF J		C616			CK73FB0J106K	CHIP C 10UF K	
C510			CC73GCH1H331J	CHIP C 330PF J		C617,618			CK73GB1H104K	CHIP C 0.10UF K	
C511			CK73GB1H104K	CHIP C 0.10UF K		C619			CK73FB0J106K	CHIP C 10UF K	
C512,513			CC73GCH1H221J	CHIP C 220PF J		C620			CC73GCH1H820J	CHIP C 82PF J	
C514			CC73GCH1H271J	CHIP C 270PF J		C621,622			CC73GCH1H471J	CHIP C 470PF J	
C516			CC73GCH1H470J	CHIP C 47PF J		C623			CC73GCH1H470J	CHIP C 47PF J	
C517			CK73GB1H104K	CHIP C 0.10UF K		C701,702			CK73GB1H104K	CHIP C 0.10UF K	
C518			CC73GCH1H121J	CHIP C 120PF J		C703			CC73GCH1H471J	CHIP C 470PF J	
C519			CC73GCH1H470J	CHIP C 47PF J		C704			CK73GB1E105K	CHIP C 1.0UF K	
C520-522			CK73GB1H104K	CHIP C 0.10UF K		C705			CE32CL1V100M	CHIP EL 10UF 35WV	
C523			CC73GCH1H030B	CHIP C 3.0PF B		C706,707			CK73GB1H104K	CHIP C 0.10UF K	
C524-526			CK73GB1H104K	CHIP C 0.10UF K		C708,709			CC73GCH1H471J	CHIP C 470PF J	
C527			CC73GCH1H471J	CHIP C 470PF J		C710			CK73GB1H104K	CHIP C 0.10UF K	
C528			CK73GB1H104K	CHIP C 0.10UF K		C711			CK73GB1H103K	CHIP C 0.010UF K	
C529			CC73GCH1H331J	CHIP C 330PF J		C712-714			CK73GB1H104K	CHIP C 0.10UF K	
C530-532			CK73GB1H104K	CHIP C 0.10UF K		C715			CE32CL1V100M	CHIP EL 10UF 35WV	
C533			CC73GCH1H030B	CHIP C 3.0PF B		C716			CK73GB1H103K	CHIP C 0.010UF K	
C534			CK73GB1H104K	CHIP C 0.10UF K		C717,718			CE32CL1V100M	CHIP EL 10UF 35WV	
C536-538			CK73GB1H104K	CHIP C 0.10UF K		C719,720			CK73GB1H103K	CHIP C 0.010UF K	
C539			CC73GCH1H820J	CHIP C 82PF J		C721			CK73GB1H104K	CHIP C 0.10UF K	
C540-544			CK73GB1H104K	CHIP C 0.10UF K		C722			CE32CL1V100M	CHIP EL 10UF 35WV	
C545			CC73GCH1H471J	CHIP C 470PF J		C723			CK73GB1H103K	CHIP C 0.010UF K	
C546-549			CK73GB1H104K	CHIP C 0.10UF K		C724			CK73GB1H104K	CHIP C 0.10UF K	
C550			CC73GCH1H471J	CHIP C 470PF J		C725			CE32CL1V100M	CHIP EL 10UF 35WV	
C551-553			CK73GB1H104K	CHIP C 0.10UF K		C726			CK73GB1H103K	CHIP C 0.010UF K	
C554			CC73GCH1H221J	CHIP C 220PF J		C727-729			CC73GCH1H471J	CHIP C 470PF J	
C555			CC73GCH1H121J	CHIP C 120PF J		C730			CK73GB1H103K	CHIP C 0.010UF K	
C556-558			CK73GB1H104K	CHIP C 0.10UF K		C731-734			CC73GCH1H471J	CHIP C 470PF J	
C561			CC73GCH1H100C	CHIP C 10PF C		C735,736			CK73GB1H103K	CHIP C 0.010UF K	
C562			CC73GCH1H471J	CHIP C 470PF J		C737,738			CC73GCH1H471J	CHIP C 470PF J	
C563			CC73GCH1H470J	CHIP C 47PF J		C739			CK73GB1H103K	CHIP C 0.010UF K	
C564			CC73GCH1H331J	CHIP C 330PF J		C740			CC73GCH1H471J	CHIP C 470PF J	
C565			CK73GB1H103K	CHIP C 0.010UF K		C741			CK73GB1H103K	CHIP C 0.10UF K	
C566			CK73GB1H104K	CHIP C 0.10UF K		C801			CK73GB1H103K	CHIP C 0.010UF K	
C567			CK73GB1H103K	CHIP C 0.010UF K		C802,803			CC73GCH1H471J	CHIP C 470PF J	
C568-572			CK73GB1H104K	CHIP C 0.10UF K		C804			CK73GB1H103K	CHIP C 0.010UF K	
C573			CC73GCH1H221J	CHIP C 220PF J		C809			CC73GCH1H331J	CHIP C 330PF J	
C577,578			CC73GCH1H100C	CHIP C 10PF C		C811			CC73GCH1H270J	CHIP C 27PF J	
C579			CK73GB1H104K	CHIP C 0.10UF K		C812			CC73GCH1H331J	CHIP C 330PF J	
C580			CC73GCH1H121J	CHIP C 120PF J		C813			CC73GCH1H270J	CHIP C 27PF J	
C582			CC73GCH1H471J	CHIP C 470PF J		C814			CC73GCH1H471J	CHIP C 470PF J	
C583			CC73GCH1H470J	CHIP C 47PF J		C826			CE32AU1E100M	CHIP EL 10UF 25WV	
C584			CC73GCH1H331J	CHIP C 330PF J		C834,835			CC73GCH1H331J	CHIP C 330PF J	
C585,586			CK73GB1H104K	CHIP C 0.10UF K		C839			C92-0904-05	OS-CON 22UF 35WV	
C589			CK73GB1H103K	CHIP C 0.010UF K		C840			CC73GCH1H470J	CHIP C 47PF J	
C591,592			CK73GB1H103K	CHIP C 0.010UF K		C920-925			CK73GB1H104K	CHIP C 0.10UF K	
C593			CC73GCH1H181J	CHIP C 180PF J		C926			CK73GB1H102K	CHIP C 1000PF K	
C594-598			CK73GB1H104K	CHIP C 0.10UF K		C928,929			CK73GB1H104K	CHIP C 0.10UF K	
C599			CC73GCH1H470J	CHIP C 47PF J		C930,931			CK73GB1E105K	CHIP C 1.0UF K	
C600			CC73GCH1H331J	CHIP C 330PF J		C932			CC73GCH1H470J	CHIP C 47PF J	
C601			CC73GCH1H180J	CHIP C 18PF J		C933,934			CS77CA1A1R5M	CHIP TNTL 1.5UF 10WV	
C602			CC73GCH1H221J	CHIP C 220PF J		C935,936			CK73GB1H104K	CHIP C 0.10UF K	
C603			CC73GCH1H680J	CHIP C 68PF J		C937			CK73GB1H103K	CHIP C 0.010UF K	
C604-606			CK73GB1H103K	CHIP C 0.010UF K		C938			CK73FB0J106K	CHIP C 10UF K	

PARTS LIST

TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C939			CK73GB1H102K	CHIP C 1000PF K		L301			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C941			CK73GB1H102K	CHIP C 1000PF K		L302,303			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
C943			CK73GB1H104K	CHIP C 0.10UF K		L304			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)	
C960-965			CK73GB1H104K	CHIP C 0.10UF K		L305			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)	
						L306-308			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
CN104			E23-1280-05	TERMINAL		L309			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)	
CN108-110			E23-1280-05	TERMINAL		L310			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)	
CN112-120			E23-1280-05	TERMINAL		L311			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
CN130			E23-1330-05	TERMINAL		L312			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)	
CN403			E04-0193-05	PIN SOCKET		L313			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)	
CN405,406			E04-0193-05	PIN SOCKET		L314			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
CN407			E04-0154-05	PIN SOCKET		L315,316			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
CN408			E04-0193-05	PIN SOCKET		L401			L41-3305-33	SMALL FIXED INDUCTOR (33UH)	
CN801			E41-2672-05	PIN ASSY		L402,403			L41-4705-33	SMALL FIXED INDUCTOR (47UH)	
CN802			E04-0193-05	PIN SOCKET		L404			L41-2205-33	SMALL FIXED INDUCTOR (22UH)	
CN803			E40-6822-05	FLAT CABLE CONNECTOR		L405,406			L41-1205-33	SMALL FIXED INDUCTOR (12UH)	
CN804-806			E40-6656-05	PIN ASSY		L408			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
CN807			E41-2671-05	PIN ASSY		L410			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
CN920			E41-1493-05	PIN ASSY		L413			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
CN921			E40-6656-05	PIN ASSY		L501			L41-3305-33	SMALL FIXED INDUCTOR (33UH)	
CN923			E41-1483-05	PIN ASSY		L502			L41-5685-33	SMALL FIXED INDUCTOR (0.56UH)	
CN960			E41-1493-05	PIN ASSY		L503			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)	
CF401			L72-1019-05	CERAMIC FILTER		L504			L41-5685-33	SMALL FIXED INDUCTOR (0.56UH)	
L1-3			L92-0140-05	CHIP FERRITE		L505			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)	
L4			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)		L506,507			L39-1517-05	TOROIDAL COIL	
L5			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)							
L8,9			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)		L508,509			L41-3395-33	SMALL FIXED INDUCTOR (3.3UH)	
L10			L92-0140-05	CHIP FERRITE		L510			L41-5685-33	SMALL FIXED INDUCTOR (0.56UH)	
L11			L34-4608-15	AIR-CORE COIL		L511			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)	
L12			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)		L512,513			L41-3305-33	SMALL FIXED INDUCTOR (33UH)	
L13			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		L515			L41-5685-33	SMALL FIXED INDUCTOR (0.56UH)	
L16-18			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)		L516			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)	
L19		*	L41-6865-55	SMALL FIXED INDUCTOR (6.8NH)		L518			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L20			L41-1078-55	SMALL FIXED INDUCTOR (10NH)		L519			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)	
L21-23		*	L41-1578-55	SMALL FIXED INDUCTOR (15NH)		L520			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)	
L24			L41-1078-55	SMALL FIXED INDUCTOR (10NH)		L521			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
L25			L39-1498-05	TOROIDAL COIL		L701			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
L28			L41-1078-55	SMALL FIXED INDUCTOR (10NH)		L801,802			L41-2785-33	SMALL FIXED INDUCTOR (0.27UH)	
L32		*	L41-7565-55	SMALL FIXED INDUCTOR (7.5NH)		X201		*	L77-3066-05	VCXO (19.2MHZ)	
L33		*	L41-1561-55	SMALL FIXED INDUCTOR (1.5NH)		X301		*	L77-3068-05	VCXO (20MHZ)	
L34			L79-1928-05	FILTER		X401			L77-3056-05	TCXO (19.2MHZ)	
L35		*	L41-3665-55	SMALL FIXED INDUCTOR (3.6NH)		CP11,12			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
L37		*	L41-3665-55	SMALL FIXED INDUCTOR (3.6NH)		CP13			RK75GB1JR00	CHIP-COM 0.00 J 1/16W	
L38			L41-4365-55	SMALL FIXED INDUCTOR (4.3NH)		CP14,15			RK74GB1J681J	CHIP-COM 680 J 1/16W	
L39			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		CP16-23			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
L40,41			L41-4365-55	SMALL FIXED INDUCTOR (4.3NH)		R3,4			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L42			L41-1078-55	SMALL FIXED INDUCTOR (10NH)		R5			RK73GB2A473J	CHIP R 47K J 1/10W	
L43			L41-1278-55	SMALL FIXED INDUCTOR (12NH)		R6			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L45,46			L41-4365-55	SMALL FIXED INDUCTOR (4.3NH)		R7			RK73GB2A473J	CHIP R 47K J 1/10W	
L47			L41-1078-55	SMALL FIXED INDUCTOR (10NH)		R8			RK73GB2A101J	CHIP R 100 J 1/10W	
L48			L41-1278-55	SMALL FIXED INDUCTOR (12NH)		R9			RK73GB2A100J	CHIP R 10 J 1/10W	
L49			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)		R10			RK73GB2A101J	CHIP R 100 J 1/10W	
L50,51		*	L41-8765-55	SMALL FIXED INDUCTOR (8.7NH)		R11			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L201			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R12			RK73GB2A105J	CHIP R 1.0M J 1/10W	
L202			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)		R13-15			RK73GB2A100J	CHIP R 10 J 1/10W	
L203			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R16			RK73GB2A105J	CHIP R 1.0M J 1/10W	
L204			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)		R17			RK73GB2A820J	CHIP R 82 J 1/10W	
L205			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		R18			RK73GB2A151J	CHIP R 150 J 1/10W	
L206			L41-2785-33	SMALL FIXED INDUCTOR (0.27UH)		R19			RK73GB2A104J	CHIP R 100K J 1/10W	
L207,208			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)		R21			RK73GB2A102J	CHIP R 1.0K J 1/10W	
						R22			RK73GB2A332J	CHIP R 3.3K J 1/10W	

PARTS LIST

TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R23			RK73GB2A470J	CHIP R 47 J 1/10W		R201			RK73GB2A104J	CHIP R 100K J 1/10W	
R24			RK73GB2A682J	CHIP R 6.8K J 1/10W		R202			RK73GB2A473J	CHIP R 47K J 1/10W	
R25			RK73GB2A100J	CHIP R 10 J 1/10W		R203			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R26			RK73GB2A683J	CHIP R 68K J 1/10W		R204			RK73GB2A104J	CHIP R 100K J 1/10W	
R27			RK73GB2A000J	CHIP R 0.0 J 1/10W		R205			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R28			RK73GB2A106J	CHIP R 10M J 1/10W		R206			RK73GB2A104J	CHIP R 100K J 1/10W	
R29			RK73GB2A471J	CHIP R 470 J 1/10W		R207,208			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R32			RK73GB2A221J	CHIP R 220 J 1/10W		R209,210			RK73GB2A104J	CHIP R 100K J 1/10W	
R35			RK73GB2A470J	CHIP R 47 J 1/10W		R211			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R38			RK73GB2A000J	CHIP R 0.0 J 1/10W		R213,214			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R39			RK73GB2A224J	CHIP R 220K J 1/10W		R216			RK73GB2A471J	CHIP R 470 J 1/10W	
R42			RK73GB2A000J	CHIP R 0.0 J 1/10W		R217,218			RK73GB2A100J	CHIP R 10 J 1/10W	
R43			RK73GB2A101J	CHIP R 100 J 1/10W		R219			RK73GB2A474J	CHIP R 470K J 1/10W	
R44			RK73GB2A184J	CHIP R 180K J 1/10W		R220			RK73GB2A100J	CHIP R 10 J 1/10W	
R45			RN73GE1J101D	METAL FILM 100 D 1/16W		R221,222			RK73GB2A473J	CHIP R 47K J 1/10W	
R46			RN73GE1J271D	METAL FILM 270 D 1/16W		R223			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R48,49			RK73GB2A331J	CHIP R 330 J 1/10W		R224			RK73GB2A470J	CHIP R 47 J 1/10W	
R50			RK73GB2A000J	CHIP R 0.0 J 1/10W		R225			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W		R226			RK73GB2A104J	CHIP R 100K J 1/10W	
R52			RK73GB2A472J	CHIP R 4.7K J 1/10W		R228,229			RK73GB2A104J	CHIP R 100K J 1/10W	
R53			RK73GB2A103J	CHIP R 10K J 1/10W		R230,231			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R54			RK73GB2A272J	CHIP R 2.7K J 1/10W		R232			RK73GB2A154J	CHIP R 150K J 1/10W	
R55			RK73GB2A101J	CHIP R 100 J 1/10W		R233			RK73GB2A563J	CHIP R 56K J 1/10W	
R56			RK73GB2A221J	CHIP R 220 J 1/10W		R234,235			RK73GB2A104J	CHIP R 100K J 1/10W	
R57			RK73GB2A470J	CHIP R 47 J 1/10W		R236			RK73GB2A823J	CHIP R 82K J 1/10W	
R58			RK73GB2A000J	CHIP R 0.0 J 1/10W		R237			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R59			RK73GB2A271J	CHIP R 270 J 1/10W		R238			RK73GB2A183J	CHIP R 18K J 1/10W	
R60			RK73GB2A180J	CHIP R 18 J 1/10W		R239			RK73GB2A103J	CHIP R 10K J 1/10W	
R61			RK73GB2A271J	CHIP R 270 J 1/10W		R240			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R62			RK73GB2A101J	CHIP R 100 J 1/10W		R241			RK73GB2A471J	CHIP R 470 J 1/10W	
R63			RK73GB2A271J	CHIP R 270 J 1/10W		R242,243			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R64			RK73GB2A180J	CHIP R 18 J 1/10W		R244			RK73GB2A681J	CHIP R 680 J 1/10W	
R65			RK73GB2A271J	CHIP R 270 J 1/10W		R245			RK73GB2A100J	CHIP R 10 J 1/10W	
R66,67			RK73GB2A102J	CHIP R 1.0K J 1/10W		R246-248			RK73GB2A104J	CHIP R 100K J 1/10W	
R68			RK73GB2A220J	CHIP R 22 J 1/10W		R249			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R70			RK73GB2A103J	CHIP R 10K J 1/10W		R250-252			RK73GB2A100J	CHIP R 10 J 1/10W	
R71			RK73GB2A152J	CHIP R 1.5K J 1/10W		R253-256			RK73GB2A104J	CHIP R 100K J 1/10W	
R74			RK73GB2A000J	CHIP R 0.0 J 1/10W		R257			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R77			RK73GB2A221J	CHIP R 220 J 1/10W		R258			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R78			RK73GB2A562J	CHIP R 5.6K J 1/10W		R259			RK73GB2A221J	CHIP R 220 J 1/10W	
R79			RK73GB2A152J	CHIP R 1.5K J 1/10W		R260			RK73GB2A471J	CHIP R 470 J 1/10W	
R81			RK73GB2A270J	CHIP R 27 J 1/10W		R261			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R83			RK73GB2A000J	CHIP R 0.0 J 1/10W		R262			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R85			RK73GB2A000J	CHIP R 0.0 J 1/10W		R263,264			RK73GB2A100J	CHIP R 10 J 1/10W	
R86,87			RK73GB2A474J	CHIP R 470K J 1/10W		R265-273			RK73GB2A104J	CHIP R 100K J 1/10W	
R89			RK73GB2A000J	CHIP R 0.0 J 1/10W		R274			RK73GB2A101J	CHIP R 100 J 1/10W	
R91			RK73GB2A000J	CHIP R 0.0 J 1/10W		R275			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R92			RK73GB2A563J	CHIP R 56K J 1/10W		R276			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R93			RK73GB2A392J	CHIP R 3.9K J 1/10W		R277,278			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R94			RK73GB2A103J	CHIP R 10K J 1/10W		R279			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R95			RK73GB2A123J	CHIP R 12K J 1/10W		R301			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R97			RK73GB2A474J	CHIP R 470K J 1/10W		R302			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R99			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R304			RK73GB2A474J	CHIP R 470K J 1/10W	
R100			RK73GB2A000J	CHIP R 0.0 J 1/10W		R305			RK73GB2A100J	CHIP R 10 J 1/10W	
R103,104			RK73GB2A000J	CHIP R 0.0 J 1/10W		R306			RK73GB2A474J	CHIP R 470K J 1/10W	
R105			RK73GB2A104J	CHIP R 100K J 1/10W		R307			RK73GB2A100J	CHIP R 10 J 1/10W	
R106,107			RK73GB2A474J	CHIP R 470K J 1/10W		R308			RK73GB2A474J	CHIP R 470K J 1/10W	
R108			RK73GB2A821J	CHIP R 820 J 1/10W		R309			RK73GB2A101J	CHIP R 100 J 1/10W	
R111-114			RK73GB2A472J	CHIP R 4.7K J 1/10W		R310			RK73GB2A100J	CHIP R 10 J 1/10W	
R115			RK73GB2A473J	CHIP R 47K J 1/10W		R311			RK73GB2A104J	CHIP R 100K J 1/10W	

PARTS LIST

TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti- nation	Ref. No.	Address	New parts	Parts No.	Description	Desti- nation
R312,313			RK73GB2A102J	CHIP R 1.0K J 1/10W		R412			RK73GB2A100J	CHIP R 10 J 1/10W	
R314			RK73GB2A104J	CHIP R 100K J 1/10W		R413			RK73GB2A331J	CHIP R 330 J 1/10W	
R315			RK73GB2A102J	CHIP R 1.0K J 1/10W		R414			RK73GB2A104J	CHIP R 100K J 1/10W	
R316			RK73GB2A104J	CHIP R 100K J 1/10W		R415,416			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R317			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R417			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R318			RK73GB2A103J	CHIP R 10K J 1/10W		R418			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R319,320			RK73GB2A105J	CHIP R 1.0M J 1/10W		R419			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R321			RK73GB2A104J	CHIP R 100K J 1/10W		R420			RK73GB2A100J	CHIP R 10 J 1/10W	
R322			RK73GB2A472J	CHIP R 4.7K J 1/10W		R421			RK73GB2A474J	CHIP R 470K J 1/10W	
R323			RK73GB2A470J	CHIP R 47 J 1/10W		R422			RK73GB2A100J	CHIP R 10 J 1/10W	
R324,325			RK73GB2A000J	CHIP R 0.0 J 1/10W		R423			RK73GB2A101J	CHIP R 100 J 1/10W	
R326			RK73GB2A224J	CHIP R 220K J 1/10W		R424			RK73GB2A100J	CHIP R 10 J 1/10W	
R327			RK73GB2A000J	CHIP R 0.0 J 1/10W		R425			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R329			RK73GB2A103J	CHIP R 10K J 1/10W		R426,427			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R330			RK73GB2A102J	CHIP R 1.0K J 1/10W		R429			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R331			RK73GB2A221J	CHIP R 220 J 1/10W		R430			RK73GB2A473J	CHIP R 47K J 1/10W	
R332			RK73GB2A100J	CHIP R 10 J 1/10W		R431-434			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R333			RK73GB2A822J	CHIP R 8.2K J 1/10W		R501			RK73GB2A104J	CHIP R 100K J 1/10W	
R334			RK73GB2A123J	CHIP R 12K J 1/10W		R502			RK73GB2A271J	CHIP R 270 J 1/10W	
R335			RK73GB2A332J	CHIP R 3.3K J 1/10W		R503			RK73GB2A180J	CHIP R 18 J 1/10W	
R336			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R504			RK73GB2A271J	CHIP R 270 J 1/10W	
R337			RK73GB2A182J	CHIP R 1.8K J 1/10W		R506			RK73GB2A470J	CHIP R 47 J 1/10W	
R338			RK73GB2A471J	CHIP R 470 J 1/10W		R508			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R339			RK73GB2A104J	CHIP R 100K J 1/10W		R509,510			RK73GB2A104J	CHIP R 100K J 1/10W	
R340			RK73GB2A100J	CHIP R 10 J 1/10W		R511			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R341			RK73GB2A221J	CHIP R 220 J 1/10W		R512			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R342			RK73GB2A100J	CHIP R 10 J 1/10W		R513			RK73GB2A220J	CHIP R 22 J 1/10W	
R344			RK73GB2A682J	CHIP R 6.8K J 1/10W		R514			RK73GB2A104J	CHIP R 100K J 1/10W	
R345			RK73GB2A332J	CHIP R 3.3K J 1/10W		R515			RK73GB2A473J	CHIP R 47K J 1/10W	
R346			RK73GB2A222J	CHIP R 2.2K J 1/10W		R516			RK73GB2A104J	CHIP R 100K J 1/10W	
R347			RK73GB2A471J	CHIP R 470 J 1/10W		R517			RK73GB2A473J	CHIP R 47K J 1/10W	
R348			RK73GB2A100J	CHIP R 10 J 1/10W		R518			RK73GH2A333D	CHIP R 33K D 1/10W	
R349			RK73GB2A470J	CHIP R 47 J 1/10W		R519			RK73GB2A561J	CHIP R 560 J 1/10W	
R350			RK73GB2A682J	CHIP R 6.8K J 1/10W		R520			RK73GB2A473J	CHIP R 47K J 1/10W	
R351			RK73GB2A332J	CHIP R 3.3K J 1/10W		R522			RK73GB2A271J	CHIP R 270 J 1/10W	
R352			RK73GB2A222J	CHIP R 2.2K J 1/10W		R523			RK73GB2A180J	CHIP R 18 J 1/10W	
R353			RK73GB2A221J	CHIP R 220 J 1/10W		R524			RK73GB2A271J	CHIP R 270 J 1/10W	
R354			RK73GB2A100J	CHIP R 10 J 1/10W		R525			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R355			RK73GB2A470J	CHIP R 47 J 1/10W		R526			RK73GB2A220J	CHIP R 22 J 1/10W	
R356			RK73GB2A000J	CHIP R 0.0 J 1/10W		R527,528			RK73GB2A473J	CHIP R 47K J 1/10W	
R357			RK73GB2A221J	CHIP R 220 J 1/10W		R529,530			RK73GB2A104J	CHIP R 100K J 1/10W	
R358			RK73GB2A472J	CHIP R 4.7K J 1/10W		R532			RK73GB2A100J	CHIP R 10 J 1/10W	
R359			RK73GB2A331J	CHIP R 330 J 1/10W		R533			RK73GB2A391J	CHIP R 390 J 1/10W	
R360			RK73GB2A221J	CHIP R 220 J 1/10W		R534			RK73GB2A120J	CHIP R 12 J 1/10W	
R361			RK73GB2A123J	CHIP R 12K J 1/10W		R535			RK73GB2A391J	CHIP R 390 J 1/10W	
R362			RK73GB2A472J	CHIP R 4.7K J 1/10W		R536			RK73GH2A154D	CHIP R 150K D 1/10W	
R363			RK73GB2A123J	CHIP R 12K J 1/10W		R537			RK73GB2A564J	CHIP R 560K J 1/10W	
R364			RK73GB2A331J	CHIP R 330 J 1/10W		R538			RK73GB2A103J	CHIP R 10K J 1/10W	
R365,366			RK73GB2A100J	CHIP R 10 J 1/10W		R539			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R367,368			RK73GB2A102J	CHIP R 1.0K J 1/10W		R540			RK73GB2A104J	CHIP R 100K J 1/10W	
R369			RK73GB2A000J	CHIP R 0.0 J 1/10W		R541			RK73GB2A181J	CHIP R 180 J 1/10W	
R401			RK73GB2A471J	CHIP R 470 J 1/10W		R542			RK73GB2A563J	CHIP R 56K J 1/10W	
R402			RK73GB2A561J	CHIP R 560 J 1/10W		R543			RK73GB2A391J	CHIP R 390 J 1/10W	
R403			RK73GB2A682J	CHIP R 6.8K J 1/10W		R544			RK73GB2A120J	CHIP R 12 J 1/10W	
R404			RK73GB2A332J	CHIP R 3.3K J 1/10W		R545			RK73GB2A391J	CHIP R 390 J 1/10W	
R405			RK73GB2A471J	CHIP R 470 J 1/10W		R546			RK73GB2A100J	CHIP R 10 J 1/10W	
R406			RK73GB2A000J	CHIP R 0.0 J 1/10W		R547			RK73GB2A103J	CHIP R 10K J 1/10W	
R407			RK73GB2A100J	CHIP R 10 J 1/10W		R548			RK73GB2A181J	CHIP R 180 J 1/10W	
R408,409			RK73GB2A471J	CHIP R 470 J 1/10W		R550			RK73GB2A564J	CHIP R 560K J 1/10W	
R410,411			RK73GB2A104J	CHIP R 100K J 1/10W		R551			RK73GH2A154D	CHIP R 150K D 1/10W	

PARTS LIST

TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R552			RK73GB2A102J	CHIP R 1.0K J 1/10W		R813			RK73GB2A103J	CHIP R 10K J 1/10W	
R553			RK73GB2A104J	CHIP R 100K J 1/10W		R816,817			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R554			RK73GB2A333J	CHIP R 33K J 1/10W		R822			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R555			RK73GB2A473J	CHIP R 47K J 1/10W		R823			RK73GB2A104J	CHIP R 100K J 1/10W	
R556,557			RK73GB2A470J	CHIP R 47 J 1/10W		R824-829			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R558			RK73GB2A333J	CHIP R 33K J 1/10W		R831,832			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R559			RK73GB2A473J	CHIP R 47K J 1/10W		R835			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R561			RK73GB2A474J	CHIP R 470K J 1/10W		R845-847			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R563			RK73GB2A271J	CHIP R 270 J 1/10W		R848			RK73GB2A103J	CHIP R 10K J 1/10W	
R564-566			RK73GB2A102J	CHIP R 1.0K J 1/10W		R849-852			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R567,568			RK73GB2A104J	CHIP R 100K J 1/10W		R855-859			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R569			RK73GB2A474J	CHIP R 470K J 1/10W		R860			RK73GB2A103J	CHIP R 10K J 1/10W	
R570			RK73GB2A000J	CHIP R 0.0 J 1/10W		R920-932			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R575			RK73GB2A474J	CHIP R 470K J 1/10W		R933			RK73GB2A821J	CHIP R 820 J 1/10W	
R576			RK73GB2A104J	CHIP R 100K J 1/10W		R934,935			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R577,578			RK73GB2A221J	CHIP R 220 J 1/10W		R936,937			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R580			RK73GB2A101J	CHIP R 100 J 1/10W		R938,939			RK73GB2A821J	CHIP R 820 J 1/10W	
R583			RK73GB2A822J	CHIP R 8.2K J 1/10W		R940			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R584			RK73GB2A471J	CHIP R 470 J 1/10W		R941			RK73GB2A821J	CHIP R 820 J 1/10W	
R585			RK73GB2A100J	CHIP R 10 J 1/10W		R942			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R586			RK73GB2A124J	CHIP R 120K J 1/10W		R943			RK73GH2A224D	CHIP R 220K D 1/10W	
R587			RK73GB2A102J	CHIP R 1.0K J 1/10W		R944,945			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R588			RK73GB2A223J	CHIP R 22K J 1/10W		R946			RK73GB2A103J	CHIP R 10K J 1/10W	
R589			RK73GB2A100J	CHIP R 10 J 1/10W		R947			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R590			RK73GB2A181J	CHIP R 180 J 1/10W		R948,949			RK73GH2A104D	CHIP R 100K D 1/10W	
R591			RK73GB2A222J	CHIP R 2.2K J 1/10W		R950			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R592			RK73GB2A221J	CHIP R 220 J 1/10W		R951			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R593			RK73GB2A100J	CHIP R 10 J 1/10W		R960-965			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R594			RK73GB2A000J	CHIP R 0.0 J 1/10W		R966,967			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R595			RK73GB2A224J	CHIP R 220K J 1/10W		S920-925			S70-0502-05	TACT SWITCH	
R599			RK73GB2A104J	CHIP R 100K J 1/10W		D1			DA221	DIODE	
R600			RK73GB2A102J	CHIP R 1.0K J 1/10W		D2-5			1SV283F	VARIABLE CAPACITANCE DIODE	
R601			RK73GB2A392J	CHIP R 3.9K J 1/10W		D6			1SV278F	VARIABLE CAPACITANCE DIODE	
R602			RK73GB2A103J	CHIP R 10K J 1/10W		D7			HSM88AS-E	DIODE	
R603			RK73GB2A153J	CHIP R 15K J 1/10W		D401,402			HSC277	DIODE	
R604			RK73GB2A272J	CHIP R 2.7K J 1/10W		D501,502			UDZW3.0(B)	ZENER DIODE	
R605			RK73GB2A562J	CHIP R 5.6K J 1/10W		D503			HSC277	DIODE	
R606,607			RK73GB2A682J	CHIP R 6.8K J 1/10W		D504-506			HSM88AS-E	DIODE	
R608			RK73GB2A332J	CHIP R 3.3K J 1/10W		D507			HSC277	DIODE	
R609,610			RK73GB2A000J	CHIP R 0.0 J 1/10W		D509,510			HSC119	DIODE	
R612-614			RK73GB2A000J	CHIP R 0.0 J 1/10W		D511,512			UDZW3.0(B)	ZENER DIODE	
R615			RK73GB2A102J	CHIP R 1.0K J 1/10W		D515			HSM88AS-E	DIODE	
R619			RK73GB2A000J	CHIP R 0.0 J 1/10W		D516-519			HSC277	DIODE	
R621			RK73GB2A470J	CHIP R 47 J 1/10W		D801			CSA70-401L	SURGE ABSORBER	
R622			RK73GH2A393D	CHIP R 39K D 1/10W		D933,934			HSM88AS-E	DIODE	
R701,702			RK73GB2A100J	CHIP R 10 J 1/10W		D935,936			1SS355	DIODE	
R703			RK73GB2A104J	CHIP R 100K J 1/10W		D960,961			PSA05-11SRWA	LED	
R704			RK73GB2A100J	CHIP R 10 J 1/10W		IC1,2			TC7VH126FU-F	MOS-IC	
R705			RK73GB2A104J	CHIP R 100K J 1/10W		IC3			LMC7101BIM5	MOS-IC	
R706			RK73GB2A474J	CHIP R 470K J 1/10W		IC5			SKY72310-362	MOS-IC	
R707,708			RK73GB2A104J	CHIP R 100K J 1/10W		IC6			LMC7101BIM5	MOS-IC	
R709			RK73GB2A100J	CHIP R 10 J 1/10W		IC7			NJM2386ADL3-09	ANALOGUE IC	
R710			RK73GB2A474J	CHIP R 470K J 1/10W		IC8			NJM2904E-ZB	ANALOGUE IC	
R711,712			RK73GB2A104J	CHIP R 100K J 1/10W		IC201			BH2220FVM	ANALOGUE IC	
R713-715			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC202			S24CS02AFJTBG	ROM IC	
R717			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC203			NJM2732V	BI-POLAR IC	
R718-721			RK73GB2A100J	CHIP R 10 J 1/10W		IC204			ADF4001BRUZ	MOS-IC	
R722			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC205			NJU6368PF1	MOS-IC	
R806			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC206			NJM2732V	BI-POLAR IC	
R812			RK73GB2A104J	CHIP R 100K J 1/10W							

PARTS LIST

TX UNIT (X56-3150-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC207			M62364FP-F	MOS-IC		Q960-976			UMG1N	TRANSISTOR	
IC208			LMC7101BIM5	MOS-IC		TH1			157-302-65801	THERMISTOR	
IC301			NJU6368PF1	MOS-IC							
IC302			LMC7101BIM5	MOS-IC							
IC303			ADF4001BRUZ	MOS-IC							
IC401			AD9835BRUZ	MOS-IC							
IC402			NJU6368PF1	MOS-IC							
IC403			TK71733S	BI-POLAR IC							
IC501,502			TA75S01F-F	MOS-IC							
IC503			TC7WH74FU-F	MOS-IC							
IC504			NJU6368PF1	MOS-IC							
IC505,506			TC75S59F-F	MOS-IC							
IC701			BU4094BCFV	MOS-IC							
IC702			AD1582	ANALOGUE IC							
IC703			AD7908BRU	MOS-IC							
IC704			LM50BIM3/NOPB	MOS-IC							
IC705			AD5312BRM	MOS-IC							
IC707-710			NJM78M05DL1AZB	ANALOGUE IC							
IC711			TC7WH126FU-F	MOS-IC							
IC808,809			NJM7808FA-ZB	BI-POLAR IC							
IC810			NJM2878F4-33	BI-POLAR IC							
IC920-922			TC7SET126FU-F	MOS-IC							
IC923-925			BU4094BCFV	MOS-IC							
IC926			NJM2732V	BI-POLAR IC							
IC960-963			BU4094BCFV	MOS-IC							
Q1,2			SSM3K15TE(F)	FET							
Q3			2SC4617(R)	TRANSISTOR							
Q4		*	2SK2539-7	FET							
Q5,6			2SC5108(Y)F	TRANSISTOR							
Q7			2SC4116(BL)F	TRANSISTOR							
Q8,9			2SC5108(Y)F	TRANSISTOR							
Q10			2SC5337	TRANSISTOR							
Q11			RD01MUS1-T113	FET							
Q13			SSM3K15TE(F)	FET							
Q14			SSM3J01F	FET							
Q201			SSM3K15TE(F)	FET							
Q202			2SA1832F	TRANSISTOR							
Q203,204			SSM3K15TE(F)	FET							
Q205,206			2SC4617(R)	TRANSISTOR							
Q301-304			SSM3K15TE(F)	FET							
Q305			2SA1832F	TRANSISTOR							
Q306-311			2SC4617(R)	TRANSISTOR							
Q401,402			2SC4617(R)	TRANSISTOR							
Q403			SSM3K15TE(F)	FET							
Q404			SSM3J01F	FET							
Q405-407			SSM3K15TE(F)	FET							
Q501			SSM3J01F	FET							
Q502			SSM3K15TE(F)	FET							
Q503,504			RD01MUS1-T113	FET							
Q505,506			3SK294-FP	FET							
Q507			SSM3J01F	FET							
Q508			SSM3K15TE(F)	FET							
Q509,510			SSM6L05FU-F	FET							
Q511			2SC4617(R)	TRANSISTOR							
Q512			SSM3K15TE(F)	FET							
Q513,514			2SC4617(R)	TRANSISTOR							
Q515-518			SSM3K15TE(F)	FET							
Q920-930			UMG1N	TRANSISTOR							
Q931			2SC4116(Y)F	TRANSISTOR							
Q932			2SA1586(Y)F	TRANSISTOR							

If a part reference number is listed in a shaded box, that part does not come with the PCB.