



# DPX-5010

## EXPLODED VIEW (CD MECHANISM)

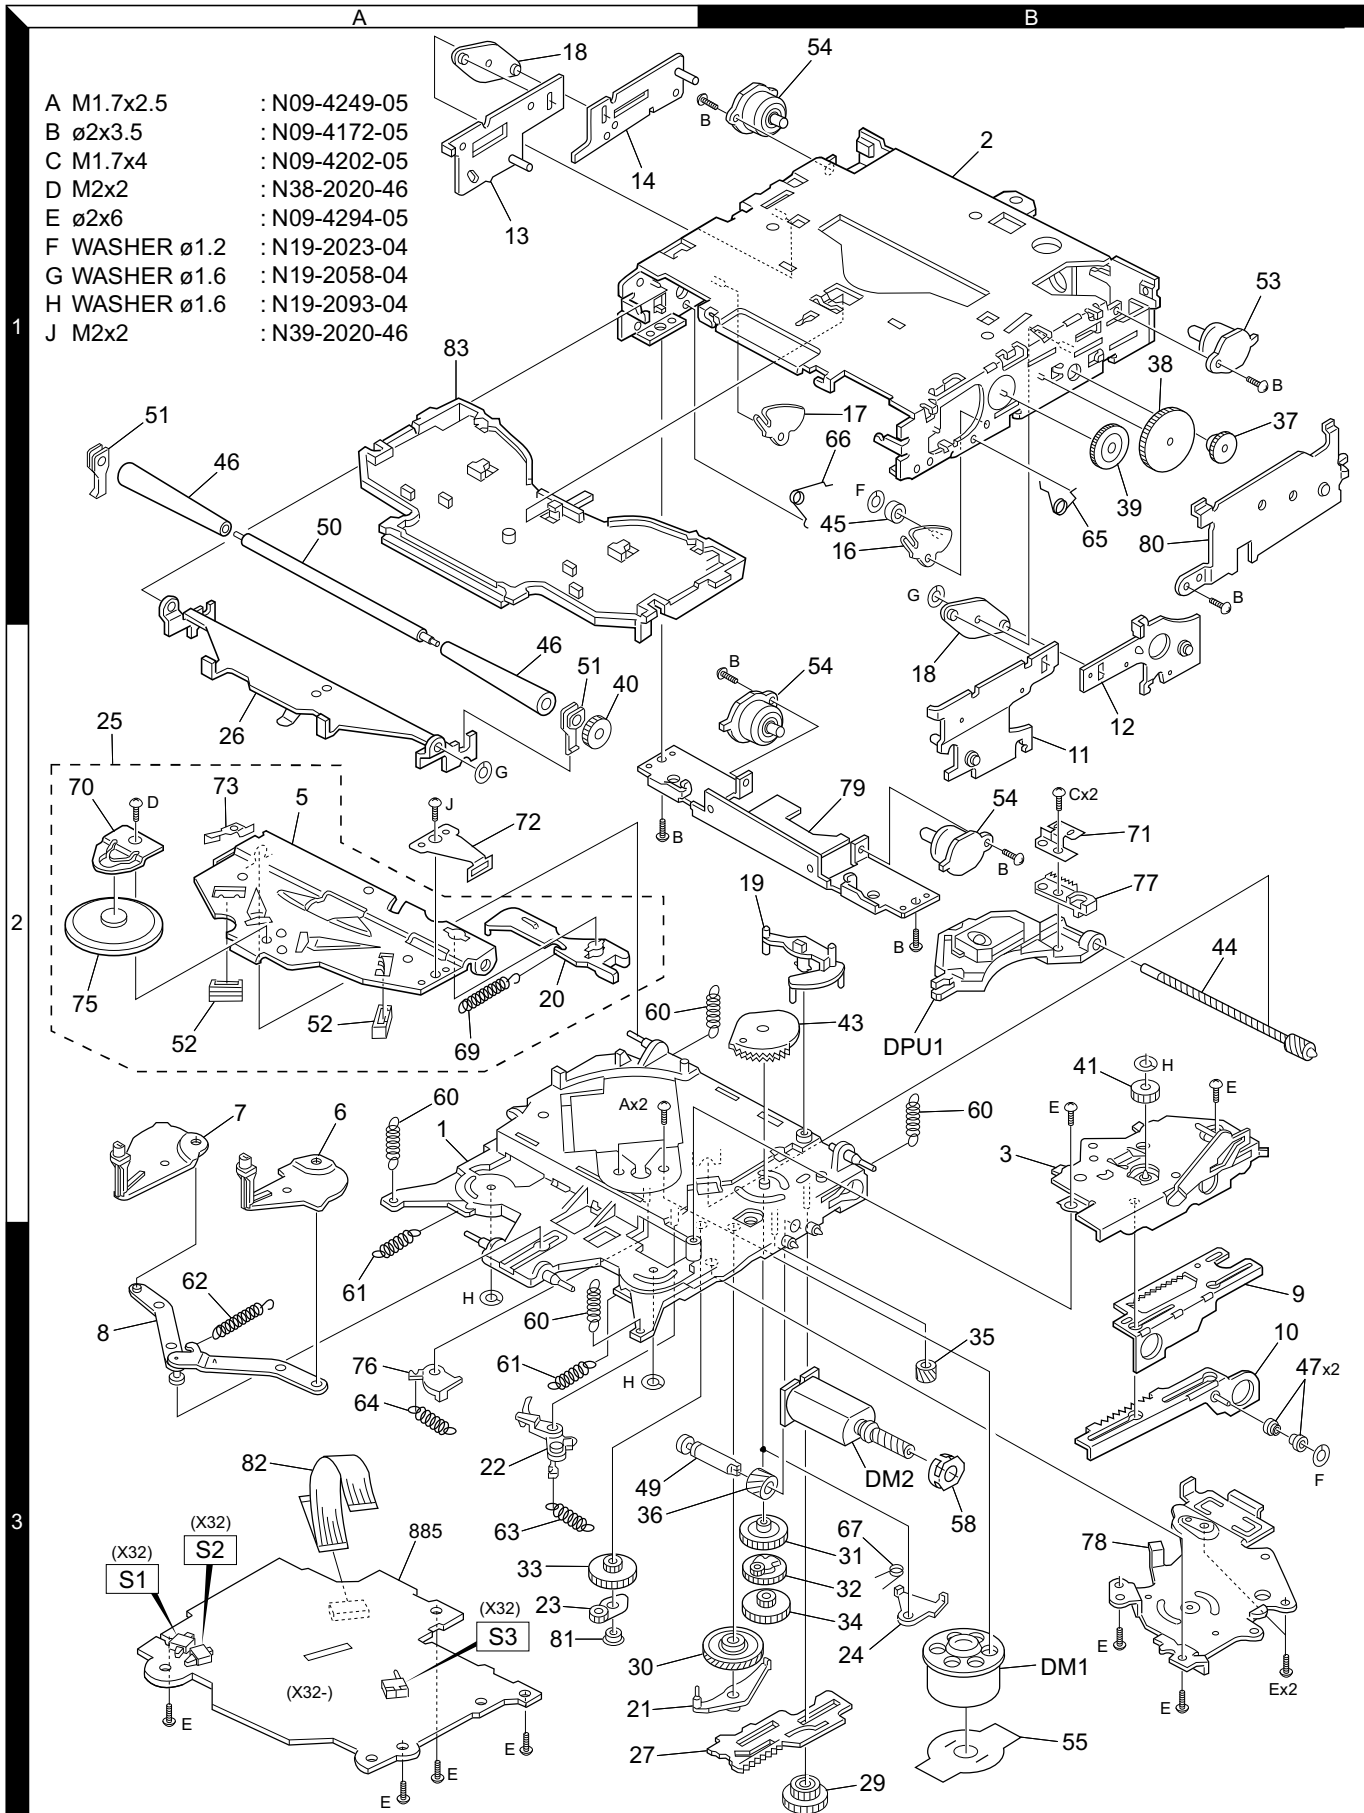

## EXPLODED VIEW (UNIT)

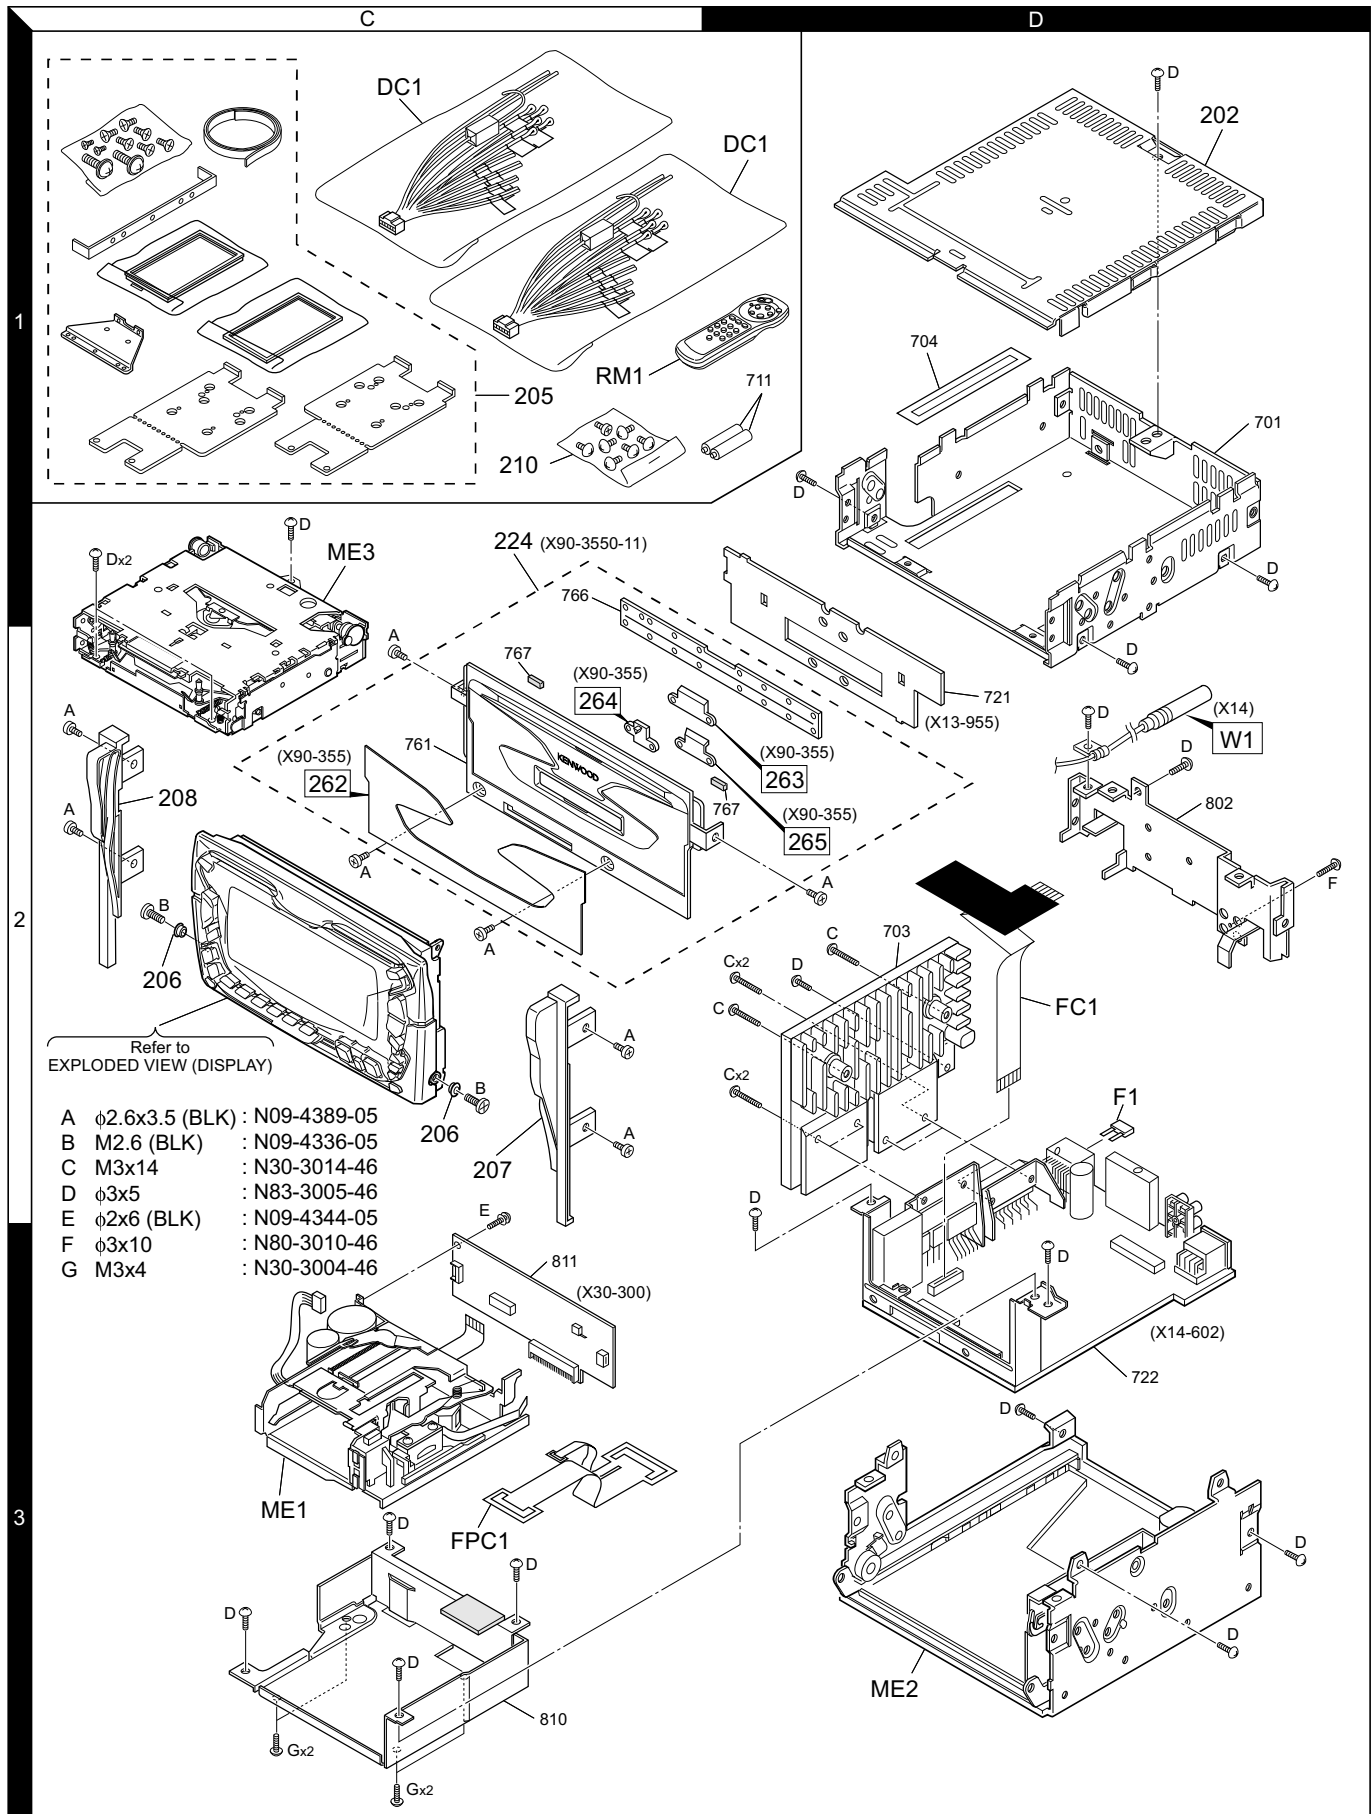


Parts with the exploded numbers larger than 700 are not supplied.

# DPX-5010


## EXPLODED VIEW (PANEL MECHANISM)

- |   |                            |
|---|----------------------------|
| H | M1.7x6 (BLK) : N09-4303-08 |
| J | M2x2.5 (BLK) : N38-2025-45 |
| K | M2.6x3 (BLK) : N38-2630-45 |
| L | M2x2 (BLK) : N09-4358-08   |
| M | M2x2 (BLK) : N09-4341-08   |
| N | M2.6x4 : N32-2604-46       |
| P | M1.7x2 (BLK) : N09-4343-08 |

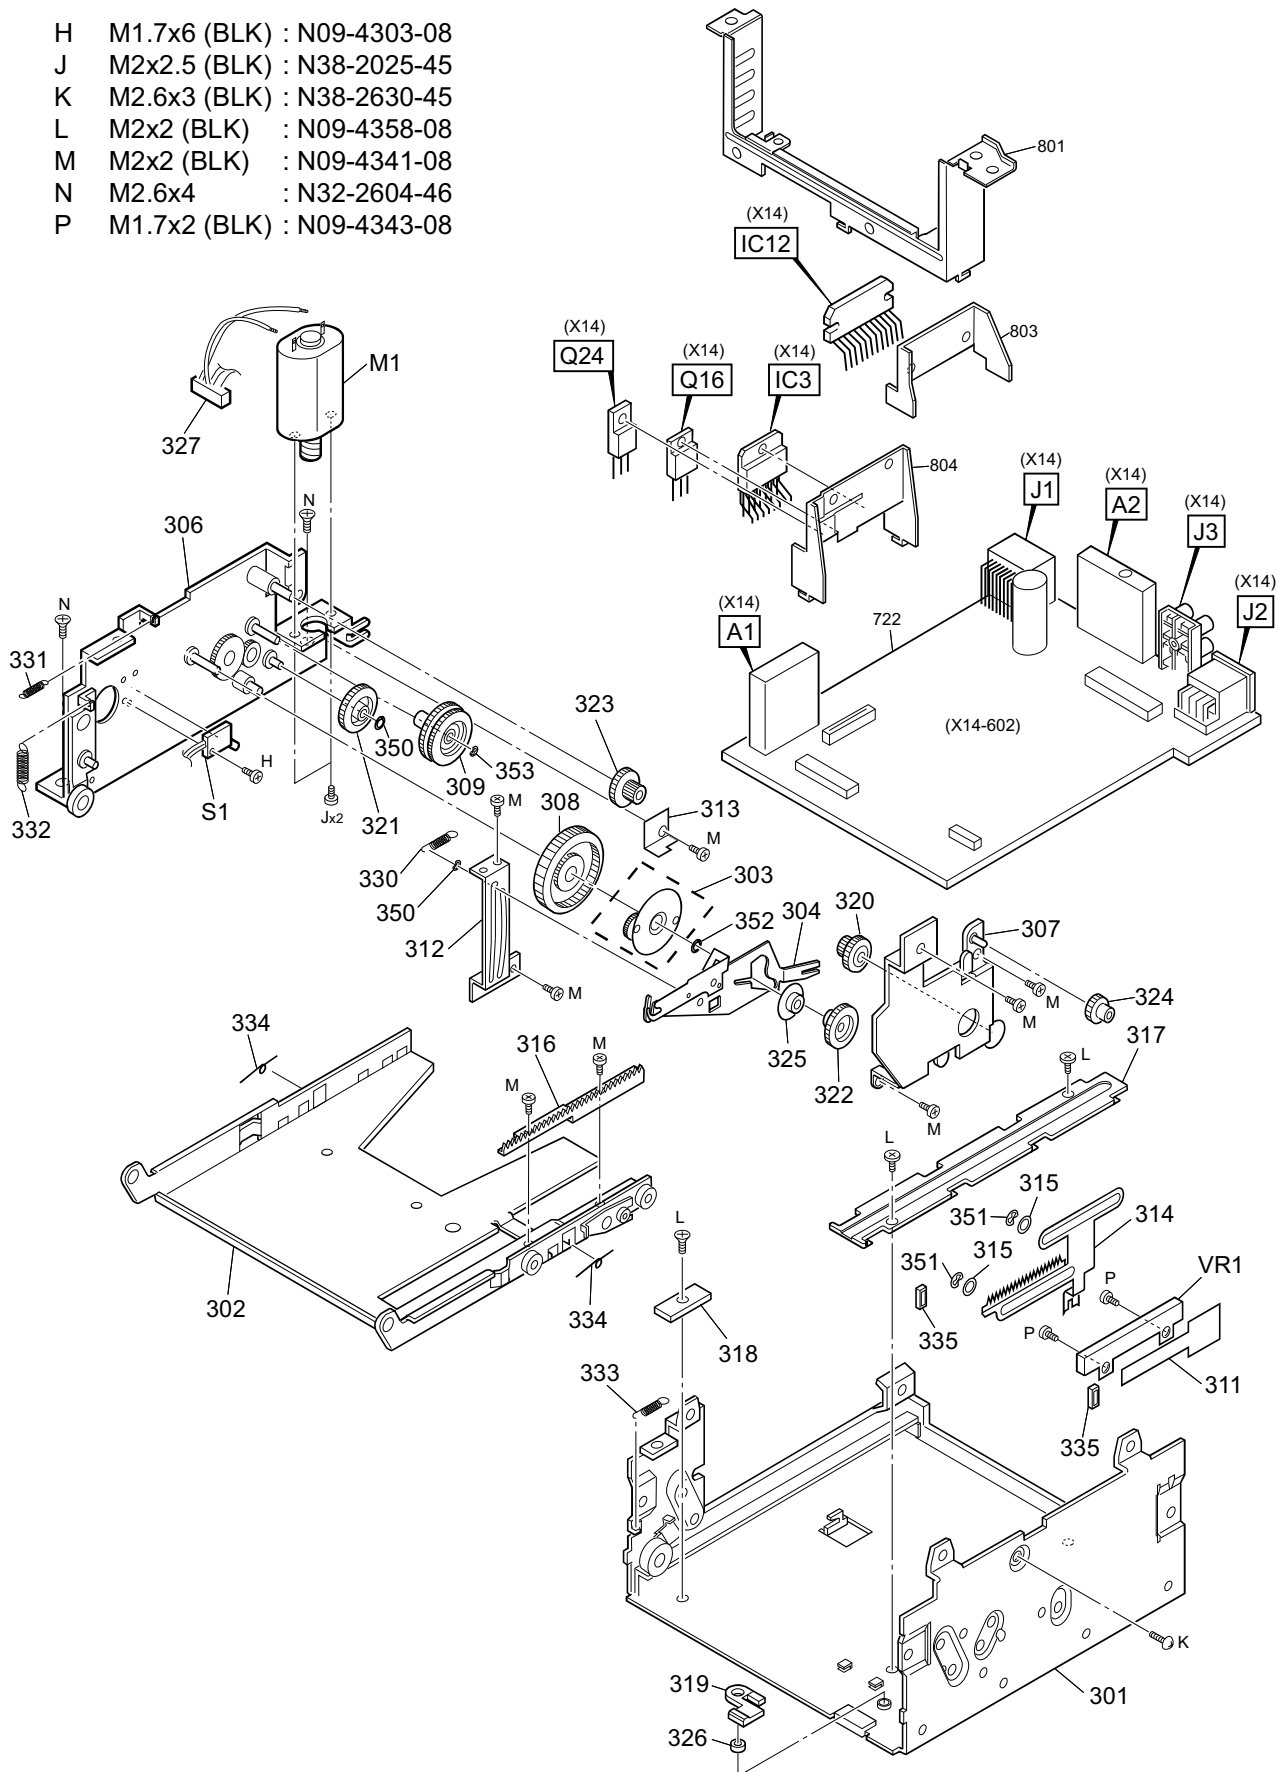

## EXPLODED VIEW (DISPLAY)

- Q  $\phi 2 \times 5$  : N80-2005-46  
 R M1.4 (BLK) : N09-4337-05  
 S M1.4 (BLK) : N09-4338-05  
 T M2x4 : N32-2004-46

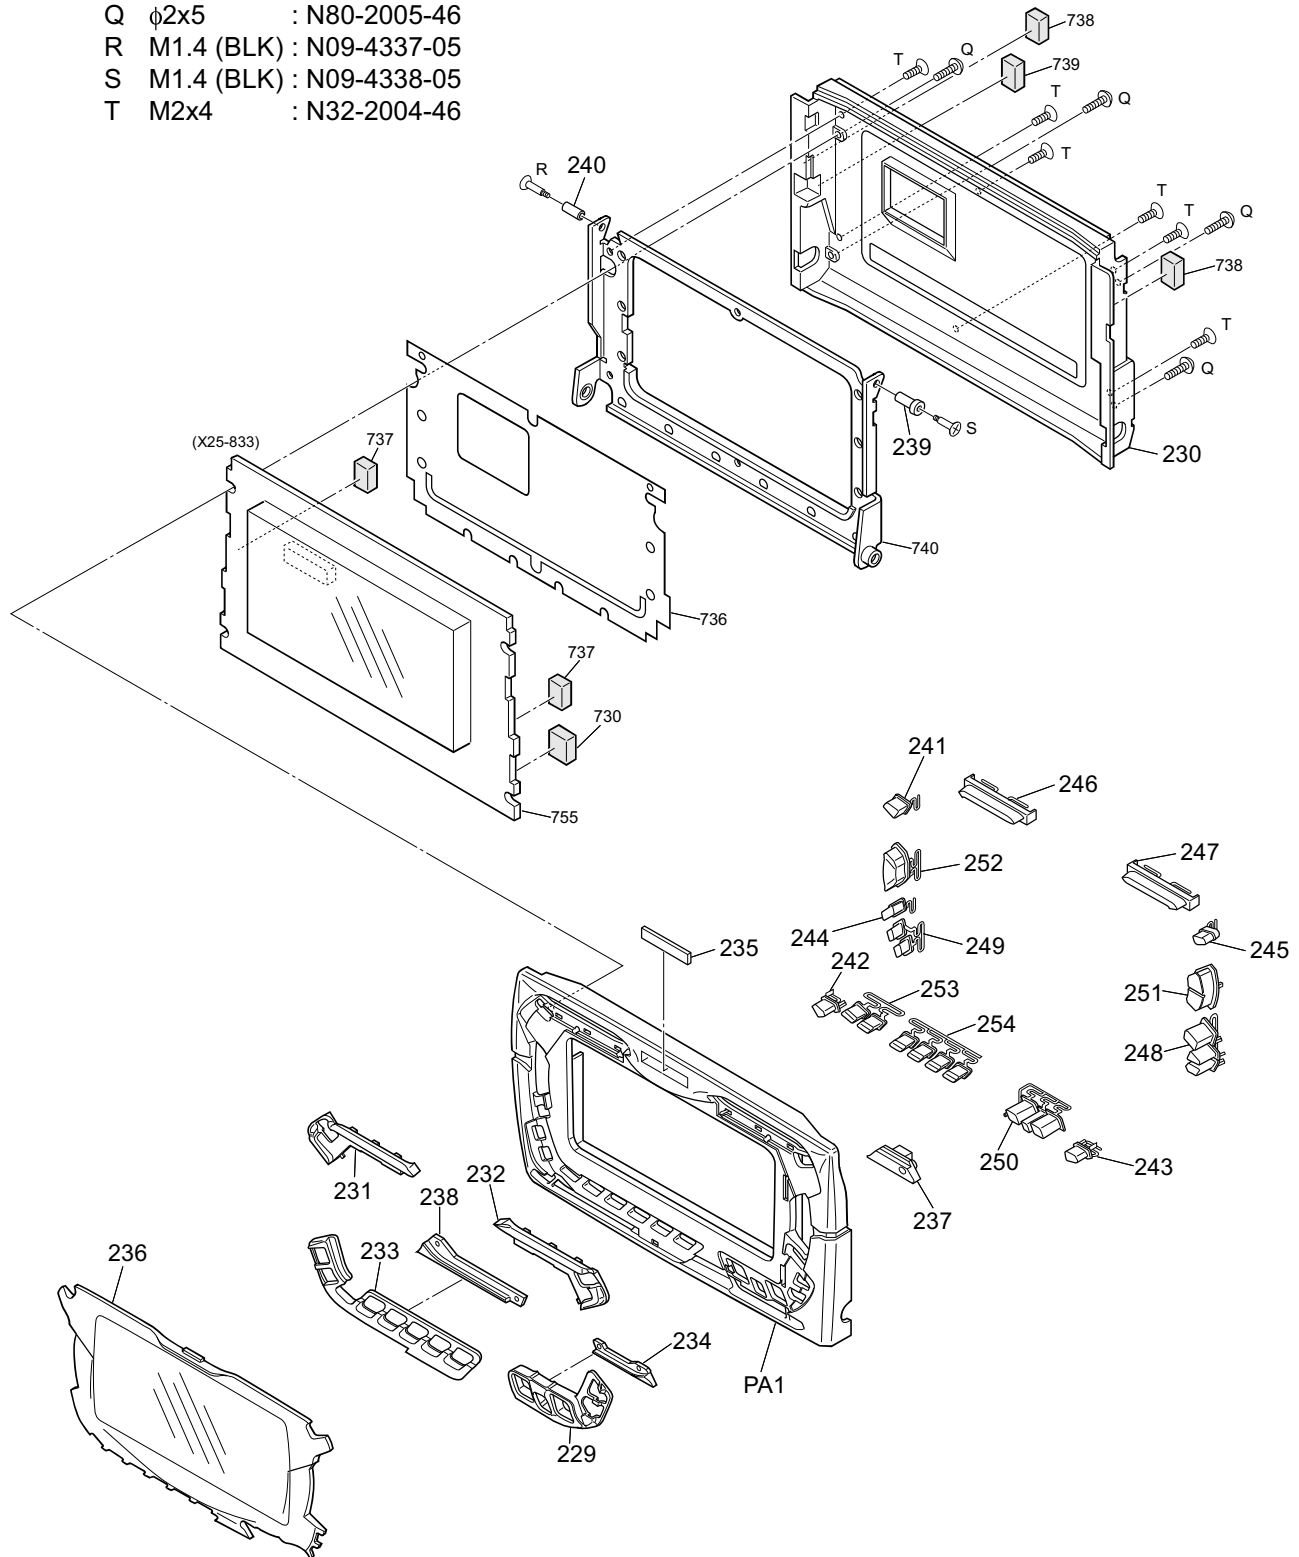

# DPX-5010

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### SYNTHESIZER UNIT (X14-602x-xx)

| Ref. No.                              | A<br>d<br>d                | N<br>e<br>w | Parts No.                                                                   | Description                                                                                                       | Desti-<br>nation |
|---------------------------------------|----------------------------|-------------|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|------------------|
| <b>DPX-5010</b>                       |                            |             |                                                                             |                                                                                                                   |                  |
| 202<br>RM1                            | 1D<br>1C                   | *           | A52-0774-02<br>A70-0894-05                                                  | TOP PLATE<br>REMOTE CONTROLLER ASSY                                                                               |                  |
| -                                     |                            |             | B46-0100-50                                                                 | WARRANTY CARD                                                                                                     |                  |
| -                                     |                            | *           | B64-1690-00                                                                 | INST. MANUAL (ENGLISH)                                                                                            | M2               |
| -                                     |                            | *           | B64-1691-00                                                                 | INST. MANUAL (CHI,KOR)                                                                                            | M2               |
| -                                     |                            | *           | B64-1692-00                                                                 | INST. MANUAL (ENGLISH)                                                                                            | K1               |
| -                                     |                            | *           | B64-1693-00                                                                 | INST. MANUAL (FRE,SPA)                                                                                            | K1               |
| ME1<br>ME2                            | 3C<br>3D                   | *           | D40-1132-25<br>D40-1131-15                                                  | CASSETTE MECHANISM ASSY (X92-)<br>PANEL MECHANISM ASSY                                                            |                  |
| △ DC1<br>FC1                          | 1C<br>2D                   | *           | E30-4737-15<br>E39-0313-05                                                  | DC CORD<br>FLAT CABLE                                                                                             |                  |
| △ F1                                  | 2D                         |             | F52-0006-05                                                                 | FUSE (MINI BLADE TYPE) (10A)                                                                                      |                  |
| -                                     |                            | *           | H10-4677-14                                                                 | POLYSTYRENE FOAMED FIXTURE                                                                                        |                  |
| -                                     |                            | *           | H10-4728-02                                                                 | POLYSTYRENE FOAMED FIXTURE                                                                                        |                  |
| -                                     |                            |             | H25-0337-04                                                                 | PROTECTION BAG (180X300X0.03)                                                                                     |                  |
| -                                     |                            |             | H25-1127-04                                                                 | PROTECTION BAG (0.5X350X450)                                                                                      |                  |
| -                                     |                            | *           | H54-1763-03                                                                 | ITEM CARTON CASE                                                                                                  |                  |
| 205<br>206<br>207<br>208<br>FPC1      | 1C<br>2C<br>2C<br>2C<br>3C | *           | J21-9578-05<br>J31-1046-04<br>J90-0935-01<br>J90-0932-11<br>J84-0100-05     | MOUNTING HARDWARE<br>COLLAR<br>RAIL<br>RAIL<br>FLEXIBLE PRINTED WIRING BOARD                                      |                  |
| 210<br>A<br>B<br>C<br>D               | 1C<br>2C<br>2C<br>2D<br>1C | *           | N99-1691-05<br>N09-4389-05<br>N09-4336-05<br>N30-3014-46<br>N83-3005-46     | SCREW SET<br>MACHINE SCREW (M2.6X3.5)<br>STEPPED SCREW (M2.6)<br>PAN HEAD MACHINE SCREW<br>PAN HEAD TAPTITE SCREW |                  |
| E<br>G                                | 2C<br>3C                   |             | N09-4344-05<br>N30-3004-46                                                  | SEMS (TAPTITE SCREW) (X92-361)<br>PAN HEAD SCREW (X92-361)                                                        |                  |
| 224<br>ME3                            | 1C<br>1C                   | *           | X90-3550-11<br>X92-3910-01                                                  | COMPOUND ASSY UNIT<br>CD MECHANISM ASSY                                                                           |                  |
| <b>SUB-CIRCUIT UNIT (X13-9550-01)</b> |                            |             |                                                                             |                                                                                                                   |                  |
| D1,2<br>D3                            |                            |             | B30-1488-05<br>B30-1561-05                                                  | LED<br>LED                                                                                                        |                  |
| CN1                                   |                            |             | E40-9489-05                                                                 | FLAT CABLE CONNECTOR                                                                                              |                  |
| R1,2<br>R3<br>R4<br>R5<br>VR1         |                            |             | R92-3059-05<br>R92-3060-05<br>RK73EB2B181J<br>RK73EB2B271J<br>R32-0249-05   | CHIP R 750 J 1/4W<br>CHIP R 820 J 1/4W<br>CHIP R 180 J 1/8W<br>CHIP R 270 J 1/8W<br>SEMI FIXED VARIABLE RESISTOR  |                  |
| D4,5<br>D8<br>PH1                     |                            | *           | DNP1102F(A,B)<br>DAP202K<br>PS1192F(C)                                      | INFRARED LED<br>DIODE<br>PHOTO TRANSISTOR                                                                         |                  |
| <b>SYNTHESIZER UNIT (X14-602x-xx)</b> |                            |             |                                                                             |                                                                                                                   |                  |
| C1<br>C2<br>C3<br>C4<br>C5            |                            |             | C90-2853-05<br>CK73GB1H103K<br>CK73GB1E223K<br>CK73FB1H223K<br>CK73GB1H223K | ELECTRO 4700UF 16WV<br>CHIP C 0.010UF K<br>CHIP C 0.022UF K<br>CHIP C 0.022UF K<br>CHIP C 0.022UF K               |                  |

| Ref. No.                                   | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                    | Description                                                                                                | Desti-<br>nation |
|--------------------------------------------|-------------|-------------|------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|------------------|
| C7,8<br>C9<br>C10,11<br>C12<br>C13         |             |             | CK73FB1H223K<br>CC73GCH1H101J<br>CK73GB1C473K<br>C90-2554-05<br>C90-5257-05  | CHIP C 0.022UF K<br>CHIP C 100PF J<br>CHIP C 0.047UF K<br>ELECTRO 10UF 16WV<br>ELECTRO 470UF 16WV          |                  |
| C14<br>C15<br>C16<br>C17<br>C19            |             |             | C90-2554-05<br>CK73GB1E223K<br>CK73FB1C224K<br>C90-2528-05<br>C90-2554-05    | ELECTRO 10UF 16WV<br>CHIP C 0.022UF K<br>CHIP C 0.22UF K<br>ELECTRO 10UF 10WV<br>ELECTRO 10UF 16WV         |                  |
| C20<br>C21,22<br>C23,24<br>C26<br>C27      |             |             | CK73FB1C224K<br>CK73EB1C105K<br>CK73GB1C104K<br>C90-2672-05<br>CK73GB1H103K  | CHIP C 0.22UF K<br>CHIP C 1.0UF K<br>CHIP C 0.10UF K<br>ELECTRO 100UF 10WV<br>CHIP C 0.010UF K             |                  |
| C31<br>C32<br>C33<br>C34<br>C35            |             |             | CK73GB1C104K<br>C90-2554-05<br>CK73GB1H103K<br>CE04DW1H010M<br>CK73FB1H473K  | CHIP C 0.10UF K<br>ELECTRO 10UF 16WV<br>CHIP C 0.010UF K<br>ELECTRO 1.0UF 50WV<br>CHIP C 0.047UF K         |                  |
| C36<br>C38<br>C39<br>C40<br>C41            |             |             | CK73FB1C104K<br>CK73GB1H103K<br>C90-2966-05<br>CK73GB1H103K<br>C90-2979-05   | CHIP C 0.10UF K<br>CHIP C 0.010UF K<br>ELECTRO 100UF 16WV<br>CHIP C 0.010UF K<br>ELECTRO 100UF 50WV        |                  |
| C42<br>C47<br>C50<br>C51<br>C52            |             |             | CK73GB1H103K<br>CK73EB1C105K<br>CK73GB1H223K<br>CK73FB1C104K<br>CK73GB1E223K | CHIP C 0.010UF K<br>CHIP C 1.0UF K<br>CHIP C 0.022UF K<br>CHIP C 0.10UF K<br>CHIP C 0.022UF K              |                  |
| C53<br>C54,55<br>C56<br>C63<br>C64         |             |             | CK73FB1C104K<br>CK73FB1C224K<br>CE04NW1C330M<br>CE04NW1A470M<br>CK73GB1H103K | CHIP C 0.10UF K<br>CHIP C 0.22UF K<br>ELECTRO 33UF 16WV<br>ELECTRO 47UF 10WV<br>CHIP C 0.010UF K           |                  |
| C66<br>C67<br>C68<br>C69<br>C70-75         |             |             | CK73GB1H103K<br>CE04NW1C100M<br>CK73GB1H103K<br>CE04NW1C100M<br>CK73GB1H103K | CHIP C 0.010UF K<br>ELECTRO 10UF 16WV<br>CHIP C 0.010UF K<br>ELECTRO 10UF 16WV<br>CHIP C 0.010UF K         |                  |
| C76,77<br>C81,82<br>C83,84<br>C85<br>C86   |             |             | CK73EB1C105K<br>CK73FB1H223K<br>CK73EB1C105K<br>CE04NW1HR47M<br>CE04NW0J470M | CHIP C 1.0UF K<br>CHIP C 0.022UF K<br>CHIP C 1.0UF K<br>ELECTRO 0.47UF 50WV<br>ELECTRO 47UF 6.3WV          |                  |
| C87<br>C88<br>C90,91<br>C92<br>C93,94      |             |             | CE04NW1HR47M<br>CK73FB1C104K<br>CE04NW1C100M<br>CE04NW1C220M<br>CK73GB1E223K | ELECTRO 0.47UF 50WV<br>CHIP C 0.10UF K<br>ELECTRO 10UF 16WV<br>ELECTRO 22UF 16WV<br>CHIP C 0.022UF K       |                  |
| C95<br>C96<br>C100,101<br>C102,103<br>C104 |             |             | CE04NW1A330M<br>CE04NW1C100M<br>CE04NW1HR22M<br>CE04NW1HR33M<br>CE04NW1H4R7M | ELECTRO 33UF 10WV<br>ELECTRO 10UF 16WV<br>ELECTRO 0.22UF 50WV<br>ELECTRO 0.33UF 50WV<br>ELECTRO 4.7UF 50WV |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## SYNTHESIZER UNIT (X14-602x-xx)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description         | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description                    | Desti-<br>nation |
|----------|-------------|-------------|---------------|---------------------|------------------|----------|-------------|-------------|---------------|--------------------------------|------------------|
| C105     |             |             | CE04NW1C100M  | ELECTRO 10UF 16WV   |                  | C233     |             |             | C90-2550-05   | ELECTRO 100UF 10WV             |                  |
| C106     |             |             | CK73GB1E223K  | CHIP C 0.022UF K    |                  | C234     |             |             | CK73GB1H223K  | CHIP C 0.022UF K               |                  |
| C107,108 |             |             | CE04NW1H2R2M  | ELECTRO 2.2UF 50WV  |                  | C235     |             |             | CK73EB1C105K  | CHIP C 1.0UF K                 |                  |
| C109     |             |             | CC73GCH1H101J | CHIP C 100PF J      |                  | C240     |             |             | CE04NW0J221M  | ELECTRO 220UF 6.3WV            |                  |
| C110     |             |             | CE04NW1A101M  | ELECTRO 100UF 10WV  |                  | C241     |             |             | CK73GB1H103K  | CHIP C 0.010UF K               |                  |
| C111     |             |             | CK73GB1E223K  | CHIP C 0.022UF K    |                  | C242     |             |             | CK73GB1C104K  | CHIP C 0.10UF K                |                  |
| C112     |             |             | CE04NW1H4R7M  | ELECTRO 4.7UF 50WV  |                  | C243,244 |             |             | CC73GCH1H200J | CHIP C 20PF J                  |                  |
| C113,114 |             |             | CE04NW1HR47M  | ELECTRO 0.47UF 50WV |                  | C245     |             |             | CK73GB1H103K  | CHIP C 0.010UF K               |                  |
| C116     |             |             | CK73GB1C823K  | CHIP C 0.082UF K    |                  | C246,247 |             |             | CK73GB1E223K  | CHIP C 0.022UF K               |                  |
| C117     |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | C248     |             |             | CK73GB1H122K  | CHIP C 1200PF K                |                  |
| C118     |             |             | CK73FB1C474K  | CHIP C 0.47UF K     |                  | C249     |             |             | CK73GB1H103K  | CHIP C 0.010UF K               |                  |
| C119     |             |             | CC73GCH1H121J | CHIP C 120PF J      |                  | C251,252 |             |             | CK73FB1C104K  | CHIP C 0.10UF K                |                  |
| C120     |             |             | CK73GB1H183K  | CHIP C 0.018UF K    |                  | C253-255 |             |             | CK73GB1H103K  | CHIP C 0.010UF K               |                  |
| C121     |             |             | CK73GB1C273K  | CHIP C 0.027UF K    |                  | C256     |             |             | CK73GB1H472K  | CHIP C 4700PF K                |                  |
| C122-127 |             |             | CE04NW1C100M  | ELECTRO 10UF 16WV   |                  | C257     |             |             | CC73GCH1H101J | CHIP C 100PF J                 |                  |
| C128,129 |             |             | CK73FB1H182K  | CHIP C 1800PF K     |                  | C258     |             |             | CK73GB1E223K  | CHIP C 0.022UF K               |                  |
| C130,131 |             |             | CK73FB1H821K  | CHIP C 820PF K      |                  | C259-262 |             |             | CK73GB1H103K  | CHIP C 0.010UF K               |                  |
| C132     |             |             | CK73GB1E223K  | CHIP C 0.022UF K    |                  | C263,264 |             |             | CK73GB1C104K  | CHIP C 0.10UF K                |                  |
| C133     |             |             | CE04NW1A330M  | ELECTRO 33UF 10WV   |                  | CN1      |             |             | E40-5186-05   | PIN ASSY                       |                  |
| C134,135 |             |             | C90-2595-05   | ELECTRO 4.7UF 16WV  |                  | CN2      |             |             | E40-9704-05   | SOCKET FOR PIN ASSY            |                  |
| C140     |             |             | CK73FB1C104K  | CHIP C 0.10UF K     |                  | CN3      |             |             | E40-9732-05   | FLAT CABLE CONNECTOR           |                  |
| C141-143 |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | CN5      |             |             | E40-9425-05   | FLAT CABLE CONNECTOR           |                  |
| C144,145 |             |             | CE04NW1E4R7M  | ELECTRO 4.7UF 25WV  |                  | J1       |             |             | E58-0836-05   | RECTANGULAR RECEPTACLE         |                  |
| C148,149 |             |             | CE04NW1C100M  | ELECTRO 10UF 16WV   |                  | J2       |             |             | E56-0809-05   | CYLINDRICAL RECEPTACLE         |                  |
| C150     |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | J3       |             |             | E63-0853-05   | PIN JACK                       |                  |
| C151     |             |             | C90-2966-05   | ELECTRO 100UF 16WV  |                  | W1       | 2D          |             | E30-4653-05   | CORD WITH PLUG                 |                  |
| C152,153 |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | L1       |             |             | L33-1029-05   | SMALL FIXED INDUCTOR           |                  |
| C154,155 |             |             | CC73GCH1H120J | CHIP C 12PF J       |                  | L4       |             |             | L33-1123-05   | LINE FILTER COIL               |                  |
| C156-158 |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | L5       |             |             | L33-1001-05   | SMALL FIXED INDUCTOR           |                  |
| C159     |             |             | CK73FB1C104K  | CHIP C 0.10UF K     |                  | L6       |             |             | L40-4795-34   | SMALL FIXED INDUCTOR           |                  |
| C160-163 |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | L7       |             |             | L40-3305-34   | SMALL FIXED INDUCTOR           |                  |
| C164     |             |             | C90-5262-05   | ELECTRO 47UF 6.3WV  |                  | L8       |             |             | L40-1205-34   | SMALL FIXED INDUCTOR           |                  |
| C165-167 |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | L9       |             |             | L40-4795-34   | SMALL FIXED INDUCTOR           |                  |
| C168     |             |             | CE04NW1A101M  | ELECTRO 100UF 10WV  |                  | L10      |             |             | L40-1005-34   | SMALL FIXED INDUCTOR           |                  |
| C169     |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                  | L12      |             |             | L92-0308-05   | FERRITE CORE                   |                  |
| C170-173 |             |             | CE04NW1C100M  | ELECTRO 10UF 16WV   |                  | L13-20   |             |             | L92-0332-05   | CHIP FERRITE                   |                  |
| C174-177 |             |             | CK73FB1H821K  | CHIP C 820PF K      |                  | L27,28   |             |             | L92-0308-05   | FERRITE CORE                   |                  |
| C178-181 |             |             | CK73FB1H561K  | CHIP C 560PF K      |                  | L29,30   |             |             | L40-4795-34   | SMALL FIXED INDUCTOR           |                  |
| C182-185 |             |             | CC73GCH1H560J | CHIP C 56PF J       |                  | X1       |             |             | L77-2715-05   | CRYSTAL RESONATOR (16.9344MHZ) |                  |
| C186,187 |             |             | CE04NW1A330M  | ELECTRO 33UF 10WV   |                  | X2       |             |             | L77-2093-05   | CRYSTAL RESONATOR (10.000MHZ)  |                  |
| C188,189 |             |             | CK73GB1E223K  | CHIP C 0.022UF K    |                  | F        | 2D          |             | N80-3010-46   | PAN HEAD TAPTITE SCREW         |                  |
| C190,191 |             |             | CE04NW1C100M  | ELECTRO 10UF 16WV   |                  | CP1      |             |             | R90-1022-05   | MULTI-COMP 470 X2              |                  |
| C192,193 |             |             | CK73FB1H821K  | CHIP C 820PF K      |                  | CP2      |             |             | R90-1016-05   | MULTI-COMP 470 X4              |                  |
| C194,195 |             |             | CK73FB1H561K  | CHIP C 560PF K      |                  | CP3      |             |             | R90-1019-05   | MULTI-COMP 100 X2              |                  |
| C196,197 |             |             | CC73GCH1H560J | CHIP C 56PF J       |                  | CP4      |             |             | R90-0719-05   | MULTI-COMP 4.7K X2             |                  |
| C198     |             |             | CE04NW1A330M  | ELECTRO 33UF 10WV   |                  | CP5      |             |             | R90-1019-05   | MULTI-COMP 100 X2              |                  |
| C199     |             |             | CK73GB1E223K  | CHIP C 0.022UF K    |                  | CP6      |             |             | R90-1022-05   | MULTI-COMP 470 X2              |                  |
| C210-213 |             |             | CE04NW1C220M  | ELECTRO 22UF 16WV   |                  | CP7      |             |             | R90-0719-05   | MULTI-COMP 4.7K X2             |                  |
| C214-217 |             |             | C93-1084-05   | CERAMIC 1200PF J    |                  | CP8      |             |             | R90-1016-05   | MULTI-COMP 470 X4              |                  |
| C218     |             |             | CK73EB1H104K  | CHIP C 0.10UF K     |                  | CP9      |             |             | R90-0724-05   | MULTI-COMP 1K X4               |                  |
| C219     |             |             | CK73FB1C104K  | CHIP C 0.10UF K     |                  | CP10     |             |             | R90-0719-05   | MULTI-COMP 4.7K X2             |                  |
| C220     |             |             | CK73EB1C105K  | CHIP C 1.0UF K      |                  | CP11     |             |             | R90-0718-05   | MULTI-COMP 4.7K X4             |                  |
| C221     |             |             | CK73GB1H223K  | CHIP C 0.022UF K    |                  | CP12     |             |             | R90-0719-05   | MULTI-COMP 4.7K X2             |                  |
| C222     |             |             | C91-2173-05   | CHIP C 1.2UF        |                  |          |             |             |               |                                |                  |
| C229-232 |             | *           | C92-1451-05   | ELECTRO 0.33UF 50WV |                  |          |             |             |               |                                |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### SYNTHESIZER UNIT (X14-602x-xx)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description          | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Desti-<br>nation |
|----------|-------------|-------------|---------------|----------------------|------------------|----------|-------------|-------------|--------------|---------------------|------------------|
| CP13     |             |             | R90-1013-05   | MULTI-COMP 2.2K X2   |                  | R77      |             |             | RK73FB2A391J | CHIP R 390 J 1/10W  |                  |
| CP14     |             |             | R90-0725-05   | MULTI-COMP 1K X2     |                  | R90,91   |             |             | RK73GB1J101J | CHIP R 100 J 1/16W  |                  |
| CP16     |             |             | R90-1019-05   | MULTI-COMP 100 X2    |                  | R92      |             |             | RK73FB2A102J | CHIP R 1.0K J 1/10W |                  |
| R1       |             |             | RK73FB2A183J  | CHIP R 18K J 1/10W   |                  | R94,95   |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  |
| R2       |             |             | RK73FB2A223J  | CHIP R 22K J 1/10W   |                  | R96      |             |             | RK73GB1J272J | CHIP R 2.7K J 1/16W |                  |
| R3       |             |             | RK73GB1J153J  | CHIP R 15K J 1/16W   |                  | R100,101 |             |             | RK73FB2A103J | CHIP R 10K J 1/10W  |                  |
| R4       |             |             | R92-2072-05   | CHIP R 1.5K J 1/2W   |                  | R102,103 |             |             | RK73FB2A182J | CHIP R 1.8K J 1/10W |                  |
| R5       |             |             | RK73FB2A223J  | CHIP R 22K J 1/10W   |                  | R104,105 |             |             | RK73FB2A242J | CHIP R 2.4K J 1/10W |                  |
| R6       |             |             | RK73FB2A103J  | CHIP R 10K J 1/10W   |                  | R106,107 |             |             | RK73FB2A471J | CHIP R 470 J 1/10W  |                  |
| R7       |             |             | RK73EB2B103J  | CHIP R 10K J 1/8W    |                  | R108,109 |             |             | RK73FB2A473J | CHIP R 47K J 1/10W  |                  |
| R9       |             |             | RK73EB2B102J  | CHIP R 1.0K J 1/8W   |                  | R110,111 |             |             | RK73FB2A472J | CHIP R 4.7K J 1/10W |                  |
| R10      |             |             | RK73FB2A473J  | CHIP R 47K J 1/10W   |                  | R112     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| R12      |             |             | R92-2023-05   | CHIP R 820 J 1/2W    |                  | R113     |             |             | RK73GB1J225J | CHIP R 2.2M J 1/16W |                  |
| R13      |             |             | RK73FB2A473J  | CHIP R 47K J 1/10W   |                  | R114     |             |             | RK73GB1J155J | CHIP R 1.5M J 1/16W |                  |
| R14      |             |             | RK73GB1J103J  | CHIP R 10K J 1/16W   |                  | R134-137 |             |             | RK73FB2A362J | CHIP R 3.6K J 1/10W |                  |
| R16      |             |             | RK73FB2A561J  | CHIP R 560 J 1/10W   |                  | R138-141 |             |             | RK73FB2A752J | CHIP R 7.5K J 1/10W |                  |
| R17      |             |             | RN73GH1J3571D | CHIP R 3.57K D 1/16W |                  | R142-145 |             |             | RK73FB2A822J | CHIP R 8.2K J 1/10W |                  |
| R18      |             |             | RK73FB2A103J  | CHIP R 10K J 1/10W   |                  | R150-153 |             |             | RK73FB2A393J | CHIP R 39K J 1/10W  |                  |
| R19      |             |             | RN73GH1J5491D | CHIP R 5.49K D 1/16W |                  | R160,161 |             |             | RK73FB2A362J | CHIP R 3.6K J 1/10W |                  |
| R20      |             |             | RK73GB1J103J  | CHIP R 10K J 1/16W   |                  | R162,163 |             |             | RK73FB2A752J | CHIP R 7.5K J 1/10W |                  |
| R21      |             |             | RN73GH1J102D  | CHIP R 1.0K D 1/16W  |                  | R164,165 |             |             | RK73FB2A822J | CHIP R 8.2K J 1/10W |                  |
| R22      |             |             | RN73GH1J222D  | CHIP R 2.2K D 1/16W  |                  | R166,167 |             |             | RK73FB2A393J | CHIP R 39K J 1/10W  |                  |
| R23      |             |             | RN73GH1J393D  | CHIP R 39K D 1/16W   |                  | R180-183 |             |             | RK73FB2A471J | CHIP R 470 J 1/10W  |                  |
| R24      |             |             | RN73GH1J1242D | CHIP R 12.4K D 1/16W |                  | R184-187 |             |             | RK73FB2A473J | CHIP R 47K J 1/10W  |                  |
| R25      |             |             | R92-3083-05   | CHIP R 470           |                  | R188-191 |             |             | RK73FB2A101J | CHIP R 100 J 1/10W  |                  |
| R26      |             |             | RK73GB1J104J  | CHIP R 100K J 1/16W  |                  | R195     |             |             | RK73GB1J223J | CHIP R 22K J 1/16W  |                  |
| R27      |             |             | R92-3048-05   | CHIP R 27K D 1/10W   |                  | R196     |             |             | RK73GB1J393J | CHIP R 39K J 1/16W  |                  |
| R31      |             |             | RK73EB2B471J  | CHIP R 470 J 1/8W    |                  | R197     |             |             | RK73GB1J512J | CHIP R 5.1K J 1/16W |                  |
| R32      |             |             | RK73FB2A104J  | CHIP R 100K J 1/10W  |                  | R198     |             |             | RK73GB1J154J | CHIP R 150K J 1/16W |                  |
| R33      |             |             | RK73EB2B182J  | CHIP R 1.8K J 1/8W   |                  | R199     |             |             | RK73GB1J271J | CHIP R 270 J 1/16W  |                  |
| R34      |             |             | RK73EB2B102J  | CHIP R 1.0K J 1/8W   |                  | R200-203 |             |             | RK73FB2A102J | CHIP R 1.0K J 1/10W |                  |
| R35      |             |             | RK73EB2B223J  | CHIP R 22K J 1/8W    |                  | R204     |             |             | RK73EB2B102J | CHIP R 1.0K J 1/8W  |                  |
| R36      |             |             | R92-3094-05   | CHIP R 2.4K 1W       |                  | R207     |             |             | RK73GB1J223J | CHIP R 22K J 1/16W  |                  |
| R40      |             |             | RS14DB3A4R7J  | FL-PROOF RS 4.7 J 1W |                  | R208     |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| R41      |             |             | R92-3056-05   | CHIP R 3.3K D 1/10W  |                  | R210     |             |             | RK73GB1J101J | CHIP R 100 J 1/16W  |                  |
| R42      |             |             | RK73GB1J432J  | CHIP R 4.3K J 1/16W  |                  | R211     |             |             | RK73GB1J103J | CHIP R 10K J 1/16W  |                  |
| R43      |             |             | RK73FB2A822J  | CHIP R 8.2K J 1/10W  |                  | R212     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  |
| R44      |             |             | RK73GB1J473J  | CHIP R 47K J 1/16W   |                  | R213     |             |             | RK73GB1J101J | CHIP R 100 J 1/16W  |                  |
| R45-48   |             |             | RK73GB1J102J  | CHIP R 1.0K J 1/16W  |                  | R214     |             |             | RK73GB1J471J | CHIP R 470 J 1/16W  |                  |
| R49      |             |             | RK73GB1J223J  | CHIP R 22K J 1/16W   |                  | R215,216 |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  |
| R50      |             |             | RK73FB2A222J  | CHIP R 2.2K J 1/10W  |                  | R217,218 |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| R51      |             |             | RK73GB1J223J  | CHIP R 22K J 1/16W   |                  | R219     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  |
| R52      |             |             | RK73FB2A222J  | CHIP R 2.2K J 1/10W  |                  | R220     |             |             | RK73EB2B102J | CHIP R 1.0K J 1/8W  |                  |
| R53      |             |             | RK73FB2A6R8J  | CHIP R 6.8 J 1/10W   |                  | R221     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  |
| R60      |             |             | RK73EB2B101J  | CHIP R 100 J 1/8W    |                  | R222     |             |             | RK73GB1J101J | CHIP R 100 J 1/16W  |                  |
| R61,62   |             |             | RK73EB2B102J  | CHIP R 1.0K J 1/8W   |                  | R223     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| R63      |             |             | RK73EB2B4R7J  | CHIP R 4.7 J 1/8W    |                  | R224     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  |
| R64      |             |             | RK73EB2B102J  | CHIP R 1.0K J 1/8W   |                  | R225     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  |
| R65      |             |             | RK73EB2B4R7J  | CHIP R 4.7 J 1/8W    |                  | R226     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  |
| R66-68   |             |             | RK73EB2B101J  | CHIP R 100 J 1/8W    |                  | R227     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| R69      |             |             | RK73EB2B4R7J  | CHIP R 4.7 J 1/8W    |                  | R228     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  |
| R70      |             |             | RK73EB2B101J  | CHIP R 100 J 1/8W    |                  | R229     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  |
| R71      |             |             | RK73FB2A104J  | CHIP R 100K J 1/10W  |                  | R231     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  |
| R75      |             |             | RK73FB2A273J  | CHIP R 27K J 1/10W   |                  | R232     |             |             | RK73GB1J223J | CHIP R 22K J 1/16W  |                  |
| R76      |             |             | RK73FB2A113J  | CHIP R 11K J 1/10W   |                  | R233     |             |             | RK73FB2A222J | CHIP R 2.2K J 1/10W |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## SYNTHESIZER UNIT (X14-602x-xx)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.      | Description        | Desti-<br>nation |
|----------|-------------|-------------|--------------|---------------------|------------------|----------|-------------|-------------|----------------|--------------------|------------------|
| R234     |             |             | RK73FB2A332J | CHIP R 3.3K J 1/10W |                  | D2       |             |             | HZS7A3L        | ZENER DIODE        |                  |
| R237,238 |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | D3       |             |             | 02CZ12-X       | ZENER DIODE        |                  |
| R239-244 |             |             | RK73EB2B101J | CHIP R 100 J 1/8W   |                  | D4       |             |             | 02CZ6.8-Y      | ZENER DIODE        |                  |
| R245     |             |             | RK73GB1J103J | CHIP R 10K J 1/16W  |                  | D5       |             |             | DAN202K        | DIODE              |                  |
| R246     |             |             | RK73GB1J101J | CHIP R 100 J 1/16W  |                  | D6       |             |             | 02CZ6.2-X      | ZENER DIODE        |                  |
| R247     |             |             | RK73GB1J471J | CHIP R 470 J 1/16W  |                  | D7-9     |             |             | 1SR154-400     | DIODE              |                  |
| R248     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  | D10      |             |             | DAN217         | DIODE              |                  |
| R249,250 |             |             | RK73EB2B102J | CHIP R 1.0K J 1/8W  |                  | D11      |             |             | DA227          | DIODE              |                  |
| R251,252 |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  | D12,13   |             |             | DAN217         | DIODE              |                  |
| R253     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | D14      |             |             | 02CZ8.2-Y      | ZENER DIODE        |                  |
| R259     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | D15      |             |             | 02CZ5.1-Y      | ZENER DIODE        |                  |
| R264     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  | D16      |             |             | 02CZ12-X       | ZENER DIODE        |                  |
| R265     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  | D17      |             |             | 02CZ18-Y       | ZENER DIODE        |                  |
| R268     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | D18      |             |             | RD6.2F(B2)     | ZENER DIODE        |                  |
| R269     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | D21      |             |             | 02CZ7.5-X      | ZENER DIODE        |                  |
| R270     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | D23      |             |             | IMSA-6801      | SURGE ABSORBER     |                  |
| R271     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | D24      |             |             | 02CZ3.6-Z      | ZENER DIODE        |                  |
| R272     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | D25      |             |             | DAN217         | DIODE              |                  |
| R273     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | D26-29   |             |             | HZM6.8WA       | ZENER DIODE        |                  |
| R274     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | D30      |             |             | DAN202K        | DIODE              |                  |
| R275     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W | K1<br>M2         | D31-33   |             |             | DA204K         | DIODE              |                  |
| R276     |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  | D34      |             |             | 02CZ6.2-X      | ZENER DIODE        |                  |
| R277     |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  | D35      |             |             | DAP202K        | DIODE              |                  |
| R278     |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  | D36      |             |             | DAN202K        | DIODE              |                  |
| R280     |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  | D37-39   |             |             | DAP202K        | DIODE              |                  |
| R282-284 |             |             | RK73GB1J471J | CHIP R 470 J 1/16W  |                  | D40,41   |             |             | DAN202K        | DIODE              |                  |
| R285     |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  | D42-49   |             |             | 1SR154-400     | DIODE              |                  |
| R286     |             |             | RK73GB1J471J | CHIP R 470 J 1/16W  |                  | D50      |             |             | U1GWJ44        | DIODE              |                  |
| R296     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | IC1      |             | *           | M30622MC-A65FP | MI-COM IC          |                  |
| R298     |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | IC2      |             |             | TDA7400        | ANALOGUE IC        |                  |
| R300     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  | IC3      |             |             | L4943          | ANALOGUE IC        |                  |
| R301     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | IC5      |             |             | TDA7435        | ANALOGUE IC        |                  |
| R302     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  | IC7      |             |             | NJM4565MD      | IC (OP AMP X2)     |                  |
| R303     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | IC8      |             |             | CXD2726Q-1     | MOS-IC             |                  |
| R304     |             |             | RK73GB1J471J | CHIP R 470 J 1/16W  |                  | IC9-11   |             |             | NJM4565MD      | IC (OP AMP X2)     |                  |
| R305     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | IC12     |             |             | TDA7386        | ANALOGUE IC        |                  |
| R306     |             |             | RK73GB1J471J | CHIP R 470 J 1/16W  |                  | IC13     |             |             | NJM4580MD      | ANALOGUE IC        |                  |
| R307     |             |             | RK73GB1J223J | CHIP R 22K J 1/16W  |                  | IC14     |             |             | PST9142NR      | ANALOGUE IC        |                  |
| R308     |             |             | RK73GB1J164J | CHIP R 160K J 1/16W |                  | IC15     |             |             | S-24C01AFJA    | MEMORY IC          |                  |
| R309     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  | IC16     |             |             | TC7W32FU       | ANALOGUE IC        |                  |
| R310,311 |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | IC17     |             |             | BA6219BFP-Y    | ANALOGUE IC        |                  |
| R312     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  | IC18     |             |             | UPC29L33T      | ANALOGUE IC        |                  |
| R313     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | Q1       |             |             | DTC144EK       | DIGITAL TRANSISTOR |                  |
| R314     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  | Q2,3     |             |             | 2SC2412K       | TRANSISTOR         |                  |
| R315,316 |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | Q5       |             |             | DTC144EK       | DIGITAL TRANSISTOR |                  |
| R317     |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  | Q6       |             |             | DTA123JK       | DIGITAL TRANSISTOR |                  |
| R318,319 |             |             | RK73GB1J222J | CHIP R 2.2K J 1/16W |                  | Q9       |             |             | 2SB1188(R)     | TRANSISTOR         |                  |
| R320-322 |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | Q10      |             |             | 2SC2412K(S)    | TRANSISTOR         |                  |
| R323     |             |             | RK73FB2A102J | CHIP R 1.0K J 1/10W |                  | Q11      |             |             | 2SC2412K       | TRANSISTOR         |                  |
| R324     |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | Q12      |             |             | DTB123YK       | DIGITAL TRANSISTOR |                  |
| R325     |             |             | RK73FB2A104J | CHIP R 100K J 1/10W |                  | Q13      |             |             | DTC124EK       | DIGITAL TRANSISTOR |                  |
| R326     |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  | Q14      |             |             | DTC114EK       | DIGITAL TRANSISTOR |                  |
| R327,328 |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  | Q15      |             |             | DTA114EK       | DIGITAL TRANSISTOR |                  |
| D1       |             |             | RM10ZLF      | DIODE               |                  | Q16      |             |             | 2SB1565        | TRANSISTOR         |                  |
|          |             |             |              |                     |                  | Q17      |             |             | 2SC2412K       | TRANSISTOR         |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### SWITCH UNIT (X25-8330-11)

| Ref. No.                         | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description             | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Desti-<br>nation |
|----------------------------------|-------------|-------------|---------------|-------------------------|------------------|----------|-------------|-------------|--------------|---------------------|------------------|
| Q22                              |             |             | DTC124EK      | DIGITAL TRANSISTOR      |                  | CP2,3    |             |             | R90-0725-05  | MULTI-COMP 1K X2    |                  |
| Q23                              |             |             | DTA124EK      | DIGITAL TRANSISTOR      |                  | CP4      |             |             | R90-0723-05  | MULTI-COMP 47K X2   |                  |
| Q24                              |             |             | 2SB1565       | TRANSISTOR              |                  | CP5      |             |             | R90-1014-05  | MULTI-COMP 100 X4   |                  |
| Q25                              |             |             | 2SC2412K      | TRANSISTOR              |                  | CP6-8    |             |             | R90-0725-05  | MULTI-COMP 1K X2    |                  |
| Q26                              |             |             | DTC114EK      | DIGITAL TRANSISTOR      |                  | CP9      |             |             | R90-0724-05  | MULTI-COMP 1K X4    |                  |
| Q27                              |             |             | DTA114EK      | DIGITAL TRANSISTOR      |                  | CP10     |             |             | R90-0748-05  | MULTI-COMP 47K X4   |                  |
| Q28                              |             |             | 2SB1446       | TRANSISTOR              |                  | CP14     |             |             | R90-1016-05  | MULTI-COMP 470 X4   |                  |
| Q29                              |             |             | 2SC2412K      | TRANSISTOR              |                  | R1       |             |             | RK73FB2A220J | CHIP R 22 J 1/10W   |                  |
| Q32                              |             |             | DTC124EK      | DIGITAL TRANSISTOR      |                  | R2       |             |             | RK73GB1J472J | CHIP R 4.7K J 1/16W |                  |
| Q33                              |             |             | 2SB1188(Q,R)  | TRANSISTOR              |                  | R3       |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| Q34                              |             |             | DTC124EK      | DIGITAL TRANSISTOR      |                  | R4       |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| Q35                              |             |             | 2SB1188(Q,R)  | TRANSISTOR              |                  | R5       |             |             | RK73FB2A102J | CHIP R 1.0K J 1/10W |                  |
| Q36                              |             |             | DTC144EK      | DIGITAL TRANSISTOR      |                  | R6,7     |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| Q37                              |             |             | DTA144EK      | DIGITAL TRANSISTOR      |                  | R8       |             |             | RK73GB1J104J | CHIP R 100K J 1/16W |                  |
| Q38                              |             |             | DTC144EK      | DIGITAL TRANSISTOR      |                  | R9       |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| Q41,42                           |             |             | 2SD2114K      | TRANSISTOR              |                  | R10-13   |             |             | R92-3080-05  | CHIP R 390          |                  |
| Q44-47                           |             |             | DTC143TK      | DIGITAL TRANSISTOR      |                  | R14,15   |             |             | R92-3088-05  | CHIP R 560 J 1/4W   |                  |
| Q48                              |             |             | DTC124EK      | DIGITAL TRANSISTOR      |                  | R16      |             |             | R92-3058-05  | CHIP R 620 J 1/4W   |                  |
| Q49                              |             |             | DTC144EK      | DIGITAL TRANSISTOR      |                  | R17      |             |             | R92-3079-05  | CHIP R 240          |                  |
| Q50                              |             |             | DTC114YK      | DIGITAL TRANSISTOR      |                  | R22      |             |             | R92-3079-05  | CHIP R 240          |                  |
| Q51                              |             |             | DTA124EK      | DIGITAL TRANSISTOR      |                  | R23      |             |             | R92-3058-05  | CHIP R 620 J 1/4W   |                  |
| Q52                              |             |             | DTC114YK      | DIGITAL TRANSISTOR      |                  | R24      |             |             | R92-3079-05  | CHIP R 240          |                  |
| Q53-55                           |             |             | FMC2A         | DIGITAL TRANSISTOR      |                  | R25      |             |             | R92-3058-05  | CHIP R 620 J 1/4W   |                  |
| Q59                              |             |             | DTA114EK      | DIGITAL TRANSISTOR      |                  | R26,27   |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| Q60                              |             |             | DTC124EK      | DIGITAL TRANSISTOR      |                  | R30      |             |             | RK73GB1J203J | CHIP R 20K J 1/16W  |                  |
| TH1                              |             |             | PTH9C32BB471Q | POSITIVE RESISTOR       |                  | R31      |             |             | RK73GB1J103J | CHIP R 10K J 1/16W  |                  |
| A1                               |             |             | W02-3179-05   | ELECTRIC CIRCUIT MODULE |                  | R32      |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| A2                               |             |             | W02-3119-15   | FM/AM FRONT-END         |                  | R33      |             |             | RK73EB2B431J | CHIP R 430 J 1/8W   |                  |
| <b>SWITCH UNIT (X25-8330-11)</b> |             |             |               |                         |                  | R34      |             |             | RK73EB2B100J | CHIP R 10 J 1/8W    |                  |
| D6,7                             |             |             | B30-1545-05   | LED (BLUE)              |                  | R38      |             |             | R92-3079-05  | CHIP R 240          |                  |
| D8,9                             |             |             | B30-1417-05   | LED                     |                  | R59      |             |             | RK73GB1J102J | CHIP R 1.0K J 1/16W |                  |
| D10,11                           |             |             | B30-1545-05   | LED (BLUE)              |                  | R60,61   |             |             | R92-3088-05  | CHIP R 560 J 1/4W   |                  |
| D12,13                           |             |             | B30-1417-05   | LED                     |                  | R63      |             |             | RK73GB1J243J | CHIP R 24K J 1/16W  |                  |
| D14-18                           |             |             | B30-1545-05   | LED (BLUE)              |                  | R64      |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| D19-22                           |             |             | B30-1417-05   | LED                     |                  | R65      |             |             | RK73GB1J103J | CHIP R 10K J 1/16W  |                  |
| C1                               |             |             | C92-1430-05   | CHIP C 22UF 16VV        |                  | R66      |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| C2                               |             |             | CK73FB1H223K  | CHIP C 0.022UF K        |                  | R67      |             |             | RK73GB1J243J | CHIP R 24K J 1/16W  |                  |
| C3                               |             |             | C92-1359-05   | CHIP-TAN 10UF 16VV      |                  | R68      |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| C4                               |             |             | CK73GB1H103K  | CHIP C 0.010UF K        |                  | R69      |             |             | RK73GB1J103J | CHIP R 10K J 1/16W  |                  |
| C5                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K         |                  | R70      |             |             | RK73GB1J473J | CHIP R 47K J 1/16W  |                  |
| C6                               |             |             | CK73EB1E105K  | CHIP C 1.0UF K          |                  | R71-75   |             |             | R92-3058-05  | CHIP R 620 J 1/4W   |                  |
| C7-13                            |             |             | CK73FB1C104K  | CHIP C 0.10UF K         |                  | W2,3     |             |             | R92-2052-05  | CHIP R 0 J 1/10W    |                  |
| C15                              |             |             | CK73FB1C104K  | CHIP C 0.10UF K         |                  | W5       |             |             | R92-2052-05  | CHIP R 0 J 1/10W    |                  |
| C26,27                           |             |             | CK73FB1C104K  | CHIP C 0.10UF K         |                  | W7       |             |             | R92-2052-05  | CHIP R 0 J 1/10W    |                  |
| C28                              |             |             | CK73FB1H223K  | CHIP C 0.022UF K        |                  | S1       |             |             | S70-0851-05  | TACT SWITCH         |                  |
| C29-31                           |             |             | CK73FB1C104K  | CHIP C 0.10UF K         |                  | S2       |             |             | S70-0858-05  | TACT SWITCH         |                  |
| C61,62                           |             |             | CK73GB1C104K  | CHIP C 0.10UF K         |                  | S3-7     |             |             | S70-0841-05  | TACT SWITCH         |                  |
| CN1                              |             |             | E40-9339-05   | FLAT CABLE CONNECTOR    |                  | S8       |             |             | S70-0858-05  | TACT SWITCH         |                  |
| L1                               |             |             | L40-4795-34   | SMALL FIXED INDUCTOR    |                  | S9-17    |             |             | S70-0841-05  | TACT SWITCH         |                  |
| X1                               |             |             | L78-0587-05   | RESONATOR (10MHZ)       |                  | S18      |             |             | S70-0858-05  | TACT SWITCH         |                  |
| CP1                              |             |             | R90-0724-05   | MULTI-COMP 1K X4        |                  | S19-24   |             |             | S70-0841-05  | TACT SWITCH         |                  |
|                                  |             |             |               |                         |                  | S25,26   |             |             | S70-0851-05  | TACT SWITCH         |                  |
|                                  |             |             |               |                         |                  | D1       |             |             | DA204K       | DIODE               |                  |
|                                  |             |             |               |                         |                  | D2,3     |             |             | DA227        | DIODE               |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## DOLBY NOISE REDUCTION UNIT (X30-3000-00)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.      | Description                | Desti-<br>nation |
|----------|-------------|-------------|----------------|----------------------------|------------------|
| D4       |             |             | HZM5.6N(B2)    | ZENER DIODE                |                  |
| D23      |             |             | DA227          | DIODE                      |                  |
| D24      |             |             | HZM6.8FA       | ZENER DIODE                |                  |
| D25      |             |             | HZM6.8N(B2)    | ZENER DIODE                |                  |
| ED1      |             |             | CN1797M        | FLUORESCENT INDICATOR TUBE |                  |
| IC1      |             |             | M30620MC-550FP | MI-COM IC                  |                  |
| IC3      |             |             | RS-171         | ANALOGUE IC                |                  |
| Q1       |             |             | DTC114YUA      | DIGITAL TRANSISTOR         |                  |
| Q2       |             |             | FMC4A          | DIGITAL TRANSISTOR         |                  |
| Q4       |             |             | DTB123YK       | DIGITAL TRANSISTOR         |                  |
| Q5       |             |             | DTC124EUA      | DIGITAL TRANSISTOR         |                  |
| Q6       |             |             | DTC144EK       | DIGITAL TRANSISTOR         |                  |
| Q7-10    |             |             | 2SC4081(S)     | TRANSISTOR                 |                  |
| Q13      |             |             | FMG2           | DIGITAL TRANSISTOR         |                  |

## DOLBY NOISE REDUCTION UNIT (X30-3000-00)

|        |  |   |              |                      |         |      |       |
|--------|--|---|--------------|----------------------|---------|------|-------|
| C1-4   |  |   | CK73FB1H821K | CHIP C               | 820PF   | K    |       |
| C5,6   |  |   | CK73FB1H123K | CHIP C               | 0.012UF | K    |       |
| C7,8   |  |   | CK73FB1C334K | CHIP C               | 0.33UF  | K    |       |
| C9,10  |  |   | CK73FB1C104K | CHIP C               | 0.10UF  | K    |       |
| C11    |  |   | CK73FB1H472K | CHIP C               | 4700PF  | K    |       |
| C12    |  |   | CK73FB1H103K | CHIP C               | 0.010UF | K    |       |
| C13    |  |   | C90-2606-05  | ELECTRO              | 0.47UF  | 50WV |       |
| C14    |  |   | C90-2935-05  | ELECTRO              | 1.0UF   | 50WV |       |
| C15    |  |   | C90-2871-05  | ELECTRO              | 100UF   | 10WV |       |
| C16    |  |   | CK73FB1C474K | CHIP C               | 0.47UF  | K    |       |
| C17    |  |   | CK73FB1H393K | CHIP C               | 0.039UF | K    |       |
| C18    |  |   | C90-2597-05  | ELECTRO              | 10UF    | 16WV |       |
| C19    |  |   | CE04CW1C470M | ELECTRO              | 47UF    | 16WV |       |
| C20-23 |  |   | CK73FB1H103K | CHIP C               | 0.010UF | K    |       |
| C25    |  |   | CK73FB1H103K | CHIP C               | 0.010UF | K    |       |
| C26    |  |   | CK73FB1C104K | CHIP C               | 0.10UF  | K    |       |
| C27,28 |  |   | CE04CW1A330M | ELECTRO              | 33UF    | 10WV |       |
| CN1    |  |   | E40-9733-05  | FLAT CABLE CONNECTOR |         |      |       |
| CN2    |  |   | E40-9705-05  | PIN ASSY             |         |      |       |
| CN3    |  | * | E40-3837-05  | FLAT CABLE CONNECTOR |         |      |       |
| CN4    |  |   | E40-9736-05  | PIN ASSY             |         |      |       |
| J1-10  |  |   | E31-0001-00  | JUMPER WIRE          |         |      |       |
| R1-4   |  |   | RK73FB2A473J | CHIP R               | 47K     | J    | 1/10W |
| R5,6   |  |   | RK73FB2A151J | CHIP R               | 150     | J    | 1/10W |
| R7,8   |  |   | RK73FB2A434J | CHIP R               | 430K    | J    | 1/10W |
| R9,10  |  |   | RK73FB2A183J | CHIP R               | 18K     | J    | 1/10W |
| R11,12 |  |   | RK73FB2A123J | CHIP R               | 12K     | J    | 1/10W |
| R13    |  |   | RK73FB2A183J | CHIP R               | 18K     | J    | 1/10W |
| R14    |  |   | RK73FB2A224J | CHIP R               | 220K    | J    | 1/10W |
| R15,16 |  |   | RK73FB2A473J | CHIP R               | 47K     | J    | 1/10W |
| R17    |  |   | RK73EB2B121J | CHIP R               | 120     | J    | 1/8W  |
| R18    |  |   | RK73FB2A223J | CHIP R               | 22K     | J    | 1/10W |
| R20    |  |   | RK73FB2A681J | CHIP R               | 680     | J    | 1/10W |
| R21,22 |  |   | RK73FB2A103J | CHIP R               | 10K     | J    | 1/10W |
| R23    |  |   | RS14DB3A100J | FL-PROOF RS          | 10      | J    | 1W    |
| R24    |  |   | RK73FB2A101J | CHIP R               | 100     | J    | 1/10W |
| R25    |  |   | RK73FB2A162J | CHIP R               | 1.6K    | J    | 1/10W |
| R26    |  |   | RK73FB2A333J | CHIP R               | 33K     | J    | 1/10W |
| R27    |  |   | RK73EB2B470J | CHIP R               | 47      | J    | 1/8W  |

E : Europe K : North America M : Other Areas

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description         | Desti-<br>nation |
|----------|-------------|-------------|-------------|---------------------|------------------|
| VR1,2    |             |             | R12-3100-05 | TRIMMING POT. (10K) |                  |
| W1       |             |             | R92-2053-05 | CHIP R              | 0 J 1/8W         |
| W2-4     |             |             | R92-2052-05 | CHIP R              | 0 J 1/10W        |
| W5-9     |             |             | R92-2053-05 | CHIP R              | 0 J 1/8W         |
| S1       |             |             | S74-0809-05 | MICRO SWITCH        |                  |
| D1       |             |             | AM01Z       | DIODE               |                  |
| D2       |             |             | 02C24.3-X   | ZENER DIODE         |                  |
| IC1      |             |             | HA12216F    | ANALOGUE IC         |                  |
| IC2      |             |             | LB1641      | IC (MOTOR DRIVER)   |                  |
| Q1       |             |             | DTC144EK    | DIGITAL TRANSISTOR  |                  |
| Q2       |             |             | DTA144EK    | DIGITAL TRANSISTOR  |                  |
| Q4       |             |             | 2SB1443     | TRANSISTOR          |                  |
| Q5       |             |             | DTC114EK    | DIGITAL TRANSISTOR  |                  |

## CD PLAYER UNIT (X32-4830-01)

|        |  |  |               |          |         |       |  |
|--------|--|--|---------------|----------|---------|-------|--|
| C1,2   |  |  | CK73FB1A105K  | CHIP C   | 1.0UF   | K     |  |
| C3     |  |  | C92-1359-05   | CHIP-TAN | 10UF    | 16WV  |  |
| C4     |  |  | C92-0566-05   | CHIP-TAN | 10UF    | 6.3WV |  |
| C5     |  |  | CC73GCH1H150J | CHIP C   | 15PF    | J     |  |
| C6     |  |  | CC73GCH1H020C | CHIP C   | 2.0PF   | C     |  |
| C7     |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C8     |  |  | CK73FB1A105K  | CHIP C   | 1.0UF   | K     |  |
| C9     |  |  | CC73GCH1H101J | CHIP C   | 100PF   | J     |  |
| C10    |  |  | CK73GB1H472K  | CHIP C   | 4700PF  | K     |  |
| C11    |  |  | CK73GB1H682K  | CHIP C   | 6800PF  | K     |  |
| C12    |  |  | CK73GB1H222K  | CHIP C   | 2200PF  | K     |  |
| C13    |  |  | CK73GB1C273K  | CHIP C   | 0.027UF | K     |  |
| C14    |  |  | CK73GB1H472K  | CHIP C   | 4700PF  | K     |  |
| C15    |  |  | CK73GB1C473K  | CHIP C   | 0.047UF | K     |  |
| C16    |  |  | CC73GCH1H820J | CHIP C   | 82PF    | J     |  |
| C17    |  |  | CK73GB1H472K  | CHIP C   | 4700PF  | K     |  |
| C18    |  |  | CK73GB1H331K  | CHIP C   | 330PF   | K     |  |
| C19,20 |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C21    |  |  | C92-1359-05   | CHIP-TAN | 10UF    | 16WV  |  |
| C22    |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C23    |  |  | CK73GB1H102K  | CHIP C   | 1000PF  | K     |  |
| C24    |  |  | CK73GB1E223K  | CHIP C   | 0.022UF | K     |  |
| C25    |  |  | CK73GB1E123K  | CHIP C   | 0.012UF | K     |  |
| C26    |  |  | CK73FB1A105K  | CHIP C   | 1.0UF   | K     |  |
| C28    |  |  | CK73FB1A105K  | CHIP C   | 1.0UF   | K     |  |
| C29    |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C31,32 |  |  | CK73GB1H103K  | CHIP C   | 0.010UF | K     |  |
| C33    |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C34    |  |  | CK73EB1A335K  | CHIP C   | 3.3UF   | K     |  |
| C35    |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C41    |  |  | CK73EB1C225K  | CHIP C   | 2.2UF   | K     |  |
| C43    |  |  | CK73GB1E123K  | CHIP C   | 0.012UF | K     |  |
| C44    |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C45    |  |  | CK73GB1E123K  | CHIP C   | 0.012UF | K     |  |
| C46    |  |  | CK73GB1C473K  | CHIP C   | 0.047UF | K     |  |
| C51    |  |  | CK73EB1A335K  | CHIP C   | 3.3UF   | K     |  |
| C55    |  |  | CK73GB1C104K  | CHIP C   | 0.10UF  | K     |  |
| C63    |  |  | C92-1359-05   | CHIP-TAN | 10UF    | 16WV  |  |
| C67,68 |  |  | CK73FB1A105K  | CHIP C   | 1.0UF   | K     |  |
| C71,72 |  |  | CK73GB1H471K  | CHIP C   | 470PF   | K     |  |

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

### CD PLAYER UNIT (X32-4830-01)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description                 | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description                 | Desti-<br>nation |
|----------|-------------|-------------|---------------|-----------------------------|------------------|----------|-------------|-------------|--------------|-----------------------------|------------------|
| C77,78   |             |             | CC73GCH1H680J | CHIP C 68PF J               |                  | R101,102 |             |             | RK73FB2A332J | CHIP R 3.3K J 1/10W         |                  |
| C79,80   |             |             | C93-1044-05   | CERAMIC 2200PF K            |                  | R103,104 |             |             | RK73FB2A562J | CHIP R 5.6K J 1/10W         |                  |
| C85      |             |             | CK73GB1C104K  | CHIP C 0.10UF K             |                  | R107,108 |             |             | RK73FB2A331J | CHIP R 330 J 1/10W          |                  |
| C88      |             |             | CK73GB1C104K  | CHIP C 0.10UF K             |                  | R117,118 |             |             | RK73FB2A203J | CHIP R 20K J 1/10W          |                  |
|          |             |             |               |                             |                  | R121,122 |             |             | RK73FB2A203J | CHIP R 20K J 1/10W          |                  |
| CN1      |             |             | E40-9536-05   | FLAT CABLE CONNECTOR        |                  |          |             |             |              |                             |                  |
| CN2      |             |             | E40-9339-05   | FLAT CABLE CONNECTOR        |                  | R125,126 |             |             | RK73FB2A203J | CHIP R 20K J 1/10W          |                  |
|          |             |             |               |                             |                  | R202     |             |             | RK73FB2A102J | CHIP R 1.0K J 1/10W         |                  |
| L1       |             |             | L40-1001-78   | SMALL FIXED INDUCTOR (10UH) |                  | R218     |             |             | RK73FB2A473J | CHIP R 47K J 1/10W          |                  |
| L2       |             |             | L92-0308-05   | FERRITE CORE                |                  | R221-224 |             |             | RK73FB2A912J | CHIP R 9.1K J 1/10W         |                  |
| X1       |             |             | L78-0572-05   | RESONATOR (16.93MHZ)        |                  | R225,226 |             |             | RK73FB2A433J | CHIP R 43K J 1/10W          |                  |
|          |             |             |               |                             |                  |          |             |             |              |                             |                  |
| CP1-3    |             |             | R90-1019-05   | MULTI-COMP 100 X2           |                  | R227     |             |             | RK73FB2A102J | CHIP R 1.0K J 1/10W         |                  |
| R1,2     |             |             | RK73FB2A333J  | CHIP R 33K J 1/10W          |                  | R228     |             |             | RK73FB2A512J | CHIP R 5.1K J 1/10W         |                  |
| R3       |             |             | RK73FB2A683J  | CHIP R 68K J 1/10W          |                  | R229     |             |             | RK73FB2A102J | CHIP R 1.0K J 1/10W         |                  |
| R5       |             |             | RK73FB2A910J  | CHIP R 91 J 1/10W           |                  | R230     |             |             | RK73FB2A512J | CHIP R 5.1K J 1/10W         |                  |
| R6       |             |             | RK73FB2A683J  | CHIP R 68K J 1/10W          |                  | R231     |             |             | RK73FB2A432J | CHIP R 4.3K J 1/10W         |                  |
|          |             |             |               |                             |                  |          |             |             |              |                             |                  |
| R8       |             |             | RK73EB2B4R7J  | CHIP R 4.7 J 1/8W           |                  | R232     |             |             | RK73FB2A133J | CHIP R 13K J 1/10W          |                  |
| R9       |             |             | RK73EB2B100J  | CHIP R 10 J 1/8W            |                  | W4       |             |             | R92-2052-05  | CHIP R 0 J 1/10W            |                  |
| R10,11   |             |             | RK73FB2A822J  | CHIP R 8.2K J 1/10W         |                  | W7-9     |             |             | R92-2052-05  | CHIP R 0 J 1/10W            |                  |
| R12      |             |             | RK73FB2A472J  | CHIP R 4.7K J 1/10W         |                  | W10      |             |             | R92-2053-05  | CHIP R 0 J 1/8W             |                  |
| R13      |             |             | RK73FB2A683J  | CHIP R 68K J 1/10W          |                  | W15,16   |             |             | R92-2052-05  | CHIP R 0 J 1/10W            |                  |
|          |             |             |               |                             |                  |          |             |             |              |                             |                  |
| R14,15   |             |             | RK73FB2A824J  | CHIP R 820K J 1/10W         |                  | S1,2     |             |             | S68-0838-05  | PUSH SWITCH                 |                  |
| R16      |             |             | RK73FB2A223J  | CHIP R 22K J 1/10W          |                  | S3       |             |             | S68-0823-05  | PUSH SWITCH                 |                  |
| R17      |             |             | RK73FB2A133J  | CHIP R 13K J 1/10W          |                  |          |             |             |              |                             |                  |
| R18      |             |             | RK73FB2A392J  | CHIP R 3.9K J 1/10W         |                  | D1,2     |             |             | DAN202U      | DIODE                       |                  |
| R19      |             |             | RK73FB2A432J  | CHIP R 4.3K J 1/10W         |                  | D3       |             |             | DA204K       | DIODE                       |                  |
|          |             |             |               |                             |                  | D4       |             |             | DAN202U      | DIODE                       |                  |
| R20      |             |             | RK73FB2A104J  | CHIP R 100K J 1/10W         |                  | IC1      |             |             | AN8806SB     | ANALOGUE IC                 |                  |
| R21      |             |             | RK73FB2A224J  | CHIP R 220K J 1/10W         |                  | IC2      |             | *           | MN662773KD0  | MOS-IC                      |                  |
| R22,23   |             |             | RK73FB2A333J  | CHIP R 33K J 1/10W          |                  |          |             |             |              |                             |                  |
| R32      |             |             | RK73FB2A104J  | CHIP R 100K J 1/10W         |                  | IC4      |             |             | BA5917AFP    | ANALOGUE IC                 |                  |
| R34      |             |             | RK73FB2A683J  | CHIP R 68K J 1/10W          |                  | IC5      |             |             | TA78L05F     | IC (VOLTAGE REGULATOR/ +5V) |                  |
|          |             |             |               |                             |                  | IC6      |             |             | NJM4565MD    | IC (OP AMP X2)              |                  |
| R35      |             |             | RK73FB2A104J  | CHIP R 100K J 1/10W         |                  | IC10     |             |             | BU4551BFV    | ANALOGUE IC                 |                  |
| R36      |             |             | RK73FB2A151J  | CHIP R 150 J 1/10W          |                  | Q1       |             |             | 2SB1188      | TRANSISTOR                  |                  |
| R37      |             |             | RK73FB2A471J  | CHIP R 470 J 1/10W          |                  |          |             |             |              |                             |                  |
| R38      |             |             | RK73FB2A224J  | CHIP R 220K J 1/10W         |                  | Q2       |             |             | DTC124EUA    | DIGITAL TRANSISTOR          |                  |
| R44      |             |             | RK73FB2A512J  | CHIP R 5.1K J 1/10W         |                  | Q3,4     |             |             | 2SA1362(Y)   | TRANSISTOR                  |                  |
|          |             |             |               |                             |                  | Q5       |             |             | DTC124EUA    | DIGITAL TRANSISTOR          |                  |
| R45      |             |             | RK73FB2A103J  | CHIP R 10K J 1/10W          |                  | Q9-12    |             |             | DTC114YUA    | DIGITAL TRANSISTOR          |                  |
| R46      |             |             | RK73FB2A102J  | CHIP R 1.0K J 1/10W         |                  |          |             |             |              |                             |                  |
| R47      |             |             | RK73FB2A103J  | CHIP R 10K J 1/10W          |                  |          |             |             |              |                             |                  |
| R49      |             |             | RK73FB2A472J  | CHIP R 4.7K J 1/10W         |                  |          |             |             |              |                             |                  |
| R50      |             |             | RK73FB2A102J  | CHIP R 1.0K J 1/10W         |                  |          |             |             |              |                             |                  |
|          |             |             |               |                             |                  |          |             |             |              |                             |                  |
| R52      |             |             | RK73FB2A104J  | CHIP R 100K J 1/10W         |                  |          |             |             |              |                             |                  |
| R54      |             |             | RK73FB2A104J  | CHIP R 100K J 1/10W         |                  |          |             |             |              |                             |                  |
| R71      |             |             | RK73FB2A103J  | CHIP R 10K J 1/10W          |                  |          |             |             |              |                             |                  |
| R72      |             |             | RK73FB2A102J  | CHIP R 1.0K J 1/10W         |                  |          |             |             |              |                             |                  |
| R73      |             |             | RK73FB2A473J  | CHIP R 47K J 1/10W          |                  |          |             |             |              |                             |                  |
|          |             |             |               |                             |                  |          |             |             |              |                             |                  |
| R74      |             |             | RK73FB2A103J  | CHIP R 10K J 1/10W          |                  |          |             |             |              |                             |                  |
| R75      |             |             | RK73FB2A333J  | CHIP R 33K J 1/10W          |                  |          |             |             |              |                             |                  |
| R76      |             |             | RK73FB2A622J  | CHIP R 6.2K J 1/10W         |                  |          |             |             |              |                             |                  |
| R77      |             |             | RK73FB2A563J  | CHIP R 56K J 1/10W          |                  |          |             |             |              |                             |                  |
| R78      |             |             | RK73FB2A243J  | CHIP R 24K J 1/10W          |                  |          |             |             |              |                             |                  |
|          |             |             |               |                             |                  |          |             |             |              |                             |                  |
| R79      |             |             | RK73FB2A912J  | CHIP R 9.1K J 1/10W         |                  |          |             |             |              |                             |                  |
| R80      |             |             | RK73FB2A202J  | CHIP R 2.0K J 1/10W         |                  |          |             |             |              |                             |                  |
| R81      |             |             | RK73FB2A333J  | CHIP R 33K J 1/10W          |                  |          |             |             |              |                             |                  |
| R82      |             |             | RK73FB2A103J  | CHIP R 10K J 1/10W          |                  |          |             |             |              |                             |                  |
| R83      |             |             | RK73FB2A102J  | CHIP R 1.0K J 1/10W         |                  |          |             |             |              |                             |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## CD MECHANISM ASSY (X92-3910-01)

| Ref. No.                               | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                   | Desti-<br>nation |
|----------------------------------------|-------------|-------------|-------------|-------------------------------|------------------|
| 244                                    | 2H          |             | K24-3507-03 | KNOB (ATT)                    |                  |
| 245                                    | 2H          | *           | K24-3508-23 | KNOB (SRC)                    |                  |
| 246                                    | 2H          | *           | K24-3515-23 | KNOB (CD EJECT)               |                  |
| 247                                    | 2H          | *           | K24-3520-23 | KNOB (TAPE EJECT)             |                  |
| 248                                    | 2H          |             | K25-1042-02 | KNOB (FM)                     |                  |
| 249                                    | 2H          |             | K25-1043-02 | KNOB (EQ)                     |                  |
| 250                                    | 3H          | *           | K25-1044-12 | KNOB (PLAY)                   |                  |
| 251                                    | 2H          | *           | K25-1047-12 | KNOB (ANGLE)                  |                  |
| 252                                    | 2H          | *           | K25-1048-12 | KNOB (VOL)                    |                  |
| 253                                    | 2H          | *           | K25-1087-13 | KNOB (1,2)                    |                  |
| 254                                    | 2H          | *           | K25-1088-12 | KNOB (3-6)                    |                  |
| Q                                      | 1H          |             | N80-2005-46 | PAN HEAD TAPTITE SCREW        |                  |
| R                                      | 1G          |             | N09-4337-05 | STEPPED SCREW (M1.4)          |                  |
| S                                      | 1H          |             | N09-4338-05 | STEPPED SCREW (M1.4)          |                  |
| T                                      | 1H          |             | N32-2004-46 | FLAT HEAD MACHIN SCREW        |                  |
| <b>COMPUND ASSY UNIT (X90-3550-11)</b> |             |             |             |                               |                  |
| 262                                    | 2C          | *           | B03-3051-13 | DRESSING PLATE                |                  |
| 263                                    | 2D          |             | B19-1190-04 | LIGHTING BOARD                |                  |
| 264                                    | 2C          |             | B19-1191-04 | LIGHTING BOARD                |                  |
| 265                                    | 2D          |             | B19-1192-04 | LIGHTING BOARD                |                  |
| <b>CD MECHANISM ASSY (X92-3910-01)</b> |             |             |             |                               |                  |
| 1                                      | 2A          |             | A10-4482-01 | CHASSIS                       |                  |
| 2                                      | 1B          |             | A10-4225-33 | CHASSIS CALKING ASSY          |                  |
| 3                                      | 2B          |             | A11-0915-43 | SUB CHASSIS CALKING ASSY      |                  |
| 5                                      | 2A          |             | D10-3082-13 | ARM                           |                  |
| 6                                      | 2A          |             | D10-4306-04 | ARM ASSY                      |                  |
| 7                                      | 2A          |             | D10-4305-04 | ARM ASSY                      |                  |
| 8                                      | 3A          |             | D10-3087-44 | ARM ASSY                      |                  |
| 9                                      | 3B          |             | D10-3092-03 | SLIDER                        |                  |
| 10                                     | 3B          |             | D10-3093-04 | SLIDER ASSY                   |                  |
| 11                                     | 2B          |             | D10-3095-04 | SLIDER ASSY                   |                  |
| 12                                     | 2B          |             | D10-3096-04 | SLIDER ASSY                   |                  |
| 13                                     | 1A          |             | D10-3099-24 | SLIDER ASSY                   |                  |
| 14                                     | 1A          |             | D10-3100-04 | SLIDER ASSY                   |                  |
| 16                                     | 1B          |             | D10-4004-04 | LEVER ASSY                    |                  |
| 17                                     | 1B          |             | D10-4006-04 | LEVER                         |                  |
| 18                                     | 1A          |             | D10-4007-04 | LEVER                         |                  |
| 19                                     | 2B          |             | D10-4008-14 | LEVER                         |                  |
| 20                                     | 2A          |             | D10-4009-23 | ARM                           |                  |
| 21                                     | 3A          |             | D10-4010-04 | LEVER                         |                  |
| 22                                     | 3A          |             | D10-4011-34 | LEVER ASSY                    |                  |
| 23                                     | 3A          |             | D10-4013-14 | ARM ASSY                      |                  |
| 24                                     | 3B          |             | D10-4050-04 | ARM                           |                  |
| 25                                     | 2A          |             | D10-4038-23 | ARM ASSY                      |                  |
| 26                                     | 2A          |             | D10-4123-24 | LEVER ASSY                    |                  |
| 27                                     | 3A          |             | D13-1340-13 | RACK (GEAR)                   |                  |
| 29                                     | 3B          |             | D13-1231-04 | GEAR                          |                  |
| 30                                     | 3A          |             | D13-1240-04 | GEAR                          |                  |
| 31                                     | 3B          |             | D13-1233-04 | GEAR                          |                  |
| 32                                     | 3B          |             | D13-1234-14 | GEAR ASSY                     |                  |
| 33                                     | 3A          |             | D13-1238-03 | GEAR                          |                  |
| 34                                     | 3B          |             | D13-1232-04 | GEAR                          |                  |
| 35                                     | 3B          |             | D13-1241-04 | GEAR                          |                  |
| 36                                     | 3A          |             | D13-1242-04 | GEAR                          |                  |
| 37                                     | 1B          |             | D13-1243-04 | GEAR                          |                  |
| 38                                     | 1B          |             | D13-1244-04 | GEAR                          |                  |
| 39                                     | 1B          |             | D13-1245-14 | GEAR                          |                  |
| 40                                     | 2A          |             | D13-1246-04 | GEAR                          |                  |
| 41                                     | 2B          |             | D13-1247-04 | GEAR                          |                  |
| 43                                     | 2B          |             | D13-1249-04 | GEAR ASSY                     |                  |
| 44                                     | 2B          |             | D13-1341-04 | GEAR ASSY (LEAD SCREW)        |                  |
| 45                                     | 1B          |             | D14-0668-04 | ROLLER                        |                  |
| 46                                     | 2A          |             | D14-0670-04 | ROLLER                        |                  |
| 47                                     | 3B          |             | D14-0674-04 | ROLLER                        |                  |
| 49                                     | 3A          |             | D21-2228-14 | SHAFT                         |                  |
| 50                                     | 1A          |             | D21-2229-04 | SHAFT                         |                  |
| 51                                     | 1A          |             | D23-0925-24 | RETAINER                      |                  |
| 52                                     | 2A          |             | D32-0614-04 | STOPPER                       |                  |
| 53                                     | 1B          |             | D39-0223-05 | DAMPER (YELLOW)               |                  |
| 54                                     | 2B          |             | D39-0224-05 | DAMPER (BLACK)                |                  |
| 55                                     | 3B          |             | F09-1246-04 | SHEET                         |                  |
| 58                                     | 3B          |             | F09-1266-14 | SHEET                         |                  |
| 60                                     | 2A          |             | G01-2770-04 | EXTENSION SPRING              |                  |
| 61                                     | 3A          |             | G01-2771-04 | EXTENSION SPRING              |                  |
| 62                                     | 3A          |             | G01-2772-24 | EXTENSION SPRING              |                  |
| 63                                     | 3A          |             | G01-2773-14 | EXTENSION SPRING              |                  |
| 64                                     | 3A          |             | G01-2774-34 | EXTENSION SPRING              |                  |
| 65                                     | 1B          |             | G01-2775-04 | TORSION COIL SPRING           |                  |
| 66                                     | 1B          |             | G01-2776-14 | TORSION COIL SPRING           |                  |
| 67                                     | 3B          |             | G01-2777-24 | TORSION COIL SPRING           |                  |
| 69                                     | 2A          |             | G01-2844-04 | EXTENSION SPRING              |                  |
| 70                                     | 2A          |             | G02-1231-04 | FLAT SPRING                   |                  |
| 71                                     | 2B          |             | G02-1232-14 | FLAT SPRING                   |                  |
| 72                                     | 2A          |             | G02-1241-24 | FLAT SPRING                   |                  |
| 73                                     | 2A          |             | G02-1248-14 | FLAT SPRING                   |                  |
| 75                                     | 2A          |             | J11-0613-13 | CLAMPER                       |                  |
| 76                                     | 3A          |             | J19-4678-13 | HOLDER                        |                  |
| 77                                     | 2B          |             | J19-4679-24 | HOLDER                        |                  |
| 78                                     | 3B          |             | J21-7684-13 | MOUNTING HARDWARE             |                  |
| 79                                     | 2B          |             | J21-7686-13 | MOUNTING HARDWARE             |                  |
| 80                                     | 1B          |             | J21-7690-03 | MOUNTING HARDWARE             |                  |
| 81                                     | 3A          |             | J31-1032-04 | COLLAR                        |                  |
| 82                                     | 3A          |             | J84-0107-05 | FLEXIBLE PRINTED WIRING BOARD |                  |
| 83                                     | 1A          |             | J90-0757-22 | GUIDE                         |                  |
| A                                      | 2A          |             | N09-4249-05 | MACHINE SCREW (M1.7X2.5,LOCK) |                  |
| B                                      | 1B          |             | N09-4172-05 | TAPPING SCREW (2X3.5,CTITE)   |                  |
| C                                      | 2B          |             | N09-4202-05 | STEPPED SCREW                 |                  |
| D                                      | 2A          |             | N38-2020-46 | PAN HEAD MACHIN SCREW         |                  |
| E                                      | 3A          |             | N09-4294-05 | TAPTITE SCREW (BIND P TAPTIT) |                  |
| F                                      | 3B          |             | N19-2023-04 | FLAT WASHER                   |                  |
| G                                      | 2A          |             | N19-2058-04 | FLAT WASHER                   |                  |
| H                                      | 3A          |             | N19-2093-04 | FLAT WASHER                   |                  |
| J                                      | 2A          |             | N39-2020-46 | PAN HEAD MACHIN SCREW         |                  |
| DM1                                    | 3B          |             | T42-0764-04 | DC MOTOR ASSY (SPINDLE)       |                  |
| DM2                                    | 3B          |             | T42-0763-04 | DC MOTOR ASSY (LOADING)       |                  |
| DPU1                                   | 2B          |             | T25-0215-05 | OPTICAL PICKUP HEAD           |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.

# DPX-5010

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                                  | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description         | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No. | Description | Desti-<br>nation |
|-------------------------------------------|-------------|-------------|-------------|---------------------|------------------|----------|-------------|-------------|-----------|-------------|------------------|
| <b>PANEL MECHANISM ASSY (D40-1131-15)</b> |             |             |             |                     |                  |          |             |             |           |             |                  |
| 301                                       | 3F          |             | A10-4678-08 | CHASSIS ASSY        |                  |          |             |             |           |             |                  |
| 302                                       | 3E          |             | A11-0983-08 | SUB SHASSIS         |                  |          |             |             |           |             |                  |
| 303                                       | 2F          |             | D13-2057-08 | GEAR ASSY           |                  |          |             |             |           |             |                  |
| 304                                       | 2F          |             | D10-4455-08 | ARM ASSY            |                  |          |             |             |           |             |                  |
| 306                                       | 1E          |             | J21-9501-08 | BRACKET             |                  |          |             |             |           |             |                  |
| 307                                       | 2F          |             | J21-9502-08 | BRACKET             |                  |          |             |             |           |             |                  |
| 308                                       | 2E          |             | D13-2058-08 | GEAR ASSY           |                  |          |             |             |           |             |                  |
| 309                                       | 2E          |             | D13-2059-08 | GEAR ASSY           |                  |          |             |             |           |             |                  |
| 311                                       | 3F          |             | G16-1138-08 | SHEET               |                  |          |             |             |           |             |                  |
| 312                                       | 2E          |             | J90-0955-08 | RAIL                |                  |          |             |             |           |             |                  |
| 313                                       | 2F          |             | G02-1334-08 | FLAT SPRING         |                  |          |             |             |           |             |                  |
| 314                                       | 3F          |             | D10-4397-08 | ARM                 |                  |          |             |             |           |             |                  |
| 315                                       | 3F          |             | G09-2028-08 | FLAT SPRING         |                  |          |             |             |           |             |                  |
| 316                                       | 2E          |             | D13-2020-08 | GEAR                |                  |          |             |             |           |             |                  |
| 317                                       | 2F          |             | J90-0956-08 | GUIDE               |                  |          |             |             |           |             |                  |
| 318                                       | 3F          |             | J19-4964-08 | HOLDER              |                  |          |             |             |           |             |                  |
| 319                                       | 3F          |             | J19-4965-18 | HOLDER              |                  |          |             |             |           |             |                  |
| 320                                       | 2F          |             | D13-1421-08 | GEAR                |                  |          |             |             |           |             |                  |
| 321                                       | 2E          |             | D13-2021-08 | GEAR                |                  |          |             |             |           |             |                  |
| 322                                       | 2F          |             | D13-2024-08 | GEAR                |                  |          |             |             |           |             |                  |
| 323                                       | 2E          |             | D13-2025-08 | GEAR                |                  |          |             |             |           |             |                  |
| 324                                       | 2F          |             | D13-2026-08 | GEAR                |                  |          |             |             |           |             |                  |
| 325                                       | 2F          |             | J30-1062-08 | COLLER              |                  |          |             |             |           |             |                  |
| 326                                       | 3F          |             | J30-1063-08 | COLLER              |                  |          |             |             |           |             |                  |
| 327                                       | 1E          |             | E39-0325-08 | CORD WITH CONNECTOR |                  |          |             |             |           |             |                  |
| 330                                       | 2E          |             | G01-2991-08 | SPRING              |                  |          |             |             |           |             |                  |
| 331                                       | 2E          |             | G01-2992-08 | SPRING              |                  |          |             |             |           |             |                  |
| 332                                       | 2E          |             | G01-2993-08 | SPRING              |                  |          |             |             |           |             |                  |
| 333                                       | 3E          |             | G01-2994-08 | SPRING              |                  |          |             |             |           |             |                  |
| 334                                       | 3E          |             | G01-2936-08 | SPRING              |                  |          |             |             |           |             |                  |
| 335                                       | 3F          |             | J90-0957-08 | CUSHION             |                  |          |             |             |           |             |                  |
| 350                                       | 2E          |             | N29-0516-08 | WASHER              |                  |          |             |             |           |             |                  |
| 351                                       | 3F          |             | N29-0517-08 | WASHER              |                  |          |             |             |           |             |                  |
| 352                                       | 2F          |             | N19-1135-08 | WASHER              |                  |          |             |             |           |             |                  |
| 353                                       | 2E          |             | N19-2143-08 | WASHER              |                  |          |             |             |           |             |                  |
| H                                         | 2E          |             | N09-4303-08 | SCREW               |                  |          |             |             |           |             |                  |
| J                                         | 2E          |             | N38-2025-45 | SCREW               |                  |          |             |             |           |             |                  |
| K                                         | 3F          |             | N38-2630-45 | SCREW               |                  |          |             |             |           |             |                  |
| L                                         | 3F          |             | N09-4358-08 | SCREW               |                  |          |             |             |           |             |                  |
| M                                         | 2E          |             | N09-4341-08 | SCREW               |                  |          |             |             |           |             |                  |
| N                                         | 2E          |             | N32-2604-46 | SCREW               |                  |          |             |             |           |             |                  |
| P                                         | 3F          |             | N09-4343-08 | SCREW               |                  |          |             |             |           |             |                  |
| M1                                        | 1E          |             | T42-1012-08 | MOTOR ASSY          |                  |          |             |             |           |             |                  |
| S1                                        | 2E          |             | S68-0835-08 | SWITCH              |                  |          |             |             |           |             |                  |
| VR1                                       | 3F          |             | R33-0204-08 | VARIABLE RESISTOR   |                  |          |             |             |           |             |                  |

E : Europe K : North America M : Other Areas

△ Indicates safety critical components.