



EXPLODED VIEW (MECHANISM)

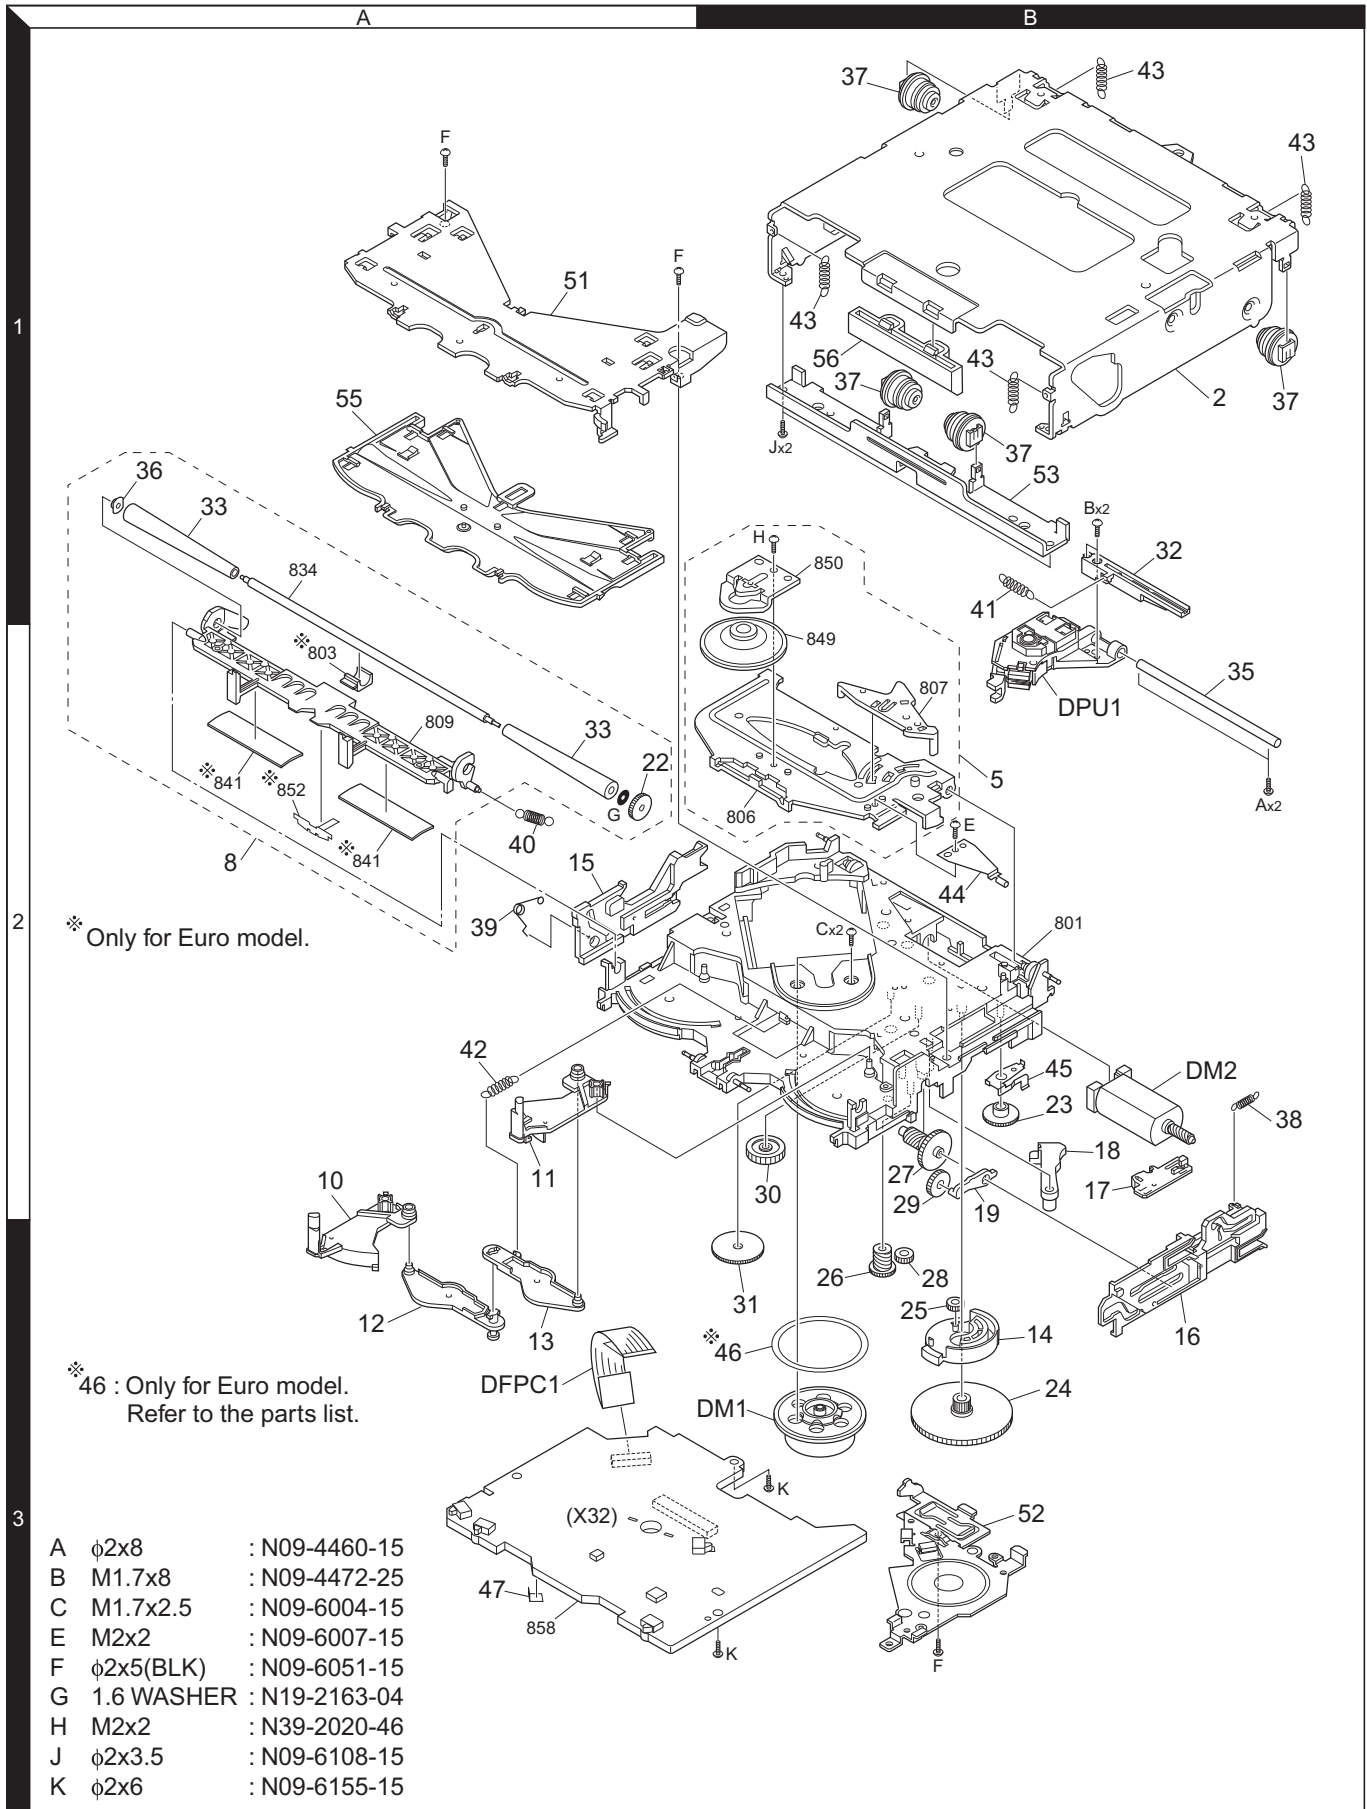

EXPLODED VIEW (UNIT)

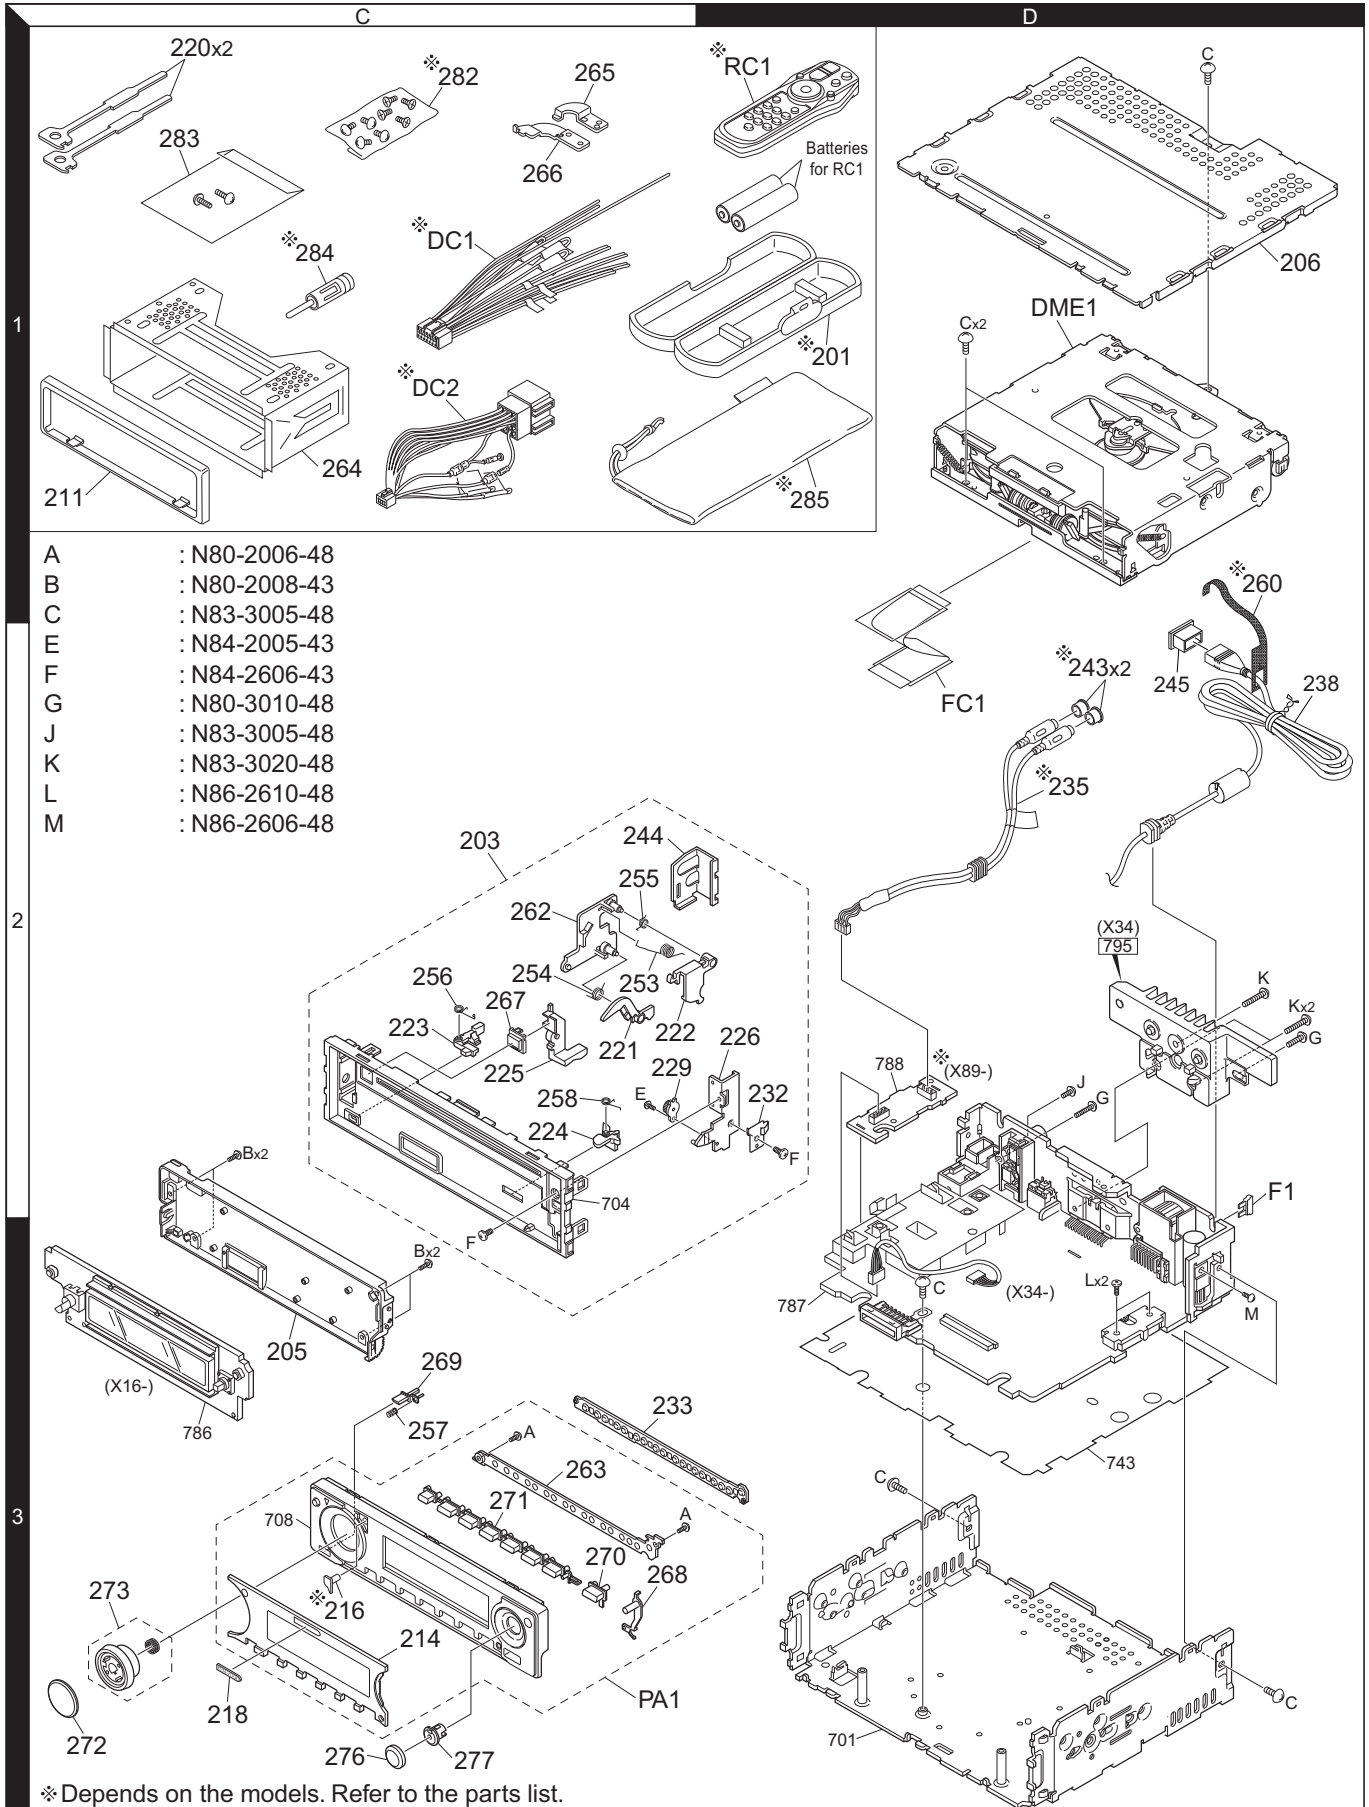

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP5033U/MP532U/W534U/W5534U											
201	1D		A02-2743-03	PLASTIC CABINET ASSY	M2	243	2D		F29-0626-04	INSULATING COVER (PREOUT)	K2M2E3
203	2C	*	A22-3059-12	SUB PANEL ASSY		243	2D		F29-0626-04	INSULATING COVER (PREOUT)	E4
205	3C	*	A46-1833-11	REAR COVER	△	244	2C		F31-0716-04	REINFORCING HARDWARE	
206	1D		A52-0804-12	TOP PLATE		245	2D	*	F29-0637-04	INSULATING COVER (USB)	
PA1	3C	*	A64-3757-11	PANEL ASSY	E5E6E7	F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
PA1	3C	*	A64-3757-11	PANEL ASSY	E8	253	2C		G01-3246-04	TORSION COIL SPRING	
PA1	3C	*	A64-3764-11	PANEL ASSY	K2	254	2C		G01-3247-04	TORSION COIL SPRING	
PA1	3C	*	A64-3765-11	PANEL ASSY	M2	255	2C		G01-3248-04	TORSION COIL SPRING	
PA1	3C	*	A64-3766-11	PANEL ASSY	E3E4	256	2C		G01-3249-04	TORSION COIL SPRING	
RC1	1D		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	K2M2	257	3C	*	G01-4611-04	COMPRESSION SPRING (REL)	
-			B46-0612-14	ID CARD	M2E3E4	258	2C		G01-3270-04	TORSION COIL SPRING	
-			B46-0681-04	ID CARD	K2E5E6	-		*	H10-4983-02	POLYSTYRENE FOAMED FIXTURE	
-			B46-0681-04	ID CARD	E7E8	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K2M2E4
-			B46-0682-00	WARRANTY CARD	K2M2E3	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	E6E8
-			B46-0682-00	WARRANTY CARD	E5E7	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	E3E4E5
-			B58-1426-04	CAUTION CARD	K2	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	E6E7E8
-		*	B64-3343-00	INST. MANUAL (ENG.FRE.SPA)	K2	-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E3E5E7
-		*	B64-3344-00	INST. MANUAL (ENG.T-CHI)	K2	-		*	H25-1236-14	PROTECTION BAG (0.03X180X500)	K2M2
-		*	B64-3345-00	INST. MANUAL (ARABIC)	M2	-		*	H54-3717-03	ITEM CARTON CASE (KDC-MP532U)	K2
-		*	B64-3346-00	INST. MANUAL (ENGLISH)	M2	-		*	H54-3718-03	ITEM CARTON CASE (KDC-MP5033U)	M2
-		*	B64-3346-00	INST. MANUAL (ENGLISH)	E3E4E5	-		*	H54-3719-03	ITEM CARTON CASE (KDC-W5534U)	E3
-		*	B64-3346-00	INST. MANUAL (ENGLISH)	E6E7E8	-		*	H54-3720-03	ITEM CARTON CASE (KDC-W5534UY)	E4
-		*	B64-3347-00	INST. MANUAL (FRE.GER.DUT)	E3E5E7	-		*	H54-3721-03	ITEM CARTON CASE (KDC-W534UA)	E5
-		*	B64-3348-00	INST. MANUAL (ITA.SPA.POR)	E3E5E7	-		*	H54-3722-03	ITEM CARTON CASE (KDC-W534UAY)	E6
-		*	B64-3349-00	INST. MANUAL (RUSSIAN)	E4E6E8	-		*	H54-3723-03	ITEM CARTON CASE (KDC-W534UG)	E7
211	1C		B07-3125-01	ESCUTCHEON	M2E5E6	-		*	H54-3724-03	ITEM CARTON CASE (KDC-W534UGY)	E8
211	1C		B07-3125-01	ESCUTCHEON	E7E8	260	1D	*	H30-0594-04	MAGIC TAPE	K2
211	1C		B07-3126-01	ESCUTCHEON	K2E3E4	262	2C		J19-7049-03	HOLDER	
214	3C	*	B10-4767-02	FRONT GLASS	K2	263	3C	*	J19-7112-02	HOLDER	
214	3C	*	B10-4768-02	FRONT GLASS	M2	264	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
214	3C	*	B10-4769-02	FRONT GLASS	E3E4	265	1C		J22-0258-04	MOUNTING HARDWARE (L)	
214	3C	*	B10-4813-02	FRONT GLASS	E5E6E7	266	1C		J22-0259-04	MOUNTING HARDWARE (R)	
214	3C	*	B10-4813-02	FRONT GLASS	E8	267	2C		K24-4282-04	PUSH KNOB (EJECT)	
216	3C		B19-2364-04	LIGHTING BOARD (REMOTE)	K2M2E3	268	3C	*	K24-4460-03	PUSH KNOB (AME)	M2E5E6
216	3C		B19-2364-04	LIGHTING BOARD (REMOTE)	E4	268	3C	*	K24-4460-03	PUSH KNOB (AME)	E7E8
218	3C		B43-1518-04	BADGE		268	3C	*	K24-4461-03	PUSH KNOB (AME)	K2E3E4
220	1C		D10-4589-04	LEVER		269	3C	*	K24-4464-03	PUSH KNOB (RELEASE)	
221	2C		D10-4865-03	LEVER (PUSH)		270	3C		K24-4462-03	PUSH KNOB (SRC)	
222	2C		D10-4866-03	LEVER (HOOK)		271	3C	*	K25-1784-02	PUSH KNOB (PRESET)	
223	2C		D10-4867-04	LEVER (LOCK)		272	3C		K28-0103-03	KEY TOP (VOL)	
224	2C		D10-4868-04	LEVER (DETECT)		273	3C	*	K28-0167-03	KNOB ASSY (VOL)	E3E4E5
225	2C		D10-4869-03	LEVER (EJECT)		273	3C	*	K28-0167-03	KNOB ASSY (VOL)	E6E7E8
226	2D		D10-4870-04	ARM ASSY		273	3C		K29-7200-03	KNOB ASSY (VOL)	K2M2
229	2C		D39-0255-05	DAMPER		276	3C		K28-0106-03	KEY TOP (FM/AM)	
232	2D		E29-2028-04	LEAD PLATE		277	3C	*	K28-0122-03	KNOB BASE (FM/AM)	
233	3C	*	E29-2067-03	CONDUCTIVE RUBBER		282	1C		N99-1757-05	SCREW SET	K2M2
235	2D		E30-6499-05	CORD WITH PINPLUG (PREOUT)	K2M2E3	283	1C	*	N99-1780-05	SCREW SET	
235	2D		E30-6499-05	CORD WITH PINPLUG (PREOUT)	E4	A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
238	2D	*	E30-6588-05	CORD WITH CONNECTOR (USB) (1m)		B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
△ DC1	1C		E30-6414-05	DC CORD	K2M2	C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
△ DC2	1C		E30-6413-05	DC CORD	E3E4E5	E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
△ DC2	1C		E30-6413-05	DC CORD	E6E7E8	F	2D		N84-2606-43	PAN HEAD TAPTITE SCREW	
FC1	2D	*	E39-0814-05	FLAT CABLE		L	3D		N86-2610-48	BINDING HEAD TAPTITE SCREW	

K2: KDC-MP532U **M2:** KDC-MP5033U **E3:** KDC-W5534U **E4:** KDC-W5534UY
E5: KDC-W534UA **E6:** KDC-W534UAY **E7:** KDC-W534UG **E8:** KDC-W534UGY

△ Indicates safety critical components.

PARTS LIST

KDC-MP5033U/MP532U/W534U/W5534U

Ref. No.	Add	New	Parts No.	Description	Destination
284	1C		T90-0523-05	ANTENNA ADAPTOR	E3E4E5
284	1C		T90-0523-05	ANTENNA ADAPTOR	E6E7E8
285	1D		W01-1661-05	CARRYING CASE	K2E3E4
285	1D		W01-1661-05	CARRYING CASE	E5E6E7
285	1D		W01-1661-05	CARRYING CASE	E8
DME1	1D	*	X92-5440-00	MECHANISM ASSY (DXM-6810W)	K2M2
DME1	1D	*	X92-5440-04	MECHANISM ASSY (DXM-6814W)	E3E4E5
DME1	1D	*	X92-5440-04	MECHANISM ASSY (DXM-6814W)	E6E7E8
SWITCH UNIT (X16-373x-xx)					
D1-3			B30-1567-05	LED (1608,RED)	K2E3E4
D1-3			B30-1567-05	LED (1608,RED)	E5E6
D4-6			B30-1533-05	LED (1608,PG)	M2E3E4
D4-6			B30-1533-05	LED (1608,PG)	E7E8
D7-9			B30-1567-05	LED (1608,RED)	K2E3E4
D7-9			B30-1567-05	LED (1608,RED)	E5E6
D10-12			B30-1533-05	LED (1608,PG)	M2E3E4
D10-12			B30-1533-05	LED (1608,PG)	E7E8
D13-15			B30-1567-05	LED (1608,RED)	K2E3E4
D13-15			B30-1567-05	LED (1608,RED)	E5E6
D16-18			B30-1533-05	LED (1608,PG)	M2E3E4
D16-18			B30-1533-05	LED (1608,PG)	E7E8
D19			B30-1567-05	LED (1608,RED)	K2M2E3
D19			B30-1567-05	LED (1608,RED)	E4E7E8
D19-23			B30-1567-05	LED (1608,RED)	E5E6
D20-23			B30-1533-05	LED (1608,PG)	E7E8
D20-23			B30-1729-05	LED (1608,BLUE)	K2M2E3
D20-23			B30-1729-05	LED (1608,BLUE)	E4
D25			B30-1567-05	LED (1608,RED)	K2E3E4
D25			B30-1567-05	LED (1608,RED)	E5E6
D26			B30-1533-05	LED (1608,PG)	M2E3E4
D26			B30-1533-05	LED (1608,PG)	E7E8
C8			CK73FB1A225K	CHIP C 2.2UF K	K2M2E3
C8			CK73FB1A225K	CHIP C 2.2UF K	E4
C10			CK73GB1H104K	CHIP C 0.10UF K	
C13-16			CK73GB1H103K	CHIP C 0.010UF K	K2M2E3
C13-16			CK73GB1H103K	CHIP C 0.010UF K	E4
C19,20			CK73GB1H103K	CHIP C 0.010UF K	
C27			CC73GCH1H471J	CHIP C 470PF J	
C28			CK73GB1H102K	CHIP C 1000PF K	
C29			CC73GCH1H471J	CHIP C 470PF J	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12,13			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3 -8			RK73EB2E101J	CHIP R 100 J 1/4W	
R9			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R15			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	K2M2E3
R20			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R51			RK73FB2B471J	CHIP R 470 J 1/8W	
R52-54			RK73EB2E681J	CHIP R 680 J 1/4W	K2M2E3
R52-54			RK73EB2E681J	CHIP R 680 J 1/4W	E4E7E8
R52-56			RK73EB2E681J	CHIP R 680 J 1/4W	E5E6
R55,56			RK73EB2E301J	CHIP R 300 J 1/4W	K2M2E3
R55,56			RK73EB2E301J	CHIP R 300 J 1/4W	E4
R55,56			RK73EB2E621J	CHIP R 620 J 1/4W	E7E8
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R59,60			RK73EB2E821J	CHIP R 820 J 1/4W	
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R66,67			RK73GB2A472J	CHIP R 4.7K J 1/10W	E3E4
R73			RK73PB2H330J	CHIP R 33 J 1/2W	
R74,75			RK73PB2H220J	CHIP R 22 J 1/2W	
R80			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R81			RK73GB2A223J	CHIP R 22K J 1/10W	
R101			RK73GB2A473J	CHIP R 47K J 1/10W	
R111,112			RK73GB2A104J	CHIP R 100K J 1/10W	E5E6E7
R111,112			RK73GB2A104J	CHIP R 100K J 1/10W	E8
R112			RK73GB2A104J	CHIP R 100K J 1/10W	K2M2E3
R112			RK73GB2A104J	CHIP R 100K J 1/10W	E4
W4			R92-1252-05	CHIP R 0 OHM J 1/16W	
W6			R92-1252-05	CHIP R 0 OHM J 1/16W	M2E7E8
W7,8			R92-1252-05	CHIP R 0 OHM J 1/16W	K2E5E6
W8			R92-1252-05	CHIP R 0 OHM J 1/16W	M2E3E4
W8			R92-1252-05	CHIP R 0 OHM J 1/16W	E7E8
S2			S70-0106-05	TACT SWITCH	
S10		*	S70-0939-05	TACT SWITCH	
S27		*	S70-0939-05	TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
D102			UDZS5.6B	ZENER DIODE	K2M2E3
D102			UDZS5.6B	ZENER DIODE	E4
ED1			3-BT-235INK	FLUORESCENT INDICATOR TUBE	
IC2			PNA4S22M02KW	ANALOGUE IC	K2M2E3
IC2			PNA4S22M02KW	ANALOGUE IC	E4
Q4			RT1P141U	TRANSISTOR	
Q5			2SC4617	TRANSISTOR	
Q10			2SC4617	TRANSISTOR	E3E4
Q12-14			2SA1774	TRANSISTOR	
Q15			2SC4617	TRANSISTOR	E3E4
Q20			DTC144EE	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-5830-00)					
C3			CK73GB1A105K	CHIP C 1.0UF K	
C5			CK73GB1A105K	CHIP C 1.0UF K	
C7			CK73GB0J225K	CHIP C 2.2UF K	
C8			CK73GB1A105K	CHIP C 1.0UF K	

K2: KDC-MP532U M2: KDC-MP5033U E3: KDC-W5534U E4: KDC-W5534UY
E5: KDC-W534UA E6: KDC-W534UAY E7: KDC-W534UG E8: KDC-W534UGY
(E: Europe K: North America M: Other Areas W: Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C12-14			CK73GB1H104K	CHIP C 0.10UF K	
C17,18			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C25,26			CK73GB1H104K	CHIP C 0.10UF K	
C28			CK73FB0J106K	CHIP C 10UF K	
C29			CK73GB1H104K	CHIP C 0.10UF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C33			CK73GB0J225K	CHIP C 2.2UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35,36			CK73GB1H104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1H104K	CHIP C 0.10UF K	
C40			CK73GB1A105K	CHIP C 1.0UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C44			CK73GB1A105K	CHIP C 1.0UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1H104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	
C52			CK73FB1A225K	CHIP C 2.2UF K	
C53			CK73GB0J225K	CHIP C 2.2UF K	
C54,55			CK73GB1H103K	CHIP C 0.010UF K	
C56,57			CC73GCH1H391J	CHIP C 390PF J	
C58			CK73GB1H472K	CHIP C 4700PF K	
C59-62			CK73GB1H102K	CHIP C 1000PF K	
C63			CK73GB1H152K	CHIP C 1500PF K	
C64,65			CK73GB1H104K	CHIP C 0.10UF K	
C66,67			CC73GCH1H100D	CHIP C 10PF D	
C69			CK73FB0J106K	CHIP C 10UF K	
C73			CK73GB1H104K	CHIP C 0.10UF K	
C76,77			CK73GB1H104K	CHIP C 0.10UF K	
C78			CC73GCH1H151J	CHIP C 150PF J	
C80			CC73GCH1H151J	CHIP C 150PF J	
C82			CC73GCH1H681J	CHIP C 680PF J	
C84			CC73GCH1H681J	CHIP C 680PF J	
C85			CK73GB1H104K	CHIP C 0.10UF K	
C86			CK73GB1A105K	CHIP C 1.0UF K	
C87			CK73GB0J475K	CHIP C 4.7UF K	
C88			CK73GB1H473K	CHIP C 0.047UF K	
C89			CK73GB1A105K	CHIP C 1.0UF K	
C91			CK73GB1H104K	CHIP C 0.10UF K	
C93-98			CK73GB1H104K	CHIP C 0.10UF K	
C99			CC73GCH1H060D	CHIP C 6.0PF D	
C100			CC73GCH1H020C	CHIP C 2.0PF C	
C101			CK73GB1H104K	CHIP C 0.10UF K	
C102			CK73GB1H102K	CHIP C 1000PF K	
C103			CK73GB1H103K	CHIP C 0.010UF K	
C305-308			CK73GB1H103K	CHIP C 0.010UF K	
C309			CK73GB1H222K	CHIP C 2200PF K	
C310			CK73GB1H103K	CHIP C 0.010UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C311,312			CC73GCH1H060D	CHIP C 6.0PF D	
C313			CK73GB1H103K	CHIP C 0.010UF K	
C315			CK73GB1H104K	CHIP C 0.10UF K	
C316			CK73GB1H103K	CHIP C 0.010UF K	
C317,318			CK73GB1H102K	CHIP C 1000PF K	
C319			CK73GB1A105K	CHIP C 1.0UF K	
C320			CC73GCH1H070D	CHIP C 7.0PF D	
CN1		*	E41-2630-05	FLAT CABLE CONNECTOR	
CN2			E41-2612-05	FLAT CABLE CONNECTOR	
L1		*	L92-0615-05	CHIP FERRITE	
X1		*	L77-2863-05	CRYSTAL RESONATOR (16.899M)	
X2		*	L78-1215-05	RESONATOR (11.500MHZ)	
X3		*	L77-2923-05	CRYSTAL RESONATOR (6.000MHZ)	
CP2			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP7			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP10			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP16			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP19			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP20-23		*	RK74HB1J153J	CHIP-COM 15K J 1/16W	
CP24,25			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP26		*	RK74GA1J100J	CHIP-COM 10 J 1/16W	
CP27-30			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP31			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP50			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP52			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP53			RK74GA1J473J	CHIP-COM 47K J 1/16W	
CP56,57			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP300			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP301		*	RK74GA1J680J	CHIP-COM 68 J 1/16W	
CP302,303			RK74HB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R2,3			RK73GB2A223J	CHIP R 22K J 1/10W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GH2A223D	CHIP R 22K D 1/10W	
R7			RK73GB2A223J	CHIP R 22K J 1/10W	
R8			RK73GH2A393D	CHIP R 39K D 1/10W	
R9			RK73GB2A223J	CHIP R 22K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11			RK73GB2A220J	CHIP R 22 J 1/10W	
R12			RK73GB2A223J	CHIP R 22K J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R15			RK73GB2A223J	CHIP R 22K J 1/10W	
R17			RK73GB2A221J	CHIP R 220 J 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R19			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R20			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R21,22			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A103J	CHIP R 10K J 1/10W	
R24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	

△ Indicates safety critical components.

K2: KDC-MP532U M2: KDC-MP5033U E3: KDC-W5534U E4: KDC-W5534UY
E5: KDC-W534UA E6: KDC-W534UAY E7: KDC-W534UG E8: KDC-W534UGY

38 (E: Europe K: North America M: Other Areas W: Without Europe)

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R40			RK73GB2A274J	CHIP R 270K J 1/10W	
R41			RK73GB2A103J	CHIP R 10K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R50			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R52			RK73GB2A163J	CHIP R 16K J 1/10W	
R53			RK73GB2A123J	CHIP R 12K J 1/10W	
R54			RK73GB2A333J	CHIP R 33K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A123J	CHIP R 12K J 1/10W	
R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73GB2A123J	CHIP R 12K J 1/10W	
R61			RK73GB2A183J	CHIP R 18K J 1/10W	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R63			RK73GB2A133J	CHIP R 13K J 1/10W	
R64			RK73GB2A151J	CHIP R 150 J 1/10W	
R67,68			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R69			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R71-73			RK73GB2A101J	CHIP R 100 J 1/10W	
R109			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R110			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R112			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R115			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R116			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R118,119			RK73GH2A100D	CHIP R 10 D 1/10W	
R121			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R133			RK73GB2A681J	CHIP R 680 J 1/10W	
R138			RK73GB2A101J	CHIP R 100 J 1/10W	
R142			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R144			RK73GB2A223J	CHIP R 22K J 1/10W	
R148			RK73GB2A103J	CHIP R 10K J 1/10W	
R151			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R152			RK73GB2A221J	CHIP R 220 J 1/10W	
R153			RK73GB2A100J	CHIP R 10 J 1/10W	
R154,155			RK73GB2A330J	CHIP R 33 J 1/10W	
R300,301			RK73GB2A680J	CHIP R 68 J 1/10W	
R302			RK73GB2A101J	CHIP R 100 J 1/10W	
R304			RK73GB2A101J	CHIP R 100 J 1/10W	
R306,307			RK73GB2A270J	CHIP R 27 J 1/10W	
R308-310			RK73GB2A153J	CHIP R 15K J 1/10W	
R311-316			RK73GB2A100J	CHIP R 10 J 1/10W	
R320-323			RK73GB2A101J	CHIP R 100 J 1/10W	
R336			RK73GB2A101J	CHIP R 100 J 1/10W	
R337			RK73GB2A153J	CHIP R 15K J 1/10W	
R339			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R345			RK73GB2A103J	CHIP R 10K J 1/10W	
R346			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R348			RK73GB2A223J	CHIP R 22K J 1/10W	
R351			RK73GB2A103J	CHIP R 10K J 1/10W	
R353			RK73GB2A473J	CHIP R 47K J 1/10W	
R358,359			RK73GB2A473J	CHIP R 47K J 1/10W	
R361			RK73GB2A223J	CHIP R 22K J 1/10W	
R363			RK73GB2A223J	CHIP R 22K J 1/10W	
R366			RK73GB2A101J	CHIP R 100 J 1/10W	
R368			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R369			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R370			RK73GB2A101J	CHIP R 100 J 1/10W	
R371			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R372,373			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
R374			RK73GB2A473J	CHIP R 47K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DA204U	DIODE	
D3			DAN202U	DIODE	
D9			DA204U	DIODE	
IC1	*		M30620FCPPG	MICROCONTROLLER IC	
IC2			UPD63712GC	MOS-IC	
IC4			BA5824FP	ANALOGUE IC	
IC5	*		BD33KA5WFP-E2	ANALOGUE IC	
IC13	*		NJM2100V-ZB	ANALOGUE IC	
IC14			TAR5S50-F	ANALOGUE IC	
IC15			CS7410-IQZ	MOS-IC	
IC16	*		IC42S164007TIG	DRAM IC	
IC17	*		29LV800CBTI9V1	ROM IC	
IC18			PCM1754DB	MOS-IC	
IC19	*		R1114N331B-TR	ANALOGUE IC	
IC20	*		S-1132B18U5T1G	ANALOGUE IC	
IC21	*		BD33KA5WFP-E2	ANALOGUE IC	
IC25	*		TDUHC1240F0C00	MOS-IC	
IC26	*		TC74LCX00FT-F	MOS-IC	
IC28	*		TC7WH125FK-F	MOS-IC	
Q3			UMD9N	TRANSISTOR	
Q6			UMD12N	TRANSISTOR	
Q7			DTC124EE	DIGITAL TRANSISTOR	
Q8			2SB0970	TRANSISTOR	
Q9			DTC114YE	DIGITAL TRANSISTOR	
Q10			DTC114YUA	DIGITAL TRANSISTOR	
Q17			DTA143XUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-412x-xx)					
D111			B30-1710-05	LED (RED)	
C1			C90-5683-05	ELECTRO 3300UF 16WV	
C2			CD04AS1C220M	ELECTRO 22UF 16WV	
C3			CD04AT1E101M	ELECTRO 100UF 25WV	
C4			CD04AS1V100M	ELECTRO 10UF 35WV	K2E3E4
C4			CD04AS1V100M	ELECTRO 10UF 35WV	E5E6E7
C4			CD04AS1V100M	ELECTRO 10UF 35WV	E8

K2: KDC-MP532U M2: KDC-MP5033U E3: KDC-W5534U E4: KDC-W5534UY
E5: KDC-W534UA E6: KDC-W534UAY E7: KDC-W534UG E8: KDC-W534UGY
(E: Europe K: North America M: Other Areas W: Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-412x-xx)

Ref. No.	A	N	Parts No.	Description	Desti- nation	Ref. No.	A	N	Parts No.	Description	Desti- nation
	d	e					d	e			
C4,5			CD04AS1V100M	ELECTRO 10UF 35WV	M2	C503			CK73GB1H104K	CHIP C 0.10UF K	
C6-8			CD04AT1C100M	ELECTRO 10UF 16WV		C504			CK73GB1H103K	CHIP C 0.010UF K	
C9			CD04AS1V100M	ELECTRO 10UF 35WV		C505			CD04AT1V4R7M	ELECTRO 4.7UF 35WV	
C10			CD04BF1C221M	ELECTRO 220UF 16WV		C506			CK73GB1H104K	CHIP C 0.10UF K	
C11			CD04AT1C100M	ELECTRO 10UF 16WV		C507			CD04AT1A330M	ELECTRO 33UF 10WV	
C12			CD04BA1C220M	ELECTRO 22UF 16WV		C508			CD04AT1C220M	ELECTRO 22UF 16WV	
C13			CD04BF1E101M	ELECTRO 100UF 25WV		C509			CC73GCH1H680J	CHIP C 68PF J	
C14			CD04BK1A221M	ELECTRO 220UF 10WV		C510			CC73GCH1H101J	CHIP C 100PF J	
C16			CK73GB1H104K	CHIP C 0.10UF K		C511			CK73GB1H103K	CHIP C 0.010UF K	
C17			CD04AT1C470M	ELECTRO 47UF 16WV		C512			CD04AT1V4R7M	ELECTRO 4.7UF 35WV	
C51			CK73GB1H102K	CHIP C 1000PF K		C513,514			CK73GB1H103K	CHIP C 0.010UF K	
C52,53			CK73GB1H104K	CHIP C 0.10UF K	M2	C515			CK73FB1C105K	CHIP C 1.0UF K	
C53			CK73GB1H104K	CHIP C 0.10UF K	K2E3E4	C521			CK73GB1H104K	CHIP C 0.10UF K	
C53			CK73GB1H104K	CHIP C 0.10UF K	E5E6E7	C522			CC73GCH1H330J	CHIP C 33PF J	
C53			CK73GB1H104K	CHIP C 0.10UF K	E8	C523			CC73GCH1H270J	CHIP C 27PF J	
C54			CK73GB1H223K	CHIP C 0.022UF K		C524			CC73GCH1H101J	CHIP C 100PF J	
C55			CK73FB1C105K	CHIP C 1.0UF K		C525			CK73GB1H103K	CHIP C 0.010UF K	
C56-58			CK73GB1H103K	CHIP C 0.010UF K		C527			CC73GCH1H050C	CHIP C 5.0PF C	
C80			CK73EB1E225K	CHIP C 2.2UF K		C528			CK73GB1H102K	CHIP C 1000PF K	
C101			CD04AS0J470M	ELECTRO 47UF 6.3WV		C529			CC73GCH1H060D	CHIP C 6.0PF D	
C102			CK73GB1A105K	CHIP C 1.0UF K		C531			CC73GCH1H040C	CHIP C 4.0PF C	
C103			CK73GB1H104K	CHIP C 0.10UF K		C532			CK73FB1C105K	CHIP C 1.0UF K	
C105,106			CC73GCH1H220J	CHIP C 22PF J		C533			CD04AT1A330M	ELECTRO 33UF 10WV	
C107			CK73GB1H102K	CHIP C 1000PF K		C534,535			CK73GB1H103K	CHIP C 0.010UF K	
C108-113			CK73GB1H103K	CHIP C 0.010UF K		C536			CC73GCH1H020C	CHIP C 2.0PF C	
C114,115			CC73GCH1H221J	CHIP C 220PF J		C537			CC73GCH1H040C	CHIP C 4.0PF C	
C201-204			C90-5684-05	NP-ELECT 0.22UF 50WV		C538,539			CC73GCH1H080D	CHIP C 8.0PF D	
C205,206			CD04AS1C101M	ELECTRO 100UF 16WV		C541			CC73GCH1H040C	CHIP C 4.0PF C	
C207			CD04AS1V100M	ELECTRO 10UF 35WV		C542			CC73GCH1H220J	CHIP C 22PF J	
C208			CD04AS1H010M	ELECTRO 1UF 50WV		C543			CC73GCH1H680J	CHIP C 68PF J	
C209		*	C90-6802-05	ELECTRO 1UF 50WV		C544			CC73GCH1H150J	CHIP C 15PF J	
C210			CD04AS1H010M	ELECTRO 1UF 50WV		C545			CK73GB1H682K	CHIP C 6800PF K	
C251			CD04AT1C100M	ELECTRO 10UF 16WV		C546			CK73GB1H103K	CHIP C 0.010UF K	
C252			CD04AS1V100M	ELECTRO 10UF 35WV		C547			CD04AT1C100M	ELECTRO 10UF 16WV	
C253,254			CC73GCH1H681J	CHIP C 680PF J		C548			CD04AS1C101M	ELECTRO 100UF 16WV	
C260-263			CC73GCH1H101J	CHIP C 100PF J		C549			CK73GB1H102K	CHIP C 1000PF K	
C300			CD04AT1A101M	ELECTRO 100UF 10WV	K2M2E3	C550			CK73GB1H333K	CHIP C 0.033UF K	
C300			CD04AT1A101M	ELECTRO 100UF 10WV	E4	C551			CK73GB1H223K	CHIP C 0.022UF K	
C301,302			CD04AT1H010M	ELECTRO 1UF 50WV	K2M2E3	C552			CK73GB1H222K	CHIP C 2200PF K	
C301,302			CD04AT1H010M	ELECTRO 1UF 50WV	E4	C553,554			CK73GB1H103K	CHIP C 0.010UF K	
C303,304			CD04AS1HR47M	ELECTRO 0.47UF 50WV		C555			CK73FB1C105K	CHIP C 1.0UF K	
C311			CC73GCH1H271J	CHIP C 270PF J	K2M2E3	C556			CK73GB1H473K	CHIP C 0.047UF K	E3E4E5
C311			CC73GCH1H271J	CHIP C 270PF J	E4	C556			CK73GB1H473K	CHIP C 0.047UF K	E6E7E8
C400			CD04AS1V100M	ELECTRO 10UF 35WV	E3E4E5	C556,557			CK73GB1H104K	CHIP C 0.10UF K	K2M2
C400			CD04AS1V100M	ELECTRO 10UF 35WV	E6E7E8	C557			CK73GB1H104K	CHIP C 0.10UF K	E3E4E5
C401			CK73GB1H103K	CHIP C 0.010UF K	E3E4E5	C557			CK73GB1H104K	CHIP C 0.10UF K	E6E7E8
C401			CK73GB1H103K	CHIP C 0.010UF K	E6E7E8	C558			CD04AT1H010M	ELECTRO 1UF 50WV	
C402			CD04AS1V100M	ELECTRO 10UF 35WV	E3E4E5	C559			CK73GB1H102K	CHIP C 1000PF K	
C402			CD04AS1V100M	ELECTRO 10UF 35WV	E6E7E8	C560			CD04AS1V100M	ELECTRO 10UF 35WV	
C403			CC73GCH1H331J	CHIP C 330PF J	E3E4E5	C561			CC73GCH1H101J	CHIP C 100PF J	
C403			CC73GCH1H331J	CHIP C 330PF J	E6E7E8	C563			CD04AS1C470M	ELECTRO 47UF 16WV	
C404,405			CC73GCH1H100D	CHIP C 10PF D	E3E4E5	C565			CK73GB1A474K	CHIP C 0.47UF K	
C404,405			CC73GCH1H100D	CHIP C 10PF D	E6E7E8	C566			CD04AT1HR47M	ELECTRO 0.47UF 50WV	
C501			CC73GCH1H100D	CHIP C 10PF D		C567			CC73GCH1H221J	CHIP C 220PF J	E3E4E5
C502			CK73GB1H152K	CHIP C 1500PF K		C567			CC73GCH1H221J	CHIP C 220PF J	E6E7E8

K2: KDC-MP532U M2: KDC-MP5033U E3: KDC-W5534U E4: KDC-W5534UY
E5: KDC-W534UA E6: KDC-W534UAY E7: KDC-W534UG E8: KDC-W534UGY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-412x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C567			CC73GCH1H821J	CHIP C 820PF J	K2M2	X101			L78-0872-05	RESONATOR (12MHZ)	
C571			CC73GCH1H020C	CHIP C 2.0PF C		X102			L77-2880-05	CRYSTAL RESONATOR (32.768KHZ)	
C572			CK73GB1H104K	CHIP C 0.10UF K		X400			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	E3E4E5
C573			CK73GB1H103K	CHIP C 0.010UF K		X400			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	E6E7E8
C574			CK73GB1H104K	CHIP C 0.10UF K		X501			L77-2077-05	CRYSTAL RESONATOR (10.25MHZ)	
C575			CD04AT1V4R7M	ELECTRO 4.7UF 35WV		G	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
C576			CK73GB1H103K	CHIP C 0.010UF K		J	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
C577			CK73GB1H104K	CHIP C 0.10UF K		K	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
C578			CK73GB1H103K	CHIP C 0.010UF K	K2M2	M	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
C578			CK73GB1H821K	CHIP C 820PF K	E3E4E5						
C578			CK73GB1H821K	CHIP C 820PF K	E6E7E8	R1			RK73FB2B102J	CHIP R 1.0K J 1/8W	
C579			CK73GB1A474K	CHIP C 0.47UF K		R2			RK73FB2B681J	CHIP R 680 J 1/8W	
C580			CK73GB1H104K	CHIP C 0.10UF K	K2M2	R3			RK73GB2A272J	CHIP R 2.7K J 1/10W	
C581			CK73GB1H104K	CHIP C 0.10UF K	E3E4E5	R4			RK73GB2A473J	CHIP R 47K J 1/10W	
C581			CK73GB1H104K	CHIP C 0.10UF K	E6E7E8	R5			RK73GB2A562J	CHIP R 5.6K J 1/10W	
C582			CK73GB1H103K	CHIP C 0.010UF K	E3E4E5	R7			RK73GB2A470J	CHIP R 47 J 1/10W	
C582			CK73GB1H103K	CHIP C 0.010UF K	E6E7E8	R9,10			RK73GB2A153J	CHIP R 15K J 1/10W	
C583			CC73GCH1H100D	CHIP C 10PF D		R11,12			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C584			CK73FB1A225K	CHIP C 2.2UF K		R31-38			RK73PB2H2R7J	CHIP R 2.7 J 1/2W	
						R51			RK73FB2B683J	CHIP R 68K J 1/8W	
CN1		*	E41-2358-05	FLAT CABLE CONNECTOR		R52			RK73GB2A393J	CHIP R 39K J 1/10W	
CN2			E41-0944-05	PIN ASSY		R53			RK73GB2A203J	CHIP R 20K J 1/10W	
J1			E58-0991-05	RECTANGULAR RECEPTACLE		R54			RK73GB2A104J	CHIP R 100K J 1/10W	
J2			E04-0326-05	RF COAXIAL CABLE RECEPTACLE		R55-58			RK73GB2A103J	CHIP R 10K J 1/10W	
J4			E56-0855-05	CYLINDRICAL RECEPTACLE	K2M2E3	R59,60			RD14BB2C472J	RD 4.7K J 1/6W	
J4			E56-0855-05	CYLINDRICAL RECEPTACLE	E4	R61			RK73GB2A103J	CHIP R 10K J 1/10W	
J5			E58-0992-05	RECTANGULAR RECEPTACLE		R62			RK73GB2A104J	CHIP R 100K J 1/10W	
J6			E63-0898-05	PIN JACK		R63			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
WH1			E39-0717-05	WIRING HARNESS	K2M2E3	R64			RD14BB2C333J	RD 33K J 1/6W	
WH1			E39-0717-05	WIRING HARNESS	E4	R65			RK73GB2A103J	CHIP R 10K J 1/10W	
WH2		*	E30-6589-05	WIRING HARNESS	E3E4E5	R66			RK73GB2A223J	CHIP R 22K J 1/10W	
WH2		*	E30-6589-05	WIRING HARNESS	E6E7E8	R67			RK73GB2A103J	CHIP R 10K J 1/10W	
CF51			L72-0805-05	CERAMIC FILTER	E3E4E5	R68			RK73GB2A223J	CHIP R 22K J 1/10W	
CF51			L72-0805-05	CERAMIC FILTER	E6E7E8	R69			RK73GB2A473J	CHIP R 47K J 1/10W	
CF51-53			L72-0805-05	CERAMIC FILTER	K2M2	R70			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CF52,53			L72-0806-05	CERAMIC FILTER	E3E4E5	R71			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CF52,53			L72-0806-05	CERAMIC FILTER	E6E7E8	R80			RK73GB2A473J	CHIP R 47K J 1/10W	
CF54			L72-0804-05	CERAMIC FILTER		R81			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
L1		*	L33-2319-05	CHOKE COIL ASSY		R100			RK73GB2A473J	CHIP R 47K J 1/10W	
L2		*	L33-2335-05	CHOKE COIL		R101-104			RK73GB2A103J	CHIP R 10K J 1/10W	
L3		*	L92-0616-05	CHIP FERRITE		R105			RK73GB2A225J	CHIP R 2.2M J 1/10W	
L101			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)		R106,107			RK73GB2A103J	CHIP R 10K J 1/10W	
L400			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)	E3E4E5	R108,109			RK73GB2A473J	CHIP R 47K J 1/10W	
L400			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)	E6E7E8	R110			RK73GB2A103J	CHIP R 10K J 1/10W	
L500			L33-2260-05	CHOKE COIL		R111,112			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L501			L40-6891-58	SMALL FIXED INDUCTOR (6.8UH)		R113			RK73GB2A101J	CHIP R 100 J 1/10W	
L502			L40-3301-58	SMALL FIXED INDUCTOR (33UH)		R114			RK73GB2A473J	CHIP R 47K J 1/10W	
L503			L40-1021-56	SMALL FIXED INDUCTOR (1MH)		R115,116			RK73GB2A471J	CHIP R 470 J 1/10W	
L504			L40-1011-58	SMALL FIXED INDUCTOR (100UH)		R117,118			RK73GB2A473J	CHIP R 47K J 1/10W	
L505			L31-0979-05	FM-RF COIL (ANT)		R119-121			RK73GB2A104J	CHIP R 100K J 1/10W	
L506			L31-0981-05	FM-RF COIL (RF)		R122			RK73GB2A471J	CHIP R 470 J 1/10W	
L507			L32-0945-05	FM OSCILLATING COIL (VCO)		R123			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L508			L30-0779-05	FM IFT		R124			RK73GB2A473J	CHIP R 47K J 1/10W	
L509			L30-0781-05	AM IFT		R125			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L510-515			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)		R126			RK73GB2A223J	CHIP R 22K J 1/10W	

K2: KDC-MP532U **M2:** KDC-MP5033U **E3:** KDC-W5534U **E4:** KDC-W5534UY
E5: KDC-W534UA **E6:** KDC-W534UAY **E7:** KDC-W534UG **E8:** KDC-W534UGY
(E: Europe **K:** North America **M:** Other Areas **W:** Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-412x-xx)

Ref. No.	A	N	Parts No.	Description	Desti- nation	Ref. No.	A	N	Parts No.	Description	Desti- nation
	d	e					d	e			
R127-129			RK73GB2A471J	CHIP R 470 J 1/10W	E3E4E5	R216			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R127-129			RK73GB2A471J	CHIP R 470 J 1/10W	E6E7E8	R217			RK73GB2A154J	CHIP R 150K J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W		R218			RK73GB2A473J	CHIP R 47K J 1/10W	
R133			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3E4	R219			RK73GB2A431J	CHIP R 430 J 1/10W	
R133			RK73GB2A473J	CHIP R 47K J 1/10W	E5E6E7	R220			RK73GB2A100J	CHIP R 10 J 1/10W	
R133			RK73GB2A473J	CHIP R 47K J 1/10W	E8	R221			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R133,134			RK73GB2A473J	CHIP R 47K J 1/10W	M2	R222			RK73GB2A154J	CHIP R 150K J 1/10W	
R135			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R223			RK73GB2A331J	CHIP R 330 J 1/10W	
R135,136			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4E5	R224			RK73GB2A123J	CHIP R 12K J 1/10W	
R135,136			RK73GB2A473J	CHIP R 47K J 1/10W	E6E7E8	R251,252			RK73GB2A331J	CHIP R 330 J 1/10W	
R137			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R253,254			RD14BB2C223J	RD 22K J 1/6W	
R137,138			RK73GB2A473J	CHIP R 47K J 1/10W	M2	R255,256			RD14BB2C181J	RD 180 J 1/6W	
R138			RK73GB2A473J	CHIP R 47K J 1/10W	E5E6E7	R300			RD14BB2C4R7J	RD 4.7 J 1/6W	K2M2E3
R138			RK73GB2A473J	CHIP R 47K J 1/10W	E8	R300			RD14BB2C4R7J	RD 4.7 J 1/6W	E4
R139			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3E4	R301,302			RD14BB2C100J	RD 10 J 1/6W	K2M2E3
R140,141			RK73GB2A222J	CHIP R 2.2K J 1/10W		R301,302			RD14BB2C100J	RD 10 J 1/6W	E4
R142			RK73GB2A123J	CHIP R 12K J 1/10W		R303			RK73EB2E101J	CHIP R 100 J 1/4W	K2M2E3
R143			RK73GB2A333J	CHIP R 33K J 1/10W		R303			RK73EB2E101J	CHIP R 100 J 1/4W	E4
R144			RK73GB2A103J	CHIP R 10K J 1/10W		R304-308			RK73EB2E472J	CHIP R 4.7K J 1/4W	K2M2E3
R145			RK73GB2A473J	CHIP R 47K J 1/10W		R304-308			RK73EB2E472J	CHIP R 4.7K J 1/4W	E4
R146,147			RK73GB2A471J	CHIP R 470 J 1/10W		R309,310			RK73EB2E101J	CHIP R 100 J 1/4W	K2M2E3
R150			RK73GB2A222J	CHIP R 2.2K J 1/10W		R309,310			RK73EB2E101J	CHIP R 100 J 1/4W	E4
R151			RK73GB2A101J	CHIP R 100 J 1/10W		R311			RK73GB2A473J	CHIP R 47K J 1/10W	K2M2E3
R152			RK73GB2A222J	CHIP R 2.2K J 1/10W		R311			RK73GB2A473J	CHIP R 47K J 1/10W	E4
R154-156			RK73GB2A102J	CHIP R 1.0K J 1/10W		R401			RK73GB2A102J	CHIP R 1.0K J 1/10W	E3E4E5
R157,158			RK73GB2A471J	CHIP R 470 J 1/10W		R401			RK73GB2A102J	CHIP R 1.0K J 1/10W	E6E7E8
R159,160			RK73GB2A222J	CHIP R 2.2K J 1/10W		R402			RK73GB2A472J	CHIP R 4.7K J 1/10W	E3E4E5
R161			RK73GB2A104J	CHIP R 100K J 1/10W		R402			RK73GB2A472J	CHIP R 4.7K J 1/10W	E6E7E8
R162,163			RK73GB2A472J	CHIP R 4.7K J 1/10W		R405			RK73GB2A472J	CHIP R 4.7K J 1/10W	E3E4E5
R164			RK73GB2A471J	CHIP R 470 J 1/10W		R405			RK73GB2A472J	CHIP R 4.7K J 1/10W	E6E7E8
R165			RK73GB2A104J	CHIP R 100K J 1/10W		R406-408			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4E5
R166			RK73GB2A471J	CHIP R 470 J 1/10W		R406-408			RK73GB2A222J	CHIP R 2.2K J 1/10W	E6E7E8
R167			RK73GB2A104J	CHIP R 100K J 1/10W		R501			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R168			RK73GB2A471J	CHIP R 470 J 1/10W		R502			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R169			RK73GB2A104J	CHIP R 100K J 1/10W		R503			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R170			RK73GB2A472J	CHIP R 4.7K J 1/10W		R504			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R171			RK73EB2E101J	CHIP R 100 J 1/4W		R505			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R172			RK73EB2E102J	CHIP R 1.0K J 1/4W		R506			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R173-177			RK73EB2E101J	CHIP R 100 J 1/4W		R521-524			RK73GB2A104J	CHIP R 100K J 1/10W	
R178			RK73EB2E102J	CHIP R 1.0K J 1/4W		R525			RK73GB2A331J	CHIP R 330 J 1/10W	E3E4E5
R179			RK73EB2E101J	CHIP R 100 J 1/4W		R525			RK73GB2A331J	CHIP R 330 J 1/10W	E6E7E8
R180			RK73EB2E102J	CHIP R 1.0K J 1/4W		R525			RK73GB2A821J	CHIP R 820 J 1/10W	K2M2
R181,182			RK73GB2A474J	CHIP R 470K J 1/10W		R526			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R183			RK73GB2A102J	CHIP R 1.0K J 1/10W		R527			RK73GB2A104J	CHIP R 100K J 1/10W	
R184			RK73GB2A241J	CHIP R 240 J 1/10W		R528			RD14BB2C104J	RD 100K J 1/6W	
R185			RK73GB2A474J	CHIP R 470K J 1/10W		R541			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R186			RK73GB2A471J	CHIP R 470 J 1/10W		R542			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R187,188			RK73GB2A102J	CHIP R 1.0K J 1/10W		R543			RK73GB2A220J	CHIP R 22 J 1/10W	
R189			RK73GB2A474J	CHIP R 470K J 1/10W		R544			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R190			RK73EB2E102J	CHIP R 1.0K J 1/4W	E3E4E5	R545			RK73GB2A333J	CHIP R 33K J 1/10W	
R190			RK73EB2E102J	CHIP R 1.0K J 1/4W	E6E7E8	R546			RK73GB2A104J	CHIP R 100K J 1/10W	
R201-211			RK73GB2A104J	CHIP R 100K J 1/10W		R547,548			RK73GB2A471J	CHIP R 470 J 1/10W	
R212			RK73GB2A223J	CHIP R 22K J 1/10W		R549			RK73GB2A473J	CHIP R 47K J 1/10W	
R213			RK73GB2A153J	CHIP R 15K J 1/10W		R561			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R214,215			RK73GB2A334J	CHIP R 330K J 1/10W		R581			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K2: KDC-MP532U **M2:** KDC-MP5033U **E3:** KDC-W5534U **E4:** KDC-W5534UY
E5: KDC-W534UA **E6:** KDC-W534UAY **E7:** KDC-W534UG **E8:** KDC-W534UGY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-412x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R582			RD14BB2C1R0J	RD 1.0 J 1/6W		IC1			BA4911-V4	ANALOGUE IC	
W50			R92-1252-05	CHIP R 0 OHM J 1/16W	E3E4E5	IC2	*		SI-8050RF3NF	ANALOGUE IC	
W50			R92-1252-05	CHIP R 0 OHM J 1/16W	E6E7E8	IC3	*		MIC2026-1YM	MOS-IC	
W210			R92-1252-05	CHIP R 0 OHM J 1/16W		IC10			E-TDA7513T	ANALOGUE IC	
W402			R92-1252-05	CHIP R 0 OHM J 1/16W	E3E4E5	IC101	*		30302MEPA22GP	MICROCONTROLLER IC	
W402			R92-1252-05	CHIP R 0 OHM J 1/16W	E6E7E8	IC102			S-80836CNNB-J	MOS-IC	
W415			R92-2053-05	CHIP R 0 OHM J 1/8W		IC103			BR24L04FV-W	ROM IC	
W500			R92-1252-05	CHIP R 0 OHM J 1/16W		IC201			TB2903HQ	ANALOGUE IC	K2M2E3
W507			R92-1252-05	CHIP R 0 OHM J 1/16W		IC201			TB2903HQ	ANALOGUE IC	E4
W508			R92-2053-05	CHIP R 0 OHM J 1/8W		IC201			TB2904HQ	ANALOGUE IC	E5E6E7
W509			R92-1252-05	CHIP R 0 OHM J 1/16W		IC201			TB2904HQ	ANALOGUE IC	E8
W510			R92-2053-05	CHIP R 0 OHM J 1/8W		IC400			E-TDA7479AD	ANALOGUE IC	E3E4E5
W511			R92-1252-05	CHIP R 0 OHM J 1/16W		IC400			E-TDA7479AD	ANALOGUE IC	E6E7E8
W521			R92-1252-05	CHIP R 0 OHM J 1/16W		Q1			2SB1565	TRANSISTOR	
W523,524			R92-1252-05	CHIP R 0 OHM J 1/16W		Q2			2SC4155A (Q,R,S)	TRANSISTOR	
W533			R92-2053-05	CHIP R 0 OHM J 1/8W		Q3			UMC2N	TRANSISTOR	
W534			R92-1252-05	CHIP R 0 OHM J 1/16W		Q4			2SB1243	TRANSISTOR	
W535			R92-2053-05	CHIP R 0 OHM J 1/8W		Q5			2SC4155A (Q,R,S)	TRANSISTOR	
W537			R92-1252-05	CHIP R 0 OHM J 1/16W		Q6			UMC2N	TRANSISTOR	
W601-603			R92-1252-05	CHIP R 0 OHM J 1/16W		Q7			2SA1036K	TRANSISTOR	
S101			S74-0822-05	MICRO SWITCH		Q8			UMC2N	TRANSISTOR	
S102			S70-0931-05	TACT SWITCH		Q9			2SB1243	TRANSISTOR	
D1			S2V60*A	DIODE		Q10			2SC4155A (Q,R,S)	TRANSISTOR	
D2			02DZ8.2F-Y	ZENER DIODE		Q11			RT1N441M	TRANSISTOR	
D3			02DZ12F-Y	ZENER DIODE		Q12			2SA1577	TRANSISTOR	
D4			BAV70W	DIODE		Q13			DTC123JUA	DIGITAL TRANSISTOR	
D5	*		RB081L-20	DIODE		Q51,52			2SC4155A (Q,R,S)	TRANSISTOR	
D6			02DZ6.8F-Y	ZENER DIODE		Q53			RT1N441M	TRANSISTOR	
D8			02DZ16F-Y	ZENER DIODE		Q54			2SC4155A (Q,R,S)	TRANSISTOR	
D9,10			IMSA-6802-E	SURGE ABSORBER		Q101			RT1P241M	TRANSISTOR	
D51,52			02DZ6.8F-Y	ZENER DIODE		Q102			2SC4155A (Q,R,S)	TRANSISTOR	
D53			D1F60-5063	DIODE	K2	Q103,104			RT1N441M	TRANSISTOR	
D53-56			D1F60-5063	DIODE	M2E3E4	Q105			RT1P241M	TRANSISTOR	
D53-56			D1F60-5063	DIODE	E5E6E7	Q201,202			2SA1603A	TRANSISTOR	
D55			D1F60-5063	DIODE	E8	Q203			2SC4155A (Q,R,S)	TRANSISTOR	
D57			02DZ6.8F-Y	ZENER DIODE	K2	Q204			DTC114YUA	DIGITAL TRANSISTOR	
D58			02DZ4.7F-Y	ZENER DIODE		Q251,252			RT1N430M	TRANSISTOR	
D102			1SS355	DIODE		Q400			2SC4155A (Q,R,S)	TRANSISTOR	E3E4E5
D103			02DZ6.2F-Y	ZENER DIODE		Q400			2SC4155A (Q,R,S)	TRANSISTOR	E6E7E8
D112-114			1SS355	DIODE		Q501			HN3G01J (BL)-F	TRANSISTOR	
D201			02DZ4.7F-Y	ZENER DIODE		Q502			3SK126-F	DUAL FET	
D202			1SS355	DIODE		Q503			UMG4N	TRANSISTOR	E3E4E5
D300			02DZ6.2F-Y	ZENER DIODE		Q503			UMG4N	TRANSISTOR	E6E7E8
D300			02DZ6.2F-Y	ZENER DIODE	K2M2E3	Q504			UMA1N	TRANSISTOR	E3E4E5
D301,302			02DZ6.8F-Y	ZENER DIODE	E4	Q504			UMA1N	TRANSISTOR	E6E7E8
D301,302			02DZ6.8F-Y	ZENER DIODE	K2M2E3	TH1			PRF18BE471QS2	POSITIVE RESISTOR	
D301,302			02DZ6.8F-Y	ZENER DIODE	E4	DAUGHTER UNIT (X89-2902-70)					
D303-310			02DZ6.2F-Y	ZENER DIODE	K2M2E3	C221,222			CD04AS1V100M	ELECTRO 10UF 35WV	K2M2E3
D303-310			02DZ6.2F-Y	ZENER DIODE	E4	C221,222			CD04AS1V100M	ELECTRO 10UF 35WV	E4
D501			IMSA-6802-E	SURGE ABSORBER		C223			CK73GB1H102K	CHIP C 1000PF K	K2M2E3
D502,503			RN739F	DIODE		C223			CK73GB1H102K	CHIP C 1000PF K	E4
D504-506			KV1720STL-G	VARIABLE CAPACITANCE DIODE		CN90			E41-0956-05	PIN ASSY	K2M2E3
D508,509			02DZ6.8F-Y	ZENER DIODE		CN90			E41-0956-05	PIN ASSY	E4
D510			1SS355	DIODE		CN91			E41-0930-05	PIN ASSY	K2M2E3

K2: KDC-MP532U **M2:** KDC-MP5033U **E3:** KDC-W5534U **E4:** KDC-W5534UY
E5: KDC-W534UA **E6:** KDC-W534UAY **E7:** KDC-W534UG **E8:** KDC-W534UGY
(E: Europe **K:** North America **M:** Other Areas **W:** Without Europe)

△ Indicates safety critical components.

PARTS LIST

DAUGHTER UNIT (X89-2902-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CN91			E41-0930-05	PIN ASSY	E4
R221,222			RK73GB2A271J	CHIP R 270 J 1/10W	K2M2E3
R221,222			RK73GB2A271J	CHIP R 270 J 1/10W	E4
R225,226			RK73GB2A303J	CHIP R 30K J 1/10W	K2M2E3
R225,226			RK73GB2A303J	CHIP R 30K J 1/10W	E4
R229,230			RD14BB2C101J	RD 100 J 1/6W	K2M2E3
R229,230			RD14BB2C101J	RD 100 J 1/6W	E4
R231			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	K2M2E3
R231			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	E4
Q221,222			DTC143TUA	DIGITAL TRANSISTOR	K2M2E3
Q221,222			DTC143TUA	DIGITAL TRANSISTOR	E4
Q225			DTA124EUA	DIGITAL TRANSISTOR	K2M2E3
Q225			DTA124EUA	DIGITAL TRANSISTOR	E4
MECHANISM ASSY (X92-5440-00: K2/M2, X92-5440-04: E3/E4/E5/E6/E7/E8)					
2	1B		A10-4827-32	CHASSIS	
5	2B		D10-4576-93	ARM ASSY	
8	2A		D10-4787-63	LEVER ASSY	E3E4E5
8	2A		D10-4787-63	LEVER ASSY	E6E7E8
8	2A	*	D10-4901-13	LEVER ASSY	K2M2
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2172-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	K2M2
37	1B		D39-0260-05	DAMPER	E3E4E5
37	1B		D39-0260-05	DAMPER	E6E7E8
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-24	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
46	3B		F09-1804-04	SHEET	E3E4E5
46	3B		F09-1804-04	SHEET	E6E7E8
47	3A	*	F09-2824-14	SHEET	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J86-0027-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-4472-25	MACHINE SCREW (M1.7X8.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (BIND PT2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW (M2X2)	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING)	
DPU1	2B		X93-2010-01	OPTICAL PICKUP ASSY (LEAD FREE)	

K2: KDC-MP532U **M2:** KDC-MP5033U **E3:** KDC-W5534U **E4:** KDC-W5534UY
E5: KDC-W534UA **E6:** KDC-W534UAY **E7:** KDC-W534UG **E8:** KDC-W534UGY

△ Indicates safety critical components.