


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ▽ mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
- (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

X5800HD/XNUC
X6800DAB/XNEW5
X3800S/XNUC

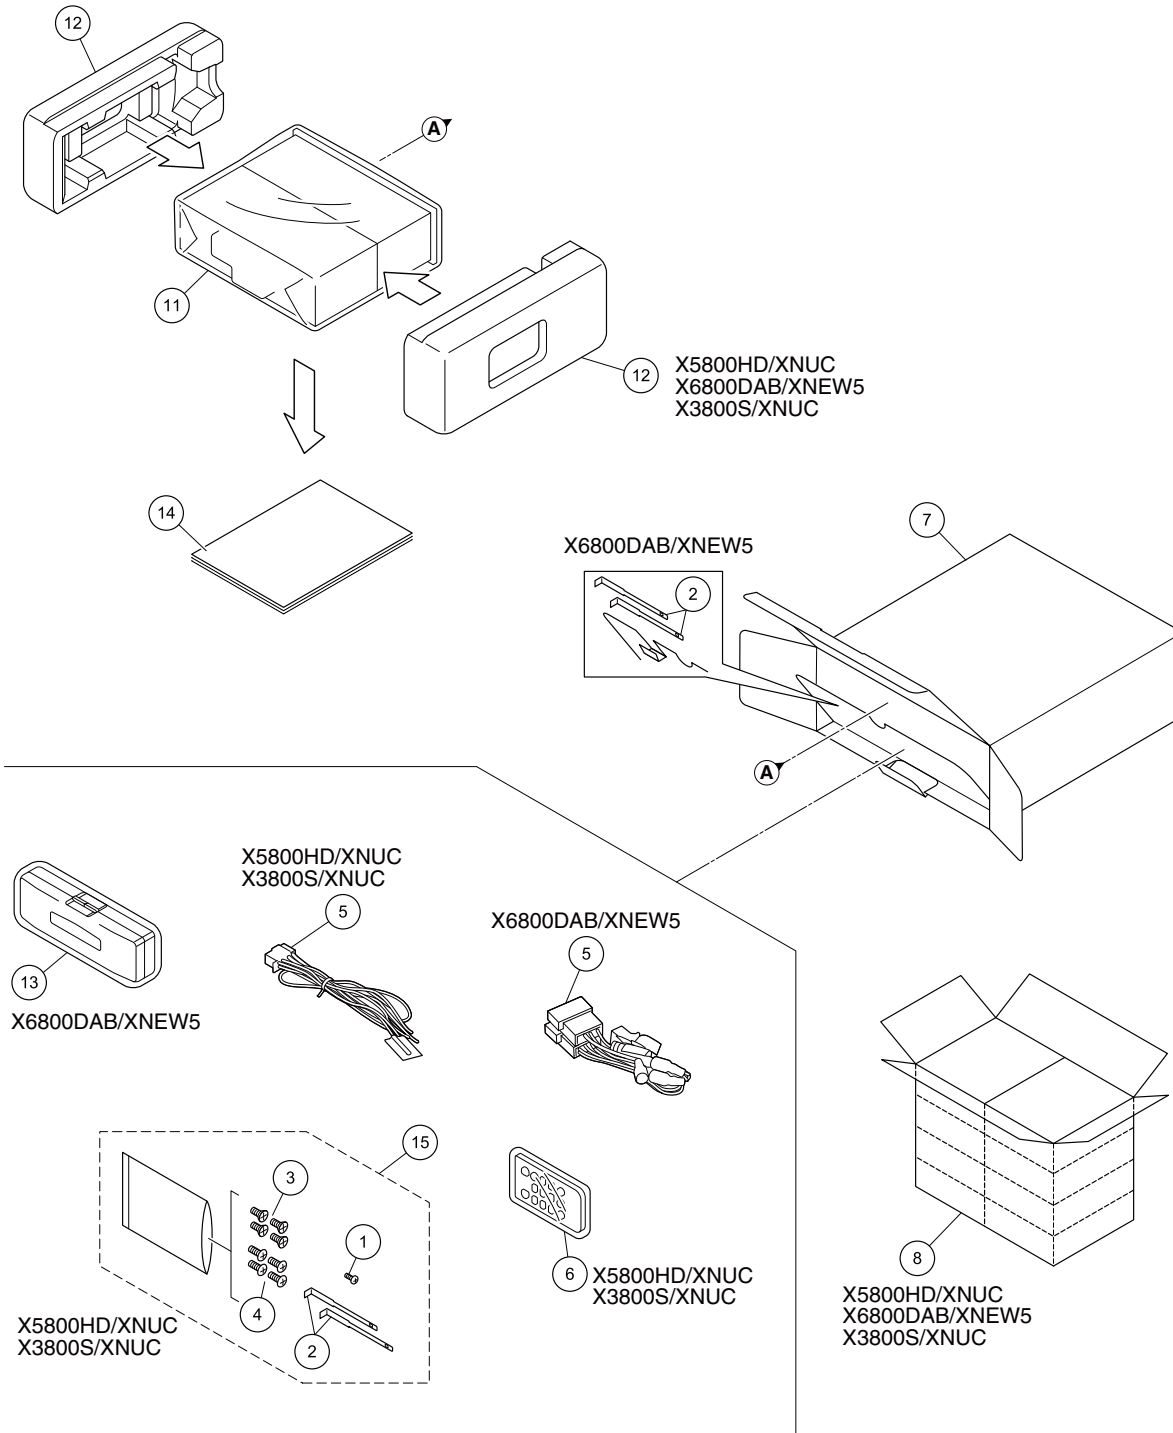

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	See Contrast table (2)	10		
2	Handle	QNC3021			
3	Screw	See Contrast table (2)	11	Polyethylene Bag	See Contrast table (2)
4	Screw	See Contrast table (2)	12	Protector	See Contrast table (2)
5	Cord Assy	See Contrast table (2)	13	Case Assy	See Contrast table (2)
			*	14-1 Warranty Card	See Contrast table (2)
6	Card Remote Control Unit	See Contrast table (2)	14-2	Owner's Manual	See Contrast table (2)
7	Unit Box	See Contrast table (2)			
8	Contain Box	See Contrast table (2)	*	14-3 Caution Card	See Contrast table (2)
9			15	Accessory Assy	See Contrast table (2)

(2) CONTRAST TABLE


DEH-X5800HD/XNUC, DEH-X6800DAB/XNEW5 and DEH-X3800S/XNUC are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>DEH-X5800HD/ XNUC</u>	<u>DEH-X6800DAB/ XNEW5</u>	<u>DEH-X3800S/ XNUC</u>
	1	Screw	BPZ20P060FTC	Not used	BPZ20P060FTC
	3	Screw	CBA2383	Not used	CBA2383
	4	Screw	CBA2384	Not used	CBA2384
	5	Cord Assy	CDP1484	QDP3073	CDP1484
	6	Card Remote Control Unit	QXE1047	Not used	QXE1047
	7	Unit Box	QHG3849	QHG3848	QHG3851
	8	Contain Box	QHL3849	QHL3848	QHL3851
	11	Polyethylene Bag	CEG1173	QEG3001	CEG1173
	12	Protector	CHP4594	CHP4594	CHP4594
	13	Case Assy	Not used	QXA3129	Not used
*	14-1	Warranty Card	QRY3001	CRY1376	QRY3001
	14-2	Owner's Manual	QRD3316	QRD3315	QRD3311
*	14-3	Caution Card	Not used	CRP1481	Not used
	15	Accessory Assy	QEA3337	Not used	QEA3337

Owner's Manual

<u>Part No.</u>	<u>Language</u>
QRD3311	English, French, Spanish(Espanol)
QRD3315	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3316	English, French, Spanish(Espanol)

9.2 EXTERIOR

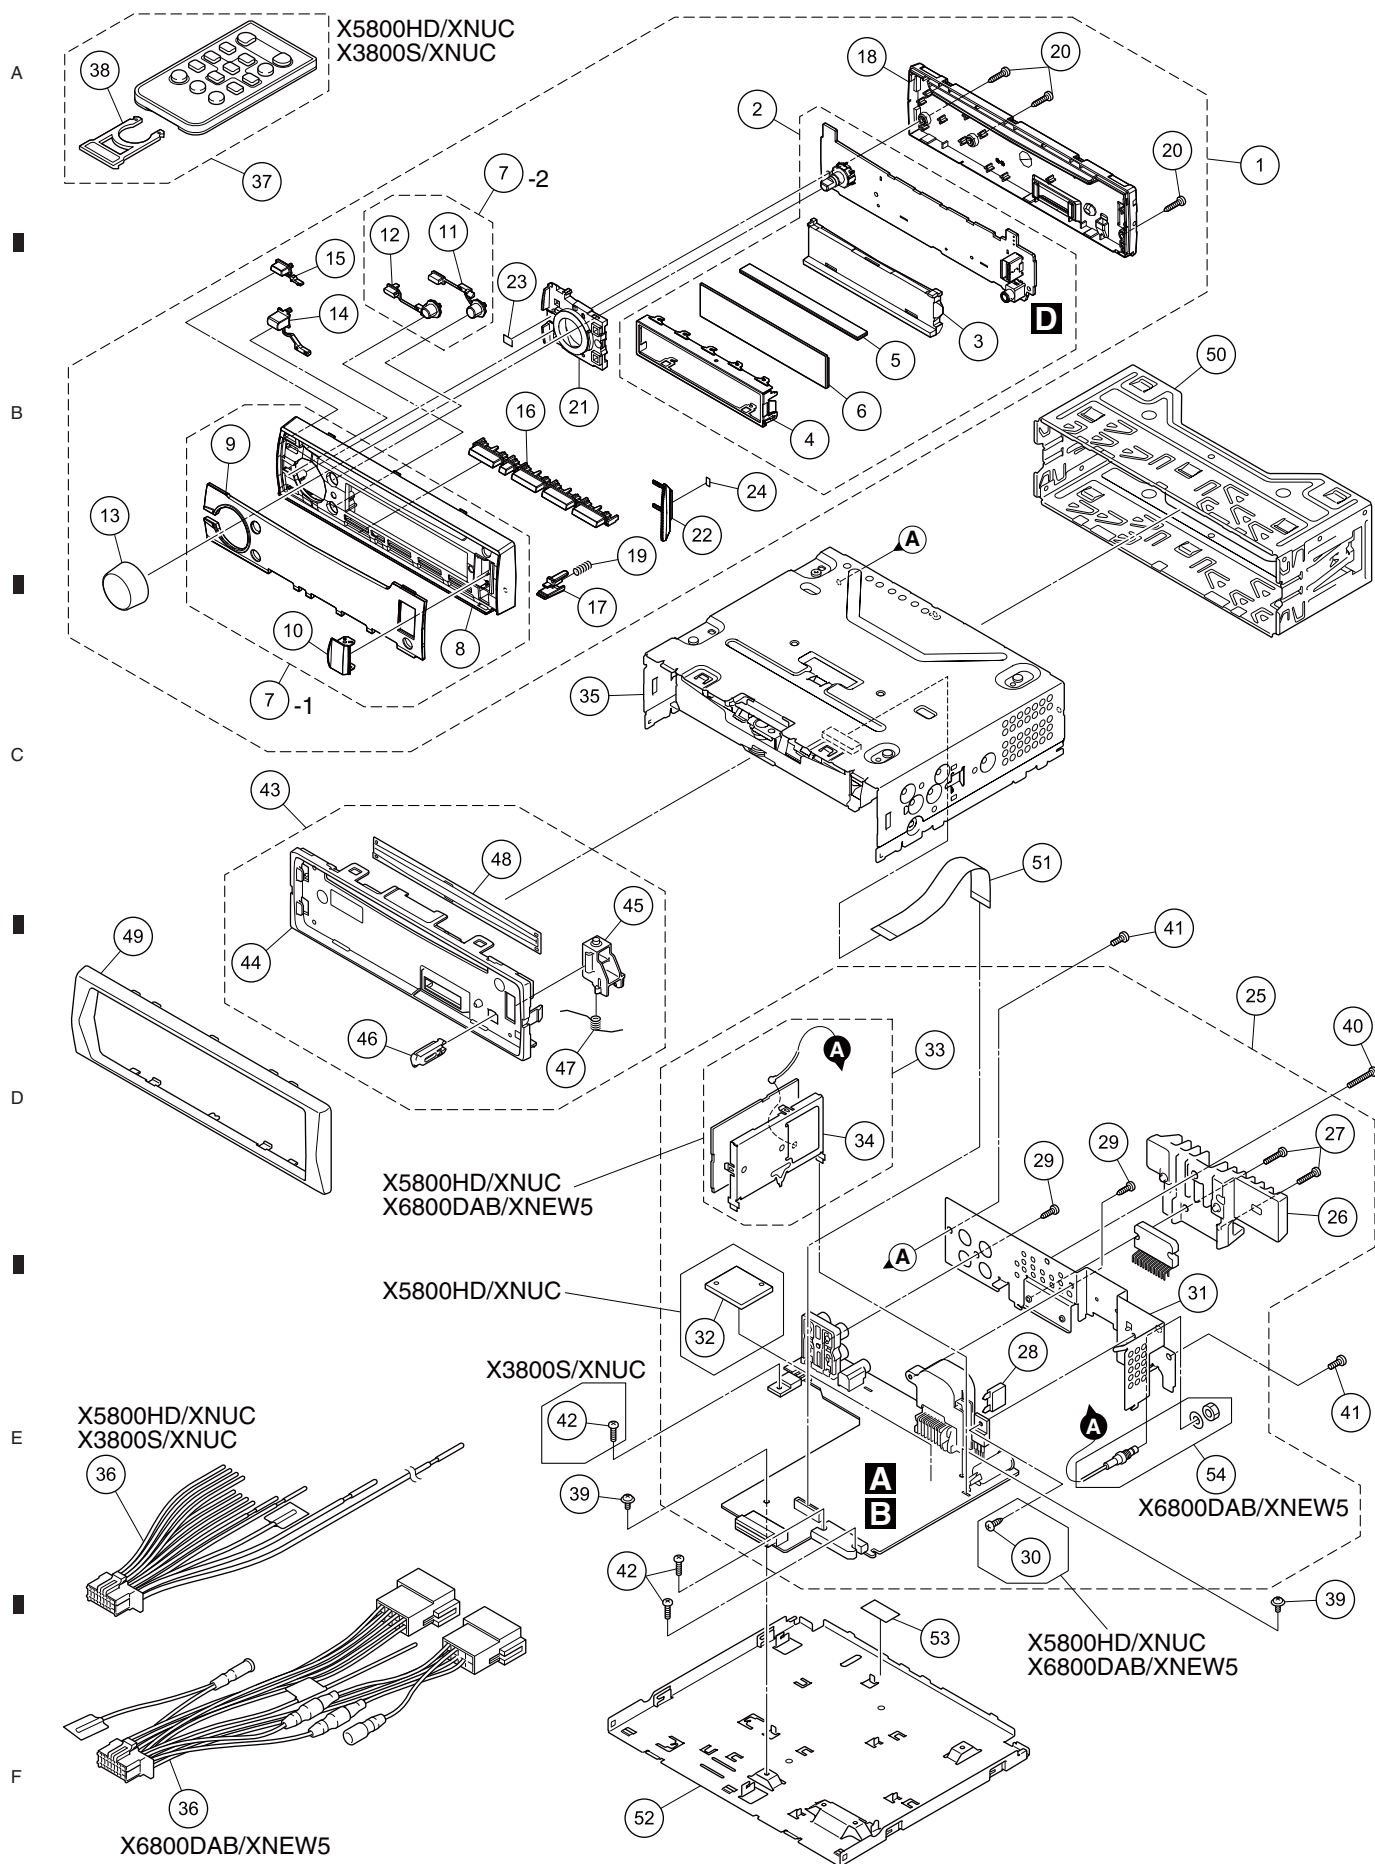

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Detach Grille Assy	See Contrast table (2)	29	Screw	BPZ26P080FTC
2	Keyboard Unit	See Contrast table (2)	30	Screw	See Contrast table (2)
3	Lighting Conductor	QNV3121			
4	Holder	QNC3088	31	Holder	See Contrast table (2)
5	Rubber Connector	QNV3079	32	Shield Case	See Contrast table (2)
			33	BE Core Unit (U461)	See Contrast table (2)
6	LCD (V1801)	CAW2041	34	Holder	See Contrast table (2)
7	Grille Unit	See Contrast table (2)	35	CD Mechanism Module (11.6VA_T07)	CXK5808
8	Grille	See Contrast table (2)			
9	Plate	See Contrast table (2)	36	Cord Assy	See Contrast table (2)
10	Door	QAT3013	37	Card Remote Control Unit	See Contrast table (2)
			38	Cover	See Contrast table (2)
11	Button (LIST)	QAC3217	39	Screw	ASZ26P050FTC
12	Button (BACK)	QAC3218	40	Screw	BSZ26P120FTC
13	Knob Unit	See Contrast table (2)			
14	Button	See Contrast table (2)	41	Screw	BSZ26P060FTC
15	Button (EJECT)	QAC3166	42	Screw	BSZ26P080FTC
			43	Panel Assy	See Contrast table (2)
16	Button (TRACK, DISP, 1-6)	QAC3219	44	Panel	QNS3126
17	Button (DETACH)	QAC3171	45	Arm	QNV3025
18	Cover	QNS3701			
19	Spring	CBH2210	46	Button	QNV3026
20	Screw	BPZ20P100FTC	47	Spring	QBH3001
			48	Cover	QNM3029
21	Lighting Conductor	QNV3116	49	Panel	QNS3576
22	Lighting Conductor	QNV3095	50	Holder	QNC3020
23	Sheet	QNM3123			
24	Sheet	QNM3124	51	FFC	QDE3029
25	Tuner Amp Unit	See Contrast table (2)	52	Case	See Contrast table (2)
			53	Sheet	QNM3130
26	Heat Sink	QNR3010	54	Antenna Cable Assy	See Contrast table (2)
27	Screw	BSZ26P120FTC			
28	Fuse (10 A)	YEK5001			

(2) CONTRAST TABLE

DEH-X5800HD/XNUC, DEH-X6800DAB/XNEW5 and DEH-X3800S/XNUC are constructed the same except for the following:

Mark	No.	Description	DEH-X5800HD/ XNUC	DEH-X6800DAB/ XNEW5	DEH-X3800S/ XNUC
	1	Detach Grille Assy	QXA4574	QXA4573	QXA4576
	2	Keyboard Unit	QWM4118	QWM4117	QWM4118
	7	Grille Unit	QXA4557	QXA4556	QXA4559
	8	Grille	QNS4024	QNS4023	QNS3959
	9	Plate	QNS4011	QNS4010	QNS4013
	13	Knob Unit	CXE3692	QXA3694	CXE3692
	14	Button	QAC3173 (MIX)	QAC3172 (DAB)	QAC3173 (MIX)
	25	Tuner Amp Unit	QWM4116	QWM4115	QWM4114
	30	Screw	BSZ26P060FTC	BSZ26P060FTC	Not used
	31	Holder	QNC3078	QNC3077	QNC3076
	32	Shield Case	QNC3107	Not used	Not used
	33	BE Core Unit (U461)	CWE2518	CWE2534 (WWR Tuner Unit)	Not used
	34	Holder	CND7288	CND7288	Not used
	36	Cord Assy	CDP1484	QDP3073	CDP1484
	37	Card Remote Control Unit	QXE1047	Not used	QXE1047
	38	Cover	CNS7068	Not used	CNS7068
	43	Panel Assy	QXA3261	QXA3261	QXA3261
	52	Case	QNB3036	QNB3036	QNB3020
	54	Antenna Cable Assy	Not used	QXA4122	Not used

9.3 CD MECHANISM MODULE

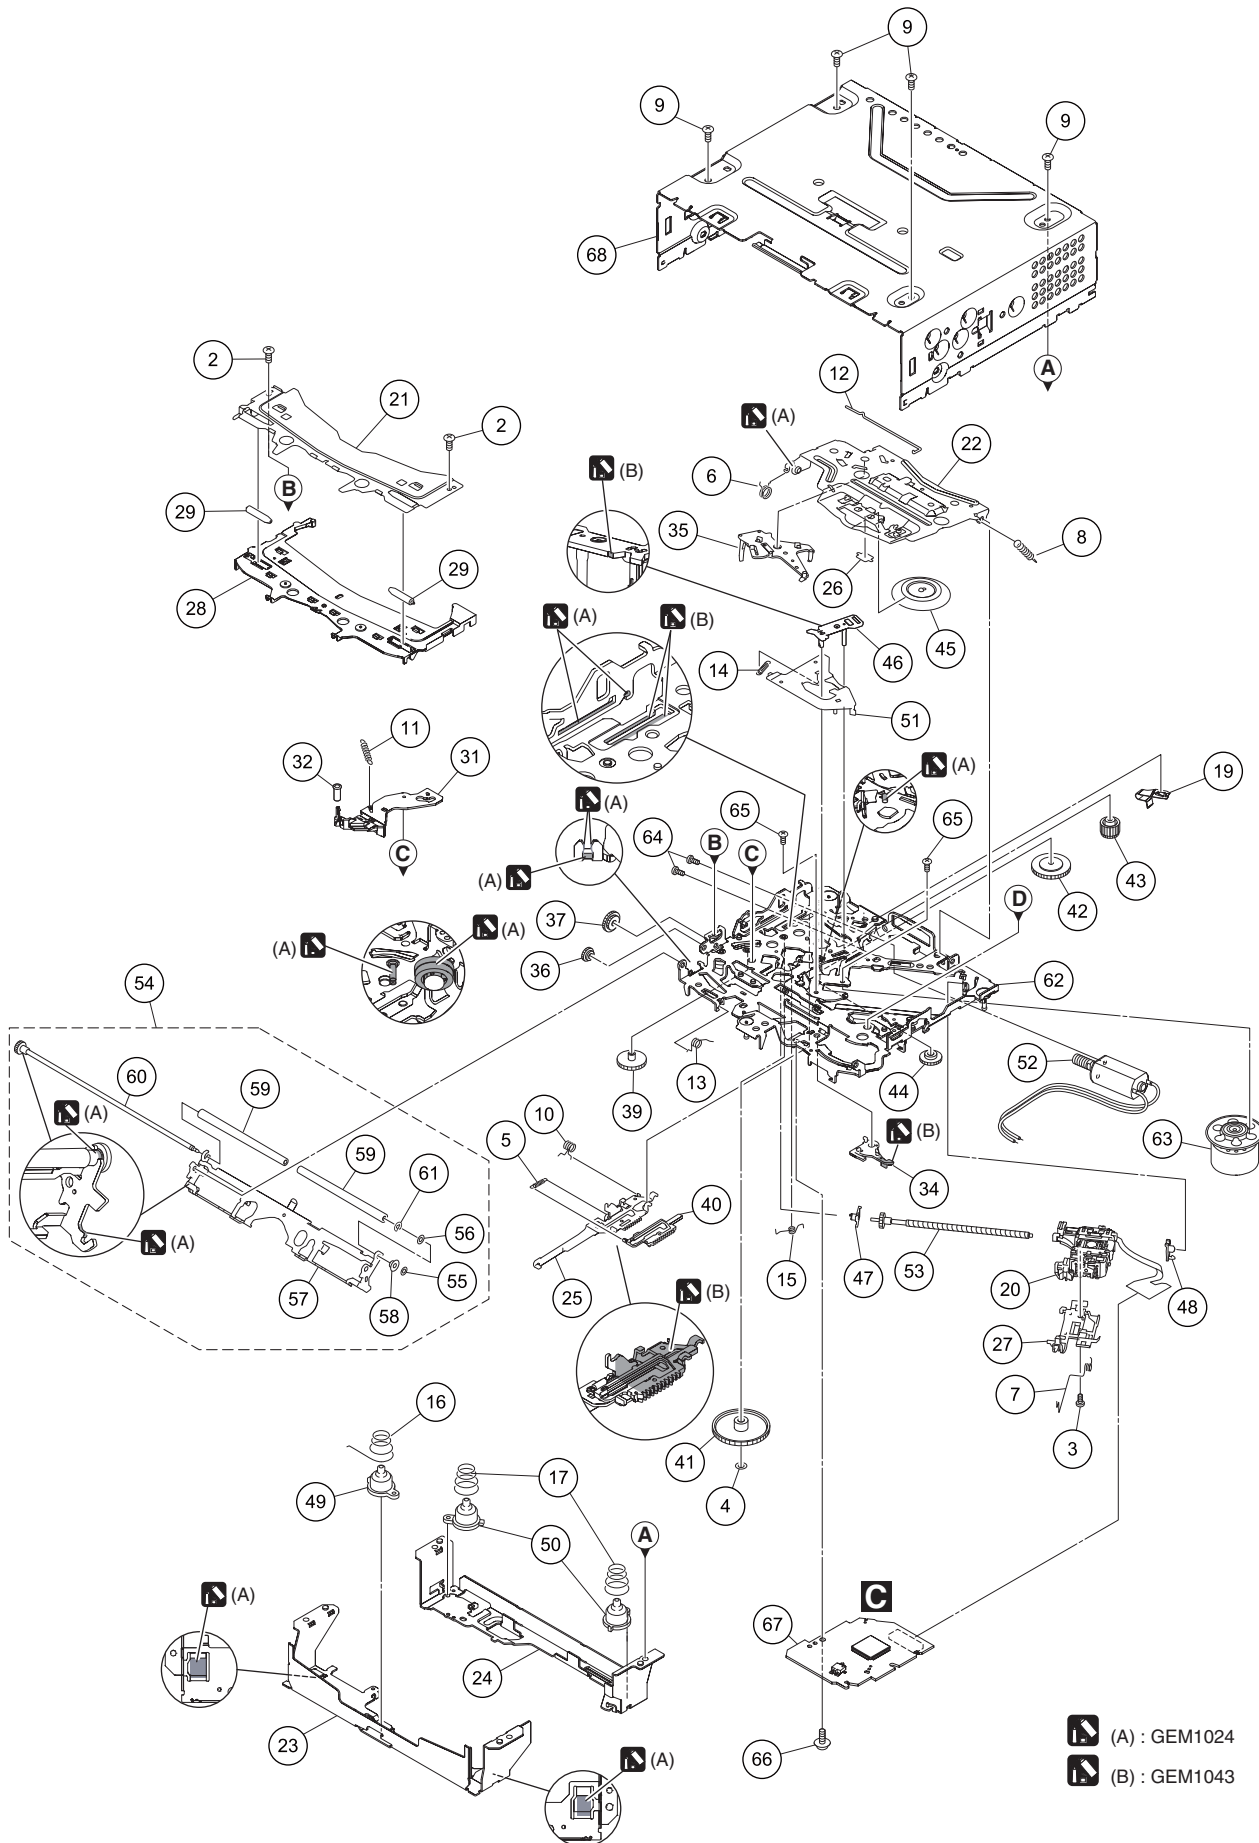

DEH-X5800HD/XNUC

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE6232	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
11	Coil Spring	CBH3095	59	Roller	CNW2500	
12	Spring	CBH3014	60	Gear Unit	CXE6225	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6VA)	CWX4269	
20	PU Unit(P11)(Service)	CXX4754	68	Chassis	CNA3373	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

$$RS1/\bigcirc S\bigcirc\bigcirc\bigcirc J, RS1/\bigcirc\bigcirc S\bigcirc\bigcirc\bigcirc J$$

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- *The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.*

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
B:DEH-X5800HD/XNUC		IC 671 (A,111,70) IC	S-80827CNMC-B8M
C:DEH-X6800DAB/XNEW5		IC 681(NSP)(A,93,106) FlashROM Unit (B)	QWW3912
D:DEH-X3800S/XNUC		IC 681(NSP)(A,93,106) FlashROM Unit (C)	QWW3911
Unit Number : QWM4116(B)		IC 801 (A,103,21) L-MOS And Gate	TC7SET08FUS1
Unit Number : QWM4115(C)		IC 911 (A,144,28) Regulator IC	BA49183-V12
Unit Name : Tuner Amp Unit		Q 251 (A,13,129) Transistor	EMH53
Unit Number : QWM4114(D)		Q 252 (A,23,130) Transistor	EMH53
Unit Name : Tuner Amp Unit		Q 301 (A,49,130) Transistor	EMD52
Unit Number : CWX4269		Q 401 (A,131,78) Bipolar TR(B)	MMBT2369L
Unit Name : CD Core Unit(S11.6VA)		Q 402 (A,131,81) Bipolar TR(B)	MMBT2369L
Unit Number : QWM4118(B,D)		Q 403 (A,136,78) Bipolar TR(B)	MMBT2369L
Unit Number : QWM4117(C)		Q 404 (A,136,81) Bipolar TR(B)	MMBT2369L
Unit Name : Keyboard Unit		Q 481 (A,127,108) Transistor(C)	2SAR293PGZE
		Q 483 (A,121,106) Resistor Built-IN TR(C)	LTC014EEB
		Q 531 (A,78,100) Bipolar TR	LSAR523UB
		Q 751 (A,141,138) Transistor	X1049AG-TF2
		Q 752 (A,139,130) Transistor	EMD52
		Q 871 (A,88,44) Transistor	2SAR502UB
		Q 872 (A,91,45) Transistor	LTC143EUB
		Q 941 (A,118,102) Bipolar TR	LSCR523UB
A		Q 951 (A,118,112) Bipolar TR(C)	LSAR523UB
Unit Number : QWM4116(B)		Q 1011 (A,120,109) Resistor Built-IN TR	LTC014EEB
Unit Number : QWM4115(C)		D 301 (A,100,125) Diode	CRG03
Unit Name : Tuner Amp Unit		D 302 (A,100,128) Diode	CRG03
		D 501 (A,67,52) Diode	CRG03
MISCELLANEOUS		D 503 (A,73,52) Diode	CRG03
IC 201 (A,78,115) E-VOL SYS LSI	PM9013A	D 505 (A,86,54) Diode	CRG03
IC 301 (A,78,141) Power AMP IC	PAL013A	D 507 (A,68,66) Diode(C)	CRG03
IC 401 (A,142,87) Tuner IC(B)	TEF6688HN	D 551 (A,83,38) Diode	CMS30I30A
(A,142,87) Tuner IC(C)	TEF6686HN	D 552 (A,70,27) Diode	RB056L-40
IC 451 (A,122,82) Regulator IC	MM3571A33P	D 553 (A,83,45) Diode	CMS30I30A
IC 502 (A,80,60) Regulator IC	S-1172B12-E6	D 601 (A,111,95) Diode	RB751SM-40
IC 503 (A,70,78) Regulator IC	MM3411A33N	D 602 (A,73,90) Diode	RB751SM-40
IC 504 (A,72,71) Regulator IC(C)	S-1155B33-U5	D 751 (A,138,132) Diode	DZ2J082M0
IC 531 (A,69,98) IC	337S3959	D 802 (A,92,17) Diode	DZ2S068C
IC 551 (A,74,30) DC/DC CONV IC	KBD9876EFJ	D 803 (A,125,13) Diode	DZ2S068C
IC 552 (A,102,27) PO Supply IC	BD2232G-G	D 804 (A,119,13) Diode	DZ2S068C
IC 601 (A,94,87) Flash Blank UC IC	R5S726A0D216FP	D 805 (A,122,13) Diode	DZ2S068C
		D 806 (A,116,13) Diode	DZ2S068C
		D 807 (A,113,13) Diode	DZ2S068C

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
D 901	(A,138,125)	Diode	D1F60-5053			R 410	(A,148,83)		RS1/16SS103J		
D 902	(A,135,125)	Diode	D1F60-5053			R 412	(A,147,82)		RS1/10SR0R0J		
D 911	(A,142,58)	Diode	CRG03			R 413	(A,140,80)		RS1/16SS101J		
D 912	(A,147,58)	Diode	CRG03			R 414	(A,141,83)		RS1/16SS101J		A
D 941	(A,117,107)	Diode(B)	DZ2J068M0								
	(A,117,107)	Diode(C)	DZ2J075M0			R 415	(A,139,83)		RS1/16SS101J		
						R 416	(A,140,83)		RS1/16SS101J		
D 951	(A,115,112)	Diode(C)	DAN202UM			R 417	(A,133,80) (B)		RS1/16SS121J		
D 1011	(A,121,115)	Diode	CRG03			R 418	(A,135,84) (B)		RS1/16SS182J		
L 201	(A,103,109)	Inductor	CTF1793			R 419	(A,132,75) (B)		RS1/16SS102J		
L 202	(A,71,111)	Inductor	CTF1793								
L 301	(A,105,125)	Inductor(C)	CTF1488			R 420	(A,147,92)		RS1/16SS0R0J		
						R 421	(A,133,75) (B)		RS1/16SS332J		
L 402	(A,134,94)	Inductor	LCTAW150J2520			R 422	(A,137,85) (B)		RS1/16SS0R0J		
L 404	(A,134,97)	Inductor	CTF1389			R 423	(A,138,80) (B)		RS1/16SS121J		
L 408	(A,144,101)	Inductor	LCMAR27J1608			R 424	(A,137,84) (B)		RS1/16SS182J		
L 551	(A,72,20)	SMD SPL Inductor	CTH1584								B
L 801	(A,115,15)	Inductor	CTF1713			R 425	(A,137,75) (B)		RS1/16SS102J		
						R 426	(A,138,75) (B)		RS1/16SS332J		
L 901	(A,112,141)	Choke Coil	CTH1620			R 427	(A,139,92)		RS1/16SS0R0J		
L 951	(A,113,115)	Chip Coil	BTH1101			R 429	(A,137,88) (B)		RS1/16SS101J		
T 401	(A,140,97)	Variable Coil	CTC1215			R 430	(A,134,84) (B)		RS1/16SS101J		
X 401	(A,150,93)	Crystal Resonator 9.216 MHz	CSS1864								
X 601	(A,108,87)	Crystal Resonator 12.0 MHz	CSS1847			R 431	(A,137,86) (B)		RS1/16SS0R0J		
						R 432	(A,136,75) (B)		RS1/16SS101J		
X 602	(A,101,101)	Ceramic Resonator 16.934 MHz	CSS1603			R 433	(A,131,75) (B)		RS1/16SS101J		
⚠ P251	(A,8,130)	Fuse 3.0 A	CEK1286			R 434	(A,155,84)		RS1/10SR0R0J		
P 401	(A,152,112)	Surge Absorber	IMSA-6803-01Y900			R 451	(A,123,77)		RS1/16SS0R0J		
P 482	(A,129,115)	Poly Switch(C)	FSMD020-R								
BZ601	(A,133,54)	Buzzer(B)	CPV1062			R 461	(A,154,81)		RS1/16SS0R0J		C
						R 462	(A,153,80)		RS1/16SS0R0J		
VA801	(A,104,14)	SMD Varistor	MLV0402ES012V0010N			R 463	(A,154,79)		RS1/16SS0R0J		
VA802	(A,100,14)	SMD Varistor	MLV0402ES012V0010N			R 464	(A,152,77)		RS1/16SS0R0J		
U 461	(A,160,76)	Be Core Unit(B)	CWE2518			R 465	(A,121,68)		RS1/16SS0R0J		
	(A,160,76)	WWR Tuner(C)	CWE2534								
CN701	(A,113,32)	Connector	VKN1192			R 466	(A,121,67)		RS1/16SS0R0J		
CN801	(A,109,3)	Connector	CKS6452			R 467	(A,149,65)		RS1/16SS680J		
						R 468	(A,149,64)		RS1/16SS680J		
JA251	(A,18,138)	Jack	CKB1109			R 469	(A,151,63)		RS1/16SS473J		
JA401	(A,157,128)	Antenna Jack	YKS5041			R 470	(A,135,108)		RS1/4SA0R0J		
JA891	(A,42,138)	3.5 DIA Jack	CKS6437								
JA901	(A,113,141)	Plug	CKM1624			R 471	(A,138,108)		RS1/4SA0R0J		
⚠	Fuse 10 A		YEK5001			R 474	(A,151,76) (B)		RS1/16SS0R0J		D
						R 475	(A,150,74) (B)		RS1/16SS0R0J		
						R 476	(A,150,73) (B)		RS1/16SS0R0J		
						R 477	(A,149,72) (B)		RS1/16SS0R0J		
RESISTORS											
R 251	(A,17,130)		RS1/16SS821J			R 483	(A,130,107) (C)		RS1/16SS1003F		
R 252	(A,9,129)		RS1/16SS821J			R 484	(A,132,105) (B)		RS1/16SS473J		
R 253	(A,15,130)		RS1/16SS223J				(A,132,105) (C)		RS1/16SS1802D		
R 254	(A,11,129)		RS1/16SS223J			R 485	(A,128,104) (C)		RS1/4SA471J		
R 255	(A,29,131)		RS1/16SS821J			R 486	(A,123,104) (C)		RS1/4SA471J		
						R 487	(A,123,108) (C)		RS1/10SR103J		
R 256	(A,18,131)		RS1/16SS821J								
R 257	(A,27,130)		RS1/16SS223J								
R 258	(A,21,130)		RS1/16SS223J			R 490	(A,154,54) (B)		RS1/10SR0R0J		E
R 305	(A,53,130)		RS1/16SS103J			R 494	(A,154,75) (B)		RS1/10SR0R0J		
R 306	(A,53,129)		RS1/16SS221J			R 502	(A,86,70)		RS1/16SS0R0J		
						R 503	(A,74,79)		RS1/16SS102J		
R 307	(A,52,130)		RS1/16SS223J			R 506	(A,73,76)		RS1/16SS0R0J		
R 308	(A,103,124) (B)		RS1/16SS0R0J								
R 309	(A,51,132)		RS1/16SS103J			R 531	(A,65,99)		RS1/16SS473J		
R 401	(A,141,92)		RS1/16SS0R0J			R 532	(A,68,100)		RS1/16SS222J		
R 402	(A,140,92)		RS1/16SS0R0J			R 533	(A,74,97)		RS1/16SS222J		
						R 534	(A,70,103)		RS1/16SS272J		
R 403	(A,136,94)		RS1/16SS391J			R 535	(A,68,103)		RS1/16SS472J		
R 404	(A,132,99)		RS1/16SS105J								
R 405	(A,132,101)		RS1/16SS105J			R 536	(A,80,101)		RS1/16SS472J		
R 406	(A,144,83)		RS1/16SS101J			R 537	(A,70,100)		RS1/16SS101J		F
R 407	(A,145,83)		RS1/16SS101J			R 538	(A,74,98)		RS1/16SS101J		
						R 551	(A,74,24)		RS1/16SS682J		
R 408	(A,149,84)		RS1/16SS103J			R 552	(A,77,22)		RS1/16SS0R0J		

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

A	R 553	(A,77,25)	RS1/16SS1803D	R 706	(A,104,36)	RS1/16SS221J
	R 554	(A,76,25)	RS1/16SS4302D	R 707	(A,107,36)	RS1/16SS221J
	R 555	(A,79,12)	RS1/10SR471J	R 708	(A,109,36)	RS1/16SS101J
	R 602	(A,90,75)	RS1/16SS473J	R 709	(A,110,36)	RS1/16SS221J
	R 604	(A,81,91) (C)	RS1/16SS473J	R 710	(A,112,36)	RS1/16SS101J
B	R 609	(A,108,77)	RS1/16SS473J	R 711	(A,113,37)	RS1/16SS102J
	R 610	(A,79,91)	RS1/16SS473J	R 715	(A,116,37)	RS1/16SS151J
	R 611	(A,106,84)	RS1/16SS473J	R 716	(A,117,36)	RS1/16SS151J
	R 613	(A,105,88)	RS1/16SS152J	R 717	(A,118,36)	RS1/16SS151J
	R 614	(A,111,91)	RS1/16SS473J	R 718	(A,121,36)	RS1/16SS221J
B	R 615	(A,91,76)	RS1/16SS473J	R 719	(A,120,38)	RS1/16SS104J
	R 616	(A,97,71)	RS1/16SS473J	R 752	(A,142,133)	RS1/4SA391J
	R 617	(A,110,94)	RS1/16SS103J	R 753	(A,105,36)	RS1/16SS473J
	R 618	(A,105,91)	RS1/16SS473J	R 754	(A,106,38)	RS1/16SS103J
	R 622	(A,105,96)	RS1/16SS473J	R 801	(A,124,19)	RS1/10SR222J
C	R 623	(A,108,100)	RAB4CQ473J	R 803	(A,122,16)	RS1/16SS223J
	R 625	(A,97,98)	RS1/16SS221J	R 804	(A,120,16)	RS1/16SS223J
	R 626	(A,95,102)	RS1/16SS221J	R 805	(A,121,19)	RS1/10SR101J
	R 627	(A,95,98)	RS1/16SS221J	R 806	(A,119,19)	RS1/10SR101J
	R 628	(A,94,100)	RS1/16SS221J	R 807	(A,120,19)	RS1/10SR101J
C	R 629	(A,94,98)	RS1/16SS221J	R 808	(A,123,19)	RS1/10SR222J
	R 630	(A,93,98)	RS1/16SS221J	R 809	(A,116,19)	RS1/10SR220J
	R 631	(A,92,103)	RS1/16SS473J	R 810	(A,114,19)	RS1/10SR220J
	R 632	(A,87,104)	RS1/16SS473J	R 813	(A,104,19)	RS1/10SR222J
	R 633	(A,91,98)	RS1/16SS101J	R 814	(A,100,18)	RS1/10SR222J
C	R 634	(A,84,101)	RS1/16SS102J	R 815	(A,101,18)	RS1/16SS822J
	R 635	(A,82,99)	RS1/16SS102J	R 816	(A,96,18)	RS1/10SR222J
	R 636	(A,83,98)	RS1/16SS473J	R 817	(A,94,17)	RS1/10SR222J
	R 637	(A,85,97)	RS1/16SS473J	R 851	(A,92,21)	RS1/16SS472J
	R 638	(A,86,100)	RS1/16SS473J	R 871	(A,91,47)	RS1/10SR332J
D	R 639	(A,80,96)	RS1/16SS472J	R 872	(A,88,47)	RS1/16SS103J
	R 640	(A,79,95)	RS1/16SS472J	R 878	(A,98,32)	RS1/10SR473J
	R 643	(A,82,90)	RS1/16SS104J	R 891	(A,51,136)	RS1/16SS102J
	R 644	(A,79,89)	RS1/16SS101J	R 892	(A,51,137)	RS1/16SS102J
	R 645	(A,80,88)	RS1/16SS101J	R 911	(A,144,41)	RS1/10SR1R0J
D	R 646	(A,71,88)	RS1/16SS103J	R 912	(A,139,40)	RS1/10SR1R0J
	R 647	(A,78,87)	RS1/16SS101J	R 913	(A,155,40)	RS1/16SS223J
	R 648	(A,79,86)	RS1/16SS102J	R 914	(A,128,39)	RS1/16SS223J
	R 649	(A,83,85)	RS1/16SS102J	R 941	(A,118,105)	RS1/16SS223J
	R 650	(A,87,76)	RS1/16SS102J	R 942	(A,117,105)	RS1/16SS473J
E	R 651	(A,83,81)	RS1/16SS473J	R 943	(A,115,103) (B)	RS1/16SS682J
	R 652	(A,82,78)	RS1/16SS222J		(A,115,103) (B)(C)	RS1/16SS333J
	R 653	(A,84,78)	RS1/16SS103J	R 944	(A,114,107) (B)	RS1/4SA102J
	R 655	(A,98,71)	RS1/16SS0R0J		(A,114,107) (C)	RS1/4SA122J
	R 656	(A,99,73)	RS1/16SS0R0J	R 951	(A,118,109) (C)	RS1/16SS102J
E	R 659	(A,109,66)	RS1/16SS153J	R 952	(A,118,114) (C)	RS1/16SS223J
	R 660	(A,109,65)	RS1/16SS153J	R 953	(A,113,113) (C)	RS1/16SS153J
	R 664	(A,102,72)	RS1/16SS103J	R 1011	(A,120,112)	RS1/16SS103J
	R 666	(A,76,95)	RS1/16SS0R0J	R 1013	(A,117,116)	RS1/4SA102J
	R 668	(A,92,62) (B)	RS1/16SS102J			
F	R 671	(A,112,73)	RS1/16SS104J			
	R 681	(A,88,109)	RS1/16SS473J	C 201	(A,71,122)	CKSRYB105K10
	R 682	(A,87,107)	RS1/16SS473J	C 202	(A,84,121)	CKSRYB105K10
	R 683	(A,99,105)	RS1/16SS473J	C 203	(A,71,119)	CKSRYB105K10
	R 684	(A,87,106)	RS1/16SS473J	C 204	(A,84,118)	CKSRYB105K10
F	R 685	(A,99,108)	RS1/16SS473J	C 205	(A,71,120)	CKSRYB105K10
	R 701	(A,106,36)	RS1/16SS473J	C 206	(A,84,120)	CKSRYB105K10
	R 702	(A,114,37)	RS1/16SS104J	C 207	(A,69,117)	CKSSYB104K10
	R 703	(A,116,27)	RAB4CQ472J	C 208	(A,69,116)	CKSSYB104K10
	R 704	(A,109,39)	RS1/16SS104J	C 209	(A,68,114) 10 uF	CCG1192

CAPACITORS

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 210	(A,71,115)	CCSSCH151J50		C 453	(A,120,86)	CKSRYB105K10	
C 211	(A,84,114)	CCSSCH151J50		C 454	(A,123,91)	CKSRYB102K50	
C 212	(A,87,115) 10 uF	CCG1192		C 455	(A,140,70) 10 uF	CCG1192	
C 213	(A,86,113)	CKSSYB104K10		C 461	(A,131,85) (B)	CCSSCH150J50	
C 214	(A,86,112)	CKSSYB104K10		C 462	(A,152,105) (C)	CCSSCH101J50	
C 215	(A,86,110)	CKSSYB102K50					
C 216	(A,68,110) 10 uF	CCG1192		C 463	(A,153,105) (C)	CKSSYB104K16	
C 217	(A,72,109)	CKSSYB102K50		C 469	(A,130,85) (B)	CCSSCH150J50	
C 218	(A,96,114)	XCEVW470M16		C 474	(A,70,84)	CKSSYB104K10	
C 219	(A,91,116) 10 uF	CCG1192		C 482	(A,131,107) (C)	CKSSYB104K16	
C 220	(A,89,111) 10 uF	CCG1192		C 503	(A,81,55) 10 uF	CCG1192	
C 224	(A,101,112)	CKSSYB104K10		C 504	(A,81,64) 10 uF	CCG1192	
C 228	(A,91,114)	CKSSYB103K16		C 505	(A,67,79) 4.7 uF	CCG1212	
C 230	(A,104,109)	CKSSYB104K10		C 506	(A,66,79)	CKSSYB102K50	
C 235	(A,87,124)	CKSSYB104K10		C 507	(A,73,79) 4.7 uF	CCG1212	
				C 508	(A,71,67) (C)	CCG1212	
C 237	(A,72,113)	CKSSYB104K10		C 509	(A,71,65) (C)	CKSSYB102K50	
C 239	(A,66,114)	CKSSYB102K50		C 510	(A,75,70) (C)	CCG1212	
C 251	(A,36,128) 10 uF	CCG1192		C 531	(A,65,98)	CKSSYB104K10	
C 252	(A,32,126) 10 uF	CCG1192		C 532	(A,68,104)	CKSSYB104K10	
C 253	(A,16,130)	CCSSCH101J50		C 551	(A,78,42)	XCH3021	
C 254	(A,10,129)	CCSSCH101J50		C 552	(A,70,36)	CKSRYB105K16	
C 255	(A,34,131) 10 uF	CCG1192		C 553	(A,74,35)	CKSSYB103K16	
C 256	(A,30,129) 10 uF	CCG1192		C 555	(A,75,25)	CKSSYB682K25	
C 257	(A,26,131)	CCSSCH101J50		C 556	(A,69,13)	CEVQW221M6R3	
C 258	(A,20,130)	CCSSCH101J50		C 557	(A,78,16)	CKSRYB105K10	
C 261	(A,6,132)	CKSSYB103K16		C 560	(A,106,26)	CKSRYB105K10	
C 262	(A,35,135) 2.2 uF	CCG1205		C 561	(A,97,27)	CKSRYB105K10	
C 301	(A,72,128)	CKSRYB474K10		C 564	(A,77,16) 4.7 uF	CCG1212	
C 303	(A,81,128)	CKSRYB474K10		C 565	(A,70,35) 4.7 uF	CCG1222	
C 305	(A,75,128)	CKSRYB474K10		C 568	(A,81,30) 1 uF	DCH1246	
C 307	(A,78,128)	CKSRYB474K10		C 601	(A,85,76)	CKSSYB104K10	
C 313	(A,84,128) 2.2 uF	CCG1205		C 602	(A,93,74)	CKSSYB104K10	
C 314	(A,137,134)	CKSRYB104K16		C 603	(A,95,75)	CKSSYB104K10	
C 318	(A,61,131) 10 uF/16 V	DCH1263		C 604	(A,97,74)	CKSSYB104K10	
C 322	(A,99,126) (B)	CKSRYB104K16		C 605	(A,103,74)	CKSSYB104K10	
C 327	(A,53,128)	CKSRYB105K10		C 606	(A,106,82)	CKSSYB104K10	
C 330	(A,87,126)	CKSRYB103K50		C 607	(A,110,86)	CCSSCH120J50	
C 402	(A,150,82)	CKSSYB472K25		C 608	(A,107,90)	CCSSCH120J50	
C 406	(A,151,82)	CKSSYB472K25		C 609	(A,110,83)	CKSSYB104K10	
C 407	(A,145,91)	CKSSYB104K10		C 610	(A,105,85)	CKSSYB104K10	
C 408	(A,146,93) 2.2 uF	CCG1205		C 611	(A,105,89)	CKSSYB104K10	
C 409	(A,144,93)	CKSSYB224K6R3		C 612	(A,105,94)	CKSSYB104K10	
C 410	(A,142,101)	CCSSCH220J50		C 613	(A,105,95)	CKSSYB104K10	
C 411	(A,139,101)	CCSSCH331J50		C 617	(A,124,44) 1 uF	DCH1246	
C 412	(A,147,78)	CKSSYB104K10		C 620	(A,98,98)	CKSSYB104K10	
C 414	(A,134,91)	CKSSYB102K50		C 621	(A,92,100)	CKSSYB104K10	
C 420	(A,134,100)	CCSSCH471J50		C 622	(A,89,101)	CCSSCH220J50	
C 422	(A,137,89)	CKSSYB152K50		C 623	(A,87,102)	CKSSYB104K10	
C 423	(A,142,82) 1 uF	DCH1246		C 624	(A,87,99)	CKSSYB104K10	
C 425	(A,146,90)	CCSSCH390J50		C 625	(A,85,101)	CKSSYB104K10	
C 428	(A,138,91)	CKSSYB104K10		C 626	(A,83,89)	CKSSYB104K10	
C 430	(A,143,93)	CKSSYB102K50		C 627	(A,78,90)	CCSSCH220J50	
C 431	(A,147,80) 2.2 uF	CCG1205		C 628	(A,77,89)	CCSSCH220J50	
C 432	(A,146,95)	CKSSYB104K10		C 629	(A,81,85)	CKSSYB104K10	
C 433	(A,146,96) 10 uF	CCG1192		C 630	(A,81,84)	CKSSYB104K10	
C 434	(A,144,103)	CCSSCH100D50		C 631	(A,77,86)	CCSSCH220J50	
C 436	(A,147,84)	CKSRYB102K50		C 638	(A,105,83) 1 uF	DCH1246	
C 437	(A,140,77) (C)	CCG1205		C 639	(A,97,100)	CCSRCK1R0C50	
C 438	(A,126,87) (C)	CKSSYB102K50		C 642	(A,82,95) (C)	CCSSCH330J50	
C 452	(A,120,78)	CKSRYB105K10		C 681	(A,100,108)	CKSSYB104K10	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	C 701	(A,110,38)	CKSSYB103K16
	C 704	(A,119,37)	CCSSCH100D50
	C 705	(A,118,38)	CCSSCH100D50
	C 706	(A,116,38)	CCSSCH100D50
	C 752	(A,140,133)	CKSSYB104K10
■	C 753	(A,145,132) 10 uF	CCG1192
	C 754	(A,108,116)	CKSSYB102K50
	C 801	(A,124,6)	CCSRCH102J50
	C 804	(A,94,26)	CKSRYB104K16
	C 806	(A,124,9)	CKSRYB104K16
B	C 807	(A,123,12)	CKSRYB105K10
	C 808	(A,112,19)	CKSRYB104K16
	C 809	(A,96,15)	CCSRCH221J50
	C 810	(A,96,14)	CCSRCH221J50
	C 873	(A,97,32)	CKSRYB105K16
■	C 874	(A,103,20)	CKSSYB104K10
	C 875	(A,93,45)	CKSSYB102K50
	C 891	(A,49,134)	CKSRYB104K16
	C 892	(A,49,137)	CKSRYB104K16
	C 901	(A,132,124) 2 200 uF/16 V	CCH1405
C	C 911	(A,137,119)	CKSRYB104K16
	C 912	(A,151,40)	CKSSYB102K50
	C 913	(A,132,39)	CKSSYB102K50
	C 914	(A,147,51)	XCEAT102M16
	C 915	(A,133,41)	CKSRYB104K16
■	C 916	(A,142,44) 10 uF	CCG1192
	C 917	(A,143,41)	CKSSYB102K50
	C 919	(A,151,42) 10 uF	CCG1192
	C 921	(A,136,41) 10 uF	CCG1192
	C 923	(A,147,41) 10 uF	CCG1192
■	C 926	(A,141,41) 10 uF	CCG1192
	C 927	(A,138,41)	CKSSYB102K50
	C 929	(A,157,40)	CKSSYB102K50
	C 930	(A,138,121)	CKSSYB104K10
	C 941	(A,116,105)	CKSRYB104K16
D	C 1011	(A,120,110)	CKSRYB105K16

Q 301	(A,60,124) Transistor	EMD52
Q 531	(A,89,94) Bipolar TR	LSAR523UB
Q 751	(A,14,102) Transistor	X1049AG-TF2
Q 752	(A,10,107) Transistor	EMD52
Q 871	(A,151,62) Transistor	2SAR502UB
Q 872	(A,150,54) Transistor	LTC143EUB
Q 941	(A,128,108) Bipolar TR	LSCR523UB
Q 1011	(A,98,120) Resistor Built-IN TR	LTC014EEB
D 301	(A,87,128) Diode	CRG03
D 302	(A,92,128) Diode	CRG03
D 551	(A,24,118) Diode	CMS30I30A
D 552	(A,44,105) Diode	RB056L-40
D 601	(A,136,79) Diode	RB751SM-40
D 602	(A,126,63) Diode	RB751SM-40
D 751	(A,16,107) Diode	DZ2J082M0
D 801	(A,108,12) Diode	DZ2S068C
D 802	(A,93,16) Diode	DZ2S068C
D 803	(A,125,15) Diode	DZ2S068C
D 804	(A,119,13) Diode	DZ2S068C
D 805	(A,121,13) Diode	DZ2S068C
D 806	(A,117,13) Diode	DZ2S068C
D 807	(A,114,13) Diode	DZ2S068C
D 901	(A,138,127) Diode	D1F60-5053
D 902	(A,135,127) Diode	D1F60-5053
D 911	(A,159,66) Diode	CRG03
D 912	(A,162,66) Diode	CRG03
D 941	(A,129,112) Diode	DZ2J068M0
D 1011	(A,101,124) Diode	CRG03
L 202	(A,91,101) Inductor	CTF1793
L 402	(A,142,93) Inductor	LCTAW150J2520
L 404	(A,145,108) Inductor	CTF1389
L 408	(A,154,104) Inductor	LCMAR27J1608
L 551	(A,52,107) SMD SPL Inductor	CTH1584
L 801	(A,115,16) Inductor	CTF1713
L 901	(A,112,141) Choke Coil	CTH1620
T 401	(A,151,99) Variable Coil	CTC1215
X 401	(A,159,85) Crystal Resonator 9.216 MHz	CSS1864
X 601	(A,128,74) Crystal Resonator 12.0 MHz	CSS1847
X 602	(A,120,89) Ceramic Resonator 16.934 MHz	CSS1603

△P251	(A,6,130) Fuse 3.0 A	CEK1286
P 401	(A,161,109) Surge Absorber	IMSA-6803-01Y900
P 1002	(A,158,73) Poly Switch	FSMD110-24R
VA801	(A,107,14) SMD Varistor	MLV0402ES012V0010N
VA802	(A,102,13) SMD Varistor	MLV0402ES012V0010N

CN701	(A,114,32) Connector	VKN1192
CN801	(A,109,3) Connector	CKS6452
JA251	(A,19,141) Jack	CKB1109
JA401	(A,162,128) Antenna Jack	YKS5041
JA891	(A,43,138) 3.5 DIA Jack	CKS6437

JA901	(A,114,141) Plug	CKM1624
JA961	(A,142,143) Connector	CKS3806
△	Fuse 10 A	YEK5001

RESISTORS

R 251	(A,22,127)	RS1/16SS821J
R 252	(A,20,124)	RS1/16SS821J
R 253	(A,22,129)	RS1/16SS223J
R 254	(A,18,125)	RS1/16SS223J
R 260	(A,14,125)	RS1/16SS821J

B**Unit Number: QWM4114(D)****Unit Name : Tuner Amp Unit****MISCELLANEOUS**

E	IC 201	(A,99,106) E-VOL SYS LSI	PM9013A
	IC 301	(A,79,141) Power AMP IC	PAL013A
	IC 401	(A,149,87) Tuner IC	TEF6686HN
	IC 451	(A,164,75) Regulator IC	MM3571A33P
	IC 531	(A,93,86) IC	337S3959
■	IC 551	(A,42,112) DC/DC CONV IC	KBD9876EFJ
	IC 552	(A,107,24) PO Supply IC	BD2232G-G
	IC 601	(A,112,74) Flash Blank UC IC	R5S726B0D216FP
	IC 602	(A,131,68) IC	TC7SH126FU
	IC 603	(A,137,66) L-MOS And Gate	TC7SET08FUS1
F	IC 671	(A,133,74) IC	S-80827CNMC-B8M
	IC 681(NSP)	(A,115,94) FlashROM Unit	QWW3913
	IC 801	(A,105,18) L-MOS And Gate	TC7SET08FUS1
	IC 911	(A,145,28) Regulator IC	BA49183-V12
	Q 251	(A,20,129) Transistor	EMH53
	Q 253	(A,13,129) Transistor	EMH53

DEH-X5800HD/XNUC

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 261	(A,11,128)	RS1/16SS821J		R 643	(A,98,81)	RS1/16SS104J	A
R 262	(A,15,126)	RS1/16SS223J		R 644	(A,97,78)	RS1/16SS101J	
R 263	(A,11,129)	RS1/16SS223J		R 645	(A,94,79)	RS1/16SS101J	
R 265	(A,17,127)	RS1/16SS0R0J		R 646	(A,124,62)	RS1/16SS103J	
R 267	(A,15,129)	RS1/16SS0R0J		R 647	(A,98,74)	RS1/16SS101J	
R 305	(A,59,121)	RS1/16SS103J		R 648	(A,94,76)	RS1/16SS102J	
R 306	(A,61,121)	RS1/16SS221J		R 649	(A,94,75)	RS1/16SS102J	
R 307	(A,61,122)	RS1/16SS223J		R 650	(A,94,74)	RS1/16SS102J	
R 309	(A,84,120)	RS1/16SS103J		R 651	(A,91,72)	RS1/16SS473J	
R 401	(A,151,94)	RS1/16SS0R0J		R 652	(A,95,68)	RS1/16SS222J	
R 402	(A,150,94)	RS1/16SS0R0J		R 653	(A,97,65)	RS1/16SS103J	B
R 403	(A,140,94)	RS1/16SS391J		R 655	(A,116,60)	RS1/16SS0R0J	
R 404	(A,151,109)	RS1/16SS105J		R 656	(A,117,52)	RS1/16SS0R0J	
R 405	(A,154,109)	RS1/16SS105J		R 659	(A,125,61)	RS1/16SS153J	
R 406	(A,152,81)	RS1/16SS101J		R 660	(A,124,60)	RS1/16SS153J	
R 407	(A,153,81)	RS1/16SS101J		R 662	(A,129,66)	RS1/16SS473J	
R 408	(A,156,81)	RS1/16SS103J		R 663	(A,141,76)	RS1/16SS0R0J	
R 410	(A,155,81)	RS1/16SS103J		R 664	(A,92,68)	RS1/16SS103J	
R 437	(A,153,79)	RS1/16SS472J		R 665	(A,124,85)	RS1/16SS473J	
R 438	(A,151,79)	RS1/16SS472J		R 667	(A,129,64)	RS1/16SS473J	
R 452	(A,165,89)	RS1/16SS0R0J		R 669	(A,108,61)	RS1/16SS473J	C
R 454	(A,147,74)	RS1/16SS0R0J		R 671	(A,131,70)	RS1/16SS104J	
R 455	(A,166,88)	RS1/16SS0R0J		R 681	(A,110,96)	RS1/16SS473J	
R 531	(A,90,90)	RS1/16SS473J		R 682	(A,111,90)	RS1/16SS473J	
R 532	(A,90,84)	RS1/16SS222J		R 683	(A,121,92)	RS1/16SS473J	
R 533	(A,91,84)	RS1/16SS222J		R 684	(A,110,94)	RS1/16SS473J	
R 534	(A,94,90)	RS1/16SS272J		R 685	(A,121,96)	RS1/16SS473J	
R 535	(A,95,89)	RS1/16SS472J		R 701	(A,109,37)	RS1/16SS473J	
R 536	(A,97,89)	RS1/16SS472J		R 702	(A,115,37)	RS1/16SS104J	
R 537	(A,95,85)	RS1/16SS101J		R 703	(A,118,27)	RAB4CQ472J	
R 538	(A,95,83)	RS1/16SS101J		R 704	(A,110,40)	RS1/16SS104J	
R 551	(A,48,112)	RS1/16SS682J		R 706	(A,108,36)	RS1/16SS221J	
R 552	(A,53,113)	RS1/16SS0R0J		R 707	(A,108,37)	RS1/16SS221J	
R 553	(A,49,113)	RS1/16SS1803D		R 708	(A,110,37)	RS1/16SS101J	
R 554	(A,49,111)	RS1/16SS4302D		R 709	(A,111,37)	RS1/16SS221J	
R 555	(A,64,103)	RS1/10SR471J		R 710	(A,112,37)	RS1/16SS101J	D
R 609	(A,125,65)	RS1/16SS473J		R 711	(A,114,38)	RS1/16SS102J	
R 610	(A,125,67)	RS1/16SS473J		R 715	(A,117,36)	RAB4CQ151J	
R 611	(A,129,69)	RS1/16SS473J		R 718	(A,122,36)	RS1/16SS221J	
R 613	(A,125,74)	RS1/16SS152J		R 719	(A,121,36)	RS1/16SS104J	
R 614	(A,132,78)	RS1/16SS473J		R 752	(A,14,108)	RS1/4SA391J	
R 615	(A,135,77)	RS1/16SS473J		R 753	(A,106,40)	RS1/16SS473J	
R 616	(A,124,76)	RS1/16SS473J		R 754	(A,105,41)	RS1/16SS103J	
R 617	(A,138,79)	RS1/16SS103J		R 801	(A,124,20)	RS1/10SR222J	
R 618	(A,127,81)	RS1/16SS473J		R 803	(A,121,17)	RS1/16SS223J	
R 622	(A,122,85)	RS1/16SS473J		R 804	(A,119,17)	RS1/16SS223J	E
R 623	(A,129,93)	RAB4CQ473J		R 805	(A,121,19)	RS1/10SR101J	
R 625	(A,116,89)	RS1/16SS221J		R 806	(A,118,19)	RS1/10SR101J	
R 626	(A,115,89)	RS1/16SS221J		R 807	(A,120,19)	RS1/10SR101J	
R 627	(A,114,89)	RS1/16SS221J		R 808	(A,124,19)	RS1/10SR222J	
R 628	(A,113,89)	RS1/16SS221J		R 809	(A,116,20)	RS1/10SR220J	
R 629	(A,110,91)	RS1/16SS221J		R 810	(A,114,20)	RS1/10SR220J	
R 630	(A,109,91)	RS1/16SS221J		R 813	(A,107,15)	RS1/10SR222J	
R 631	(A,107,92)	RS1/16SS473J		R 814	(A,101,18)	RS1/10SR222J	
R 632	(A,108,87)	RS1/16SS473J		R 815	(A,100,18)	RS1/16SS822J	
R 633	(A,106,92)	RS1/16SS101J		R 816	(A,96,19)	RS1/10SR222J	F
R 634	(A,103,90)	RS1/16SS102J		R 817	(A,95,19)	RS1/10SR222J	
R 636	(A,100,91)	RS1/16SS473J		R 819	(A,90,19)	RS1/10SR0R0J	
R 637	(A,101,89)	RS1/16SS473J		R 851	(A,93,19)	RS1/16SS472J	
R 638	(A,104,92)	RS1/16SS473J		R 871	(A,157,66)	RS1/10SR332J	

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

R 872 (A,157,68)
 R 878 (A,124,26)
 R 891 (A,58,137)
 R 892 (A,58,136)
 R 911 (A,145,40)

RS1/16SS103J
 RS1/10SR473J
 RS1/16SS102J
 RS1/16SS102J
 RS1/10SR1R0J

C 262 (A,16,123) 10 uF
 C 263 (A,12,123) 10 uF
 C 264 (A,15,127)
 C 265 (A,11,130)
 C 301 (A,69,128)

CCG1192
 CCG1192
 CCSSCH101J50
 CCSSCH101J50
 CKSRYB474K10

R 912 (A,141,41)
 R 913 (A,154,42)
 R 914 (A,133,41)
 R 930 (A,138,122)
 R 941 (A,126,110)

RS1/10SR1R0J
 RS1/16SS223J
 RS1/16SS223J
 RS1/10SR0R0J
 RS1/16SS223J

C 303 (A,80,128)
 C 305 (A,73,128)
 C 307 (A,77,128)
 C 313 (A,82,129) 2.2 uF
 C 314 (A,132,125)

CKSRYB474K10
 CKSRYB474K10
 CKSRYB474K10
 CCG1205
 CKSRYB104K16

R 942 (A,126,111)
 R 943 (A,131,112)
 R 944 (A,126,114)
 R 961 (A,148,133)
 R 962 (A,145,132)

RS1/16SS473J
 RS1/16SS682J
 RS1/4SA102J
 RS1/16SS181J
 RS1/16SS223J

C 318 (A,64,130) 10 uF/16 V
 C 327 (A,63,123)
 C 328 (A,52,130) 2.2 uF
 C 336 (A,87,125)
 C 407 (A,155,92)

DCH1263
 CKSRYB105K10
 CCG1205
 CKSRYB104K16
 CKSSYB103K16

R 963 (A,145,130)
 R 964 (A,145,131)
 R 965 (A,143,131)
 R 1003 (A,140,59)
 R 1008 (A,147,66)

RS1/16SS181J
 RS1/16SS223J
 RAB4CQ102J
 RS1/16SS473J
 RS1/10SR0R0J

C 409 (A,152,92)
 C 410 (A,152,105)
 C 411 (A,150,105)
 C 414 (A,144,89)
 C 420 (A,152,109)

CKSSYB224K6R3
 CCSSCH220J50
 CCSSCH331J50
 CKSSYB102K50
 CCSSCH471J50

R 1009 (A,137,58)
 R 1011 (A,101,120)
 R 1013 (A,101,126)

RS1/16SS473J
 RS1/16SS103J
 RS1/4SA102J

C 422 (A,144,86)
 C 425 (A,155,91)
 C 428 (A,147,92)
 C 430 (A,152,93)
 C 434 (A,158,104)

CKSSYB152K50
 CCSSCH390J50
 CKSSYB104K10
 CKSSYB102K50
 CCSSCH100D50

CAPACITORS

C 201 (A,94,115)
 C 202 (A,101,115)
 C 203 (A,89,115)
 C 204 (A,105,114)
 C 205 (A,92,115)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10

C 442 (A,148,80) 10 uF
 C 452 (A,160,78)
 C 453 (A,167,71)
 C 458 (A,144,81)
 C 459 (A,154,107)

CCG1192
 CKSRYB104K16
 CKSRYB105K10
 CCSSCH102J50
 CKSRYB104K16

C 206 (A,104,112)
 C 207 (A,89,108)
 C 208 (A,91,106)
 C 209 (A,90,104) 10 uF
 C 210 (A,93,106)

CKSRYB105K10
 CKSSYB104K10
 CKSSYB104K10
 CCG1192
 CCSSCH151J50

C 461 (A,154,81)
 C 531 (A,90,89)
 C 532 (A,92,89)
 C 551 (A,27,111)
 C 552 (A,35,108)

CCSSCH330J50
 CKSSYB104K10
 CKSSYB104K10
 XCEVW221M16
 CKSRYB105K16

C 211 (A,107,106)
 C 212 (A,105,108) 10 uF
 C 213 (A,106,105)
 C 214 (A,106,104)
 C 215 (A,105,102)

CCSSCH151J50
 CCG1192
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

C 553 (A,37,111)
 C 555 (A,47,113)
 C 556 (A,65,111)
 C 557 (A,60,112)
 C 560 (A,109,21)

CKSSYB103K16
 CKSSYB682K25
 CEVQW221M6R3
 CKSRYB105K10
 CKSRYB105K10

C 216 (A,88,100) 10 uF
 C 217 (A,92,100)
 C 218 (A,112,109)
 C 219 (A,110,102) 10 uF
 C 220 (A,103,98) 10 uF

CCG1192
 CKSSYB104K10
 XCEVW470M16
 CCG1192
 CCG1192

C 561 (A,103,23)
 C 564 (A,58,112) 4.7 uF
 C 565 (A,37,107) 4.7 uF
 C 568 (A,64,101) 10 uF
 C 572 (A,69,121)

CKSRYB105K10
 CCG1201
 CCG1222
 CCG1192
 CKSRYB104K16

C 223 (A,87,101)
 C 224 (A,112,103)
 C 229 (A,108,111)
 C 236 (A,107,103)
 C 237 (A,92,114)

CKSSYB102K50
 CKSSYB104K10
 CKSSYB102K50
 CKSRYB105K10
 CKSRYB105K10

C 601 (A,102,61)
 C 602 (A,110,62)
 C 603 (A,113,60)
 C 604 (A,116,59)
 C 605 (A,118,60)

CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

C 238 (A,107,113)
 C 239 (A,105,116)
 C 240 (A,93,111)
 C 241 (A,86,100)
 C 251 (A,26,125) 10 uF

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSSYB102K50
 CCG1192

C 606 (A,125,68)
 C 607 (A,127,72)
 C 608 (A,128,76)
 C 609 (A,125,69)
 C 610 (A,125,72)

CKSSYB104K10
 CCSSCH120J50
 CCSSCH120J50
 CKSSYB104K10
 CKSSYB104K10

C 252 (A,22,125) 10 uF
 C 253 (A,22,128)
 C 254 (A,17,126)
 C 260 (A,34,131)
 C 261 (A,6,132)

CCG1192
 CCSSCH101J50
 CCSSCH101J50
 CKSSYB103K16
 CKSSYB104K10

C 611 (A,124,77)
 C 612 (A,125,81)
 C 613 (A,124,84)
 C 620 (A,116,87)
 C 621 (A,112,87)

CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	C 214	(B,17,26)	CKSSYB473K16
	C 215	(B,19,29)	CKSSYB104K10
	C 216	(B,13,33)	CKSSYB152K50
	C 217	(B,10,35)	CCSSCH390J50
	C 218	(B,10,37)	CCSSCH5R0C50

S 1832	(A,97,3) Push Switch	CSG1155
S 1833	(A,105,3) Push Switch	CSG1155
S 1834	(A,82,3) Push Switch	CSG1155
S 1835	(A,7,29) Push Switch	CSG1155
S 1836	(A,21,17) Encoder (MULTI-CNTROL)	CSD1193

	C 219	(B,14,35)	CKSSYB104K10
	C 220	(A,18,39)	CKSSYB104K10
	C 221	(B,14,32)	CKSSYB104K10
	C 222	(B,14,37)	CKSSYB104K10
	C 223	(B,13,42)	CCSSCH680J50

CN1941	(B,107,7) Connector	CKS6451
JA1901	(A,153,23) Connector	CKS6443
JA1921	(A,154,8) Jack	CKN1090
V 1801	(A,51,30) Segment LCD	CAW2041

B	C 224	(B,14,45)	CCSSCH470J50
	C 225	(B,14,47)	CKSSYB103K16
	C 228	(B,10,34)	CCSSCH180J50
	C 229	(B,9,41)	CKSSYB104K10
	C 233	(B,33,46)	CKSSYB103K16

RESISTORS

R 1801	(B,61,20)	RS1/16SS103J
R 1821	(B,33,25)	RS1/16SS273J
R 1841	(B,32,7)	RS1/16SS222J
R 1842	(B,32,5)	RS1/16SS102J
R 1843	(B,23,7)	RS1/16SS222J

	C 236	(B,8,41)	CKSSYB104K10
	C 238	(A,26,45)	CKSRYB104K16
	C 299	(A,26,43)	CKSSYB104K10
	C 302	(B,29,12)	CKSSYB102K50
	C 303	(B,30,12)	CKSSYB102K50

R 1844	(B,23,5)	RS1/16SS102J
R 1845	(B,14,7)	RS1/16SS222J
R 1846	(B,12,7)	RS1/16SS102J
R 1847	(B,24,7)	RS1/16SS470J
R 1849	(B,14,6)	RS1/16SS470J

C	C 304	(B,28,12)	CKSSYB223K16
	C 305	(B,27,12)	CKSSYB104K10
	C 306	(A,32,7)	CKSSYB104K10
	C 307	(A,42,19)	CKSRYB105K10
	C 308	(A,32,16)	CKSRYB105K10

R 1851	(B,10,7)	RS1/16SS470J
R 1865	(B,102,23)	RS1/16SS222J
R 1866	(B,111,26)	RS1/16SS102J
R 1867	(B,114,23)	RS1/16SS222J
R 1868	(B,114,25)	RS1/16SS102J

R 1869	(B,123,26)	RS1/16SS222J
R 1870	(B,123,28)	RS1/16SS102J
R 1871	(B,112,23)	RS1/16SS470J
R 1873	(B,122,26)	RS1/16SS470J
R 1875	(B,132,25)	RS1/16SS470J

R 1884	(B,46,23)	RS1/10SR221J
R 1887	(B,47,22)	RS1/16SS101J
R 1888	(B,38,22)	RS1/16SS101J
R 1921	(B,133,8)	RS1/10SR0R0J
R 1922	(B,130,5)	RS1/10SR0R0J

D	IC 1801	(B,81,19) Mask UC IC	PDC205A
	IC 1951	(A,154,37) IR RC REC Module(B,D)	PNJ4833M
	Q 1841	(B,27,8) Bipolar TR	LSCR523UB
	Q 1842	(B,19,8) Bipolar TR	LSCR523UB
	Q 1843	(B,8,16) Bipolar TR	LSCR523UB

R 1923	(B,138,5)	RS1/10SR0R0J
R 1941	(B,77,4)	RS1/10SR222J
R 1942	(B,74,5)	RS1/10SR222J
R 1952	(B,142,30) (C)	RS1/16SS473J
R 1953	(B,141,24) (B,D)	RS1/10SR101J

	Q 1847	(B,107,22) Bipolar TR	LSCR523UB
	Q 1848	(B,117,24) Bipolar TR	LSCR523UB
	Q 1849	(B,127,26) Bipolar TR	LSCR523UB
	D 1841	(A,3,17) LED	SMLVN6RGB2UK(B)
	D 1842	(A,38,17) LED	SMLVN6RGB2UK(B)

CAPACITORS

C 1801	(B,70,19) 4.7 uF	CCG1212
C 1802	(B,70,21)	CKSSYB104K10
C 1803	(B,75,9)	CKSSYB104K10
C 1804	(B,76,9)	CKSSYB104K10
C 1805	(B,77,9)	CKSSYB104K10

E	D 1843	(A,160,23) LED	SMLVN6RGB2UK(B)
	D 1844	(A,145,20) LED	SMLVN6RGB2UK(B)
	D 1845	(A,45,20) LED	SMLVN6RGB2UK(B)
	X 1801	(B,66,20) Ceramic Resonator 5.00 MHz	CSS1547
	S 1821	(A,50,3) Push Switch	CSG1155

C 1856	(B,48,25)	CKSRYB105K16
C 1901	(B,160,31)	CKSRYB104K16
C 1902	(B,138,13)	CKSRYB102K50
C 1904	(B,137,26)	CKSRYB105K10
C 1905	(B,46,20)	CKSRYB105K10

	S 1822	(A,9,39) Push Switch	CSG1155
	S 1823	(A,64,3) Push Switch	CSG1155
	S 1824	(A,6,6) Push Switch	CSG1155
	S 1825	(A,5,22) Push Switch	CSG1155
	S 1826	(A,38,27) Push Switch	CSG1155

C 1923	(B,136,8)	CCSRCH221J50
C 1951	(B,142,27) 10 uF(B,D)	CCG1192

F	S 1827	(A,38,8) Push Switch	CSG1155
	S 1828	(A,73,3) Push Switch	CSG1155
	S 1829	(A,143,3) Push Switch	CSG1155
	S 1830	(A,120,3) Push Switch	CSG1155
	S 1831	(A,129,3) Push Switch	CSG1155

D**Unit Number : QWM4118(B,D)****Unit Number : QWM4117(C)****Unit Name : Keyboard Unit****MISCELLANEOUS**