


KDC-138/138CR/139/139S


EXPLODED VIEW (CD MECHANISM)

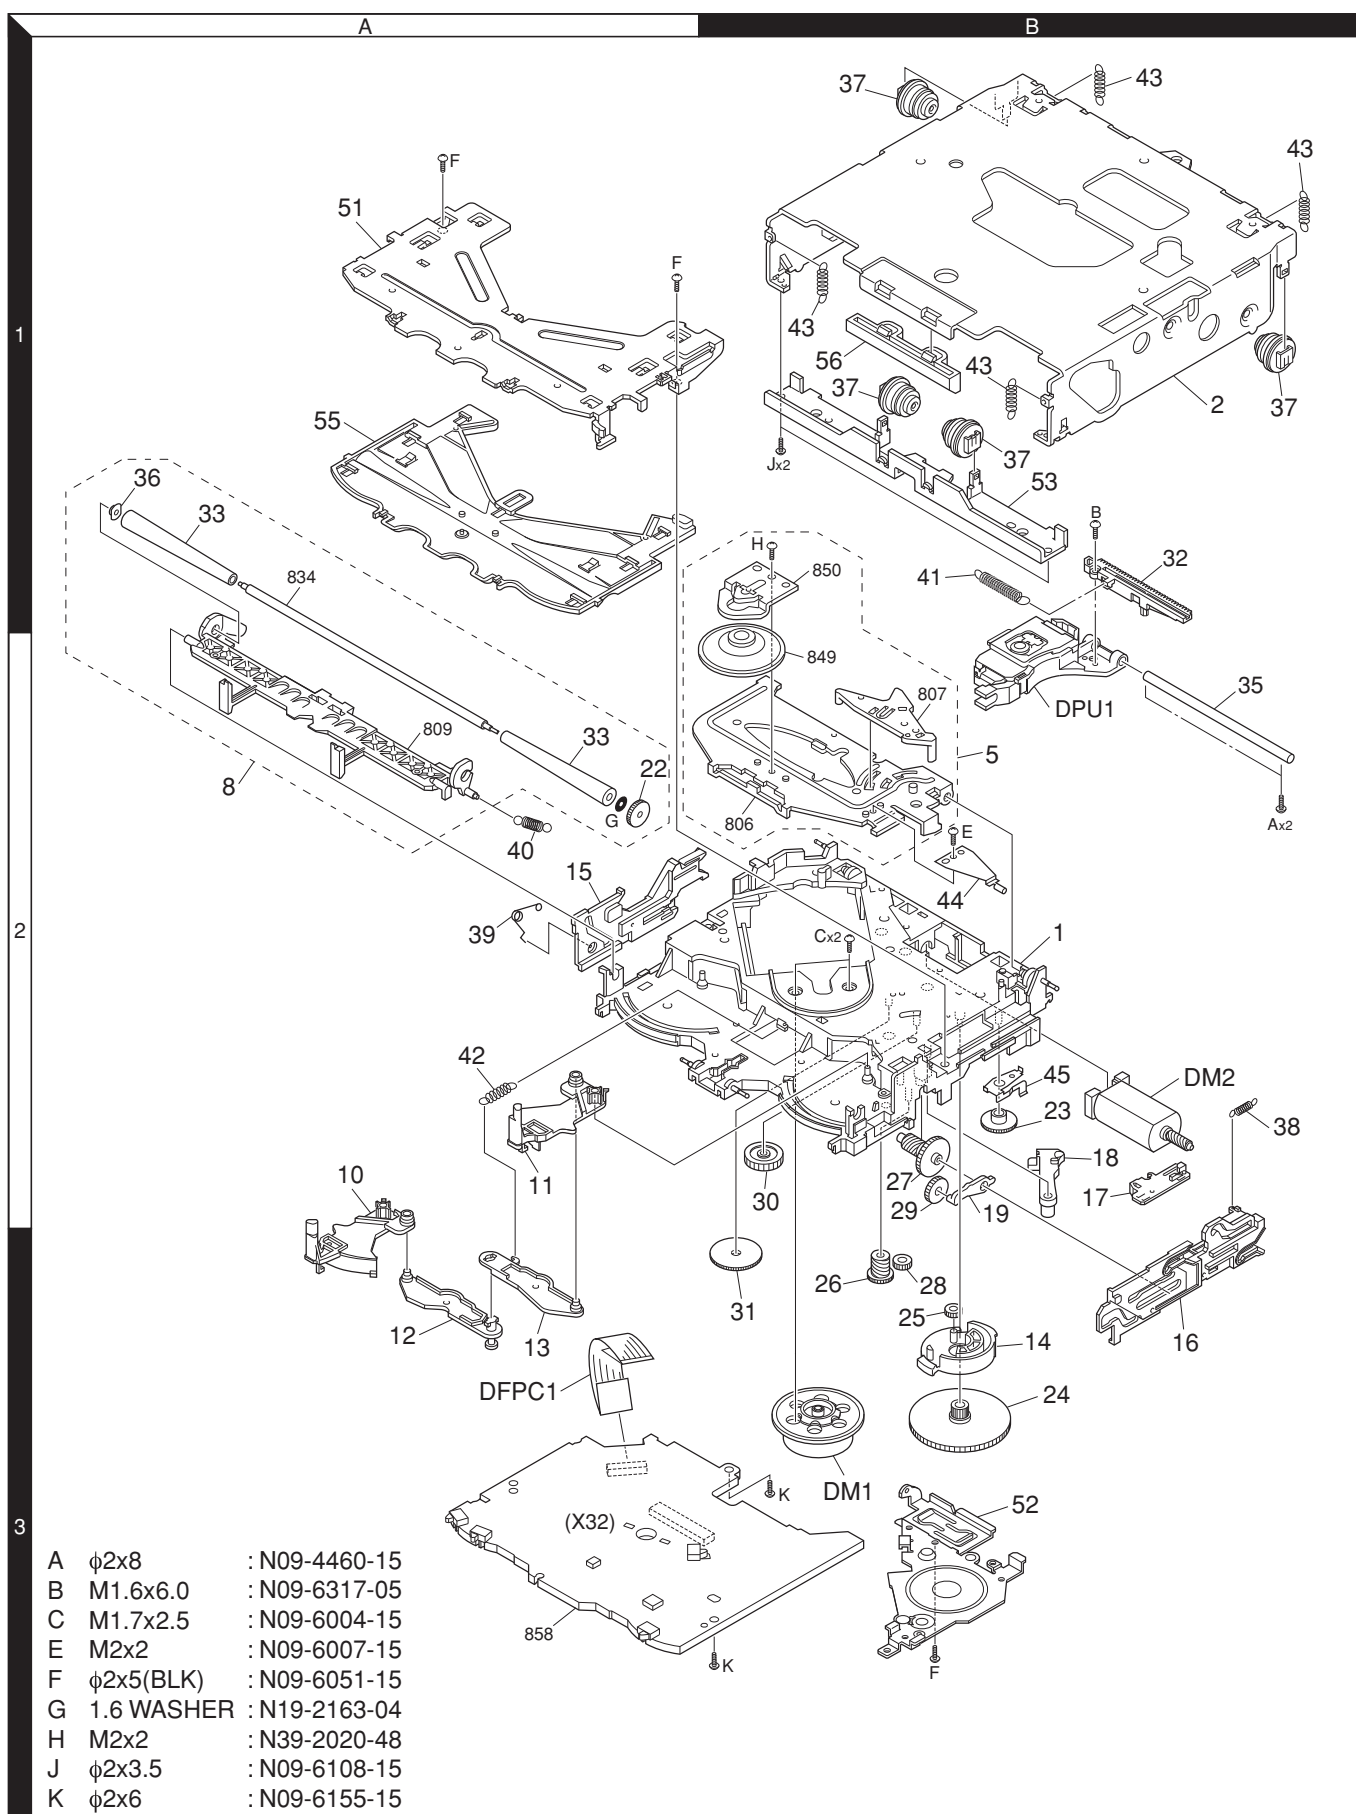

Parts with the exploded numbers larger than 700 are not supplied.

KDC-138/138CR/139/139S

EXPLODED VIEW (UNIT)

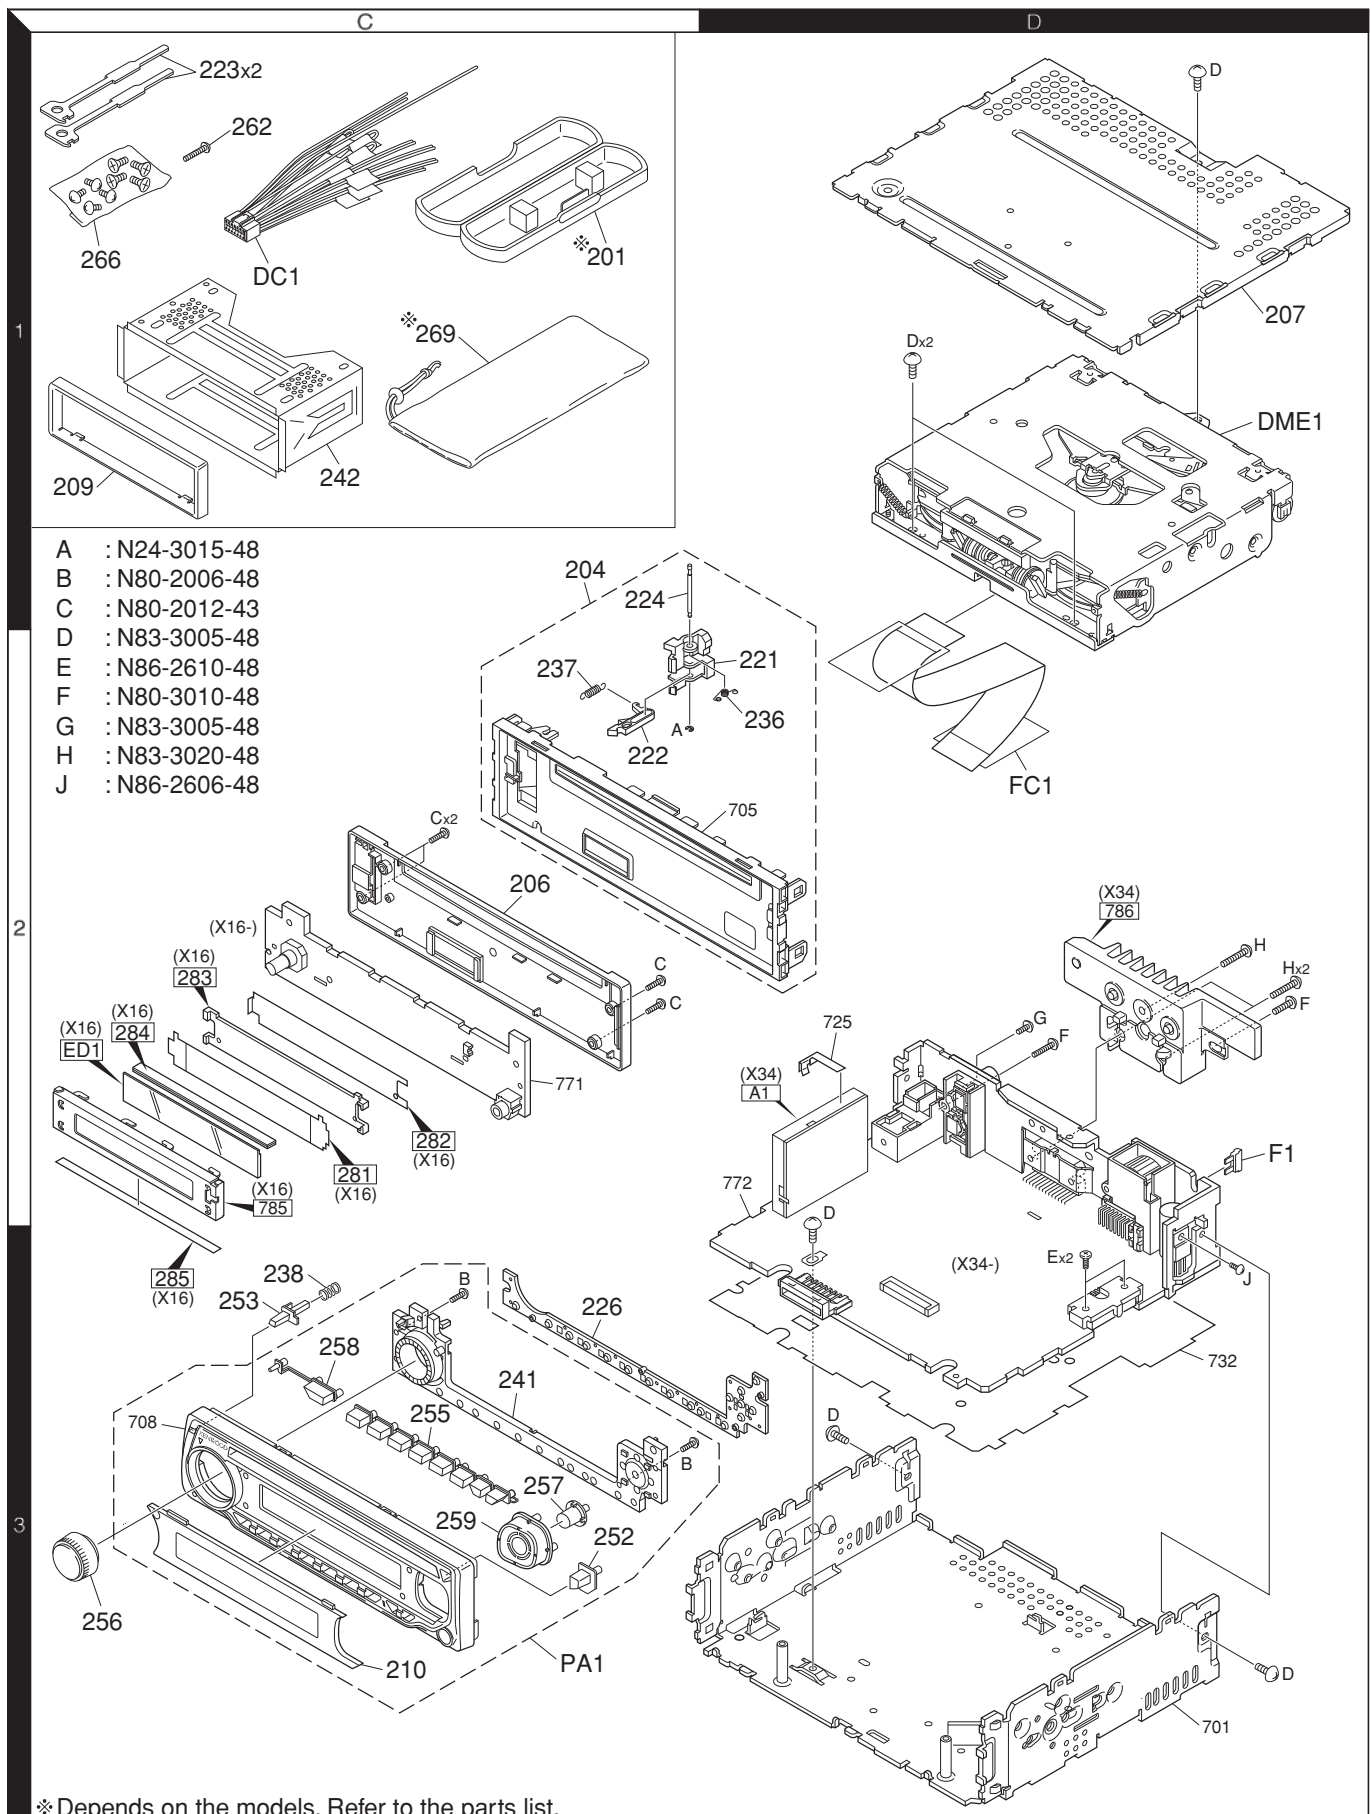

KDC-138/138CR/139/139S

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-138/138CR/139/139S					
201	1C		A02-2736-03	PLASTIC CABINET ASSY	M6M7
204	1C	*	A22-3149-03	SUB PANEL ASSY	
206	2C	*	A46-1861-01	REAR COVER	
207	1D		A52-0804-12	TOP PLATE	
PA1	3C	*	A64-4276-02	PANEL ASSY	K3
PA1	3C	*	A64-4277-02	PANEL ASSY	K4
PA1	3C	*	A64-4286-02	PANEL ASSY	M6
PA1	3C	*	A64-4287-02	PANEL ASSY	M7
-			B46-0690-04	ID CARD	
-		*	B64-3898-00	INST. MANUAL (ENG.FRE.SPA.)	K3K4
-		*	B64-3901-00	INST. MANUAL (ENG.S-CHI.)	M6M7
-		*	B64-3902-00	INST. MANUAL (ARABIC)	M6M7
209	1C		B07-3122-01	ESCUTCHEON	K3K4M6
209	1C	*	B07-3229-01	ESCUTCHEON	M7
210	3C	*	B10-4999-01	FRONT GLASS	K3
210	3C	*	B10-5000-01	FRONT GLASS	K4
210	3C	*	B10-5007-01	FRONT GLASS	M6M7
221	2D		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C		D10-4589-04	LEVER	
224	1C		D21-2329-04	SHAFT	
△ 226	3C	*	E29-2115-02	CONDUCTIVE RUBBER	
DC1	1C		E30-6415-15	DC CORD	
FC1	2D	*	E39-0958-05	FLAT CABLE	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2D		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING (REL)	
-		*	H54-4154-03	ITEM CARTON CASE	K3
-		*	H54-4155-03	ITEM CARTON CASE	K4
-		*	H54-4164-03	ITEM CARTON CASE	M6
-		*	H54-4165-03	ITEM CARTON CASE	M7
241	3C	*	J19-7186-01	HOLDER	
242	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
252	3C	*	K24-4783-04	PUSH KNOB (EJECT)	
253	3C	*	K24-4786-04	PUSH KNOB (RELEASE)	
255	3C	*	K25-1906-02	PUSH KNOB (PRESET)	
256	3C	*	K28-0272-04	KNOB ASSY (VOL)	
257	3C	*	K24-4789-04	PUSH KNOB (PLAY/PAUSE)	
258	3C	*	K25-1909-03	PUSH KNOB (RESET/SRC)	
259	3C	*	K25-1912-03	PUSH KNOB (FM/AM)	
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	
266	1C		N99-1757-05	SCREW SET	
A	2C		N24-3015-48	E TYPE RETAINING RING	
B	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	2C		N80-2012-43	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N86-2610-48	BINDING HEAD TAPTITE SCREW	
269	1C		W01-1692-05	CARRYING CASE	K4

K3 : KDC-138 **K4** : KDC-138CR **M6** : KDC-139 **M7** : KDC-139S
(**E** : Europe **K** : North America **M** : Other Areas)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DME1	1D	*	X92-5860-06	MECHANISM ASSY (DXM-6C06W)	
SWITCH UNIT (X16-616x-xx)					
281	2C		B11-1489-04	OPTICAL DIFFUSER	
282	2C		B11-1495-04	REFLECTION SHEET	
283	2C	*	B19-2463-02	LIGHTING BOARD	
D1,2		*	B30-1779-05	LED (1608,SR)	K3M7
D3-8		*	B30-1780-05	LED (1608,PG)	K4M6
D9-11		*	B30-1779-05	LED (1608,SR)	K3M7
D10-19		*	B30-1780-05	LED (1608,PG)	K4M6
D12			B30-1566-05	LED (1608,RED)	K3M7
D13-18		*	B30-1779-05	LED (1608,SR)	K3M7
D19,20			B30-1566-05	LED (1608,RED)	K3M7
D20			B30-1566-05	LED (1608,RED)	K4M6
D21		*	B30-1779-05	LED (1608,SR)	K3M7
D21		*	B30-1780-05	LED (1608,PG)	K4M6
D22			B30-1698-05	LED	
D23		*	B30-1779-05	LED (1608,SR)	K3M7
ED1	2C		B38-1183-05	LCD	
C1			CK73GB1H102K	CHIP C 1000PF K	K4
C2			CK73GB1H104K	CHIP C 0.10UF K	
C5			CK73GB1A105K	CHIP C 1.0UF K	
C11,12			CK73GB1H103K	CHIP C 0.010UF K	
284	2C	*	E29-2116-04	CONDUCTIVE RUBBER	
J1			E59-0852-05	RECTANGULAR PLUG	
J2			E11-0649-05	3.5D PHONE JACK	
285	3C		F19-1468-04	BLIND PLATE	
CP2			RK74GA1J101J	CHIP-COM 100 J 1/16W	
R1			RK73GB2A393J	CHIP R 39K J 1/10W	
R2			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R3			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R4			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R7,8			RK73GB2A221J	CHIP R 220 J 1/10W	
R10			RK73GB2A221J	CHIP R 220 J 1/10W	
R12			RK73GB2A101J	CHIP R 100 J 1/10W	K4
R21			RK73EB2E431J	CHIP R 430 J 1/4W	
R24			RK73FB2B471J	CHIP R 470 J 1/8W	K3M7
R24-29			RK73FB2B471J	CHIP R 470 J 1/8W	K4M6
R25			RK73FB2B751J	CHIP R 750 J 1/8W	K3M7
R26-28			RK73FB2B471J	CHIP R 470 J 1/8W	K3M7
R29			RK73FB2B751J	CHIP R 750 J 1/8W	K3M7
R30			RK73GB2A104J	CHIP R 100K J 1/10W	K4
S1			T99-0474-05	ROTARY ENCODER	
IC1		*	LC75857E-E	MOS-IC	
IC2		*	PIC95603	ANALOGUE IC	K4
CD PLAYER UNIT (X32-5980-04) IN CD MECHA					
C1			CK73GB1A105K	CHIP C 1.0UF K	
C3			CK73GB0J475K	CHIP C 4.7UF K	
C15,16			CK73GB1H222K	CHIP C 2200PF K	
C21			C93-1451-05	CHIP C 0.10UF K	
C24			C93-1451-05	CHIP C 0.10UF K	
C26			C93-1451-05	CHIP C 0.10UF K	

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5980-04) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description	Destination
C31			CK73GB1C224K	CHIP C 0.22UF K	
C33			CK73GB1H472K	CHIP C 4700PF K	
C34			CK73GB1H682K	CHIP C 6800PF K	
C35			CK73GB1H102K	CHIP C 1000PF K	
C36,37			CK73GB1H682K	CHIP C 6800PF K	
C38			CK73GB1H471K	CHIP C 470PF K	
C39			CK73FB1A225K	CHIP C 2.2UF K	
C51			CK73FB0J106K	CHIP C 10UF K	
C52			CK73GB1A105K	CHIP C 1.0UF K	
C53			CK73GB1H223K	CHIP C 0.022UF K	
C54			CK73GB1H332K	CHIP C 3300PF K	
C55			CK73GB1A334K	CHIP C 0.33UF K	
C56			CK73FB0J475K	CHIP C 4.7UF K	
C57			C93-1451-05	CHIP C 0.10UF K	
C58			CC73GCH1H681J	CHIP C 680PF J	
C59			C93-1451-05	CHIP C 0.10UF K	
C60			CK73GB1H223K	CHIP C 0.022UF K	
C61			CC73GCH1H102J	CHIP C 1000PF J	
C62			CK73GB1C823K	CHIP C 0.082UF K	
C63			CC73GCH1H102J	CHIP C 1000PF J	
C64			CK73GB1A334K	CHIP C 0.33UF K	
C71			CK73FB0J106K	CHIP C 10UF K	
C73			CK73FB0J106K	CHIP C 10UF K	
C75			C93-1451-05	CHIP C 0.10UF K	
C77			C93-1451-05	CHIP C 0.10UF K	
C83			CK73GB1H103K	CHIP C 0.010UF K	
C84			CK73GB1A105K	CHIP C 1.0UF K	
C85			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
CP1,2			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP4			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP11			RK74GA1J103J	CHIP-COM 10K J 1/16W	
R13,14			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R15			RK73GB2A103J	CHIP R 10K J 1/10W	
R16			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R27			RK73GH2A223D	CHIP R 22K D 1/10W	
R28			RK73GH2A273D	CHIP R 27K D 1/10W	
R31			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R32,33			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R34			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R38,39			RK73GB2A103J	CHIP R 10K J 1/10W	
R41			RK73GB2A103J	CHIP R 10K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R53			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R54,55			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R56			RK73GB2A473J	CHIP R 47K J 1/10W	
R57			RK73GB2A273J	CHIP R 27K J 1/10W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R59			RK73GB2A273J	CHIP R 27K J 1/10W	
R60,61			RK73GB2A153J	CHIP R 15K J 1/10W	
R62			RK73GB2A133J	CHIP R 13K J 1/10W	
R63			RK73GB2A183J	CHIP R 18K J 1/10W	
R64			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R65,66			RK73GB2A153J	CHIP R 15K J 1/10W	
R73			RK73GB2A910J	CHIP R 91 J 1/10W	
R74			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R75			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R76			RK73GB2A104J	CHIP R 100K J 1/10W	
R77			RK73GB2A823J	CHIP R 82K J 1/10W	
R78			RK73GB2A821J	CHIP R 820 J 1/10W	
R79			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R82-85			RK73GB2A103J	CHIP R 10K J 1/10W	
R86			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R87			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R88,89			RK73GB2A103J	CHIP R 10K J 1/10W	
R91,92			RK73GB2A103J	CHIP R 10K J 1/10W	
R100			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R103			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R105			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R108			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R112			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R131			RK73GB2A103J	CHIP R 10K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAN202U	DIODE	
D2			MA2S784-F	DIODE	
D3			DAN202U	DIODE	
D4			DA204U	DIODE	
IC1			MN6627781KC	MOS-IC	
IC2			XC6219B332PR	ANALOGUE IC	
IC6			BA5824FP	ANALOGUE IC	
Q3			UM6K1N	DUAL FET	
Q4			UMD9N	TRANSISTOR	
Q6			2SB1295-E	TRANSISTOR	
Q7			2SB0970	TRANSISTOR	
Q8,9			DTC114YUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-564x-xx)					
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	K3K4 M6M7
C2			CD04AB1C220M	ELECTRO 22UF 16WV	
C3			CK73GB1H104K	CHIP C 0.10UF K	
C3,4			CK73GB1H104K	CHIP C 0.10UF K	
C5			CD04AR1C221M	ELECTRO 220UF 16WV	
C7			CD04AB0J101M	ELECTRO 100UF 6.3WV	K3K4 M6M7
C9			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73FB1A225K	CHIP C 2.2UF K	
C12			CK73GB1C104K	CHIP C 0.10UF K	
C14			CK73GB1C104K	CHIP C 0.10UF K	
C101,102			CK73GB1H103K	CHIP C 0.010UF K	K3K4 M6M7
C202			CC73GCH1H180J	CHIP C 18PF J	
C203			CC73GCH1H220J	CHIP C 22PF J	
C204			CK73GB1C104K	CHIP C 0.10UF K	
C205			CK73GB1H102K	CHIP C 1000PF K	
C301,302			CD04AB1HR47M	ELECTRO 0.47UF 50WV	

K3 : KDC-138 K4 : KDC-138CR M6 : KDC-139 M7 : KDC-139S
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

KDC-138/138CR/139/139S

PARTS LIST

ELECTRIC UNIT (X34-564x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
C306,307 C308 C310,311 C401 C403			CK73GB1C104K CD04AB0J470M CK73GB1H102K CD04AB1C470M CD04AB1H010M	CHIP C 0.10UF K ELECTRO 47UF 6.3WV CHIP C 1000PF K ELECTRO 47UF 16WV ELECTRO 1.0UF 50WV	
C509,510 C701,702 C805 C807 C809			CK73GB1C104K CD04AB1V100M CD04AB1C470M CK73GB1A105K CK73GB1A105K	CHIP C 0.10UF K ELECTRO 10UF 35WV ELECTRO 47UF 16WV CHIP C 1.0UF K CHIP C 1.0UF K	K3M6M7
C811 C812 C813 C814 C815			CK73GB1A474K CK73GB1A224K CK73GB1A474K CK73GB1A224K CK73GB1A474K	CHIP C 0.47UF K CHIP C 0.22UF K CHIP C 0.47UF K CHIP C 0.22UF K CHIP C 0.47UF K	
C816 C817 C818 C819,820 C901,902			CK73GB1A224K CK73GB1A474K CK73GB1A224K CK73GB1A105K CD04AB1C101M	CHIP C 0.22UF K CHIP C 0.47UF K CHIP C 0.22UF K CHIP C 1.0UF K ELECTRO 100UF 16WV	
CN2 J1 J2 J3 J5			E41-1822-05 E58-0991-05 E04-0332-05 E58-1060-05 E63-0941-05	FLAT CABLE CONNECTOR RECTANGULAR RECEPTACLE RF COAXIAL CABLE RECEPTACLE RECTANGULAR RECEPTACLE PIN JACK	K3M6M7
L1 L401 X1 X2			L33-2319-05 L40-4791-58 L78-1218-05 L77-2920-05	CHOKE COIL ASSY SMALL FIXED INDUCTOR RESONATOR CRYSTAL RESONATOR	
F G H J	2D 2D 2D 3D		N80-3010-48 N83-3005-48 N83-3020-48 N86-2606-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
R1 R2-5 R3-5 R101 R101,102			RD14BB2C102J RD14BB2C103J RD14BB2C103J RD14BB2C472J RD14BB2C472J	RD 1.0K J 1/6W RD 10K J 1/6W RD 10K J 1/6W RD 4.7K J 1/6W RD 4.7K J 1/6W	K3M6M7 K4 K3 M6M7
R103 R104 R105 R106 R107			RD14BB2C103J RK73GB2A473J RK73GB2A104J RD14BB2C332J RD14BB2C333J	RD 10K J 1/6W CHIP R 47K J 1/10W CHIP R 100K J 1/10W RD 3.3K J 1/6W RD 33K J 1/6W	
R108 R109 R110 R111 R112			RK73GB2A103J RD14BB2C223J RK73FB2B683J RK73GB2A393J RD14BB2C203J	CHIP R 10K J 1/10W RD 22K J 1/6W CHIP R 68K J 1/8W CHIP R 39K J 1/10W RD 20K J 1/6W	
R113 R114,115 R116,117 R203,204 R205-207			RK73GB2A104J RK73GB2A103J RD14BB2C103J RK73GB2A103J RK73GB2A473J	CHIP R 100K J 1/10W CHIP R 10K J 1/10W RD 10K J 1/6W CHIP R 10K J 1/10W CHIP R 47K J 1/10W	
R208			RD14BB2C473J	RD 47K J 1/6W	

Ref. No.	Ad	New	Parts No.	Description	Destination
R209,210 R218 R223 R225 R225,226			RD14BB2C471J RK73GB2A223J RK73GB2A222J RK73GB2A473J RK73GB2A473J	RD 470 J 1/6W CHIP R 22K J 1/10W CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	K4 M6M7
R226 R226 R301 R302 R306			RK73GB2A223J RK73GB2A473J RK73GB2A222J RD14BB2C101J RK73GB2A472J	CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W RD 100 J 1/6W CHIP R 4.7K J 1/10W	K4 K3
R307 R310,311 R313 R314 R315,316			RK73GB2A222J RK73GB2A102J RK73GB2A102J RK73GB2A104J RK73GB2A472J	CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W	
R317 R318 R319 R320 R330			RK73GB2A222J RK73GB2A472J RK73GB2A222J RK73GB2A472J RD14BB2C101J	CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W RD 100 J 1/6W	
R331 R332 R333,334 R334 R335			RK73GB2A392J RD14BB2C101J RD14BB2C102J RD14BB2C102J RK73GB2A473J	CHIP R 3.9K J 1/10W RD 100 J 1/6W RD 1.0K J 1/6W RD 1.0K J 1/6W CHIP R 47K J 1/10W	K4 K3M6M7
R336-339 R340 R341 R342 R343			RD14BB2C222J RK73GB2A225J RD14BB2C222J RK73GB2A392J RD14BB2C102J	RD 2.2K J 1/6W CHIP R 2.2M J 1/10W RD 2.2K J 1/6W CHIP R 3.9K J 1/10W RD 1.0K J 1/6W	K4
R344,345 R346 R347 R348,349 R402,403			RD14BB2C4R7J RD14BB2C2R2J RK73GB2A102J RK73GB2A103J RD14BB2C471J	RD 4.7 J 1/6W RD 2.2 J 1/6W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W RD 470 J 1/6W	
R406 R407 R408 R409 R491,492			RK73GB2A223J RK73GB2A103J RK73GB2A152J RK73GB2A392J RK73GB2A100J	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 1.5K J 1/10W CHIP R 3.9K J 1/10W CHIP R 10 J 1/10W	K3M6M7 K3M6M7 K3M6M7 K3M6M7
R493 R502 R504 R598 R599			RD14BB2C100J RK73GB2A472J RK73GB2A472J RK73GB2A223J RK73GB2A102J	RD 10 J 1/6W CHIP R 4.7K J 1/10W CHIP R 4.7K J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W	
R701,702 R703,704 R705,706 R793 R801			RK73GB2A331J RD14BB2C223J RD14BB2C181J RK73EB2E000J RK73GB2A102J	CHIP R 330 J 1/10W RD 22K J 1/6W RD 180 J 1/6W CHIP R 0.0 J 1/4W CHIP R 1.0K J 1/10W	K3M6M7 K3M6M7 K3M6M7 K3M6M7
R802 R803 R804 R805 R806			RK73GB2A333J RK73GB2A473J RK73GB2A221J RK73GB2A223J RK73GB2A183J	CHIP R 33K J 1/10W CHIP R 47K J 1/10W CHIP R 220 J 1/10W CHIP R 22K J 1/10W CHIP R 18K J 1/10W	

K3 : KDC-138 K4 : KDC-138CR M6 : KDC-139 M7 : KDC-139S
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

KDC-138/138CR/139/139S

PARTS LIST

ELECTRIC UNIT (X34-564x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R808			RK73GB2A100J	CHIP R 10 J 1/10W	
R891			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R901,902			RK73GB2A334J	CHIP R 330K J 1/10W	
R903			RK73GB2A153J	CHIP R 15K J 1/10W	
R904			RK73GB2A223J	CHIP R 22K J 1/10W	
R905,906			RK73GB2A104J	CHIP R 100K J 1/10W	
R907-914			RD14BB2C104J	RD 100K J 1/6W	
R915			RK73GB2A104J	CHIP R 100K J 1/10W	
R958			RK73GB2A000J	CHIP R 0.0 J 1/10W	K3M6M7
R961,962			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R971			RK73GB2A000J	CHIP R 0.0 J 1/10W	
D1			S2V60-5009F46	DIODE	
D2			MTZJ8.2 (B)	ZENER DIODE	
D3			D1F60-5063	DIODE	
D4			1SS133	DIODE	M6M7
D101,102			D1F60-5063	DIODE	K3M6M7
D103			1SR139-400T64	DIODE	M6M7
D104			D1F60-5063	DIODE	M6M7
D105			MTZJ4.7 (B)	ZENER DIODE	
D106-108			MTZJ6.8 (B)	ZENER DIODE	
D109			1SS133	DIODE	
D110			BAV70W	DIODE	
D304-306			MTZJ6.8 (B)	ZENER DIODE	
D401			1SS133	DIODE	
D404			1SS133	DIODE	K3M6M7
D801-803			1SS133	DIODE	
D901			MTZJ4.7 (B)	ZENER DIODE	
IC1		*	30302MAPA83FP	MICROCONTROLLER IC	
IC2			E-TDA7419	ANALOGUE IC	K3M6M7
IC3			E-TDA7418	ANALOGUE IC	K4
IC4			BD4913-V4	ANALOGUE IC	
IC6			KKZ10Z	ANALOGUE IC	
IC8			S-80836CNNB-J	MOS-IC	
Q2			KTA1046-P	TRANSISTOR	
Q3			2SC4081	TRANSISTOR	
Q11			RT1N241M	TRANSISTOR	
Q12			RT1P241M	TRANSISTOR	
Q13			RT1N241M	TRANSISTOR	M6M7
Q14			RT1P241M	TRANSISTOR	M6M7
Q101-103			2SC4081	TRANSISTOR	
Q104,105			RT1N441M	TRANSISTOR	
Q301			RT1P144M	TRANSISTOR	
Q402			2SC4081	TRANSISTOR	K3M6M7
Q701,702			RT1N430M	TRANSISTOR	K3M6M7
Q705			RT1P241M	TRANSISTOR	K3M6M7
Q801			RT1N144M	TRANSISTOR	
Q901			2SC4081	TRANSISTOR	
Q902,903			2SA1576A	TRANSISTOR	
TH1			PRF18BE471QS2	POSITIVE RESISTOR	
A1	2D	*	X86-4030-14	FRONT-END UNIT	
MECHANISM ASSY (X92-5860-06) DXM-6C06W					
1	2B		A10-5328-31	CHASSIS	
2	1B		A10-5329-11	CHASSIS	

Ref. No.	Add	New	Parts No.	Description	Destination
5	2B		D10-4910-13	ARM ASSY	
8	2A		D10-4911-23	LEVER ASSY	
10	2A		D10-4906-33	ARM	
11	2A		D10-4907-33	ARM	
12	3A		D10-4908-03	ARM	
13	3A		D10-4909-03	ARM	
14	3B		D10-4915-03	ARM	
15	2A		D10-4916-23	SLIDER	
16	3B		D10-4914-12	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4917-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2400-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-4615-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B	*	G02-1399-14	FLAT SPRING	
45	2B	*	G02-1547-14	FLAT SPRING	
51	1A		J22-0473-21	MOUNTING HARDWARE	
52	3B		J22-0474-12	MOUNTING HARDWARE	
53	1B	*	J22-0519-13	MOUNTING HARDWARE	
55	1A		J90-1138-41	GUIDE	
56	1B		J90-1023-03	GUIDE	
DPC1	3A		J86-0039-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-6317-05	TAPTITE SCREW (1.6X6.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (PT2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-48	PAN HEAD MACHINE SCREW (M2X2)	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	

K3 : KDC-138 K4 : KDC-138CR M6 : KDC-139 M7 : KDC-139S
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

KDC-138/138CR/139/139S

PARTS LIST

MECHANISM ASSY (X92-5860-06) DXM-6C06W

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation