


9. EXPLODED VIEWS AND PARTS LIST

NOTES :

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to  mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

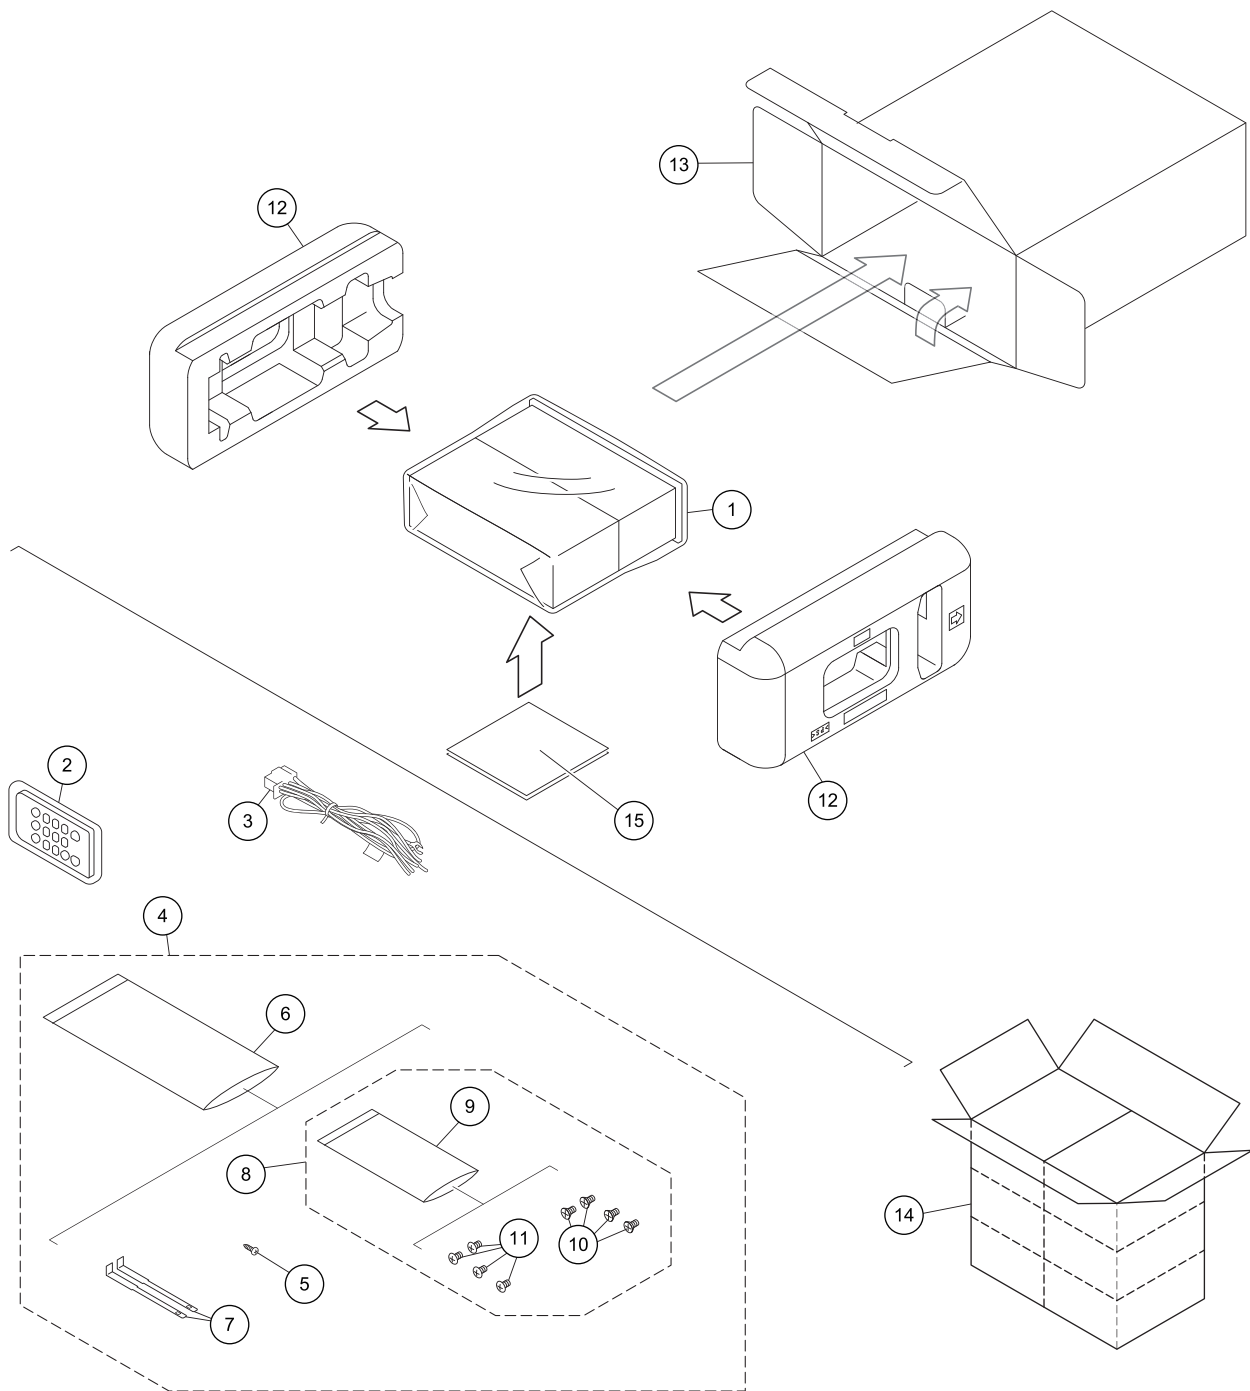


	5		6		7		8	
PACKING SECTION PARTS LIST								
	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1	Polyethylene Bag	CEG1173		10	Screw	CRZ50P090FTC	
	2	Remote Control Unit	CXE3669					
	3	Cord Assy	QDP3013		11	Screw	TRZ50P080FTC	A
*	4	Accessory Assy	QEA3008		12	Protector	QHP3016	
	5	Screw	BPZ20P060FTC		13	Unit Box	YHG5571	
					14	Contain Box	YHL5571	
	6	Polyethylene Bag	CEG1160		15-1	Owner's Manual	YRD5322	
	7	Handle	QNC3021					
	8	Screw Assy	YEA5072	*	15-2	Warranty Card	CRY1276	
*	9	Polyethylene Bag	CEG-127					

Owner's Manual,Installation Manual

Part No.	Language
YRD5322	English, French, Spanish(Espanol)

9.2 EXTERIOR

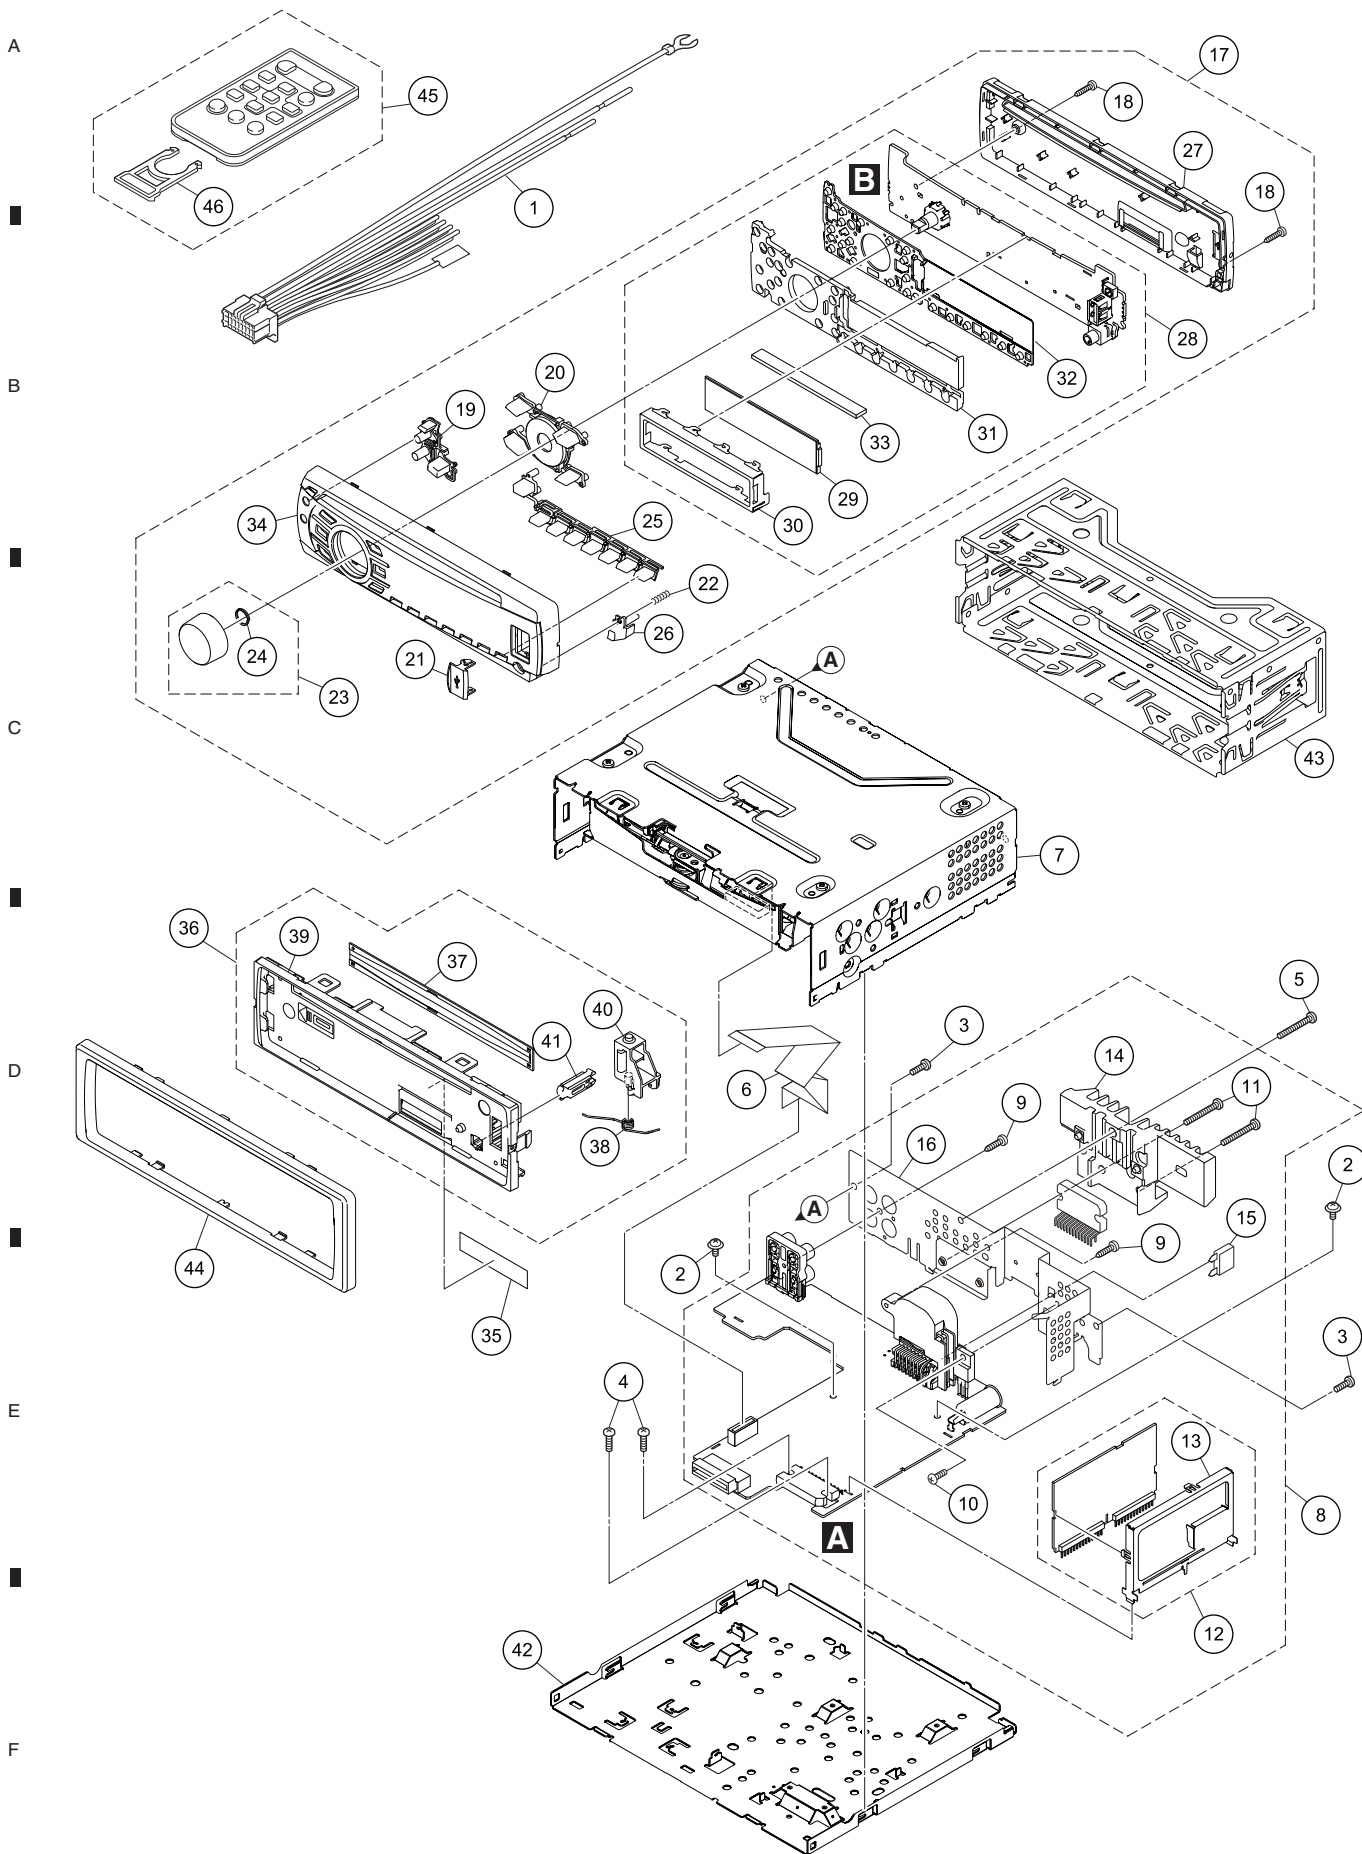


DEH-33HD/XSUC

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	
1	Cord Assy	QDP3013	
2	Screw	ASZ26P050FTC	A
3	Screw	BSZ26P060FTC	
4	Screw	BSZ26P080FTC	
5	Screw	BSZ26P120FTC	
6	Cable	CDE9337	
7	CD Mechanism Module(S11.1)	CXK5802	
8	Tuner Amp Unit	YWM5500	
9	Screw	BPZ26P080FTC	
10	Screw	BSZ26P060FTC	
11	Screw	BSZ26P120FTC	B
12	WWR C-TUN UNIT	CWE2254	
13	Holder	CND5830	
14	Heat Sink	QNR3002	
⚠ 15	Fuse(10 A)	YEK5001	
16	Holder	YND5065	
17	Grille Assy	YXA5730	
18	Screw	BPZ20P100FTC	
19	Button(EJECT, SRC, BAND, LEFT)	CAI3203	
20	Button(LIST, RPT, UP, DOWN)	CAI3204	C
21	Door	CAT2921	
22	Spring	CBH2210	
23	Knob Unit	CXE3692	
24	Spring	YBL5010	
25	Button(RIGHT, -, 1-6)	QAC3052	
26	Button(DETACH)	QAC3053	
27	Cover	QNS3125	
28	Keyboard Assy	YWM5501	
29	LCD(V1801)	CAW1998	D
30	Holder	QNC3018	
31	Lighting Conductor	QNV3022	
32	Rubber	QNV3023	
33	Connector	YNV5192	
34	Grille Unit	YXA5736	
* 35	Seal	CAN3984	
36	Panel Unit	CXE3805	
37	Cover	CNN1665	
38	Spring	QBH3001	E
39	Panel	QNS3126	
40	Arm	QNV3025	
41	Button	QNV3026	
42	Case	QNB3001	
43	Holder	QNC3020	
44	Panel	QNS3127	
45	Remote Control Unit	CXE3669	
46	Cover	CNS7068	F

9.3 CD MECHANISM MODULE

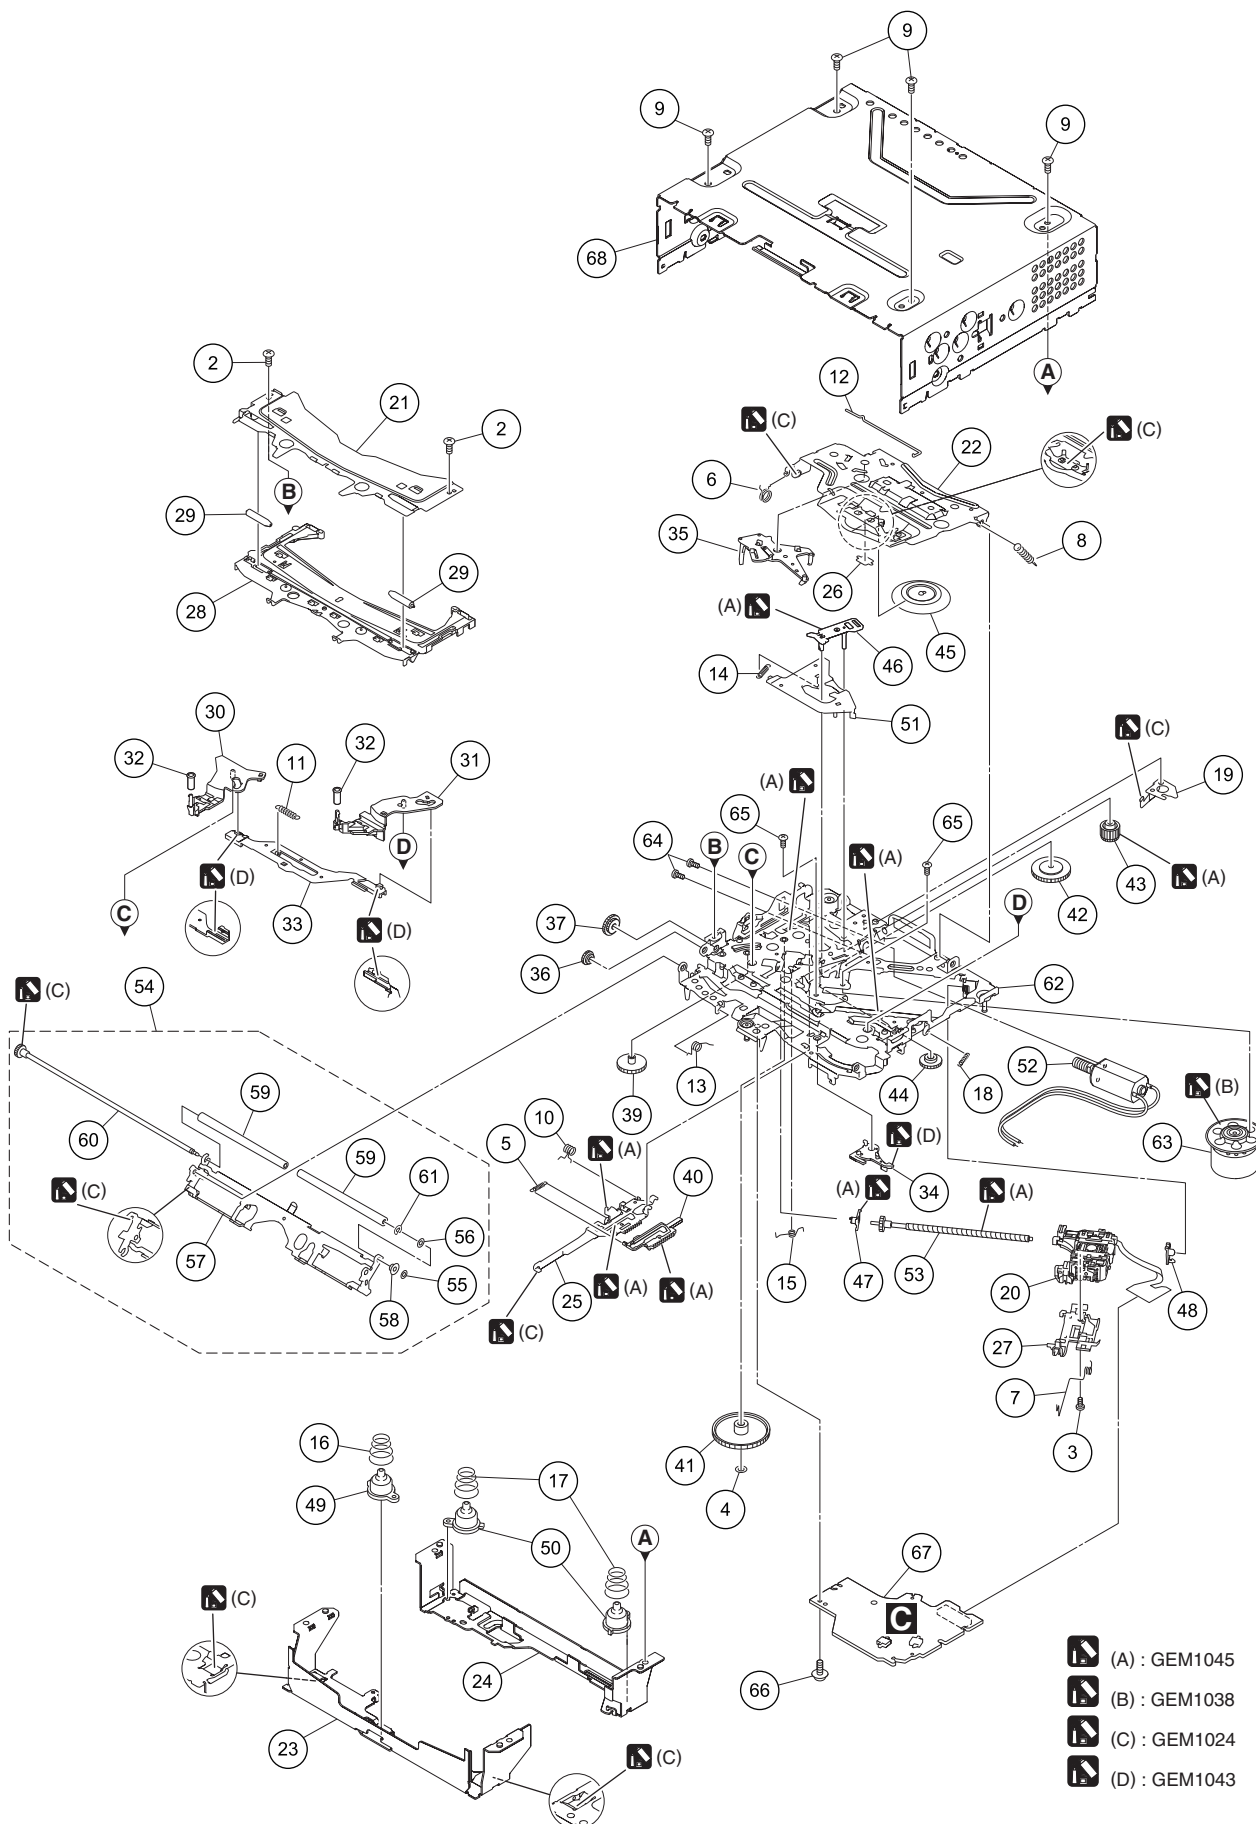

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE3849	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND5886	
10	Spring	CBH3011	58	Collar	CNV6906	
11	Spring	CBH3012	59	Roller	CNW1196	
12	Spring	CBH3014	60	Gear Unit	CXC8893	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE3818	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Spring	CBL1822	67	CD Core Unit (S11.1STD-DOUT)	CWX3985	
20	Pickup Unit(P10.5)(Service)	CXX1942	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Bracket	CND5709				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN2280				
27	Rack	CNV8342				
28	Guide	CNW1171				
29	Roller	CNW1172				D
30	Arm	CNW2157				
31	Arm	CNW1174				
32	Roller	CNW1175				
33	Lever	CNW1176				
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW1188				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.

Part No.

Unit Number : YWM5500

Unit Name : Tuner Amp Unit

Unit Number : YWM5501

Unit Name : Keyboard Assy

Unit Number : CWX3985

Unit Name : CD Core Unit(\$11.1STD-DOUT)

A

Unit Number : YWM5500

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 201	(A,95,114) IC	PML022A
IC 231	(A,107,97) D/A Converter	PCM1753DBQ
IC 301	(A,78,142) IC	PAL007E
IC 511	(A,133,114) Regulator IC	S-1172B33-E6
IC 512	(A,146,71) Regulator IC	S-1172B11-E6
IC 513	(A,146,57) Regulator IC	S-1132B33-U5
IC 551	(A,106,42) IC	341S2162
IC 601	(A,118,61) IC	R5S7266ZD144FP
IC 651	(A,132,78) IC	S-80827CNMC-B8M
IC 671	(A,97,52) IC	PEA020A8

IC 801	(A,106,19) L-MOS And Gate	TC7SET08FUS1
IC 912	(A,145,28) IC	BA49182-V12
IC 954	(A,10,120) Regulator IC	BD9781HFP
IC 955	(A,42,128) IC	BD2226G
Q 251	(A,25,131) Chip Transistor	RN1910

Q 252	(A,14,130) Chip Transistor	RN1910
Q 351	(A,88,128) Chip Transistor	RN4983
Q 551	(A,112,43) Transistor	LSA1576UB
Q 751	(A,142,139) Transistor	2SD2396
Q 752	(A,138,134) Chip Transistor	RN4983

Q 871	(A,91,18) Transistor	2SA1036K
Q 872	(A,92,14) Transistor	LTC114EUB
Q 931	(A,121,106) Transistor	LSC4081UB
D 301	(A,99,127) Diode	CRG03

Circuit Symbol and No.

Part No.

D 302	(A,96,127) Diode	CRG03
D 510	(A,121,114) Diode	CRG03
D 513	(A,139,108) Diode	CRG03
D 751	(A,139,132) Diode	RKZ8.2KG(B2)
D 801	(A,112,13) Diode	DZ2S068C
D 802	(A,114,13) Diode	DZ2S068C
D 803	(A,120,13) Diode	DZ2S068C
D 804	(A,116,13) Diode	DZ2S068C
D 805	(A,118,13) Diode	DZ2S068C
D 901	(A,139,129) Diode	1SR154-400
D 902	(A,139,125) Diode	1SR154-400
D 911	(A,121,42) Diode	1SR154-400
D 912	(A,125,42) Diode	1SR154-400
D 913	(A,139,99) Diode	1SS301
D 931	(A,117,110) Diode	HZU7L(A1)
D 986	(A,10,110) Diode	CRG03
D 987	(A,12,110) Diode	CRG03
D 988	(A,23,115) Diode	CMS02
D 989	(A,19,115) Diode	CMS02
ZNR401	(A,155,107) Surge Protector	IMSA-6802-01Y900
L 601	(A,142,48) Inductor	CTF1786
L 602	(A,139,52) Inductor	CTF1786
L 671	(A,97,56) Inductor	CTF1786
L 802	(A,113,16) Inductor	CTF1713
L 901	(A,112,141) Choke Coil 600 uH	CTH1432
L 982	(A,31,118) Inductor	CTH1253
X 601	(A,100,67) Ceramic Resonator 16.934 MHz	CSS1603
X 602	(A,123,79) Oscillator 12 MHz	YSS5005
 P251	(A,7,130) Fuse 3 A	CEK1286
VA804	(A,106,13) Varistor	EZJP0V270RM
VA805	(A,109,12) Varistor	EZJP0V270RM
CN701	(A,91,39) Connector	VKN1192
CN801	(A,109,4) Connector	CKS6288
JA251	(A,19,138) Pin Jack	YKB5011
JA401	(A,158,129) Antenna Jack	YKS5041
JA901	(A,113,141) Plug	CKM1586
	WWR C-TUN Unit	CWE2254
 Fuse(10 A)		YEK5001

RESISTORS

5	6	7	8	
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
R 201 (A,124,87)	RAB4CQ102J	R 643 (A,132,48)	RS1/16SS473J	A
R 205 (A,92,106)	RS1/16SS223J	R 644 (A,125,48)	RS1/16SS473J	
R 206 (A,105,112)	RS1/16SS223J	R 645 (A,133,83)	RS1/16SS103J	
R 207 (A,96,105)	RS1/16SS101J	R 646 (A,132,85)	RS1/16SS103J	
R 231 (A,111,93)	RS1/16SS821J	R 651 (A,129,79)	RS1/16SS104J	
R 232 (A,111,94)	RS1/16SS821J	R 671 (A,103,55)	RS1/10SR473J	
R 251 (A,20,131)	RS1/16SS821J	R 672 (A,92,56)	RS1/10SR473J	
R 252 (A,29,131)	RS1/16SS821J	R 691 (A,123,13)	RS1/10SR222J	
R 253 (A,10,131)	RS1/16SS821J	R 692 (A,123,49)	RS1/10SR222J	
R 254 (A,19,130)	RS1/16SS821J	R 701 (A,95,46)	RS1/16SS473J	
R 255 (A,23,131)	RS1/16SS223J	R 702 (A,95,39)	RS1/16SS104J	B
R 256 (A,26,131)	RS1/16SS223J	R 703 (A,95,43)	RS1/16SS104J	
R 257 (A,12,130)	RS1/16SS223J	R 704 (A,88,45)	RS1/16SS472J	
R 258 (A,16,130)	RS1/16SS223J	R 705 (A,88,43)	RS1/16SS472J	
R 303 (A,88,124)	RS1/16SS103J	R 706 (A,88,41)	RS1/16SS472J	
R 304 (A,87,124)	RS1/16SS473J	R 707 (A,95,48)	RS1/16SS221J	
R 331 (A,74,126)	RS1/16SS471J	R 708 (A,95,47)	RS1/16SS221J	
R 332 (A,81,126)	RS1/16SS471J	R 709 (A,95,45)	RS1/16SS101J	
R 333 (A,75,126)	RS1/16SS471J	R 710 (A,95,42)	RS1/16SS221J	
R 334 (A,80,126)	RS1/16SS471J	R 711 (A,95,41)	RS1/16SS101J	
R 351 (A,92,127)	RS1/16SS103J	R 712 (A,95,40)	RS1/16SS102J	C
R 352 (A,90,128)	RS1/16SS103J	R 713 (A,95,38)	RS1/16SS151J	
R 353 (A,92,128)	RS1/16SS221J	R 714 (A,95,36)	RS1/16SS151J	
R 401 (A,137,63)	RS1/10SR680J	R 715 (A,95,34)	RS1/16SS151J	
R 402 (A,151,46)	RS1/10SR680J	R 716 (A,95,30)	RS1/16SS221J	
R 403 (A,151,47)	RS1/10SR680J	R 717 (A,95,31)	RS1/16SS104J	
R 405 (A,151,49)	RS1/10SR473J	R 751 (A,149,138)	RS1/16SS473J	
R 551 (A,112,39)	RS1/16SS473J	R 752 (A,149,136)	RS1/16SS103J	
R 552 (A,111,46)	RS1/16SS103J	R 753 (A,140,135)	RS1/10SR821J	
R 553 (A,111,47)	RS1/16SS103J	R 801 (A,120,17)	RS1/10SR101J	
R 556 (A,108,39)	RS1/16SS272J	R 802 (A,117,17)	RS1/10SR101J	
R 557 (A,110,38)	RS1/16SS472J	R 806 (A,104,13)	RS1/10SR222J	
R 558 (A,114,43)	RS1/16SS472J	R 807 (A,109,18)	RS1/10SR222J	
R 559 (A,107,46)	RS1/16SS101J	R 808 (A,103,17)	RS1/16SS822J	
R 560 (A,107,47)	RS1/16SS101J	R 809 (A,111,19)	RS1/10SR8R2J	
R 602 (A,118,46)	RS1/16SS473J	R 810 (A,113,19)	RS1/10SR8R2J	D
R 603 (A,101,18)	RS1/16SS104J	R 811 (A,124,17)	RS1/10SR222J	
R 604 (A,117,46)	RS1/16SS103J	R 812 (A,102,13)	RS1/10SR222J	
R 605 (A,118,43)	RS1/16SS103J	R 813 (A,99,16)	RS1/10SR222J	
R 609 (A,130,57)	RS1/16SS473J	R 851 (A,96,17)	RS1/16SS472J	
R 612 (A,131,57)	RS1/16SS473J	R 873 (A,94,15)	RS1/10SR562J	
R 613 (A,100,60)	RS1/16SS101J	R 874 (A,94,18)	RS1/16SS103J	
R 614 (A,131,61)	RS1/16SS222J	R 911 (A,140,43)	RS1/10SR1R0J	
R 615 (A,98,61)	RS1/16SS101J	R 912 (A,148,44)	RS1/10SR1R0J	
R 616 (A,133,63)	RS1/16SS473J	R 931 (A,119,110)	RS1/16SS223J	
R 617 (A,100,61)	RS1/16SS101J	R 932 (A,119,106)	RS1/16SS473J	E
R 619 (A,134,63)	RS1/16SS104J	R 933 (A,118,106)	RS1/16SS472J	
R 621 (A,99,63)	RS1/16SS221J	R 934 (A,113,110)	RS1/4SA102J	
R 625 (A,131,71)	RS1/16SS473J	R 967 (A,18,120)	RS1/16SS1003F	
R 630 (A,123,75)	RS1/16SS152J	R 969 (A,18,122)	RS1/16SS683J	
R 631 (A,127,76)	RS1/16SS473J	R 971 (A,35,126)	RS1/10SR1003D	
R 632 (A,126,75)	RS1/16SS473J	R 972 (A,32,124)	RS1/10SR2402D	
R 633 (A,115,76)	RS1/16SS5601F	R 973 (A,35,124)	RS1/10SR333J	
R 634 (A,121,75)	RS1/16SS473J	R 974 (A,29,125)	RS1/10SR471J	
R 636 (A,128,75)	RS1/16SS102J	R 975 (A,30,125)	RS1/10SR121J	
R 638 (A,107,74)	RS1/16SS473J	R 976 (A,133,62)	RS1/16SS104J	F
R 639 (A,116,78)	RS1/16SS103J			
R 640 (A,112,78)	RS1/16SS101J			
R 641 (A,130,48)	RS1/16SS473J			
R 642 (A,130,47)	RS1/16SS473J			
		<u>CAPACITORS</u>		
		C 201 (A,98,107) 10 uF	CCG1192	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 203 (A,100,110) 10 uF
C 205 (A,90,107)
C 206 (A,91,120)
C 207 (A,93,108)

CCG1192
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

C 607 (A,105,56)
C 608 (A,132,57)
C 609 (A,104,58)
C 610 (A,131,60)

CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10

C 208 (A,101,119)
C 209 (A,95,108)
C 210 (A,101,117)
C 211 (A,91,107)
C 212 (A,101,120)

CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

C 611 (A,97,81)
C 612 (A,104,60)
C 613 (A,98,81)
C 615 (A,99,81)
C 616 (A,132,65)

CCSSCH220J50
CKSSYB104K10
CCSSCH220J50
CCSSCH220J50
CKSSYB104K10

C 213 (A,106,114)
C 233 (A,109,90) 10 uF
C 234 (A,109,103) 10 uF
C 237 (A,113,93)
C 238 (A,112,95)

CKSRYB105K10
CCG1192
CCG1192
CCSRCH182J50
CCSRCH182J50

C 617 (A,97,64)
C 618 (A,131,65)
C 619 (A,104,64)
C 620 (A,104,66)
C 621 (A,131,70)

CCSSCH220J50
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10

C 240 (A,110,96)
C 251 (A,37,134) 10 uF
C 252 (A,38,136) 10 uF
C 253 (A,36,130) 10 uF
C 254 (A,36,132) 10 uF

CKSSYB102K50
CCG1192
CCG1192
CCG1192
CCG1192

C 622 (A,108,75)
C 623 (A,112,76)
C 624 (A,113,75)
C 625 (A,114,76)
C 626 (A,116,76)

CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10

C 255 (A,21,131)
C 256 (A,28,131)
C 257 (A,11,131)
C 258 (A,17,130)
C 261 (A,34,139)

CCSRCH101J50
CCSRCH101J50
CCSRCH101J50
CCSRCH101J50
CKSRYB102K50

C 627 (A,119,75)
C 628 (A,122,75)
C 629 (A,128,73)
C 630 (A,109,75)
C 632 (A,121,78)

CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CCSSCH120J50

C 301 (A,74,129)
C 302 (A,81,129)
C 303 (A,76,129)
C 304 (A,79,129)
C 305 (A,74,132)

CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSRYB474K10

C 633 (A,123,81)
C 638 (A,113,78)
C 651 (A,129,78)
C 671 (A,91,52)
C 701 (A,95,44)

CCSSCH120J50
CKSRYB105K10
CKSRYB105K10
CKSSYB104K10
CKSSYB103K16

C 306 (A,81,132)
C 307 (A,76,132)
C 308 (A,79,132)
C 309 (A,62,137)
C 310 (A,83,129) 2.2 uF

CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSRYB104K16
CCG1205

C 702 (A,94,27)
C 751 (A,143,131) 10 uF
C 754 (A,141,132)
C 803 (A,107,15)

CCSRCH100D50
CCG1192
CKSSYB104K10
CKSRYB102K50

C 311 (A,84,127) 2.2 uF
C 312 (A,100,128)
C 313 (A,68,130)
C 351 (A,94,127) 10 uF
C 409 (A,152,58) 10 uF

CCG1205
CKSRYB104K16
CEVW100M16
CCG1192
CCG1192

C 804 (A,99,13)
C 808 (A,111,13)
C 809 (A,122,13)
C 810 (A,101,13)
C 811 (A,98,13)

CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CCSRCH221J50
CCSRCH221J50

C 410 (A,152,73) 10 uF
C 412 (A,154,98)
C 413 (A,149,99)
C 414 (A,153,107)
C 425 (A,155,86)

CCG1192
CKSSYB104K16
CEVW101M16
CCSRCK2R0C50
CKSSYB102K50

C 817 (A,108,19)
C 871 (A,92,11)
C 901 (A,133,125) 3 300 uF/16 V
C 913 (A,139,45)
C 916 (A,149,41) 4.7 uF

CKSRYB104K16
CKSRYB104K16
CCH1732
CKSSYB102K50
CCG1201

C 428 (A,154,80)
C 511 (A,152,69) 10 uF
C 512 (A,137,113) 10 uF
C 513 (A,140,73) 10 uF
C 514 (A,128,113) 10 uF

CKSSYB102K50
CCG1192
CCG1192
CCG1192
CCG1192

C 917 (A,131,42) 4.7 uF
C 918 (A,150,43) 4.7 uF
C 919 (A,147,46)
C 921 (A,128,45)
C 922 (A,119,37)

CCG1201
CCG1201
CKSSYB102K50
CKSRYB104K16
CEAT102M16

C 515 (A,141,58)
C 516 (A,142,56)
C 517 (A,151,53)
C 551 (A,112,40)
C 552 (A,110,39)

CKSRYB102K50
CKSQYB475K6R3
CKSQYB475K6R3
CKSSYB104K10
CKSSYB104K10

C 923 (A,154,41)
C 929 (A,138,43) 4.7 uF
C 930 (A,146,43) 4.7 uF
C 931 (A,117,106)
C 935 (A,129,41)

CKSSYB102K50
CCG1201
CCG1201
CKSRYB104K16
CKSSYB102K50

C 601 (A,113,48)
C 602 (A,117,49)
C 603 (A,121,48)
C 604 (A,131,52)
C 605 (A,104,51)

CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10

C 970 (A,29,108)
C 971 (A,14,114)
C 972 (A,18,119)
C 973 (A,17,121)
C 974 (A,18,121)

CEJQ221M16
CKSRYB105K16
CKSRYB104K16
CKSSYB471K50
CKSSYB103K16

C 606 (A,130,54)

CKSSYB104K10

C 975 (A,22,124) 150 uF/6.3 V
C 976 (A,37,125)

CCH1804(P25)
CCSRCH221J50

1

2

3

4

5		6
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
C 977 (A,39,127)		CKSSYB104K10
C 978 (A,42,130)		CKSSYB104K10

B

Unit Number : YWM5501

Unit Name : Keyboard Assy

MISCELLANEOUS

IC 1801 (B,87,23) IC	PD6340A
IC 1802 (A,160,35) Remote IC	GP1UXC14RK
D 1868 (A,11,41) LED(RED)	SML-D12V8W(PQ)
D 1869 (A,6,34) LED(RED)	SML-D12V8W(PQ)
D 1870 (A,6,22) LED(RED)	SML-D12V8W(PQ)
D 1871 (A,21,10) LED(RED)	SML-D12V8W(PQ)
D 1872 (A,17,21) LED(RED)	SML-D12V8W(PQ)
D 1873 (A,25,32) LED(RED)	SML-D12V8W(PQ)
D 1874 (A,54,8) LED(RED)	SML-D12V8W(PQ)
D 1875 (A,59,18) LED(RED)	SML-D12V8W(PQ)
D 1876 (A,54,29) LED(RED)	SML-D12V8W(PQ)
D 1877 (A,71,5) LED(RED)	SML-D12V8W(PQ)
D 1878 (A,83,6) LED(RED)	SML-D12V8W(PQ)
D 1879 (A,95,6) LED(RED)	SML-D12V8W(PQ)
D 1880 (A,143,8) LED(RED)	SML-D12V8W(PQ)
D 1881 (A,131,7) LED(RED)	SML-D12V8W(PQ)
D 1882 (A,119,7) LED(RED)	SML-D12V8W(PQ)
D 1883 (A,107,6) LED(RED)	SML-D12V8W(PQ)
D 1913 (A,68,22) White LED	SMLXA4WBETW1(Z1)
X 1801 (B,76,22) Ceramic Resonator 5.00 MHz	CSS1547
S 1845 (A,39,18) Encoder(MULTI-CONTROL)	CSD1168
CN1821 (B,108,9) Connector	CKS6287
CN1901 (A,153,7) Jack	YKN5001
CN1911 (A,154,22) Connector	CKS6266
V 1801 (A,143,32) LCD	CAW1998

RESISTORS

R 1804 (B,146,29)	RS1/10SR101J
R 1805 (B,74,18)	RS1/10SR222J
R 1806 (B,73,15)	RS1/10SR222J
R 1822 (B,54,27)	RS1/10SR273J
R 1823 (A,145,4)	RS1/10SR0R0J
R 1824 (B,24,19)	RS1/10SR0R0J
R 1880 (B,56,20)	RS1/4SA271J
R 1888 (B,61,25)	RS1/10SR0R0J
R 1894 (B,17,18)	RS1/10SR272J
R 1895 (B,55,11)	RS1/10SR272J
R 1896 (B,138,19)	RS1/10SR272J
R 1897 (B,16,13)	RS1/10SR272J
R 1898 (B,48,6)	RS1/10SR102J
R 1899 (B,60,12)	RS1/4SA271J

CAPACITORS

C 1801 (B,149,33) 10 uF	CCG1192
C 1802 (B,97,24)	CKSRYB105K10

C

Unit Number : CWX3985

Unit Name : CD Core Unit(\$11.1STD-DOUT)

7		8
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
<u>MISCELLANEOUS</u>		
IC 201 (A,28,33) IC	PE5756A	
IC 301 (A,64,27) IC	BA5839FP	
Q 101 (B,8,56) Transistor	2SA1577	
Q 102 (B,21,51) Chip Digital Transistor	LTA123JUB	
X 201 (A,15,27) Ceramic Resonator 16.934 MHz	CSS1603	
S 901 (A,42,53) Switch(HOME)	CSN1080	
S 903 (B,21,12) Switch(DSCSNS)	CSN1081	
CN101 (A,16,58) Connector	CKS4808	
CN701 (A,37,10) Connector	CKS6146	

RESISTORS

R 101 (B,6,59)	RS1/10SR2R4J
R 102 (B,7,59)	RS1/10SR2R4J
R 103 (B,8,59)	RS1/10SR2R7J
R 108 (B,19,53)	RS1/16SS105J
R 109 (B,11,52)	RS1/16SS222J
R 214 (A,38,41)	RS1/16SS103J
R 215 (A,38,40)	RS1/16SS393J
R 216 (A,30,44)	RS1/16SS122J
R 217 (A,33,46)	RS1/16SS562J
R 218 (A,30,46)	RS1/16SS472J
R 225 (A,33,23)	RS1/16SS0R0J
R 229 (A,31,44)	RS1/16SS471J
R 232 (A,19,21)	RS1/16SS0R0J
R 235 (A,45,32)	RS1/16SS103J
R 236 (A,46,32)	RS1/16SS103J
R 237 (B,24,25)	RS1/16SS221J
R 240 (B,26,30)	RS1/16SS473J
R 245 (B,28,30)	RS1/16SS104J
R 254 (B,29,30)	RS1/16SS104J
R 260 (B,41,21)	RS1/16SS103J
R 262 (A,44,32)	RS1/16SS472J
R 263 (A,47,32)	RS1/16SS472J
R 264 (A,44,25)	RS1/16SS102J
R 281 (A,31,22)	RS1/16SS560J
R 282 (A,30,22)	RS1/16SS560J
R 283 (B,32,18)	RS1/16SS0R0J
R 291 (B,31,17)	RS1/16SS560J
R 292 (B,32,16)	RS1/16SS0R0J
R 293 (B,32,11)	RS1/16SS0R0J
R 294 (A,18,28)	RS1/16SS471J
R 296 (B,32,30)	RS1/16SS0R0J
R 299 (B,31,13)	RS1/16SS0R0J
R 305 (A,60,34)	RS1/16SS183J
R 306 (A,61,37)	RS1/16SS183J
R 307 (A,58,34)	RS1/16SS183J
R 308 (A,58,36)	RS1/16SS183J
R 701 (B,37,21)	RS1/16SS101J
R 702 (B,38,20)	RS1/16SS101J
R 706 (B,43,11)	RS1/16SS221J
R 708 (A,40,22)	RS1/16SS0R0J
R 709 (A,40,21)	RS1/16SS0R0J
R 722 (B,37,22)	RS1/16SS0R0J

CAPACITORS

C 104 (B,11,55)	CKSQYB475K6R3
C 203 (A,18,35)	CKSSYB104K10

Circuit Symbol and No.

Part No.

A

C 209	(A, 17,28)	CKSRYB104K16
C 210	(A,21,21)	CKSSYB104K10
C 211	(A,24,23)	CKSSYB104K10
C 212	(A,38,33)	CKSSYB104K10
C 213	(A,40,41)	CKSSYB332K50
C 214	(A,40,40)	CKSSYB473K10
C 215	(A,38,37)	CKSSYB104K10
C 216	(A,36,46)	CKSSYB182K50

C 217	(A,31,46)	CCSSCH560J50
C 218	(A,29,46)	CCSSCH4R0C50
C 219	(A,32,43)	CKSSYB104K10
C 220	(B,32,41)	CKSSYB104K10
C 221	(A,35,43)	CKSSYB104K10

B

C 222	(A,29,43)	CKSSYB104K10
C 223	(A,25,44)	CCSSCH680J50
C 224	(A,23,44)	CCSSCH470J50
C 225	(A,20,43)	CKSSYB103K16
C 228	(A,32,46)	CCSSCH270J50

C 229	(B,28,40)	CKSSYB104K10
C 231	(B,44,28)	CKSSYB102K50
C 232	(B,45,28)	CKSSYB102K50
C 233	(B,25,25)	CKSSYB103K16
C 236	(B,26,41)	CKSSYB104K10

C

C 238	(A, 15,35)	CKSRYB104K16
C 299	(A,17,33)	CKSSYB104K10
C 304	(A,60,35)	CKSSYB472K25
C 305	(A,58,35)	CKSSYB223K16
C 306	(A,68,20)	CKSRYB105K10

C 710	(B,43,10)	CKSSYB102K50
-------	-----------	--------------

Miscellaneous Parts List

D

M 1	Motor Unit(SPDL)	CXE2273
M 2	Motor Unit(LOAD/CRG)	CXC4026
	Pickup Unit(S10.5)(Service)	CXX1942

E

F