


NX-200(G)


EXPLODED VIEW

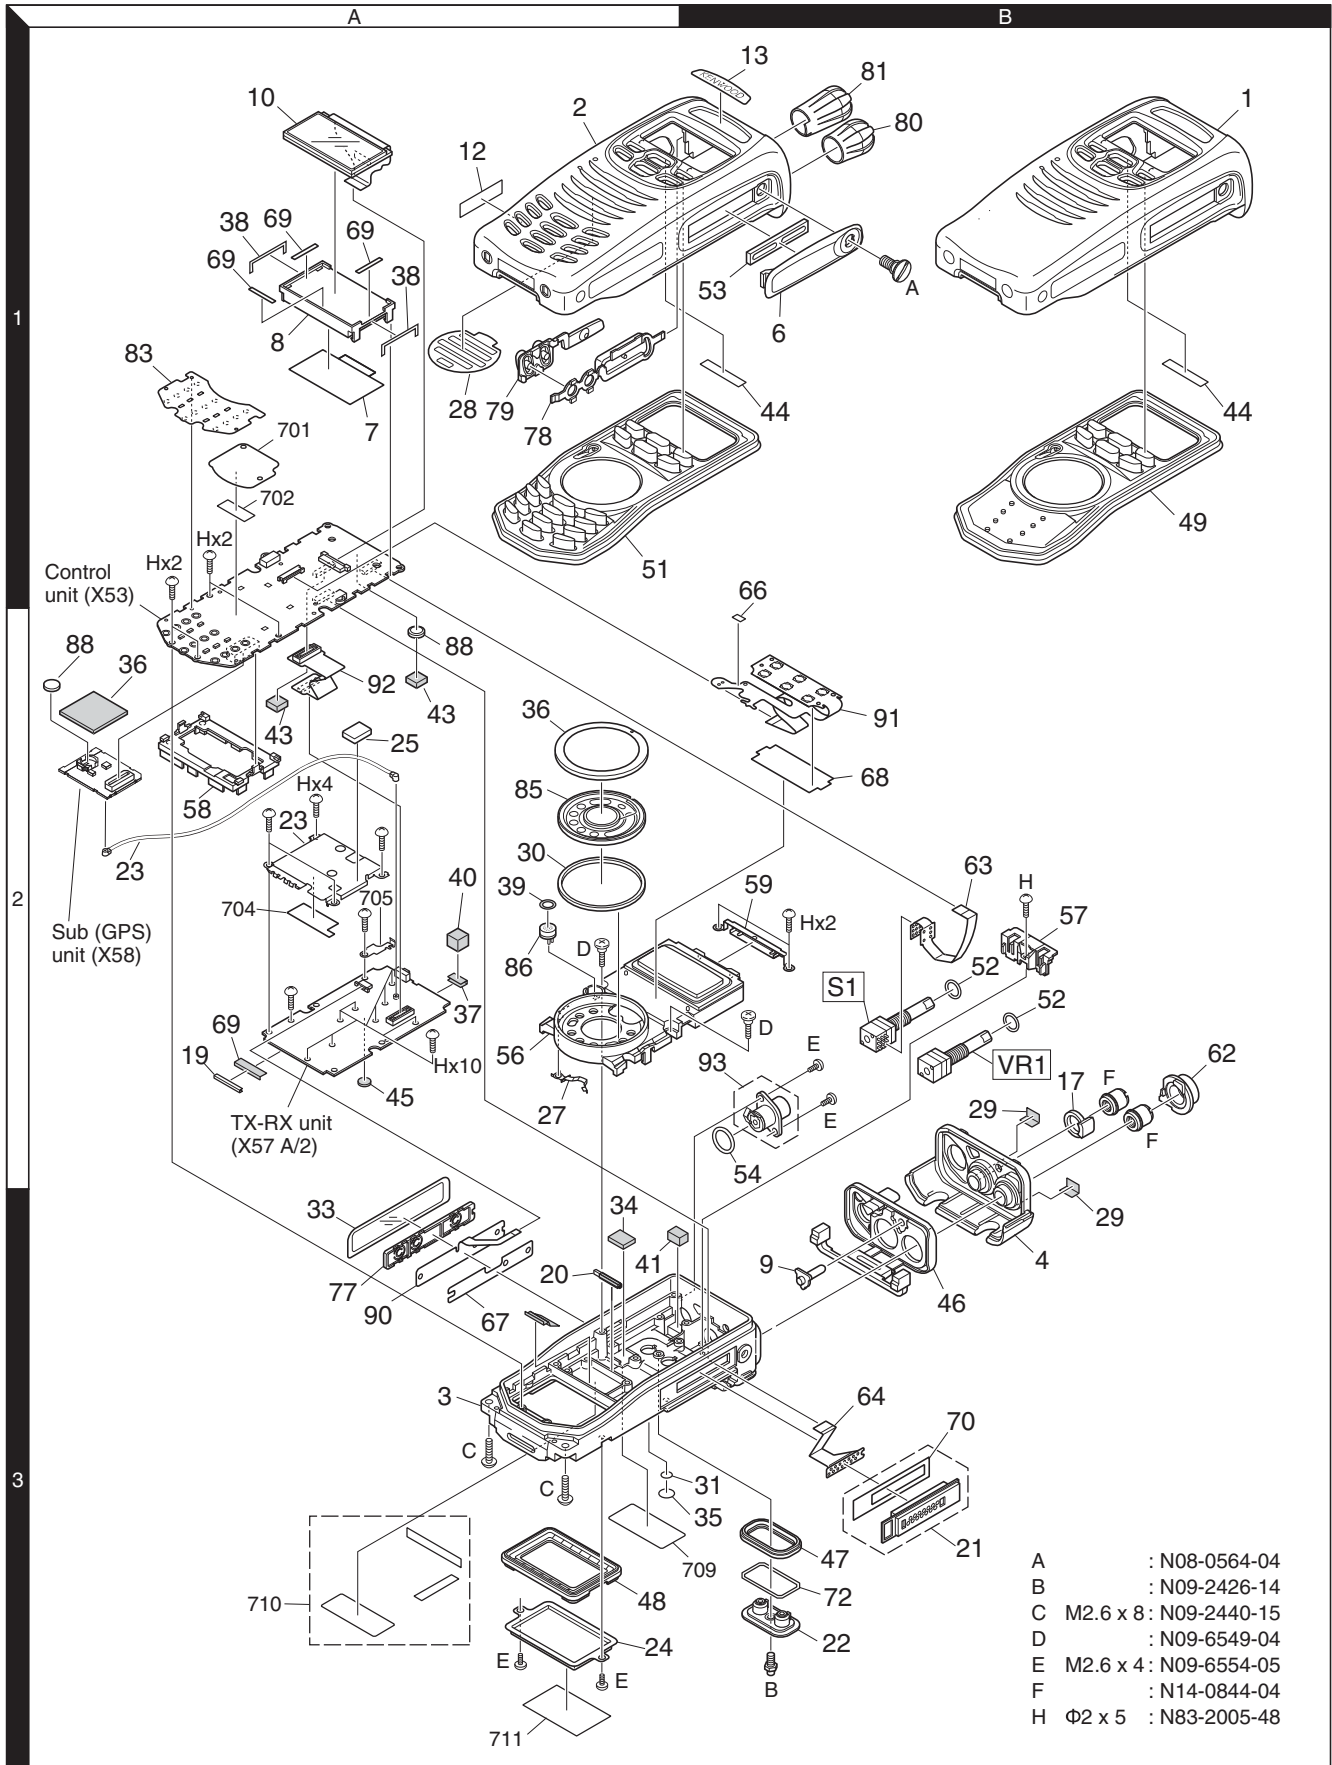

A	:	N08-0564-04
B	:	N09-2426-14
C	M2.6 x 8 :	N09-2440-15
D	:	N09-6549-04
E	M2.6 x 4 :	N09-6554-05
F	:	N14-0844-04
H	Φ2 x 5 :	N83-2005-48

32 Parts with the exploded numbers larger than 700 are not supplied.
 If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB.
 These parts must be ordered separately.

PACKING

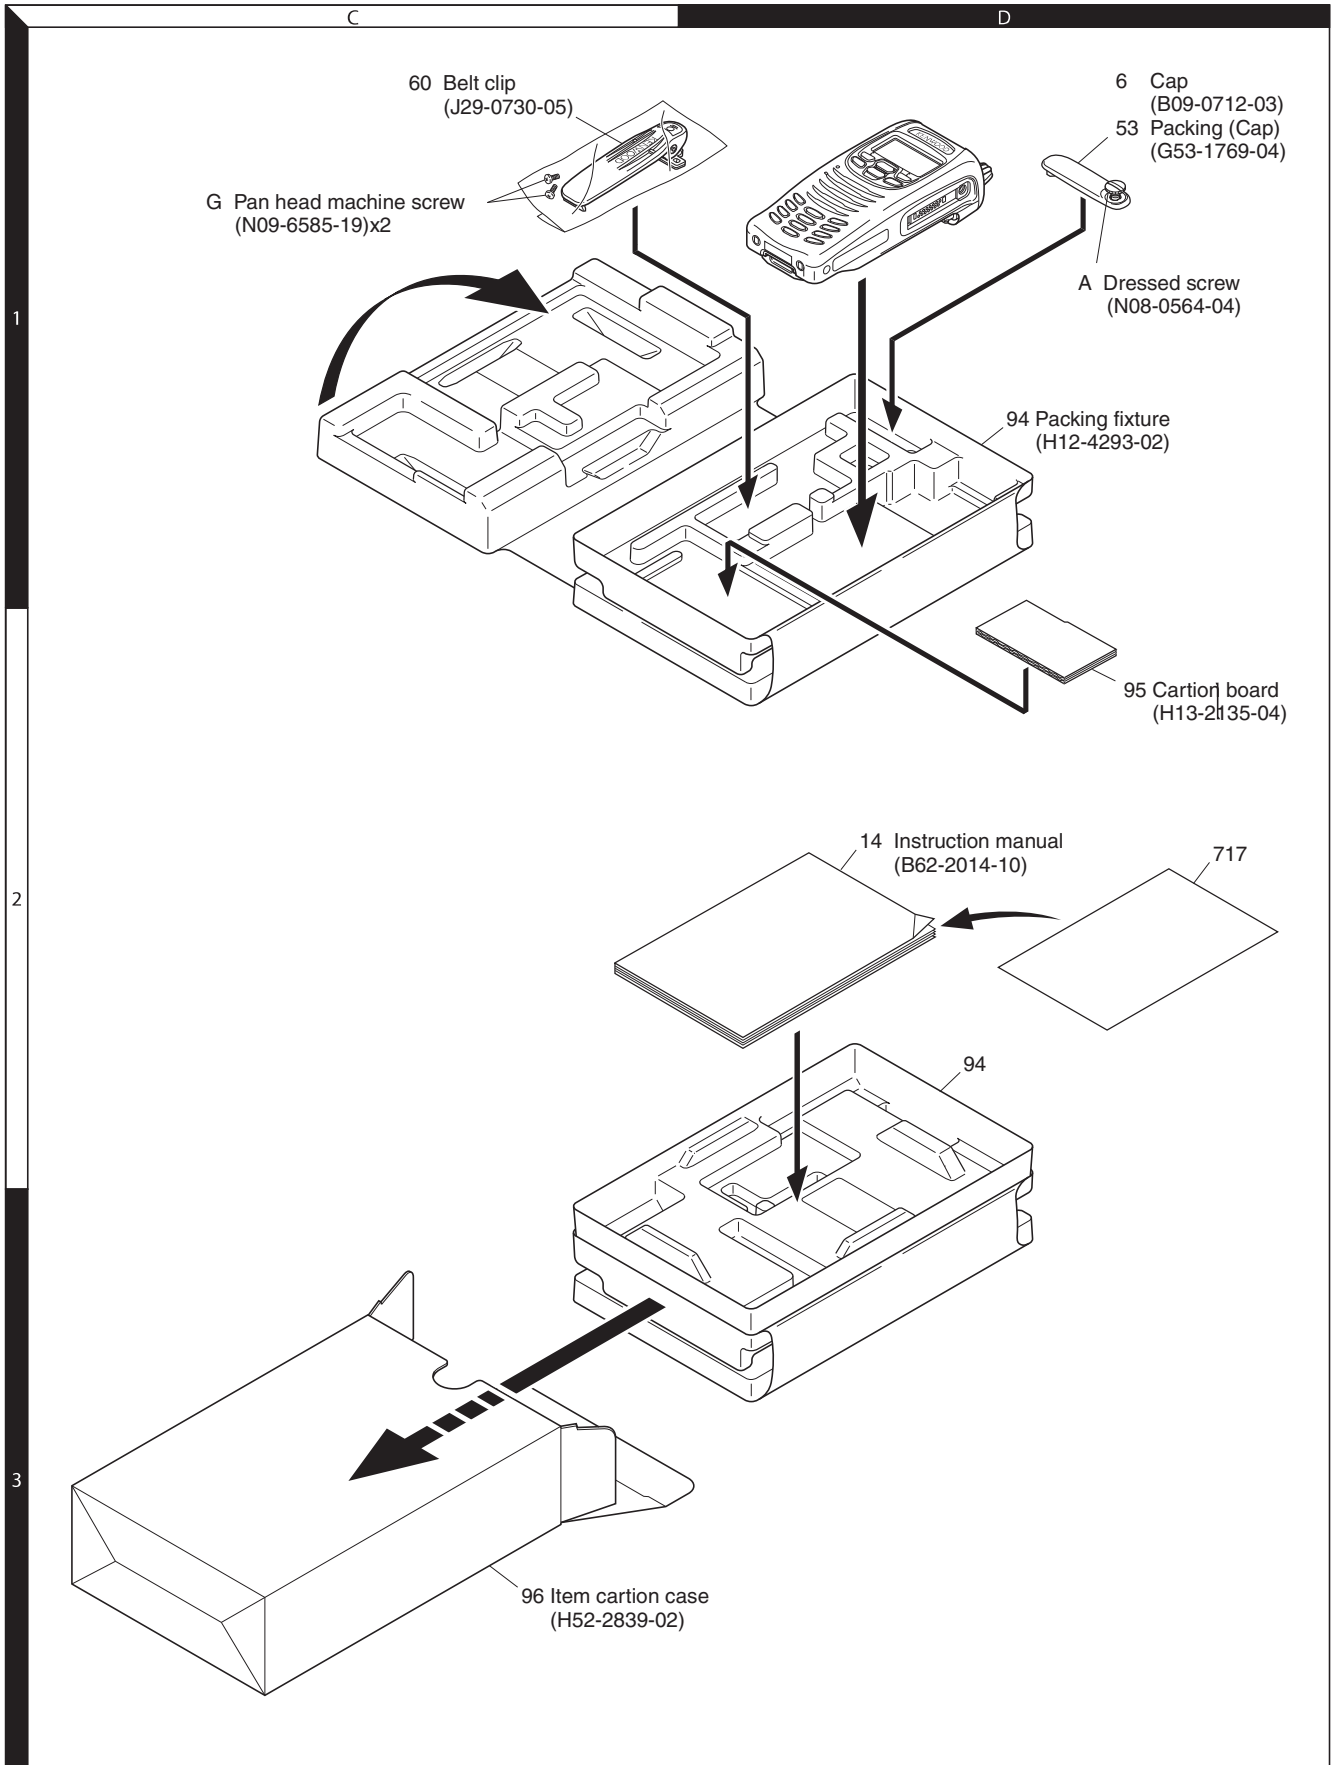

NX-200(G)

PARTS LIST

△ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

C : China

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

NX-200 (G)

CONTROL UNIT (X53-4590-XX)

Ref. No.	Address	Parts No.	Description	Destination	Ref. No.	Address	Parts No.	Description	Destination
NX-200(G)									
1	1B	A02-4002-23	PLASTIC CABINET (6KEY)	K	60	1C	J29-0730-05	BELT CLIP ACCESSORY	
2	1A	A02-4003-23	PLASTIC CABINET (18KEY)	K2	62	2B	J30-1296-04	SPACER (VOL)	
3	3A	A10-4186-04	CHASSIS (GPS)		63	2B	J87-0006-05	FPC (VOL,CH)	
4	2B	A62-1156-02	PANEL (TOP)		64	3B	J87-0007-05	FPC (UNIVERSAL)	
6	1B,1D	B09-0712-03	CAP ACCESSORY		66	2B	J99-0745-04	ADHESIVE SHEET (6KEY FPC)	
7	1A	B11-1853-34	FILTER (LCD)		67	3A	J99-0711-04	ADHESIVE SHEET (PTT FPC)	
8	1A	B11-1854-02	ILLUMINATION GUIDE (LCD)		68	2B	J99-0712-14	ADHESIVE SHEET (6KEY FPC)	
9	3B	B11-1855-04	ILLUMINATION GUIDE (TX/BUSY)		69	1A,2A	J99-0714-04	ADHESIVE SHEET (LCD)	
10	1A	B38-0923-05	LCD ASSY		70	3B	J99-0715-08	ADHESIVE SHEET (UNIVERSAL)	
12	1A	B42-7417-04	STICKER (NEXEDGE)		72	3B	J99-0747-04	ADHESIVE SHEET (TERMINAL BLOCK)	
13	1B	B43-1606-04	BADGE (KENWOOD)		77	3A	K25-2001-03	PUSH KNOB (PTT)	
14	2D	B62-2608-00	INSTRUCTION MANUAL ACCESSORY		78	1A	K29-9405-03	KNOB (PTT)	
17	2B	D32-0446-14	STOPPER (16CH)		79	1A	K29-9406-03	BUTTON KNOB (SIDE KEY)	
19	2A	E29-1241-04	RELAY HARDWARE (VCO-PCB)		80	1B	K29-9407-03	KNOB (VOL)	
20	3A	E29-1242-04	RELAY HARDWARE (VCO-CHASSIS)		81	1B	K29-9408-13	KNOB (CH)	
23	2A	E37-1718-05	LEAD WIRE WITH CONNECTOR (X57-X58)		A	1B,1D	N08-0564-04	DRESSED SCREW ACCESSORY	
21	3B	E58-0532-05	RECTANGULAR RECEPTACLE (SP/MIC)		B	3B	N09-2426-14	HEXAGON HEAD SCREW (BATT-)	
22	3B	E72-0425-03	TERMINAL BLOCK		C	3A	N09-2440-15	SPECIAL SCREW (CASE)	
24	3A	F07-1931-04	COVER (OP BOARD)		D	2A,2B	N09-6549-04	STEPPED SCREW (FG-SP HOLDER)	
27	2A	G02-1865-03	EARTH SPRING (SP)		E	2B,3A	N09-6554-05	PAN HEAD SCREW (ANT/OP BOARD)	
25	2A	G10-1362-04	FIBROUS SHEET (GPS)		F	2B	N14-0844-04	CIRCULAR NUT (VOL,CH)	
28	1A	G10-1373-04	FIBROUS SHEET (SP)		G	1C	N09-6585-19	PAN HEAD MACHINE SCREW (BELT CLIP)	
29	2B	G10-1807-04	FIBROUS SHEET (TOP PANEL)		H	1A,2A,2B	N83-2005-48	PAN HEAD TAPTITE SCREW (PCB)	
30	2A	G11-4272-14	RUBBER CUSHION (SP)		83	1A	S79-0472-05	KEYBOARD ASSY (12KEY)	K2
31	3A	G11-4331-04	SHEET (AIR)		85	2A	T07-0755-25	SPEAKER	
33	2A	G11-4428-04	SHEET (PTT)		86	2A	T91-0575-05	MIC ELEMENT	
34	3A	G11-4429-04	RUBBER SHEET (FET)		88	2A	W09-0971-05	LITHIUM CELL	
35	3A	G11-4440-04	SHEET (AIR)		90	3A	X41-3830-10	SWITCH UNIT (PTT FPC)	
36	2A	G11-4458-14	SHEET (SP)		91	2B	X41-3840-10	SWITCH UNIT (6KEY FPC)	
38	1A	G11-4497-04	SHEET (ILLUMINATION GUIDE)		92	2A	X42-3510-10	CORD ASSY (50PIN FPC)	
39	2A	G11-4501-04	SHEET (MIC ELEMENT)		93	2B	X60-4080-10	TERMINAL ASSY (SMA)	
44	1B	G11-4540-04	SHEET (CABINET)	K2	-		X53-4590-12	CONTROL UNIT FOR SERVICE	K
40	2A	G13-2129-14	CUSHION (TX-RX PCB)		-		X53-4590-13	CONTROL UNIT FOR SERVICE	K2
41	2A,3B	G13-2220-04	CUSHION (ANT/OP BOARD)		CONTROL UNIT (X53-4590-XX) -10: K -11: K2				
42	2A	G13-2249-04	CUSHION (TX-RX PCB)		D1-10		B30-2337-05	LED	K2
43	2A	G13-2258-04	CUSHION (50PIN FPC)		D3,4		B30-2337-05	LED	K
45	2A	G13-2265-04	CUSHION (BATT-)		D7,8		B30-2337-05	LED	K
46	2B	G53-1762-02	PACKING (TOP)		C1		CK73HB1A104K	CHIP C 0.10UF	K
47	3B	G53-1763-03	PACKING (TERMINAL BLOCK)		C2-6		CK73GB1E105K	CHIP C 1.0UF	K
48	3A	G53-1764-03	PACKING (OP BOARD COVER)		C7,8		CK73HB1A104K	CHIP C 0.10UF	K
49	1B	G53-1765-11	PACKING (6KEY)	K	C10		CK73HB1A104K	CHIP C 0.10UF	K
51	1A	G53-1766-11	PACKING (18KEY)		C11		CK73HB0J105K	CHIP C 1.0UF	K
52	2B	G53-1768-04	PACKING (VOL,CH O-RING)	K2	C12-15		CK73HB1H471K	CHIP C 470PF	K
53	1B,1D	G53-1769-04	PACKING (CAP)		C16,17		CC73HCH1H101J	CHIP C 100PF	J
54	2B	G53-1792-04	PACKING (SMA O-RING)		C23		CK73HB1H102K	CHIP C 1000PF	K
94	1D,2D	H12-4293-02	PACKING FIXTURE		C24		CC73HCH1H470J	CHIP C 47PFJ	
95	2D	H13-2135-04	CARTON BOARD		C25-27		CK73HB1H102K	CHIP C 1000PF	K
96	3C	H52-2839-02	ITEM CARTON CASE		C28-34		CC73HCH1H101J	CHIP C 100PF	J
56	2A	J19-5505-11	HOLDER (FG-SP)		C35		CK73HB1H102K	CHIP C 1000PF	K
57	2B	J19-5506-03	HOLDER (VOL,CH)		C36		CK73HB1E682K	CHIP C 6800PF	K
58	2A	J19-5507-02	HOLDER (OP BOARD)		C37		CK73HB1H102K	CHIP C 1000PF	K
59	2B	J21-8638-04	MOUNTING HARDWARE (FG-SP HOLDER)		C38		CC73HCH1H101J	CHIP C 100PF	J

NX-200(G)

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
C40		CC73HCH1H221J	CHIP C 220PF J		C443		CK73HB1E103K	CHIP C 0.010UF K	
C41		CC73HCH1H101J	CHIP C 100PF J		C445		CK73HB1H102K	CHIP C 1000PF K	
C101-104		CK73HB1A104K	CHIP C 0.10UF K		C446		CK73GB1E105K	CHIP C 1.0UF K	
C105		CK73HB0J105K	CHIP C 1.0UF K		C447		CK73HB1H102K	CHIP C 1000PF K	
C106		CK73HB1E103K	CHIP C 0.010UF K		C448-450		CK73HB0J105K	CHIP C 1.0UF K	
C107		CK73HB1A104K	CHIP C 0.10UF K	K	C452,453		CK73HB1E103K	CHIP C 0.010UF K	
C107,108		CK73HB1A104K	CHIP C 0.10UF K	K2	C454		CK73GB1E105K	CHIP C 1.0UF K	
C109,110		CK73HB1H102K	CHIP C 1000PF K		C455-457		CK73HB1H471K	CHIP C 470PF K	
C111-113		CK73HB1A104K	CHIP C 0.10UF K		C459		CK73HB1H471K	CHIP C 470PF K	
C114		CK73HB0J105K	CHIP C 1.0UF K	K2	C460		CK73HB1E682K	CHIP C 6800PF K	
C115		CK73HB1H471K	CHIP C 470PF K	K2	C461-463		CK73HB1H471K	CHIP C 470PF K	
C116,117		CK73HB1A104K	CHIP C 0.10UF K		C464		CK73HB1E103K	CHIP C 0.010UF K	
C118,119		CK73HB0J105K	CHIP C 1.0UF K		C465		CK73HB1H102K	CHIP C 1000PF K	
C120,121		CK73HB1A104K	CHIP C 0.10UF K		C466		CK73HB1E682K	CHIP C 6800PF K	
C122-124		CK73HB1E103K	CHIP C 0.010UF K		C467,468		CK73HB1A104K	CHIP C 0.10UF K	
C130		CK73HB1E103K	CHIP C 0.010UF K		C469,470		CK73HB1H102K	CHIP C 1000PF K	
C131		CK73HB1A104K	CHIP C 0.10UF K		C471		CK73HB1C473K	CHIP C 0.047UF K	
C133		CS77MP0J100M	CHIP TNTL 10UF 6.3WV		C480		CK73HB1E103K	CHIP C 0.010UF K	
C134		CK73HB1E103K	CHIP C 0.010UF K		C701		CK73HB1A104K	CHIP C 0.10UF K	
C135		CK73HB1H102K	CHIP C 1000PF K		C703		CK73GB0J475K	CHIP C 4.7UF K	
C136		CK73HB1E103K	CHIP C 0.010UF K		C704,705		CK73HB1A104K	CHIP C 0.10UF K	
C137		CK73GB1E105K	CHIP C 1.0UF K		C706		CC73HCH1H680J	CHIP C 68PF J	
C138-140		CK73HB1A104K	CHIP C 0.10UF K		C707		CC73HCH1H270J	CHIP C 27PF J	
C141		CC73HCH1H101J	CHIP C 100PF J		C708		CK73HB1A104K	CHIP C 0.10UF K	
C142		CS77MP0J100M	CHIP TNTL 10UF 6.3WV		C709		CK73HB0J105K	CHIP C 1.0UF K	
C143		CK73HB1E103K	CHIP C 0.010UF K		C710		CK73HB1E103K	CHIP C 0.010UF K	
C144		CK73GB1E105K	CHIP C 1.0UF K		C711		CK73HB1A104K	CHIP C 0.10UF K	
C145-148		CK73HB1A104K	CHIP C 0.10UF K		C712		CK73HB1E103K	CHIP C 0.010UF K	
C149		CK73HB1E103K	CHIP C 0.010UF K		C713		CK73HB1H332K	CHIP C 3300PF K	
C150		CK73GB1E105K	CHIP C 1.0UF K		C714		CK73HB1H122K	CHIP C 1200PF K	
C151-155		CK73HB1A104K	CHIP C 0.10UF K		C715		CK73HB1A104K	CHIP C 0.10UF K	
C156,157		CK73HB1H102K	CHIP C 1000PF K		C716		CK73HB1H681K	CHIP C 680PF K	
C158		CK73HB1E103K	CHIP C 0.010UF K		C717		CK73HB1E103K	CHIP C 0.010UF K	
C159		CK73HB1A104K	CHIP C 0.10UF K		C718		CK73HB1H152K	CHIP C 1500PF K	
C160,161		CK73HB1E682K	CHIP C 6800PF K		C720		CK73HB1E103K	CHIP C 0.010UF K	
C401,402		CK73HB1A104K	CHIP C 0.10UF K		C721		CK73HB1A104K	CHIP C 0.10UF K	
C403-405		CS77MP1C2R2M	CHIP TNTL 2.2UF 16WV		C722		CK73HB1E103K	CHIP C 0.010UF K	
C406		CK73HB0J105K	CHIP C 1.0UF K		C723		CK73HB1A104K	CHIP C 0.10UF K	
C407,408		CK73HB1H102K	CHIP C 1000PF K		C724		CK73HB1E103K	CHIP C 0.010UF K	
C409		CK73HB0J105K	CHIP C 1.0UF K		C725		CC73HCH1E181J	CHIP C 180PF J	
C411,412		CK73HB0J105K	CHIP C 1.0UF K		C726,727		CK73HB1A104K	CHIP C 0.10UF K	
C414		CK73HB0J105K	CHIP C 1.0UF K		C728		CK73HB1H331K	CHIP C 330PF K	
C415		CS77BP1A100M	CHIP TNTL 10UF 10WV		C730		CK73HB1H331K	CHIP C 330PF K	
C416		CK73FB1A106K	CHIP C 10UF K		C731,732		CK73HB1E103K	CHIP C 0.010UF K	
C417		CC73HCH1H221J	CHIP C 220PF J		C734		CK73HB1H102K	CHIP C 1000PF K	
C418		CK73HB1E103K	CHIP C 0.010UF K		C735		CK73HB1H122K	CHIP C 1200PF K	
C419		CK73FB1E475K	CHIP C 4.7UF K		C736,737		CK73HB1A104K	CHIP C 0.10UF K	
C420		CK73HB1E103K	CHIP C 0.010UF K		C738		CK73HB1H102K	CHIP C 1000PF K	
C421		CK73HB1E682K	CHIP C 6800PF K		C739		CK73HB1E682K	CHIP C 6800PF K	
C422		CC73HCH1H100C	CHIP C 10PF C		C740		CK73HB1H102K	CHIP C 1000PF K	
C424,425		CK73HB1A104K	CHIP C 0.10UF K		C742		CK73GB1E105K	CHIP C 1.0UF K	
C427		CK73HB1E103K	CHIP C 0.010UF K		C743		CK73HB0J105K	CHIP C 1.0UF K	
C428		CC73HCH1H030C	CHIP C 3.0PF C		C744-746		CK73HB1E103K	CHIP C 0.010UF K	
C429,430		CK73HB1A104K	CHIP C 0.10UF K		C747,748		CK73HB1A104K	CHIP C 0.10UF K	
C431		CK73FB1A106K	CHIP C 10UF K		C749,750		CC73HCH1H470J	CHIP C 47PF J	
C433		CK73FB1A106K	CHIP C 10UF K		C751		CK73GB1E105K	CHIP C 1.0UF K	
C435-438		CK73HB1A563K	CHIP C 0.056UF K		C752,753		CC73HCH1H101J	CHIP C 100PF J	
C439,440		CK73HB1A104K	CHIP C 0.10UF K		C755		CC73HCH1H470J	CHIP C 47PF J	
C441		CK73GB1E105K	CHIP C 1.0UF K		C756		CK73HB1A104K	CHIP C 0.10UF K	
C442		CK73HB1H471K	CHIP C 470PF K		C757,758		CK73GB0J475K	CHIP C 4.7UF K	

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
C759,760		CK73HB1E103K	CHIP C 0.010UF K		L702		L92-0162-05	BEADS CORE	
C761		CC73HCH1H100D	CHIP C 10PF D		L704-709		L92-0162-05	BEADS CORE	
C762		CK73HB1A104K	CHIP C 0.10UF K		L710-712		L92-0444-05	CHIP FERRITE	
C763		CK73HB1E103K	CHIP C 0.010UF K		L713		L92-0163-05	BEADS CORE	
C764		CK73HB1H102K	CHIP C 1000PF K		L714-717		L92-0444-05	CHIP FERRITE	
C765-767		CK73HB1A104K	CHIP C 0.10UF K		L718		L92-0408-05	CHIP FERRITE	
C768		CK73HB1H102K	CHIP C 1000PF K		L719		L33-1494-05	SMALL FIXED INDUCTOR	
C771		CK73HB1A224K	CHIP C 0.22UF K		X101		L77-1802-05	CRYSTAL RESONATOR (32.768KHZ)	
C772		CK73HB1E103K	CHIP C 0.010UF K		X102		L77-3015-05	TCXO (18.432MHZ)	
C775		CC73HCH1H470J	CHIP C 47PF J		R1		RK73HB1J105J	CHIP R 1.0M J 1/16W	
C777		CK73HB1H102K	CHIP C 1000PF K		R2		RK73HB1J104J	CHIP R 100K J 1/16W	
C778		CK73HB0J105K	CHIP C 1.0UF K		R3		RK73HB1J123J	CHIP R 12K J 1/16W	
C779		CK73HB1E103K	CHIP C 0.010UF K		R4-10		RK73HB1J103J	CHIP R 10K J 1/16W	
C780		CK73HB1A224K	CHIP C 0.22UF K		R11		RK73HB1J104J	CHIP R 100K J 1/16W	
C781,782		CK73HB0J105K	CHIP C 1.0UF K		R12		RK73HB1J103J	CHIP R 10K J 1/16W	
C785		CK73HB1A224K	CHIP C 0.22UF K		R14		RK73HB1J472J	CHIP R 4.7K J 1/16W	
C786		CK73HB1E103K	CHIP C 0.010UF K		R15		RK73HB1J000J	CHIP R 0.0 J 1/16W	
C787		CK73HB0J105K	CHIP C 1.0UF K		R16		RK73HB1J331J	CHIP R 330 J 1/16W	
C788		CC73HCH1H150J	CHIP C 15PF J		R17		RK73HB1J000J	CHIP R 0.0 J 1/16W	
C789		CC73HCH1H680J	CHIP C 68PF J		R18		RK73HB1J822J	CHIP R 8.2K J 1/16W	
C790		CK73HB1A104K	CHIP C 0.10UF K		R19		RK73HB1J471J	CHIP R 470 J 1/16W	
C791		CK73HB1A393K	CHIP C 0.039UF K		R20		RK73HB1J102J	CHIP R 1.0K J 1/16W	
C792		CK73HB0J105K	CHIP C 1.0UF K		R21		RK73HB1J122J	CHIP R 1.2K J 1/16W	
C793,794		CK73HB1A104K	CHIP C 0.10UF K		R22-24		RK73HB1J102J	CHIP R 1.0K J 1/16W	
C795		CK73HB1E103K	CHIP C 0.010UF K		R25		RK73HB1J122J	CHIP R 1.2K J 1/16W	
C796		CK73HB1A104K	CHIP C 0.10UF K		R26		RK73HB1J102J	CHIP R 1.0K J 1/16W	
C797		CK73HB0J105K	CHIP C 1.0UF K		R27		RK73HB1J104J	CHIP R 100K J 1/16W	
C798		CS77BP1A100M	CHIP TNL 10UF 10WV		R28,29		RK73HB1J102J	CHIP R 1.0K J 1/16W	
C799		CK73HB1A104K	CHIP C 0.10UF K		R30		RK73HB1J101J	CHIP R 100 J 1/16W	
C800		CK73HB1H152K	CHIP C 1500PF K		R31		RK73HB1J102J	CHIP R 1.0K J 1/16W	
C801		CK73HB1C223K	CHIP C 0.022UF K		R32-35		RK73HB1J101J	CHIP R 100 J 1/16W	
C802		CK73HB1E103K	CHIP C 0.010UF K		R40		RK73HB1J000J	CHIP R 0.0 J 1/16W	
C803		CK73HB1H102K	CHIP C 1000PF K		R101,102		RK73HB1J474J	CHIP R 470K J 1/16W	
C804		CC73HCH1H470J	CHIP C 47PFJ		R103		RK73HB1J102J	CHIP R 1.0K J 1/16W	
C805,806		CK73HB1H471K	CHIP C 470PF K		R105		RK73HB1J104J	CHIP R 100K J 1/16W	
C808		CK73GB0J475K	CHIP C 4.7UF K		R106		RK73HB1J472J	CHIP R 4.7K J 1/16W	K2
C809		CK73FB1A106K	CHIP C 10UF K		R107		RK73HB1J104J	CHIP R 100K J 1/16W	
C812		CK73HB0J105K	CHIP C 1.0UF K		R108		RK73HB1J474J	CHIP R 470K J 1/16W	K2
CN1		E40-6755-05	FLAT CABLE CONNECTOR		R110,111		RK73HB1J104J	CHIP R 100K J 1/16W	
CN22		E23-1325-05	TERMINAL		R112		RK73HB1J000J	CHIP R 0.0 J 1/16W	K2
CN23		E40-6758-05	PIN ASSY		R113		RK73HB1J104J	CHIP R 100K J 1/16W	
CN24		E23-1325-05	TERMINAL		R114		RK73HB1J331J	CHIP R 330 J 1/16W	K2
CN401		J19-5386-05	HOLDER (LITHIUM CELL)		R115		RK73HB1J104J	CHIP R 100K J 1/16W	
CN403		E40-6813-05	PIN ASSY		R116		RK73HB1J473J	CHIP R 47K J 1/16W	
CN404		E40-6421-15	PIN ASSY		R117		RK73HB1J000J	CHIP R 0.0 J 1/16W	K2
CN405		E40-6754-05	FLAT CABLE CONNECTOR		R118		RK73HB1J473J	CHIP R 47K J 1/16W	
CN701		E40-6586-05	SOCKET FOR PIN ASSY		R119		RK73HB1J104J	CHIP R 100K J 1/16W	
CN710		E40-6757-05	PIN ASSY		R120		RK73HB1J474J	CHIP R 470K J 1/16W	
F701		F53-0360-05	FUSE (0.25A)		R121-123		RK73HB1J104J	CHIP R 100K J 1/16W	
L1,2		L92-0408-05	CHIP FERRITE		R126		RK73HB1J101J	CHIP R 100 J 1/16W	
L3		L92-0140-05	CHIP FERRITE		R127,128		RK73HB1J000J	CHIP R 0.0 J 1/16W	
L4-7		L92-0408-05	CHIP FERRITE		R129-131		RK73HB1J101J	CHIP R 100 J 1/16W	
L8		L92-0140-05	CHIP FERRITE		R132,133		RK73HB1J104J	CHIP R 100K J 1/16W	
L101,102		L92-0408-05	CHIP FERRITE		R135-137		RK73HB1J104J	CHIP R 100K J 1/16W	
L401		L33-1496-05	SMALL FIXED INDUCTOR		R138		RK73HB1J473J	CHIP R 47K J 1/16W	
L402		L92-0467-05	CHIP FERRITE		R139		RK73HB1J104J	CHIP R 100K J 1/16W	
L403		L92-0466-05	CHIP FERRITE		R140		RK73HB1J000J	CHIP R 0.0 J 1/16W	
L409-411		L92-0467-05	CHIP FERRITE		R141-143		RK73HB1J104J	CHIP R 100K J 1/16W	
L701		L92-0140-05	CHIP FERRITE		R144		RK73HB1J471J	CHIP R 470 J 1/16W	

NX-200(G)

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
R145-147		RK73HB1J104J	CHIP R 100K J 1/16W		R448		RK73HB1J103J	CHIP R 10K J 1/16W	
R148		RK73HB1J151J	CHIP R 150 J 1/16W		R449-452		RK73HB1J474J	CHIP R 470K J 1/16W	
R149		RK73HB1J000J	CHIP R 0.0 J 1/16W		R453		RK73HB1J104J	CHIP R 100K J 1/16W	
R150		RK73HB1J102J	CHIP R 1.0K J 1/16W		R454		RK73HB1J474J	CHIP R 470K J 1/16W	
R153,154		RK73HB1J104J	CHIP R 100K J 1/16W		R455		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R155		RK73HB1J473J	CHIP R 47K J 1/16W		R456		RK73HB1J474J	CHIP R 470K J 1/16W	
R156,157		RK73HB1J472J	CHIP R 4.7K J 1/16W		R457,458		RK73HB1J104J	CHIP R 100K J 1/16W	
R158,159		RK73HB1J220J	CHIP R 22 J 1/16W		R459,460		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R160,161		RK73HB1J000J	CHIP R 0.0 J 1/16W		R461		RK73HB1J103J	CHIP R 10K J 1/16W	
R162		RK73HB1J474J	CHIP R 470K J 1/16W		R462		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R163		RK73HH1J104D	CHIP R 100K D 1/16W		R463		RK73HB1J104J	CHIP R 100K J 1/16W	
R165		RK73HB1J102J	CHIP R 1.0K J 1/16W		R465		RK73HB1J103J	CHIP R 10K J 1/16W	
R166		RK73HB1J104J	CHIP R 100K J 1/16W		R466,467		RK73HB1J104J	CHIP R 100K J 1/16W	
R167		RK73HB1J102J	CHIP R 1.0K J 1/16W		R468		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R168		RK73HB1J000J	CHIP R 0.0 J 1/16W		R469		RK73HB1J474J	CHIP R 470K J 1/16W	
R170		RK73HH1J103D	CHIP R 10K D 1/16W		R470		RK73HB1J183J	CHIP R 18K J 1/16W	
R171-173		RK73HB1J000J	CHIP R 0.0 J 1/16W		R471		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R174-178		RK73HB1J104J	CHIP R 100K J 1/16W		R472		RK73HB1J223J	CHIP R 22K J 1/16W	
R180,181		RK73HB1J104J	CHIP R 100K J 1/16W		R473		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R182		RK73HB1J474J	CHIP R 470K J 1/16W		R474,475		RK73HB1J333J	CHIP R 33K J 1/16W	
R183		RK73HB1J104J	CHIP R 100K J 1/16W		R477,478		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R184		RK73HB1J473J	CHIP R 47K J 1/16W		R479		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R185		RK73HB1J105J	CHIP R 1.0M J 1/16W		R481		RK73HB1J474J	CHIP R 470K J 1/16W	
R186		RK73HB1J473J	CHIP R 47K J 1/16W		R483		RK73HB1J473J	CHIP R 47K J 1/16W	
R187		RK73HB1J102J	CHIP R 1.0K J 1/16W		R484		RK73HB1J223J	CHIP R 22K J 1/16W	
R188		RK73HB1J473J	CHIP R 47K J 1/16W		R485		RK73HB1J103J	CHIP R 10K J 1/16W	
R189		RK73HB1J104J	CHIP R 100K J 1/16W		R487-490		RK73HH1J223D	CHIP R 22K D 1/16W	
R190		RK73HB1J102J	CHIP R 1.0K J 1/16W		R491		RK73HB1J104J	CHIP R 100K J 1/16W	
R191		RK73HB1J474J	CHIP R 470K J 1/16W		R492		RK73HB1J474J	CHIP R 470K J 1/16W	
R192		RK73HB1J102J	CHIP R 1.0K J 1/16W		R493		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R193,194		RK73HB1J104J	CHIP R 100K J 1/16W		R494-497		RK73HH1J104D	CHIP R 100K D 1/16W	
R401		RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R500		RK73HB1J473J	CHIP R 47K J 1/16W	
R402		RK73HB1J151J	CHIP R 150 J 1/16W		R501		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R403		RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R502,503		RK73HB1J103J	CHIP R 10K J 1/16W	
R404		RK73HB1J151J	CHIP R 150 J 1/16W		R504		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R405		RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R506		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R406		RK73HB1J000J	CHIP R 0.0 J 1/16W		R507-511		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R407,408		RK73HB1J103J	CHIP R 10K J 1/16W		R512		RK73HB1J101J	CHIP R 100 J 1/16W	
R409		RK73HB1J470J	CHIP R 47 J 1/16W		R513-515		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R410-416		RK73HB1J471J	CHIP R 470 J 1/16W		R516		RK73HB1J101J	CHIP R 100 J 1/16W	
R417		RK73HB1J000J	CHIP R 0.0 J 1/16W		R517		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R418		RK73HB1J471J	CHIP R 470 J 1/16W		R518		RK73HB1J101J	CHIP R 100 J 1/16W	
R419,420		RK73HB1J000J	CHIP R 0.0 J 1/16W		R519-528		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R424		RK73HH1J683D	CHIP R 68K D 1/16W		R529-531		RK73HB1J101J	CHIP R 100 J 1/16W	
R425		RK73HH1J333D	CHIP R 33K D 1/16W		R532		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R426-429		RK73HB1J000J	CHIP R 0.0 J 1/16W		R533-535		RK73HB1J101J	CHIP R 100 J 1/16W	
R431		RK73HB1J474J	CHIP R 470K J 1/16W		R536-540		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R432,433		RK73HB1J000J	CHIP R 0.0 J 1/16W		R541		RK73HB1J101J	CHIP R 100 J 1/16W	
R434		RK73HB1J393J	CHIP R 39K J 1/16W		R543		RK73HB1J101J	CHIP R 100 J 1/16W	
R435,436		RK73HB1J104J	CHIP R 100K J 1/16W		R544		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R437		RK73HB1J471J	CHIP R 470 J 1/16W		R545		RK73HB1J101J	CHIP R 100 J 1/16W	
R438,439		RK73HB1J104J	CHIP R 100K J 1/16W		R546,547		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R440		RK73HB1J000J	CHIP R 0.0 J 1/16W		R548,549		RK73HB1J473J	CHIP R 47K J 1/16W	
R441		RK73HB1J153J	CHIP R 15K J 1/16W		R550		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R442		RK73HB1J102J	CHIP R 1.0K J 1/16W		R701-707		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R443		RK73HB1J474J	CHIP R 470K J 1/16W		R709-715		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R444		RK73HB1J564J	CHIP R 560K J 1/16W		R716		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R445		RK73HB1J154J	CHIP R 150K J 1/16W		R717-722		RK73HB1J104J	CHIP R 100K J 1/16W	
R446		RK73HB1J274J	CHIP R 270K J 1/16W		R723		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R447		RK73HB1J104J	CHIP R 100K J 1/16W		R724		RK73HB1J104J	CHIP R 100K J 1/16W	

NX-200(G)

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
R725		RK73HB1J100J	CHIP R 10 J 1/16W		R803		RK73HB1J103J	CHIP R 10K J 1/16W	
R726		RK73HB1J104J	CHIP R 100K J 1/16W		R804		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R727-729		RK73HB1J105J	CHIP R 1.0M J 1/16W		R805,806		RK73HB1J473J	CHIP R 47K J 1/16W	
R730		RK73HB1J471J	CHIP R 470 J 1/16W		R807		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R731,732		RK73HB1J105J	CHIP R 1.0M J 1/16W		R808		RK73HB1J471J	CHIP R 470 J 1/16W	
R733		RK73HB1J473J	CHIP R 47K J 1/16W		R809		RK73HB1J334J	CHIP R 330K J 1/16W	
R735		RK73HB1J473J	CHIP R 47K J 1/16W		R810		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R736		RK73HB1J823J	CHIP R 82K J 1/16W		R811		RK73HB1J823J	CHIP R 82K J 1/16W	
R737		RK73HB1J153J	CHIP R 15K J 1/16W		R812		RK73HB1J562J	CHIP R 5.6K J 1/16W	
R738		RK73HB1J563J	CHIP R 56K J 1/16W		R813		RK73HB1J273J	CHIP R 27K J 1/16W	
R739		RK73HB1J823J	CHIP R 82K J 1/16W		R814		RK73HB1J564J	CHIP R 560K J 1/16W	
R740		RK73HB1J000J	CHIP R 0.0 J 1/16W		R815		RK73HB1J104J	CHIP R 100K J 1/16W	
R741		RK73HB1J474J	CHIP R 470K J 1/16W		R816		RK73HB1J683J	CHIP R 68K J 1/16W	
R742,743		RK73HB1J103J	CHIP R 10K J 1/16W		R818		RK73HB1J104J	CHIP R 100K J 1/16W	
R744		RK73HB1J223J	CHIP R 22K J 1/16W		R819,820		RK73HB1J103J	CHIP R 10K J 1/16W	
R745		RK73HB1J682J	CHIP R 6.8K J 1/16W		R821		RK73HB1J104J	CHIP R 100K J 1/16W	
R746		RK73HB1J563J	CHIP R 56K J 1/16W		R822,823		RK73HB1J103J	CHIP R 10K J 1/16W	
R748		RK73HB1J103J	CHIP R 10K J 1/16W		R824		RK73HB1J393J	CHIP R 39K J 1/16W	
R749		RK73HB1J472J	CHIP R 4.7K J 1/16W		R825		RK73HB1J104J	CHIP R 100K J 1/16W	
R750		RK73HB1J103J	CHIP R 10K J 1/16W		R826		RK73HB1J334J	CHIP R 330K J 1/16W	
R752		RK73HB1J101J	CHIP R 100 J 1/16W		R827		RK73HB1J184J	CHIP R 180K J 1/16W	
R753		RK73HB1J683J	CHIP R 68K J 1/16W		R828,829		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R754		RK73HB1J564J	CHIP R 560K J 1/16W		R830		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R755		RK73HB1J104J	CHIP R 100K J 1/16W		R831		RK73HB1J474J	CHIP R 470K J 1/16W	
R756		RK73HB1J101J	CHIP R 100 J 1/16W		R832		RK73HB1J473J	CHIP R 47K J 1/16W	
R757		RK73HB1J223J	CHIP R 22K J 1/16W		R833		RK73HB1J684J	CHIP R 680K J 1/16W	
R758		RK73HB1J103J	CHIP R 10K J 1/16W		R834		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R759		RK73HB1J101J	CHIP R 100 J 1/16W		R835		RK73HB1J153J	CHIP R 15K J 1/16W	
R761-764		RK73HB1J223J	CHIP R 22K J 1/16W		R836		RK73HB1J473J	CHIP R 47K J 1/16W	
R765		RK73HB1J334J	CHIP R 330K J 1/16W		R837		RK73HB1J683J	CHIP R 68K J 1/16W	
R766		RK73HB1J000J	CHIP R 0.0 J 1/16W		R838		RK73HB1J564J	CHIP R 560K J 1/16W	
R767		RK73HB1J103J	CHIP R 10K J 1/16W		R839		RK73HB1J333J	CHIP R 33K J 1/16W	
R768		RK73HB1J224J	CHIP R 220K J 1/16W		R840		RK73HB1J123J	CHIP R 12K J 1/16W	
R769,770		RK73HB1J334J	CHIP R 330K J 1/16W		R841		RK73HB1J564J	CHIP R 560K J 1/16W	
R771		RK73HB1J153J	CHIP R 15K J 1/16W		R842		RK73HB1J104J	CHIP R 100K J 1/16W	
R775		RK73HB1J183J	CHIP R 18K J 1/16W		R843		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R777		RK73HB1J473J	CHIP R 47K J 1/16W		R844		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R778		RK73HB1J333J	CHIP R 33K J 1/16W		R845		RK73HB1J104J	CHIP R 100K J 1/16W	
R779		RK73HB1J473J	CHIP R 47K J 1/16W		R846		RK73HB1J471J	CHIP R 470 J 1/16W	
R780		RK73HB1J104J	CHIP R 100K J 1/16W		R847		RK73HB1J182J	CHIP R 1.8K J 1/16W	
R782		RK73HB1J104J	CHIP R 100K J 1/16W		R848		RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R783		RK73HB1J183J	CHIP R 18K J 1/16W		R849,850		RK73HB1J000J	CHIP R 0.0 J 1/16W	K2
R784		RK73HB1J104J	CHIP R 100K J 1/16W		R850		RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R785		RK73HB1J682J	CHIP R 6.8K J 1/16W		R851,852		RK73HB1J683J	CHIP R 68K J 1/16W	
R786		RK73HB1J000J	CHIP R 0.0 J 1/16W		VR1	2B	R31-0666-05	VARIABLE RESISTOR	
R787		RK73HB1J124J	CHIP R 120K J 1/16W		S1	2B	S60-0437-05	ROTARY SWITCH	
R788		RK73HB1J473J	CHIP R 47K J 1/16W		D11		DA2S101	DIODE	
R789		RK73HB1J154J	CHIP R 150K J 1/16W		D12-16		KDR720F-P	DIODE	
R790		RK73HB1J102J	CHIP R 1.0K J 1/16W		D17		EMZ6.8N	ZENER DIODE	
R791		RK73HB1J474J	CHIP R 470K J 1/16W		D18,19		HZC6.8-E	ZENER DIODE	
R793		RK73HB1J102J	CHIP R 1.0K J 1/16W		D20,21		NNCD6.8G-A	ZENER DIODE	
R794		RK73HB1J104J	CHIP R 100K J 1/16W		D22,23		KDS123E-P	DIODE	
R795		RK73HB1J000J	CHIP R 0.0 J 1/16W		D101		DA2S101	DIODE	K2
R796		RK73HB1J333J	CHIP R 33K J 1/16W		D102		KDR720F-P	DIODE	
R797		RK73HB1J102J	CHIP R 1.0K J 1/16W		D401-405		1SS388F	DIODE	
R798		RK73HB1J104J	CHIP R 100K J 1/16W		D406		HRB0502A	DIODE	
R799		RK73HB1J334J	CHIP R 330K J 1/16W		D407		DA2S101	DIODE	
R800		RK73HB1J474J	CHIP R 470K J 1/16W		D408		KDS121-P	DIODE	
R801		RK73HB1J473J	CHIP R 47K J 1/16W						
R802		RK73HB1J474J	CHIP R 470K J 1/16W						

If a part reference number is listed in a shaded box, that part does not come with the PCB.

NX-200(G)

PARTS LIST

TX-RX UNIT (X57-8950-12)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
C45-47		CK73HB1H471K	CHIP C 470PF K		C139		CK73HB1H471K	CHIP C 470PF K	
C48		C93-1906-05	CHIP TNTL 0.047UF 35WV		C140		CC73GCH1H110G	CHIP C 11PF G	
C50,51		CC73HCH1H101J	CHIP C 100PF J		C141		CK73HB1H471K	CHIP C 470PF K	
C52		CK73HB1H471K	CHIP C 470PF K		C142		CC73GCH1H080B	CHIP C 8.0PF B	
C53		CK73FB0J106K	CHIP C 10UF K		C143		CC73HCH1H101J	CHIP C 100PF J	
C54		CK73HB1H471K	CHIP C 470PF K		C144		CC73GCH1H270G	CHIP C 27PF G	
C55		CK73GB0J475K	CHIP C 4.7UF K		C145		CK73HB1C103K	CHIP C 0.010UF K	
C56		CK73HB0J105K	CHIP C 1.0UF K		C146		CC73GCH1H150G	CHIP C 15PF G	
C57		CC73HCH1H270J	CHIP C 27PF J		C148		CK73HB1H102K	CHIP C 1000PF K	
C58		CC73HCH1H470J	CHIP C 47PF J		C149		CC73GCH1H220G	CHIP C 22PF G	
C60		CK73HB1H471K	CHIP C 470PF K		C150		CK73HB1A104K	CHIP C 0.10UF K	
C62		CC73HCH1H030B	CHIP C 3.0PF B		C151		CK73GB1C104K	CHIP C 0.10UF K	
C63		CK73HB1H471K	CHIP C 470PF K		C152		CK73GB1E105K	CHIP C 1.0UF K	
C64		CC73HCH1H030B	CHIP C 3.0PF B		C154		CC73GCH1H220G	CHIP C 22PF G	
C65		CC73HCH1HR75B	CHIP C 0.75PF B		C155		CK73HB1H471K	CHIP C 470PF K	
C66		CC73HCH1H080B	CHIP C 8.0PF B		C156		CK73HB1C103K	CHIP C 0.010UF K	
C67-69		CC73HCH1H100B	CHIP C 10PF B		C158		CC73GCH1H330G	CHIP C 33PF G	
C70		CK73HB1H102K	CHIP C 1000PF K		C159		CK73HB1H471K	CHIP C 470PF K	
C71		CK73GB1H103K	CHIP C 0.010UF K		C160		CK73HB1A104K	CHIP C 0.10UF K	
C72		CK73GB1H102K	CHIP C 1000PF K		C163		CC73GCH1H120G	CHIP C 12PF G	
C74,75		CC73HCH1H0R5B	CHIP C 0.5PF B		C165		CC73GCH1H070B	CHIP C 7.0PF B	
C76		CK73HB1H102K	CHIP C 1000PF K		C166		CC73GCH1H560J	CHIP C 56PF J	
C77		CC73HCH1H220J	CHIP C 22PF J		C167,168		CC73HCH1H101J	CHIP C 100PF J	
C78		CK73HB1H471K	CHIP C 470PF K		C169		CK73HB1A104K	CHIP C 0.10UF K	
C79		CC73HCH1H101J	CHIP C 100PF J		C173		CK73HB1H471K	CHIP C 470PF K	
C81		CC73HCH1H470J	CHIP C 47PF J		C177		CC73HCH1H220J	CHIP C 22PF J	
C82		CK73FB0J106K	CHIP C 10UF K		C178		CC73HCH1H120J	CHIP C 12PF J	
C83		CK73HB1H471K	CHIP C 470PF K		C179		CC73HCH1H100B	CHIP C 10PF B	
C84		CC73HCH1H050B	CHIP C 5.0PF B		C180		CC73GCH1H120G	CHIP C 12PF G	
C85		CK73HB0J105K	CHIP C 1.0UF K		C190		CC73GCH1H270G	CHIP C 27PF G	
C87		CK73HB1C103K	CHIP C 0.010UF K		C191		CC73GCH1H181J	CHIP C 180PF J	
C88		CC73HCH1H101J	CHIP C 100PF J		C193		CC73GCH1H330G	CHIP C 33PF G	
C90,91		CK73HB1A104K	CHIP C 0.10UF K		C201,202		CK73GB1H104K	CHIP C 0.10UF K	
C92		CC73HCH1H020B	CHIP C 2.0PF B		C203		CC73HCH1H070B	CHIP C 7.0PF B	
C93		CC73HCH1H330J	CHIP C 33PF J		C204		CK73HB1C103K	CHIP C 0.010UF K	
C100		CC73HCH1H150J	CHIP C 15PF J		C206		CK73HB1C103K	CHIP C 0.010UF K	
C101,102		CK73HB1H102K	CHIP C 1000PF K		C207		CC73HCH1H100B	CHIP C 10PF B	
C104		CC73HCH1H100C	CHIP C 10PF C		C208		CC73HCH1H680J	CHIP C 68PF J	
C106		CK73HB1H102K	CHIP C 1000PF K		C209		CC73HCH1H101J	CHIP C 100PF J	
C109		CK73HB1H471K	CHIP C 470PF K		C210		CK73HB1H471K	CHIP C 470PF K	
C111		CK73HB1H102K	CHIP C 1000PF K		C211		CK73HB1C103K	CHIP C 0.010UF K	
C112		CC73HCH1H560J	CHIP C 56PF J		C212		CC73HCH1H680J	CHIP C 68PF J	
C114,115		CK73HB1H102K	CHIP C 1000PF K		C213		CK73HB1C103K	CHIP C 0.010UF K	
C116		CK73HB1A104K	CHIP C 0.10UF K		C215		CC73HCH1H050B	CHIP C 5.0PF B	
C117		CK73HB1H102K	CHIP C 1000PF K		C216		CC73HCH1H220G	CHIP C 22PF G	
C119		CC73HCH1H180J	CHIP C 18PF J		C217		CC73HCH1H470J	CHIP C 47PF J	
C120		CK73HB1H471K	CHIP C 470PF K		C219		CC73HCH1H060B	CHIP C 6.0PF B	
C122		CK73HB1H102K	CHIP C 1000PF K		C220		CK73HB1C103K	CHIP C 0.010UF K	
C123		CK73HB1A104K	CHIP C 0.10UF K		C221		CK73HB1A104K	CHIP C 0.10UF K	
C124		CC73HCH1H470J	CHIP C 47PF J		C222,223		CK73HB1C103K	CHIP C 0.010UF K	
C125		CK73HB1H102K	CHIP C 1000PF K		C224,225		CK73HB1A104K	CHIP C 0.10UF K	
C127		CC73HCH1H100C	CHIP C 10PF C		C226		CK73HB1H471K	CHIP C 470PF K	
C128		CS77CA1A6R8M	CHIP TNTL 6.8UF 10WV		C227,228		CK73HB1A104K	CHIP C 0.10UF K	
C129		CK73HB1A104K	CHIP C 0.10UF K		C229		CC73HCH1H100B	CHIP C 10PF B	
C130		CK73HB1H102K	CHIP C 1000PF K		C230		CK73HB1A104K	CHIP C 0.10UF K	
C131		CK73GB1E105K	CHIP C 1.0UF K		C231		CC73HCH1H100B	CHIP C 10PF B	
C132		CK73HB1H102K	CHIP C 1000PF K		C232		CK73HB1H102K	CHIP C 1000PF K	
C133,134		CK73HB1H471K	CHIP C 470PF K		C233		CK73HB1C103K	CHIP C 0.010UF K	
C135		CC73GCH1H150G	CHIP C 15PF G		C234		CK73FB1E474K	CHIP C 0.47UF K	
C136		CC73GCH1H820J	CHIP C 82PF J		C235		CK73HB1H102K	CHIP C 1000PF K	

NX-200(G)

PARTS LIST

TX-RX UNIT (X57-8950-12)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
C236,237		CK73FB1A106K	CHIP C 10UF K		C416		CK73GB1E105K	CHIP C 1.0UF K	
C238		CK73HB1C103K	CHIP C 0.010UF K		C417		CC73HCH1E181J	CHIP C 180PF J	
C239		CK73HB1A104K	CHIP C 0.10UF K		C418		CK73GB1E105K	CHIP C 1.0UF K	
C240		CC73HCH1H040B	CHIP C 4.0PF B		C419		CC73HCH1H220J	CHIP C 22PF J	
C241,242		CK73HB1H102K	CHIP C 1000PF K		C420		CK73HB1H471K	CHIP C 470PF K	
C244		CC73HCH1H120G	CHIP C 12PF G		C421		CK73GB1C224K	CHIP C 0.22UF K	
C245		CK73FB1A475K	CHIP C 4.7UF K		C422		CK73GB1E105K	CHIP C 1.0UF K	
C246		CK73HB1A104K	CHIP C 0.10UF K		C423		CK73GB1C224K	CHIP C 0.22UF K	
C247		CC73HCH1H050B	CHIP C 5.0PF B		C424,425		CK73GB1E105K	CHIP C 1.0UF K	
C248		CC73HCH1H220G	CHIP C 22PF G		C426		CC73HCH1H470J	CHIP C 47PF J	
C249		CK73HB1A104K	CHIP C 0.10UF K		C428-445		CC73HCH1H470J	CHIP C 47PF J	
C250		CC73HCH1H030B	CHIP C 3.0PF B		C447		CC73HCH1H470J	CHIP C 47PF J	
C251		CC73HCH1H060B	CHIP C 6.0PF B		C449-458		CC73HCH1H470J	CHIP C 47PF J	
C252		CC73HCH1H470G	CHIP C 47PF G		C460		CC73HCH1H470J	CHIP C 47PF J	
C254		CC73HCH1H100B	CHIP C 10PF B		C462,463		CK73HB1H471K	CHIP C 470PF K	
C259		CC73HCH1H820J	CHIP C 82PF J		C464-468		CK73HB1H102K	CHIP C 1000PF K	
C261		CC73HCH1H270J	CHIP C 27PF J		C470		CC73HCH1H470J	CHIP C 47PF J	
C262		CK73HB1C103K	CHIP C 0.010UF K		C472-474		CC73HCH1H470J	CHIP C 47PF J	
C264		CC73HCH1H270J	CHIP C 27PF J		C475		CK73HB0J105K	CHIP C 1.0UF K	
C267		CK73HB1H102K	CHIP C 1000PF K		C476		CC73HCH1H470J	CHIP C 47PF J	
C268		CC73HCH1H390J	CHIP C 39PF J		C478,479		CC73HCH1H470J	CHIP C 47PF J	
C270		CC73HCH1H1R5B	CHIP C 1.5PF B		C480		CK73GB1E105K	CHIP C 1.0UF K	
C273		CC73HCH1H330J	CHIP C 33PF J		C481		CK73HB1A394K	CHIP C 0.39UF K	
C274		CK73HB1H102K	CHIP C 1000PF K		C499		CC73HCH1H470J	CHIP C 47PF J	
C275,276		CK73HB1A104K	CHIP C 0.10UF K		C501		CC73HCH1H020B	CHIP C 2.0PF B	
C278		CK73HB1H102K	CHIP C 1000PF K		C502		CK73HB1H102K	CHIP C 1000PF K	
C281		CK73HB1C103K	CHIP C 0.010UF K		C503		CC73HCH1H180J	CHIP C 18PF J	
C282		CK73GB1E105K	CHIP C 1.0UF K		C504		CC73HCH1H1R5B	CHIP C 1.5PF B	
C283-286		CK73HB1H102K	CHIP C 1000PF K		C505		CC73HCH1H121J	CHIP C 120PF J	
C290		CC73HCH1H150J	CHIP C 15PF J		C506.507		CC73HCH1H010B	CHIP C 1.0PF B	
C291		CK73HB1H102K	CHIP C 1000PF K		C508		CC73GCH1H100C	CHIP C 10PF C	
C295		CC73HCH1H100B	CHIP C 10PF B		CN102	E23-1326-05	TERMINAL		
C296		CC73HCH1H020B	CHIP C 2.0PF B		CN400	E40-6422-15	SOCKET FOR PIN ASSY(50P)		
C297		CC73HCH1H010B	CHIP C 1.0PF B		CN401	E40-6752-05	FLAT CABLE CONNECTOR(5P)		
C298		CC73HCH1H020B	CHIP C 2.0PF B		CN881	E04-0496-05	SOCKET FOR PIN (GPS)		
C299		CC73HCH1H180J	CHIP C 18PF J		F400	F53-0324-05	FUSE (2.5A)		
C301		CC73HCH1H180J	CHIP C 18PF J		CF200	L72-1017-05	CERAMIC FILTER(450KHZ)		
C304		CC73HCH1H120J	CHIP C 12PF J		CF201	L72-1020-05	CERAMIC FILTER(450KHZ)		
C306		CC73HCH1H390J	CHIP C 39PF J		L1	L41-4795-39	SMALL FIXED INDUCTOR (4.7UH)		
C307		CC73HCH1H180J	CHIP C 18PF J		L2,3	L40-5667-92	SMALL FIXED INDUCTOR (5.6NH)		
C310		CC73HCH1H470G	CHIP C 47PF G		L5	L40-8275-92	SMALL FIXED INDUCTOR (82NH)		
C311		CK73HB1C103K	CHIP C 0.010UF K		L6,7	L40-5667-92	SMALL FIXED INDUCTOR (5.6NH)		
C312		CK73GB1H104K	CHIP C 0.10UF K		L8	L40-3975-92	SMALL FIXED INDUCTOR (39NH)		
C314		CK73HB1A104K	CHIP C 0.10UF K		L10	L92-0163-05	BEADS CORE		
C316		CK73HB1H102K	CHIP C 1000PF K		L11	L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)		
C317		CC73HCH1H100B	CHIP C 10PF B		L12	L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)		
C320		CC73HCH1H010B	CHIP C 1.0PF B		L15	L92-0446-05	BEADS CORE		
C355,356		CK73HB1A104K	CHIP C 0.10UF K		L16-20	L40-2285-92	SMALL FIXED INDUCTOR (220NH)		
C362		CC73HCH1H330J	CHIP C 33PF J		L23	L40-5678-67	SMALL FIXED INDUCTOR (56NH)		
C386		CC73HCH1H070B	CHIP C 7.0PF B		L24	L40-2778-67	SMALL FIXED INDUCTOR (27NH)		
C400		CC73GCH1H220J	CHIP C 22PF J		L25	L40-1285-92	SMALL FIXED INDUCTOR (120NH)		
C402,403		CK73HB1H471K	CHIP C 470PF K		L26,27	L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)		
C404-406		CK73GB1E105K	CHIP C 1.0UF K		L29	L40-1085-71	SMALL FIXED INDUCTOR (100NH)		
C407		CK73GB1C224K	CHIP C 0.22UF K		L30	L40-6875-92	SMALL FIXED INDUCTOR (68NH)		
C408		CK73GB1E105K	CHIP C 1.0UF K		L98,99	L92-0163-05	BEADS CORE		
C409	C92-0765-05		CHIP TNTL 4.7UF 16WV		L100	L40-1085-92	SMALL FIXED INDUCTOR (100NH)		
C410		CK73GB1C224K	CHIP C 0.22UF K		L102	L40-6875-92	SMALL FIXED INDUCTOR (68NH)		
C411		CK73HB1A104K	CHIP C 0.10UF K		L103	L40-1085-92	SMALL FIXED INDUCTOR (100NH)		
C414		CK73GB1C224K	CHIP C 0.22UF K						
C415		CK73HB1H471K	CHIP C 470PF K						

NX-200(G)

PARTS LIST

TX-RX UNIT (X57-8950-12)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
L104		L92-0138-05	CHIP FERRITE		R28		RK73HB1J223J	CHIP R 22K J 1/16W	
L105		L40-4775-92	SMALL FIXED INDUCTOR (47NH)		R29		RK73HB1J000J	CHIP R 0.0 J 1/16W	
L106		L41-1085-43	SMALL FIXED INDUCTOR (100NH)		R30		RK73HB1J563J	CHIP R 56K J 1/16W	
L107		L92-0149-05	CHIP FERRITE		R31		RK73HB1J121J	CHIP R 120 J 1/16W	
L108		L40-1575-92	SMALL FIXED INDUCTOR (15NH)		R32		RK73HB1J000J	CHIP R 0.0 J 1/16W	
L109		L34-4574-05	AIR-CORE COIL		R33		RK73HB1J223J	CHIP R 22K J 1/16W	
L110		L34-4566-05	AIR-CORE COIL		R34		RK73HH1J391D	CHIP R 390 D 1/16W	
L111		L34-4576-05	AIR-CORE COIL		R35		RK73HB1J103J	CHIP R 10K J 1/16W	
L112		L92-0149-05	CHIP FERRITE		R36		RK73HB1J472J	CHIP R 4.7K J 1/16W	
L113		L34-4566-05	AIR-CORE COIL		R37,38		RK73HB1J000J	CHIP R 0.0 J 1/16W	
L114		L34-4565-05	AIR-CORE COIL		R39		RK73HB1J152J	CHIP R 1.5K J 1/16W	
L115		L41-2295-39	SMALL FIXED INDUCTOR (2.2UH)		R40		RK73HB1J103J	CHIP R 10K J 1/16W	
L116		L34-4569-05	AIR-CORE COIL		R41		RK73HB1J474J	CHIP R 470K J 1/16W	
L117		L34-4577-05	AIR-CORE COIL		R42		RK73HB1J473J	CHIP R 47K J 1/16W	
L118		L34-4564-05	AIR-CORE COIL		R43		RK73HB1J102J	CHIP R 1.0K J 1/16W	
L119		L34-4563-05	AIR-CORE COIL		R44,45		RK73HB1J473J	CHIP R 47K J 1/16W	
L201		L40-5681-86	SMALL FIXED INDUCTOR (0.56UH)		R46		RK73HH1J331D	CHIP R 330 D 1/16W	
L202		L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)		R47		RK73HB1J220J	CHIP R 22 J 1/16W	
L203		L41-4778-45	SMALL FIXED INDUCTOR (47NH)		R48		RK73HH1J271D	CHIP R 270 D 1/16W	
L204		L92-0138-05	CHIP FERRITE		R49		RK73HB1J154J	CHIP R 150K J 1/16W	
L205		L41-2785-39	SMALL FIXED INDUCTOR (0.27UH)		R50		RK73HB1J101J	CHIP R 100 J 1/16W	
L206		L41-5685-39	SMALL FIXED INDUCTOR (0.56UH)		R51		RK73HB1J102J	CHIP R 1.0K J 1/16W	
L207		L40-1085-92	SMALL FIXED INDUCTOR (100NH)		R52		RK73HB1J473J	CHIP R 47K J 1/16W	
L208,209		L40-3375-92	SMALL FIXED INDUCTOR (33NH)		R53		RK73HB1J683J	CHIP R 68K J 1/16W	
L210		L41-6878-14	SMALL FIXED INDUCTOR (68NH)		R54		RK73HB1J102J	CHIP R 1.0K J 1/16W	
L214		L92-0138-05	CHIP FERRITE		R55		RK73HB1J104J	CHIP R 100K J 1/16W	
L223		L40-5675-92	SMALL FIXED INDUCTOR (56NH)		R56		RK73HB1J000J	CHIP R 0.0 J 1/16W	
L224		L41-5678-14	SMALL FIXED INDUCTOR (56NH)		R57		RK73HB1J124J	CHIP R 120K J 1/16W	
L226		L92-0138-05	CHIP FERRITE		R58		RK73HB1J823J	CHIP R 82K J 1/16W	
L230		L40-2702-86	SMALL FIXED INDUCTOR (27UH)		R59,60		RN73HH1J104D	CHIP R 100K D 1/16W	
L250		L40-1085-57	SMALL FIXED INDUCTOR (100NH)		R62		RK73HB1J104J	CHIP R 100K J 1/16W	
L400		L92-0149-05	CHIP FERRITE		R63		RK73HB1J220J	CHIP R 22 J 1/16W	
L401		L33-1462-05	SMALL FIXED INDUCTOR		R64		RK73HB1J473J	CHIP R 47K J 1/16W	
L402		L41-2285-14	SMALL FIXED INDUCTOR (220NH)		R67		RK73HB1J472J	CHIP R 4.7K J 1/16W	
L501		L92-0487-05	CHIP FERRITE		R68		RK73HB1J474J	CHIP R 470K J 1/16W	
L502		L40-8265-71	SMALL FIXED INDUCTOR (27UH)		R69		RK73HB1J560J	CHIP R 56 J 1/16W	
L503		L79-1955-05	FILTER (GPS)		R70,71		RK73HB1J000J	CHIP R 0.0 J 1/16W	
L504		L41-3965-55	SMALL FIXED INDUCTOR (0.56UH)		R72		RK73HB1J104J	CHIP R 100K J 1/16W	
L505		L41-1561-55	SMALL FIXED INDUCTOR (0.56UH)		R74		RK73HB1J153J	CHIP R 15K J 1/16W	
X1		L77-3014-05	TCXO (19.2MHZ)		R75		RK73HB1J100J	CHIP R 10 J 1/16W	
XF200		L71-0679-05	MCF (58.05MHZ)		R76,77		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R1		RK73HH1J474D	CHIP R 470K D 1/16W		R80		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R2		RK73HB1J472J	CHIP R 4.7K J 1/16W		R100		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R3		RK73HB1J100J	CHIP R 10 J 1/16W		R101		RK73HB1J103J	CHIP R 10K J 1/16W	
R5,6		RK73HB1J100J	CHIP R 10 J 1/16W		R102		RK73HB1J271J	CHIP R 270 J 1/16W	
R7		RK73HB1J472J	CHIP R 4.7K J 1/16W		R103		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R8		RK73HB1J100J	CHIP R 10 J 1/16W		R104		RK73HB1J470J	CHIP R 47 J 1/16W	
R9		RK73HB1J102J	CHIP R 1.0K J 1/16W		R105		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R10		RK73HB1J000J	CHIP R 0.0 J 1/16W		R106,107		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R11,12		RK73HB1J223J	CHIP R 22K J 1/16W		R111		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R15		RK73HB1J100J	CHIP R 10 J 1/16W		R118		RK73HB1J101J	CHIP R 100 J 1/16W	
R17		RK73HH1J184D	CHIP R 180K D 1/16W		R119		RK73HB1J103J	CHIP R 10K J 1/16W	
R18		RK73HH1J473D	CHIP R 47K D 1/16W		R120		RK73HB1J223J	CHIP R 22K J 1/16W	
R19		RK73HB1J102J	CHIP R 1.0K J 1/16W		R123		RK73HB1J331J	CHIP R 330 J 1/16W	
R21		RK73HB1J106J	CHIP R 10M J 1/16W		R124		RK73HB1J180J	CHIP R 18 J 1/16W	
R22,23		RK73HB1J100J	CHIP R 10 J 1/16W		R126		RK73HB1J273J	CHIP R 27K J 1/16W	
R24,25		RK73HB1J000J	CHIP R 0.0 J 1/16W		R127		RK73HB1J473J	CHIP R 47K J 1/16W	
R26		RK73HB1J331J	CHIP R 330 J 1/16W		R129		RK73HB1J470J	CHIP R 47 J 1/16W	
R27		RK73HB1J000J	CHIP R 0.0 J 1/16W		R130		RK73HB1J333J	CHIP R 33K J 1/16W	
					R131		RK73HB1J561J	CHIP R 560 J 1/16W	

NX-200(G)

PARTS LIST

TX-RX UNIT (X57-8950-12)

Ref No.	Address	Parts No.	Description	Desti- nation	Ref No.	Address	Parts No.	Description	Desti- nation
R133		RK73HB1J331J	CHIP R 330 J 1/16W		R245		RK73HB1J104J	CHIP R 100K J 1/16W	
R134		RK73HB1J561J	CHIP R 560 J 1/16W		R246		RK73HB1J101J	CHIP R 100 J 1/16W	
R135		RK73HB1J222J	CHIP R 2.2K J 1/16W		R248		RK73HB1J100J	CHIP R 10 J 1/16W	
R136		RK73EB2ER39K	CHIP R 0.39 K 1/4W		R251		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R137		RK73HB1J100J	CHIP R 10 J 1/16W		R253		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R138		RK73EB2ER39K	CHIP R 0.39 K 1/4W		R254		RK73HB1J103J	CHIP R 10K J 1/16W	
R139		RK73HB1J473J	CHIP R 47K J 1/16W		R255		RK73HB1J272J	CHIP R 2.7K J 1/16W	
R141		RK73EB2ER39K	CHIP R 0.39 K 1/4W		R256		RK73HB1J103J	CHIP R 10K J 1/16W	
R142		RK73HB1J223J	CHIP R 22K J 1/16W		R257		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R144,145		RK73HH1J154D	CHIP R 150K D 1/16W		R260		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R146		RK73GB2A000J	CHIP R 0.0 J 1/10W		R262		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R147-150		RK73HH1J184D	CHIP R 180K D 1/16W		R263		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R151		RK73HB1J103J	CHIP R 10K J 1/16W		R265		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R152		RK73GB2A823J	CHIP R 82K J 1/10W		R268		RK73HB1J680J	CHIP R 68 J 1/16W	
R153		RK73HB1J473J	CHIP R 47K J 1/16W		R269		RK73HB1J221J	CHIP R 220 J 1/16W	
R154		RK73HB1J000J	CHIP R 0.0 J 1/16W		R272		RK73HB1J154J	CHIP R 150K J 1/16W	
R155		RK73HB1J474J	CHIP R 470K J 1/16W		R273		RK73HB1J823J	CHIP R 82K J 1/16W	
R156		RK73HB1J182J	CHIP R 1.8K J 1/16W		R274		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R157,158		RK73HB1J104J	CHIP R 100K J 1/16W		R276,277		RK73HB1J104J	CHIP R 100K J 1/16W	
R161		RK73HB1J000J	CHIP R 0.0 J 1/16W		R279		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R162,163		RK73HB1J271J	CHIP R 270 J 1/16W		R280		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R164		RK73HB1J103J	CHIP R 10K J 1/16W		R281		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R165		RK73HB1J474J	CHIP R 470K J 1/16W		R282		RK73HB1J103J	CHIP R 10K J 1/16W	
R166		RK73HB1J102J	CHIP R 1.0K J 1/16W		R283		RK73HB1J104J	CHIP R 100K J 1/16W	
R167		RK73HB1J183J	CHIP R 18K J 1/16W		R285		RK73HB1J103J	CHIP R 10K J 1/16W	
R168		RK73HB1J124J	CHIP R 120K J 1/16W		R289		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R170		RK73HB1J224J	CHIP R 220K J 1/16W		R293		RK73HB1J473J	CHIP R 47K J 1/16W	
R171		RK73GB2A000J	CHIP R 0.0 J 1/10W		R295		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R176,177		RK73HB1J331J	CHIP R 330 J 1/16W		R296		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R202,203		RK73HB1J103J	CHIP R 10K J 1/16W		R299		RK73HB1J470J	CHIP R 47 J 1/16W	
R204		RK73HB1J561J	CHIP R 560 J 1/16W		R300-305		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R205		RK73HB1J224J	CHIP R 220K J 1/16W		R307		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R206		RK73HB1J104J	CHIP R 100K J 1/16W		R311		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R207		RK73HB1J224J	CHIP R 220K J 1/16W		R313,314		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R208-210		RK73HB1J104J	CHIP R 100K J 1/16W		R319-322		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R211		RK73HB1J334J	CHIP R 330K J 1/16W		R326		RK73HB1J104J	CHIP R 100K J 1/16W	
R212		RK73HB1J221J	CHIP R 220 J 1/16W		R400		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R214		RK73HB1J564J	CHIP R 560K J 1/16W		R402		RK73HB1J330J	CHIP R 33 J 1/16W	
R216		RK73HB1J221J	CHIP R 220 J 1/16W		R404-406		RK73HB1J474J	CHIP R 470K J 1/16W	
R218		RK73HB1J221J	CHIP R 220 J 1/16W		R407		RK73HB1J473J	CHIP R 47K J 1/16W	
R220		RK73HB1J470J	CHIP R 47 J 1/16W		R408		RK73GB2A100J	CHIP R 10 J 1/10W	
R221		RK73HB1J104J	CHIP R 100K J 1/16W		R409		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R222		RK73HB1J100J	CHIP R 10 J 1/16W		R410-412		RK73HB1J474J	CHIP R 470K J 1/16W	
R223		RK73HB1J274J	CHIP R 270K J 1/16W		R413		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R225		RK73HB1J681J	CHIP R 680 J 1/16W		R415		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R226		RK73HB1J103J	CHIP R 10K J 1/16W		R417		RK73HB1J154J	CHIP R 150K J 1/16W	
R227		RK73HB1J472J	CHIP R 4.7K J 1/16W		R418		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R228		RK73HB1J221J	CHIP R 220 J 1/16W		R419,420		RK73HB1J473J	CHIP R 47K J 1/16W	
R229		RK73HB1J103J	CHIP R 10K J 1/16W		R421		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R230		RK73HB1J102J	CHIP R 1.0K J 1/16W		R422		RK73HB1J474J	CHIP R 470K J 1/16W	
R231		RK73HB1J223J	CHIP R 22K J 1/16W		R423		RK73HB1J123J	CHIP R 12K J 1/16W	
R233		RK73HB1J183J	CHIP R 18K J 1/16W		R424		RK73HH1J334D	CHIP R 330K D 1/16W	
R234,235		RK73HB1J823J	CHIP R 82K J 1/16W		R425		RK73HH1J223D	CHIP R 22K D 1/16W	
R236		RK73HB1J222J	CHIP R 2.2K J 1/16W		R426		RK73HB1J100J	CHIP R 10 J 1/16W	
R237		RK73HB1J472J	CHIP R 4.7K J 1/16W		R427		RK73HB1J391J	CHIP R 390 J 1/16W	
R238		RK73HB1J222J	CHIP R 2.2K J 1/16W		R428		RK73HB1J821J	CHIP R 820 J 1/16W	
R239,240		RK73HB1J823J	CHIP R 82K J 1/16W		R429,430		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R241		RK73GB2A000J	CHIP R 0.0 J 1/10W		R436		RK73HB1J392J	CHIP R 3.9K J 1/16W	
R242		RK73HB1J473J	CHIP R 47K J 1/16W		R438		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R243		RK73HB1J183J	CHIP R 18K J 1/16W		R439		RK73HB1J273J	CHIP R 27K J 1/16W	

NX-200(G)

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref No.	Address	Parts No.	Description	Destination	Ref No.	Address	Parts No.	Description	Destination
R440		RK73HB1J473J	CHIP R 47K J 1/16W		Q7		EM6M2	FET	
R452		RK73HB1J102J	CHIP R 1.0K J 1/16W		Q8		2SK508NV (K52)	FET	
R453		RK73HB1J000J	CHIP R 0.0 J 1/16W		Q9		2SJ347F	FET	
R456		RK73HB1J474J	CHIP R 470K J 1/16W		Q10		2SK508NV (K52)	FET	
R460		RK73HB1J000J	CHIP R 0.0 J 1/16W		Q11		2SC5636	TRANSISTOR	
R490		RK73HB1J000J	CHIP R 0.0 J 1/16W		Q12		2SK879-F (Y)	FET	
R498,499		RK73HB1J000J	CHIP R 0.0 J 1/16W		Q13		SSM3K15TE (F)	FET	
R500,501		RK73HB1J103J	CHIP R 10K J 1/16W		Q100		2SC5636	TRANSISTOR	
R502		RK73HB1J271J	CHIP R 270 J 1/16W		Q102		2SK3077F	FET	
R503		RK73HB1J180J	CHIP R 18 J 1/16W		Q103		RD01MUS1-T113	FET	
R504		RK73HB1J391J	CHIP R 390 J 1/16W		Q104		2SC5383-T111	TRANSISTOR	
R505		RK73HB1J271J	CHIP R 270 J 1/16W		Q105		LTC044EEBFS8	DIGITAL TRANSISTOR	
R506		RK73HB1J000J	CHIP R 0.0 J 1/16W		Q106		RD07MVS1BT122	FET	
S1		S70-0483-05	TACT SWITCH		Q107		2SK1824-A	FET	
D1		1SS400	DIODE		Q109		SSM3K15TE (F)	FET	
D2,3		RN142S	DIODE		Q110		EMD5	TRANSISTOR	
D4		KDS123E-P	DIODE		Q201		2SC5108 (Y)F	TRANSISTOR	
D5,6		RN142S	DIODE		Q202		2SC4215-F (Y)	TRANSISTOR	
D7		1SS400	DIODE		Q203		3SK318	FET	
D8		1SV325F	VARIABLE CAPACITANCE DIODE		Q204		3SK294-FP	FET	
D9		1SV282-F	VARIABLE CAPACITANCE DIODE		Q401-403		EM6M2	FET	
D12		1SV282-F	VARIABLE CAPACITANCE DIODE		Q404		SSM5H01TU-F	FET	
D13		HVC376B	VARIABLE CAPACITANCE DIODE		Q405		2SA1955A-F	TRANSISTOR	
D14-17		1SV282-F	VARIABLE CAPACITANCE DIODE		Q406		UMG9N	TRANSISTOR	
D18		1SV278F	VARIABLE CAPACITANCE DIODE		TH100		ERTJ0EV104H	THERMISTOR(100K)	
D100		HSC277	DIODE		SUB (GPS) UNIT (X58-5240-10)				
D103		HZU2ALL	ZENER DIODE		C1		CC73HCH1H180J	CHIP C 18PF J	
D104,105		RN142S	DIODE		C2		CK73HB1A104K	CHIP C 0.10UF K	
D106		HZU5CLL	ZENER DIODE		C3		CK73HB1H102K	CHIP C 1000PF K	
D201		HSC277	DIODE		C4		CK73GB0J106K	CHIP C 10UF K	
D204,205		1SV305F	VARIABLE CAPACITANCE DIODE		C5		CK73HB1A104K	CHIP C 0.10UF K	
D207,208		1SV305F	VARIABLE CAPACITANCE DIODE		C8		CC73HCH1H180J	CHIP C 18PF J	
D209		RN142S	DIODE		C9		CK73HB1A104K	CHIP C 0.10UF K	
D211		RN142S	DIODE		C10,11		CK73HB1H102K	CHIP C 1000PF K	
D213		RN142S	DIODE		C16		CC73HCH1H101J	CHIP C 100PF J	
D400		1SR154-400	DIODE		C17		CK73HB1H102K	CHIP C 1000PF K	
D401		1SS400	DIODE		C18		CC73HCH1H101J	CHIP C 100PF J	
D403		1SS388F	DIODE		C19		CK73HB1H102K	CHIP C 1000PF J	
D501,502		RN262CS	DIODE		C20		CK73HB1A474K	CHIP C 0.47UF K	
IC1		LM73CIMKX-0	MOS-IC		C21		CK73HB1H102K	CHIP C 1000PF K	
IC2		LMC7101BIM5	MOS-IC		C22		CK73HB1A474K	CHIP C 0.47UF K	
IC3		SKY72300-362	MOS-IC		CN5		E04-0496-05	SOCKET FOR PIN	
IC4		BU7242FVM	MOS-IC		CN10		E40-6358-05	SOCKET FOR PIN ASSY(26P)	
IC5		TLV2381IDBV	MOS-IC		CN11		J19-5386-05	HOLDER(FOR LITHIUM CELL)	
IC100		TA75W01FUF	MOS-IC		L1		LR73G0AT220K	SMALL FIXED INDUCTOR (22UH)	
IC200,201		TLV2381IDBV	MOS-IC		L2		L92-0138-05	CHIP FERRITE	
IC202		TK10931VTL-G	ANALOGUE IC		L3		L92-0163-05	CHIP FERRITE	
IC203		MCP6021-E/OT	MOS-IC		R4		RK73HB1J102J	CHIP R 1.0K J 1/16W	
IC400		TK11250CUCB	MOS-IC		R6		RK73HB1J471J	CHIP R 470 J 1/16W	
IC401		BU7465HFV	MOS-IC		R7		RK73HB1J120J	CHIP R 12 J 1/16W	
IC402		XC9101D09AK-G	ANALOGUE IC		R9,10		RK73HB1J101J	CHIP R 100 J 1/16W	
IC403		TK71733S	BI-POLAR IC		R11		RK73GB2A000J	CHIP R 0.0 J 1/10W	
IC404		BU7442FVM	MOS-IC		R13		RK73HB1J471J	CHIP R 470 J 1/16W	
IC501		NJG1143UA2	MOS-IC		R17		RK73HB1J102J	CHIP R 1.0K J 1/16W	
Q1		KRX206E-P	TRANSISTOR		D2		1SS388F	DIODE	
Q2		DTA014YEBFS8	DIGITAL TRANSISTOR		IC1		W02-3768-05	CIRCUIT MODULE(GPS RECEIVER)	
Q3		2SC5383-T111	TRANSISTOR		IC2		TC7WH126FU-F	MOS-IC	
Q4		2SC5636	TRANSISTOR		IC4		BU31TD3WG	MOS-IC	
Q6		2SC5383-T111	TRANSISTOR						