



# EXPLODED VIEW (CD MECHANISM)

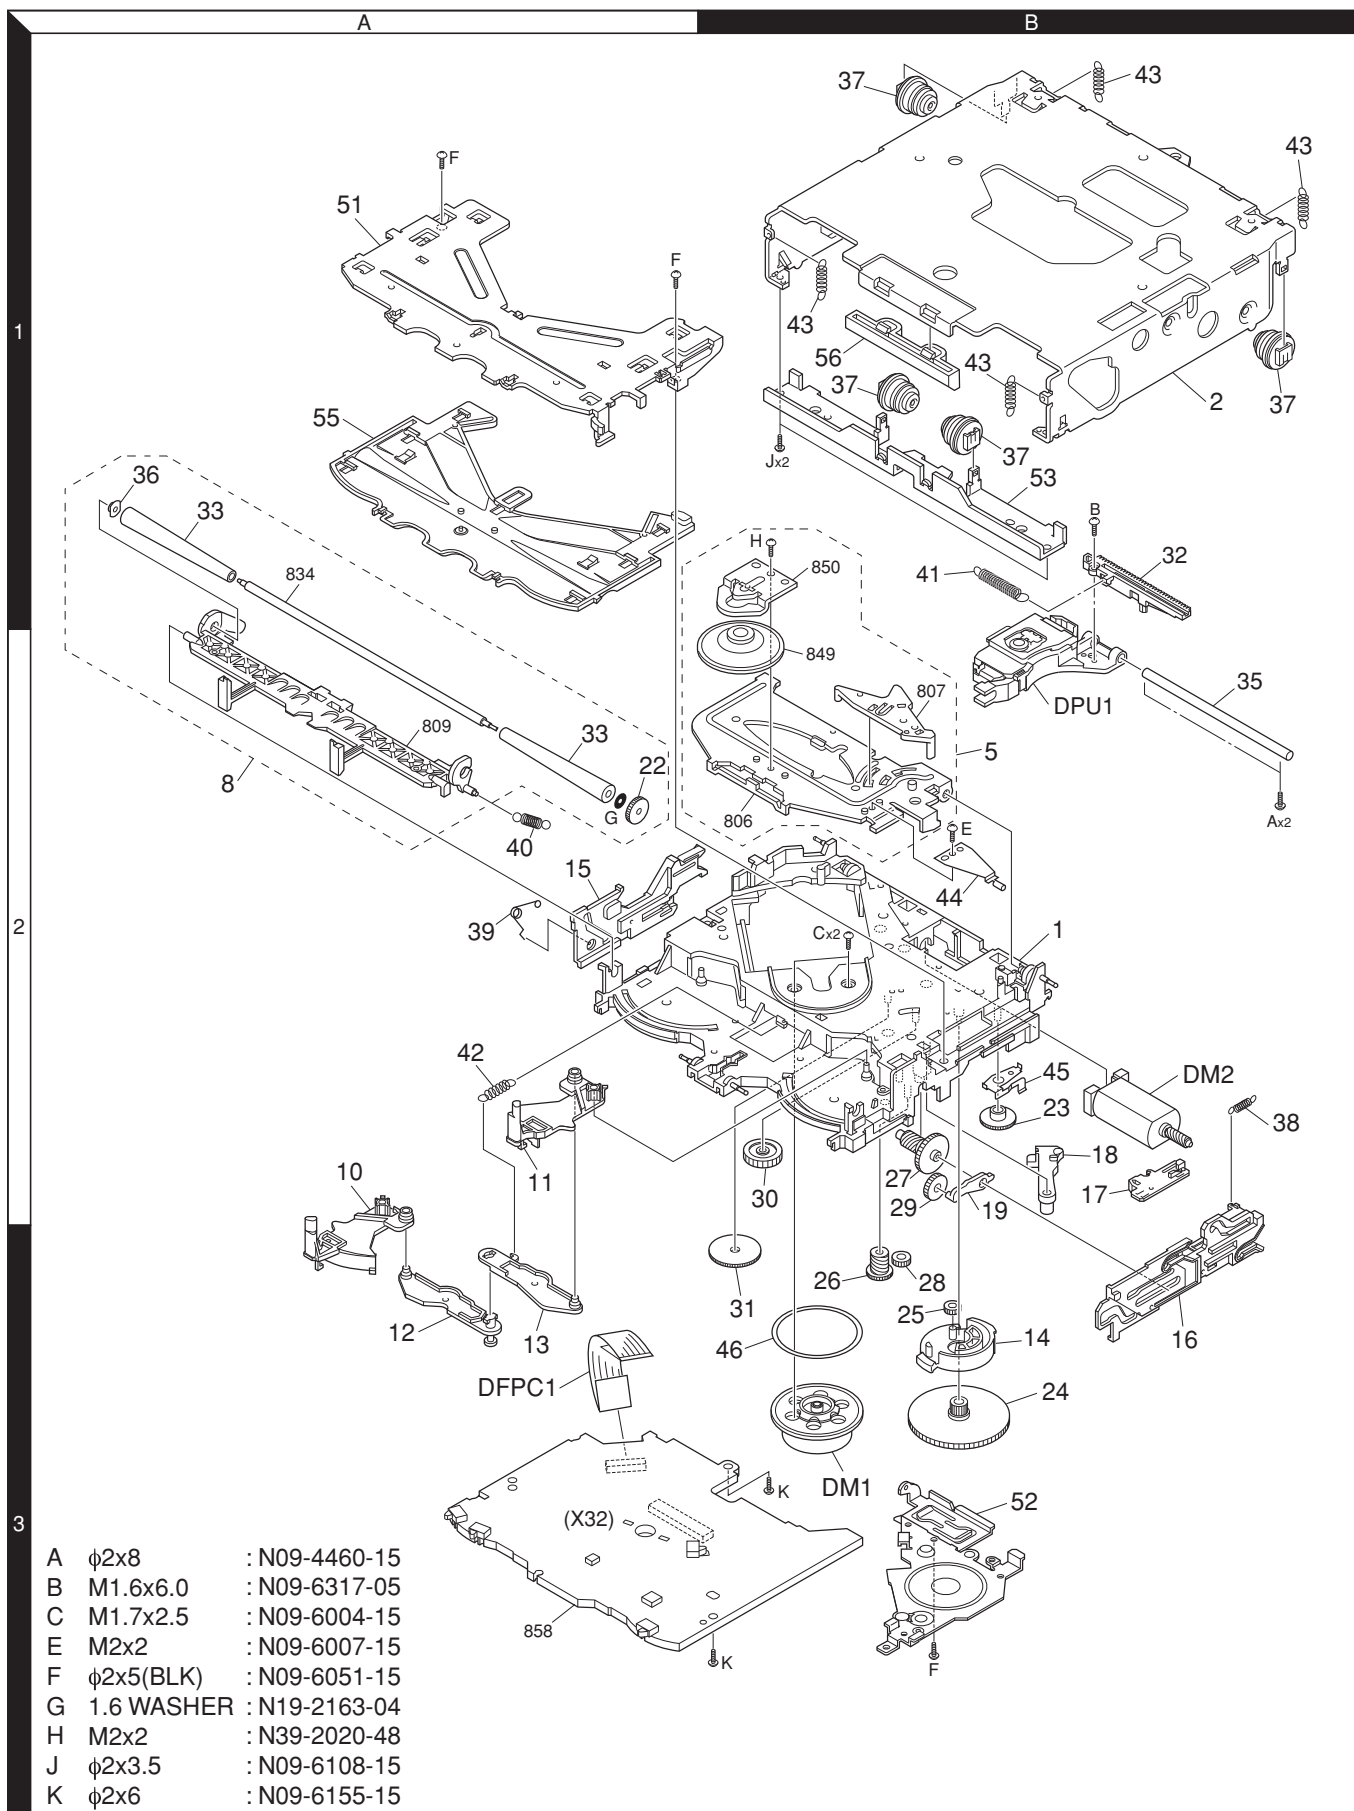

Parts with the exploded numbers larger than 700 are not supplied.

# EXPLODED VIEW (UNIT)

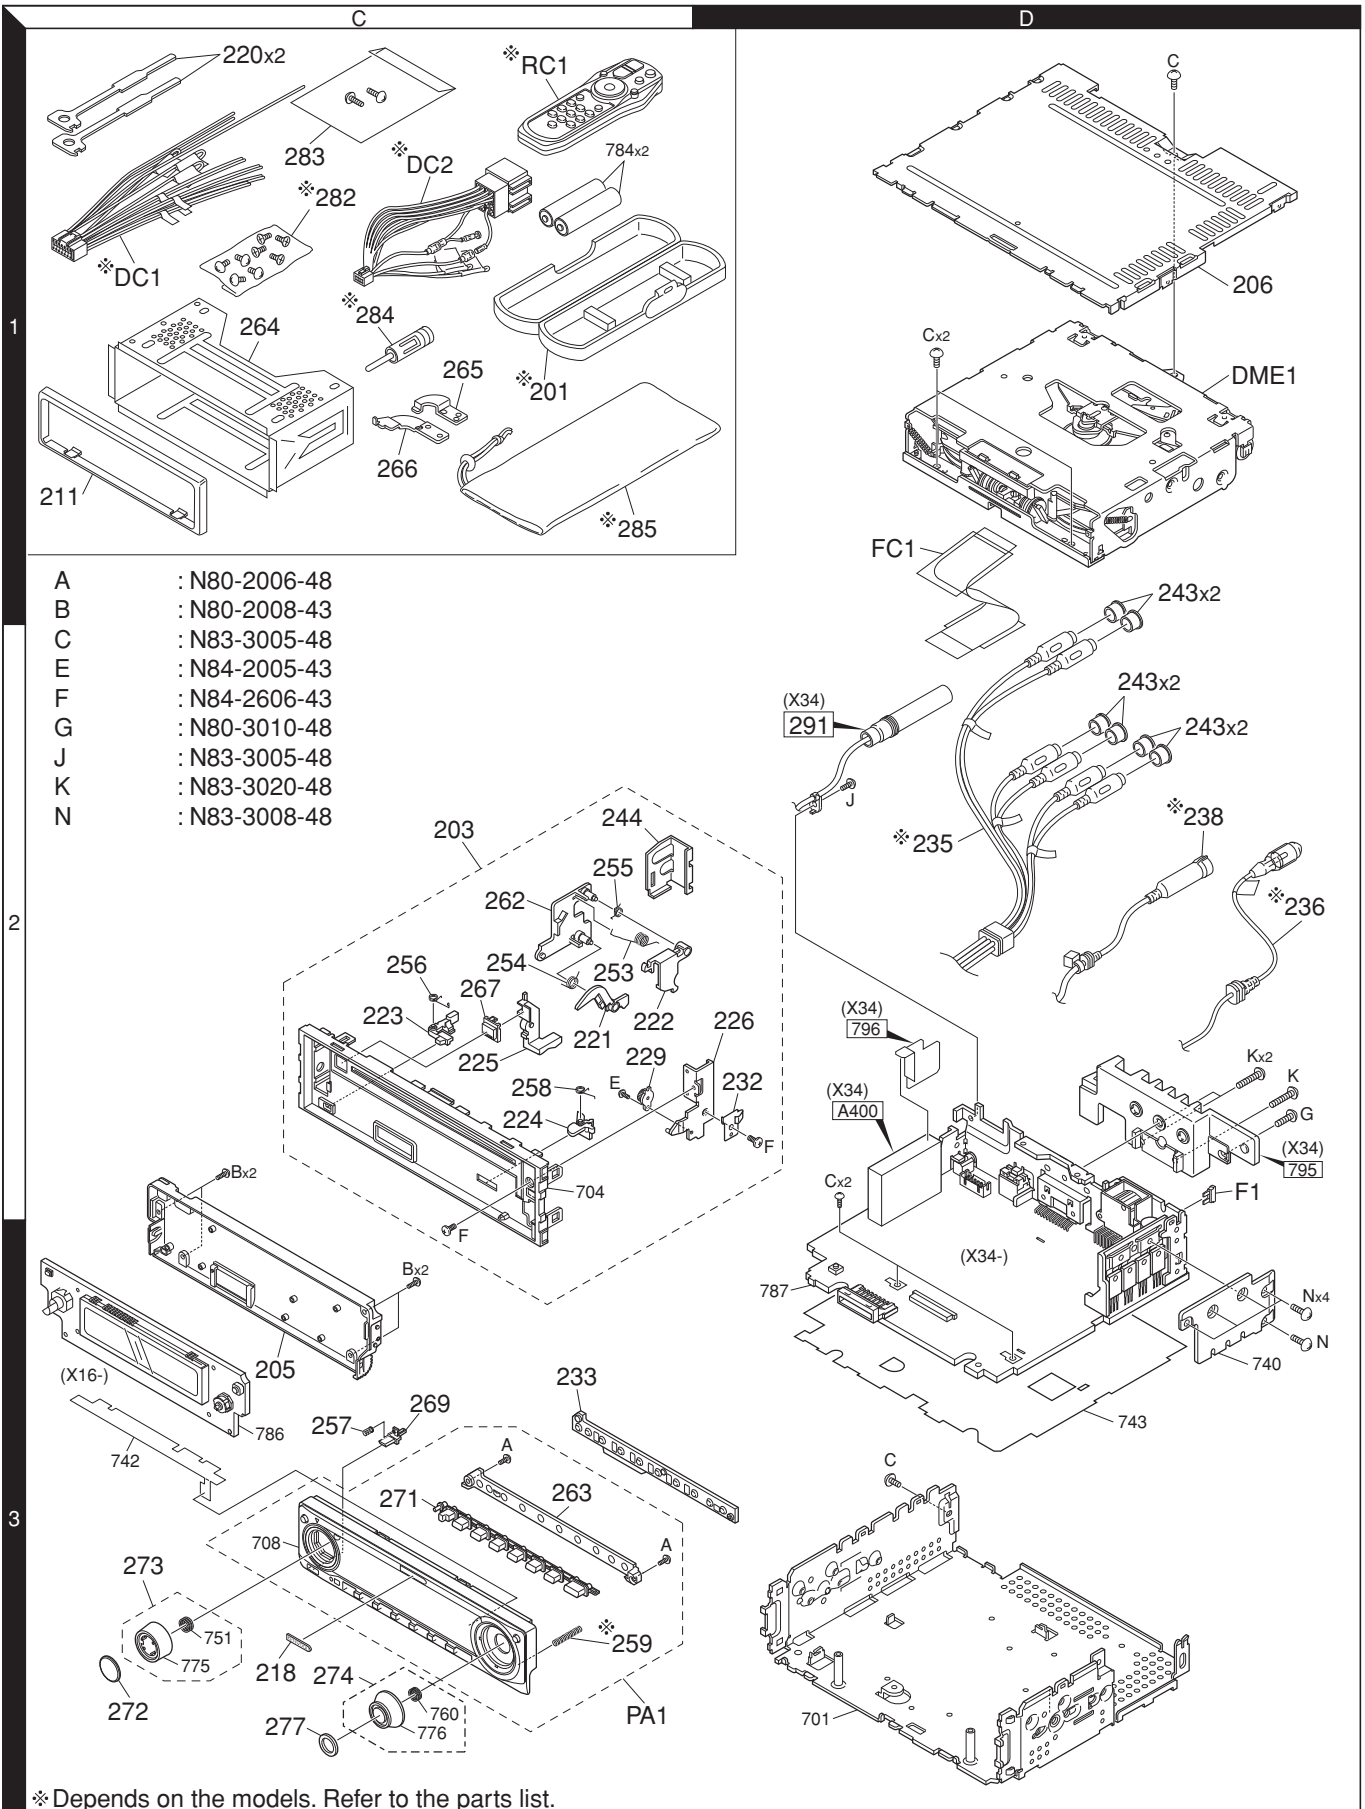

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                            | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                     | Desti-<br>nation |
|-------------------------------------|-------------|-------------|-------------|---------------------------------|------------------|
| <b>KDC-MP635/W7037/W7037Y/X7006</b> |             |             |             |                                 |                  |
| 201                                 | 1C          |             | A02-2736-03 | PLASTIC CABINET ASSY            | M1               |
| 203                                 | 2C          |             | A22-3059-12 | SUB PANEL ASSY                  |                  |
| 205                                 | 3C          | *           | A46-1851-01 | REAR COVER                      |                  |
| 206                                 | 1D          | *           | A52-0886-02 | TOP PLATE                       |                  |
| PA1                                 | 3C          | *           | A64-4014-01 | PANEL ASSY                      | K                |
| PA1                                 | 3C          | *           | A64-4015-01 | PANEL ASSY                      | E1E2             |
| PA1                                 | 3C          | *           | A64-4016-01 | PANEL ASSY                      | M1               |
| RC1                                 | 1C          | *           | A70-2085-05 | REMOTE CONTROLLER ASSY (RC-547) | KE2M1            |
| -                                   |             | *           | B46-0690-04 | ID CARD                         | K                |
| -                                   |             | *           | B46-0691-04 | ID CARD                         | E1E2M1           |
| -                                   |             | *           | B64-3625-00 | INST. MANUAL (ENGLISH)          | K                |
| -                                   |             | *           | B64-3626-00 | INST. MANUAL (FRE.SPA.)         | K                |
| -                                   |             | *           | B64-3627-00 | INST. MANUAL (ENG.T-CHI.)       | M1               |
| -                                   |             | *           | B64-3628-00 | INST. MANUAL (ARABIC)           | M1               |
| -                                   |             | *           | B64-3629-00 | INST. MANUAL (ENGLISH)          | E1E2             |
| -                                   |             | *           | B64-3630-00 | INST. MANUAL (FRE.GER.)         | E1               |
| -                                   |             | *           | B64-3631-00 | INST. MANUAL (DUT.ITA.)         | E1               |
| -                                   |             | *           | B64-3632-00 | INST. MANUAL (SPA.POR.)         | E1               |
| -                                   |             | *           | B64-3633-00 | INST. MANUAL (RUSSIAN)          | E2               |
| 211                                 | 1C          |             | B07-3125-01 | ESCUTCHEON                      | E1E2M1           |
| 211                                 | 1C          |             | B07-3126-01 | ESCUTCHEON                      | K                |
| 218                                 | 3C          |             | B43-1518-04 | BADGE                           |                  |
| 220                                 | 1C          |             | D10-4589-04 | LEVER                           |                  |
| 221                                 | 2C          |             | D10-4865-03 | LEVER (PUSH)                    |                  |
| 222                                 | 2C          |             | D10-4866-03 | LEVER (HOOK)                    |                  |
| 223                                 | 2C          |             | D10-4867-04 | LEVER (LOCK)                    |                  |
| 224                                 | 2C          |             | D10-4868-04 | LEVER (DETECT)                  |                  |
| 225                                 | 2C          |             | D10-4869-03 | LEVER (EJECT)                   |                  |
| 226                                 | 2D          |             | D10-4870-04 | ARM ASSY                        |                  |
| 229                                 | 2C          |             | D39-0255-05 | DAMPER                          |                  |
| 232                                 | 2D          |             | E29-2028-04 | LEAD PLATE                      |                  |
| 233                                 | 3C          |             | E29-2090-03 | CONDUCTIVE RUBBER               |                  |
| 235                                 | 2D          | *           | E30-6632-05 | CORD WITH PINPLUG (3-PREOUT)    | KM1              |
| 235                                 | 2D          | *           | E30-6633-05 | CORD WITH PINPLUG (2-PREOUT)    | E1E2             |
| 236                                 | 2D          | *           | E30-6639-05 | CORD WITH CONNECTOR (REMOTE)    | M1               |
| 238                                 | 2D          | *           | E30-6640-05 | CORD WITH DIN CONNECTOR (OPEL)  | E1E2             |
| △ DC1                               | 1C          |             | E30-6408-05 | DC CORD                         | M1               |
| △ DC1                               | 1C          |             | E30-6414-05 | DC CORD                         | K                |
| △ DC2                               | 1C          |             | E30-6412-05 | DC CORD                         | E1E2             |
| FC1                                 | 1D          |             | E39-0736-05 | FLAT CABLE (24-PIN)             |                  |
| 243                                 | 2D          |             | F29-0626-04 | INSULATING COVER                |                  |
| 244                                 | 2C          |             | F31-0716-04 | REINFORCING HARDWARE            |                  |
| △ F1                                | 2D          |             | F52-0023-05 | FUSE (MINI BLADE TYPE) (10A)    |                  |
| 253                                 | 2C          |             | G01-3246-04 | TORSION COIL SPRING             |                  |
| 254                                 | 2C          |             | G01-3247-04 | TORSION COIL SPRING             |                  |
| 255                                 | 2C          |             | G01-3248-04 | TORSION COIL SPRING             |                  |
| 256                                 | 2C          |             | G01-3249-04 | TORSION COIL SPRING             |                  |
| 257                                 | 3C          |             | G01-4611-04 | COMPRESSION SPRING (REL)        |                  |
| 258                                 | 2C          |             | G01-3270-04 | TORSION COIL SPRING             |                  |
| 259                                 | 3C          |             | G01-3291-04 | COMPRESSION SPRING              | M1               |
| -                                   |             | *           | H54-3852-03 | ITEM CARTON CASE                | K                |

| Ref. No.                         | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                | Desti-<br>nation |
|----------------------------------|-------------|-------------|-------------|----------------------------|------------------|
| -                                |             | *           | H54-3853-03 | ITEM CARTON CASE           | E1               |
| -                                |             | *           | H54-3854-03 | ITEM CARTON CASE           | E2               |
| -                                |             | *           | H54-3855-03 | ITEM CARTON CASE           | M1               |
| 262                              | 2C          |             | J19-7049-03 | HOLDER (ARM)               |                  |
| 263                              | 3C          |             | J19-7157-02 | HOLDER                     |                  |
| 264                              | 1C          |             | J22-0011-03 | MOUNTING HARDWARE ASSY     |                  |
| 265                              | 1C          |             | J22-0258-04 | MOUNTING HARDWARE (L)      |                  |
| 266                              | 1C          |             | J22-0259-04 | MOUNTING HARDWARE (R)      |                  |
| 267                              | 2C          |             | K24-4282-04 | PUSH KNOB (EJECT)          |                  |
| 269                              | 3C          | *           | K24-4651-03 | PUSH KNOB (RELEASE)        |                  |
| 271                              | 3C          |             | K25-1858-03 | PUSH KNOB (PRESET)         |                  |
| 272                              | 3C          |             | K28-0188-04 | KEY TOP (VOL)              |                  |
| 273                              | 3C          |             | K28-0182-04 | KNOB ASSY (VOL)            |                  |
| 274                              | 3C          | *           | K28-0184-04 | KNOB ASSY (FM/AM)          |                  |
| 277                              | 3C          | *           | K28-0189-03 | KEY TOP (FM/AM)            |                  |
| 282                              | 1C          |             | N99-1757-05 | SCREW SET                  | KM1              |
| 283                              | 1C          |             | N99-1780-05 | SCREW SET                  |                  |
| A                                | 3C          |             | N80-2006-48 | PAN HEAD TAPTITE SCREW     |                  |
| B                                | 2C          |             | N80-2008-43 | PAN HEAD TAPTITE SCREW     |                  |
| C                                | 1D          |             | N83-3005-48 | PAN HEAD TAPTITE SCREW     |                  |
| E                                | 2C          |             | N84-2005-43 | PAN HEAD TAPTITE SCREW     |                  |
| F                                | 2D          |             | N84-2606-43 | PAN HEAD TAPTITE SCREW     |                  |
| N                                | 3D          |             | N83-3008-48 | PAN HEAD TAPTITE SCREW     |                  |
| 284                              | 1C          |             | T90-0523-05 | ANTENNA ADAPTOR            | E1E2             |
| 285                              | 1C          |             | W01-1691-05 | CARRYING CASE              | KE1E2            |
| DME1                             | 1D          | *           | X92-5940-00 | MECHANISM ASSY (DXM-6B20W) |                  |
| <b>SWITCH UNIT (X16-391x-xx)</b> |             |             |             |                            |                  |
| D1                               |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |
| D1                               |             | *           | B30-1766-05 | LED                        | M1               |
| D2                               |             |             | B30-1565-05 | LED (1608,PG)              | E1E2             |
| D4-6                             |             | *           | B30-1766-05 | LED                        |                  |
| D8                               |             |             | B30-1566-05 | LED (1608,RED)             | M1               |
| D8,9                             |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |
| D9                               |             | *           | B30-1766-05 | LED                        | M1               |
| D10                              |             |             | B30-1565-05 | LED (1608,PG)              | E1E2             |
| D11                              |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |
| D11                              |             | *           | B30-1766-05 | LED                        | M1               |
| D12                              |             |             | B30-1565-05 | LED (1608,PG)              | E1E2             |
| D13,14                           |             | *           | B30-1766-05 | LED                        |                  |
| D16                              |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |
| D16                              |             | *           | B30-1766-05 | LED                        | M1               |
| D17                              |             |             | B30-1565-05 | LED (1608,PG)              | E1E2             |
| D18                              |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |
| D18                              |             | *           | B30-1766-05 | LED                        | M1               |
| D19                              |             |             | B30-1565-05 | LED (1608,PG)              | E1E2             |
| D20                              |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |
| D20                              |             | *           | B30-1766-05 | LED                        | M1               |
| D21                              |             |             | B30-1565-05 | LED (1608,PG)              | E1E2             |
| D24                              |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |
| D24                              |             | *           | B30-1766-05 | LED                        | M1               |
| D25                              |             |             | B30-1565-05 | LED (1608,PG)              | E1E2             |
| D26                              |             |             | B30-1566-05 | LED (1608,RED)             | KE1E2            |

**K** : KDC-MP635   **M1** : KDC-X7006   **E1** : KDC-W7037   **E2** : KDC-W7037Y  
(**E** : Europe   **K** : North America   **M** : Other Areas)

△ Indicates safety critical components.

## PARTS LIST

## SWITCH UNIT (X16-391x-xx)

| Ref. No. | Add | New | Parts No.     | Description                 | Destination | Ref. No. | Add | New | Parts No.    | Description           | Destination |
|----------|-----|-----|---------------|-----------------------------|-------------|----------|-----|-----|--------------|-----------------------|-------------|
| D26      |     | *   | B30-1766-05   | LED                         | M1          | CP27     |     |     | RK74HB1J101J | CHIP-COM 100 J 1/16W  |             |
| D27      |     |     | B30-1565-05   | LED (1608,PG)               | E1E2        | CP28     |     |     | RK74GA1J101J | CHIP-COM 100 J 1/16W  |             |
| D28      |     |     | B30-1566-05   | LED (1608,RED)              | KE1E2       | CP29     |     |     | RK74HB1J101J | CHIP-COM 100 J 1/16W  |             |
| D28      |     | *   | B30-1766-05   | LED                         | M1          | CP30     |     |     | RK74HB1J102J | CHIP-COM 1.0K J 1/16W |             |
| D29,30   |     |     | B30-1565-05   | LED (1608,PG)               | E1E2        | CP31     |     |     | RK74HB1J223J | CHIP-COM 22K J 1/16W  |             |
| D30      |     |     | B30-1565-05   | LED (1608,PG)               | KM1         | CP34     |     |     | RK74HB1J473J | CHIP-COM 47K J 1/16W  |             |
| C10      |     |     | CK73GB1A105K  | CHIP C 1.0UF K              |             | CP35     |     |     | RK74GA1J223J | CHIP-COM 22K J 1/16W  |             |
| C16-18   |     |     | CK73GB1H103K  | CHIP C 0.010UF K            |             | CP36,37  |     |     | RK74GA1J332J | CHIP-COM 3.3K J 1/16W |             |
| C20-23   |     |     | CK73GB1H103K  | CHIP C 0.010UF K            |             | R1       |     |     | RK73EB2E821J | CHIP R 820 J 1/4W     |             |
| C24,25   |     |     | CK73GB1H473K  | CHIP C 0.047UF K            |             | R2,3     |     |     | RK73EB2E561J | CHIP R 560 J 1/4W     |             |
| C26,27   |     |     | CK73GB1H103K  | CHIP C 0.010UF K            |             | R5-7     |     |     | RK73EB2E561J | CHIP R 560 J 1/4W     | M1          |
| C28,29   |     |     | CK73GB1A105K  | CHIP C 1.0UF K              |             | R5-7     |     |     | RK73EB2E681J | CHIP R 680 J 1/4W     | KE1E2       |
| C30      |     |     | CK73GB1H103K  | CHIP C 0.010UF K            |             | R8       |     |     | RK73FB2B271J | CHIP R 270 J 1/8W     |             |
| C31      |     |     | CC73GCH1H221J | CHIP C 220PF J              |             | R11      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| C32      |     |     | CK73FB1A225K  | CHIP C 2.2UF K              |             | R13      |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W   |             |
| C33      |     |     | CK73GB1H103K  | CHIP C 0.010UF K            |             | R17      |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W   |             |
| C34      |     |     | CK73GB1C224K  | CHIP C 0.22UF K             |             | R18      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| C35,36   |     |     | CK73GB1H103K  | CHIP C 0.010UF K            |             | R20      |     |     | RK73GB2A332J | CHIP R 3.3K J 1/10W   |             |
| C37      |     |     | C93-1218-05   | CERAMIC 0.01UF K            |             | R23,24   |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W   |             |
| C38      |     |     | CK73FB1A225K  | CHIP C 2.2UF K              |             | R26      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| C39      |     |     | CK73FB0J106K  | CHIP C 10UF K               |             | R27,28   |     |     | RK73GB2A103J | CHIP R 10K J 1/10W    |             |
| C40      |     |     | CK73GB1H104K  | CHIP C 0.10UF K             |             | R29      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
| C41,42   |     |     | CK73FB0J106K  | CHIP C 10UF K               |             | R30      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| C43      |     |     | CC73GCH1H101J | CHIP C 100PF J              |             | R33      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
| C44      |     |     | CK73GB1H104K  | CHIP C 0.10UF K             |             | R34      |     |     | RK73GB2A101J | CHIP R 100 J 1/10W    |             |
| C47      |     |     | CC73GCH1H150J | CHIP C 15PF J               | E1E2        | R36      |     |     | RK73GB2A101J | CHIP R 100 J 1/10W    |             |
| C48      |     |     | CC73GCH1H470J | CHIP C 47PF J               | E1E2        | R37      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| C49      |     |     | CC73GCH1H150J | CHIP C 15PF J               | E1E2        | R38      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
| C50      |     |     | CC73GCH1H470J | CHIP C 47PF J               | E1E2        | R39-41   |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| C56,57   |     |     | CK73GB1H473K  | CHIP C 0.047UF K            |             | R42      |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W   |             |
| C78      |     |     | CK73GB1A105K  | CHIP C 1.0UF K              |             | R43,44   |     |     | RK73PB2H3R3J | CHIP R 3.3 J 1/2W     |             |
| C79      |     |     | CK73GB1H104K  | CHIP C 0.10UF K             |             | R45      |     |     | RK73EB2E102J | CHIP R 1.0K J 1/4W    |             |
| J1       |     |     | E59-0851-05   | RECTANGULAR PLUG            |             | R47,48   |     |     | RK73EB2E101J | CHIP R 100 J 1/4W     |             |
| L5       |     |     | L40-3975-38   | SMALL FIXED INDUCTOR (39NH) | E1E2        | R49,50   |     |     | RK73EB2E102J | CHIP R 1.0K J 1/4W    |             |
| L9       |     |     | L40-4775-38   | SMALL FIXED INDUCTOR (47NH) | E1E2        | R52      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| X1       |     |     | L78-1208-05   | RESONATOR (6.6MHZ)          |             | R53      |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W   |             |
| CP2      |     |     | RK74HB1J223J  | CHIP-COM 22K J 1/16W        |             | R54      |     |     | RK73EB2E333J | CHIP R 33K J 1/4W     |             |
| CP3      |     |     | RK74GA1J223J  | CHIP-COM 22K J 1/16W        |             | R55      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| CP4      |     |     | RK74HB1J472J  | CHIP-COM 4.7K J 1/16W       |             | R56      |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W   |             |
| CP5      |     |     | RK74GA1J332J  | CHIP-COM 3.3K J 1/16W       |             | R58      |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W   |             |
| CP6      |     |     | RK74GA1J473J  | CHIP-COM 47K J 1/16W        |             | R59      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| CP7      |     |     | RK74HB1J473J  | CHIP-COM 47K J 1/16W        |             | R60      |     |     | RK73FB2B180J | CHIP R 18 J 1/8W      |             |
| CP8      |     |     | RK74GA1J331J  | CHIP-COM 330 J 1/16W        |             | R61      |     |     | RK73GB2A104J | CHIP R 100K J 1/10W   |             |
| CP9-14   |     |     | RK74HB1J331J  | CHIP-COM 330 J 1/16W        |             | R62      |     |     | RK73PB2H2R7J | CHIP R 2.7 J 1/2W     |             |
| CP16     |     |     | RK74HB1J331J  | CHIP-COM 330 J 1/16W        |             | R64      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| CP18     |     |     | RK74HB1J331J  | CHIP-COM 330 J 1/16W        |             | R66      |     |     | RK73EB2E561J | CHIP R 560 J 1/4W     | M1          |
| CP20     |     |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W        |             | R66      |     |     | RK73EB2E681J | CHIP R 680 J 1/4W     | KE1E2       |
| CP21     |     |     | RK74HB1J331J  | CHIP-COM 330 J 1/16W        |             | R67      |     |     | RK73EB2E821J | CHIP R 820 J 1/4W     | M1          |
| CP23     |     |     | RK74HB1J101J  | CHIP-COM 100 J 1/16W        |             | R67      |     |     | RK73EB2E911J | CHIP R 910 J 1/4W     | KE1E2       |
| CP24     |     |     | RK74HB1J102J  | CHIP-COM 1.0K J 1/16W       |             | R68      |     |     | RK73GB2A333J | CHIP R 33K J 1/10W    |             |
| CP25     |     |     | RK74HB1J332J  | CHIP-COM 3.3K J 1/16W       |             | R69      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    | E1E2M1      |
| CP26     |     |     | RK74HB1J223J  | CHIP-COM 22K J 1/16W        |             | R70      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    | K           |
|          |     |     |               |                             |             | R71      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
|          |     |     |               |                             |             | W1,2     |     |     | R92-2053-05  | CHIP R 0 OHM J 1/8W   |             |
|          |     |     |               |                             |             | W4       |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W  |             |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

# PARTS LIST

## SWITCH UNIT (X16-391x-xx)

| Ref. No.                                        | Ad | New | Parts No.     | Description                | Desti-<br>nation |
|-------------------------------------------------|----|-----|---------------|----------------------------|------------------|
| S2                                              |    |     | S70-0901-05   | TACT SWITCH                |                  |
| S17                                             |    |     | S70-0051-15   | TACT SWITCH                |                  |
| S19                                             |    | *   | S70-0942-05   | TACT SWITCH                |                  |
| S1                                              |    |     | T99-0474-05   | ROTARY ENCODER             |                  |
| D32                                             |    |     | DA204U        | DIODE                      |                  |
| ED1                                             |    | *   | JN12829A      | FLUORESCENT INDICATOR TUBE | K                |
| ED1                                             |    | *   | MN12829A      | FLUORESCENT INDICATOR TUBE | E1E2M1           |
| IC1                                             |    | *   | MX231613TI3X9 | ROM IC                     | E1E2M1           |
| IC1                                             |    | *   | MX233213TI4X0 | ROM IC                     | K                |
| IC4                                             |    | *   | 703134AGJ015A | MICROCONTROLLER IC         |                  |
| IC5                                             |    |     | BD5237FVE     | ANALOGUE IC                |                  |
| IC6                                             |    |     | PNA4S22M02KW  | ANALOGUE IC                |                  |
| IC7                                             |    | *   | 74LV08PW      | MOS-IC                     |                  |
| IC8                                             |    |     | TC7WT126FU-F  | MOS-IC                     |                  |
| IC9                                             |    | *   | 74AHC1G32GW   | MOS-IC                     |                  |
| IC10                                            |    |     | SI-3025KMN    | ANALOGUE IC                |                  |
| IC11                                            |    |     | SI-3033LUSNF  | ANALOGUE IC                |                  |
| Q1,2                                            |    |     | 2SC4617       | TRANSISTOR                 |                  |
| Q3                                              |    |     | 2SD2351(W)    | TRANSISTOR                 | KM1              |
| Q3-5                                            |    |     | 2SD2351(W)    | TRANSISTOR                 | E1E2             |
| Q5                                              |    |     | 2SD2351(W)    | TRANSISTOR                 | KM1              |
| Q6                                              |    |     | 2SB1689       | TRANSISTOR                 |                  |
| Q7                                              |    |     | 2SA1774       | TRANSISTOR                 |                  |
| Q8                                              |    |     | DTC143ZE      | DIGITAL TRANSISTOR         |                  |
| Q9                                              |    |     | 2SC4617       | TRANSISTOR                 |                  |
| Q10                                             |    |     | 2SA1774       | TRANSISTOR                 |                  |
| Q11                                             |    |     | 2SC2713-F     | TRANSISTOR                 |                  |
| Q12                                             |    |     | 2SC4667-F     | TRANSISTOR                 |                  |
| Q13                                             |    |     | 2SB1260       | TRANSISTOR                 |                  |
| <b>CD PLAYER UNIT (X32-5920-00) IN CD MECHA</b> |    |     |               |                            |                  |
| C1,2                                            |    |     | CK73GB1A105K  | CHIP C 1.0UF               | K                |
| C3,4                                            |    |     | CC73GCH1H681J | CHIP C 680PF               | J                |
| C5,6                                            |    |     | CC73GCH1H680J | CHIP C 68PF                | J                |
| C7,8                                            |    |     | CK73GB1H222K  | CHIP C 2200PF              | K                |
| C9                                              |    |     | CK73GB1H104K  | CHIP C 0.10UF              | K                |
| C10                                             |    |     | CK73FB0J106K  | CHIP C 10UF                | K                |
| C11                                             |    |     | CK73GB1H103K  | CHIP C 0.010UF             | K                |
| C12                                             |    |     | CK73GB1A105K  | CHIP C 1.0UF               | K                |
| C20                                             |    |     | CC73GCH1H391J | CHIP C 390PF               | J                |
| C21                                             |    |     | CK73GB1H472K  | CHIP C 4700PF              | K                |
| C22                                             |    |     | CK73GB1H152K  | CHIP C 1500PF              | K                |
| C23                                             |    |     | CC73GCH1H391J | CHIP C 390PF               | J                |
| C24                                             |    |     | CK73EB1A475K  | CHIP C 4.7UF               | K                |
| C25                                             |    |     | CK73FB0J106K  | CHIP C 10UF                | K                |
| C30                                             |    |     | CK73GB1H104K  | CHIP C 0.10UF              | K                |
| C31                                             |    |     | CK73GB1A105K  | CHIP C 1.0UF               | K                |
| C32                                             |    |     | CK73GB1H104K  | CHIP C 0.10UF              | K                |
| C34                                             |    |     | CK73FB0J475K  | CHIP C 4.7UF               | K                |
| C35                                             |    |     | CK73GB1H104K  | CHIP C 0.10UF              | K                |
| C38-40                                          |    |     | CK73GB1H104K  | CHIP C 0.10UF              | K                |
| C41                                             |    |     | CK73GB0J225K  | CHIP C 2.2UF               | K                |
| C42                                             |    |     | CK73GB1A105K  | CHIP C 1.0UF               | K                |
| C43                                             |    |     | C92-1792-05   | ELECTRO 22UF               | 6.3WV            |
| C50                                             |    |     | CK73GB1H104K  | CHIP C 0.10UF              | K                |

| Ref. No. | Ad | New | Parts No.     | Description          | Desti-<br>nation |
|----------|----|-----|---------------|----------------------|------------------|
| C51      |    |     | CK73GB1H102K  | CHIP C 1000PF        | K                |
| C52      |    |     | CK73GB0J225K  | CHIP C 2.2UF         | K                |
| C53,54   |    |     | CK73GB0J475K  | CHIP C 4.7UF         | K                |
| C55      |    |     | CK73FB0J106K  | CHIP C 10UF          | K                |
| C56,57   |    |     | CK73GB1H104K  | CHIP C 0.10UF        | K                |
| C58      |    |     | CK73FB0J475K  | CHIP C 4.7UF         | K                |
| C60      |    |     | CK73GB0J225K  | CHIP C 2.2UF         | K                |
| C61      |    |     | CK73GB1H104K  | CHIP C 0.10UF        | K                |
| C62      |    |     | CK73FB0J475K  | CHIP C 4.7UF         | K                |
| C63      |    |     | CK73GB0J225K  | CHIP C 2.2UF         | K                |
| C64      |    |     | CK73GB1H152K  | CHIP C 1500PF        | K                |
| C65,66   |    |     | CK73GB1H102K  | CHIP C 1000PF        | K                |
| C67      |    |     | CK73GB1H152K  | CHIP C 1500PF        | K                |
| C68      |    |     | CK73GB1H103K  | CHIP C 0.010UF       | K                |
| C69      |    |     | CK73GB1H332K  | CHIP C 3300PF        | K                |
| C70      |    |     | CK73GB1H682K  | CHIP C 6800PF        | K                |
| C71      |    |     | CK73GB1H104K  | CHIP C 0.10UF        | K                |
| C72      |    |     | CK73GB1H103K  | CHIP C 0.010UF       | K                |
| C73      |    |     | CC73GCH1H120J | CHIP C 12PF          | J                |
| C74      |    |     | CC73GCH1H060D | CHIP C 6.0PF         | D                |
| C75      |    |     | CK73GB1H104K  | CHIP C 0.10UF        | K                |
| C76      |    |     | CC73GCH1H030C | CHIP C 3.0PF         | C                |
| C77      |    |     | CC73GCH1H020C | CHIP C 2.0PF         | C                |
| C78      |    |     | CK73GB0J225K  | CHIP C 2.2UF         | K                |
| C79,80   |    |     | CK73GB1H104K  | CHIP C 0.10UF        | K                |
| C81,82   |    |     | CC73GCH1H470J | CHIP C 47PF          | J                |
| C83      |    |     | CK73GB1H103K  | CHIP C 0.010UF       | K                |
| C85      |    |     | CK73FB0J106K  | CHIP C 10UF          | K                |
| C86      |    |     | CK73GB0J475K  | CHIP C 4.7UF         | K                |
| C100     |    |     | CK73GB1C224K  | CHIP C 0.22UF        | K                |
| C101     |    |     | CK73GB1H103K  | CHIP C 0.010UF       | K                |
| CN1      |    |     | E41-2083-15   | FLAT CABLE CONNECTOR |                  |
| CN2      |    |     | E41-2612-05   | FLAT CABLE CONNECTOR |                  |
| X1       |    |     | L78-0862-05   | RESONATOR (16.00MHZ) |                  |
| X2       |    |     | L78-1216-05   | RESONATOR (16.93MHZ) |                  |
| CP1      |    |     | RK74GA1J101J  | CHIP-COM 100         | J 1/16W          |
| CP2      |    |     | RK74GA1J472J  | CHIP-COM 4.7K        | J 1/16W          |
| CP4,5    |    |     | RK74GA1J101J  | CHIP-COM 100         | J 1/16W          |
| CP6,7    |    |     | RK74HB1J103J  | CHIP-COM 10K         | J 1/16W          |
| CP8-11   |    |     | RK74HB1J101J  | CHIP-COM 100         | J 1/16W          |
| CP12     |    |     | RK74GA1J101J  | CHIP-COM 100         | J 1/16W          |
| CP13     |    |     | RK74GA1J103J  | CHIP-COM 10K         | J 1/16W          |
| CP27     |    |     | RK74GB1J472J  | CHIP-COM 4.7K        | J 1/16W          |
| CP28     |    |     | RK74GB1J103J  | CHIP-COM 10K         | J 1/16W          |
| R1,2     |    |     | RK73GH2A103D  | CHIP R 10K           | D 1/10W          |
| R3,4     |    |     | RK73GB2A272J  | CHIP R 2.7K          | J 1/10W          |
| R5,6     |    |     | RK73GB2A752J  | CHIP R 7.5K          | J 1/10W          |
| R7,8     |    |     | RK73GB2A333J  | CHIP R 33K           | J 1/10W          |
| R9,10    |    |     | RK73GH2A103D  | CHIP R 10K           | D 1/10W          |
| R11,12   |    |     | RK73GB2A331J  | CHIP R 330           | J 1/10W          |
| R14-16   |    |     | RK73GB2A2R2J  | CHIP R 2.2           | J 1/10W          |
| R20      |    |     | RK73GB2A123J  | CHIP R 12K           | J 1/10W          |
| R21      |    |     | RK73GB2A133J  | CHIP R 13K           | J 1/10W          |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

## PARTS LIST

## CD PLAYER UNIT (X32-5920-00) IN CD MECHA

| Ref. No. | Add | New | Parts No.      | Description          | Destination |
|----------|-----|-----|----------------|----------------------|-------------|
| R22,23   |     |     | RK73GB2A123J   | CHIP R 12K J 1/10W   |             |
| R24      |     |     | RK73GB2A432J   | CHIP R 4.3K J 1/10W  |             |
| R25      |     |     | RK73GB2A472J   | CHIP R 4.7K J 1/10W  |             |
| R26      |     |     | RK73GB2A183J   | CHIP R 18K J 1/10W   |             |
| R27      |     |     | RK73GB2A163J   | CHIP R 16K J 1/10W   |             |
| R28      |     |     | RK73GB2A133J   | CHIP R 13K J 1/10W   |             |
| R29      |     |     | RK73GB2A102J   | CHIP R 1.0K J 1/10W  |             |
| R30      |     |     | RK73GB2A101J   | CHIP R 100 J 1/10W   |             |
| R31      |     |     | RK73GB2A133J   | CHIP R 13K J 1/10W   |             |
| R40-44   |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W   |             |
| R48      |     |     | RK73GB2A472J   | CHIP R 4.7K J 1/10W  |             |
| R50-52   |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W   |             |
| R55      |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W   |             |
| R56      |     |     | RK73GB2A101J   | CHIP R 100 J 1/10W   |             |
| R57      |     |     | RK73GB2A472J   | CHIP R 4.7K J 1/10W  |             |
| R70      |     |     | RK73GB2A102J   | CHIP R 1.0K J 1/10W  |             |
| R71      |     |     | RK73GB2A101J   | CHIP R 100 J 1/10W   |             |
| R72      |     |     | RK73GB2A333J   | CHIP R 33K J 1/10W   |             |
| R74      |     |     | RK73GB2A333J   | CHIP R 33K J 1/10W   |             |
| R75      |     |     | RK73GB2A750J   | CHIP R 75 J 1/10W    |             |
| R78      |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W   |             |
| R79      |     |     | RK73GB2A333J   | CHIP R 33K J 1/10W   |             |
| R80,81   |     |     | RK73GB2A682J   | CHIP R 6.8K J 1/10W  |             |
| R88      |     |     | RK73GB2A472J   | CHIP R 4.7K J 1/10W  |             |
| R89      |     |     | RK73GB2A104J   | CHIP R 100K J 1/10W  |             |
| R90      |     |     | RK73GB2A4R7J   | CHIP R 4.7 J 1/10W   |             |
| R91      |     |     | RK73GB2A910J   | CHIP R 91 J 1/10W    |             |
| R92      |     |     | RK73GB2A225J   | CHIP R 2.2M J 1/10W  |             |
| R93      |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W   |             |
| R100     |     |     | RK73GB2A470J   | CHIP R 47 J 1/10W    |             |
| R101     |     |     | RK73GB2A102J   | CHIP R 1.0K J 1/10W  |             |
| R102     |     |     | RK73GB2A272J   | CHIP R 2.7K J 1/10W  |             |
| R103,104 |     |     | RK73GB2A223J   | CHIP R 22K J 1/10W   |             |
| R112,113 |     |     | RK73GB2A100J   | CHIP R 10 J 1/10W    |             |
| R150     |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W   |             |
| R151     |     |     | RK73GB2A2R2J   | CHIP R 2.2 J 1/10W   |             |
| R152     |     |     | RK73FB2B000J   | CHIP R 0.0 J 1/8W    |             |
| R153     |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W   |             |
| W1       |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W20,21   |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| S1,2     |     |     | S68-0863-05    | PUSH SWITCH          |             |
| S3       |     |     | S68-0862-05    | PUSH SWITCH          |             |
| D1       |     |     | DAP202U        | DIODE                |             |
| IC1      |     |     | TAR5S33-F      | ANALOGUE IC          |             |
| IC2      |     |     | NJM4580V-ZB    | ANALOGUE IC          |             |
| IC3      |     |     | BA5824FP       | ANALOGUE IC          |             |
| IC4      |     |     | 703030BYGCJ29A | MICROCONTROLLER IC   |             |
| IC5      |     |     | XC6219B332MR   | ANALOGUE IC          |             |
| IC6      |     |     | BA33BCOWFP     | ANALOGUE IC          |             |
| IC7      |     |     | UPD63763CGJ    | MOS-IC               |             |
| IC11     |     |     | TC7SET32FU-F   | MOS-IC               |             |
| Q1       |     |     | 2SA1576A       | TRANSISTOR           |             |
| Q4       |     |     | 2SB0970        | TRANSISTOR           |             |
| Q5       |     |     | DTA143XUA      | DIGITAL TRANSISTOR   |             |

| Ref. No.                           | Add | New | Parts No.     | Description         | Destination |
|------------------------------------|-----|-----|---------------|---------------------|-------------|
| Q6                                 |     |     | DTC143XUA     | DIGITAL TRANSISTOR  |             |
| Q7                                 |     |     | DTA143XUA     | DIGITAL TRANSISTOR  |             |
| Q8                                 |     |     | DTC143XUA     | DIGITAL TRANSISTOR  |             |
| <b>ELECTRIC UNIT (X34-472x-xx)</b> |     |     |               |                     |             |
| D650                               |     |     | B30-1710-05   | LED (RED)           |             |
| C1                                 |     |     | C90-6783-05   | ELECTRO 3900 16WV   |             |
| C10                                |     |     | CE32BE1C221M  | CHIP EL 220UF 16WV  |             |
| C11                                |     |     | CK73FB1C105K  | CHIP C 1.0UF K      |             |
| C12                                |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C20                                |     |     | CE32BE1C221M  | CHIP EL 220UF 16WV  |             |
| C21                                |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C22                                |     |     | CE32CL1C100M  | CHIP EL 10UF 16WV   |             |
| C23                                |     |     | CE32CL0J101M  | CHIP EL 100UF 6.3WV |             |
| C30                                |     |     | CK73GB1A474K  | CHIP C 0.47UF K     |             |
| C31                                |     |     | CE32BM1C101M  | CHIP EL 100UF 16WV  |             |
| C40                                |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C41                                |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C42                                |     |     | CE32CL1C470M  | CHIP EL 47UF 16WV   |             |
| C50,51                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C60                                |     |     | CK73GB1C224K  | CHIP C 0.22UF K     |             |
| C61,62                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C64                                |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C65                                |     |     | C93-1381-05   | CHIP C 1UF K        |             |
| C66,67                             |     |     | C93-1382-05   | CHIP C 1UF K        |             |
| C68                                |     |     | C93-1381-05   | CHIP C 1UF K        |             |
| C69                                |     |     | C93-1382-05   | CHIP C 1UF K        |             |
| C70                                |     |     | CK73FB1H224K  | CHIP C 0.22UF K     |             |
| C71,72                             | *   |     | C90-6834-05   | ELECTRO 100UF 25WV  |             |
| C80                                |     |     | CK73GB1H102K  | CHIP C 1000PF K     |             |
| C81,82                             | *   |     | C90-6833-05   | ELECTRO 220UF 10WV  |             |
| C83                                |     |     | CK73GB1H682K  | CHIP C 6800PF K     |             |
| C84                                |     |     | CK73GB1H332K  | CHIP C 3300PF K     |             |
| C85                                |     |     | CC73GCH1H680J | CHIP C 68PF J       |             |
| C86                                | *   |     | C90-6834-05   | ELECTRO 100UF 25WV  |             |
| C87-89                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C92                                |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C105                               |     |     | CE32BJ1C100M  | CHIP EL 10UF 16WV   |             |
| C106,107                           |     |     | CK73GB1H102K  | CHIP C 1000PF K     |             |
| C109                               |     |     | CK73FB0J106K  | CHIP C 10UF K       |             |
| C110                               |     |     | CK73GB1A105K  | CHIP C 1.0UF K      | KM1         |
| C111                               |     |     | CK73GB1H103K  | CHIP C 0.010UF K    | KM1         |
| C112                               |     |     | CK73GB1A105K  | CHIP C 1.0UF K      | KM1         |
| C122                               |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C140                               |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C170                               |     |     | CK73GB1H103K  | CHIP C 0.010UF K    |             |
| C180                               |     |     | CK73FB1C105K  | CHIP C 1.0UF K      |             |
| C181                               |     |     | CK73GB1H223K  | CHIP C 0.022UF K    |             |
| C182-189                           |     |     | CC73GCH1H471J | CHIP C 470PF J      | E1E2        |
| C301,302                           |     |     | CK73GB1H104K  | CHIP C 0.10UF K     |             |
| C310-312                           |     |     | CK73GB1H104K  | CHIP C 0.10UF K     | K           |
| C313                               |     |     | CK73GB1A105K  | CHIP C 1.0UF K      | K           |
| C340,341                           |     |     | CC73GCH1H270J | CHIP C 27PF J       | E1E2        |
| C342                               |     |     | CE32BJ1C100M  | CHIP EL 10UF 16WV   | E1E2        |
| C343                               |     |     | CK73GB1H103K  | CHIP C 0.010UF K    | E1E2        |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-472x-xx)

| Ref. No. | Ad | New | Parts No.     | Description          | Destination | Ref. No.  | Ad | New | Parts No.     | Description                  | Destination |
|----------|----|-----|---------------|----------------------|-------------|-----------|----|-----|---------------|------------------------------|-------------|
| C344     |    |     | CK73FB1A225K  | CHIP C 2.2UF K       | E1E2        | C513,514  |    |     | CK73GB1H103K  | CHIP C 0.010UF K             |             |
| C345     |    |     | CC73GCH1H331J | CHIP C 330PF J       | E1E2        | C515      |    | *   | C92-1984-05   | CHIP C 10UF 63WV             | E1E2        |
| C346     |    |     | CK73GB1H104K  | CHIP C 0.10UF K      | E1E2        | C517,518  |    |     | CC73GCH1H471J | CHIP C 470PF J               |             |
| C347     |    |     | CC73GCH1H561J | CHIP C 560PF J       | E1E2        | C650-652  |    |     | CK73GB1H103K  | CHIP C 0.010UF K             |             |
| C350     |    |     | CE32BJ1C220M  | CHIP EL 22UF 16WV    | M1          | C762      |    |     | CK73GB1H103K  | CHIP C 0.010UF K             | E1E2        |
| C351     |    | *   | C90-6835-05   | ELECTRO 100UF 25WV   | M1          | C764-768  |    |     | CK73GB1H103K  | CHIP C 0.010UF K             | E1E2        |
| C352,353 |    |     | CK73EB1E225K  | CHIP C 2.2UF K       | M1          | C765-768  |    |     | CK73GB1H103K  | CHIP C 0.010UF K             | K           |
| C354     |    |     | CE32BJ1C220M  | CHIP EL 22UF 16WV    | M1          | C773,774  |    |     | CK73GB1H103K  | CHIP C 0.010UF K             | KE1E2       |
| C355,356 |    |     | CK73EB1E225K  | CHIP C 2.2UF K       | M1          | C903      |    |     | CC73GCH1H070D | CHIP C 7.0PF D               |             |
| C357     |    |     | CK73GB1H223K  | CHIP C 0.022UF K     | M1          | C905,906  |    |     | CC73GCH1H070D | CHIP C 7.0PF D               |             |
| C358     |    |     | CK73GB1H103K  | CHIP C 0.010UF K     | M1          | C908,909  |    |     | CK73EB1E105K  | CHIP C 1.0UF K               |             |
| C359,360 |    |     | CK73EB1E225K  | CHIP C 2.2UF K       | M1          | C911      |    |     | CC73GCH1H070D | CHIP C 7.0PF D               |             |
| C361-366 |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    | K           | C912      |    |     | CK73GB1H104K  | CHIP C 0.10UF K              |             |
| C361-378 |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    | M1          | C913      |    |     | CC73GCH1H150J | CHIP C 15PF J                |             |
| C361,362 |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    | E1E2        | C916      |    |     | CC73GCH1H070D | CHIP C 7.0PF D               |             |
| C365,366 |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    | E1E2        | C917      |    |     | CC73GCH1H150J | CHIP C 15PF J                |             |
| C373-378 |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    | K           | C918      |    |     | CC73GCH1H180J | CHIP C 18PF J                |             |
| C373,374 |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    | E1E2        | C919,920  |    |     | CK73GB1H104K  | CHIP C 0.10UF K              |             |
| C377,378 |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    | E1E2        | C960-962  |    |     | CK73GB1H104K  | CHIP C 0.10UF K              |             |
| C400-403 |    |     | CK73GB1H103K  | CHIP C 0.010UF K     |             | C964      |    |     | CK73GB1H104K  | CHIP C 0.10UF K              |             |
| C410,411 |    |     | CK73FB1E474K  | CHIP C 0.47UF K      | E1E2M1      | C971      |    |     | CE32BJ1C100M  | CHIP EL 10UF 16WV            | E1E2        |
| C412     |    |     | CE32BJ0J470M  | CHIP EL 47UF 6.3WV   | E1E2M1      |           |    |     |               |                              |             |
| C413     |    |     | CK73GB1H103K  | CHIP C 0.010UF K     | E1E2M1      | 291       | 2D | *   | E30-6637-05   | CORD WITH PLUG               |             |
| C420     |    |     | CK73FB1E474K  | CHIP C 0.47UF K      |             | CN190     |    | *   | E41-2777-05   | PIN ASSY                     | E1E2M1      |
| C421     |    |     | CE32BJ0J470M  | CHIP EL 47UF 6.3WV   |             | CN300     |    |     | E41-2352-05   | FLAT CABLE CONNECTOR         |             |
| C422     |    |     | CK73FB1E474K  | CHIP C 0.47UF K      | △           | CN361     |    |     | E41-2555-05   | PIN ASSY                     |             |
| C423     |    |     | CK73GB1H103K  | CHIP C 0.010UF K     |             | J1        |    |     | E58-0991-05   | RECTANGULAR RECEPTACLE       |             |
| C450,451 |    |     | CK73FB1C105K  | CHIP C 1.0UF K       |             | J410      |    |     | E11-0625-05   | PHONE JACK (LGY6502-0900)    | E1E2M1      |
| C452     |    |     | CD04BM1A101M  | ERELECTRO 100UF 10WV | E1E2        | J420      |    |     | E56-0855-05   | CYLINDRICAL RECEPTACLE       |             |
| C453-460 |    |     | CC73GCH1H150J | CHIP C 15PF J        |             | J650      |    |     | E58-0992-05   | RECTANGULAR RECEPTACLE       |             |
| C461-464 |    |     | C90-6768-05   | ELECTRO 0.22UF 16WV  | KM1         | △ L1      |    | *   | L33-2365-05   | CHOKE COIL ASSY              |             |
| C461-464 |    |     | C90-6781-05   | ELECTRO 4.7UF 16WV   | E1E2        | L60       |    |     | L33-2288-05   | SMALL FIXED INDUCTOR         |             |
| C465-472 |    |     | CC73GCH1H150J | CHIP C 15PF J        |             | L61       |    | *   | L92-0639-05   | CHIP FERRITE                 |             |
| C475     |    |     | C90-6765-05   | ELECTRO 1UF 16WV     | KM1         | L80       |    |     | L33-2296-05   | SMALL FIXED INDUCTOR         |             |
| C475     |    |     | C90-6781-05   | ELECTRO 4.7UF 16WV   | E1E2        | L81       |    |     | L33-2229-05   | SMALL FIXED INDUCTOR         |             |
| C479     |    |     | CK73GB1H103K  | CHIP C 0.010UF K     |             | L350      |    |     | L41-2205-33   | SMALL FIXED INDUCTOR (22UH)  | M1          |
| C480,481 |    |     | CE32BJ1H2R2M  | CHIP EL 2.2UF 50WV   |             | L505      |    |     | L41-4795-33   | SMALL FIXED INDUCTOR (4.7UH) |             |
| C482,483 |    |     | CK73FB1E474K  | CHIP C 0.47UF K      |             | L930-937  |    |     | L92-0365-05   | CHIP FERRITE                 | E1E2        |
| C484,485 |    |     | CC73GCH1H070D | CHIP C 7.0PF D       |             | X340      |    |     | L77-2002-05   | CRYSTAL RESONATOR            | E1E2        |
| C486,487 |    |     | CK73GB1A474K  | CHIP C 0.47UF K      | KM1         | X501      |    |     | L78-0872-05   | RESONATOR (12MHZ)            |             |
| C488     |    |     | CK73FB1C105K  | CHIP C 1.0UF K       |             | X502      |    |     | L77-2880-05   | CRYSTAL RESONATOR            |             |
| C489-491 |    |     | CE32BJ1H2R2M  | CHIP EL 2.2UF 50WV   |             | G         | 2D |     | N80-3010-48   | PAN HEAD TAPTITE SCREW       |             |
| C492-495 |    |     | CK73FB1C105K  | CHIP C 1.0UF K       | KM1         | J         | 2D |     | N83-3005-48   | PAN HEAD TAPTITE SCREW       |             |
| C492,493 |    |     | CK73FB1C105K  | CHIP C 1.0UF K       | E1E2        | K         | 2D |     | N83-3020-48   | PAN HEAD TAPTITE SCREW       |             |
| C494,495 |    |     | CK73FB1A335K  | CHIP C 3.3UF K       | E1E2        |           |    |     |               |                              |             |
| C496     |    |     | CK73GB1H103K  | CHIP C 0.010UF K     |             | CP190     |    |     | RK74HB1J101J  | CHIP-COM 100 J 1/16W         | E1E2        |
| C497     |    |     | CE32BE1C100M  | CHIP EL 10UF 16WV    |             | CP250,251 |    |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W         |             |
| C498     |    |     | CE32BJ1C470M  | CHIP EL 47UF 16WV    |             | CP310     |    |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W         | K           |
| C500,501 |    |     | CC73GCH1H220J | CHIP C 22PF J        |             | CP420     |    |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W         |             |
| C502     |    |     | CK73GB1H104K  | CHIP C 0.10UF K      |             | CP421     |    |     | RK74HB1J101J  | CHIP-COM 100 J 1/16W         |             |
| C503-506 |    |     | CK73GB1H103K  | CHIP C 0.010UF K     |             | CP501     |    |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W         |             |
| C508,509 |    |     | CK73GB1H103K  | CHIP C 0.010UF K     |             | CP502     |    |     | RK74HB1J102J  | CHIP-COM 1.0K J 1/16W        |             |
| C510     |    |     | CK73GB1H102K  | CHIP C 1000PF K      |             | CP503     |    |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W         |             |
| C511     |    |     | CK73GB1H103K  | CHIP C 0.010UF K     |             | CP504     |    |     | RK74GA1J472J  | CHIP-COM 4.7K J 1/16W        |             |
| C512     |    |     | CE32BJ0J470M  | CHIP EL 47UF 6.3WV   |             | CP505-507 |    |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W         |             |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-472x-xx)

| Ref. No. | Add | New | Parts No.     | Description          | Destination | Ref. No. | Add | New | Parts No.    | Description         | Destination |
|----------|-----|-----|---------------|----------------------|-------------|----------|-----|-----|--------------|---------------------|-------------|
| R10      |     |     | RK73GH2A432D  | CHIP R 4.3K D 1/10W  |             | R132     |     |     | RK73FB2B683J | CHIP R 68K J 1/8W   |             |
| R11      |     |     | RK73GH2A243D  | CHIP R 24K D 1/10W   |             | R140     |     |     | RK73FB2B472J | CHIP R 4.7K J 1/8W  |             |
| R12      |     |     | RK73FB2B221J  | CHIP R 220 J 1/8W    |             | R141,142 |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             |
| R20      |     |     | RK73FB2B203J  | CHIP R 20K J 1/8W    |             | R150     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  | KM1         |
| R21      |     |     | RK73GB2A223J  | CHIP R 22K J 1/10W   |             | R151,152 |     |     | RK73PB2H221J | CHIP R 220 J 1/2W   | KM1         |
| R22      |     |     | RK73FB2B272J  | CHIP R 2.7K J 1/8W   |             | R153     |     |     | RK73FB2B472J | CHIP R 4.7K J 1/8W  |             |
| R30      |     |     | RK73FB2B152J  | CHIP R 1.5K J 1/8W   |             | R160     |     |     | RK73FB2B561J | CHIP R 560 J 1/8W   | E1E2M1      |
| R40,41   |     |     | RK73PB2H1R0J  | CHIP R 1.0 J 1/2W    |             | R161     |     |     | RK73EB2E102J | CHIP R 1.0K J 1/4W  | E1E2M1      |
| R42      |     |     | RK73FB2B223J  | CHIP R 22K J 1/8W    |             | R170     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             |
| R43      |     |     | RK73GB2A105J  | CHIP R 1.0M J 1/10W  |             | R171     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W |             |
| R44,45   |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W  |             | R172     |     |     | RK73EB2E103J | CHIP R 10K J 1/4W   |             |
| R46      |     |     | RK73FB2B431J  | CHIP R 430 J 1/8W    |             | R180     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W |             |
| R50      |     |     | RK73FB2B182J  | CHIP R 1.8K J 1/8W   |             | R181     |     |     | RK73EB2E103J | CHIP R 10K J 1/4W   |             |
| R51      |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W  |             | R182     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             |
| R52      |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W   |             | R190     |     |     | RK73EB2E102J | CHIP R 1.0K J 1/4W  | E1E2M1      |
| R61      |     |     | RK73PB2H1R0J  | CHIP R 1.0 J 1/2W    |             | R191-193 |     |     | RK73EB2E471J | CHIP R 470 J 1/4W   | E1E2        |
| R62      |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W  |             | R194     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             |
| R63      |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W   |             | R195     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W |             |
| R64      |     |     | RK73PB2H102J  | CHIP R 1.0K J 1/2W   |             | R250,251 |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             |
| R65      |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W   |             | R254,255 |     |     | RK73GB2A104J | CHIP R 100K J 1/10W |             |
| R66      |     |     | RK73GH2A9311D | CHIP R 9.31K D 1/10W |             | R300,301 |     |     | RK73GB2A153J | CHIP R 15K J 1/10W  |             |
| R67      |     |     | RK73GH2A434D  | CHIP R 430K D 1/10W  |             | R302     |     |     | RK73PB2H2R2J | CHIP R 2.2 J 1/2W   |             |
| R68      |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W   |             | R303     |     |     | RK73GB2A101J | CHIP R 100 J 1/10W  |             |
| R73      |     |     | RK73FB2B222J  | CHIP R 2.2K J 1/8W   |             | R310,311 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W | K           |
| R74      |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W   |             | R312     |     |     | RK73GH2A111D | CHIP R 110 D 1/10W  | K           |
| R75      |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W  |             | R313     |     |     | RK73GH2A241D | CHIP R 240 D 1/10W  | K           |
| R80      |     |     | RK73GH2A753D  | CHIP R 75K D 1/10W   |             | R340-342 |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W | E1E2        |
| R81      |     |     | RK73GH2A103D  | CHIP R 10K D 1/10W   |             | R343     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W | E1E2        |
| R82,83   |     |     | RK73GB2A154J  | CHIP R 150K J 1/10W  |             | R344     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  | E1E2        |
| R84      |     |     | RK73GH2A103D  | CHIP R 10K D 1/10W   |             | R345     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W | E1E2        |
| R85      |     |     | RK73GH2A753D  | CHIP R 75K D 1/10W   |             | R346     |     |     | RK73GB2A512J | CHIP R 5.1K J 1/10W | E1E2        |
| R86      |     |     | RK73GH2A823D  | CHIP R 82K D 1/10W   |             | R350     |     |     | RK73GB2A182J | CHIP R 1.8K J 1/10W | M1          |
| R87      |     |     | RK73GH2A114D  | CHIP R 110K D 1/10W  |             | R351     |     |     | RK73GB2A750J | CHIP R 75 J 1/10W   | M1          |
| R88      |     |     | RK73GH2A683D  | CHIP R 68K D 1/10W   |             | R352     |     |     | RK73GB2A272J | CHIP R 2.7K J 1/10W | M1          |
| R100     |     |     | RK73FB2B1R0J  | CHIP R 1.0 J 1/8W    |             | R353     |     |     | RK73GB2A470J | CHIP R 47 J 1/10W   | M1          |
| R102     |     |     | RK73FB2B183J  | CHIP R 18K J 1/8W    |             | R354     |     |     | RK73GB2A752J | CHIP R 7.5K J 1/10W | M1          |
| R103     |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W   |             | R355     |     |     | RK73GB2A563J | CHIP R 56K J 1/10W  | M1          |
| R106     |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W   |             | R356     |     |     | RK73GB2A274J | CHIP R 270K J 1/10W | M1          |
| R107     |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W  | KM1         | R357     |     |     | RK73GB2A470J | CHIP R 47 J 1/10W   | M1          |
| R110     |     |     | RK73GH2A512D  | CHIP R 5.1K D 1/10W  | E1E2        | R358     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  | M1          |
| R110     |     |     | RK73GH2A682D  | CHIP R 6.8K D 1/10W  | KM1         | R359,360 |     |     | RK73GB2A913J | CHIP R 91K J 1/10W  | M1          |
| R111     |     |     | RK73GH2A472D  | CHIP R 4.7K D 1/10W  |             | R361-366 |     |     | RK73GB2A361J | CHIP R 360 J 1/10W  | KM1         |
| R112     |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W  |             | R361,362 |     |     | RK73GB2A361J | CHIP R 360 J 1/10W  | E1E2        |
| R114     |     |     | RK73EB2E332J  | CHIP R 3.3K J 1/4W   | E1E2        | R365,366 |     |     | RK73GB2A361J | CHIP R 360 J 1/10W  | E1E2        |
| R114     |     |     | RK73PB2H102J  | CHIP R 1.0K J 1/2W   | KM1         | R367-372 |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  | KM1         |
| R115     |     |     | RK73GB2A563J  | CHIP R 56K J 1/10W   | KM1         | R367,368 |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  | E1E2        |
| R116     |     |     | RK73GB2A101J  | CHIP R 100 J 1/10W   |             | R371,372 |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  | E1E2        |
| R117     |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W   |             | R373-378 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  | M1          |
| R118-121 |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W   |             | R379-384 |     |     | RK73GB2A104J | CHIP R 100K J 1/10W | M1          |
| R126     |     |     | RK73GB2A183J  | CHIP R 18K J 1/10W   |             | R385-390 |     |     | RK73GB2A123J | CHIP R 12K J 1/10W  | M1          |
| R127     |     |     | RK73FB2B203J  | CHIP R 20K J 1/8W    |             | R391-396 |     |     | RK73GB2A820J | CHIP R 82 J 1/10W   | M1          |
| R128     |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W  |             | R401     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  |             |
| R129     |     |     | RK73EB2E473J  | CHIP R 47K J 1/4W    |             | R402     |     |     | RK73FB2B821J | CHIP R 820 J 1/8W   |             |
| R130     |     |     | R92-5088-05   | CHIP R 3.3K J 3/4W   |             | R403,404 |     |     | RK73GB2A471J | CHIP R 470 J 1/10W  |             |
| R131     |     |     | RK73GB2A393J  | CHIP R 39K J 1/10W   |             | R410,411 |     |     | RK73GB2A123J | CHIP R 12K J 1/10W  | E1E2M1      |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-472x-xx)

| Ref. No.                                         | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                    | Description                                                                                                     | Desti-<br>nation            |
|--------------------------------------------------|-------------|-------------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------|
| R412,413<br>R414<br>R415<br>R420<br>R421,422     |             |             | RK73EB2E100J<br>RK73EB2E4R7J<br>RK73GB2A102J<br>RK73EB2E432J<br>RK73EB2E101J | CHIP R 10 J 1/4W<br>CHIP R 4.7 J 1/4W<br>CHIP R 1.0K J 1/10W<br>CHIP R 4.3K J 1/4W<br>CHIP R 100 J 1/4W         | E1E2M1<br>E1E2M1<br>E1E2M1  |
| R423<br>R424,425<br>R426<br>R427<br>R428         |             |             | RK73EB2E432J<br>RK73EB2E101J<br>RK73EB2E100J<br>RK73EB2E4R7J<br>RK73EB2E100J | CHIP R 4.3K J 1/4W<br>CHIP R 100 J 1/4W<br>CHIP R 10 J 1/4W<br>CHIP R 4.7 J 1/4W<br>CHIP R 10 J 1/4W            |                             |
| R429,430<br>R431<br>R432-434<br>R435<br>R440     |             |             | RK73EB2E101J<br>RK73GB2A102J<br>RK73GB2A104J<br>RK73GB2A101J<br>RK73GB2A104J | CHIP R 100 J 1/4W<br>CHIP R 1.0K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 100 J 1/10W<br>CHIP R 100K J 1/10W    |                             |
| R441<br>R442<br>R450<br>R450<br>R451             |             |             | RK73GB2A101J<br>RK73GB2A104J<br>RK73GB2A103J<br>RK73GB2A243J<br>RK73GB2A104J | CHIP R 100 J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 24K J 1/10W<br>CHIP R 100K J 1/10W    | KM1<br>E1E2<br>KM1          |
| R452<br>R452<br>R453<br>R454<br>R455             |             |             | RK73GB2A221J<br>RK73GB2A331J<br>RK73GB2A273J<br>RK73GB2A470J<br>RK73GB2A223J | CHIP R 220 J 1/10W<br>CHIP R 330 J 1/10W<br>CHIP R 27K J 1/10W<br>CHIP R 47 J 1/10W<br>CHIP R 22K J 1/10W       | E1E2<br>KM1<br>E1E2         |
| R457<br>R457<br>R458-461<br>R466<br>R468         |             |             | RK73GB2A121J<br>RK73GB2A151J<br>RK73GB2A680J<br>RK73GB2A100J<br>RK73GB2A683J | CHIP R 120 J 1/10W<br>CHIP R 150 J 1/10W<br>CHIP R 68 J 1/10W<br>CHIP R 10 J 1/10W<br>CHIP R 68K J 1/10W        | E1E2<br>KM1<br>E1E2<br>E1E2 |
| R469<br>R469<br>R470<br>R471<br>R480,481         |             |             | RK73GB2A104J<br>RK73GB2A333J<br>RK73GB2A102J<br>RK73GB2A473J<br>RK73GB2A101J | CHIP R 100K J 1/10W<br>CHIP R 33K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 47K J 1/10W<br>CHIP R 100 J 1/10W    | KM1<br>E1E2                 |
| R482,483<br>R486-489<br>R490<br>R500,501<br>R502 |             |             | RK73GB2A103J<br>RK73GB2A470J<br>RK73EB2E2R2J<br>RK73GB2A103J<br>RK73GB2A104J | CHIP R 10K J 1/10W<br>CHIP R 47 J 1/10W<br>CHIP R 2.2 J 1/4W<br>CHIP R 10K J 1/10W<br>CHIP R 100K J 1/10W       |                             |
| R503<br>R505,506<br>R507<br>R508,509<br>R512-514 |             |             | RK73GB2A102J<br>RK73GB2A104J<br>RK73GB2A102J<br>RK73GB2A472J<br>RK73GB2A104J | CHIP R 1.0K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 4.7K J 1/10W<br>CHIP R 100K J 1/10W |                             |
| R515,516<br>R517-519<br>R520<br>R522<br>R525     |             |             | RK73GB2A471J<br>RK73GB2A104J<br>RK73GB2A101J<br>RK73GB2A222J<br>RK73GB2A472J | CHIP R 470 J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 100 J 1/10W<br>CHIP R 2.2K J 1/10W<br>CHIP R 4.7K J 1/10W   |                             |
| R526,527<br>R529<br>R529,530<br>R530<br>R540     |             |             | RK73GB2A104J<br>RK73GB2A223J<br>RK73GB2A223J<br>RK73GB2A473J<br>RK73GB2A223J | CHIP R 100K J 1/10W<br>CHIP R 22K J 1/10W<br>CHIP R 22K J 1/10W<br>CHIP R 47K J 1/10W<br>CHIP R 22K J 1/10W     | E2<br>KE1M1<br>E2<br>E1E2   |

| Ref. No.                                         | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                    | Description                                                                                                          | Desti-<br>nation                     |
|--------------------------------------------------|-------------|-------------|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| R540<br>R541,542<br>R543<br>R544<br>R545-548     |             |             | RK73GB2A473J<br>RK73GB2A104J<br>RK73GB2A223J<br>RK73GB2A222J<br>RK73EB2E101J | CHIP R 47K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 22K J 1/10W<br>CHIP R 2.2K J 1/10W<br>CHIP R 100 J 1/4W          | M1                                   |
| R549<br>R550<br>R551<br>R552<br>R553             |             |             | RK73EB2E102J<br>RK73EB2E472J<br>RK73EB2E102J<br>RK73GB2A473J<br>RK73GB2A223J | CHIP R 1.0K J 1/4W<br>CHIP R 4.7K J 1/4W<br>CHIP R 1.0K J 1/4W<br>CHIP R 47K J 1/10W<br>CHIP R 22K J 1/10W           |                                      |
| R554<br>R555<br>R556<br>R557<br>R650             |             |             | R92-3418-05<br>RK73GB2A154J<br>RK73GB2A1R0J<br>RK73FB2B4R7J<br>RK73GB2A471J  | CHIP R 0.47 J 1/2W<br>CHIP R 150K J 1/10W<br>CHIP R 1.0 J 1/10W<br>CHIP R 4.7 J 1/8W<br>CHIP R 470 J 1/10W           | E1E2<br>E1E2                         |
| R651<br>R652,653<br>R654<br>R655<br>R900-902     |             |             | RK73GB2A104J<br>RK73GB2A102J<br>RK73GB2A473J<br>RK73GB2A241J<br>RK73GB2A560J | CHIP R 100K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 47K J 1/10W<br>CHIP R 240 J 1/10W<br>CHIP R 56 J 1/10W          |                                      |
| R904,905<br>R906<br>R907<br>R908-911<br>R950     |             |             | RK73GB2A101J<br>RK73GB2A100J<br>RK73GB2A101J<br>RK73GB2A100J<br>RK73GB2A163J | CHIP R 100 J 1/10W<br>CHIP R 10 J 1/10W<br>CHIP R 100 J 1/10W<br>CHIP R 10 J 1/10W<br>CHIP R 16K J 1/10W             | KM1                                  |
| R951<br>R952<br>R953<br>R954<br>R955             |             |             | RK73GB2A273J<br>RK73GB2A104J<br>RK73GB2A102J<br>RK73GH2A472D<br>RK73GH2A113D | CHIP R 27K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 4.7K D 1/10W<br>CHIP R 11K D 1/10W        | KM1<br>KM1<br>KM1<br>KM1             |
| R960-962<br>R973<br>R974<br>R975<br>R976         |             |             | RK73GB2A100J<br>RK73GB2A104J<br>RK73GB2A473J<br>RK73GB2A123J<br>RK73GB2A103J | CHIP R 10 J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 47K J 1/10W<br>CHIP R 12K J 1/10W<br>CHIP R 10K J 1/10W           | KM1<br>KM1<br>KM1                    |
| R977<br>R978<br>R979<br>R980<br>R982             |             |             | RK73GB2A391J<br>RK73GB2A432J<br>RK73GB2A103J<br>RK73GB2A102J<br>RK73GB2A242J | CHIP R 390 J 1/10W<br>CHIP R 4.3K J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 2.4K J 1/10W        | E1E2<br>E1E2<br>E1E2<br>E1E2<br>E1E2 |
| R983-986<br>W140<br>W250-252<br>W253<br>W340     |             |             | RK73GB2A103J<br>R92-1252-05<br>R92-1252-05<br>R92-2052-05<br>R92-1252-05     | CHIP R 10K J 1/10W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/10W<br>CHIP R 0 OHM J 1/16W   | E1E2<br>E1E2<br>E1E2                 |
| W361-366<br>W361,362<br>W365,366<br>W450<br>W511 |             |             | R92-1252-05<br>R92-1252-05<br>R92-1252-05<br>R92-1252-05<br>R92-1252-05      | CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W | K<br>E1E2<br>E1E2<br>E1E2<br>KM1     |
| W702<br>W901<br>W914,915<br>W966,967<br>W968     |             |             | R92-1252-05<br>R92-1252-05<br>R92-1252-05<br>R92-2053-05<br>R92-1252-05      | CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/8W<br>CHIP R 0 OHM J 1/16W  | KM1<br>E1E2<br>E1E2<br>E1E2          |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-472x-xx)

| Ref. No.                                                 | Add | New | Parts No.                                                            | Description                                                          | Destination            | Ref. No.                                         | Add | New | Parts No.                                                              | Description                                                                                | Destination              |
|----------------------------------------------------------|-----|-----|----------------------------------------------------------------------|----------------------------------------------------------------------|------------------------|--------------------------------------------------|-----|-----|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|--------------------------|
| W969,970<br>W970<br>W980-983                             |     |     | R92-2052-05<br>R92-2052-05<br>R92-1252-05                            | CHIP R 0 OHM J 1/10W<br>CHIP R 0 OHM J 1/10W<br>CHIP R 0 OHM J 1/16W | E1E2<br>KM1<br>E1E2    | IC500<br>IC510<br>IC520<br>IC530<br>Q10          |     |     | 30624MGPB43GP<br>S-80836CNNB-J<br>BR24L04FV-W<br>74HC2G02DP<br>2SB1565 | MICROCONTROLLER IC<br>MOS-IC<br>ROM IC<br>MOS-IC<br>TRANSISTOR                             |                          |
| S650<br>S651                                             |     |     | S74-0822-05<br>S70-0931-05                                           | MICRO SWITCH<br>TACT SWITCH                                          |                        | Q11,12<br>Q20<br>Q21<br>Q22<br>Q23               |     |     | UMC2N<br>2SB1565<br>2SD2351(W)<br>2SA1577<br>DTC124EUA                 | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR                 |                          |
| D1<br>D20<br>D21<br>D30<br>D40                           |     |     | S2V60-5009F46<br>RB160L-40<br>UDZS5.6B<br>UDZS8.2B<br>UDZS5.6B       | DIODE<br>DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE          |                        | Q30<br>Q31<br>Q32<br>Q40<br>Q41                  |     |     | 2SB1565<br>2SC4081<br>UMC2N<br>2SB1565<br>2SD2351(W)                   | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                         |                          |
| D50<br>D61-63<br>D70<br>D80<br>D81                       |     |     | HZU11(B1)-E<br>RB060L-40<br>HZU16(B1)-E<br>NSQ03A04G<br>SFPB-54VNF   | ZENER DIODE<br>DIODE<br>ZENER DIODE<br>DIODE<br>DIODE                |                        | Q42<br>Q43<br>Q50<br>Q51<br>Q52                  |     |     | UMD12N<br>2SD2351(W)<br>2SB1184<br>2SC4081<br>UMC2N                    | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                         |                          |
| D100<br>D102-104<br>D102,103<br>D120<br>D121,122         |     |     | UDZS16B<br>MC2846<br>MC2846<br>MC2846<br>UDZS6.8B                    | ZENER DIODE<br>DIODE<br>DIODE<br>DIODE<br>ZENER DIODE                | KM1<br>E1E2            | Q60<br>Q61<br>Q70<br>Q71<br>Q72                  |     |     | 2SB1184<br>2SD2351(W)<br>2SB1449(R)-E<br>2SC5053<br>UMC2N              | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                         |                          |
| D123<br>D140,141<br>D150,151<br>D160<br>D170             |     |     | UDZS6.2B<br>1SR154-400<br>1SR154-400<br>UDZS5.6B<br>UDZS4.7B         | ZENER DIODE<br>DIODE<br>DIODE<br>ZENER DIODE<br>ZENER DIODE          | E1E2M1                 | Q80<br>Q81,82<br>Q100<br>Q101<br>Q103            |     |     | UMG2N<br>DTC143TUA<br>2SB1188(R)<br>2SC4081<br>2SC4081                 | TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                 | E1E2                     |
| D190<br>D190,191<br>D350<br>D351<br>D361,362             |     |     | STZ6.2N<br>STZ6.2N<br>UDZS11B<br>UDZS5.6B<br>MC2846                  | ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE<br>DIODE    | M1<br>E1E2<br>M1<br>M1 | Q103-105<br>Q120<br>Q122,123<br>Q150<br>Q151     |     |     | 2SC4081<br>2SC4081<br>2SC4081<br>2SB1184<br>DTC114YUA                  | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR                 | KM1<br>KM1<br>KM1        |
| D379-384<br>D410-412<br>D420-428<br>D450,451<br>D480,481 |     |     | AVRM1608180M6A<br>UDZS6.8B<br>UDZS6.2B<br>MC2846<br>UDZS5.6B         | VARISTOR<br>ZENER DIODE<br>ZENER DIODE<br>DIODE<br>ZENER DIODE       | M1<br>E1E2M1           | Q160<br>Q180<br>Q350<br>Q351<br>Q352,353         |     |     | DTA123JK<br>RT1N441M<br>2SB1184<br>2SC4081<br>2SA1576A                 | DIGITAL TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                 | E1E2M1<br>M1<br>M1<br>M1 |
| D484-486<br>D500<br>D501-506<br>D903<br>IC10             |     |     | MC2846<br>MC2846<br>UDZS6.2B<br>UDZS6.8B<br>M5237ML-CF0J             | DIODE<br>DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ANALOGUE IC          | E1E2                   | Q354<br>Q356,357<br>Q358<br>Q361,362<br>Q363-368 |     |     | 2SC4081<br>2SC4081<br>2SA1576A<br>DTA124EUA<br>DTC143TUA               | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR         | M1<br>M1<br>M1           |
| IC60<br>IC80<br>IC100<br>IC101<br>IC102                  |     | *   | LT3467A<br>BD9302FP<br>NJM4565V-ZB<br>TA75S558F-F<br>74AHC1G32GW     | ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>MOS-IC   | KM1<br>KM1             | Q363,364<br>Q367,368<br>Q400<br>Q401<br>Q500     |     |     | DTC143TUA<br>DTC143TUA<br>2SB1689<br>DTC124EUA<br>RT1N441M             | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR | E1E2<br>E1E2             |
| IC140<br>IC300<br>IC310<br>IC340<br>IC350                |     |     | TPD1018F-F<br>MIC2026-1YM<br>MMA6261QR2<br>LC72725KV<br>ICL7660SIBAZ | ANALOGUE IC<br>MOS-IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC   | K<br>E1E2<br>M1        | Q501<br>Q650<br>TH450                            |     |     | 2SA1576A<br>DTC114YUA<br>PRF18BE471QS2                                 | TRANSISTOR<br>DIGITAL TRANSISTOR<br>POSITIVE RESISTOR                                      |                          |
| IC361-363<br>IC450<br>IC450<br>IC480                     |     |     | NJM4565V-ZB<br>E-TDA7850A<br>TB2903HQ<br>E-TDA7415CB                 | ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC             | M1<br>E1E2<br>KM1      | A400                                             | 2D  | *   | X86-4040-11                                                            | FRONT-END UNIT                                                                             | KM1                      |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-472x-xx)

| Ref. No.                                      | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description              | Desti-<br>nation |
|-----------------------------------------------|-------------|-------------|-------------|--------------------------|------------------|
| A400                                          | 2D          | *           | X86-4042-70 | FRONT-END UNIT           | E1E2             |
| <b>MECHANISM ASSY (X92-5940-00) DXM-6B20W</b> |             |             |             |                          |                  |
| 1                                             | 2B          | *           | A10-5328-11 | CHASSIS                  |                  |
| 2                                             | 1B          |             | A10-5329-11 | CHASSIS                  |                  |
| 5                                             | 2B          |             | D10-4910-13 | ARM ASSY                 |                  |
| 8                                             | 2A          |             | D10-4911-13 | LEVER ASSY               |                  |
| 10                                            | 2A          |             | D10-4906-33 | ARM                      |                  |
| 11                                            | 2A          |             | D10-4907-33 | ARM                      |                  |
| 12                                            | 3A          |             | D10-4908-03 | ARM                      |                  |
| 13                                            | 3A          |             | D10-4909-03 | ARM                      |                  |
| 14                                            | 3B          |             | D10-4915-03 | ARM                      |                  |
| 15                                            | 2A          |             | D10-4916-23 | SLIDER                   |                  |
| 16                                            | 3B          |             | D10-4914-12 | SLIDER                   |                  |
| 17                                            | 2B          |             | D10-4588-13 | SLIDER                   |                  |
| 18                                            | 2B          |             | D10-4917-04 | ARM                      |                  |
| 19                                            | 2B          |             | D10-4596-24 | ARM                      |                  |
| 22                                            | 2A          |             | D13-2151-04 | GEAR                     |                  |
| 23                                            | 2B          |             | D13-2152-04 | GEAR                     |                  |
| 24                                            | 3B          |             | D13-2153-04 | GEAR                     |                  |
| 25                                            | 3B          |             | D13-2154-04 | GEAR                     |                  |
| 26                                            | 3B          |             | D13-2155-04 | WORM                     |                  |
| 27                                            | 2B          |             | D13-2156-14 | GEAR                     |                  |
| 28                                            | 3B          |             | D13-2157-04 | GEAR                     |                  |
| 29                                            | 2B          |             | D13-2158-04 | GEAR                     |                  |
| 30                                            | 2B          |             | D13-2168-04 | GEAR                     |                  |
| 31                                            | 3B          |             | D13-2171-04 | GEAR                     |                  |
| 32                                            | 1B          |             | D13-2400-13 | RACK (GEAR)              |                  |
| 33                                            | 2A          |             | D14-0759-04 | ROLLER                   |                  |
| 35                                            | 2B          |             | D21-2382-04 | SHAFT                    |                  |
| 36                                            | 1A          |             | D23-0954-04 | RETAINER                 |                  |
| 37                                            | 1B          |             | D39-0246-05 | DAMPER                   |                  |
| 38                                            | 2B          |             | G01-3072-04 | EXTENSION SPRING         |                  |
| 39                                            | 2A          |             | G01-3073-04 | TORSION COIL SPRING      |                  |
| 40                                            | 2A          |             | G01-3074-04 | EXTENSION SPRING         |                  |
| 41                                            | 1B          |             | G01-4615-04 | EXTENSION SPRING         |                  |
| 42                                            | 2A          |             | G01-3076-04 | EXTENSION SPRING         |                  |
| 43                                            | 1B          |             | G01-3077-14 | EXTENSION SPRING         |                  |
| 44                                            | 2B          |             | G02-1399-04 | FLAT SPRING              |                  |
| 45                                            | 2B          |             | G02-1547-04 | FLAT SPRING              |                  |
| 46                                            | 3B          | *           | F09-1804-14 | SHEET                    |                  |
| 51                                            | 1A          |             | J22-0473-21 | MOUNTING HARDWARE        |                  |
| 52                                            | 3B          |             | J22-0474-12 | MOUNTING HARDWARE        |                  |
| 53                                            | 1B          |             | J22-0519-03 | MOUNTING HARDWARE        |                  |
| 55                                            | 1A          |             | J90-1138-41 | GUIDE                    |                  |
| 56                                            | 1B          |             | J90-1023-03 | GUIDE                    |                  |
| DFPC1                                         | 3A          | *           | J86-0039-05 | FPC (LEAD FREE)          |                  |
| A                                             | 2B          |             | N09-4460-15 | TAPTITE SCREW (PT2X8)    |                  |
| B                                             | 1B          |             | N09-6317-05 | TAPTITE SCREW (1.6X6.0)  |                  |
| C                                             | 2B          |             | N09-6004-15 | MACHINE SCREW (M1.7X2.5) |                  |
| E                                             | 2B          |             | N09-6007-15 | MACHINE SCREW (M2X2)     |                  |
| F                                             | 1A          |             | N09-6051-15 | TAPTITE SCREW (PT2X5)    |                  |

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                   | Desti-<br>nation |
|----------|-------------|-------------|-------------|-------------------------------|------------------|
| G        | 2A          |             | N19-2163-04 | FLAT WASHER (1.6X6X0.25)      |                  |
| H        | 1B          |             | N39-2020-48 | PAN HEAD MACHINE SCREW (M2X2) |                  |
| J        | 1B          |             | N09-6108-15 | TAPTITE SCREW (M2X3.5)        |                  |
| K        | 3B          |             | N09-6155-15 | SEMS (TAPTITE SCREW) (PT2X6)  |                  |
| DM1      | 3B          |             | T42-1066-14 | DC MOTOR (SPINDLE)            |                  |
| DM2      | 2B          |             | T42-1067-14 | DC MOTOR (LOADING/SLED)       |                  |
| DPU1     | 2B          |             | X93-2130-01 | OPTICAL PICKUP ASSY           |                  |

K : KDC-MP635 M1 : KDC-X7006 E1 : KDC-W7037 E2 : KDC-W7037Y  
(E : Europe K : North America M : Other Areas)

△ Indicates safety critical components.