



TK-5310

EXPLODED VIEW (TK-5310 K2, K3, K5, K6)

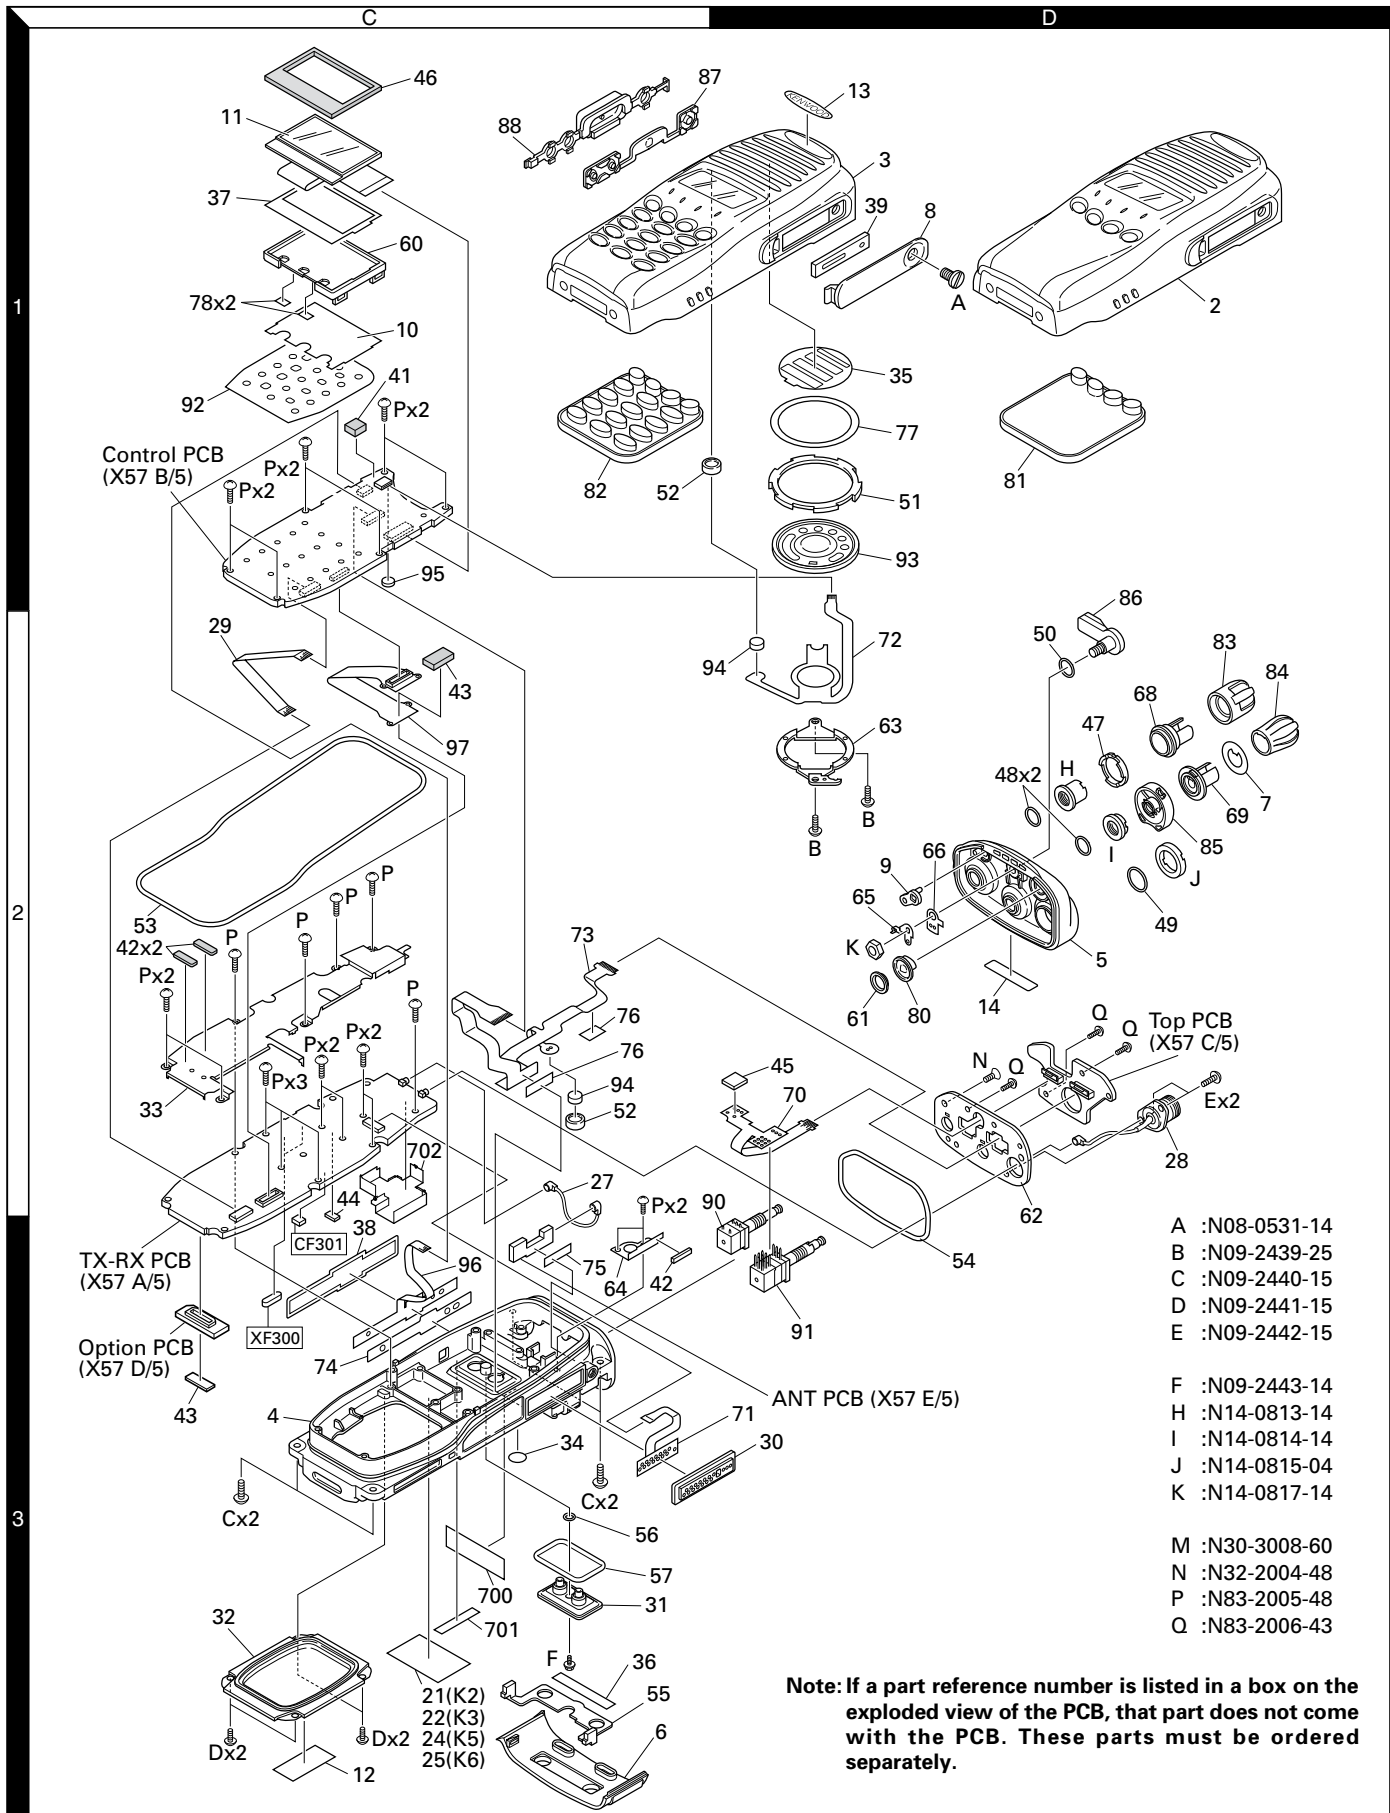

PACKING

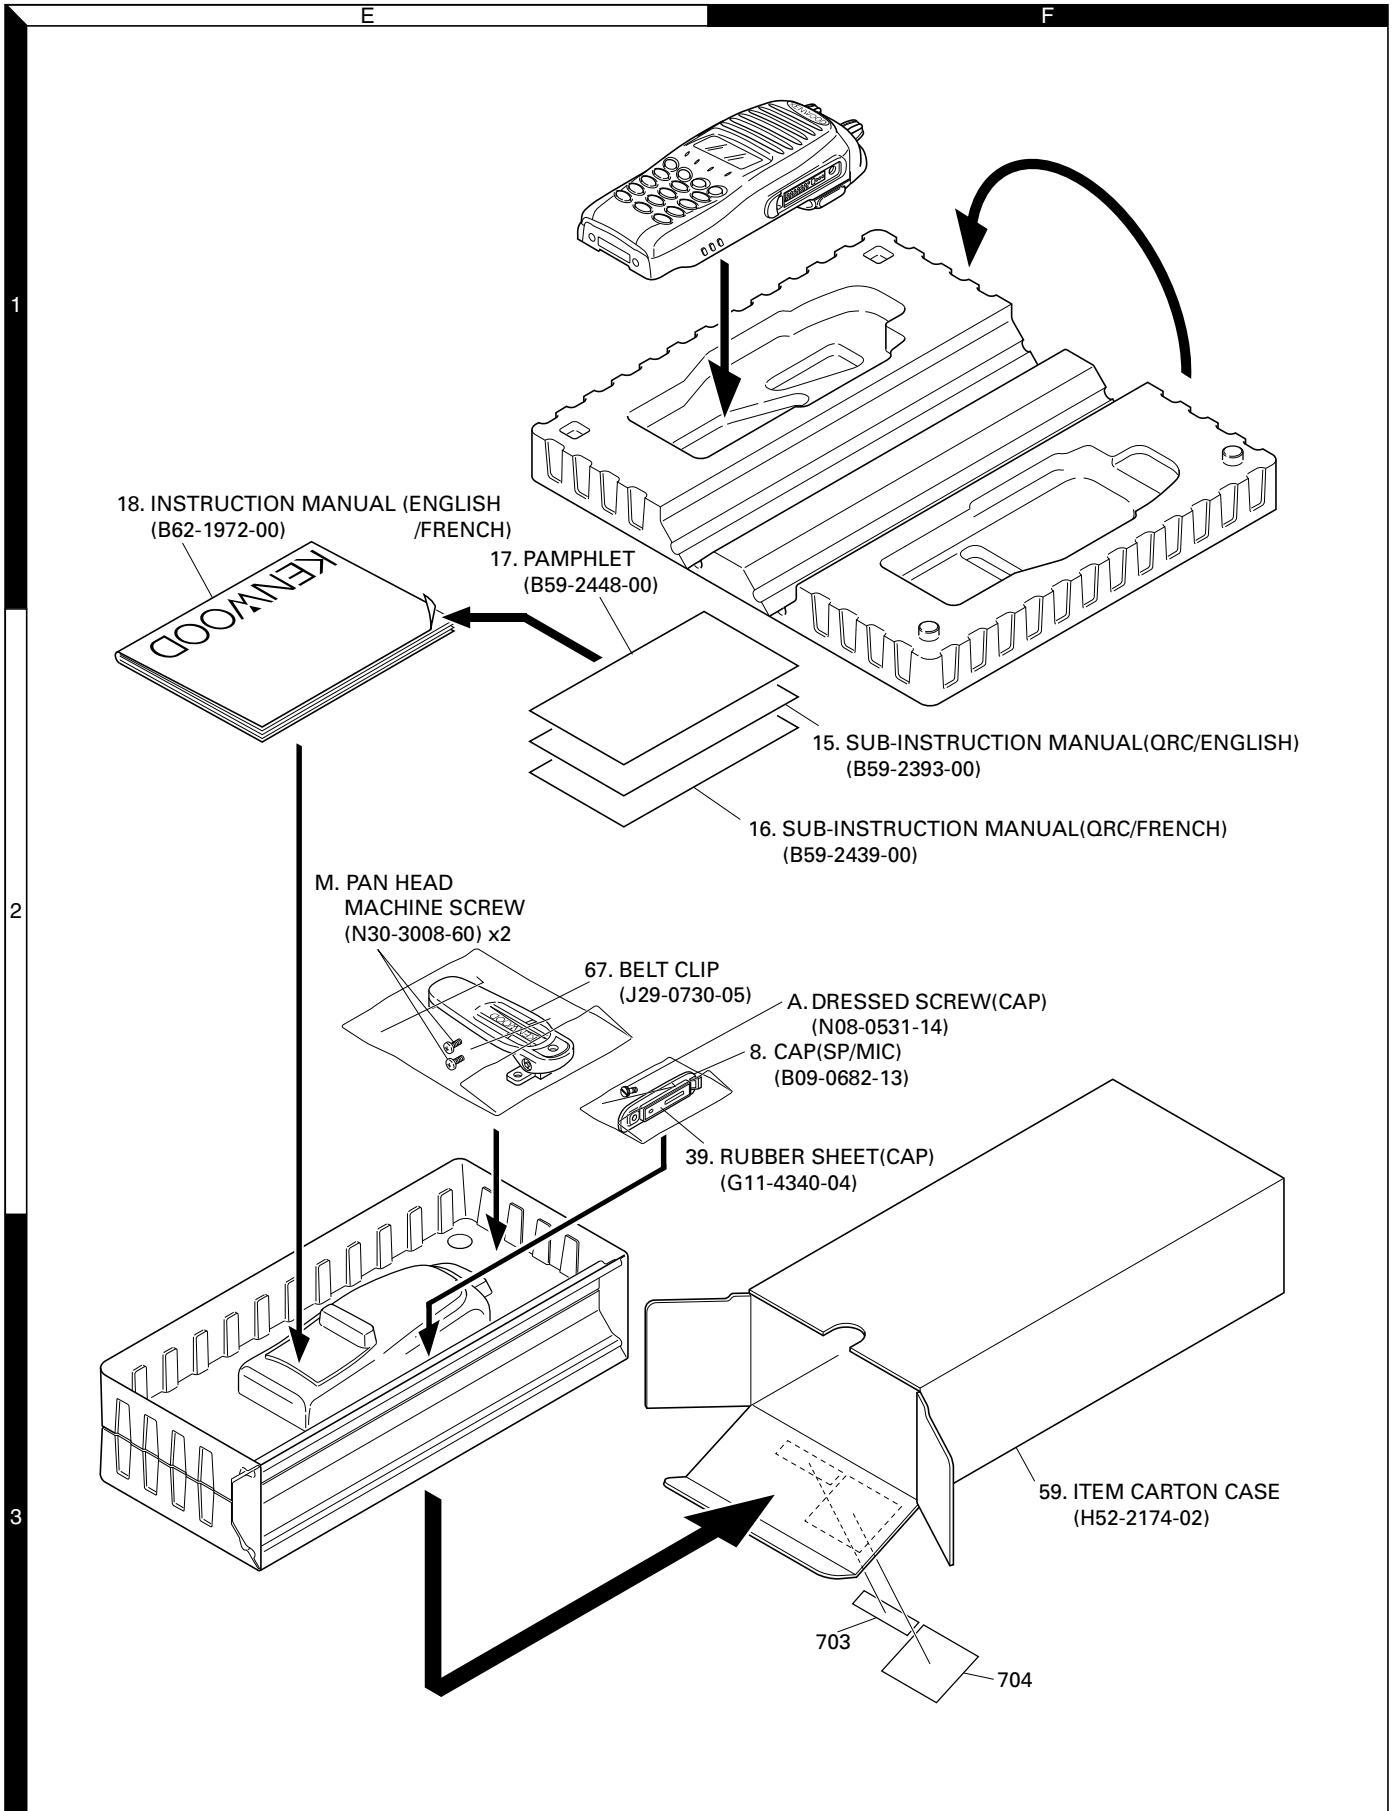

PARTS LIST

* New Parts. Δ indicates safety critical components.
 Parts without **Parts No.** are not supplied.
 Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
 Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia K: USA P: Canada
 Y: PX (Far East, Hawaii) T: England E: Europe
 Y: AAFES (Europe) X: Australia M: Other Areas

TK-5310 (Y50-6060-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-5310											
1	1A		A02-3875-01	MAIN CABINET	K,K4	50	2B,2D		G53-1631-05	PACKING(LEVER SW O-RING)	
2	1D		A02-3877-11	MAIN CABINET(4KEY)	K2,K5	51	1B,1D		G53-1633-04	PACKING(SP)	
3	1D	*	A02-3879-11	MAIN CABINET(DTMF)	K3,K6	52	1B,1D, 2A,2C		G53-1634-14	PACKING(MAIN MIC,NC MIC)	
4	3A,3C	*	A10-4084-31	CHASSIS		53	2A,2C		G53-1637-04	PACKING(CHASSIS-FRONT)	
5	2B,2D		A62-1104-02	PANEL(TOP)		54	2B,2D		G53-1638-04	PACKING(CHASSIS-TOP)	
6	3A,3C		A82-0057-02	REAR PANEL		55	3A,3C		G53-1640-03	PACKING(BATT)	
7	2B,2D		B03-3612-04	DRESSING PLATE(16CH)		56	3A,3C		G53-1649-05	PACKING(BATT- O-RING)	
8	1B,1D,2E		B09-0682-13	CAP(SP/MIC) ACCESSORY		57	3A,3C		G53-1663-23	PACKING(TERMINAL BLOCK)	
9	2B,2D		B11-1821-03	ILLUMINATION GUIDE(TX-BUSY)		59	3F	*	H52-2174-02	ITEM CARTON CASE	
10	1C		B11-1832-04	FILTER(LCD)	K2,K3,K5	60	1C		J19-5475-12	HOLDER(LCD)	K2,K3,K5
10	1C		B11-1832-04	FILTER(LCD)	K6	60	1C		J19-5475-12	HOLDER(LCD)	K6
11	1C	*	B38-0891-15	LCD ASSY	K2,K3,K5	61	2B,2D		J19-5477-04	HOLDER(EMG)	
11	1C	*	B38-0891-15	LCD ASSY	K6	62	2B,2D	*	J21-8482-13	MOUNTING HARDWARE(TOP)	
12	3A,3C		B41-1841-04	CAUTION STICKER(HUMAN BODY PROTECTION)		63	2B,2D		J21-8483-03	MOUNTING HARDWARE(SP)	
13	1B,1D		B43-1171-04	BADGE(FRONT)		64	3A,3C		J21-8484-04	MOUNTING HARDWARE(NC MIC)	
14	2B,2D		B43-1172-04	BADGE(REAR)		65	2B,2D	*	J21-8581-04	MOUNTING HARDWARE(LEVER SW)	
15	2E		B59-2393-00	SUB-INSTRUCTION MANUAL(QRC/ENGLISH)		66	2B,2D		J21-8495-04	MOUNTING HARDWARE(LEVER SW PANEL SIDE)	
16	2E	*	B59-2439-00	SUB-INSTRUCTION MANUAL(QRC/FRENCH)		67	2E	*	J29-0730-05	BELT CLIP ACCESSORY	
17	2E	*	B59-2448-00	PAMPHLET(HUMAN BODY PROTECTION)		68	2B,2D		J39-0646-03	SPACER(VOL)	
18	2E	*	B62-1972-00	INSTRUCTION MANUAL(ENGLISH/FRENCH)		69	2B,2D		J39-0647-03	SPACER(16CH)	
20	3A	*	B72-2418-04	MODEL NAME-PLATE	K	70	2B,2D		J82-0096-05	FPC(VOL/CH)	
21	3C	*	B72-2419-04	MODEL NAME-PLATE	K2	71	3A,3C		J82-0097-25	FPC(UNIV)	
22	3C	*	B72-2420-04	MODEL NAME-PLATE	K3	72	2B,2D		J82-0098-05	FPC(SP/MIC)	
23	3A	*	B72-2421-04	MODEL NAME-PLATE	K4	73	2A,2C		J82-0104-05	FPC(CONTROL-TOP)	
24	3C	*	B72-2422-04	MODEL NAME-PLATE	K5	74	3A,3C		J99-0377-14	ADHESIVE SHEET(PTT)	
25	3C	*	B72-2423-04	MODEL NAME-PLATE	K6	75	3A,3C		J99-0380-04	ADHESIVE SHEET(ANT PCB)	
27	2A,2C		E37-0722-05	LEAD WIRE WITH CONNECTOR(UNIV)		76	2A,2C		J99-0381-04	ADHESIVE SHEET(CONTROL-TOP FPC)	
28	2B,2D		E37-1126-15	LEAD WIRE WITH CONNECTOR(ANT)		77	1B,1D		J99-0383-14	ADHESIVE SHEET(SP)	
29	2C		E37-1128-05	FLAT CABLE(CN613-CN800)	K2,K3,K5	78	1C		J99-0390-04	ADHESIVE SHEET(LCD FILTER)	K2,K3,K5
29	2C		E37-1128-05	FLAT CABLE(CN613-CN800)	K6	78	1C		J99-0390-04	ADHESIVE SHEET(LCD FILTER)	K6
30	3A,3C		E58-0510-05	RECTANGULAR RECEPTACLE(UNIV)		80	2B,2D		K29-9319-03	KEY TOP(EMG)	
31	3A,3C		E72-0420-33	TERMINAL BLOCK(BATT+)		81	1D		K29-9320-03	KEY TOP(4KEY)	K2,K5
32	3A,3C		F07-1887-12	COVER ASSY		82	1C		K29-9321-13	KEY TOP(DTMF)	K3,K6
33	2A,2C		F10-2499-12	SHIELDING PLATE(TX-RX PCB)		83	2B,2D		K29-9322-03	KNOB(VOL)	
34	3A,3C		G10-1327-04	FIBROUS SHEET(AIR)		84	2B,2D		K29-9323-03	KNOB(16CH)	
35	1B,1D		G10-1338-04	FIBROUS SHEET(SP)		85	2B,2D		K29-9324-13	KNOB(CONCENTRIC SW)	
36	3A,3C	*	G10-1366-04	FIBROUS SHEET		86	2B,2D		K29-9325-04	KNOB(LEVER SW)	
37	1C		G11-4302-04	SHEET(LCD)	K2,K3,K5	87	1A,1C		K29-9327-03	KEY TOP(PTT)	
37	1C		G11-4302-04	SHEET(LCD)	K6	88	1A,1C		K29-9328-02	KNOB(PTT)	
38	3A,3C		G11-4303-14	SHEET(PTT)		A	1B,1D,2E		N08-0531-14	DRESSED SCREW(CAP) ACCESSORY	
39	1B,1D,2E		G11-4340-04	RUBBER SHEET(CAP) ACCESSORY		B	2B,2D		N09-2439-25	SPECIAL SCREW(SP)	
40	-		G11-4346-08	SHEET(UNIV)		C	3A,3C		N09-2440-15	SPECIAL SCREW(CASE)	
41	1A,1C		G13-2036-04	CUSHION(MIC)		D	3A,3C		N09-2441-15	SPECIAL SCREW(COVER ASSY)	
42	3A,2C,3C		G13-2046-04	CUSHION(UNIV)		E	2B,2D		N09-2442-15	SPECIAL SCREW(ANT)	
43	1A,2C, 3A,3C		G13-2070-04	CUSHION(CORD ASSY)		F	3A,3C	*	N09-2443-14	HEXAGON HEAD SCREW(BATT-)	
44	2A,2C		G13-2071-04	CONDUCTIVE CUSHION(CHASSIS/PCB)		H	2B,2D		N14-0813-14	CIRCULAR NUT(VOL)	
45	2B,2D		G13-2079-04	CUSHION(VOL)		I	2B,2D	*	N14-0814-14	CIRCULAR NUT(CH)	
46	1C		G13-2087-04	CUSHION(LCD)	K2,K3,K5	J	2B,2D		N14-0815-04	CIRCULAR NUT(ANT)	
46	1C		G13-2087-04	CUSHION(LCD)	K6	K	2B,2D	*	N14-0817-14	HEXAGON NUT(LEVER SW)	
47	2B,2D		G53-1628-04	PACKING(VOL TORQ-UP)		M	2E		N30-3008-60	PAN HEAD MACHINE SCREW(BELT CLIP)	
48	2B,2D		G53-1629-05	PACKING(VOL,CH O-RING)		N	2B,2D		N32-2004-48	FLAT HEAD MACHINE SCREW(TOP)	
49	2B,2D		G53-1630-05	PACKING(ANT O-RING)		P	1A,1C, 2A,2C		N83-2005-48	PAN HEAD TAPTITE SCREW(CONT,TXRX)	

PARTS LIST

TK-5310 TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
Q	2B,2D		N83-2006-43	PAN HEAD TAPTITE SCREW(TOP)		C131			CK73HB1C103K	CHIP C 0.010UF K	
90	3B,3D		R31-0654-05	VARIABLE RESISTOR(VOL)		C132			CK73HB1H471K	CHIP C 470PF K	
91	3B,3D		S60-0431-05	ROTARY SWITCH(CH)		C135,136			CK73HB1C103K	CHIP C 0.010UF K	
92	1C		S79-0454-05	KEYBOARD ASSY(4KEY,DTMF)	K2,K3,K5	C137,138			CC73HCH1H101J	CHIP C 100PF J	
92	1C		S79-0454-05	KEYBOARD ASSY(4KEY,DTMF)	K6	C139			CK73HB1C103K	CHIP C 0.010UF K	
93	1B,1D		T07-0755-15	SPEAKER		C140			C92-0863-05	CHIP TNTL 0.047UF 35WV	
94	2A,2B, 2C,2D		T91-0575-05	MIC ELEMENTT(MAIN MIC,NC MIC)		C141			CK73HB1H471K	CHIP C 470PF K	
95	1C		W09-0971-05	LITHIUM CELL		C142		*	CS77AA1VR47M	CHIP TNTL 0.47UF 35WV	
96	3A,3C		X41-3690-10	SWITCH UNIT(FPC(PTT))		C143			CK73HB1H471K	CHIP C 470PF K	
97	1A,2C		X42-3270-10	CORD ASSY(FPC(50PIN))		C144			CS77CPOJ100M	CHIP TNTL 10UF 6.3WV	
						C145			CK73HB1H471K	CHIP C 470PF K	
TX-RX UNIT (X57-7250-XX)											
-10 :K -11 :K2 -12 :K3 -13 :K4 -14 :K5 -15 :K6											
D800-803			B30-2171-05	LED	K3,K6	C147			CK73GB0J475K	CHIP C 4.7UF K	
D800,801			B30-2171-05	LED	K2,K5	C148			CK73HB1H471K	CHIP C 470PF K	
D806-809			B30-2171-05	LED	K3,K6	C149			CC73HCH1H150J	CHIP C 15PF J	K,K2,K3
D810-812			B30-2261-05	LED	K2,K3,K5	C149			CC73HCH1H390J	CHIP C 39PF J	K4,K5,K6
D810-812			B30-2261-05	LED	K6	C150			CC73HCH1H0R5B	CHIP C 0.5PF B	K,K2,K3
D901			B30-2019-05	LED(RE/GR)		C150			CC73HCH1H010B	CHIP C 1.0PF B	K4,K5,K6
C1			CK73HB1A104K	CHIP C 0.10UF K		C151			CC73HCH1H220J	CHIP C 22PF J	K,K2,K3
C2			CK73HB1C103K	CHIP C 0.010UF K		C151			CC73HCH1H270J	CHIP C 27PF J	K4,K5,K6
C3			CK73HB1A104K	CHIP C 0.10UF K		C152			CC73HCH1H2R5B	CHIP C 2.5PF B	
C5			CK73HB1A104K	CHIP C 0.10UF K		C153			CK73HB1H471K	CHIP C 470PF K	
C6 -8			CK73HB1H471K	CHIP C 470PF K		C154			CC73HCH1H0R5B	CHIP C 0.5PF B	
C10 ,11			CK73HB1A104K	CHIP C 0.10UF K		C155			CK73HB1H471K	CHIP C 470PF K	
C12			CK73HB1H471K	CHIP C 470PF K		C156			CC73GCH1H050B	CHIP C 5.0PF B	K,K2,K3
C13			CC73HCH1H470J	CHIP C 47PF J		C156			CC73GCH1H060B	CHIP C 6.0PF B	K4,K5,K6
C14			CK73HB1C103K	CHIP C 0.010UF K		C157			CC73GCH1H020B	CHIP C 2.0PF B	K,K2,K3
C15			CK73HB1A104K	CHIP C 0.10UF K		C157			CC73GCH1H050B	CHIP C 5.0PF B	K4,K5,K6
C17			CK73HB1A104K	CHIP C 0.10UF K		C158,159			CC73HCH1H470J	CHIP C 47PF J	K4,K5,K6
C18 ,19			CK73HB1H471K	CHIP C 470PF K		C159			CC73HCH1H470J	CHIP C 47PF J	K,K2,K3
C20			CK73HB1A104K	CHIP C 0.10UF K		C160,161			CC73GCH1H050B	CHIP C 5.0PF B	
C22			CK73HB1A104K	CHIP C 0.10UF K		C162			CC73HCH1H100B	CHIP C 10PF B	K4,K5,K6
C23			CK73HB1C103K	CHIP C 0.010UF K		C163			CC73HCH1H080B	CHIP C 8.0PF B	K,K2,K3
C24			CK73GB0J475K	CHIP C 4.7UF K		C163			CC73HCH1H120J	CHIP C 12PF J	K4,K5,K6
C25 -27			CK73HB1C103K	CHIP C 0.010UF K		C164			CC73GCH1H050B	CHIP C 5.0PF B	K4,K5,K6
C28			CK73GB0J475K	CHIP C 4.7UF K		C164			CC73GCH1H060B	CHIP C 6.0PF B	K,K2,K3
C29 ,30			CK73HB1C103K	CHIP C 0.010UF K		C165			CC73GCH1H040B	CHIP C 4.0PF B	
C32 -35			CK73HB1C103K	CHIP C 0.010UF K		C166-168			CK73HB1H471K	CHIP C 470PF K	
C38			CK73HB1C103K	CHIP C 0.010UF K		C169,170			CC73HCH1H020B	CHIP C 2.0PF B	K4,K5,K6
C101			CK73HB1A104K	CHIP C 0.10UF K		C170			CC73HCH1H020B	CHIP C 2.0PF B	K,K2,K3
C102,103			CC73HCH1H470J	CHIP C 47PF J		C171,172			CC73HCH1H0R5B	CHIP C 0.5PF B	
C105			CC73HCH1H470J	CHIP C 47PF J		C173			CC73HCH1H090B	CHIP C 9.0PF B	K4,K5,K6
C106,107			CK73HB1H471K	CHIP C 470PF K		C174			CC73HCH1H030B	CHIP C 3.0PF B	K,K2,K3
C108			CK73HB1A104K	CHIP C 0.10UF K		C174			CC73HCH1H060B	CHIP C 6.0PF B	K4,K5,K6
C109			CK73GB1E105K	CHIP C 1.0UF K		C175			CC73HCH1H040B	CHIP C 4.0PF B	K4,K5,K6
C110			CK73HB1H471K	CHIP C 470PF K		C176			CC73HCH1H020B	CHIP C 2.0PF B	K,K2,K3
C111			CK73GB1E105K	CHIP C 1.0UF K		C176			CC73HCH1H2R5B	CHIP C 2.5PF B	K4,K5,K6
C114,115			CK73HB1A104K	CHIP C 0.10UF K		C177			CC73HCH1H101J	CHIP C 100PF J	K4,K5,K6
C116,117			CK73HB1C103K	CHIP C 0.010UF K		C178,179			CK73HB1H471K	CHIP C 470PF K	
C118			CK73HB1H471K	CHIP C 470PF K		C180			CC73HCH1H040B	CHIP C 4.0PF B	K,K2,K3
C122			CC73HCH1H470J	CHIP C 47PF J		C180			CC73HCH1H100B	CHIP C 10PF B	K4,K5,K6
C125			CK73GB1C104K	CHIP C 0.10UF K		C182-185			CK73HB1H471K	CHIP C 470PF K	
C126			C93-0787-05	CERAMIC 0.1UF 50WV		C186			CK73HBOJ105K	CHIP C 1.0UF K	
C127			CK73HB1H471K	CHIP C 470PF K		C187			CC73HCH1H050B	CHIP C 5.0PF B	K,K2,K3
C128			CC73HCH1H470J	CHIP C 47PF J		C187			CC73HCH1H150J	CHIP C 15PF J	K4,K5,K6
C129			CK73HB1C103K	CHIP C 0.010UF K		C188			CK73GB1H471K	CHIP C 470PF K	
C130			CC73HCH1H470J	CHIP C 47PF J		C189,190			CC73HCH1H470J	CHIP C 47PF J	K4,K5,K6
						C191			CK73HB1H471K	CHIP C 470PF K	
						C200			CK73HB1C103K	CHIP C 0.010UF K	
						C201			CK73HB1H471K	CHIP C 470PF K	K4,K5,K6

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C201,202			CK73HB1H471K	CHIP C 470PF K	K,K2,K3	C270,271			CK73GB1H471K	CHIP C 470PF K	
C202			CC73HCH1H220J	CHIP C 22PF J	K4,K5,K6	C273			CK73HB1H471K	CHIP C 470PF K	
C203,204			CC73HCH1H070B	CHIP C 7.0PF B	K4,K5,K6	C277			CK73HB1H471K	CHIP C 470PF K	
C205,206			CK73HB1H471K	CHIP C 470PF K		C278			CC73GCH1H070B	CHIP C 7.0PF B	K4,K5,K6
C207			CC73GCH1H070B	CHIP C 7.0PF B		C278			CC73GCH1H090D	CHIP C 9.0PF D	K,K2,K3
C209,210			CK73HB1H471K	CHIP C 470PF K		C280			CK73HB1H471K	CHIP C 470PF K	
C215,216			CK73HB1H471K	CHIP C 470PF K		C281			CC73GCH1H070B	CHIP C 7.0PF B	K4,K5,K6
C218			CC73HCH1H050B	CHIP C 5.0PF B	K,K2,K3	C281-283			CC73GCH1H090D	CHIP C 9.0PF D	K,K2,K3
C218			CC73HCH1H060B	CHIP C 6.0PF B	K4,K5,K6	C282,283			CC73GCH1H150J	CHIP C 15PF J	K4,K5,K6
C219			CK73HB1C103K	CHIP C 0.010UF K		C284,285			CK73HB1H471K	CHIP C 470PF K	
C220			CK73HB1H471K	CHIP C 470PF K		C288			CC73HCH1H030B	CHIP C 3.0PF B	K,K2,K3
C221			CC73HCH1H150J	CHIP C 15PF J		C288			CC73HCH1H060B	CHIP C 6.0PF B	K4,K5,K6
C223			CK73HB1H471K	CHIP C 470PF K		C289			CC73GCH1H050B	CHIP C 5.0PF B	K4,K5,K6
C224			CC73GCH1H270J	CHIP C 27PF J	K,K2,K3	C289			CC73GCH1H2R5B	CHIP C 2.5PF B	K,K2,K3
C224			CC73GCH1H390J	CHIP C 39PF J	K4,K5,K6	C290			CC73HCH1H030B	CHIP C 3.0PF B	K,K2,K3
C225			CK73HB1H471K	CHIP C 470PF K	K,K2,K3	C290			CC73HCH1H060B	CHIP C 6.0PF B	K4,K5,K6
C226			CK73GB1H471K	CHIP C 470PF K		C291			CC73HCH1H040B	CHIP C 4.0PF B	
C227,228			CK73HB1H471K	CHIP C 470PF K	K4,K5,K6	C292			CC73GCH1H050B	CHIP C 5.0PF B	K4,K5,K6
C228			CK73HB1H471K	CHIP C 470PF K	K,K2,K3	C292			CC73GCH1H2R5B	CHIP C 2.5PF B	K,K2,K3
C229			CK73HB1C103K	CHIP C 0.010UF K		C293			CC73HCH1H040B	CHIP C 4.0PF B	
C230			CK73HB1H471K	CHIP C 470PF K		C295		*	C93-0937-05	CERAMIC 12PF 50WV	K,K2,K3
C231			CC73HCH1H101J	CHIP C 100PF J		C295		*	C93-0941-05	CERAMIC 18PF 50WV	K4,K5,K6
C232			CC73GCH1H220J	CHIP C 22PF J	K,K2,K3	C296		*	C93-0989-05	CERAMIC 8.2PF 50WV	K,K2,K3
C234,235			CK73HB1H471K	CHIP C 470PF K		C297		*	C93-0947-05	CERAMIC 33PF 50WV	K4,K5,K6
C237			CK73HB1C103K	CHIP C 0.010UF K		C299			CK73HB1H471K	CHIP C 470PF K	
C238			CK73GB1E105K	CHIP C 1.0UF K		C300			CK73GB1C104K	CHIP C 0.10UF K	
C239-242			CK73HB1H471K	CHIP C 470PF K		C302			CK73GB1E105K	CHIP C 1.0UF K	
C243		*	C93-0951-05	CERAMIC 47PF 50WV	K,K2,K3	C303			CK73GB1C104K	CHIP C 0.10UF K	
C243		*	C93-0955-05	CERAMIC 68PF 50WV	K4,K5,K6	C306,307			CC73GCH1H120G	CHIP C 12PF G	K,K2,K3
C244,245			CK73HB1H471K	CHIP C 470PF K	K4,K5,K6	C306,307			CC73GCH1H180J	CHIP C 18PF J	K4,K5,K6
C245			CK73HB1H471K	CHIP C 470PF K	K,K2,K3	C308			CK73HB1H471K	CHIP C 470PF K	
C246			CK73HB1C103K	CHIP C 0.010UF K		C309			CC73HCH1H150J	CHIP C 15PF J	K,K2,K3
C247			CK73HB1H471K	CHIP C 470PF K		C309			CC73HCH1H470J	CHIP C 47PF J	K4,K5,K6
C249			CK73GB1C104K	CHIP C 0.10UF K		C311			CC73GCH1H010B	CHIP C 1.0PF B	K,K2,K3
C250		*	C93-0945-05	CERAMIC 27PF 50WV	K,K2,K3	C311			CC73GCH1H1R5B	CHIP C 1.5PF B	K4,K5,K6
C252			CK73GB1H471K	CHIP C 470PF K		C312			CC73HCH1H040B	CHIP C 4.0PF B	
C253			CK73GB0J475K	CHIP C 4.7UF K		C313			CK73HB1H471K	CHIP C 470PF K	
C254			CK73HB1H471K	CHIP C 470PF K		C315			CC73GCH1H180J	CHIP C 18PF J	K4,K5,K6
C255		*	C93-0941-05	CERAMIC 18PF 50WV	K4,K5,K6	C315			CC73GCH1H390J	CHIP C 39PF J	K,K2,K3
C256		*	C93-0878-05	CERAMIC 2.0PF 100WV	K,K2,K3	C316			CC73HCH1H030B	CHIP C 3.0PF B	K,K2,K3
C256		*	C93-0989-05	CERAMIC 8.2PF 50WV	K4,K5,K6	C316			CC73HCH1H040B	CHIP C 4.0PF B	K4,K5,K6
C257			CC73GCH1H101J	CHIP C 100PF J	K,K2,K3	C317			CC73HCH1H150J	CHIP C 15PF J	K,K2,K3
C257,258			CK73GB1H471K	CHIP C 470PF K	K4,K5,K6	C317			CC73HCH1H470J	CHIP C 47PF J	K4,K5,K6
C258			CK73GB1H471K	CHIP C 470PF K	K,K2,K3	C318			CK73GB1H471K	CHIP C 470PF K	
C259			CK73HB1C103K	CHIP C 0.010UF K		C321-325			CK73HB1H471K	CHIP C 470PF K	
C260			CC73GCH1H070B	CHIP C 7.0PF B	K4,K5,K6	C327			CK73HBOJ105K	CHIP C 1.0UF K	
C260			CC73GCH1H090D	CHIP C 9.0PF D	K,K2,K3	C329,330			CK73HB1H471K	CHIP C 470PF K	
C261			CC73GCH1H020B	CHIP C 2.0PF B	K4,K5,K6	C332			CC73HCH1H220J	CHIP C 22PF J	K,K2,K3
C261			CC73GCH1H040B	CHIP C 4.0PF B	K,K2,K3	C332			CC73HCH1H270J	CHIP C 27PF J	K4,K5,K6
C262			CK73HB1H471K	CHIP C 470PF K		C333,334			CK73HB1H471K	CHIP C 470PF K	
C263			CC73HCH1H060B	CHIP C 6.0PF B	K,K2,K3	C335			CC73HCH1H050B	CHIP C 5.0PF B	K4,K5,K6
C263			CC73HCH1H100B	CHIP C 10PF B	K4,K5,K6	C335			CC73HCH1H090B	CHIP C 9.0PF B	K,K2,K3
C264			CC73HCH1H010B	CHIP C 1.0PF B		C336			CC73HCH1H070B	CHIP C 7.0PF B	K,K2,K3
C265			CC73HCH1H070B	CHIP C 7.0PF B	K,K2,K3	C336			CC73HCH1H120J	CHIP C 12PF J	K4,K5,K6
C265			CC73HCH1H150J	CHIP C 15PF J	K4,K5,K6	C337			CC73HCH1H220J	CHIP C 22PF J	K,K2,K3
C266			CC73HCH1H040B	CHIP C 4.0PF B	K4,K5,K6	C337			CC73HCH1H270J	CHIP C 27PF J	K4,K5,K6
C267			CC73HCH1H010B	CHIP C 1.0PF B		C338			CK73HB1H471K	CHIP C 470PF K	
C268			CC73HCH1H0R5B	CHIP C 0.5PF B	K,K2,K3	C339			CC73HCH1H030B	CHIP C 3.0PF B	K,K2,K3
C268			CC73HCH1H060B	CHIP C 6.0PF B	K4,K5,K6	C339			CC73HCH1H120J	CHIP C 12PF J	K4,K5,K6

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C340			CK73HB1H471K	CHIP C 470PF K		C421,422			CK73HB1A104K	CHIP C 0.10UF K	
C341			CC73HCH1H070B	CHIP C 7.0PF B	K,K2,K3	C423			CC73GCH1H060B	CHIP C 6.0PF B	
C341			CC73HCH1H150J	CHIP C 15PF J	K4,K5,K6	C450			CK73HBOJ105K	CHIP C 1.0UF K	
C342			CC73HCH1H220J	CHIP C 22PF J	K,K2,K3	C451,452			CC73HCH1H101J	CHIP C 100PF J	
						C453			CK73HB1A104K	CHIP C 0.10UF K	
C342			CC73HCH1H270J	CHIP C 27PF J	K4,K5,K6						
C344			CC73HCH1H040B	CHIP C 4.0PF B	K,K2,K3	C454,455			CK73GBOJ475K	CHIP C 4.7UF K	
C344			CC73HCH1H070B	CHIP C 7.0PF B	K4,K5,K6	C456			CK73GBOJ225K	CHIP C 2.2UF K	
C345			CK73HB1H471K	CHIP C 470PF K		C457,458			CK73HBOJ105K	CHIP C 1.0UF K	
C346			CC73HCH1H070B	CHIP C 7.0PF B	K,K2,K3	C459			CK73GBOJ225K	CHIP C 2.2UF K	
						C460,461			CK73HB1A104K	CHIP C 0.10UF K	
C346			CC73HCH1H080B	CHIP C 8.0PF B	K4,K5,K6						
C347			CC73HCH1H220J	CHIP C 22PF J	K,K2,K3	C462			CK73HB1H471K	CHIP C 470PF K	
C347			CC73HCH1H270J	CHIP C 27PF J	K4,K5,K6	C463			CK73HBOJ105K	CHIP C 1.0UF K	
C348			CC73HCH1H050B	CHIP C 5.0PF B		C464,465			CK73HB1A104K	CHIP C 0.10UF K	
C349			CC73HCH1H020B	CHIP C 2.0PF B		C466,467			CK73HBOJ105K	CHIP C 1.0UF K	
						C468,469			CK73HB1A104K	CHIP C 0.10UF K	
C350			CK73HB1H471K	CHIP C 470PF K							
C351			CC73HCH1H100B	CHIP C 10PF B	K4,K5,K6	C470,471			CC73HCH1H151J	CHIP C 150PF J	
C351,352			CC73HCH1H100B	CHIP C 10PF B	K,K2,K3	C472			CK73HB1A104K	CHIP C 0.10UF K	
C352			CC73HCH1H070B	CHIP C 7.0PF B	K4,K5,K6	C473			CK73HB1H471K	CHIP C 470PF K	
C354			CK73HB1H471K	CHIP C 470PF K		C474			CK73HB1A104K	CHIP C 0.10UF K	
						C475			CK73HB1C103K	CHIP C 0.010UF K	
C355			CC73HCH1H0R5B	CHIP C 0.5PF B							
C356			CC73HCH1H060B	CHIP C 6.0PF B		C476			CK73HBOJ105K	CHIP C 1.0UF K	
C357,358			CK73HB1H471K	CHIP C 470PF K	K4,K5,K6	C477			CK73HB1A104K	CHIP C 0.10UF K	
C358			CK73HB1H471K	CHIP C 470PF K	K,K2,K3	C478,479			CK73GBOJ475K	CHIP C 4.7UF K	
C360,361			CK73HB1H471K	CHIP C 470PF K		C480			CK73HB1C103K	CHIP C 0.010UF K	
						C481,482			CK73HB1A104K	CHIP C 0.10UF K	
C362			CC73GCH1H150J	CHIP C 15PF J	K4,K5,K6						
C362			CK73GB1H471K	CHIP C 470PF K	K,K2,K3	C483			CK73FBOJ106K	CHIP C 10UF K	
C363			CK73HB1H471K	CHIP C 470PF K		C484			CK73HB1A104K	CHIP C 0.10UF K	
C365,366			CK73HB1H471K	CHIP C 470PF K		C485			CK73HBOJ105K	CHIP C 1.0UF K	
C367,368			CK73HB1A104K	CHIP C 0.10UF K		C486			CK73HB1H102K	CHIP C 1000PF K	
						C487			CK73HB1A104K	CHIP C 0.10UF K	
C370			CK73HB1C103K	CHIP C 0.010UF K							
C372			CC73GCH1H150J	CHIP C 15PF J		C488			CK73HBOJ224K	CHIP C 0.22UF K	
C374			CC73HCH1H270J	CHIP C 27PF J		C493			CK73HBOJ224K	CHIP C 0.22UF K	
C378			CC73HCH1H120J	CHIP C 12PF J		C496			CK73HB1A104K	CHIP C 0.10UF K	
C379-382			CK73HB1C103K	CHIP C 0.010UF K		C497			CK73FBOJ106K	CHIP C 10UF K	
						C498			CK73HB1H122K	CHIP C 1200PF K	
C383			CC73HCH1H220J	CHIP C 22PF J							
C385			CC73HCH1H470J	CHIP C 47PF J		C499			CK73HB1A104K	CHIP C 0.10UF K	
C386			CC73HCH1H080B	CHIP C 8.0PF B		C501			CC73HCH1H101J	CHIP C 100PF J	
C387			CK73HB1H471K	CHIP C 470PF K		C502			CK73HB1A104K	CHIP C 0.10UF K	
C388			CK73HB1C103K	CHIP C 0.010UF K		C504			CK73GB1A105K	CHIP C 1.0UF K	
						C505			CK73FBOJ106K	CHIP C 10UF K	
C389			CC73HCH1H470J	CHIP C 47PF J							
C390			CC73HCH1H220J	CHIP C 22PF J		C506			CK73HB1C103K	CHIP C 0.010UF K	
C391			CC73HCH1H820J	CHIP C 82PF J		C507			CK73HB1A104K	CHIP C 0.10UF K	
C392			CC73HCH1H470J	CHIP C 47PF J		C508			CK73HB1C103K	CHIP C 0.010UF K	
C393-396			CK73HB1A104K	CHIP C 0.10UF K		C509			CK73GBOJ475K	CHIP C 4.7UF K	
						C510			CK73HBOJ105K	CHIP C 1.0UF K	
C397			CC73HCH1H680J	CHIP C 68PF J							
C398			CK73HB1A104K	CHIP C 0.10UF K		C511			CK73HB1C103K	CHIP C 0.010UF K	
C399			CK73HB1H102K	CHIP C 1000PF K		C512			CC73HCH1H151J	CHIP C 150PF J	
C400-404			CK73HB1A104K	CHIP C 0.10UF K		C513			CK73HB1A104K	CHIP C 0.10UF K	
C405,406			CK73HB1C103K	CHIP C 0.010UF K		C515			CK73GBOJ475K	CHIP C 4.7UF K	
						C517			CK73HB1H272K	CHIP C 2700PF K	
C407			CK73FBOJ106K	CHIP C 10UF K							
C408,409			CK73HB1A104K	CHIP C 0.10UF K		C519			CC73HCH1H101J	CHIP C 100PF J	
C410			CC73HCH1H390J	CHIP C 39PF J		C520			CK73HB1C103K	CHIP C 0.010UF K	
C411,412			CC73HCH1H151J	CHIP C 150PF J		C522,523			CK73HB1C103K	CHIP C 0.010UF K	
C413			CK73HB1C223K	CHIP C 0.022UF K		C524			CK73HB1A104K	CHIP C 0.10UF K	
						C526			CC73HCH1H101J	CHIP C 100PF J	
C414			CC73HCH1H101J	CHIP C 100PF J							
C415			CK73HB1H102K	CHIP C 1000PF K		C527,528			CK73HB1A104K	CHIP C 0.10UF K	
C416			CK73HB1A104K	CHIP C 0.10UF K		C529			CK73HB1C103K	CHIP C 0.010UF K	
C418,419			CK73HB1A104K	CHIP C 0.10UF K		C530-532			CK73HB1A104K	CHIP C 0.10UF K	
C420			CK73GBOJ225K	CHIP C 2.2UF K		C533			CK73FBOJ106K	CHIP C 10UF K	
						C534,535			CK73HB1A104K	CHIP C 0.10UF K	

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C536			CK73HB0J105K	CHIP C 1.0UF K		C734			CK73HB1H471K	CHIP C 470PF K	
C537			CK73HB1A104K	CHIP C 0.10UF K		C736,737			CK73GB1C474K	CHIP C 0.47UF K	
C538			CK73HB0J105K	CHIP C 1.0UF K		C738-741			CK73HB1H471K	CHIP C 470PF K	
C539			CC73HCH1H101J	CHIP C 100PF J		C742,743		*	CK73EB1E475K	CHIP C 4.7UF K	
C540			CK73HB1A104K	CHIP C 0.10UF K		C744			CK73HB1C103K	CHIP C 0.010UF K	
C541			CK73FB0J106K	CHIP C 10UF K		C745,746		*	CK73EB1E475K	CHIP C 4.7UF K	
C542			CK73HB1A104K	CHIP C 0.10UF K		C747			CK73GB1C104K	CHIP C 0.10UF K	
C543			CC73HCH1H101J	CHIP C 100PF J		C748			CK73GB1E105K	CHIP C 1.0UF K	
C602-605			CK73HB1H471K	CHIP C 470PF K		C749,750			CK73GB1C104K	CHIP C 0.10UF K	
C606			CK73GB1C104K	CHIP C 0.10UF K		C751			CK73FB0J475K	CHIP C 4.7UF K	
C607			CK73HB1H471K	CHIP C 470PF K		C752,753			CK73GB1E105K	CHIP C 1.0UF K	
C608			CK73FB0J106K	CHIP C 10UF K		C754			CK73HB1C103K	CHIP C 0.010UF K	
C609			CK73GB1E105K	CHIP C 1.0UF K		C755		*	CK73EB1E475K	CHIP C 4.7UF K	
C610			CK73GB1C104K	CHIP C 0.10UF K		C757			CK73HB1C103K	CHIP C 0.010UF K	
C612,613			CK73HB1H471K	CHIP C 470PF K		C759			CK73HB1A104K	CHIP C 0.10UF K	
C614-617			CK73GB1E105K	CHIP C 1.0UF K		C760-762			CK73HB1H471K	CHIP C 470PF K	
C619-624			CC73HCH1H101J	CHIP C 100PF J		C763			CK73HB1A104K	CHIP C 0.10UF K	
C625			CK73HB1H332K	CHIP C 3300PF K		C764			CC73HCH1H820J	CHIP C 82PF J	
C626			CK73HB1H471K	CHIP C 470PF K		C765			CK73GB1E105K	CHIP C 1.0UF K	
C627			CC73HCH1H101J	CHIP C 100PF J		C766			CK73FB0J475K	CHIP C 4.7UF K	
C629,630			CC73HCH1H101J	CHIP C 100PF J		C767			CC73HCH1E181J	CHIP C 180PF J	
C631			CK73HB1H471K	CHIP C 470PF K		C768			CK73HB1H471K	CHIP C 470PF K	
C632			CC73HCH1H101J	CHIP C 100PF J		C769			CK73GB1E105K	CHIP C 1.0UF K	
C633,634			CK73HB1H471K	CHIP C 470PF K		C770			CK73HB1H471K	CHIP C 470PF K	
C635			CC73HCH1H101J	CHIP C 100PF J		C771			CC73HCH1H220J	CHIP C 22PF J	
C636-638			CK73HB1H471K	CHIP C 470PF K		C772			CK73HB1H471K	CHIP C 470PF K	
C639			CK73HB1A104K	CHIP C 0.10UF K		C773,774			CK73GB1E105K	CHIP C 1.0UF K	
C640			CK73HB1H471K	CHIP C 470PF K		C775			CK73HB1A104K	CHIP C 0.10UF K	
C641-644			CK73HB1A104K	CHIP C 0.10UF K		C776			C92-0822-05	CHIP TNL 33UF 10WV	
C645			CK73HB1C103K	CHIP C 0.010UF K		C777-779			CK73GB1E105K	CHIP C 1.0UF K	
C646			CK73HB1A104K	CHIP C 0.10UF K		C783-785			CK73HB1H471K	CHIP C 470PF K	
C648-650			CK73HB1A104K	CHIP C 0.10UF K		C788			CK73FB0J106K	CHIP C 10UF K	
C651			CC73HCH1H101J	CHIP C 100PF J		C790			CK73HB1H471K	CHIP C 470PF K	
C653,654			CC73HCH1H101J	CHIP C 100PF J		C795			CK73GB1E105K	CHIP C 1.0UF K	
C657			CC73HCH1H101J	CHIP C 100PF J		C800-803			CK73GB1C474K	CHIP C 0.47UF K	K2,K3,K5
C660,661			CC73HCH1H101J	CHIP C 100PF J		C800-803			CK73GB1C474K	CHIP C 0.47UF K	K6
C664,665			CC73HCH1H101J	CHIP C 100PF J		C805			CK73HB1C103K	CHIP C 0.010UF K	K2,K3,K5
C668,669			CC73HCH1H101J	CHIP C 100PF J		C805			CK73HB1C103K	CHIP C 0.010UF K	K6
C674			CK73HB1H471K	CHIP C 470PF K		C807			CK73HB1H471K	CHIP C 470PF K	K2,K3,K5
C675			CK73HB1H102K	CHIP C 1000PF K		C807			CK73HB1H471K	CHIP C 470PF K	K6
C677			CK73HB1A104K	CHIP C 0.10UF K		C808			CK73HB1C103K	CHIP C 0.010UF K	K2,K3,K5
C700			CK73HB1A104K	CHIP C 0.10UF K		C808			CK73HB1C103K	CHIP C 0.010UF K	K6
C701			CK73HB1H471K	CHIP C 470PF K		C809-812			CK73GB1E105K	CHIP C 1.0UF K	K2,K3,K5
C702			CK73FB0J106K	CHIP C 10UF K		C809-812			CK73GB1E105K	CHIP C 1.0UF K	K6
C703			CK73HB1H471K	CHIP C 470PF K		C814			CK73HB1H471K	CHIP C 470PF K	K2,K3,K5
C704			CK73FB0J106K	CHIP C 10UF K		C814			CK73HB1H471K	CHIP C 470PF K	K6
C707			CK73HB1A104K	CHIP C 0.10UF K		C825			CK73HB1H471K	CHIP C 470PF K	K2,K3,K5
C708,709			CK73GB1A105K	CHIP C 1.0UF K		C825			CK73HB1H471K	CHIP C 470PF K	K6
C712,713			CK73GB0J225K	CHIP C 2.2UF K		C826			CK73HB1C103K	CHIP C 0.010UF K	
C716,717			CK73HB1A104K	CHIP C 0.10UF K		C827			CC73HCH1H101J	CHIP C 100PF J	K2,K3,K5
C718,719			CK73HB1H471K	CHIP C 470PF K		C827			CC73HCH1H101J	CHIP C 100PF J	K6
C724			CK73HB0J105K	CHIP C 1.0UF K		C828			CK73HB1A104K	CHIP C 0.10UF K	K2,K3,K5
C725			CK73GB1E105K	CHIP C 1.0UF K		C828			CK73HB1A104K	CHIP C 0.10UF K	K6
C726			CK73HB1A104K	CHIP C 0.10UF K		C829			CK73HB1C103K	CHIP C 0.010UF K	
C727			CK73GB0J225K	CHIP C 2.2UF K		C830-838			CK73HB1E472K	CHIP C 4700PF K	
C728			CC73HCH1H101J	CHIP C 100PF J		C840			CK73HB1C103K	CHIP C 0.010UF K	
C729			CK73HB1A104K	CHIP C 0.10UF K		C841			CK73HB1E472K	CHIP C 4700PF K	
C730			CK73GB1C474K	CHIP C 0.47UF K		C842			CK73GB1E223K	CHIP C 0.022UF K	K2,K3,K5
C731			CK73HB1A104K	CHIP C 0.10UF K		C842			CK73GB1E223K	CHIP C 0.022UF K	K6
C732			CK73GB1E223K	CHIP C 0.022UF K							

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
CN204,205			E04-0403-05	PIN SOCKET		L200,201		*	L41-1875-45	SMALL FIXED INDUCTOR(18NH)	K4,K5,K6
CN301		*	E23-0762-05	TERMINAL		L201			L41-1575-45	SMALL FIXED INDUCTOR(15NH)	K,K2,K3
CN601		*	E40-6586-05	SOCKET FOR PIN ASSY		L203			L41-1575-45	SMALL FIXED INDUCTOR(15NH)	K,K2,K3
CN606			E40-6453-05	FLAT CABLE CONNECTOR		L203		*	L41-1875-45	SMALL FIXED INDUCTOR(18NH)	K4,K5,K6
CN609			E40-6357-05	PIN ASSY		L204			L92-0140-05	CHIP FERRITE	
CN612			E40-6422-05	SOCKET FOR PIN ASSY		L206		*	L41-6865-45	SMALL FIXED INDUCTOR(6.8NH)	K,K2,K3
CN613			E41-1634-05	FLAT CABLE CONNECTOR	K2,K3,K5	L208			L92-0149-05	CHIP FERRITE	
CN613			E41-1634-05	FLAT CABLE CONNECTOR	K6	L209		*	L41-1875-45	SMALL FIXED INDUCTOR(18NH)	K,K2,K3
CN700			E40-6421-05	PIN ASSY		L209		*	L41-3975-45	SMALL FIXED INDUCTOR(39NH)	K4,K5,K6
CN713		*	E40-6467-05	FLAT CABLE CONNECTOR		L210			L41-1575-45	SMALL FIXED INDUCTOR(15NH)	K,K2,K3
CN800			E41-1634-05	FLAT CABLE CONNECTOR	K2,K3,K5	L211			L34-4566-05	AIR-CORE COIL	
CN800			E41-1634-05	FLAT CABLE CONNECTOR	K6	L212			L92-0149-05	CHIP FERRITE	
CN802			E40-6337-05	FLAT CABLE CONNECTOR	K2,K3,K5	L213			L41-8285-14	SMALL FIXED INDUCTOR(820NH)	
CN802			E40-6337-05	FLAT CABLE CONNECTOR	K6	L214-216			L34-4564-05	AIR-CORE COIL	
CN803			E40-6388-05	FLAT CABLE CONNECTOR		L217,218			L92-0446-05	BEADS CORE	
CN804			E40-5664-05	FLAT CABLE CONNECTOR		L219,220			L34-4564-05	AIR-CORE COIL	
CN902			E40-6391-05	FLAT CABLE CONNECTOR		L221,222			L34-4563-05	AIR-CORE COIL	
CN903		*	E40-6464-05	FLAT CABLE CONNECTOR		L223			L41-8285-14	SMALL FIXED INDUCTOR(820NH)	
CN923			E40-6358-05	SOCKET FOR PIN ASSY		L225			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	K4,K5,K6
CN941			E04-0403-05	PIN SOCKET		L227		*	L41-1075-16	SMALL FIXED INDUCTOR(10NH)	K4,K5,K6
F600			F53-0372-05	FUSE(3.15A)		L228		*	L41-1875-45	SMALL FIXED INDUCTOR(18NH)	
F601			F53-0360-05	FUSE(0.25A)		L300			L41-1878-14	SMALL FIXED INDUCTOR(18NH)	K,K2,K3
CN702			J19-5386-05	HOLDER		L300			L41-2778-14	SMALL FIXED INDUCTOR(27NH)	K4,K5,K6
CD300			L79-1850-05	TUNING COIL		L301,302			L41-3978-14	SMALL FIXED INDUCTOR(39NH)	
CF300			L72-1017-05	CERAMIC FILTER		L303			L41-4778-14	SMALL FIXED INDUCTOR(47NH)	K,K2,K3
CF301			L72-1009-05	CERAMIC FILTER		L303			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	K4,K5,K6
CF302			L72-1021-05	CERAMIC FILTER		L304			L40-4763-92	SMALL FIXED INDUCTOR(4.7NH)	K4,K5,K6
CF303			L72-1017-05	CERAMIC FILTER		L306			L41-1085-45	SMALL FIXED INDUCTOR(100NH)	K4,K5,K6
L1			L92-0446-05	BEADS CORE		L306		*	L41-1285-45	SMALL FIXED INDUCTOR(120NH)	K,K2,K3
L2 -8			L92-0163-05	BEADS CORE		L307			L92-0446-05	BEADS CORE	
L9			L92-0446-05	BEADS CORE		L308		*	L41-5675-45	SMALL FIXED INDUCTOR(56NH)	K,K2,K3
L10			L92-0163-05	BEADS CORE		L308		*	L41-8275-45	SMALL FIXED INDUCTOR(82NH)	K4,K5,K6
L11			L92-0446-05	BEADS CORE		L309			L41-1878-14	SMALL FIXED INDUCTOR(18NH)	K,K2,K3
L12,13			L92-0162-05	BEADS CORE		L309-312			L41-2778-14	SMALL FIXED INDUCTOR(27NH)	K4,K5,K6
L100			L92-0446-05	BEADS CORE		L310			L41-2278-14	SMALL FIXED INDUCTOR(22NH)	K,K2,K3
L102,103			L40-1001-86	SMALL FIXED INDUCTOR(10UH)		L311,312			L41-1878-14	SMALL FIXED INDUCTOR(18NH)	K,K2,K3
L104-106			L40-2285-92	SMALL FIXED INDUCTOR(220NH)		L313			L40-1575-57	SMALL FIXED INDUCTOR(15.0NH)	
L107			L92-0446-05	BEADS CORE		L314			L40-1875-57	SMALL FIXED INDUCTOR(18.0NH)	
L108,109			L40-2285-92	SMALL FIXED INDUCTOR(220NH)		L315			L40-2275-57	SMALL FIXED INDUCTOR(22.0NH)	K,K2,K3
L111-113			L40-2285-92	SMALL FIXED INDUCTOR(220NH)		L316,317			L39-1272-15	TOROIDAL COIL	
L114			L33-0744-05	SMALL FIXED INDUCTOR	K4,K5,K6	L318			L92-0163-05	BEADS CORE	
L114,115			L33-0744-05	SMALL FIXED INDUCTOR	K,K2,K3	L319			L39-1272-15	TOROIDAL COIL	
L115			L33-0745-05	SMALL FIXED INDUCTOR	K4,K5,K6	L321,322			L41-5685-14	SMALL FIXED INDUCTOR(560NH)	
L116,117			L40-2285-92	SMALL FIXED INDUCTOR(220NH)		L323			L40-6881-37	SMALL FIXED INDUCTOR(0.680UH)	
L118			L40-3368-71	SMALL FIXED INDUCTOR(3.3NH)	K4,K5,K6	L324			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	
L119			L40-1868-71	SMALL FIXED INDUCTOR(1.8NH)	K4,K5,K6	L325			L40-1091-86	SMALL FIXED INDUCTOR(1.0UH)	
L119			L40-2768-71	SMALL FIXED INDUCTOR(2.7NH)	K,K2,K3	L326			L41-1585-14	SMALL FIXED INDUCTOR(150NH)	
L120,121			L40-2285-92	SMALL FIXED INDUCTOR(220NH)		L327			L41-1085-14	SMALL FIXED INDUCTOR(100NH)	
L122			L92-0446-05	BEADS CORE	K4,K5,K6	L450-452			L92-0446-05	BEADS CORE	
L123			L40-2275-71	SMALL FIXED INDUCTOR(22NH)	K4,K5,K6	L600			L92-0136-05	CHIP FERRITE	
L124			L40-1875-71	SMALL FIXED INDUCTOR(18NH)		L601,602			L92-0408-05	CHIP FERRITE	
L125			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	K4,K5,K6	L603,604			L92-0163-05	BEADS CORE	
L125			L40-2275-71	SMALL FIXED INDUCTOR(22NH)	K,K2,K3	L605			L92-0140-05	CHIP FERRITE	
L126,127			L40-1075-71	SMALL FIXED INDUCTOR(10NH)	K4,K5,K6	L606,607			L92-0446-05	BEADS CORE	
L127			L40-1075-71	SMALL FIXED INDUCTOR(10NH)	K,K2,K3	L608			L92-0161-05	BEADS CORE	
L128			L40-2275-71	SMALL FIXED INDUCTOR(22NH)	K,K2,K3	L609			L92-0138-05	CHIP FERRITE	
L128			L40-2775-71	SMALL FIXED INDUCTOR(27NH)	K4,K5,K6	L610			L92-0446-05	BEADS CORE	
L200		*	L41-2275-45	SMALL FIXED INDUCTOR(22NH)	K,K2,K3	L611,612			L92-0408-05	CHIP FERRITE	
						L613			L92-0149-05	CHIP FERRITE	
						L614			L92-0140-05	CHIP FERRITE	

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L615			L92-0161-05	BEADS CORE		R62			RK73HB1J104J	CHIP R 100K J 1/16W	
L616-628			L92-0446-05	BEADS CORE		R63			RK73HB1J473J	CHIP R 47K J 1/16W	
L629			L92-0163-05	BEADS CORE		R66			RK73HB1J104J	CHIP R 100K J 1/16W	
L700			L92-0149-05	CHIP FERRITE		R67			RK73HB1J473J	CHIP R 47K J 1/16W	
L701-704			L92-0408-05	CHIP FERRITE		R69 -76			RK73HB1J473J	CHIP R 47K J 1/16W	
L705,706			L33-1462-05	SMALL FIXED INDUCTOR		R77			RK73HB1J105J	CHIP R 1.0M J 1/16W	
L707			L33-1469-05	SMALL FIXED INDUCTOR		R101			RK73HB1J474J	CHIP R 470K J 1/16W	
L708,709			L92-0163-05	BEADS CORE		R102			RK73HB1J473J	CHIP R 47K J 1/16W	
L800-805			L92-0446-05	BEADS CORE	K2,K3,K5	R105			RK73HB1J470J	CHIP R 47 J 1/16W	
L800-805			L92-0446-05	BEADS CORE	K6	R106			RK73HB1J101J	CHIP R 100 J 1/16W	
L803-805			L92-0446-05	BEADS CORE	K,K4	R109			RK73HB1J102J	CHIP R 1.0K J 1/16W	
L807		*	L33-1494-05	SMALL FIXED INDUCTOR		R110			RK73HB1J104J	CHIP R 100K J 1/16W	
X1			L77-1802-05	CRYSTAL RESONATOR(32768HZ)		R111			RK73HB1J101J	CHIP R 100 J 1/16W	
X100		*	L77-3013-05	TCXO(16.8MHZ)		R112			RK73HB1J100J	CHIP R 10 J 1/16W	
X300			L77-1961-05	VCXO(16.8MHZ)		R113			RK73HB1J474J	CHIP R 470K J 1/16W	
X450			L77-1962-05	VCXO(18.432MHZ)		R114			RK73HH1J184D	CHIP R 180K D 1/16W	
XF300			L71-0551-45	MCF(49.95MHZ)		R115			RK73HB1J100J	CHIP R 10 J 1/16W	
CP1			R90-0743-05	MULTIPLE RESISTOR		R116			RK73HH1J473D	CHIP R 47K D 1/16W	
CP2			R90-0745-05	MULTIPLE RESISTOR		R117			RK73HB1J183J	CHIP R 18K J 1/16W	
CP3 -5			R90-0740-05	MULTIPLE RESISTOR		R118			RK73HB1J332J	CHIP R 3.3K J 1/16W	
CP6 ,7			R90-0741-05	MULTIPLE RESISTOR		R119			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CP8 -12			R90-0740-05	MULTIPLE RESISTOR		R120		*	RK73HB1J106J	CHIP R 10M J 1/16W	
CP13-16			R90-0743-05	MULTIPLE RESISTOR		R121			RK73HB1J122J	CHIP R 1.2K J 1/16W	
CP100,101			R90-0741-05	MULTIPLE RESISTOR		R122			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R3			RK73HB1J473J	CHIP R 47K J 1/16W		R123,124			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R5			RK73HB1J474J	CHIP R 470K J 1/16W		R125			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R7			RK73HB1J473J	CHIP R 47K J 1/16W		R127			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R8			RK73HB1J103J	CHIP R 10K J 1/16W		R128			RK73HB1J470J	CHIP R 47 J 1/16W	
R9			RK73HB1J104J	CHIP R 100K J 1/16W		R129			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R10			RK73HB1J473J	CHIP R 47K J 1/16W		R130			RK73HB1J104J	CHIP R 100K J 1/16W	
R11 -14			RK73HB1J474J	CHIP R 470K J 1/16W		R131			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R15			RK73HB1J104J	CHIP R 100K J 1/16W		R132,133			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R16			RK73HB1J474J	CHIP R 470K J 1/16W		R134			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R17			RK73HB1J124J	CHIP R 120K J 1/16W		R135			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R18 ,19			RK73HB1J100J	CHIP R 10 J 1/16W		R136			RK73HB1J223J	CHIP R 22K J 1/16W	K,K2,K3
R20			RK73GB2A000J	CHIP R 0.0 J 1/10W		R136			RK73HB1J333J	CHIP R 33K J 1/16W	K4,K5,K6
R21			RK73HB1J473J	CHIP R 47K J 1/16W		R137			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R22			RK73HH1J224D	CHIP R 220K D 1/16W		R138			RK73HB1J104J	CHIP R 100K J 1/16W	
R23			RK73HH1J104D	CHIP R 100K D 1/16W		R139			RK73HB1J474J	CHIP R 470K J 1/16W	
R24			RK73HB1J103J	CHIP R 10K J 1/16W		R140			RK73HB1J473J	CHIP R 47K J 1/16W	
R26			RK73HB1J103J	CHIP R 10K J 1/16W		R141			RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K2,K3
R27			RK73HB1J102J	CHIP R 1.0K J 1/16W		R142,143			RK73HB1J473J	CHIP R 47K J 1/16W	K4,K5,K6
R28 ,29			RK73HB1J473J	CHIP R 47K J 1/16W		R144			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R31 ,32			RK73HB1J474J	CHIP R 470K J 1/16W		R145			RK73HB1J104J	CHIP R 100K J 1/16W	
R33			RK73HB1J473J	CHIP R 47K J 1/16W		R146			RK73HB1J221J	CHIP R 220 J 1/16W	K,K2,K3
R34			RK73HB1J474J	CHIP R 470K J 1/16W		R146,147			RK73HB1J221J	CHIP R 220 J 1/16W	K4,K5,K6
R35			RK73HB1J473J	CHIP R 47K J 1/16W		R147			RK73HB1J271J	CHIP R 270 J 1/16W	K,K2,K3
R38 ,39			RK73HB1J471J	CHIP R 470 J 1/16W		R148			RK73HB1J220J	CHIP R 22 J 1/16W	
R40 -45			RK73HB1J101J	CHIP R 100 J 1/16W		R149			RK73HB1J154J	CHIP R 150K J 1/16W	
R46			RK73HB1J473J	CHIP R 47K J 1/16W		R150			RK73HB1J101J	CHIP R 100 J 1/16W	
R47			RK73HB1J101J	CHIP R 100 J 1/16W		R151			RK73HB1J560J	CHIP R 56 J 1/16W	
R48			RK73HB1J000J	CHIP R 0.0 J 1/16W		R152			RK73HB1J220J	CHIP R 22 J 1/16W	K,K2,K3
R49 ,50			RK73HB1J101J	CHIP R 100 J 1/16W		R153			RK73HB1J101J	CHIP R 100 J 1/16W	
R51			RK73HB1J474J	CHIP R 470K J 1/16W		R155			RK73HB1J270J	CHIP R 27 J 1/16W	K4,K5,K6
R52			RK73HB1J104J	CHIP R 100K J 1/16W		R155			RK73HB1J390J	CHIP R 39 J 1/16W	K,K2,K3
R53 -56			RK73HB1J101J	CHIP R 100 J 1/16W		R156			RK73HB1J151J	CHIP R 150 J 1/16W	K,K2,K3
R57			RK73HB1J474J	CHIP R 470K J 1/16W		R156			RK73HB1J181J	CHIP R 180 J 1/16W	K4,K5,K6
R59			RK73HB1J474J	CHIP R 470K J 1/16W		R157,158			RK73HB1J473J	CHIP R 47K J 1/16W	K4,K5,K6
						R159			RK73HB1J224J	CHIP R 220K J 1/16W	K,K2,K3

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R160			RK73HB1J151J	CHIP R 150 J 1/16W	K,K2,K3	R247			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R160			RK73HB1J181J	CHIP R 180 J 1/16W	K4,K5,K6	R249			RK73GB2A000J	CHIP R 0.0 J 1/10W	K,K2,K3
						R251			RK73HB1J104J	CHIP R 100K J 1/16W	
R162			RK73HB1J103J	CHIP R 10K J 1/16W							
R163			RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K2,K3	R252			RK73HB1J183J	CHIP R 18K J 1/16W	
R164			RK73HB1J103J	CHIP R 10K J 1/16W	K,K2,K3	R254,255			RK73HB1J103J	CHIP R 10K J 1/16W	
R164,165			RK73HB1J103J	CHIP R 10K J 1/16W	K4,K5,K6	R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R166			RK73HB1J331J	CHIP R 330 J 1/16W		R258			RK73GB2A272J	CHIP R 2.7K J 1/10W	
						R259,260			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R167			RK73HB1J221J	CHIP R 220 J 1/16W							
R170			RK73HB1J000J	CHIP R 0.0 J 1/16W		R261			RK73HB1J101J	CHIP R 100 J 1/16W	
R172			RK73HB1J222J	CHIP R 2.2K J 1/16W		R262			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R173		*	RK73HB1J106J	CHIP R 10M J 1/16W		R263			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R174,175			RK73HB1J271J	CHIP R 270 J 1/16W	K4,K5,K6	R264			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R300			RK73HB1J103J	CHIP R 10K J 1/16W	
R175			RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K2,K3						
R176			RK73FB2B000J	CHIP R 0.0 J 1/8W		R301			RK73HB1J104J	CHIP R 100K J 1/16W	
R177			RK73HB1J104J	CHIP R 100K J 1/16W		R302			RK73HB1J564J	CHIP R 560K J 1/16W	
R178			RK73HB1J560J	CHIP R 56 J 1/16W		R303,304			RK73HB1J103J	CHIP R 10K J 1/16W	
R200			RK73HB1J332J	CHIP R 3.3K J 1/16W		R305			RK73HB1J473J	CHIP R 47K J 1/16W	
						R306			RK73HB1J104J	CHIP R 100K J 1/16W	
R201			RK73HB1J152J	CHIP R 1.5K J 1/16W	K,K2,K3						
R201			RK73HB1J182J	CHIP R 1.8K J 1/16W	K4,K5,K6	R307			RK73HB1J274J	CHIP R 270K J 1/16W	
R202			RK73HB1J472J	CHIP R 4.7K J 1/16W		R308			RK73HB1J103J	CHIP R 10K J 1/16W	
R203			RK73HB1J330J	CHIP R 33 J 1/16W		R309,310			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R204			RK73HB1J331J	CHIP R 330 J 1/16W		R312			RK73HB1J104J	CHIP R 100K J 1/16W	
						R313			RK73HB1J473J	CHIP R 47K J 1/16W	K4,K5,K6
R205			RK73HB1J220J	CHIP R 22 J 1/16W							
R211			RK73HB1J331J	CHIP R 330 J 1/16W		R313			RK73HB1J683J	CHIP R 68K J 1/16W	K,K2,K3
R212,213			RK73HB1J104J	CHIP R 100K J 1/16W		R314			RK73HB1J104J	CHIP R 100K J 1/16W	
R214			RK73HB1J181J	CHIP R 180 J 1/16W	K,K2,K3	R316			RK73HB1J121J	CHIP R 120 J 1/16W	K,K2,K3
R214			RK73HB1J271J	CHIP R 270 J 1/16W	K4,K5,K6	R316			RK73HB1J560J	CHIP R 56 J 1/16W	K4,K5,K6
						R317			RK73HB1J220J	CHIP R 22 J 1/16W	K4,K5,K6
R215			RK73HB1J180J	CHIP R 18 J 1/16W	K4,K5,K6						
R215			RK73HB1J330J	CHIP R 33 J 1/16W	K,K2,K3	R317			RK73HB1J270J	CHIP R 27 J 1/16W	K,K2,K3
R216			RK73HB1J181J	CHIP R 180 J 1/16W	K,K2,K3	R318-321			RK73HB1J104J	CHIP R 100K J 1/16W	
R216			RK73HB1J271J	CHIP R 270 J 1/16W	K4,K5,K6	R322			RK73HB1J271J	CHIP R 270 J 1/16W	
R217			RK73HB1J101J	CHIP R 100 J 1/16W		R323			RK73HB1J220J	CHIP R 22 J 1/16W	
						R324,325			RK73HB1J271J	CHIP R 270 J 1/16W	
R218			RK73HB1J223J	CHIP R 22K J 1/16W							
R219			RK73HB1J103J	CHIP R 10K J 1/16W		R326			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R220			RK73EB2HR22F	CHIP R 0.22 F 1/2W		R327			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R221			RK73GB2A220J	CHIP R 22 J 1/10W	K4,K5,K6	R328			RK73HB1J100J	CHIP R 10 J 1/16W	
R221			RK73GB2A470J	CHIP R 47 J 1/10W	K,K2,K3	R329,330			RK73FB2B000J	CHIP R 0.0 J 1/8W	
						R333			RK73HH1J104D	CHIP R 100K D 1/16W	
R222			RK73EB2HR22F	CHIP R 0.22 F 1/2W							
R223			RK73HB1J473J	CHIP R 47K J 1/16W		R334			RK73HH1J473D	CHIP R 47K D 1/16W	
R224-226			RK73HH1J154D	CHIP R 150K D 1/16W		R335			RK73HB1J681J	CHIP R 680 J 1/16W	
R227			RK73HB1J220J	CHIP R 22 J 1/16W		R336,337			RK73HB1J470J	CHIP R 47 J 1/16W	
R228			RK73HB1J103J	CHIP R 10K J 1/16W		R338			RK73HB1J221J	CHIP R 220 J 1/16W	
						R339			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R229			RK73HH1J154D	CHIP R 150K D 1/16W							
R230			RK73HB1J333J	CHIP R 33K J 1/16W		R340			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R231,232			RK73HH1J154D	CHIP R 150K D 1/16W		R341			RK73HB1J470J	CHIP R 47 J 1/16W	
R233			RK73GB2A000J	CHIP R 0.0 J 1/10W	K4,K5,K6	R342			RK73HB1J684J	CHIP R 680K J 1/16W	
R233		*	RK73GB2A1R0J	CHIP R 1.0 J 1/10W	K,K2,K3	R343,344			RK73HB1J392J	CHIP R 3.9K J 1/16W	
						R347			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R234			RK73HB1J103J	CHIP R 10K J 1/16W							
R235			RK73HB1J105J	CHIP R 1.0M J 1/16W		R348,349			RK73HB1J220J	CHIP R 22 J 1/16W	
R236			RK73HB1J473J	CHIP R 47K J 1/16W		R353			RK73HB1J154J	CHIP R 150K J 1/16W	
R237			RK73HB1J184J	CHIP R 180K J 1/16W		R356			RK73HB1J153J	CHIP R 15K J 1/16W	
R238			RK73HB1J474J	CHIP R 470K J 1/16W		R357			RK73HB1J563J	CHIP R 56K J 1/16W	
						R358			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R239			RK73HB1J104J	CHIP R 100K J 1/16W							
R240			RK73HB1J222J	CHIP R 2.2K J 1/16W		R359			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R242			RK73FB2B000J	CHIP R 0.0 J 1/8W	K,K2,K3	R360			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R243			RK73GB2A271J	CHIP R 270 J 1/10W		R361			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R244			RK73HB1J333J	CHIP R 33K J 1/16W		R362			RK73HB1J272J	CHIP R 2.7K J 1/16W	
						R364			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R245			RK73HB1J472J	CHIP R 4.7K J 1/16W							
R246			RK73GB2A271J	CHIP R 270 J 1/10W		R365			RK73HB1J473J	CHIP R 47K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination	
R366			RK73HB1J220J	CHIP R 22 J 1/16W	K,K2,K3 K4,K5,K6	R516			RK73HB1J563J	CHIP R 56K J 1/16W		
R368			RK73HB1J104J	CHIP R 100K J 1/16W		R517-519			RK73HB1J470J	CHIP R 47 J 1/16W		
R370			RK73HB1J470J	CHIP R 47 J 1/16W		R520			RK73HB1J473J	CHIP R 47K J 1/16W		
R372			RK73HB1J470J	CHIP R 47 J 1/16W		R522			RK73HB1J473J	CHIP R 47K J 1/16W		
						R524			RK73HB1J473J	CHIP R 47K J 1/16W		
R374			RK73HB1J270J	CHIP R 27 J 1/16W								
R374			RK73HB1J470J	CHIP R 47 J 1/16W					RK73HB1J184J	CHIP R 180K J 1/16W		
R450			RK73HB1J474J	CHIP R 470K J 1/16W					RK73HB1J470J	CHIP R 47 J 1/16W		
R451,452			RK73HB1J223J	CHIP R 22K J 1/16W					RK73HB1J102J	CHIP R 1.0K J 1/16W		
R453			RK73HB1J474J	CHIP R 470K J 1/16W					RK73HB1J103J	CHIP R 10K J 1/16W		
									R530,531	RK73HB1J102J	CHIP R 1.0K J 1/16W	
R454			RK73HB1J103J	CHIP R 10K J 1/16W					R532	RK73HB1J821J	CHIP R 820 J 1/16W	
R455			RK73HB1J223J	CHIP R 22K J 1/16W					R533,534	RK73HB1J104J	CHIP R 100K J 1/16W	
R456			RK73HB1J154D	CHIP R 150K D 1/16W					R535	RK73HB1J682J	CHIP R 6.8K J 1/16W	
R457			RK73HB1J104D	CHIP R 100K D 1/16W					R537	RK73HB1J333J	CHIP R 33K J 1/16W	
R458			RK73HB1J105J	CHIP R 1.0M J 1/16W					R538	RK73HB1J473J	CHIP R 47K J 1/16W	
R459			RK73HB1J103J	CHIP R 10K J 1/16W					R539	RK73HB1J100J	CHIP R 10 J 1/16W	
R460			RK73HB1J471J	CHIP R 470 J 1/16W					R542	RK73HB1J333J	CHIP R 33K J 1/16W	
R461			RK73HB1J394J	CHIP R 390K J 1/16W					R544	RK73HB1J100J	CHIP R 10 J 1/16W	
R462			RK73HB1J333J	CHIP R 33K J 1/16W					R545	RK73HB1J473J	CHIP R 47K J 1/16W	
R463			RK73HB1J222J	CHIP R 2.2K J 1/16W					R546	RK73HB1J124J	CHIP R 120K J 1/16W	
R464			RK73HB1J223J	CHIP R 22K J 1/16W					R550	RK73HB1J105J	CHIP R 1.0M J 1/16W	
R465			RK73HB1J472J	CHIP R 4.7K J 1/16W					R552	RK73HB1J223J	CHIP R 22K J 1/16W	
R466			RK73HB1J182J	CHIP R 1.8K J 1/16W					R553	RK73HB1J393J	CHIP R 39K J 1/16W	
R467			RK73HB1J474J	CHIP R 470K J 1/16W					R554	RK73HB1J470J	CHIP R 47 J 1/16W	
R468			RK73HB1J333J	CHIP R 33K J 1/16W					R556	RK73HB1J333J	CHIP R 33K J 1/16W	
R469			RK73HB1J224J	CHIP R 220K J 1/16W					R557	RK73HB1J470J	CHIP R 47 J 1/16W	
R470			RK73HB1J474J	CHIP R 470K J 1/16W					R558	RK73HB1J104J	CHIP R 100K J 1/16W	
R471			RK73HB1J100J	CHIP R 10 J 1/16W					R559	RK73HB1J470J	CHIP R 47 J 1/16W	
R472			RK73HB1J474J	CHIP R 470K J 1/16W					R560	RK73HB1J104J	CHIP R 100K J 1/16W	
R473			RK73HB1J000J	CHIP R 0.0 J 1/16W					R561	RK73HB1J333J	CHIP R 33K J 1/16W	
R474			RK73HB1J124J	CHIP R 120K J 1/16W					R562	RK73HB1J154J	CHIP R 150K J 1/16W	
R475			RK73HB1J333J	CHIP R 33K J 1/16W					R563	RK73HB1J124J	CHIP R 120K J 1/16W	
R476			RK73HB1J474J	CHIP R 470K J 1/16W					R564,565	RK73HB1J105J	CHIP R 1.0M J 1/16W	
R477			RK73HB1J105J	CHIP R 1.0M J 1/16W					R566	RK73HB1J103J	CHIP R 10K J 1/16W	
R478			RK73HB1J224J	CHIP R 220K J 1/16W					R567	RK73HB1J104J	CHIP R 100K J 1/16W	
R479			RK73HB1J474J	CHIP R 470K J 1/16W					R568	RK73HB1J103J	CHIP R 10K J 1/16W	
R480			RK73HB1J473J	CHIP R 47K J 1/16W					R570	RK73HB1J332J	CHIP R 3.3K J 1/16W	
R481			RK73HB1J103J	CHIP R 10K J 1/16W					R571	RK73HB1J104J	CHIP R 100K J 1/16W	
R482			RK73HB1J104J	CHIP R 100K J 1/16W					R572	RK73HB1J472J	CHIP R 4.7K J 1/16W	
R483			RK73HB1J103J	CHIP R 10K J 1/16W					R573	RK73HB1J100J	CHIP R 10 J 1/16W	
R484			RK73HB1J470J	CHIP R 47 J 1/16W					R574-576	RK73HB1J474J	CHIP R 470K J 1/16W	
R485			RK73HB1J472J	CHIP R 4.7K J 1/16W					R577	RK73HB1J473J	CHIP R 47K J 1/16W	
R487			RK73HB1J473J	CHIP R 47K J 1/16W					R579	RK73HB1J104J	CHIP R 100K J 1/16W	
R488			RK73HB1J103J	CHIP R 10K J 1/16W				R580	RK73HB1J100J	CHIP R 10 J 1/16W		
R489,490			RK73HB1J104J	CHIP R 100K J 1/16W				R581	RK73HB1J470J	CHIP R 47 J 1/16W		
R491			RK73HB1J272J	CHIP R 2.7K J 1/16W				R582	RK73HB1J474J	CHIP R 470K J 1/16W		
R492			RK73HB1J100J	CHIP R 10 J 1/16W				R583,584	RK73HB1J470J	CHIP R 47 J 1/16W		
R493			RK73HB1J477J	CHIP R 4.7 J 1/16W				R585,586	RK73HB1J474J	CHIP R 470K J 1/16W		
R494			RK73HB1J100J	CHIP R 10 J 1/16W				R587	RK73HB1J102J	CHIP R 1.0K J 1/16W		
R495			RK73HB1J224J	CHIP R 220K J 1/16W				R589	RK73HB1J104J	CHIP R 100K J 1/16W		
R496			RK73HB1J472J	CHIP R 4.7K J 1/16W				R590	RK73HB1J102J	CHIP R 1.0K J 1/16W		
R498			RK73HB1J220J	CHIP R 22 J 1/16W				R591	RK73HB1J683J	CHIP R 68K J 1/16W		
R499			RK73HB1J332J	CHIP R 3.3K J 1/16W				R592	RK73HB1J102J	CHIP R 1.0K J 1/16W		
R500			RK73HB1J470J	CHIP R 47 J 1/16W				R593	RK73HB1J103J	CHIP R 10K J 1/16W		
R502,503			RK73HB1J100J	CHIP R 10 J 1/16W				R595	RK73GB2A822J	CHIP R 8.2K J 1/10W		
R505-507			RK73HB1J100J	CHIP R 10 J 1/16W				R596	RK73HB1J124J	CHIP R 120K J 1/16W		
R508			RK73HB1J103J	CHIP R 10K J 1/16W				R597	RK73HB1J104J	CHIP R 100K J 1/16W		
R509			RK73HB1J470J	CHIP R 47 J 1/16W				R600-604	RK73HB1J474J	CHIP R 470K J 1/16W		
R510-512			RK73HB1J474J	CHIP R 470K J 1/16W				R605	RK73HB1J000J	CHIP R 0.0 J 1/16W		
R515			RK73HB1J000J	CHIP R 0.0 J 1/16W				R606,607	RK73HB1J474J	CHIP R 470K J 1/16W		

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R608			RK73HB1J105J	CHIP R 1.0M J 1/16W		R726			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R609			RK73HB1J474J	CHIP R 470K J 1/16W		R728			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R610-612			RK73HB1J102J	CHIP R 1.0K J 1/16W		R729			RK73HB1J223J	CHIP R 22K J 1/16W	
R613			RK73HB1J471J	CHIP R 470 J 1/16W		R730			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R614-616			RK73HB1J102J	CHIP R 1.0K J 1/16W		R731			RK73HB1J684J	CHIP R 680K J 1/16W	
R617,618			RK73HB1J471J	CHIP R 470 J 1/16W		R732,733			RK73HB1J154J	CHIP R 150K J 1/16W	
R619			RK73HB1J474J	CHIP R 470K J 1/16W		R734			RK73HB1J184J	CHIP R 180K J 1/16W	
R620			RK73HB1J473J	CHIP R 47K J 1/16W		R735			RK73HB1J330J	CHIP R 33 J 1/16W	
R621			RK73HB1J104J	CHIP R 100K J 1/16W		R737			RK73HB1J470J	CHIP R 47 J 1/16W	
R622			RK73HB1J474J	CHIP R 470K J 1/16W		R738			RK73HB1J273J	CHIP R 27K J 1/16W	
R625			RK73HB1J103J	CHIP R 10K J 1/16W		R739			RK73HB1J223J	CHIP R 22K J 1/16W	
R626			RK73HB1J473J	CHIP R 47K J 1/16W		R741			RK73HB1J473J	CHIP R 47K J 1/16W	
R628			RK73HB1J470J	CHIP R 47 J 1/16W		R742			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R629			RK73HB1J103J	CHIP R 10K J 1/16W		R743,744			RK73HB1J223J	CHIP R 22K J 1/16W	
R630			RK73HB1J473J	CHIP R 47K J 1/16W		R745,746			RK73HB1J473J	CHIP R 47K J 1/16W	
R631			RK73HB1J470J	CHIP R 47 J 1/16W		R747			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R632,633			RK73HB1J000J	CHIP R 0.0 J 1/16W		R748			RK73HB1J103J	CHIP R 10K J 1/16W	
R634			RK73HB1J103J	CHIP R 10K J 1/16W		R753			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R635			RK73HB1J000J	CHIP R 0.0 J 1/16W		R754			RK73HB1J330J	CHIP R 33 J 1/16W	
R636			RK73HB1J183J	CHIP R 18K J 1/16W		R758,759			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R637-639			RK73HB1J102J	CHIP R 1.0K J 1/16W		R762			RK73GB2A100J	CHIP R 10 J 1/10W	
R640-643			RK73HB1J474J	CHIP R 470K J 1/16W		R768			RK73HB1J154J	CHIP R 150K J 1/16W	
R644			RK73HB1J392J	CHIP R 3.9K J 1/16W		R770			RK73HB1J224J	CHIP R 220K J 1/16W	
R645			RK73HB1J104J	CHIP R 100K J 1/16W		R771			RK73HB1J123J	CHIP R 12K J 1/16W	
R647			RK73HB1J104J	CHIP R 100K J 1/16W		R772			RK73HB1J334J	CHIP R 330K J 1/16W	
R648,649			RK73HB1J392J	CHIP R 3.9K J 1/16W		R773			RK73HB1J124J	CHIP R 120K J 1/16W	
R650			RK73HB1J472J	CHIP R 4.7K J 1/16W		R774			RK73HH1J334D	CHIP R 330K D 1/16W	
R651			RK73HB1J103J	CHIP R 10K J 1/16W		R775			RK73HH1J223D	CHIP R 22K D 1/16W	
R652			RK73HB1J000J	CHIP R 0.0 J 1/16W		R784			RK73HB1J474J	CHIP R 470K J 1/16W	
R653			RK73HB1J100J	CHIP R 10 J 1/16W		R790			RK73HB1J103J	CHIP R 10K J 1/16W	
R657			RK73HB1J102J	CHIP R 1.0K J 1/16W		R796,797			RK73HB1J104J	CHIP R 100K J 1/16W	
R658			RK73HB1J471J	CHIP R 470 J 1/16W		R798			RK73HB1J474J	CHIP R 470K J 1/16W	
R659			RK73HB1J102J	CHIP R 1.0K J 1/16W		R801	*		RK73HB1J106J	CHIP R 10M J 1/16W	K2,K3,K5
R661			RK73HB1J102J	CHIP R 1.0K J 1/16W		R801	*		RK73HB1J106J	CHIP R 10M J 1/16W	K6
R663,664			RK73HB1J102J	CHIP R 1.0K J 1/16W		R804			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2,K3,K5
R665			RK73HB1J000J	CHIP R 0.0 J 1/16W		R804			RK73GB2A000J	CHIP R 0.0 J 1/10W	K6
R666			RK73HB1J102J	CHIP R 1.0K J 1/16W		R805			RK73GH2A104D	CHIP R 100K D 1/10W	K2,K3,K5
R672-682			RK73HB1J101J	CHIP R 100 J 1/16W	K2,K3,K5	R805			RK73GH2A104D	CHIP R 100K D 1/10W	K6
R672-682			RK73HB1J101J	CHIP R 100 J 1/16W	K6	R806			RK73GJ1J333D	CHIP R 33K D 1/16W	K2,K3,K5
R684			RK73HB1J104J	CHIP R 100K J 1/16W		R806			RK73GJ1J333D	CHIP R 33K D 1/16W	K6
R685,686			RK73HB1J474J	CHIP R 470K J 1/16W		R807-810			RK73HB1J102J	CHIP R 1.0K J 1/16W	K2,K5
R687,688			RK73HB1J000J	CHIP R 0.0 J 1/16W		R807-822			RK73HB1J102J	CHIP R 1.0K J 1/16W	K3,K6
R690			RK73HB1J331J	CHIP R 330 J 1/16W		R823,824			RK73HB1J223J	CHIP R 22K J 1/16W	K2,K3,K5
R691			RK73HB1J000J	CHIP R 0.0 J 1/16W		R823,824			RK73HB1J223J	CHIP R 22K J 1/16W	K6
R701			RK73HB1J102J	CHIP R 1.0K J 1/16W		R825,826			RK73HB1J101J	CHIP R 100 J 1/16W	K2,K3,K5
R702			RK73HB1J104J	CHIP R 100K J 1/16W		R825,826			RK73HB1J101J	CHIP R 100 J 1/16W	K6
R705			RK73HB1J102J	CHIP R 1.0K J 1/16W		R827			RK73HH1J223D	CHIP R 22K D 1/16W	K2,K3,K5
R706			RK73HB1J331J	CHIP R 330 J 1/16W		R827			RK73HH1J223D	CHIP R 22K D 1/16W	K6
R707			RK73HB1J104J	CHIP R 100K J 1/16W		R828			RK73HB1J474J	CHIP R 470K J 1/16W	K2,K3,K5
R708			RK73HB1J272J	CHIP R 2.7K J 1/16W		R828			RK73HB1J474J	CHIP R 470K J 1/16W	K6
R709			RK73HB1J470J	CHIP R 47 J 1/16W		R829,830			RK73HB1J101J	CHIP R 100 J 1/16W	K3,K6
R710			RK73HB1J333J	CHIP R 33K J 1/16W		R831-833			RK73HB1J181J	CHIP R 180 J 1/16W	K2,K3,K5
R711			RK73HB1J122J	CHIP R 1.2K J 1/16W		R831-833			RK73HB1J181J	CHIP R 180 J 1/16W	K6
R713			RK73HB1J105J	CHIP R 1.0M J 1/16W		R835			RK73HB1J474J	CHIP R 470K J 1/16W	K2,K3,K5
R714			RK73HB1J104J	CHIP R 100K J 1/16W		R835			RK73HB1J474J	CHIP R 470K J 1/16W	K6
R718			RK73HB1J105J	CHIP R 1.0M J 1/16W		R836			RK73HB1J222J	CHIP R 2.2K J 1/16W	K2,K3,K5
R719			RK73HB1J470J	CHIP R 47 J 1/16W		R836			RK73HB1J222J	CHIP R 2.2K J 1/16W	K6
R720,721			RK73HB1J105J	CHIP R 1.0M J 1/16W		R839			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R722			RK73HB1J102J	CHIP R 1.0K J 1/16W		R840			RK73HB1J474J	CHIP R 470K J 1/16W	
R723			RK73HB1J104J	CHIP R 100K J 1/16W		R841			RK73HB1J102J	CHIP R 1.0K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R842			RK73HB1J104J	CHIP R 100K J 1/16W		IC5		*	30625MGP346HU	MICROPROCESSOR IC	
R843			RK73HB1J474J	CHIP R 470K J 1/16W		IC6			Note 1	ROM IC	
R844			RK73HB1J471J	CHIP R 470 J 1/16W		IC7		*	TC7S08FU-F	MOS-IC	
R845,846			RK73HB1J474J	CHIP R 470K J 1/16W		IC8			Note 1	MICROPROCESSOR IC	
R847-850			RK73HB1J102J	CHIP R 1.0K J 1/16W	K,K4	IC100			LMC7101BIM5	MOS-IC	
R847-852			RK73HB1J102J	CHIP R 1.0K J 1/16W	K2,K3,K5	IC101			ADF4111BCP7	MOS-IC	
R852			RK73HB1J102J	CHIP R 1.0K J 1/16W	K6	IC200			TC75W51FK(F)	MOS-IC	
R853			RK73HB1J474J	CHIP R 470K J 1/16W	K,K4	IC201			TA75W01FUJ	MOS-IC	
R854			RK73HB1J471J	CHIP R 470 J 1/16W		IC202,203		*	MASWSS0181	ANALOGUE IC	
R855-860			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC300,301			LMC7101BIM5	MOS-IC	
S901			S64-0406-05	LEVER SWITCH		IC302			SPM5001	MOS-IC	
S902			S70-0496-05	TACT SWITCH		IC303			TC7W53FK(F)	MOS-IC	
D1			MA2S111-F	DIODE		IC304		*	TA31137FNG	MOS-IC	
D102			1SV325F	VARIABLE CAPACITANCE DIODE		IC305-307			TC7W53FK(F)	MOS-IC	
D104-109			1SV282-F	VARIABLE CAPACITANCE DIODE		IC308		*	TC7WU04FK-F	MOS-IC	
D110			1SV325F	VARIABLE CAPACITANCE DIODE		IC450			TC7W66FK-F	MOS-IC	
D111,112			1SV282-F	VARIABLE CAPACITANCE DIODE		IC451,452			TC75W51FK(F)	MOS-IC	
D113,114			HVC131	DIODE	K4,K5,K6	IC453		*	TC7WH74FK-F	MOS-IC	
D115			1SV278F	VARIABLE CAPACITANCE DIODE		IC454			AK4550VTP	MOS-IC	
D116,117			HVC131	DIODE	K4,K5,K6	IC455		*	TC7WU04FK-F	MOS-IC	
D118			MA2S111-F	DIODE		IC456			TC75W51FK(F)	MOS-IC	
D119			DA221	DIODE		IC457			EX128TQ64I630C	MOS-IC	
D200			HVC131	DIODE		IC458			TC7W66FK-F	MOS-IC	
D201			HZU5CLL	ZENER DIODE		IC459			TC75W51FK(F)	MOS-IC	
D202-205			HVC131	DIODE		IC460			TC7W66FK-F	MOS-IC	
D206,207		*	EZJZ0V50023C	VARISTOR		IC461			TC75S51FE(F)	MOS-IC	
D301,302			1SV286F	VARIABLE CAPACITANCE DIODE		IC462			M62364FP-F	MOS-IC	
D304-307			1SV286F	VARIABLE CAPACITANCE DIODE		IC463			TC75W51FK(F)	MOS-IC	
D308			HVC131	DIODE		IC600			XC6204B502PR	MOS-IC	
D450,451			RB706F-40	DIODE		IC601			XC6204B502MR	MOS-IC	
D452			MA2S111-F	DIODE		IC602			TC7W53FK(F)	MOS-IC	
D453			RB706F-40	DIODE		IC603			TC74VHCT244AFT	MOS-IC	
D454,455			1SS388F	DIODE		IC604,605			TC7SBD384AFU	MOS-IC	
D600			1SR154-400	DIODE		IC606			BU4094BCFV	MOS-IC	
D601,602			AVRM1005C270M	VARISTOR		IC607			TC7MB3245FK	MOS-IC	
D609			NNCD6.8G-A	ZENER DIODE		IC608,609			TC7WB125FK	MOS-IC	
D611			NNCD6.8G-A	ZENER DIODE		IC610			TK11250CUCB	MOS-IC	
D700,701			1SS388F	DIODE		IC701			TC7W66FK-F	MOS-IC	
D702			NNCD6.8G-A	ZENER DIODE		IC702,703			LM4906LD	ANALOGUE IC	
D703			1SS301F	DIODE		IC704		*	XC6204B302M	MOS-IC	
D704			HRB0502A	DIODE		IC705			TC75W51FK(F)	MOS-IC	
D705,706			DA221	DIODE		IC706			XC61CC5602NR	MOS-IC	
D707			CUS01	DIODE		IC707,708			XC6204B332M	MOS-IC	
D708			MA2S111-F	DIODE		IC709		*	XC9225A15CM	MOS-IC	
D710,711			AVRM1005C270M	VARISTOR		IC710			XC6365D103M	MOS-IC	
D804,805			IMN10	DIODE	K2,K3,K5	IC711			XC6204B252M	MOS-IC	
D804,805			IMN10	DIODE	K6	IC712			TK11250CUCB	MOS-IC	
D813,814			IMN10	DIODE	K3,K6	IC713			XC9101D09AKR	ANALOGUE IC	
D815			DTZ3.9(B)	ZENER DIODE	K2,K3,K5	IC800			LMC7101BIM5	MOS-IC	K2,K3,K5
D815			DTZ3.9(B)	ZENER DIODE	K6	IC800			LMC7101BIM5	MOS-IC	K6
D816-818			IMN10	DIODE	K3,K6	IC801-803			BU4094BCFV	MOS-IC	
D817,818			IMN10	DIODE	K,K2,K4	Q100			2SC4617(S)	TRANSISTOR	
D817,818			IMN10	DIODE	K5	Q101,102			SSM6L05FU	FET	
IC1			MM1522XURE	ANALOGUE IC		Q103			2SK879(Y)F	FET	
IC2			RV5C386A	MOS-IC		Q104			2SC4617(S)	TRANSISTOR	
IC3			AT2425610TI27	ROM IC		Q105			SSM6L05FU	FET	
IC4		*	S-80930CNNB-G	MOS-IC		Q106			2SK508NV(K52)	FET	K,K2,K3
						Q106,107			2SK508NV(K52)	FET	K4,K5,K6
						Q107			2SK508NV(52K)	FET	K,K2,K3

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

TK-5310

PARTS LIST

TX-RX UNIT (X57-7250-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
Q108			2SJ347F	FET							
Q109			2SC5108(Y)F	TRANSISTOR	K,K2,K3						
Q109-112			2SC5108(Y)F	TRANSISTOR	K4,K5,K6						
Q111,112			2SC5108(Y)F	TRANSISTOR	K,K2,K3						
Q200			2SC5108(Y)F	TRANSISTOR							
Q202			RD01MUS1-T113	FET							
Q203			SSM3K15TE(F)	FET							
Q204		*	RD07MVS2	FET							
Q205			EMD9	TRANSISTOR							
Q206			SSM3K15TE(F)	FET							
Q207			DTA144EE	DIGITAL TRANSISTOR							
Q208			SSM3K15TE(F)	FET							
Q209			2SJ243-A	FET							
Q210			2SK3077F	FET							
Q300			2SC4617(S)	TRANSISTOR							
Q301			3SK318	FET							
Q302		*	2SK1215-E(E)	FET							
Q303			2SC5108(Y)F	TRANSISTOR							
Q304			EMD9	TRANSISTOR							
Q450			2SC4738(GR)F	TRANSISTOR							
Q451			2SA1832(GR)F	TRANSISTOR							
Q452,453			SSM3K15TE(F)	FET							
Q454,455			2SJ347F	FET							
Q456,457			SSM3K15TE(F)	FET							
Q459			SSM3K15TE(F)	FET							
Q460			2SC4617(S)	TRANSISTOR							
Q461			SSM3K15TE(F)	FET							
Q600-602			SSM6L05FU	FET							
Q603			SSM3K15TE(F)	FET							
Q604		*	TPC6108-F	FET							
Q605,606			UM6K1N	FET							
Q700			SSM3K15TE(F)	FET							
Q701			UMG3N	TRANSISTOR							
Q702			2SB798(DL,DK)	TRANSISTOR							
Q703			SSM3K15TE(F)	FET							
Q704			2SJ243-A	FET							
Q705			SSM3K15TE(F)	FET							
Q706			2SJ243-A	FET							
Q708			SSM3K15TE(F)	FET							
Q709			UMC4N	TRANSISTOR							
Q710		*	TPC6108-F	FET							
Q711			SSM5H01TU	FET							
Q712,713			UM6K1N	FET							
Q800			2SC4617(S)	TRANSISTOR	K2,K3,K5						
Q800			2SC4617(S)	TRANSISTOR	K6						
Q801			2SB798(DL,DK)	TRANSISTOR	K2,K3,K5						
Q801			2SB798(DL,DK)	TRANSISTOR	K6						
Q802			SSM3K15TE(F)	FET							
Q803,804			SSM6L05FU	FET							
TH200			B57331V2104J	THERMISTOR							