


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

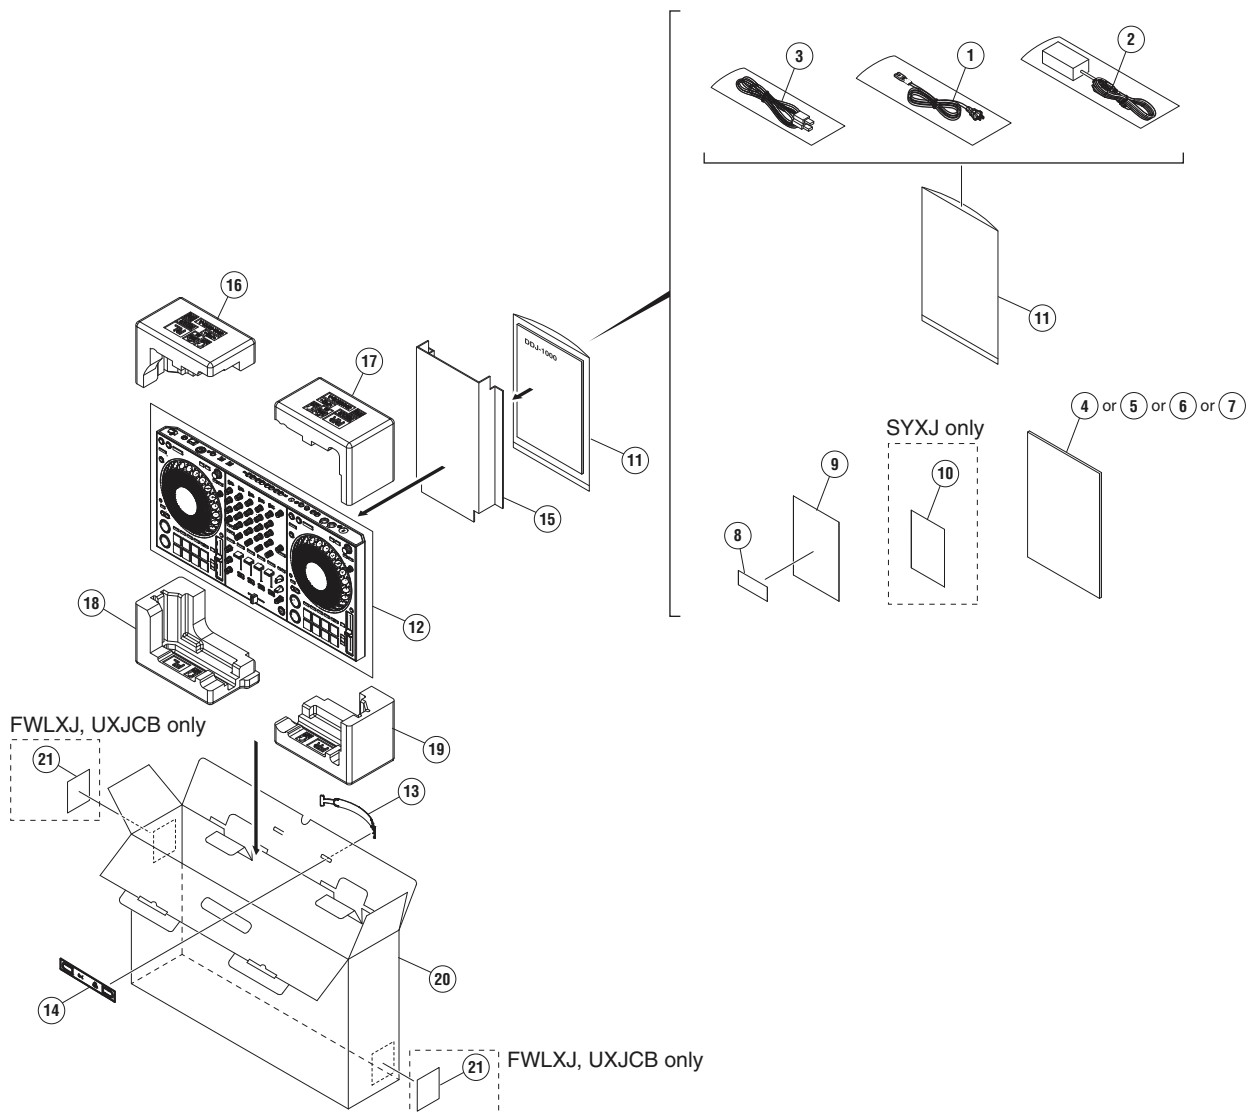

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
⚠	1 Power Cord	See Contrast table (2)	NSP 8	License key label	See Contrast table (2)
⚠	2 AC Adapter	DWR1577 or DWR1574	NSP 9	Leaflet	See Contrast table (2)
	3 USB Cable	DDE1128	NSP 10	Warranty	See Contrast table (2)
	4 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 11	Polyethylene Bag	AHG7117
			12	Mirror Mat (1200*1000)	DHL1169
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Handle	DEC3783
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Spacer	DEC3784
	7 Operating Instructions (Quick Start Guide)	See Contrast table (2)	15	Partition	DHC1101
			16	Packing Pad	DHA1972
			17	Packing Pad	DHA1973
			18	Packing Pad	DHA1974
			19	Packing Pad	DHA1975
			20	Packing Case	See Contrast table (2)
			21	Label	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-1000SRT/FWLXJ, SYXJ, UXJCB, XJCN and DDJ-1000SRT-W/UXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-1000SRT /FWLXJ	DDJ-1000SRT /SYXJ	DDJ-1000SRT /UXJCB	DDJ-1000SRT /XJCN	DDJ-1000SRT-W /UXJ
⚠	1	Power Cord	ADG1154	ADG1154	XDG3052	ADG7079	XDG3052
	4	Operating Instructions (Quick Start Guide)(En, Es)	DRH1561	Not used	Not used	Not used	Not used
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, NI, Es, Pt, Ru)	Not used	DRH1559	Not used	Not used	Not used
	6	Operating Instructions (Quick Start Guide)(En)	Not used	Not used	DRH1560	Not used	DRH1560
	7	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	Not used	DRH1563	Not used
NSP	8	Serato Pitch'n Time DJ license key label	DXA2343*	DXA2343*	DXA2343*	DXA2343*	Not used
NSP	8	Serato DJ Suite license key label	Not used	Not used	Not used	Not used	DXA2392
NSP	9	Serato Pitch'n Time DJ Leaflet	DRM1434*	DRM1434*	DRM1434*	DRM1434*	Not used
NSP	9	Serato DJ Suite Leaflet	Not used	Not used	Not used	Not used	DRM1435
NSP	10	Warranty	Not used	DRY1270	Not used	Not used	Not used
	20	Packing Case	DHG3716	DHG3716	DHG3716	DHG3722	DHG3743
NSP	21	Label	DRW2799	Not used	DRW2798	Not used	Not used

*DXA2392 and DRM1435 are bundled in substitution for these parts in a first limited model.

A



(1) BOTTOM SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	PSWB Assy	DWX4114	21	Slider Knob 1	See Contrast table (2)
	2	HPJK Assy	DWX4116	22	Stopper/SLD	DNK6009
	3	Connector Assy (05P)	PF05PP-D12	23	Knob	See Contrast table (2)
	4	Connector Assy	PF04PP-D10	24	Stopper	DNK6440
	5	Connector Assy	PF03PP-B22	25	Power Knob	DAC2306
■	6	Shield Plate	DNH3342	26	Slide Sheet 1C	See Contrast table (2)
	7	Stay	DNH3351	27	Cord Hook	DNK6755
	8	Stay	DNH3449	28	Slider Knob 2	DAC2685
	⚠	9 Chassis	DNK6747	29	Cord Clamper (Steel)	RNH-184
	10	Cross Fader Service Assy	DEA1088	30	•••••	
B	11	Sheet/LEG	DEC3534	31	Nut M12	DBN1018
	12	Knob	DAA1432	32	Screw	BBZ30P060FTB
	13	Knob	DAA1433	33	Screw	BBZ30P080FTB
	14	Knob	DAA1386	34	Screw	BPZ30P080FNI
	15	Select Knob	DAA1205	35	Screw	BPZ30P120FTB
■	16	FX SEL Knob	DAA1213			
	17	Knob	DAA1434			
	18	Knob/SLD	DNK6682			
	19	Dial Knob	DAA1399			
	C	20 Adjust Knob Black	DAA1406			

(2) CONTRAST TABLE

DDJ-1000SRT and DDJ-1000SRT-W are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-1000SRT	DDJ-1000SRT-W
	21	Slider Knob 1	DAC2912	DAC2684
	23	Knob	DAC3437	DAC3238
	26	Slide Sheet 1C	DAH2404	DAH3193

D

■


E

■

F

5 6 7 8

9.3 CHASSIS SECTION

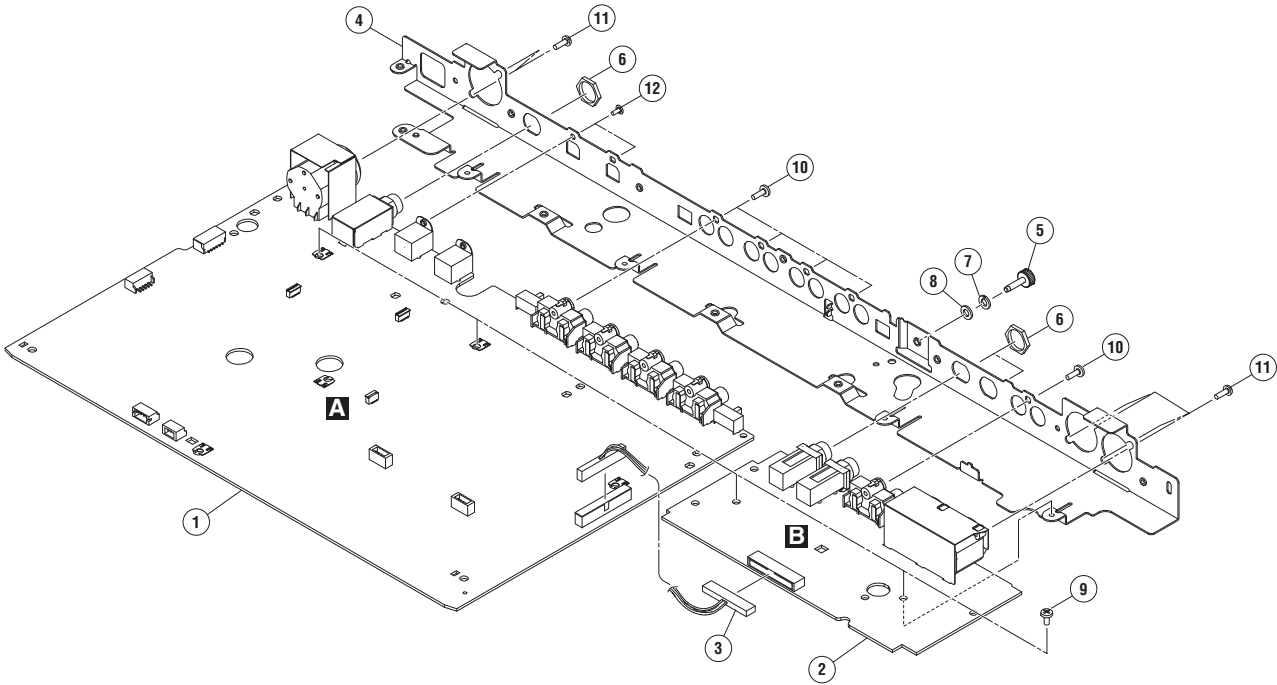

CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MAIN Assy	DWX4373
2	MOUT Assy	DWX4115
3	Crimp Connector	PF16PP-D15
4	Stay	DNH3341
5	Earth Terminal	DKE1015
6	Nut	NKX2FTC
7	Spring Lock Washer	WS40FNI
8	Washer	WA32F100Q050
9	Screw	BBZ30P060FTB
10	Screw	BPZ30P080FTB
11	Screw	PPZ30P080FTB
12	Screw (M3*5)	DBA1340

△

A




94

CONTROL PANEL SECTION (1/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	OLED Assy	DWX4106	
2	LOOP Assy	DWX4108	A
3	BRWS Assy	DWX4109	
4	PADB Assy	DWX4110	
5	PLAY Assy	DWX4111	
6	MIXER Assy	DWX4112	■
7	BFXB Assy	DWX4117	
8	OLED Assy (Service)	DEA1084	
9	FFC	DDD1831	
10	FFC	DDD1832	
11	FFC	DDD1833	B
12	FFC	DDD1834	
13	FFC	DDD1835	
14	FFC	DDD1836	
15	FFC	DDD1839	
16	FFC	DDD1840	■
17	FFC	DDD1841	
18	FFC	DDD1842	
19	FFC	DDD1844	
20	FFC	DDD1845	C
21	Shielded Conn-Cable	DDA1082	
22	I-Shield Sheet	DEC3765	
23	Sheet	DEC3770	
24	Sheet	DEC3771	
25	Sheet	DEC3772	■
26	Sheet	DEC3773	
27	Sheet	DEC3774	
28	Spacer	DEC3775	
29	Stay	DNH3343	D
30	Stay	DNH3346	
31	Stay	DNH3347	
32	Stay	DNF2039	
⚠	33 Sheet	DEC3780	■
	34 Cord Clamper (Steel)	RNH-184	
	35 SW Cap	DAC2753	
36	Slide SW Cap (W)	DAC2401	
37	Button	DEB2059	
38			E
39	Screw	PMH20P040FTC	
40	Screw	BPZ20P040FTB	
41	Screw	BPZ30P080FNI	■

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

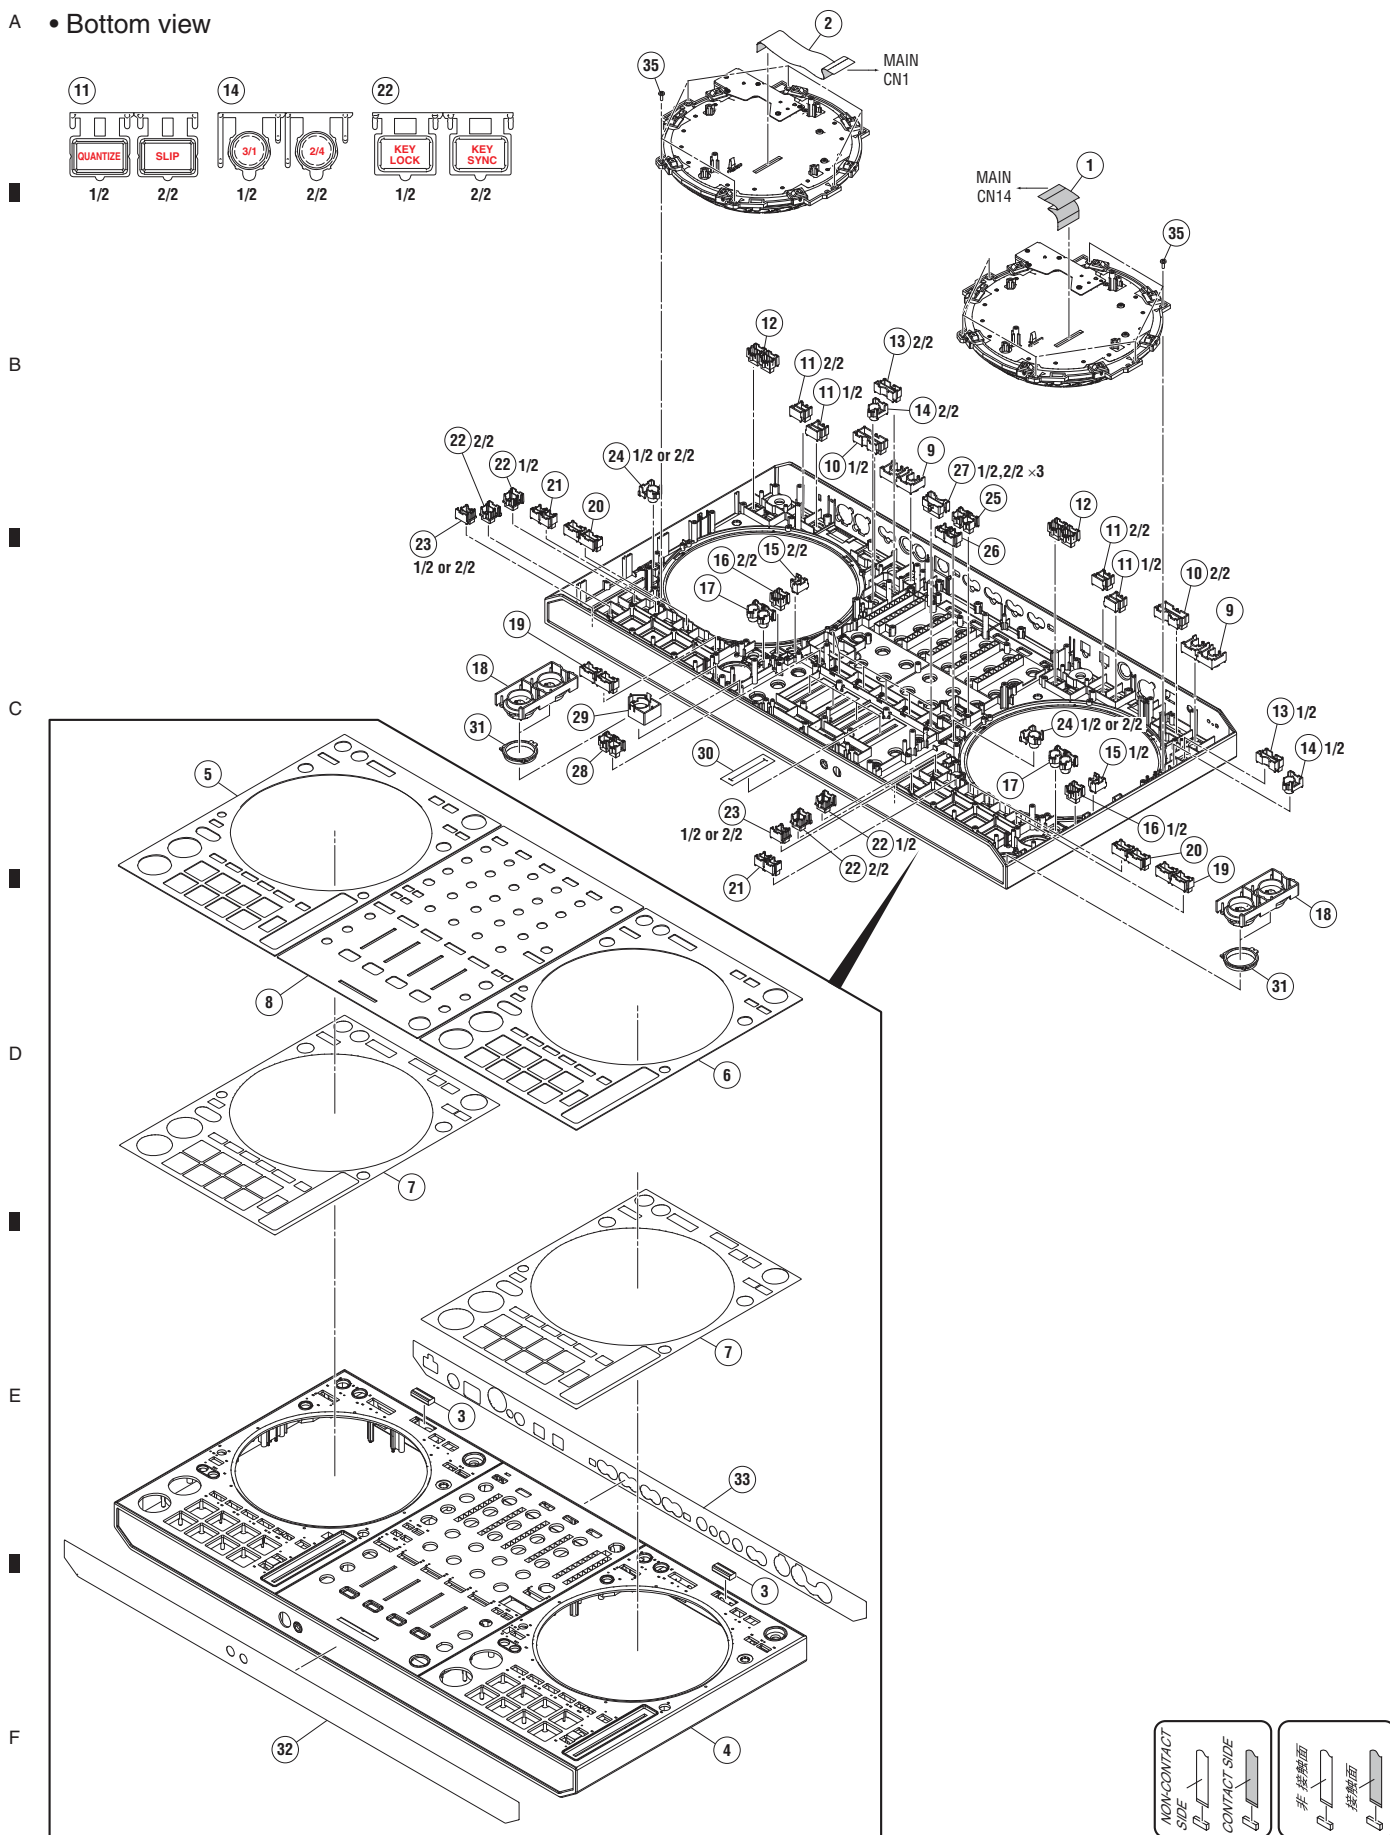

	5		6		7		8	
(1) CONTROL PANEL SECTION (2/2) PARTS LIST								
	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1	FFC	DDD1837		21	Button	DAC3366	
	2	FFC	DDD1838		22	Button	DAC3510	A
	3	EMC Gasket	DEC3766		23	Button	DAC3515	
⚠	4	Control Panel	See Contrast table (2)		24	Button	DAC3512	
	5	Plate	See Contrast table (2)		25	Button	DAC3370	
	6	Plate	See Contrast table (2)		26	Button	DAC3371	
	7	DS Tape	DEH1095		27	Button	DAC3219	
	8	Plate	See Contrast table (2)		28	Button	DAC3372	
	9	Button/LOP	DAC3074		29	Button	DAC3141	
	10	Button	DAC3514		30	Fader Packing	DEC3355	
	11	Button	DAC3357		31	Ring Lens (PLAY)	DNK5315	B
	12	Button	DAC3503		32	Sheet	See Contrast table (2)	
	13	Button	DAC3504		33	Sheet	See Contrast table (2)	
	14	Button	DAC3360		34	•••••		
	15	Button	DAC3361		35	Screw	BPZ30P080FNI	
	16	Button	DAC3506					
	17	Button	DAC3507					
	18	Button	DXB2170					
	19	Button	DAC3508					
	20	Button	DAC3509					C

(2) CONTRAST TABLE

DDJ-1000SRT/FWLXJ, SYXJ, UXJCB, XJCN and DDJ-1000SRT-W/UXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-1000SRT /FWLXJ	DDJ-1000SRT /SYXJ	DDJ-1000SRT /UXJCB	DDJ-1000SRT /XJCN	DDJ-1000SRT-W /UXJ	
⚠	4	Control Panel	DNK6888	DNK6888	DNK6888	DNK6888	DNK6908	D
	5	Plate	DAH3290	DAH3290	DAH3290	DAH3290	DAH3296	
	6	Plate	DAH3291	DAH3291	DAH3291	DAH3291	DAH3297	
	8	Plate	DAH3292	DAH3292	DAH3292	DAH3292	DAH3298	
	32	Sheet	DEC3865	DEC3865	DEC3865	DEC3865	DEC3894	
	33	Sheet	DEC3866	DEC3866	DEC3866	DEC3867	DEC3895	

△



(1) JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	LCDL Assy	DWX4380	26	Comp Plate	DNK5243
2	LCDR Assy	DWX4381	27	Adjust Plate	DNK5300
3	JOGL Assy	DWX4113	28	Cam Plate	DNK5301
4	JOGR Assy	DWX4119	29	Dial Gear	DNK5302
5	TFT LCD	DWX4141	30	Link Gear A	DNK5303
6	Sheet SW	DSX1078	31	Link Gear B	DNK5304
7	FFC	DDD1843	32	Plate	DNK6748
8	Holder	DNK6745	33	Gear/LD	DNK6145
9	Roller	DXB2178	34	Plate	DNH3345
10	Stay Assy/JOG	DXB2133	35	Window	DAH3189
11	JOG Plate	See Contrast table (2)	36	Holder	DNK6749
12	JOG Dial A Assy	DXA2159	37	Sheet	DEC3863
13	JOG B	See Contrast table (2)	38	Sheet	DEC3864
14	Encoder Spring	DBH1710	39	Barrier	DEC3798
15	Plate	DEC3700	40	Barrier	DEC3799
16	Gear/A	DNK6143	41	•••••	
17	Gear/B	DNK6144	42	Screw (FE)	DBA1265
18	SW Spring	DBH1681	43	Screw	BPZ20P100FTC
19	SW Cushion HH48/2	DEC2538	44	Screw	BPZ30P080FNI
20	Cushion/RNG	DEC3466	45	Screw	IPZ20P060FTC
21	SW Ring	DNK5233			
22	Coil Spring/LD	DBH1798			
23	Leaf Spring/ADJ	DBK1376			
24	Washer	DEC3137			
25	Smoother	DNK5237			

(2) CONTRAST TABLE

DDJ-1000SRT and DDJ-1000SRT-W are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-1000SRT	DDJ-1000SRT-W
	11	JOG Plate	DAH2679	DAH2898
	13	JOG B	DNK4068	DNK6135

Mark	No.	Description	Part No.
A	D	505,507,509,510	1SS355
	D	511,512,518-520	DB2J41100
	D	513,514,516,517	1SS355VM
	D	515	DAN202UM
	D	521,522	RB501VM-40
■	D	523,525,5601-5606	1SS355
	D	2001,2501,3001	SML-D12U8W
	D	4001-4004,4401-4404	DAN217UM
	D	4801,4802	DAN217UM
	D	4803-4810	DZ2J130M0

MISCELLANEOUS

B	L	501 COIL (47 uH)	CTH1475
	L	502,503 SMD SPL INDUCTOR (10 uH)	CTH1584
	L	504 CHOKE COIL (22 uH)	CTH1561
	L	505-508 POWER INDUCTOR (22 uH)	ATH7011
	L	509-512 CHOKE COIL (22 uH)	CTH1426
■	L	1001,1501,2001-2003 INDUCTOR	CTF1793
	L	2004,2006-2008 INDUCTOR	CTF1545
	L	2005,2506 COIL	ATH7015
	L	2009,2502-2504,4801 INDUCTOR	CTF1793
	L	2010-2013,2501,2505 INDUCTOR	CTF1545
C	L	2507-2512 INDUCTOR	CTF1545
	L	3001 SMD FERRITE BEADS	CTF1823
	L	4802 INDUCTOR	CTF1793
	F	3001 EMI FILTER	DTL1106
	JA	2001,2501 USB CONNECTOR	DKN1237
■	JA	4001,4002,4401,4402 RCA JACK	DKB1125
	JA	4801 XLR SOCKET	DKB1124
	JA	4802 6.5 DIA JACK	DKN1669
	KN	501-504 WRAPPING TERMINAL	CKF1089
	KN	506 WRAPPING TERMINAL	CKF1089
D	S	4401,4402 SLIDE SWITCH	DSH1025
	X	1001,1501 CRYSTAL RESONATOR (16 MHz)	BSS1146
	X	2001 CRYSTAL RESONATOR (13.3333 MHz)	CSS1840
	X	2002 RESONATOR (48.000 MHz)	CSS1760
	X	3501 OSCILLATOR (16.9344 MHz)	CWX3849
■	CN	1,5,7,14 CONNECTOR	CKS6025
	CN	2,13 FFC/FPC CONNECTOR	CKS6649
	CN	3,11 FFC/FPC CONNECTOR	CKS6643
	CN	4,12 FFC/FPC CONNECTOR	CKS6387
	CN	10 CONNECTOR	AKM1289
E	CN	15 CONNECTOR	CKS6095
	CN	501 CONNECTOR	AKM1291
	CN	4801 CONNECTOR	AKM1292
	CN	5601 CONNECTOR	AKM1290
	CN	5602 CONNECTOR	AKM1287
⚠		1001 MIC SHIELD	DNF1849
		1002 SHIELD CASE	DNF2043
	P	502,503 PROTECTOR (0.750 A)	DEK1096
	VA	2001,2501,4001-4006 VARISTORS	EZJZ1V270RM
	VA	4401-4408,4801-4803 VARISTORS	EZJZ1V270RM

RESISTORS

F	R	72,75,570,572	RS1/10SR0R0J
	R	514	RS1/16SS1602D
	R	515,2130,2616	RS1/16SS5601D
	R	516,517	RS1/16SS3302D
	R	518	RS1/10SR6801D
	R	519	RS1/10SR75R0D
	R	520,526,529	RS1/16SS2201D

Mark	No.	Description	Part No.
	R	521	RS1/16SS6800D
	R	522	RS1/16SS3301D
	R	523,540	RS1/16SS1002D
	R	524	RS1/16SS1202D
	R	525,4801-4804	RS1/10SR1000D
	R	527	RS1/16SS2202D
	R	528	RS1/10SR5600D
	R	538	RS1/16SS2002D
	R	556,558,576	RS1/10SR1502D
	R	557,559,569,577	RS1/10SR1002D
	R	560,562,595,598	RS1/10SR3002D
	R	561,563,602,610	RS1/10SR6802D
	R	565	RS1/10SR1803D
	R	566	RS1/10SR5102D
	R	571	RS1/10SR5601D
	R	575,4005-4012	RS1/10SR2200D
	R	581,589	RS1/10SR330J
	R	582,599	RS1/10SR100J
	R	583,584	RS1/10SR472J
	R	597,600,1051,1543	RS1/10SR105J
	R	601,5625-5628	RS1/10SR6201D
	R	606	RS1/10SR512J
	R	608,616,4041-4044	RS1/10SR1002D
	R	611,612,615,1012	RS1/10SR0R0J
	R	613	RS1/10SR1503D
	R	614	RS1/10SR5101D
	R	618,5637-5640	RS1/10SR2002D
	R	620	RS1/10SR6202D
	R	621,5716-5719	RS1/10SR1001D
	R	625,5653-5656	RS1/10SR3001D
	R	630	RS1/4SA0R0J
	R	635,4029-4032	RS1/10SR103J
	R	637	RS1/10SR222J
	R	1013,1098,1101	RS1/10SR104J
	R	1014,5734,5735	RS1/10SR102J
	R	1022,1097,1100,1504	RS1/10SR0R0J
	R	1099,1102,1105-1108	RS1/10SR332J
	R	1103,1104	RS1/10SR473J
	R	2013,2027,2144-2146	RS1/10SR0R0J
	R	2127,2612	RS1/16SS2402F
	R	2147,2148,5705,5706	RS1/10SR105J
	R	2151,2633,5711,5737	RS1/8SQ0R0J
	R	2502,2632,3504,3513	RS1/10SR0R0J
	R	3509-3512,3515,3516	RS1/10SR680J
	R	3517,4049-4052	RS1/10SR101J
	R	3522-3524,4001-4004	RS1/10SR0R0J
	R	3561-3564	RS1/10SR220J
	R	3570-3572,3578-3581	RS1/10SR680J
	R	4013-4016,4413-4416	RS1/10SR1003D
	R	4017-4020,4417-4420	RS1/10SR9102D
	R	4033-4036,4443-4446	RS1/10SR3301D
	R	4037-4040,4045-4048	RS1/10SR2701D
	R	4401-4404,5645-5648	RS1/10SR0R0J
	R	4405-4412,4805-4808	RS1/10SR2200D
	R	4421-4424,4491-4494	RS1/10SR1801D
	R	4425-4428	RN1/16SE2703D
	R	4429,4431,4433,4435	RS1/10SR2202D
	R	4439-4442,4847,4849	RS1/10SR103J
	R	4447-4450,4455-4458	RS1/10SR2701D

5		6		7		8	
Mark	No. Description	Part No.	Mark	No. Description	Part No.		
R	4451-4454,5673-5676	RS1/10SR1002D	C	585,594,595,607	CKSRYPB104K25	A	
R	4459-4462	RS1/10SR101J	C	589	CCSRCH222J50		
R	4809-4814,4827,4828	RS1/10SR3301D	C	590,591,1001,1501	CEVW470M6R3		
R	4815,4817,4821,4822	RN1/16SE1501D	C	593	CFHXSP104J16		
R	4816,4818,4824,4826	RN1/16SE4701D	C	596,3501,5670,5675 (100 uF/16 V)	CCH1565		
R	4819,4820	RS1/10SR8200D					
R	4829,4830,5720-5723	RS1/10SR1801D	C	597,598,1005-1013	CKSSYPB102K50		
R	4831,4832	RS1/10SR1602D	C	601,603,626,679	CKSSYPB103K16		
R	4848,4850	RS1/10SR2200D	C	610	CCSRCH220J50		
			C	611,2024,2025	CCSSCH101J50		
R	5603-5606	RS1/10SR513J	C	612,629,641,660	CCSSCH102J50		
R	5607-5614	RS1/10SR3301D					
R	5617-5624	RS1/10SR2401D	C	613,634,652,672	CKSRYPB104K25		
R	5629-5636	RS1/10SR1501D	C	614,5603,5607	CEVW101M25		
R	5641-5644,5697-5700	RS1/10SR4701D	C	615,616,1532,4829	CKSSYPB103K25	B	
			C	619	CKSRYPB474K10		
R	5649-5652,5657-5660	RS1/10SR223J	C	621	CKSRYPB334K10		
R	5661-5664	RS1/10SR9101D					
R	5665-5668	RS1/10SR1003D	C	622	CCSSCH680J50		
R	5669-5672	RS1/10SR103J	C	623	CCSSCH221J50		
R	5677-5680,5687-5690	RS1/10SR6201D	C	625	CKSSYPB223K16		
			C	628,639,693-695	CKSQYB334K50		
R	5681-5684	RS1/10SR1302D	C	630,633,644,649 (10 uF/16 V)	DCH1263		
R	5685,5686,5691,5692	RS1/10SR4301D					
R	5693-5696	RS1/10SR2002D	C	635,637	CCSSCH561J50		
R	5701-5704	RS1/10SR1002D	C	646,650	CKSYB105K16		
R	5707,5708,5732,5733	RS1/10SR183J	C	647,654,657,659	CKSRYPB105K10		
			C	648,668,669,1014	CKSSYPB104K10	C	
R	5709,5710	RS1/8SQ680J	C	655,3508 (2.2 uF/10 V)	CCG1218		
R	5712-5715	RS1/10SR332J					
R	5724-5731	RS1/4SA220J	C	661,663	CKSSYPB682K25		
R	5736	RS1/10SR0R0J	C	664 (4.7 uF/10 V)	CCG1201		
Other Resistors		RS1/16SS###J	C	666,4001,4003	CCSRCH102J50		
			C	670 (0.47 uF/16 V)	CCG1328		
			C	671	CCSSCH271J50		
CAPACITORS							
C	1,3,8-10	CKSSYPB104K10					
C	2,4-7,11	CKSRYPB104K25	C	673,700,703,704	CKSRYPB104K25		
C	12,13,15,16	CKSSYPB104K10	C	674-676,691,692 (10 uF/10 V)	CCG1192		
C	14,22,501	CKSRYPB104K25	C	680,2119,2596	CCSSCH471J50		
C	17,549,555 (10 uF/10 V)	CCG1192	C	681,682,685,686	CCSSCH102J50		
			C	683,684,710,720	CKSQYB105K25	D	
C	18,19,21	CKSSYPB104K10					
C	20,26	CEVW100M16	C	689,690,716,2120	CKSRYPB105K10		
C	23-25,520-523	CKSSYPB104K10	C	696-698,717,2067	CCSSCH102J50		
C	502,550,556,617 (10 uF/16 V)	DCH1263	C	699,701,702 (1000 pF/63 V)	ACE7099		
C	503,504,677,678 (10 uF/35 V)	CCG1236	C	705,707,4801,4803	CKSRYPB102K50		
			C	706,708,709,715	CKSRYPB104K25		
C	505,506 (22 uF/16 V)	CCG1254					
C	507-510,518,537	CKSRYPB104K25	C	718,1002,1504,2022	CKSRYPB104K25		
C	511-514,552,553	CKSRYPB102K50	C	719	CKSQYB225K10		
C	524,554,618,643	CKSRYPB105K10	C	721	CKSQYB105K25		
C	525-528	CKSRYPB153K50	C	1003,1505,1508-1515	CKSSYPB471K50		
			C	1004,1503,2010,3005	CEVW101M4		
C	529-532,534,642	CKSSYPB104K10				E	
C	533	CKSSYPB222K50	C	1015,1045-1047,1524	CKSSYPB103K16		
C	535,536	CCSSCH821J50	C	1016,1017,1525,1528	CCSSCH100D50		
C	542,566,571,667	CKSRYPB103K50	C	1018-1020,1518,1530	CKSSYPB104K10		
C	543,687,688	CEVW221M25	C	1021	CKSSYPB473K16		
			C	1506,1507,1516,1517	CKSSYPB102K50		
C	545	CKSSYPB472K25					
C	548,558,559,572	CKSRYPB104K25	C	1519-1523,1526,1527	CKSSYPB471K50		
C	557,567,631,651	CCSRCH102J50	C	1529,2011,2060,2511	CKSSYPB471K50		
C	560,561,5208	CEVW101M16	C	1531,2001,2008,2070	CKSSYPB104K10		
C	562-565,638,653 (10 uF/10 V)	CCG1192	C	2004,2505 (47 uF/16 V)	CCH1961		
			C	2014-2021,2026	CKSSYPB103K16		
C	568,569,581,582	CEVW470M6R3					
C	573,575,580,584	CKSRYPB104K25	C	2027-2029,2034,2062	CCSSCH101J50	F	
C	577,578,587,588	CKSSYPB102K50	C	2030-2033,2036,2037	CKSSYPB103K16		
C	579,609,2102,2109	CCSSCH120J50	C	2039,2040,2042-2051	CKSSYPB103K16		
C	583,608,2107,2116	CCSSCH470J50	C	2053-2059,2061	CKSSYPB103K16		

Mark	No.	Description	Part No.
A	C	2063-2065,2069,2074	CKSSYB103K16
	C	2066,2099,2100,2108	CCSSCH101J50
	C	2068,2071,2072	CKSSYB102K50
	C	2073,2079,2080 (10 uF/10 V)	CCG1192
	C	2075,2084-2086,2092	CKSSYB103K16
B	C	2076-2078,2087-2091	CKSSYB104K10
	C	2081-2083,2097,2098	CKSSYB102K50
	C	2093,2514-2526,2528	CKSSYB103K16
	C	2094-2096,2564,2570 (10 uF/10 V)	CCG1192
	C	2101,2105,2106,2111	CKSSYB104K10
C	C	2103	CCSSCH150J50
	C	2104,2112-2114,2559	CKSSYB102K50
	C	2110	CCSSCH100D50
	C	2115,2122,2123,2126	CCSSCH101J50
	C	2117,2118,2509,2513	CKSSYB104K10
D	C	2121,2127,2607,2608	CCSSCH470J50
	C	2124,2501	CEVW221M4
	C	2125,2502	CEVW220M6R3
	C	2128,2530,2531,2534	CCSSCH101J50
	C	2529,2532,2533	CKSSYB103K16
E	C	2535-2557,2560,2565	CKSSYB103K16
	C	2558,2588,2589	CCSSCH101J50
	C	2561,2567-2569	CKSSYB104K10
	C	2562,2563,2572-2574	CKSSYB102K50
	C	2566,2575-2577,3008	CKSSYB103K16
F	C	2571,2581-2583,3044 (10 uF/10 V)	CCG1192
	C	2578-2580,2584,2586	CKSSYB104K10
	C	2585,2591,3014,3016	CKSSYB102K50
	C	2587,2590,2598,3002	CKSSYB104K10
	C	2593-2595,2599-2602	CCSSCH101J50
G	C	2597,3042,5206	CKSRYB105K10
	C	2609,3040,3507	CCSSCH101J50
	C	2610,2611	CCSSCH470J50
	C	3007,3502,3503,3510	CKSSYB104K10
	C	3009	CKSSYB471K50
H	C	3010-3013,3015,3017	CKSSYB103K16
	C	3018,3020,3022,3024	CKSSYB102K50
	C	3019,3021,3023,3025	CKSSYB103K16
	C	3026,3028,3030,3032	CKSSYB102K50
	C	3027,3029,3031,3033	CKSSYB103K16
I	C	3034,3036,3038,3505	CKSSYB102K50
	C	3035,3037,3039,3041	CKSSYB103K16
	C	3045-3051,3504,3509	CKSSYB103K16
	C	3511-3513,5698	CCSSCH101J50
	C	3515-3517	CKSSYB102K50
J	C	3518-3520,3522-3525	CKSSYB104K10
	C	3521,4465,4466	CKSSYB103K16
	C	4002,4004,4013,4015	CKSRYB104K25
	C	4005-4008,4014,4016	CCSRCH102J50
	C	4009-4012	CCSRCH101J50
K	C	4021,4058,4065-4072	CKSRYB104K25
	C	4022,4023,4455,4456	CEVW470M25
	C	4037-4040,4437-4440	CEVW220M16
	C	4041,4042,4045,4046	CEVW470M6R3
	C	4043,4044,4047,4048	CKSSYB104K10
L	C	4049,4050,4075,4077	CCSSCH102J50
	C	4057,4061,4401,4403	CCSRCH102J50
	C	4063,4064,4073,4074	CKSSYB104K10
	C	4076,4078,4477,4481 (10 uF/10 V)	CCG1192

Mark	No.	Description	Part No.
M	C	4079,4080,4449,4476	CCSSCH102J50
	C	4402,4404,4430,4432	CKSRYB104K25
	C	4405-4408	CCSRCH331J50
	C	4409-4412,4827,4828	CCSRCH471J50
	C	4413-4416 (220 uF/16 V)	CCH2090
N	C	4421-4424 (0.012 uF)	ACE7125
	C	4425-4428 (3300 pF)	DCG1049
	C	4429,4431,4451,4453	CCSRCH102J50
	C	4441,4442,4445,4446	CEVW470M6R3
	C	4443,4444,4447,4448	CKSSYB104K10
O	C	4450,4463,4464,4475	CKSSYB104K10
	C	4452,4454,4459-4462	CKSRYB104K25
	C	4467-4474,4802,4804	CKSRYB104K25
	C	4478-4480,4482,4857	CCSSCH102J50
	C	4805-4808 (0.01 uF/50 V)	ACE7113
P	C	4813,4822,5601,5602	CEVW470M25
	C	4814-4817,4848,4852	CCSRCH102J50
	C	4823,4824	CKSRYB471K50
	C	4825,4826,4833,4834	CCSRCH821J50
	C	4830	CKSSYB103K25
Q	C	4835,4836,4839,4840	CKSRYB104K25
	C	4837,4838	CEVWNP220M16
	C	4841,4842	CEVW220M16
	C	4843,4845	CEVW470M6R3
	C	4844,4846,4847,4854	CKSSYB104K10
R	C	4849,4853,4856,5201	CKSRYB104K25
	C	4855	CKSRYB102K50
	C	4858,4860,5211	CCSSCH102J50
	C	4859 (10 uF/10 V)	CCG1192
	C	4861,4862	CCSRCH471J50
S	C	5202,5207,5229,5231	CCSRCH102J50
	C	5203,5228,5230	CKSRYB104K25
	C	5204,5209,5212,5216	CKSSYB104K10
	C	5210,5226 (100 uF/16 V)	ACG7114
	C	5213-5215,5218,5219	CCSSCH102J50
T	C	5217,5220,5221,5225	CKSSYB104K10
	C	5223	CEHVAW221M6R3
	C	5224	CCSSCH102J50
	C	5227 (100 uF/25 V)	CCH2000
	C	5611-5614	CCSRCH821J50
U	C	5615-5622	CCSRCH681J50
	C	5623,5624,5650,5651	CCSRCH221J50
	C	5625-5628,5633,5634	CKSRYB104K25
	C	5629-5632,5655-5658	CCSRCH820J50
	C	5639-5642,5653,5654	CKSRYB104K25
V	C	5643,5644	CCSRCH271J50
	C	5646-5649	CCSRCH121J50
	C	5660,5661,5665	CKSRYB104K25
	C	5664,5666	CCSRCH330J50
	C	5667-5669,5671-5674	CKSRYB104K25
W	C	5676,5677	CEVW471M10
	C	5678-5685,5689,5690	CKSRYB104K25
	C	5699-5702	CKSSYB103K16

Mark	No.	Description	Part No.
SUB ASSY			
Consists of			
JOGL ASSY			
PSWB ASSY			
MOUT ASSY			
HPJK ASSY			
BFXB ASSY			
JOGR ASSY			

B**C****E****N****O****P**

SUB ASSY

SEMICONDUCTORS

IC 9451,9452,9601,9602	NJM4580DD
IC 9453	NJM4580MD
Q 9451-9456,9601-9604	INC2002AC1
Q 9779	2SC4081
D 9775-9778,9781-9784	1SS355
D 9779,9780	SLR343BD2T

MISCELLANEOUS

JA 9451,9452 CANON CONNECTOR	DKB1093
JA 9453 RCA JACK	DKB1125
JA 9601,9602,9701 6.5 DIA JACK	DKN1669
JA 9702 STEREO MINI JACK	XKN3017
JA 9851 DC POWER JACK	DKN1649

KN 9775,9776,9851 EARTH TERMINAL	AKF7002
S 9775-9778 SLIDE SWITCH	DSH1058
S 9779 ROTARY SWITCH	DSG1144
S 9780 TACT SWITCH	DSG1079
S 9781 ROTARY ENCODER	DSX1137

S 9851 PUSH SW	ASG1102
CN 9451 L-PLUG(16P)	KM200NA16L
CN 9701 L-PLUG(4P)	KM200NA4L
CN 9726,9751 4P CONNECTOR	VKN1264
CN 9775 15P CONNECTOR	VKN1275

CN 9851 L-PLUG(5P)	KM200NA5L
1001 CANON SHIELD	DNF1789
1002 PHONE SHIELD	DNF1875
P 9851 PROTECTOR (4.000 A)	DEK1104
PC 9726,9751 PHOTO INTERRUPTER	KE-2N18-15

VA 9451-9459,9601-9605 VARISTORS	EZJZ1V270RM
VA 9701,9851,9852 VARISTORS	EZJZ1V270RM

RESISTORS

R 9451-9458,9601-9608	RS1/10SR5601D
R 9459,9460	RS1/10SR2202D
R 9461,9462	RS1/10SR1002D
R 9463-9470,9609-9616	RS1/10SR6801D
R 9471-9474,9617-9620	RD1/2VM331J

R 9475,9477	RS1/10SR6800D
R 9479-9482,9621-9624	RS1/10SR2201D
VR 9775 POTENTIOMETER	DCS1065
Other Resistors	RS1/10SR###J

CAPACITORS

C 9451-9454,9460-9463	CCSRCH101J50
C 9455-9459,9464,9471	CKSRYB104K25
C 9465-9468,9470,9474 (220 uF/25 V)	ACH1482
C 9469,9473,9613-9616	CEAT101M16
C 9472,9475,9476	CKSRYB104K25

C 9477-9480,9619-9622 (470 pF/50 V)	ACE7119
C 9481,9482 (2200 pF/63 V)	ACE7116

Mark	No.	Description	Part No.
C	9483,9485,9487,9623		CKSRYB102K50
C	9484,9486,9488,9624		CKSQYB104K50
C	9489-9492,9601-9604		CCSRCH101J50
C	9605-9608,9705,9853		CKSRYB104K25
C	9609-9612,9625-9628		CCSRCH101J50
C	9617,9618		CEAT101M25
C	9701-9704,9727,9728		CKSRYB103K50
C	9706,9859		CKSRYB102K50

C	9726,9751	CKSRYB105K10
C	9752,9753,9781	CKSRYB103K50
C	9775	CKSQYB105K16
C	9776,9778-9780	CKSRYB104K16
C	9777,9851 (10 uF/16 V)	DCH1263

C	9852	CCSRCH101J50
C	9854	CKSRYB103K25
C	9855 (4700 pF/63 V)	ACE7115
C	9856 (1 uF/25 V)	ACE7129
C	9857 (3.3 uF/16 V)	DCE1029

C	9858	CKSRYB104K25
---	------	--------------

D

MIXER ASSY

SEMICONDUCTORS

IC 8801-8804	TC74HC4051AF
IC 8805	NJM2903M
Q 8601-8604,8607-8616	2SC4081
Q 8605,8617,8619,8621	LTC124EUB
Q 8606	2SB1694

NSP

Q 8618,8620,8622,8624	2SB1689
Q 8623,8625,8627,8629	LTC124EUB
Q 8626,8628,8630	2SB1689
Q 8801-8805,8810-8813	LTC124EUB
Q 8814	LTA143EUB

D 8601-8604	SLR343WBD2PT
D 8605,8606,8609-8611	LTL17KSL5D-P
D 8607,8608,8618,8619	LTL17KRH5D-P
D 8612-8615,8623-8626	LTL17KGH5D-P
D 8616,8617,8620-8622	LTL17KSL5D-P

D 8627,8628,8631-8633	LTL17KSL5D-P
D 8629,8630,8640,8641	LTL17KRH5D-P
D 8634-8637,8645-8648	LTL17KGH5D-P
D 8638,8639,8642-8644	LTL17KSL5D-P
D 8649,8650,8653-8655	LTL17KSL5D-P

D 8651,8652,8662,8663	LTL17KRH5D-P
D 8656-8659,8667-8670	LTL17KGH5D-P
D 8660,8661,8664-8666	LTL17KSL5D-P
D 8671,8672	LTL17KRH5D-P
D 8801-8837	1SS355

MISCELLANEOUS

S 8801,8802,8805-8809 TACT SWITCH	DSG1079
S 8803,8804,8810 SLIDE SWITCH	DSH1058
S 8811,8815 SLIDE SWITCH	DSH1058
S 8812-8814,8816,8817 TACT SWITCH	DSG1079
CN 8601 L-PLUG(6P)	KM200NA6L

CN 8603 15P CONNECTOR	VKN1246
CN 8604,8605 30P CONNECTOR	VKN1261

RESISTORS

Mark	No.	Description	Part No.
A	VR 8801-8804	VARIABLE RESISTOR	DCV1020
	VR 8805,8811,8812,8820	ROTARY VR	DCS1117
	VR 8806-8810,8813	ROTARY VR	DCS1116
	VR 8814,8827	POTENTIOMETER	DCS1110
	VR 8815-8819,8821-8824	ROTARY VR	DCS1116
	VR 8825,8826,8828,8833	ROTARY VR	DCS1117
	VR 8829-8832	ROTARY VR	DCS1116
	Other Resistors		RS1/10SR###J

CAPACITORS

C 8601-8608,8612,8613	CKSRYB104K16
C 8609,8610	CEJQ101M16
C 8611,8874	CEJQ470M6R3
C 8801-8804,8823-8826	CKSRYB104K16
C 8807-8822,8828-8831	CCSRCH471J50
C 8833-8838,8840,8841	CCSRCH471J50
C 8843-8869,8875-8878	CKSRYB104K16
C 8870-8873	CCSRCH681J50

DECPAD ASSY

Consists of

LOOP ASSY

BRWS ASSY

PADB ASSY

PLAY ASSY

F G H I DECPAD ASSY

SEMICONDUCTORS

Q 8902-8905,8953	LTC123JUB
Q 8951	LTA114EUB
Q 9001,9032,9034,9036	LTC124EUB
Q 9002-9013	LTC123JUB
Q 9033,9035,9037,9039	2SB1689
Q 9038,9251-9253	LTC124EUB
D 8901,8904,8951,8954	LTL17KRH5D-P
D 8902,8903,8905-8907	LTL17KSL5D-P
D 9019,9035,9051	LTL17KRH5D-P
D 9020,9022,9024,9026	1SS355
D 9021	SLR343BD2T
D 9023,9025,9027,9039	NSSM124F-A21107
D 9028-9034,9036,9040	1SS355VM
D 9041,9043,9053,9055	NSSM124F-A21107
D 9042,9044-9050,9052	1SS355VM
D 9054,9056,9058-9064	1SS355VM
D 9057,9067,9069,9072	NSSM124F-A21107
D 9065	SLR343WBD2PT
D 9066,9068,9070,9071	1SS355VM
D 9073-9078,9251-9266	1SS355
D 9401	LTL17KCGP4J
D 9402	LTL17KSL5D-P

MISCELLANEOUS

S 8901-8904,8953,8955	TACT SWITCH	DSG1079
S 8905,8952,8954	TACTILE SWITCH	DSG1143
S 8951	ROTARY ENCODER	DSX1133
S 9251-9264	TACT SWITCH	DSG1079
S 9401,9402	TACT SWITCH	DSG1117
CN 8901,8951	FFC/FPC CONNECTOR	CKS6638
CN 8902	FFC/FPC CONNECTOR	CKS6649

Mark	No.	Description	Part No.
	CN 9001	FFC/FPC CONNECTOR	CKS6643
	CN 9002,9401	CONNECTOR	CKS6095
	CN 9251	FFC/FPC CONNECTOR	CKS6387

RESISTORS

R 9047,9076,9104,9129	RS1/4SA391J
R 9053,9067,9068,9083	RS1/4SA431J
R 9057,9060,9086,9088	RS1/8SQ331J
R 9058,9061,9087,9091	RS1/8SQ621J
R 9059,9089,9114,9137	RS1/16SS152J
R 9062,9063,9090,9092	RS1/8SQ561J
R 9064,9095,9118,9143	RS1/16SS103J
R 9065,9096,9119,9144	RS1/16SS563J
R 9066,9069,9094,9098	RS1/4SA681J
R 9070,9071,9099,9100	RS1/4SA471J
R 9093,9097,9109,9121	RS1/4SA431J
R 9111,9115,9136,9139	RS1/8SQ621J
R 9112,9113,9138,9140	RS1/8SQ331J
R 9116,9117,9141,9142	RS1/8SQ561J
R 9120,9123,9145,9147	RS1/4SA681J
R 9122,9133,9146,9148	RS1/4SA431J
R 9124,9125,9149,9150	RS1/4SA471J
R 9254-9261	RS1/16SS332J
R 9262,9263	RS1/10SR2201D
R 9267	RS1/4SA0R0J

VR 9251 SLIDE VR
Other Resistors

DCV1033
RS1/10SR###J

CAPACITORS

C 8901-8905,8951-8956	CKSRYB103K25
C 8908 (10 uF/16 V)	DCH1263
C 8909,8957,8958,9002	CKSRYB104K25
C 9001	CKSQYB105K16
C 9251,9252,9401,9402	CKSRYB103K25
C 9253-9258,9263,9264	CKSSYB103K16
C 9259 (10 uF/10 V)	DCH1201
C 9267	CKSSYB104K10
C 9268	CEVW470M6R3
C 9269,9270	CKSRYB392K50
C 9403	CKSRYB104K25

DISP ASSY

Consists of

LCDL ASSY

LCDR ASSY

OLED ASSY

CRFB ASSY

J K L M DISP ASSY

SEMICONDUCTORS

NSP IC 7001,7501	R5S72690RW266FP
IC 7002,7502	DYW2172
*Part number of the initial firmware equipped	
⚠ IC 7003,7503	BD00IC0WEFJ
IC 8551,8552	EQ-730L
IC 8553	NJM12904V
Q 7002,7007,7010,7502	2SC4081
Q 7008,7009,7508,7509	LSAR523UB
Q 7507,7510	2SC4081

5		6		7		8	
Mark	No. Description	Part No.	Mark	No. Description	Part No.		
	D 7001-7004,7501-7504	SLR343WBD2PT					
MISCELLANEOUS							
	L 7001,7016 CHIP INDUCTOR (10 uH)	DTL1105		C 7134,7154,7157,7168	CCSSCH102J50		
	L 7002-7005,7502-7505 INDUCTOR	CTF1545		C 7135,7509,7543,7559	CKSSYB103K16		A
	L 7006,7506 INDUCTOR	CTF1793		C 7136,7138,7156,7167	CKSSYB104K10		
	L 7007-7015,7017 CHIP BEADS	VTL1126		C 7149,7153,7162,7163	CCSSCH101J50		
	L 7501,7516 CHIP INDUCTOR (10 uH)	DTL1105		C 7155,7655	CKSQYB225K16		
	L 7507-7515,7517 CHIP BEADS	VTL1126		C 7158,7159,7658,7659	CKSRYP104K25		
	X 7001,7501 CRYSTAL RESONATOR (13.3333 MHz)	CSS1840		C 7165,7633,7639-7642	CCSSCH101J50		
	CN 7002,7502 FPC CONNECTOR	DKN1667		C 7566,7571,7584,7585	CKSSYB104K10		
	CN 7003,7503 CONNECTOR	CKS6115		C 7568-7570,7637,7666 (10 uF/10 V)	CCG1192		
	CN 7004,7504 FPC/FPC CONNECTOR	CKS6625		C 7577,7588-7609	CKSSYB103K16		
	CN 7005,7505 CONNECTOR	CKS1072		C 7611-7630,7635,8501	CKSSYB103K16		
	CN 8501 CONNECTOR	CKS3851		C 7634,7654,7657,7668	CCSSCH102J50		
	CN 8502 FPC/FPC CONNECTOR	CKS6476		C 7636,7638,7656,7667	CKSSYB104K10		B
	CN 8551 CONNECTOR	AKM1274		C 7648,7649,7653,7662	CCSSCH101J50		
	8551,8552 HOLDER	DNK6449		C 7663,7665	CCSSCH101J50		
	VA 8551,8552 VARISTORS	EZJZ1V270RM		C 8502	CKSSYB104K10		
				C 8503,8507,8551-8553	CKSRYP104K25		
				C 8504 (47 uF/25 V)	CCG1222		
				C 8505 (10 uF/35 V)	CCG1236		
				C 8506	CKSQYB105K25		
RESISTORS							
	R 7005,7043,7119-7122	RS1/16SS472J					
	R 7006,7031-7038,7044	RS1/16SS103J					
	R 7027,7124,7527,7624	RS1/16SS102J					
	R 7028,7528	RS1/16SS562J					
	R 7029,7047,7049,7083	RS1/16SS0R0J					C
	R 7039,7143-7170	RS1/8SQ0R0J					
	R 7041,7541	RS1/16SS2402F					
	R 7042,7542	RS1/16SS222J					
	R 7051,7114-7116,7123	RS1/16SS103J					
	R 7052,7058,7060,7082	RS1/16SS104J					
	R 7064,7564	RS1/10SR9101D					
	R 7065,7565	RS1/10SR1602D					
	R 7084,7105,7106,7134	RS1/16SS0R0J					
	R 7135,7529,7547,7549	RS1/16SS0R0J					
	R 7171,7671	RS1/16SS105J					
	R 7172-7178,7539	RS1/8SQ0R0J					D
	R 7505,7543,7619-7622	RS1/16SS472J					
	R 7506,7531-7538,7544	RS1/16SS103J					
	R 7551,7614-7616,7623	RS1/16SS103J					
	R 7552,7558,7560,7582	RS1/16SS104J					
	R 7583,7584,7605,7606	RS1/16SS0R0J					
	R 7634,7635	RS1/16SS0R0J					
	R 7643-7670,7672-7678	RS1/8SQ0R0J					
	R 8501-8505	RS1/16SS223J					
	R 8506	RS1/16SS101J					
	R 8553	RS1/10SR5102D					E
	R 8556	RS1/10SR1502D					
	R 8557	RS1/10SR2001D					
	Other Resistors	RS1/10SR###J					
CAPACITORS							
	C 7009,7043,7059,7077	CKSSYB103K16					
	C 7064,7065,7564,7565	CCSSCH120J50					
	C 7066,7071,7084,7085	CKSSYB104K10					
	C 7067,7567	CKSRYP105K10					
	C 7068-7070,7137,7166 (10 uF/10 V)	CCG1192					
	C 7080,7081,7580,7581 (47 uF/16 V)	CCH1961					
	C 7086,7087,7586,7587	CCSSCH471J50					F
	C 7088-7109,7111-7130	CKSSYB103K16					
	C 7131,7132,7631,7632	CCSSCH470J50					
	C 7133,7139-7142,7148	CCSSCH101J50					