



EXPLODED VIEW (DVD MECHANISM)

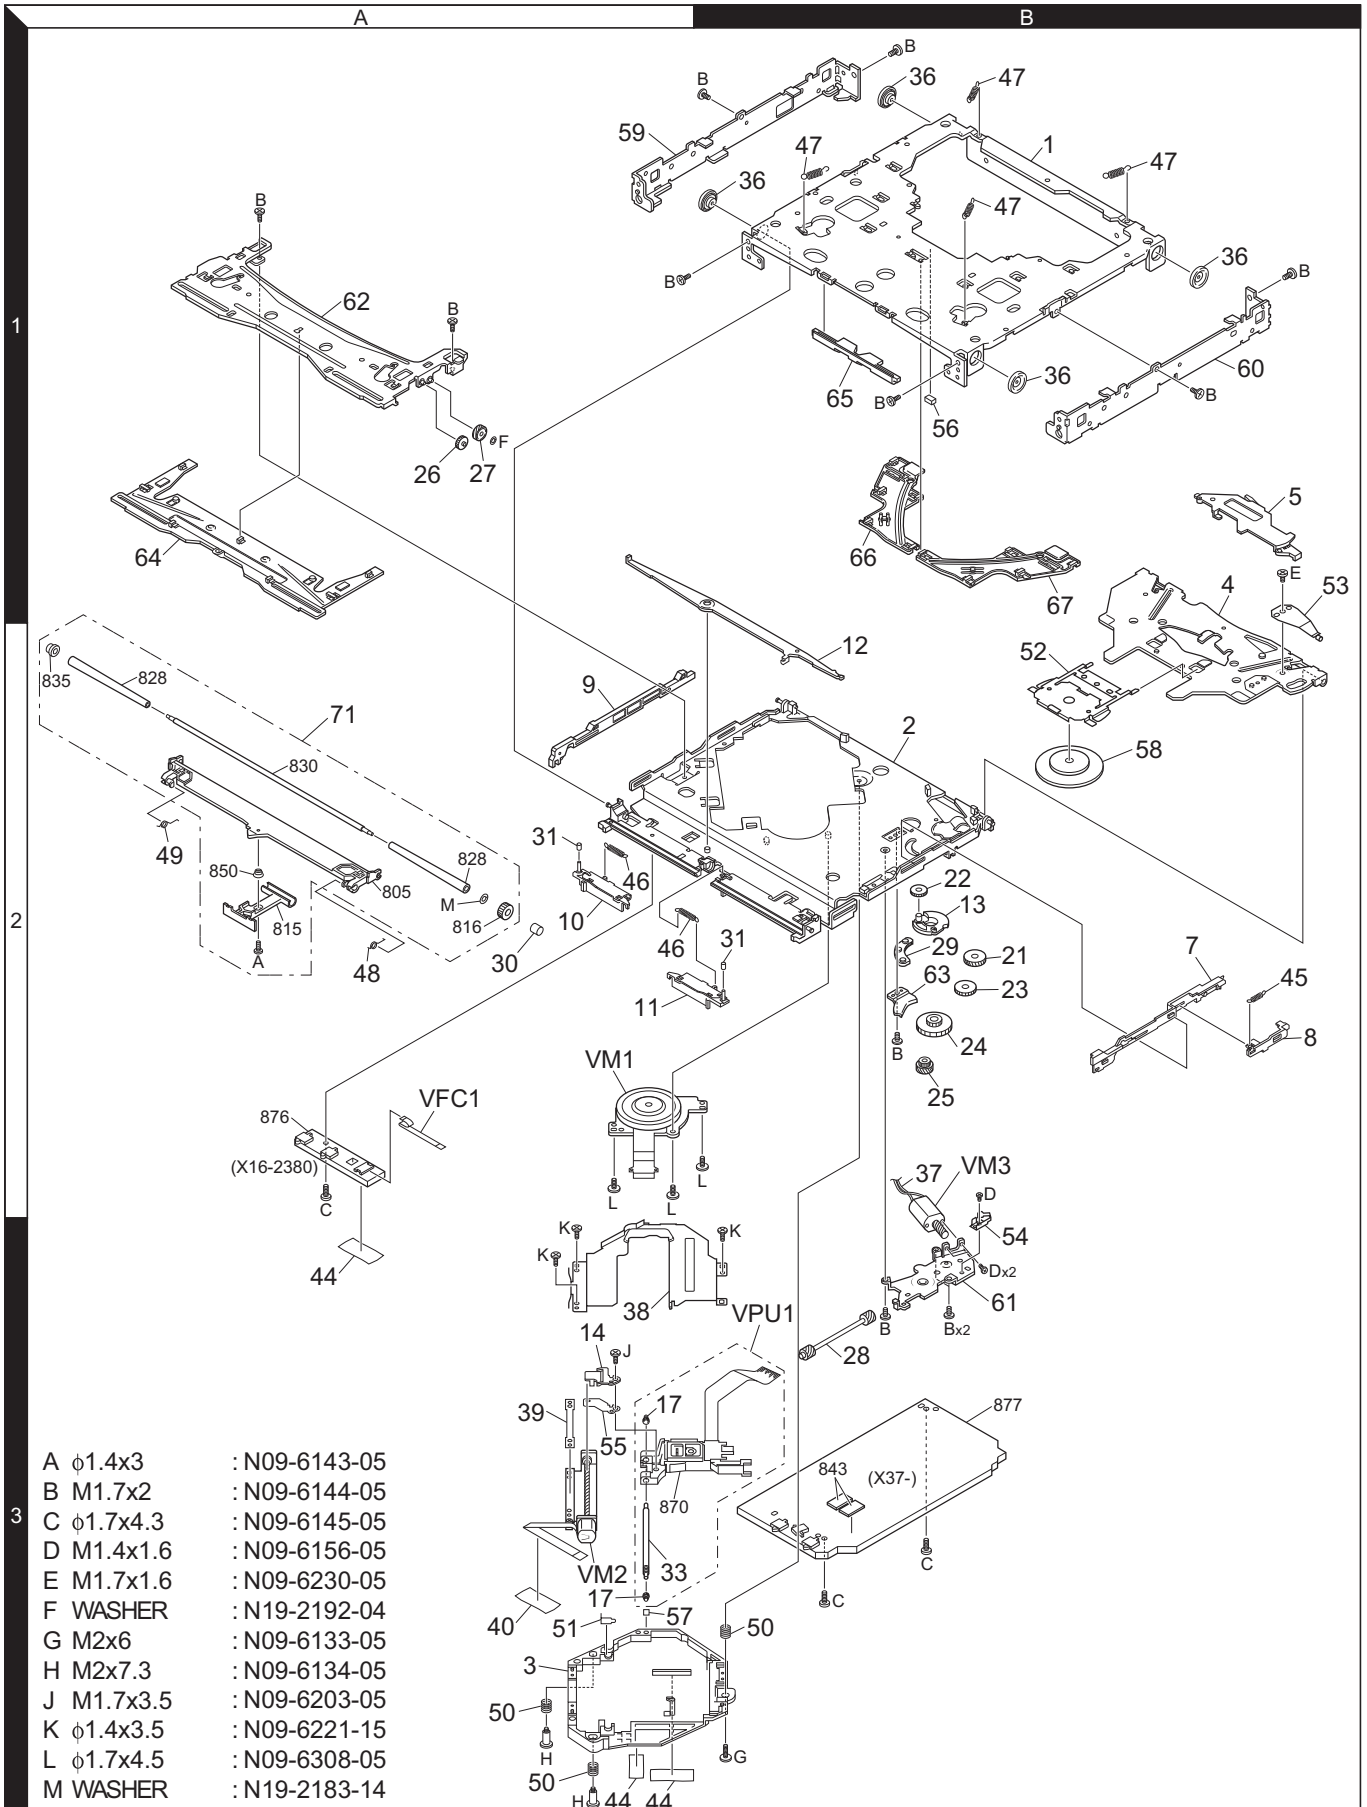


Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

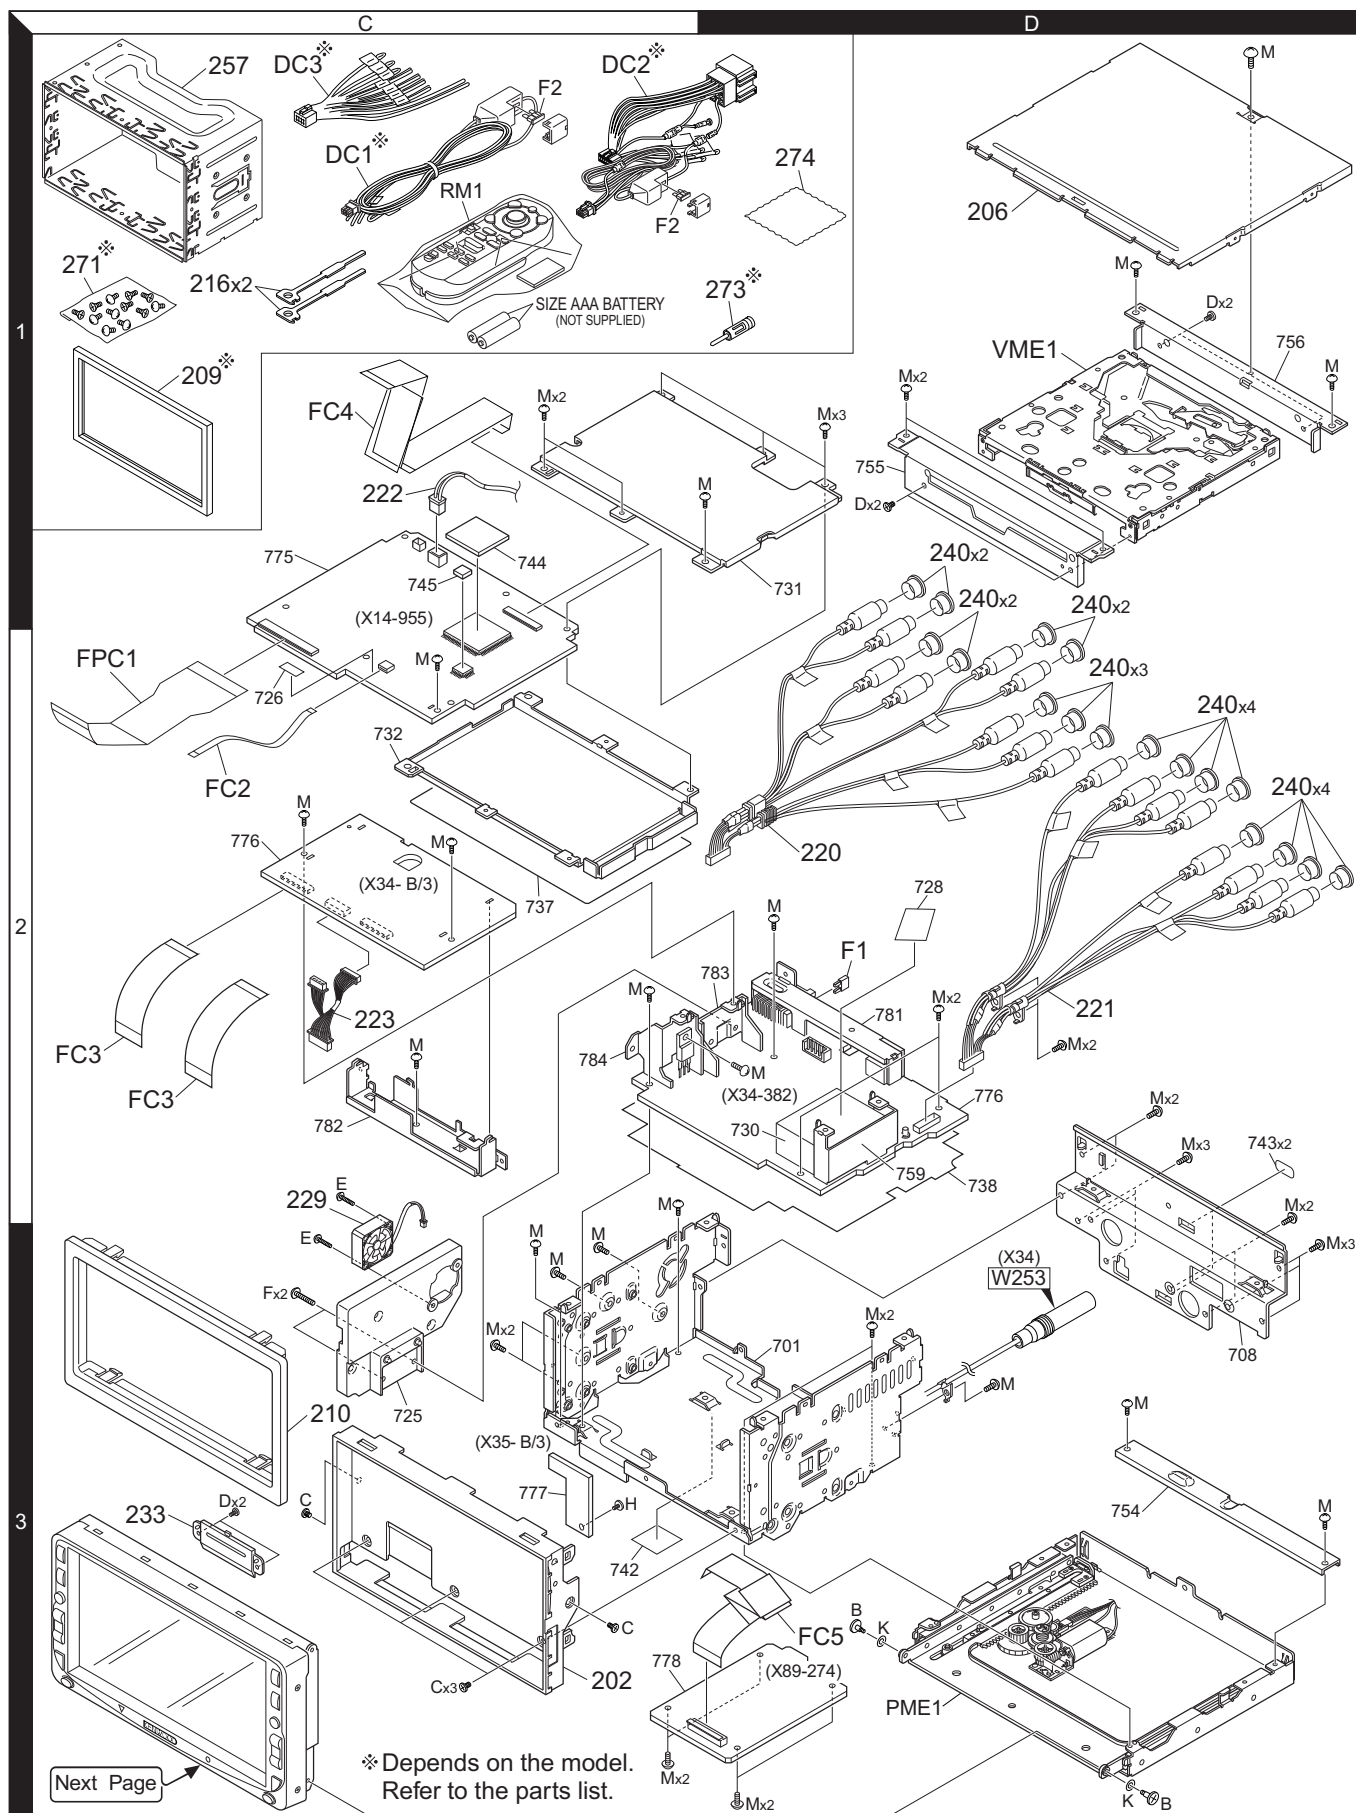


EXPLODED VIEW (PANEL)

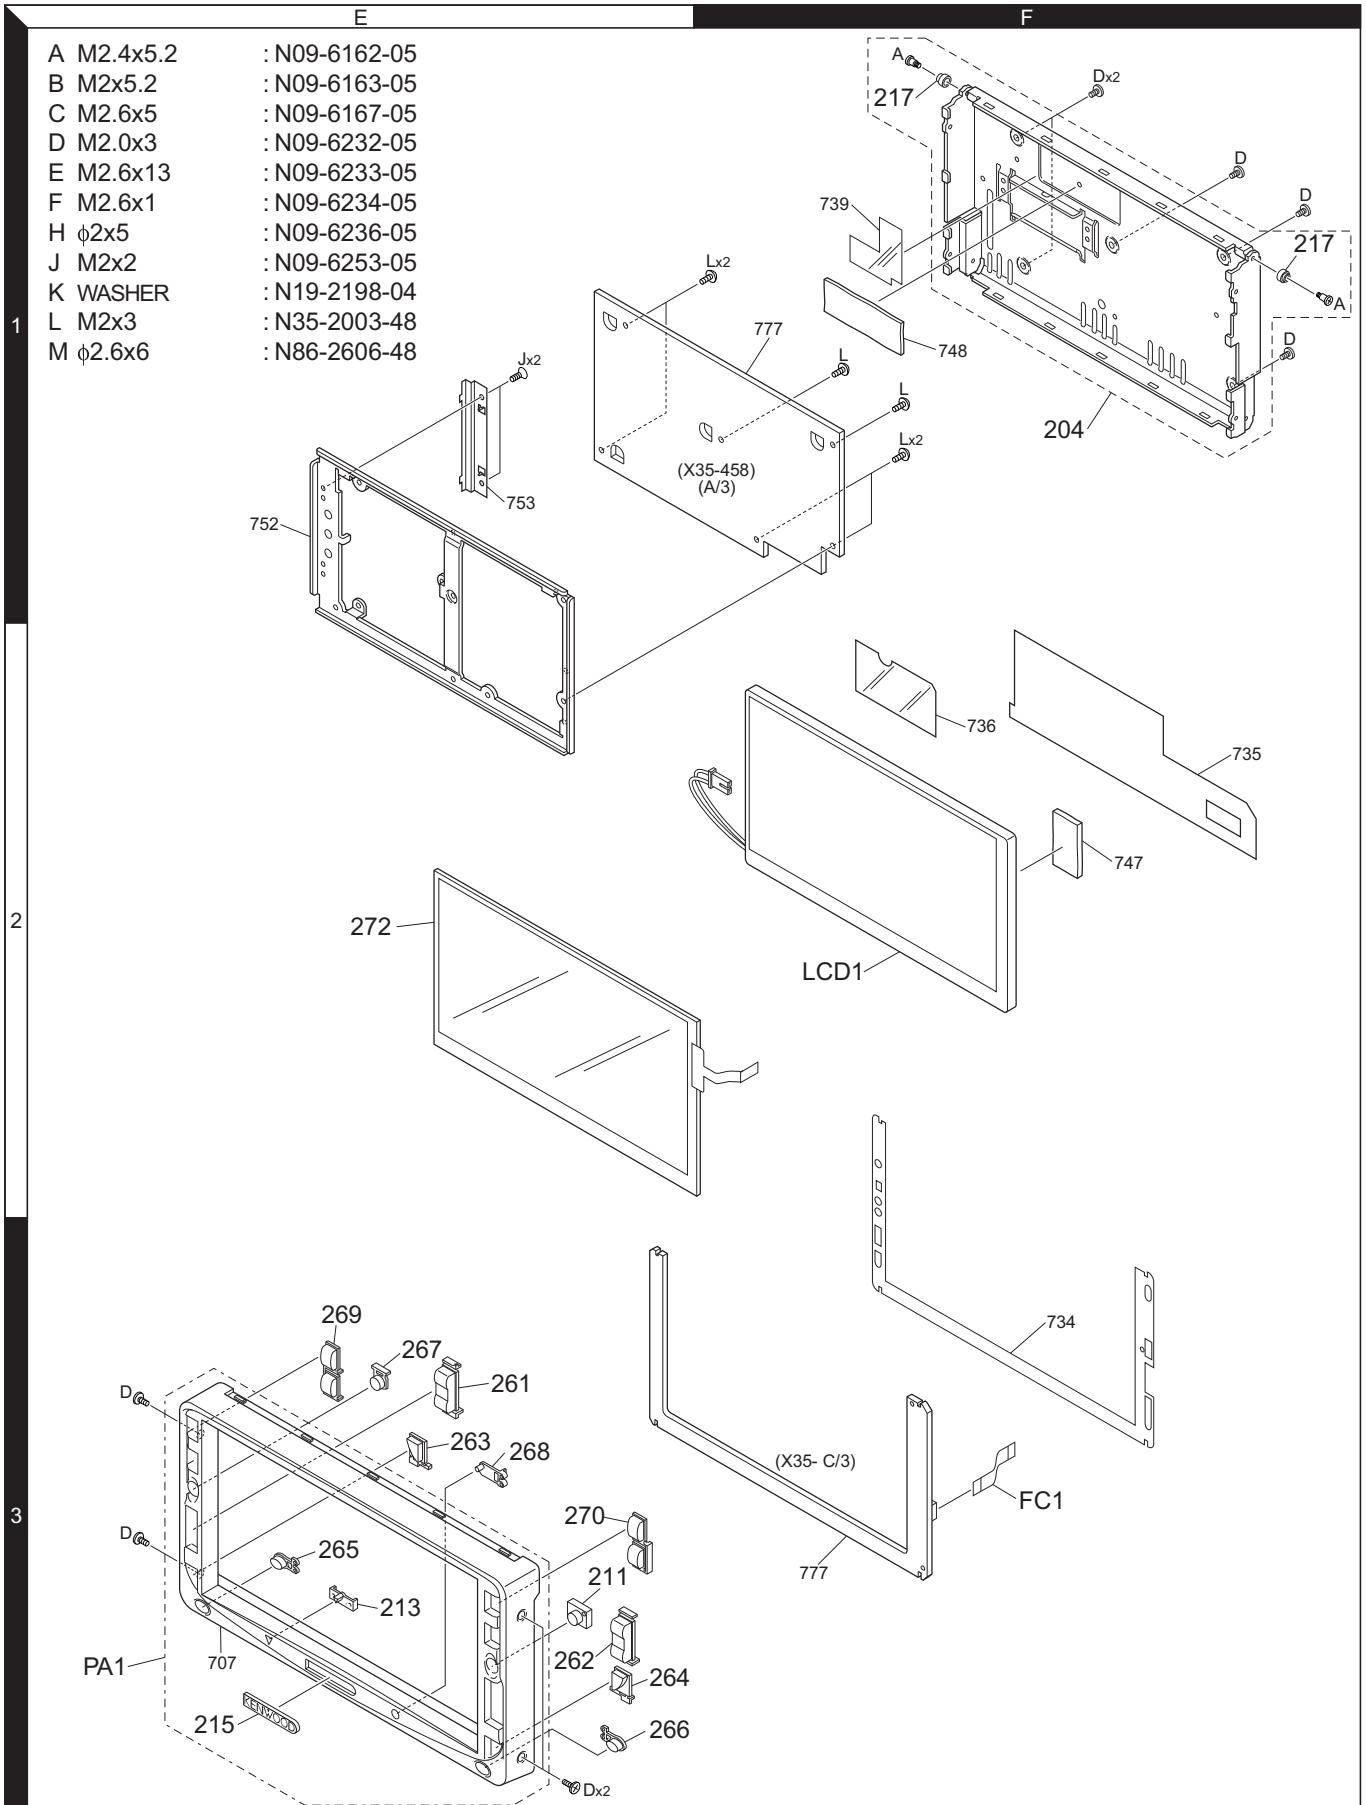

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL MECHANISM)

A	M1.7x4	: N09-6147-08
B	φ2x2.3	: N09-6148-08
D	φ2x2.3	: N09-6150-08
E		: N09-6151-08
F	WASHER1.6x3.5	: N19-2105-14

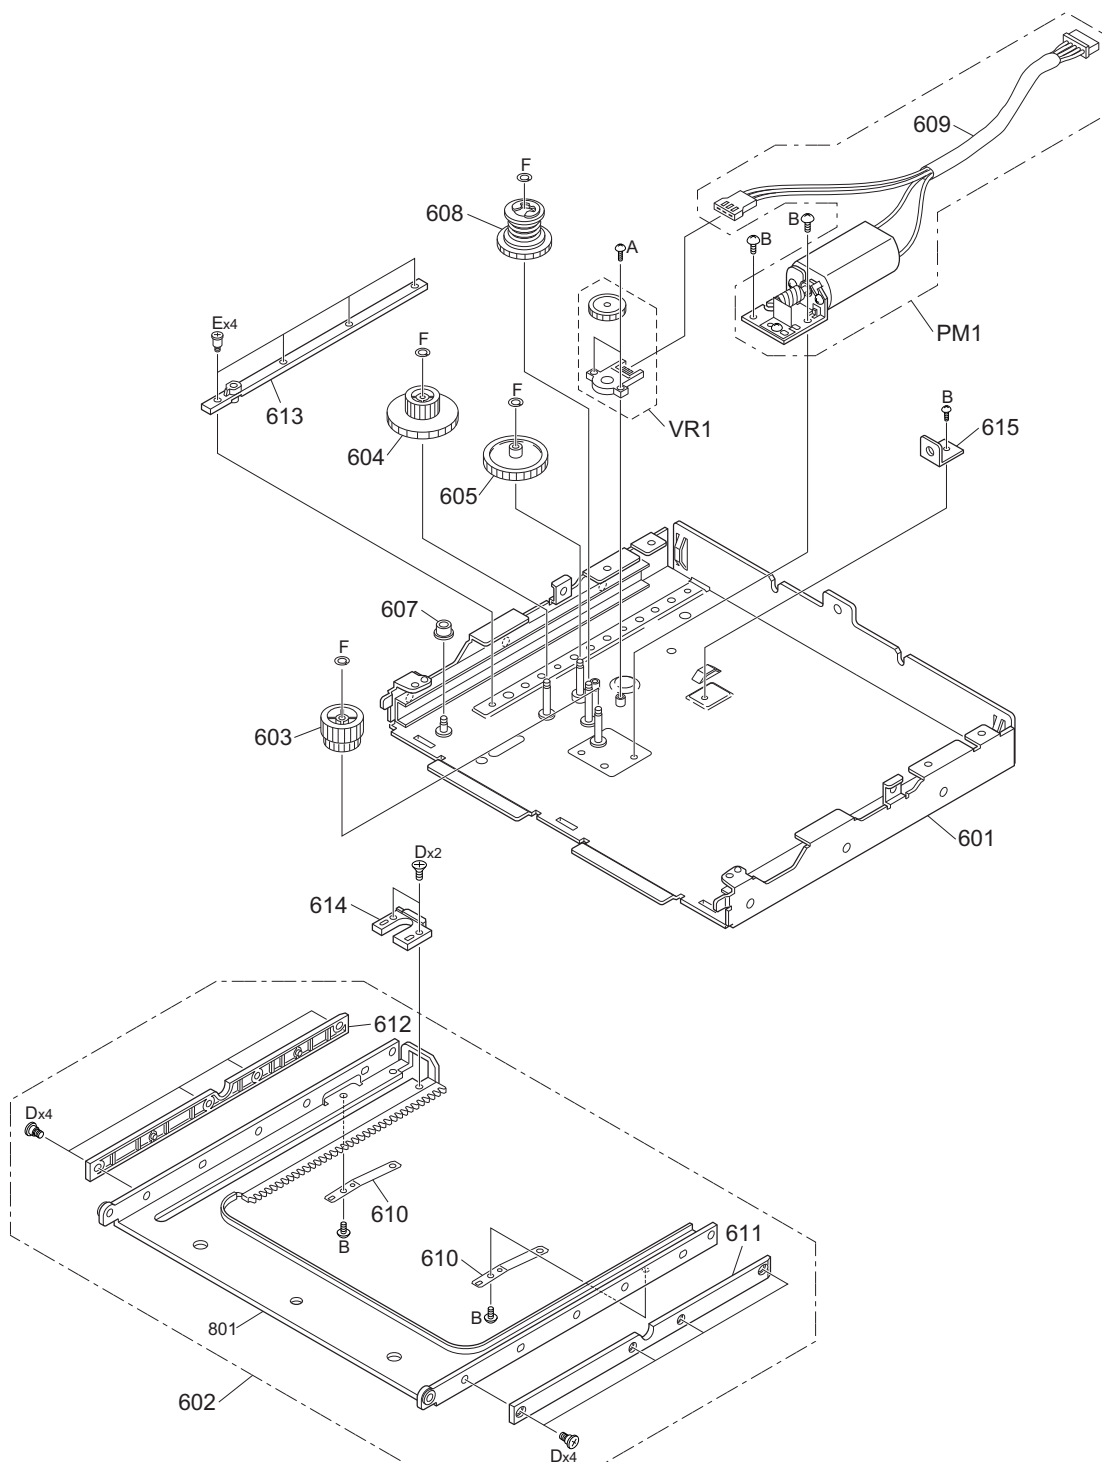

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
DDX8017/8027/8027Y/8037/8047/8067						FC3	2C	*	E39-0773-05	FLAT CABLE	
202	3C	*	A22-3086-02	SUB PANEL ASSY	K	FC4	1C	*	E39-0770-15	FLAT CABLE	
202	3C	*	A22-3087-02	SUB PANEL ASSY	E1E2M1	FC5	3D	*	E39-0776-05	FLAT CABLE	
202	3C	*	A22-3087-02	SUB PANEL ASSY	X1C	229	2C	*	F09-1992-05	FAN	
204	1F	*	A46-1801-13	REAR COVER ASSY		233	3C		F19-1426-03	COVER	
206	1D		A52-0854-12	TOP PLATE		240	2D		F29-0626-04	INSULATING COVER	
PA1	3E	*	A64-3576-01	PANEL ASSY	K	△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) 10A	
PA1	3E	*	A64-3577-01	PANEL ASSY	E1E2	△ F2	1C		F52-0004-05	FUSE (MINI BLADE TYPE) 5A	
PA1	3E	*	A64-3578-01	PANEL ASSY	M1	-			H10-4917-02	POLYSTYRENE FOAMED FIXTURE	
PA1	3E	*	A64-3579-01	PANEL ASSY	X1	-			H10-4918-02	POLYSTYRENE FOAMED FIXTURE	
PA1	3E	*	A64-3580-01	PANEL ASSY	C	-			H12-2745-04	PACKING FIXTURE	
RM1	1C		A70-2072-05	REMOTE CONTROLLER AS (RC-DV601)		-			H25-0338-04	PROTECTION BAG (250X350X0.03)	
-			B46-0100-50	WARRANTY CARD	KE1E2	-		*	H54-3524-03	ITEM CARTON CASE	K
-			B46-0100-50	WARRANTY CARD	M1X1	-		*	H54-3525-03	ITEM CARTON CASE	E1
-			B46-0612-14	ID CARD	E1E2M1	-		*	H54-3526-03	ITEM CARTON CASE	E2
-			B46-0612-14	ID CARD	X1	-		*	H54-3527-03	ITEM CARTON CASE	M1
-			B46-0639-00	WARRANTY CARD	C	-		*	H54-3528-03	ITEM CARTON CASE	X1
-			B46-0657-04	ID CARD	C	-		*	H54-3529-03	ITEM CARTON CASE	C
-		*	B54-4467-00	INSTALLATION MANUAL	K	257	1C		J22-0171-03	MOUNTING HARDWARE ASSY	
-		*	B54-4468-00	INSTALLATION MANUAL	E1E2	FPC1	2C		J84-0173-05	FLEXIBLE PRINTED WIRING BOARD	
-		*	B54-4469-00	INSTALLATION MANUAL	M1X1C	261	3E		K24-4149-03	PUSH KNOB (VOL)	
-		*	B64-3185-00	INSTRUCTION MANUAL (ENGLISH)	K	262	3E		K24-4150-03	PUSH KNOB (SEEK)	
-		*	B64-3186-00	INSTRUCTION MANUAL (FRENCH)	K	263	3E		K24-4151-13	PUSH KNOB (ATT)	
-		*	B64-3187-00	INSTRUCTION MANUAL (SPANISH)	K	264	3E		K24-4152-13	PUSH KNOB (TI)	E1E2M1
-		*	B64-3188-00	INSTRUCTION MANUAL (ENGLISH)	E1E2	264	3E		K24-4171-13	PUSH KNOB (AUTO)	KX1C
-		*	B64-3189-00	INSTRUCTION MANUAL (FRENCH)	E1	265	3E	*	K24-4416-03	PUSH KNOB (V.SEL)	
-		*	B64-3190-00	INSTRUCTION MANUAL (GERMAN)	E1	266	3E	*	K24-4417-03	PUSH KNOB (PLAY/PAUSE)	
-		*	B64-3191-00	INSTRUCTION MANUAL (DUTCH)	E1	267	3E		K24-4155-13	PUSH KNOB (SRC)	
-		*	B64-3192-00	INSTRUCTION MANUAL (ITALIAN)	E1	268	3E		K24-4156-14	PUSH KNOB (RESET)	
-		*	B64-3193-00	INSTRUCTION MANUAL (SPANISH)	E1	269	3E		K25-1638-03	PUSH KNOB (EJECT, FUNC)	
-		*	B64-3194-00	INSTRUCTION MANUAL (PORTUGUESE)	E1	270	3E		K25-1639-03	PUSH KNOB (MODE, SCRN)	
-		*	B64-3195-00	INSTRUCTION MANUAL (ENGLISH)	M1X1C	271	1C	*	N99-1776-05	SCREW SET	KM1X1C
-		*	B64-3196-00	INSTRUCTION MANUAL (T-CHINESE)	M1	A	1F		N09-6162-05	STEPPED SCREW (M2.4X5.2)	
-		*	B64-3197-00	INSTRUCTION MANUAL (KOREAN)	M1	B	3D		N09-6163-05	STEPPED SCREW (M2X5.2)	
-		*	B64-3198-00	INSTRUCTION MANUAL (S-CHINESE)	C	C	3C		N09-6167-05	MACHINE SCREW (M2.6X5)	
209	1C		B07-3046-04	ESCUTCHEON ASSY	M1X1C	D	3C		N09-6232-05	MACHINE SCREW (M2.0X3)	
210	3C		B07-3105-02	ESCUTCHEON		E	2C		N09-6233-05	MACHINE SCREW (M2.6X13)	
211	3E		B10-4546-13	FRONT GLASS		F	3C		N09-6234-05	MACHINE SCREW (M2.6X1)	
213	3E		B19-2262-03	LIGHTING BOARD		H	3C		N09-6236-05	SEMS (TAPTITE SCREW) (2.0X 5)	
215	3E		B43-1271-04	KENWOOD BADGE		J	1E		N09-6253-05	MACHINE SCREW (M2X2)	
LCD1	2F		B38-1153-05	LCD		K	3D		N19-2198-04	FLAT WASHER	
216	1C		D10-4674-04	LEVER		L	1F		N35-2003-48	BINDING HEAD MACHINE SCREW	
217	1F		D14-0792-04	ROLLER		M	2C		N86-2606-48	BINDING HEAD TAPTITE SCREW	
PME1	3D		D40-2201-15	PANEL MECHANISM ASSY		272	2E		S79-0846-05	SWITCH ASSY	
220	2D	*	E30-6487-15	CORD WITH PINPLUG		273	1C		T90-0552-05	ANTENNA ADAPTOR	E1E2
221	2D	*	E30-6489-15	CORD WITH PINPLUG		274	1C		W01-1620-05	CLEANING CLOTH	
222	1C	*	E39-0777-05	WIRING HARNESS		VME1	1D		X92-5130-00	MECHANISM ASSY	
223	2C	*	E39-0779-15	WIRING HARNESS							
DC1	1C		E30-6475-15	DC CORD	KM1X1C						
DC2	1C	*	E30-6477-15	DC CORD	E1E2						
DC3	1C	*	E30-6478-05	DC CORD	KM1X1C						
FC1	3F	*	E39-0780-05	FLAT CABLE							
FC2	2C	*	E39-0781-05	FLAT CABLE							

E1 : DDX8027 E2 : DDX8027Y (Europe)

K : DDX8017 (North America) X1 : DDX8047 (Australia)

C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

Ref. No.	Add	New	Parts No.	Description	Destination
VIDEO CONTROL UNIT (X14-955/956x-xx)					
C1			CK73GB1H103K	CHIP C 0.010UF K	
C2			C90-5670-05	ELECTRO 2200UF 16WV	
C3			CK73GB1H103K	CHIP C 0.010UF K	
C4			CK73FB1E474K	CHIP C 0.47UF K	
C5			CK73GB1H103K	CHIP C 0.010UF K	
C6			CK73FB1C105K	CHIP C 1.0UF K	
C7			CK73GB1H104K	CHIP C 0.10UF K	
C9,10			CK73GB1H104K	CHIP C 0.10UF K	
C11			CC73GCH1H151J	CHIP C 150PF J	
C12-14			CK73GB1H104K	CHIP C 0.10UF K	
C15			CK73GB1A474K	CHIP C 0.47UF K	
C16			CK73EB1E225K	CHIP C 2.2UF K	
C17,18			CK73GB1H102K	CHIP C 1000PF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C21			C93-1367-05	CHIP C 10UF K	
C22			CC73GCH1H391J	CHIP C 390PF J	
C23			C93-1367-05	CHIP C 10UF K	
C24			CE32AU1A560M	CHIP EL 56UF 10WV	
C25			CK73GB1H104K	CHIP C 0.10UF K	
C26,27			C92-1909-05	ELECTRO 22UF 12.5WV	
C28-30			CK73GB1H104K	CHIP C 0.10UF K	
C31			CC73GCH1H151J	CHIP C 150PF J	
C32-34			CK73GB1H104K	CHIP C 0.10UF K	
C35			CK73GB1A474K	CHIP C 0.47UF K	
C36-38			CK73GB1H102K	CHIP C 1000PF K	
C39,40			CK73GB1H104K	CHIP C 0.10UF K	
C41,42			C93-1367-05	CHIP C 10UF K	
C43,44			CC73GCH1H471J	CHIP C 470PF J	
C45,46			CE32AU1A560M	CHIP EL 56UF 10WV	
C47			CK73FB0J106K	CHIP C 10UF K	
C48-51			CK73GB1H104K	CHIP C 0.10UF K	
C52			CC73GCH1H151J	CHIP C 150PF J	
C53,54			CK73GB1H104K	CHIP C 0.10UF K	
C55			CK73FB0J106K	CHIP C 10UF K	
C56			CK73GB1H104K	CHIP C 0.10UF K	
C57			C92-1685-05	ELECTRO 47UF 6.3WV	
C58			CK73GB1A474K	CHIP C 0.47UF K	
C59-61			CK73GB1H102K	CHIP C 1000PF K	
C62,63			CK73GB1H104K	CHIP C 0.10UF K	
C64,65			C93-1367-05	CHIP C 10UF K	
C66,67			CC73GCH1H471J	CHIP C 470PF J	
C68			CE32AU1A560M	CHIP EL 56UF 10WV	
C69			CE32AU0J121M	CHIP EL 120UF 6.3WV	
C70,71			CK73GB1H104K	CHIP C 0.10UF K	
C72,73			CK73GB1H103K	CHIP C 0.010UF K	
C74			CC73GCH1H101J	CHIP C 100PF J	
C80			CK73EB1C106K	CHIP C 10UF K	
C81			C92-1452-05	ELECTRO 100UF 10WV	
C82			CK73GB1H104K	CHIP C 0.10UF K	
C83			C92-1452-05	ELECTRO 100UF 10WV	
C84			CK73GB1H104K	CHIP C 0.10UF K	
C85			CK73FB0J106K	CHIP C 10UF K	
C86			CK73GB1A105K	CHIP C 1.0UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C91			CE32BM1C221M	CHIP EL 220UF 16WV	
C101-103			CK73GB1H103K	CHIP C 0.010UF K	
C104			CK73FB0J106K	CHIP C 10UF K	
C105			CK73GB1H104K	CHIP C 0.10UF K	
C106,107			CC73GCH1H220J	CHIP C 22PF J	
C108			CK73GB1A105K	CHIP C 1.0UF K	
C109			CK73GB1H103K	CHIP C 0.010UF K	
C110			CK73GB1H104K	CHIP C 0.10UF K	
C112			CK73GB1H103K	CHIP C 0.010UF K	
C113-120			CK73GB1H104K	CHIP C 0.10UF K	
C230,231			CK73FB0J106K	CHIP C 10UF K	
C233			CK73GB1H104K	CHIP C 0.10UF K	
C248			CK73FB0J106K	CHIP C 10UF K	
C249			CC73GCH1H270J	CHIP C 27PF J	E1E2M1 X1C
C249			CC73GCH1H270J	CHIP C 27PF J	
C249			CC73GCH1H470J	CHIP C 47PF J	K
C250			CK73GB1H104K	CHIP C 0.10UF K	
C251			CC73GCH1H150J	CHIP C 15PF J	E1E2M1 X1C
C251			CC73GCH1H150J	CHIP C 15PF J	
C252			CC73GCH1H220J	CHIP C 22PF J	
C253			CC73GCH1H180J	CHIP C 18PF J	
C254			CC73GCH1H270J	CHIP C 27PF J	E1E2M1 X1C
C254			CC73GCH1H270J	CHIP C 27PF J	
C255,256			CK73GB0J225K	CHIP C 2.2UF K	
C257-259			CK73GB1A105K	CHIP C 1.0UF K	
C260			CK73GB1H223K	CHIP C 0.022UF K	
C261			CK73GB0J475K	CHIP C 4.7UF K	
C262			CK73GB1H473K	CHIP C 0.047UF K	
C263-266			CK73GB1A105K	CHIP C 1.0UF K	E1E2M1 X1C
C263-266			CK73GB1A105K	CHIP C 1.0UF K	
C267			CK73GB1A474K	CHIP C 0.47UF K	
C268			CK73FB0J106K	CHIP C 10UF K	
C269			CK73GB1H472K	CHIP C 4700PF K	
C270			CK73GB1A105K	CHIP C 1.0UF K	
C271			CK73FB0J106K	CHIP C 10UF K	
C272,273			CK73GB1A105K	CHIP C 1.0UF K	
C274			CK73GB1H223K	CHIP C 0.022UF K	
C275-280			CK73GB1A105K	CHIP C 1.0UF K	
C281			CK73FB1A225K	CHIP C 2.2UF K	
C282			CK73GB1A105K	CHIP C 1.0UF K	
C283			CK73GB1H103K	CHIP C 0.010UF K	
C284,285			CK73FB1A225K	CHIP C 2.2UF K	
C286			CK73GB1A105K	CHIP C 1.0UF K	
C287-294			CK73GB1H104K	CHIP C 0.10UF K	E1E2M1 X1C
C287-294			CK73GB1H104K	CHIP C 0.10UF K	
C289-294			CK73GB1H104K	CHIP C 0.10UF K	K
C400			CK73GB1H332K	CHIP C 3300PF K	
C401,402			CC73GCH1H681J	CHIP C 680PF J	
C403			CK73GB1H104K	CHIP C 0.10UF K	
C404			CK73EB1C106K	CHIP C 10UF K	
C405			CK73GB1H332K	CHIP C 3300PF K	
C406,407			CC73GCH1H681J	CHIP C 680PF J	
C408			CK73EB1A475K	CHIP C 4.7UF K	
C409			CC73GCH1H101J	CHIP C 100PF J	
C410			CK73EB1A475K	CHIP C 4.7UF K	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-955/956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C411			CK73GCH1H101J	CHIP C 100PF J		C751-757			CK73GB1H104K	CHIP C 0.10UF K	
C412			CK73EB1C106K	CHIP C 10UF K		C759-765			CK73GB1H104K	CHIP C 0.10UF K	
C413,414			CK73GB1H104K	CHIP C 0.10UF K		C770-775			CK73GB1H104K	CHIP C 0.10UF K	
C415			CK73FB0J106K	CHIP C 10UF K		C778			CC73GCH1H100D	CHIP C 10PF D	
C416,417			CK73GB1H104K	CHIP C 0.10UF K		C779,780			CK73GB1H103K	CHIP C 0.010UF K	
C419			CK73GB1H104K	CHIP C 0.10UF K		C782			CK73GB1H104K	CHIP C 0.10UF K	
C421			CK73GB1H104K	CHIP C 0.10UF K		C800-809			CK73GB1H104K	CHIP C 0.10UF K	
C470			CK73GB1H104K	CHIP C 0.10UF K		C810,811			CC73GCH1H471J	CHIP C 470PF J	
C471			CK73FB0J106K	CHIP C 10UF K		C812-814			CK73GB1H104K	CHIP C 0.10UF K	
C472,473			CK73GB1H104K	CHIP C 0.10UF K		C815,816			CK73FB0J106K	CHIP C 10UF K	
C501			CK73GB1H104K	CHIP C 0.10UF K		C817			C92-1452-05	ELECTRO 100UF 10WV	
C502			C92-1452-05	ELECTRO 100UF 10WV		C818-823			CK73GB1H104K	CHIP C 0.10UF K	
C520			CK73FB0J106K	CHIP C 10UF K		C825,826			CC73GCH1H150J	CHIP C 15PF J	
C521			CC73GCH1H101J	CHIP C 100PF J		C830			CK73GB1H104K	CHIP C 0.10UF K	
C561-567			CK73GB1H104K	CHIP C 0.10UF K		C832			CC73GCH1H331J	CHIP C 330PF J	
C581			CK73GB1H104K	CHIP C 0.10UF K		C833			CK73FB1C105K	CHIP C 1.0UF K	
C601-606			CK73GB1H104K	CHIP C 0.10UF K		C834			CK73GB1A105K	CHIP C 1.0UF K	
C607			CK73GB1A105K	CHIP C 1.0UF K		C835			CK73GB1H153K	CHIP C 0.015UF K	
C608-614			CK73GB1H104K	CHIP C 0.10UF K		C836			CK73EB1A475K	CHIP C 4.7UF K	
C615,616			CK73FB0J106K	CHIP C 10UF K		C837			CC73GCH1H151J	CHIP C 150PF J	
C617			CK73GB1A105K	CHIP C 1.0UF K		C838			CC73GCH1H102J	CHIP C 1000PF J	
C618-628			CK73GB1H104K	CHIP C 0.10UF K		C839-841			CK73GB1H104K	CHIP C 0.10UF K	
C630			CK73GB1H104K	CHIP C 0.10UF K		C850			CK73GB1H104K	CHIP C 0.10UF K	
C640			CK73GB1H104K	CHIP C 0.10UF K		C851			CK73FB0J106K	CHIP C 10UF K	
C641,642			CC73GCH1H060D	CHIP C 6.0PF D		C852,853			CK73GB1H104K	CHIP C 0.10UF K	
C643-645			CK73GB1H104K	CHIP C 0.10UF K		C854			CK73FB0J106K	CHIP C 10UF K	
C646			CC73GCH1H101J	CHIP C 100PF J		C855-870			CK73GB1H104K	CHIP C 0.10UF K	
C650			CK73GB1H104K	CHIP C 0.10UF K		C871			CK73GB1A105K	CHIP C 1.0UF K	
C651,652			CK73GB1A105K	CHIP C 1.0UF K		C872			CK73GB1H104K	CHIP C 0.10UF K	
C654-656			CK73GB1A105K	CHIP C 1.0UF K		C900			CK73GB1H104K	CHIP C 0.10UF K	
C657,658			CK73GB1H104K	CHIP C 0.10UF K		C908			CC73GCH1H101J	CHIP C 100PF J	
C659			C92-1452-05	ELECTRO 100UF 10WV		C910,911			CK73FB1C105K	CHIP C 1.0UF K	
C660			CK73FB0J106K	CHIP C 10UF K		C913			CC73GCH1H101J	CHIP C 100PF J	
C661,662			CK73GB1H104K	CHIP C 0.10UF K		C914			CK73GB1A105K	CHIP C 1.0UF K	
C663			CK73FB0J106K	CHIP C 10UF K		C991			CC73GCH1H331J	CHIP C 330PF J	
C664			C92-1452-05	ELECTRO 100UF 10WV		CN1			E41-2550-05	PIN ASSY	
C665-668			CK73GB1H104K	CHIP C 0.10UF K		CN501			E41-2197-05	FLAT CABLE CONNECTOR	
C669			CC73GCH1H101J	CHIP C 100PF J		CN800			E41-2543-05	PIN ASSY	
C670			CK73GB1H104K	CHIP C 0.10UF K		CN903			E41-2077-05	PIN ASSY	
C671,672			CK73GB1A105K	CHIP C 1.0UF K		CN904			E41-2051-05	PIN ASSY	
C673,674			CK73GB1H104K	CHIP C 0.10UF K		CN905			E41-2526-05	FLAT CABLE CONNECTOR	
C675			CK73GB1A105K	CHIP C 1.0UF K		CN906	*		E41-2542-05	FLAT CABLE CONNECTOR	
C700-709			CK73GB1H104K	CHIP C 0.10UF K		CN908			E41-2529-05	PIN ASSY	
C710			CK73GB1A105K	CHIP C 1.0UF K		CF1-6			L72-0780-05	CERAMIC FILTER	
C711-720			CK73GB1H104K	CHIP C 0.10UF K		L2			L79-0958-05	LINE FILTER	
C721			CK73FB1C105K	CHIP C 1.0UF K		L3			L92-0373-05	CHIP FERRITE	
C722-729			CK73GB1H104K	CHIP C 0.10UF K		L4			L19-0733-15	TRANSFORMER FOR CONVERTER	
C730-732			CK73FB1C105K	CHIP C 1.0UF K		L5			L33-2248-05	CHOKE COIL	
C733-740			CK73GB1H104K	CHIP C 0.10UF K		L6,7			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C741			CK73FB1C105K	CHIP C 1.0UF K		L8,9			L33-1914-05	CHOKE COIL	
C742			C92-1452-05	ELECTRO 100UF 10WV		L10			L33-2248-05	CHOKE COIL	
C743,744			CK73FB0J106K	CHIP C 10UF K		L11			L33-1906-05	CHOKE COIL	
C745,746			CC73GCH1H101J	CHIP C 100PF J		L101			L92-0319-05	CHIP FERRITE	
C749			CK73GB1H104K	CHIP C 0.10UF K		L230			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C750			CK73FB0J106K	CHIP C 10UF K							

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-955/956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L232 L400,401 L520 L560 L601			L41-4705-33 L41-1005-33 L92-0373-05 L92-0373-05 L92-0373-05	SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (10U) CHIP FERRITE CHIP FERRITE CHIP FERRITE		R15 R16 R18 R19 R20			RK73GB2A562J RN73GH1J114D RN73GH1J243D RN73GH1J4021D RN73GH1J132D	CHIP R 5.6K J 1/10W CHIP R 110K D 1/16W CHIP R 24K D 1/16W CHIP R 4.02K D 1/16W CHIP R 1.3K D 1/16W	
L603 L640,641 L650 L651,652 L700,701			L92-0373-05 L92-0373-05 L41-1005-33 L92-0373-05 L92-0319-05	CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR (10U) CHIP FERRITE CHIP FERRITE		R21 R22 R23 R24 R25			RN73GH1J393D RN73GH1J133D RK73GB2A103J RN73GH1J103D RK73GB2A222J	CHIP R 39K D 1/16W CHIP R 13K D 1/16W CHIP R 10K J 1/10W CHIP R 10K D 1/16W CHIP R 2.2K J 1/10W	
L702 L800 L801 L830 X101			L92-0373-05 L92-0319-05 L92-0373-05 L41-1005-33 L77-2917-05	CHIP FERRITE CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR (10U) CRYSTAL RESONATOR (32.768KHZ)		R26 R27 R28 R29 R30			RK73GB2A332J RK73GB2A272J RK73GB2A273J RK73GB2A103J RN73GH1J393D	CHIP R 3.3K J 1/10W CHIP R 2.7K J 1/10W CHIP R 27K J 1/10W CHIP R 10K J 1/10W CHIP R 39K D 1/16W	
X102 X232 X233 X233 X540			L78-1210-05 L77-2806-05 L77-2807-05 L77-2807-05 L77-2866-05	RESONATOR (4.95MHZ) CRYSTAL RESONATOR (3.579545MHZ) CRYSTAL RESONATOR (4.433619MHZ) CRYSTAL RESONATOR (4.433619MHZ) CRYSTAL RESONATOR (27MHZ)	E1E2M1 X1C	R31,32 R33,34 R37 R38 R39			RK73GB2A104J RK73GB2A100J RK73GB2A100J RK73GB2A101J R92-3475-05	CHIP R 100K J 1/10W CHIP R 10 J 1/10W CHIP R 10 J 1/10W CHIP R 100 J 1/10W CHIP R 0.27 F 1/2W	
X830			L78-0549-05	RESONATOR (15.734KHZ)		R45 R46 R48 R49 R50			RK73GB2A104J RN73GH1J114D RN73GH1J243D RK73GH2A182D RN73GH1J393D	CHIP R 100K J 1/10W CHIP R 110K D 1/16W CHIP R 24K D 1/16W CHIP R 1.8K D 1/10W CHIP R 39K D 1/16W	
CP501-505 CP506-509 CP601-604 CP605 CP606-612			RK74HB1J471J RK74HB1J103J RK74HB1J472J RK74HB1J470J RK74HB1J220J	CHIP-COM 470 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 47 J 1/16W CHIP-COM 22 J 1/16W		R51 R52 R53 R55 R56			RN73GH1J182D RN73GH1J133D RK73GB2A103J RN73GH1J163D RN73GH1J133D	CHIP R 1.8K D 1/16W CHIP R 13K D 1/16W CHIP R 10K J 1/10W CHIP R 16K D 1/16W CHIP R 13K D 1/16W	
CP613,614 CP615-618 CP619-627 CP700-709 CP710-712			RK74HB1J330J RK74HB1J472J RK74HB1J220J RK74HB1J680J RK74HB1J103J	CHIP-COM 33 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 68 J 1/16W CHIP-COM 10K J 1/16W		R57 R58 R59 R60 R61			RK73GB2A104J RN73GH1J123D RN73GH1J152D RN73GH1J243D RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 12K D 1/16W CHIP R 1.5K D 1/16W CHIP R 24K D 1/16W CHIP R 100K J 1/10W	
CP713-716 CP718 CP750-757 CP800-807 CP808-815			RK74HB1J680J RK74HB1J103J RK74HB1J220J RK74HB1J103J RK74HB1J470J	CHIP-COM 68 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 47 J 1/16W		R62,63 R66,67 R68 R70 R71			RK73GB2A100J RK73GB2A101J RN73GH1J114D RN73GH1J243D RN73GH1J393D	CHIP R 10 J 1/10W CHIP R 100 J 1/10W CHIP R 110K D 1/16W CHIP R 24K D 1/16W CHIP R 39K D 1/16W	
CP816-824 CP825-837 CP839,840 CP841,842 CP850-857			RK74HB1J220J RK74HB1J103J RK74HB1J220J RK74HB1J103J RK74HB1J470J	CHIP-COM 22 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 47 J 1/16W		R72 R73 R74 R75 R76			RN73GH1J472D RN73GH1J153D RN73GH1J133D RK73GB2A103J RN73GH1J103D	CHIP R 4.7K D 1/16W CHIP R 15K D 1/16W CHIP R 13K D 1/16W CHIP R 10K J 1/10W CHIP R 10K D 1/16W	
CP858 R1 R2 R3 R4			RK74HB1J103J RK73GB2A105J RK73GB2A151J R92-5088-05 RK73GB2A912J	CHIP-COM 10K J 1/16W CHIP R 1.0M J 1/10W CHIP R 150 J 1/10W CHIP R 3.3K J 3/4W CHIP R 9.1K J 1/10W		R77 R78,79 R80,81 R82 R83			RN73GH1J473D RK73GB2A104J RK73GH2A334D RN73GH1J682D RN73GH1J104D	CHIP R 47K D 1/16W CHIP R 100K J 1/10W CHIP R 330K D 1/10W CHIP R 6.8K D 1/16W CHIP R 100K D 1/16W	
R5 R6 R7 R9 R10			RK73GB2A153J RK73FB2B123J RK73GB2A473J RK73GB2A473J RK73GB2A112J	CHIP R 15K J 1/10W CHIP R 12K J 1/8W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 1.1K J 1/10W		R84 R85,86 R88 R89 R90			RN73GH1J683D RK73GB2A224J RK73GB2A224J RN73GH1J104D RN73GH1J513D	CHIP R 68K D 1/16W CHIP R 220K J 1/10W CHIP R 220K J 1/10W CHIP R 100K D 1/16W CHIP R 51K D 1/16W	
R11 R13 R14			RK73GB2A912J RN73GH1J473D RN73GH1J392D	CHIP R 9.1K J 1/10W CHIP R 47K D 1/16W CHIP R 3.9K D 1/16W							

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-955/956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R91			RN73GH1J333D	CHIP R 33K D 1/16W		R231			RK73GB2A203J	CHIP R 20K J 1/10W	
R92,93			RK73GB2A224J	CHIP R 220K J 1/10W		R232			RK73GB2A303J	CHIP R 30K J 1/10W	
R94			RK73GB2A202J	CHIP R 2.0K J 1/10W		R233			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R95,96			RK73GB2A224J	CHIP R 220K J 1/10W		R234			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R97			RK73GB2A114J	CHIP R 110K J 1/10W		R235			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R98,99			RK73GB2A100J	CHIP R 10 J 1/10W		R237			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R105			RK73GB2A103J	CHIP R 10K J 1/10W		R238			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R107			RK73GB2A103J	CHIP R 10K J 1/10W	X1C	R239			RK73GB2A153J	CHIP R 15K J 1/10W	
R108			RK73GB2A103J	CHIP R 10K J 1/10W	K	R241			RK73GB2A303J	CHIP R 30K J 1/10W	
R108,109			RK73GB2A103J	CHIP R 10K J 1/10W	E1E2M1	R247			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R110			RK73GB2A103J	CHIP R 10K J 1/10W	X1C	R248-251			RK73GB2A101J	CHIP R 100 J 1/10W	
R110,111			RK73GB2A103J	CHIP R 10K J 1/10W	K	R253			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R111			RK73GB2A103J	CHIP R 10K J 1/10W	M1	R254			RK73GB2A103J	CHIP R 10K J 1/10W	E1E2M1
R112,113			RK73GB2A103J	CHIP R 10K J 1/10W	C	R254			RK73GB2A103J	CHIP R 10K J 1/10W	X1C
R112,113			RK73GB2A103J	CHIP R 10K J 1/10W	E1E2M1	R255			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R113			RK73GB2A103J	CHIP R 10K J 1/10W	KM1	R256			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R114,115			RK73GB2A104J	CHIP R 100K J 1/10W		R257,258			RK73GB2A101J	CHIP R 100 J 1/10W	
R116			RK73GB2A101J	CHIP R 100 J 1/10W		R259			RK73GB2A103J	CHIP R 10K J 1/10W	
R117			RK73GB2A104J	CHIP R 100K J 1/10W		R260			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R118			RK73GB2A103J	CHIP R 10K J 1/10W		R261			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R119,120			RK73GB2A473J	CHIP R 47K J 1/10W		R262-265			RK73GB2A101J	CHIP R 100 J 1/10W	
R121,122			RK73GB2A102J	CHIP R 1.0K J 1/10W		R267			RK73GB2A103J	CHIP R 10K J 1/10W	
R125-128			RK73GB2A104J	CHIP R 100K J 1/10W		R269			RN73GH1J203D	CHIP R 20K D 1/16W	
R129			RK73GB2A123J	CHIP R 12K J 1/10W		R270			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W		R271			RK73GB2A104J	CHIP R 100K J 1/10W	
R131			RK73GB2A123J	CHIP R 12K J 1/10W		R272			RN73GH1J303D	CHIP R 30K D 1/16W	
R132			RK73GB2A333J	CHIP R 33K J 1/10W		R400,401			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R133,134			RK73GB2A123J	CHIP R 12K J 1/10W		R402			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R135			RK73GB2A514J	CHIP R 510K J 1/10W		R403,404			RK73GB2A201J	CHIP R 200 J 1/10W	
R136			RK73GB2A102J	CHIP R 1.0K J 1/10W		R405			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R138			RK73GB2A473J	CHIP R 47K J 1/10W		R406,407			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R141,142			RK73GB2A473J	CHIP R 47K J 1/10W		R408			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R143,144			RK73GB2A103J	CHIP R 10K J 1/10W		R409,410			RK73GB2A201J	CHIP R 200 J 1/10W	
R145,146			RK73GB2A101J	CHIP R 100 J 1/10W		R411			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R147			RK73GB2A102J	CHIP R 1.0K J 1/10W		R412			RK73GB2A223J	CHIP R 22K J 1/10W	
R148-152			RK73GB2A473J	CHIP R 47K J 1/10W		R413			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R153			RK73GB2A101J	CHIP R 100 J 1/10W		R414			RK73GB2A471J	CHIP R 470 J 1/10W	
R154			RK73GB2A473J	CHIP R 47K J 1/10W		R415			RK73GB2A100J	CHIP R 10 J 1/10W	
R155			RK73GB2A104J	CHIP R 100K J 1/10W		R416			RK73GB2A223J	CHIP R 22K J 1/10W	
R156			RK73GB2A101J	CHIP R 100 J 1/10W		R417			RK73GB2A471J	CHIP R 470 J 1/10W	
R157			RK73GB2A104J	CHIP R 100K J 1/10W		R418			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R163			RK73GB2A104J	CHIP R 100K J 1/10W		R419			RK73GB2A100J	CHIP R 10 J 1/10W	
R164			RK73GB2A102J	CHIP R 1.0K J 1/10W		R420			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R165			RK73GB2A473J	CHIP R 47K J 1/10W		R421			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R166,167			RK73GB2A102J	CHIP R 1.0K J 1/10W		R422			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R168			RK73GB2A223J	CHIP R 22K J 1/10W		R423			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R169			RK73GB2A103J	CHIP R 10K J 1/10W		R424			RK73GB2A103J	CHIP R 10K J 1/10W	
R170			RK73GB2A563J	CHIP R 56K J 1/10W		R425			RK73GB2A181J	CHIP R 180 J 1/10W	
R171,172			RK73GB2A473J	CHIP R 47K J 1/10W		R426			RK73GB2A111J	CHIP R 110 J 1/10W	
R176			RK73GB2A104J	CHIP R 100K J 1/10W		R430			RK73GB2A101J	CHIP R 100 J 1/10W	
R177			RK73GB2A153J	CHIP R 15K J 1/10W		R432-434			RK73GB2A101J	CHIP R 100 J 1/10W	
R178			RN73GH1J163D	CHIP R 16K D 1/16W		R470-472			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R179			RN73GH1J392D	CHIP R 3.9K D 1/16W		R474			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R180			RN73GH1J333D	CHIP R 33K D 1/16W		R475			RK73GB2A103J	CHIP R 10K J 1/10W	
R181-183			RK73GB2A473J	CHIP R 47K J 1/10W		R476			RK73GB2A222J	CHIP R 2.2K J 1/10W	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-955/956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R477			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R500			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R501			RK73GB2A330J	CHIP R 33 J 1/10W	
R502			RK73GB2A103J	CHIP R 10K J 1/10W	
R503			RK73GB2A820J	CHIP R 82 J 1/10W	
R504,505			RK73GB2A220J	CHIP R 22 J 1/10W	
R506,507			RK73GB2A820J	CHIP R 82 J 1/10W	
R508			RK73GB2A471J	CHIP R 470 J 1/10W	
R509			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R510-512			RK73GB2A103J	CHIP R 10K J 1/10W	
R520			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R522-528			RK73GB2A103J	CHIP R 10K J 1/10W	
R529			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R530			RK73GB2A101J	CHIP R 100 J 1/10W	
R601-603			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R604			RK73GB2A470J	CHIP R 47 J 1/10W	
R611			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R612,613			RK73GB2A220J	CHIP R 22 J 1/10W	
R614			RK73GB2A330J	CHIP R 33 J 1/10W	
R615-617			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R618,619			RK73GB2A220J	CHIP R 22 J 1/10W	
R620-622			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R625-627			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R640,641			RK73GB2A331J	CHIP R 330 J 1/10W	
R642			RK73GB2A471J	CHIP R 470 J 1/10W	
R643			RK73GB2A151J	CHIP R 150 J 1/10W	
R644			RK73GB2A221J	CHIP R 220 J 1/10W	
R645			RK73GB2A101J	CHIP R 100 J 1/10W	
R650			RK73GB2A103J	CHIP R 10K J 1/10W	
R651-654			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R655			RK73GB2A750J	CHIP R 75 J 1/10W	
R656-659			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R660			RK73GB2A103J	CHIP R 10K J 1/10W	
R661,662			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R663,664			RK73GB2A101J	CHIP R 100 J 1/10W	
R665-668			RN73GH1J750D	CHIP R 75 D 1/16W	
R669			RN73GH1J151D	CHIP R 150 D 1/16W	
R670			RK73GB2A103J	CHIP R 10K J 1/10W	
R671,672			RK73GB2A104J	CHIP R 100K J 1/10W	
R673			RN73GH1J151D	CHIP R 150 D 1/16W	
R675,676			RK73GB2A101J	CHIP R 100 J 1/10W	
R678			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R679-681			RK73GB2A101J	CHIP R 100 J 1/10W	
R682			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R683-687			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R701			RK73GB2A330J	CHIP R 33 J 1/10W	
R702			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R703			RN73GH1J151D	CHIP R 150 D 1/16W	
R704			RK73GB2A104J	CHIP R 100K J 1/10W	
R705			RN73GH1J151D	CHIP R 150 D 1/16W	
R706,707			RK73GB2A104J	CHIP R 100K J 1/10W	
R708			RN73GH1J151D	CHIP R 150 D 1/16W	
R709,710			RK73GB2A104J	CHIP R 100K J 1/10W	
R711			RK73GB2A103J	CHIP R 10K J 1/10W	
R712-717			RK73GB2A104J	CHIP R 100K J 1/10W	
Ref. No.	Add	New	Parts No.	Description	Destination
R718-721			RN73GH1J103D	CHIP R 10K D 1/16W	
R722			RN73GH1J433D	CHIP R 43K D 1/16W	
R723			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R724			RK73GB2A104J	CHIP R 100K J 1/10W	
R725-727			RK73GB2A101J	CHIP R 100 J 1/10W	
R728			RK73GB2A330J	CHIP R 33 J 1/10W	
R729			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R730			RK73GB2A103J	CHIP R 10K J 1/10W	
R771,772			RK73GB2A330J	CHIP R 33 J 1/10W	
R775			RK73GB2A101J	CHIP R 100 J 1/10W	
R776,777			RK73GB2A153J	CHIP R 15K J 1/10W	
R778,779			RK73GB2A561J	CHIP R 560 J 1/10W	
R781			RK73GB2A561J	CHIP R 560 J 1/10W	
R801			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R802-806			RK73GB2A104J	CHIP R 100K J 1/10W	
R807			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R808			RK73GB2A103J	CHIP R 10K J 1/10W	
R809			RK73GB2A104J	CHIP R 100K J 1/10W	
R810			RN73GH1J243D	CHIP R 24K D 1/16W	
R811			RN73GH1J681D	CHIP R 680 D 1/16W	
R812			RN73GH1J113D	CHIP R 11K D 1/16W	
R815			RK73GB2A104J	CHIP R 100K J 1/10W	
R816			RK73GB2A103J	CHIP R 10K J 1/10W	
R817,818			RK73GB2A104J	CHIP R 100K J 1/10W	
R819,820			RK73GB2A220J	CHIP R 22 J 1/10W	
R821			RK73GB2A104J	CHIP R 100K J 1/10W	
R823,824			RK73GB2A103J	CHIP R 10K J 1/10W	
R830			RK73GB2A103J	CHIP R 10K J 1/10W	
R846			RK73GB2A330J	CHIP R 33 J 1/10W	
R850			RK73GB2A331J	CHIP R 330 J 1/10W	
R851			RK73GB2A914J	CHIP R 910K J 1/10W	
R852			RK73GB2A331J	CHIP R 330 J 1/10W	
R853			RK73GB2A101J	CHIP R 100 J 1/10W	
R854			RN73GH1J302D	CHIP R 3.0K D 1/16W	
R855,856			RK73GB2A101J	CHIP R 100 J 1/10W	
R857			RN73GH1J182D	CHIP R 1.8K D 1/16W	
R858			RN73GH1J471D	CHIP R 470 D 1/16W	
R859-861			RK73GB2A470J	CHIP R 47 J 1/10W	
R862			RK73GB2A203J	CHIP R 20K J 1/10W	
R863,864			RK73GB2A103J	CHIP R 10K J 1/10W	
R909			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R912			RK73EB2E102J	CHIP R 1.0K J 1/4W	K
R913			RK73GB2A104J	CHIP R 100K J 1/10W	
R915			RK73GB2A203J	CHIP R 20K J 1/10W	
R916-919			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R920-925			RK73EB2E101J	CHIP R 100 J 1/4W	
R931			RK73GB2A104J	CHIP R 100K J 1/10W	
R933			RK73GB2A104J	CHIP R 100K J 1/10W	
R939-946			RK73GB2A101J	CHIP R 100 J 1/10W	
R949-955			RK73GB2A101J	CHIP R 100 J 1/10W	
R972,973			RK73GB2A101J	CHIP R 100 J 1/10W	
R974,975			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R976			RK73GB2A334J	CHIP R 330K J 1/10W	
R977			RK73GB2A104J	CHIP R 100K J 1/10W	
R978			RK73GB2A224J	CHIP R 220K J 1/10W	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-955/956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R981-984			RK73GB2A220J	CHIP R 22 J 1/10W		W912			R92-1252-05	CHIP R 0 OHM J 1/16W	
R985,986			RK73GB2A101J	CHIP R 100 J 1/10W		W914			R92-1252-05	CHIP R 0 OHM J 1/16W	
R987,988			RK73EB2E331J	CHIP R 330 J 1/4W		W916-918			R92-1252-05	CHIP R 0 OHM J 1/16W	
R994			RK73GB2A154J	CHIP R 150K J 1/10W		W920			R92-1252-05	CHIP R 0 OHM J 1/16W	
R995			RK73GB2A222J	CHIP R 2.2K J 1/10W		W922,923			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R996			RK73GB2A122J	CHIP R 1.2K J 1/10W		D1			1SR154-400	DIODE	
R997			RK73GB2A473J	CHIP R 47K J 1/10W		D2			EC31QS04AG	DIODE	
R998			RN73GH1J472D	CHIP R 4.7K D 1/16W		D3			DAN202U	DIODE	
R999			RN73GH1J243D	CHIP R 24K D 1/16W		D4			SB05-05CP-E	DIODE	
W1-3			R92-1252-05	CHIP R 0 OHM J 1/16W		D5			UDZS6.8B	ZENER DIODE	
W4			RK73EB2E000J	CHIP R 0.0 J 1/4W		D6			DAN202U	DIODE	
W5-11			R92-1252-05	CHIP R 0 OHM J 1/16W		D7			UDZS6.2B	ZENER DIODE	
W12,13			RK73EB2E000J	CHIP R 0.0 J 1/4W		D8			SB05-05CP-E	DIODE	
W14			R92-1252-05	CHIP R 0 OHM J 1/16W		D10-13			EC31QS04AG	DIODE	
W15,16			RK73EB2E000J	CHIP R 0.0 J 1/4W		D231			DAN202U	DIODE	
W18-20			R92-1252-05	CHIP R 0 OHM J 1/16W		D233			DA204U	DIODE	
W21			RK73EB2E000J	CHIP R 0.0 J 1/4W		D400,401			STZ6.2N	ZENER DIODE	
W30			R92-1252-05	CHIP R 0 OHM J 1/16W		D402			DAP202U	DIODE	
W37			R92-1252-05	CHIP R 0 OHM J 1/16W		D404			DA204U	DIODE	
W81,82			R92-1252-05	CHIP R 0 OHM J 1/16W		D501,502			DA204U	DIODE	
W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W		D850			HVD133-E	DIODE	
W230,231			R92-1252-05	CHIP R 0 OHM J 1/16W		D900,901			DA204U	DIODE	
W233			R92-1252-05	CHIP R 0 OHM J 1/16W		D917,918			DA204U	DIODE	
W235-237			R92-1252-05	CHIP R 0 OHM J 1/16W		D922,923			DAN202U	DIODE	
W240			R92-1252-05	CHIP R 0 OHM J 1/16W		D926			UDZS6.2B	ZENER DIODE	
W400,401			R92-1252-05	CHIP R 0 OHM J 1/16W		D927-933			AVRM1608120M6A	VARIATOR	
W472-474			R92-1252-05	CHIP R 0 OHM J 1/16W		D936-938			AVRM1608120M6A	VARIATOR	
W477-481			R92-1252-05	CHIP R 0 OHM J 1/16W		D970			MA2S784-F	DIODE	
W501			R92-1252-05	CHIP R 0 OHM J 1/16W		IC1-3			FA7707E-H1	ANALOGUE IC	
W515			R92-1252-05	CHIP R 0 OHM J 1/16W		IC9			SI-3012KM	ANALOGUE IC	
W522			R92-1252-05	CHIP R 0 OHM J 1/16W		IC80			SI-3033KMS	ANALOGUE IC	
W601			R92-1252-05	CHIP R 0 OHM J 1/16W		IC81			UPC2905ATAZ	ANALOGUE IC	
W604			R92-1252-05	CHIP R 0 OHM J 1/16W		IC82			PQ1X331M2ZPH	ANALOGUE IC	
W607-609			R92-1252-05	CHIP R 0 OHM J 1/16W		IC101			BR24L08FV-W	ROM IC	
W652			R92-1252-05	CHIP R 0 OHM J 1/16W		IC103			TC7SH08FU-F	MOS-IC	
W654			R92-1252-05	CHIP R 0 OHM J 1/16W		IC104			703264YGJ501A	MICROCONTROLLER IC	
W658			R92-1252-05	CHIP R 0 OHM J 1/16W		IC105			S-80830CNNB-G	MOS-IC	
W660			R92-1252-05	CHIP R 0 OHM J 1/16W		IC107			LB1836M-TLM-E	ANALOGUE IC	
W662,663			R92-1252-05	CHIP R 0 OHM J 1/16W		IC108			TC74VHCT08AFT	MOS-IC	
W700-703			R92-1252-05	CHIP R 0 OHM J 1/16W		IC237			AN2546FH-AV	ANALOGUE IC	
W750,751			R92-1252-05	CHIP R 0 OHM J 1/16W		IC238			TC7SH04FU-F	MOS-IC	
W770			R92-1252-05	CHIP R 0 OHM J 1/16W		IC239			TDA4665T-F	ANALOGUE IC	
W773			R92-1252-05	CHIP R 0 OHM J 1/16W		IC239			TDA4665T-F	ANALOGUE IC	
W776			R92-1252-05	CHIP R 0 OHM J 1/16W		IC240			MM1389XFB-E	ANALOGUE IC	
W800-803			R92-1252-05	CHIP R 0 OHM J 1/16W		IC400			NJM4580V-ZB	ANALOGUE IC	
W805,806			R92-1252-05	CHIP R 0 OHM J 1/16W		IC401			TA78L05F-F	ANALOGUE IC	
W830,831			R92-1252-05	CHIP R 0 OHM J 1/16W		IC402			AK4382AVT	ANALOGUE IC	
W833			R92-1252-05	CHIP R 0 OHM J 1/16W		IC403			TC7SHU04FU-F	MOS-IC	
W850-854			R92-1252-05	CHIP R 0 OHM J 1/16W		IC470			M43212VNI8R01	MOS-IC	
W901			R92-1252-05	CHIP R 0 OHM J 1/16W		IC500			PQ070XH02ZPH	ANALOGUE IC	
W903			R92-1252-05	CHIP R 0 OHM J 1/16W		IC520			M29LV160T72U5	ROM IC	
W904			RK73FB2B000J	CHIP R 0.0 J 1/8W		IC560			K4S281632FUP75	DRAM IC	
W905			RK73EB2E000J	CHIP R 0.0 J 1/4W		IC601			ES6218SF	MOS-IC	
W908			R92-1252-05	CHIP R 0 OHM J 1/16W		IC640			SM8707HV-G-E2	ANALOGUE IC	
W910			RK73FB2B000J	CHIP R 0.0 J 1/8W		IC641			TC7WH74FU-F	MOS-IC	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-955/956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
IC650 IC651 IC652 IC654 IC700			MM1567AJBE-E UPC2905ATAZ ADV7170KSUZ MM1508XNRE-E MN677611UB	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC MOS-IC	
IC701 IC750,751 IC770 IC771 IC772			SI-3018KM K4S641632HUC7 TC7S02FU-F TC74LCX74FT TC7SH04FU-F	ANALOGUE IC DRAM IC MOS-IC MOS-IC MOS-IC	
IC773 IC774 IC779 IC781 IC800			TC7W08FU-F TC7W32FU-F TC7SH00FU-F TC7SH04FU-F 6417706F120DV	MOS-IC MOS-IC MOS-IC MOS-IC MICROPROCESSOR IC	
IC801 IC830 IC831 IC832,833 IC834			SI-3012KM NJW1303V-ZB TC7SH04FU-F TC7WH74FU-F TC7WH14FU-F	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC MOS-IC	
IC835 IC836 IC850 IC851 IC852			HD74LV157AT-E TC7SH08FU-F MB29D64E9E4U4 CY6126DLL7ZXI MT48LC2M32P7I	MOS-IC MOS-IC ROM IC SRAM IC DRAM IC	
IC853 IC854 IC855 Q1 Q2			HD74LVC08TTP HD74CBT3244T-E TC7SH04FU-F 2SC4081 DTA124EUA	MOS-IC MOS-IC MOS-IC TRANSISTOR DIGITAL TRANSISTOR	
Q3 Q4 Q5 Q6 Q7			DTC144EUA 2SC4081 2SA1576A HAT1038R-E 2SB1189	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR FET TRANSISTOR	
Q8 Q9 Q10 Q11 Q13			2SC4081 DTC144EUA 2SA1576A 2SC4081 HAT1024R-E	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR FET	
Q16 Q19 Q20 Q22 Q23			DTC144EUA HAT1024R-E DTC144EUA HAT1024R-E DTA114TUA	DIGITAL TRANSISTOR FET DIGITAL TRANSISTOR FET DIGITAL TRANSISTOR	
Q24 Q25 Q26 Q27 Q80			2SC4081 DTA114TUA 2SC4081 DTA114TUA DTC144EUA	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q81 Q82 Q83 Q84 Q85			2SC4081 2SA1576A 2SC4081 DTA114EUA 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q86 Q87 Q88 Q89-91 Q92			2SA1576A DTA114TUA 2SB1184 2SC4081 2SA1576A	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q93 Q94 Q95 Q103 Q104			DTC144EUA DTA144EUA IMX9 DTC144EUA DTB123YK	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q105 Q106 Q107 Q108 Q109			DTC144EUA DTB123YK DTA144EUA DTC144EUA 2SA1576A	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q110 Q111 Q112,113 Q114 Q115			DTC144EUA 2SA1576A 2SC4081 DTA144EUA DTC114TUA	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q171 Q173 Q230,231 Q232 Q233			2SA1576A 2SC4081 2SC4081 2SA1576A DTC114TUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	E1E2
Q234 Q234 Q236 Q237 Q238,239			2SA1576A 2SA1576A 2SC4081 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	E1E2M1 X1C
Q240 Q400-402 Q403 Q404,405 Q650			2SA1576A 2SC4081 DTC114TUA DTA114TUA DTA114TUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q651,652 Q653 Q700 Q701 Q771,772			DTC144EUA DTC114TUA 2SA1576A 2SC4081 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q830 Q831 Q901 Q902			DTA114EUA DTC144EUA DTC124EUA DTC143EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
SWITCH UNIT (X16-2380-00): IN DVD MECHA.					
CN1			E41-2036-05	FLAT CABLE CONNECTOR	
S1,2			S68-0863-05	PUSH SWITCH	
ELECTRIC UNIT (X34-382/383x-xx)					
C5 C6 C7 C8 C9,10			C90-6744-05 CK73GB1H104K CK73FB1C105K CD04BA1H3R3M CK73GB1H103K	ELECTRO 3900UF 16WV CHIP C 0.10UF K CHIP C 1.0UF K ELECTRO 3.3UF 50WV CHIP C 0.010UF K	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-382/383x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C51			CK73GB1H473K	CHIP C 0.047UF K		C214			CK73GB1H103K	CHIP C 0.010UF K	
C52			CD04AS1V100M	ELECTRO 10UF 35WV		C215,216			CK73GB1H102K	CHIP C 1000PF K	
C55			CD04BJ1E221M	ELECTRO 220UF 25WV		C217-219			CD04AS1V100M	ELECTRO 10UF 35WV	
C56			CD04BJ1A101M	ELECTRO 100UF 10WV		C220			CK73GB1H103K	CHIP C 0.010UF K	
C58			CD04AS1C220M	ELECTRO 22UF 16WV		C221			CK73GB1H102K	CHIP C 1000PF K	
C59		*	CD04BG1C101M	ELECTRO 100UF 16WV		C222-224			CD04AS1V100M	ELECTRO 10UF 35WV	
C60-62			CK73EB1E225K	CHIP C 2.2UF K		C225			CK73GB1H103K	CHIP C 0.010UF K	
C63			CD04BA1C220M	ELECTRO 22UF 16WV		C226			CK73GB1H102K	CHIP C 1000PF K	
C64			CK73EB1E225K	CHIP C 2.2UF K		C227-229			CD04AS1V100M	ELECTRO 10UF 35WV	
C65			CK73FB1C105K	CHIP C 1.0UF K		C230			CK73GB1H103K	CHIP C 0.010UF K	
C67			CD04AY1A221M	ELECTRO 220UF 10WV		C231			CD04AS1C220M	ELECTRO 22UF 16WV	
C69			CK73FB1C105K	CHIP C 1.0UF K		C233			CD04AS1V100M	ELECTRO 10UF 35WV	
C70			CD04AY1A221M	ELECTRO 220UF 10WV		C234			CK73GB1H222K	CHIP C 2200PF K	
C71			CK73GB1H223K	CHIP C 0.022UF K		C235,236			CK73GB1H102K	CHIP C 1000PF K	
C72			CK73GB1H103K	CHIP C 0.010UF K		C237			CK73GB1H222K	CHIP C 2200PF K	
C73,74			CK73EB1E225K	CHIP C 2.2UF K		C238			CD04AS1V100M	ELECTRO 10UF 35WV	
C101			CK73GB1A105K	CHIP C 1.0UF K		C239			CD04AS0J101M	ELECTRO 100UF 6.3WV	
C103			CK73GB1A105K	CHIP C 1.0UF K		C240			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C104			CD04AS1C101M	ELECTRO 100UF 16WV		C241			CD04AS1C220M	ELECTRO 22UF 16WV	
C108-112			C90-6742-05	NP-ELECT 4.7UF 16WV		C242			CK73GB1H103K	CHIP C 0.010UF K	
C113			CK73GB1H103K	CHIP C 0.010UF K		C243			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C150			CD04AS1C470M	ELECTRO 47UF 16WV		C244			CD04AS0J101M	ELECTRO 100UF 6.3WV	
C151,152			CK73GB1H152K	CHIP C 1500PF K		C245			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C153			CD04AS1V100M	ELECTRO 10UF 35WV		C246			CD04AS1C220M	ELECTRO 22UF 16WV	
C154,155			CK73FB1C105K	CHIP C 1.0UF K		C247			CK73GB1H103K	CHIP C 0.010UF K	
C156-161			CD04AW1E3R3M	ELECTRO 3.3UF 25WV		C248			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C162,163			CD04AS1V100M	ELECTRO 10UF 35WV		C251,252			CC73GCH1H100D	CHIP C 10PF D	KE1E2
C164			CK73GB1H103K	CHIP C 0.010UF K		C251,252			CC73GCH1H100D	CHIP C 10PF D	M1
C165			CD04AS1V100M	ELECTRO 10UF 35WV		C255			CE32BM1C100M	CHIP EL 10UF 16WV	KE1E2
C166			CK73GB1H104K	CHIP C 0.10UF K		C255			CE32BM1C100M	CHIP EL 10UF 16WV	M1
C167			CK73GB1H103K	CHIP C 0.010UF K		C256			CC73GCH1H331J	CHIP C 330PF J	KE1E2
C168			CD04AT1H010M	ELECTRO 1UF 50WV		C256			CC73GCH1H331J	CHIP C 330PF J	M1
C170			CD04AS1C470M	ELECTRO 47UF 16WV		C257			CE32BM1C100M	CHIP EL 10UF 16WV	KE1E2
C172			CK73GB1H102K	CHIP C 1000PF K		C257			CE32BM1C100M	CHIP EL 10UF 16WV	M1
C173			CD04AS1H4R7M	ELECTRO 4.7UF 50WV		C258			CK73GB1H103K	CHIP C 0.010UF K	KE1E2
C174			CK73FB1E474K	CHIP C 0.47UF K		C258			CK73GB1H103K	CHIP C 0.010UF K	M1
C175			CK73GB1H102K	CHIP C 1000PF K		C267-270			CK73GB1H103K	CHIP C 0.010UF K	
C176			CK73FB1E474K	CHIP C 0.47UF K		C300			CK73GB1H103K	CHIP C 0.010UF K	
C177			CD04AS1C101M	ELECTRO 100UF 16WV		C301,302			CK73GB1H104K	CHIP C 0.10UF K	
C178,179			CD04AS1H3R3M	ELECTRO 3.3UF 50WV		C304			CK73GB1A105K	CHIP C 1.0UF K	
C180,181			CK73FB1A225K	CHIP C 2.2UF K		C305-307			CK73GB1H103K	CHIP C 0.010UF K	
C182-185			CC73GCH1H101J	CHIP C 100PF J		C308			CD04BJ0J331M	ELECTRO 330UF 6.3WV	
C186			CK73FB1C105K	CHIP C 1.0UF K		C309			CK73GB1H103K	CHIP C 0.010UF K	
C187,188			CD04AS1H3R3M	ELECTRO 3.3UF 50WV		C310			CK73GB1H102K	CHIP C 1000PF K	
C192,193			CD04BJ1H100M	ELECTRO 10UF 50WV		C400,401			CK73GB1A105K	CHIP C 1.0UF K	E1E2
C194-199			CK73GB1H152K	CHIP C 1500PF K		C401			CK73GB1A105K	CHIP C 1.0UF K	KM1X1C
C200			CD04AS1C220M	ELECTRO 22UF 16WV		C403			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C201			CD04AS1V100M	ELECTRO 10UF 35WV		C404			CK73GB1H104K	CHIP C 0.10UF K	
C202			CK73GB1H103K	CHIP C 0.010UF K		C405,406			CK73GB1A105K	CHIP C 1.0UF K	E1E2
C203,204			CD04AS1V100M	ELECTRO 10UF 35WV		C406			CK73GB1A105K	CHIP C 1.0UF K	KM1X1C
C205			CK73GB1H102K	CHIP C 1000PF K		C408			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C206			CD04AS1V100M	ELECTRO 10UF 35WV		C409			CK73GB1H104K	CHIP C 0.10UF K	
C207			CK73GB1H103K	CHIP C 0.010UF K		C410,411			CK73GB1A105K	CHIP C 1.0UF K	E1E2
C208			CK73GB1H102K	CHIP C 1000PF K		C411			CK73GB1A105K	CHIP C 1.0UF K	KM1X1C
C209-213			CD04AS1V100M	ELECTRO 10UF 35WV		C413			CD04AS0J470M	ELECTRO 47UF 6.3WV	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-382/383x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C414			CK73GB1H104K	CHIP C 0.10UF K	
C415			CK73GB1H103K	CHIP C 0.010UF K	
C416			CK73GB1H561K	CHIP C 560PF K	
C417			CK73GB1A105K	CHIP C 1.0UF K	
C418			CK73GB1H561K	CHIP C 560PF K	
C419			CK73GB1H103K	CHIP C 0.010UF K	
C420,421			CK73GB1H104K	CHIP C 0.10UF K	
C422			CK73GB1H103K	CHIP C 0.010UF K	
C423			CD04AS1C220M	ELECTRO 22UF 16WV	
C424			CD04AS1V100M	ELECTRO 10UF 35WV	
C425,426			CK73GB1A105K	CHIP C 1.0UF K	
C428			CK73GB1H104K	CHIP C 0.10UF K	
C429-431			CK73GB1A105K	CHIP C 1.0UF K	
C432			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C433			CK73GB1H104K	CHIP C 0.10UF K	
C434-436			CK73GB0J225K	CHIP C 2.2UF K	
C437			CD04BJ1C471M	ELECTRO 470UF 16WV	
C438			CK73GB1H104K	CHIP C 0.10UF K	
C442			CD04AS1V100M	ELECTRO 10UF 35WV	
C448,449			CK73GB1H103K	CHIP C 0.010UF K	
C450-452			CD04AY1H220M	ELECTRO 22UF 50WV	
C454,455			CK73GB1A105K	CHIP C 1.0UF K	
C457,458			CK73GB1A105K	CHIP C 1.0UF K	
C461-463			CK73GB1H104K	CHIP C 0.10UF K	
C500			CK73GB1H103K	CHIP C 0.010UF K	
C501,502			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C503			CD04AS0J101M	ELECTRO 100UF 6.3WV	
C504			CD04AS1C220M	ELECTRO 22UF 16WV	
C505			CD04AS1V100M	ELECTRO 10UF 35WV	
C506,507			CK73GB1H104K	CHIP C 0.10UF K	
C508			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C509			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C510,511			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C512			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C513			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C514			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C515,516			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C600			CK73GB1H102K	CHIP C 1000PF K	
C803,804			CK73GB1H103K	CHIP C 0.010UF K	
C809			CK73GB1H222K	CHIP C 2200PF K	
CN2			E41-0959-05	PIN ASSY	
CN7			E41-2153-05	FLAT CABLE CONNECTOR	
CN8		*	E41-2478-05	PIN ASSY	
CN9,10		*	E41-2474-05	FLAT CABLE CONNECTOR	
CN11,12		*	E41-2476-05	FLAT CABLE CONNECTOR	
CN13		*	E41-2484-05	PIN ASSY	
CN14		*	E41-2521-05	PIN ASSY	
CN15		*	E41-2522-05	PIN ASSY	
CN250,251			E41-2383-05	PIN ASSY	
CN252,253			E40-9423-05	SOCKET FOR PIN ASSY	
J1			E58-0991-05	RECTANGULAR RECEPTACLE	
J2			E58-0899-05	RECTANGULAR RECEPTACLE	
J500			E56-0865-05	CYLINDRICAL RECEPTACLE	
J502			E58-1034-05	RECTANGULAR RECEPTACLE	
J503			E56-0864-05	CYLINDRICAL RECEPTACLE	

Ref. No.	Add	New	Parts No.	Description	Destination
W253		*	E30-6492-05	CORD WITH PLUG (ANT)	
WH1		*	E39-0778-05	WIRING HARNESS	
L1			L33-1063-25	CHOKE COIL	
L50			L41-2205-33	SMALL FIXED INDUCTOR (22U)	
L150			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L250			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	KE1E2
L250			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	M1
L252			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L254			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L255			L33-1977-05	CHOKE COIL	
L256			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L300			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L301			L92-0330-05	CHIP FERRITE	
L400-402			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L800-802			L92-0373-05	CHIP FERRITE	
X250			L77-2002-05	CRYSTAL RESONATOR	KE1E2
X250			L77-2002-05	CRYSTAL RESONATOR	M1
X300			L78-0892-05	RESONATOR (19M)	
M	2C		N86-2606-48	BINDING HEAD TAPTITE SCREW	
R6			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R7			RK73EB2E103J	CHIP R 10K J 1/4W	
R10,11			RK73PB2H102J	CHIP R 1.0K J 1/2W	
R12			RK73GB2A223J	CHIP R 22K J 1/10W	
R13,14			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R15			RK73SB3A561J	CHIP R 560 J 1W	KM1X1C
R16,17			RK73GB2A223J	CHIP R 22K J 1/10W	KM1X1C
R17			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2
R18			RK73GB2A103J	CHIP R 10K J 1/10W	
R19			RK73GB2A104J	CHIP R 100K J 1/10W	
R20			RK73GB2A183J	CHIP R 18K J 1/10W	
R21			RK73FB2B561J	CHIP R 560 J 1/8W	
R22			RK73GB2A473J	CHIP R 47K J 1/10W	
R24			RK73GB2A683J	CHIP R 68K J 1/10W	
R25			RK73GB2A393J	CHIP R 39K J 1/10W	
R26			RK73GB2A104J	CHIP R 100K J 1/10W	
R27			RK73EB2E101J	CHIP R 100 J 1/4W	
R28			RK73GB2A104J	CHIP R 100K J 1/10W	
R29			RK73GB2A103J	CHIP R 10K J 1/10W	
R30			RK73GB2A474J	CHIP R 470K J 1/10W	
R50			RK73FB2B182J	CHIP R 1.8K J 1/8W	
R51			RK73GB2A104J	CHIP R 100K J 1/10W	
R53			RK73GB2A101J	CHIP R 100 J 1/10W	
R55			RK73FB2B203J	CHIP R 20K J 1/8W	
R56			RK73FB2B221J	CHIP R 220 J 1/8W	
R58			RK73FB2B221J	CHIP R 220 J 1/8W	
R59			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R60			RK73GB2A223J	CHIP R 22K J 1/10W	
R61			RK73GB2A153J	CHIP R 15K J 1/10W	
R63			RK73GH2A243D	CHIP R 24K D 1/10W	
R64			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R67			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R68			RK73GB2A153J	CHIP R 15K J 1/10W	
R69			RK73GB2A470J	CHIP R 47 J 1/10W	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-382/383x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R70			RK73GH2A153D	CHIP R 15K D 1/10W		R209			RK73GB2A223J	CHIP R 22K J 1/10W	
R71			RK73GH2A512D	CHIP R 5.1K D 1/10W		R210			RK73GB2A104J	CHIP R 100K J 1/10W	
R72			RK73GB2A752J	CHIP R 7.5K J 1/10W		R211			RK73GB2A361J	CHIP R 360 J 1/10W	
R73			RK73GB2A274J	CHIP R 270K J 1/10W		R212			RK73EB2E820J	CHIP R 82 J 1/4W	
R74			RK73GB2A563J	CHIP R 56K J 1/10W		R213			RK73FB2B203J	CHIP R 20K J 1/8W	
R75			RK73GB2A470J	CHIP R 47 J 1/10W		R214			RK73FB2B103J	CHIP R 10K J 1/8W	
R76			RK73GB2A103J	CHIP R 10K J 1/10W		R215			RK73GB2A361J	CHIP R 360 J 1/10W	
R77,78			RK73GB2A913J	CHIP R 91K J 1/10W		R216			RK73GB2A104J	CHIP R 100K J 1/10W	
R79			RK73GB2A750J	CHIP R 75 J 1/10W		R217			RK73GB2A223J	CHIP R 22K J 1/10W	
R80			RK73GB2A101J	CHIP R 100 J 1/10W		R218,219			RK73GB2A473J	CHIP R 47K J 1/10W	
R100			RK73GB2A103J	CHIP R 10K J 1/10W		R220			RK73GB2A223J	CHIP R 22K J 1/10W	
R101			RK73GB2A432J	CHIP R 4.3K J 1/10W		R221			RK73GB2A104J	CHIP R 100K J 1/10W	
R102			RK73GB2A103J	CHIP R 10K J 1/10W		R222			RK73EB2E820J	CHIP R 82 J 1/4W	
R103			RK73GB2A333J	CHIP R 33K J 1/10W		R223			RK73FB2B203J	CHIP R 20K J 1/8W	
R104,105			RK73GB2A103J	CHIP R 10K J 1/10W		R224			RK73FB2B103J	CHIP R 10K J 1/8W	
R106			RK73GB2A223J	CHIP R 22K J 1/10W		R225,226			RK73GB2A361J	CHIP R 360 J 1/10W	
R107			RK73GB2A221J	CHIP R 220 J 1/10W		R227			RK73FB2B203J	CHIP R 20K J 1/8W	
R108			RK73GB2A182J	CHIP R 1.8K J 1/10W		R228			RK73FB2B103J	CHIP R 10K J 1/8W	
R110			RK73GB2A103J	CHIP R 10K J 1/10W		R229			RK73GB2A104J	CHIP R 100K J 1/10W	
R111			RK73GB2A390J	CHIP R 39 J 1/10W		R230			RK73EB2E820J	CHIP R 82 J 1/4W	
R113			RK73GB2A104J	CHIP R 100K J 1/10W		R231,232			RK73GB2A223J	CHIP R 22K J 1/10W	
R114-117			RK73GB2A471J	CHIP R 470 J 1/10W		R233			RK73GB2A104J	CHIP R 100K J 1/10W	
R118			RK73GB2A102J	CHIP R 1.0K J 1/10W		R234			RK73GB2A361J	CHIP R 360 J 1/10W	
R120			RK73GB2A223J	CHIP R 22K J 1/10W		R235			RK73EB2E820J	CHIP R 82 J 1/4W	
R121			RK73GB2A431J	CHIP R 430 J 1/10W		R236			RK73FB2B203J	CHIP R 20K J 1/8W	
R122			RK73GB2A100J	CHIP R 10 J 1/10W		R237			RK73FB2B103J	CHIP R 10K J 1/8W	
R150			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R238			RK73EB2E750J	CHIP R 75 J 1/4W	
R151,152			RK73GB2A102J	CHIP R 1.0K J 1/10W		R239			RK73EB2E101J	CHIP R 100 J 1/4W	
R153-158			RK73GB2A101J	CHIP R 100 J 1/10W		R240			RK73GB2A361J	CHIP R 360 J 1/10W	
R159			RK73GB2A391J	CHIP R 390 J 1/10W		R241,242			RK73GB2A223J	CHIP R 22K J 1/10W	
R160			RK73GB2A242J	CHIP R 2.4K J 1/10W		R243			RK73EB2E101J	CHIP R 100 J 1/4W	
R162			RK73GH2A512D	CHIP R 5.1K D 1/10W		R244			RK73GB2A361J	CHIP R 360 J 1/10W	
R163			RK73GH2A472D	CHIP R 4.7K D 1/10W		R245			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R164			RK73GB2A562J	CHIP R 5.6K J 1/10W		R246			RK73EB2E100J	CHIP R 10 J 1/4W	
R165			RK73GB2A103J	CHIP R 10K J 1/10W		R247			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R166			RK73GB2A101J	CHIP R 100 J 1/10W		R248			RK73GB2A471J	CHIP R 470 J 1/10W	
R167,168			RK73GB2A102J	CHIP R 1.0K J 1/10W		R249			RK73EB2E100J	CHIP R 10 J 1/4W	
R169			RK73FB2B152J	CHIP R 1.5K J 1/8W		R250			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R170			RK73GB2A104J	CHIP R 100K J 1/10W		R251			RK73EB2E100J	CHIP R 10 J 1/4W	
R171			RK73FB2B4R7J	CHIP R 4.7 J 1/8W		R252			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R172			RK73GB2A332J	CHIP R 3.3K J 1/10W		R253			RK73EB2E101J	CHIP R 100 J 1/4W	
R173,174			RK73GB2A101J	CHIP R 100 J 1/10W		R254			RK73EB2E100J	CHIP R 10 J 1/4W	
R176			RK73GB2A100J	CHIP R 10 J 1/10W		R255,256			RK73GB2A750J	CHIP R 75 J 1/10W	
R177-180			RK73GB2A101J	CHIP R 100 J 1/10W		R257			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2 M1
R181,182			RK73GB2A103J	CHIP R 10K J 1/10W		R257			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R184			RK73FB2B1R0J	CHIP R 1.0 J 1/8W		R260			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2 M1
R200			RK73FB2B203J	CHIP R 20K J 1/8W		R260			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R201			RK73FB2B103J	CHIP R 10K J 1/8W		R261			RK73EB2E101J	CHIP R 100 J 1/4W	
R202			RK73EB2E820J	CHIP R 82 J 1/4W		R262			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2 M1
R203			RK73GB2A361J	CHIP R 360 J 1/10W		R262			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R204			RK73GB2A104J	CHIP R 100K J 1/10W		R263			RK73GB2A223J	CHIP R 22K J 1/10W	
R205			RK73GB2A223J	CHIP R 22K J 1/10W		R265			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R206			RK73EB2E820J	CHIP R 82 J 1/4W		R266			RK73EB2E101J	CHIP R 100 J 1/4W	
R207			RK73FB2B203J	CHIP R 20K J 1/8W		R267			RK73GB2A750J	CHIP R 75 J 1/10W	
R208			RK73FB2B103J	CHIP R 10K J 1/8W		R300			RK73GB2A104J	CHIP R 100K J 1/10W	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-382/383x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R301,302			RK73GB2A101J	CHIP R 100 J 1/10W	
R303			RK73GB2A104J	CHIP R 100K J 1/10W	
R304			RK73GB2A101J	CHIP R 100 J 1/10W	
R305			RK73GB2A104J	CHIP R 100K J 1/10W	
R306			RK73GB2A103J	CHIP R 10K J 1/10W	
R307			RK73GB2A101J	CHIP R 100 J 1/10W	
R308			RK73GB2A104J	CHIP R 100K J 1/10W	
R309			RK73GB2A101J	CHIP R 100 J 1/10W	
R311			RK73GB2A101J	CHIP R 100 J 1/10W	
R312,313			RK73GB2A104J	CHIP R 100K J 1/10W	
R314			RK73GB2A103J	CHIP R 10K J 1/10W	
R315			RK73GB2A101J	CHIP R 100 J 1/10W	
R316			RK73GB2A103J	CHIP R 10K J 1/10W	
R317			RK73GB2A101J	CHIP R 100 J 1/10W	
R319			RK73GB2A473J	CHIP R 47K J 1/10W	
R320,321			RK73GB2A104J	CHIP R 100K J 1/10W	
R322			RK73GB2A101J	CHIP R 100 J 1/10W	
R323			RK73GB2A104J	CHIP R 100K J 1/10W	
R324			RK73GB2A101J	CHIP R 100 J 1/10W	
R325			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R326			RK73GB2A101J	CHIP R 100 J 1/10W	
R327			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R328			RK73GB2A104J	CHIP R 100K J 1/10W	
R329			RK73GB2A101J	CHIP R 100 J 1/10W	
R330			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R331			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R333			RK73GB2A101J	CHIP R 100 J 1/10W	
R334			RK73GB2A104J	CHIP R 100K J 1/10W	
R335			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R337			RK73GB2A101J	CHIP R 100 J 1/10W	
R338			RK73GB2A103J	CHIP R 10K J 1/10W	
R341			RK73GB2A103J	CHIP R 10K J 1/10W	
R343-345			RK73GB2A101J	CHIP R 100 J 1/10W	
R346			RK73GB2A104J	CHIP R 100K J 1/10W	
R347			RK73GB2A101J	CHIP R 100 J 1/10W	
R348			RK73GB2A104J	CHIP R 100K J 1/10W	
R349			RK73GB2A101J	CHIP R 100 J 1/10W	
R350			RK73GB2A104J	CHIP R 100K J 1/10W	
R351			RK73GB2A101J	CHIP R 100 J 1/10W	
R352			RK73GB2A104J	CHIP R 100K J 1/10W	
R353			RK73GB2A101J	CHIP R 100 J 1/10W	
R354			RK73GB2A104J	CHIP R 100K J 1/10W	
R355			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R356			RK73GB2A104J	CHIP R 100K J 1/10W	
R357			RK73GB2A223J	CHIP R 22K J 1/10W	
R358-360			RK73GB2A104J	CHIP R 100K J 1/10W	
R362			RK73GB2A223J	CHIP R 22K J 1/10W	
R363			RK73GB2A103J	CHIP R 10K J 1/10W	
R365			RK73GB2A103J	CHIP R 10K J 1/10W	
R366,367			RK73GB2A103J	CHIP R 10K J 1/10W	X1C KE1E2
R366,367			RK73GB2A103J	CHIP R 10K J 1/10W	M1
R367			RK73GB2A103J	CHIP R 10K J 1/10W	X1C
R369			RK73GB2A103J	CHIP R 10K J 1/10W	E1E2M1
R370			RK73GB2A103J	CHIP R 10K J 1/10W	X1C
R370,371			RK73GB2A103J	CHIP R 10K J 1/10W	K
Ref. No.	Add	New	Parts No.	Description	Destination
R371			RK73GB2A103J	CHIP R 10K J 1/10W	M1
R372			RK73GB2A103J	CHIP R 10K J 1/10W	C
R372			RK73GB2A103J	CHIP R 10K J 1/10W	E1E2X1
R400			RK73GB2A103J	CHIP R 10K J 1/10W	
R401			RK73GB2A334J	CHIP R 330K J 1/10W	
R402			RK73GB2A561J	CHIP R 560 J 1/10W	
R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R404			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R412-415			RK73GB2A103J	CHIP R 10K J 1/10W	
R500,501			RK73EB2E100J	CHIP R 10 J 1/4W	
R502			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R503			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R504			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R505			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R506			RK73EB2E101J	CHIP R 100 J 1/4W	
R507-510			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R511,512			RK73EB2E101J	CHIP R 100 J 1/4W	
R513,514			RK73GB2A103J	CHIP R 10K J 1/10W	
R515			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R517			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R518			RK73GB2A101J	CHIP R 100 J 1/10W	
R519-521			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R522			RK73GB2A101J	CHIP R 100 J 1/10W	
R527			RK73GB2A750J	CHIP R 75 J 1/10W	
R528			RK73GB2A681J	CHIP R 680 J 1/10W	
R529			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R530			RK73GB2A150J	CHIP R 15 J 1/10W	
R531			RK73EB2E100J	CHIP R 10 J 1/4W	
R532			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R533			RK73EB2E100J	CHIP R 10 J 1/4W	
R534,535			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R536-538			RK73EB2E101J	CHIP R 100 J 1/4W	
R539,540			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R541-548			RK73GB2A750J	CHIP R 75 J 1/10W	E1E2
R544-548			RK73GB2A750J	CHIP R 75 J 1/10W	KM1X1C
R549-551			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R552			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R553,554			RK73EB2E100J	CHIP R 10 J 1/4W	
R565			RK73EB2E101J	CHIP R 100 J 1/4W	KM1X1C
R565-572			RK73EB2E101J	CHIP R 100 J 1/4W	E1E2
R569-572			RK73EB2E101J	CHIP R 100 J 1/4W	KM1X1C
R578			RK73EB2E101J	CHIP R 100 J 1/4W	
R579			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R580			RK73EB2E101J	CHIP R 100 J 1/4W	
R581			RK73EB2E223J	CHIP R 22K J 1/4W	
R582			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R594			RK73GB2A104J	CHIP R 100K J 1/10W	
R600			RK73GB2A100J	CHIP R 10 J 1/10W	
R800			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R801			RK73GB2A104J	CHIP R 100K J 1/10W	
R802,803			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R804-811			RK73GB2A103J	CHIP R 10K J 1/10W	
R850-856			RK73EB2E101J	CHIP R 100 J 1/4W	
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
W50			RK73EB2E000J	CHIP R 0.0 J 1/4W	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-382/383x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
W100 W300			R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W		IC100 IC150 IC151 IC200-202 IC203,204			E-TDA7560A NJM4565V-ZB E-TDA7415 NJM4565V-ZB BA3121F	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
D1-8 D9 D10 D10,11 D12			M1F60-5063 RM10ZLFNF 1SR154-400 1SR154-400 DAP202U	DIODE DIODE DIODE DIODE DIODE	E1E2 KM1X1C	IC251 IC251 IC300 IC301 IC303			E-TDA7479AD E-TDA7479AD S-80842CNNB-G SN74HC02APWR 703068YGJ128A	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC MICROCONTROLLER IC	KE1E2 M1
D13,14 D15 D16 D17 D18			1SR154-400 UDZS6.8B UDZS5.6B UDZS4.7B DAP202U	DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE		IC400-402 IC403 IC404 IC405 IC406			MM1503-E MM1108XFFE-E BA7653AFV BA3121F BA7652AF	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
D19 D52 D54,55 D100,101 D150			UDZS6.8B UDZS11B UDZS5.6B DAP202U UDZS6.8B	ZENER DIODE ZENER DIODE ZENER DIODE DIODE ZENER DIODE		IC407,408 IC413,414 IC415 IC416 IC500			MM1228XFB-E TC4052BFT MM1503-E BA7652AF BA3121F	ANALOGUE IC MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
D151 D152 D155,156 D157 D200			DA227 UDZS16B IMN10 DAP202U DAP202U	DIODE ZENER DIODE DIODE DIODE DIODE		IC501 IC502 Q6,7 Q7 Q8			TC7SET04FU-F TC7SH08FU-F DTC114YUA DTC114YUA DTA114EUA	MOS-IC MOS-IC DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	KM1X1C E1E2
D201 D203,204 D205 D206 D207-209			STZ6.2N DAP202U UDZS4.7B STZ6.2N STZ6.8N	ZENER DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE		Q9,10 Q10 Q11 Q12 Q13			2SB1188(Q,R) 2SB1188(Q,R) 2SA1576A 2SC4081 DTA123JK	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	KM1X1C E1E2
D210 D211 D212-214 D216 D218			STZ6.2N STZ6.8N DAP202U DAP202U STZ6.8N	ZENER DIODE ZENER DIODE DIODE DIODE ZENER DIODE		Q14 Q15 Q50 Q51 Q52			2SA1576A 2SC4081 2SB1443 2SC4081 UMC2N	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D252 D300 D413 D414 D500			IMSA-6801-E DA227 UDZS4.7B DAP202U STZ6.8N	SURGE ABSORBER DIODE ZENER DIODE DIODE ZENER DIODE		Q54 Q55 Q58 Q59 Q61			2SC4081 UMC2N 2SB1184 2SB1565 UMC2N	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D501 D502 D503 D504-507 D508			STZ6.2N UDZS4.7B DAP202U STZ6.2N DAN202U	ZENER DIODE ZENER DIODE DIODE ZENER DIODE DIODE		Q62 Q63 Q64 Q65 Q66			DTC114EUA 2SA1576A 2SB1184 2SA1576A 2SC4081	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D521 D522-525 D522-535 D529-535 D536,537			STZ6.8N STZ6.2N STZ6.2N STZ6.2N DA204U	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	KM1X1C E1E2 KM1X1C	Q67 Q68 Q69 Q70 Q150			2SA1576A 2SC4617 2SA1774 2SC4617 UMC2N	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D538 D539 D550 D800 IC50			STZ6.2N STZ6.8N STZ6.2N STZ6.2N M5237ML-CF0J	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ANALOGUE IC		Q151 Q152 Q200-202 Q203 Q204-207			2SA1774 2SC2873-F DTC323TU 2SA1576A DTC323TU	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
IC52 IC54			ICL7660SIBAZ M5237ML-CF0J	ANALOGUE IC ANALOGUE IC							

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-382/383x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q208 Q209 Q250 Q252 Q403-406			DTA144EUA DTC323TU DTC124EUA 2SB1689 DTC124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q500 Q800 TH100			DTA124EUA DTC124EUA PRF18BE471QS2	DIGITAL TRANSISTOR DIGITAL TRANSISTOR POSITIVE RESISTOR	
A250 A250 A250		* * *	X86-3930-13 X86-3932-72 X86-3942-12	FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT	KX1 E1E2M1 C
VIDEO UNIT (X35-458/459x-10)					
D508 D666 D667-677 D680 D701			B30-1566-05 B30-1564-05 B30-1605-05 B30-1605-05 B30-1547-05	LED (1608, RED) LED (1608, BLUE) LED (2COLOR PG/RED) LED (2COLOR PG/RED) LED	
D702 D703 D704			B30-1566-05 B30-1547-05 B30-1566-05	LED (1608, RED) LED LED (1608, RED)	
C1 C3 C4 C5 C6			C92-1857-05 C93-1283-05 C92-1857-05 C93-1363-05 C93-1361-05	ELECTRO 33UF 10WV CHIP C 1.0UF K ELECTRO 33UF 10WV CHIP C 10PF 3KWV CHIP C 0.012UF 16WV	
C7 C8 C9 C10 C11			CK73GB1H473K C93-1269-05 CK73GB0J225K CK73GB1H103K CK73GB0J225K	CHIP C 0.047UF K CHIP C 220PF J CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 2.2UF K	
C12 C13 C14 C15 C16			CK73GB1H103K CK73GB1A474K CK73GB1H103K CK73GB1H473K CK73GB1E183K	CHIP C 0.010UF K CHIP C 0.47UF K CHIP C 0.010UF K CHIP C 0.047UF K CHIP C 0.018UF K	
C17 C18 C21 C22 C24			CK73GB1H103K C93-1283-05 CK73GB0J225K CK73GB1H152K CK73GB1H103K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 1500PF K CHIP C 0.010UF K	
C25 C26 C27 C102 C103		*	C93-1285-05 CK73GB1H103K C93-1283-05 CK73EB1C106K CK73GB1H103K	CHIP C 0.0022UF 50WV CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 10UF K CHIP C 0.010UF K	
C105 C106 C108 C109 C110			CE32AU1C220M CK73GB1H103K CE32AU1C220M CK73FB1C105K CK73GB1H103K	CHIP EL 22UF 16WV CHIP C 0.010UF K CHIP EL 22UF 16WV CHIP C 1.0UF K CHIP C 0.010UF K	
C112 C113 C114 C115			CK73FB1E154K CK73EB1E225K CK73GB1C224K CK73GB1H104K	CHIP C 0.15UF K CHIP C 2.2UF K CHIP C 0.22UF K CHIP C 0.10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C116 C118 C119 C211 C230			C92-1685-05 CK73GB1H103K CC73GCH1H151J CK73EB1A475K CK73GB1H103K	ELECTRO 47UF 6.3WV CHIP C 0.010UF K CHIP C 150PF J CHIP C 4.7UF K CHIP C 0.010UF K	
C231,232 C233 C234 C300 C301,302			CK73DF1E106Z CK73GB1H103K CC73GCH1H560J CK73GB1H103K CK73DF1E106Z	CHIP C 10UF Z CHIP C 0.010UF K CHIP C 56PF J CHIP C 0.010UF K CHIP C 10UF Z	
C303 C304 C305 C306 C307			CK73GB1H103K CK73GB1H104K CK73GB1H103K CC73GCH1H101J CK73EB1C106K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 100PF J CHIP C 10UF K	
C308 C309 C310 C311-314 C315,316			CK73GB1H103K CC73GCH1H100D CK73GB1H561K CK73GB1H103K CK73GB1H104K	CHIP C 0.010UF K CHIP C 10PF D CHIP C 560PF K CHIP C 0.010UF K CHIP C 0.10UF K	
C317 C318,319 C320 C321 C322			CK73GB1H103K CK73GB1H104K CC73GCH1H560J CK73GB1H104K CC73GCH1E102J	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 56PF J CHIP C 0.10UF K CHIP C 1000PF J	
C323 C324,325 C326 C327,328 C330			CC73GCH1H101J CK73GB1H103K CC73GCH1H681J CK73GB1H104K CK73EB1A106K	CHIP C 100PF J CHIP C 0.010UF K CHIP C 680PF J CHIP C 0.10UF K CHIP C 10UF K	
C331,332 C333 C334 C335,336 C341			CC73GCH1H390J CK73GB1H104K CK73GB1H103K CK73GB1H104K CC73GCH1H100D	CHIP C 39PF J CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 10PF D	
C425 C426 C427 C428 C502,503			CK73FB1C105K CK73EB1E105K CK73FB1A225K CK73EB1C106K CK73GB1H103K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 10UF K CHIP C 0.010UF K	
C504 C505 C506 C601 C602			CK73EB1A106K CK73GB1H271K CC73GCH1H101J CK73GB1H221K CK73GB1H103K	CHIP C 10UF K CHIP C 270PF K CHIP C 100PF J CHIP C 220PF K CHIP C 0.010UF K	
C603 C604 C605			CK73GB0J225K CC73GCH1H101J CK73EB1A106K	CHIP C 2.2UF K CHIP C 100PF J CHIP C 10UF K	
CN1 CN302 CN303 CN501 CN602		*	E41-2483-05 E41-2525-05 E41-2065-05 E41-2088-05 E41-0451-25	PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
CN604			E41-2208-05	FLAT CABLE CONNECTOR	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-458/459x-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
CN701		*	E41-2542-05	FLAT CABLE CONNECTOR		R310,311			RK73GB2A103J	CHIP R 10K J 1/10W	
F1			F53-0297-05	FUSE (UL, CSA)		R312			RK73GB2A101J	CHIP R 100 J 1/10W	
F107			F53-0314-05	FUSE (UL, CSA)		R316			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L1			L19-0783-05	TRANSFORMER FOR CONVERTER		R318			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L2			L33-1933-05	CHOKE COIL		R321			RN73GH1J472D	CHIP R 4.7K D 1/16W	
L101,102			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)		R324,325			RN73GH1J472D	CHIP R 4.7K D 1/16W	
L103			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)		R326			RK73GH2A473D	CHIP R 47K D 1/10W	
L104-106			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R327			RK73GH2A683D	CHIP R 68K D 1/10W	
L306			L41-5695-33	SMALL FIXED INDUCTOR (5.6U)		R328			RK73GH2A153D	CHIP R 15K D 1/10W	
L307			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)		R329			RK73GH2A101D	CHIP R 100 D 1/10W	
L501			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R330			RK73GH2A182D	CHIP R 1.8K D 1/10W	
L601			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R331			RK73GH2A331D	CHIP R 330 D 1/10W	
CP301,302			RK74GB1J102J	CHIP-COM 1.0K J 1/16W		R332			RK73GH2A332D	CHIP R 3.3K D 1/10W	
CP303			RK74GB1J101J	CHIP-COM 100 J 1/16W		R337,338			RK73GB2A101J	CHIP R 100 J 1/10W	
R1			RK73GB2A512J	CHIP R 5.1K J 1/10W		R339			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R2			RK73GB2A515J	CHIP R 5.1M J 1/10W		R340-344			RK73GB2A101J	CHIP R 100 J 1/10W	
R3			RK73GB2A220J	CHIP R 22 J 1/10W		R345			RK73GH2A683D	CHIP R 68K D 1/10W	
R4			RN73GH1J433D	CHIP R 43K D 1/16W		R346			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R5			RK73GB2A153J	CHIP R 15K J 1/10W		R347			RK73GH2A153D	CHIP R 15K D 1/10W	
R6			RN73GH1J513D	CHIP R 51K D 1/16W		R348			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R7			RK73GB2A220J	CHIP R 22 J 1/10W		R349			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R8			RK73GB2A512J	CHIP R 5.1K J 1/10W		R350-352			RK73GB2A101J	CHIP R 100 J 1/10W	
R9			RK73GH2A244D	CHIP R 240K D 1/10W		R353	*		RK73GB2A300J	CHIP R 30 J 1/10W	
R10			RK73GB2A331J	CHIP R 330 J 1/10W		R354			RK73GB2A820J	CHIP R 82 J 1/10W	
R11			RK73GB2A220J	CHIP R 22 J 1/10W		R359,360			RK73GB2A100J	CHIP R 10 J 1/10W	
R12			RK73GB2A105J	CHIP R 1.0M J 1/10W		R361			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R13			RK73GB2A220J	CHIP R 22 J 1/10W		R373,374			RK73GB2A561J	CHIP R 560 J 1/10W	
R14			RN73GH1J4530D	CHIP R 453.0 D 1/16W		R380,381			RK73EB2E101J	CHIP R 100 J 1/4W	
R15			RN73GH1J513D	CHIP R 51K D 1/16W		R385,386			RK73EB2E100J	CHIP R 10 J 1/4W	
R16,17			RK73GB2A220J	CHIP R 22 J 1/10W		R387,388			RK73EB2E101J	CHIP R 100 J 1/4W	
R18			RK73GB2A222J	CHIP R 2.2K J 1/10W		R391			RK73EB2E101J	CHIP R 100 J 1/4W	
R19			RK73GB2A104J	CHIP R 100K J 1/10W		R393-397			RK73GB2A333J	CHIP R 33K J 1/10W	
R101			RK73GH2A104D	CHIP R 100K D 1/10W		R501,502			RK73EB2E100J	CHIP R 10 J 1/4W	
R102			RK73GH2A113D	CHIP R 11K D 1/10W		R503-506			RK73GB2A101J	CHIP R 100 J 1/10W	
R103			RK73GH2A184D	CHIP R 180K D 1/10W		R601			RK73GB2A101J	CHIP R 100 J 1/10W	
R104			RK73GH2A133D	CHIP R 13K D 1/10W		R602			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R105			RK73GB2A473J	CHIP R 47K J 1/10W		R603			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R106			RK73GB2A100J	CHIP R 10 J 1/10W		R604			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R107			RK73GB2A222J	CHIP R 2.2K J 1/10W		R605			RK73GB2A123J	CHIP R 12K J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W		R606			RK73GB2A101J	CHIP R 100 J 1/10W	
R219			RK73GB2A473J	CHIP R 47K J 1/10W		R607			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R234			RN73GH1J472D	CHIP R 4.7K D 1/16W		R608			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R235			RN73GH1J912D	CHIP R 9.1K D 1/16W		R609			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R236			RN73GH1J222D	CHIP R 2.2K D 1/16W		R610			RK73GB2A123J	CHIP R 12K J 1/10W	
R240			RK73GB2A470J	CHIP R 47 J 1/10W		R611			RK73GB2A363J	CHIP R 36K J 1/10W	
R242			RK73GB2A470J	CHIP R 47 J 1/10W		R612			RK73GB2A361J	CHIP R 360 J 1/10W	
R300			RK73GB2A103J	CHIP R 10K J 1/10W		R613			RK73GB2A101J	CHIP R 100 J 1/10W	
R301			RK73GB2A101J	CHIP R 100 J 1/10W		R614			RK73GB2A361J	CHIP R 360 J 1/10W	
R302			RK73GB2A221J	CHIP R 220 J 1/10W		R615			RK73GB2A101J	CHIP R 100 J 1/10W	
R303-306			RK73GB2A102J	CHIP R 1.0K J 1/10W		R616			RK73GB2A361J	CHIP R 360 J 1/10W	
R307			RK73GB2A101J	CHIP R 100 J 1/10W		R617			RK73GB2A101J	CHIP R 100 J 1/10W	
R308			RK73GB2A621J	CHIP R 620 J 1/10W		R618			RK73GB2A361J	CHIP R 360 J 1/10W	
R309			RK73GB2A102J	CHIP R 1.0K J 1/10W		R619,620			RK73GB2A101J	CHIP R 100 J 1/10W	
						R621			RK73GB2A102J	CHIP R 1.0K J 1/10W	
						R623			RK73GB2A511J	CHIP R 510 J 1/10W	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-458/459x-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R624 R625 R702 R703 VR203			RK73GB2A104J RK73GB2A101J RK73FB2B561J RK73FB2B331J R32-0328-05	CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 560 J 1/8W CHIP R 330 J 1/8W SEMI FIXED VARIABLE RESISTOR	
VR301 W3 W216,217 W253 W254,255			R32-0328-05 R92-1252-05 RK73FB2B000J RK73FB2B000J R92-1252-05	SEMI FIXED VARIABLE RESISTOR CHIP R 0 OHM J 1/16W CHIP R 0.0 J 1/8W CHIP R 0.0 J 1/8W CHIP R 0 OHM J 1/16W	
W300,301 W309,310 W320 W323 W333-335			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W354-357 W366 W371 W385 W392			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 RK73EB2E000J	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0.0 J 1/4W	
W398			RK73EB2E000J	CHIP R 0.0 J 1/4W	
S601 S602,603 S604,605 S606-608 S609			S70-0901-05 S70-0919-05 S70-0901-05 S70-0919-05 S70-0901-05	TACT SWITCH TACT SWITCH TACT SWITCH TACT SWITCH TACT SWITCH	
S614 S615 S616 S617,618			S70-0919-05 S70-0910-05 S70-0919-05 S70-0901-05	TACT SWITCH TACT SWITCH TACT SWITCH TACT SWITCH	
D1,2 D3 D4,5 D6 D7			UDZS4.7B 1SS355 DA204U MA2S784-F UDZS5.6B	ZENER DIODE DIODE DIODE DIODE ZENER DIODE	
D8 D101 D102 D103,104 D301			AVRM1608120M6A EP05Q04 EP05Q06 EP05Q04 UDZS5.1B	VARISTOR DIODE DIODE DIODE ZENER DIODE	
D302,303 D304 D309 D310 D501-504			DA204U UDZS5.1B 1SV231-F AVRM1608180M6A UDZS6.2B	DIODE ZENER DIODE VARIABLE CAPACITANCE DIODE VARISTOR ZENER DIODE	
D601-603 D612 D615,616 D622,623 D627,628			AVRM1608180M6A AVRM1608180M6A AVRM1608180M6A AVRM1608180M6A AVRM1608180M6A	VARISTOR VARISTOR VARISTOR VARISTOR VARISTOR	
D636-638 D639 D690 IC1			AVRM1608180M6A DA204U DAN202U OZ9641SN-C	VARISTOR DIODE DIODE ANALOGUE IC	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC101 IC203 IC300 IC301 IC302			LT1947-PBF TA75W558FU-F TC7WH126FU-F TC200G02G0104 TC7SH08FU-F	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC MOS-IC	
IC303 IC601 Q1 Q2,3 Q5			NJM2107F-ZB RS-181 2SC4081 SI5513DC-E3 2SC4081	ANALOGUE IC ANALOGUE IC TRANSISTOR DUAL FET TRANSISTOR	
Q101 Q102 Q202 Q203 Q300			DTC124EUA DTA124EUA 2SC4097 2SA1577 DTC124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q301 Q302,303 Q304,305 Q306 Q307,308			2SC4097 DTA123JUA DTC123JUA DTC124EUA 2SC4081	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q601 Q602 Q604 Q605 Q701			DTC124EUA DTA124EUA DTC124EUA DTA143EUA DTC124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
DVD UNIT (X37-1070-00)					
C1-3 C4,5 C6 C7 C8			CK73HB1A104K CK73HB0J105K CK73GB0J475K CK73FB0J106M CK73FB0J226M	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 4.7UF K CHIP C 10UF M CHIP C 22UF M	
C10 C14 C15 C16 C17			CK73HB1A104K CK73FB0J106M CK73HB0J105K CK73HB1A104K CK73HB0J105K	CHIP C 0.10UF K CHIP C 10UF M CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K	
C18 C19 C20 C21 C23			CK73HB1H332K CK73HB1A104K CK73FB0J106M CK73FB0J226M CK73HB1A104K	CHIP C 3300PF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 22UF M CHIP C 0.10UF K	
C24 C25 C26 C27 C28			CC73GCH1H471J CK73HB1A104K CK73HB1A473K CK73HB1A104K CK73HB1C103K	CHIP C 470PF J CHIP C 0.10UF K CHIP C 0.047UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C29 C31 C32 C33 C35			CK73HB0J105K CK73HB1C223K CC73HCH1H470J CC73GCH1H102J CC73GCH1H102J	CHIP C 1.0UF K CHIP C 0.022UF K CHIP C 47PF J CHIP C 1000PF J CHIP C 1000PF J	
C36 C37 C38 C39			CC73GCH1H681J CK73HB1E682K CK73HB0J105K CC73GCH1H331J	CHIP C 680PF J CHIP C 6800PF K CHIP C 1.0UF K CHIP C 330PF J	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1070-00)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C40			CC73GCH1H102J	CHIP C 1000PF J		CP5-9			RK74HB1J330J	CHIP-COM 33 J 1/16W	
C41			CK73HB0J105K	CHIP C 1.0UF K		CP10			RK74HB1J820J	CHIP-COM 82 J 1/16W	
C42			CC73GCH1H681J	CHIP C 680PF J		R1			RK73GH2A101D	CHIP R 100 D 1/10W	
C43			CK73HB1H222K	CHIP C 2200PF K		R2,3			RK73HB1J104J	CHIP R 100K J 1/16W	
C44			CK73HB1H152K	CHIP C 1500PF K		R8			RK73HB1J104J	CHIP R 100K J 1/16W	
C45			CK73HB1H102K	CHIP C 1000PF K		R10			RK73HB1J103J	CHIP R 10K J 1/16W	
C46			CK73HB1A104K	CHIP C 0.10UF K		R11			RK73HB1J225J	CHIP R 2.2M J 1/16W	
C47-52			CK73HB0J105K	CHIP C 1.0UF K		R12			RK73HB1J103J	CHIP R 10K J 1/16W	
C53			CK73HB1A104K	CHIP C 0.10UF K		R15			RK73GH2A113D	CHIP R 11K D 1/10W	
C54,55			CK73HB0J105K	CHIP C 1.0UF K		R16			RK73GH2A273D	CHIP R 27K D 1/10W	
C56			C93-1228-05	CHIP C 1.0UF M		R18			RK73HB1J125J	CHIP R 1.2M J 1/16W	
C57,58			CK73HB0J105K	CHIP C 1.0UF K		R21			RK73GH2A153D	CHIP R 15K D 1/10W	
C60			CK73HB0J105K	CHIP C 1.0UF K		R22			RK73HB1J105J	CHIP R 1.0M J 1/16W	
C61			C93-1228-05	CHIP C 1.0UF M		R23			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C62,63			CC73HCH1H120J	CHIP C 12PF J		R24			RK73GH2A123D	CHIP R 12K D 1/10W	
C64			CK73HB1C103K	CHIP C 0.010UF K		R25-27			RK73HB1J103J	CHIP R 10K J 1/16W	
C66			CK73FB0J106M	CHIP C 10UF M		R28,29			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C67			C93-1228-05	CHIP C 1.0UF M		R30-32			RK73HB1J132J	CHIP R 1.3K J 1/16W	
C68,69			CK73HB0J105K	CHIP C 1.0UF K		R33			RK73HB1J103J	CHIP R 10K J 1/16W	
C70			CK73HB1A104K	CHIP C 0.10UF K		R34,35			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C71			CK73FB0J226M	CHIP C 22UF M		R36			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C72,73			CK73HB1A104K	CHIP C 0.10UF K		R37			RK73HB1J132J	CHIP R 1.3K J 1/16W	
C76			CK73HB1A104K	CHIP C 0.10UF K		R38,39			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C80			CK73FB0J106M	CHIP C 10UF M		R40,41			RK73HB1J473J	CHIP R 47K J 1/16W	
C81			CK73FB0J226M	CHIP C 22UF M		R45			RK73HB1J105J	CHIP R 1.0M J 1/16W	
C82			CK73HB1A104K	CHIP C 0.10UF K		R46			RK73HB1J152J	CHIP R 1.5K J 1/16W	
C83,84			C92-1908-05	ELECTRO 47UF 6.3WV		R47			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C85,86			CK73HB1H102K	CHIP C 1000PF K		R49			RK73HB1J273J	CHIP R 27K J 1/16W	
C87-89			CK73HB1C103K	CHIP C 0.010UF K		R51			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C90			CK73HB1C223K	CHIP C 0.022UF K		R52			RK73HB1J132J	CHIP R 1.3K J 1/16W	
C91			CK73HB1A333K	CHIP C 0.033UF K		R53			RK73HB1J103J	CHIP R 10K J 1/16W	
C92,93			CK73HB1C103K	CHIP C 0.010UF K		R54			RK73HB1J220J	CHIP R 22 J 1/16W	
C94			CK73GB0J475K	CHIP C 4.7UF K		R55			RK73HB1J202J	CHIP R 2.0K J 1/16W	
C95			CK73FB0J106M	CHIP C 10UF M		R56,57			RK73HB1J221J	CHIP R 220 J 1/16W	
C96			CK73FB0J226M	CHIP C 22UF M		R58			RK73GH2A273D	CHIP R 27K D 1/10W	
C97			CK73HB1C103K	CHIP C 0.010UF K		R59			RK73GB2A150J	CHIP R 15 J 1/10W	
C98			CK73GB0J475K	CHIP C 4.7UF K		R61			RK73GB2A121J	CHIP R 120 J 1/10W	
C99			CK73FB0J226M	CHIP C 22UF M		R62			R92-3475-05	CHIP R 0.27 F 1/2W	
C101			CK73FB0J226M	CHIP C 22UF M		R63			RK73GB2A241J	CHIP R 240 J 1/10W	
C102			C92-1908-05	ELECTRO 47UF 6.3WV		R64			RK73HB1J222J	CHIP R 2.2K J 1/16W	
C104			CC73HCH1H100D	CHIP C 10PF D		R65,66			RK73HB1J103J	CHIP R 10K J 1/16W	
C105-108			CC73HCH1H151J	CHIP C 150PF J		R67			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C109,110			CK73HB1H102K	CHIP C 1000PF K		R68,69			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C120,121			CK73HB1C223K	CHIP C 0.022UF K		R70,71			RK73GH2A123D	CHIP R 12K D 1/10W	
CN1			E41-2194-05	FLAT CABLE CONNECTOR		R72			RK73GH2A333D	CHIP R 33K D 1/10W	
CN2			E41-2156-05	FLAT CABLE CONNECTOR		R73			RK73GH2A203D	CHIP R 20K D 1/10W	
CN3			E41-2158-05	FLAT CABLE CONNECTOR		R74			RK73HB1J123J	CHIP R 12K J 1/16W	
CN4			E41-2197-05	FLAT CABLE CONNECTOR		R75			RK73HB1J152J	CHIP R 1.5K J 1/16W	
CN5			E41-2189-05	FLAT CABLE CONNECTOR		R76			RK73HB1J751J	CHIP R 750 J 1/16W	
CN6			E41-2050-05	SOCKET FOR PIN ASSY		R77			RK73HB1J431J	CHIP R 430 J 1/16W	
L1-5			L92-0365-05	CHIP FERRITE		R78			RK73HB1J472J	CHIP R 4.7K J 1/16W	
X1			L77-2870-05	CRYSTAL RESONATOR (16.897849M)		R79			R92-5031-05	CHIP R 5.1 F 1/8W	
CP2-4			RK74HB1J103J	CHIP-COM 10K J 1/16W		R80			RK73GB2A3R6J	CHIP R 3.6 J 1/10W	
						R81			RK73HB1J134J	CHIP R 130K J 1/16W	
						R82			RK73HB1J103J	CHIP R 10K J 1/16W	

E1 : DDX8027 E2 : DDX8027Y (Europe)

K : DDX8017 (North America) X1 : DDX8047 (Australia)

C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1070-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R83 R84 R85 R86-88 R89,90			RK73HB1J820J RK73HB1J103J RK73HB1J330J RK73HB1J820J RK73HB1J103J	CHIP R 82 J 1/16W CHIP R 10K J 1/16W CHIP R 33 J 1/16W CHIP R 82 J 1/16W CHIP R 10K J 1/16W	
R91 R92 R93 R95 R96,97			RK73GH2A101D RK73HB1J104J RK73HB1J222J R92-5031-05 RK73HB1J102J	CHIP R 100 D 1/10W CHIP R 100K J 1/16W CHIP R 2.2K J 1/16W CHIP R 5.1 F 1/8W CHIP R 1.0K J 1/16W	
R98 R100,101 R102,103 R104 R105			R92-5025-05 RK73HB1J510J RK73HB1J202J RK73HB1J103J RK73HB1J132J	CHIP R 3.3 F 1/8W CHIP R 51 J 1/16W CHIP R 2.0K J 1/16W CHIP R 10K J 1/16W CHIP R 1.3K J 1/16W	
R106,107 R108 R109 R110 R117,118			RK73HB1J103J RK73HB1J223J RK73HB1J123J RK73GH2A132D RK73HB1J103J	CHIP R 10K J 1/16W CHIP R 22K J 1/16W CHIP R 12K J 1/16W CHIP R 1.3K D 1/10W CHIP R 10K J 1/16W	
R120,121 R122,123 W1-4			RK73HB1J123J RK73HB1J1R0J R92-1252-05	CHIP R 12K J 1/16W CHIP R 1.0 J 1/16W CHIP R 0 OHM J 1/16W	
S3-5			S68-0895-05	PUSH SWITCH	
D1,2 D3 D4-6 D7 IC1			MAZS0510M MA4ZD03 DAP202U MA2S111 AN22022A-V	ZENER DIODE DIODE DIODE DIODE ANALOGUE IC	
IC2 IC3 IC4 IC5 IC8			AN41204A M29W400DB55N6E MN103S71F S-80829CNPf S-80813CNPf	ANALOGUE IC ROM IC MOS-IC ANALOGUE IC ANALOGUE IC	
IC9 IC10 IC11 Q1,2 Q7,8			NJM2880U115 NJM2886DL2-33 S-24CS04AFT 2SK3018 2SB0970	ANALOGUE IC ANALOGUE IC ROM IC FET TRANSISTOR	
Q9,10 Q11-14 TH1			2SJ0536 DTA114YUA TH11-3H103FT	FET DIGITAL TRANSISTOR THERMISTOR	
DAUGHTER UNIT (X89-274/279x-11)					
C10-12 C14-16 C18-20 C22-24 C26-28			CC73GCH1H121J CC73GCH1H121J CK73GB1H471K CK73GB1H471K CK73GB1H103K	CHIP C 120PF J CHIP C 120PF J CHIP C 470PF K CHIP C 470PF K CHIP C 0.010UF K	
C31-36 C37 C39,40 C41 C42			CE32CL1C100M CK73GB1H104K CK73GB1H104K CE32CL1E4R7M CK73GB1H104K	CHIP EL 10UF 16WV CHIP C 0.10UF K CHIP C 0.10UF K CHIP EL 4.7UF 25WV CHIP C 0.10UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C43,44 C43,44 C43,44 C47 C49-59			CE32CL1C100M CE32CL1H2R2M CE32CL1H2R2M CK73GB1H104K CK73GB1H104K	CHIP EL 10UF 16WV CHIP EL 2.2UF 50WV CHIP EL 2.2UF 50WV CHIP C 0.10UF K CHIP C 0.10UF K	C KE1E2 M1X1
C61-65 C66,67 C69 C70,71 C81,82			CK73GB1H104K CC73GCH1H120J CE32CL1C100M CK73GB1H103K CE32CL1C220M	CHIP C 0.10UF K CHIP C 12PF J CHIP EL 10UF 16WV CHIP C 0.010UF K CHIP EL 22UF 16WV	
C84 C85,86 C87 C88 C89			CE32CL1C100M CK73GB1H102K CE32CL1E4R7M CE32CL1C100M CK73GB1H104K	CHIP EL 10UF 16WV CHIP C 1000PF K CHIP EL 4.7UF 25WV CHIP EL 10UF 16WV CHIP C 0.10UF K	
C91 C96,97 C99-101 C102,103 C104			CK73GB1H104K CK73GB1H104K CK73GB1H104K CC73GCH1H120J CE32CL1C100M	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 12PF J CHIP EL 10UF 16WV	
C105 C106 C110 C111 C301			C92-1685-05 CE32CL1C470M CK73GB1H102K CK73GB1H104K CK73GB1H333K	ELECTRO 47UF 6.3WV CHIP EL 47UF 16WV CHIP C 1000PF K CHIP C 0.10UF K CHIP C 0.033UF K	
C302-306 C307,308 C309,310 C311,312 C314			CK73GB1H104K C93-1367-05 CK73GB1H471K CE32AU1A560M CK73GB1H102K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 470PF K CHIP EL 56UF 10WV CHIP C 1000PF K	
C317 C318 C319 C320 C322		*	CK73GB1H104K CK73GB1H102K CK73GB1H104K CK73GB1H102K CE32BJ1H100M	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K CHIP C 1000PF K CHIP EL 10UF 50WV	
C323 C324-326 C327			CK73GB1H103K CK73GB1H102K CK73EB1E105K	CHIP C 0.010UF K CHIP C 1000PF K CHIP C 1.0UF K	
CN300 CN301			E41-2153-05 E41-2550-05	FLAT CABLE CONNECTOR PIN ASSY	
L3 L5 L300,301 L303 L304,305		*	L92-0332-05 L41-1005-33 L33-1914-05 L41-4795-33 L33-2291-05	CHIP FERRITE SMALL FIXED INDUCTOR (10U) CHOKE COIL SMALL FIXED INDUCTOR (4.7U) CHOKE COIL	
X1 X2			L77-2916-05 L77-2908-05	CRYSTAL RESONATOR (24.576MHZ) CRYSTAL RESONATOR (12.000MHZ)	
R11-16 R18-20 R23 R24 R25			RK73GB2A471J RK73GB2A472J RK73GB2A133J RK73GB2A123J RK73GB2A472J	CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 13K J 1/10W CHIP R 12K J 1/10W CHIP R 4.7K J 1/10W	
R26			RK73GB2A123J	CHIP R 12K J 1/10W	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DAUGHTER UNIT (X89-274/279x-11)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R27			RK73GB2A472J	CHIP R 4.7K J 1/10W		R170			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R28			RK73GB2A123J	CHIP R 12K J 1/10W		R186,187			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R30			RK73GB2A153J	CHIP R 15K J 1/10W		R300			RK73GB2A103J	CHIP R 10K J 1/10W	
R31,32			RK73GB2A123J	CHIP R 12K J 1/10W		R301			RN73GH1J1402D	CHIP R 14.0K D 1/16W	
R34-36			RK73GB2A133J	CHIP R 13K J 1/10W		R302			RN73GH1J9531D	CHIP R 9.53K D 1/16W	
R38			RK73GB2A103J	CHIP R 10K J 1/10W		R303			RN73GH1J333D	CHIP R 33K D 1/16W	
R39,40			RK73GB2A133J	CHIP R 13K J 1/10W		R304			RK73GB2A103J	CHIP R 10K J 1/10W	
R41			RK73GB2A102J	CHIP R 1.0K J 1/10W		R305,306			RK73GB2A104J	CHIP R 100K J 1/10W	
R42			RK73GB2A473J	CHIP R 47K J 1/10W		R307,308			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A470J	CHIP R 47 J 1/10W		R309			RN73GH1J102D	CHIP R 1.0K D 1/16W	
R44,45			RK73GB2A431J	CHIP R 430 J 1/10W		R310			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R46,47			RK73GB2A151J	CHIP R 150 J 1/10W		R311			RN73GH1J682D	CHIP R 6.8K D 1/16W	
R48			RK73GB2A750J	CHIP R 75 J 1/10W		R313			RN73GH1J4021D	CHIP R 4.02K D 1/16W	
R49			RK73GB2A431J	CHIP R 430 J 1/10W		R314			RK73GB2A750J	CHIP R 75 J 1/10W	
R51-54			RK73GB2A121J	CHIP R 120 J 1/10W		R318			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R55,56			RK73GB2A431J	CHIP R 430 J 1/10W		R319			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R61			RK73GB2A470J	CHIP R 47 J 1/10W		R320			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R62			RK73GB2A472J	CHIP R 4.7K J 1/10W		R321			RK73GB2A103J	CHIP R 10K J 1/10W	
R63			RK73GB2A470J	CHIP R 47 J 1/10W		R323			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R64			RK73GB2A330J	CHIP R 33 J 1/10W		R324			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R65			RK73GB2A470J	CHIP R 47 J 1/10W		R325			RK73GB2A104J	CHIP R 100K J 1/10W	
R66			RK73GB2A330J	CHIP R 33 J 1/10W		R326			RK73GB2A473J	CHIP R 47K J 1/10W	
R67			RK73GB2A201J	CHIP R 200 J 1/10W		W1			R92-1252-05	CHIP R 0 OHM J 1/16W	
R68			RK73GB2A620J	CHIP R 62 J 1/10W		W10-15			R92-1252-05	CHIP R 0 OHM J 1/16W	
R69			RK73GB2A472J	CHIP R 4.7K J 1/10W		W300-304			R92-1252-05	CHIP R 0 OHM J 1/16W	
R70			RK73GB2A471J	CHIP R 470 J 1/10W		W306,307			R92-1252-05	CHIP R 0 OHM J 1/16W	
R71			RK73GH2A183D	CHIP R 18K D 1/10W		D5			DAP202U	DIODE	
R72			RK73GB2A361J	CHIP R 360 J 1/10W		D6			CRS04	DIODE	
R74			RK73GB2A470J	CHIP R 47 J 1/10W		D11			DA204U	DIODE	
R75-82			RK73GB2A103J	CHIP R 10K J 1/10W		D13			DA204U	DIODE	
R85-90			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		D16			DA204U	DIODE	
R95,96			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		D301,302			EC31QS04AG	DIODE	
R97,98			RK73GB2A471J	CHIP R 470 J 1/10W		D303			UDZS12B	ZENER DIODE	
R99,100			RK73GB2A223J	CHIP R 22K J 1/10W		IC2-4			NJM4580V-ZB	ANALOGUE IC	
R103,104			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		IC5			TA78L05F-F	ANALOGUE IC	
R105			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC6			AK4359VF	MOS-IC	
R109			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		IC7			PCM1802DBR	MOS-IC	
R110			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC9			DSPA56371AF180	MOS-IC	
R116-119			RK73GB2A470J	CHIP R 47 J 1/10W		IC10			AK4112BVFP	MOS-IC	
R120			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC11			NJM4580V-ZB	ANALOGUE IC	
R121-124			RK73GB2A470J	CHIP R 47 J 1/10W		IC12			NJM2123V-ZB	ANALOGUE IC	
R125			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC17			TC7SET08FU-F	MOS-IC	
R126			RK73GB2A105J	CHIP R 1.0M J 1/10W		IC18			TC7SHU04FU-F	MOS-IC	
R127			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		IC19			E-LD1117DTC	ANALOGUE IC	
R128			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC20,21			UPC2933ATAZ	ANALOGUE IC	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC300		*	FA7703V-H1	ANALOGUE IC	
R131			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		Q13			DTA144EUA	DIGITAL TRANSISTOR	
R139-142			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		Q14, 15			DTC643TU	DIGITAL TRANSISTOR	
R143			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q300			DTC144EUA	DIGITAL TRANSISTOR	
R144-147			RK73GB2A104J	CHIP R 100K J 1/10W		Q302			DTC144EUA	DIGITAL TRANSISTOR	
R151			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		Q303			HAT1016R-E	DUAL FET	
R155			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		Q306			DTC143TUA	DIGITAL TRANSISTOR	
R164			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q307			DTC144EUA	DIGITAL TRANSISTOR	
R165			RK73GB2A8R2J	CHIP R 8.2 J 1/10W		Q309			DTA144EUA	DIGITAL TRANSISTOR	
R167			RK73GB2A8R2J	CHIP R 8.2 J 1/10W							

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DAUGHTER UNIT (X89-274/279x-11)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q310 Q312 Q313		*	DTC144EUA 2SJ518-E IMX9	DIGITAL TRANSISTOR FET TRANSISTOR	
DVD MECHANISM ASSY (X92-5130-00)					
1	1B		A10-5084-31	CHASSIS	
2	2B		A10-5083-21	CHASSIS ASSY	
3	3B		A11-1631-21	SUB CHASSIS	
4	1B		D10-4763-32	ARM	
5	1B		D10-4764-23	ARM	
7	2B		D10-4768-12	SLIDER	
8	2B		D10-4769-03	SLIDER	
9	2A		D10-4771-02	SLIDER	
10	2A		D10-4772-03	SLIDER	
11	2A		D10-4773-13	SLIDER	
12	2B		D10-4774-03	LEVER	
13	2B		D10-4776-23	ARM	
14	3A		D10-4795-23	ARM	
17	3B		D12-0638-13	CAM	
21	2B		D13-2298-04	GEAR	
22	2B		D13-2299-04	GEAR	
23	2B		D13-2303-04	GEAR	
24	2B		D13-2305-04	GEAR	
25	2B		D13-2306-04	GEAR	
26	1A		D13-2308-04	GEAR	
27	1A		D13-2309-04	GEAR	
28	3B		D13-2316-24	GEAR ASSY	
29	2B		D13-2300-14	GEAR	
30	2A		D14-0799-14	ROLLER	
31	2A		D14-1006-04	ROLLER	
33	3A		D21-2429-13	SHAFT	
36	1A		D39-0259-05	DAMPER	
37 VFC1	2B 2A		E39-0556-05 E39-0602-05	LEAD WIRE FLAT CABLE	
38	3A		F07-1134-12	COVER	
39	3A		F09-1930-14	SHEET	
40	3A		F09-1960-04	SHEET	
44	3A		F09-1870-04	SHEET	
45	2B		G01-3192-04	EXTENSION SPRING	
46	2A		G01-3194-24	EXTENSION SPRING	
47	1B		G01-3195-14	EXTENSION SPRING	
48	2A		G01-3206-24	TORSION COIL SPRING	
49	2A		G01-3207-24	TORSION COIL SPRING	
50	3A		G01-3209-04	COMPRESSION SPRING	
51	3A		G02-1468-04	FLAT SPRING	
52	2B		G02-1504-33	FLAT SPRING ASSY	
53	1B		G02-1466-24	FLAT SPRING	
54	3B		G02-1488-04	FLAT SPRING	
55	3A		G02-1473-04	FLAT SPRING	
56	1B		G11-3614-04	CUSHION (SR-S-24P)	
57	3B		G11-3622-04	CUSHION (PORON)	
58	2B		J11-0654-13	CLAMPER	
59	1A		J22-0042-12	MOUNTING HARDWARE	
60	1B		J22-0043-12	MOUNTING HARDWARE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
61	3B		J22-0044-03	MOUNTING HARDWARE	
62	1A		J22-0103-23	MOUNTING HARDWARE ASSY	
63	2B		J22-0177-14	MOUNTING HARDWARE	
64	1A		J90-1066-41	GUIDE	
65	1B		J90-1067-13	GUIDE	
66	1B		J90-1087-32	GUIDE	
67	1B		J90-1088-32	GUIDE	
A	2A		N09-6143-05	MACHINE SCREW	
B	1A		N09-6144-05	MACHINE SCREW	
C	3B		N09-6145-05	MACHINE SCREW	
D	3B		N09-6156-05	MACHINE SCREW (M1.4X1.6)	
E	1B		N09-6230-05	MACHINE SCREW	
F	1A		N19-2192-04	FLAT WASHER	
G	3B		N09-6133-05	MACHINE SCREW (SERRATED)	
H	3A		N09-6134-05	STEPPED SCREW (STEPPED)	
J	3A		N09-6203-05	MACHINE SCREW	
K	3A		N09-6221-15	MACHINE SCREW (P 1.4X3.5)	
L	2A		N09-6308-05	MACHINE SCREW (P 1.4X4.5)	
M	2A		N19-2183-14	FLAT WASHER	
VM1	2A		T42-1321-05	MOTOR ASSY	
VM2	3A		T42-1084-15	MOTOR ASSY	
VM3	2B		X94-2000-00	MOTORASSY (LO)	
71	2A		X94-2010-00	ROLLER ASSY	
VPU1	3B		X94-2020-00	OPTICAL PICKUP ASSY	
PANEL MECHANISM ASSY (D40-2201-15)					
601	2H		A10-5174-28	CHASSIS CALKING ASSY	
602	3G		D10-4801-38	SLIDER ASSY	
603	2G		D13-2324-08	GEAR	
604	2G		D13-2325-08	GEAR	
605	2G		D13-2326-08	GEAR	
607	2G		D14-0789-08	ROLLER	
608	1G		D19-0650-08	CLUTCH ASSY	
609	1H		E39-0671-08	WIRING HARNESS	
610	3G		G02-1480-08	FLAT SPRING	
611	3H		J22-0118-28	SLIDE RAIL	
612	3G		J22-0119-28	SLIDE RAIL	
613	2G		J22-0120-08	SLIDE RAIL	
614	2G		J90-1083-08	GUIDE	
615	2H		J22-0213-08	MOUNTING HARDWARE (MOTOR)	
A	1H		N09-6147-08	SCREW (M1.7X4)	
B	1H		N09-6148-08	SCREW (S2X2.3)	
D	3G		N09-6150-08	SCREW	
E	3G		N09-6151-08	SCREW	
F	1G		N19-2105-14	CUT WASHER (1.6X3.5Xt0.35)	
PM1	1H		T42-1100-18	MOTOR ASSY	
VR1	1H		T99-0448-05	SPEED DETECTOR	

E1 : DDX8027 E2 : DDX8027Y (Europe)
K : DDX8017 (North America) X1 : DDX8047 (Australia)
C : DDX8067 (China) M1 : DDX8037 (Other Areas)

△ Indicates safety critical components.