



EXPLODED VIEW (CD MECHANISM)

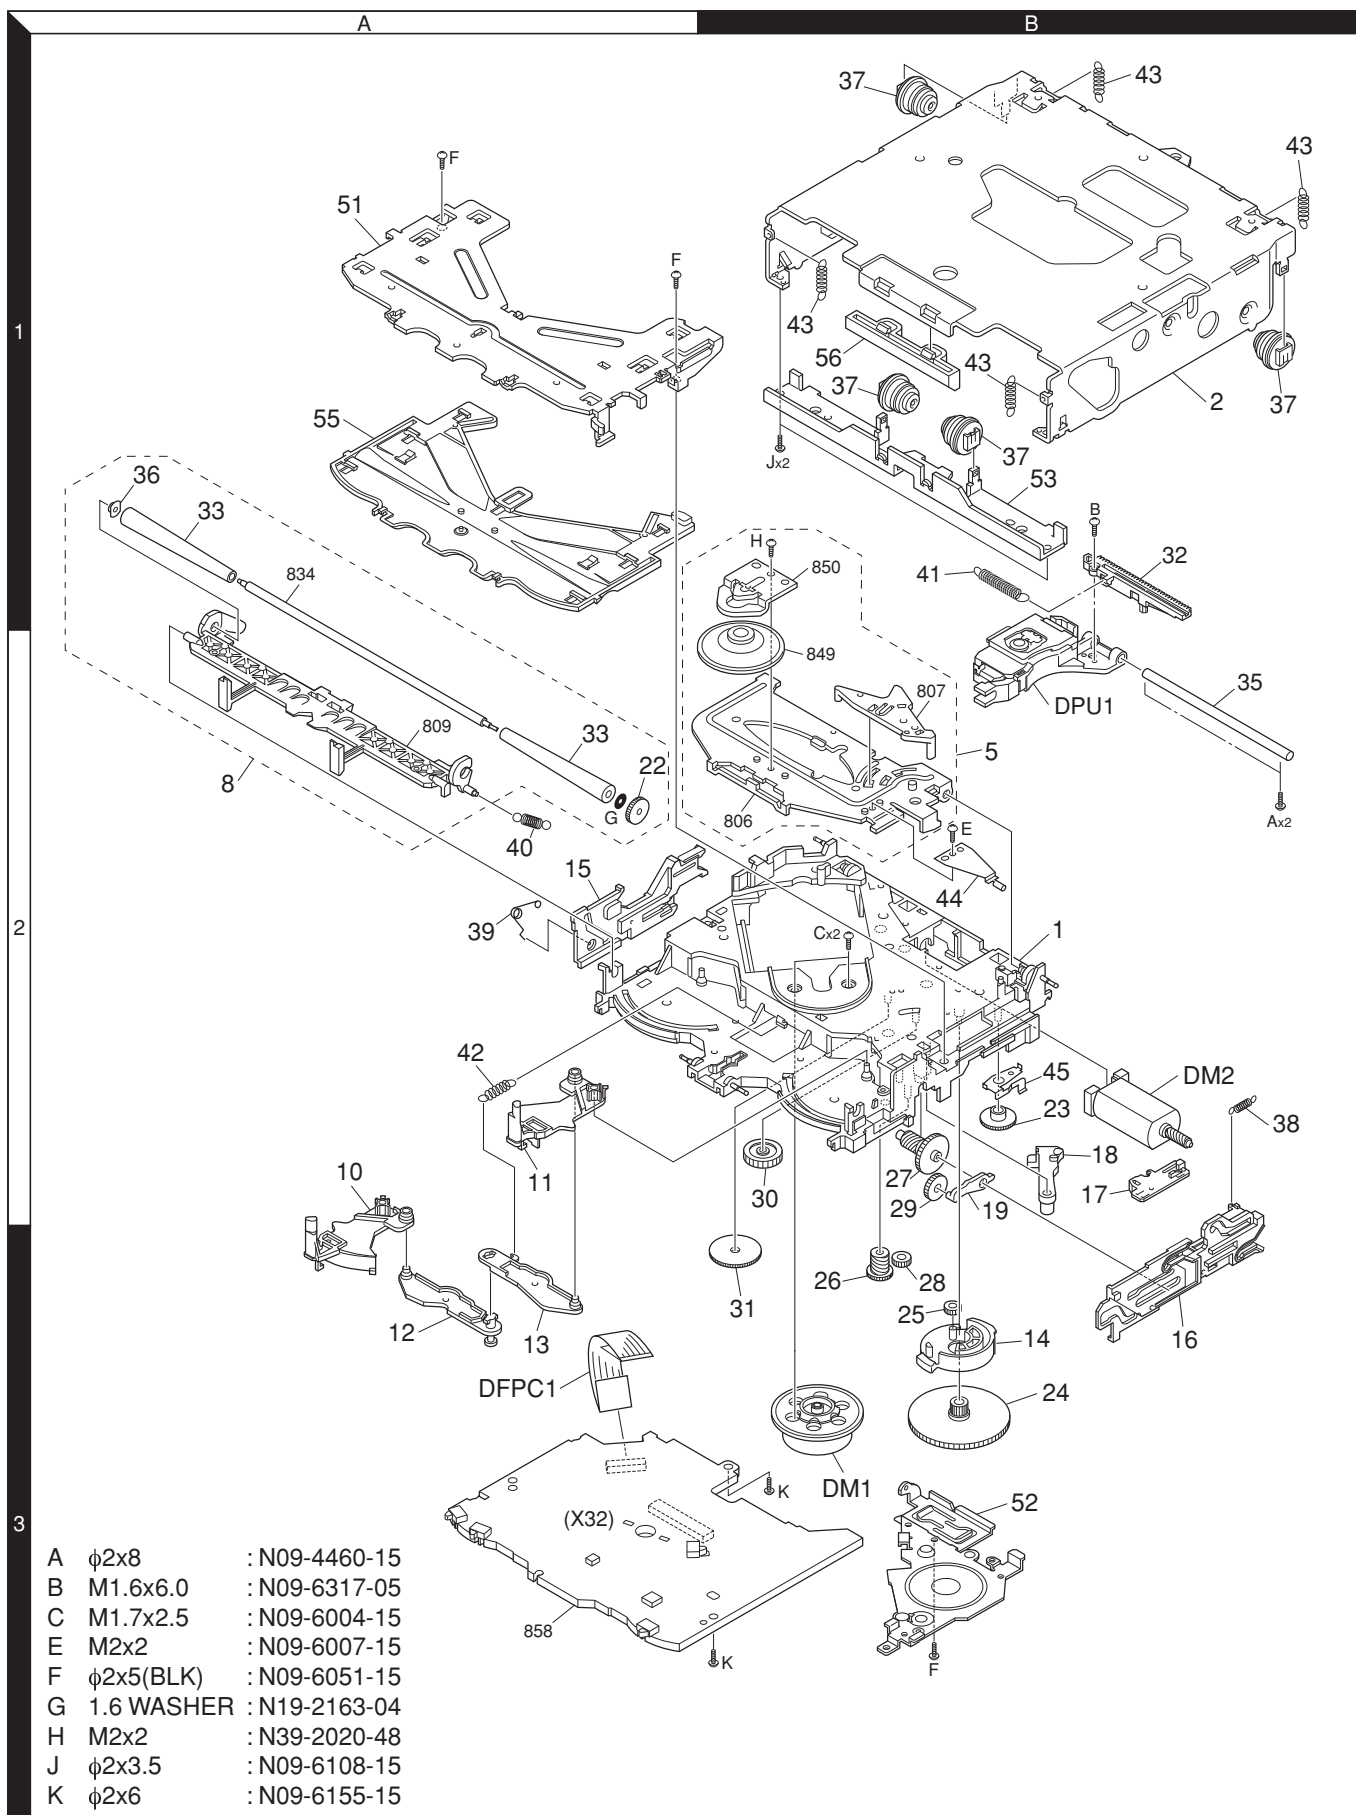

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

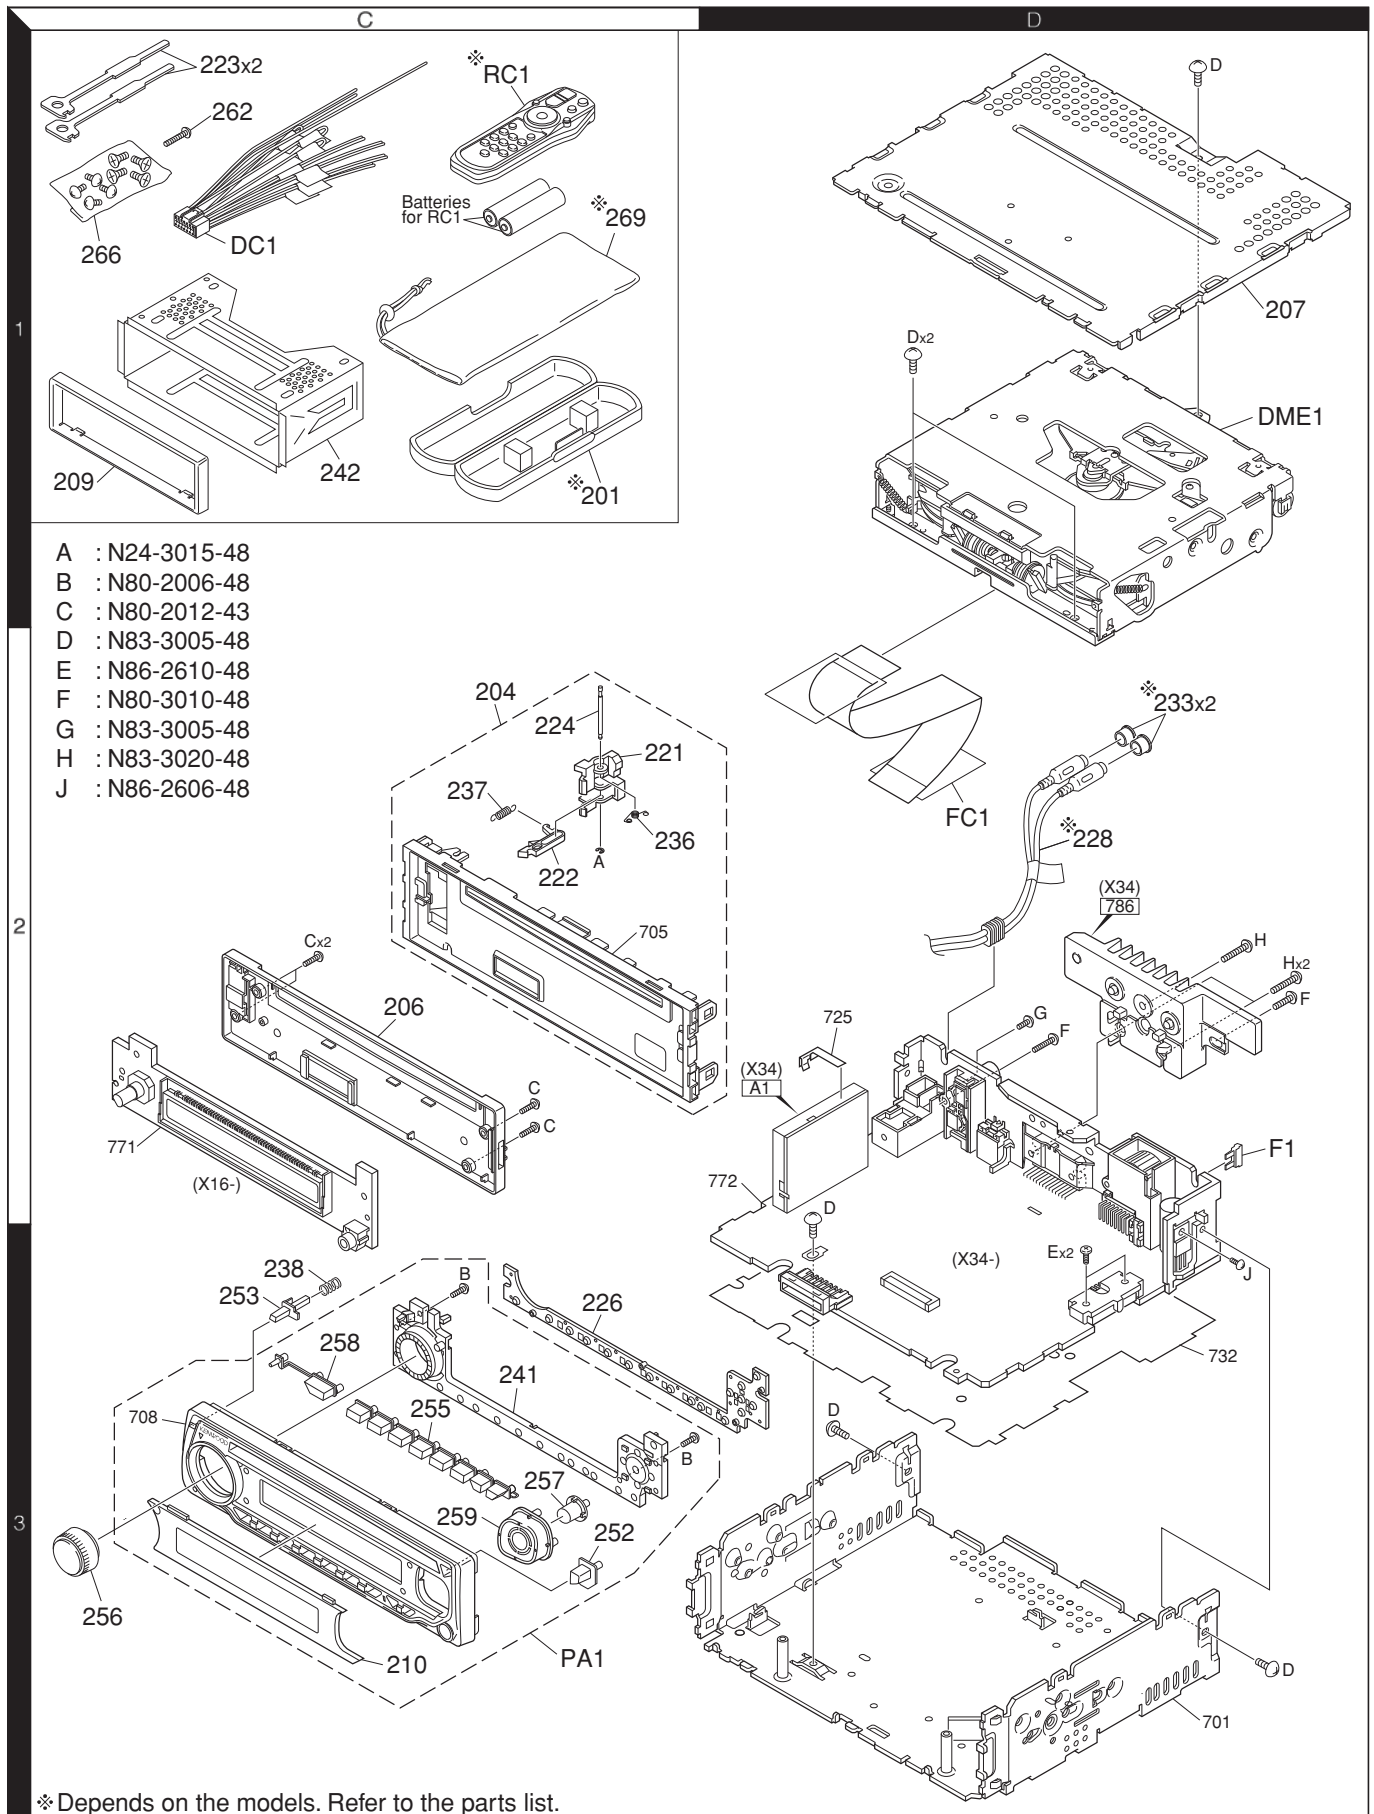

Parts with the exploded numbers larger than 700 are not supplied.

KDC-MP208/MP238/MP238CR/MP239 KDC-MP3039/MP339/MP339S/MP439

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP208/MP238/MP238CR/MP239/MP3039/MP339/MP339S/MP439					
201	1C		A02-2736-03	PLASTIC CABINET ASSY	M1M2M3
201	1C		A02-2736-03	PLASTIC CABINET ASSY	M4M5
204	2C	*	A22-3149-03	SUB PANEL ASSY	
206	2C	*	A46-1861-01	REAR COVER	
207	1D		A52-0804-12	TOP PLATE	
PA1	3C	*	A64-4273-02	PANEL ASSY	K
PA1	3C	*	A64-4274-02	PANEL ASSY	K1
PA1	3C	*	A64-4275-02	PANEL ASSY	K2
PA1	3C	*	A64-4281-02	PANEL ASSY	M1
PA1	3C	*	A64-4282-02	PANEL ASSY	M2
PA1	3C	*	A64-4283-02	PANEL ASSY	M3
PA1	3C	*	A64-4284-02	PANEL ASSY	M4
PA1	3C	*	A64-4285-02	PANEL ASSY	M5
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	K1K2M3
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	M4M5
RC1	1C		A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	KM1
-			B46-0690-04	ID CARD	KK1K2
-			B46-0690-04	ID CARD	M2M3M4
-			B46-0690-04	ID CARD	M5
-			B46-0691-04	ID CARD	M1
-		*	B64-3898-00	INST. MANUAL (ENG.FRE.SPA.)	KK1K2
-		*	B64-3901-00	INST. MANUAL (ENG.S-CHI.)	M1M2M3
-		*	B64-3901-00	INST. MANUAL (ENG.S-CHI.)	M4M5
-		*	B64-3902-00	INST. MANUAL (ARABIC)	M1M2M3
-		*	B64-3902-00	INST. MANUAL (ARABIC)	M4M5
209	1C		B07-3122-01	ESCUTCHEON	KK1K2
209	1C		B07-3122-01	ESCUTCHEON	M1M2M4
209	1C	*	B07-3229-01	ESCUTCHEON	M3M5
210	3C	*	B10-4996-01	FRONT GLASS	K
210	3C	*	B10-4997-01	FRONT GLASS	K1
210	3C	*	B10-4998-01	FRONT GLASS	K2
210	3C	*	B10-5003-01	FRONT GLASS	M1
210	3C	*	B10-5004-01	FRONT GLASS	M2
210	3C	*	B10-5005-01	FRONT GLASS	M3
210	3C	*	B10-5006-01	FRONT GLASS	M4M5
221	2C		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C		D10-4589-04	LEVER	
224	2C		D21-2329-04	SHAFT	
226	3C	*	E29-2115-02	CONDUCTIVE RUBBER	
228	2D		E30-6229-05	CORD WITH PINPLUG	KM1
DC1	1C		E30-6415-15	DC CORD	
FC1	2D	*	E39-0958-05	FLAT CABLE	
233	2D		F29-0626-04	INSULATING COVER	KM1
F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING (REL)	
-		*	H54-4151-03	ITEM CARTON CASE	K
-		*	H54-4152-03	ITEM CARTON CASE	K1
-		*	H54-4153-03	ITEM CARTON CASE	K2

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H54-4159-03	ITEM CARTON CASE	M1
-		*	H54-4160-03	ITEM CARTON CASE	M2
-		*	H54-4161-03	ITEM CARTON CASE	M3
-		*	H54-4162-03	ITEM CARTON CASE	M4
-		*	H54-4163-03	ITEM CARTON CASE	M5
241	3C	*	J19-7186-01	HOLDER	
242	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
252	3C	*	K24-4783-04	PUSH KNOB (EJECT)	
253	3C	*	K24-4786-04	PUSH KNOB (RELEASE)	
255	3C	*	K25-1906-02	PUSH KNOB (PRESET)	
256	3C	*	K28-0272-04	KNOB ASSY (VOL)	
257	3C	*	K24-4789-04	PUSH KNOB (PLAY/PAUSE)	
258	3C	*	K25-1909-03	PUSH KNOB (RESET/SRC)	
259	3C	*	K25-1912-03	PUSH KNOB (FM/AM)	
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	
266	1C		N99-1757-05	SCREW SET	
A	2C		N24-3015-48	E TYPE RETAINING RING	
B	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	2C		N80-2012-43	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N86-2610-48	BINDING HEAD TAPTITE SCREW	
269	1C		W01-1691-05	CARRYING CASE	K1
269	1C		W01-1692-05	CARRYING CASE	K
DME1	1D	*	X92-5880-06	MECHANISM ASSY (DXM-6E06W)	
SWITCH UNIT (X16-617x-xx)					
D1,2		*	B30-1779-05	LED (1608,SR)	K1K2M2
D1,2		*	B30-1779-05	LED (1608,SR)	M5
D1,2		*	B30-1781-05	LED (1608,BLUE)	KM1
D3-8		*	B30-1780-05	LED (1608,PG)	M3M4
D9		*	B30-1781-05	LED (1608,BLUE)	KM1
D9-11		*	B30-1779-05	LED (1608,SR)	K1K2M2
D9-11		*	B30-1779-05	LED (1608,SR)	M5
D10-19		*	B30-1780-05	LED (1608,PG)	M1M3M4
D10,11		*	B30-1779-05	LED (1608,SR)	K
D12			B30-1566-05	LED (1608,RED)	KK1K2
D12			B30-1566-05	LED (1608,RED)	M2M5
D13-18		*	B30-1779-05	LED (1608,SR)	KK1K2
D13-18		*	B30-1779-05	LED (1608,SR)	M2M5
D19,20			B30-1566-05	LED (1608,RED)	KK1K2
D19,20			B30-1566-05	LED (1608,RED)	M2M5
D20			B30-1566-05	LED (1608,RED)	M1M3M4
D21		*	B30-1779-05	LED (1608,SR)	KK1K2
D21		*	B30-1779-05	LED (1608,SR)	M2M5
D21		*	B30-1780-05	LED (1608,PG)	M1M3M4
D23		*	B30-1779-05	LED (1608,SR)	K1K2M2
D23		*	B30-1779-05	LED (1608,SR)	M5
D23		*	B30-1781-05	LED (1608,BLUE)	KM1
C10			CK73GB1A105K	CHIP C 1.0UF	K
C11,12			CK73GB1H103K	CHIP C 0.010UF	K
C15			CC73GCH1H470J	CHIP C 47PF	J
C21			CK73GB1A105K	CHIP C 1.0UF	K

K : KDS-MP238 **K1** : KDC-MP238CR **K2** : KDC-MP208

M1 : KDC-MP439 **M2** : KDC-MP239 **M3** : KDC-MP3039 **M4** : KDC-MP339 **M5** : KDC-MP339S

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-617x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
J1			E59-0852-05	RECTANGULAR PLUG	
J2			E11-0649-05	3.5D PHONE JACK	
CP11			RK74GA1J101J	CHIP-COM 100 J 1/16W	
R13			RK73GB2A221J	CHIP R 220 J 1/10W	
R15			RK73GB2A221J	CHIP R 220 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R22			RK73GB2A101J	CHIP R 100 J 1/10W	
R31-34			RK73FB2B471J	CHIP R 470 J 1/8W	M3M4 KM1 K1K2M2 M5
R61,62			RK73FB2B471J	CHIP R 470 J 1/8W	
R61,62			RK73FB2B561J	CHIP R 560 J 1/8W	
R61,62			RK73FB2B751J	CHIP R 750 J 1/8W	
R61,62			RK73FB2B751J	CHIP R 750 J 1/8W	
R70			RK73GB2A221J	CHIP R 220 J 1/10W	
R72			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R74			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R75			RK73GB2A203J	CHIP R 20K J 1/10W	
R78			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R80,81		*	RK73EB2E240J	CHIP R 24 J 1/4W	
R96			RK73GB2A473J	CHIP R 47K J 1/10W	
S1			T99-0474-05	ROTARY ENCODER	
ED1		*	3-BT-257N	FLUORESCENT INDICATOR TUBE	
IC1			LC75756W	MOS-IC	
IC3		*	PIC95603	ANALOGUE IC	
CD PLAYER UNIT (X32-5970-02) IN CD MECHA					
C20			CC73GCH1H680J	CHIP C 68PF J	
C21			CK73GB1H472K	CHIP C 4700PF K	
C22			CK73GB1H222K	CHIP C 2200PF K	
C23			CC73GCH1H220J	CHIP C 22PF J	
C24			CK73FB1A225K	CHIP C 2.2UF K	
C25			CK73GB1A105K	CHIP C 1.0UF K	
C26			CK73GB1H153K	CHIP C 0.015UF K	
C27			CC73GCH1H470J	CHIP C 47PF J	
C30-32			CK73GB1H103K	CHIP C 0.010UF K	
C33			CK73GB1H332K	CHIP C 3300PF K	
C34			C93-1451-05	CHIP C 0.10UF K	
C35			CK73GB1H153K	CHIP C 0.015UF K	
C36			C93-1451-05	CHIP C 0.10UF K	
C38			CC73GCH1H680J	CHIP C 68PF J	
C39			C93-1451-05	CHIP C 0.10UF K	
C41			CK73GB1A105K	CHIP C 1.0UF K	
C44			C93-1451-05	CHIP C 0.10UF K	
C45,46			CK73GB1H222K	CHIP C 2200PF K	
C47,48			CK73GB1H333K	CHIP C 0.033UF K	
C49,50			C93-1451-05	CHIP C 0.10UF K	
C51			CK73GB1H222K	CHIP C 2200PF K	
C52,53			C93-1451-05	CHIP C 0.10UF K	
C54			CK73GB1A105K	CHIP C 1.0UF K	
C58			CK73EB1E105K	CHIP C 1.0UF K	
C60			CK73EB0J226K	CHIP C 22UF K	
C61-64			C93-1451-05	CHIP C 0.10UF K	
C66			CK73FB1C105K	CHIP C 1.0UF K	
C68,69			C93-1451-05	CHIP C 0.10UF K	
C71			C93-1451-05	CHIP C 0.10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C72			CK73FB0J106K	CHIP C 10UF K	
C87,88			CK73GB1H222K	CHIP C 2200PF K	
C89-91			C93-1451-05	CHIP C 0.10UF K	
C94,95			CK73GB1A105K	CHIP C 1.0UF K	
C96			CK73GB1H103K	CHIP C 0.010UF K	
C97			C93-1451-05	CHIP C 0.10UF K	
C100,101			CK73GB1A105K	CHIP C 1.0UF K	
C102			CK73FB1A225K	CHIP C 2.2UF K	
C103			CK73GB1H153K	CHIP C 0.015UF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R20			RK73GB2A393J	CHIP R 39K J 1/10W	
R21			RK73GB2A163J	CHIP R 16K J 1/10W	
R22			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R23			RK73GB2A273J	CHIP R 27K J 1/10W	
R25			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R26			RK73GB2A683J	CHIP R 68K J 1/10W	
R27			RK73GB2A333J	CHIP R 33K J 1/10W	
R28			RK73GB2A563J	CHIP R 56K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A133J	CHIP R 13K J 1/10W	
R32			RK73GB2A181J	CHIP R 180 J 1/10W	
R33			RK73GB2A153J	CHIP R 15K J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W	
R35			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R36			RK73GB2A154J	CHIP R 150K J 1/10W	
R37			RK73GB2A334J	CHIP R 330K J 1/10W	
R38			RK73GB2A223J	CHIP R 22K J 1/10W	
R40			RK73GB2A273J	CHIP R 27K J 1/10W	
R41			RK73GB2A393J	CHIP R 39K J 1/10W	
R45			RK73GB2A221J	CHIP R 220 J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R48,49			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R50			RK73GB2A560J	CHIP R 56 J 1/10W	
R51			RK73EB2E220J	CHIP R 22 J 1/4W	
R52			RK73EB2E100J	CHIP R 10 J 1/4W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R59			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R60,61			RK73GB2A103J	CHIP R 10K J 1/10W	
R82,83			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R216,217			RK73GB2A103J	CHIP R 10K J 1/10W	
R219,220			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R221,222			RK73GB2A101J	CHIP R 100 J 1/10W	
R223			RK73GB2A103J	CHIP R 10K J 1/10W	
R226-230			RK73GB2A101J	CHIP R 100 J 1/10W	
R231			RK73GB2A473J	CHIP R 47K J 1/10W	
R232			RK73GB2A104J	CHIP R 100K J 1/10W	
R233			RK73GB2A331J	CHIP R 330 J 1/10W	
R239			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R240			RK73EB2E470J	CHIP R 47 J 1/4W	

K : KDS-MP238 K1 : KDC-MP238CR K2 : KDC-MP208
M1 : KDC-MP439 M2 : KDC-MP239 M3 : KDC-MP3039 M4 : KDC-MP339 M5 : KDC-MP339S

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5970-02) IN CD MECHA

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R241 R243 R244 R246 R247			RK73GB2A104J RK73GB2A472J RK73GB2A225J RK73GB2A333J RK73GB2A183J	CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2M J 1/10W CHIP R 33K J 1/10W CHIP R 18K J 1/10W	
R248 R252			RK73GB2A472J RK73GB2A102J	CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D1 D2 D3,4 IC3 IC4			DA204U DAP202U DA204U BA5824FP TC94A70FG-007	DIODE DIODE DIODE ANALOGUE IC MOS-IC	△
IC5 IC6 IC11 Q1 Q10-12 Q13			S-1132B15U5T1G S-1132B33U5T1G XC6206P152MR 2SB0970 UM6K1N DTC114YUA	ANALOGUE IC ANALOGUE IC ANALOGUE IC TRANSISTOR DUAL FET DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-564x-xx)					
C1 C2 C3 C3,4 C3,4			CD04AZ1C332M2 CD04AB1C220M CK73GB1H104K CK73GB1H104K CK73GB1H104K	ELECTRO 3300UF 16WV ELECTRO 22UF 16WV CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	KK1K2 M1M2M3 M4M5
C5 C7 C9 C11 C12			CD04AR1C221M CD04AB0J101M CK73GB1C104K CK73FB1A225K CK73GB1C104K	ELECTRO 220UF 16WV ELECTRO 100UF 6.3WV CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 0.10UF K	
C14 C15 C101,102 C202 C203			CK73GB1C104K CD04AB1C220M CK73GB1H103K CC73GCH1H180J CC73GCH1H220J	CHIP C 0.10UF K ELECTRO 22UF 16WV CHIP C 0.010UF K CHIP C 18PF J CHIP C 22PF J	
C204 C205 C301,302 C306,307 C308			CK73GB1C104K CK73GB1H102K CD04AB1HR47M CK73GB1C104K CD04AB0J470M	CHIP C 0.10UF K CHIP C 1000PF K ELECTRO 0.47UF 50WV CHIP C 0.10UF K ELECTRO 47UF 6.3WV	
C310,311 C401 C403 C405 C509,510			CK73GB1H102K CD04AB1C470M CD04AB1H010M CK73GB1C104K CK73GB1C104K	CHIP C 1000PF K ELECTRO 47UF 16WV ELECTRO 1.0UF 50WV CHIP C 0.10UF K CHIP C 0.10UF K	KM1
C601,602 C603 C701,702 C705,706 C805			CK73GB1C104K CD04ACQJ470M CD04AB1V100M CD04AB1V100M CD04AB1C470M	CHIP C 0.10UF K ELECTRO 47UF 6.3WV ELECTRO 10UF 35WV ELECTRO 10UF 35WV ELECTRO 47UF 16WV	KM1 KM1 KM1
C807 C809			CK73GB1A105K CK73GB1A105K	CHIP C 1.0UF K CHIP C 1.0UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C811 C812 C813 C814 C815			CK73GB1A474K CK73GB1A224K CK73GB1A474K CK73GB1A224K CK73GB1A474K	CHIP C 0.47UF K CHIP C 0.22UF K CHIP C 0.47UF K CHIP C 0.22UF K CHIP C 0.47UF K	
C816 C817 C818 C819,820 C901,902			CK73GB1A224K CK73GB1A474K CK73GB1A224K CK73GB1A105K CD04AB1C101M	CHIP C 0.22UF K CHIP C 0.47UF K CHIP C 0.22UF K CHIP C 1.0UF K ELECTRO 100UF 16WV	
CN2 CN4 J1 J2 J3			E41-1822-05 E40-6526-05 E58-0991-05 E04-0332-05 E58-1060-05	FLAT CABLE CONNECTOR PIN ASSY RECTANGULAR RECEPTACLE RF COAXIAL CABLE RECEPTACLE RECTANGULAR RECEPTACLE	KM1
J4 J5			E56-0855-05 E63-0941-05	CYLINDRICAL RECEPTACLE PIN JACK	KM1
L1 L401 X1 X2			L33-2319-05 L40-4791-58 L78-1218-05 L77-2920-05	CHOKE COIL ASSY SMALL FIXED INDUCTOR RESONATOR CRYSTAL RESONATOR	
F G H J	2D 2D 2D 3D		N80-3010-48 N83-3005-48 N83-3020-48 N86-2606-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
R1 R2-5 R11 R12-14 R15			RD14BB2C102J RD14BB2C103J RD14DB2H100J RK73PB2H100J RD14DB2H100J	RD 1.0K J 1/6W RD 10K J 1/6W SMALL-RD 10 J 1/2W CHIP R 10 J 1/2W SMALL-RD 10 J 1/2W	
R16 R17 R101 R101,102 R101,102			RK73FB2B681J RK73GB2A272J RD14BB2C472J RD14BB2C472J RD14BB2C472J	CHIP R 680 J 1/8W CHIP R 2.7K J 1/10W RD 4.7K J 1/6W RD 4.7K J 1/6W RD 4.7K J 1/6W	KK1K2 M1M2M3 M4M5
R103 R104 R105 R106 R107			RD14BB2C103J RK73GB2A473J RK73GB2A104J RD14BB2C332J RD14BB2C333J	RD 10K J 1/6W CHIP R 47K J 1/10W CHIP R 100K J 1/10W RD 3.3K J 1/6W RD 33K J 1/6W	
R108 R109 R110 R111 R112			RK73GB2A103J RD14BB2C223J RK73FB2B683J RK73GB2A393J RD14BB2C203J	CHIP R 10K J 1/10W RD 22K J 1/6W CHIP R 68K J 1/8W CHIP R 39K J 1/10W RD 20K J 1/6W	
R113 R114,115 R116,117 R201 R202			RK73GB2A104J RK73GB2A103J RD14BB2C103J RK73GB2A473J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 10K J 1/10W RD 10K J 1/6W CHIP R 47K J 1/10W CHIP R 100K J 1/10W	KM1 KM1
R203,204 R205-207 R208 R209,210			RK73GB2A103J RK73GB2A473J RD14BB2C473J RD14BB2C471J	CHIP R 10K J 1/10W CHIP R 47K J 1/10W RD 47K J 1/6W RD 470 J 1/6W	

K : KDS-MP238 K1 : KDC-MP238CR K2 : KDC-MP208
M1 : KDC-MP439 M2 : KDC-MP239 M3 : KDC-MP3039

M4 : KDC-MP339 M5 : KDC-MP339S

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-564x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R218			RK73GB2A223J	CHIP R 22K J 1/10W		R504			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R219,220			RD14BB2C104J	RD 100K J 1/6W	KM1	R598			RK73GB2A223J	CHIP R 22K J 1/10W	
R223			RK73GB2A222J	CHIP R 2.2K J 1/10W		R599			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R225			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2M3	R601,602			RD14BB2C100J	RD 10 J 1/6W	KM1
R225			RK73GB2A473J	CHIP R 47K J 1/10W	M4M5	R603			RD14BB2C4R7J	RD 4.7 J 1/6W	KM1
R226			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2M3	R604			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1
R226			RK73GB2A223J	CHIP R 22K J 1/10W	M4M5	R605			RD14BB2C101J	RD 100 J 1/6W	KM1
R226			RK73GB2A473J	CHIP R 47K J 1/10W	KK1	R606,607			RD14BB2C102J	RD 1.0K J 1/6W	KM1
R226,227			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R608,609			RD14BB2C101J	RD 100 J 1/6W	KM1
R228			RK73GB2A223J	CHIP R 22K J 1/10W	K2	R610			RD14BB2C472J	RD 4.7K J 1/6W	KM1
R228			RK73GB2A473J	CHIP R 47K J 1/10W	K1M2M3	R611			RD14BB2C101J	RD 100 J 1/6W	KM1
R228			RK73GB2A473J	CHIP R 47K J 1/10W	M4M5	R612			RD14BB2C472J	RD 4.7K J 1/6W	KM1
R229			RK73GB2A104J	CHIP R 100K J 1/10W	KM1	R701,702			RK73GB2A331J	CHIP R 330 J 1/10W	
R301			RK73GB2A222J	CHIP R 2.2K J 1/10W		R703,704			RD14BB2C223J	RD 22K J 1/6W	
R302			RD14BB2C101J	RD 100 J 1/6W		R705,706			RD14BB2C181J	RD 180 J 1/6W	
R303			RK73GB2A102J	CHIP R 1.0K J 1/10W		R707,708			RK73GB2A331J	CHIP R 330 J 1/10W	KM1
R304			RD14BB2C102J	RD 1.0K J 1/6W		R709,710			RD14BB2C223J	RD 22K J 1/6W	KM1
R305			RK73GB2A102J	CHIP R 1.0K J 1/10W		R711,712			RD14BB2C181J	RD 180 J 1/6W	KM1
R306			RK73GB2A472J	CHIP R 4.7K J 1/10W		R793			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R307			RK73GB2A222J	CHIP R 2.2K J 1/10W		R801			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R310-313			RK73GB2A102J	CHIP R 1.0K J 1/10W		R802			RK73GB2A333J	CHIP R 33K J 1/10W	
R314			RK73GB2A104J	CHIP R 100K J 1/10W		R803			RK73GB2A473J	CHIP R 47K J 1/10W	
R315			RK73GB2A472J	CHIP R 4.7K J 1/10W		R804			RK73GB2A221J	CHIP R 220 J 1/10W	
R316,317			RK73GB2A222J	CHIP R 2.2K J 1/10W		R805			RK73GB2A223J	CHIP R 22K J 1/10W	
R318			RK73GB2A472J	CHIP R 4.7K J 1/10W		R806			RK73GB2A183J	CHIP R 18K J 1/10W	
R319			RK73GB2A222J	CHIP R 2.2K J 1/10W		R808			RK73GB2A100J	CHIP R 10 J 1/10W	
R320			RK73GB2A472J	CHIP R 4.7K J 1/10W		R891			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R321			RK73GB2A473J	CHIP R 47K J 1/10W		R901,902			RK73GB2A334J	CHIP R 330K J 1/10W	
R322			RK73GB2A471J	CHIP R 470 J 1/10W		R903			RK73GB2A153J	CHIP R 15K J 1/10W	
R330			RD14BB2C101J	RD 100 J 1/6W		R904			RK73GB2A223J	CHIP R 22K J 1/10W	
R331			RK73GB2A392J	CHIP R 3.9K J 1/10W		R905,906			RK73GB2A104J	CHIP R 100K J 1/10W	
R332			RD14BB2C101J	RD 100 J 1/6W		R907-914			RD14BB2C104J	RD 100K J 1/6W	
R333,334			RD14BB2C102J	RD 1.0K J 1/6W		R915			RK73GB2A104J	CHIP R 100K J 1/10W	
R335			RK73GB2A473J	CHIP R 47K J 1/10W		R952			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R336-339			RD14BB2C222J	RD 2.2K J 1/6W		R958			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R340			RK73GB2A225J	CHIP R 2.2M J 1/10W		R962			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R341			RD14BB2C222J	RD 2.2K J 1/6W		R971			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R342			RK73GB2A392J	CHIP R 3.9K J 1/10W		D1			S2V60-5009F46	DIODE	
R343			RD14BB2C102J	RD 1.0K J 1/6W		D2			MTZJ8.2 (B)	ZENER DIODE	
R344,345			RD14BB2C4R7J	RD 4.7 J 1/6W		D3			D1F60-5063	DIODE	
R346			RD14BB2C2R2J	RD 2.2 J 1/6W		D4			1SS133	DIODE	M1M2M3
R347			RK73GB2A102J	CHIP R 1.0K J 1/10W		D4			1SS133	DIODE	M4M5
R348,349			RK73GB2A103J	CHIP R 10K J 1/10W		D7			MTZJ12 (B)	ZENER DIODE	
R402,403			RD14BB2C471J	RD 470 J 1/6W		D101,102			D1F60-5063	DIODE	
R404			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1	D103			1SR139-400T64	DIODE	M1M2M3
R405			RK73GB2A473J	CHIP R 47K J 1/10W	KM1	D103			1SR139-400T64	DIODE	M4M5
R406			RK73GB2A223J	CHIP R 22K J 1/10W		D104			D1F60-5063	DIODE	M1M2M3
R407			RK73GB2A103J	CHIP R 10K J 1/10W		D104			D1F60-5063	DIODE	
R408			RK73GB2A152J	CHIP R 1.5K J 1/10W		D105			D1F60-5063	DIODE	M4M5
R409			RK73GB2A392J	CHIP R 3.9K J 1/10W		D106-108			MTZJ4.7 (B)	ZENER DIODE	
R491,492			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2M2	D109			MTZJ6.8 (B)	ZENER DIODE	
R491,492			RK73GB2A100J	CHIP R 10 J 1/10W	M3M4M5	D110			1SS133	DIODE	
R493			RD14BB2C100J	RD 10 J 1/6W	K1K2M2	D304-306			MTZJ6.8 (B)	ZENER DIODE	
R493			RD14BB2C100J	RD 10 J 1/6W	M3M4M5	D401			1SS133	DIODE	
R502			RK73GB2A472J	CHIP R 4.7K J 1/10W							

K : KDS-MP238 K1 : KDC-MP238CR K2 : KDC-MP208
M1 : KDC-MP439 M2 : KDC-MP239 M3 : KDC-MP3039 M4 : KDC-MP339 M5 : KDC-MP339S

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-564x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D404 D601-606 D801-803 D901 IC1			1SS133 MTZJ6.8 (B) 1SS133 MTZJ4.7 (B) 30622MEPB44FP	DIODE ZENER DIODE DIODE ZENER DIODE MICROCONTROLLER IC	KM1 K1K2M2
IC1 IC1 IC2 IC4 IC6		*	30622MEPB44FP 30622MGPB45FP E-TDA7419 BD4913-V4 KKZ10Z	MICROCONTROLLER IC MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	M3M4M5 KM1
IC8 IC9 Q2 Q3 Q7			S-80836CNNB-J HEF4053BT KTA1046-P 2SC4081 UMC2N	MOS-IC MOS-IC TRANSISTOR TRANSISTOR TRANSISTOR	KM1
Q8 Q9 Q11 Q12 Q13			KTA1046-P 2SC4081 RT1N241M RT1P241M RT1N241M	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M1M2M3
Q13 Q14 Q14 Q101-103 Q104,105			RT1N241M RT1P241M RT1P241M 2SC4081 RT1N441M	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M4M5 M1M2M3 M4M5
Q301 Q401 Q402 Q701-704 Q701,702			RT1P144M RT1N441M 2SC4081 RT1N430M RT1N430M	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	KM1 KM1 K1K2M2
Q701,702 Q705 Q801 Q901 Q902,903			RT1N430M RT1P241M RT1N144M 2SC4081 2SA1576A	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M3M4M5
TH1			PRF18BE471QS2	POSITIVE RESISTOR	
A1	2D	*	X86-4030-14	FRONT-END UNIT	
MECHANISM ASSY (X92-5880-06) DXM-6E06W					
1 2	2B 1B		A10-5328-31 A10-5329-11	CHASSIS CHASSIS	
5 8 10 11 12	2B 2A 2A 2A 3A		D10-4910-13 D10-4911-23 D10-4906-33 D10-4907-33 D10-4908-03	ARM ASSY LEVER ASSY ARM ARM ARM	
13 14 15 16 17	3A 3B 2A 3B 2B		D10-4909-03 D10-4915-03 D10-4916-23 D10-4914-12 D10-4588-13	ARM ARM SLIDER SLIDER SLIDER	
18 19 22	2B 2B 2A		D10-4917-04 D10-4596-24 D13-2151-04	ARM ARM GEAR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
23 24 25 26 27	2B 3B 3B 3B 2B		D13-2152-04 D13-2153-04 D13-2154-04 D13-2155-04 D13-2156-14	GEAR GEAR GEAR WORM GEAR	
28 29 30 31 32	3B 2B 2B 3B 1B		D13-2157-04 D13-2158-04 D13-2168-04 D13-2171-04 D13-2400-13	GEAR GEAR GEAR GEAR RACK (GEAR)	
33 35 36 37	2A 2B 1A 1B		D14-0759-04 D21-2382-04 D23-0954-04 D39-0246-05	ROLLER SHAFT RETAINER DAMPER	
38 39 40 41 42	2B 2A 2A 1B 2A		G01-3072-04 G01-3073-04 G01-3074-04 G01-4615-04 G01-3076-04	EXTENSION SPRING TORSION COIL SPRING EXTENSION SPRING EXTENSION SPRING EXTENSION SPRING	
43 44 45	1B 2B 2B		G01-3077-14 G02-1399-14 G02-1547-14	EXTENSION SPRING FLAT SPRING FLAT SPRING	
51 52 53 55 56	1A 3B 1B 1A 1B	*	J22-0473-21 J22-0474-12 J22-0519-13 J90-1138-41 J90-1023-03	MOUNTING HARDWARE MOUNTING HARDWARE MOUNTING HARDWARE GUIDE GUIDE	
DPC1	3A		J86-0039-05	FPC (LEAD FREE)	
A B C E F	2B 1B 2B 2B 1A		N09-4460-15 N09-6317-05 N09-6004-15 N09-6007-15 N09-6051-15	TAPTITE SCREW (PT2X8) TAPTITE SCREW (1.6X6.0) MACHINE SCREW (M1.7X2.5) MACHINE SCREW (M2X2) TAPTITE SCREW (PT2X5)	
G H J K	2A 1B 1B 3B		N19-2163-04 N39-2020-48 N09-6108-15 N09-6155-15	FLAT WASHER (1.6X6X0.25) PAN HEAD MACHINE SCREW (M2X2) TAPTITE SCREW (M2X3.5) SEMS (TAPTITE SCREW) (PT2X6)	
DM1 DM2	3B 2B		T42-1066-14 T42-1067-14	DC MOTOR (SPINDLE) DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY	

K : KDS-MP238 K1 : KDC-MP238CR K2 : KDC-MP208
M1 : KDC-MP439 M2 : KDC-MP239 M3 : KDC-MP3039 M4 : KDC-MP339 M5 : KDC-MP339S

△ Indicates safety critical components.