



EXPLODED VIEW

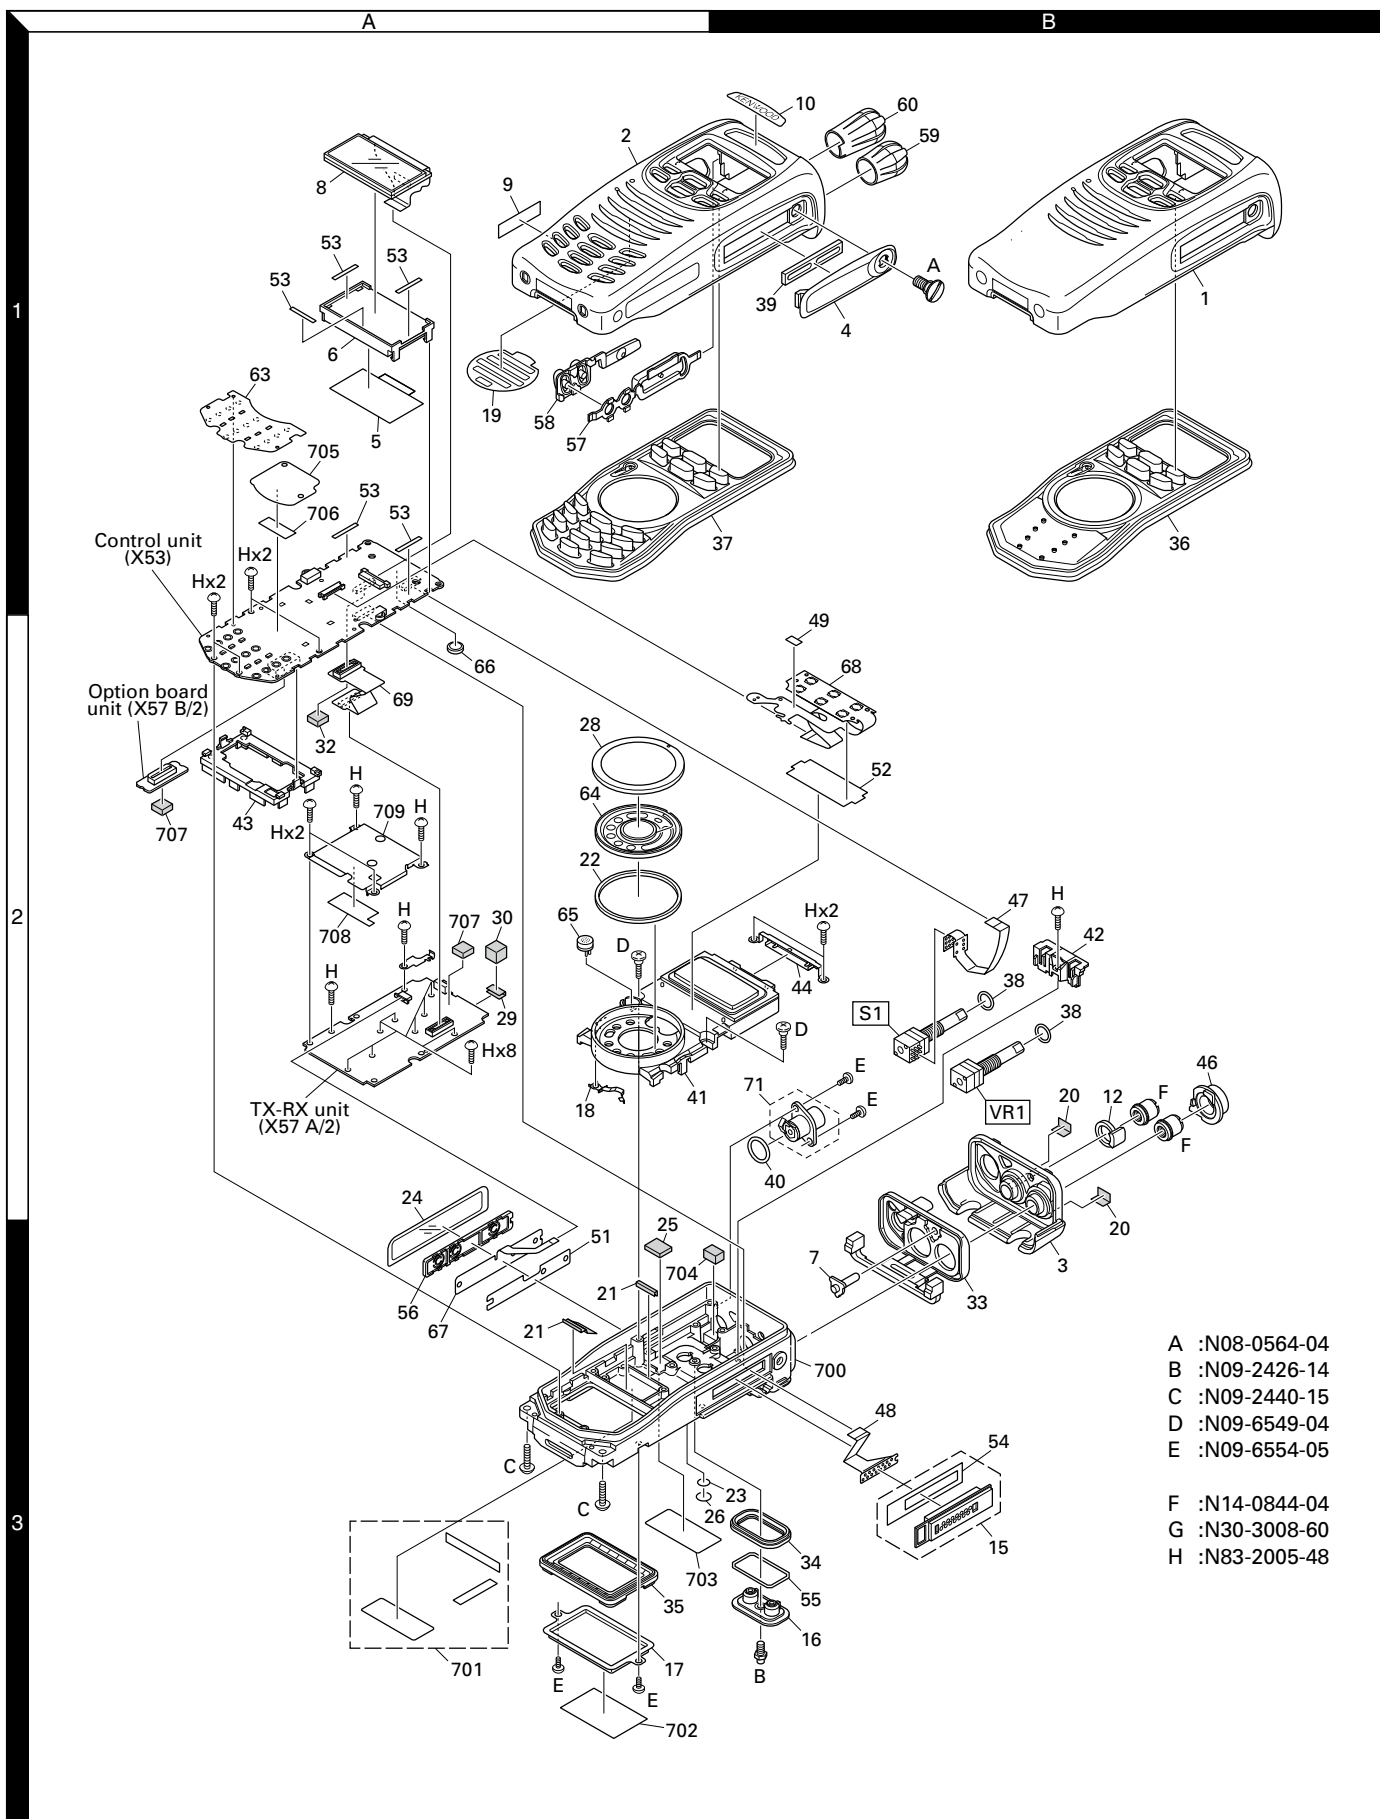

PACKING

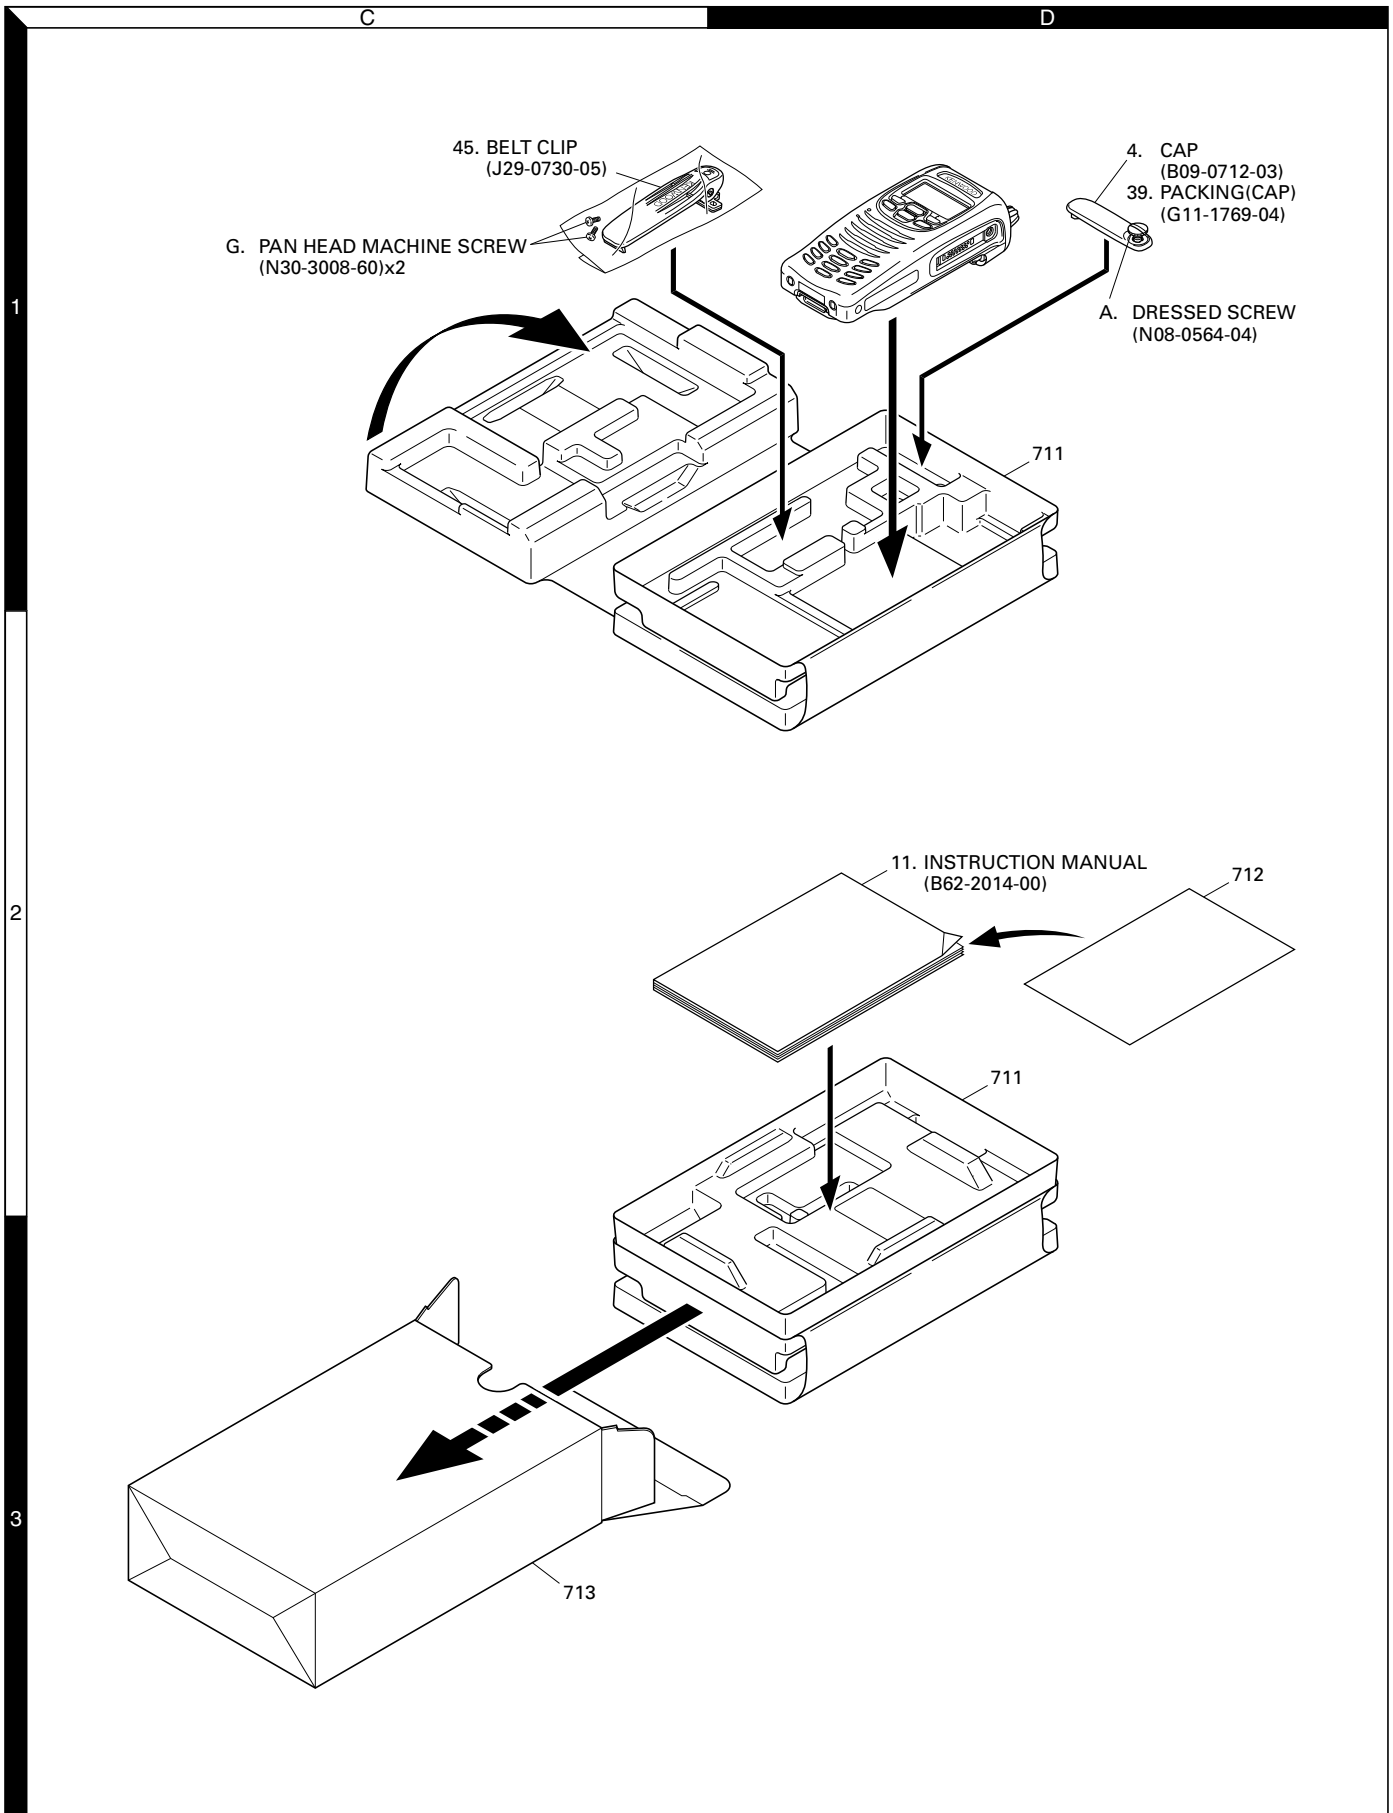

PARTS LIST

* New Parts.  indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia K: USA P: Canada
Y: PX (Far East, Hawaii) T: England E: Europe
Y: AAFES (Europe) X: Australia M: Other Areas

NX-200 (Y50-6110-XX) CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-200					
1	1B	*	A02-4002-13	PLASTIC CABINET(6KEY)	K
2	1A	*	A02-4003-13	PLASTIC CABINET(18KEY)	K2
3	2B	*	A62-1156-02	PANEL(TOP)	
4	1B	*	B09-0712-03	CAP ACCESSORY	
5	1A	*	B11-1853-24	FILTER(LCD)	
6	1A	*	B11-1854-02	ILLUMINATION GUIDE(LCD)	
7	3B	*	B11-1855-04	ILLUMINATION GUIDE(TX/BUSY)	
8	1A	*	B38-0923-05	LCD ASSY	
9	1A	*	B42-7296-04	STICKER	
10	1B	*	B43-1606-04	BADGE	
11	2D	*	B62-2014-00	INSTRUCTION MANUAL	
12	2B	*	D32-0446-14	STOPPER(16CH)	
15	3B	*	E58-0532-05	RECTANGULAR RECEPTACLE(SP/MIC)	
16	3B	*	E72-0425-03	TERMINAL BLOCK	
17	3A	*	F07-1931-04	COVER(OP BOARD)	
18	2A	*	G02-1836-13	EARTH SPRING(SP)	
19	1A	*	G10-1373-04	FIBROUS SHEET(SP)	
20	2B	*	G10-1384-04	FIBROUS SHEET(TOP PANEL)	
21	3A	*	G11-2622-04	SHEET(VCO)	
22	2A	*	G11-4272-14	RUBBER CUSHION(SP)	
23	3A	*	G11-4331-04	SHEET(AIR)	
24	3A	*	G11-4428-04	SHEET(PTT)	
25	3A	*	G11-4429-04	RUBBER SHEET(FET)	
26	3A	*	G11-4440-04	SHEET(AIR)	
28	2A	*	G11-4458-14	SHEET(SP)	
29	2A	*	G11-4459-04	SHEET(TX-RX PCB)	
30	2A	*	G13-2129-14	CUSHION(TX-RX PCB)	
32	2A	*	G13-2258-04	CUSHION(50PIN FPC)	
33	3B	*	G53-1762-02	PACKING(TOP)	
34	3B	*	G53-1763-03	PACKING(TERMINAL BLOCK)	
35	3A	*	G53-1764-03	PACKING(OP BOARD)	
36	1B	*	G53-1765-11	PACKING(6KEY)	K
37	1A	*	G53-1766-11	PACKING(18KEY)	K2
38	2B	*	G53-1768-04	PACKING(VOL,CH O-RING)	
39	1B	*	G53-1769-04	PACKING(CAP)	
40	2B	*	G53-1792-04	PACKING(SMA O-RING)	
41	2A	*	J19-5505-11	HOLDER(FG-SP)	
42	2B	*	J19-5506-03	HOLDER(VOL,CH)	
43	2A	*	J19-5507-02	HOLDER(OP BOARD)	
44	2B	*	J21-8579-04	MOUNTING HARDWARE(FG-SP HOLDER)	
45	1C	*	J29-0730-05	BELT CLIP ACCESSORY	
46	2B	*	J30-1296-04	SPACER(VOL)	
47	2B	*	J87-0006-05	FPC(LEAD FREE/VOL,CH)	
48	3B	*	J87-0007-05	FPC(LEAD FREE/UNIVERSAL)	
49	2B	*	J99-0390-04	ADHESIVE SHEET(6KEY FPC)	
51	3A	*	J99-0711-04	ADHESIVE SHEET(PTT FPC)	
52	2B	*	J99-0712-14	ADHESIVE SHEET(6KEY FPC)	
53	1A	*	J99-0714-04	ADHESIVE SHEET(LCD)	
54	3B	*	J99-0715-08	ADHESIVE SHEET(UNIVERSAL)	
55	3B	*	J99-0725-04	ADHESIVE SHEET(TERMINAL BLOCK)	
56	3A	*	K25-2001-03	PUSH KNOB(PTT)	
57	1A	*	K29-9405-03	KNOB(PTT)	
58	1A	*	K29-9406-03	BUTTON KNOB(SIDE KEY)	
CONTROL UNIT (X53-4260-XX) -10 :K -11 :K2					
D1 -10			B30-2215-05	LED	K2
D3 ,4			B30-2215-05	LED	K
D7 ,8			B30-2215-05	LED	K
C1			CK73HB1A104K	CHIP C	0.10UF K
C2 -6			CK73GB1E105K	CHIP C	1.0UF K
C7 ,8			CK73HB1A104K	CHIP C	0.10UF K
C10			CK73HB1A104K	CHIP C	0.10UF K
C11			CK73HBOJ105K	CHIP C	1.0UF K
C12 -15			CK73HB1H471K	CHIP C	470PF K
C16 ,17			CC73HCH1H101J	CHIP C	100PF J
C23 -27			CK73HB1H102K	CHIP C	1000PF K
C28 -34			CC73HCH1H101J	CHIP C	100PF J
C35			CK73HB1H102K	CHIP C	1000PF K
C36			CK73HB1E682K	CHIP C	6800PF K
C37			CK73HB1H102K	CHIP C	1000PF K
C38			CC73HCH1H101J	CHIP C	100PF J
C40			CC73HCH1H221J	CHIP C	220PF J
C41			CC73HCH1H101J	CHIP C	100PF J
C101-104			CK73HB1A104K	CHIP C	0.10UF K
C105			CK73HBOJ105K	CHIP C	1.0UF K
C106			CK73HB1E103K	CHIP C	0.010UF K
C107			CK73HB1A104K	CHIP C	0.10UF K
C107,108			CK73HB1A104K	CHIP C	0.10UF K
C109,110			CK73HB1H102K	CHIP C	1000PF K
C111-113			CK73HB1A104K	CHIP C	0.10UF K
C114			CK73HBOJ105K	CHIP C	1.0UF K
C115			CK73HB1H471K	CHIP C	470PF K
C116,117			CK73HB1A104K	CHIP C	0.10UF K
C118,119			CK73HBOJ105K	CHIP C	1.0UF K
C120,121			CK73HB1A104K	CHIP C	0.10UF K
C122-124			CK73HB1E103K	CHIP C	0.010UF K
C130			CK73HB1E103K	CHIP C	0.010UF K
C131			CK73HB1A104K	CHIP C	0.10UF K

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C133			CS77CP0J100M	CHIP TNTL 10UF 6.3WV		C469,470			CK73HB1H102K	CHIP C 1000PF K	
C134			CK73HB1E103K	CHIP C 0.010UF K		C701			CK73HB1A104K	CHIP C 0.10UF K	
C135			CK73HB1H102K	CHIP C 1000PF K		C703			CK73GB0J475K	CHIP C 4.7UF K	
C136			CK73HB1E103K	CHIP C 0.010UF K		C704,705			CK73HB1A104K	CHIP C 0.10UF K	
C137			CK73GB1E105K	CHIP C 1.0UF K		C706			CC73HCH1H680J	CHIP C 68PF J	
C138-140			CK73HB1A104K	CHIP C 0.10UF K		C707			CC73HCH1H270J	CHIP C 27PF J	
C141			CC73HCH1H101J	CHIP C 100PF J		C708			CK73HB1A104K	CHIP C 0.10UF K	
C142			CS77CP0J100M	CHIP TNTL 10UF 6.3WV		C709			CK73HB0J105K	CHIP C 1.0UF K	
C143			CK73HB1E103K	CHIP C 0.010UF K		C710			CK73HB1E103K	CHIP C 0.010UF K	
C144			CK73GB1E105K	CHIP C 1.0UF K		C711			CK73HB1A104K	CHIP C 0.10UF K	
C145-148			CK73HB1A104K	CHIP C 0.10UF K		C712			CK73HB1E103K	CHIP C 0.010UF K	
C149			CK73HB1E103K	CHIP C 0.010UF K		C713			CK73HB1H332K	CHIP C 3300PF K	
C150			CK73GB1E105K	CHIP C 1.0UF K		C714			CK73HB1H122K	CHIP C 1200PF K	
C151-155			CK73HB1A104K	CHIP C 0.10UF K		C715			CK73HB1A104K	CHIP C 0.10UF K	
C156,157			CK73HB1H102K	CHIP C 1000PF K		C716			CK73HB1H681K	CHIP C 680PF K	
C158			CK73HB1E103K	CHIP C 0.010UF K		C717			CK73HB1E103K	CHIP C 0.010UF K	
C159			CK73HB1A104K	CHIP C 0.10UF K		C718			CK73HB1H152K	CHIP C 1500PF K	
C160,161			CK73HB1E682K	CHIP C 6800PF K		C719			CK73HB1A104K	CHIP C 0.10UF K	
C401,402			CK73HB1A104K	CHIP C 0.10UF K		C720			CK73HB1E103K	CHIP C 0.010UF K	
C403-405			CS77AP1C2R2M	CHIP TNTL 2.2UF 16WV		C721			CK73HB1A104K	CHIP C 0.10UF K	
C406			CK73HB0J105K	CHIP C 1.0UF K		C722			CK73HB1E103K	CHIP C 0.010UF K	
C407,408			CK73HB1H102K	CHIP C 1000PF K		C723			CK73HB1A104K	CHIP C 0.10UF K	
C409-412			CK73HB0J105K	CHIP C 1.0UF K		C724			CK73HB1E103K	CHIP C 0.010UF K	
C413	*		CK73FB1A106K	CHIP C 10UF K		C725			CC73HCH1E181J	CHIP C 180PF J	
C414			CK73HB0J105K	CHIP C 1.0UF K		C726,727			CK73HB1A104K	CHIP C 0.10UF K	
C415			CS77AP1A100M	CHIP TNTL 10UF 10WV		C728			CK73HB1H331K	CHIP C 330PF K	
C416	*		CK73FB1A106K	CHIP C 10UF K		C730			CK73HB1H331K	CHIP C 330PF K	
C417			CC73HCH1H221J	CHIP C 220PF J		C731,732			CK73HB1E103K	CHIP C 0.010UF K	
C418			CK73HB1E103K	CHIP C 0.010UF K		C734			CK73HB1H102K	CHIP C 1000PF K	
C419	*		CK73FB1E475K	CHIP C 4.7UF K		C735			CK73HB1H122K	CHIP C 1200PF K	
C420			CK73HB1E103K	CHIP C 0.010UF K		C736,737			CK73HB1A104K	CHIP C 0.10UF K	
C421			CK73HB1E682K	CHIP C 6800PF K		C738			CK73HB1H102K	CHIP C 1000PF K	
C422			CC73HCH1H100C	CHIP C 10PF C		C739			CK73HB1E682K	CHIP C 6800PF K	
C424,425			CK73HB1A104K	CHIP C 0.10UF K		C740			CK73HB1H102K	CHIP C 1000PF K	
C427			CK73HB1E103K	CHIP C 0.010UF K		C742			CK73GB1E105K	CHIP C 1.0UF K	
C428			CC73HCH1H030C	CHIP C 3.0PF C		C743			CK73HB0J105K	CHIP C 1.0UF K	
C429,430			CK73HB1A104K	CHIP C 0.10UF K		C744-746			CK73HB1E103K	CHIP C 0.010UF K	
C431	*		CK73FB1A106K	CHIP C 10UF K		C747,748			CK73HB1A104K	CHIP C 0.10UF K	
C432			CK73HB1E103K	CHIP C 0.010UF K		C749,750			CC73HCH1H470J	CHIP C 47PF J	
C433	*		CK73FB1A106K	CHIP C 10UF K		C751			CK73GB1E105K	CHIP C 1.0UF K	
C434			CK73HB1E103K	CHIP C 0.010UF K		C752,753			CC73HCH1H101J	CHIP C 100PF J	
C435-438			CK73HB1A224K	CHIP C 0.22UF K		C755			CC73HCH1H470J	CHIP C 47PF J	
C439,440			CK73HB1A104K	CHIP C 0.10UF K		C756			CK73HB1A104K	CHIP C 0.10UF K	
C441			CK73GB1E105K	CHIP C 1.0UF K		C757,758			CK73GB0J475K	CHIP C 4.7UF K	
C442			CK73HB1H471K	CHIP C 470PF K		C759,760			CK73HB1E103K	CHIP C 0.010UF K	
C443,444			CK73HB1E103K	CHIP C 0.010UF K		C761			CC73HCH1H100D	CHIP C 10PF D	
C445			CK73HB1H102K	CHIP C 1000PF K		C762			CK73HB1A104K	CHIP C 0.10UF K	
C446			CK73GB1E105K	CHIP C 1.0UF K		C763			CK73HB1E103K	CHIP C 0.010UF K	
C447			CK73HB1H102K	CHIP C 1000PF K		C764			CK73HB1H102K	CHIP C 1000PF K	
C448-450			CK73HB0J105K	CHIP C 1.0UF K		C765-767			CK73HB1A104K	CHIP C 0.10UF K	
C451-453			CK73HB1E103K	CHIP C 0.010UF K		C768			CK73HB1H102K	CHIP C 1000PF K	
C454			CK73GB1E105K	CHIP C 1.0UF K		C771			CK73HB1A224K	CHIP C 0.22UF K	
C455-457			CK73HB1H471K	CHIP C 470PF K		C772			CK73HB1E103K	CHIP C 0.010UF K	
C459			CK73HB1H471K	CHIP C 470PF K		C775			CC73HCH1H470J	CHIP C 47PF J	
C460			CK73HB1E682K	CHIP C 6800PF K		C777			CK73HB1H102K	CHIP C 1000PF K	
C461-463			CK73HB1H471K	CHIP C 470PF K		C778			CK73HB0J105K	CHIP C 1.0UF K	
C464			CK73HB1E103K	CHIP C 0.010UF K		C779			CK73HB1E103K	CHIP C 0.010UF K	
C465			CK73HB1H102K	CHIP C 1000PF K		C780			CK73HB1A224K	CHIP C 0.22UF K	
C466			CK73HB1E682K	CHIP C 6800PF K		C781,782			CK73HB0J105K	CHIP C 1.0UF K	
C467,468			CK73HB1E103K	CHIP C 0.010UF K		C785			CK73HB1A224K	CHIP C 0.22UF K	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C786			CK73HB1E103K	CHIP C 0.010UF K		R19			RK73HB1J471J	CHIP R 470 J 1/16W	
C787			CK73HB0J105K	CHIP C 1.0UF K		R20			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C788			CC73HCH1H150J	CHIP C 15PF J		R21			RK73HB1J122J	CHIP R 1.2K J 1/16W	
C789			CC73HCH1H680J	CHIP C 68PF J		R22 -24			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C790			CK73HB1A104K	CHIP C 0.10UF K							
C791			CK73HB1A393K	CHIP C 0.039UF K		R25			RK73HB1J122J	CHIP R 1.2K J 1/16W	
C792			CK73HB0J105K	CHIP C 1.0UF K		R26			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C793,794			CK73HB1A104K	CHIP C 0.10UF K		R27			RK73HB1J104J	CHIP R 100K J 1/16W	
C795			CK73HB1E103K	CHIP C 0.010UF K		R28 ,29			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C796			CK73HB1A104K	CHIP C 0.10UF K		R30			RK73HB1J101J	CHIP R 100 J 1/16W	
C797			CK73HB0J105K	CHIP C 1.0UF K		R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C798			CS77AP1A100M	CHIP TNL 10UF 10WV		R32 -35			RK73HB1J101J	CHIP R 100 J 1/16W	
C799			CK73HB1A104K	CHIP C 0.10UF K		R40			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C800			CK73HB1H152K	CHIP C 1500PF K		R101,102			RK73HB1J474J	CHIP R 470K J 1/16W	
C801			CK73HB1C223K	CHIP C 0.022UF K		R103			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C802			CK73HB1E103K	CHIP C 0.010UF K		R105			RK73HB1J104J	CHIP R 100K J 1/16W	
C803			CK73HB1H102K	CHIP C 1000PF K		R106			RK73HB1J472J	CHIP R 4.7K J 1/16W	K2
C804			CC73HCH1H470J	CHIP C 47PF J		R107			RK73HB1J104J	CHIP R 100K J 1/16W	
CN1		*	E40-6755-05	FLAT CABLE CONNECTOR		R108			RK73HB1J474J	CHIP R 470K J 1/16W	K2
CN22		*	E23-1325-05	TERMINAL		R110,111			RK73HB1J104J	CHIP R 100K J 1/16W	
CN23		*	E40-6758-05	PIN ASSY		R112			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2
CN24		*	E23-1325-05	TERMINAL		R113			RK73HB1J104J	CHIP R 100K J 1/16W	
CN403		*	E40-6813-05	PIN ASSY		R114			RK73HB1J331J	CHIP R 330 J 1/16W	K2
CN404		*	E40-6421-15	PIN ASSY		R115			RK73HB1J104J	CHIP R 100K J 1/16W	
CN405		*	E40-6754-05	FLAT CABLE CONNECTOR		R116			RK73HB1J473J	CHIP R 47K J 1/16W	
CN701		*	E40-6586-05	SOCKET FOR PIN ASSY		R117			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2
CN710		*	E40-6757-05	PIN ASSY		R118			RK73HB1J473J	CHIP R 47K J 1/16W	
F701			F53-0360-05	FUSE(0.25A)		R119			RK73HB1J104J	CHIP R 100K J 1/16W	
CN401			J19-5386-05	HOLDER(LITHIUM CELL)		R120			RK73HB1J474J	CHIP R 470K J 1/16W	
L1 ,2			L92-0408-05	CHIP FERRITE		R121-123			RK73HB1J104J	CHIP R 100K J 1/16W	
L3			L92-0140-05	CHIP FERRITE		R126			RK73HB1J101J	CHIP R 100 J 1/16W	
L4 -7			L92-0408-05	CHIP FERRITE		R127,128			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L8			L92-0140-05	CHIP FERRITE		R129-131			RK73HB1J101J	CHIP R 100 J 1/16W	
L101,102			L92-0408-05	CHIP FERRITE		R132,133			RK73HB1J104J	CHIP R 100K J 1/16W	
L401		*	L33-1496-05	SMALL FIXED INDUCTOR		R135-137			RK73HB1J104J	CHIP R 100K J 1/16W	
L402		*	L92-0467-05	CHIP FERRITE		R138			RK73HB1J473J	CHIP R 47K J 1/16W	
L403		*	L92-0466-05	CHIP FERRITE		R139			RK73HB1J104J	CHIP R 100K J 1/16W	
L409,410			L92-0467-05	CHIP FERRITE		R140			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L701			L92-0140-05	CHIP FERRITE		R141-143			RK73HB1J104J	CHIP R 100K J 1/16W	
L702			L92-0162-05	BEADS CORE		R144			RK73HB1J471J	CHIP R 470 J 1/16W	
L704-709			L92-0162-05	BEADS CORE		R145-147			RK73HB1J104J	CHIP R 100K J 1/16W	
L710-712			L92-0444-05	CHIP FERRITE		R148			RK73HB1J151J	CHIP R 150 J 1/16W	
L713			L92-0163-05	BEADS CORE		R149			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L714-717			L92-0444-05	CHIP FERRITE		R150			RK73HB1J102J	CHIP R 1.0K J 1/16W	
X101			L77-1802-05	CRYSTAL RESONATOR(32768HZ)		R153,154			RK73HB1J104J	CHIP R 100K J 1/16W	
X102		*	L77-3015-05	TCXO(18.432MHZ)		R155			RK73HB1J473J	CHIP R 47K J 1/16W	
R1			RK73HB1J105J	CHIP R 1.0M J 1/16W		R156,157			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R2			RK73HB1J104J	CHIP R 100K J 1/16W		R158,159			RK73HB1J220J	CHIP R 22 J 1/16W	
R3			RK73HB1J123J	CHIP R 12K J 1/16W		R160,161			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R4 -10			RK73HB1J103J	CHIP R 10K J 1/16W		R162			RK73HB1J474J	CHIP R 470K J 1/16W	
R11			RK73HB1J104J	CHIP R 100K J 1/16W		R163			RK73HH1J104D	CHIP R 100K D 1/16W	
R12			RK73HB1J103J	CHIP R 10K J 1/16W		R165			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R14			RK73HB1J472J	CHIP R 4.7K J 1/16W		R166			RK73HB1J104J	CHIP R 100K J 1/16W	
R15			RK73HB1J000J	CHIP R 0.0 J 1/16W		R167			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R16			RK73HB1J331J	CHIP R 330 J 1/16W		R168			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R17			RK73HB1J000J	CHIP R 0.0 J 1/16W		R170			RK73HH1J103D	CHIP R 10K D 1/16W	
R18			RK73HB1J822J	CHIP R 8.2K J 1/16W		R171-173			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R174-178			RK73HB1J104J	CHIP R 100K J 1/16W	
						R180,181			RK73HB1J104J	CHIP R 100K J 1/16W	
						R182			RK73HB1J474J	CHIP R 470K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R183			RK73HB1J104J	CHIP R 100K J 1/16W		R474,475			RK73HB1J333J	CHIP R 33K J 1/16W	
R184			RK73HB1J473J	CHIP R 47K J 1/16W		R477,478			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R185			RK73HB1J105J	CHIP R 1.0M J 1/16W		R479			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R186			RK73HB1J473J	CHIP R 47K J 1/16W		R480			RK73HB1J273J	CHIP R 27K J 1/16W	
R187			RK73HB1J102J	CHIP R 1.0K J 1/16W		R481			RK73HB1J474J	CHIP R 470K J 1/16W	
R188			RK73HB1J473J	CHIP R 47K J 1/16W		R482			RK73HB1J103J	CHIP R 10K J 1/16W	
R189			RK73HB1J104J	CHIP R 100K J 1/16W		R483			RK73HB1J473J	CHIP R 47K J 1/16W	
R190			RK73HB1J102J	CHIP R 1.0K J 1/16W		R484			RK73HB1J223J	CHIP R 22K J 1/16W	
R191			RK73HB1J474J	CHIP R 470K J 1/16W		R485			RK73HB1J103J	CHIP R 10K J 1/16W	
R192			RK73HB1J102J	CHIP R 1.0K J 1/16W		R486			RK73HB1J100J	CHIP R 10 J 1/16W	
R193,194			RK73HB1J104J	CHIP R 100K J 1/16W		R487-490			RK73HH1J223D	CHIP R 22K D 1/16W	
R401			RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R491			RK73HB1J104J	CHIP R 100K J 1/16W	
R402			RK73HB1J151J	CHIP R 150 J 1/16W		R492			RK73HB1J474J	CHIP R 470K J 1/16W	
R403			RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R493			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R404			RK73HB1J151J	CHIP R 150 J 1/16W		R494-497			RK73HH1J104D	CHIP R 100K D 1/16W	
R405			RK73HB1J152J	CHIP R 1.5K J 1/16W	K2	R498			RK73HB1J333J	CHIP R 33K J 1/16W	
R406			RK73HB1J000J	CHIP R 0.0 J 1/16W		R499			RK73HB1J223J	CHIP R 22K J 1/16W	
R407,408			RK73HB1J103J	CHIP R 10K J 1/16W		R500			RK73HB1J473J	CHIP R 47K J 1/16W	
R409			RK73HB1J470J	CHIP R 47 J 1/16W		R501			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R410-416			RK73HB1J471J	CHIP R 470 J 1/16W		R502,503			RK73HB1J103J	CHIP R 10K J 1/16W	
R417			RK73HB1J000J	CHIP R 0.0 J 1/16W		R504			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R418			RK73HB1J471J	CHIP R 470 J 1/16W		R506			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R419,420			RK73HB1J000J	CHIP R 0.0 J 1/16W		R507-511			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R424			RK73HH1J683D	CHIP R 68K D 1/16W		R512			RK73HB1J101J	CHIP R 100 J 1/16W	
R425			RK73HH1J333D	CHIP R 33K D 1/16W		R513-515			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R426-429			RK73HB1J000J	CHIP R 0.0 J 1/16W		R516			RK73HB1J101J	CHIP R 100 J 1/16W	
R431			RK73HB1J474J	CHIP R 470K J 1/16W		R517			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R432,433			RK73HB1J000J	CHIP R 0.0 J 1/16W		R518			RK73HB1J101J	CHIP R 100 J 1/16W	
R434			RK73HB1J393J	CHIP R 39K J 1/16W		R519-528			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R435,436			RK73HB1J104J	CHIP R 100K J 1/16W		R529-531			RK73HB1J101J	CHIP R 100 J 1/16W	
R437			RK73HB1J471J	CHIP R 470 J 1/16W		R532			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R438,439			RK73HB1J104J	CHIP R 100K J 1/16W		R533-535			RK73HB1J101J	CHIP R 100 J 1/16W	
R440			RK73HB1J000J	CHIP R 0.0 J 1/16W		R536-540			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R441			RK73HB1J153J	CHIP R 15K J 1/16W		R541			RK73HB1J101J	CHIP R 100 J 1/16W	
R442			RK73HB1J102J	CHIP R 1.0K J 1/16W		R542			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R443			RK73HB1J474J	CHIP R 470K J 1/16W		R543			RK73HB1J101J	CHIP R 100 J 1/16W	
R444			RK73HB1J564J	CHIP R 560K J 1/16W		R544			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R445			RK73HB1J154J	CHIP R 150K J 1/16W		R545			RK73HB1J101J	CHIP R 100 J 1/16W	
R446			RK73HB1J274J	CHIP R 270K J 1/16W		R546,547			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R447			RK73HB1J104J	CHIP R 100K J 1/16W		R548,549			RK73HB1J473J	CHIP R 47K J 1/16W	
R448			RK73HB1J103J	CHIP R 10K J 1/16W		R701-707			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R449-452			RK73HB1J474J	CHIP R 470K J 1/16W		R709-715			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R453			RK73HB1J104J	CHIP R 100K J 1/16W		R716			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R454			RK73HB1J474J	CHIP R 470K J 1/16W		R717-722			RK73HB1J104J	CHIP R 100K J 1/16W	
R455			RK73HB1J102J	CHIP R 1.0K J 1/16W		R723			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R456			RK73HB1J474J	CHIP R 470K J 1/16W		R724			RK73HB1J104J	CHIP R 100K J 1/16W	
R457,458			RK73HB1J104J	CHIP R 100K J 1/16W		R725			RK73HB1J100J	CHIP R 10 J 1/16W	
R459,460			RK73HB1J102J	CHIP R 1.0K J 1/16W		R726			RK73HB1J104J	CHIP R 100K J 1/16W	
R461			RK73HB1J103J	CHIP R 10K J 1/16W		R727-729			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R462			RK73HB1J102J	CHIP R 1.0K J 1/16W		R730			RK73HB1J471J	CHIP R 470 J 1/16W	
R463			RK73HB1J104J	CHIP R 100K J 1/16W		R731,732			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R464			RK73HB1J474J	CHIP R 470K J 1/16W		R733			RK73HB1J473J	CHIP R 47K J 1/16W	
R465,466			RK73HB1J103J	CHIP R 10K J 1/16W		R735			RK73HB1J473J	CHIP R 47K J 1/16W	
R467			RK73HB1J104J	CHIP R 100K J 1/16W		R736			RK73HB1J823J	CHIP R 82K J 1/16W	
R468			RK73HB1J000J	CHIP R 0.0 J 1/16W		R737			RK73HB1J153J	CHIP R 15K J 1/16W	
R469			RK73HB1J474J	CHIP R 470K J 1/16W		R738			RK73HB1J563J	CHIP R 56K J 1/16W	
R470			RK73HB1J683J	CHIP R 68K J 1/16W		R739			RK73HB1J823J	CHIP R 82K J 1/16W	
R471			RK73HB1J000J	CHIP R 0.0 J 1/16W		R740			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R472			RK73HB1J223J	CHIP R 22K J 1/16W		R741			RK73HB1J474J	CHIP R 470K J 1/16W	
R473			RK73HB1J332J	CHIP R 3.3K J 1/16W		R742,743			RK73HB1J103J	CHIP R 10K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4260-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R744			RK73HB1J223J	CHIP R 22K J 1/16W		R816			RK73HB1J683J	CHIP R 68K J 1/16W	
R745			RK73HB1J682J	CHIP R 6.8K J 1/16W		R818			RK73HB1J104J	CHIP R 100K J 1/16W	
R746			RK73HB1J563J	CHIP R 56K J 1/16W		R819,820			RK73HB1J103J	CHIP R 10K J 1/16W	
R747			RK73HB1J333J	CHIP R 33K J 1/16W		R821			RK73HB1J104J	CHIP R 100K J 1/16W	
R748			RK73HB1J103J	CHIP R 10K J 1/16W		R822,823			RK73HB1J103J	CHIP R 10K J 1/16W	
R749			RK73HB1J472J	CHIP R 4.7K J 1/16W		R824			RK73HB1J393J	CHIP R 39K J 1/16W	
R750			RK73HB1J103J	CHIP R 10K J 1/16W		R825			RK73HB1J104J	CHIP R 100K J 1/16W	
R751			RK73HB1J000J	CHIP R 0.0 J 1/16W		R826			RK73HB1J334J	CHIP R 330K J 1/16W	
R752			RK73HB1J101J	CHIP R 100 J 1/16W		R827			RK73HB1J184J	CHIP R 180K J 1/16W	
R753			RK73HB1J683J	CHIP R 68K J 1/16W		R828,829			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R754			RK73HB1J564J	CHIP R 560K J 1/16W		R830			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R755			RK73HB1J104J	CHIP R 100K J 1/16W		R831			RK73HB1J474J	CHIP R 470K J 1/16W	
R756			RK73HB1J101J	CHIP R 100 J 1/16W		R832			RK73HB1J473J	CHIP R 47K J 1/16W	
R757			RK73HB1J223J	CHIP R 22K J 1/16W		R833			RK73HB1J684J	CHIP R 680K J 1/16W	
R758			RK73HB1J103J	CHIP R 10K J 1/16W		R834			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R759			RK73HB1J101J	CHIP R 100 J 1/16W		R835			RK73HB1J153J	CHIP R 15K J 1/16W	
R761-764			RK73HB1J223J	CHIP R 22K J 1/16W		R836			RK73HB1J473J	CHIP R 47K J 1/16W	
R765			RK73HB1J334J	CHIP R 330K J 1/16W		R837			RK73HB1J683J	CHIP R 68K J 1/16W	
R766			RK73HB1J000J	CHIP R 0.0 J 1/16W		R838			RK73HB1J564J	CHIP R 560K J 1/16W	
R767			RK73HB1J103J	CHIP R 10K J 1/16W		R839			RK73HB1J333J	CHIP R 33K J 1/16W	
R768			RK73HB1J224J	CHIP R 220K J 1/16W		R840			RK73HB1J123J	CHIP R 12K J 1/16W	
R769,770			RK73HB1J334J	CHIP R 330K J 1/16W		R841			RK73HB1J564J	CHIP R 560K J 1/16W	
R771			RK73HB1J153J	CHIP R 15K J 1/16W		R842			RK73HB1J104J	CHIP R 100K J 1/16W	
R775			RK73HB1J183J	CHIP R 18K J 1/16W		R843			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R777			RK73HB1J473J	CHIP R 47K J 1/16W		R844			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R778			RK73HB1J333J	CHIP R 33K J 1/16W		R845			RK73HB1J104J	CHIP R 100K J 1/16W	
R779			RK73HB1J473J	CHIP R 47K J 1/16W		R846			RK73HB1J471J	CHIP R 470 J 1/16W	
R780			RK73HB1J104J	CHIP R 100K J 1/16W		R847			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R782			RK73HB1J104J	CHIP R 100K J 1/16W		R848			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R783			RK73HB1J183J	CHIP R 18K J 1/16W		R849,850			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2
R784			RK73HB1J104J	CHIP R 100K J 1/16W		R850			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R785			RK73HB1J682J	CHIP R 6.8K J 1/16W		R851,852			RK73HB1J683J	CHIP R 68K J 1/16W	
R786			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R787			RK73HB1J124J	CHIP R 120K J 1/16W		VR1	2B	*	R31-0666-05	VARIABLE RESISTOR(VOL)	
R788			RK73HB1J473J	CHIP R 47K J 1/16W		S1	2B	*	S60-0437-05	ROTARY SWITCH(CH)	
R789			RK73HB1J154J	CHIP R 150K J 1/16W		D11			MA2S111-F	DIODE	
R790			RK73HB1J102J	CHIP R 1.0K J 1/16W		D12 -16		*	1SS416	DIODE	
R791			RK73HB1J474J	CHIP R 470K J 1/16W		D17			EMZ6.8N	ZENER DIODE	
R793			RK73HB1J102J	CHIP R 1.0K J 1/16W		D18, 19		*	HZC6.8-E	ZENER DIODE	
R794			RK73HB1J104J	CHIP R 100K J 1/16W		D20, 21			NNCD6.8G-A	ZENER DIODE	
R795			RK73HB1J000J	CHIP R 0.0 J 1/16W		D22, 23			DA221	DIODE	
R796			RK73HB1J333J	CHIP R 33K J 1/16W		D101			MA2S111-F	DIODE	
R797			RK73HB1J102J	CHIP R 1.0K J 1/16W		D102		*	1SS416	DIODE	
R798			RK73HB1J104J	CHIP R 100K J 1/16W		D401-405			1SS388F	DIODE	
R799			RK73HB1J334J	CHIP R 330K J 1/16W		D406			HRB0502A	DIODE	
R800			RK73HB1J474J	CHIP R 470K J 1/16W		D407			MA2S111-F	DIODE	
R801			RK73HB1J473J	CHIP R 47K J 1/16W		D408			1SS301F	DIODE	
R802			RK73HB1J474J	CHIP R 470K J 1/16W		D409,410			MA2S111-F	DIODE	
R803			RK73HB1J103J	CHIP R 10K J 1/16W		D411		*	1SS416	DIODE	
R804			RK73HB1J000J	CHIP R 0.0 J 1/16W		D412			1SS301F	DIODE	
R805,806			RK73HB1J473J	CHIP R 47K J 1/16W		D413			1SS388F	DIODE	
R807			RK73HB1J102J	CHIP R 1.0K J 1/16W		D414,415		*	1SS416	DIODE	
R808			RK73HB1J471J	CHIP R 470 J 1/16W		D416,417			1SS388F	DIODE	
R809			RK73HB1J334J	CHIP R 330K J 1/16W		D701			1SS301F	DIODE	
R810			RK73HB1J332J	CHIP R 3.3K J 1/16W		D702			MA2S111-F	DIODE	
R811			RK73HB1J823J	CHIP R 82K J 1/16W		D703-706			RB706F-40	DIODE	
R812			RK73HB1J562J	CHIP R 5.6K J 1/16W		D707			DA221	DIODE	
R813			RK73HB1J273J	CHIP R 27K J 1/16W		IC1			LMC7101BIM5	MOS-IC	
R814			RK73HB1J564J	CHIP R 560K J 1/16W		IC101			Note 1	ROM IC	
R815			RK73HB1J104J	CHIP R 100K J 1/16W		IC102			Note 1	MICROPROCESSOR IC	

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.
If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

CONTROL UNIT (X53-4260-XX)

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC103			Note 1	SRAM IC		Q701			2SA1832(GR)F	TRANSISTOR	
IC104			TC7SH08FU-F	MOS-IC		Q702,703			SSM3K15TE(F)	FET	
IC105		*	XC6109C29ANN	ANALOGUE IC		Q704			2SC4617(S)	TRANSISTOR	
IC106			RV5C386A	MOS-IC		Q705			2SC4738(GR)F	TRANSISTOR	
IC107		*	SM5023CNDH-G	MOS-IC		Q706			2SA1832(GR)F	TRANSISTOR	
IC108			Note 1	MOS-IC		Q707			2SJ243-A	FET	
IC109			TC7SH08FU-F	MOS-IC		TH1			ERTJ0EV104H	THERMISTOR	
IC401		*	TC74LCX245FK	MOS-IC		TH701			ERTJ0EV104H	THERMISTOR	
IC402		*	TC7WVZ245FK-F	MOS-IC		TX-RX UNIT (X57-7360-10)					
IC403		*	LM2682MMX	MOS-IC		D402			B30-2278-05	LED(RED/YELLOW)	
IC404			XC6204B332M	MOS-IC		C1			CC73HCH1H101J	CHIP C 100PF J	
IC405		*	XC6205B152PRN	ANALOGUE IC		C3			CK73HB1C103K	CHIP C 0.010UF K	
IC406			XC6204B332M	MOS-IC		C4			CC73HCH1H101J	CHIP C 100PF J	
IC407		*	LT1616ES6-PBF	ANALOGUE IC		C5			CC73HCH1H100C	CHIP C 10PF C	
IC408			TC75S51FE(F)	MOS-IC		C6			CK73HB1C103K	CHIP C 0.010UF K	
IC409			TC7W66FK-F	MOS-IC		C7			CK73GB1E105K	CHIP C 1.0UF K	
IC410		*	MCP6021-E/OT	MOS-IC		C8			CK73HB1H102K	CHIP C 1000PF K	
IC411		*	NJM2880U105ZB	ANALOGUE IC		C9			CC73HCH1H100C	CHIP C 10PF C	
IC412,413		*	TPA6201A1DRBR	ANALOGUE IC		C10,11			CC73HCH1H101J	CHIP C 100PF J	
IC414			XC61CC5602NR	MOS-IC		C12			CK73HB1H471K	CHIP C 470PF K	
IC415			TC7SET08FU-F	MOS-IC		C13			CC73HCH1H101J	CHIP C 100PF J	
IC416		*	S-812C31BPI-G	ANALOGUE IC		C15			CK73HB1H471K	CHIP C 470PF K	
IC417		*	TC7WH126FK	MOS-IC		C16,17			CC73HCH1H101J	CHIP C 100PF J	
IC418			TC7WT125FUF	MOS-IC		C18			CK73HB1C103K	CHIP C 0.010UF K	
IC701			Note 1	MOS-IC		C19			CK73HB1H471K	CHIP C 470PF K	
IC702			TC75W51FK(F)	MOS-IC		C20			CC73HCH1H220G	CHIP C 22PF G	
IC703			M62364FP-F	MOS-IC		C21			CK73HB1H471K	CHIP C 470PF K	
IC704			TC75S51FE(F)	MOS-IC		C22			CC73HCH1H390G	CHIP C 39PF G	
IC705			TC75W51FK(F)	MOS-IC		C24,25			CC73HCH1H101J	CHIP C 100PF J	
IC706			TC75S51FE(F)	MOS-IC		C26			CC73HCH1H030B	CHIP C 3.0PF B	
IC707			TC7W53FK(F)	MOS-IC		C27			CK73HB1A104K	CHIP C 0.10UF K	
IC708			XC6204B502PR	MOS-IC		C28			CC73HCH1H101J	CHIP C 100PF J	
IC709			TC7W53FK(F)	MOS-IC		C29			CK73HB1A104K	CHIP C 0.10UF K	
IC710,711			TC75W51FK(F)	MOS-IC		C30			C93-0787-05	CERAMIC 0.1UF 50WV	
IC712			TC7S66FUF	MOS-IC		C31			CC73HCH1H220G	CHIP C 22PF G	
IC713			TC75W51FK(F)	MOS-IC		C32			CC73HCH1H101J	CHIP C 100PF J	
IC714			TC7W53FK(F)	MOS-IC		C34			CC73HCH1H470G	CHIP C 47PF G	
IC715			TC75S51FE(F)	MOS-IC		C35			CC73HCH1H101J	CHIP C 100PF J	
IC716			TC75W51FK(F)	MOS-IC		C36,37			CK73HB1H471K	CHIP C 470PF K	
Q1			2SA1362-F(GR)	TRANSISTOR	K2	C38			CK73HB1H102K	CHIP C 1000PF K	
Q2			2SC4617(S)	TRANSISTOR		C41			CK73HB1H472K	CHIP C 4700PF K	
Q3,4			SSM3K15TE(F)	FET		C42			CK73HB1H471K	CHIP C 470PF K	
Q5			2SJ347F	FET		C43		*	CS77AA1VR15M	CHIP TNTL 0.15UF 35WV	
Q101			2SA1832(GR)F	TRANSISTOR	K2	C44			CS77BA1D100M	CHIP TNTL 10UF 20WV	
Q102			2SC4617(S)	TRANSISTOR	K2	C45-47			CK73HB1H471K	CHIP C 470PF K	
Q103			SSM3K15TE(F)	FET		C48			C92-0863-05	CHIP TNTL 0.047UF 35WV	
Q401,402		*	SSM6N16FE-F	FET		C50,51			CC73HCH1H101J	CHIP C 100PF J	
Q403			2SA1955A-F	TRANSISTOR		C52			CK73HB1H471K	CHIP C 470PF K	
Q404			SSM3K15TE(F)	FET		C53			CK73FBOJ106K	CHIP C 10UF K	
Q405		*	SSM6N16FE-F	FET		C54			CK73HB1H471K	CHIP C 470PF K	
Q406			2SB1132(Q,R)	TRANSISTOR		C55			CK73GB0J475K	CHIP C 4.7UF K	
Q407			UMG3N	TRANSISTOR		C56			CK73HBOJ105K	CHIP C 1.0UF K	
Q408		*	EMD12	TRANSISTOR		C57			CC73HCH1H270J	CHIP C 27PF J	
Q409			2SA1955A-F	TRANSISTOR		C58			CC73HCH1H470J	CHIP C 47PF J	
Q410			SSM3K15TE(F)	FET		C60			CK73HB1H471K	CHIP C 470PF K	
Q411		*	SSM6N16FE-F	FET		C62			CC73HCH1H030B	CHIP C 3.0PF B	
Q412			SSM3K15TE(F)	FET		C63			CK73HB1H471K	CHIP C 470PF K	
Q413			2SA1955A-F	TRANSISTOR							
Q414,415		*	EMD12	TRANSISTOR							

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C64			CC73HCH1H030B	CHIP C 3.0PF B		C151			CK73GB1C104K	CHIP C 0.10UF K	
C65			CC73HCH1HR75B	CHIP C 0.75PF B		C152			CK73GB1E105K	CHIP C 1.0UF K	
C66 ,67			CC73HCH1H080B	CHIP C 8.0PF B		C154			CC73GCH1H030B	CHIP C 3.0PF B	
						C155			CK73HB1H471K	CHIP C 470PF K	
C68			CC73HCH1H100B	CHIP C 10PF B		C156			CK73HB1C103K	CHIP C 0.010UF K	
C69			CC73HCH1H070B	CHIP C 7.0PF B		C158			CC73GCH1H330G	CHIP C 33PF G	
C70			CK73HB1H102K	CHIP C 1000PF K		C159			CK73HB1H471K	CHIP C 470PF K	
C71			CK73GB1H103K	CHIP C 0.010UF K		C160			CK73HB1A104K	CHIP C 0.10UF K	
C72			CK73GB1H102K	CHIP C 1000PF K		C163			CC73GCH1H120G	CHIP C 12PF G	
C74 ,75			CC73HCH1H0R5B	CHIP C 0.5PF B		C165			CC73GCH1H070B	CHIP C 7.0PF B	
C76			CK73HB1H102K	CHIP C 1000PF K		C166			CC73GCH1H560J	CHIP C 56PF J	
C77			CC73HCH1H220J	CHIP C 22PF J		C167,168			CC73HCH1H101J	CHIP C 100PF J	
C78			CK73HB1H471K	CHIP C 470PF K		C169			CK73HB1A104K	CHIP C 0.10UF K	
C79			CC73HCH1H101J	CHIP C 100PF J		C173			CK73HB1H471K	CHIP C 470PF K	
C81			CC73HCH1H470J	CHIP C 47PF J		C177			CC73HCH1H220J	CHIP C 22PF J	
C82			CK73FB0J106K	CHIP C 10UF K		C178			CC73HCH1H120J	CHIP C 12PF J	
C83			CK73HB1H471K	CHIP C 470PF K		C179			CC73HCH1H100B	CHIP C 10PF B	
C84			CC73HCH1H050B	CHIP C 5.0PF B		C180			CC73GCH1H120G	CHIP C 12PF G	
C85			CK73HB0J105K	CHIP C 1.0UF K		C190			CC73GCH1H270G	CHIP C 27PF G	
C87			CK73HB1C103K	CHIP C 0.010UF K		C191			CC73GCH1H181J	CHIP C 180PF J	
C88			CC73HCH1H101J	CHIP C 100PF J		C193			CC73GCH1H330G	CHIP C 33PF G	
C90 ,91			CK73HB1A104K	CHIP C 0.10UF K		C201,202			CK73GB1H104K	CHIP C 0.10UF K	
C92			CC73HCH1H020B	CHIP C 2.0PF B		C203			CC73HCH1H070B	CHIP C 7.0PF B	
C93			CC73HCH1H330J	CHIP C 33PF J		C204			CK73HB1C103K	CHIP C 0.010UF K	
C100			CC73HCH1H150J	CHIP C 15PF J		C206			CK73HB1C103K	CHIP C 0.010UF K	
C101,102			CK73HB1H102K	CHIP C 1000PF K		C207			CC73HCH1H100B	CHIP C 10PF B	
C104			CC73HCH1H100C	CHIP C 10PF C		C208			CC73HCH1H680J	CHIP C 68PF J	
C106			CK73HB1H102K	CHIP C 1000PF K		C209			CC73HCH1H101J	CHIP C 100PF J	
C109			CK73HB1H471K	CHIP C 470PF K		C210			CK73HB1H471K	CHIP C 470PF K	
C111			CK73HB1H102K	CHIP C 1000PF K		C211			CK73HB1C103K	CHIP C 0.010UF K	
C112			CC73HCH1H560J	CHIP C 56PF J		C212			CC73HCH1H680J	CHIP C 68PF J	
C114,115			CK73HB1H102K	CHIP C 1000PF K		C213			CK73HB1C103K	CHIP C 0.010UF K	
C116			CK73HB1A104K	CHIP C 0.10UF K		C215			CC73HCH1H050B	CHIP C 5.0PF B	
C117			CK73HB1H102K	CHIP C 1000PF K		C216			CC73HCH1H220G	CHIP C 22PF G	
C119			CC73HCH1H180J	CHIP C 18PF J		C217			CK73HB1C103K	CHIP C 0.010UF K	
C120			CK73HB1H471K	CHIP C 470PF K		C219			CC73HCH1H060B	CHIP C 6.0PF B	
C122			CK73HB1H102K	CHIP C 1000PF K		C220			CK73HB1C103K	CHIP C 0.010UF K	
C123			CK73HB1A104K	CHIP C 0.10UF K		C221			CK73HB1A104K	CHIP C 0.10UF K	
C124			CC73HCH1H560J	CHIP C 56PF J		C222,223			CK73HB1C103K	CHIP C 0.010UF K	
C125			CK73HB1H102K	CHIP C 1000PF K		C224,225			CK73HB1A104K	CHIP C 0.10UF K	
C127			CC73HCH1H100C	CHIP C 10PF C		C226			CK73HB1H471K	CHIP C 470PF K	
C128			CS77AA1A6R8M	CHIP TNTL 6.8UF 10WV		C227,228			CK73HB1A104K	CHIP C 0.10UF K	
C129			CK73HB1A104K	CHIP C 0.10UF K		C229			CC73HCH1H100B	CHIP C 10PF B	
C130			CK73HB1H102K	CHIP C 1000PF K		C230			CK73HB1A104K	CHIP C 0.10UF K	
C131			CK73GB1E105K	CHIP C 1.0UF K		C231			CC73HCH1H100B	CHIP C 10PF B	
C132			CK73HB1H102K	CHIP C 1000PF K		C232			CK73HB1H102K	CHIP C 1000PF K	
C133,134			CK73HB1H471K	CHIP C 470PF K		C233			CK73HB1C103K	CHIP C 0.010UF K	
C135			CC73GCH1H220G	CHIP C 22PF G		C234			CK73FB1E474K	CHIP C 0.47UF K	
C136			CK73GB1H102K	CHIP C 1000PF K		C235			CK73HB1H102K	CHIP C 1000PF K	
C139			CK73HB1H471K	CHIP C 470PF K		C236,237	*		CK73FB1A106K	CHIP C 10UF K	
C140			CC73GCH1H070B	CHIP C 7.0PF B		C238			CK73HB1C103K	CHIP C 0.010UF K	
C141			CK73HB1H471K	CHIP C 470PF K		C239			CK73HB1A104K	CHIP C 0.10UF K	
C142			CC73GCH1H090B	CHIP C 9.0PF B		C240			CC73HCH1H040B	CHIP C 4.0PF B	
C143			CC73HCH1H101J	CHIP C 100PF J		C241,242			CK73HB1H102K	CHIP C 1000PF K	
C144			CC73GCH1H240G	CHIP C 24PF G		C244			CC73HCH1H120G	CHIP C 12PF G	
C145			CK73HB1C103K	CHIP C 0.010UF K		C245			CK73FB1A475K	CHIP C 4.7UF K	
C146			CC73GCH1H090B	CHIP C 9.0PF B		C246			CK73HB1A104K	CHIP C 0.10UF K	
C148			CK73HB1H102K	CHIP C 1000PF K		C247			CC73HCH1H050B	CHIP C 5.0PF B	
C149			CC73GCH1H120G	CHIP C 12PF G		C248			CC73HCH1H220G	CHIP C 22PF G	
C150			CK73HB1A104K	CHIP C 0.10UF K							

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C249			CK73HB1A104K	CHIP C 0.10UF K		C449-458			CC73HCH1H470J	CHIP C 47PF J	
C250			CC73HCH1H030B	CHIP C 3.0PF B		C460			CC73HCH1H470J	CHIP C 47PF J	
C251			CC73HCH1H050B	CHIP C 5.0PF B		C462,463			CK73HB1H471K	CHIP C 470PF K	
C252			CC73HCH1H470G	CHIP C 47PF G		C464-468			CK73HB1H102K	CHIP C 1000PF K	
C254			CC73HCH1H100B	CHIP C 10PF B		C470			CC73HCH1H470J	CHIP C 47PF J	
C262			CK73HB1C103K	CHIP C 0.010UF K		C472-474			CC73HCH1H470J	CHIP C 47PF J	
C267			CK73HB1H102K	CHIP C 1000PF K		C475			CK73HB0J105K	CHIP C 1.0UF K	
C268			CC73HCH1H101J	CHIP C 100PF J		C476			CC73HCH1H470J	CHIP C 47PF J	
C270			CC73HCH1H020B	CHIP C 2.0PF B		C478,479			CC73HCH1H470J	CHIP C 47PF J	
C273			CC73HCH1H101J	CHIP C 100PF J		C499			CC73HCH1H470J	CHIP C 47PF J	
C274			CK73HB1H102K	CHIP C 1000PF K		CN102		*	E23-1326-05	TERMINAL	
C275,276			CK73HB1A104K	CHIP C 0.10UF K		CN400		*	E40-6422-15	SOCKET FOR PIN ASSY	
C278			CK73HB1H102K	CHIP C 1000PF K		CN401		*	E40-6752-05	FLAT CABLE CONNECTOR	
C280			CC73HCH1H1R5B	CHIP C 1.5PF B		CN736			E40-6358-05	SOCKET FOR PIN ASSY	
C281			CK73HB1C103K	CHIP C 0.010UF K		F400			F53-0324-05	FUSE	
C282			CK73GB1E105K	CHIP C 1.0UF K		CF200			L72-1017-05	CERAMIC FILTER	
C283-286			CK73HB1H102K	CHIP C 1000PF K		CF201		*	L72-1020-05	CERAMIC FILTER	
C290			CC73HCH1H101J	CHIP C 100PF J		L1			L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)	
C291			CK73HB1H102K	CHIP C 1000PF K		L2 ,3			L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)	
C293			CC73HCH1H060B	CHIP C 6.0PF B		L5			L40-8275-92	SMALL FIXED INDUCTOR(82NH)	
C295			CC73HCH1H470J	CHIP C 47PF J		L6 ,7			L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)	
C297			CC73HCH1H1R5B	CHIP C 1.5PF B		L8			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	
C298			CC73HCH1H020B	CHIP C 2.0PF B		L10			L92-0163-05	BEADS CORE	
C299			CC73HCH1H180J	CHIP C 18PF J		L11			L40-1891-86	SMALL FIXED INDUCTOR(1.8UH)	
C301			CC73HCH1H101J	CHIP C 100PF J		L12			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
C304			CC73HCH1H120J	CHIP C 12PF J		L15			L92-0446-05	BEADS CORE	
C306			CC73HCH1H390J	CHIP C 39PF J		L16 -20			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C307			CC73HCH1H180J	CHIP C 18PF J		L23			L40-5678-67	SMALL FIXED INDUCTOR(56NH)	
C310			CC73HCH1H470G	CHIP C 47PF G		L24			L40-2778-67	SMALL FIXED INDUCTOR(27NH)	
C311			CK73HB1C103K	CHIP C 0.010UF K		L25			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C312			CK73GB1H104K	CHIP C 0.10UF K		L26 ,27			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
C313			CK73GB1H102K	CHIP C 1000PF K		L29			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
C314			CK73HB1A104K	CHIP C 0.10UF K		L30			L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
C316			CK73HB1H102K	CHIP C 1000PF K		L98 ,99			L92-0163-05	BEADS CORE	
C317			CC73HCH1H050B	CHIP C 5.0PF B		L100			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C318			CC73HCH1H101J	CHIP C 100PF J		L102			L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
C351			CK73HB1H102K	CHIP C 1000PF K		L103			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C355,356			CK73HB1A104K	CHIP C 0.10UF K		L104			L92-0138-05	CHIP FERRITE	
C400			CC73GCH1H220J	CHIP C 22PF J		L105			L40-4775-92	SMALL FIXED INDUCTOR(47NH)	
C402,403			CK73HB1H471K	CHIP C 470PF K		L106			L41-1085-43	SMALL FIXED INDUCTOR(100NH)	
C404-406			CK73GB1E105K	CHIP C 1.0UF K		L107			L92-0149-05	CHIP FERRITE	
C407		*	CK73GB1C224K	CHIP C 0.22UF K		L108			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	
C408			CK73GB1E105K	CHIP C 1.0UF K		L109,110			L34-4568-05	AIR-CORE COIL	
C409			C92-0765-05	CHIP-TAN 4.7UF 16WV		L111			L34-4576-05	AIR-CORE COIL	
C410		*	CK73GB1C224K	CHIP C 0.22UF K		L112			L92-0149-05	CHIP FERRITE	
C411			CK73HB1A104K	CHIP C 0.10UF K		L113			L34-4566-05	AIR-CORE COIL	
C414		*	CK73GB1C224K	CHIP C 0.22UF K		L114			L34-4565-05	AIR-CORE COIL	
C415			CK73HB1H471K	CHIP C 470PF K		L115			L41-2295-39	SMALL FIXED INDUCTOR(2.2UH)	
C416			CK73GB1E105K	CHIP C 1.0UF K		L117			L34-4577-05	AIR-CORE COIL	
C417			CC73HCH1E181J	CHIP C 180PF J		L118			L34-4564-05	AIR-CORE COIL	
C418			CK73GB1E105K	CHIP C 1.0UF K		L119			L34-4563-05	AIR-CORE COIL	
C419			CC73HCH1H220J	CHIP C 22PF J		L201			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
C420			CK73HB1H471K	CHIP C 470PF K		L202			L40-1891-86	SMALL FIXED INDUCTOR(1.8UH)	
C421		*	CK73GB1C224K	CHIP C 0.22UF K		L203		*	L41-4778-45	SMALL FIXED INDUCTOR(47NH)	
C422			CK73GB1E105K	CHIP C 1.0UF K		L204			L92-0138-05	CHIP FERRITE	
C423		*	CK73GB1C224K	CHIP C 0.22UF K		L205			L41-2785-39	SMALL FIXED INDUCTOR(0.27UH)	
C424,425			CK73GB1E105K	CHIP C 1.0UF K		L206			L41-5685-39	SMALL FIXED INDUCTOR(0.56UH)	
C426			CC73HCH1H470J	CHIP C 47PF J		L207			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C428-445			CC73HCH1H470J	CHIP C 47PF J							
C447			CC73HCH1H470J	CHIP C 47PF J							

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L208,209			L40-3375-92	SMALL FIXED INDUCTOR(33NH)		R54			RK73HB1J102J	CHIP R 1.0K J 1/16W	
L212			L41-8278-14	SMALL FIXED INDUCTOR(82NH)		R55			RK73HB1J104J	CHIP R 100K J 1/16W	
L214			L92-0138-05	CHIP FERRITE		R56			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L215			L41-6878-14	SMALL FIXED INDUCTOR(68NH)							
L220			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R57			RK73HB1J124J	CHIP R 120K J 1/16W	
L223			L40-5675-92	SMALL FIXED INDUCTOR(56NH)		R58			RK73HB1J823J	CHIP R 82K J 1/16W	
L224			L41-6878-14	SMALL FIXED INDUCTOR(68NH)		R59 ,60			RN73HH1J104D	CHIP R 100K D 1/16W	
L226			L92-0138-05	CHIP FERRITE		R62			RK73HB1J104J	CHIP R 100K J 1/16W	
L250			L40-1085-57	SMALL FIXED INDUCTOR(100NH)		R63			RK73HB1J220J	CHIP R 22 J 1/16W	
L400			L92-0149-05	CHIP FERRITE		R64			RK73HB1J473J	CHIP R 47K J 1/16W	
L401			L33-1462-05	SMALL FIXED INDUCTOR		R67			RK73HB1J472J	CHIP R 4.7K J 1/16W	
L402			L41-2285-14	SMALL FIXED INDUCTOR(220NH)		R68			RK73HB1J474J	CHIP R 470K J 1/16W	
L403			L40-1085-57	SMALL FIXED INDUCTOR(100NH)		R69			RK73HB1J560J	CHIP R 56 J 1/16W	
L404		*	L41-1588-03	SMALL FIXED INDUCTOR(150NH)		R70 ,71			RK73HB1J000J	CHIP R 0.0 J 1/16W	
X1		*	L77-3014-05	TCXQ(19.2MHZ)		R72			RK73HB1J104J	CHIP R 100K J 1/16W	
XF200		*	L71-0640-05	MCF(58.05MHZ)		R74			RK73HB1J153J	CHIP R 15K J 1/16W	
R1			RK73HH1J474D	CHIP R 470K D 1/16W		R75			RK73HB1J100J	CHIP R 10 J 1/16W	
R2			RK73HB1J472J	CHIP R 4.7K J 1/16W		R76 ,77			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R3			RK73HB1J100J	CHIP R 10 J 1/16W		R100			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R5 ,6			RK73HB1J100J	CHIP R 10 J 1/16W		R101			RK73HB1J103J	CHIP R 10K J 1/16W	
R7			RK73HB1J472J	CHIP R 4.7K J 1/16W		R102			RK73HB1J271J	CHIP R 270 J 1/16W	
R8			RK73HB1J100J	CHIP R 10 J 1/16W		R103			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R9			RK73HB1J102J	CHIP R 1.0K J 1/16W		R104			RK73HB1J470J	CHIP R 47 J 1/16W	
R10			RK73HB1J000J	CHIP R 0.0 J 1/16W		R105			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R11 ,12			RK73HB1J223J	CHIP R 22K J 1/16W		R106,107			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R15			RK73HB1J100J	CHIP R 10 J 1/16W		R111			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R17			RK73HH1J184D	CHIP R 180K D 1/16W		R118			RK73HB1J101J	CHIP R 100 J 1/16W	
R18			RK73HH1J473D	CHIP R 47K D 1/16W		R119			RK73HB1J103J	CHIP R 10K J 1/16W	
R19			RK73HB1J102J	CHIP R 1.0K J 1/16W		R120			RK73HB1J223J	CHIP R 22K J 1/16W	
R21			RK73HB1J106J	CHIP R 10M J 1/16W		R123			RK73HB1J331J	CHIP R 330 J 1/16W	
R22 ,23			RK73HB1J100J	CHIP R 10 J 1/16W		R124			RK73HB1J180J	CHIP R 18 J 1/16W	
R24 ,25			RK73HB1J000J	CHIP R 0.0 J 1/16W		R126			RK73HB1J273J	CHIP R 27K J 1/16W	
R26			RK73HB1J331J	CHIP R 330 J 1/16W		R127			RK73HB1J473J	CHIP R 47K J 1/16W	
R27			RK73HB1J000J	CHIP R 0.0 J 1/16W		R129			RK73HB1J470J	CHIP R 47 J 1/16W	
R28			RK73HB1J223J	CHIP R 22K J 1/16W		R130			RK73HB1J333J	CHIP R 33K J 1/16W	
R29			RK73HB1J000J	CHIP R 0.0 J 1/16W		R131			RK73HB1J561J	CHIP R 560 J 1/16W	
R30			RK73HB1J563J	CHIP R 56K J 1/16W		R133			RK73HB1J331J	CHIP R 330 J 1/16W	
R31			RK73HB1J121J	CHIP R 120 J 1/16W		R134			RK73HB1J561J	CHIP R 560 J 1/16W	
R32			RK73HB1J000J	CHIP R 0.0 J 1/16W		R135			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R33			RK73HB1J223J	CHIP R 22K J 1/16W		R136			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R34		*	RK73HH1J391D	CHIP R 390 D 1/16W		R137			RK73HB1J100J	CHIP R 10 J 1/16W	
R35			RK73HB1J103J	CHIP R 10K J 1/16W		R138			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R36			RK73HB1J472J	CHIP R 4.7K J 1/16W		R139			RK73HB1J473J	CHIP R 47K J 1/16W	
R37 ,38			RK73HB1J000J	CHIP R 0.0 J 1/16W		R141			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R39			RK73HB1J152J	CHIP R 1.5K J 1/16W		R142			RK73HB1J223J	CHIP R 22K J 1/16W	
R40			RK73HB1J103J	CHIP R 10K J 1/16W		R144,145			RK73HH1J154D	CHIP R 150K D 1/16W	
R41			RK73HB1J474J	CHIP R 470K J 1/16W		R146			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R42			RK73HB1J473J	CHIP R 47K J 1/16W		R147-150			RK73HH1J184D	CHIP R 180K D 1/16W	
R43			RK73HB1J102J	CHIP R 1.0K J 1/16W		R151			RK73HB1J103J	CHIP R 10K J 1/16W	
R44 ,45			RK73HB1J473J	CHIP R 47K J 1/16W		R152			RK73EB2E823J	CHIP R 82K J 1/4W	
R46		*	RK73HH1J331D	CHIP R 330 D 1/16W		R153			RK73HB1J473J	CHIP R 47K J 1/16W	
R47			RK73HB1J220J	CHIP R 22 J 1/16W		R154			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R48		*	RK73HH1J271D	CHIP R 270 D 1/16W		R155			RK73HB1J474J	CHIP R 470K J 1/16W	
R49			RK73HB1J154J	CHIP R 150K J 1/16W		R156			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R50			RK73HB1J101J	CHIP R 100 J 1/16W		R157,158			RK73HB1J104J	CHIP R 100K J 1/16W	
R51			RK73HB1J102J	CHIP R 1.0K J 1/16W		R161			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R52			RK73HB1J473J	CHIP R 47K J 1/16W		R162,163			RK73HB1J271J	CHIP R 270 J 1/16W	
R53			RK73HB1J683J	CHIP R 68K J 1/16W		R164			RK73HB1J103J	CHIP R 10K J 1/16W	
						R165			RK73HB1J474J	CHIP R 470K J 1/16W	
						R166			RK73HB1J102J	CHIP R 1.0K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R167			RK73HB1J183J	CHIP R 18K J 1/16W		R280			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R168			RK73HB1J124J	CHIP R 120K J 1/16W		R281			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R170			RK73HB1J224J	CHIP R 220K J 1/16W		R282			RK73HB1J103J	CHIP R 10K J 1/16W	
R171			RK73GB2A000J	CHIP R 0.0 J 1/10W		R283			RK73HB1J104J	CHIP R 100K J 1/16W	
						R285			RK73HB1J103J	CHIP R 10K J 1/16W	
R176,177			RK73HB1J331J	CHIP R 330 J 1/16W							
R202,203			RK73HB1J103J	CHIP R 10K J 1/16W		R286			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R204			RK73HB1J561J	CHIP R 560 J 1/16W		R287			RK73HB1J334J	CHIP R 330K J 1/16W	
R205			RK73HB1J564J	CHIP R 560K J 1/16W		R288			RK73HB1J474J	CHIP R 470K J 1/16W	
R206			RK73HB1J104J	CHIP R 100K J 1/16W		R289,290			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R293			RK73HB1J473J	CHIP R 47K J 1/16W	
R207			RK73HB1J564J	CHIP R 560K J 1/16W							
R208-210			RK73HB1J104J	CHIP R 100K J 1/16W		R295			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R211			RK73HB1J334J	CHIP R 330K J 1/16W		R296			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R212			RK73HB1J221J	CHIP R 220 J 1/16W		R298			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R214			RK73HB1J564J	CHIP R 560K J 1/16W		R299			RK73HB1J470J	CHIP R 47 J 1/16W	
						R300-305			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R216			RK73HB1J221J	CHIP R 220 J 1/16W							
R218			RK73HB1J221J	CHIP R 220 J 1/16W		R307			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R220			RK73HB1J470J	CHIP R 47 J 1/16W		R400			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R221			RK73HB1J104J	CHIP R 100K J 1/16W		R402			RK73HB1J330J	CHIP R 33 J 1/16W	
R222			RK73HB1J100J	CHIP R 10 J 1/16W		R404-406			RK73HB1J474J	CHIP R 470K J 1/16W	
						R407			RK73HB1J473J	CHIP R 47K J 1/16W	
R223			RK73HB1J274J	CHIP R 270K J 1/16W							
R225			RK73HB1J681J	CHIP R 680 J 1/16W		R408			RK73GB2A100J	CHIP R 10 J 1/10W	
R226			RK73HB1J103J	CHIP R 10K J 1/16W		R409			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R227			RK73HB1J472J	CHIP R 4.7K J 1/16W		R410-412			RK73HB1J474J	CHIP R 470K J 1/16W	
R228			RK73HB1J151J	CHIP R 150 J 1/16W		R413-415			RK73HB1J102J	CHIP R 1.0K J 1/16W	
						R417			RK73HB1J154J	CHIP R 150K J 1/16W	
R229			RK73HB1J103J	CHIP R 10K J 1/16W							
R230			RK73HB1J102J	CHIP R 1.0K J 1/16W		R418			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R231			RK73HB1J223J	CHIP R 22K J 1/16W		R419,420			RK73HB1J473J	CHIP R 47K J 1/16W	
R233			RK73HB1J183J	CHIP R 18K J 1/16W		R421			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R234,235			RK73HB1J823J	CHIP R 82K J 1/16W		R422			RK73HB1J474J	CHIP R 470K J 1/16W	
						R423			RK73HB1J123J	CHIP R 12K J 1/16W	
R236			RK73HB1J222J	CHIP R 2.2K J 1/16W							
R237			RK73HB1J472J	CHIP R 4.7K J 1/16W		R424			RK73HH1J334D	CHIP R 330K D 1/16W	
R238			RK73HB1J222J	CHIP R 2.2K J 1/16W		R425			RK73HH1J223D	CHIP R 22K D 1/16W	
R239,240			RK73HB1J823J	CHIP R 82K J 1/16W		R426			RK73HB1J100J	CHIP R 10 J 1/16W	
R241			RK73GB2A000J	CHIP R 0.0 J 1/10W		R427			RK73HB1J391J	CHIP R 390 J 1/16W	
						R428			RK73HB1J821J	CHIP R 820 J 1/16W	
R242			RK73HB1J473J	CHIP R 47K J 1/16W							
R243			RK73HB1J183J	CHIP R 18K J 1/16W		R429,430			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R245			RK73HB1J104J	CHIP R 100K J 1/16W		R431			RK73HB1J104J	CHIP R 100K J 1/16W	
R246			RK73HB1J101J	CHIP R 100 J 1/16W		R452			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R248			RK73HB1J100J	CHIP R 10 J 1/16W		R490			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R498,499			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R249			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R251			RK73HB1J000J	CHIP R 0.0 J 1/16W		S1			S70-0483-05	TACT SWITCH	
R253			RK73HB1J102J	CHIP R 1.0K J 1/16W							
R254			RK73HB1J103J	CHIP R 10K J 1/16W		D1			HSC119	DIODE	
R255			RK73HB1J272J	CHIP R 2.7K J 1/16W		D2 ,3			HVC131	DIODE	
						D4			DA221	DIODE	
R256			RK73HB1J103J	CHIP R 10K J 1/16W		D5 ,6			HVC131	DIODE	
R257			RK73HB1J000J	CHIP R 0.0 J 1/16W		D7			HSC119	DIODE	
R260			RK73HB1J104J	CHIP R 100K J 1/16W							
R262			RK73HB1J104J	CHIP R 100K J 1/16W		D8			HVC376B	VARIABLE CAPACITANCE DIODE	
R263			RK73HB1J000J	CHIP R 0.0 J 1/16W		D9			1SV282-F	VARIABLE CAPACITANCE DIODE	
						D12			1SV282-F	VARIABLE CAPACITANCE DIODE	
R265			RK73HB1J000J	CHIP R 0.0 J 1/16W		D13			HVC376B	VARIABLE CAPACITANCE DIODE	
R268			RK73HB1J680J	CHIP R 68 J 1/16W		D14 -17			1SV282-F	VARIABLE CAPACITANCE DIODE	
R269			RK73HB1J331J	CHIP R 330 J 1/16W							
R270			RK73HB1J564J	CHIP R 560K J 1/16W		D18			1SV278F	VARIABLE CAPACITANCE DIODE	
R271			RK73HB1J104J	CHIP R 100K J 1/16W		D100			HSC277	DIODE	
						D103			HZU2ALL	ZENER DIODE	
R272			RK73HB1J154J	CHIP R 150K J 1/16W		D104,105			HVC131	DIODE	
R273			RK73HB1J104J	CHIP R 100K J 1/16W		D106			HZU5CLL	ZENER DIODE	
R274			RK73GB2A000J	CHIP R 0.0 J 1/10W							
R276,277			RK73HB1J104J	CHIP R 100K J 1/16W		D201			HSC277	DIODE	
R278,279			RK73HB1J000J	CHIP R 0.0 J 1/16W		D204,205			1SV305F	VARIABLE CAPACITANCE DIODE	
						D207,208			1SV305F	VARIABLE CAPACITANCE DIODE	

PARTS LIST

TX-RX UNIT (X57-7360-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
D209			HVC131	DIODE							
D210			1SV305F	VARIABLE CAPACITANCE DIODE							
D211			HVC131	DIODE							
D212			HSC119	DIODE							
D213			HVC131	DIODE							
D400			1SR154-400	DIODE							
D401			HSC119	DIODE							
D403			1SS388F	DIODE							
IC1		*	LM73CIMKX-0	MOS-IC							
IC2			LMC7101BIM5	MOS-IC							
IC3			Note 1	MOS-IC							
IC4			TC75W51FUF	MOS-IC							
IC5			LMC7101BIM5	MOS-IC							
IC100			TA75W01FUF	MOS-IC							
IC200,201			LMC7101BIM5	MOS-IC							
IC202			TK10931VTL-G	ANALOGUE IC							
IC203		*	MCP6021-E/OT	MOS-IC							
IC400			TK11250CUCB	MOS-IC							
IC401			TC75S51FE(F)	MOS-IC							
IC402			XC9101D09AKR	ANALOGUE IC							
IC403		*	TK71733S	BI-POLAR IC							
IC404			TC75W51FUF	MOS-IC							
Q1			EMD9	TRANSISTOR							
Q2			DTA114YE	DIGITAL TRANSISTOR							
Q3			2SC5383-T111	TRANSISTOR							
Q4			2SC5636	TRANSISTOR							
Q6			2SC5383-T111	TRANSISTOR							
Q7			SSM6L05FU-F	FET							
Q8			2SK508NV(K52)	FET							
Q9			2SJ347F	FET							
Q10			2SK508NV(K52)	FET							
Q11			2SC5636	TRANSISTOR							
Q12		*	2SK879-F(Y)	FET							
Q13			SSM3K15TE(F)	FET							
Q100			2SC5636	TRANSISTOR							
Q102			2SK3077F	FET							
Q103			RD01MUS1-T113	FET							
Q104			2SC5383-T111	TRANSISTOR							
Q105			DTC144EE	DIGITAL TRANSISTOR							
Q106			RD07MVS1BT122	FET							
Q107			2SK1824-A	FET							
Q109			SSM3K15TE(F)	FET							
Q110		*	EMD5	TRANSISTOR							
Q201			2SC5108(Y)F	TRANSISTOR							
Q202			2SC4215-F(Y)	TRANSISTOR							
Q203			3SK318	FET							
Q204			3SK294-FP	FET							
Q206			2SK1830F	FET							
Q401-403			SSM6L05FU-F	FET							
Q404		*	SSM5H01TU-F	FET							
Q405			2SA1955A-F	TRANSISTOR							
Q406			UMG9N	TRANSISTOR							
TH100			ERTJ0EV104H	THERMISTOR							

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.