


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

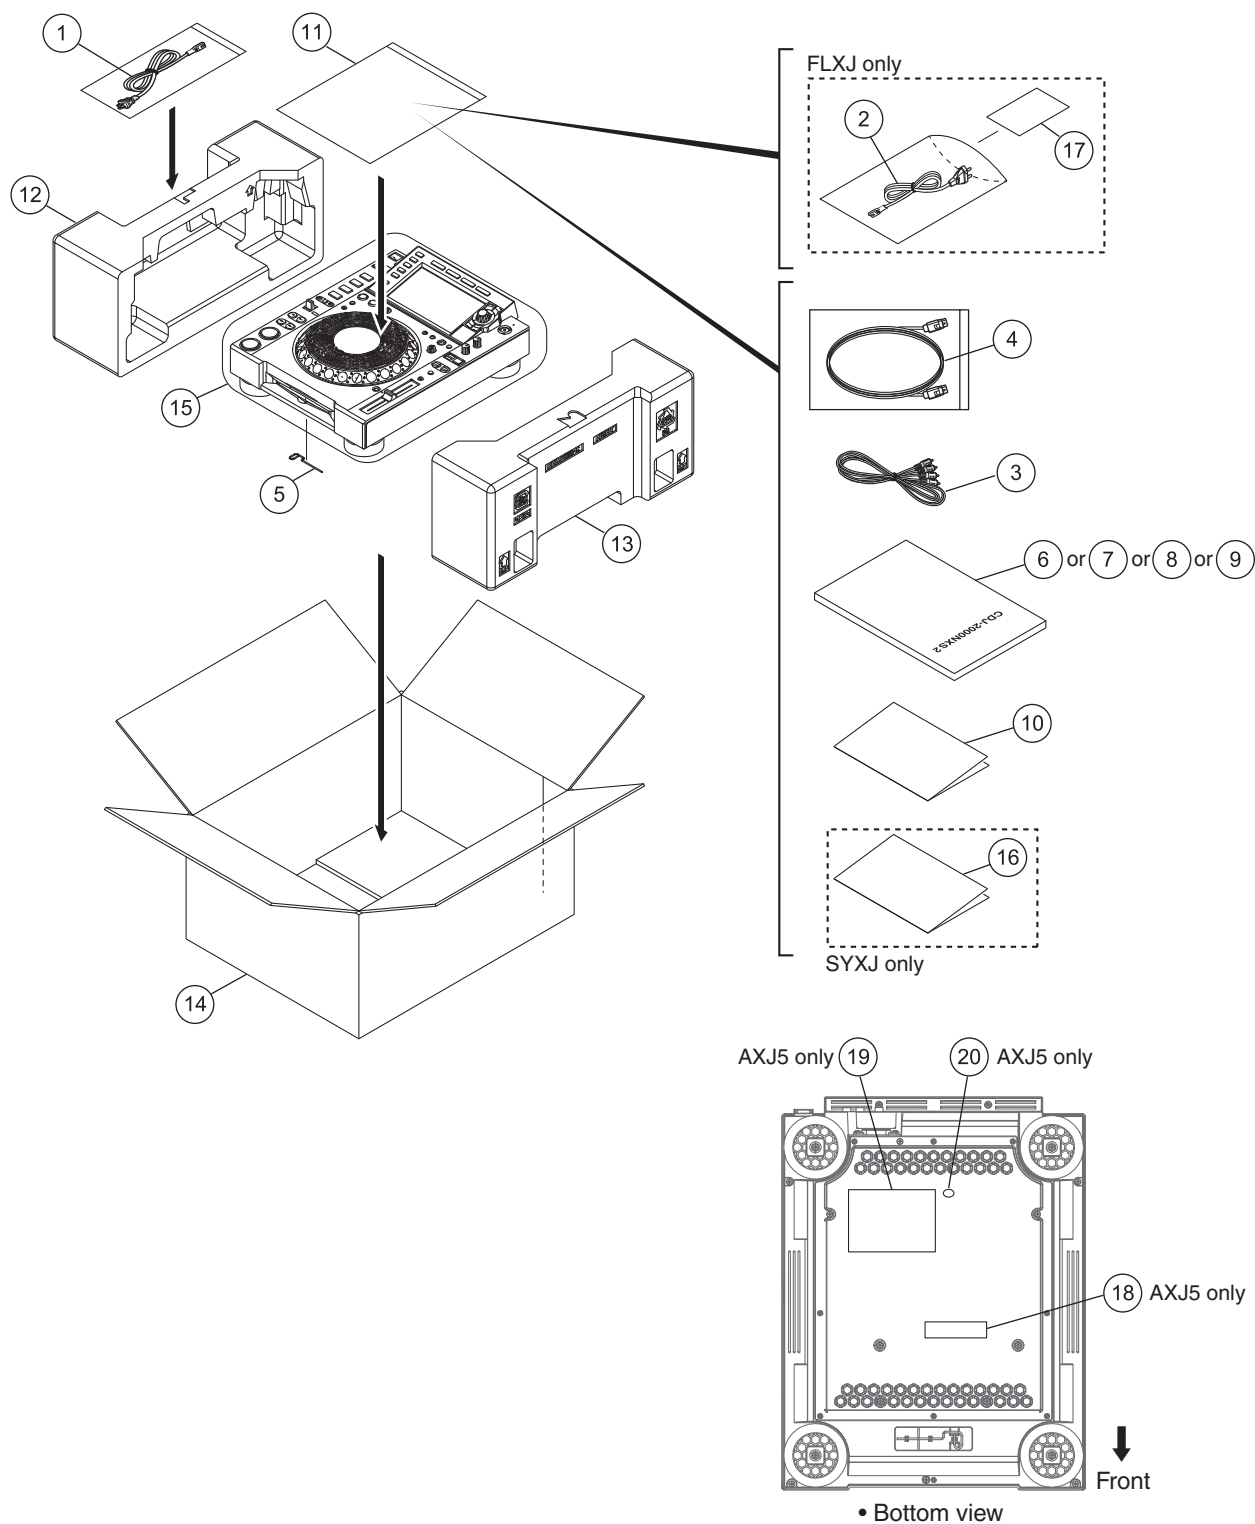

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cord	See Contrast table (2)	9	Operating Instructions (Quick Start Guide)	See Contrast table (2)
⚠ 2	Power Cord	See Contrast table (2)	NSP 10	Leaflet	See Contrast table (2)
3	Audio Cable	XDE3045	NSP 11	Polyethylene Bag	AHG7117
4	LAN Cable	DDE1141	12	Packing Pad	DHA1935
5	Disc Force Eject Pin	DEX1024			
6	Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Packing Pad	DHA1936
7	Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Packing Case	See Contrast table (2)
8	Operating Instructions (Quick Start Guide)	See Contrast table (2)	15	Packing Sheet	RHC1023
			NSP 16	Warranty	See Contrast table (2)
			17	Caution Card SB	See Contrast table (2)
			NSP 18	Label	See Contrast table (2)
			NSP 19	Name Label	See Contrast table (2)
			NSP 20	CCC S Label	See Contrast table (2)

(2) CONTRAST TABLE



CDJ-2000NXS2/SYXJ, UXJCB, FLXJ and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-2000NXS2 /SYXJ	CDJ-2000NXS2 /UXJCB	CDJ-2000NXS2 /FLXJ	CDJ-2000NXS2 /AXJ5
⚠	1	Power Cord	ADG1244	DDG1108	ADG1244	DDG1114
⚠	2	Power Cord	Not used	Not used	ADG1239	Not used
	6	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Nl, Es, Pt, Ru)	DRH1322	Not used	Not used	Not used
	7	Operating Instructions (Quick Start Guide)(En)	Not used	DRH1321	Not used	Not used
	8	Operating Instructions (Quick Start Guide) (En, Es, Zhtw)	Not used	Not used	DRH1323	Not used
	9	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	Not used	DRH1324
NSP	10	Leaflet	DRH1275	DRH1275	DRH1275	DRH1274
	14	Packing Case	DHG3438	DHG3440	DHG3441	DHG3443
NSP	16	Warranty	ARY7158	Not used	Not used	Not used
	17	Caution Card SB	Not used	Not used	ARM7064	Not used
NSP	18	Label	Not used	Not used	Not used	DRW2667
NSP	19	Name Label	Not used	Not used	Not used	DAL1335
NSP	20	CCC S Label	Not used	Not used	Not used	DRW2310



• Bottom view

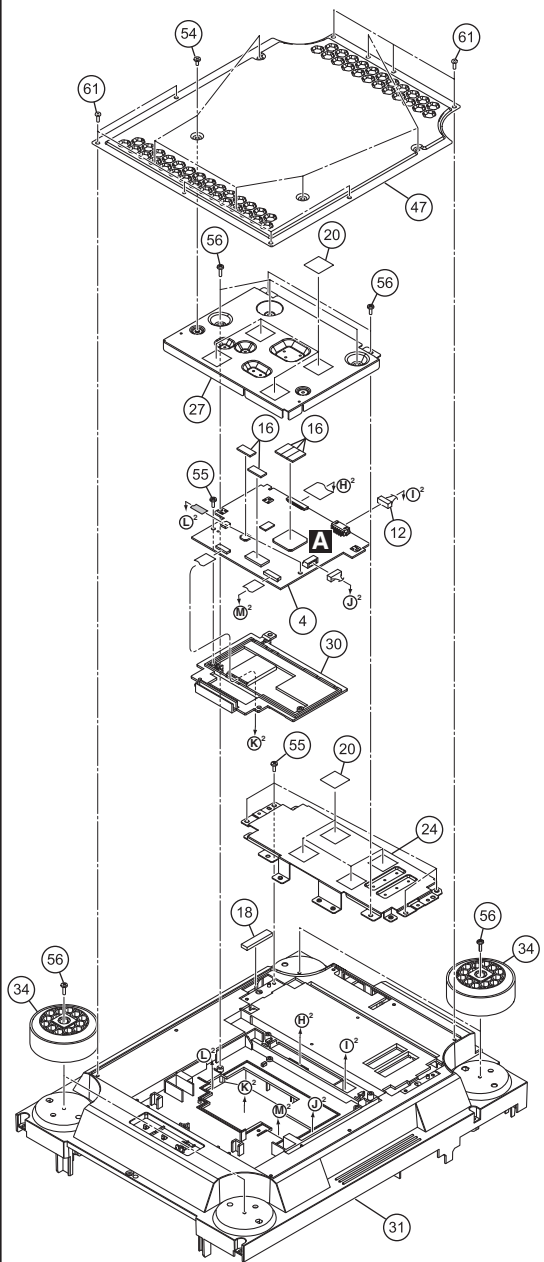

Refer to
"9.3 CONTROL PANEL SECTION".

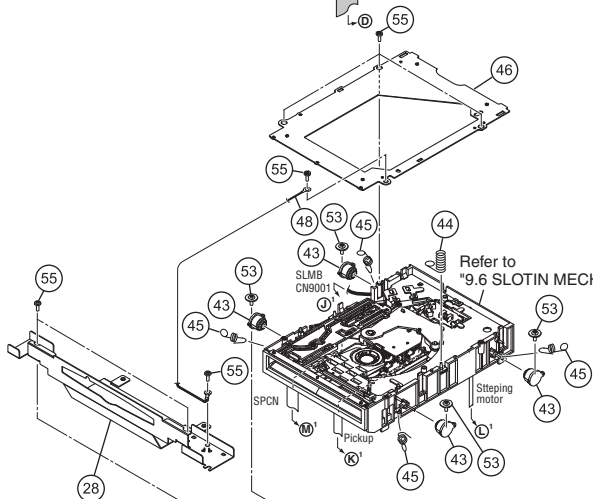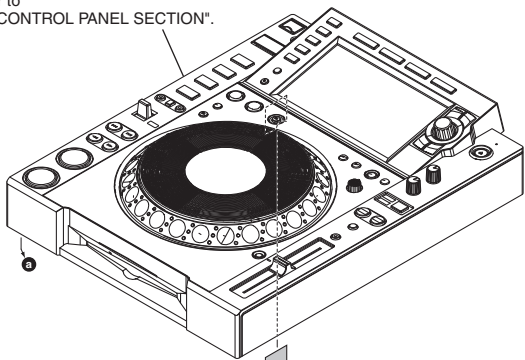









Refer to
"9.6 SLOT IN MECHA SECTION".

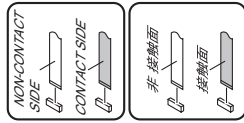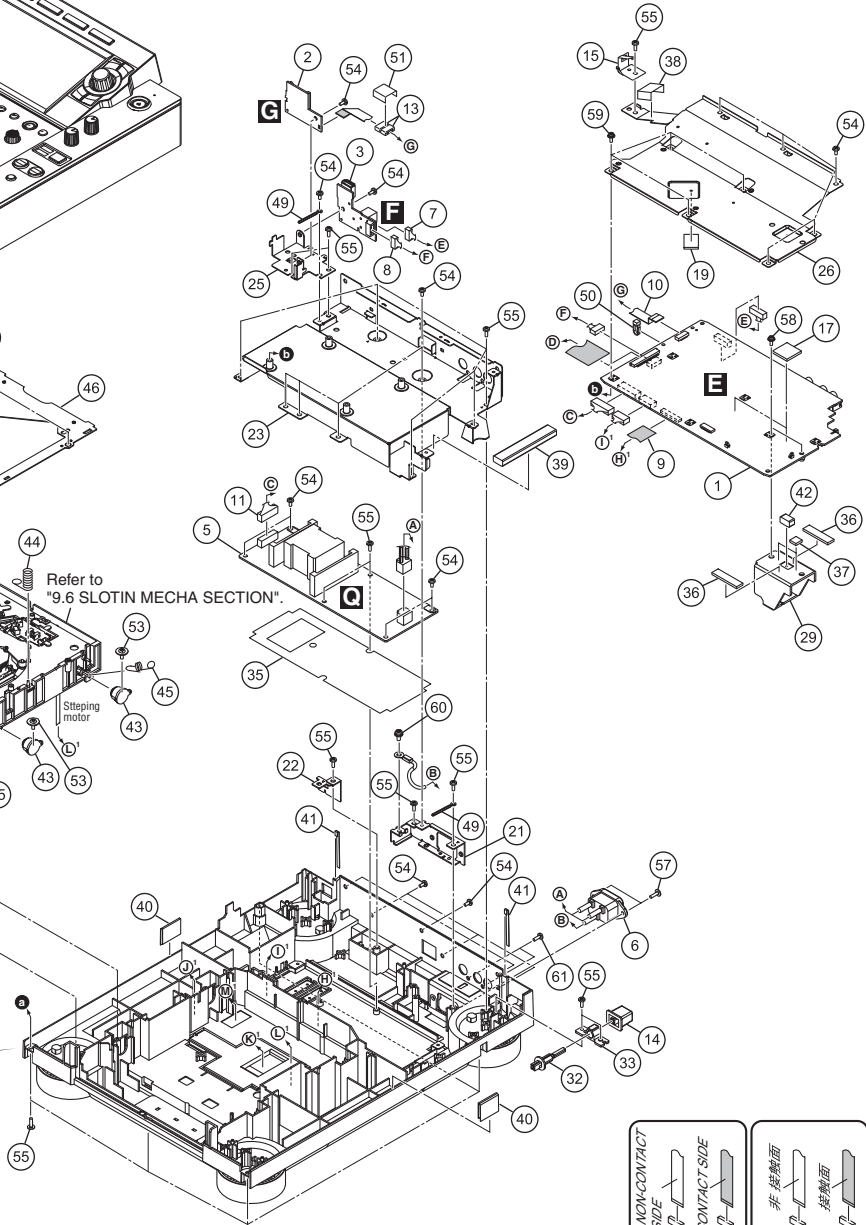

EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MAIN Assy	DWX3672		46	Mecha Plate	DNH2339
	2	SDCB Assy	DWX3694		47	Panel	DAH3052
	3	USBA Assy	DWX3695		48	Cord With Plug	DE007VE0
	4	SRVB Assy	DWX3696		49	Cord Clamper (Steel)	RNH-184
	⚠	5 SW POWER SUPPLY Assy	DWR1548		50	Cable Tie	ZCA-SKB90BK
B	⚠	6 AC Inlet	DKP3975		51	Cushion	DEC3680
		7 Shielded Conn-Cable	DDA1053		52	•••••	
		8 Shielded Conn-Cable	DDA1052		53	DM Screw (FTC)	DBA1260
		9 FFC	DDD1703		54	Screw	BBZ30P060FTB
		10 FFC	DDD1706		55	Screw	BPZ30P080FNI
C		11 Crimp Connector	DDC1024		56	Screw	BPZ30P100FTC
		12 Connector Assy	PF06PP-S10		57	Screw	IBZ30P100FTB
		13 Ferrite Core	BTX1037		58	Screw	PMB30P080FTB
		14 Power Knob	DAC2306		59	Screw	PMH30P080FTC
		15 SD Earth Spring	DBK1357		60	Screw	PMH40P080FTC
D		16 Silicon Rubber D5 L	DEB1456		61	Screw	PPZ30P080FTB
		17 Heat Cond Sheet	DEB2018				
		18 Heat Cond Sheet	DEB2019				
		19 Cushion	DEB2024				
		20 Cushion	DEB2030				
E		21 Bracket/ACI	DNH3020				
		22 Stay/KST	DNH3021				
		23 Stay	DNH3225				
		24 Stay	DNH3226				
		25 Stay	DNH3227				
F		26 Shield Plate	DNH3229				
		27 Plate	DNH3230				
		28 Plate	DNH3237				
		29 Heat Sink	DNH3238				
		30 Servo Cover	DNK5492				
	⚠	31 Chassis	DNK6500				
		32 Shaft	DNK6501				
		33 Guide	DNK6502				
		34 Insulator	DXB2169				
		35 Sheet	DEC3660				
		36 Heat Cond Sheet	DEB2041				
		37 Heat Cond Sheet	DEB2042				
		38 Cushion	DEC3679				
		39 Gasket	DEC3681				
		40 Cushion	DEC3687				
		41 Cushion	DEC3688				
		42 Gasket/JOG	DEC3562				
		43 Damper	CNV7618				
		44 Earth Spring	DBH1398				
		45 Float Spring (G5)	DBH1494				

• Bottom view

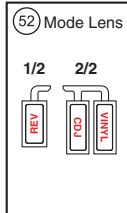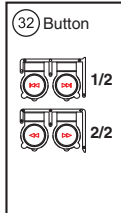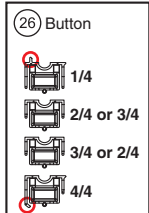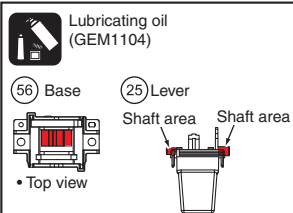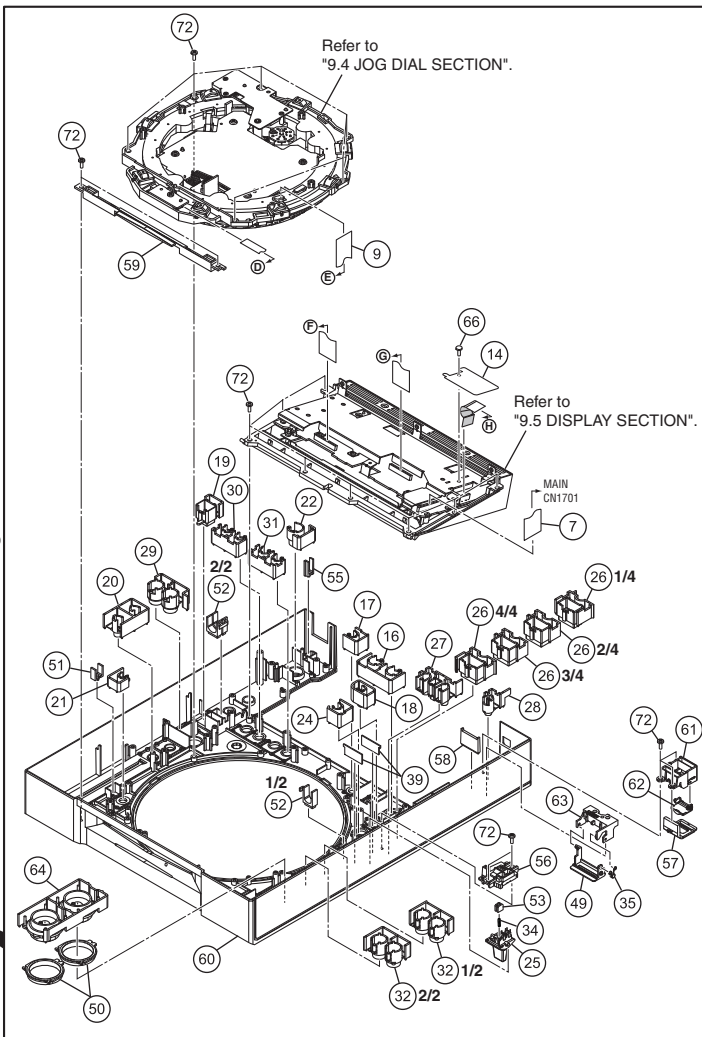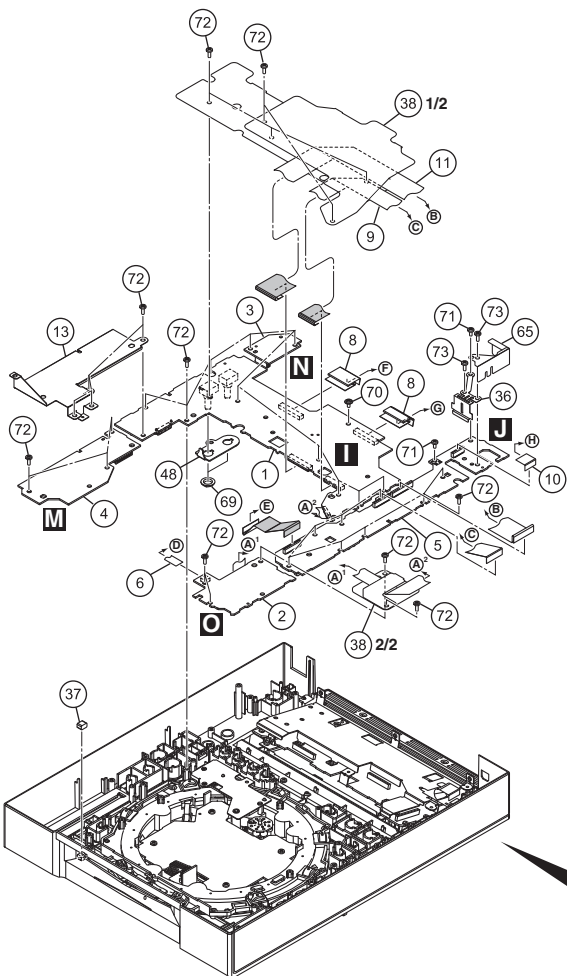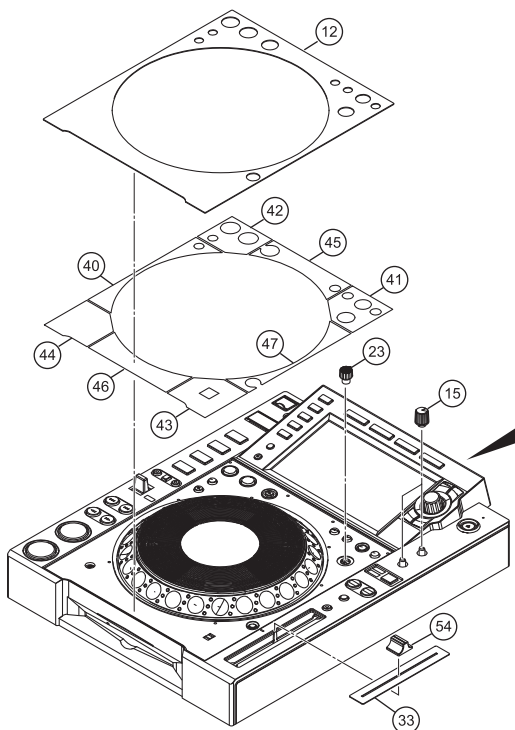

CONTROL PANEL SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	PNLB Assy	DWX3702		46	DS ADH Sheet	DEH1076
	2	KSWB Assy	DWX3703		47	DS ADH Sheet	DEH1082
	3	EUPB Assy	DWX3704		48	Stay/VR	DNF1894
	4	SLDB Assy	DWX3705		49	SD Card Door	DNK5308
	5	HLED Assy	DWX3700		50	Ring Rens (PLAY)	DNK5315
B	6	FFC/4P	DDD1641		51	Tempo Lens	DNK5316
	7	FFC	DDD1705		52	Mode Lens	DNK5317
	8	FFC	DDD1707		53	Lever Cap	DNK5344
	9	FFC	DDD1709		54	Knob/SLD	DNK5981
	10	FFC	DDD1711		55	Lens/EUP	DNK6040
C	11	FFC	DDD1712		56	Base	DNK6470
	12	Panel	DAH3051		57	Lens	DNK6491
	13	Plate	DNH3223		58	Lens	DNK6492
	14	Sheet/FFC	DEC3577		59	Lens	DNK6493
	15	Knob	DAA1303	⚠	60	Control Panel	DNK6494
D	16	Button (LOOP)	DAC2470		61	Holder	DNK6496
	17	Button (RELOOP)	DAC2471		62	Door	DNK6497
	18	Button (4-BEAT LOOP)	DAC2472		63	Holder	DNK6498
	19	Button (JOG MODE)	DAC2473		64	Button	DXB2170
	20	Button (TEMPO)	DAC2474		65	Sheet	DEC3689
E	21	Button (TEMPO REST)	DAC2475		66	Rivet (Plastic)	RBM-003
	22	Button (EJECT)	DAC2476		67	•••••	
	23	Adjust Knob Black	DAC2528		68	•••••	
	24	Button/SLP	DAC2865		69	Flange Nut M9	DBN1008
	25	Lever	DAC3097		70	Screw	ABZ30P060FTC
F	26	Button	DAC3129		71	Screw	BBZ30P060FTB
	27	Button	DAC3130		72	Screw	BPZ30P080FNI
	28	Button	DAC3134		73	Screw	BPZ30P100FTC
	29	Button	DAC3135				
	30	Button	DAC3147				
G	31	Button	DAC3148				
	32	Button	DAC3149				
	33	Slide Sheet 1C	DAH2404				
	34	Lever Spring	DBH1702				
	35	Spring	DBH1717				
H	36	Leaf Spring	DBK1386				
	37	Gasket/JOG	DEC3562				
	38	Sheet	DEC3614				
	39	Brake	DEC3634				
	40	DS ADH Sheet	DEH1070				
I	41	DS ADH Sheet	DEH1071				
	42	DS ADH Sheet	DEH1072				
	43	DS ADH Sheet	DEH1073				
	44	DS ADH Sheet	DEH1074				
	45	DS ADH Sheet	DEH1075				

16 Holder

The diagram shows the holder assembly with 12 screws highlighted by red circles. An inset shows a close-up of the holder being lubricated with oil (GYA1001) at two points marked with red circles.





JOG DIAL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 INDB Assy	DWX3699
	2 JFLB Assy	DWX3708
	3 JOGB Assy	DWX3709
	4 Jog Panel	DAH2609
	5 Jog Plate	DAH2679
B	6 Coil Spring/LD	DBH1798
	7 SW Spring	DBH1681
	8 SW Cushion HH48/2	DEC2538
	9 Cushion/RNG	DEC3466
	10 Washer	DEC3137
C	11 Link Plate	DNH2848
	12 Jog B	DNK4068
	13 SW Ring	DNK5233
	14 Gear/LD	DNK6145
	15 Smoother	DNK5237
D	16 Holder	DNK6556
	17 Comp Plate	DNK5243
	18 Adjust Plate	DNK5300
	19 Cam Plate	DNK5301
	20 Dial Gear	DNK5302
E	21 Link Gear A	DNK5303
	22 Link Gear B	DNK5304
	23 Rack Plate	DNK5305
	24 Sheet SW	DSX1078
	25 Jog Dial A Assy	DXA2159
F	26 Roller	DXB2178
	27 Stay Assy/JOG	DXB2133
	28 Encoder Spring	DBH1710
	29 Plate	DEC3700
	30 Gear/A	DNK6143
	31 Gear/B	DNK6144
	32 Leaf Spring/ADJ	DBK1376
	33 •••••	
	34 •••••	
	35 •••••	
	36 •••••	
	37 Screw (FE)	DBA1265
	38 Screw	BPZ20P100FTC
	39 Screw	BPZ30P080FNI
	40 Screw	IPZ20P060FTC

5 6 7 8


9.5 DISPLAY SECTION

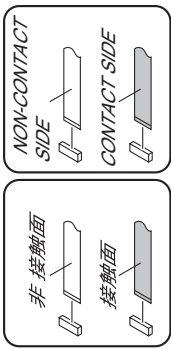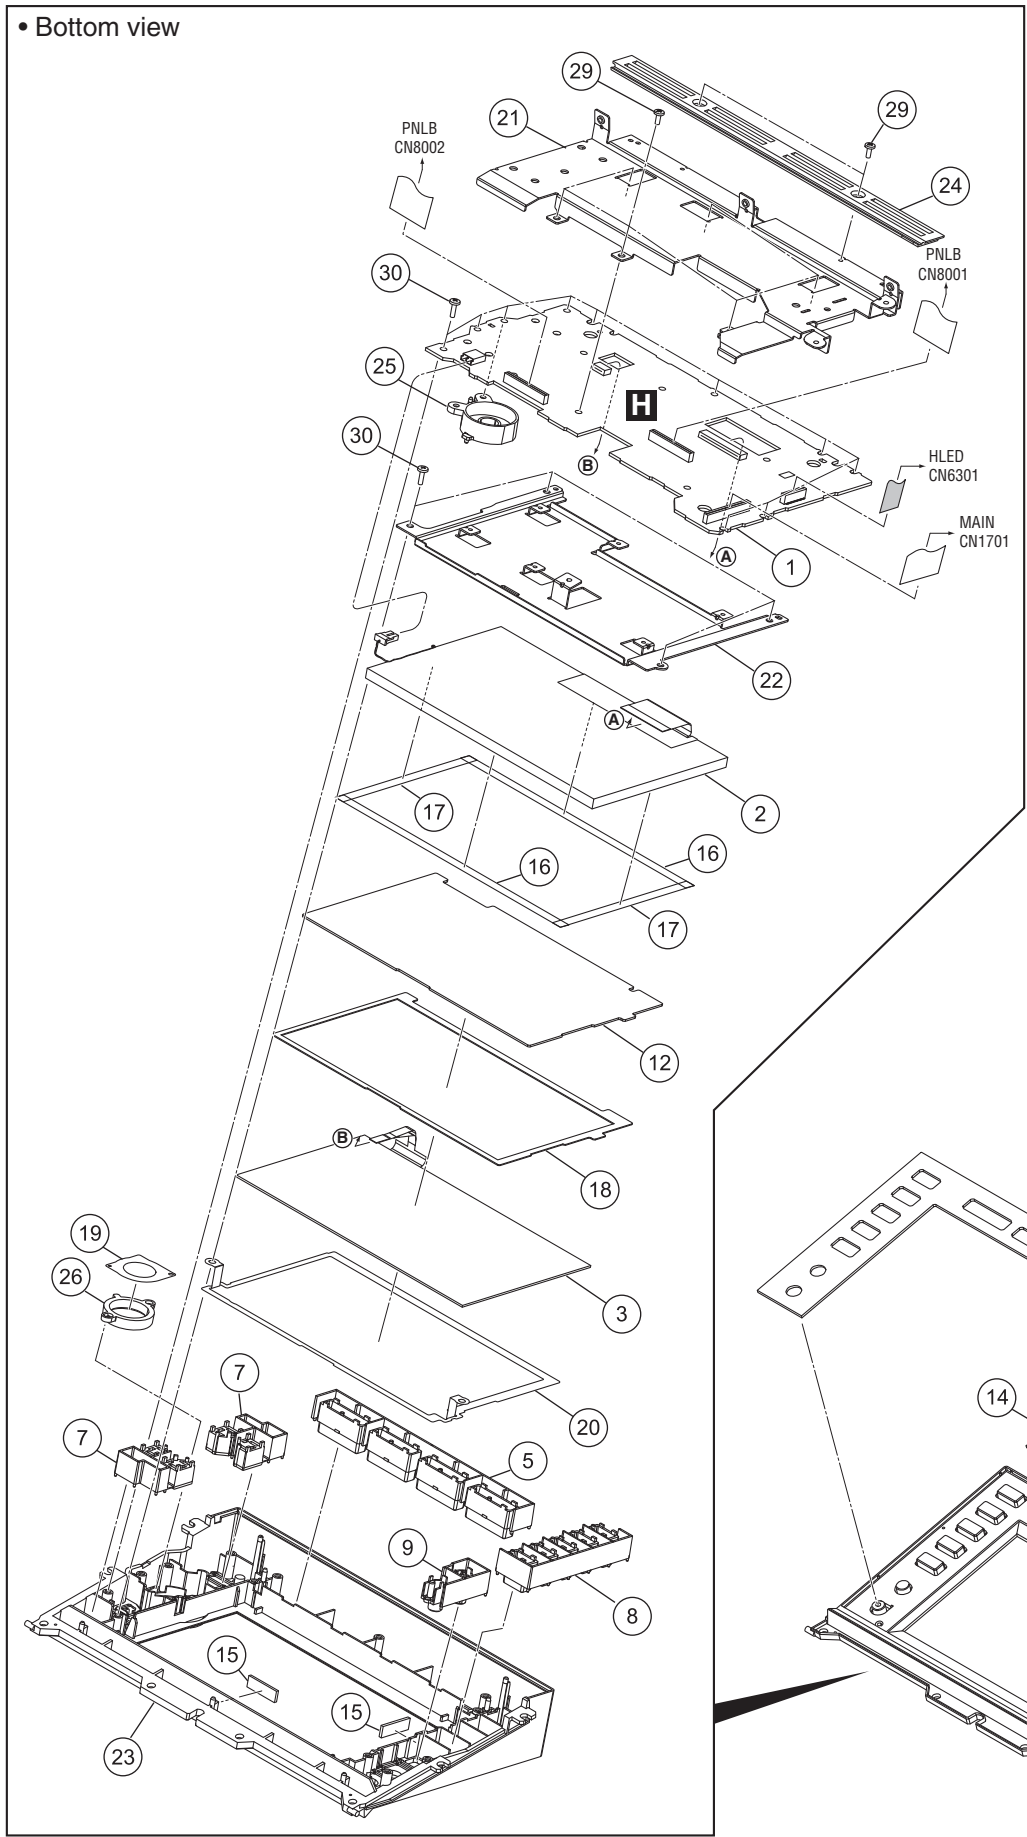

A
B
C
D
E
F

DISPLAY SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 LCDB Assy	DWX3693
	2 TFT LCD	CWX4352
	3 Touch Panel	DSX1130
	4 Dial Knob	DAA1246
	5 Button/MOD	DAC2807
	6 Button	DAC3113
	7 Button	DAC3114
	8 Button	DAC3115
	9 Button	DAC3116
	10 Button	DAC3117
B	11 Button	DAC3118
	12 Panel/TCP	DAH3006
	13 Panel	DAH3043
	14 Panel	DAH3044
	15 Packing/LCD	DEC3565
	16 Packing/L	DEC3568
	17 Packing/S	DEC3569
	18 Spacer/LCD	DEC3571
	19 Light-D Sheet	DEC3613
	20 Plate/GND	DNH3173
C	21 Shield Case	DNH3220
	22 Stay	DNH3221
	⚠ 23 Control Panel	DNK6465
	24 Cover	DNK6466
	25 Holder	DNK6467
	26 Lens	DNK6468
	27 •••••	
	28 •••••	
	29 Screw	BBZ26P060FTB
	30 Screw	BPZ26P080FTC

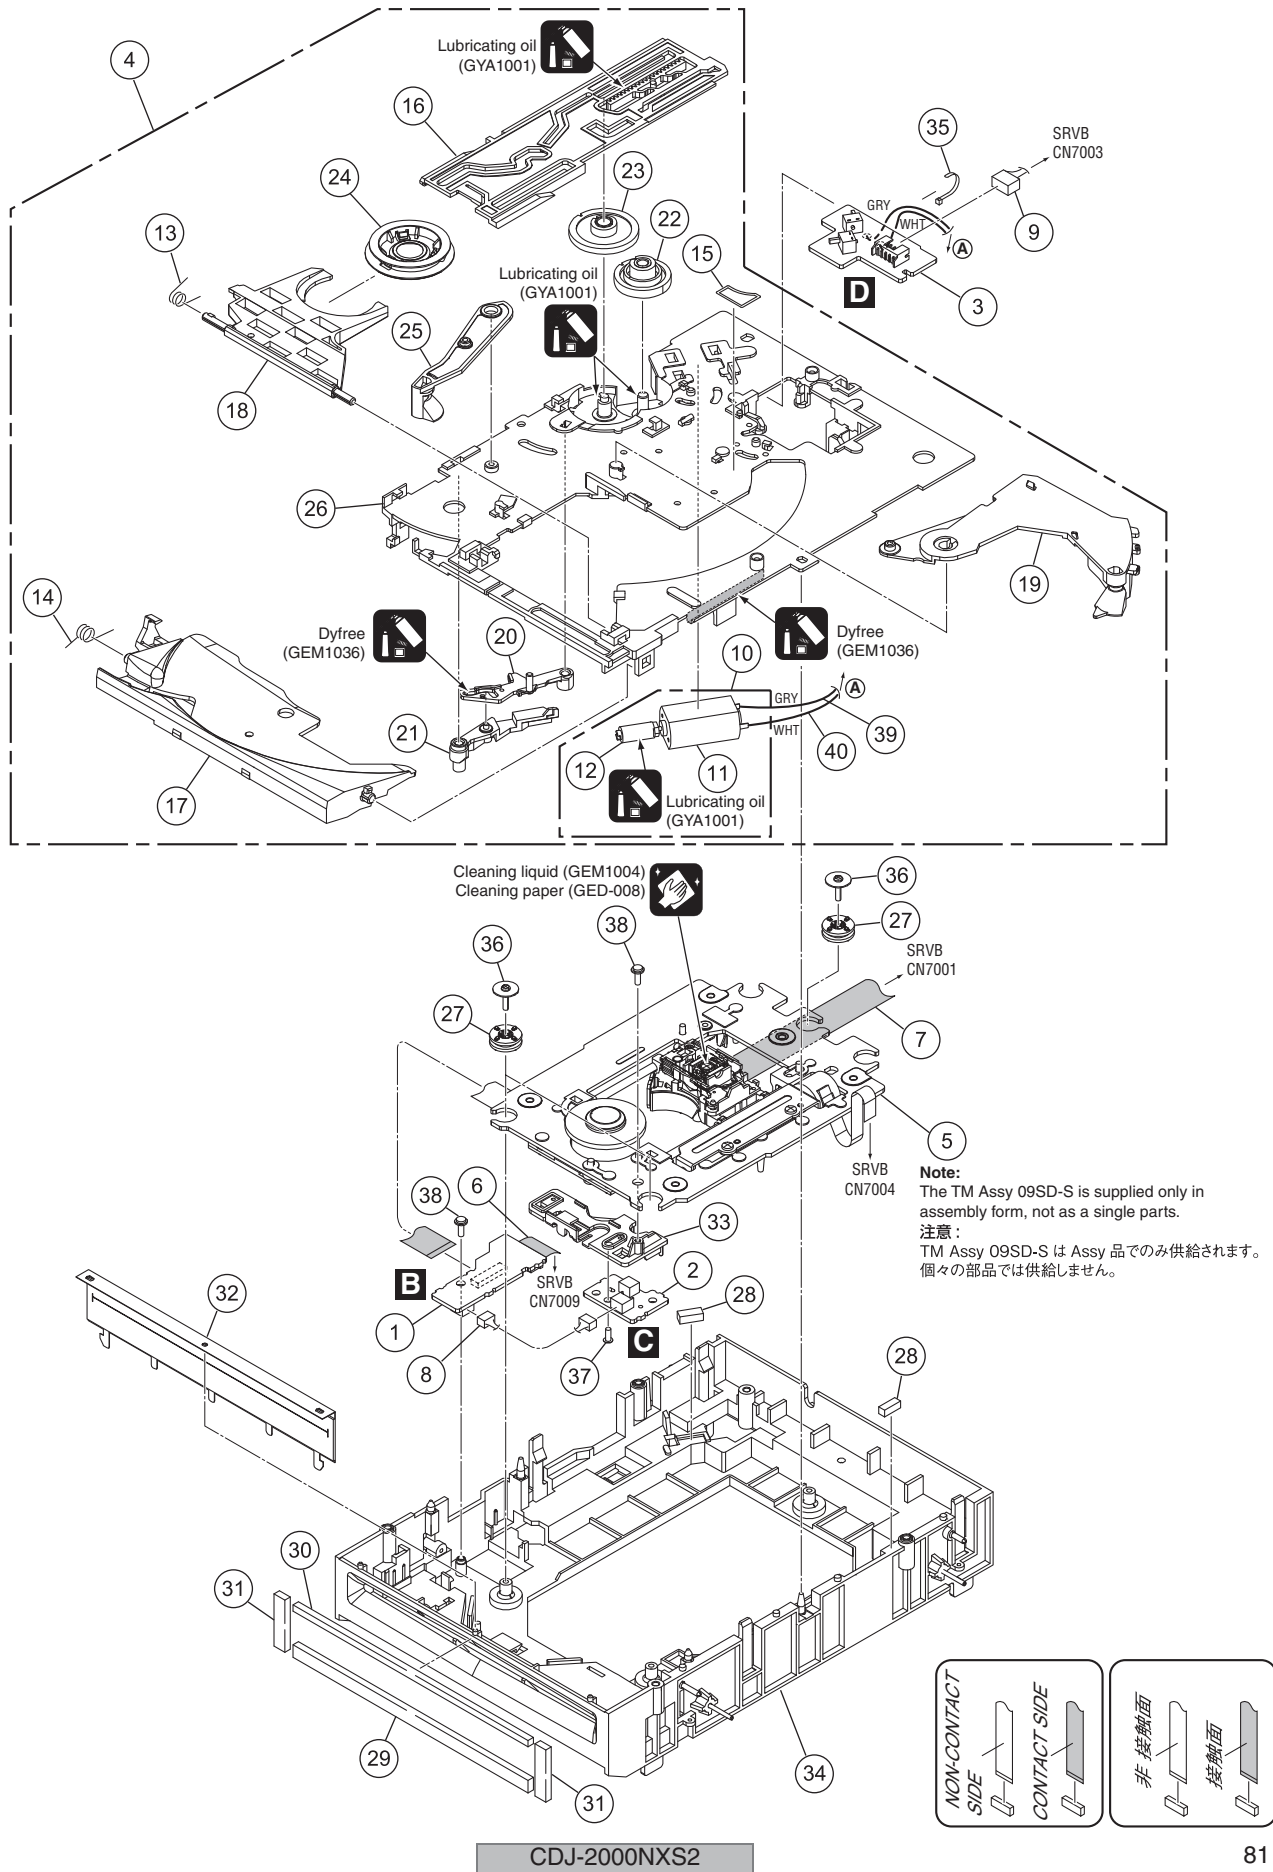

SLOT IN MECHA SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 SPCN Assy	DWX3698
	2 INSW Assy	DWX3697
	3 SLMB Assy	DWX3707
	NSP 4 SLOTIN MECHA G11 Assy	DXA2163
	5 TM Assy 09SD-S	DXX2697
B	6 FFC	DDD1704
	7 FFC	DDD1713
	8 Connector Assy 2P	DKP3769
	9 Connector Assy	PF05PP-C25
	10 DC Motor Assy-S	DXX2510
	NSP 11 DC Motor S	DXM1230
	NSP 12 Worm Gear	DNK3910
	13 Clamp Spring	DBH1374
	14 Guide Spring	DBH1375
	15 SW. Lever Spacer (PET)	DEC2420
C	16 Main Cam	DNK3407
	17 Disc Guide	DNK3478
	18 Clamp Arm	DNK3576
	19 Eject Lever	DNK3684
	20 Lever AP	DNK3835
	21 Lever BP	DNK3836
	22 Loading Gear	DNK3911
	23 Drive Gear	DNK3912
	24 Clamper Assy	DXA2043
	25 Loading Lever Assy	DXB1880
D	26 Loading Base Assy-S	DEA1022
	27 Float Rubber D3	DEB1404
	28 Spacer POR (T3)	DEB1566
	29 Vessel Cushion A	DEC2852
	30 Vessel Cushion B	DEC2853
	31 Vessel Cushion C	DEC2854
	32 Front Sheet	DED1132
	33 Inside SW Base	DNK4236
	34 Float Base G11 Assy	DXB1793
	35 Binder	ZCA-SKB90BK
E	36 Float Fastener	DBA1286
	37 Screw	VBA1062
	38 Screw	IPZ20P060FTC
	NSP 39 Lead Wire (JP1901)	ZWNN1007G28-8-07A
	NSP 40 Lead Wire (JP1902)	ZWNN1007G28-9-07A

12. PCB PARTS LIST

- NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 ● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times 10^1$ $\rightarrow$ 561 RD1/APU $\begin{bmatrix} 5 & 6 & 1 \end{bmatrix}$ J
 47 k Ω $\rightarrow$ 47 $\times 10^3$ $\rightarrow$ 473 RD1/APU $\begin{bmatrix} 4 & 7 & 3 \end{bmatrix}$ J
 0.5 Ω $\rightarrow$ R50 RN2H $\begin{bmatrix} R & 5 & 0 \end{bmatrix}$ K
 1 Ω $\rightarrow$ 1R0 RSIP $\begin{bmatrix} 1 & R & 0 \end{bmatrix}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562 $\times 10^1$ $\rightarrow$ 5621 RN1/4PC $\begin{bmatrix} 5 & 6 & 2 & 1 \end{bmatrix}$ F

Mark No. Description Part No.

LIST OF ASSEMBLIES

	1..MAIN ASSY	DWX3672
NSP	1..LCDA ASSY	DWM2569
	2..LCDB ASSY	DWX3693
	2..SDCB ASSY	DWX3694
	2..USBA ASSY	DWX3695
NSP	1..SRVA ASSY	DWM2570
	2..SRVB ASSY	DWX3696
	2..INSW ASSY	DWX3697
	2..SPCN ASSY	DWX3698
	2..INDB ASSY	DWX3699
NSP	1..PNLA ASSY	DWM2571
	2..PNLB ASSY	DWX3702
	2..KSWB ASSY	DWX3703
	2..EUPB ASSY	DWX3704
	2..SLMB ASSY	DWX3707
	2..JFLB ASSY	DWX3708
	2..JQGB ASSY	DWX3709
	1..SLDB ASSY	DWX3705
	1..HLED ASSY	DWX3700
$\triangle$	1..SW POWER SUPPLY ASSY	DWR1548
NSP	SLOTIN MECHA G11 ASSY	DXA2163
	TM ASSY 09SD-S	DXX2697

Mark No. Description Part No.

A SRVB ASSY

SEMICONDUCTORS

	IC 7001	BD7956FS
	IC 7002	AN22022A
$\triangle$	IC 7003	NJM2846DL3-33
	IC 7004	DYW1867*
	*Part number of the initial firmware equipped	
$\triangle$	IC 7005	S-1155B15-U5
	IC 7006	MN103S71F
	IC 7009	S-80942CNMC-G9C
$\triangle$	IC 7010	NJM2845DL1-05
	Q 7001,7002	2SA1036K
	Q 7003,7004	LTC014YEB
	Q 7005	UM5K1N

Mark No. Description Part No.
 D 7001,7002 D1F60-5053

MISCELLANEOUS

L	7027,7028,7031-7038 INDUCTOR	CTF1379
KN	7001-7003 WRAPPING TERMINAL	CKF1089
X	7001 CERAMIC RESONATOR	DSS1157
CN	7001 24P FFC CONNECTOR	DKN1445
CN	7002 CONNECTOR	AKM1292
CN	7003 CONNECTOR	AKM1291
CN	7004 4P CONNECTOR	DKN1288
CN	7005 40P CONNECTOR	VKN1818
CN	7009 CONNECTOR	DKN1313

P 7001 PROTECTOR(2.000A) DEK1126

RESISTORS

R	7001,7110	RS1/10SR4701F
R	7003,7006,7009	DCN1143
R	7007	RS1/4SA120J
R	7008	RS1/4SA220J
R	7014,7015	RS1/4SA2R0J
R	7017,7109	RS1/10SR2702F
R	7018,7024,7025,7099	RS1/10SR1502F
R	7020,7117,7118	RS1/10SR1202F
R	7021	RS1/10SR3302F
R	7042,7043,7063-7066	RAB4CQ101J
R	7057	RAB4CQ103J
R	7112	RS1/10SR1002F
Other Resistors		RS1/10SR###J

CAPACITORS

C	7001,7002,7081	CKSRYB472K50
C	7008,7014,7016,7021	CKSRYB104K16
C	7010,7024,7070,7098	CKSRYB103K50
C	7011,7012,7034,7061	CCSRCH101J50
C	7013	CKSRYB224K16
C	7017	CCSRCH470J50
C	7018,7019	CKSRYB474K10
C	7020,7022	CEHVAW470M6R3
C	7023,7025-7030,7040	CKSRYB104K16
C	7031,7050,7121,7126	CCH1565
C	7036,7037,7076,7078	CKSRYB182K50
C	7038,7053,7079,7087	CKSRYB102K50
C	7039,7056	CCSRCH151J50
C	7041	CKSRYB561K50
C	7042,7090	CKSRYB273K25
C	7043,7104	CKSRYB473K50
C	7044,7055,7110	CEHVVW470M16

Mark No. Description**Part No.****Mark No. Description****Part No.**

C 7045-7048,7051,7052
C 7049
C 7054,7057,7058,7060

CKSRYB104K16
CKSRYB183K50
CKSRYB104K16

IC 802,803
IC 804
IC 901
⚠ IC 1001,1002
⚠ IC 1003

NJM8801E
NJM4580MD
NLV74VHCU04DT
NJM7805DL1A
NJM2872BF33

C 7059
C 7062,7089,7108
C 7063-7068,7071,7072
C 7069,7075,7085,7096
C 7073,7074

CEHVV470M6R3
CCSRCH101J50
CKSRYB104K16
CKSRYB105K10
CKSRYB471K50

⚠ IC 1004
⚠ IC 1005
⚠ IC 1006
⚠ IC 1007
⚠ IC 1101

NJW1933F1
NJM78M09DL1A
NJM79M09DL1A
NJM2872BF05
TPS65262RHB

C 7077
C 7080,7082,7084,7086
C 7083
C 7088,7092,7097
C 7091,7094,7095

CKSRYB222K50
CKSRYB104K16
CKSRYB122K50
CKSRYB102K50
CKSRYB104K16

⚠ IC 1102
⚠ IC 1103
IC 1201
IC 1202
IC 1204

LM10011SD
TPS51200DRC
XC3S50A-4FTG256C
TC7WZ74FK
TC74LCX157FK

C 7099-7102,7109,7114
C 7103
C 7111-7113,7115
C 7116-7120,7122-7125
C 7127,7128,7133,7142

CKSRYB104K16
CKSRYB333K50
CKSRYB102K50
CCSRCH101J50
CKSRYB104K16

⚠ IC 1501
Q 1
Q 2,4,953,1507

TC7SZ08FUS1
SN74AVC2T45DCU
MM3529A18P
RTQ045N03
LTC024EEB

C 7129-7131,7134-7137
C 7132
C 7139-7141
C 7143

CCSRCH101J50
CCH1565
CCSRCH221J50
CKSRYB104K16

Q 3
Q 5,952,1502-1504
Q 601
Q 602,1201
Q 603

EM6K7
LTA024EEB
2SB1188
LTC023JEB
RN1903

**B SPCN ASSY
MISCELLANEOUS**

CN6101 CONNECTOR
CN6102 CONNECTOR
CN6103 CONNECTOR

DKN1313
DKN1312
VKN1940

Q 604,951,1102,1401
Q 801-804,809,810
Q 805-808,811,812
Q 813-816
Q 1101

LSCR523UB
2SK3320
HN1C01FU
INC2002AC1
LTA023JEB

**C INSW ASSY
MISCELLANEOUS**

S 6001 SPRING SWITCH
CN6001 CONNECTOR

CSN1031
VKN1940

Q 1103
Q 1501,1505
Q 1506
Q 1508
Q 1509

LSAR523UB
LSCR523UB
RTQ040P02
LTA024EEB
LTC024EEB

**D SLMB ASSY
MISCELLANEOUS**

S 9001,9002 PUSH SWITCH
CN9001 L-PLUG(5P)

DSG1017
KM200NA5L

D 1-3,952,954
D 601
D 603
D 604-606
D 802

DA2J101
DZ2J051M0
RR264M-400
DZ2J056M0
DZ2J062M0

**E MAIN ASSY
SEMICONDUCTORS**

IC 1,2
IC 7,9
IC 8
IC 11
NSP IC 12

W971GG6SB-25
TC7WHU04FK
TC7SH00FUS1
PST8430N
DYW1865

D 953
D 1001,1003,1005,1006
D 1002
D 1007,1008
D 1012,1014,1101,1502

DB2J41100
DA2J101
RB162M-40
RB501VM-40
DA2J101

IC 14
IC 15
IC 301
IC 501,502
NSP IC 602

H337S3959
TC7SH08FUS1
TMS320C6655CZH
W631GG6KB-12
RTL8152B-VB-CG

D 1501

DZ2J082M0

MISCELLANEOUS

L 1,2,622,623 INDUCTOR
L 601,620 COIL
L 602-619 FERRITE BEAD
L 626,1502 INDUCTOR
L 627-632,1704 FERRITE BEAD

CTF1394
ATH7015
CTF1528
CTH1253
CTF1528

L 1001 POWER INDUCTOR
L 1101 POWER INDUCTOR(22U)
L 1102 CHOKE COIL
L 1103 INDUCTOR
L 1503 INDUCTOR

ATH7053
DTL1100
CTH1477
CTH1619
CTH1255

L 1705 FERRITE BEAD
F 2,3,6 EMI FILTER

CTF1528
CCG1352

⚠ IC 603
⚠ IC 604
⚠ IC 606,1502,1503
⚠ IC 607
IC 801

USB2512B-AEZG-TR
RTL8304E-CG
BD9328EFJ
TPS2557DRB
AK4490EQ

5				7				8			
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.				
	F 307,308	SMD EMI FILTER	CCG1308		R 751		RS1/10SR472J				
	F 601-603	EMI FILTER	CCG1352		R 765		CTF1528				
	JA 601	RJ45 CONNECTOR	VKN2023		R 766,1000		RS1/10SR221J				
	JA 801	RCA JACK	DKB1121		R 820-827		RN1/16SE3300D				
	JA 901	1P PIN JACK	PKB1045		R 848-851		RN1/16SE4700D				
	KN 501,502	WRAPPING TERMINAL	CKF1092		R 852-855		RN1/16SE5600D				
	KN 1501-1505	WRAPPING TERMINAL	CKF1089		R 872,873		RS1/10SR473J				
	KN 1506,1507,1509	SCREW PLATE	VNE1948		R 874-876,878		RS1/10SR271J				
	KN 1508	WRAPPING TERMINAL	CKF1089		R 881-884		RN1/16SE1002D				
	S 801	PUSH SW	ASG1102		R 909		RS1/10SR101J				
	T 601	TRANSFORMER	DTX1009		R 953		RS1/4SA332J				
	T 901	TRANSFORMER	DTL1225		R 956,1119,1123,1125		RS1/10SR0R0J				
	X 1	RESONATOR	CSS1760		R 1002		RS1/16SS2701D				
	X 2	CRYSTAL RESONATOR	CSS1825		R 1029-1032		RS1/10SR471J				
	X 603	RESONATOR	CSS1773		R 1107,1115,1130		RS1/16SS1502D				
	X 604,605	CRYSTAL(25MHZ)	DSS1205		R 1112		RS1/16SS1203D				
	X 1201	CRYSTAL OSCILLATOR	DSS1216		R 1113,1118,1129,1513		RS1/16SS1002D				
	X 1202	CRYSTAL OSCILLATOR	DSS1215		R 1114		RS1/16SS6802D				
	X 1203	CRYSTAL OSCILLATOR	ASS7102		R 1116		RS1/16SS1803D				
	CN601	CONNECTOR	AKM1291		R 1117		RS1/16SS2002D				
	CN602	40P CONNECTOR	VKN1818		R 1131		RS1/16SS4701D				
	CN603	CONNECTOR	AKM1278		R 1132		RS1/16SS5601D				
	CN604	CONNECTOR	CKS6095		R 1153		RS1/16SS1001D				
	CN 1501	CONNECTOR	DKN1661		R 1202,1203,1207,1208		RS1/10SR0R0J				
	CN 1502	CONNECTOR	AKM1292		R 1210,1213,1229,1313		RS1/10SR0R0J				
	CN 1701	CONNECTOR	CKS6025		R 1511		RS1/16SS3301F				
					R 1512		RS1/16SS5600F				
					R 1514		RS1/10SR333J				
RESISTORS											
	R 3,20		RS1/16SS82R0F		R 1523		RS1/16SS2702F				
	R 33		RS1/4SA0R0J		R 1525		RS1/16SS1002F				
	R 41,81-88		RAB4CQ220J		R 1725		RS1/10SR0R0J				
	R 99-103,105,107		RAB4CQ220J		Other Resistors		RS1/16SS###J				
	R 104		RS1/16SS4300D								
	R 109,111,114,119		RAB4CQ220J	CAPACITORS							
	R 116,117		RS1/16SS5601F		C 1,2,5,10		CKSSYB104K10				
	R 133,1264-1271		RAB4CQ220J		C 3,6,7,14		CKSSYB102K50				
	R 136,165,166,170		RAB4CQ330J		C 4,8,9		CKSSYB103K16				
	R 333,335-346		RAB4CQ0R0J		C 11-13,30,36		CKSSYB103K16				
					C 15,18,20,22		CKSSYB104K10				
	R 363,364,602		RS1/16SS91R0F								
	R 503,504,1509		RS1/10SR102J		C 16,17,19,21		CKSSYB102K50				
	R 505,508		RS1/16SS2400F		C 23,80,83,94		DCH1201				
	R 517-540,542		RS1/16SS39R0D		C 24,31,34,37		CKSSYB102K50				
	R 541		RS1/16SS4701F		C 25-29,32,33		CKSSYB104K10				
					C 35,38,40-42		CKSSYB104K10				
	R 601		RS1/16SS2401D								
	R 616-619		RS1/16SS49R9F		C 39,46,51,55		CKSSYB102K50				
	R 625,1001,1028		RS1/16SS1202D		C 43,49,52,54		CKSSYB103K16				
	R 664-667		RAB4CQ101J		C 44,45,47,48		CKSSYB104K10				
	R 668,700,705-710		RS1/10SR0R0J		C 50,53,56-62		CKSSYB104K10				
					C 63,71,72,144		CKSSYB102K50				
	R 685,686		RS1/16SS3901F								
	R 701-704		RS1/10SR750J		C 64-69,74-79		CKSSYB104K10				
	R 711-718		RS1/16SS1000D		C 70,73,143,147		CKSSYB103K16				
	R 738,911		RS1/10SR104J		C 84,86,93,95		CKSSYB104K10				
	R 739		RS1/10SR223J		C 85,87-92		CCSSCH102J50				
					C 96,106,110-114		DCH1201				
	R 740		RS1/10SR4702D								
	R 741		RS1/10SR1100D		C 97,98,687,688		CCSSCH100D50				
	R 743		RS1/10SR1002D		C 99		CCSSCH6R0D50				
	R 745,1528		RS1/10SR220J		C 100,101,103-105		CKSSYB104K10				
	R 746		RS1/10SR393J		C 107,684,1108,1116		CKSRYB105K10				
					C 108,657		CEHVAW101M6R3				
	R 748,750		RS1/16SS2202F								
	R 749,905		RS1/10SR331J		C 115,124-126,133		CKSSYB104K10				

Mark	No.	Description	Part No.
A	C 117		CKSSYB682K25
	C 118-123,127-129		CCSSCH102J50
	C 130,140,601,621		DCH1201
	C 131,132,806,811		CCSSCH102J50
	C 134		CKSSYB222K50
B	C 135-138,141,142		CKSSYB104K10
	C 145,148-151,153		CKSSYB104K10
	C 146,152,167,343		CKSSYB102K50
	C 165,166,168		CKSSYB104K10
	C 169		CCSSCH5R0C50
C	C 301,303,390,1155		CCG1234
	C 302,304,388,389		CCG1232
	C 305,307,309,311		CCG1218
	C 306,308,644,645		ACG1142
	C 310,312-328,330		CKSSYB104K16
D	C 329,331,333,335		CKSSYB103K16
	C 332,334,336,373		CKSSYB104K16
	C 337-342,344,346		CKSSYB103K16
	C 345,347,349,351		CKSSYB102K50
	C 348,350,352,354		CKSSYB103K16
E	C 353,355,381,383		CKSSYB102K50
	C 356,357,359,361		CKSSYB103K16
	C 358,360,362		CKSSYB561K50
	C 363,377,379		CKSSYB103K16
	C 364-372,374,376		CKSSYB561K50
F	C 375,392-396		CKSSYB104K16
	C 378,380,382		CKSSYB561K50
	C 384-387,406-409		CKSSYB561K50
	C 391		CCG1218
	C 397-401,411,418		CKSSYB103K16
G	C 402-405,433,434		CKSSYB102K50
	C 410,450		CCG1212
	C 412		CKSSYB333K16
	C 415-417,429,430		CKSSYB104K16
	C 419,421,431,432		CKSSYB103K16
H	C 420,422-424,435		CKSSYB561K50
	C 436,447,448,459		CKSSYB561K50
	C 441,442,455,456		CKSSYB104K16
	C 443,444,457,458		CKSSYB103K16
	C 445,446,1118		CKSSYB102K50
I	C 449		CCG1232
	C 460		CKSSYB561K50
	C 461-464,508		CKSSYB104K10
	C 501,502,504-507		CKSSYB104K16
	C 503,509,1121,1139		DCH1256
J	C 510,511,529-538		CKSSYB104K16
	C 512,513,519-521		CKSSYB103K16
	C 516-518,522-524		CKSSYB104K10
	C 525-527,640-642		CKSSYB103K16
	C 528,602-606,608		CKSSYB104K10
K	C 607,610,613,669		CKSSYB105K6R3
	C 611,612,614-618		CKSSYB104K10
	C 620		CKSRYB225K6R3
	C 623,819,822,827		CEHVAW470M16
	C 624,656,659,661		DCH1201
L	C 625-631,635-639		CKSSYB104K10
	C 634		ACG1127
	C 646,881,1026,1528		CCSRCH102J50
	C 648,649,887,905		CKSRYB104K50

Mark	No.	Description	Part No.
M	C 650,1530,1531,1533		CKSRYB103K50
	C 651,1030,1031,1106		ACG1142
	C 653,689		CKSRYB104K16
	C 655,833,838,906		CCH1565
	C 658,664-668		CKSSYB104K10
N	C 660,663,680,681		CKSSYB103K16
	C 670-673,675,682		CKSSYB104K10
	C 674,912,1521,1522		DCH1201
	C 676,677		CCSSCH120J50
	C 683,1140,1142,1158		CKSSYB104K10
O	C 685,686		CCSSCH9R0D50
	C 801,816		CCH1680
	C 802,815,882,883		CCH2090
	C 803,814,826,831		ACG7115
	C 804,813,1049,1050		ACE7100
P	C 807,810,1053,1054		ACE7129
	C 808,809,823,828		CCSSCH101J50
	C 817,820,837,842		CCSSCH102J50
	C 818,821,825,830		CCG1321
	C 824,829,836,841		CCG1318
Q	C 832		CEHVAW470M16
	C 834,839		ACG7115
	C 835,840,845-850		CCG1321
	C 851-854,871-874		CFHXSQ472J16
	C 855-857,862,879		CCSRCH222J50
R	C 864,865,867,869		CFHXS153J16
	C 880		CCSRCH222J50
	C 884,885		CFHXSQ152J50
	C 903,1138,1154,1212		CKSSYB103K16
	C 910,1025,1102,1513		CKSRYB104K50
S	C 951		CEVW471M16
	C 952		CEVW221M16
	C 1001,1023,1048,1510		CCH1565
	C 1002,1007,1017,1042		CCG1318
	C 1004,1051,1066		CCG1328
T	C 1005,1006,1018,1020		CCG1321
	C 1008,1028,1029,1055		CCSSCH101J50
	C 1010,1016,1033,1037		CCSSCH102J50
	C 1011		CKSQYB224K50
	C 1014,1015,1058,1061		CKSSYB104K16
U	C 1032,1067,1077		CCG1321
	C 1038,1044,1507		ACE7113
	C 1043,1065		CCG1318
	C 1046,1047,1056,1059		CCSSCH102J50
	C 1052		CCG1322
V	C 1060,1069,1214,1245		CCSSCH102J50
	C 1063,1064,1527,1537		CCH2090
	C 1068,1244,1248,1252		CCSSCH101J50
	C 1072,1075,1076		CKSSYB104K16
	C 1078-1081,1088-1090		CKSSYB104K16
W	C 1082-1087,1091-1094		CCG1321
	C 1095,1235,1236		CKSSYB104K16
	C 1100,1165,1509		ACE7129
	C 1107,1119,1120		ACG1142
	C 1111,1145,1148		CCSSCH220J50
X	C 1117,1125,1136		CKSSYB473K16
	C 1122-1124,1128,1202		ACG1142
	C 1134,1540		CKSRYB105K10
	C 1141,1144		DCH1256
	C 1147		CKSSYB332K50

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
C	1157,1160-1163		CCG1234
C	1159		CCSSCH820J50
C	1164,1201,1203-1206		CKSSYB104K10
C	1207,1211,1275		CKSSYB105K6R3
C	1208-1210,1213		CKSSYB104K10
C	1215-1218,1220-1232		CKSSYB104K10
C	1219,1233,1246,1250		CKSSYB103K16
C	1234,1237-1243		CKSSYB104K10
C	1249,1253,1257,1506		CCSSCH102J50
C	1254,1258,1503		CKSSYB103K16
C	1255,1256,1505,1550		CCSSCH101J50
C	1402-1407,1409		CKSSYB104K10
C	1411-1414,1543,1706		CKSSYB104K10
C	1508		ACE7100
C	1514,1529,1541,1551		ACG1142
C	1515-1517,1519,1523		CKSRYB104K50
C	1518,1554		CCH1565
C	1520		CKSRYB333K50
C	1524-1526,1556		CKSSYB104K16
C	1534,1536		DCH1201
C	1538,1539		CKSRYB104K50
C	1542,1547		CCSSCH102J50
C	1544-1546		CKSSYB103K16
C	1549		CKSSYB104K16
C	1558-1560		CCG1321
C	1561-1588,1704,1705		CKSSYB104K16
C	1589-1593		CCSSCH331J50
C	1594		CCSSCH470J50
C	1595		ACE7114
C	1701,1703		CCSSCH221J50
C	1707		CKSSYB104K10

F USBA ASSY
MISCELLANEOUS

JA 5101	USB JACK	DKB1118
JA 5102	USB JACK	DKN1664
KN 5101	WRAPPING TERMINAL	CKF1089
CN 5101	CONNECTOR	AKM1293
CN 5102	CONNECTOR	AKM1291
VA 5101-5104 SMD VARISTOR		EZJZ0V80010

G SDCB ASSY
SEMICONDUCTORS

Q 5001	RN2903
D 5001,5003,5005,5007	DAP202K
D 5002,5004,5006,5008	DAN202K

MISCELLANEOUS

L 5002	FERRITE BEAD	CTF1528
F 5001	EMI FILTER	CCG1352
KN 5001	WRAPPING TERMINAL	CKF1089
CN 5001	CONNECTOR	CKS5956
CN 5002	10P CONNECTOR	VKN1414

RESISTORS

R 5016-5019	RS1/10SR0R0J
Other Resistors	RS1/16SS###J

CAPACITORS

Mark	No.	Description	Part No.
	C 5002		CKSSYB102K50
	C 5003		DCH1201
	C 5005		CKSSYB104K16
	C 5006,5007		CKSSYB103K16
H LCDB ASSY			
SEMICONDUCTORS			
⚠	IC 4001-4003		74VHC595FT
	IC 4202,4204		BD9328EFJ
	IC 4601,4603		M12L2561616A-5TG2S
	IC 4602		DYW1866*
	*Part number of the initial firmware equipped		
	IC 4605		TC7SZ08FUS1
⚠	IC 4801		R1290K103A
⚠	IC 4802		BD81A04EFV-M
	Q 4001,4002,4012		LSC4081UB
	Q 4003-4011,4016-4022		LTC023JEB
	Q 4014		2SB1188
	Q 4201,4202		LSAR523UB
	Q 4203,4401,4403,4601		LTC024EEB
	Q 4204		LSCR523UB
	Q 4402,4404		LTC023JEB
	Q 4405,4406		LTA023JEB
	Q 4801		2SAR502UB
	Q 4802		LTC024EEB
	Q 4803		LTA024EEB
	D 4001,4004-4010		SML-512MW
	D 4002,4017,4018		NHSW046A-0171
	D 4003		SMLE12BC7T
	D 4011		SML-D12U8W
	D 4012-4014		SML-512MW
	D 4019,4204-4206		DA2J101
	D 4201,4203		DZ2J056M0
	D 4202		DZ2J068M0
	D 4405-4412		DA2J101
	D 4801-4803		DB3S308F0
	D 4804		DB2J41100
	D 4805		RB060M-30

MISCELLANEOUS

L 4201,4203 INDUCTOR	CTH1255
L 4601 INDUCTOR	CTF1645
L 4802 CHOKE COIL	CTH1426
L 4804 INDUCTOR	CTF1545
L 4805 POWER INDUCTOR	ATH7068
L 4806 INDUCTOR	CTF1635
L 4807,4808 CHIP INDUCTOR(10U)	DTL1105
L 4809 CHIP BEEDS FILTER	BTX1042
L 4810 INDUCTOR	LCTAW101J2520
L 4811,4813-4830 CHIP BEADS	VTL1126
L 4812 CHIP BEADS	VTL1128
S 4001-4013,4015,4016 TACT SWITCH	DSG1134
S 4014 ENCODER SW	DSX1080
X 4602 CRYSTAL RESONATOR	CSS1840
CN 4001 14P CONNECTOR	VKN1418
CN 4002 30P CONNECTOR	VKN1434
CN 4004,4005 27P CONNECTOR	VKN1431
CN 4401 FFC/FPC CONNECTOR	CKS6625
CN 4801 CONNECTOR	CKS4428
CN 4802 FFC/FPC CONNECTOR	CKS6646

Mark No. Description**Part No.****Mark No. Description****Part No.****RESISTORS**

A

R 4022,4023 RS1/10SR182J
 R 4024,4025,4068,4069 RS1/4SA471J
 R 4079 RS1/10SR152J
 R 4203,4236 RS1/10SR220J
 R 4205 RS1/10SR8200D

R 4206 RS1/10SR4702D
 R 4207,4239 RS1/10SR1002D
 R 4208 RS1/10SR683J
 R 4210 RS1/10SR472J
 R 4221-4228 RS1/4SA2R7J

B

R 4235 RS1/10SR104J
 R 4238 RS1/10SR2702D
 R 4240 RS1/10SR223J
 R 4241 RS1/10SR393J
 R 4401,4402,4415 RS1/8SQ0R0J

R 4601-4603,4607,4608 RAB4CQ330J
 R 4604-4606,4613,4614 RAB4CQ101J
 R 4620-4623,4630-4633 RAB4CQ330J
 R 4626-4629 RAB4CQ101J
 R 4640-4643 RAB4CQ330J

C

R 4644-4647 RAB4CQ680J
 R 4648-4651,4681 RAB4CQ473J
 R 4658-4660,4666-4668 RS1/10SR0R0J
 R 4802 RS1/16SS3603D
 R 4803 RS1/16SS6802D

R 4804 RS1/16SS3901D
 R 4809 RS1/16SS1103D
 R 4810 RS1/16SS1002D
 R 4812,4815 RS1/16SS1502D
 R 4814 RS1/16SS8201D

D

R 4817 RS1/10SR0R0J
 R 4818 RS1/16SS3303D
 R 4819 RS1/16SS5601D
 R 4820 RS1/16SS3902D
 R 4827 RS1/16SS5100F

R 4828 RS1/16SS3302D
 R 4829 RS1/16SS2202D
 R 4833 RS1/16SS1203D
 R 4834 RS1/16SS1602D
 R 4835,4849,4858 RS1/16SS39R0D

E

R 4837,4853 RS1/16SS47R0D
 R 4841,4850 RS1/16SS75R0F
 R 4847,4851 RS1/16SS1300D
 R 4848 RS1/16SS51R0D
 R 4852,4856 RS1/16SS82R0D

R 4854 RS1/16SS56R0D
 R 4855 RS1/16SS1800D
 R 4870-4873 RAB4CQ221J
 R 4890 RS1/4SA0R0J
 Other Resistors RS1/16SS###J

CAPACITORS

F

C 4001-4004,4007,4012 CKSRYB104K16
 C 4008,4010,4028,4029 CCSSCH101J50
 C 4011,4027 CCSSCH331J50
 C 4013,4024,4030 CKSSYB104K16
 C 4020,4022,4023,4025 CKSRYB104K16

C 4026,4208,4244,4254 CKSRYB104K16
 C 4032 CCSSCH101J50
 C 4201-4203,4237,4240 CKSSYB104K16

**PNLB ASSY
SEMICONDUCTORS**

IC 8001 DYW1868*
 *Part number of the initial firmware equipped
 IC 8002 PST8430N
 Q 8001,8004,8018-8022 LSC4081UB
 Q 8002,8003 LTC114YUB
 Q 8005,8023,8024 LTC143EUB

Mark	No.	Description	Part No.
	Q	8006,8025,8026	2SB1188
	Q	8007,8008,8015,8028	LTC124EUB
	Q	8027	LTA124EUB
	D	8001,8007,8008,8012	SLI-343Y8Y
	D	8004,8013	LTL17KRH5D
	D	8009	SLR343WBD2PT
	D	8010	SLR343BC4T
	D	8011	LTL17KGH5D
	D	8016,8017	SLI-343Y8Y

MISCELLANEOUS

L	8001	INDUCTOR	CTF1379
VR	8001,8002	VARIABLE RESISTOR	DCS1045
S	8001-8004	TACT SWITCH	DSG1079
S	8005	TACT SWITCH	DSG1089
S	8010-8018	SWITCH	VSG1024
X	8001	CERAMIC RESONATOR	DSS1131
CN	8001,8002,8004	27P CONNECTOR	VKN1287
CN	8003	CONNECTOR	VKN1281
JH	8001	8P CABLE HOLDER	51048-0800
JH	8002	9P CABLE HOLDER	51048-0900
JH	8003	6P CABLE HOLDER	51048-0600
JP	8001	JUMPER WIRE	D20PYY0825E
JP	8002	JUMPER WIRE	D20PDY0910E
JP	8003	WIRE	D20PDY0605E
JP	8004	JUMPER WIRE	D20PYY0405E

RESISTORS

R	8067	RS1/4SA0R0J
R	8116	RS1/8SQ105J
R	8128,8136-8138	RS1/4SA471J
	Other Resistors	RS1/10SR###J

CAPACITORS

C	8007	CCSRCH121J50
C	8008,8021,8036,8039	CKSRYB104K16
C	8010,8011,8023-8026	CKSRYB103K50
C	8012-8016,8027,8030	CCSRCH102J50
C	8019,8020	CKSRYB474K10
C	8022,8081	DCH1256
C	8040,8044,8054,8056	CKSRYB104K16
C	8041,8058,8059,8061	CKSRYB103K50
C	8045	CKSRYB273K16
C	8062,8075	CKSRYB103K50
C	8063,8066,8068-8070	CKSRYB104K16
C	8082,8083	CCSRCH221J50

**J HLED ASSY
SEMICONDUCTORS**

Q	6301-6320	LSCR523UB
Q	6321,6322,6328	LSC4081UB
Q	6323,6326	LTC043EEB
Q	6324,6327	2SB1188
D	6301,6302,6304-6307	SMLVN6RGB2UK
D	6308-6311	SML-D12Y8W
D	6312,6313	SMLE12BC7T
D	6314	SML-D12U8W
D	6316	SMLVN6RGB2UK

MISCELLANEOUS

KN	6301	WRAPPING TERMINAL	CKF1089
S	6301	SPRING SWITCH	CSN1031

Mark	No.	Description	Part No.
S	6302,6307,6312,6313	TACT SWITCH	DSG1134
S	6303-6306	SWITCH	VSG1024
S	6308-6311	TACT SWITCH	DSG1079
CN	6301	14P CONNECTOR	VKN1418
CN	6302,6303	21P CONNECTOR	VKN1425
CN	6304	27P CONNECTOR	VKN1431
PC	6301,6302	PHOTO INTERRUPTER	GP1S094HCZ0F

RESISTORS

R	6347-6350	RS1/10SR181J
R	6356,6360,6361	RS1/4SA471J
R	6428-6430	RS1/4SA471J
R	6431-6434	RS1/10SR151J
	Other Resistors	RS1/16SS###J

CAPACITORS

C	6301-6304,6311-6314	ACG1142
C	6305-6310,6315-6326	CKSSYB103K16
C	6328,6329,6332,6333	CKSSYB104K16
C	6330,6331	ACG1142

**K JFLB ASSY
SEMICONDUCTORS**

⚠	IC	9201	MM1856A33N
	IC	9202	TC7WH04FU
⚠	IC	9203	NJM2392M
	Q	9201,9202	2SC4154-11
	Q	9203	LSAR523UB
	Q	9204	2SC5712
	Q	9205	LSCR523UB
	Q	9206,9207	LTC124EUB
	D	9201	DZ2J062M0
	D	9202,9205	DA2J101
	D	9203	DB2J41100
	D	9206-9209	SLR343WBD2PT
	D	9210-9213	SLI-343U3R
	D	9214	RB162M-40

MISCELLANEOUS

L	9201	RAD SPL INDUCTOR	DTH1212
V	9201	VFD	DEL1074
CN	9201	21P CONNECTOR	VKN1252
CN	9202	CONNECTOR	CKS1072
JH	9201	4P CABLE HOLDER	51048-0400

RESISTORS

R	9201,9202	RS1/4SA102J
R	9215,9218	RS1/8SQ100J
R	9222	RS1/10SR8201D
R	9223	RS1/10SR3901D
R	9228,9230,9233,9235	RS1/4SA7R5J
R	9237,9239,9241,9243	RS1/4SA7R5J
R	9246,9248	RS1/4SA7R5J
R	9259	RS1/10SR2702D
R	9266	RS1/10SR1501D
R	9268	RS1/10SR2701D

R	9269	RS1/4SA122J
	Other Resistors	RS1/10SR###J

CAPACITORS

C	9201	CEHAZL101M25
C	9202	DCH1263
C	9203,9205,9215,9242	CCG1236
C	9204,9217,9230,9231	CKSRYB104K16

Mark No. Description

C 9206,9216,9252

C 9207,9238

C 9211,9213

C 9221

C 9225-9228,9248

C 9232

C 9234,9237,9241,9260

C 9235,9236

C 9239,9247,9251

C 9243,9253

C 9249

Part No.

CKSRYB104K50

CKSRYB103K50

CKSRYB105K16

CEHAZL221M35

CCSRCH101J50

CKSRYB105K10

CKSRYB104K16

CCG1218

CCSRCH102J50

CCG1236

CCSRCH151J50

Mark No. Description**KSWB ASSY****SEMICONDUCTORS**

Q 8501,8502

D 8501

D 8502

LTC114YUB

LTL17KCGP4J

SLI-343Y8Y

MISCELLANEOUS

S 8501,8502 TACT SWITCH

CN 8501 4P CONNECTOR

CN 8502 8P JUMPER CONNECTOR

DSG1117

VKN1264

52147-0810

RESISTORS

All Resistors

RS1/10SR###J

**INDB ASSY****SEMICONDUCTORS**

Q 6201

D 6201

LTC114YUB

CSL0401WBHCW1

MISCELLANEOUS

CN 6201 04P CONNECTOR

RKN1045

RESISTORS

All Resistors

RS1/10SR###J

**SW POWER SUPPLY ASSY**

There is no service parts.

A

B

C

D

E

F

**JOGB ASSY****MISCELLANEOUS**

CN 9301 4PJUMPER CONNECTOR

52151-0410

RESISTORS

All Resistors

RS1/10SR###J

CAPACITORS

C 9301

C 9302

CKSRYB225K6R3

CKSRYB103K50

**SLDB ASSY****SEMICONDUCTORS**

Q 8702

Q 8703

Q 8704

D 8701

2SB1188

LTC143EUB

LSC4081UB

LTL17KGH5D

MISCELLANEOUS

VR 8701 SLIDE VR

VR 8702 SEMI FIXED RESISTOR

S 8701 SWITCH

CN 8701 9PJUMPER CONNECTOR

DCV1032

CCP1571

VSG1024

52151-0910

RESISTORS

All Resistors

RS1/10SR###J

CAPACITORS

C 8702

C 8703,8706

CEJQ470M16

CKSRYB104K16

**EUPB ASSY****SEMICONDUCTORS**

Q 8652

Q 8653

Q 8654

D 8651

D 8652

2SB1188

LTC143EUB

LSC4081UB

LTL17KRH5D

LTL17KGH5D

MISCELLANEOUS

S 8651 SWITCH

CN 8651 6P JUMPER CONNECTOR

VSG1024

52147-0610

RESISTORS

All Resistors

RS1/10SR###J

CAPACITORS

C 8652

CKSRYB104K16