

EXPLODED VIEW

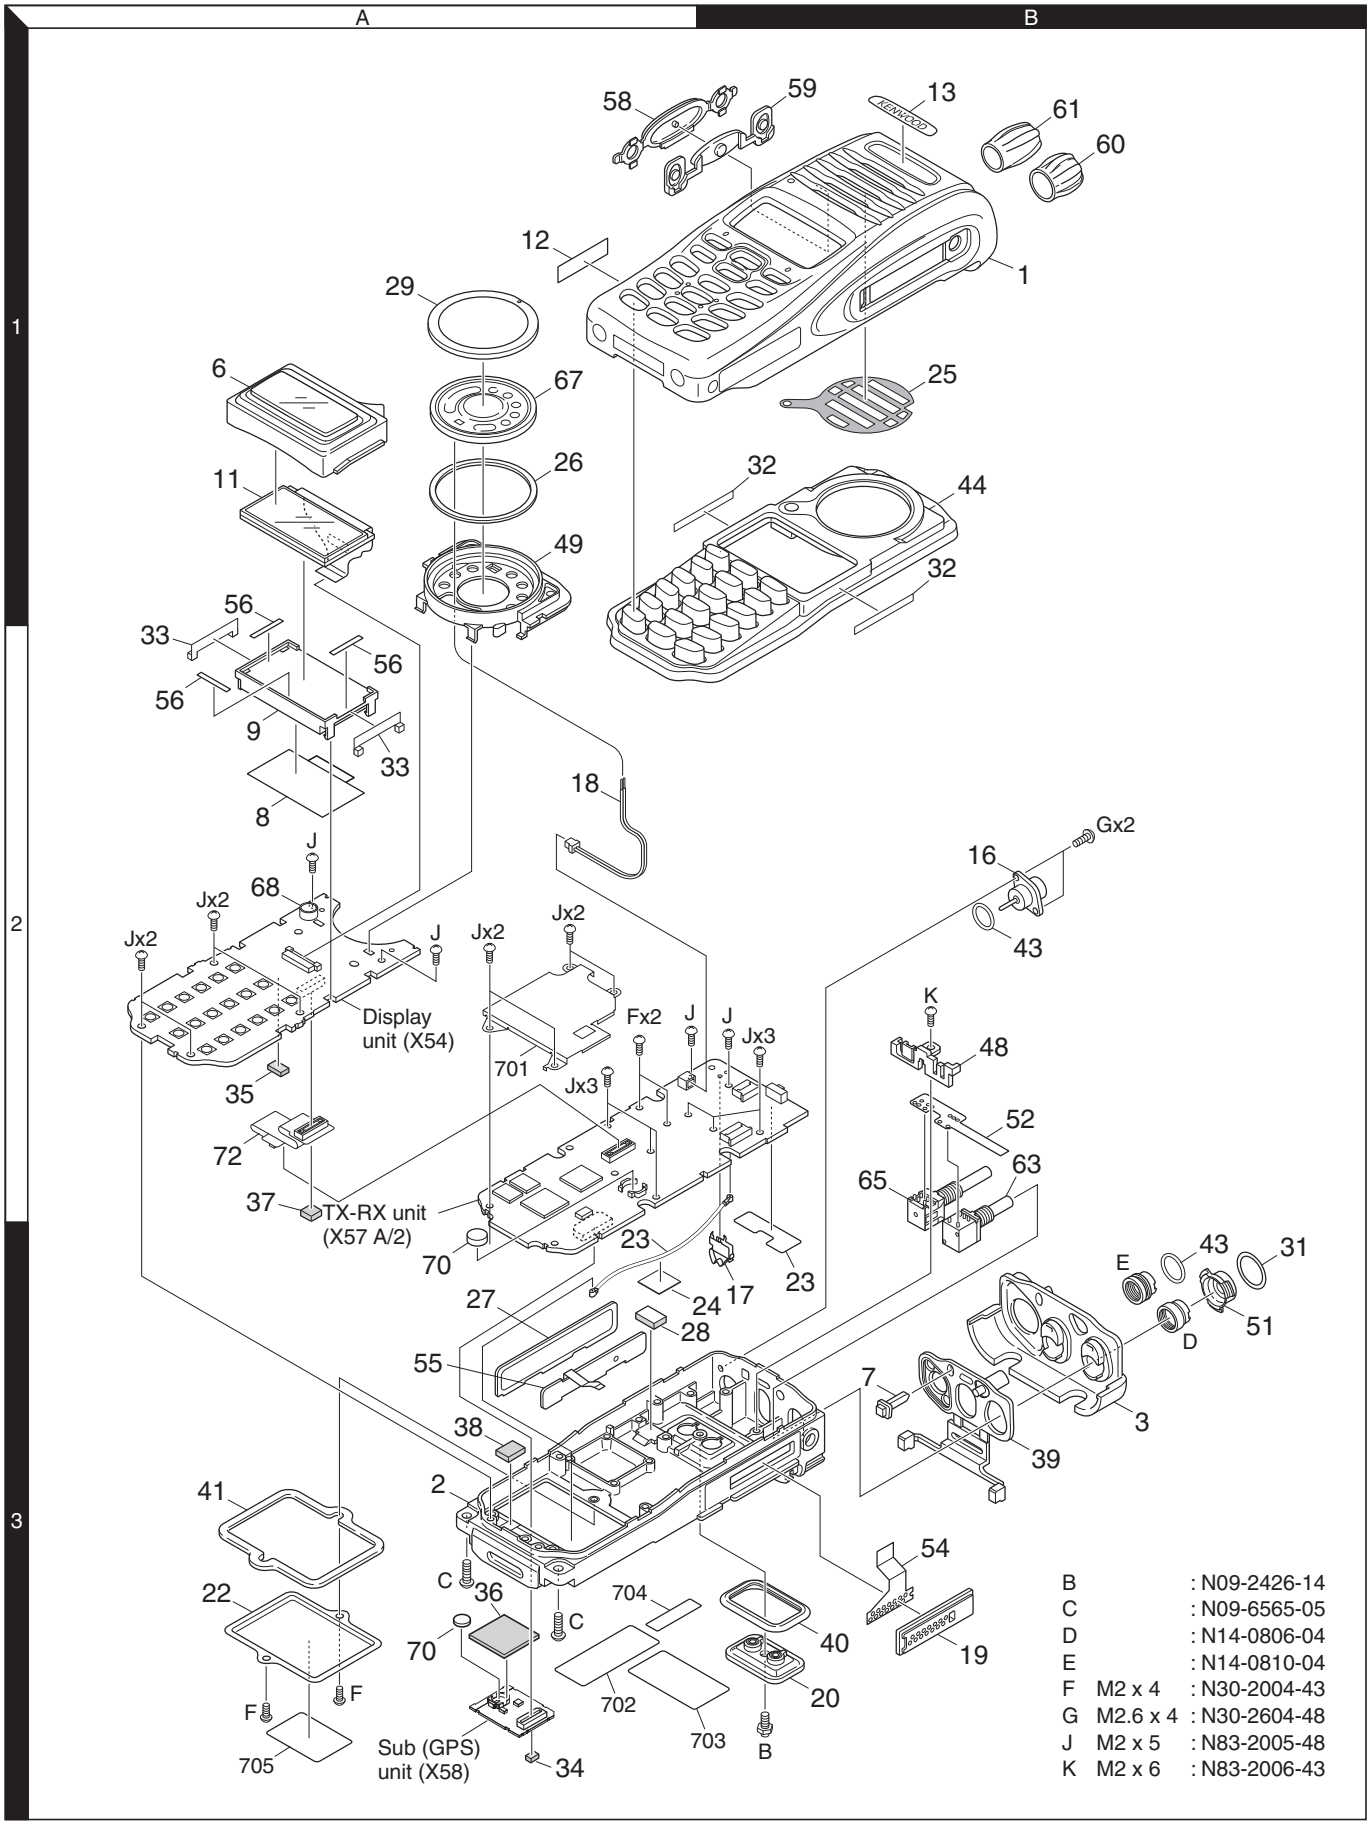

B		: N09-2426-14
C		: N09-6565-05
D		: N14-0806-04
E		: N14-0810-04
F	M2 x 4	: N30-2004-43
G	M2.6 x 4	: N30-2604-48
J	M2 x 5	: N83-2005-48
K	M2 x 6	: N83-2006-43

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

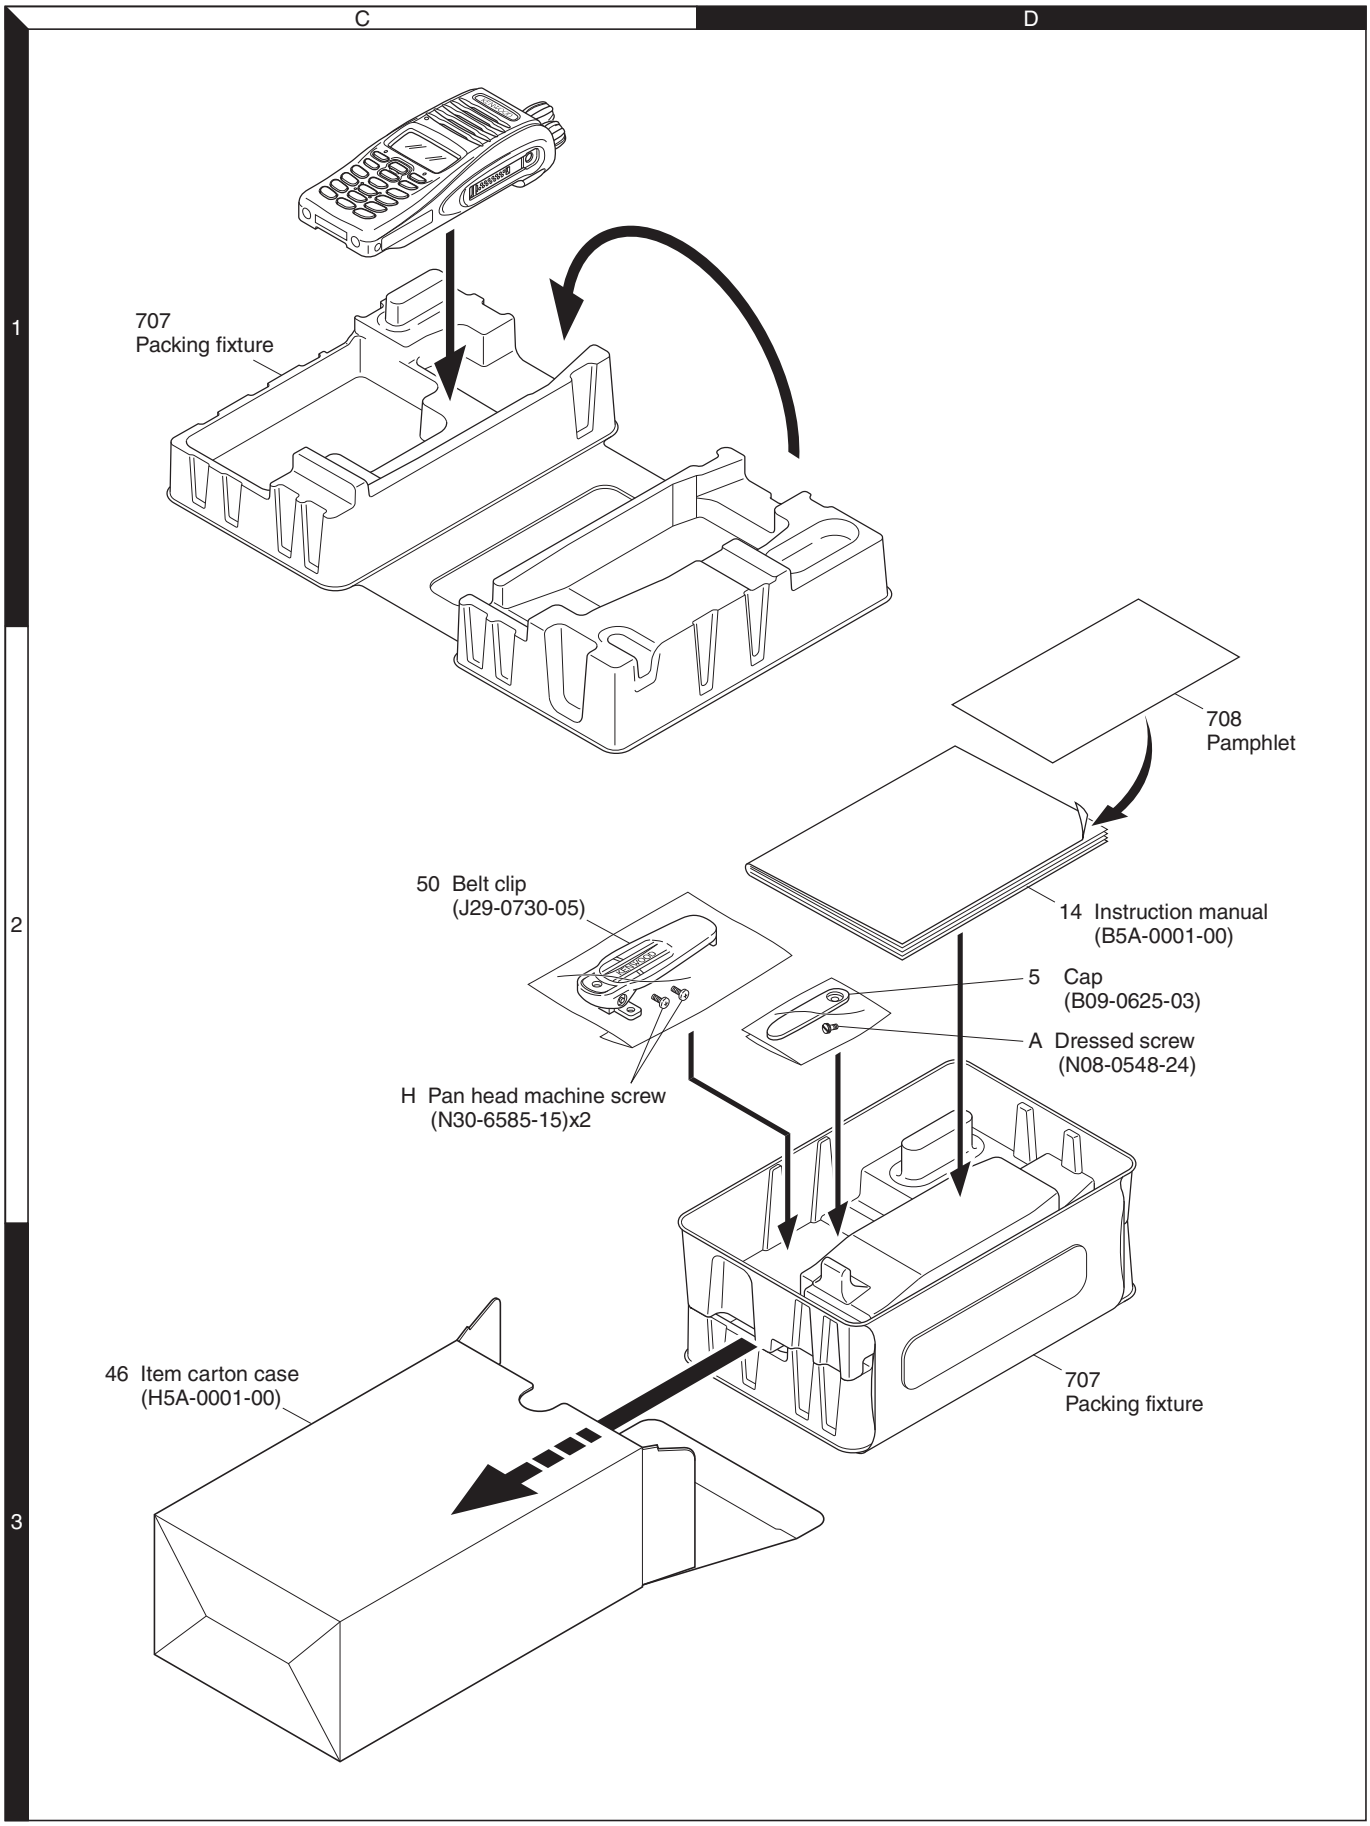

Parts with the exploded numbers larger than 700 are not supplied.

NX-210(G)

PARTS LIST

⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

NX-210 (G)
DISPLAY UNIT (X54-4200-10)

Ref. No.	Address	Parts No.	Description	Destination
			NX-210(G)	
1	1B	A02-4076-11	MAIN CABINET (18KEY)	
2	3A	A10-4132-03	CHASSIS	
3	3B	A62-1093-12	PANEL (TOP)	
5	2D	B09-0625-03	CAP ACCESSORY	
6	1A	B10-2795-02	FRONT GLASS	
7	3B	B11-1820-04	ILLUMINATION GUIDE (TX/BUSY)	
8	2A	B11-1853-34	FILTER (LCD)	
9	2A	B11-1854-02	ILLUMINATION GUIDE (LCD)	
11	1A	B38-0923-05	LCD ASSY	
12	1A	B42-7417-04	STICKER (NEXEDGE)	
13	1B	B43-1606-04	BADGE (KENWOOD)	
14	2D	B5A-0001-00	INSTRUCTION MANUAL ACCESSORY	
16	2B	E04-0416-25	RF COAXIAL RECEPTACLE (SMA)	
17	2B	E23-1104-04	TERMINAL (ANT)	
18	2A	E37-1462-05	LEAD WIRE WITH CONNECTOR (SP)	
19	3B	E58-0511-15	RECTANGULAR RECEPTACLE (SP/MIC)	
20	3B	E72-0419-23	TERMINAL BLOCK	
21	3A	E3H-0001-00	LEAD WIRE WITH CONNECTOR (GPS)	
22	3A	F07-1880-04	COVER (OP BOARD)	
23	3B	F20-3350-04	INSULATING SHEET (TX-RX PCB)	
24	3A	G10-1362-04	FIBROUS SHEET (GPS)	
25	1B	G10-1400-04	FIBROUS SHEET (SP)	
26	1A	G11-4272-14	RUBBER CUSHION (SP)	
27	3A	G11-4273-24	SHEET (PTT)	
28	3A	G11-4308-24	RUBBER SHEET (FET)	
29	1A	G11-4458-14	SHEET (SP)	
31	3B	G11-4493-04	SHEET (VOL-RING)	
32	1B	G11-4494-04	SHEET (18KEY PACKING)	
33	2A	G11-4495-14	SHEET (LCD-HOLDER)	
34	3A	G13-2020-04	CUSHION (SUB PCB)	
35	2A	G13-2068-04	CUSHION (DISPLAY PCB)	
36	3A	G13-1856-04	CUSHION (GPS)	
37	2A	G13-2293-04	CUSHION (50PIN FPC)	
38	3A	G13-2288-04	CUSHION (DC-DC)	
39	3B	G53-1600-12	PACKING (TOP)	
40	3B	G53-1601-04	PACKING (TERMINAL BLOCK)	
41	3A	G53-1602-14	PACKING (OP BOARD COVER)	
43	2B,3B	G53-1603-04	PACKING (SMA/SELECTOR O-RING)	
44	1B	G53-1823-11	PACKING (18KEY)	
46	3C	H5A-0001-00	ITEM CARTON CASE	
48	2B	J19-5478-03	HOLDER (VOL/SELECTOR)	
49	1A	J19-5529-02	HOLDER (SP)	
50	2C	J29-0730-05	BELT CLIP ACCESSORY	
51	3B	J30-1279-04	SPACER (VOL)	
52	2B	J82-0089-05	FPC (VOL/SELECTOR)	
54	3B	J82-0090-45	FPC (UNIVERSAL)	
55	3A	J82-0091-45	FPC (PTT)	
56	2A	J99-0714-04	ADHESIVE SHEET (LCD)	
58	1A	K29-9302-33	KNOB (PTT)	
59	1B	K29-9303-03	BUTTON KNOB (SIDE)	
60	1B	K29-9304-03	KNOB (VOLUME)	
61	1B	K29-9305-03	KNOB (SELECTOR)	

Ref. No.	Address	Parts No.	Description	Destination
A	2D	N08-0548-24	DRESSED SCREW ACCESSORY	
B	3B	N09-2426-14	HEXAGON HEAD SCREW (BATT-)	
C	3A	N09-6565-05	PAN HEAD SCREW (CASE/CHASSIS)	
D	3B	N14-0806-04	CIRCULAR NUT (VOL)	
E	3B	N14-0810-04	CIRCULAR NUT (SELECTOR)	
F	2A,3A	N30-2004-43	PAN HEAD MACHINE SCREW (OPB/FET)	
G	2B	N30-2604-48	PAN HEAD MACHINE SCREW (ANT)	
H	2C	N09-6585-15	PAN HEAD MACHINE SCREW (CLIP)	
J	2A,2B	N83-2005-48	PAN HEAD TAPTITE SCREW (PCB)	
K	2B	N83-2006-43	PAN HEAD TAPTITE SCREW (HOLDER)	
63	2B	R31-0652-15	VARIABLE RESISTOR (VOL)	
65	2B	S60-0430-05	ROTARY SWITCH (SELECTOR)	
67	1A	T07-0749-25	SPEAKER	
68	2A	T91-0579-05	MIC ELEMENT	
70	3A	W09-0971-05	LITHIUM CELL	
72	2A	X42-3340-10	CORD ASSY (50PIN FPC)	
		X57-9270-13	TX-RX UNIT (FOR SERVICE)	
			DISPLAY UNIT (X54-4200-10)	
D1-10		B30-2337-05	LED	
D15-18		B30-2337-05	LED	
C1		CK73HB1A104K	CHIP C 0.10UF K	
C6-10		CK73GB1E105K	CHIP C 1.0UF K	
C11,12		CK73HB1A104K	CHIP C 0.10UF K	
C14		CC73HCH1H221J	CHIP C 220PF J	
C15		CK73HB1A104K	CHIP C 0.10UF K	
C16,17		CK73HB1H471K	CHIP C 470PF K	
C20-29		CC73HCH1H470J	CHIP C 47PF J	
C33-44		CC73HCH1H470J	CHIP C 47PF J	
C119		CK73HB1A104K	CHIP C 0.10UF K	
C122		CC73HCH1H101J	CHIP C 100PF J	
C123		CS77BP1C2R2M	CHIP TNTL 2.2UF 16WV	
C125		CS77BP1C2R2M	CHIP TNTL 2.2UF 16WV	
C133		CS77BP1C2R2M	CHIP TNTL 2.2UF 16WV	
C135		CK73HB0J105K	CHIP C 1.0UF K	
C136,137		CK73HB1H102K	CHIP C 1000PF K	
C138		CC73HCH1H470J	CHIP C 47PF J	
CN3		E40-6755-05	FLAT CABLE CONNECTOR	
CN8		E40-6421-15	PIN ASSY	
R1,2		RK73HB1J122J	CHIP R 1.2K J 1/16W	
R3-5		RK73HB1J152J	CHIP R 1.5K J 1/16W	
R6-14		RK73HB1J471J	CHIP R 470 J 1/16W	
R15		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R16-23		RK73HB1J103J	CHIP R 10K J 1/16W	
R24		RK73HB1J104J	CHIP R 100K J 1/16W	
R25		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R26,27		RK73HB1J151J	CHIP R 150 J 1/16W	
R112		RK73HB1J123J	CHIP R 12K J 1/16W	
R113		RK73HB1J105J	CHIP R 1.0M J 1/16W	

PARTS LIST

DISPLAY UNIT (X54-4200-10)
TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
R115		RK73HB1J104J	CHIP R 100K J 1/16W	
R133		RK73HB1J470J	CHIP R 47 J 1/16W	
R134		RK73HB1J000J	CHIP R 0.0 J 1/16W	
S1-18		S70-0509-05	TACT SWITCH	
D11-14		1SS388F	DIODE	
IC102		NJM2130F3-ZB	BI-POLAR IC	
IC105		LM2682MMX	MOS-IC	
TH101		ERTJ0EV104H	THERMISTOR (100K)	
TX-RX UNIT (X57-9270-12)				
D214		B30-2278-05	LED (RED/YELLOW)	
C2-5		CC73HCH1H470J	CHIP C 47PF J	
C18		CC73HCH1H1R5B	CHIP C 1.5PF B	
C19		CK73HB1H102K	CHIP C 1000PF K	
C20		CC73HCH1H180J	CHIP C 18PF J	
C21		CC73HCH1H010B	CHIP C 1.0PF B	
C22		CC73HCH1H121J	CHIP C 120PF J	
C23		CC73HCH1H020B	CHIP C 2.0PF B	
C24		CC73HCH1H2R5B	CHIP C 2.5PF B	
C25		CC73HCH1H120G	CHIP C 12PF G	
C106,107		CC73HCH1H101J	CHIP C 100PF J	
C118		CK73HB1H102K	CHIP C 1000PF K	
C121		CK73HB0J105K	CHIP C 1.0UF K	
C129		CK73HB1A104K	CHIP C 0.10UF K	
C131,132		CK73HB1A563K	CHIP C 0.056UF K	
C134		CK73HB1A104K	CHIP C 0.10UF K	
C201		CC73GCH1H220J	CHIP C 22PF J	
C202		CK73HB1H471K	CHIP C 470PF K	
C204,205		CK73HB1H471K	CHIP C 470PF K	
C206		CK73HB1E682K	CHIP C 6800PF K	
C207		CK73HB1H471K	CHIP C 470PF K	
C209,210		CK73HB1H471K	CHIP C 470PF K	
C212		CK73HB1H471K	CHIP C 470PF K	
C213		CK73HB0J105K	CHIP C 1.0UF K	
C214-216		CK73HB1H471K	CHIP C 470PF K	
C218		CK73GB0J475K	CHIP C 4.7UF K	
C219,220		CK73HB1A104K	CHIP C 0.10UF K	
C221,222		CK73HB0J105K	CHIP C 1.0UF K	
C223		CK73GB1C224K	CHIP C 0.22UF K	
C224		CK73HB0J105K	CHIP C 1.0UF K	
C225		CK73GB0J106K	CHIP C 10UF K	
C226		CK73HB1H471K	CHIP C 470PF K	
C227		CK73HB1A105K	CHIP C 1.0UF K	
C228		CK73HB1H102K	CHIP C 1000PF K	
C229		CS77MP1A100M	CHIP TNTL 10UF 10WV	
C230		CK73FB0J106K	CHIP C 10UF K	
C231		CK73HB1A105K	CHIP C 1.0UF K	
C232		CK73GB1E105K	CHIP C 1.0UF K	
C233		CC73HCH1H221J	CHIP C 220PF J	
C234		CK73GB1E105K	CHIP C 1.0UF K	
C235,236		CK73HB1H102K	CHIP C 1000PF K	
C237		CK73HB1E103K	CHIP C 0.010UF K	
C238,239		CK73GB1E105K	CHIP C 1.0UF K	
C240		CK73HB1H102K	CHIP C 1000PF K	
C241		CK73GB1C224K	CHIP C 0.22UF K	
C242		CK73HB1H102K	CHIP C 1000PF K	

Ref. No.	Address	Parts No.	Description	Destination
C243		CK73FB1E475K	CHIP C 4.7UF K	
C244,245		CK73GB1C224K	CHIP C 0.22UF K	
C246		CK73HB1H102K	CHIP C 1000PF K	
C247		CK73HB1E682K	CHIP C 6800PF K	
C248		CK73GB1C224K	CHIP C 0.22UF K	
C249		CK73HB0J105K	CHIP C 1.0UF K	
C250		CK73HB1H471K	CHIP C 470PF K	
C252,253		CK73GB1E105K	CHIP C 1.0UF K	
C254		CK73HB1H102K	CHIP C 1000PF K	
C255,256		CK73FB0J106K	CHIP C 10UF K	
C257		CK73GB1E105K	CHIP C 1.0UF K	
C258		CK73HB1H471K	CHIP C 470PF K	
C259		CK73GB1E105K	CHIP C 1.0UF K	
C260		CK73HB0J105K	CHIP C 1.0UF K	
C261		C92-0765-05	CHIP TNTL 4.7UF 16WV	
C262		CK73HB1A104K	CHIP C 0.10UF K	
C263		CK73GB1E105K	CHIP C 1.0UF K	
C264		CC73HCH1E181J	CHIP C 180PF J	
C265		CK73HB1H471K	CHIP C 470PF K	
C266		CC73HCH1H220J	CHIP C 22PF J	
C267,268		CK73HB1H471K	CHIP C 470PF K	
C269,270		CK73GB1E105K	CHIP C 1.0UF K	
C271		CC73HCH1H470J	CHIP C 47PF J	
C272		CK73GB1E105K	CHIP C 1.0UF K	
C301-310		CC73HCH1H470J	CHIP C 47PF J	
C315-318		CC73HCH1H470J	CHIP C 47PF J	
C321		CC73HCH1H470J	CHIP C 47PF J	
C326		CC73HCH1H470J	CHIP C 47PF J	
C327,328		CK73HB1E104K	CHIP C 0.10UF K	
C329		CK73HB1A105K	CHIP C 1.0UF K	
C330		CK73HB1E103K	CHIP C 0.010UF K	
C332		CK73HB1H102K	CHIP C 1000PF K	
C333-339		CK73HB1E104K	CHIP C 0.10UF K	
C340		CC73HCH1H101J	CHIP C 100PF J	
C341		CK73HB1A104K	CHIP C 0.10UF K	
C343		CK73HB1H102K	CHIP C 1000PF K	
C344		CK73HB1A105K	CHIP C 1.0UF K	
C345,346		CK73HB1E103K	CHIP C 0.010UF K	
C347		CK73HB1A105K	CHIP C 1.0UF	
C348		CK73HB1E104K	CHIP C 0.10UF K	
C349		CK73HB1A105K	CHIP C 1.0UF K	
C350-353		CK73HB1E104K	CHIP C 0.10UF K	
C354		CK73HB1A105K	CHIP C 1.0UF K	
C355		CC73HCH1H470J	CHIP C 47PF J	
C356		CK73HB1E103K	CHIP C 0.010UF K	
C357		CK73HB1E104K	CHIP C 0.10UF K	
C361,362		CK73HB1E104K	CHIP C 0.10UF K	
C362		CK73HB1E103K	CHIP C 0.010UF K	
C363		CS77MP1A100M	CHIP TNTL 10UF 10WV	
C364		CK73HB1E682K	CHIP C 6800PF K	
C365		CK73HB1E103K	CHIP C 0.010UF K	
C367		CK73HB1A105K	CHIP C 1.0UF K	
C368,369		CK73HB1H102K	CHIP C 1000PF K	
C371		CK73HB1E103K	CHIP C 0.010UF K	
C372		CK73HB1A105K	CHIP C 1.0UF K	
C373-375		CK73HB1E104K	CHIP C 0.10UF K	
C376		CK73HB1E682K	CHIP C 6800PF K	
C377		CK73HB1E104K	CHIP C 0.10UF K	
C378		CS77MP1A100M	CHIP TNTL 10UF 10WV	
C379		CC73HCH1H101J	CHIP C 100PF J	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
C380		CC73HCH1H030B	CHIP C 3.0PF B	
C381,382		CK73HB1E103K	CHIP C 0.010UF K	
C383		CK73GB1E105K	CHIP C 1.0UF K	
C384-388		CK73HB1E104K	CHIP C 0.10UF K	
C389		CK73HB1E103K	CHIP C 0.010UF K	
C390		CK73GB1E105K	CHIP C 1.0UF K	
C391-394		CK73HB1E104K	CHIP C 0.10UF K	
C396		CK73GB0J475K	CHIP C 4.7UF K	
C397		CK73HB1E103K	CHIP C 0.010UF K	
C398,399		CK73HB1H102K	CHIP C 1000PF K	
C402-405		CK73GB0J106K	CHIP C 10UF K	
C501		CK73HB1E104K	CHIP C 0.10UF K	
C502		CK73HB1H471K	CHIP C 470PF K	
C503,504		CC73HCH1H101J	CHIP C 100PF J	
C506		CK73HB1C103K	CHIP C 0.010UF K	
C507		CC73HCH1H100B	CHIP C 10PF B	
C508		CK73HB1C103K	CHIP C 0.010UF K	
C509		CC73HCH1H100B	CHIP C 10PF B	
C511		CK73HB1C103K	CHIP C 0.010UF K	
C512		CC73HCH1H101J	CHIP C 100PF J	
C514		CK73HB1C103K	CHIP C 0.010UF K	
C515		CC73HCH1H101J	CHIP C 100PF J	
C516		CK73GB1E105K	CHIP C 1.0UF K	
C517-522		CC73HCH1H101J	CHIP C 100PF J	
C523		CK73HB1A104K	CHIP C 0.10UF K	
C524		CC73HCH1H101J	CHIP C 100PF J	
C525		CK73HB1A104K	CHIP C 0.10UF K	
C526		CC73HCH1H101J	CHIP C 100PF J	
C527		CK73HB1E682K	CHIP C 6800PF K	
C528,529		CC73HCH1H101J	CHIP C 100PF J	
C530		CK73HB1H471K	CHIP C 470PF K	
C531		CC73HCH1H101J	CHIP C 100PF J	
C532		CS77MA1VR15M	CHIP TNTL 0.15UF 35WV	
C533		C93-0787-05	CERAMIC 0.1UF 50WV	
C535		CS77BA1D100M	CHIP TNTL 10UF 20WV	
C538		C93-1906-05	CERAMIC 0.047UF 35WV	
C539		CK73HB1H472K	CHIP C 4700PF K	
C540		CC73HCH1H470J	CHIP C 47PF J	
C541		CK73HB0J105K	CHIP C 1.0UF K	
C542		CK73HB1H102K	CHIP C 1000PF K	
C543,544		CC73HCH1H101J	CHIP C 100PF J	
C545		CK73HB0J105K	CHIP C 1.0UF K	
C546		CK73HB1A104K	CHIP C 0.10UF K	
C547,548		CK73HB1H471K	CHIP C 470PF K	
C549		CC73HCH1H101J	CHIP C 100PF J	
C550,551		CK73HB1H471K	CHIP C 470PF K	
C552		CC73HCH1H070B	CHIP C 7.0PF B	
C553		CK73HB1A104K	CHIP C 0.10UF K	
C554		CC73HCH1H220G	CHIP C 22PF G	
C555		CK73HB1C103K	CHIP C 0.010UF K	
C556		CC73HCH1H030B	CHIP C 3.0PF B	
C557		CC73HCH1H270J	CHIP C 27PF J	
C558		CC73HCH1H470J	CHIP C 47PF J	
C559		CK73HB1A104K	CHIP C 0.10UF K	
C560,561		CC73HCH1H030B	CHIP C 3.0PF B	
C562		CK73FB0J106K	CHIP C 10UF K	
C563		CC73HCH1H100B	CHIP C 10PF B	
C564		CK73HB1A104K	CHIP C 0.10UF K	
C566		CC73HCH1H680J	CHIP C 68PF J	
C567		CK73HB1H471K	CHIP C 470PF K	

Ref. No.	Address	Parts No.	Description	Destination
C568-570		CK73HB1A104K	CHIP C 0.10UF K	
C572		CC73HCH1H180G	CHIP C 18PF G	
C573		CK73HB1H471K	CHIP C 470PF K	
C574		CC73HCH1HR75B	CHIP C 0.75PF B	
C575		CK73FB0J106K	CHIP C 10UF K	
C576		CC73HCH1H101J	CHIP C 100PF J	
C577		CC73HCH1H180G	CHIP C 18PF G	
C578		CC73HCH1H080B	CHIP C 8.0PF B	
C579		CC73HCH1H100B	CHIP C 10PF B	
C580		CC73HCH1H680J	CHIP C 68PF J	
C581,582		CC73HCH1H100B	CHIP C 10PF B	
C583		CK73GB0J475K	CHIP C 4.7UF K	
C584		CC73HCH1H1R5B	CHIP C 1.5PF B	
C585		CC73HCH1H100B	CHIP C 10PF B	
C586		CK73HB1H471K	CHIP C 470PF K	
C587		CK73GB1H103K	CHIP C 0.010UF K	
C588		CK73GB1H102K	CHIP C 1000PF K	
C589		CC73HCH1H820J	CHIP C 82PF J	
C590		CC73HCH1H020B	CHIP C 2.0PF B	
C591		CC73HCH1H180G	CHIP C 18PF G	
C592		CK73HB1H471K	CHIP C 470PF K	
C593,594		CC73HCH1H0R5B	CHIP C 0.5PF B	
C595-597		CK73HB1A104K	CHIP C 0.10UF K	
C598		CC73HCH1H100B	CHIP C 10PF B	
C599		CK73HB1H471K	CHIP C 470PF K	
C600		CK73FB0J106K	CHIP C 10UF K	
C601-603		CK73HB1H471K	CHIP C 470PF K	
C604		CK73HB1A104K	CHIP C 0.10UF K	
C605		CK73HB1C103K	CHIP C 0.010UF K	
C606		CK73HB1H102K	CHIP C 1000PF K	
C607		CK73HB1C103K	CHIP C 0.010UF K	
C608		CK73HB1A104K	CHIP C 0.10UF K	
C609		CK73HB1H471K	CHIP C 470PF K	
C611		CK73HB1H102K	CHIP C 1000PF K	
C612		CC73HCH1H100B	CHIP C 10PF B	
C613		CK73HB1H102K	CHIP C 1000PF K	
C614-616		CK73HB1A104K	CHIP C 0.10UF K	
C617		CC73HCH1H050B	CHIP C 5.0PF B	
C618		CC73HCH1H100B	CHIP C 10PF B	
C619		CK73HB1A104K	CHIP C 0.10UF K	
C620		CK73HB1H471K	CHIP C 470PF K	
C621		CK73FB1E474K	CHIP C 0.47UF K	
C622		CK73HB1C103K	CHIP C 0.010UF K	
C623		CK73HB1H102K	CHIP C 1000PF K	
C625		CK73HB1H102K	CHIP C 1000PF K	
C626		CK73HB1H471K	CHIP C 470PF K	
C627		CK73HB1C103K	CHIP C 0.010UF K	
C628		CC73HCH1H470G	CHIP C 47PF G	
C629		CK73HB1A104K	CHIP C 0.10UF K	
C630,631		CK73HB1C103K	CHIP C 0.010UF K	
C633		CC73HCH1H100B	CHIP C 10PF B	
C635		CC73HCH1H050B	CHIP C 5.0PF B	
C636		CC73HCH1H220G	CHIP C 22PF G	
C637		CC73HCH1H060B	CHIP C 6.0PF B	
C638		CK73HB1C103K	CHIP C 0.010UF K	
C639		CK73HB1H102K	CHIP C 1000PF K	
C640		CC73HCH1H470G	CHIP C 47PF G	
C641		CK73HB1H102K	CHIP C 1000PF K	
C642		CC73HCH1H270J	CHIP C 27PF J	
C643		CK73HB1C103K	CHIP C 0.010UF K	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
C644		CC73HCH1H270J	CHIP C 27PF J	
C645		CK73FB1A475K	CHIP C 4.7UF K	
C646		CK73HB1C103K	CHIP C 0.010UF K	
C647,648		CK73HB1H102K	CHIP C 1000PF K	
C649		CC73HCH1H560J	CHIP C 56PF J	
C650		CK73HB1H471K	CHIP C 470PF K	
C651		CC73HCH1H120G	CHIP C 12PF G	
C652		CC73HCH1H100B	CHIP C 10PF B	
C653		CC73HCH1H050B	CHIP C 5.0PF B	
C655		CK73HB1A104K	CHIP C 0.10UF K	
C656		CK73HB1H471K	CHIP C 470PF K	
C657		CC73HCH1H220G	CHIP C 22PF G	
C658		CK73HB1H102K	CHIP C 1000PF K	
C659		CC73HCH1H030B	CHIP C 3.0PF B	
C660		CK73HB1C103K	CHIP C 0.010UF K	
C661-663		CK73HB1H102K	CHIP C 1000PF K	
C664		CC73HCH1H100B	CHIP C 10PF B	
C665		CK73HB1A104K	CHIP C 0.10UF K	
C666		CC73HCH1H040B	CHIP C 4.0PF B	
C667		CK73HB1H102K	CHIP C 1000PF K	
C668		CC73HCH1H270J	CHIP C 27PF J	
C669		CK73HB1H102K	CHIP C 1000PF K	
C670		CC73HCH1H070B	CHIP C 7.0PF B	
C671		CC73HCH1H220J	CHIP C 22PF J	
C678		CK73HB1H102K	CHIP C 1000PF K	
C679		CK73HB1H471K	CHIP C 470PF K	
C681		CC73HCH1H220J	CHIP C 22PF J	
C682		CC73HCH1H100B	CHIP C 10PF B	
C684		CC73HCH1H040B	CHIP C 4.0PF B	
C685		CC73HCH1H390J	CHIP C 39PF J	
C686		CK73GB1E105K	CHIP C 1.0UF K	
C687		CK73HB1H102K	CHIP C 1000PF K	
C688		CC73HCH1H470J	CHIP C 47PF J	
C690		CK73HB1H471K	CHIP C 470PF K	
C691		CK73HB1A104K	CHIP C 0.10UF K	
C692		CK73HB1H102K	CHIP C 1000PF K	
C693		CK73GB1H104K	CHIP C 0.10UF K	
C695		CC73HCH1H1R5B	CHIP C 1.5PF B	
C696		CC73HCH1H470J	CHIP C 47PF J	
C698		CC73HCH1H270J	CHIP C 27PF J	
C700		CK73HB1H471K	CHIP C 470PF K	
C701		CS77MA1A6R8M	CHIP TNTL 6.8UF 10WV	
C702		CK73HB1H102K	CHIP C 1000PF K	
C703		CC73HCH1H020B	CHIP C 2.0PF B	
C704		CK73HB1H102K	CHIP C 1000PF K	
C706		CK73HB1C103K	CHIP C 0.010UF K	
C707		CC73HCH1H220J	CHIP C 22PF J	
C710		CC73GCH1H151J	CHIP C 150PF J	
C712,713		CK73HB1H471K	CHIP C 470PF K	
C714		CK73HB1H102K	CHIP C 1000PF K	
C716		CK73HB1H102K	CHIP C 1000PF K	
C717		CK73HB1C103K	CHIP C 0.010UF K	
C718		CK73GB1E105K	CHIP C 1.0UF K	
C719,720		CK73HB1H102K	CHIP C 1000PF K	
C721		CK73GB1C104K	CHIP C 0.10UF K	
C722		CK73GB1E105K	CHIP C 1.0UF K	
C725		CK73HB1C103K	CHIP C 0.010UF K	
C727		CK73HB1H471K	CHIP C 470PF K	
C731		CK73GB1H104K	CHIP C 0.10UF K	
C734		CC73HCH1H101J	CHIP C 100PF J	

Ref. No.	Address	Parts No.	Description	Destination
C735		CK73HB1H102K	CHIP C 1000PF K	
C736		CC73GCH1H220G	CHIP C 22PF G	
C741		CC73GCH1H070B	CHIP C 7.0PF B	
C742		CC73HCH1H330J	CHIP C 33PF J	
C743		CC73HCH1H100B	CHIP C 10PF B	
C744		CC73GCH1H680G	CHIP C 68PF G	
C745		CC73HCH1H030B	CHIP C 3.0PF B	
C748		CK73HB1H471K	CHIP C 470PF K	
C749,750		CC73HCH1H180J	CHIP C 18PF J	
C751		CC73HCH1H101J	CHIP C 100PF J	
C753		CC73HCH1H020B	CHIP C 2.0PF B	
C754		CC73HCH1H180G	CHIP C 18PF G	
C755		CK73HB1H471K	CHIP C 470PF K	
C756		CK73HB1H102K	CHIP C 1000PF K	
C758		CC73GCH1H680G	CHIP C 68PF G	
C759		CC73GCH1H090B	CHIP C 9.0PF B	
C763		CC73GCH1H120G	CHIP C 12PF G	
C764		CC73HCH1H180J	CHIP C 18PF J	
C766		CC73GCH1H270G	CHIP C 27PF G	
C767		CC73GCH1H150G	CHIP C 15PF G	
C768		CC73GCH1H220G	CHIP C 22PF G	
C769		CC73HCH1H120J	CHIP C 12PF J	
C772		CC73HCH1H080B	CHIP C 8.0PF B	
C773		CC73GCH1H120G	CHIP C 12PF G	
C774		CC73GCH1H220G	CHIP C 22PF G	
C775		CC73HCH1H180J	CHIP C 18PF J	
C776		CC73HCH1H390J	CHIP C 39PF J	
C778		CC73HCH1H120J	CHIP C 12PF J	
C779		CC73GCH1H270G	CHIP C 27PF G	
C781		CC73GCH1H470G	CHIP C 47PF G	
C782		CC73GCH1H330G	CHIP C 33PF G	
C783		CC73HCH1H101J	CHIP C 100PF J	
C801		CK73HB1A104K	CHIP C 0.10UF K	
C802		CK73HB0J105K	CHIP C 1.0UF K	
C803-806		CK73HB1A104K	CHIP C 0.10UF K	
C807,808		CK73HB1E103K	CHIP C 0.010UF K	
C809		CK73HB1H122K	CHIP C 1200PF K	
C810		CK73HB1H152K	CHIP C 1500PF K	
C811		CK73HB1A104K	CHIP C 0.10UF K	
C812-814		CK73HB1E103K	CHIP C 0.010UF K	
C815		CK73HB1H152K	CHIP C 1500PF K	
C816		CK73HB1A474K	CHIP C 0.47UF K	
C817		CK73HB1A104K	CHIP C 0.10UF K	
C818		CC73HCH1E181J	CHIP C 180PF J	
C819		CK73HB1E103K	CHIP C 0.010UF K	
C820		CK73HB1H331K	CHIP C 330PF K	
C821		CK73HB1A104K	CHIP C 0.10UF K	
C823		CK73HB1H331K	CHIP C 330PF K	
C824		CK73HB1H122K	CHIP C 1200PF K	
C825,826		CK73HB1E473K	CHIP C 0.047UF K	
C827		CK73HB1A104K	CHIP C 0.10UF K	
C829		CK73HB1A104K	CHIP C 0.10UF K	
C830		CK73HB1H102K	CHIP C 1000PF K	
C832		CK73HB1E682K	CHIP C 6800PF K	
C833		CK73HB0J105K	CHIP C 1.0UF K	
C834-836		CK73HB1E103K	CHIP C 0.010UF K	
C837,838		CK73HB1A104K	CHIP C 0.10UF K	
C839,840		CC73HCH1H470J	CHIP C 47PF J	
C842		CK73HB1A474K	CHIP C 0.47UF K	
C843,844		CK73GB0J475K	CHIP C 4.7UF K	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
C845		CK73HB1E103K	CHIP C 0.010UF K	
C846		CC73HCH1H470J	CHIP C 47PF J	
C847		CK73HB1A104K	CHIP C 0.10UF K	
C848		CC73HCH1H680J	CHIP C 68PF J	
C849		CC73HCH1H270J	CHIP C 27PF J	
C850		CK73HB1H332K	CHIP C 3300PF K	
C851		CK73HB1H681K	CHIP C 680PF K	
C852		CK73HB1E103K	CHIP C 0.010UF K	
C853,854		CK73HB1A104K	CHIP C 0.10UF K	
C856		CK73HB1C223K	CHIP C 0.022UF K	
C859		CK73HB1A104K	CHIP C 0.10UF K	
C860		CK73HB1E103K	CHIP C 0.010UF K	
C863		CC73HCH1H470J	CHIP C 47PF J	
C866		CK73HB0J105K	CHIP C 1.0UF K	
C867		CK73HB1E103K	CHIP C 0.010UF K	
C868,869		CK73HB0J105K	CHIP C 1.0UF K	
C870		CK73HB1H102K	CHIP C 1000PF K	
C872		CK73HB1A224K	CHIP C 0.22UF K	
C873		CC73HCH1H470J	CHIP C 47PF J	
C874		CK73HB1E103K	CHIP C 0.010UF K	
C875		CK73HB1H102K	CHIP C 1000PF K	
C876		CK73HB1E103K	CHIP C 0.010UF K	
C877		CK73HB0J105K	CHIP C 1.0UF K	
C878		CC73HCH1H150J	CHIP C 15PF J	
C879		CC73HCH1H680J	CHIP C 68PF J	
C880		CC73HCH1H100B	CHIP C 10PF B	
C881,882		CC73HCH1H101J	CHIP C 100PF J	
C883		CK73HB1A104K	CHIP C 0.10UF K	
C884		CC73HCH1H470J	CHIP C 47PF J	
C886		CK73HB1A104K	CHIP C 0.10UF K	
C887		CK73HB1A393K	CHIP C 0.039UF K	
C888		CK73HB0J105K	CHIP C 1.0UF K	
C889,890		CK73HB1A104K	CHIP C 0.10UF K	
C891,892		CK73HB1E103K	CHIP C 0.010UF K	
C893		CK73HB1H102K	CHIP C 1000PF K	
C894		CK73HB1E103K	CHIP C 0.010UF K	
C896,897		CK73HB1A104K	CHIP C 0.10UF K	
C898		CK73HB1H102K	CHIP C 1000PF K	
C899		CK73HB1E103K	CHIP C 0.010UF K	
C900		CK73HB1A224K	CHIP C 0.22UF K	
C901		CK73HB0J105K	CHIP C 1.0UF K	
C902		CS77MP1A100M	CHIP TNTL 10UF 10WV	
C903		CK73HB1A104K	CHIP C 0.10UF K	
C904		CK73HB1H471K	CHIP C 470PF K	
C905		CK73HB1A104K	CHIP C 0.10UF K	
C906		CK73HB1A563K	CHIP C 0.056UF K	
C907		CK73HB1A224K	CHIP C 0.22UF K	
C908		CK73HB1A104K	CHIP C 0.10UF K	
C909		CK73HB1A563K	CHIP C 0.056UF K	
C910		CK73HB1H102K	CHIP C 1000PF K	
C911		CK73HB0J105K	CHIP C 1.0UF K	
C912		CK73GB1E105K	CHIP C 1.0UF K	
C913		CK73HB1E103K	CHIP C 0.010UF K	
C914		CK73GB1E105K	CHIP C 1.0UF K	
C915,916		CK73HB1E103K	CHIP C 0.010UF K	
C917		CK73HB1H102K	CHIP C 1000PF K	
C918		CC73HCH1H470J	CHIP C 47PF J	
C919		CK73HB1H102K	CHIP C 1000PF K	
C920		CC73HCH1H101J	CHIP C 100PF J	
C921		CK73HB1H102K	CHIP C 1000PF K	

Ref. No.	Address	Parts No.	Description	Destination
C922		CC73HCH1H101J	CHIP C 100PF J	
C923		CK73HB1H102K	CHIP C 1000PF K	
C924-927		CC73HCH1H101J	CHIP C 100PF J	
C928		CK73HB1E682K	CHIP C 6800PF K	
C929,930		CC73HCH1H101J	CHIP C 100PF J	
C931,932		CK73HB1H102K	CHIP C 1000PF K	
C933		CK73HB1E103K	CHIP C 0.010UF K	
CN10		E04-0496-05	PIN SOCKET(GPS)	
CN201		E41-3185-05	FLAT CABLE CONNECTOR(10P)	
CN202		E23-1263-15	TERMINAL	
CN301		E40-6422-15	SOCKET FOR PIN ASSY(50P)	
CN307		E40-6586-05	PIN ASSY(20P)	
CN321		E40-6389-05	SOCKET FOR PIN ASSY(26P)	
CN505		E23-1262-05	TERMINAL	
CN804		E41-3167-05	FLAT CABLE CONNECTOR(14P)	
CN805		E41-1486-05	PIN ASSY(2P)	
CN806		E40-6853-05	FLAT CABLE CONNECTOR(5P)	
F201		F53-0324-05	FUSE (2.5A)	
F301		F53-0360-05	FUSE (0.25A)	
CN203		J19-5386-05	HOLDER (LITHIUM CELL)	
CF501		L72-1017-05	CERAMIC FILTER(450KHZ)	
CF502		L72-1040-05	CERAMIC FILTER(450KHZ)	
L15		L92-0487-05	CHIP FERRITE	
L16		L40-1075-92	SMALL FIXED INDUCTOR (10NH)	
L17		L79-1955-05	FILTER (GPS)	
L18		L40-1263-92	SMALL FIXED INDUCTOR (1.2NH)	
L19		L41-1561-55	SMALL FIXED INDUCTOR (1.5NH)	
L20		L40-1563-92	SMALL FIXED INDUCTOR (1.5NH)	
L101,102		L92-0408-05	CHIP FERRITE	
L203		L92-0408-05	CHIP FERRITE	
L204		L92-0149-05	CHIP FERRITE	
L205		L33-1494-05	SMALL FIXED INDUCTOR	
L206		L92-0466-05	CHIP FERRITE	
L207,208		L92-0162-05	BEADS CORE	
L209		L92-0467-05	CHIP FERRITE	
L212		L92-0467-05	CHIP FERRITE	
L213		L33-1530-05	SMALL FIXED INDUCTOR	
L214,215		L92-0467-05	CHIP FERRITE	
L216		L33-1462-05	SMALL FIXED INDUCTOR	
L301-303		L92-0444-05	CHIP FERRITE	
L304,305		L92-0162-05	BEADS CORE	
L306		L92-0444-05	CHIP FERRITE	
L307		L92-0162-05	BEADS CORE	
L308		L92-0444-05	CHIP FERRITE	
L309		L92-0162-05	CHIP FERRITE	
L310		L92-0444-05	BEADS CORE	
L311,312		L92-0162-05	CHIP FERRITE	
L313		L92-0444-05	BEADS CORE	
L314		L92-0162-05	CHIP FERRITE	
L315		L92-0444-05	BEADS CORE	
L316		L92-0140-05	BEADS CORE	
L317,318		L92-0444-05	BEADS CORE	
L319,320		L92-0162-05	CHIP FERRITE	
L501		L41-4795-39	SMALL FIXED INDUCTOR (4.7UH)	
L502-504		L92-0163-05	BEADS CORE	
L505		L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)	
L506		L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
L509-512		L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L513		L40-1575-92	SMALL FIXED INDUCTOR (15NH)	
L514		L40-5681-86	SMALL FIXED INDUCTOR (0.56UH)	
L515		L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L516		L40-1285-92	SMALL FIXED INDUCTOR (120NH)	
L517		L40-8275-92	SMALL FIXED INDUCTOR (82NH)	
L518		L40-5678-67	SMALL FIXED INDUCTOR (56NH)	
L519		L40-2778-67	SMALL FIXED INDUCTOR (27NH)	
L520		L92-0446-05	BEADS CORE	
L521		L41-4778-45	SMALL FIXED INDUCTOR (47NH)	
L522		L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)	
L523		L40-1878-92	SMALL FIXED INDUCTOR (18NH)	
L524,525		L40-3391-86	SMALL FIXED INDUCTOR (3.3UH)	
L526		L40-1085-57	SMALL FIXED INDUCTOR (100NH)	
L527		L40-8275-92	SMALL FIXED INDUCTOR (82NH)	
L528		L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)	
L529		L40-1285-71	SMALL FIXED INDUCTOR (120NH)	
L530		L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L531		L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)	
L532		L92-0138-05	CHIP FERRITE	
L533		L40-1285-92	SMALL FIXED INDUCTOR (120NH)	
L534		L40-2702-86	SMALL FIXED INDUCTOR (27UH)	
L535		L92-0138-05	CHIP FERRITE	
L536		L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L537		L41-2785-39	SMALL FIXED INDUCTOR (0.27UH)	
L538		L41-5685-39	SMALL FIXED INDUCTOR (0.56UH)	
L539,540		L40-3375-92	SMALL FIXED INDUCTOR (33NH)	
L541		L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L542		L92-0138-05	CHIP FERRITE	
L543		L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L544		L41-2285-14	SMALL FIXED INDUCTOR (220NH)	
L545		L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L546		L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L548		L41-1085-43	SMALL FIXED INDUCTOR (100NH)	
L549		L92-0149-05	CHIP FERRITE	
L550		L40-3375-92	SMALL FIXED INDUCTOR (33NH)	
L551		L92-0138-05	CHIP FERRITE	
L553		L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L554		L34-4576-05	AIR-CORE COIL	
L555		L92-0149-05	CHIP FERRITE	
L556		L34-4563-05	AIR-CORE COIL	
L557		L34-4564-05	AIR-CORE COIL	
L558		L34-4565-05	AIR-CORE COIL	
L559		L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L560		L41-2295-39	SMALL FIXED INDUCTOR (2.2UH)	
L561		L34-4577-05	AIR-CORE COIL	
L562,563		L34-4566-05	AIR-CORE COIL	
L564		L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L565		L34-4566-05	AIR-CORE COIL	
L566		L40-5675-92	SMALL FIXED INDUCTOR (56NH)	
L802		L92-0140-05	CHIP FERRITE	
L803-806		L92-0408-05	CHIP FERRITE	
L807		L92-0140-05	CHIP FERRITE	
X301		L77-1802-05	CRYSTAL RESONATOR (32.768KHZ)	
X302		L77-3015-05	TCXO (18.432MHZ)	
X501		L77-3014-05	TCXO (19.2MHZ)	
XF501		L71-0679-05	MCF (58.05MHZ)	
CP801		RK743HB1J101J	CHIP-CM 100 J 1/16W	

Ref. No.	Address	Parts No.	Description	Destination
R14		RK73HB1J471J	CHIP R 470 J 1/16W	
R15		RK73HB1J120J	CHIP R 12 J 1/16W	
R16		RK73HB1J391J	CHIP R 3970 J 1/16W	
R17		RK73HB1J471J	CHIP R 470 J 1/16W	
R18		RK73HB1J0001J	CHIP R 0.0 J 1/16W	
R121,122		RK73HH1J104D	CHIP R 100K D 1/16W	
R125,126		RK73HH1J223D	CHIP R 22K D 1/16W	
R129		RK73HB1J333J	CHIP R 33K J 1/16W	
R132		RK73HB1J223J	CHIP R 22K J 1/16W	
R134		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R201		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R202		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R203		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R204		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R205-208		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R210,211		RK73HB1J683J	CHIP R 68K J 1/16W	
R212		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R213		RK73HB1J100J	CHIP R 10 J 1/16W	
R214		RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R216		RK73HH1J683D	CHIP R 68K D 1/16W	
R217		RK73HH1J333D	CHIP R 33K D 1/16W	
R218		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R219		RK73HB1J474J	CHIP R 470K J 1/16W	
R220		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R221		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R222		RK73HB1J474J	CHIP R 470K J 1/16W	
R224		RK73HB1J474J	CHIP R 470K J 1/16W	
R226		RK73HB1J471J	CHIP R 470 J 1/16W	
R227-230		RK73HB1J104J	CHIP R 100K J 1/16W	
R231		RK73HB1J564J	CHIP R 560K J 1/16W	
R232		RK73HB1J154J	CHIP R 150K J 1/16W	
R233		RK73HB1J473J	CHIP R 47K J 1/16W	
R234		RK73HB1J474J	CHIP R 470K J 1/16W	
R235		RK73HB1J103J	CHIP R 10K J 1/16W	
R236-242		RK73HB1J474J	CHIP R 470K J 1/16W	
R243		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R244,245		RK73HB1J473J	CHIP R 47K J 1/16W	
R246		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R247		RK73HB1J103J	CHIP R 10K J 1/16W	
R248		RK73HB1J474J	CHIP R 470K J 1/16W	
R249		RK73HB1J103J	CHIP R 10K J 1/16W	
R250		RK73HB1J474J	CHIP R 470K J 1/16W	
R251		RK73HB1J103J	CHIP R 10K J 1/16W	
R253		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R254		RK73HB1J474J	CHIP R 470K J 1/16W	
R255		RK73HB1J330J	CHIP R 33 J 1/16W	
R256		RK73HB1J103J	CHIP R 10K J 1/16W	
R257		RK73HB1J474J	CHIP R 470K J 1/16W	
R258		RK73GB2A100J	CHIP R 10 J 1/10W	
R259		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R260		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R261		RK73HB1J154J	CHIP R 150K J 1/16W	
R263		RK73HB1J391J	CHIP R 390 J 1/16W	
R264		RK73HB1J123J	CHIP R 12K J 1/16W	
R265		RK73HB1J100J	CHIP R 10 J 1/16W	
R266		RK73HB1J821J	CHIP R 820 J 1/16W	
R267		RK73HB1J273J	CHIP R 27K J 1/16W	
R268		RK73HH1J334D	CHIP R 330K D 1/16W	
R269		RK73HH1J223D	CHIP R 22K D 1/16W	
R271		RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
R272,273		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R275		RK73HB1J473J	CHIP R 47K J 1/16W	
R301,302		RK73HB1J103J	CHIP R 10K J 1/16W	
R303		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R304,305		RK73HB1J101J	CHIP R 100 J 1/16W	
R306		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R307		RK73HB1J101J	CHIP R 100 J 1/16W	
R308		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R310,311		RK73HB1J104J	CHIP R 100K J 1/16W	
R313-317		RK73HB1J104J	CHIP R 100K J 1/16W	
R319		RK73HB1J104J	CHIP R 100K J 1/16W	
R320		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R321		RK73HB1J474J	CHIP R 470K J 1/16W	
R322		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R323		RK73HB1J473J	CHIP R 47K J 1/16W	
R324		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R325		RK73HB1J104J	CHIP R 100K J 1/16W	
R326		RK73HB1J473J	CHIP R 47K J 1/16W	
R327		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R328		RK73HB1J331J	CHIP R 330 J 1/16W	
R329		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R330		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R331		RK73HB1J473J	CHIP R 47K J 1/16W	
R333		RK73HB1J104J	CHIP R 100K J 1/16W	
R336		RK73HB1J104J	CHIP R 100K J 1/16W	
R338-340		RK73HB1J104J	CHIP R 100K J 1/16W	
R342-344		RK73HB1J104J	CHIP R 100K J 1/16W	
R345		RK73HB1J103J	CHIP R 10K J 1/16W	
R346		RK73HB1J104J	CHIP R 100K J 1/16W	
R347		RK73HB1J474J	CHIP R 470K J 1/16W	
R348		RK73HB1J331J	CHIP R 330 J 1/16W	
R349,350		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R352-359		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R361-363		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R364,365		RK73HB1J104J	CHIP R 100K J 1/16W	
R366		RK73HB1J473J	CHIP R 47K J 1/16W	
R367,368		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R369,370		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R372,373		RK73HB1J220J	CHIP R 22 J 1/16W	
R374		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R375-378		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R379		RK73HH1J104D	CHIP R 100K D 1/16W	
R380		RK73HB1J104J	CHIP R 100K J 1/16W	
R381		RK73HB1J1214J	CHIP R 120 J 1/16W	
R382		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R383		RK73HB1J104J	CHIP R 100K J 1/16W	
R384		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R386		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R387		RK73HB1J223J	CHIP R 22K J 1/16W	
R389		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R390-392		RK73HB1J104J	CHIP R 100K J 1/16W	
R393		RK73HH1J103D	CHIP R 10K D 1/16W	
R394,395		RK73HB1J104J	CHIP R 100K J 1/16W	
R396		RK73HB1J183J	CHIP R 18K J 1/16W	
R397		RK73HB1J104J	CHIP R 100K J 1/16W	
R398		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R399-401		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R403-408		RK73HB1J104J	CHIP R 100K J 1/16W	
R409		RK73HB1J473J	CHIP R 47K J 1/16W	
R411		RK73HB1J473J	CHIP R 47K J 1/16W	

Ref. No.	Address	Parts No.	Description	Destination
R412,413		RK73HB1J104J	CHIP R 100K J 1/16W	
R414-419		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R420-423		RK73HB1J104J	CHIP R 100K J 1/16W	
R424		RK73HB1J471J	CHIP R 470 J 1/16W	
R426,427		RK73HB1J474J	CHIP R 470K J 1/16W	
R428		RK73HB1J101J	CHIP R 100 J 1/16W	
R429		RK73HB1J474J	CHIP R 470K J 1/16W	
R431,432		RK73HB1J104J	CHIP R 100K J 1/16W	
R433-435		RK73HB1J101J	CHIP R 100 J 1/16W	
R437,438		RK73HB1J104J	CHIP R 100K J 1/16W	
R440		RK73HB1J103J	CHIP R 10K J 1/16	
R442		RK73HB1J104J	CHIP R 100K J 1/16W	
R443		RK73HB1J100J	CHIP R 10 J 1/16W	
R445		RK73HB1J100J	CHIP R 10 J 1/16W	
R446		RK73HB1J473J	CHIP R 47K J 1/16W	
R447		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R448		RK73HB1J474J	CHIP R 470K J 1/16W	
R449		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R450		RK73HB1J473J	CHIP R 47K J 1/16W	
R501,502		RN73HH1J104D	CHIP R 100K D 1/16W	
R503		RK73HB1J101J	CHIP R 100 J 1/16W	
R506		RK73HB1J101J	CHIP R 100 J 1/16W	
R509-511		RK73HB1J100J	CHIP R 10 J 1/16W	
R512,513		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R515		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R516		RK73HB1J473J	CHIP R 47K J 1/16W	
R517-520		RK73HB1J100J	CHIP R 10 J 1/16W	
R521		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R524		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R525		RK73HB1J100J	CHIP R 10 J 1/16W	
R526		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R528		RK73HB1J100J	CHIP R 10 J 1/16W	
R530		RK73HH1J184D	CHIP R 180K D 1/16W	
R531		RK73HH1J473D	CHIP R 47K D 1/16W	
R532		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R533		RK73HB1J106J	CHIP R 10M J 1/16W	
R534		RK73HH1J474D	CHIP R 470K D 1/16W	
R535		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R536		RK73HB1J473J	CHIP R 47K J 1/16W	
R537		RK73HB1J683J	CHIP R 68K J 1/16W	
R538,539		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R540		RK73HB1J121J	CHIP R 120 J 1/16W	
R542		RK73HH1J391D	CHIP R 390 D 1/16W	
R543		RK73HB1J104J	CHIP R 100K J 1/16W	
R544		RK73HB1J103J	CHIP R 10K J 1/16W	
R545,546		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R547		RK73HB1J104J	CHIP R 100K J 1/16W	
R549,550		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R551		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R552		RK73HB1J103J	CHIP R 10K J 1/16W	
R553		RK73HB1J223J	CHIP R 22K J 1/16W	
R554		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R555,556		RK73HB1J473J	CHIP R 47K J 1/16W	
R557,558		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R559		RK73HB1J183J	CHIP R 18K J 1/16W	
R560		RK73HB1J124J	CHIP R 120K J 1/16W	
R561		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R562		RK73HB1J561J	CHIP R 560 J 1/16W	
R563		RK73HB1J224J	CHIP R 220K J 1/16W	
R564		RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
R565		RK73HB1J470J	CHIP R 47 J 1/16W	
R566		RK73HB1J334J	CHIP R 330K J 1/16W	
R567		RK73HB1J152J	CHIP R 1.5K J 1/16W	
R568,569		RK73HB1J100J	CHIP R 10 J 1/16W	
R570		RK73HB1J223J	CHIP R 22K J 1/16W	
R572		RK73HB1J104J	CHIP R 100K J 1/16W	
R573		RK73HB1J474J	CHIP R 470K J 1/16W	
R575		RK73HB1J123J	CHIP R 12K J 1/16W	
R576		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R579		RK73HH1J331D	CHIP R 330 D 1/16W	
R580		RK73HH1J271D	CHIP R 270 D 1/16W	
R581		RK73HB1J103J	CHIP R 10K J 1/16W	
R582		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R583		RK73HB1J223J	CHIP R 22K J 1/16W	
R584,585		RK73HB1J220J	CHIP R 22 J 1/16W	
R586		RK73HB1J103J	CHIP R 10K J 1/16W	
R587		RK73HB1J474J	CHIP R 470K J 1/16W	
R588		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R590		RK73HB1J103J	CHIP R 10K J 1/16W	
R591		RK73HB1J223J	CHIP R 22K J 1/16W	
R592,593		RK73HB1J473J	CHIP R 47K J 1/16W	
R594		RK73HB1J183J	CHIP R 18K J 1/16W	
R595		RK73HB1J154J	CHIP R 150K J 1/16W	
R596		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R597		RK73HB1J274J	CHIP R 270K J 1/16W	
R598		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R599		RK73HB1J101J	CHIP R 100 J 1/16W	
R600		RK73HB1J560J	CHIP R 56 J 1/16W	
R601		RK73HB1J331J	CHIP R 330 J 1/16W	
R603		RK73HB1J104J	CHIP R 100K J 1/16W	
R604		RK73HB1J103J	CHIP R 10K J 1/16W	
R605		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R606		RK73HB1J223J	CHIP R 22K J 1/16W	
R607		RK73HB1J563J	CHIP R 56K J 1/16W	
R608		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R609		RK73HB1J103J	CHIP R 10K J 1/16W	
R610		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R611		RK73HB1J103J	CHIP R 10K J 1/16W	
R613		RK73HB1J183J	CHIP R 18K J 1/16W	
R614		RK73HB1J271J	CHIP R 270 J 1/16W	
R615		RK73HB1J221J	CHIP R 220 J 1/16W	
R617		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R618		RK73HB1J473J	CHIP R 47K J 1/16W	
R619		RK73HB1J123J	CHIP R 12K J 1/16W	
R620		RK73HB1J103J	CHIP R 10K J 1/16W	
R621		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R622		RK73HB1J564J	CHIP R 560K J 1/16W	
R623		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R624		RK73HB1J103J	CHIP R 10K J 1/16W	
R625		RK73HB1J104J	CHIP R 100K J 1/16W	
R626		RK73HB1J470J	CHIP R 47 J 1/16W	
R628		RK73HB1J221J	CHIP R 220 J 1/16W	
R630		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R631		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R632		RK73HB1J104J	CHIP R 100K J 1/16W	
R633		RK73HB1J272J	CHIP R 2.7K J 1/16W	
R634		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R635		RK73HB1J221J	CHIP R 220 J 1/16W	
R637		RK73HB1J182J	CHIP R 1.8K J 1/16W	
R638		RK73HB1J470J	CHIP R 47 J 1/16W	

Ref. No.	Address	Parts No.	Description	Destination
R640		RK73HB1J101J	CHIP R 100 J 1/16W	
R641		RK73HB1J103J	CHIP R 10K J 1/16W	
R642		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R643		RK73HB1J681J	CHIP R 680 J 1/16W	
R644		RK73HB1J151J	CHIP R 150 J 1/16W	
R645		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R646		RK73HB1J331J	CHIP R 330 J 1/16W	
R647		RK73HB1J223J	CHIP R 22K J 1/16W	
R648,649		RK73HB1J823J	CHIP R 82K J 1/16W	
R650		RK73HB1J331J	CHIP R 330 J 1/16W	
R651,652		RK73HB1J823J	CHIP R 82K J 1/16W	
R653		RK73HB1J180J	CHIP R 18 J 1/16W	
R654		RK73HB1J331J	CHIP R 330 J 1/16W	
R655		RK73HB1J223J	CHIP R 22K J 1/16W	
R656		RK73HB1J473J	CHIP R 47K J 1/16W	
R657		RK73HB1J470J	CHIP R 47 J 1/16W	
R658		RK73HB1J103J	CHIP R 10K J 1/16W	
R660		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R661		RK73HB1J273J	CHIP R 27K J 1/16W	
R662		RK73HB1J331J	CHIP R 330 J 1/16W	
R663		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R664		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R665		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R666		RK73HB1J561J	CHIP R 560 J 1/16W	
R667		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R669		RK73HB1J104J	CHIP R 100K J 1/16W	
R670		RK73HB1J224J	CHIP R 220K J 1/16W	
R671		RK73HB1J104J	CHIP R 100K J 1/16W	
R672		RK73HB1J561J	CHIP R 560 J 1/16W	
R674		RK73HB1J470J	CHIP R 47 J 1/16W	
R675		RK73HB1J223J	CHIP R 22K J 1/16W	
R677		RK73HB1J473J	CHIP R 47K J 1/16W	
R678		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R682		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R683		RK73HB1J103J	CHIP R 10K J 1/16W	
R685		RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R686		RK73HB1J680J	CHIP R 68 J 1/16W	
R687		RK73HB1J221J	CHIP R 220 J 1/16W	
R688		RK73HB1J103J	CHIP R 10K J 1/16W	
R689,690		RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R691,692		RK73HH1J154D	CHIP R 150K D 1/16W	
R695		RK73HH1J184D	CHIP R 180K D 1/16W	
R696		RK73HB1J104J	CHIP R 100K J 1/16W	
R697		RK73HB1J823J	CHIP R 82K J 1/16W	
R698		RK73HB1J154J	CHIP R 150K J 1/16W	
R699		RK73HB1J224J	CHIP R 220K J 1/16W	
R700		RK73HB1J104J	CHIP R 100K J 1/16W	
R701		RK73HH1J184D	CHIP R 180K D 1/16W	
R705		RK73HB1J104J	CHIP R 100K J 1/16W	
R706,707		RK73HH1J184D	CHIP R 180K D 1/16W	
R713		RK73HB1J103J	CHIP R 10K J 1/16W	
R714		RK73HB1J271J	CHIP R 270 J 1/16W	
R715		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R716		RK73HB1J271J	CHIP R 270 J 1/16W	
R717		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R718		RK73HB1J473J	CHIP R 47K J 1/16W	
R719		RK73HB1J104J	CHIP R 100K J 1/16W	
R720		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R721		RK73HB1J474J	CHIP R 470K J 1/16W	
R722		RK73HB1J104J	CHIP R 100K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
R724		RK73HB1J182J	CHIP R 1.8K J 1/16W	
R725		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R726,727		RK73HB1J104J	CHIP R 100K J 1/16W	
R729		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R732		RK73EB2E823J	CHIP R 82K J 1/4W	
R733,734		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R801-804		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R805		RK73HB1J473J	CHIP R 47K J 1/16W	
R807		RK73HB1J473J	CHIP R 47K J 1/16W	
R808		RK73HB1J563J	CHIP R 56K J 1/16W	
R809		RK73HB1J223J	CHIP R 22K J 1/16W	
R810		RK73HB1J153J	CHIP R 15K J 1/16W	
R811		RK73HB1J682J	CHIP R 6.8K J 1/16W	
R812		RK73HB1J563J	CHIP R 56K J 1/16W	
R813		RK73HB1J103J	CHIP R 10K J 1/16W	
R814		RK73HB1J683J	CHIP R 68K J 1/16W	
R815		RK73HB1J103J	CHIP R 10K J 1/16W	
R816		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R819		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R820		RK73HB1J223J	CHIP R 22K J 1/16W	
R821		RK73HB1J104J	CHIP R 100K J 1/16W	
R823		RK73HB1J223J	CHIP R 22K J 1/16W	
R824		RK73HB1J334J	CHIP R 330K J 1/16W	
R825		RK73HB1J223J	CHIP R 22K J 1/16W	
R826		RK73HB1J103J	CHIP R 10K J 1/16W	
R827,828		RK73HB1J223J	CHIP R 22K J 1/16W	
R829		RK73HB1J564J	CHIP R 560K J 1/16W	
R830		RK73HB1J103J	CHIP R 10K J 1/16W	
R831		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R832,833		RK73HB1J473J	CHIP R 47K J 1/16W	
R834,835		RK73HB1J683J	CHIP R 68K J 1/16W	
R836		RK73HB1J183J	CHIP R 18K J 1/16W	
R837		RK73HB1J473J	CHIP R 47K J 1/16W	
R838-840		RK73HB1J104J	CHIP R 100K J 1/16W	
R841		RK73HB1J183J	CHIP R 18K J 1/16W	
R842		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R843		RK73HB1J124J	CHIP R 120K J 1/16W	
R844		RK73HB1J104J	CHIP R 100K J 1/16W	
R845		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R846		RK73HB1J473J	CHIP R 47K J 1/16W	
R847		RK73HB1J154J	CHIP R 150K J 1/16W	
R848		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R849		RK73HB1J333J	CHIP R 33K J 1/16W	
R850		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R851,852		RK73HB1J104J	CHIP R 100K J 1/16W	
R853		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R854		RK73HB1J473J	CHIP R 47K J 1/16W	
R855		RK73HB1J823J	CHIP R 82K J 1/16W	
R856		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R857		RK73HB1J564J	CHIP R 560K J 1/16W	
R858		RK73HB1J473J	CHIP R 47K J 1/16W	
R859		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R860		RK73HB1J473J	CHIP R 47K J 1/16W	
R861,862		RK73HB1J823J	CHIP R 82K J 1/16W	
R863		RK73HB1J474J	CHIP R 470K J 1/16W	
R864		RK73HB1J103J	CHIP R 10K J 1/16W	
R865		RK73HB1J562J	CHIP R 5.6K J 1/16W	
R867		RK73HB1J103J	CHIP R 10K J 1/16W	
R868		RK73HB1J273J	CHIP R 27K J 1/16W	
R869		RK73HB1J104J	CHIP R 100K J 1/16W	

Ref. No.	Address	Parts No.	Description	Destination
R870		RK73HB1J471J	CHIP R 470 J 1/16W	
R871		RK73HB1J683J	CHIP R 68K J 1/16W	
R872		RK73HB1J104J	CHIP R 100K J 1/16W	
R873		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R874-876		RK73HB1J103J	CHIP R 10K J 1/16W	
R877		RK73HB1J104J	CHIP R 100K J 1/16W	
R878,879		RK73HB1J683J	CHIP R 68K J 1/16W	
R880		RK73HB1J153J	CHIP R 15K J 1/16W	
R883		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R885		RK73HB1J393J	CHIP R 39K J 1/16W	
R886		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R887		RK73HB1J333J	CHIP R 33K J 1/16W	
R888		RK73HB1J682J	CHIP R 6.8K J 1/16W	
R889		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R890		RK73HB1J474J	CHIP R 470K J 1/16W	
R891		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R892		RK73HB1J684J	CHIP R 680K J 1/16W	
R893		RK73HB1J473J	CHIP R 47K J 1/16W	
R894		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R896		RK73HB1J274J	CHIP R 270K J 1/16W	
R897		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R898		RK73HB1J153J	CHIP R 15K J 1/16W	
R899		RK73HB1J104J	CHIP R 100K J 1/16W	
R900		RK73HB1J153J	CHIP R 15K J 1/16W	
R901		RK73HB1J104J	CHIP R 100K J 1/16W	
R902		RK73HB1J474J	CHIP R 470K J 1/16W	
R903		RK73HB1J473J	CHIP R 47K J 1/16W	
R904		RK73HB1J683J	CHIP R 68K J 1/16W	
R905		RK73HB1J564J	CHIP R 560K J 1/16W	
R906		RK73HB1J123J	CHIP R 12K J 1/16W	
R907		RK73HB1J333J	CHIP R 33K J 1/16W	
R908		RK73HB1J334J	CHIP R 330K J 1/16W	
R909,910		RK73HB1J104J	CHIP R 100K J 1/16W	
R911		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R912		RK73HB1J564J	CHIP R 560K J 1/16W	
R913		RK73HB1J103J	CHIP R 10K J 1/16W	
R914		RK73HB1J104J	CHIP R 100K J 1/16W	
R915		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R916		RK73HB1J104J	CHIP R 100K J 1/16W	
R917		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R918		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R919		RK73HB1J471J	CHIP R 470 J 1/16W	
R920		RK73HB1J334J	CHIP R 330K J 1/16W	
R921		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R922		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R923		RK73HB1J104J	CHIP R 100K J 1/16W	
R924		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R925		RK73HB1J104J	CHIP R 100K J 1/16W	
R926		RK73HB1J471J	CHIP R 470 J 1/16W	
R927		RK73HB1J182J	CHIP R 1.8K J 1/16W	
R928		RK73HB1J103J	CHIP R 10K J 1/16W	
R929		RK73HB1J333J	CHIP R 33K J 1/16W	
R930,931		RK73HB1J104J	CHIP R 100K J 1/16W	
R932		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R933		RK73HH1J223D	CHIP R 22K D 1/16W	
R934		RK73HB1J393J	CHIP R 39K J 1/16W	
R935		RK73HH1J223D	CHIP R 22K D 1/16W	
R936		RK73HB1J334J	CHIP R 330K J 1/16W	
R937		RK73HB1J184J	CHIP R 180K J 1/16W	
R938,939		RK73HH1J104D	CHIP R 100K D 1/16W	

PARTS LIST

TX-RX UNIT (X57-9270-12)

Ref. No.	Address	Parts No.	Description	Destination
R940		RK73HB1J223J	CHIP R 22K J 1/16W	
R941		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R942		RK73HB1J822J	CHIP R 8.2K J 1/16W	
R943		RK73HB1J471J	CHIP R 470 J 1/16W	
R944,945		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R946		RK73HB1J473J	CHIP R 47K J 1/16W	
R947		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R948		RK73HB1J104J	CHIP R 100K J 1/16W	
R949,950		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R951		RK73HB1J473J	CHIP R 47K J 1/16W	
R952,953		RK73HB1J103J	CHIP R 10K J 1/16W	
R954,955		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R956		RK73HB1J101J	CHIP R 100 J 1/16W	
R957		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R958-961		RK73HB1J101J	CHIP R 100 J 1/16W	
R963,964		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R965		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R966		RK73HB1J000J	CHIP R 0.0 J 1/16W	
S201		S70-0483-05	TACT SWITCH	
D12,13		RN262CN	DIODE	
D101,102		HZC6.8-E	ZENER DIODE	
D113		DA2S101	DIODE	
D201		1SR154-400	DIODE	
D202-204		1SS388F	DIODE	
D205		KDS121-P	DIODE	
D206		HRB0502A	DIODE	
D207		DA2S101	DIODE	
D208		1SS400	DIODE	
D209		KDS121-P	DIODE	
D210		1SS388F	DIODE	
D211		KDR720F-P	DIODE	
D212		KDS121-P	DIODE	
D213		1SS388F	DIODE	
D301,302		1SS400	DIODE	
D501		1SS400	DIODE	
D502		KDS123E-P	DIODE	
D503		HVC376B	VARIABLE CAPACITANCE DIODE	
D504		1SV325F	VARIABLE CAPACITANCE DIODE	
D505		RN142S	DIODE	
D508-513		1SV282-F	VARIABLE CAPACITANCE DIODE	
D514		1SS400	DIODE	
D515		RN142S	DIODE	
D516		1SV278F	VARIABLE CAPACITANCE DIODE	
D517,518		RN142S	DIODE	
D519,520		HSC277	DIODE	
D523		HZU2ALL	ZENER DIODE	
D524,525		1SV305F	VARIABLE CAPACITANCE DIODE	
D526		HZU5CLL	ZENER DIODE	
D527		RN142S	DIODE	
D528		1SV305F	VARIABLE CAPACITANCE DIODE	
D529-532		RN142S	DIODE	
D533		1SV305F	VARIABLE CAPACITANCE DIODE	
D801-803		KDR731	DIODE	
D804		KDS123E-P	DIODE	
D805,806		DA2S101	DIODE	
D807		KDR731	DIODE	
D808-814		KDR720F-P	DIODE	
D815		EMZ6.8N	ZENER DIODE	
D816		NNCD6.8G-A	ZENER DIODE	

Ref. No.	Address	Parts No.	Description	Destination
D817		KDS123E-P	DIODE	
D818		NNCD6.8G-A	ZENER DIODE	
D819		KDS123E-P	DIODE	
D820		EMZ6.8N	ZENER DIODE	
IC11		NJG1143UA2	MOS-IC	
IC103		TPA6201A1DRBR	ANALOGUE IC	
IC201		XC6204B332D	MOS-IC	
IC202		XC9235A15CM1	MOS-IC	
IC203		XC6204B332D	MOS-IC	
IC204		TK11250CUCB	MOS-IC	
IC205		XC6204B502PR	MOS-IC	
IC206		LT1616ES6-PBF	ANALOGUE IC	
IC207		TK71733S	BI-POLAR IC	
IC208		BU7465HFV	MOS-IC	
IC209		XC61CC5602N-G	MOS-IC	
IC210		S-812C31BPI-G	ANALOGUE IC	
IC211		XC9101D09AK-G	ANALOGUE IC	
IC301		TC74LCX245FK	MOS-IC	
IC302		TC7WZ245FK-F	MOS-IC	
IC303		**Note 1**	ROM	
IC304		**Note 1**	DSP	
IC305		**Note 1**	SRAM	
IC306		XC6109C29AN-G	ANALOGUE IC	
IC307		TC7SH08FU-F	MOS-IC	
IC308		R2023T	MOS-IC	
IC309		**Note 1**	ASIC	
IC310		SM5023CNDH-G	MOS-IC	
IC311		PCA9535BS	MOS-IC	
IC312		TC7SH08FU-F	MOS-IC	
IC501		LM73CIMKX-0	MOS-IC	
IC503		SKY72300-362	MOS-IC	
IC504		LMC7101BIM5	MOS-IC	
IC505		BU7242NUX	MOS-IC	
IC506		MCP6021-E/OT	MOS-IC	
IC507		TK10931VTL-G	ANALOGUE IC	
IC508		BU7242NUX	MOS-IC	
IC509,510		TLV2381IDBV	MOS-IC	
IC511		TA75W01FUF	MOS-IC	
IC801		R2A20178NP	MOS-IC	
IC802		BU7465HFV	MOS-IC	
IC803		BU7242NUX	MOS-IC	
IC804		BU7465HFV	MOS-IC	
IC805,806		TC7W53FK (F)	MOS-IC	
IC807		BU7242NUX	MOS-IC	
IC808		74Hc1G66GW	MOS-IC	
IC809		BU7242NUX	MOS-IC	
IC810		TC7W53FK (F)	MOS-IC	
IC811		BU7242NUX	MOS-IC	
IC812		BU7465HFV	MOS-IC	
IC813		BU7242NUX	MOS-IC	
IC814		BU7465HFV	MOS-IC	
IC815		BU7242NUX	MOS-IC	
IC816		TC7W66FK-F	MOS-IC	
IC817		TPA6201A1DRBR	ANALOGUE IC	
IC818		NJM2880U105ZB	ANALOGUE IC	
IC819		TC7SET08FU-F	MOS-IC	
IC820		TC7WH126FK	MOS-IC	
IC821		TC7WT125FUF	MOS-IC	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-9270-12)
SUB(GPS) UNIT (X58-5240-11)

Ref. No.	Address	Parts No.	Description	Desti-nation
Q201		2SJ648-A	FET	
Q202		SSM3K15TE (F)	FET	
Q203,204		SSM6N16FE-F	FET	
Q205		EM6M2	FET	
Q206		2SA1955A-F	TRANSISTOR	
Q207		EMD12	TRANSISTOR	
Q208		2SA1955A-F	TRANSISTOR	
Q209,210		SSM3K15TE (F)	FET	
Q211		2SA1955A-F	TRANSISTOR	
Q212		SSM5H01TU-F	FET	
Q213		EMD12	TRANSISTOR	
Q214		UMG9N	TRANSISTOR	
Q215		EMD12	TRANSISTOR	
Q301		2SA1362-F (GR)	TRANSISTOR	
Q302		2SC4617 (S)	TRANSISTOR	
Q303		2SA1832 (GR)F	TRANSISTOR	
Q304		SSM3K15TE (F)	FET	
Q305		2SC4617 (S)	TRANSISTOR	
Q306		SSM3K15TE (F)	FET	
Q501		2SC5383-T111	TRANSISTOR	
Q502		2SK879-F (Y)	FET	
Q503		LTA014YEBFS8	TRANSISTOR	
Q504		SSM3K15TE (F)	FET	
Q505		EMD9	TRANSISTOR	
Q506		2SC5108 (Y)F	TRANSISTOR	
Q507		2SC5383-T111	TRANSISTOR	
Q508,509		2SK508NV (K52)	FET	
Q510		EM6M2	FET	
Q511		2SJ347F	FET	
Q512-514		2SC5636	TRANSISTOR	
Q515		2SC4215-F (Y)	TRANSISTOR	
Q516		2SK3077F	FET	
Q517		3SK318	FET	
Q518		RD01MUS1-T113	FET	
Q519		2SC5383-T111	TRANSISTOR	
Q520		RD07MVS1BT122	FET	
Q521		SSM3K15TE (F)	FET	
Q522		3SK294-FP	FET	
Q523		LTC044EEBFS8	TRANSISTOR	
Q525		2SK1824-A	FET	
Q526		EMD5	TRANSISTOR	
Q801		SSM3K15TE (F)	FET	
Q803		2SC4738 (GR)F	TRANSISTOR	
Q804		2SA1832 (GR)F	TRANSISTOR	
Q805		SSM3K15TE (F)	FET	
Q806		SSM6N16FE-F	FET	
Q807		2SJ243-A	FET	
Q808		2SC4617 (S)	TRANSISTOR	
Q809		KRC660U-P	TRANSISTOR	
Q810		2SB798AZCDLDK	TRANSISTOR	
Q811		SSM3K15TE (F)	FET	
Q812		2SJ347F	FET	
Q813		SSM6N16FE-F	FET	
TH504		ERTJ0EV104H	THERMISTOR (100K)	
TH801		ERTJ0EV104H	THERMISTOR (100K)	

Ref. No.	Address	Parts No.	Description	Desti-nation
SUB (GPS) UNIT (X58-5240-11)				
C1		CC73HCH1H180J	CHIP C 18PF J	
C2		CK73HB1A104K	CHIP C 0.10UF K	
C3		CK73HB1H102K	CHIP C 1000PF K	
C4		CK73GB0J106K	CHIP C 0.10UF K	
C5		CK73HB1A104K	CHIP C 0.10UF K	
C8		CC73HCH1H180J	CHIP C 18PF J	
C9		CK73HB1A104K	CHIP C 0.10UF	
C10,11		CK73HB1H102K	CHIP C 1000PF K	
C16		CC73HCH1H101J	CHIP C 100PF J	
C17		CK73HB1H102K	CHIP C 1000PF K	
C18		CC73HCH1H101J	CHIP C 100PF J	
C19		CK73HB1H102K	CHIP C 1000PF K	
C20		CK73HB1A474K	CHIP C 0.47UF K	
C21		CK73HB1H102K	CHIP C 1000PF K	
C22		CK73HB1A474K	CHIP C 0.47UF K	
C23		CK73GB0J106K	CHIP C 0.10UF K	
CN5		E04-0496-05	PIN SOCKET (4P)	
CN10		E40-6358-05	PIN ASSY SOCKET (26P)	
CN11		J19-5386-05	HOLDER (LITHIUM CELL)	
L1,2		L92-0138-05	CHIP FERRITE	
L3		L92-0163-05	BEADS CORE	
R4		RK73HB1J102J	CHIP R 1K J 1/16W	
R6		RK73HB1J471J	CHIP R 470 J 1/16W	
R7		RK73HB1J120J	CHIP R 12 J 1/16W	
R9,10		RK73HB1J101J	CHIP R 100 J 1/16W	
R11		RK73GB2A100J	CHIP R 10 J 1/10W	
R13		RK73HB1J471J	CHIP R 470 J 1/16W	
R17		RK73HB1J102J	CHIP R 1K J 1/16W	
R18		RK73GB2A000J	CHIP R 0.0 J 1/10W	
D2		1SS388F	DIODE	
IC1		W02-3768-05	CIRCUIT MODULE (GPS)	
IC2		TC7WH126FU-F	MOS IC	
IC4		BU31TD3WG	MOS IC	