

4

A

- B

C



(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Polyethylene Bag	See Contrast table (2)		11	Unit Box	See Contrast table (2)
	2	Cord Assy	QDP3013		12	Contain Box	See Contrast table (2)
*	3	Accessory Assy	See Contrast table (2)		13	Protector	QHP3016
	4	Screw	See Contrast table (2)		14	Case Assy	See Contrast table (2)
	5	Polyethylene Bag	CEG1160		15	Remote Control Unit	QXA3303
	6	Handle	QNC3021		16-1	Owner's Manual	See Contrast table (2)
	7	Screw Assy	See Contrast table (2)	*	16-2	Warranty Card	See Contrast table (2)
*	8	Polyethylene Bag	CEG-127	*	16-3	Service Network	See Contrast table (2)
	9	Screw	See Contrast table (2)				
	10	Screw	TRZ50P080FTC				

(2) CONTRAST TABLE

DEH-1300MP/XNUC, DEH-1350MP/XNES, DEH-1350MP/XNES1, DEH-1350MPG/XNES, DEH-1350MP/XNCN5 and DEH-1390MP/XNID are constructed the same except for the following:


Mark	No.	Description	DEH-1300MP/XNUC	DEH-1350MP/XNES	DEH-1350MP/XNES1
*	1	Polyethylene Bag	CEG1173	QEG3001	QEG3001
	3	Accessory Assy	QEA3008	QEA3009	QEA3009
	4	Screw	BPZ20P060FTC	Not used	Not used
	7	Screw Assy	YEA5072	YEA5082	YEA5082
	9	Screw	CRZ50P090FTC	Not used	Not used
	11	Unit Box	QHG3073	QHG3074	QHG3075
	12	Contain Box	QHL3073	QHL3074	QHL3075
	14	Case Assy	Not used	QXA3129	QXA3129
*	16-1	Owner's Manual	QRD3061	QRD3062	QRD3062
*	16-2	Warranty Card	CRY1276	Not used	CRY1250
*	16-3	Service Network	Not used	Not used	CRY1251

Mark	No.	Description	DEH-1350MPG/XNES	DEH-1350MP/XNCN5	DEH-1390MP/XNID
*	1	Polyethylene Bag	QEG3001	QEG3001	QEG3001
	3	Accessory Assy	QEA3009	QEA3009	QEA3009
	4	Screw	Not used	Not used	Not used
	7	Screw Assy	YEA5082	YEA5082	YEA5082
	9	Screw	Not used	Not used	Not used
	11	Unit Box	QHG3076	QHG3079	QHG3078
	12	Contain Box	QHL3076	QHL3079	QHL3078
	14	Case Assy	QXA3129	Not used	QXA3129
*	16-1	Owner's Manual	QRD3062	QRB3077	QRB3076
*	16-2	Warranty Card	Not used	YRY5002	CRY1304
*	16-3	Service Network	Not used	Not used	CRY1305

Owner's Manual, Installation Manual

Part No.	Language
QRD3061	English, French, Spanish(Espanol)
QRD3062	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian
QRB3077	Simplified Chinese
QRB3076	English

9.2 EXTERIOR

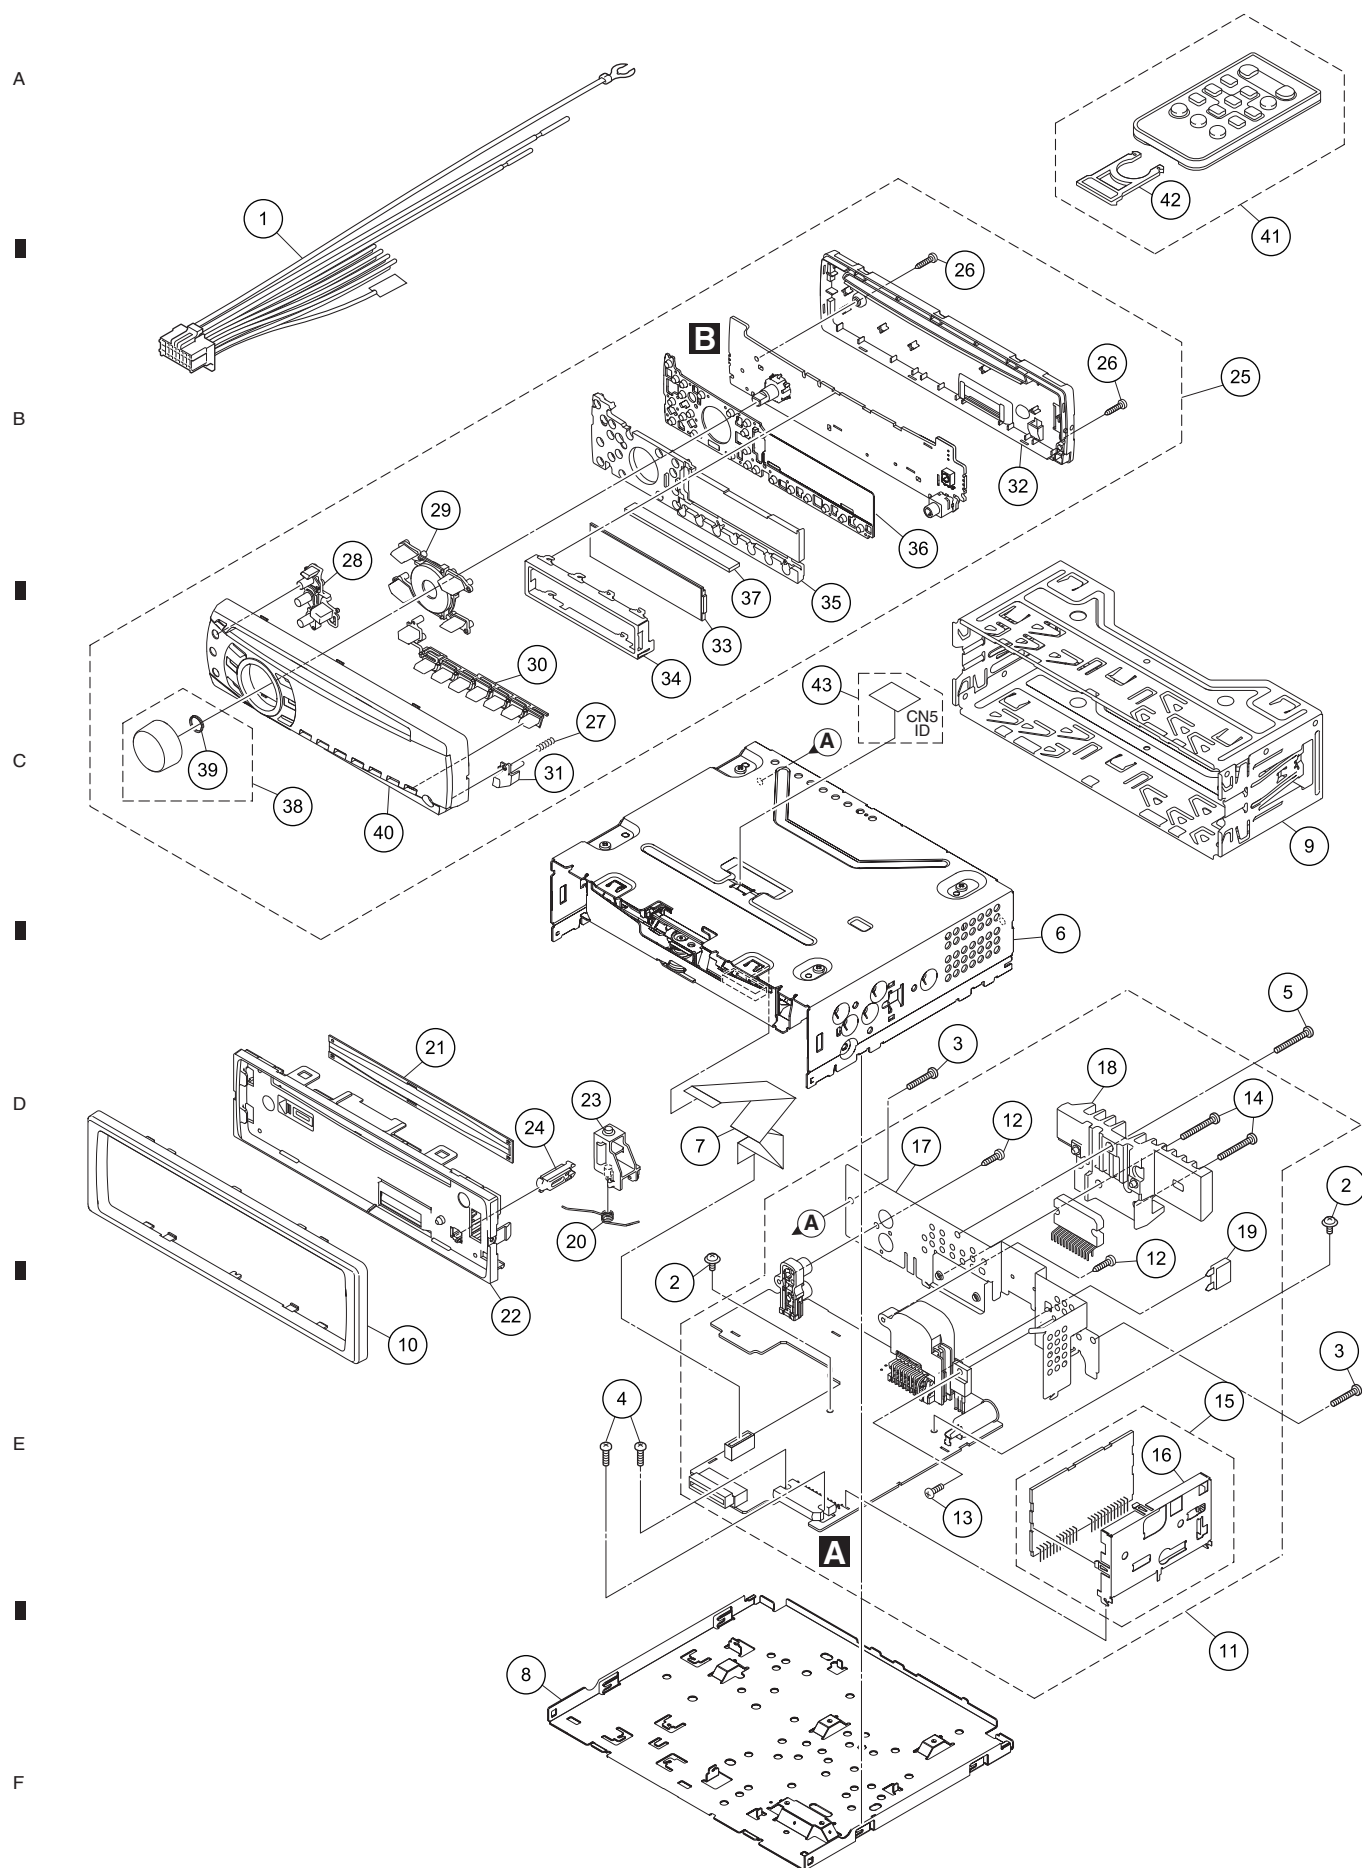

5

6


7

8

(1) EXTERIOR SECTION PARTS LIST

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
	1	Cord Assy	QDP3013	23	Arm	QNV3025	
	2	Screw	ASZ26P050FTC	24	Button	QNV3026	
	3	Screw	BSZ26P060FTC	25	Detachable Assy	See Contrast table (2)	
	4	Screw	BSZ26P080FTC				
	5	Screw	BSZ26P120FTC	26	Screw	BPZ20P100FTC	
				27	Spring	CBH2210	
	6	CD Mechanism Module(S11.1)	CXK5832	28	Button(EJECT, E, B, D, LEFT)	QAC3050	
	7	Cable	QDE3011	29	Button(AUDIO, FUNC, UP, DOWN)	QAC3051	
	8	Case	QNB3001	30	Button(RIGHT,- , 1-6)	QAC3052	
	9	Holder	QNC3020				
	10	Panel	QNS3127	31	Button(DETACH)	QAC3053	
				32	Cover	QNS3125	
	11	Tuner Amp Unit	See Contrast table (2)	33	LCD(V1801)	CAW2008	
	12	Screw	BPZ26P080FTC	34	Holder	QNC3027	
	13	Screw	BSZ26P060FTC	35	Lighting Conductor	QNV3022	
	14	Screw	BSZ26P120FTC				
	15	FM/AM Tuner Unit(U401)	CWE2256	36	Rubber	QNV3023	
				37	Connector	YNV5192	
	16	Holder	CND3466	38	Knob Unit	QXA3153	
	17	Holder	QNC3024	39	Spring	YBL5010	
	18	Heat Sink	QNR3002	40	Grille Unit	See Contrast table (2)	
⚠	19	Fuse (10 A)	YEK5001				
	20	Spring	QBH3001	41	Remote Control Unit	QXA3303	
				42	Cover	CNS7068	
	21	Cover	QNM3029	43	Label	See Contrast table (2)	
	22	Panel	QNS3126				

9.3 CD MECHANISM MODULE

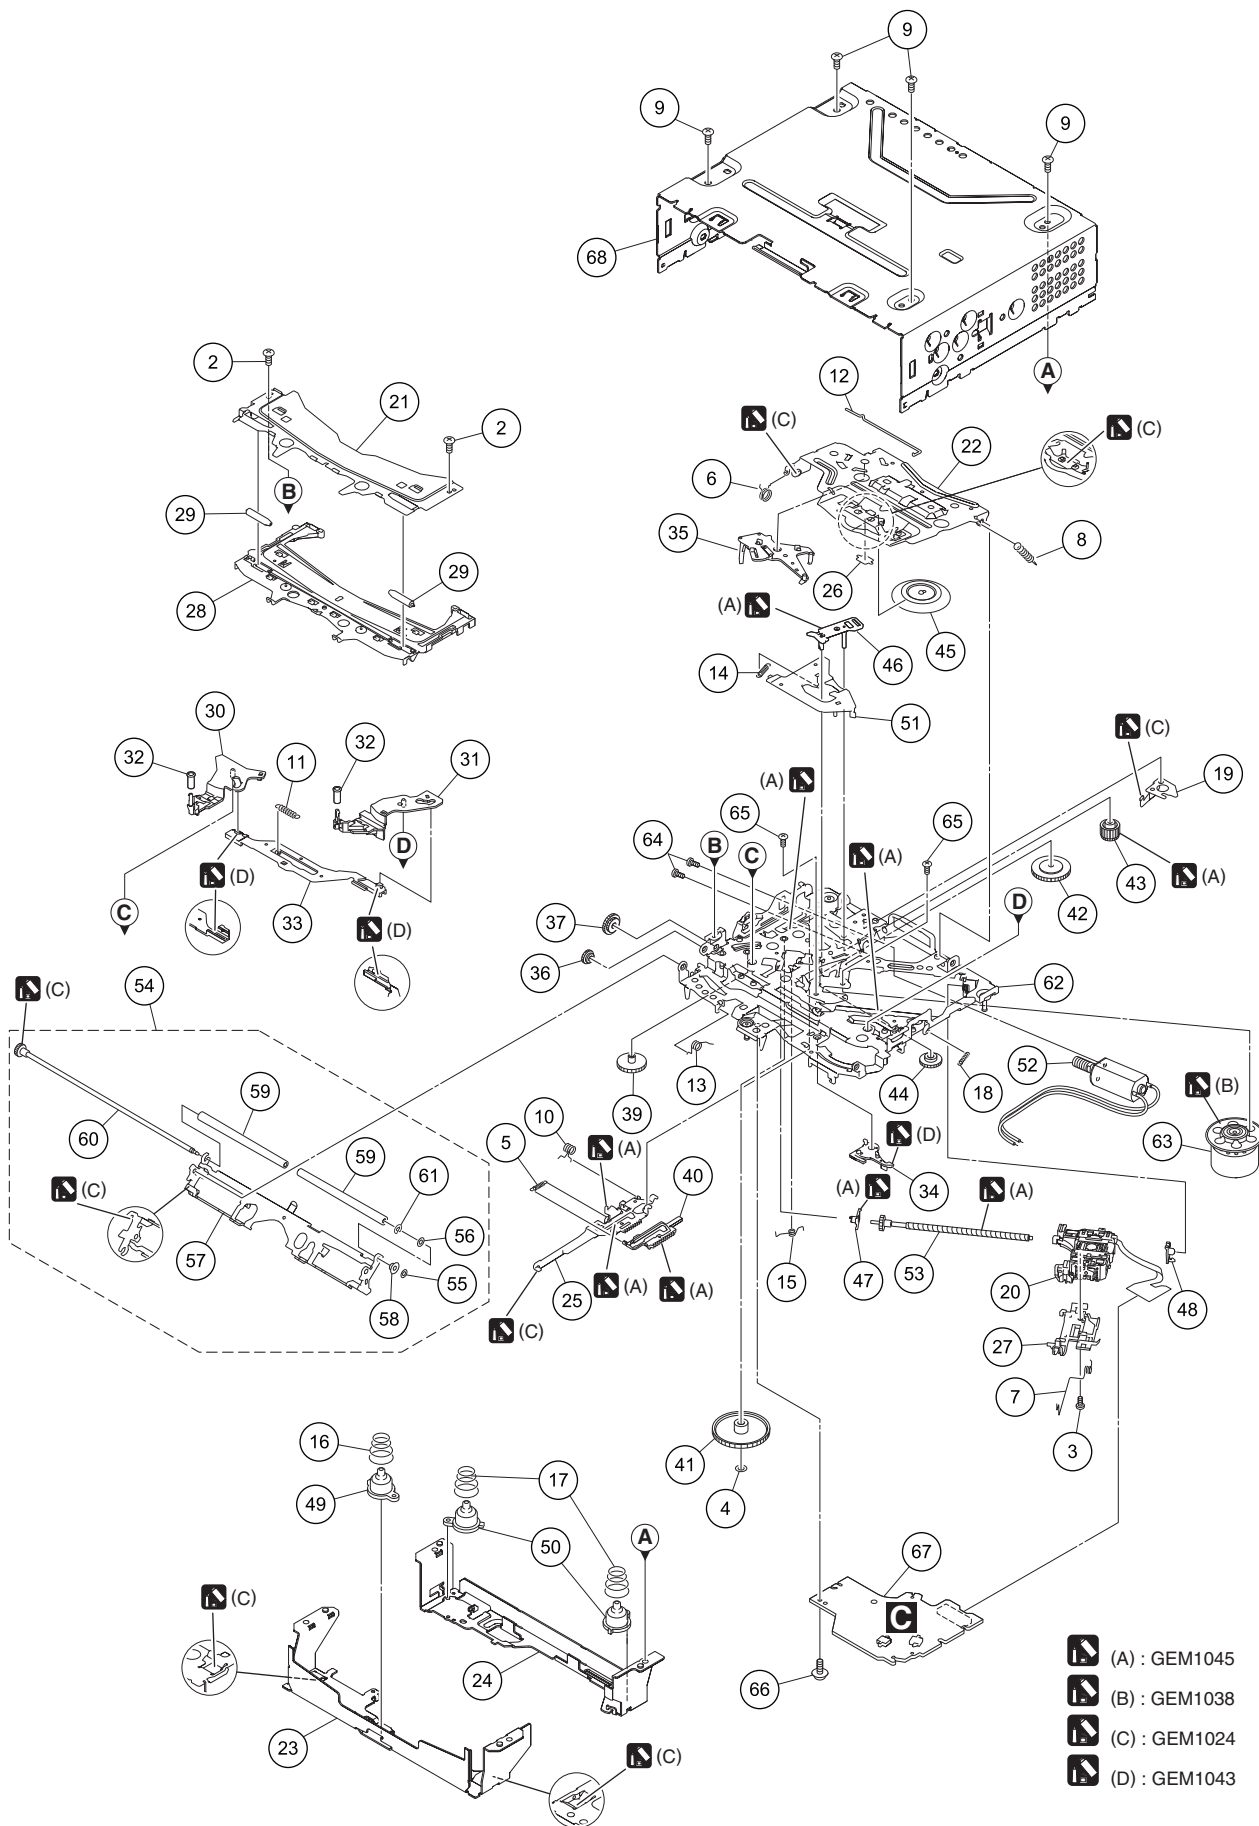

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(LOAD/CRG)(M2)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE3849	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND5886	
10	Spring	CBH3011	58	Collar	CNV6906	
11	Spring	CBH3012	59	Roller	CNW1196	
12	Spring	CBH3014	60	Gear Unit	CXC8893	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE3818	
15	Spring	CBH3017	63	Motor Unit(SPDL)(M1)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Spring	CBL1822	67	CD Core Unit (S11.1COMP)	CWX3957	
20	Pickup Unit(P10.5)(Service)	CXX1942	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Bracket	CND5709				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN2280				
27	Rack	CNV8342				
28	Guide	CNW1171				
29	Roller	CNW1172				D
30	Arm	CNW2157				
31	Arm	CNW1174				
32	Roller	CNW1175				
33	Lever	CNW1176				
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW1188				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

	Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
A : DEH-1300MP/XNUC			Q 803 (A,117,42) Transistor	LSA1576UB
B : DEH-1350MP/XNES			Q 921 (A,127,106) Transistor	LSC4081UB
C : DEH-1350MP/XNES1			D 301 (A,97,128) Diode	CRG03
D : DEH-1350MPG/XNES			D 302 (A,99,128) Diode	CRG03
E : DEH-1350MP/XNCN5			D 751 (A,137,134) Diode	RKZ8.2KG(B2)
F : DEH-1390MP/XNID				
Unit Number : QWM3162(A)			D 901 (A,138,126) Diode	1SR154-400
: QWM3163(B,C,D,F)			D 902 (A,136,126) Diode	1SR154-400
: QWM3164(E)			D 911 (A,130,52) Diode	CRG03
Unit Name : Tuner Amp Unit			D 912 (A,130,49) Diode	CRG03
Unit Number :			D 921 (A,132,106) Diode	RKZ6.8KG(B2)
Unit Name : Keyboard Unit			L 401 (A,140,58) Inductor	LCTAW2R2J2520
Unit Number : CWX3957			L 403 (A,153,63) Inductor	CTF1473
Unit Name : CD CORE UNIT(S11.1Comp)			L 602 (A,126,99) Inductor	CTF1473
A			L 604 (A,131,69) Chip Coil	LCTAW1R0J2520
Unit Number : QWM3162(A)			L 607 (A,137,83) Inductor	CTF1379
QWM3163(B,C,D,F)				
QWM3164(E)			L 608 (A,138,73) Chip Coil	LCTAW1R5J2520
Unit Name : Tuner Amp Unit			L 609 (A,139,71) Chip Coil	LCTAW1R5J2520
			L 610 (A,141,77) Inductor	LCTAW1R2J2520
			L 611 (A,143,72) Inductor	CTF1379
			L 612 (A,142,70) Inductor	CTF1379
			L 613 (A,137,81) Inductor	CTF1379
			L 614 (A,127,70) Inductor	CTF1379
			L 617 (A,137,86) Inductor	CTF1389
			L 621 (A,139,83) Inductor	CTF1389
			L 902 (A,113,142) Choke Coil 600 uH	CTH1432
			ZNR401 (A,152,113) Surge Protector	IMSA-6802-01Y900
			X 601 (A,146,79) Oscillator 74.1 MHz	CSS1758
			X 681 (A,119,63) Oscillator 4.718 6 MHz	CSS1796
			$\triangle$ P251 (A,8,131) Fuse 3 A	CEK1286
			VA801 (A,102,14) Varistor	EZJP0V270RM
			VA802 (A,105,14) Varistor	EZJP0V270RM
			U 401 (A,158,106) FM/AM Tuner Unit	CWE2256
			CN701 (A,92,39) Connector	VKN1191
			CN801 (A,110,4) Connector	CKS6231
			JA251 (A,19,139) Pin Jack	CKB1056
			JA401 (A,158,129) Antenna Jack	YKS5041
			JA901 (A,114,142) Plug	CKM1586
			$\triangle$ Fuse 10 A	YEK5001
RESISTORS				
			R 206 (A,95,112)	RS1/16SS681J

5		6		7		8		
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>		
R 207	(A,95,108)	RS1/16SS681J		R 802	(A,119,42)	RS1/16SS103J		A
R 213	(A,95,110)	RS1/16SS331J		R 803	(A,111,40)	RS1/16SS472J		
R 221	(A,95,109)	RS1/16SS223J						
R 222	(A,95,111)	RS1/16SS223J		R 804	(A,109,14)	RS1/10SR101J		
				R 805	(A,117,14)	RS1/10SR101J		
R 251	(A,24,131)	RS1/16SS223J		R 810	(A,99,19)	RS1/10SR222J		
R 252	(A,29,131)	RS1/16SS223J		R 812	(A,103,19)	RS1/10SR222J		
R 253	(A,31,131)	RS1/16SS821J		R 813	(A,100,19)	RS1/10SR222J		
R 254	(A,22,131)	RS1/16SS821J						
R 303	(A,61,131)	RS1/16SS153J		R 814	(A,105,19)	RS1/10SR222J		B
				R 815	(A,102,19)	RS1/10SR222J		
R 351	(A,59,129)	RS1/16SS103J		R 817	(A,121,23)	RS1/16SS473J		
R 352	(A,59,132)	RS1/16SS153J		R 818	(A,99,70)	RS1/16SS104J		
R 353	(A,59,130)	RS1/16SS221J		R 819	(A,120,19)	RS1/10SR102J		
R 404	(A,134,95)	RS1/16SS102J						
R 405	(A,153,65)	RS1/16SS102J		R 820	(A,108,40)	RS1/16SS103J		
				R 921	(A,125,104)	RS1/16SS104J		
R 406	(A,141,92)	RS1/16SS102J		R 922	(A,130,108)	RS1/16SS223J		
R 407	(A,141,91)	RS1/16SS102J		R 923	(A,121,116)	RS1/4SA102J		
R 408	(A,145,93)	RAB4CQ104J		R 924	(A,133,108)	RS1/16SS473J		
R 409	(A,136,93)	RS1/16SS391J						
R 410	(A,136,92)	RS1/16SS681J		R 925	(A,129,106)	RS1/16SS473J		
				<u>CAPACITORS</u>				
R 411	(A,138,92)	RS1/16SS681J		C 201	(A,99,105)	CKSRYB105K10		C
R 412	(A,136,91)	RS1/16SS681J		C 202	(A,98,116)	CKSRYB105K10		
R 413	(A,137,90)	RS1/16SS472J		C 203	(A,98,106)	CKSRYB105K10		
R 601	(A,108,91)	RS1/16SS473J		C 204	(A,98,114)	CKSRYB105K10		
R 603	(A,100,70)	RS1/16SS473J		C 205	(A,93,105) 10 uF	CCG1192		
R 604	(A,138,88)	RS1/16SS681J		C 206	(A,98,112)	CKSRYB105K10		
R 606	(A,129,62)	RS1/16SS473J		C 207	(A,98,108)	CKSRYB105K10		
R 608	(A,136,79)	RS1/16SS470J		C 212	(A,98,111)	CKSRYB105K10		
R 610	(A,134,70)	RS1/16SS473J		C 213	(A,98,109)	CKSRYB105K10		
R 611	(A,136,77)	RS1/16SS182J		C 214	(A,115,107) 4.7 uF	CCG1201		
R 612	(A,98,115)	RS1/16SS563J		C 216	(A,111,103)	CCSSCH100D50		D
R 613	(A,135,86)	RS1/16SS302J		C 253	(A,48,131) 10 uF	CCG1192		
R 615	(A,97,104)	RS1/16SS563J		C 254	(A,31,128) 10 uF	CCG1192		
R 616	(A,134,98)	RS1/16SS104J		C 300	(A,36,138)	CKSRYB103K50		
R 617	(A,121,97)	RS1/16SS473J		C 301	(A,76,130)	CKSRYB474K10		
R 618	(A,134,96)	RS1/16SS473J		C 302	(A,75,130)	CKSRYB474K10		
R 619	(A,134,97)	RS1/16SS104J		C 303	(A,80,130)	CKSRYB474K10		
R 643	(A,133,100)	RS1/16SS104J		C 304	(A,81,130)	CKSRYB474K10		
R 656	(A,103,72)	RS1/16SS104J		C 305	(A,76,133)	CKSRYB474K10		
R 657	(A,102,75)	RS1/16SS104J		C 306	(A,75,133)	CKSRYB474K10		
R 659	(A,103,71)	RS1/16SS472J		C 307	(A,80,133)	CKSRYB474K10		E
R 660	(A,102,73)	RS1/16SS472J		C 308	(A,81,133)	CKSRYB474K10		
R 661	(A,108,84)	RS1/16SS221J		C 309	(A,88,128) 2.2 uF	CCG1205		
R 662	(A,109,83)	RS1/16SS221J		C 310	(A,90,128) 2.2 uF	CCG1205		
R 663	(A,109,82)	RS1/16SS221J		C 312	(A,69,130)	CEVW100M16		
R 666	(A,141,90)	RS1/16SS103J						
R 672	(A,113,71)	RS1/16SS104J		C 352	(A,55,132) 10 uF	CCG1192		
				C 388	(A,79,119)	CKSSYB102K50		
R 674	(A,106,97)	RS1/16SS104J		C 402	(A,147,97)	CKSSYB103K16		
R 675	(A,98,70)	RS1/16SS473J		C 406	(A,153,59)	CCSSCH390J50		
R 678	(A,94,100)	RS1/16SS103J		C 414	(A,153,57)	CCSSCH470J50		
R 679	(A,104,101)	RS1/16SS103J						
R 680	(A,106,94) (A,B,C,D,F) (A,106,94) (E)	RS1/16SS473J RS1/16SS123J		C 418	(A,152,98) 10 uF	CCG1192		F
				C 601	(A,104,89)	CKSRYB105K10		
R 681	(A,106,95) (A) (A,106,95) (E)	RS1/16SS332J RS1/16SS333J		C 602	(A,109,88)	CKSSYB103K16		
R 682	(A,110,97)	RAB4CQ104J		C 604	(A,149,69)	CCSRCH8R0D50		
R 683	(A,100,77)	RS1/16SS473J		C 605	(A,118,70)	CKSSYB104K10		
R 689	(A,98,75)	RS1/16SS0R0J						
R 702	(A,94,74)	RS1/16SS221J		C 607	(A,122,71)	CKSSYB104K10		
				C 609	(A,134,67)	CKSSYB331K50		
R 704	(A,96,49)	RS1/16SS221J		C 610	(A,139,44) Capacitor	CEVW101M4		
R 708	(A,93,50)	RS1/16SS104J		C 611	(A,134,65)	CKSSYB331K50		
R 751	(A,141,134)	RS1/4SA271J						

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 612 (A,124,70) CKSSYB104K10

D 1802 (A,6,34) LED(A,B,C)
(A,6,34) LED(D,E,F) SML-D12V8W(PQ)
SML-D12P8W(KL)

C 613 (A,103,55) Capacitor CEVW471M10

D 1803 (A,6,22) LED(A,B,C) SML-D12V8W(PQ)

C 614 (A,152,93) CKSSYB102K50

(A,6,22) LED(D,E,F) SML-D12P8W(KL)

C 615 (A,134,68) CKSSYB331K50

D 1804 (A,8,11) LED(A,B,C) SML-D12V8W(PQ)

C 616 (A,129,71) CKSSYB103K16

(A,8,11) LED(D,E,F) SML-D12P8W(KL)

C 617 (A,134,73) CKSSYB104K10

D 1805 (A,11,41) LED(A,B,C) SML-D12V8W(PQ)

C 621 (A,139,61) CKSSYB331K50

(A,11,41) LED(D,E,F) SML-D12P8W(KL)

C 623 (A,136,76) CKSSYB102K50

C 624 (A,135,75) CKSSYB102K50

D 1806 (A,143,8) LED(A,B,C) SML-D12V8W(PQ)

C 625 (A,139,75) CCSSCH270J50

(A,143,8) LED(D,E,F) SML-D12P8W(KL)

C 626 (A,139,69) CCSSCH270J50

D 1807 (A,131,7) LED(A,B,C) SML-D12V8W(PQ)

C 627 (A,141,72) CCSSCH150J50

(A,131,7) LED(D,E,F) SML-D12P8W(KL)

C 628 (A,139,79) CKSSYB102K50

D 1808 (A,119,7) LED (A,B,C) SML-D12V8W(PQ)

C 629 (A,137,78) CCSSCH4R0C50

(A,119,7) LED(D,E,F) SML-D12P8W(KL)

C 630 (A,139,77) CCSSCH8R0D50

C 631 (A,123,68) CKSSYB223K16

D 1809 (A,107,6) LED(A,B,C) SML-D12V8W(PQ)

C 632 (A,106,96) CKSSYB104K10

(A,107,6) LED(D,E,F) SML-D12P8W(KL)

C 633 (A,125,97) CKSSYB104K10

D 1810 (A,71,5) LED(A,B,C) SML-D12V8W(PQ)

C 635 (A,139,89) CKSSYB104K10

(A,71,5) LED(D,E,F) SML-D12P8W(KL)

C 637 (A,130,64) CKSSYB103K16

D 1811 (A,83,6) LED(A,B,C) SML-D12V8W(PQ)

C 640 (A,127,71) CKSSYB103K16

(A,83,6) LED(D,E,F) SML-D12P8W(KL)

C 643 (A,141,81) CKSSYB104K10

C 644 (A,137,61) CKSSYB102K50

D 1812 (A,95,6) LED(A,B,C) SML-D12V8W(PQ)

C 651 (A,102,89) CCSSCH270J50

(A,95,6) LED(D,E,F) SML-D12P8W(KL)

C 653 (A,106,73) CCSSCH100D50

D 1813 (A,25,32) LED(A,B,C) SML-D12V8W(PQ)

C 671 (A,96,104) CKSSYB182K50

(A,25,32) LED(D,E,F) SML-D12P8W(KL)

C 672 (A,96,115) CKSSYB182K50

D 1814 (A,54,8) LED(A,B,C) SML-D12V8W(PQ)

C 681 (A,119,66) CCSSCH270J50

(A,54,8) LED(D,E,F) SML-D12P8W(KL)

C 682 (A,121,66) CCSSCH270J50

C 702 (A,98,40) CKSSYB103K16

D 1815 (A,59,18) LED(A,B,C) SML-D12V8W(PQ)

C 703 (A,90,50) CKSSYB104K10

(A,59,18) LED(D,E,F) SML-D12P8W(KL)

C 751 (A,135,133) CKSSYB473K16

D 1816 (A,54,29) LED (A,B,C) SML-D12V8W(PQ)

C 752 (A,147,131) CEVW101M16

(A,54,29) LED(D,E,F) SML-D12P8W(KL)

C 802 (A,112,19) CKSSYB104K10

C 803 (A,117,19) CCSSCH221J50

D 1817 (A,17,21) LED(A,B,C) SML-D12V8W(PQ)

C 804 (A,108,19) CCSSCH221J50

(A,17,21) LED(D,E,F) SML-D12P8W(KL)

C 805 (A,112,14) CKSSYB104K10

D 1818 (A,21,10) LED(A,B,C) SML-D12V8W(PQ)

C 808 (A,108,14) CKSSYB105K6R3

(A,21,10) LED(D,E,F) SML-D12P8W(KL)

C 810 (A,104,14) CCSSCH221J50

C 811 (A,101,14) CCSSCH221J50

C 812 (A,108,37) CKSSYB104K16

C 818 (A,116,14) CKSSYB104K10

X 1801 (B,75,22) Ceramic Resonator 5.00 MHz CSS1547

S 1824 (A,39,18) Encoder CSD1168

VA1819 (B,149,21) Varistor EZJZ1V270RM

VA1820 (B,139,8) Varistor EZJZ1V270RM

CN1801 (B,108,9) Connector CKS6230

JA1801 (A,153,7) Jack CKN1082

V 1801 (A,143,32) LCD CAW2008

RESISTORS

R 1801 (B,144,25) RS1/10SR2R2J

R 1802 (B,69,18) RS1/10SR222J

R 1803 (B,69,16) RS1/10SR222J

R 1806 (B,153,29) RS1/10SR101J

R 1807 (B,56,12) RS1/4SA271J

R 1808 (B,21,15) (A,B,C) RS1/4SA102J

(B,21,15) (D,E,F) RS1/4SA391J

R 1809 (B,137,23) (A,B,C) RS1/4SA182J

(B,137,23) (D,E,F) RS1/4SA391J

R 1810 (B,61,13) (A,B,C) RS1/4SA272J

(B,61,13) (D,E,F) RS1/4SA561J

R 1811 (B,51,12) (A,B,C) RS1/4SA272J

(B,51,12) (D,E,F) RS1/4SA561J

R 1812 (B,17,19) (A,B,C) RS1/4SA272J

(B,17,19) (D,E,F) RS1/4SA561J

R 1813 (B,57,24) RS1/10SR0R0J

C 820 (A,97,22) CKSSYB104K10

C 821 (A,124,19) CKSSYB104K10

C 822 (A,121,18) CCSSCH221J50

C 901 (A,133,126) 3 300 uF/16 V CCH1732

C 902 (A,142,124) CKSRYB104K16

C 912 (A,148,52) 1 000 uF/16 V XCH3021

C 915 (A,149,41) 4.7 uF CCG1201

C 917 (A,134,48) CKSSYB102K50

B**Unit Number :****Unit Name : Keyboard Unit****MISCELLANEOUS**

IC 1801 (B,86,24) IC PD6340A

IC 1802 (A,156,23) Remote IC GP1UXC14RK

D 1801 (A,68,22) White LED SMLXA4WBETW1(Z1)

DEH-1300MP/XNUC

5		6
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
R 1823	(B,49,30)	RS1/10SR473J
R 1828	(B,58,13)	RS1/4SA271J

CAPACITORS

C 1801	(B,97,24)	CKSRYB105K10
C 1802	(B,153,25) 10 uF	CCG1192
C 1803	(B,137,7)	CKSRYB104K16
C 1804	(B,134,6)	CKSRYB472K50
C 1805	(B,134,4)	CKSRYB472K50



Unit Number : CWX3957

Unit Name : CD CORE UNIT(S11.1Comp)

MISCELLANEOUS

IC 201	(A,32,34) IC	PE5746A
IC 301	(A,65,28) IC	BA5839FP
Q 101	(B,10,57) Transistor	2SA1577
Q 102	(B,20,48) Chip Digital Transistor	LTA123JUB
X 201	(A,41,21) Ceramic Resonator 16.934 MHz	CSS1603

S 901	(A,43,54) Spring Switch(HOME)	CSN1080
S 903	(B,22,13) Spring Switch(DSCSNS)	CSN1081
CN101	(A,17,59) Connector	CKS4808
CN701	(A,38,11) Connector	CKS4808

RESISTORS

R 101	(B,6,60)	RS1/10SR2R4J
R 102	(B,8,60)	RS1/10SR2R4J
R 103	(B,9,60)	RS1/10SR2R7J
R 104	(B,13,53)	RS1/16SS222J
R 107	(B,18,49)	RS1/16SS105J

R 202	(A,48,26)	RS1/16SS473J
R 204	(A,23,20)	RS1/16SS221J
R 206	(B,32,28)	RS1/16SS104J
R 210	(B,52,13)	RS1/16SS102J
R 214	(B,29,49)	RS1/16SS472J

R 216	(B,30,48)	RS1/16SS472J
R 221	(A,32,50)	RS1/16SS103J
R 222	(A,34,50)	RS1/16SS103J
R 225	(A,29,49)	RS1/16SS103J
R 226	(A,28,49)	RS1/16SS393J

R 227	(B,26,46)	RS1/16SS562J
R 228	(B,24,43)	RS1/16SS122J
R 229	(B,24,45)	RS1/16SS472J
R 232	(B,26,44)	RS1/16SS122J
R 233	(B,20,25)	RS1/16SS103J

R 234	(A,50,19)	RS1/16SS473J
R 235	(B,25,33)	RS1/16SS473J
R 237	(A,43,23)	RS1/16SS471J
R 240	(B,50,11)	RS1/16S473J
R 241	(B,50,12)	RS1/16SS103J

R 244	(B,28,29)	RS1/16SS473J
R 254	(A,20,23)	RS1/16SS104J
R 256	(A,19,23)	RS1/16SS104J
R 259	(A,13,24)	RS1/16SS0R0J
R 291	(B,17,45)	RS1/16SS272J

R 307	(A,61,34)	RS1/16SS183J
R 308	(A,61,36)	RS1/16SS183J
R 309	(A,59,34)	RS1/16SS183J

7		8
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
R 310	(A,58,37)	RS1/16SS183J
R 701	(A,37,22)	RS1/16SS221J

R 702	(A,23,23)	RS1/16SS221J
-------	-----------	--------------

CAPACITORS

C 106	(B,13,55)	CKSQYB475K6R3
C 202	(A,21,27)	CKSSYB104K10
C 204	(A,22,21)	CKSSYB103K16
C 205	(B,37,25)	CKSQYB475K6R3
C 206	(A,38,23)	CKSSYB104K10

C 207	(A,41,24)	CKSRYB104K16
C 209	(B,44,33)	CEVW220M6R3
C 210	(B,41,28)	CKSSYB104K10
C 211	(A,43,27)	CKSSYB104K10
C 213	(A,39,45)	CKSSYB104K10

C 214	(A,45,28)	CKSSYB104K10
C 215	(B,39,32)	CKSSYB104K10
C 216	(A,27,50)	CKSSYB332K50
C 217	(A,27,47)	CKSSYB104K10
C 218	(A,27,49)	CKSSYB473K16

C 219	(A,25,45)	CKSSYB104K10
C 220	(A,25,46)	CKSSYB182K50
C 221	(A,24,44)	CKSSYB104K10
C 222	(B,24,44)	CCSSCH560J50
C 223	(B,24,46)	CCSSCH4R0C50

C 224	(A,23,43)	CKSSYB104K10
C 226	(A,19,42)	CCSSCH680J50
C 227	(A,19,40)	CCSSCH470J50
C 228	(B,17,43)	CKSSYB103K16
C 229	(B,24,38)	CKSSYB104K10

C 236	(B,26,38)	CKSSYB104K10
C 239	(B,26,45)	CCSSCH220J50
C 240	(A,17,37)	CKSSYB104K10
C 250	(A,32,51)	CKSSYB102K50
C 251	(A,34,51)	CKSSYB102K50

C 293	(B,17,44)	CKSSYB102K50
C 303	(A,61,35)	CKSSYB472K25
C 304	(A,59,35)	CKSSYB223K16
C 307	(A,69,21)	CKSRYB105K10
C 703	(B,37,15)	CCSSCH101J50

C 704	(B,41,14)	CKSSYB102K50
-------	-----------	--------------

Miscellaneous Parts List

M 1	Motor Unit(SPDL)	CXE2273
M 2	Motor Unit(LOAD/CRG)	CXC4026
	Pickup Unit(P10.5)(Service)	CXX1942