



EXPLODED VIEW (MECHANISM)

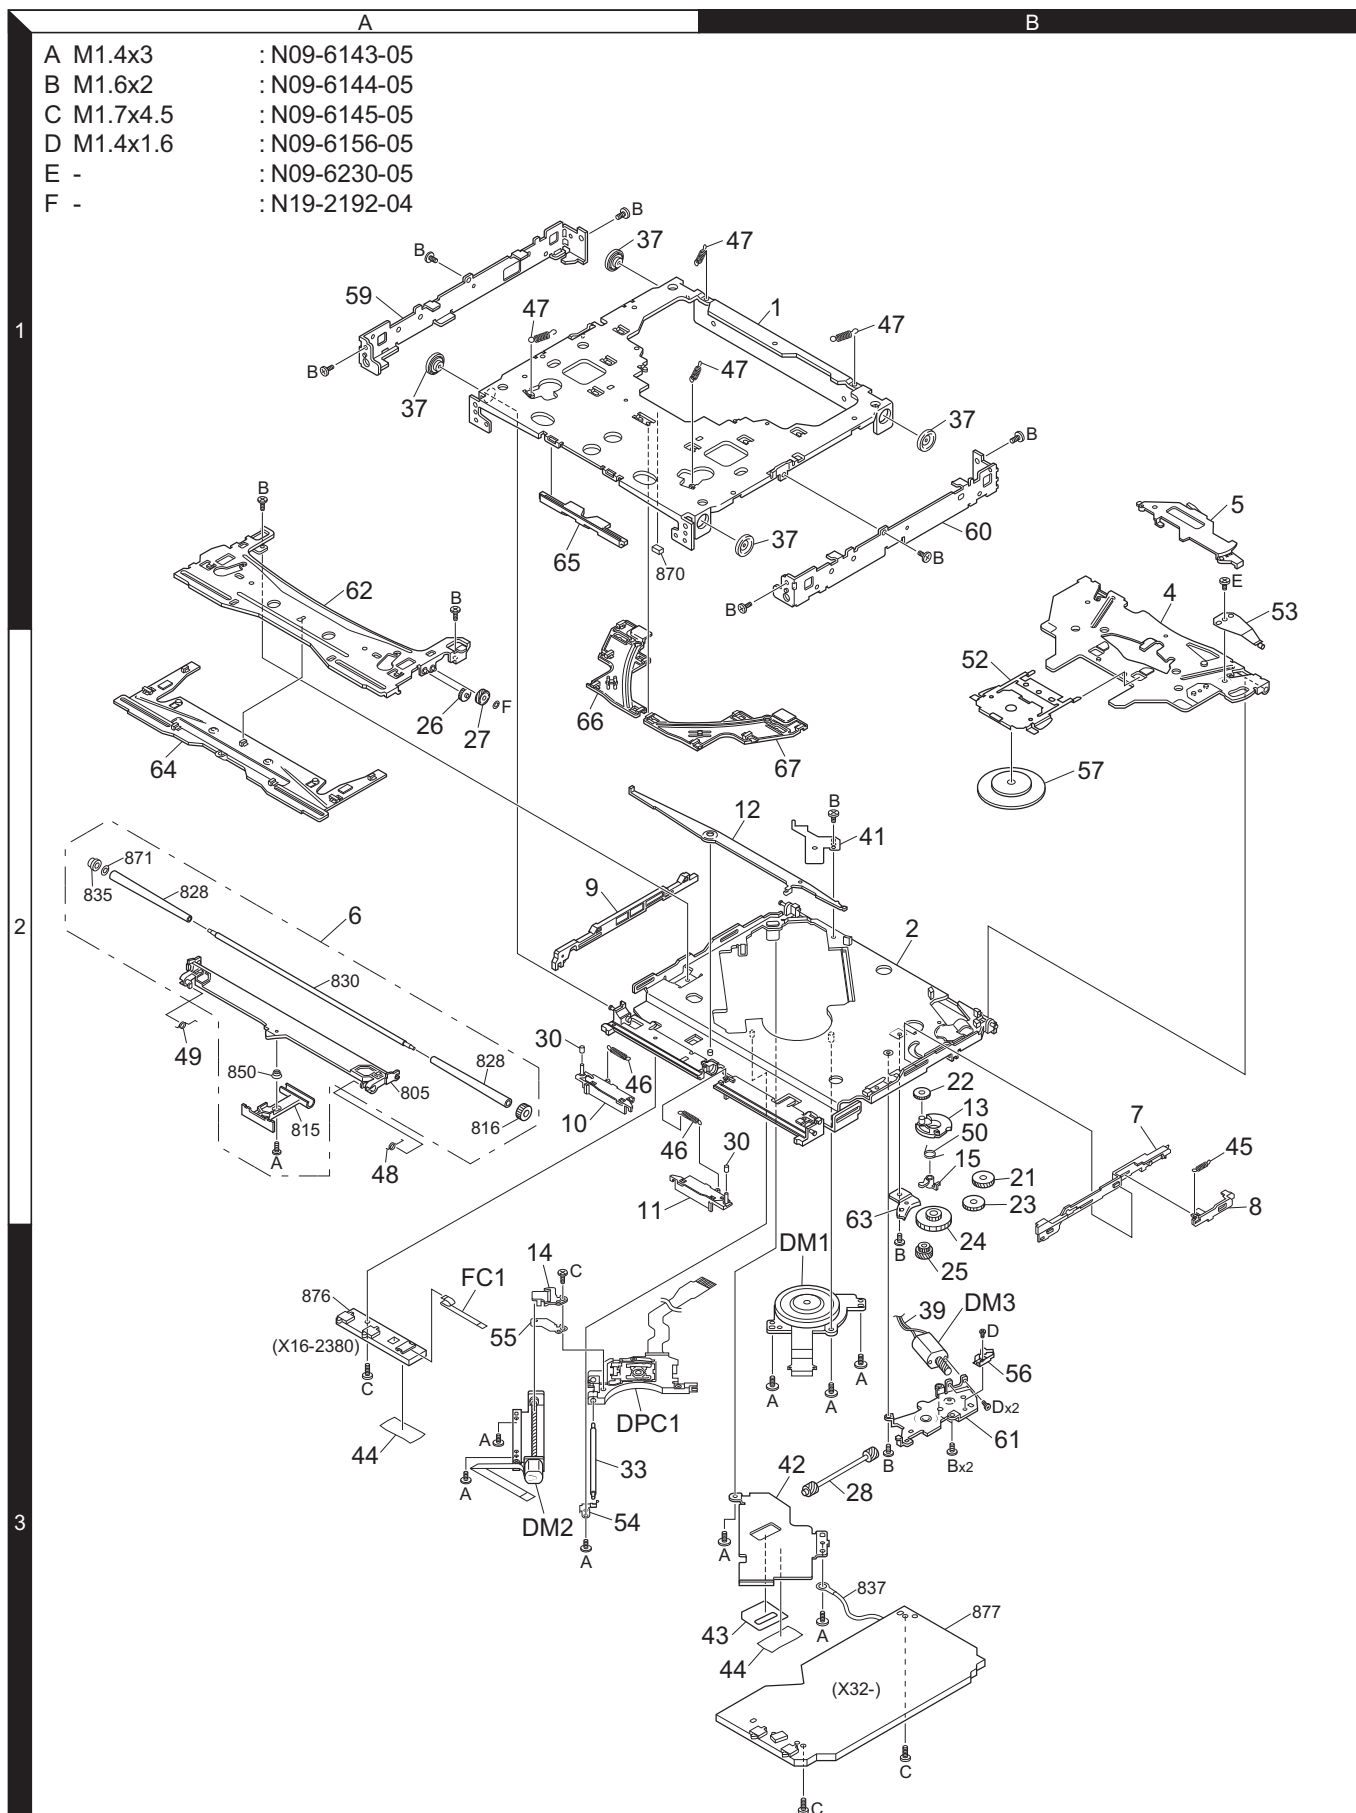

EXPLODED VIEW (UNIT)

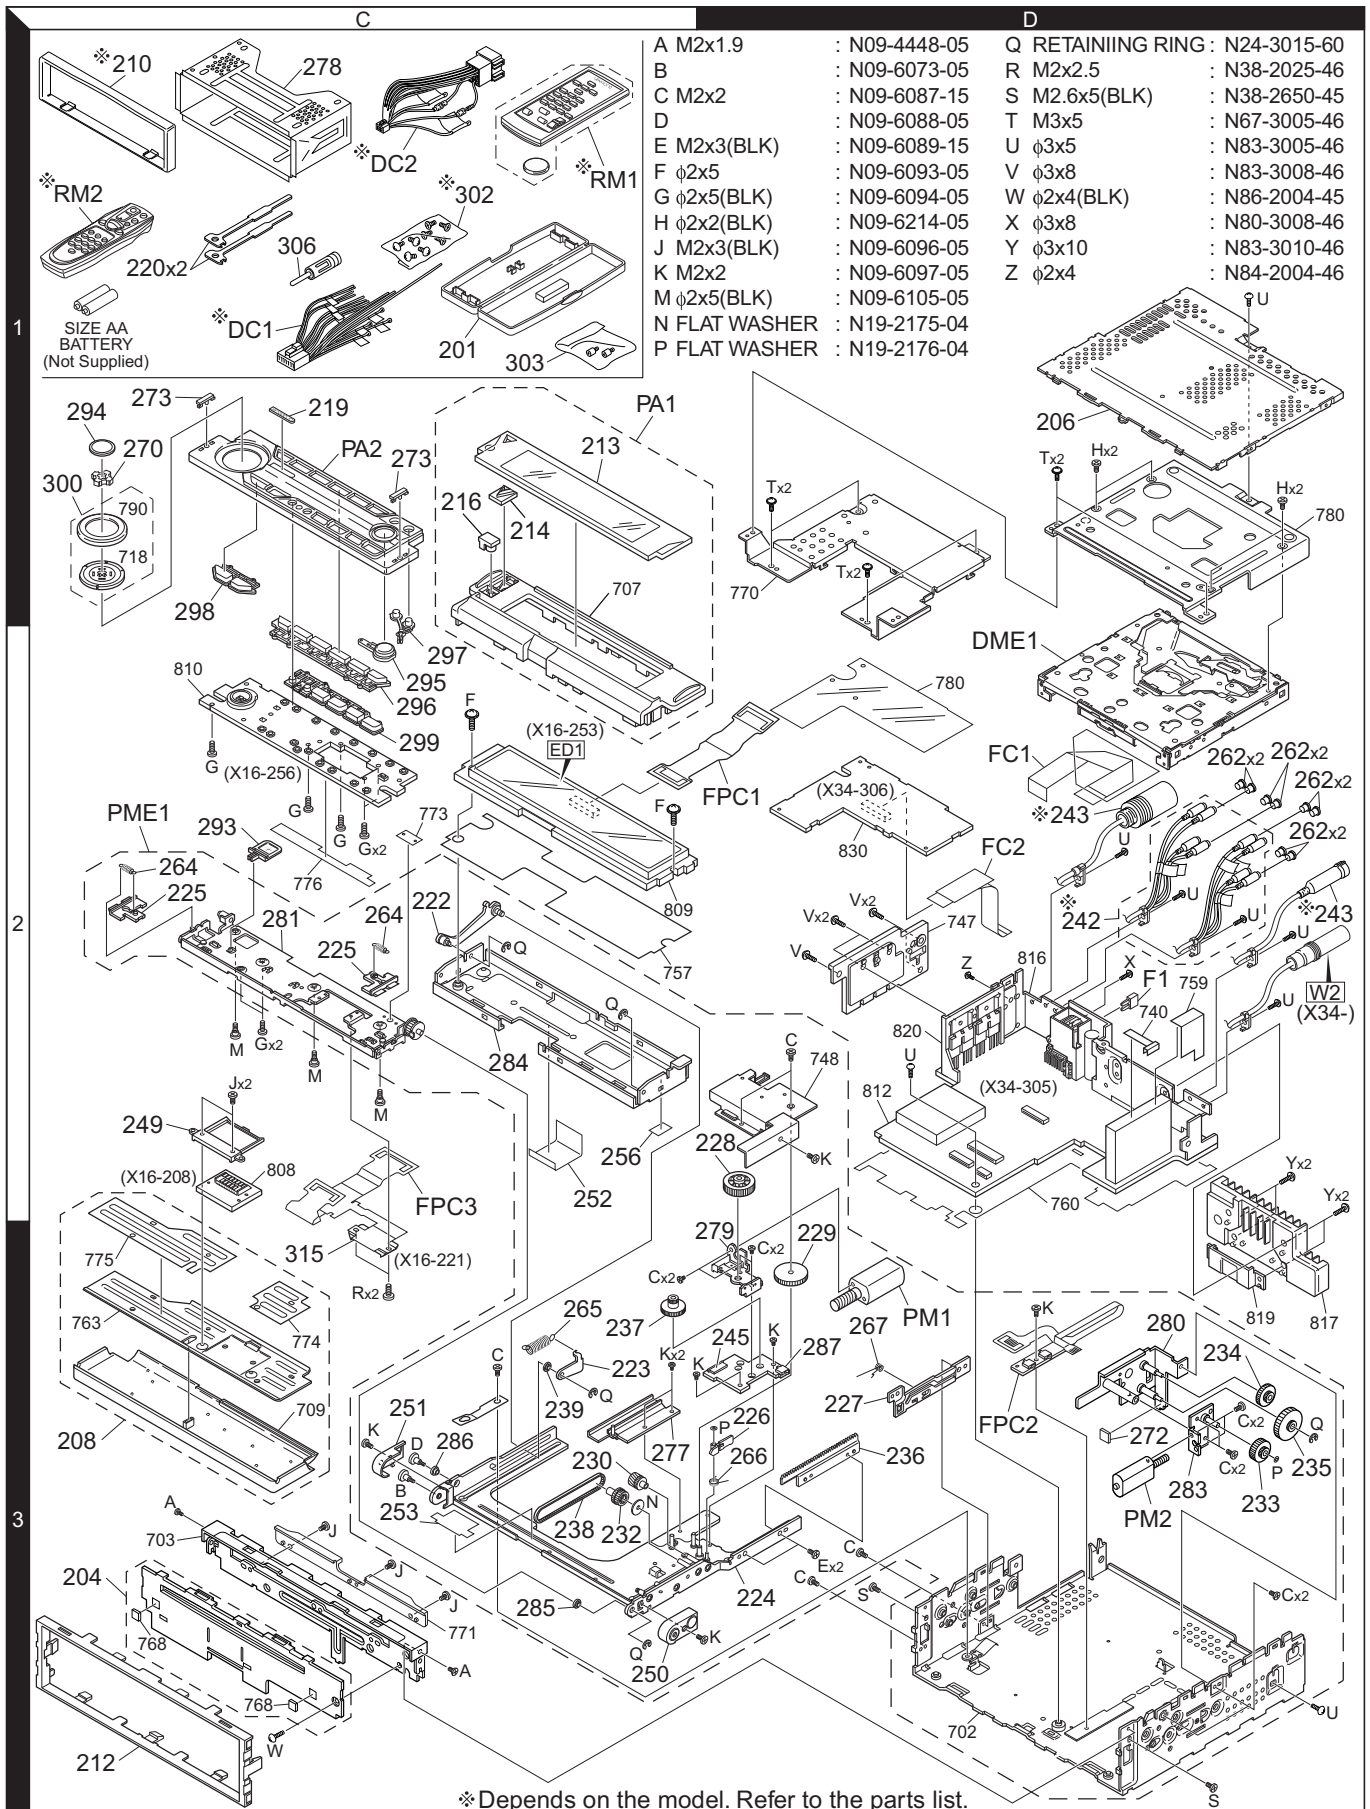

*Depends on the model. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-9026R/PSW9257/W9027/X979					
201	1C		A02-2731-13	PLASTIC CABINET ASSY	
204	3C		A22-2988-03	SUB PANEL ASSY	
206	1D	*	A52-0846-02	TOP PLATE	
PA1	1D	*	A64-3235-11	PANEL ASSY	K
PA1	1D	*	A64-3236-11	PANEL ASSY	M1
PA1	1D	*	A64-3237-11	PANEL ASSY	E1
PA1	1D	*	A64-3238-01	PANEL ASSY	E2
PA2	1C	*	A64-3249-02	PANEL ASSY	K
PA2	1C	*	A64-3252-02	PANEL ASSY	E2
PA2	1C	*	A64-3254-02	PANEL ASSY	E1
PA2	1C	*	A64-3255-02	PANEL ASSY	M1
PME1	2C	*	A10-5124-01	CHASSIS ASSY	
RM1	1C		A70-2026-05	REMOTE CONTROLLER ASSY (RC-420)	E1E2
RM2	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	KM1
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	K
-			B46-0612-14	ID CARD	M1E1E2
-			B46-0648-13	USER CARD	K
-		*	B64-2741-00	INST. MANUAL (ENGLISH)	K
-		*	B64-2742-00	INST. MANUAL (FRE, SPA)	K
-		*	B64-2746-00	INST. MANUAL (ENGLISH)	E1E2
-		*	B64-2747-00	INST. MANUAL (FRE, GER)	E1E2
-		*	B64-2748-00	INST. MANUAL (DUT, ITA)	E1E2
-		*	B64-2749-00	INST. MANUAL (SPA, POR)	E1E2
-		*	B64-2758-00	INST. MANUAL (ENG, T-CHI)	M1
208	3C		B03-5015-03	DRESSING PLATE ASSY	E2
208	3C		B03-5016-03	DRESSING PLATE ASSY	KM1E1
210	1C		B07-3078-01	ESCUTCHEON	E2
210	1C		B07-3079-01	ESCUTCHEON	KM1E1
212	3C		B07-3080-02	ESCUTCHEON	
213	1D	*	B10-4522-11	FRONT GLASS	K
213	1D	*	B10-4523-11	FRONT GLASS	M1
213	1D	*	B10-4524-11	FRONT GLASS	E1
213	1D	*	B10-4525-01	FRONT GLASS	E2
214	1C	*	B12-1227-04	INDICATOR	
216	1C	*	B19-2248-04	LIGHTING BOARD	
219	1C		B43-1505-04	KENWOOD BADGE	
220	1C		D10-4674-04	LEVER	
222	2C		D10-4716-04	ARM ASSY	
223	3C		D10-4718-04	ARM ASSY	
224	3D		D10-4721-21	SLIDER ASSY	
225	2C		D10-4749-03	LEVER	
226	3D		D10-4750-04	LEVER	
227	3D		D12-0637-03	CAM	
228	2D		D13-2270-04	GEAR	
229	3D		D13-2272-04	GEAR	
230	3C		D13-2273-34	GEAR	
232	3C		D13-2274-24	GEAR	
233	3D		D13-2276-04	GEAR	
234	3D		D13-2277-04	GEAR	
235	3D		D13-2278-04	GEAR	
236	3D		D13-2289-03	RACK (GEAR)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
237	3C		D13-2290-04	GEAR ASSY	
238	3C		D16-0617-15	BELT	
239	3C		D23-0958-04	RETAINER	
242	2D	*	E30-6315-05	CORD WITH PINPLUG	KM1
242	2D	*	E30-6316-05	CORD WITH PINPLUG	E1
242	2D	*	E30-6317-05	CORD WITH PINPLUG	E2
243	2D		E30-6216-05	CORD WITH DIN CONNECTOR	KM1
243	2D		E30-6217-05	CORD WITH DIN CONNECTOR	E1E2
245	3D		E41-0351-05	FLAT CABLE CONNECTOR	
DC1	1C		E30-6294-05	DC CORD	K
DC2	1C		E30-4942-05	DC CORD	M1E1E2
FC1	2D	*	E39-0604-05	FLAT CABLE (40PIN)	
FC2	2D	*	E39-0605-05	FLAT CABLE	
249	2C		F07-1121-03	COVER	
250	3C		F07-1122-03	COVER	
251	3C		F07-1123-03	COVER	
252	2C		F09-1794-04	SHEET	
253	3C		F09-1798-04	SHEET	
256	2D		F09-1842-04	SHEET	
262	2D		F29-0626-04	INSULATING COVER	
F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE : 10A)	
264	2C		G01-3162-04	EXTENSION SPRING	
265	2C	*	G01-3221-04	EXTENSION SPRING	
266	3C		G01-3189-04	TORSION COIL SPRING	
267	3D		G01-3199-04	TORSION COIL SPRING	
270	2C		G11-3539-04	CUSHION	
272	3D		G11-3559-04	CUSHION	
273	1C		G11-3574-04	CUSHION (KEY)	M1E1
273	1C		G11-3575-04	CUSHION (KEY)	KE2
-		*	H10-4895-02	POLYSTYRENE FOAMED FIXTURE	
-			H21-1151-04	PROTECTION SHEET	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	KM1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1E2
-		*	H54-3041-03	ITEM CARTON CASE	K
-		*	H54-3042-03	ITEM CARTON CASE	M1
-		*	H54-3043-03	ITEM CARTON CASE	E1
-		*	H54-3044-03	ITEM CARTON CASE	E2
277	3C		J19-5220-03	HOLDER	
278	1C		J21-9823-03	MOUNTING HARDWARE ASSY	
279	3D		J21-9951-03	MOUNTING HARDWARE ASSY	
280	3D		J21-9954-02	MOUNTING HARDWARE ASSY	
281	2C	*	J21-9996-32	MOUNTING HARDWARE ASSY	
283	3D		J21-9997-03	MOUNTING HARDWARE ASSY	
284	2C		J21-9999-02	MOUNTING HARDWARE ASSY	
285	3C		J31-1055-04	COLLAR	
286	3C		J31-1056-04	COLLAR	
287	3D		J74-1444-14	RIGID PRINTED WIRING BOARD	
FPC1	2D		J84-0153-05	FLEXIBLE PRINTED WIRING BOARD	
FPC2	3D		J84-0156-04	FLEXIBLE PRINTED WIRING BOARD	
293	2C		K24-4007-04	KNOB (OPEN)	
294	1C	*	K24-4106-03	KNOB (ATT)	
295	1C	*	K24-4167-03	KNOB (SRC)	

K : KDC-X979 **E1** : KDC-PSW9527 **E2** : KDC-W9027 **M1** : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KDC-9026R/PSW9257/W9027/X979

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
296	1C	*	K25-1604-02	KNOB (PRESET1-6)	M1E1
296	1C	*	K25-1632-02	KNOB (PRESET1-6)	KE2
297	2C	*	K25-1606-03	KNOB (EJECT)	M1E1
297	2C	*	K25-1634-03	KNOB (EJECT)	KE2
298	1C	*	K25-1610-03	KNOB (Q, PLAY)	KE2
298	1C	*	K25-1635-03	KNOB (Q, PLAY)	M1E1
299	2C	*	K25-1611-02	KNOB (FM/AM, SKIP)	M1E1
299	2C	*	K25-1633-02	KNOB (FM/AM, SKIP)	KE2
300	1C	*	K29-7082-03	KNOB ASSY (VOL.)	
302	1C		N99-1723-05	SCREW SET	KM1
303	1C		N99-1734-05	SCREW SET	
A	3D		N09-4448-05	MACHINE SCREW	
B	3C		N09-6073-05	STEPPED SCREW	
C	3D	*	N09-6087-15	MACHINE SCREW	
D	3C		N09-6088-05	STEPPED SCREW	
E	3D	*	N09-6089-15	MACHINE SCREW	
F	2C		N09-6093-05	TAPTITE SCREW	
G	2C		N09-6094-05	MACHINE SCREW	
H	1D	*	N09-6214-05	MACHINE SCREW	
J	2C		N09-6096-05	MACHINE SCREW	
K	3C		N09-6097-05	MACHINE SCREW	
M	2C		N09-6105-05	STEPPED SCREW	
N	2C		N19-2175-04	FLAT WASHER	
P	3D		N19-2176-04	FLAT WASHER	
Q	2C		N24-3015-60	E TYPE RETAINING RING	
R	3C		N38-2025-46	PAN HEAD MACHIN SCREW	
S	3D		N38-2650-45	PAN HEAD MACHIN SCREW	
T	2D		N67-3005-46	PAN HEAD SEMS SCREW	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
V	2D		N83-3008-46	PAN HEAD TAPTITE SCREW	
W	3C		N86-2004-45	BINDING HEAD TAPTITE SCREW	
RLED			RK73GB2A102J	CHIP R 1.0K J 1/10W	
RPH			RK73GB2A104J	CHIP R 100K J 1/10W	
SW1			S68-0871-05	PUSH SWITCH (PANEL MECHA)	
SW2-3			S68-0863-05	PUSH SWITCH (PANEL MECHA)	
SW4			S68-0864-05	PUSH SWITCH (PANEL MECHA)	
306	1C		T90-0552-05	ANTENNA ADAPTOR	M1E1E2
PH			T95-0212-05	OPTO ISOLATOR (PANEL MECHA)	
PM1	3D		T42-1076-14	MOTOR ASSY	
PM2	3D	*	T42-1077-24	MOTOR ASSY	
DME1	2D	*	X92-4780-00	MECHANISM ASSY (DXM-7500V)	
SUB CIRCUIT UNIT (X16-2080-10)					
J1			E59-0833-15	RECTANGULAR PLUG	
CP1			R90-1019-05	MULTI-COMP 100 X2	
IC1			BR24C01AFV-W	MEMORY IC	
SUB CIRCUIT UNIT (X16-2210-10)					
315	3C		E58-0968-05	RECTANGULAR RECEPTACLE	
FPC3	2C		J84-0154-05	FLEXIBLE PRINTED WIRING BOARD	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
SWITCH UNIT/CD MECHANISM (X16-2380-00)					
CN1		*	E41-2036-05	FLAT CABLE CONNECTOR	
S1,2			S68-0863-05	PUSH SWITCH	
DISPLAY UNIT (X16-2530-10/11)					
D13			B30-1575-05	LED (1608, YG)	KM1E1
D14			B30-2233-05	LED (HR 1608)	
C1			CK73GB1C104K	CHIP C 0.10UF K	
C1			CK73GB1H104K	CHIP C 0.10UF K	
C2			C92-0628-05	CHIP-TAN 10UF 10WV	
C4			CK73GB1C104K	CHIP C 0.10UF K	
C4			CK73GB1H104K	CHIP C 0.10UF K	
C5			C92-0628-05	CHIP-TAN 10UF 10WV	
C7			CK73GB0J105K	CHIP C 1.0UF K	
C8-10			CK73GB1C104K	CHIP C 0.10UF K	
C8-10			CK73GB1H104K	CHIP C 0.10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12-18			CK73GB1C104K	CHIP C 0.10UF K	
C12-18			CK73GB1H104K	CHIP C 0.10UF K	
C19,20			CK73GB1H103K	CHIP C 0.010UF K	
C21,22			CK73GB1C104K	CHIP C 0.10UF K	
C21,22			CK73GB1H104K	CHIP C 0.10UF K	
C23			CK73FB1A225K	CHIP C 2.2UF K	
C25			CK73FB1A225K	CHIP C 2.2UF K	
C26			C93-1174-05	CERAMIC 0.1UF 100WV	
C27			CK73GB1C104K	CHIP C 0.10UF K	
C27			CK73GB1H104K	CHIP C 0.10UF K	
C28			CK73EB0J106K	CHIP C 10UF K	
C29,30			CK73GB1H332K	CHIP C 3300PF K	
C31			CK73FB1A225K	CHIP C 2.2UF K	
C32-34			CK73FB0J475K	CHIP C 4.7UF K	
C35			C92-0628-05	CHIP-TAN 10UF 10WV	
C36			CK73GB1C104K	CHIP C 0.10UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K	
C37			C92-0628-05	CHIP-TAN 10UF 10WV	KM1E1
C38,39			CK73GB1C104K	CHIP C 0.10UF K	
C38,39			CK73GB1H104K	CHIP C 0.10UF K	
C200			CK73GB1A224K	CHIP C 0.22UF K	
CN1			E40-9364-05	FLAT CABLE CONNECTOR (28PIN)	
CN2			E41-0166-05	FLAT CABLE CONNECTOR (32PIN)	
L1,2			L92-0321-05	CHIP FERRITE	
L3			L40-1005-34	SMALL FIXED INDUCTOR	
L3			L40-1005-68	SMALL FIXED INDUCTOR	
L4-8			L92-0332-05	CHIP FERRITE	
L9			L40-1005-34	SMALL FIXED INDUCTOR	E2
L9			L40-1005-68	SMALL FIXED INDUCTOR	E2
L9,10			L40-1005-34	SMALL FIXED INDUCTOR	KM1E1
L9,10			L40-1005-68	SMALL FIXED INDUCTOR	
X1			L78-0868-05	RESONATOR (5.00MHZ)	
CP1			R90-1022-05	MULTI-COMP 470 X2	
CP2			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP3			R90-1022-05	MULTI-COMP 470 X2	

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

DISPLAY UNIT (X16-2530-10/11)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CP4		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP5,6			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP7			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP8			R90-1020-05	MULTI-COMP 22K X2	
CP9			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP10			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP11			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP12			R90-1022-05	MULTI-COMP 470 X2	
CP13-16			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP17			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP18		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP19			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP20		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP21			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP22		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP23			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP24		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP25,26			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP27,28			R90-1021-05	MULTI-COMP 3.3K X2	
CP30		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP31			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP32			R90-0723-05	MULTI-COMP 47K X2	
CP200			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP300		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
R1			RK73GB2A471J	CHIP R 470 J 1/10W	
R2			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R3			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R4			RK73GB2A223J	CHIP R 22K J 1/10W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GB2A223J	CHIP R 22K J 1/10W	
R7			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R8,9			RK73GB2A223J	CHIP R 22K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11			RK73GB2A223J	CHIP R 22K J 1/10W	
R12			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14			RK73GB2A101J	CHIP R 100 J 1/10W	
R16			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R17			RK73GB2A473J	CHIP R 47K J 1/10W	
R18			RK73GB2A393J	CHIP R 39K J 1/10W	
R19,20			RK73GB2A473J	CHIP R 47K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R22			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R23			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A220J	CHIP R 22 J 1/10W	
R26,27			RK73GB2A103J	CHIP R 10K J 1/10W	
R28-30			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R31			RK73GB2A101J	CHIP R 100 J 1/10W	
R32			RK73GB2A104J	CHIP R 100K J 1/10W	
R33			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R34			RK73GB2A100J	CHIP R 10 J 1/10W	
R35			RK73GB2A153J	CHIP R 15K J 1/10W	
R36			RK73GB2A103J	CHIP R 10K J 1/10W	
R37,38			RK73GB2A274J	CHIP R 270K J 1/10W	
R39			RK73GB2A223J	CHIP R 22K J 1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination	
R40			RK73GB2A333J	CHIP R	33K	J	1/10W	KM1E1 KM1E1	
R41			RK73GB2A241J	CHIP R	240	J	1/10W		
R42,43			RK73GB2A103J	CHIP R	10K	J	1/10W		
R44			RK73GB2A104J	CHIP R	100K	J	1/10W		
R45			RK73GB2A181J	CHIP R	180	J	1/10W		
R46			RK73GB2A472J	CHIP R	4.7K	J	1/10W		
R47			RK73GB2A331J	CHIP R	330	J	1/10W		
R48			RK73GB2A104J	CHIP R	100K	J	1/10W		
R49,50			RK73GB2A101J	CHIP R	100	J	1/10W		
R200		*	RK73EB2E3R3J	CHIP R	3.3	J	1/4W		
R201-203			RK73GB2A473J	CHIP R	47K	J	1/10W		
R204			RK73GB2A472J	CHIP R	4.7K	J	1/10W		
R206			RK73GB2A223J	CHIP R	22K	J	1/10W		
R300			RK73GB2A393J	CHIP R	39K	J	1/10W		
D1-5			DA204U	DIODE					KM1E1
ED1		*	MN19236A	FLUORESCENT INDICATOR TUBE					
IC1		*	703132GJ011-A	MICROCONTROLLER IC					
IC2		*	MX23L3213TG114	ROM IC					
IC3		*	MBM29LV004T-90	ROM IC					
IC4		*	S-816A34AMCT2G	ANALOGUE IC					
IC5		*	S-816A25AMCT2G	ANALOGUE IC					
IC6			TC74HC4050AFT	MOS-IC					
IC7			TC7WT126FU	MOS-IC					
IC8			RS-171	ANALOGUE IC					
IC9		*	TC7WH32FU-F	MOS-IC					
IC10			BA3830F	ANALOGUE IC					
Q1			2SB1188 (Q, R)	TRANSISTOR					
Q2			2SB1132	TRANSISTOR					
Q3			2SC2713	TRANSISTOR					
Q4			2SA1163	TRANSISTOR				KM1E1	
Q5,6			2SA1774	TRANSISTOR					
Q7			DTC114EE	DIGITAL TRANSISTOR					
Q8			2SA1774	TRANSISTOR					
Q9			2SC4667	TRANSISTOR					
Q10			2SC4617	TRANSISTOR				KM1E1	
Q11			UMX2N	TRANSISTOR					
Q200			2SC4617	TRANSISTOR					
SWITCH UNIT (X16-2560-10)									
D1-10			B30-1605-05	LED (2COLOR PG/RED)					
D11-15			B30-1564-05	LED (1608, BLUE)					
D17-22			B30-1564-05	LED (1608, BLUE)					
D24			B30-1566-05	LED (1608, RED)					
C1-5			CK73GB1H103K	CHIP C	0.010UF	K			
C7-12			CK73GB1H103K	CHIP C	0.010UF	K			
CN1			E41-0419-05	FLAT CABLE CONNECTOR (24PIN)					
R1,2			RK73FB2B471J	CHIP R	470	J	1/8W		
R3,4			RK73FB2B301J	CHIP R	300	J	1/8W		
R5			RK73FB2B471J	CHIP R	470	J	1/8W		
R6-10			RK73FB2B181J	CHIP R	180	J	1/8W		
R11			RK73GB2A241J	CHIP R	240	J	1/10W		
R12			RK73GB2A332J	CHIP R	3.3K	J	1/10W		
R13			RK73GB2A103J	CHIP R	10K	J	1/10W		
R14			RK73GB2A332J	CHIP R	3.3K	J	1/10W		

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-2560-10)

Ref. No.	Added	New	Parts No.	Description	Destination
R15			RK73GB2A103J	CHIP R 10K J 1/10W	
R16			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R17			RK73GB2A103J	CHIP R 10K J 1/10W	
S1			S70-0901-05	TACT SWITCH	
S2-9		*	S70-0912-05	TACT SWITCH	
S10			S70-0901-05	TACT SWITCH	
S11-20		*	S70-0912-05	TACT SWITCH	
S21			T99-0445-05	ROTARY ENCODER	
D25			DAN222	DIODE	
Q1			DTA114YUA	DIGITAL TRANSISTOR	
Q1			UN5114	DIGITAL TRANSISTOR	
Q2-4			2SD2114K	TRANSISTOR	
CD PLAYER UNIT (X32-5520-00)					
C5			CK73GB1H104K	CHIP C 0.10UF K	
C6			CK73GB0J225K	CHIP C 2.2UF K	
C8			CK73GB1H104K	CHIP C 0.10UF K	
C9			CK73GB1A224K	CHIP C 0.22UF K	
C10			CK73GB1H104K	CHIP C 0.10UF K	
C11			CK73FB0J475K	CHIP C 4.7UF K	
C12,13			CC73GCH1H680J	CHIP C 68PF J	
C14			CK73FB0J475K	CHIP C 4.7UF K	
C15			CK73FB0J106M	CHIP C 10UF M	
C16			CK73GB1H104K	CHIP C 0.10UF K	
C18			C92-1685-05	ELECTRO 47UF 6.3WV	
C19			CK73GB1H333K	CHIP C 0.033UF K	
C20,21			CK73GB1H103K	CHIP C 0.010UF K	
C22			CK73GB1H333K	CHIP C 0.033UF K	
C23,24			CK73GB1H104K	CHIP C 0.10UF K	
C25			CK73GB0J105K	CHIP C 1.0UF K	
C26			C92-1792-05	ELECTRO 22UF 6.3WV	
C30-32			CK73FB0J106M	CHIP C 10UF M	
C33			CK73GB1H104K	CHIP C 0.10UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K	
C37,38			CK73FB0J475K	CHIP C 4.7UF K	
C39			C92-1792-05	ELECTRO 22UF 6.3WV	
C40			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73FB0J475K	CHIP C 4.7UF K	
C42			CK73FB0J106M	CHIP C 10UF M	
C43-45			CK73GB1H104K	CHIP C 0.10UF K	
C46,47			CC73GCH1H150J	CHIP C 15PF J	
C48			CK73GB1H102K	CHIP C 1000PF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H103K	CHIP C 0.010UF K	
C52			CC73GCH1H470J	CHIP C 47PF J	
C53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CC73GCH1H470J	CHIP C 47PF J	
C55-57			CK73GB1H104K	CHIP C 0.10UF K	
C58			CC73GCH1H020C	CHIP C 2.0PF C	
C59			CC73GCH1H030C	CHIP C 3.0PF C	
C60			CK73GB1H104K	CHIP C 0.10UF K	
C61			CC73GCH1H470J	CHIP C 47PF J	
C62			CC73GCH1H220J	CHIP C 22PF J	
C63			CK73GB1H103K	CHIP C 0.010UF K	
C64			CK73GB1H104K	CHIP C 0.10UF K	
C65			CK73GB1H682K	CHIP C 6800PF K	
C66			CK73GB1H332K	CHIP C 3300PF K	
C67			CK73GB1H103K	CHIP C 0.010UF K	
C68			CK73GB1H104K	CHIP C 0.10UF K	
C69			CK73GB1H103K	CHIP C 0.010UF K	
C70,71			CK73GB1H102K	CHIP C 1000PF K	
C72			CK73GB1H104K	CHIP C 0.10UF K	
C73		*	CK73EB0J226M	CHIP C 22UF M	
C74			CK73GB1H104K	CHIP C 0.10UF K	
C75			CK73GB0J225K	CHIP C 2.2UF K	
C76			CK73FB0J475K	CHIP C 4.7UF K	
C80			CK73GB0J225K	CHIP C 2.2UF K	
C83,84			CK73GB1H104K	CHIP C 0.10UF K	
C85,86			CC73GCH1H681J	CHIP C 680PF J	
C87,88			CC73GCH1H680J	CHIP C 68PF J	
C89,90			CK73GB1H222K	CHIP C 2200PF K	
C91			CC73GCH1H471J	CHIP C 470PF J	
C92			CK73FB0J106M	CHIP C 10UF M	
C93			CK73GB1H103K	CHIP C 0.010UF K	
C94			CK73GB0J105K	CHIP C 1.0UF K	
C95			CK73GB0J225K	CHIP C 2.2UF K	
CN1		*	E41-2046-05	FLAT CABLE CONNECTOR	
CN2		*	E41-2044-05	FLAT CABLE CONNECTOR	
CN3		*	E41-2040-05	FLAT CABLE CONNECTOR	
CN4		*	E41-0336-05	FLAT CABLE CONNECTOR	
CN5		*	E41-2085-05	FLAT CABLE CONNECTOR	
CN6		*	E41-2050-05	SOCKET FOR PIN ASSY	
X1		*	L78-0895-05	RESONATOR (4.00MHZ)	
X2			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)	
CP1			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP2			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP7			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP9			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP13,14			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP15			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP17			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP18			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP19			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP20			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP24,25			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP26			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP27-33			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP34			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP35			RK74GA1J101J	CHIP-COM 100 J 1/16W	
R5			RK73GB2A431J	CHIP R 430 J 1/10W	
R6			RK73GB2A471J	CHIP R 470 J 1/10W	
R7			RK73GB2A121J	CHIP R 120 J 1/10W	
R8			RK73GB2A241J	CHIP R 240 J 1/10W	
R9-12			RK73GB2A103J	CHIP R 10K J 1/10W	

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5520-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R14,15 R16 R17 R18 R19			RK73GB2A103J RK73GB2A302J RK73GB2A101J RK73GB2A102J RK73GB2A223J	CHIP R 10K J 1/10W CHIP R 3.0K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W	
R20 R21,22 R23 R26 R27			RK73GB2A203J RK73GB2A123J RK73GB2A103J RK73GB2A103J R92-3348-05	CHIP R 20K J 1/10W CHIP R 12K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 0.47 J 1/2W	
R28 R29 R32 R33 R34			RK73GB2A101J RK73GB2A472J RK73GB2A4R7J RK73GB2A104J RK73GB2A102J	CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W CHIP R 4.7 J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	
R35 R36 R37 R39 R49,50			RK73GB2A333J RK73FB2B102J RK73GB2A472J RK73GB2A333J RK73GB2A302J	CHIP R 33K J 1/10W CHIP R 1.0K J 1/8W CHIP R 4.7K J 1/10W CHIP R 33K J 1/10W CHIP R 3.0K J 1/10W	
R52,53 R55 R56 R59 R60			RK73GB2A122J RK73GB2A333J RK73GB2A103J RK73GB2A101J RK73GB2A910J	CHIP R 1.2K J 1/10W CHIP R 33K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 91 J 1/10W	
R63 R67 R68 R69 R70		*	RK73GB2A101J RK73GH2A242D RK73GH2A102D RK73GB2A225J RK73GB2A103J	CHIP R 100 J 1/10W CHIP R 2.4K D 1/10W CHIP R 1.0K D 1/10W CHIP R 2.2M J 1/10W CHIP R 10K J 1/10W	
R71,72 R73,74 R75,76 R77,78		*	RK73GH2A113D RK73GB2A303J RK73GH2A113D RK73GB2A331J	CHIP R 11K D 1/10W CHIP R 30K J 1/10W CHIP R 11K D 1/10W CHIP R 330 J 1/10W	
R79,80 R81,82 R83			RK73GB2A272J RK73GB2A752J RK73GB2A222J	CHIP R 2.7K J 1/10W CHIP R 7.5K J 1/10W CHIP R 2.2K J 1/10W	
S3 S4 S5		*	S68-0864-05 S68-0885-05 S68-0864-05	PUSH SWITCH PUSH SWITCH PUSH SWITCH	
D2,3 D4 D6 IC1 IC2		*	DAP202U DA227 DAP202U BD7931F XC6219B332MR	DIODE DIODE DIODE ANALOGUE IC ANALOGUE IC	
IC4 IC5 IC6 IC7 IC8		*	BA033SFP 703260YGCK01A AN41204A UPD63761GJ IC41LV16100S50	ANALOGUE IC MICROCONTROLLER IC ANALOGUE IC MOS-IC DRAM IC	
IC8 IC9 IC10 Q1			MSM51V18165F60 TAR5S33-F NJM4580V-LF DTA143XUA	DRAM IC ANALOGUE IC ANALOGUE IC DIGITAL TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q2 Q6 Q7 Q8 Q9		*	DTC143XUA DTA143XUA DTC143XUA 2SB0970 2SC2873-F	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
Q10 Q11 Q12 Q13		*	UMD9N DTC114YUA DTA143XUA DTC143XUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-3050-11/21, X34-3052-71/72)					
C2 C3 C4 C5 C6		*	CK73GB1H103K C90-5619-05 CK73GB1H103K CD04AT1C100M CD04AT0J101M	CHIP C 0.010UF K ELECTRO 220UF 16WV CHIP C 0.010UF K ELECTRO 10UF 16WV ELECTRO 100UF 6.3WV	
C7 C8 C9 C10 C11			CK73FB1C105K CD04AT1A221M CD04AT1A101M CE32AZ1E221M CK73GB1H332K	CHIP C 1.0UF K ELECTRO 220UF 10WV ELECTRO 100UF 10WV CHIP EL 220UF 25WV CHIP C 3300PF K	
C12 C13 C14 C15 C16			CE32AZ1C221M CK73GB0J105K CK73EB1C225K CK73GB1H103K CE32AZ1C101M	CHIP EL 220UF 16WV CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 0.010UF K CHIP EL 100UF 16WV	
C17 C18 C19 C22 C23			CK73GB1H103K CE32AZ1C101M CD04AT1A101M C93-1218-05 C90-5375-05	CHIP C 0.010UF K CHIP EL 100UF 16WV ELECTRO 100UF 10WV CHIP C 0.010UF K CHIP EL 33UF 63WV	
C30 C31 C32-35 C36 C37			CD04AT1V4R7M C90-2962-05 CK73EB1C225K CD04AS1C220M CK73GB1E223K	ELECTRO 4.7UF 35WV ELECTRO 100UF 16WV CHIP C 2.2UF K ELECTRO 22UF 16WV CHIP C 0.022UF K	
C37 C38 C39,40 C41 C42			CK73GB1H223K CK73GB1H103K CK73EB1C225K CK73GB1H103K CK73GB1E223K	CHIP C 0.022UF K CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 0.022UF K	
C42 C43 C44,45 C46 C47			CK73GB1H223K CK73FB1C105K CK73GB1H103K CK73GB1H102K CK73FB1C105K	CHIP C 0.022UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 1.0UF K	
C48,49 C100 C101 C102 C103			CK73GB1H103K C90-5626-05 CD04AS0J470M CC73GCH1H220J CC73GCH1H270J	CHIP C 0.010UF K ELECTRO 3900UF 16WV ELECTRO 47UF 6.3WV CHIP C 22PF J CHIP C 27PF J	
C104 C106 C107 C109 C110,111			CK73GB0J105K CK73GB0J105K CK73GB1H103K CK73GB1H102K CK73GB1H103K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K	

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3050-11/21, X34-3052-71/72)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C199			CK73GB1C104K	CHIP C 0.10UF K		CN1			E41-0224-05	PIN ASSY	
C199			CK73GB1H104K	CHIP C 0.10UF K		CN2			E40-3237-05	PIN ASSY	
C201,202			CD04AT1V2R2M	ELECTRO 2.2UF 35WV		CN3			E41-0384-05	PIN ASSY	
C203,204			CK73FB1C474K	CHIP C 0.47UF K		CN4		*	E41-2096-05	FLAT CABLE CONNECTOR	
C205			CD04AS0J470M	ELECTRO 47UF 6.3WV		CN5			E40-9368-05	FLAT CABLE CONNECTOR	
C206			CD04AT0J470M	ELECTRO 47UF 6.3WV		CN6			E41-0399-05	FLAT CABLE CONNECTOR	
C207,208			CK73FB1C474K	CHIP C 0.47UF K		CN7			E41-0009-05	PIN ASSY	
C209,210		*	CD04AT1V3R3M	CHIP C 0.010UF K		CN8			E41-0166-05	FLAT CABLE CONNECTOR	
C211			CK73GB1A474K	CHIP C 0.47UF K		J1			E58-0863-15	RECTANGULAR RECEPTACLE	
C212			CC73GCH1H221J	CHIP C 220PF J		P1			E23-0745-05	TERMINAL	
C213			CK73GB1C104K	CHIP C 0.10UF K		W2			E30-6218-05	CORD WITH PLUG	
C213			CK73GB1H104K	CHIP C 0.10UF K		L1			L33-1170-05	CHOKE COIL ASSY	
C214			CK73GB1H103K	CHIP C 0.010UF K		L2			L33-1126-05	CHOKE COIL	
C215			CD04AT1C470M	ELECTRO 47UF 16WV		L3			L33-1029-05	SMALL FIXED INDUCTOR	
C218,219		*	CD04AX1C4R7M	ELECTRO 4.7UF 16WV		L4			L40-2205-34	SMALL FIXED INDUCTOR (22UH)	
C220,221			CK73FB1C105K	CHIP C 1.0UF K		L7			L33-1039-05	LINE FILTER COIL	
C242-245			CK73FB1C105K	CHIP C 1.0UF K	KM1E1	L101			L40-4795-34	SMALL FIXED INDUCTOR	
C242,243			CK73FB1C105K	CHIP C 1.0UF K	E2	L101			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
C245			CK73FB1C105K	CHIP C 1.0UF K	E2	L102			L92-0075-05	CHIP FERRITE	
C246			CK73GB1A105K	CHIP C 1.0UF K		L201			L40-4795-34	SMALL FIXED INDUCTOR	
C247			C90-5663-05	ELECTRO 1UF 50WV		L201			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
C250			CD04AT1V2R2M	ELECTRO 2.2UF 35WV		L303-307			L40-4795-34	SMALL FIXED INDUCTOR	
C264			CD04AT1C220M	ELECTRO 22UF 16WV		L303-307			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
C265			CD04AT1C220M	ELECTRO 22UF 16WV		X1			L78-0821-05	RESONATOR	
C266,267			CD04AT1C100M	ELECTRO 10UF 16WV		X2			L77-2738-05	CRYSTAL RESONATOR	
C268			CD04AT1C220M	ELECTRO 22UF 16WV		X3			L77-2002-05	CRYSTAL RESONATOR	
C269			CD04AT1C220M	ELECTRO 22UF 16WV		X	2D		N80-3008-46	PAN HEAD TAPTITE SCREW	
C270,271			CD04AT1C100M	ELECTRO 10UF 16WV		Y	2D		N83-3010-46	PAN HEAD TAPTITE SCREW	
C272-275			C90-5620-05	ELECTRO 0.47UF 50WV		Z	2D		N84-2004-46	PAN HEAD TAPTITE SCREW	
C276			CK73FB1C105K	CHIP C 1.0UF K		R1			RK73FB2B223J	CHIP R 22K J 1/8W	
C277		*	CD04AT1C330M	ELECTRO 33UF 16WV		R2			RK73GB2A101J	CHIP R 100 J 1/10W	
C278			C90-5663-05	ELECTRO 1UF 50WV		R3			RK73GB2A223J	CHIP R 22K J 1/10W	
C279			CK73FB1C105K	CHIP C 1.0UF K		R4			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C280-283			CK73GB1H222K	CHIP C 2200PF K	E2	R5			RK73FB2B221J	CHIP R 220 J 1/8W	
C280-285			CK73GB1H222K	CHIP C 2200PF K	KM1E1	R6			RK73GB2A153J	CHIP R 15K J 1/10W	
C285			CK73GB1H222K	CHIP C 2200PF K	E2	R7			R92-3032-05	CHIP R 4.3K D 1/10W	
C286			CK73GB1H103K	CHIP C 0.010UF K		R8			R92-3047-05	CHIP R 24K D 1/10W	
C287-289			CK73FB1H104K	CHIP C 0.10UF K		R9			RK73FB2B152J	CHIP R 1.5K J 1/8W	
C290,291			CK73GB1H103K	CHIP C 0.010UF K		R10			R92-3022-05	METAL R 750 D 1/10W	
C292-296			CK73EB1A475K	CHIP C 4.7UF K		R11			R92-3029-05	METAL R 2.4K	
C297,298			CD04AT1C220M	ELECTRO 22UF 16WV	KM1E1	R12			RK73GB2A103J	CHIP R 10K J 1/10W	
C298			CD04AT1C220M	ELECTRO 22UF 16WV	E2	R13			R92-2104-05	CHIP R 2.2 J 1W	
C299,300			CD04AT1C100M	ELECTRO 10UF 16WV	KM1E1	R14			RK73FB2B751J	CHIP R 750 J 1/8W	
C300			CD04AT1C100M	ELECTRO 10UF 16WV	E2	R15			RK73GB2A473J	CHIP R 47K J 1/10W	
C303-305			CK73GB1H103K	CHIP C 0.010UF K		R17			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C307			CK73GB1H103K	CHIP C 0.010UF K		R18			RK73GB2A750J	CHIP R 75 J 1/10W	
C309,310			CC73GCH1H100D	CHIP C 10PF D		R19			RK73GB2A272J	CHIP R 2.7K J 1/10W	
C311			CC73GCH1H331J	CHIP C 330PF J		R20			RK73GB2A470J	CHIP R 47 J 1/10W	
C312			CK73FB1A225K	CHIP C 2.2UF K		R21			RK73GB2A752J	CHIP R 7.5K J 1/10W	
C313			CK73GB1H103K	CHIP C 0.010UF K		R22			RK73GB2A274J	CHIP R 270K J 1/10W	
C314			CD04AT1C100M	ELECTRO 10UF 16WV		R23			RK73GB2A563J	CHIP R 56K J 1/10W	
C316-319			CK73GB1A224K	CHIP C 0.22UF K		R24			RK73GB2A470J	CHIP R 47 J 1/10W	
C503,504			CK73GB1H103K	CHIP C 0.010UF K		R25			RK73GB2A103J	CHIP R 10K J 1/10W	
C603			CK73GB1H103K	CHIP C 0.010UF K		R26,27			RK73GB2A913J	CHIP R 91K J 1/10W	
C701			CK73GB1A474K	CHIP C 0.47UF K							

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3050-11/21, X34-3052-71/72)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R28			RK73FB2B472J	CHIP R 4.7K J 1/8W	K
R29			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	
R30			RK73GB2A223J	CHIP R 22K J 1/10W	
R31			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R32			RK73FB2B561J	CHIP R 560 J 1/8W	
R33			RK73GB2A473J	CHIP R 47K J 1/10W	
R34			RK73GB2A223J	CHIP R 22K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B103J	CHIP R 10K J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R41			RK73GB2A223J	CHIP R 22K J 1/10W	
R42			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R43			RK73EB2E473J	CHIP R 47K J 1/4W	
R44			RK73GB2A183J	CHIP R 18K J 1/10W	
R45			RK73GB2A104J	CHIP R 100K J 1/10W	K
R46,47			RK73EB2E103J	CHIP R 10K J 1/4W	
R48			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R49			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	
R50			RK73GB2A683J	CHIP R 68K J 1/10W	
R51			RK73GB2A104J	CHIP R 100K J 1/10W	
R52			RK73GB2A101J	CHIP R 100 J 1/10W	
R53			RK73GB2A393J	CHIP R 39K J 1/10W	
R54			RK73GB2A103J	CHIP R 10K J 1/10W	
R55			RK73GB2A474J	CHIP R 470K J 1/10W	
R101			RK73GB2A223J	CHIP R 22K J 1/10W	M1
R102			RK73GB2A153J	CHIP R 15K J 1/10W	
R103			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A103J	CHIP R 10K J 1/10W	
R106,107			RK73GB2A103J	CHIP R 10K J 1/10W	
R107,108			RK73GB2A103J	CHIP R 10K J 1/10W	E1
R108,109			RK73GB2A103J	CHIP R 10K J 1/10W	K
R109			RK73GB2A103J	CHIP R 10K J 1/10W	M1
R110			RK73GB2A104J	CHIP R 100K J 1/10W	KE1E2
R115,116			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R118-120			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R121			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R122-126			RK73GB2A101J	CHIP R 100 J 1/10W	
R122,123			RK73GB2A101J	CHIP R 100 J 1/10W	M1
R127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R128			RK73GB2A104J	CHIP R 100K J 1/10W	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R130			RK73GB2A104J	CHIP R 100K J 1/10W	
R131			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73GB2A104J	CHIP R 100K J 1/10W	
R133-136			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R137			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R138-140			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R141			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R142,143			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R144			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R145			RK73GB2A103J	CHIP R 10K J 1/10W	
R148			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R150,151			RK73GB2A104J	CHIP R 100K J 1/10W	
R152,153			RK73GB2A222J	CHIP R 2.2K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R156			RK73GB2A104J	CHIP R 100K J 1/10W	
R158			RK73GB2A104J	CHIP R 100K J 1/10W	
R159,160			RK73GB2A471J	CHIP R 470 J 1/10W	
R161			RK73GB2A104J	CHIP R 100K J 1/10W	
R163,164			RK73GB2A471J	CHIP R 470 J 1/10W	
R165,166			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R167			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R168			RK73GB2A223J	CHIP R 22K J 1/10W	
R170			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R171,172			RK73GB2A471J	CHIP R 470 J 1/10W	
R173,174			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R175			RK73GB2A333J	CHIP R 33K J 1/10W	
R176			RK73GB2A473J	CHIP R 47K J 1/10W	
R177			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R178			RK73GB2A103J	CHIP R 10K J 1/10W	
R180			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R181			RK73GB2A473J	CHIP R 47K J 1/10W	
R182			RK73GB2A104J	CHIP R 100K J 1/10W	
R183,184			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R186			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R188			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R189-194			RK73GB2A101J	CHIP R 100 J 1/10W	
R195			RK73GB2A471J	CHIP R 470 J 1/10W	
R202			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R203,204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R211			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R216,217			RK73GB2A151J	CHIP R 150 J 1/10W	
R220,221			RK73FB2B361J	CHIP R 360 J 1/8W	
R222,223			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R224,225			RK73FB2B103J	CHIP R 10K J 1/8W	
R226,227			RK73FB2B223J	CHIP R 22K J 1/8W	
R228,229			RK73FB2B820J	CHIP R 82 J 1/8W	
R232,233			RK73FB2B361J	CHIP R 360 J 1/8W	
R234,235			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R236,237			RK73FB2B103J	CHIP R 10K J 1/8W	
R238,239			RK73FB2B223J	CHIP R 22K J 1/8W	KM1E1
R240,241			RK73FB2B820J	CHIP R 82 J 1/8W	
R244,245			RK73FB2B361J	CHIP R 360 J 1/8W	
R245			RK73FB2B361J	CHIP R 360 J 1/8W	
R246,247			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R247			RK73FB2B222J	CHIP R 2.2K J 1/8W	E2
R248,249			RK73FB2B103J	CHIP R 10K J 1/8W	KM1E1
R249			RK73FB2B103J	CHIP R 10K J 1/8W	E2
R250,251			RK73FB2B223J	CHIP R 22K J 1/8W	KM1E1
R251			RK73FB2B223J	CHIP R 22K J 1/8W	E2
R252,253			RK73FB2B820J	CHIP R 82 J 1/8W	KM1E1
R253			RK73FB2B820J	CHIP R 82 J 1/8W	
R256			RK73GB2A221J	CHIP R 220 J 1/10W	
R257			RK73GB2A223J	CHIP R 22K J 1/10W	
R258			RK73GB2A473J	CHIP R 47K J 1/10W	
R259			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R260			RK73GB2A100J	CHIP R 10 J 1/10W	
R261			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R262			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R263,264			RK73EB2E100J	CHIP R 10 J 1/4W	

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3050-11/21, X34-3052-71/72)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R265,266			RK73GB2A102J	CHIP R 1.0K J 1/10W		D204,205			RD6.8M (B2)	ZENER DIODE	
R267			RK73EB2E100J	CHIP R 10 J 1/4W		D206			RD6.8MW	ZENER DIODE	
R268			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D207,208			DAP202U	DIODE	
R269			RK73EB2E100J	CHIP R 10 J 1/4W		D207,208	*		LM1MA142WA-G	DIODE	
R270			RK73GB2A473J	CHIP R 47K J 1/10W		D207,208			MA142WA	DIODE	
R271			RK73GB2A821J	CHIP R 820 J 1/10W		D209-216			S1J	DIODE	
R272,273			RK73GB2A103J	CHIP R 10K J 1/10W		D209-216			1SR154-400	DIODE	
R274			RK73GB2A104J	CHIP R 100K J 1/10W		D217			DA204K	DIODE	
R275			RK73GB2A473J	CHIP R 47K J 1/10W		D301			IMSA-6801	SURGE ABSORBER	
R276			RK73GB2A102J	CHIP R 1.0K J 1/10W		D501-505			STZ6.8N	ZENER DIODE	E1E2
R277			RK73GB2A473J	CHIP R 47K J 1/10W		D503-505			STZ6.8N	ZENER DIODE	KM1
R278			RK73GB2A333J	CHIP R 33K J 1/10W		D506-509			DA204K	DIODE	
R279,280			RK73GB2A334J	CHIP R 330K J 1/10W		D601			DA204K	DIODE	
R303			RK73FB2B102J	CHIP R 1.0K J 1/8W		IC1	*		703030YGCJ07-A	MICROCONTROLLER IC	
R304			RK73GB2A223J	CHIP R 22K J 1/10W		IC2			E-TDA7414	ANALOGUE IC	
R305			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC3			M5237ML	ANALOGUE IC	
R306-308			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC4			E-TDA7560A	ANALOGUE IC	
R501,502			RK73EB2E101J	CHIP R 100 J 1/4W		IC7			ICL7660SIBA	ANALOGUE IC	
R503-507			RK73EB2E472J	CHIP R 4.7K J 1/4W		IC8			S-80837CNNB	MOS-IC	
R508			RK73EB2E101J	CHIP R 100 J 1/4W		IC9			SN74HC02NSR	MOS-IC	
R509-511			RK73EB2E471J	CHIP R 470 J 1/4W	KE1E2	IC9			TC74HC02AF	MOS-IC	
R512			RK73EB2E102J	CHIP R 1.0K J 1/4W	KE1E2	IC10-13			NJM4565M-TE2	ANALOGUE IC	
R517,518			RK73EB2E100J	CHIP R 10 J 1/4W		IC14			TDA7479D	ANALOGUE IC	
R519			RK73EB2E471J	CHIP R 470 J 1/4W		IC15,16			LB1930M-E	ANALOGUE IC	
R520			RK73EB2E472J	CHIP R 4.7K J 1/4W		IC18			L9820D013TR	ANALOGUE IC	
R521-524			RK73GB2A222J	CHIP R 2.2K J 1/10W		IC19			LM2672M-ADJ	ANALOGUE IC	
R525			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC20			TC7W02F	MOS-IC	
R526,527			RK73GB2A473J	CHIP R 47K J 1/10W		Q1			2SB1565 (E,F)	TRANSISTOR	
R615-618			RK73GB2A102J	CHIP R 1.0K J 1/10W		Q2			2SC4081	TRANSISTOR	
R620			RK73EB2E102J	CHIP R 1.0K J 1/4W		Q3			2SA1576A	TRANSISTOR	
W3			R92-1252-05	CHIP R 0 OHM J 1/16W	M1E1E2	Q4			DTA124EUA	DIGITAL TRANSISTOR	
W4,5			R92-2052-05	CHIP R 0 OHM J 1/10W	E2	Q4			UN5112	DIGITAL TRANSISTOR	
W6			R92-1252-05	CHIP R 0 OHM J 1/16W		Q5			DTC124EUA	DIGITAL TRANSISTOR	
D1			1N5393G-M5	DIODE		Q5			UN5212	DIGITAL TRANSISTOR	
D2			RB160L-40	DIODE		Q6			DTC144EUA	DIGITAL TRANSISTOR	
D3			UDZS5.6B	ZENER DIODE		Q6			UN5213	DIGITAL TRANSISTOR	
D4			UDZS8.2B	ZENER DIODE		Q7			DTA124EUA	DIGITAL TRANSISTOR	
D5			SFPB-54V	DIODE		Q7			UN5112	DIGITAL TRANSISTOR	
D6			UDZS10B	ZENER DIODE		Q8,9			2SB1565 (E,F)	TRANSISTOR	
D8			UDZS11B	ZENER DIODE		Q11			DTC124EE	DIGITAL TRANSISTOR	
D9			UDZS5.6B	ZENER DIODE		Q12			DTA124EE	DIGITAL TRANSISTOR	
D16			UDZS5.6B	ZENER DIODE		Q13			2SB1565 (E,F)	TRANSISTOR	
D17			UDZS4.7B	ZENER DIODE		Q14			2SC4081	TRANSISTOR	
D18			UDZS6.8B	ZENER DIODE		Q15			2SB1443	TRANSISTOR	
D19			UDZS6.2B	ZENER DIODE		Q16,17			2SC4081	TRANSISTOR	
D20,21			DAP202U	DIODE		Q18,19			2SA1576A	TRANSISTOR	
D20,21	*		LM1MA142WA-G	DIODE		Q20			2SC4081	TRANSISTOR	
D20,21			MA142WA	DIODE		Q21			2SA1576A	TRANSISTOR	
D22			UDZS6.8B	ZENER DIODE		Q22			2SC4081	TRANSISTOR	
D23			DAP202U	DIODE		Q23			DTC114YUA	DIGITAL TRANSISTOR	K
D23	*		LM1MA142WA-G	DIODE		Q23			UN5214	DIGITAL TRANSISTOR	K
D23			MA142WA	DIODE		Q24			2SB1240	TRANSISTOR	K
D201,202			RD6.8M (B2)	ZENER DIODE		Q25			DTA123JK	DIGITAL TRANSISTOR	
D203			RD6.8MW	ZENER DIODE		Q25			KRA105S	DIGITAL TRANSISTOR	
						Q26			DTC144EUA	DIGITAL TRANSISTOR	

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3050-11/21, X34-3052-71/72)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q26			UN5213	DIGITAL TRANSISTOR	
Q27			2SC4081	TRANSISTOR	
Q29			2SC4081	TRANSISTOR	
Q30,31			DTA124EUA	DIGITAL TRANSISTOR	
Q30,31			UN5112	DIGITAL TRANSISTOR	
Q32			2SC4081	TRANSISTOR	
Q33			2SA1576A	TRANSISTOR	
Q34			DTA124EUA	DIGITAL TRANSISTOR	
Q34			UN5112	DIGITAL TRANSISTOR	
Q201			DTC143TUA	DIGITAL TRANSISTOR	
Q201			UN5216	DIGITAL TRANSISTOR	
Q202			DTC124EUA	DIGITAL TRANSISTOR	
Q202			UN5212	DIGITAL TRANSISTOR	
Q203-207			DTC143TUA	DIGITAL TRANSISTOR	E2
Q203-207			UN5216	DIGITAL TRANSISTOR	E2
Q203-208			DTC143TUA	DIGITAL TRANSISTOR	KM1E1
Q203-208			UN5216	DIGITAL TRANSISTOR	KM1E1
Q210			2SC4081	TRANSISTOR	
Q303			DTC124EUA	DIGITAL TRANSISTOR	
Q303			UN5212	DIGITAL TRANSISTOR	
Q304			2SB1188 (Q, R)	TRANSISTOR	
Q601			DTC124EUA	DIGITAL TRANSISTOR	
Q601			UN5212	DIGITAL TRANSISTOR	
Q602			2SC4081	TRANSISTOR	
TH1			PTH9C42BD471Q	POSITIVE RESISTOR	
A2		*	W02-3456-05	ELECTRIC CIRCUIT MODULE	
A1			X86-3730-11	FRONT-END UNIT	K
A1			X86-3732-70	FRONT-END UNIT	M1E1E2
ELECTRIC UNIT (X34-3060-10, X34-3062-71)					
C1,2			CD04AT1C220M	ELECTRO 22UF 16WV	
C3,4			CK73GB1H152K	CHIP C 1500PF K	
C21-24			CD04AT1C220M	ELECTRO 22UF 16WV	
C25,26			CK73GB1H102K	CHIP C 3900PF K	
C27-30			CK73GB1H102K	CHIP C 1000PF K	
C31-34			CD04AT1C220M	ELECTRO 22UF 16WV	
C35,36			CK73GB1H392K	CHIP C 3900PF K	
C37-40			CK73GB1H102K	CHIP C 1000PF K	
C41-44			CD04AT1C220M	ELECTRO 22UF 16WV	KM1E1
C42			CD04AT1C220M	ELECTRO 22UF 16WV	E2
C44			CD04AT1C220M	ELECTRO 22UF 16WV	E2
C45,46			CK73GB1H392K	CHIP C 3900PF K	KM1E1
C46			CK73GB1H392K	CHIP C 3900PF K	E2
C47-50			CK73GB1H102K	CHIP C 1000PF K	KM1E1
C48			CK73GB1H102K	CHIP C 1000PF K	E2
C50			CK73GB1H102K	CHIP C 1000PF K	E2
C111-116			CK73GB1H103K	CHIP C 0.010UF K	E2
C111-118			CK73GB1H103K	CHIP C 0.010UF K	KM1E1
C121,122			CD04AT1C100M	ELECTRO 10UF 16WV	
C123			CD04AT1C220M	ELECTRO 22UF 16WV	
C124			CK73GB1H103K	CHIP C 0.010UF K	
C126			CK73GB1H103K	CHIP C 0.010UF K	
C127,128			CD04AT1C100M	ELECTRO 10UF 16WV	
C131			CK73GB1H103K	CHIP C 0.010UF K	
C141			CD04AT1C101M	ELECTRO 100UF 16WV	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C142			CK73GB1H103K	CHIP C 0.010UF K	
C143			C90-5680-05	CHIEPEL 100UF 16WV	
C144			CK73GB1H103K	CHIP C 0.010UF K	
C145,146			CC73GCH1H180J	CHIP C 18PF J	
C147-150			CK73GB1H103K	CHIP C 0.010UF K	
C151			CK73GB1C104K	CHIP C 0.10UF K	
C151			CK73GB1H104K	CHIP C 0.10UF K	
C152			CD04AT1C100M	ELECTRO 10UF 16WV	
C153			CK73GB1H103K	CHIP C 0.010UF K	
C154			CK73GB1C104K	CHIP C 0.10UF K	
C154			CK73GB1H104K	CHIP C 0.10UF K	
C155			CD04AT1C100M	ELECTRO 10UF 16WV	
C156			CK73GB1H682K	CHIP C 6800PF K	
C161	*		CD04AT1H2R2M	ELECTRO 2.2UF 50WV	
C162,163			CK73GB1H103K	CHIP C 0.010UF K	
C171			CK73GB1H103K	CHIP C 0.010UF K	
C172			C92-0628-05	CHIP-TAN 10UF 10WV	
C173			CK73GB1H103K	CHIP C 0.010UF K	
C174			C92-0628-05	CHIP-TAN 10UF 10WV	
C181,182			CD04AT1C220M	ELECTRO 22UF 16WV	
CN1			E41-0166-05	FLAT CABLE CONNECTOR	
L1-8			L92-0332-05	CHIP FERRITE	
L9			L40-2205-34	SMALL FIXED INDUCTOR(22UH)	
L10,11			L40-1005-68	SMALL FIXED INDUCTOR	
X1			L77-2776-05	CRYSTAL RESONATOR	
R1-8	*		RK73GH2A103D	CHIP R 10K D 1/10W	
R9-12	*		RK73GH2A241D	CHIP R 240 D 1/10W	
R13-20	*		RK73GH2A471D	CHIP R 470 D 1/10W	
R31-34	*		RK73GH2A272D	CHIP R 2.7K D 1/10W	
R35,36			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R37,38			RK73GH2A681D	CHIP R 680 D 1/10W	
R39,40			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R41,42			RK73GH2A681D	CHIP R 680 D 1/10W	
R45-48	*		RK73GH2A272D	CHIP R 2.7K D 1/10W	
R49,50			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R51,52			RK73GH2A681D	CHIP R 680 D 1/10W	
R53,54			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R55,56			RK73GH2A681D	CHIP R 680 D 1/10W	
R57,58			RK73GB2A151J	CHIP R 150 J 1/10W	
R59,60	*		RK73GH2A272D	CHIP R 2.7K D 1/10W	KM1E1
R62			RK73GH2A681D	CHIP R 680 D 1/10W	KM1E1
R63,64			RK73GH2A432D	CHIP R 4.3K D 1/10W	KM1E1
R65			RK73GH2A681D	CHIP R 680 D 1/10W	KM1E1
R66			RK73GB2A151J	CHIP R 150 J 1/10W	KM1E1
R67,68	*		RK73GH2A272D	CHIP R 2.7K D 1/10W	
R69			RK73GH2A681D	CHIP R 680 D 1/10W	
R70,71			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R72			RK73GH2A681D	CHIP R 680 D 1/10W	
R73			RK73GB2A103J	CHIP R 10K J 1/10W	E2
R76-79			RK73GB2A103J	CHIP R 10K J 1/10W	
R80			RK73GB2A151J	CHIP R 150 J 1/10W	
R81-84			RK73GB2A103J	CHIP R 10K J 1/10W	KM1E1
R87,88			RK73GB2A103J	CHIP R 10K J 1/10W	KM1E1
R89,90			RK73GB2A151J	CHIP R 150 J 1/10W	KM1E1

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3060-10, X34-3062-71)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R91,92			RK73GB2A151J	CHIP R 150 J 1/10W	E2
R112			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R113		*	RK73FB2B132J	CHIP R 1.3K J 1/8W	
R114			RK73FB2B391J	CHIP R 390 J 1/8W	
R121-126			RK73GB2A101J	CHIP R 100 J 1/10W	
R127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R155			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R156			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R157			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R158-163			RK73GB2A100J	CHIP R 10 J 1/10W	E2
R158-165			RK73GB2A100J	CHIP R 10 J 1/10W	KM1E1
R166-168			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R171,172			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
W3,4			R92-1252-05	CHIP R 0 OHM J 1/16W	E2
D1			HZ6C2L	ZENER DIODE	
D2			DA204U	DIODE	
IC1-6			NJM4580M1	ANALOGUE IC	
IC7			TC9214AF	MOS-IC	KM1E1
IC8,9			NJM4580M1	ANALOGUE IC	KM1E1
IC9			NJM4580M1	ANALOGUE IC	E2
IC10		*	AK7720AVT	MOS-IC	
IC11		*	IC63LV102415TG	SRAM IC	
IC12			TC74HC4050AFT	MOS-IC	
IC13,14		*	S-816A34AMCT2G	ANALOGUE IC	
Q1,2			2SB1188 (Q, R)	TRANSISTOR	
CD MECHANISM (X92-4780-00)					
1	1B	*	A10-5084-01	CHASSIS	
2	2B	*	A10-5102-01	CHASSIS INJECTION MOLD	
4	1B	*	D10-4763-02	ARM	
5	1B	*	D10-4764-03	ARM	
6	2A	*	D10-4765-03	LEVER ASSY	
7	2B	*	D10-4768-02	SLIDER	
8	2B	*	D10-4769-03	SLIDER	
9	2A	*	D10-4771-02	SLIDER	
10	2A	*	D10-4772-03	SLIDER	
11	2A	*	D10-4773-03	SLIDER	
12	2B	*	D10-4774-03	LEVER	
13	2B	*	D10-4776-03	ARM	
14	3A	*	D10-4795-03	ARM	
15	2B	*	D10-4804-03	ARM	
21	2B	*	D13-2298-04	GEAR	
22	2B	*	D13-2299-04	GEAR	
23	3B	*	D13-2303-04	GEAR	
24	3B	*	D13-2305-04	GEAR	
25	3B	*	D13-2306-04	GEAR	
26	2A	*	D13-2308-04	GEAR	
27	2A	*	D13-2309-04	GEAR	
28	3B	*	D13-2316-04	GEAR ASSY	
30	2A	*	D14-0788-04	ROLLER	
33	3A	*	D21-2433-04	SHAFT	
37	1A	*	D39-0259-05	DAMPER	
39	3B	*	E39-0556-05	LEAD WIRE	
FC1	3A	*	E39-0602-05	FLAT CABLE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
41	2B	*	F07-1132-04	COVER	
42	3B	*	F07-1133-03	COVER	
43	3B	*	F09-1869-04	SHEET	
44	3A	*	F09-1870-04	SHEET	
45	2B	*	G01-3192-04	EXTENSION SPRING	
46	2B	*	G01-3194-04	EXTENSION SPRING	
47	1A	*	G01-3195-04	EXTENSION SPRING	
48	2A	*	G01-3206-04	TORSION COIL SPRING	
49	2A	*	G01-3207-04	TORSION COIL SPRING	
50	2B	*	G01-3208-04	TORSION COIL SPRING	
52	2B	*	G02-1465-03	FLAT SPRING	
53	1B	*	G02-1466-04	FLAT SPRING	
54	3A	*	G02-1467-04	FLAT SPRING	
55	3A	*	G02-1473-04	FLAT SPRING	
56	3B	*	G02-1488-04	FLAT SPRING	
57	2B	*	J11-0654-03	CLAMPER	
59	1A	*	J22-0042-02	MOUNTING HARDWARE	
60	1B	*	J22-0043-02	MOUNTING HARDWARE	
61	3B	*	J22-0044-03	MOUNTING HARDWARE	
62	1A	*	J22-0103-03	MOUNTING HARDWARE ASSY	
63	3B	*	J22-0177-04	MOUNTING HARDWARE	
64	2A	*	J90-1066-01	GUIDE	
65	1A	*	J90-1067-03	GUIDE	
66	2A	*	J90-1087-02	GUIDE	
67	2B	*	J90-1088-02	GUIDE	
A	2A	*	N09-6143-05	MACHINE SCREW	
B	1A	*	N09-6144-05	MACHINE SCREW	
C	3A	*	N09-6145-05	MACHINE SCREW	
D	3B	*	N09-6156-05	MACHINE SCREW (M1.4X1.6/#0#2)	
E	1B	*	N09-6230-05	MACHINE SCREW	
F	2A	*	N19-2192-04	FLAT WASHER	
DM1	3B	*	T42-1083-05	MOTOR ASSY (SPINDLE)	
DM2	3A	*	T42-1084-05	MOTOR ASSY (FEED)	
DM3	3B	*	T42-1096-04	MOTOR ASSY (LOADING)	
DPC1	3A	*	X93-2100-00	OPTICAL PICKUP ASSY	

K : KDC-X979 E1 : KDC-PSW9527 E2 : KDC-W9027 M1 : KDC-9026R

△ Indicates safety critical components.