

EXPLODED VIEW (DVD MECHANISM)

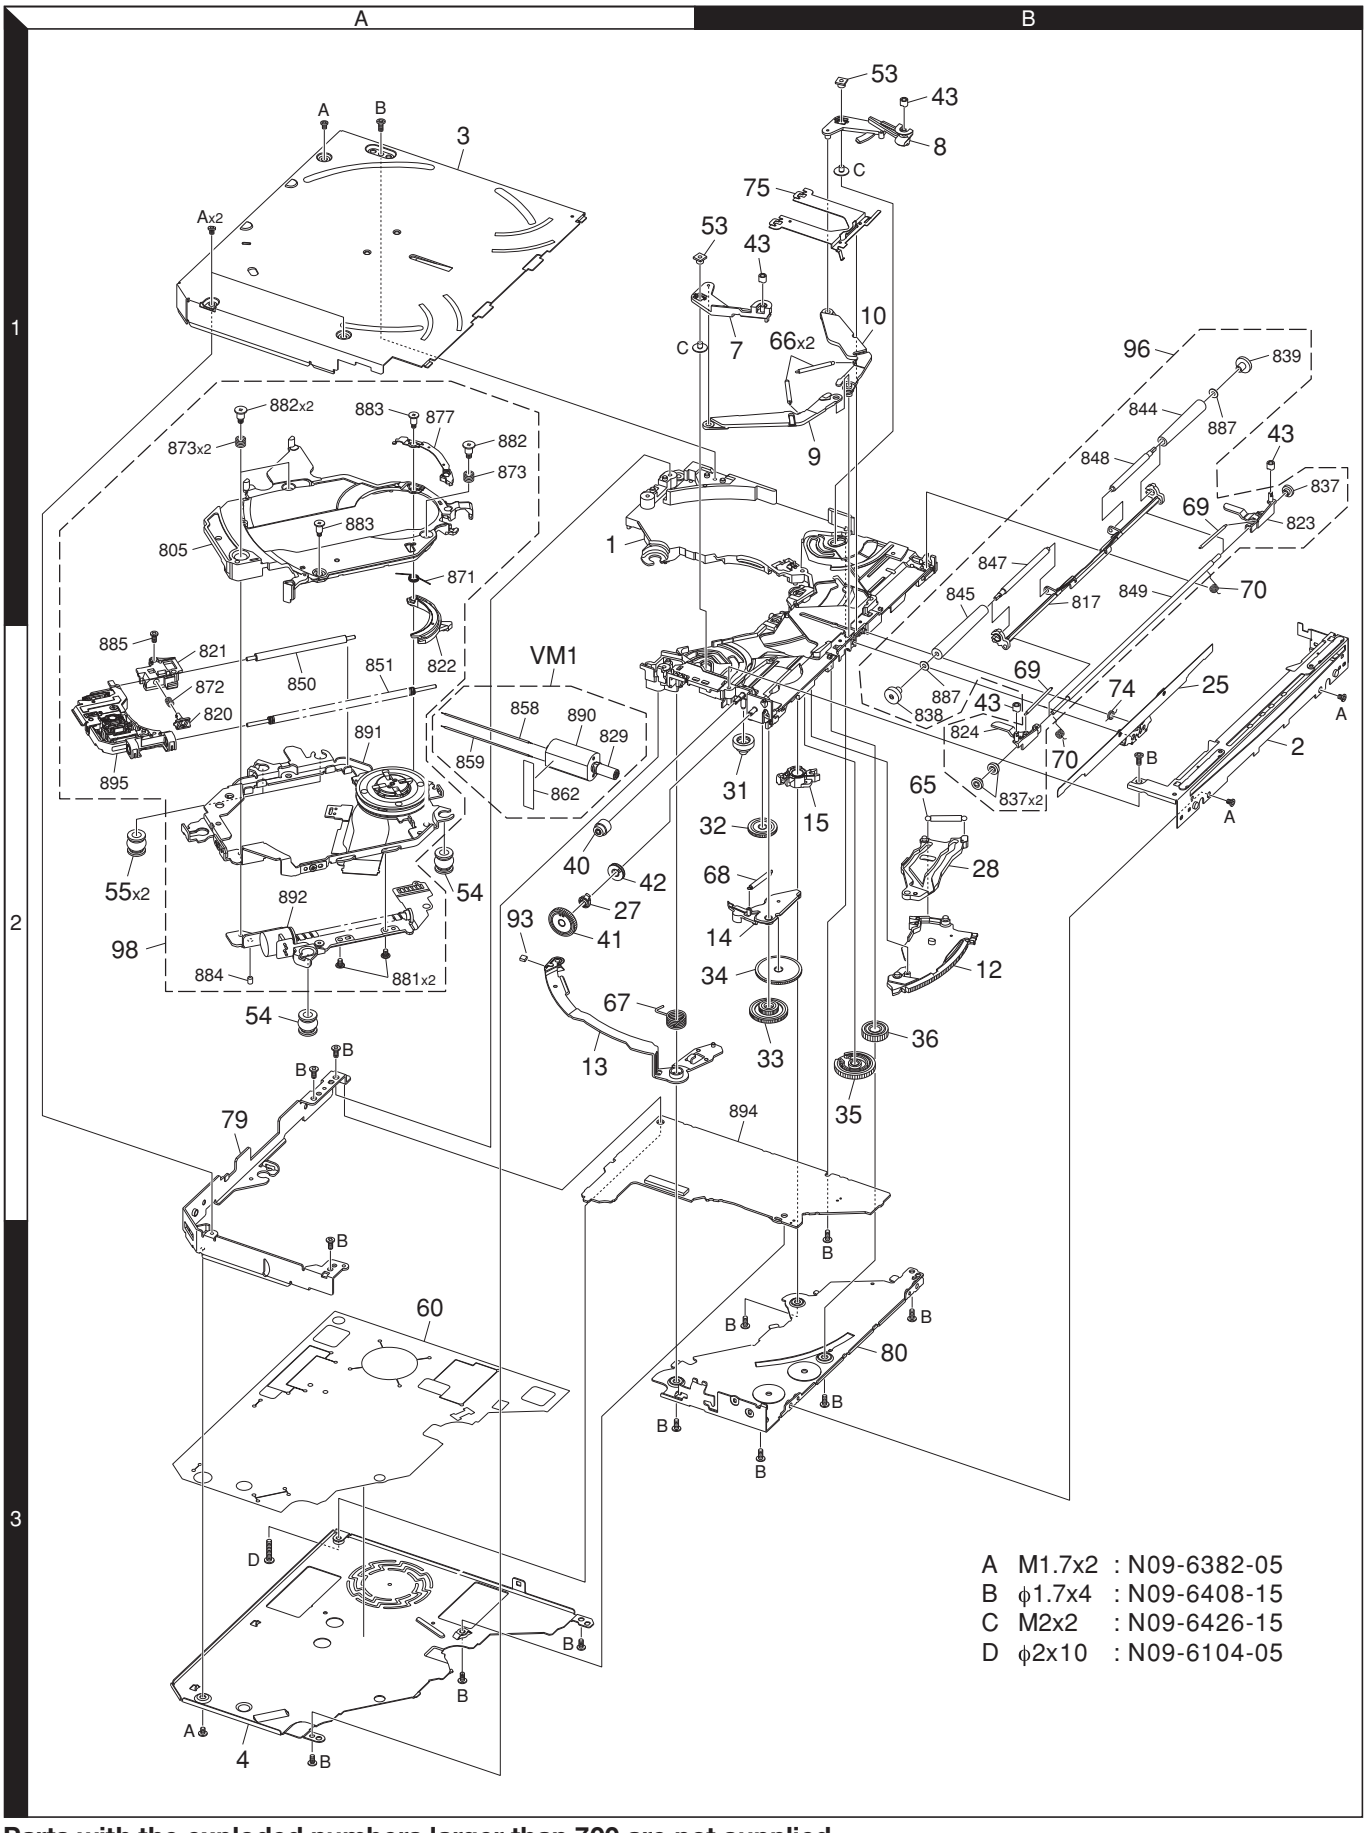

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

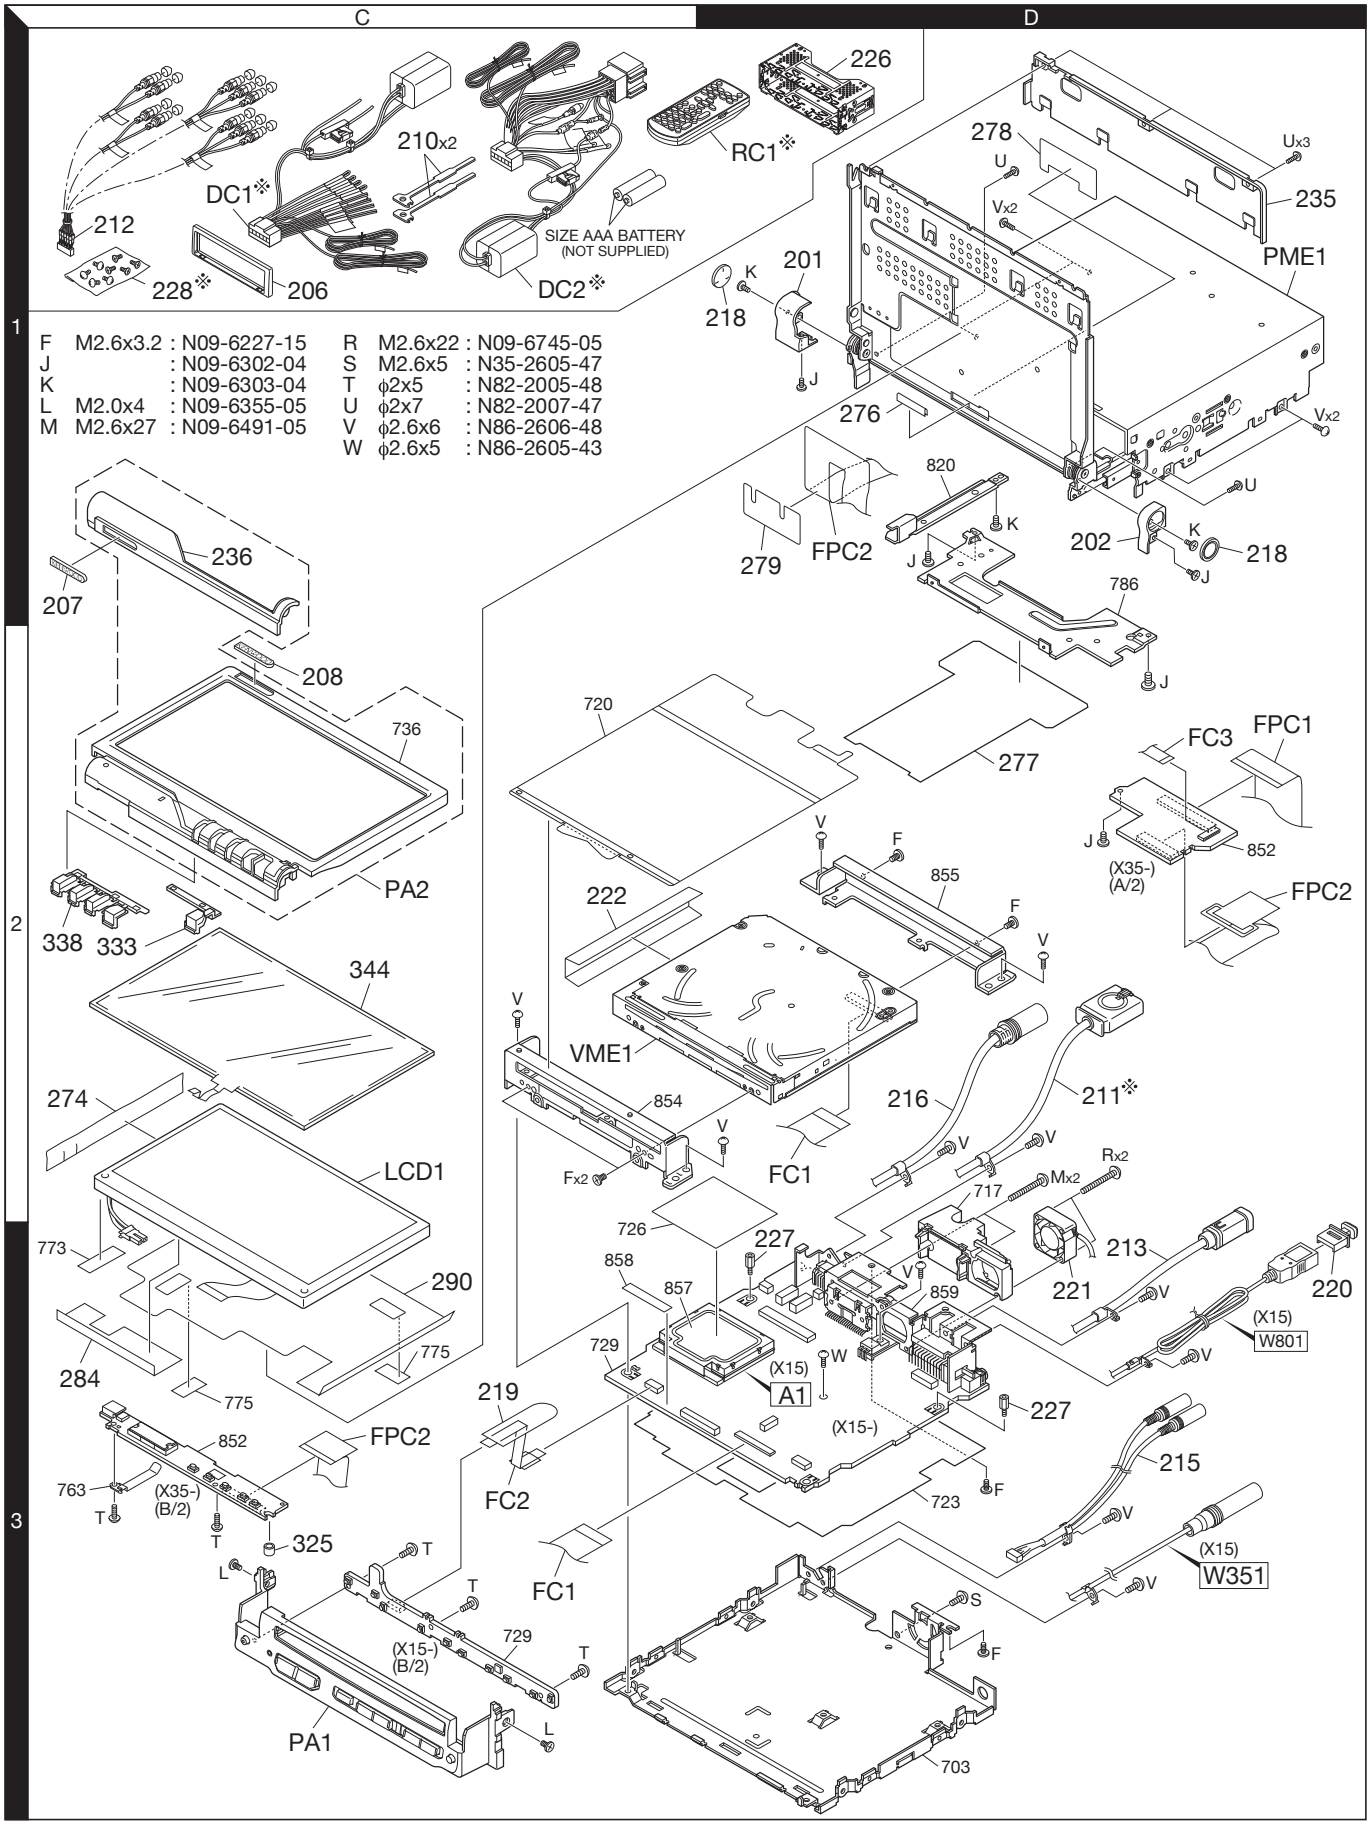


F	M2.6x3.2	: N09-6227-15	R	M2.6x22	: N09-6745-05
J		: N09-6302-04	S	M2.6x5	: N35-2605-47
K		: N09-6303-04	T	ϕ2x5	: N82-2005-48
L	M2.0x4	: N09-6355-05	U	ϕ2x7	: N82-2007-47
M	M2.6x27	: N09-6491-05	V	ϕ2.6x6	: N86-2606-48
			W	ϕ2.6x5	: N86-2605-43

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (DISPLAY ASSY)

A		: N09-6205-05
B	M2x2.2	: N09-6206-05
C	M2x3.5	: N09-6207-05
D		: N09-6211-05
E		: N09-6255-05
H	M1.7x2.2	: N09-6270-05
N	WASHER (1.6x4)	: N19-2195-04
P	WASHER	: N19-2303-04
Q	RETAINING RING	: N29-0538-04
AA	WASHER	: N19-2327-04
AB	WASHER	: N19-2328-04

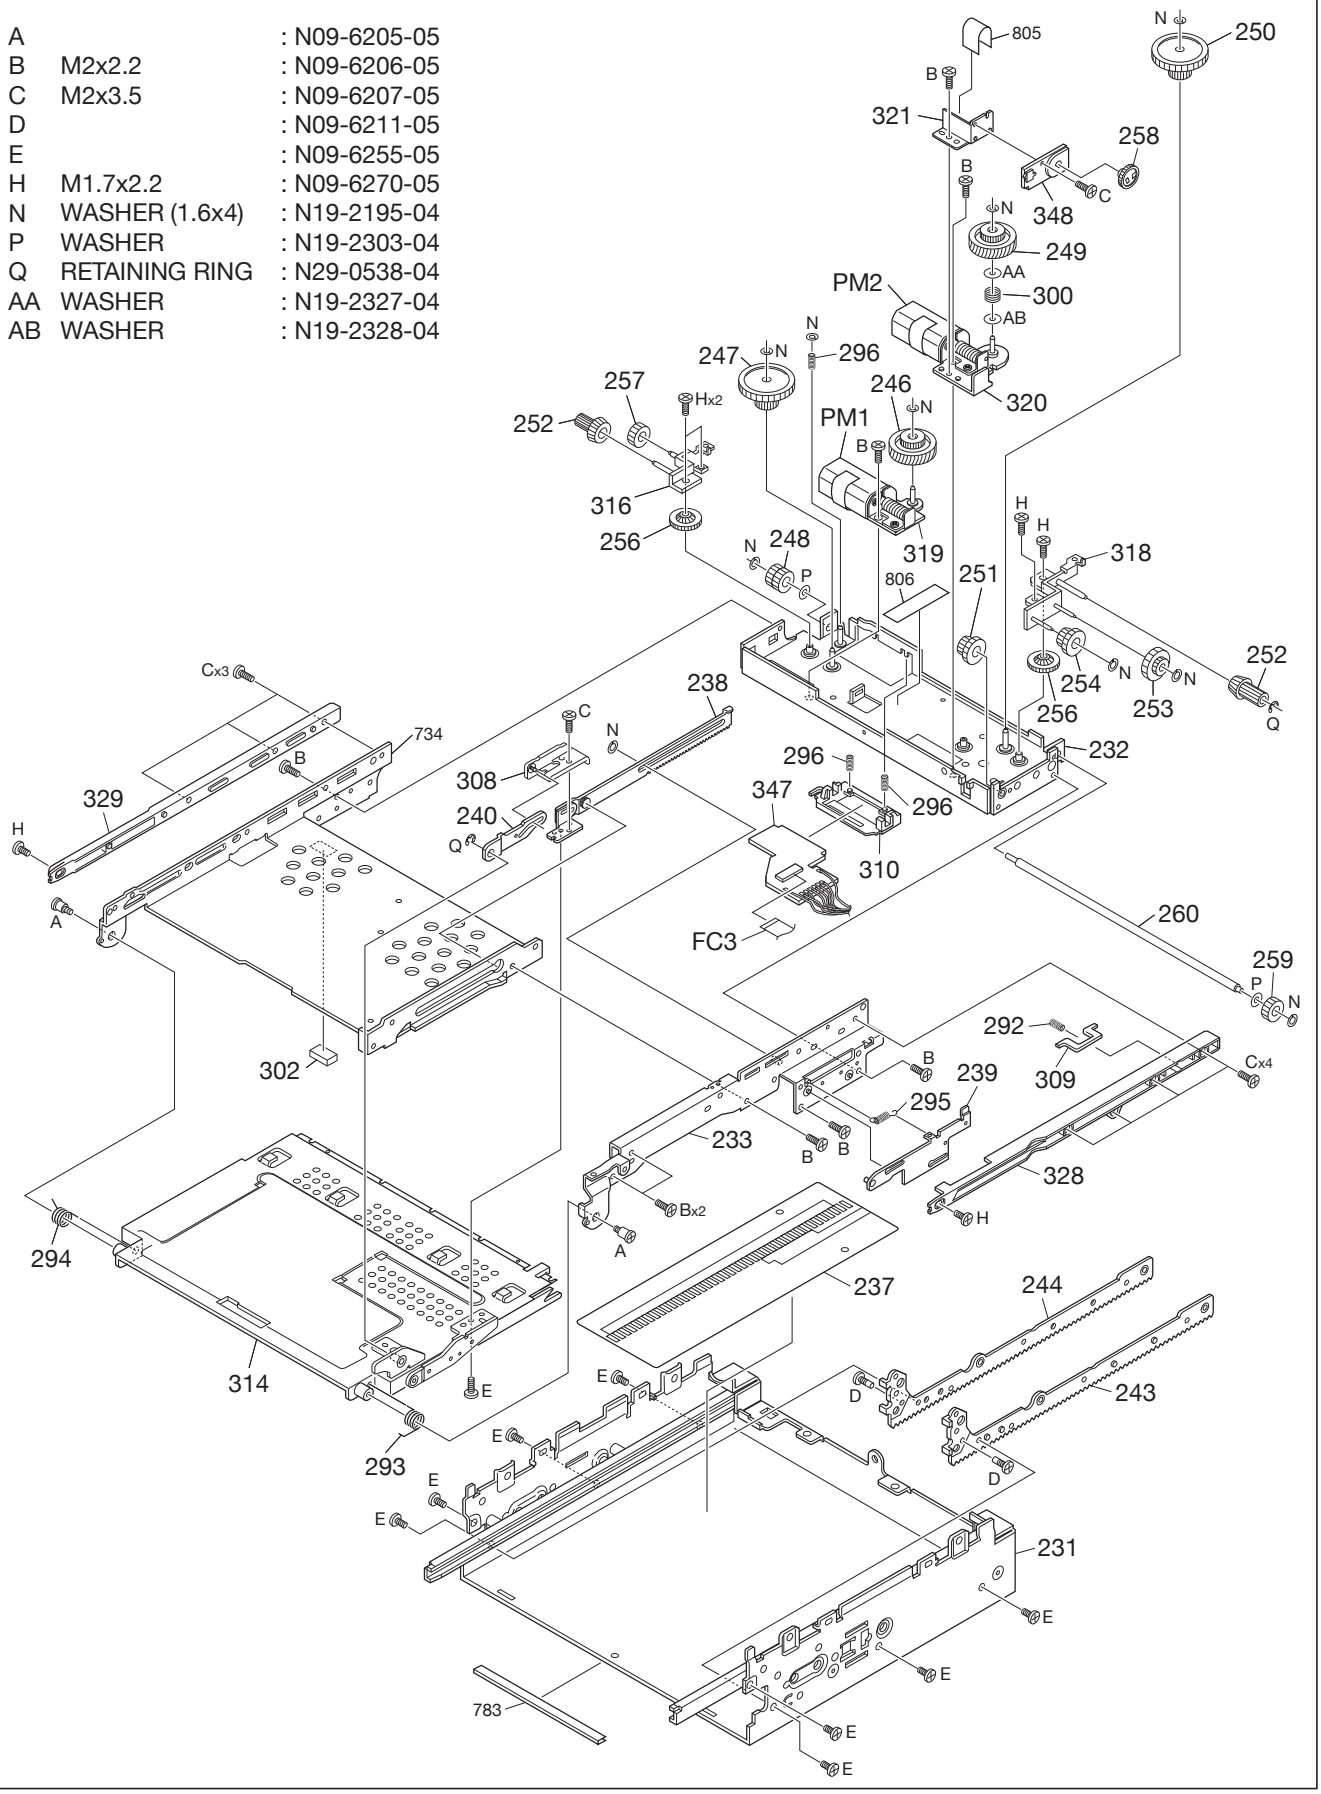

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KVT-514/524DVD/534DVD/534DVDM/54DVDR/554DVD					
201	1D		A21-6612-02+	DRESSING PANEL	Q2
201	1D		A21-6662-12+	DRESSING PANEL	KR1E1
201	1D		A21-6662-12+	DRESSING PANEL	Q1M1M2
201	1D		A21-6662-12+	DRESSING PANEL	X1
202	1D		A21-6613-03+	DRESSING PANEL	Q2
202	1D		A21-6663-03+	DRESSING PANEL	KR1E1
202	1D		A21-6663-03+	DRESSING PANEL	Q1M1M2
202	1D		A21-6663-03+	DRESSING PANEL	X1
PA1	3C	✻	A64-4904-02	PANEL ASSY	KR1X1
PA1	3C	✻	A64-4906-02	PANEL ASSY	E1Q1M1
PA1	3C	✻	A64-4906-02	PANEL ASSY	M2
PA1	3C	✻	A64-4914-02	PANEL ASSY	Q2
RC1	1C		A70-2083-15	REMOTE CONTROLLER ASS (RC-DV340	R1Q1Q2
RC1	1C		A70-2083-15	REMOTE CONTROLLER ASS(RC-DV340	M1M2X1
-		✻	B54-4697-00	INSTALLATION MANU (ENG.FRE.SPA)	KR1
-		✻	B54-4698-00	INSTALLATION MANUAL (POR.)	R1
-		✻	B54-4699-00	INSTALLATION MANUAL (RUS.)	Q1Q2
-		✻	B54-4700-00	INSTALLATION MANUAL (ENG.UKR.)	E1Q1Q2
-		✻	B54-4701-00	INSTALLATION MANU (F.G.D.I.S.P)	E1
-		✻	B54-4702-00	INSTALLATION MANUAL (ENG.)	M1M2X1
-		✻	B54-4703-00	INSTALLATION MANUAL (S-CHI.KOR)	M1
-		✻	B54-4704-00	INSTALLATION MANUAL (ARA.)	M2
-		✻	B64-4280-00	INSTRUCTION MANUAL (ENG.)	KR1
-		✻	B64-4281-00	INSTRUCTION MANUAL (FRE.)	K
-		✻	B64-4282-00	INSTRUCTION MANUAL (SPA.)	KR1
-		✻	B64-4283-00	INSTRUCTION MANUAL (POR.)	R1
-		✻	B64-4284-00	INSTRUCTION MANUAL (RUS.)	Q1Q2
-		✻	B64-4285-00	INSTRUCTION MANUAL (ENG.)	E1Q1Q2
-		✻	B64-4286-00	INSTRUCTION MANUAL (FRE.)	E1
-		✻	B64-4287-00	INSTRUCTION MANUAL (GER.)	E1
-		✻	B64-4288-00	INSTRUCTION MANUAL (DUT.)	E1
-		✻	B64-4289-00	INSTRUCTION MANUAL (ITA.)	E1
-		✻	B64-4290-00	INSTRUCTION MANUAL (SPA.)	E1
-		✻	B64-4291-00	INSTRUCTION MANUAL (POR.)	E1
-		✻	B64-4292-00	INSTRUCTION MANUAL (ENG.)	M1M2X1
-		✻	B64-4294-00	INSTRUCTION MANUAL (S-CHI.)	M1
-		✻	B64-4295-00	INSTRUCTION MANUAL (KOR.)	M1
-		✻	B64-4296-00	INSTRUCTION MANUAL (ARA.)	M2
-		✻	B64-4356-00	INSTRUCTION MANUAL (UKR.)	E1Q1Q2
206	1C		B07-3159-02	ESCUTCHEON	Q2
206	1C	✻	B07-3314-02	ESCUTCHEON	KR1E1
206	1C	✻	B07-3314-02	ESCUTCHEON	Q1M1M2
206	1C	✻	B07-3314-02	ESCUTCHEON	X1
207	1C		B43-1518-04	BADGE	
208	2C		B43-1527-04	BADGE	
210	1C		D10-7012-04	LEVER	
211	2D		E30-6812-05	CORD WITH PLUG	E1Q1Q2
211	2D		E30-6812-05	CORD WITH PLUG	M1M2X1
212	1C		E30-6813-05	CORD WITH PINPLUG	
213	3D		E30-6814-05	CONNECTING CORD ASSY	
215	3D		E30-6817-05	CORD WITH PLUG (IPOD)	
216	2D		E30-6818-05	CORD WITH PLUG (NAVI)	
⚠ DC1	1C		E30-6815-15	DC CORD	KR1M1
⚠ DC1	1C		E30-6815-15	DC CORD	M2X1
⚠ DC2	1C	✻	E30-6816-15	DC CORD (ISO)	E1Q1Q2
FC1	2D		E39-0999-15	FLAT CABLE (50P)	
FC2	3C		E39-1000-15	FLAT CABLE (11P)	
218	1D	✻	F07-2213-04	COVER	Q2
218	1D	✻	F07-2215-04	COVER	KR1E1
218	1D	✻	F07-2215-04	COVER	Q1M1M2
218	1D	✻	F07-2215-04	COVER	X1
219	3C		F09-1206-04	SHEET	
220	2D		F09-2929-04	CAP (USB)	
221	3D		F09-2971-05	FAN (5V 7000RPM)	
222	2C	✻	F12-0973-04	SHIELDING SHEET	E1Q1Q2
222	2C	✻	F12-0973-04	SHIELDING SHEET	M1M2
F3	1C		F05-1537-05	FUSE 15A	
-		✻	H54-4515-03	ITEM CARTON CASE	K
-		✻	H54-4516-03	ITEM CARTON CASE	R1
-		✻	H54-4517-03	ITEM CARTON CASE	E1
-		✻	H54-4518-03	ITEM CARTON CASE	Q1
-		✻	H54-4519-03	ITEM CARTON CASE	Q2
-		✻	H54-4520-03	ITEM CARTON CASE	M1X1
-		✻	H54-4521-03	ITEM CARTON CASE	M2
226	1D		J21-9716-03	MOUNTING HARDWARE ASSY	
227	3D		J32-1388-04	HEXAGON BOSS	
228	1C		N99-1758-15	SCREW SET	KR1M1
228	1C		N99-1758-15	SCREW SET	M2X1
F	3D		N09-6227-15	MACHINE SCREW (M2.6X 3.2NI)	
J	1D		N09-6302-04	MACHINE SCREW	
K	1D		N09-6303-04	MACHINE SCREW	
L	3C		N09-6355-05	MACHINE SCREW (M2.0X4)	
M	2D		N09-6491-05	MACHINE SCREW (M2.6X27)	
R	2D	✻	N09-6745-05	MACHINE SCREW (M2.6X22)	
S	3D		N35-2605-47	BINDING HEAD MACHINE SCREW	
T	3C		N82-2005-48	BINDING HEAD TAPTITE SCREW	
V	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
W	3D		N86-2605-43	BINDING HEAD TAPTITE SCREW	
DISPLAY ASSY					
231	3F		A10-5164-12	CHASSIS CALKING ASSY	
232	2F		A10-5166-33	CHASSIS CALKING ASSY	
233	2F		A10-5168-13	CHASSIS CALKING ASSY	
235	1D		A46-1857-22+	REAR COVER	
PA2	2C	✻	A64-4888-01	PANEL ASSY	K
PA2	2C	✻	A64-4889-01	PANEL ASSY	R1
PA2	2C	✻	A64-4890-01	PANEL ASSY	E1
PA2	2C	✻	A64-4891-01	PANEL ASSY	Q1
PA2	2C	✻	A64-4892-01	PANEL ASSY	Q2
PA2	2C	✻	A64-4902-01	PANEL ASSY	M1M2X1
PME1	1D		A10-5171-51	CHASSIS ASSY	
236	1C	✻	B07-3297-02	ESCUTCHEON	K
236	1C	✻	B07-3298-02	ESCUTCHEON	R1
236	1C	✻	B07-3299-02	ESCUTCHEON	E1

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

DISPLAY ASSY

Ref. No.	Add	New	Parts No.	Description	Destination
236	1C	✻	B07-3300-02	ESCUTCHEON	Q1
236	1C	✻	B07-3301-02	ESCUTCHEON	Q2
236	1C	✻	B07-3305-02	ESCUTCHEON	M1M2X1
237	3F		B11-1453-04	REFLECTION SHEET	
LCD1	2C	✻	B38-1203-05	LCD	
238	2F		D10-4836-13	ARM ASSY	
239	2F		D10-4837-34	LEVER ASSY	
240	2E		D10-4840-03	ARM	
243	3F		D13-2335-03	RACK (GEAR)	
244	3F		D13-2336-03	RACK (GEAR)	
246	1F		D13-2338-04	GEAR	
247	1F		D13-2339-04	GEAR	
248	2F		D13-2340-04	GEAR	
249	1F		D13-2341-04	GEAR	
250	1F		D13-2342-04	GEAR	
251	1F		D13-2343-04	GEAR	
252	1E		D13-2344-04	GEAR	
253	2F		D13-2345-04	GEAR	
254	2F		D13-2346-04	GEAR	
256	1E		D13-2349-04	GEAR	
257	1E		D13-2350-04	GEAR	
258	1F		D13-2351-04	GEAR	
259	2F		D13-2457-04	GEAR	
260	2F		D21-2446-13	EXTENSION SHAFT	
FC3	2F2D		E39-0665-05	FLAT CABLE	
274	2C		F09-2950-04	SHEET	
276	1D		F09-2951-14	SHEET	
277	2D		F09-2952-04	SHEET	
278	1D		F09-2953-04	SHEET	
279	1D		F09-2954-04	SHEET	
284	3C		F12-0966-04	SHIELDING SHEET	
290	3C		F20-2447-03	INSULATING SHEET	
292	2F		G01-3222-04	COMPRESSION SPRING	
293	3E		G01-3223-14	TORSION COIL SPRING	
294	3E		G01-3224-04	TORSION COIL SPRING	
295	2F		G01-3225-04	EXTENSION SPRING	
296	2F		G01-3226-04	COMPRESSION SPRING	
300	1F		G01-4653-04	COMPRESSION SPRING	
302	2E		G11-3587-04	CUSHION	
308	2E		J19-7004-03	HOLDER	
309	2F		J19-7005-04	STABILIZER	
310	2F		J19-7007-03	HOLDER	
314	3E		J22-0198-32	MOUNTING HARDWARE ASSY	
316	1E		J22-0200-14	MOUNTING HARDWARE ASSY	
318	1F		J22-0202-14	MOUNTING HARDWARE ASSY	
319	1F		J22-0203-23	MOUNTING HARDWARE ASSY	
320	1F		J22-0206-33	MOUNTING HARDWARE ASSY	
321	1F		J22-0212-04	MOUNTING HARDWARE	
325	3C		J39-0864-14	SPACER	
328	2F		J90-1092-03	GUIDE	
329	2E		J90-1093-03	GUIDE	
FPC1	2D		J86-0052-05	FPC (LEAD FREE) (68P)	
FPC2	2D		J86-0038-15	FPC (LEAD FREE) (50P)	

Ref. No.	Add	New	Parts No.	Description	Destination
333	2C		K24-4866-13	PUSH KNOB	
338	2C		K25-1925-12	PUSH KNOB	
A	2E		N09-6205-05	STEPPED SCREW	
AA	1F		N19-2327-04	FLAT WASHER	
AB	1F		N19-2328-04	FLAT WASHER	
B	2F		N09-6206-05	MACHINE SCREW (M2X2.2)	
C	2E		N09-6207-05	MACHINE SCREW (M2X3.5)	
D	3F		N09-6211-05	STEPPED SCREW	
E	3F		N09-6225-05	MACHINE SCREW	
H	2E		N09-6270-05	MACHINE SCREW (M1.7X2.2)	
J	1D		N09-6302-04	MACHINE SCREW	
K	1D		N09-6303-04	MACHINE SCREW	
N	1F		N19-2195-04	FLAT WASHER (1.6X4X0.25)	
P	2F		N19-2303-04	FLAT WASHER	
Q	2E		N29-0538-04	RETAINING RING (2)	
T	3C		N82-2005-48	BINDING HEAD TAPTITE SCREW	
U	1D		N82-2007-47	BINDING HEAD TAPTITE SCREW	
344	2C		S79-0858-05	SWITCH ASSY (7INCH)	
PM1	1F		T42-1097-04	MOTOR ASSY	
PM2	1F		T42-1099-04	MOTOR ASSY	
347	2F		W02-5121-05	ELECTRIC CIRCUIT MODULE	
348	1F		W02-5122-05	ELECTRIC CIRCUIT MODULE	

DVD PLAYER ASSY

F	3D		N09-6227-15	MACHINE SCREW (M2.6X 3.2NI)			
VME1	2C		X92-6400-00	DVD MECHANISM ASSY (DVS-8220W)			

VIDEO CONTROL UNIT (X15-127x-xx)

D551-559			B30-1605-05	LED (2COLOR PG/RED)			
D560			B30-1779-05	LED (1608_SR)			
D561			B30-1605-05	LED (2COLOR PG/RED)			
C1			CK73FB1C105K	CHIP C	1.0UF	K	
C2			CK73HB1E103K	CHIP C	0.010UF	K	
C3 ,4			CK73FB1C105K	CHIP C	1.0UF	K	
C5 -7			CK73HB1E103K	CHIP C	0.010UF	K	
C8			C90-5670-05	ELECTRO	2200UF	16WV	
C9			CK73FB1A335K	CHIP C	3.3UF	K	
C10			CK73FB1C105K	CHIP C	1.0UF	K	
C11			C90-5670-05	ELECTRO	2200UF	16WV	
C12			CK73GB1H104K	CHIP C	0.10UF	K	
C13			CK73HB1E103K	CHIP C	0.010UF	K	
C14			CK73FB1E474K	CHIP C	0.47UF	K	
C15			CK73GB1H104K	CHIP C	0.10UF	K	
C16			CK73EB1C106K	CHIP C	10UF	K	
C18			CE32BQ1C221M	CHIP EL	220UF	16WV	
C19			CE32BF0J101M	CHIP EL	100UF	6.3WV	
C21			CK73FB0J475K	CHIP C	4.7UF	K	
C22			CK73HB0J105K	CHIP C	1.0UF	K	
C24			CK73GB1H104K	CHIP C	0.10UF	K	
C25			CE32BQ1C101M	CHIP EL	100UF	16WV	
C26			CK73FB1E474K	CHIP C	0.47UF	K	
C27			CK73GB1A105K	CHIP C	1.0UF	K	
C28			CE32BQ1C101M	CHIP EL	100UF	16WV	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C29			CK73FB0J475K	CHIP C	4.7UF	K	
C31			CK73GB0J106M	CHIP C	10UF	M	
C32			CK73FB1E104K	CHIP C	0.10UF	K	
C35			CC73HCH1H101J	CHIP C	100PF	J	
C36			CK73HB1C473K	CHIP C	0.047UF	K	
C37			CC73HCH1H221J	CHIP C	220PF	J	
C38			CC73HCH1H101J	CHIP C	100PF	J	
C39			CC73HCH1H470J	CHIP C	47PF	J	
C40			CC73HCH1H221J	CHIP C	220PF	J	
C41			CK73HB1C473K	CHIP C	0.047UF	K	
C43 ,44			CK73HB1E103K	CHIP C	0.010UF	K	
C45			CK73HB1E223K	CHIP C	0.022UF	K	
C46			CK73HB1E103K	CHIP C	0.010UF	K	
C48 -50			CK73HB1H102K	CHIP C	1000PF	K	
C51 ,52			CK73HB1H222K	CHIP C	2200PF	K	
C53			CK73FB0J106K	CHIP C	10UF	K	
C54			CK73GB1H104K	CHIP C	0.10UF	K	
C55			CK73HB1E103K	CHIP C	0.010UF	K	
C56			CK73GB1C104K	CHIP C	0.10UF	K	
C57			CK73FB0J106K	CHIP C	10UF	K	
C58			CK73HB1E103K	CHIP C	0.010UF	K	
C59 -61			CK73GB1H104K	CHIP C	0.10UF	K	
C62			CK73HB1H102K	CHIP C	1000PF	K	
C63			CK73GB1C104K	CHIP C	0.10UF	K	
C64 ,65			CK73HB1H102K	CHIP C	1000PF	K	
C66			CK73EB1E225K	CHIP C	2.2UF	K	
C67			CK73HB1H102K	CHIP C	1000PF	K	
C68 -70			CK73GB1H104K	CHIP C	0.10UF	K	
C71			CK73HB1H102K	CHIP C	1000PF	K	
C72 ,73			CK73HB1E103K	CHIP C	0.010UF	K	
C74 -76			CK73HB1H102K	CHIP C	1000PF	K	
C77			CE32AV1A121M	CHIP EL	120UF	10WV	
C78			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C80			CK73HB1E103K	CHIP C	0.010UF	K	
C81			CK73GB1H104K	CHIP C	0.10UF	K	
C82 ,83			CE32BQ1E680M	CHIP EL	68UF	25WV	
C84			CK73GB1H104K	CHIP C	0.10UF	K	
C85			CK73HB1E103K	CHIP C	0.010UF	K	
C87 ,88			CK73HB1E103K	CHIP C	0.010UF	K	
C89 ,90			CK73HB1A104K	CHIP C	0.10UF	K	
C91			CC73HCH1H101J	CHIP C	100PF	J	
C92			CK73GB1C104K	CHIP C	0.10UF	K	
C93			CC73HCH1H221J	CHIP C	220PF	J	
C94 ,95			CC73HCH1H470J	CHIP C	47PF	J	
C96			CC73HCH1H221J	CHIP C	220PF	J	
C97			CK73HB1C473K	CHIP C	0.047UF	K	
C99			CK73HB1E103K	CHIP C	0.010UF	K	
C100			CK73HB1E223K	CHIP C	0.022UF	K	
C101			CK73HB1E153K	CHIP C	0.015UF	K	
C103-105			CK73HB1H102K	CHIP C	1000PF	K	
C106			CK73FB0J106K	CHIP C	10UF	K	
C107			CK73GB1H104K	CHIP C	0.10UF	K	
C108			CK73HB1E103K	CHIP C	0.010UF	K	
C109			CK73GB1C104K	CHIP C	0.10UF	K	
C110			CK73FB0J106K	CHIP C	10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C111			CK73HB1E103K	CHIP C	0.010UF	K	
C112-114			CK73GB1H104K	CHIP C	0.10UF	K	
C115			CK73HB1H102K	CHIP C	1000PF	K	
C116			CK73GB1C104K	CHIP C	0.10UF	K	
C117,118			CK73HB1H102K	CHIP C	1000PF	K	
C119			CK73EB1E225K	CHIP C	2.2UF	K	
C120			CK73HB1H102K	CHIP C	1000PF	K	
C121-123			CK73GB1H104K	CHIP C	0.10UF	K	
C124			CK73HB1H102K	CHIP C	1000PF	K	
C125,126			CK73HB1E103K	CHIP C	0.010UF	K	
C127-129			CK73HB1H102K	CHIP C	1000PF	K	
C130,131			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C133			CK73HB1E103K	CHIP C	0.010UF	K	
C134			CK73GB1H104K	CHIP C	0.10UF	K	
C135,136			CE32BQ1E680M	CHIP EL	68UF	25WV	
C137			CK73GB1H104K	CHIP C	0.10UF	K	
C138			CK73HB1E103K	CHIP C	0.010UF	K	
C139			CK73EB1E225K	CHIP C	2.2UF	K	
C140,141			CK73HB1E103K	CHIP C	0.010UF	K	
C142-144			CK73HB1A104K	CHIP C	0.10UF	K	
C145			CK73HB1E103K	CHIP C	0.010UF	K	
C146			CK73EB1C106K	CHIP C	10UF	K	
C147			CK73HB1A104K	CHIP C	0.10UF	K	
C148			CK73HB1E103K	CHIP C	0.010UF	K	
C149			CK73EB1C106K	CHIP C	10UF	K	
C150			CK73HB1A104K	CHIP C	0.10UF	K	
C151			CK73HB1E103K	CHIP C	0.010UF	K	
C152			CK73HB1A104K	CHIP C	0.10UF	K	
C153			CK73HB1E103K	CHIP C	0.010UF	K	
C154			CK73HB1A104K	CHIP C	0.10UF	K	
C155			CK73HB1E103K	CHIP C	0.010UF	K	
C156			CK73HB1A104K	CHIP C	0.10UF	K	
C157			CK73HB1E103K	CHIP C	0.010UF	K	
C161			CK73HB1E103K	CHIP C	0.010UF	K	
C162			CK73HB1A104K	CHIP C	0.10UF	K	
C163			CK73HB1E103K	CHIP C	0.010UF	K	
C164			CK73GB1C104K	CHIP C	0.10UF	K	
C165,166			CK73HB0J105K	CHIP C	1.0UF	K	
C167			CK73HB1A104K	CHIP C	0.10UF	K	
C168			CK73HB1H221K	CHIP C	220PF	K	
C169			CK73HB1A104K	CHIP C	0.10UF	K	
C170			CK73HB1H221K	CHIP C	220PF	K	
C171			CK73HB1A104K	CHIP C	0.10UF	K	
C172			CK73HB1H221K	CHIP C	220PF	K	
C173			CK73GB1H104K	CHIP C	0.10UF	K	
C175			CK73EB1E106K	CHIP C	10UF	K	
C178			CK73EB1E106K	CHIP C	10UF	K	
C180			CK73EB1E106K	CHIP C	10UF	K	
C181			CK73EB1E225K	CHIP C	2.2UF	K	
C182			CK73HB1A104K	CHIP C	0.10UF	K	
C183			CK73HB1H102K	CHIP C	1000PF	K	
C184,185			CK73GB0J106M	CHIP C	10UF	M	
C186-192			CK73HB1A104K	CHIP C	0.10UF	K	
C193			CC73HCH1H180J	CHIP C	18PF	J	
C194			CC73HCH1H220J	CHIP C	22PF	J	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C195			CK73HB1E103K	CHIP C	0.010UF	K	
C196			CK73HB1A104K	CHIP C	0.10UF	K	
C197			CK73HB1E103K	CHIP C	0.010UF	K	
C199-201			CK73HB1A104K	CHIP C	0.10UF	K	
C202			CK73HB1E103K	CHIP C	0.010UF	K	
C203			CK73HB1H102K	CHIP C	1000PF	K	
C229			CK73HB1E103K	CHIP C	0.010UF	K	
C351			CK73HB0J105K	CHIP C	1.0UF	K	
C352			CE32CL1E330M	CHIP EL	33UF	25WV	
C353-358			CK73FB1C105K	CHIP C	1.0UF	K	
C359			CK73HB1H102K	CHIP C	1000PF	K	
C360			CK73HB0J105K	CHIP C	1.0UF	K	
C361			CK73HB1A104K	CHIP C	0.10UF	K	
C362			CK73EB1C106K	CHIP C	10UF	K	
C363,364			CK73HB1H102K	CHIP C	1000PF	K	
C365			CK73EB1C106K	CHIP C	10UF	K	
C366			CK73HB1A104K	CHIP C	0.10UF	K	
C367			CK73EB1C106K	CHIP C	10UF	K	
C368,369			CK73HB1H102K	CHIP C	1000PF	K	
C370			CK73EB1C106K	CHIP C	10UF	K	
C371			CK73HB1A104K	CHIP C	0.10UF	K	
C372			CK73EB1C106K	CHIP C	10UF	K	
C373,374			CK73HB1H102K	CHIP C	1000PF	K	
C375			CK73EB1C106K	CHIP C	10UF	K	
C376			CK73HB1E103K	CHIP C	0.010UF	K	
C377			CK73GB1A474K	CHIP C	0.47UF	K	
C378			CK73GB0J106M	CHIP C	10UF	M	
C379			CK73GB1A474K	CHIP C	0.47UF	K	
C380-383			CK73FB1C105K	CHIP C	1.0UF	K	
C384			CK73FB1A475K	CHIP C	4.7UF	K	
C385			CK73HB1H102K	CHIP C	1000PF	K	
C386			CK73GB0J475K	CHIP C	4.7UF	K	
C387			CK73GB0J106M	CHIP C	10UF	M	
C388			CK73GB0J475K	CHIP C	4.7UF	K	
C389			CK73HB1H102K	CHIP C	1000PF	K	
C390-392			CK73HB1E103K	CHIP C	0.010UF	K	
C397			CK73HB1A104K	CHIP C	0.10UF	K	
C404			CK73EB1C106K	CHIP C	10UF	K	KR1E1
C404			CK73EB1C106K	CHIP C	10UF	K	Q1Q2M1
C404			CK73EB1C106K	CHIP C	10UF	K	M2
C405			CK73HB1E103K	CHIP C	0.010UF	K	KR1E1
C405			CK73HB1E103K	CHIP C	0.010UF	K	Q1Q2M1
C405			CK73HB1E103K	CHIP C	0.010UF	K	M2
C406,407			CC73HCH1H070D	CHIP C	7.0PF	D	KR1E1
C406,407			CC73HCH1H070D	CHIP C	7.0PF	D	Q1Q2M1
C406,407			CC73HCH1H070D	CHIP C	7.0PF	D	M2
C409			CK73EB1C106K	CHIP C	10UF	K	KR1E1
C409			CK73EB1C106K	CHIP C	10UF	K	Q1Q2M1
C409			CK73EB1C106K	CHIP C	10UF	K	M2
C410			CC73HCH1H331J	CHIP C	330PF	J	KR1E1
C410			CC73HCH1H331J	CHIP C	330PF	J	Q1Q2M1
C410			CC73HCH1H331J	CHIP C	330PF	J	M2
C411-413			CK73GB1A105K	CHIP C	1.0UF	K	
C414			CK73HB1A104K	CHIP C	0.10UF	K	
C417-419			CK73GB1A474K	CHIP C	0.47UF	K	E1Q1Q2
C417-419			CK73GB1A474K	CHIP C	0.47UF	K	M1M2X1
C423			CK73GB1A474K	CHIP C	0.47UF	K	
C424			CK73GB0J106M	CHIP C	10UF	M	
C425			CK73GB1A474K	CHIP C	0.47UF	K	
C427			CK73HB1A104K	CHIP C	0.10UF	K	E1Q1Q2
C427			CK73HB1A104K	CHIP C	0.10UF	K	M1M2X1
C428,429			CK73FB1A335K	CHIP C	3.3UF	K	
C430			CK73HB1A104K	CHIP C	0.10UF	K	E1Q1Q2
C430			CK73HB1A104K	CHIP C	0.10UF	K	M1M2X1
C431			CK73FB1A475K	CHIP C	4.7UF	K	
C432-434			CK73HB0J105K	CHIP C	1.0UF	K	
C435,436			CK73GB1A105K	CHIP C	1.0UF	K	
C437,438			CK73HB0J474K	CHIP C	0.47UF	K	
C439,440			CK73GB1A105K	CHIP C	1.0UF	K	
C441			CK73HB0J105K	CHIP C	1.0UF	K	
C443			CK73HB1E103K	CHIP C	0.010UF	K	
C446			CK73HB1E103K	CHIP C	0.010UF	K	
C447			CK73GB0J106M	CHIP C	10UF	M	
C448,449			CK73FB1C105K	CHIP C	1.0UF	K	
C454,455			CC73HCH1H070D	CHIP C	7.0PF	D	
C456			CE32CL1C470M	CHIP EL	47UF	16WV	
C457			CE32BQ0J331M	CHIP EL	330UF	6.3WV	
C459,460			CK73HB1A104K	CHIP C	0.10UF	K	
C462			CK73HB0J105K	CHIP C	1.0UF	K	
C463			CC73GCH1H101J	CHIP C	100PF	J	KR1
C463			CC73GCH1H121J	CHIP C	120PF	J	E1Q1Q2
C463			CC73GCH1H121J	CHIP C	120PF	J	M1M2X1
C464			CC73GCH1H680J	CHIP C	68PF	J	E1Q1Q2
C464			CC73GCH1H680J	CHIP C	68PF	J	M1M2X1
C465			CK73HB0J105K	CHIP C	1.0UF	K	E1Q1Q2
C465			CK73HB0J105K	CHIP C	1.0UF	K	M1M2X1
C466			CC73GCH1H100D	CHIP C	10PF	D	E1Q1Q2
C466			CC73GCH1H100D	CHIP C	10PF	D	M1M2X1
C466			CC73GCH1H101J	CHIP C	100PF	J	KR1
C467			CK73HB1A104K	CHIP C	0.10UF	K	
C468			CK73GB0J106M	CHIP C	10UF	M	
C469			CK73GB1C225K	CHIP C	2.2UF	K	
C470			CK73HB0J105K	CHIP C	1.0UF	K	
C471			CK73GB1C225K	CHIP C	2.2UF	K	
C472-474			CK73HB0J105K	CHIP C	1.0UF	K	
C475			CK73HB1A104K	CHIP C	0.10UF	K	
C476			CK73GB0J106M	CHIP C	10UF	M	
C477,478			CK73EB1A475K	CHIP C	4.7UF	K	
C479			CK73HB0J105K	CHIP C	1.0UF	K	
C480			CK73HB1A104K	CHIP C	0.10UF	K	
C481			CK73HB0J105K	CHIP C	1.0UF	K	
C482			CK73EB1C106K	CHIP C	10UF	K	
C494-499			CK73HB0J105K	CHIP C	1.0UF	K	
C500			CK73HB1E103K	CHIP C	0.010UF	K	
C551			CK73FB1A225K	CHIP C	2.2UF	K	
C601			CK73HB1A104K	CHIP C	0.10UF	K	
C602,603			CK73HB1E103K	CHIP C	0.010UF	K	
C604-606			CK73HB0J105K	CHIP C	1.0UF	K	
C607			CK73GB0J106M	CHIP C	10UF	M	
C621-624			CK73HB1A104K	CHIP C	0.10UF	K	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C625			CK73GB0J475K	CHIP C	4.7UF	K	
C626-630			CK73HB1A104K	CHIP C	0.10UF	K	
C631			CK73GB0J475K	CHIP C	4.7UF	K	
C632-638			CK73HB1A104K	CHIP C	0.10UF	K	
C655,656			CK73GB0J106M	CHIP C	10UF	M	
C657,658			CK73HB1A104K	CHIP C	0.10UF	K	
C661,662			CK73GB0J106M	CHIP C	10UF	M	
C663,664			CK73HB1H222K	CHIP C	2200PF	K	
C665,666			CK73HB1H221K	CHIP C	220PF	K	
C667,668			CK73GB0J106M	CHIP C	10UF	M	
C672			CK73HB0J105K	CHIP C	1.0UF	K	
C673			CK73GB0J106M	CHIP C	10UF	M	
C681			CK73HB1A104K	CHIP C	0.10UF	K	
C692			CK73GB1C104K	CHIP C	0.10UF	K	
C701,702			CK73GB0J106M	CHIP C	10UF	M	
C703			CE32BQ0J560M	CHIP EL	56UF	6.3WV	
C704			CK73HB0J105K	CHIP C	1.0UF	K	
C705-725			CK73HB1A104K	CHIP C	0.10UF	K	
C726,727			CC73GCH1H100D	CHIP C	10PF	D	
C728			CK73HB1A104K	CHIP C	0.10UF	K	
C729,730			CC73HCH1H220J	CHIP C	22PF	J	
C731			CK73GB0J106M	CHIP C	10UF	M	
C732,733			CK73HB1A104K	CHIP C	0.10UF	K	
C734,735			CK73HB1H102K	CHIP C	1000PF	K	
C741			CK73GB0J475K	CHIP C	4.7UF	K	
C742-748			CK73HB1A104K	CHIP C	0.10UF	K	
C751			CK73GB0J475K	CHIP C	4.7UF	K	
C752-758			CK73HB1A104K	CHIP C	0.10UF	K	
C761,762			CK73GB0J106M	CHIP C	10UF	M	
C763,764			CK73HB1A104K	CHIP C	0.10UF	K	
C801-804			CK73GB1A105K	CHIP C	1.0UF	K	
C807			CK73HB0J105K	CHIP C	1.0UF	K	
C808,809			CK73HB1A104K	CHIP C	0.10UF	K	
C811			CK73HB0J105K	CHIP C	1.0UF	K	
C812-825			CK73HB1A104K	CHIP C	0.10UF	K	
C826			CK73HB0J105K	CHIP C	1.0UF	K	
C827,828			CK73HB1A104K	CHIP C	0.10UF	K	
C829			CK73HB0J105K	CHIP C	1.0UF	K	
C830			CK73HB1A104K	CHIP C	0.10UF	K	
C833			CK73HB0J105K	CHIP C	1.0UF	K	
C834,835			CC73GCH1H080D	CHIP C	8.0PF	D	
C836,837			CK73GB0J106M	CHIP C	10UF	M	
C840			CK73HB1A104K	CHIP C	0.10UF	K	
C841			CE32BQ1C221M	CHIP EL	220UF	16WV	
C842			CC73HCH1H101J	CHIP C	100PF	J	
C843			CK73GB0J106M	CHIP C	10UF	M	
C844			CK73HB1A104K	CHIP C	0.10UF	K	
C862,863			CK73GB1C104K	CHIP C	0.10UF	K	
CN2			E41-2735-05	PIN ASSY			
CN3			E41-2608-05	FLAT CABLE CONNECTOR			
CN4			E41-2963-15	FLAT CABLE CONNECTOR			
CN351			E41-2962-05	PIN ASSY			
CN352			E41-2806-05	PIN ASSY			
CN353			E41-2961-05	PIN ASSY			

Ref. No.	Add	New	Parts No.	Description	Destination
CN354			E41-2960-05	PIN ASSY	E1Q1Q2
CN354			E41-2960-05	PIN ASSY	M1M2X1
CN355			E41-2958-05	PIN ASSY	
CN356			E40-9106-05	SOCKET FOR PIN ASSY	
CN357			E40-9093-05	SOCKET FOR PIN ASSY	
CN551			E41-2982-05	FLAT CABLE CONNECTOR	
CN701			E41-2603-05	FLAT CABLE CONNECTOR	
J1			E58-1043-05	RECTANGULAR RECEPTACLE	
J681			E11-0638-05	PHONE JACK	
W351			E30-6775-05	CORD WITH PLUG (ANT)	
W801			E30-6778-05	CORD WITH CONNECTOR (USB)	
F1			F53-0306-05	FUSE (UL,CSA) 5A	
F2			F53-0297-05	FUSE (UL,CSA) 1.6A	
L1			L33-2369-05	CHOKE COIL	
L2 ,3			L92-0373-05	CHIP FERRITE	
L4 ,5			L33-2455-05	CHOKE COIL	
L6 ,7			L33-2369-05	CHOKE COIL	
L8 ,9			L33-2455-05	CHOKE COIL	
L10 ,11			L33-2369-05	CHOKE COIL	
L12 ,13			L92-0319-05	CHIP FERRITE	
L14			L33-2369-05	CHOKE COIL	E1Q1Q2
L14			L33-2369-05	CHOKE COIL	M1M2
L353			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L355			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	X1
L355,356			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	KR1E1
L355,356			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	Q1Q2M1
L355,356			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	M2
L357			L92-0319-05	CHIP FERRITE	
L361			L92-0319-05	CHIP FERRITE	
L451			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L601-603			L92-0373-05	CHIP FERRITE	
L701-706			L92-0373-05	CHIP FERRITE	
L731			L92-0373-05	CHIP FERRITE	
L741			L92-0373-05	CHIP FERRITE	
L751			L92-0373-05	CHIP FERRITE	
L801			L92-0642-05	CHIP FERRITE	
L803			L92-0642-05	CHIP FERRITE	
L804,805			L92-0641-05	FERRITE CORE	
L806			L92-0651-05	CHIP FERRITE	
L811			L92-0373-05	CHIP FERRITE	
X1			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
X2			L78-1226-05	RESONATOR (11.059MHZ)	
X351		✻	L77-3811-05	CRYSTAL RESONATOR (4.332MHZ)	KR1E1
X351		✻	L77-3811-05	CRYSTAL RESONATOR (4.332MHZ)	Q1Q2M1
X351		✻	L77-3811-05	CRYSTAL RESONATOR (4.332MHZ)	M2
X701			L77-2866-05	CRYSTAL RESONATOR (27MHZ)	
X808			L77-2943-05	CRYSTAL RESONATOR (24.000MHZ)	
V	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
CP701-709			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP710-713			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP714,715			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP721-724			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP751,752			RK74HB1J103J	CHIP-COM 10K J 1/16W	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
CP753,754			RK74HB1J220J	CHIP-COM 22	J	1/16W	
R1			RK73HB1J103J	CHIP R 10K	J	1/16W	
R2			RK73EB2E272J	CHIP R 2.7K	J	1/4W	
R3			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R4			RK73HB1J473J	CHIP R 47K	J	1/16W	
R5			RK73EB2E103J	CHIP R 10K	J	1/4W	
R6			RK73EB2E102J	CHIP R 1.0K	J	1/4W	
R7			RK73HB1J104J	CHIP R 100K	J	1/16W	
R8			RK73EB2E272J	CHIP R 2.7K	J	1/4W	
R9			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R10			RK73FB2B472J	CHIP R 4.7K	J	1/8W	
R11			RK73HB1J223J	CHIP R 22K	J	1/16W	
R12 ,13			R92-5226-05	CHIP R 1.0K	J	1/2W	
R14			RK73HB1J000J	CHIP R 0.0	J	1/16W	E1Q1Q2
R15			RK73FB2B472J	CHIP R 4.7K	J	1/8W	
R16			RK73HB1J222J	CHIP R 2.2K	J	1/16W	KR1M1
R16			RK73HB1J222J	CHIP R 2.2K	J	1/16W	M2X1
R17 ,18			RK73HB1J103J	CHIP R 10K	J	1/16W	KR1M1
R17 ,18			RK73HB1J103J	CHIP R 10K	J	1/16W	M2X1
R19 ,20			R92-5226-05	CHIP R 1.0K	J	1/2W	KR1M1
R19 ,20			R92-5226-05	CHIP R 1.0K	J	1/2W	M2X1
R21			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R25			RK73HB1J104J	CHIP R 100K	J	1/16W	
R26			RK73HB1J473J	CHIP R 47K	J	1/16W	
R27			RK73EB2E103J	CHIP R 10K	J	1/4W	
R28 ,29			RK73EB2E622J	CHIP R 6.2K	J	1/4W	
R30			RK73GB2A912J	CHIP R 9.1K	J	1/10W	
R31			RK73HB1J153J	CHIP R 15K	J	1/16W	
R32			RK73HB1J473J	CHIP R 47K	J	1/16W	
R33			RK73GH2A104D	CHIP R 100K	D	1/10W	
R34			RK73GH2A333D	CHIP R 33K	D	1/10W	
R35			RK73GH2A513D	CHIP R 51K	D	1/10W	
R36			RK73GH2A684D	CHIP R 680K	D	1/10W	
R37 ,38			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R39			RK73GH2A683D	CHIP R 68K	D	1/10W	
R40			RK73GH2A913D	CHIP R 91K	D	1/10W	
R41 -45			RK73HB1J224J	CHIP R 220K	J	1/16W	
R46			RK73HB1J304J	CHIP R 300K	J	1/16W	
R47			RK73HB1J303J	CHIP R 30K	J	1/16W	
R48			RK73HB1J224J	CHIP R 220K	J	1/16W	
R49			RK73GB2A202J	CHIP R 2.0K	J	1/10W	
R50			RK73HB1J101J	CHIP R 100	J	1/16W	
R51			RK73HB1J224J	CHIP R 220K	J	1/16W	
R52			RK73GB2A154J	CHIP R 150K	J	1/10W	
R53			RK73GB2A164J	CHIP R 160K	J	1/10W	
R54			RK73GH2A104D	CHIP R 100K	D	1/10W	
R55			RK73GH2A154D	CHIP R 150K	D	1/10W	
R56			RK73GH2A433D	CHIP R 43K	D	1/10W	
R57			RK73GB2A183J	CHIP R 18K	J	1/10W	
R58			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R59			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R60			RK73HB1J561J	CHIP R 560	J	1/16W	
R68			RK73GB2A823J	CHIP R 82K	J	1/10W	
R69			RK73HB1J103J	CHIP R 10K	J	1/16W	
R70			RK73HB1J224J	CHIP R 220K	J	1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R71			RK73HB1J333J	CHIP R 33K	J	1/16W	
R72			RK73HB1J224J	CHIP R 220K	J	1/16W	
R73			RK73FB2B221J	CHIP R 220	J	1/8W	
R74			RK73GH2A273D	CHIP R 27K	D	1/10W	
R75			RK73GH2A472D	CHIP R 4.7K	D	1/10W	
R76			RK73GH2A333D	CHIP R 33K	D	1/10W	
R77			RK73GH2A393D	CHIP R 39K	D	1/10W	
R78			RK73GH2A332D	CHIP R 3.3K	D	1/10W	
R79			RK73HB1J272J	CHIP R 2.7K	J	1/16W	
R80			RK73HB1J104J	CHIP R 100K	J	1/16W	
R81			RK73HB1J473J	CHIP R 47K	J	1/16W	
R88			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R89			RK73GH2A681D	CHIP R 680	D	1/10W	
R90			RK73GH2A622D	CHIP R 6.2K	D	1/10W	
R91			RK73HB1J333J	CHIP R 33K	J	1/16W	
R92			RK73GB2A683J	CHIP R 68K	J	1/10W	
R93			RK73GH2A562D	CHIP R 5.6K	D	1/10W	
R94			RK73HB1J103J	CHIP R 10K	J	1/16W	
R95			RK73GH2A113D	CHIP R 11K	D	1/10W	
R98 ,99			RK73GH2A333D	CHIP R 33K	D	1/10W	
R100,101			RK73GH2A561D	CHIP R 560	D	1/10W	
R102-104			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R105,106			RK73GH2A561D	CHIP R 560	D	1/10W	
R107			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R108			RK73HB1J220J	CHIP R 22	J	1/16W	
R109,110			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R111			RK73HB1J220J	CHIP R 22	J	1/16W	
R112-116			RK73EB2E100J	CHIP R 10	J	1/4W	
R117,118			R92-5160-05	CHIP R 0.047	J	1/4W	
R119			R92-5159-05	CHIP R 0.033	J	1/4W	
R121			RK73HB1J000J	CHIP R 0.0	J	1/16W	KR1X1
R123			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R124			RK73GH2A681D	CHIP R 680	D	1/10W	
R125			RK73GH2A561D	CHIP R 560	D	1/10W	
R126			RK73GH2A562D	CHIP R 5.6K	D	1/10W	
R127,128			RK73GB2A683J	CHIP R 68K	J	1/10W	
R129			RK73GH2A103D	CHIP R 10K	D	1/10W	
R130			RK73HB1J103J	CHIP R 10K	J	1/16W	
R133,134			RK73GH2A333D	CHIP R 33K	D	1/10W	
R135-140			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R141			RK73HB1J220J	CHIP R 22	J	1/16W	
R142,143			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R144			RK73HB1J220J	CHIP R 22	J	1/16W	
R145-149			RK73EB2E100J	CHIP R 10	J	1/4W	
R150			R92-5158-05	CHIP R 0.022	J	1/4W	
R153			R92-5158-05	CHIP R 0.022	J	1/4W	
R154-157			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R159-168			RK73HB1J101J	CHIP R 100	J	1/16W	
R170-172			RK73HB1J101J	CHIP R 100	J	1/16W	
R174			RK73GB2A272J	CHIP R 2.7K	J	1/10W	
R175,176			RK73HB1J473J	CHIP R 47K	J	1/16W	
R177			RK73GB2A432J	CHIP R 4.3K	J	1/10W	
R178,179			RK73HB1J473J	CHIP R 47K	J	1/16W	
R180			RK73GB2A432J	CHIP R 4.3K	J	1/10W	
R181,182			RK73HB1J473J	CHIP R 47K	J	1/16W	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R183,184			RK73EB2E101J	CHIP R	100	J 1/4W	
R185			RK73HB1J101J	CHIP R	100	J 1/16W	
R186			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R187,188			RK73EB2E101J	CHIP R	100	J 1/4W	
R193			RK73HB1J473J	CHIP R	47K	J 1/16W	
R195			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R196			RK73HB1J473J	CHIP R	47K	J 1/16W	
R198			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R201			RK73HB1J104J	CHIP R	100K	J 1/16W	
R202-205			RK73HB1J103J	CHIP R	10K	J 1/16W	K
R202-206			RK73HB1J103J	CHIP R	10K	J 1/16W	R1E1Q1
R202-206			RK73HB1J103J	CHIP R	10K	J 1/16W	Q2M1M2
R202-206			RK73HB1J103J	CHIP R	10K	J 1/16W	X1
R207			RK73GB2A103J	CHIP R	10K	J 1/10W	KM1M2
R207			RK73GB2A303J	CHIP R	30K	J 1/10W	X1
R207			RK73GB2A332J	CHIP R	3.3K	J 1/10W	E1Q1Q2
R208			RK73HB1J473J	CHIP R	47K	J 1/16W	
R210,211			RK73HB1J123J	CHIP R	12K	J 1/16W	
R212			RK73HB1J473J	CHIP R	47K	J 1/16W	
R213-215			RK73HB1J101J	CHIP R	100	J 1/16W	
R216			RK73HB1J103J	CHIP R	10K	J 1/16W	
R217-220			RK73HB1J101J	CHIP R	100	J 1/16W	
R221,222			RK73HB1J473J	CHIP R	47K	J 1/16W	
R223			RK73HB1J104J	CHIP R	100K	J 1/16W	
R224			RK73HB1J103J	CHIP R	10K	J 1/16W	
R225			RK73HB1J473J	CHIP R	47K	J 1/16W	
R227			RK73HB1J473J	CHIP R	47K	J 1/16W	
R228,229			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R230,231			RK73HB1J101J	CHIP R	100	J 1/16W	
R232			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R233			RK73HB1J223J	CHIP R	22K	J 1/16W	
R234			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R235-238			RK73HB1J101J	CHIP R	100	J 1/16W	
R239			RK73HB1J100J	CHIP R	10	J 1/16W	
R240-242			RK73HB1J101J	CHIP R	100	J 1/16W	
R243,244			RK73HB1J471J	CHIP R	470	J 1/16W	
R245-248			RK73HB1J103J	CHIP R	10K	J 1/16W	
R249-253			RK73HB1J473J	CHIP R	47K	J 1/16W	
R254-256			RK73HB1J101J	CHIP R	100	J 1/16W	
R257			RK73HB1J473J	CHIP R	47K	J 1/16W	
R258			RK73HB1J101J	CHIP R	100	J 1/16W	KR1
R258-261			RK73HB1J101J	CHIP R	100	J 1/16W	E1Q1Q2
R258-261			RK73HB1J101J	CHIP R	100	J 1/16W	M1M2X1
R260,261			RK73HB1J101J	CHIP R	100	J 1/16W	KR1
R262			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R263			RK73HB1J153J	CHIP R	15K	J 1/16W	
R264			RK73HB1J473J	CHIP R	47K	J 1/16W	
R265			RK73HB1J101J	CHIP R	100	J 1/16W	
R266			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R267,268			RK73HB1J101J	CHIP R	100	J 1/16W	
R269			RK73HB1J473J	CHIP R	47K	J 1/16W	
R270,271			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R272-276			RK73HB1J473J	CHIP R	47K	J 1/16W	
R277			RK73HB1J104J	CHIP R	100K	J 1/16W	
R278-280			RK73HB1J473J	CHIP R	47K	J 1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R281			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R282			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R283			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R284			RK73HB1J104J	CHIP R	100K	J 1/16W	
R286			RK73HB1J103J	CHIP R	10K	J 1/16W	
R288			RK73HB1J103J	CHIP R	10K	J 1/16W	
R351			RK73HB1J333J	CHIP R	33K	J 1/16W	
R352			RK73HB1J100J	CHIP R	10	J 1/16W	
R353			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R354			RK73HB1J471J	CHIP R	470	J 1/16W	
R355			RK73HB1J223J	CHIP R	22K	J 1/16W	
R356			RK73GB2A221J	CHIP R	220	J 1/10W	
R357			RK73GB2A123J	CHIP R	12K	J 1/10W	
R358			RK73FB2B101J	CHIP R	100	J 1/8W	
R359			RK73HB1J471J	CHIP R	470	J 1/16W	
R360			RK73HB1J223J	CHIP R	22K	J 1/16W	
R361			RK73HB1J471J	CHIP R	470	J 1/16W	
R363			RK73HB1J223J	CHIP R	22K	J 1/16W	
R364			RK73HB1J473J	CHIP R	47K	J 1/16W	
R365			RK73FB2B101J	CHIP R	100	J 1/8W	
R366			RK73HB1J471J	CHIP R	470	J 1/16W	
R367			RK73FB2B101J	CHIP R	100	J 1/8W	
R368			RK73HB1J471J	CHIP R	470	J 1/16W	
R369			RK73HB1J223J	CHIP R	22K	J 1/16W	
R370			RK73HB1J473J	CHIP R	47K	J 1/16W	
R372			RK73HB1J223J	CHIP R	22K	J 1/16W	
R374			RK73FB2B101J	CHIP R	100	J 1/8W	
R375			RK73HB1J471J	CHIP R	470	J 1/16W	
R376			RK73FB2B101J	CHIP R	100	J 1/8W	
R377			RK73HB1J471J	CHIP R	470	J 1/16W	
R378			RK73HB1J223J	CHIP R	22K	J 1/16W	
R381			RK73HB1J223J	CHIP R	22K	J 1/16W	
R383			RK73FB2B101J	CHIP R	100	J 1/8W	
R384			RK73HB1J471J	CHIP R	470	J 1/16W	
R385			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R386			RK73EB2E100J	CHIP R	10	J 1/4W	
R390			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R394			RK73EB2E100J	CHIP R	10	J 1/4W	
R400			RK73EB2E101J	CHIP R	100	J 1/4W	
R401			RK73HB1J100J	CHIP R	10	J 1/16W	
R402			RK73HB1J750J	CHIP R	75	J 1/16W	
R403			RK73EB2E750J	CHIP R	75	J 1/4W	
R404			RK73EB2E100J	CHIP R	10	J 1/4W	
R405			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R406			RK73EB2E100J	CHIP R	10	J 1/4W	
R407			RK73EB2E101J	CHIP R	100	J 1/4W	
R408			RK73HB1J100J	CHIP R	10	J 1/16W	
R409			RK73HB1J560J	CHIP R	56	J 1/16W	
R410			RK73EB2E101J	CHIP R	100	J 1/4W	
R411			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R412			RK73HB1J223J	CHIP R	22K	J 1/16W	
R413			RK73HB1J222J	CHIP R	2.2K	J 1/16W	KR1E1
R413			RK73HB1J222J	CHIP R	2.2K	J 1/16W	Q1Q2M1
R413			RK73HB1J222J	CHIP R	2.2K	J 1/16W	M2
R416,417			RK73HB1J222J	CHIP R	2.2K	J 1/16W	KR1E1

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R416,417			RK73HB1J222J	CHIP R	2.2K	J	1/16W	Q1Q2M1
R416,417			RK73HB1J222J	CHIP R	2.2K	J	1/16W	M2
R418			RK73EB2E100J	CHIP R	10	J	1/4W	
R419			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R420			RK73EB2E100J	CHIP R	10	J	1/4W	
R421			RK73EB2E101J	CHIP R	100	J	1/4W	
R422			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R423			RK73EB2E101J	CHIP R	100	J	1/4W	
R424			RK73EB2E472J	CHIP R	4.7K	J	1/4W	
R425-427			RK73HB1J101J	CHIP R	100	J	1/16W	
R428			RK73HB1J750J	CHIP R	75	J	1/16W	E1Q1Q2
R428			RK73HB1J750J	CHIP R	75	J	1/16W	M1M2X1
R438			RK73HB1J100J	CHIP R	10	J	1/16W	E1Q1Q2
R438			RK73HB1J100J	CHIP R	10	J	1/16W	M1M2X1
R439			RK73EB2E101J	CHIP R	100	J	1/4W	E1Q1Q2
R439			RK73EB2E101J	CHIP R	100	J	1/4W	M1M2X1
R440,441			RK73EB2E102J	CHIP R	1.0K	J	1/4W	E1Q1Q2
R440,441			RK73EB2E102J	CHIP R	1.0K	J	1/4W	M1M2X1
R442-444			RK73EB2E101J	CHIP R	100	J	1/4W	E1Q1Q2
R442-444			RK73EB2E101J	CHIP R	100	J	1/4W	M1M2X1
R445			RK73EB2E000J	CHIP R	0.0	J	1/4W	E1Q1Q2
R445			RK73EB2E000J	CHIP R	0.0	J	1/4W	M1M2X1
R446			RK73EB2E102J	CHIP R	1.0K	J	1/4W	E1Q1Q2
R446			RK73EB2E102J	CHIP R	1.0K	J	1/4W	M1M2X1
R447			RK73HB1J100J	CHIP R	10	J	1/16W	E1Q1Q2
R447			RK73HB1J100J	CHIP R	10	J	1/16W	M1M2X1
R448			RK73EB2E102J	CHIP R	1.0K	J	1/4W	E1Q1Q2
R448			RK73EB2E102J	CHIP R	1.0K	J	1/4W	M1M2X1
R449			RK73EB2E100J	CHIP R	10	J	1/4W	E1Q1Q2
R449			RK73EB2E100J	CHIP R	10	J	1/4W	M1M2X1
R450			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	E1Q1Q2
R450			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	M1M2X1
R451,452			RK73EB2E100J	CHIP R	10	J	1/4W	E1Q1Q2
R451,452			RK73EB2E100J	CHIP R	10	J	1/4W	M1M2X1
R452			RK73EB2E100J	CHIP R	10	J	1/4W	KR1
R453			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R454			RK73EB2E100J	CHIP R	10	J	1/4W	
R455			RK73HB1J100J	CHIP R	10	J	1/16W	
R456			RK73EB2E101J	CHIP R	100	J	1/4W	
R457			RK73HB1J100J	CHIP R	10	J	1/16W	
R458			RK73EB2E101J	CHIP R	100	J	1/4W	
R459			RK73HB1J100J	CHIP R	10	J	1/16W	
R460			RK73EB2E101J	CHIP R	100	J	1/4W	
R461			RK73HB1J100J	CHIP R	10	J	1/16W	
R462			RK73EB2E101J	CHIP R	100	J	1/4W	
R463-466			RK73HB1J750J	CHIP R	75	J	1/16W	
R467-469			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R470			RK73HB1J104J	CHIP R	100K	J	1/16W	
R471			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R472-475			RK73HB1J103J	CHIP R	10K	J	1/16W	
R476			RK73HB1J101J	CHIP R	100	J	1/16W	
R477			RK73HB1J103J	CHIP R	10K	J	1/16W	
R478			RK73HB1J101J	CHIP R	100	J	1/16W	
R479			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R480			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R481,482			RK73HB1J122J	CHIP R	1.2K	J	1/16W	
R483			RK73GB2A103J	CHIP R	10K	J	1/10W	
R486,487			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R488,489			RK73HB1J100J	CHIP R	10	J	1/16W	
R492			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R493,494			RK73GH2A271D	CHIP R	270	D	1/10W	
R495			RK73GH2A123D	CHIP R	12K	D	1/10W	
R510,511			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R512,513			RK73HB1J101J	CHIP R	100	J	1/16W	
R515			RK73HB1J101J	CHIP R	100	J	1/16W	
R516-519			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R537			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R543-548			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R551			RK73GB2A101J	CHIP R	100	J	1/10W	
R554			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R556			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R559			RK73EB2E101J	CHIP R	100	J	1/4W	
R561			RK73GB2A561J	CHIP R	560	J	1/10W	
R562			RK73GB2A221J	CHIP R	220	J	1/10W	
R563			RK73GB2A561J	CHIP R	560	J	1/10W	
R564			RK73GB2A221J	CHIP R	220	J	1/10W	
R565			RK73GB2A561J	CHIP R	560	J	1/10W	
R566			RK73GB2A221J	CHIP R	220	J	1/10W	
R567			RK73GB2A561J	CHIP R	560	J	1/10W	
R568			RK73GB2A221J	CHIP R	220	J	1/10W	
R569			RK73GB2A561J	CHIP R	560	J	1/10W	
R570			RK73GB2A221J	CHIP R	220	J	1/10W	
R571			RK73GB2A561J	CHIP R	560	J	1/10W	
R572			RK73GB2A221J	CHIP R	220	J	1/10W	
R573			RK73GB2A561J	CHIP R	560	J	1/10W	
R574			RK73GB2A221J	CHIP R	220	J	1/10W	
R575			RK73GB2A561J	CHIP R	560	J	1/10W	
R576			RK73GB2A221J	CHIP R	220	J	1/10W	
R577			RK73GB2A561J	CHIP R	560	J	1/10W	
R578			RK73GB2A221J	CHIP R	220	J	1/10W	
R579			RK73GB2A220J	CHIP R	22	J	1/10W	
R580			RK73GB2A181J	CHIP R	180	J	1/10W	
R581			RK73GB2A391J	CHIP R	390	J	1/10W	
R582-586			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R587			RK73GB2A182J	CHIP R	1.8K	J	1/10W	
R588			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R589			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R590			RK73GB2A163J	CHIP R	16K	J	1/10W	
R591			RK73GB2A513J	CHIP R	51K	J	1/10W	
R612			RK73GH2A750D	CHIP R	75	D	1/10W	
R613			RK73GH2A301D	CHIP R	300	D	1/10W	
R614			RK73GH2A330D	CHIP R	33	D	1/10W	
R620-625			RK73GH2A750D	CHIP R	75	D	1/10W	
R626			RK73GH2A360D	CHIP R	36	D	1/10W	
R627			RK73GH2A151D	CHIP R	150	D	1/10W	
R651-654			RK73HB1J220J	CHIP R	22	J	1/16W	
R661,662			RK73HB1J203J	CHIP R	20K	J	1/16W	
R663,664			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R665,666			RK73HB1J153J	CHIP R	15K	J	1/16W	
R667,668			RK73HB1J561J	CHIP R	560	J	1/16W	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R669,670			RK73HB1J473J	CHIP R	47K	J 1/16W	
R673,674			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R676			RK73HB1J104J	CHIP R	100K	J 1/16W	
R677			RK73HB1J394J	CHIP R	390K	J 1/16W	
R681			RK73HB1J103J	CHIP R	10K	J 1/16W	
R683			RK73HB1J220J	CHIP R	22	J 1/16W	
R684,685			RK73HB1J331J	CHIP R	330	J 1/16W	
R686			RK73HB1J220J	CHIP R	22	J 1/16W	
R687			RK73HB1J103J	CHIP R	10K	J 1/16W	
R688			RK73HB1J220J	CHIP R	22	J 1/16W	
R691			RK73HB1J100J	CHIP R	10	J 1/16W	
R692			RK73GB2A151J	CHIP R	150	J 1/10W	
R693			RK73EB2E750J	CHIP R	75	J 1/4W	
R694,695			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R696			RK73HB1J220J	CHIP R	22	J 1/16W	
R697,698			RK73GB2A151J	CHIP R	150	J 1/10W	
R699			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R702			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R703			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R704			RK73HB1J101J	CHIP R	100	J 1/16W	
R706-708			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R709-712			RK73HB1J220J	CHIP R	22	J 1/16W	
R713,714			RK73HB1J6R8J	CHIP R	6.8	J 1/16W	
R715-730			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R732-738			RK73HB1J220J	CHIP R	22	J 1/16W	
R739,740			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R742-747			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R748-753			RK73HB1J220J	CHIP R	22	J 1/16W	
R754-756			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R758			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R759			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R760-762			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R763,764			RK73HB1J6R8J	CHIP R	6.8	J 1/16W	
R765			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R769			RK73GH2A153D	CHIP R	15K	D 1/10W	
R770			RK73GH2A123D	CHIP R	12K	D 1/10W	
R772			RK73HB1J103J	CHIP R	10K	J 1/16W	
R774,775			RK73HB1J103J	CHIP R	10K	J 1/16W	
R777			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R795-797			RK73HB1J103J	CHIP R	10K	J 1/16W	
R805,806			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R810,811			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R812			RK73HB1J103J	CHIP R	10K	J 1/16W	
R814			RK73HB1J103J	CHIP R	10K	J 1/16W	
R815			RK73GH2A622D	CHIP R	6.2K	D 1/10W	
R816,817			RK73HB1J220J	CHIP R	22	J 1/16W	
R820			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R823			RK73HB1J103J	CHIP R	10K	J 1/16W	
R825			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R826			RK73HB1J103J	CHIP R	10K	J 1/16W	
R846			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R849			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R851			RK73HB1J473J	CHIP R	47K	J 1/16W	
R852			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R854-856			RK73HB1J103J	CHIP R	10K	J 1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R857,858			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R859-861			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R863-880			RK73HB1J103J	CHIP R	10K	J 1/16W	
R881			RK73GB2A202J	CHIP R	2.0K	J 1/10W	
R883			RK73HB1J103J	CHIP R	10K	J 1/16W	
R884,885			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R886-889			RK73HB1J473J	CHIP R	47K	J 1/16W	
R890			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R892			RK73HB1J103J	CHIP R	10K	J 1/16W	
R893			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R895,896			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R898			RK73HB1J103J	CHIP R	10K	J 1/16W	
R899			RK73HB1J331J	CHIP R	330	J 1/16W	
R900			RK73HB1J220J	CHIP R	22	J 1/16W	
R902			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R915			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R919			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R999			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
S551-560			S70-0901-05	TACT SWITCH			
D1 ,2			1SS355	DIODE			
D3			UDZW6.2(B)	ZENER DIODE			
D4 ,5			1SS355	DIODE			
D6 -9			1SR154-400	DIODE			
D11			UDZW4.7(B)	ZENER DIODE			
D12			1SS355	DIODE			
D13			UDZW6.2(B)	ZENER DIODE			
D14			EP05Q04	DIODE			
D15 -18			1SS357-F	DIODE			
D19 -23			AVRM16120M6AB	VARISTOR			
D24 ,25			AVRM16180M6AB	VARISTOR			
D27 -31			AVRM16120M6AB	VARISTOR			
D32			DA204U	DIODE			
D33 -36			AVRM16120M6AB	VARISTOR			
D37			AVRM16180M6AB	VARISTOR			
D39			AVRM16180M6AB	VARISTOR			
D40 ,41			AVRM16120M6AB	VARISTOR			
D42			1SS355	DIODE			
D351			DAP202U	DIODE			
D352			1SS355	DIODE			
D353,354			AVRM16180M6AB	VARISTOR			
D355,356			DAP202U	DIODE			
D357,358			AVRM16180M6AB	VARISTOR			
D359,360			DAP202U	DIODE			
D361,362			AVRM16180M6AB	VARISTOR			
D363,364			DAP202U	DIODE			
D365			UDZW6.8(B)	ZENER DIODE			
D366			UDZW6.2(B)	ZENER DIODE			
D367			UDZW6.8(B)	ZENER DIODE			
D368			DAP202U	DIODE			
D369-376			AVRM16270MAAB	VARISTOR			
D378			UDZW6.8(B)	ZENER DIODE			
D379			UDZW6.2(B)	ZENER DIODE			
D380,381			AVRM16120M6AB	VARISTOR			
D382,383			UDZW6.2(B)	ZENER DIODE			

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D384			AVRM16270MAAB	VARISTOR	E1Q1Q2
D384			AVRM16270MAAB	VARISTOR	M1M2X1
D388			UDZW6.2(B)	ZENER DIODE	E1Q1Q2
D388			UDZW6.2(B)	ZENER DIODE	M1M2X1
D389-392			AVRM16120M6AB	VARISTOR	E1Q1Q2
D389-392			AVRM16120M6AB	VARISTOR	M1M2X1
D393			UDZW6.8(B)	ZENER DIODE	E1Q1Q2
D393			UDZW6.8(B)	ZENER DIODE	M1M2X1
D394,395			UDZW6.2(B)	ZENER DIODE	E1Q1Q2
D394,395			UDZW6.2(B)	ZENER DIODE	M1M2X1
D396			UDZW6.8(B)	ZENER DIODE	
D397-400			AVRM16270MAAB	VARISTOR	
D401			UDZW6.8(B)	ZENER DIODE	
D402,403			UDZW6.2(B)	ZENER DIODE	
D404,405			1SS355	DIODE	
D406-408			DAP202U	DIODE	
D409			UDZW6.8(B)	ZENER DIODE	KR1
D409,410			UDZW6.8(B)	ZENER DIODE	E1Q1Q2
D409,410			UDZW6.8(B)	ZENER DIODE	M1M2X1
D411-414			UDZW6.2(B)	ZENER DIODE	E1Q1Q2
D411-414			UDZW6.2(B)	ZENER DIODE	M1M2X1
D413,414			UDZW6.2(B)	ZENER DIODE	KR1
D415			1SS355	DIODE	
D589-591			AVRM16180M6AB	VARISTOR	
D592			AVRM16270MAAB	VARISTOR	
D681			AVRM16270MAAB	VARISTOR	
D682			DA204U	DIODE	
D801,802			AVRL1613R3FTA	VARISTOR	
IC1			XC6201P502PR	ANALOGUE IC	
IC2			M5237ML-CF0J	ANALOGUE IC	
IC3 ,4			LTC3728LEGN	ANALOGUE IC	
IC5 ,6			LB1836M-TLM-E	ANALOGUE IC	
IC7			R1114N331B-TR	ANALOGUE IC (3.3V LF)	
IC8			74AHC1G08GW	MOS-IC	
IC9			30878MJBA31GP	MICROCONTROLLER IC	
IC10			W05-1387-00	ROM IC	K
IC10			W05-1388-00	ROM IC	E1M2
IC10			W05-1389-00	ROM IC	M1
IC10			W05-1390-00	ROM IC	R1X1
IC10			W05-1454-00	ROM IC	Q1Q2
IC12			S-80835CNNB-G	MOS-IC	
IC13			74AHC1G32GW	MOS-IC	
IC351			E-TDA7850A	ANALOGUE IC	
IC354			NJM2505AF-ZB	ANALOGUE IC	
IC355			E-TDA7478AD	ANALOGUE IC	KR1E1
IC355			E-TDA7478AD	ANALOGUE IC	Q1Q2M1
IC355			E-TDA7478AD	ANALOGUE IC	M2
IC356			74AHCT08PW	MOS-IC	
IC357			E-TDA7415CB	ANALOGUE IC	
IC358			AK4220	ANALOGUE IC	
IC361			NJM2286V-ZB	ANALOGUE IC	
IC401,402			74AHC1GU04GW	MOS-IC	E1Q1Q2
IC401,402			74AHC1GU04GW	MOS-IC	M1M2X1
IC551			PNA4S22M02KW	ANALOGUE IC	
IC601			MM1671XNRE	ANALOGUE IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC602			NJM2573V-ZB	ANALOGUE IC	
IC651			PCM1754DB	MOS-IC	
IC652			NJM4565V-ZB	ANALOGUE IC	
IC691			74AHC1G04GW	MOS-IC	
IC701			MS8312A-IQG	MICROPROCESSOR IC	
IC702			S29GL64A9I6B5	ROM IC	
IC703,704			A2V28S40CTPG6	DRAM IC	
IC705			SI-3010KD	ANALOGUE IC	
IC801			S1R72C05F15	MOS-IC	
IC804			MIC2005-08YM6	MOS-IC	
IC805			XC6219B332PR	ANALOGUE IC	
IC806			XC6219B182PR	ANALOGUE IC	
IC807			74AHC573PW	MOS-IC	
IC852			MFI341S2162	MICROPROCESSOR IC	
Q1			DTC124EE	DIGITAL TRANSISTOR	
Q2			DTA143ZE	DIGITAL TRANSISTOR	
Q3			DTC124EE	DIGITAL TRANSISTOR	
Q4			2SB1188(R)	TRANSISTOR	
Q5			2SA1774	TRANSISTOR	
Q6			DTA114EE	DIGITAL TRANSISTOR	
Q7			DTC143ZE	DIGITAL TRANSISTOR	
Q8			2SB1188(R)	TRANSISTOR	KR1M1
Q8			2SB1188(R)	TRANSISTOR	M2X1
Q9			2SC4617	TRANSISTOR	KR1M1
Q9			2SC4617	TRANSISTOR	M2X1
Q11 -13			2SC4617	TRANSISTOR	
Q14			2SA1774	TRANSISTOR	
Q15			DTC143ZE	DIGITAL TRANSISTOR	
Q16			2SA1774	TRANSISTOR	
Q17			2SC4617	TRANSISTOR	
Q18			KRA311-P	DIGITAL TRANSISTOR	
Q19			DTA114EE	DIGITAL TRANSISTOR	
Q20			DTC143ZE	DIGITAL TRANSISTOR	
Q21 ,22			2SC4617	TRANSISTOR	
Q23			2SB1184	TRANSISTOR	
Q24			2SC4617	TRANSISTOR	
Q25			2SA1774	TRANSISTOR	
Q26			2SC4617	TRANSISTOR	
Q27			2SA1576A	TRANSISTOR	
Q28			2SC4617	TRANSISTOR	
Q29			DTC143ZE	DIGITAL TRANSISTOR	
Q30			2SB1689	TRANSISTOR	
Q35			DTC114YE	DIGITAL TRANSISTOR	
Q36 ,37			2SA1774	TRANSISTOR	
Q38			TPC8110-F	FET	
Q39			KTA1046-P	TRANSISTOR	
Q40			2SA1576A	TRANSISTOR	
Q41			2SC4081	TRANSISTOR	
Q42			2SA1576A	TRANSISTOR	
Q43			2SC4081	TRANSISTOR	
Q44			2SA1576A	TRANSISTOR	
Q45			DTC143ZE	DIGITAL TRANSISTOR	
Q46			TPC8110-F	FET	
Q51			KRC408-P	DIGITAL TRANSISTOR	
Q52			DTC143ZE	DIGITAL TRANSISTOR	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-127x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q53			KRC408-P	DIGITAL TRANSISTOR	
Q54 ,55			HAT2218R-E	DUAL FET	
Q56 ,57			KRC408-P	DIGITAL TRANSISTOR	
Q58 ,59			HAT2218R-E	DUAL FET	
Q60			2SA1576A	TRANSISTOR	
Q61			2SC4617	TRANSISTOR	
Q62			2SA1576A	TRANSISTOR	
Q63			2SC4617	TRANSISTOR	
Q64			2SA1576A	TRANSISTOR	
Q65			2SC4617	TRANSISTOR	
Q66			DTB123YK	DIGITAL TRANSISTOR	
Q67			DTC143EE	DIGITAL TRANSISTOR	
Q68			DTB123YK	DIGITAL TRANSISTOR	
Q69			DTC143EE	DIGITAL TRANSISTOR	
Q71			DTA124EE	DIGITAL TRANSISTOR	
Q72			DTC124EE	DIGITAL TRANSISTOR	
Q73 ,74			DTC144EE	DIGITAL TRANSISTOR	
Q75			KRA302-P	DIGITAL TRANSISTOR	
Q76			2SK3019	FET	
Q77			KRA308-P	DIGITAL TRANSISTOR	
Q78 ,79			2SK3019	FET	
Q80			DTA114EE	DIGITAL TRANSISTOR	
Q82			DTA124EE	DIGITAL TRANSISTOR	
Q350			2SC4081	TRANSISTOR	
Q351			KRC410-P	DIGITAL TRANSISTOR	
Q352			DTA144EE	DIGITAL TRANSISTOR	
Q353,354			KRC410-P	DIGITAL TRANSISTOR	
Q355			DTA144EE	DIGITAL TRANSISTOR	
Q356,357			KRC410-P	DIGITAL TRANSISTOR	
Q358			DTA144EE	DIGITAL TRANSISTOR	
Q359			DTC124EE	DIGITAL TRANSISTOR	
Q360			KRC410-P	DIGITAL TRANSISTOR	
Q361			2SA1577	TRANSISTOR	
Q362			DTC124EE	DIGITAL TRANSISTOR	
Q370			2SC4081	TRANSISTOR	
Q371			DTA144EE	DIGITAL TRANSISTOR	
Q372,373			KRC410-P	DIGITAL TRANSISTOR	
Q451			2SA1576A	TRANSISTOR	
Q452			DTC144EE	DIGITAL TRANSISTOR	E1Q1Q2
Q452			DTC144EE	DIGITAL TRANSISTOR	M1M2X1
Q453			2SA1774	TRANSISTOR	
Q454,455			DTC144EE	DIGITAL TRANSISTOR	
Q654			2SA1774	TRANSISTOR	
Q655			2SC4617	TRANSISTOR	
Q681			2SA1576A	TRANSISTOR	
TH351			PRF18BE471QS2	POSITIVE RESISTOR	
A1			X86-4030-16	FRONT-END UNIT	KR1X1
A1			X86-4032-72	FRONT-END UNIT	E1Q1Q2
A1			X86-4032-72	FRONT-END UNIT	M1M2

VIDEO UNIT (X35-4960-10)

D451-453			B30-3201-05	LED (RGB F3)	
C1 ,2			CK73EB1E106K	CHIP C 10UF K	
C3			C93-1283-05	CHIP C 1.0UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C5			C93-1363-05	CHIP C 10PF	
C6			C93-1464-05	CHIP C 0.012UF F	
C7			CK73GB1H473K	CHIP C 0.047UF K	
C8			C93-1383-05	CHIP C 220PF F	
C9			CK73GB0J225K	CHIP C 2.2UF K	
C11			CK73GB0J225K	CHIP C 2.2UF K	
C12			CK73HB1E103K	CHIP C 0.010UF K	
C13			CK73GB1A474K	CHIP C 0.47UF K	
C14			CK73HB1E103K	CHIP C 0.010UF K	
C15			CK73GB1H473K	CHIP C 0.047UF K	
C16			CK73HB1C183K	CHIP C 0.018UF K	
C17			CK73HB1E103K	CHIP C 0.010UF K	
C18			C93-1283-05	CHIP C 1.0UF K	
C21			CK73GB0J225K	CHIP C 2.2UF K	
C22			CK73HB1H152K	CHIP C 1500PF K	
C23			CK73EB1E106K	CHIP C 10UF K	
C24			CK73GB1H103K	CHIP C 0.010UF K	
C25			C93-1460-05	CHIP C 2200PF F	
C28			C93-1283-05	CHIP C 1.0UF K	
C100			CC73GCH1H151J	CHIP C 150PF J	
C101			CK73GB1C104K	CHIP C 0.10UF K	
C102			CK73FB0J106K	CHIP C 10UF K	
C103			CK73GB1H103K	CHIP C 0.010UF K	
C104			CK73FB1C106K	CHIP C 10UF K	
C105			CK73GB1C104K	CHIP C 0.10UF K	
C106			CK73EB1A106K	CHIP C 10UF K	
C107			CK73EB1C106K	CHIP C 10UF K	
C108			CK73GB1C104K	CHIP C 0.10UF K	
C109			CK73FB1C105K	CHIP C 1.0UF K	
C110			CK73GB1H103K	CHIP C 0.010UF K	
C112			CK73FB1E154K	CHIP C 0.15UF K	
C113			CK73EB1E225K	CHIP C 2.2UF K	
C114			CK73GB1C224K	CHIP C 0.22UF K	
C115			CK73GB1C104K	CHIP C 0.10UF K	
C116			CK73EB0J226K	CHIP C 22UF K	
C117			CK73HB1H102K	CHIP C 1000PF K	
C118			CK73GB1H103K	CHIP C 0.010UF K	
C119			CK73HB1E103K	CHIP C 0.010UF K	
C120			CK73GB1C104K	CHIP C 0.10UF K	
C121			CK73HB1E103K	CHIP C 0.010UF K	
C122			CK73HB1A104K	CHIP C 0.10UF K	
C129			CK73EB1C106K	CHIP C 10UF K	
C130			CK73GB1H103K	CHIP C 0.010UF K	
C131			CK73EB1E106K	CHIP C 10UF K	
C132			CK73GB1H104K	CHIP C 0.10UF K	
C133			CK73GB1H103K	CHIP C 0.010UF K	
C134			CK73FB0J106K	CHIP C 10UF K	
C135			CK73GB1H103K	CHIP C 0.010UF K	
C140			CC73GCH1H151J	CHIP C 150PF J	
C145			CK73EB1C106K	CHIP C 10UF K	
C150,151			CK73FB1C106K	CHIP C 10UF K	
C200			CK73EB1A106K	CHIP C 10UF K	
C202			CK73EB1C106K	CHIP C 10UF K	
C203			CK73HB1E103K	CHIP C 0.010UF K	
C204			CC73HCH1H560J	CHIP C 56PF J	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO UNIT (X35-4960-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C205			CK73EB1C106K	CHIP C	10UF	K	
C206			CK73HB1E103K	CHIP C	0.010UF	K	
C221			CK73GB1C104K	CHIP C	0.10UF	K	
C222			CC73HCH1H102J	CHIP C	1000PF	J	
C223-225			CK73EB1C106K	CHIP C	10UF	K	
C300			CK73GB1A105K	CHIP C	1.0UF	K	
C301			CK73GB1H103K	CHIP C	0.010UF	K	
C302			CK73FB0J106K	CHIP C	10UF	K	
C303			CK73GB1H103K	CHIP C	0.010UF	K	
C304			CK73GB1A105K	CHIP C	1.0UF	K	
C306			CC73HCH1H101J	CHIP C	100PF	J	
C307			CK73HB1A104K	CHIP C	0.10UF	K	
C308			CC73HCH1H101J	CHIP C	100PF	J	
C309-314			CK73HB1A104K	CHIP C	0.10UF	K	
C315			CC73HCH1H101J	CHIP C	100PF	J	
C316-318			CK73HB1E103K	CHIP C	0.010UF	K	
C319-321			CK73HB1A104K	CHIP C	0.10UF	K	
C322,323			CK73HB1E103K	CHIP C	0.010UF	K	
C324			CC73HCH1H101J	CHIP C	100PF	J	
C325,326			CK73HB1E103K	CHIP C	0.010UF	K	
C327,328			CC73GCH1H180J	CHIP C	18PF	J	
C329-331			CC73HCH1H101J	CHIP C	100PF	J	
C332-338			CK73HB1E103K	CHIP C	0.010UF	K	
C339			CK73GB1C104K	CHIP C	0.10UF	K	
C340,341			CK73HB1E103K	CHIP C	0.010UF	K	
C342			CK73HB1A104K	CHIP C	0.10UF	K	
C343			CK73HB1E103K	CHIP C	0.010UF	K	
C344,345			CK73HB1A104K	CHIP C	0.10UF	K	
C346,347			CK73HB1H102K	CHIP C	1000PF	K	
C348			CC73HCH1H101J	CHIP C	100PF	J	
C349			CK73HB1H102K	CHIP C	1000PF	K	
C350			CK73FB0J106K	CHIP C	10UF	K	
C351			CK73HB1A104K	CHIP C	0.10UF	K	
C352			CK73FB0J106K	CHIP C	10UF	K	
C353			CK73HB1A104K	CHIP C	0.10UF	K	
C354			CK73FB0J106K	CHIP C	10UF	K	
C355			CK73HB1A104K	CHIP C	0.10UF	K	
C356			CK73HB1E103K	CHIP C	0.010UF	K	
C357			CC73HCH1H101J	CHIP C	100PF	J	
C360-365			CK73HB1A104K	CHIP C	0.10UF	K	
C401			CK73HB1H102K	CHIP C	1000PF	K	
C500			CK73GB0J225K	CHIP C	2.2UF	K	
C501-503			CK73HB1E103K	CHIP C	0.010UF	K	
C504			CK73FB0J106K	CHIP C	10UF	K	
C505			CK73GB1A105K	CHIP C	1.0UF	K	
C506			CK73FB0J106K	CHIP C	10UF	K	
C507			CK73EB1E105K	CHIP C	1.0UF	K	
CN1			E41-2874-05	PIN ASSY			
CN101			E41-2608-05	FLAT CABLE CONNECTOR			
CN103			E41-2359-05	PIN ASSY			
CN104			E41-2444-05	FLAT CABLE CONNECTOR			
CN302			E41-2761-05	FLAT CABLE CONNECTOR			
CN501			E41-2087-05	FLAT CABLE CONNECTOR			
CN502			E41-2762-05	FLAT CABLE CONNECTOR			

Ref. No.	Add	New	Parts No.	Description				Destination
CN503			E41-2901-15	FLAT CABLE CONNECTOR				
F1			F53-0297-05	FUSE (UL,CSA) 1.6A				
F100			F53-0280-05	FUSE 0.63A				
L1			L19-0783-05	TRANSFORMER FOR CONVERTER				
L100			L33-2454-05	CHOKE COIL (10UH)				
L101,102			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)				
L103			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)				
L104-106			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
L200			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
L300			L33-2454-05	CHOKE COIL (10U)				
L302-304			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
L305-307			L92-0319-05	CHIP FERRITE				
L308			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
L309-312			L92-0319-05	CHIP FERRITE				
L314			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)				
L501			L41-1005-33	SMALL FIXED INDUCTOR (10U)				
X300			L77-2963-05	CRYSTAL RESONATOR (12M)				
R1			RK73HB1J512J	CHIP R	5.1K	J	1/16W	
R3			RK73HB1J220J	CHIP R	22	J	1/16W	
R4			RK73GH2A433D	CHIP R	43K	D	1/10W	
R5			RK73HB1J153J	CHIP R	15K	J	1/16W	
R6			RK73HH1J563D	CHIP R	56K	D	1/16W	
R7			RK73HB1J220J	CHIP R	22	J	1/16W	
R8			RK73HB1J512J	CHIP R	5.1K	J	1/16W	
R9			RK73HH1J204D	CHIP R	200K	D	1/16W	
R10			RK73FB2B152J	CHIP R	1.5K	J	1/8W	
R11			RK73HB1J220J	CHIP R	22	J	1/16W	
R12			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R13			RK73HB1J220J	CHIP R	22	J	1/16W	
R14			RK73GH2A471D	CHIP R	470	D	1/10W	
R15			RK73GH2A513D	CHIP R	51K	D	1/10W	
R16 ,17			RK73HB1J220J	CHIP R	22	J	1/16W	
R18			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R21			RK73HB1J104J	CHIP R	100K	J	1/16W	
R22			RK73GB2A515J	CHIP R	5.1M	J	1/10W	
R23			RK73HH1J824D	CHIP R	820K	D	1/16W	
R24			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R100			RK73HB1J100J	CHIP R	10	J	1/16W	
R101			RK73GH2A104D	CHIP R	100K	D	1/10W	
R102			RK73GH2A113D	CHIP R	11K	D	1/10W	
R103			RK73GH2A164D	CHIP R	160K	D	1/10W	
R104			RK73GH2A123D	CHIP R	12K	D	1/10W	
R105			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R108,109			RK73GB2A103J	CHIP R	10K	J	1/10W	
R110			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R111			RK73HB1J473J	CHIP R	47K	J	1/16W	
R112			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R113,114			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R118			RK73HB1J754J	CHIP R	750K	J	1/16W	
R119			RK73FB2B222J	CHIP R	2.2K	J	1/8W	
R201			RK73HB1J243J	CHIP R	24K	J	1/16W	
R202			RK73HB1J183J	CHIP R	18K	J	1/16W	
R204,205			RK73HB1J000J	CHIP R	0.0	J	1/16W	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4960-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R206			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R207			RK73HH1J222D	CHIP R 2.2K D 1/16W	
R208			RK73HH1J153D	CHIP R 15K D 1/16W	
R209,210			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R212			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R214,215			RK73GB2A470J	CHIP R 47 J 1/10W	
R216			RK73HB1J101J	CHIP R 100 J 1/16W	
R220			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R221			RK73HH1J182D	CHIP R 1.8K D 1/16W	
R222			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R223,224			RK73HH1J473D	CHIP R 47K D 1/16W	
R225			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R301,302			RK73HB1J101J	CHIP R 100 J 1/16W	
R303			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R306			RK73HB1J101J	CHIP R 100 J 1/16W	
R309-312			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R313,314			RK73HB1J101J	CHIP R 100 J 1/16W	
R336			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R341-343			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R344,345			RK73HB1J101J	CHIP R 100 J 1/16W	
R346			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R347-349			RK73HB1J473J	CHIP R 47K J 1/16W	
R350			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R351,352			RK73HB1J101J	CHIP R 100 J 1/16W	
R353-355			RK73HB1J473J	CHIP R 47K J 1/16W	
R356,357			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R358			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R366-373			RK73HB1J101J	CHIP R 100 J 1/16W	
R375			RK73HB1J820J	CHIP R 82 J 1/16W	
R376			RK73HB1J300J	CHIP R 30 J 1/16W	
R380			RK73HB1J103J	CHIP R 10K J 1/16W	
R382			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R402			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R403			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R404			RK73HB1J243J	CHIP R 24K J 1/16W	
R405,406			RK73GB2A620J	CHIP R 62 J 1/10W	
R441			RK73GB2A820J	CHIP R 82 J 1/10W	
R453			RK73GB2A820J	CHIP R 82 J 1/10W	
R454			RK73GB2A620J	CHIP R 62 J 1/10W	
R455-458			RK73GB2A820J	CHIP R 82 J 1/10W	
R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
R503-506			RK73GB2A100J	CHIP R 10 J 1/10W	
VR200			R32-0350-05	SEMI FIXED VARIABLE RESISTOR	
S401-405			S70-0901-05	TACT SWITCH	
D1 ,2			UDZW5.6(B)	ZENER DIODE	
D3			1SS355	DIODE	
D4 ,5			DA204U	DIODE	
D6			MA2S784-F	DIODE	
D7			UDZW5.6(B)	ZENER DIODE	
D8			CVS10A120M	VARISTOR	
D9			DA204U	DIODE	
D10			1SS355	DIODE	
D11			CVS10A120M	VARISTOR	
D12			DA204U	DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D101			EP05Q04	DIODE	
D102			EP05Q06	DIODE	
D103,104			EP05Q04	DIODE	
D300			DA204U	DIODE	
D302			CVS10A120M	VARISTOR	
D308			DA204U	DIODE	
D401			CVS10A120M	VARISTOR	
D409-411			CVS10A180M	VARISTOR	
D501-504			CVS10A180M	VARISTOR	
D505-507			CVS10A120M	VARISTOR	
IC1			OZ964ISN-C-SN	ANALOGUE IC	
IC101			LT1947-PBF	ANALOGUE IC	
IC102			TC7WH123FU-F	MOS-IC	
IC103			74AHC1G04GW	MOS-IC	
IC200			TA75W558FU-F	ANALOGUE IC	
IC300			S-1112B25MCG	ANALOGUE IC	
IC302			AT25F2048-4Z8	ROM IC	
IC304			MST7988LA-ALF	MOS-IC	
Q1			2SC4081	TRANSISTOR	
Q2 ,3			SI5504DC-E3	DUAL FET	
Q4			DTC114YUA	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q101			2SC4081	TRANSISTOR	
Q102			2SA1576A	TRANSISTOR	
Q200			2SC4097	TRANSISTOR	
Q202			2SA1577	TRANSISTOR	
Q203			UMZ1N	TRANSISTOR	
Q501			DTC114YE	DIGITAL TRANSISTOR	
Q502,503			PUMD10	DUAL TRANSISTOR	

DVD UNIT (X37-1250-00)

C3			CK73HB1A104K	CHIP C	0.10UF	K	
C4			CC73HCH1H471J	CHIP C	470PF	J	
C5 -7			CK73HB1E103K	CHIP C	0.010UF	K	
C8			CC73HCH1H471J	CHIP C	470PF	J	
C9			CK73HB0J105K	CHIP C	1.0UF	K	
C11 ,12			CK73HB1E103K	CHIP C	0.010UF	K	
C13			CK73HB1H472K	CHIP C	4700PF	K	
C14			CK73GB0J106M	CHIP C	10UF	M	
C15			CK73HB1A104K	CHIP C	0.10UF	K	
C16			CK73GB0J106M	CHIP C	10UF	M	
C17			CK73GB0J475K	CHIP C	4.7UF	K	
C18			CK73FB0J226M	CHIP C	22UF	M	
C21			CK73GB0J106M	CHIP C	10UF	M	
C22 ,23			CK73GB0J475K	CHIP C	4.7UF	K	
C50			CK73HB1E103K	CHIP C	0.010UF	K	
C51			CK73HB1A104K	CHIP C	0.10UF	K	
C52			CK73HB1E223K	CHIP C	0.022UF	K	
C53			CC73HCH1H470J	CHIP C	47PF	J	
C54			CC73HCH1H102J	CHIP C	1000PF	J	
C55			CC73HCH1H100D	CHIP C	10PF	D	
C56			CC73HCH1H102J	CHIP C	1000PF	J	
C57			CC73HCH1E681J	CHIP C	680PF	J	
C58			CK73HB1H682K	CHIP C	6800PF	K	
C60 ,61			CK73HB1A104K	CHIP C	0.10UF	K	
C62			CC73HCH1H102J	CHIP C	1000PF	J	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

DVD UNIT (X37-1250-00)

Ref. No.	Add	New	Parts No.	Description	Destination
C63			CC73HCH1H331J	CHIP C 330PF J	
C64			CK73HB1H222K	CHIP C 2200PF K	
C65			CC73HCH1E681J	CHIP C 680PF J	
C66			CK73HB1H152K	CHIP C 1500PF K	
C67 ,68			CC73HCH1H102J	CHIP C 1000PF J	
C69 -72			CC73HCH1H151J	CHIP C 150PF J	
C73 -82			CK73HB1A104K	CHIP C 0.10UF K	
C84			CK73HB0J105K	CHIP C 1.0UF K	
C85			CK73HB1A104K	CHIP C 0.10UF K	
C90			CK73HB1E103K	CHIP C 0.010UF K	
C93 -95			CK73HB1A104K	CHIP C 0.10UF K	
C97			CK73HB1A104K	CHIP C 0.10UF K	
C99			CK73HB1A104K	CHIP C 0.10UF K	
C100			CK73FB0J226M	CHIP C 22UF M	
C101			CK73GB0J475K	CHIP C 4.7UF K	
C103			CK73FB0J226M	CHIP C 22UF M	
C104			CK73GB0J475K	CHIP C 4.7UF K	
C120,121			CK73HB1E223K	CHIP C 0.022UF K	
C143,144			CC73HCH1H100D	CHIP C 10PF D	
C202			CK73FB0J226M	CHIP C 22UF M	
C207,208			CK73HB1A104K	CHIP C 0.10UF K	
C210			CK73HB1A104K	CHIP C 0.10UF K	
C212			CK73HB1A104K	CHIP C 0.10UF K	
C213			CK73HB1H332K	CHIP C 3300PF K	
C214,215			CK73HB1A104K	CHIP C 0.10UF K	
C216			CC73HCH1H471J	CHIP C 470PF J	
C217			CK73HB1A104K	CHIP C 0.10UF K	
C218			CK73HB1C473K	CHIP C 0.047UF K	
C219-222			CK73HB1A104K	CHIP C 0.10UF K	
C223			CK73HB0J105K	CHIP C 1.0UF K	
C224			CK73HB1A104K	CHIP C 0.10UF K	
C225			CK73GB0J475K	CHIP C 4.7UF K	
C227			CK73FB0J226M	CHIP C 22UF M	
C434			CK73GB0J106M	CHIP C 10UF M	
C435			CK73HB1E103K	CHIP C 0.010UF K	
C440-442			CK73FB0J226M	CHIP C 22UF M	
C446			CC73HCH1H101J	CHIP C 100PF J	
C447,448			CC73HCH1H102J	CHIP C 1000PF J	
C449,450			CK73HB1H472K	CHIP C 4700PF K	
C451			CC73HCH1H102J	CHIP C 1000PF J	
C452-454			CK73HB0J105K	CHIP C 1.0UF K	
C455			CK73FB0J226M	CHIP C 22UF M	
CN1			E41-2594-05	FLAT CABLE CONNECTOR	
CN2			E41-2114-15	FLAT CABLE CONNECTOR	
CN3			E41-2596-05	FLAT CABLE CONNECTOR	
L1			L92-0365-05	CHIP FERRITE	
L5			L92-0365-05	CHIP FERRITE	
X2			L77-3803-05	CRYSTAL RESONATOR (16.897849MHZ	
CP2 -4			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP5 -9			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP10			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP11			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R1			RK73HB1J103J	CHIP R 10K J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R3 ,4			RK73HB1J103J	CHIP R 10K J 1/16W	
R5 ,6			RK73HH1J123D	CHIP R 12K D 1/16W	
R7			RK73HH1J333D	CHIP R 33K D 1/16W	
R8 ,9			RK73HB1J103J	CHIP R 10K J 1/16W	
R10			RK73HB1J163J	CHIP R 16K J 1/16W	
R11			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R13			RK73HB1J103J	CHIP R 10K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21 ,22			RK73HH1J103D	CHIP R 10K D 1/16W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R50 ,51			RK73HB1J510J	CHIP R 51 J 1/16W	
R52			RK73HH1J153D	CHIP R 15K D 1/16W	
R53			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R54			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R55			RK73HB1J103J	CHIP R 10K J 1/16W	
R56			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R57 ,58			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R59 ,60			RK73HB1J103J	CHIP R 10K J 1/16W	
R63			RK73HB1J103J	CHIP R 10K J 1/16W	
R64 ,65			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R81			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R83 ,84			RK73HB1J473J	CHIP R 47K J 1/16W	
R85			RK73HB1J223J	CHIP R 22K J 1/16W	
R86			RK73HB1J103J	CHIP R 10K J 1/16W	
R87			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R88			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R89 ,90			RK73HB1J123J	CHIP R 12K J 1/16W	
R91			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R92			RK73HB1J273J	CHIP R 27K J 1/16W	
R96			RK73HB1J103J	CHIP R 10K J 1/16W	
R98			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R101			RK73HH1J273D	CHIP R 27K D 1/16W	
R105			RK73HB1J103J	CHIP R 10K J 1/16W	
R120			RK73HB1J103J	CHIP R 10K J 1/16W	
R121			RK73HB1J820J	CHIP R 82 J 1/16W	
R122			RK73HB1J103J	CHIP R 10K J 1/16W	
R123			RK73HB1J330J	CHIP R 33 J 1/16W	
R124-126			RK73HB1J820J	CHIP R 82 J 1/16W	
R150,151			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R152,153			RK73HB1J104J	CHIP R 100K J 1/16W	
R154,155			RK73HB1J103J	CHIP R 10K J 1/16W	
R158,159			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R160			R92-3350-05	CHIP R 2.2 F 1/10W	
R162,163			RK73HB1J104J	CHIP R 100K J 1/16W	
R164,165			RK73HH1J101D	CHIP R 100 D 1/16W	
R167			RK73HH1J113D	CHIP R 11K D 1/16W	
R168			RK73HH1J273D	CHIP R 27K D 1/16W	
R169			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R255			R92-5112-05	CHIP R 4.7 F 1/10W	
R257			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R260			RK73HH1J132D	CHIP R 1.3K D 1/16W	
R261			RK73HH1J203D	CHIP R 20K D 1/16W	
R262			RK73HB1J821J	CHIP R 820 J 1/16W	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

The IC3, and IC11 in the DVD unit (X37-1250-00) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6400-00).

DVD UNIT (X37-1250-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R263			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R272			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R273			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R274			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R275			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R278			R92-5112-05	CHIP R 4.7 F 1/10W	
R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R288			R92-3416-05	CHIP R 0.27 1/2W	
R289			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R297			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R298,299			RK73HB1J330J	CHIP R 33 J 1/16W	
R300			RK73HB1J103J	CHIP R 10K J 1/16W	
S1			S68-0911-15	PUSH SWITCH	
S2			S68-0917-05	PUSH SWITCH	
D1			1SS402-F	DIODE	
D5 ,6			015AZ5.1-F(Y)	ZENER DIODE	
D8			1SS387-F	DIODE	
IC1			AN22022ABV	ANALOGUE IC	
IC3			-	ROM IC	
IC4			MN103S71F	MOS-IC	
IC5			S1000N28I4T1G	ANALOGUE IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC11			-	ROM IC	
IC13			NJM2845DL115B	ANALOGUE IC	
IC14			NJM2845DL133B	ANALOGUE IC	
Q1 -4			DTA143XE	DIGITAL TRANSISTOR	
Q12 ,13			2SB1709	TRANSISTOR	
Q16			UM6K1N	DUAL FET	

DVD MECHANISM ASSY (X92-6400-00) (DVS-8220W)

Ref. No.	Add	New	Parts No.	Description	Destination
1	1A		A10-5523-01+	CHASSIS	
2	2B		A10-5524-01+	CHASSIS	
3	1A		A10-5525-01+	CHASSIS	
4	3A		A10-5526-02+	CHASSIS	
7	1B		D10-7080-02+	ARM	
8	1B		D10-7081-02+	ARM	
9	1B		D10-7082-02+	LEVER	
10	1B		D10-7083-02+	LEVER	
12	2B		D10-7084-02+	SLIDER	
13	2A		D10-7085-02+	ARM	
14	2B		D10-7086-03+	ARM	
15	2B		D10-7087-02+	ARM	
25	2B		D10-7092-04+	SLIDER ASSY	
27	2A		D10-7091-04+	LEVER	
28	2B		D12-0640-02+	CAM	
31	2B		D13-3029-04+	GEAR	
32	2B		D13-3030-04+	GEAR	
33	2B		D13-3031-04+	GEAR	
34	2B		D13-3032-04+	GEAR	
35	2B		D13-3033-04+	GEAR	
36	2B		D13-3034-04+	GEAR	
40	2A		D13-3038-04+	GEAR	
41	2A		D13-3039-04+	GEAR	
42	2A		D13-3040-04+	GEAR	
43	1B		D14-1034-04+	ROLLER	
53	1B		D21-2487-24	SHAFT	
54	2A		D39-0275-05	DAMPER	
55	2A		D39-0276-05	DAMPER	
60	3A		F09-3019-03	SHEET	
65	2B		G01-4734-04	EXTENSION SPRING	
66	1B		G01-4735-04	EXTENSION SPRING	
67	2A		G01-4736-04	TORSION COIL SPRING	
68	2B		G01-4737-04	EXTENSION SPRING	
69	1B		G01-4738-04	EXTENSION SPRING	
70	1B		G01-4740-04	TORSION COIL SPRING	
74	2B		G01-4739-04	TORSION COIL SPRING	
75	1B		G02-1904-03+	FLAT SPRING	
79	2A		J22-0890-01+	MOUNTING HARDWARE	
80	3B		J22-0891-01+	MOUNTING HARDWARE	
A	1A		N09-6382-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

E1: KVT-524DVD (Europe) **Q1**: KVT-554DVD **Q2**: KVT-54DVDR (Russian)
K: KVT-514 (North America) **X1**: KVT-534DVD (Australia) **R1**: KVT-534DVD (Latin America)
M1: KVT-534DVD **M2**: KVT-534DVDM (Other Areas)

⚠Indicates safety critical compo nents.