2. EXPLODED VIEWS AND PARTS LIST


*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*

• The ⚠ mark found on some component parts indicatesthe importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

• Screw adjacent to▽mark on the product are used for disassembly.

• For the applying amount of lobricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

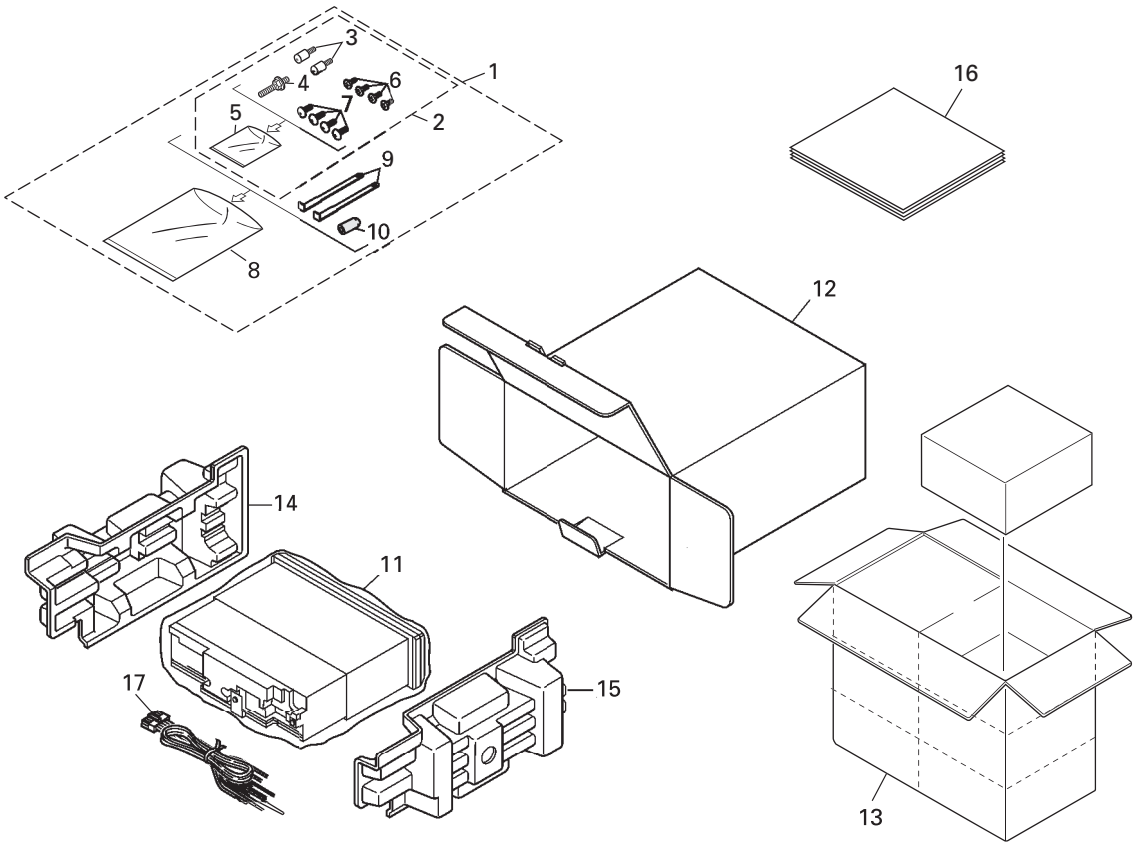


PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Accessory Assy(DEH-1700)	CEA4610
		Accessory Assy(DEH-7)	CEA4855
	2	Screw Assy(DEH-1700)	CEA4611
		Screw Assy(DEH-7)	CEA3849
	3	Screw(M2x4)(DEH-1700)	CBA1488
	4	Screw	CBA1650
*	5	Polyethylene Bag	CEG-127
	6	Screw	CRZ50P090FTC
	7	Screw	TRZ50P080FTC
*	8	Polyethylene Bag	CEG-158
	9	Handle	CNC5395
	10	Bush	CNV3930
	11	Polyethylene Bag	CEG1173
	12	Carton(DEH-1700)	CHG5420
		Carton(DEH-7)	CHG5350
	13	Contain Box(DEH-1700)	CHL5349
		Contain Box(DEH-7)	CHL5350
	14	Protector	CHP2664
	15	Protector	CHP2868
	16-1	Owner's Manual(DEH-1700)	CRD3906
	16-2	Owner's Manual(DEH-7)	CRD3908
	16-3	Installation Manual(DEH-1700)	CRD3907
	16-4	Installation Manual(DEH-7)	CRD3909
*	16-5	Caution Card	CRP1294
	16-6	Caution Card	CRP1310
*	16-7	Card	ARY1048
	17	Cord Assy	XDE7008

Owner's Manual,Installation Manual

Part No.	Language
CRD3906	English, French, Spanish
CRD3907	English, French, Spanish
CRD3908	English, French, Spanish
CRD3909	English, French, Spanish


2.2 EXTERIOR (DEH-1700/XN/UC)

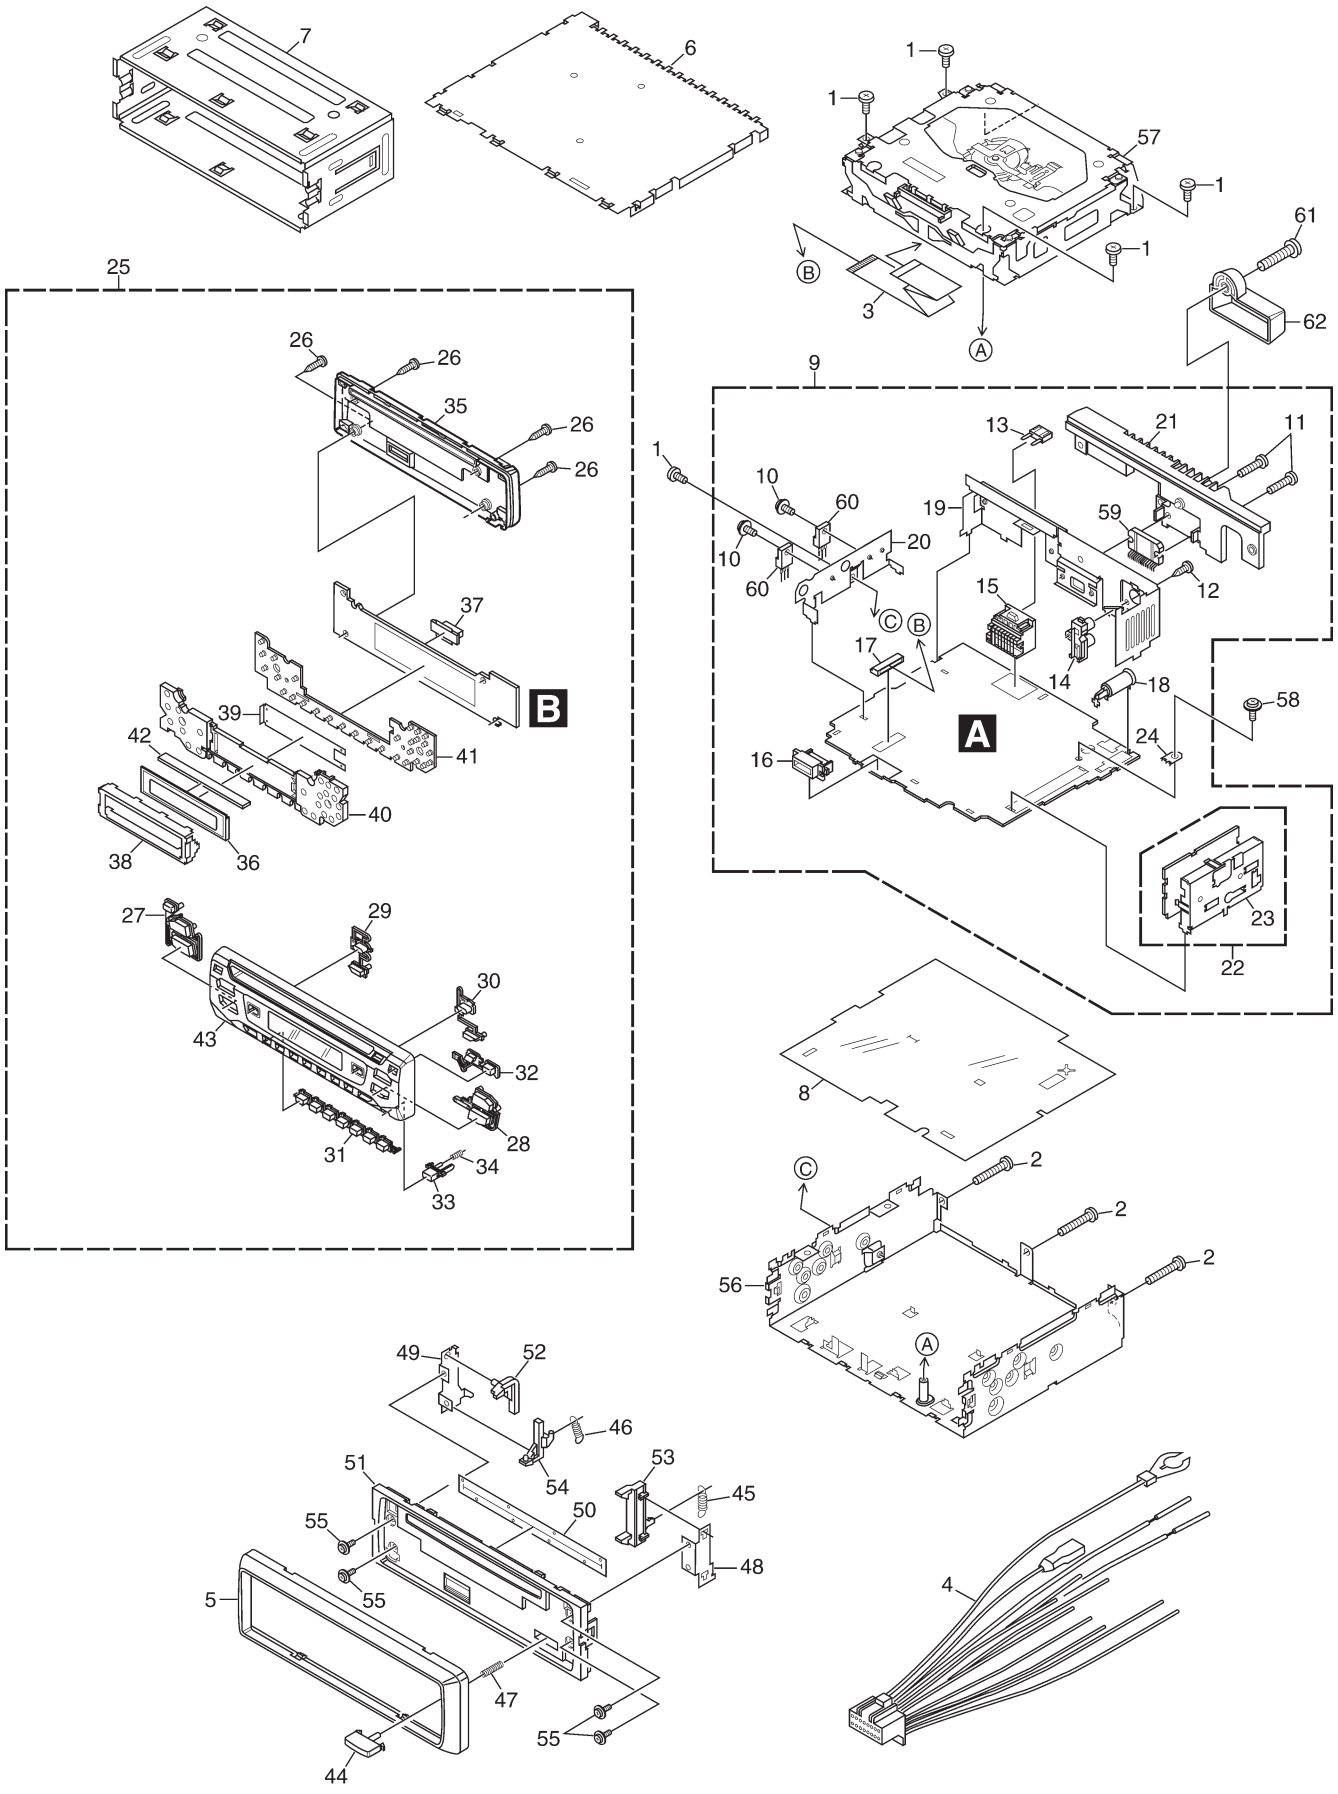

EXTERIOR (DEH-1700/XN/UC) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw	BSZ26P100FTC
	3	Cable	CDE7702
	4	Cord Assy	XDE7008
	5	Panel	CNS8046
	6	Case	CNB2793
	7	Holder	CNC8659
	8	Insulator	CNM9145
	9	Tuner Amp Unit	CWM9604
	10	Screw	ASZ26P060FTC
	11	Screw	BMZ26P160FTC
	12	Screw	BPZ26P080FTC
⚠	13	Fuse(10A)	CEK1208
	14	Pin Jack(CN352)	CKB1059
	15	Plug(CN901)	CKM1376
	16	Connector(CN831)	CKS3581
	17	Connector(CN651)	CKS3835
	18	Antenna Jack(CN401)	CKX1056
	19	Holder	CND2413
	20	Holder	CND2414
	21	Heat Sink	CNR1762
	22	FM/AM Tuner Unit	CWE1912
	23	Holder	CND1054
	24	Terminal(CN402)	VNF1084
	25	Detach Grille Assy	CXC3540
	26	Screw	BPZ20P100FZK
	27	Button(VOLUME)	CAC8924
	28	Button(SELECT)	CAC8925
	29	Button(BTB,SRC)	CAC8927
	30	Button(LOUD,BAND)	CAC8928
	31	Button(1-6)	CAC8929
	32	Button(CD EJECT,AUDIO)	CAC8930
	33	Button(DETACH)	CAC8931
	34	Spring	CBH2210
	35	Cover	CNS8042
	36	LCD	CAW1848
	37	Connector(CN1801)	CKS3580
	38	Holder	CND2412
	39	Sheet	CNM9144
	40	Lighting Conductor	CNV8190
	41	Rubber	CNV8191
	42	Connector	CNV8192
	43	Grille Unit	CXC3593
	44	Button	CAC4836
	45	Spring	CBH1835
	46	Spring	CBH2208
	47	Spring	CBH2367
	48	Bracket	CNC6791
	49	Holder	CNC8042
	50	Cover	CNM6276
	51	Panel	CNS8044
	52	Arm	CNV4692
	53	Arm	CNV4728
	54	Arm	CNV5576
	55	Screw	IMS20P030FZK
	56	Chassis Unit	CXC3600
	57	CD Mechanism Module(S10)	CXK5605
	58	Screw	ISS26P055FTC
	59	IC(IC302)	TDA7386
	60	Transistor(Q921,991)	2SD2396
	61	Screw	BMZ40P140FTC
	62	Holder	CNV7619


2.3 EXTERIOR (DEH-7/XN/UC)

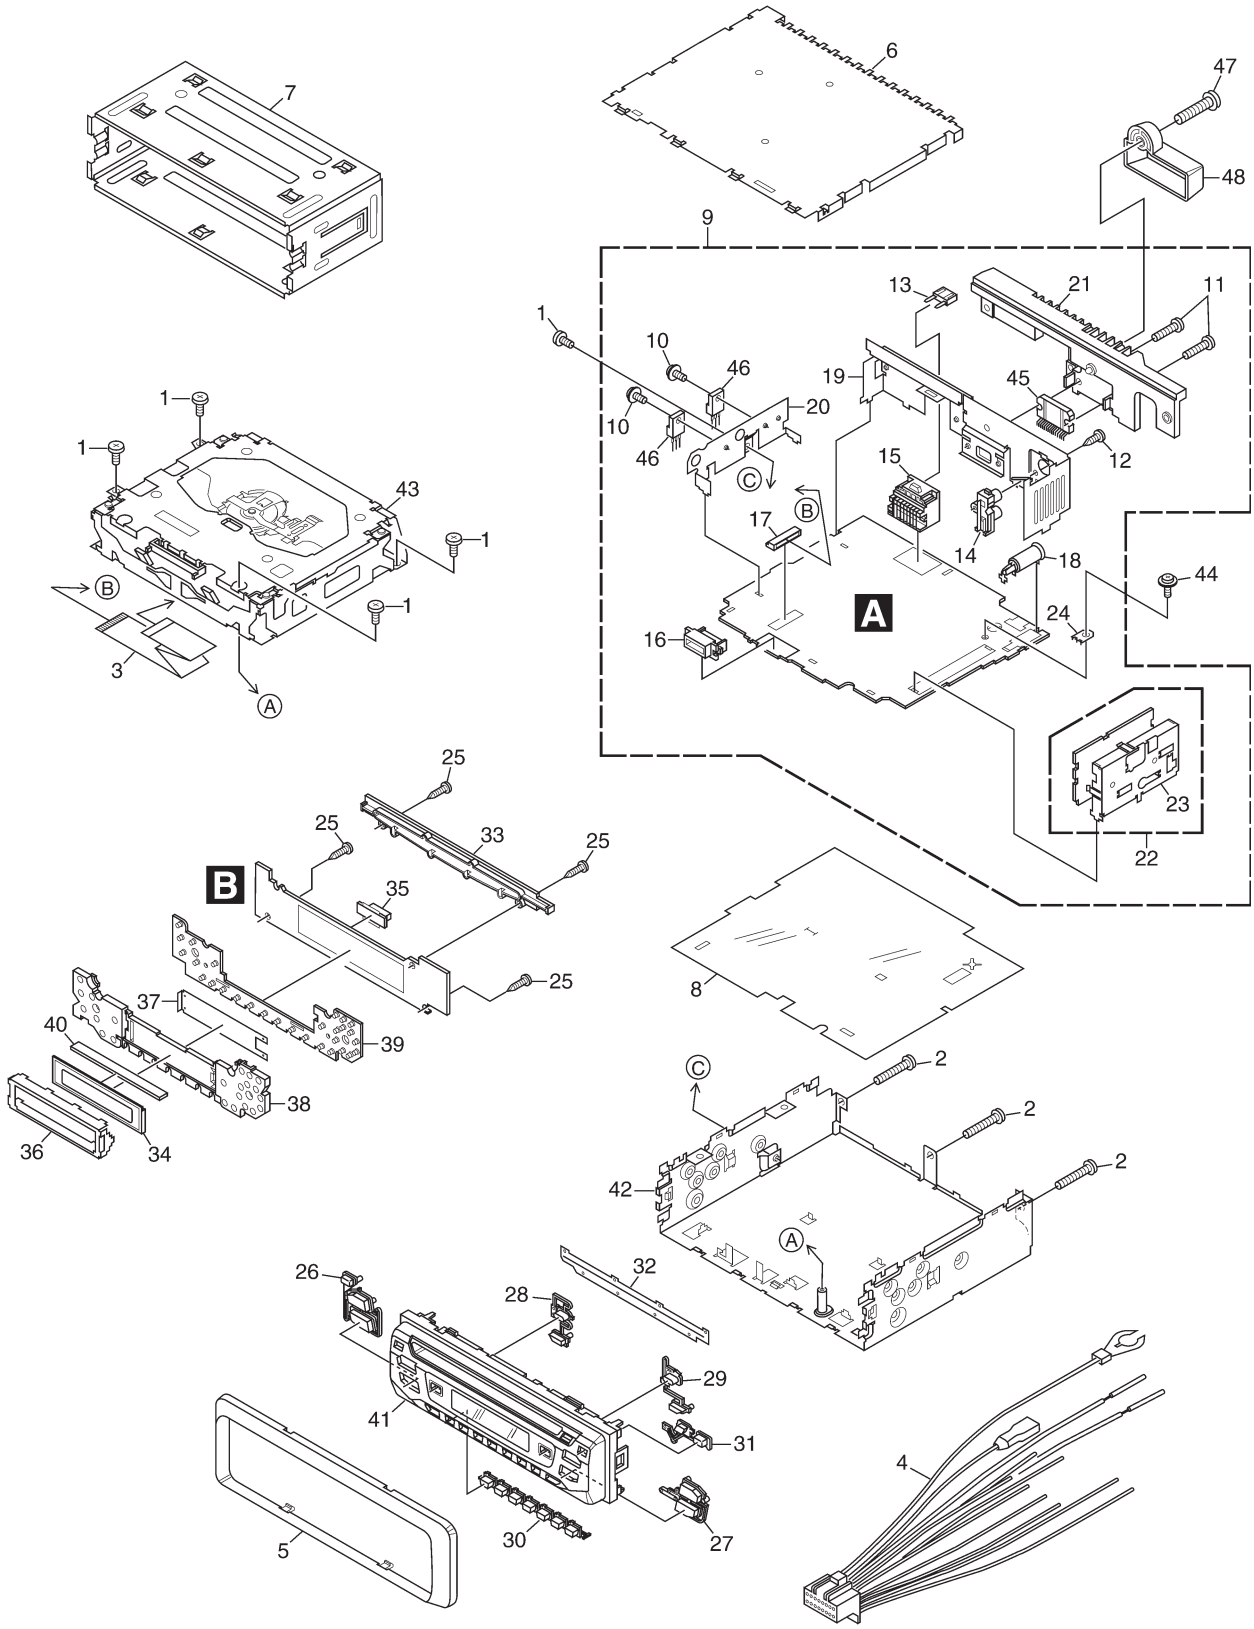

EXTERIOR (DEH-7/XN/UC) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw	BSZ26P100FTC
	3	Cable	CDE7702
	4	Cord Assy	XDE7008
	5	Panel	CNS8048
	6	Case	CNB2793
	7	Holder	CNC8659
	8	Insulator	CNM9145
	9	Tuner Amp Unit	CWM9607
	10	Screw	ASZ26P060FTC
	11	Screw	BMZ26P160FTC
	12	Screw	BPZ26P080FTC
⚠	13	Fuse(10A)	CEK1208
	14	Pin Jack(CN352)	CKB1059
	15	Plug(CN901)	CKM1376
	16	Connector(CN831)	CKS3581
	17	Connector(CN651)	CKS3835
	18	Antenna Jack(CN401)	CKX1056
	19	Holder	CND2413
	20	Holder	CND2414
	21	Heat Sink	CNR1762
	22	FM/AM Tuner Unit	CWE1912
	23	Holder	CND1054
	24	Terminal(CN402)	VNF1084
	25	Screw	BPZ20P080FTC
	26	Button(VOLUME)	CAC8924
	27	Button(SELECT)	CAC8925
	28	Button(BTB,SRC)	CAC8927
	29	Button(LOUD,BAND)	CAC8928
	30	Button(1-6)	CAC8929
	31	Button(CD EJECT,AUDIO)	CAC8930
	32	Cover	CNM9159
	33	Holder	CNV8212
	34	LCD	CAW1848
	35	Connector(CN1801)	CKS3580
	36	Holder	CND2412
	37	Sheet	CNM9144
	38	Lighting Conductor	CNV8190
	39	Rubber	CNV8191
	40	Connector	CNV8192
	41	Grille Unit	CXC3595
	42	Chassis Unit	CXC3600
	43	CD Mechanism Module(S10)	CXK5605
	44	Screw	ISS26P055FTC
	45	IC(IC302)	TDA7384
	46	Transistor(Q921,991)	2SD2396
	47	Screw	BMZ40P140FTC
	48	Holder	CNV7619

2.4 CD MECHANISM MODULE

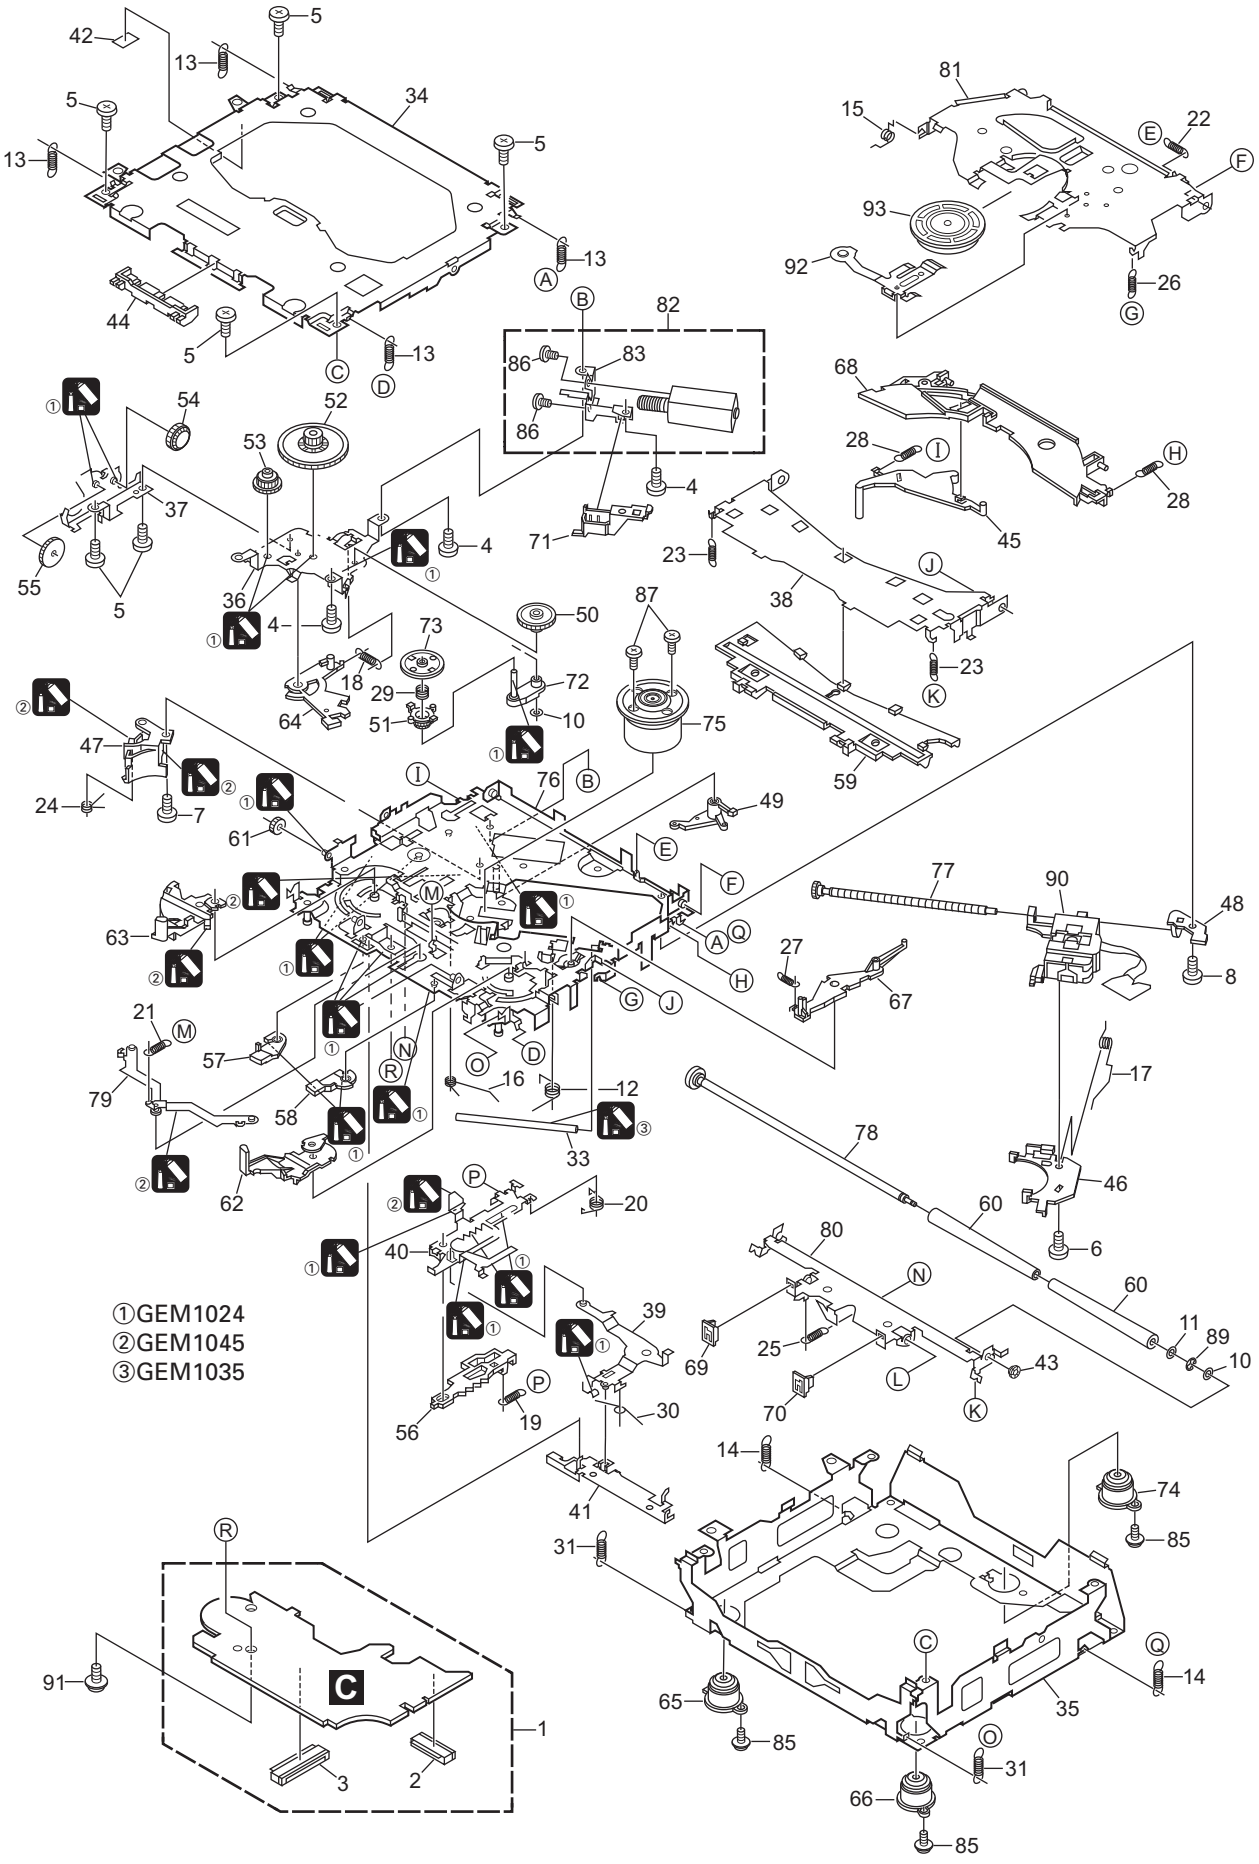

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10)	CWX3110
	2	Connector(CN101)	CKS4182
	3	Connector(CN701)	CKS4188
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1824
	8	Screw(M2x3)	CBA1825
	9	•••••	
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2735
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
	32	•••••	
	33	Shaft	CLA4441
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CND2712
	37	Bracket	CND1895
	38	Arm	CNC9968
	39	Arm	CND1909
	40	Lever	CND2032
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV7798
	44	Guide	CNV7799
	45	Arm	CNV8403
	46	Rack	CNV8374
	47	Holder	CNV8376
	48	Holder	CNV8377
	49	Arm	CNV8378
	50	Gear	CNV8379
	51	Gear	CNV8380
	52	Gear	CNV8381
	53	Gear	CNV8382
	54	Gear	CNV8383
	55	Gear	CNV8384
	56	Rack	CNV8385
	57	Arm	CNV8386
	58	Arm	CNV8387
	59	Guide	CNV8388
	60	Roller	CNV7218
	61	Gear	CNV8389
	62	Arm	CNV8391
	63	Arm	CNV8390
	64	Arm	CNV8392
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV8394
	68	Arm	CNV8395
	69	Guide	CNV8396
	70	Guide	CNV8397
	71	Holder	CNV8398
	72	Arm	CNV8402
	73	Gear	CNV8400
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXC4440
	76	Chassis Unit	CXC2318
	77	Screw Unit	CXB8729
	78	Gear Unit	CXC2397
	79	Arm Unit	CXC2316
	80	Arm	CND1896
	81	Arm	CND1894
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	•••••	
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	•••••	
	89	Washer	YE20FTC
	90	Pickup Unit(P10)(Service)	CXX1641
	91	Screw	IMS26P030FTC
	92	Spring	CBL1635
	93	Clamper	CNV8372

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicatesthe importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

A

Unit Number:CWM9604(DEH-1700)
Unit Number:CWM9607(DEH-7)
Unit Name:Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 151	(B,134,85) IC	PML010A
IC 302	(A,95,135) IC(DEH-1700)	TDA7386
	IC(DEH-7)	TDA7384
IC 551	(B,62,118) IC	TPD1018F
IC 601	(B,88,62) IC	PE5449A
IC 652	(B,113,45) IC	TC7SET08FU
IC 901	(B,144,29) IC	BA33BC0FP
IC 961	(A,59,81) IC	S-80834CNY
Q 352	(B,162,129) Transistor	UMH3N
Q 452	(B,140,128) Transistor	UMD2N
Q 801	(B,84,26) Transistor	2SA1036K
Q 821	(B,43,16) Transistor	2SA1036K
Q 822	(B,32,18) Transistor	DTC114EU
Q 912	(B,15,145) Transistor	UMD2N
Q 913	(A,16,111) Transistor	2SD1859
Q 921	(A,9,104) Transistor	2SD2396
Q 923	(B,26,79) Transistor	UMD2N
Q 931	(B,62,107) Transistor	UMX1N
Q 991	(A,9,69) Transistor	2SD2396
Q 992	(B,23,58) Transistor	UMD2N
D 551	(A,63,126) Diode	MPG06G-6415G3
D 552	(A,60,126) Diode	MPG06G-6415G3
D 831	(A,110,21) Diode(DEH-1700)	1SS270
D 832	(A,113,21) Diode(DEH-1700)	1SS270
D 833	(A,118,21) Diode(DEH-1700)	1SS270
D 834	(A,110,13) Diode(DEH-1700)	1SS270
D 835	(A,113,13) Diode(DEH-1700)	1SS270
D 836	(A,118,13) Diode(DEH-1700)	1SS270
D 837	(A,115,21) Diode(DEH-1700)	1SS270
D 838	(A,115,13) Diode(DEH-1700)	1SS270
D 901	(A,36,132) Diode	MPG06G-6415G3
D 902	(A,36,129) Diode	MPG06G-6415G3
D 911	(A,20,107) Diode	MPG06G-6415G3
D 912	(A,15,129) Diode	HZS6L(B2)
D 921	(A,25,88) Diode	HZS9L(B3)
D 931	(A,70,116) Diode	HZS7L(C3)
D 932	(A,53,113) Diode	HZS7L(A1)
D 991	(A,21,66) Diode	HZS7L(C3)
L 151	(A,146,70) Inductor	LAU2R2K
L 401	(A,158,58) Inductor	LAU2R2K
L 402	(A,147,95) Inductor	LAU2R2K
L 404	(B,161,101) Inductor	LCTAW4R7J2520
L 601	(A,94,85) Ferri-Inductor	LAU100K
L 602	(A,105,67) Inductor	LAU2R2K
L 801	(A,94,25) Inductor	LAU2R2K
L 901	(A,37,108) Choke Coil 600µH	CTH1280
X 601	(A,104,72) Radiator 12.58291MHz	CSS1402
⚠FU352	(B,144,135) Fuse 3A	CEK1286
AR401	(A,162,110) Surge Protector	DSP-201M-S00B
⚠	Fuse 10A	CEK1208
	FM/AM Tuner Unit	CWE1912

RESISTORS

R 157	(B,128,98)	RAB4C102J
R 301	(B,94,104)	RS1/16S153J
R 353	(B,146,128)	RS1/16S821J
R 354	(B,165,128)	RS1/16S821J
R 357	(B,146,133)	RS1/16S223J
R 358	(B,166,135)	RS1/16S223J
R 405	(B,157,63)	RS1/16S681J
R 407	(B,161,88)	RAB4C681J
R 414	(B,161,91)	RS1/16S681J
R 420	(B,100,48)	RS1/16S681J
R 421	(B,161,80)	RS1/16S473J
R 454	(B,137,127)	RS1/16S103J
R 455	(B,141,131)	RS1/16S153J
R 456	(B,141,133)	RS1/16S221J
R 457	(B,100,50)	RS1/16S681J
R 601	(B,102,58) (DEH-1700)	RS1/16S473J
R 602	(B,109,56) (DEH-7)	RS1/16S473J
R 603	(B,95,82) (DEH-7)	RS1/16S473J
R 606	(B,112,62)	RS1/16S104J
R 607	(B,106,63)	RS1/16S222J
R 609	(B,104,44)	RS1/16S473J
R 610	(B,100,52)	RS1/16S681J
R 611	(B,113,74)	RS1/16S473J
R 614	(B,73,67)	RS1/16S104J
R 633	(B,54,74)	RS1/16S104J
R 664	(B,77,52)	RAB4C221J
R 666	(A,84,44)	RD1/4PU102J
R 667	(B,77,47)	RAB4C221J
R 668	(A,81,44)	RD1/4PU221J
R 669	(B,101,43)	RS1/16S221J

Circuit Symbol and No.		Part No.
R 801	(B,81,26)	RS1/16S153J
R 802	(B,85,29)	RS1/16S153J
R 803	(B,97,22)	RS1/16S222J
R 821	(B,36,18)	RS1/16S562J
R 822	(B,71,22)	RS1/16S102J
R 823	(B,39,15)	RS1/16S103J
R 833	(A,81,11)	RD1/4PU222J
R 834	(A,84,11)	RD1/4PU222J
R 835	(A,72,19)	RD1/4PU102J
R 836	(A,78,22) (DEH-1700)	RD1/4PU104J
R 837	(A,81,19) (DEH-1700)	RD1/4PU103J
R 838	(B,91,89) (DEH-1700)	RS1/16S102J
R 841	(B,50,15)	RS1/16S1R0J
R 848	(A,107,48)	RD1/4PU102J
R 851	(A,104,48)	RD1/4PU102J
R 852	(B,93,89)	RS1/16S102J
R 911	(B,20,141)	RS1/16S223J
R 912	(A,13,134)	RD1/4PU152J
R 923	(A,21,90)	RD1/4PU821J
R 926	(B,15,101)	RS1/16S221J
R 931	(B,67,112)	RS1/16S473J
R 932	(B,67,110)	RS1/16S104J
R 933	(A,56,116)	RD1/4PU102J
R 934	(B,61,110)	RS1/16S472J
R 935	(B,57,106)	RS1/16S473J
R 936	(B,57,110)	RS1/16S223J
R 940	(B,88,82)	RS1/16S104J
R 941	(B,90,82)	RS1/16S104J
R 961	(B,68,78)	RS1/16S102J
R 962	(B,64,78)	RS1/16S822J
R 991	(A,21,61)	RD1/4PU271J
R 992	(A,16,69)	RD1/4PU221J
R 993	(B,41,20)	RS1/16S222J
R 994	(B,48,45)	RS1/16S472J

CAPACITORS

C 151	(B,161,74)	CKSRYB224K10
C 152	(B,161,76)	CKSRYB224K10
C 153	(B,126,78)	CKSRYB105K6R3
C 154	(B,144,79)	CKSRYB105K6R3
C 155	(A,124,84)	CEJQ4R7M35
C 156	(A,144,84)	CEJQ4R7M35
C 165	(B,143,73)	CKSRYB104K16
C 166	(A,139,71)	CEJQ470M10
C 167	(A,129,71)	CEJQ100M16
C 301	(A,134,129)	CFTNA224J50
C 302	(A,130,111)	CFTNA224J50
C 303	(A,134,125)	CFTNA224J50
C 304	(A,124,111)	CFTNA224J50
C 309	(B,137,132)	CKSQYB225K10
C 310	(B,138,136)	CKSQYB225K10
C 311	(A,98,122)	CEJQ2R2M50
C 312	(A,105,125)	CEJQ100M16
C 313	(B,101,142)	CKSRYB104K16
C 353	(A,136,120)	CEJQ2R2M50
C 354	(A,136,111)	CEJQ2R2M50
C 401	(B,162,70)	CKSRYB103K50
C 402	(B,156,60)	CKSRYB103K50
C 403	(A,153,58)	CEJQ470M6R3
C 404	(A,152,95)	CEJQ101M10
C 405	(B,169,97)	CKSRYB103K50
C 409	(B,148,58)	CCSRCH470J50
C 420	(B,106,44)	CCSRCH470J50
C 451	(A,133,135)	CEJQ330M10
C 551	(B,70,120)	CKSRYB103K50
C 552	(B,67,123)	CKSRYB103K50
C 601	(B,70,83)	CKSRYB103K50
C 603	(A,102,89)	CEJQ4R7M35
C 604	(B,100,75)	CCSRCH200J50
C 605	(B,103,75)	CCSRCH200J50
C 606	(B,110,71)	CKSRYB104K16
C 607	(B,102,67)	CCSRCH101J50
C 610	(A,102,83)	CEJQ4R7M35
C 611	(B,97,80)	CKSRYB224K10
C 654	(B,109,44)	CKSRYB104K16
C 801	(B,95,22)	CKSRYB104K16
C 832	(B,47,13) (DEH-1700)	CKSRYB104K16
C 901	(A,37,140)	CEAT332M16(P45)
C 911	(A,18,96)	CEJQ470M10
C 912	(B,20,145)	CKSRYB103K50
C 913	(A,24,144)	CEAT221M16
C 921	(A,26,66) 330µF/16V	CCH1326
C 922	(A,25,83)	CEJQ101M16
C 923	(B,24,86)	CKSRYB103K50
C 961	(B,55,82)	CKSRYB473K50
C 963	(A,65,82)	CEJQ100M16
C 981	(B,133,25)	CKSRYB334K10
C 983	(A,145,38)	CEJQ470M10
C 991	(B,18,64)	CKSRYB473K50
C 992	(A,18,54)	CEJQ101M10

B

Unit Number:CWM9620(DEH-1700)
Unit Number:CWM9844(DEH-7)
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1801	(B,26,94) IC	PD6340A
D 1803	(A,37,85) LED	SML-310PT
D 1804	(A,37,97) LED	SML-310PT
D 1805	(A,37,109) LED	SML-310PT
D 1806	(A,37,49) LED	SML-310PT
D 1807	(A,37,61) LED	SML-310PT
D 1808	(A,37,73) LED	SML-310PT
D 1809	(A,37,121) LED	SML-310PT
D 1810	(A,23,120) LED	CL-490S-WF-SD
X 1801	(B,33,84) Ceramic Resonator 5.00MHz	CSS1547
IL 1801	(B,21,21) Lamp 40mA,14V	CEL1651
IL 1802	(B,21,151) Lamp 40mA,14V	CEL1651
	LCD	CAW1848

RESISTORS

R 1801	(B,22,60)	RS1/16S222J
R 1802	(B,24,60)	RS1/16S222J
R 1804	(B,14,157)	RS1/16S0R0J
R 1806	(B,28,156)	RS1/16S0R0J
R 1807	(B,22,33)	RS1/4SA471J
R 1808	(B,19,33)	RS1/4SA471J

Circuit Symbol and No.		Part No.
R 1809	(B,32,122)	RS1/4SA471J
R 1810	(B,37,92)	RS1/16S104J

CAPACITORS

C 1801	(B,37,96)	CKSRYB103K50
C 1802	(A,19,125)	CKSRYF104Z25

C

Unit Number:CWX3110
Unit Name:CD Core Unit(S10)

MISCELLANEOUS

IC 201	(A,35,25)	IC	UPD63712AGC
IC 301	(A,45,81)	IC	BA5835FP
IC 701	(B,53,56)	IC	NJM2885DL1-33
Q 101	(B,22,12)	Transistor	2SA1577
X 201	(A,45,36)	Ceramic Resonator 16.934MHz	CSS1603
S 901	(A,15,44)	Switch(HOME)	CSN1067
S 903	(B,53,101)	Switch(DSCSNS)	CSN1068
S 904	(B,35,109)	Switch(12EJ)	CSN1067
S 905	(B,48,110)	Switch(8EJ)	CSN1067

RESISTORS

R 101	(B,26,13)	RS1/10SR2R4J
R 102	(B,28,15)	RS1/10SR2R4J
R 103	(B,29,12)	RS1/10SR2R7J
R 201	(A,58,26)	RS1/16SS102J
R 214	(A,23,28)	RS1/16SS332J
R 215	(A,21,27)	RS1/16SS183J
R 216	(A,24,19)	RS1/16SS122J
R 217	(A,22,15)	RS1/16SS562J
R 218	(A,24,16)	RS1/16SS472J
R 235	(A,27,44)	RS1/16SS103J
R 236	(A,31,46)	RS1/16SS103J
R 301	(A,54,73)	RS1/16SS183J
R 302	(A,54,70)	RS1/16SS822J
R 303	(A,45,70)	RS1/16SS183J
R 304	(A,47,69)	RS1/16SS822J
R 305	(A,34,75)	RS1/16SS183J
R 306	(A,32,69)	RS1/16SS183J
R 307	(A,38,74)	RS1/16SS183J
R 308	(A,36,67)	RS1/16SS183J
R 601	(B,52,43)	RS1/16SS101J
R 602	(B,46,42)	RS1/16SS101J
R 603	(B,48,48)	RS1/16SS0R0J
R 901	(B,48,103)	RS1/16SS104J
R 902	(B,46,105)	RS1/16SS473J
R 903	(B,44,106)	RS1/16SS273J

CAPACITORS

C 103	(B,13,8)	100µF/16V	CCH1504
C 109	(A,34,12)		CKSSYB104K10
C 201	(A,45,19)		CKSSYB104K10
C 202	(A,53,21)		CKSSYB102K50
C 205	(B,37,36)	22µF/6.3V	CCH1507
C 206	(B,40,30)		CKSSYB103K16
C 207	(A,46,30)		CKSSYB104K10
C 209	(A,46,31)		CKSSYB104K10
C 210	(A,41,35)		CKSSYB104K10
C 211	(A,33,35)		CKSSYB104K10
C 213	(A,21,29)		CKSSYB103K16
C 214	(A,23,26)		CKSSYB104K10
C 215	(A,25,23)		CKSSYB104K10
C 216	(A,24,21)		CKSSYB103K16
C 217	(A,21,18)		CCSSCH560J50
C 218	(A,24,14)		CCSSCH5R0C50
C 219	(A,28,14)		CKSSYB104K10
C 220	(B,27,24)		CKSSYB104K10
C 221	(B,41,21)		CKSSYB104K10
C 222	(A,35,12)		CKSSYB103K16
C 223	(A,37,14)		CCSSCH680J50
C 224	(A,45,11)		CCSSCH470J50
C 225	(A,46,14)		CKSSYB103K16
C 231	(A,30,43)		CKSSYB102K50
C 232	(B,38,64)		CKSSYB102K50
C 301	(B,37,74)	100µF/16V	CCH1504
C 302	(A,54,71)		CKSSYB221K50
C 303	(A,45,68)		CKSSYB221K50
C 304	(A,33,73)		CKSSYB472K25
C 305	(A,36,74)		CKSSYB103K16
C 306	(B,45,94)		CKSSYB104K10
C 501	(B,45,51)		CKSSYB103K16
C 502	(A,61,68)		CKSSYB103K16
C 703	(B,47,61)		CKSQYB104K16
C 704	(B,54,63)		CKSQYB105K10

Miscellaneous Parts List

	Pickup Unit(P10)(Service)	CXX1641
M 1	Motor Unit(SPINDLE)	CXC4440
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933