


KDC-CX85/CPS85

EXPLODED VIEW (MECHANISM)


A	M2x3.5	: N09-4126-05
B	M2x2.5 (BLK)	: N39-2025-45
C	M2x5	: N86-2005-46
D	M1.7x1.5 (BLK)	: N09-4189-05
E	ø2x6	: N09-4154-05
F	M1.7x3	: N09-4181-05
G	M1.7x2.2	: N39-1722-46
H	M2x5	: N86-2005-46
J	ø2x3.5	: N09-4120-15
K	ø1.6x4 WASHER	: N19-2058-04
L	ø2x5 WASHER	: N19-2080-04
M	ø1.6x3.5 WASHER	: N19-2028-04

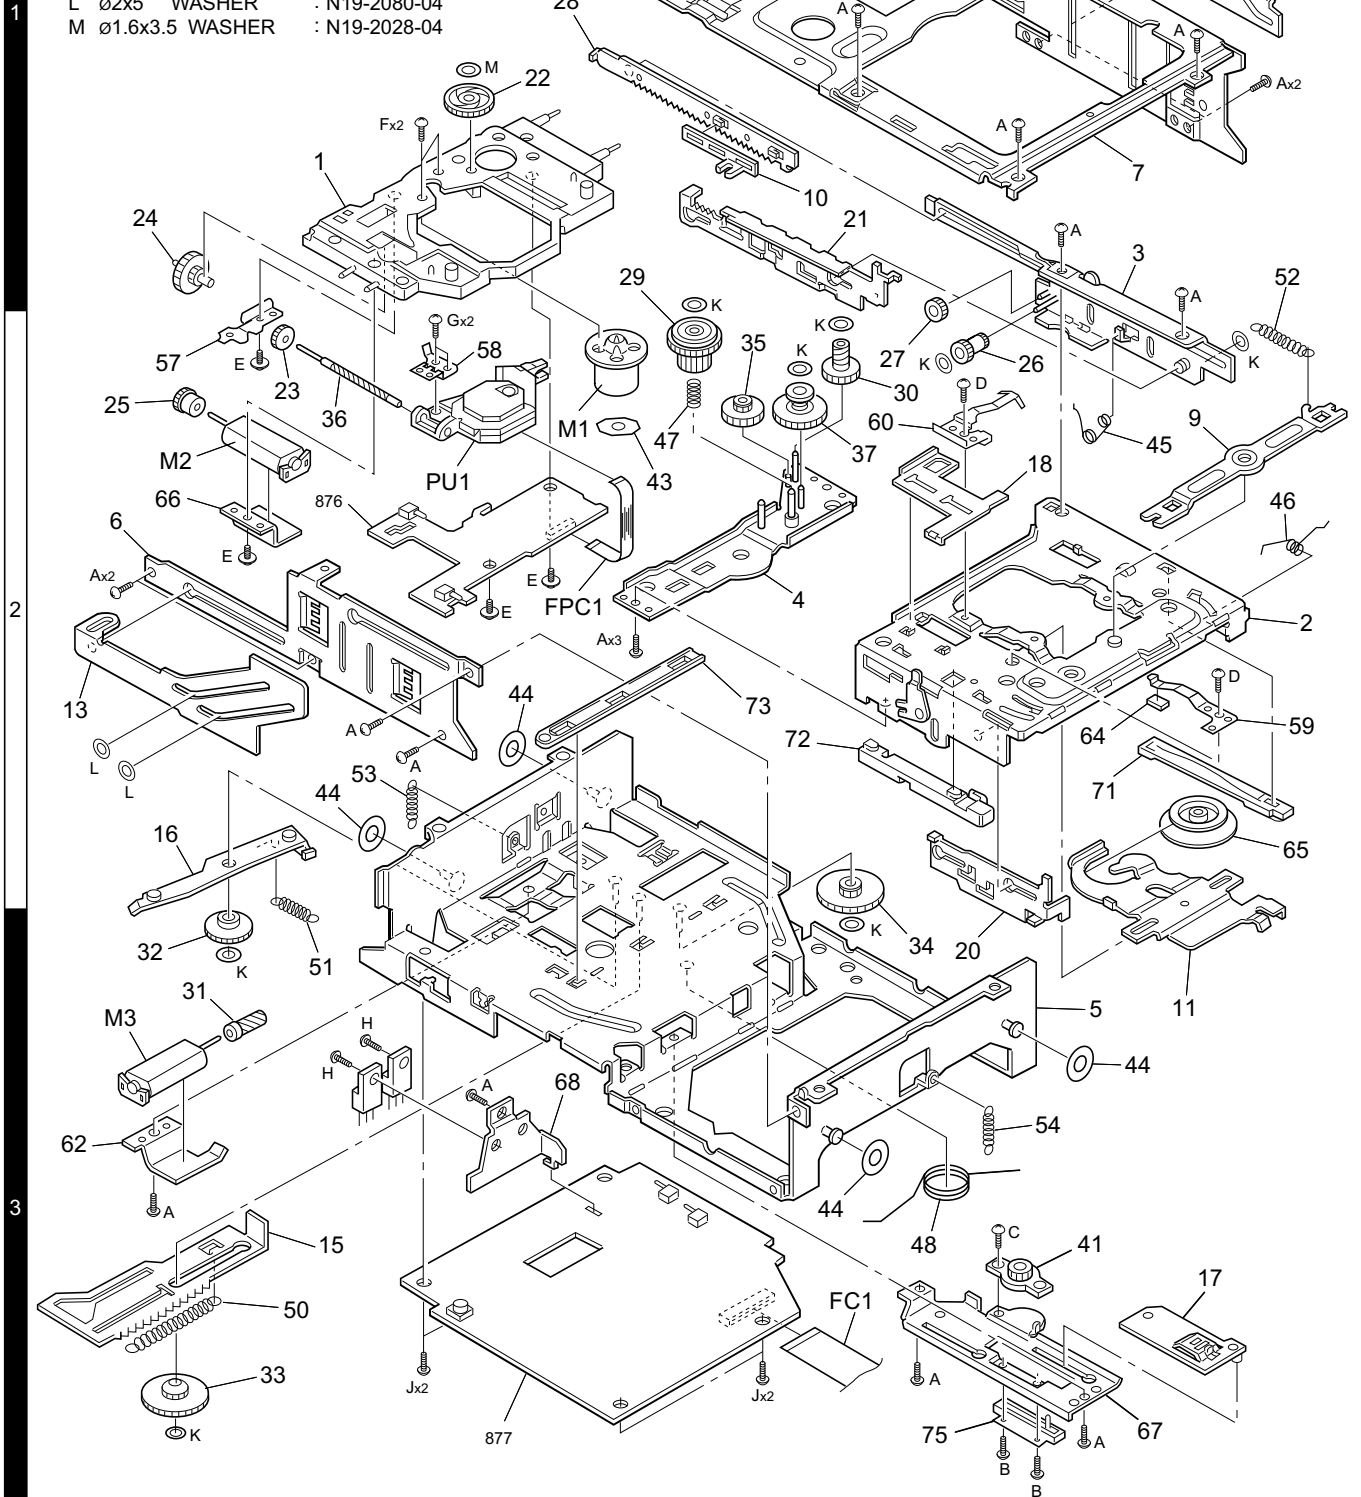

Parts with the exploded numbers larger than 700 are not supplied.

KDC-CX85/CPS85

EXPLODED VIEW (UNIT)

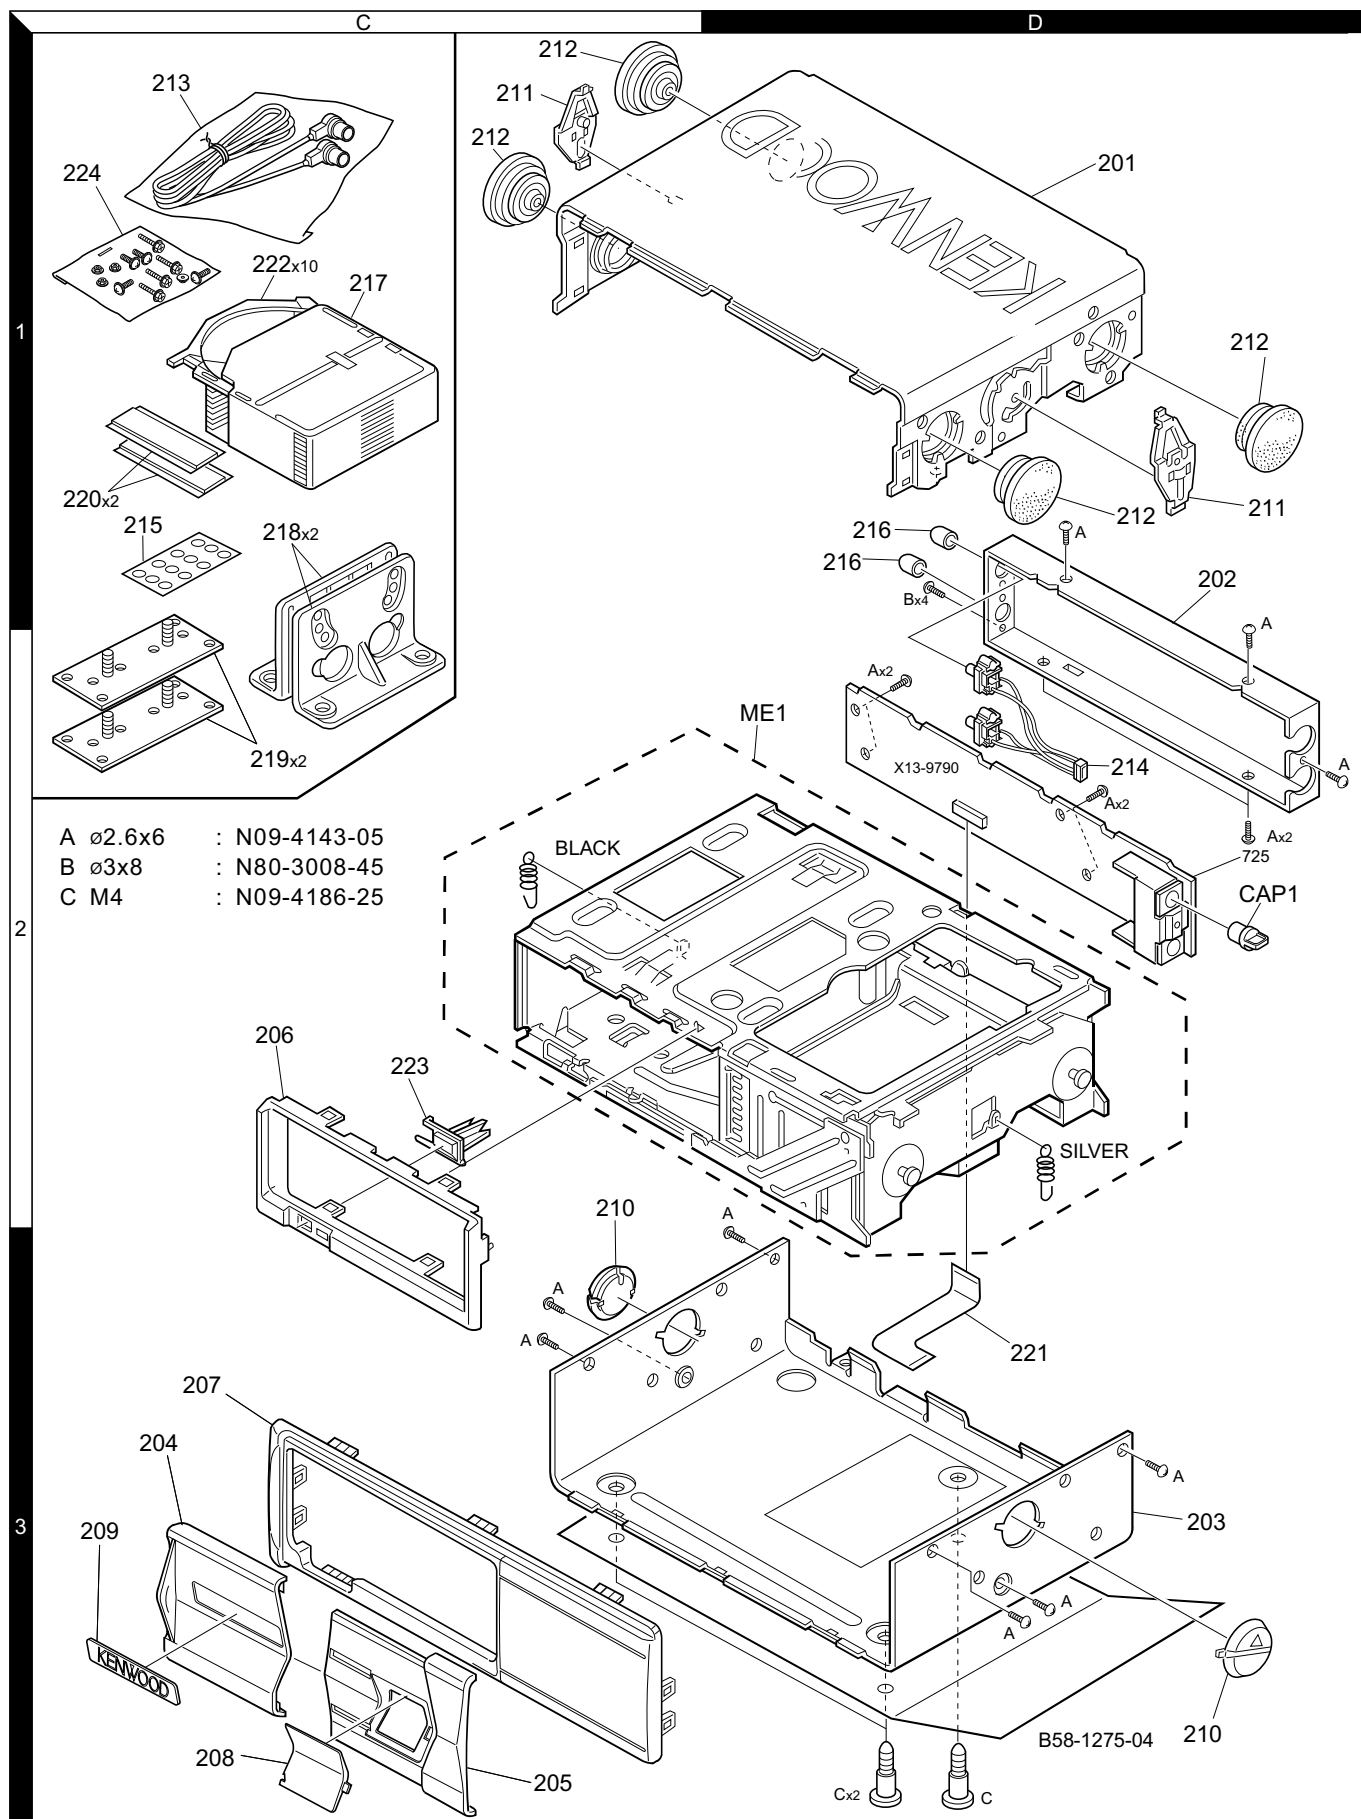

20 Parts with the exploded numbers larger than 700 are not supplied.

KDC-CX85/CPS85

PARTS LIST

*New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

KDC-CX85/CPS85

SUB-CIRCUIT UNIT (X13-9730-00)

SUB-CIRCUIT UNIT (X13-9790-00)

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-CX85/CPS85					
201	1D		A01-2653-01	METALLIC CABINET	M1E1
201	1D		A01-2662-01	METALLIC CABINET	K1
202	2D		A01-2663-22	METALLIC CABINET	K1
202	2D		A01-2672-02	METALLIC CABINET	M1E1
203	3D		A10-4408-13	CHASSIS ASSY	K1
203	3D		A10-4594-03	CHASSIS ASSY	M1E1
204	3C	*	A21-3535-12	DRESSING PANEL	K1
204	3C	*	A21-3544-12	DRESSING PANEL	M1E1
205	3C	*	A21-3538-12	DRESSING PANEL	K1
205	3C	*	A21-3545-12	DRESSING PANEL	M1E1
206	2C		A22-2259-12	SUB PANEL	M1E1
206	2C		A22-2260-12	SUB PANEL	K1
207	3C	*	A64-1991-01	PANEL	K1
207	3C	*	A64-1993-01	PANEL	M1E1
208	3C	*	B10-2997-04	FRONT GLASS	M1E1
208	3C	*	B10-3076-04	FRONT GLASS	K1
209	3C		B43-1237-04	KENWOOD BADGE	M1E1
209	3C		B43-1238-04	KENWOOD BADGE	K1
-			B46-0100-50	WARRANTY CARD	
-			B46-0182-14	ID CARD	E1
-			B46-0631-03	USER CARD	K1
-			B58-1275-04	CAUTION CARD	
-			B58-1285-04	CAUTION CARD (O-SWIT SW)	
-		*	B64-1568-00	INSTRUCTION MANUAL E,F,S,P	K1E1
-		*	B64-1571-00	INSTRUCTION MANUAL E,T	M1
-		*	B64-1574-00	INSTRUCTION MANUAL G,D,I	E1
-		*	B64-1593-00	INSTRUCTION MANUAL ARA	M1
210	3D		D10-4204-03	ARM	
211	1C		D10-4033-14	LEVER	
212	1D		D39-0226-03	DAMPER	
213	1C		E30-4138-05	CORD WITH PLUG	
214	2D		E30-4507-15	AUDIO CORD	
215	1C		F19-1303-04	BLIND PLATE	
216	1D		F29-0049-05	INSULATING COVER	
CAP1	2D		F09-1251-05	CAP	
-			H02-0814-13	INNER CARTON CASE	
-			H10-4568-02	POLYSTYRENE FOAMED FIXTURE	
-			H13-1706-04	CARTON BOARD	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1115-04	PROTECTION BAG	
-		*	H54-1690-04	ITEM CARTON CASE K1	
-		*	H54-1693-04	ITEM CARTON CASE M1E1	
217	1C		J19-4676-52	HOLDER ASSY	
218	1C		J19-4712-13	BRACKET	
219	1C		J21-7775-04	MOUNTING HARDWARE ASSY	M1
220	1C		J69-0506-04	ADHESIVE TAPE	M1
221	3D		J84-0064-15	FLEXIBLE PRINTED WIRING BOARD	
222	1C		J99-0604-21	TRAY	
223	2C		K24-1770-04	KNOB	

Ref. No.	Add	New	Parts No.	Description	Destination
224	1C		N99-1628-15	SCREW SET	M1
224	1C		N99-1645-15	SCREW SET	K1E1
A	2D		N09-4143-05	TAPTITE SCREW (2.6X6)	
A	2D		N89-2606-45	BINDING HEAD TAPTITE SCREW	K1
B	1D		N80-3008-41	PAN HEAD TAPTITE SCREW	M1E1
B	1D		N80-3008-45	PAN HEAD TAPTITE SCREW	K1
C	3D		N09-4186-25	STEPPED SCREW	
ME1	2C	*	X92-3630-02	MECHANISM ASSY	
SUB-CIRCUIT UNIT (X13-9730-00)					
CN1			E40-9487-05	FLAT CABLE CONNECTOR	
CN2			E40-9536-05	FLAT CABLE CONNECTOR	
S1 ,2			S74-0811-05	MICRO SWITCH	
SUB-CIRCUIT UNIT (X13-9790-00)					
C1			CK73FB1H562K	CHIP C 5600PF K	
C2			CK73FB1H102K	CHIP C 1000PF K	
C3			CK73FB1H103K	CHIP C 0.010UF K	
C4			CK73FB1H473K	CHIP C 0.047UF K	
C5			C92-1389-05	ELECTRO 47UF 6.3WV	
C6 ,7			CK73FB1C104K	CHIP C 0.10UF K	
C9 ,10			CK73FB1H222K	CHIP C 2200PF K	
CN1			E40-9252-05	FLAT CABLE CONNECTOR	
CN2			E40-9617-05	PIN ASSY	
J1 ,2			E56-0809-05	CYLINDRICAL RECEPTACLE	
X1			L78-0529-05	RESONATOR	
R1 -16			RK73EB2B101J	CHIP R 100 J 1/8W	
R17			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R18 -23			RK73FB2A101J	CHIP R 100 J 1/10W	
R24 -27			RK73FB2A104J	CHIP R 100K J 1/10W	
R28			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R29			RK73FB2A223J	CHIP R 22K J 1/10W	
R30 ,31			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R32			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R33			RK73FB2A103J	CHIP R 10K J 1/10W	
R34 ,35			RK73FB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2A101J	CHIP R 100 J 1/10W	
R37			RK73FB2A104J	CHIP R 100K J 1/10W	
R38			RK73FB2A223J	CHIP R 22K J 1/10W	
R39			RK73FB2A104J	CHIP R 100K J 1/10W	
R40			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R41			RK73FB2A103J	CHIP R 10K J 1/10W	
R42			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R43			RK73FB2A103J	CHIP R 10K J 1/10W	
R44			RK73FB2A104J	CHIP R 100K J 1/10W	
R45			RK73EB2B102J	CHIP R 1.0K J 1/8W	
R46			RK73FB2A104J	CHIP R 100K J 1/10W	
R47			RK73FB2A103J	CHIP R 10K J 1/10W	
R48			RK73FB2A183J	CHIP R 18K J 1/10W	
R49 ,50			RK73FB2A473J	CHIP R 47K J 1/10W	
R51 ,52			RK73FB2A104J	CHIP R 100K J 1/10W	
K1 -4			S76-0807-05	MAGNETIC RELAY	
S1			S62-0857-05	SLIDE SWITCH	

K1:KDC-CX85 M1:KDC-CPS85 E1:KDC-CPS85

KDC-CX85/CPS85

PARTS LIST

*New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

SUB-CIRCUIT UNIT (X13-9790-00) CD PLAYER UNIT (X32-4680-00)

Ref. No.	Added	New	Parts No.	Description	Destination
D1 -6 D7 D8 -10 D11 D12 ,13			MA3056WA DAP202K DAN202K MA3062-L MA3056-M	ZENER DIODE DIODE DIODE ZENER DIODE ZENER DIODE	
D14 D15 IC1 IC2 Q1 ,2			DA204K DAN202K UPD78058GCB82T PST9137NR DTC124EK	DIODE DIODE MI-COM IC ANALOGUE IC DIGITAL TRANSISTOR	
Q3 ,4 Q5 ,6 Q7 ,8			DTB123YK 2SC2412K DTC124EK	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-4680-00)					
C1 ,2 C3 ,4 C5 ,6 C7 ,8 C9 -12			C92-1393-05 C93-1044-05 C92-1393-05 C92-0514-05 CC73FCH1H560J	ELECTRO 10UF 16WV CERAMIC 2200PF K ELECTRO 10UF 16WV CHIP-TAN 2.2UF 10WV CHIP C 56PF J	
C13 -16 C17 ,18 C19 ,20 C21 C22			CK73FB1H331K C92-0628-05 CK73FB1C104K C92-1389-05 C93-1099-05	CHIP C 330PF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K ELECTRO 47UF 6.3WV CERAMIC 10UF K	
C23 C24 C25 C27 C28 ,29			C92-1390-05 C92-0628-05 CC73FCH1H101J CK73FB1C104K CC73FCH1H090D	ELECTRO 100UF 6.3WV CHIP-TAN 10UF 10WV CHIP C 100PF J CHIP C 0.10UF K CHIP C 9.0PF D	
C30 C32 C33 C34 C35			CK73FB1C104K CK73FB1H103K C93-1099-05 C92-1388-05 CC73FCH1H101J	CHIP C 0.10UF K CHIP C 0.010UF K CERAMIC 10UF K ELECTRO 470UF 16WV CHIP C 100PF J	
C36 C38 C39 C40 C41			C92-1388-05 C93-1099-05 CK73FB1H222K CK73FB1C104K C92-1392-05	ELECTRO 470UF 16WV CERAMIC 10UF K CHIP C 2200PF K CHIP C 0.10UF K ELECTRO 100UF 10WV	
C42 C43 C44 C45 C46			CK73FB1H102K CK73FB1H103K C93-1099-05 C92-1395-05 C93-1099-05	CHIP C 1000PF K CHIP C 0.010UF K CERAMIC 10UF K ELECTRO 22UF 6.3WV CERAMIC 10UF K	
C47 C48 C49 ,50 C51 C55			C92-1391-05 C93-1099-05 CK73FB1C104K CC73FCH1H101J CK73FB1H123K	ELECTRO 220UF 6.3WV CERAMIC 10UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 0.012UF K	
C56 C57 C58 C60 C61			CK73FB1H822K CK73FB1E683K CK73FB1H473K CC73FCH1H151J CK73FB1H103K	CHIP C 8200PF K CHIP C 0.068UF K CHIP C 0.047UF K CHIP C 150PF J CHIP C 0.010UF K	

Ref. No.	Added	New	Parts No.	Description	Destination
C62 C63 C64 C65 C66			CK73FB1H472K CC73FCH1H820J CK73FB1C104K CK73FB1H103K CK73FB1A105K	CHIP C 4700PF K CHIP C 82PF J CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1.0UF K	
C67 C68 C69 C70 C71			CK73FB1C104K C92-0628-05 CK73FB1E683K CK73FB1H222K CK73FB1C104K	CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.068UF K CHIP C 2200PF K CHIP C 0.10UF K	
C72 C73 C74 C75 C76			C92-0628-05 CC73FCH1H030C CK73FB1H103K C93-1099-05 CC73FCH1H101J	CHIP-TAN 10UF 10WV CHIP C 3.0PF C CHIP C 0.010UF K CERAMIC 10UF K CHIP C 100PF J	
C77 -79 C80 C81 C82 C85			C93-1099-05 CK73FB1H472K CC73FCH1H220J C92-0628-05 CK73FB1C104K	CERAMIC 10UF K CHIP C 4700PF K CHIP C 22PF J CHIP-TAN 10UF 10WV CHIP C 0.10UF K	
C86 C87 C88 C89 C95			CK73FB1H153K C93-1099-05 C92-1389-05 C93-1099-05 CK73FB1H682K	CHIP C 0.015UF K CERAMIC 10UF K ELECTRO 47UF 6.3WV CERAMIC 10UF K CHIP C 6800PF K	
C151 C152 C153,154			CK73FB1C334K CK73EB1C684K CK73FB1C104K	CHIP C 0.33UF K CHIP C 0.68UF K CHIP C 0.10UF K	
CN1 CN2			E40-9858-05 E40-9338-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
L3 -11 X1 X2			L92-0314-05 L77-2081-05 L78-0568-05	CHIP FERRITE CRYSTAL RESONATOR RESONATOR	
CP1 ,2 CP3 ,4 CP5 ,6 CP7 CP8 -12			R90-0720-05 R90-1014-05 R90-0720-05 R90-0724-05 R90-1014-05	MULTI-COMP 100K X4 MULTI-COMP 100 X4 MULTI-COMP 100K X4 MULTI-COMP 1K X4 MULTI-COMP 100 X4	
CP13-15 R1 ,2 R3 ,4 R5 ,6 R7 -14			R90-0720-05 RK73EB2B223J RK73FB2A472J RK73FB2A681J RK73FB2A123J	MULTI-COMP 100K X4 CHIP R 22K J 1/8W CHIP R 4.7K J 1/10W CHIP R 680 J 1/10W CHIP R 12K J 1/10W	
R15 -18 R19 -22 R23 R24 R25 -29			RK73FB2A512J RK73FB2A362J RK73FB2A331J RK73FB2A122J RK73FB2A104J	CHIP R 5.1K J 1/10W CHIP R 3.6K J 1/10W CHIP R 330 J 1/10W CHIP R 1.2K J 1/10W CHIP R 100K J 1/10W	
R30 R31 -34 R35 R36 ,37 R38			RK73FB2A103J RK73FB2A102J RK73FB2A103J RK73FB2A102J RK73FB2A101J	CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W	

K1:KDC-CX85 M1:KDC-CPS85 E1:KDC-CPS85

KDC-CX85/CPS85

PARTS LIST

*New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-4680-00)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R39			RK73FB2A102J	CHIP R 1.0K J 1/10W		R135-137			RK73FB2A104J	CHIP R 100K J 1/10W	
R40 -42			RK73FB2A101J	CHIP R 100 J 1/10W		R138,139			RK73FB2A105J	CHIP R 1.0M J 1/10W	
R43 -45			RK73FB2A104J	CHIP R 100K J 1/10W		R141			RK73FB2A104J	CHIP R 100K J 1/10W	
R47 ,48			RK73FB2A104J	CHIP R 100K J 1/10W		R151			RK73FB2A223J	CHIP R 22K J 1/10W	
R49 ,50			RK73EB2B102J	CHIP R 1.0K J 1/8W		R152,153			RK73FB2A683J	CHIP R 68K J 1/10W	
R51 ,52			RK73FB2A104J	CHIP R 100K J 1/10W		R154			RK73FB2A224J	CHIP R 220K J 1/10W	
R53			RK73FB2A102J	CHIP R 1.0K J 1/10W		W1 -3			R92-2052-05	CHIP R 0 J 1/10W	
R54			RK73FB2A103J	CHIP R 10K J 1/10W		W5			R92-2052-05	CHIP R 0 J 1/10W	
R55			RK73FB2A102J	CHIP R 1.0K J 1/10W		W6			R92-2053-05	CHIP R 0 J 1/8W	
R56			RK73FB2A103J	CHIP R 10K J 1/10W		W7 -9			R92-2052-05	CHIP R 0 J 1/10W	
R57 -59			RK73FB2A104J	CHIP R 100K J 1/10W		W10			R92-2053-05	CHIP R 0 J 1/8W	
R60			RK73FB2A102J	CHIP R 1.0K J 1/10W		W12			R92-2053-05	CHIP R 0 J 1/8W	
R62			RK73FB2A103J	CHIP R 10K J 1/10W		W13			R92-2052-05	CHIP R 0 J 1/10W	
R63 ,64			RK73FB2A104J	CHIP R 100K J 1/10W							
R65 ,66			RK73EB2B102J	CHIP R 1.0K J 1/8W		S1 ,2			S68-0823-05	PUSH SWITCH	
R67			RK73FB2A104J	CHIP R 100K J 1/10W		S3			S70-0838-05	TACT SWITCH	
R68			RK73EB2B102J	CHIP R 1.0K J 1/8W		S4			S62-0863-05	SLIDE SWITCH	
R69 ,70			RK73FB2A102J	CHIP R 1.0K J 1/10W							
R71 ,72			RK73FB2A224J	CHIP R 220K J 1/10W		D1 ,2			DAN202K	DIODE	
R73 -76			RK73FB2A104J	CHIP R 100K J 1/10W		D3			1SR154-400	DIODE	
						D4			MA3075-M	ZENER DIODE	
						D5			MA3091-L	ZENER DIODE	
						D6			MA3100-M	ZENER DIODE	
R77			RK73FB2A102J	CHIP R 1.0K J 1/10W							
R78			RK73FB2A103J	CHIP R 10K J 1/10W		D7			DAN202K	DIODE	
R79			RK73FB2A102J	CHIP R 1.0K J 1/10W		D8			MA3062-M	ZENER DIODE	
R81			RK73FB2A102J	CHIP R 1.0K J 1/10W		D9 ,10			1SR154-400	DIODE	
R86			RK73FB2A682J	CHIP R 6.8K J 1/10W		D11			DAP202K	DIODE	
						D12 ,13			DAN202K	DIODE	
R87			RK73FB2A392J	CHIP R 3.9K J 1/10W							
R88			RK73FB2A912J	CHIP R 9.1K J 1/10W		IC1			NJM5532MD	IC(OP AMP)	
R89			RK73FB2A123J	CHIP R 12K J 1/10W		IC2			NJM4565MD	IC(OP AMP X2)	
R91			RK73FB2A223J	CHIP R 22K J 1/10W		IC3			TA78L05F	IC(VOLTAGE REGULATOR/ +5V)	
R92			RK73FB2A622J	CHIP R 6.2K J 1/10W		IC5			LC3564BT-70	MEMORY IC	
						IC6			KKZ05F	CUSTOM IC	
R93			RK73FB2A222J	CHIP R 2.2K J 1/10W							
R94			RK73FB2A223J	CHIP R 22K J 1/10W		IC7			UPD784214GC066	MI-COM IC	
R95			RK73FB2A103J	CHIP R 10K J 1/10W		IC8			LC89170M	MOS-IC	
R97			RK73FB2A103J	CHIP R 10K J 1/10W		IC9			UPD63702A	MOS-IC	
R98			RK73FB2A122J	CHIP R 1.2K J 1/10W		IC10			AK93C45AF	MOS-IC	
						IC10			BR93LC46AF	MOS-IC	
R99			RK73FB2A102J	CHIP R 1.0K J 1/10W							
R100			RK73FB2A222J	CHIP R 2.2K J 1/10W		IC11			BA6219BFP-Y	ANALOGUE IC	
R101,102			RK73FB2A101J	CHIP R 100 J 1/10W		IC12			BA6791FP	ANALOGUE IC	
R103			RK73FB2A113J	CHIP R 11K J 1/10W		IC13			UPC2572A	ANALOGUE IC	
R104			RK73FB2A824J	CHIP R 820K J 1/10W		IC51			NJM2107F	ANALOGUE IC	
						Q1 ,2			2SD2114K	TRANSISTOR	
R105			RK73FB2A563J	CHIP R 56K J 1/10W							
R106			RK73EB2B223J	CHIP R 22K J 1/8W		Q3 -5			DTA124EK	DIGITAL TRANSISTOR	
R107			RK73FB2A102J	CHIP R 1.0K J 1/10W		Q6			DTA143EK	DIGITAL TRANSISTOR	
R108			RK73FB2A104J	CHIP R 100K J 1/10W		Q7			DTA114EK	DIGITAL TRANSISTOR	
R109			RK73FB2A474J	CHIP R 470K J 1/10W		Q8 -10			DTC124EK	DIGITAL TRANSISTOR	
						Q11			DTA143EK	DIGITAL TRANSISTOR	
R110			RK73FB2A102J	CHIP R 1.0K J 1/10W							
R111			RK73FB2A101J	CHIP R 100 J 1/10W		Q12 -14			DTC124EK	DIGITAL TRANSISTOR	
R112			RK73EB2B100J	CHIP R 10 J 1/8W		Q15			2SC2412K	TRANSISTOR	
R114,115			RK73FB2A103J	CHIP R 10K J 1/10W		Q16			2SA1362(Y)	TRANSISTOR	
R117			RK73FB2A302J	CHIP R 3.0K J 1/10W		Q17			2SC2412K	TRANSISTOR	
						Q21			2SB1188	TRANSISTOR	
R119			RK73EB2B391J	CHIP R 390 J 1/8W							
R121,122			RK73FB2A563J	CHIP R 56K J 1/10W		Q22			MCH6101	TRANSISTOR	
R123			RK73FB2A104J	CHIP R 100K J 1/10W		Q23 ,24			DTC124EK	DIGITAL TRANSISTOR	
R126,127			RK73FB2A102J	CHIP R 1.0K J 1/10W		Q998,999	3A		2SB1565 (E,F)	TRANSISTOR	
R131-134			RK73FB2A273J	CHIP R 27K J 1/10W		TH1			NTH5G20B333K07	THERMISTOR	

K1:KDC-CX85 M1:KDC-CPS85 E1:KDC-CPS85

△ indicates safety critical components.

KDC-CX85/CPS85

PARTS LIST

*New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

MECHANISM ASSY (X92-3630-02)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
MECHANISM ASSY (X92-3630-02)					
1	1A	*	A10-4700-13	CHASSIS ASSY	
2	2B		A10-4231-22	CHASSIS CALKING ASSY	
3	1B		A10-4233-63	CHASSIS CALKING ASSY	
4	2B		A10-4235-84	CHASSIS CALKING ASSY	
5	3B		A10-4237-32	CHASSIS CALKING ASSY	
6	2A		A10-4239-22	CHASSIS	
7	1B		A10-4240-82	CHASSIS CALKING ASSY	
C1			C90-2945-05	ELECTRO 0.047F 5.5WV	
9	2B		D10-4018-23	ARM	
10	1B		D10-4293-03	ARM	
11	2B		D10-4020-33	LEVER	
12	1B		D10-4022-34	ARM	
13	2A		D10-4023-14	SLIDER ASSY	
14	1B		D10-4025-03	SLIDER	
15	3A		D10-4026-03	LEVER	
16	2A		D10-4027-04	LEVER ASSY	
17	3B		D10-4029-04	SLIDER ASSY	
18	2B		D10-4032-13	SLIDER	
19	1B		D10-4137-03	LEVER	
20	2B		D12-0618-13	CAM	
21	1B		D12-0619-33	CAM	
22	1A		D13-1251-14	GEAR	
23	1A		D13-1252-04	GEAR	
24	1A		D13-1253-04	GEAR	
25	2A		D13-1254-04	GEAR	
26	2B		D13-1255-24	GEAR	
27	1B		D13-1256-04	GEAR	
28	1A		D13-1257-14	GEAR ASSY	
29	2A		D13-1259-04	GEAR	
30	2B		D13-1262-34	GEAR	
31	3A		D13-1263-04	WORM	
32	3A		D13-1264-04	GEAR	
33	3A		D13-1265-04	GEAR	
34	3B		D13-1266-04	GEAR	
35	2B		D13-1338-04	GEAR	
36	2A		D19-0614-24	LEAD SCREW	
37	2B		D19-0615-14	CLUTCH ASSY	
41	3B		D39-0225-05	DAMPER	
FC1	3B		E39-0172-15	FLAT CABLE	
43	2A		F09-1220-04	SHEET	
44	2A		F09-1245-04	SHEET	
45	2B		G01-2778-04	TORSION COIL SPRING	
46	2B		G01-2779-04	TORSION COIL SPRING	
47	2A		G01-2781-04	COMPRESSION SPRING	
48	3B		G01-2782-14	TORSION COIL SPRING	
49	1B		G01-2783-14	EXTENSION SPRING	
50	3A		G01-2784-04	EXTENSION SPRING	
51	3A		G01-2785-04	EXTENSION SPRING	
52	1B		G01-2789-14	EXTENSION SPRING	
53	2A		G01-2808-04	EXTENSION SPRING	
54	3B		G01-2809-14	EXTENSION SPRING	

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
55	1B		G01-2814-24	TORSION COIL SPRING	
57	2A		G02-1235-24	FLAT SPRING	
58	1A		G02-1256-14	FLAT SPRING	
59	2B		G02-1237-13	FLAT SPRING	
60	2B		G02-1238-34	FLAT SPRING	
62	3A		G02-1240-04	FLAT SPRING	
64	2B		G10-1023-04	FELT	
65	2B		J11-0614-03	CLAMPER	
66	2A		J21-7695-04	MOUNTING HARDWARE	
67	3B		J21-7696-23	MOUNTING HARDWARE	
68	3A		J21-7698-14	MOUNTING HARDWARE	
69	1B		J21-7766-13	MOUNTING HARDWARE	
71	2B		J90-0777-23	GUIDE	
72	2B		J90-0759-03	GUIDE	
73	2B		J90-0760-03	RAIL	
FPC1	2A		J84-0099-05	FLEXIBLE PRINTED WIRING BOARD	
A	1B		N09-4126-05	MACHINE SCREW (2X3.5,tite,BLACK)	
B	3B		N09-4288-05	TAPTITE SCREW (2X2.5 Stite)	
C	3A		N86-2005-46	BINDING HEAD TAPTITE SCREW	
D	2B		N09-4189-05	TAPTITE SCREW (1.7X1.5(Stite)	
E	2A		N09-4154-05	TAPTITE SCREW	
F	1A		N09-4181-05	MACHINE SCREW (M1.7X3(ROCKtite)	
G	2A		N39-1722-46	PAN HEAD MACHIN SCREW	
J	2B		N19-2105-14	FLAT WASHER	
K	2B		N19-2058-04	FLAT WASHER	
L	1B		N19-2080-14	FLAT WASHER	
M	1A		N19-2028-04	FLAT WASHER	
75	3B		R33-0201-05	SLIDE TYPE VARIABLE RESISTOR	
M1	2A		T42-0797-04	MOTOR ASSY	
M2,3	3A		T42-0788-05	DC MOTOR	
PU1	2A		T25-0216-05	OPTICAL PICKUP HEAD	

K1:KDC-CX85 M1:KDC-CPS85 E1:KDC-CPS85