2. EXPLODED VIEWS AND PARTS LIST


*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*

• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

• Screw adjacent to▽mark on the product are used for disassembly.

• For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

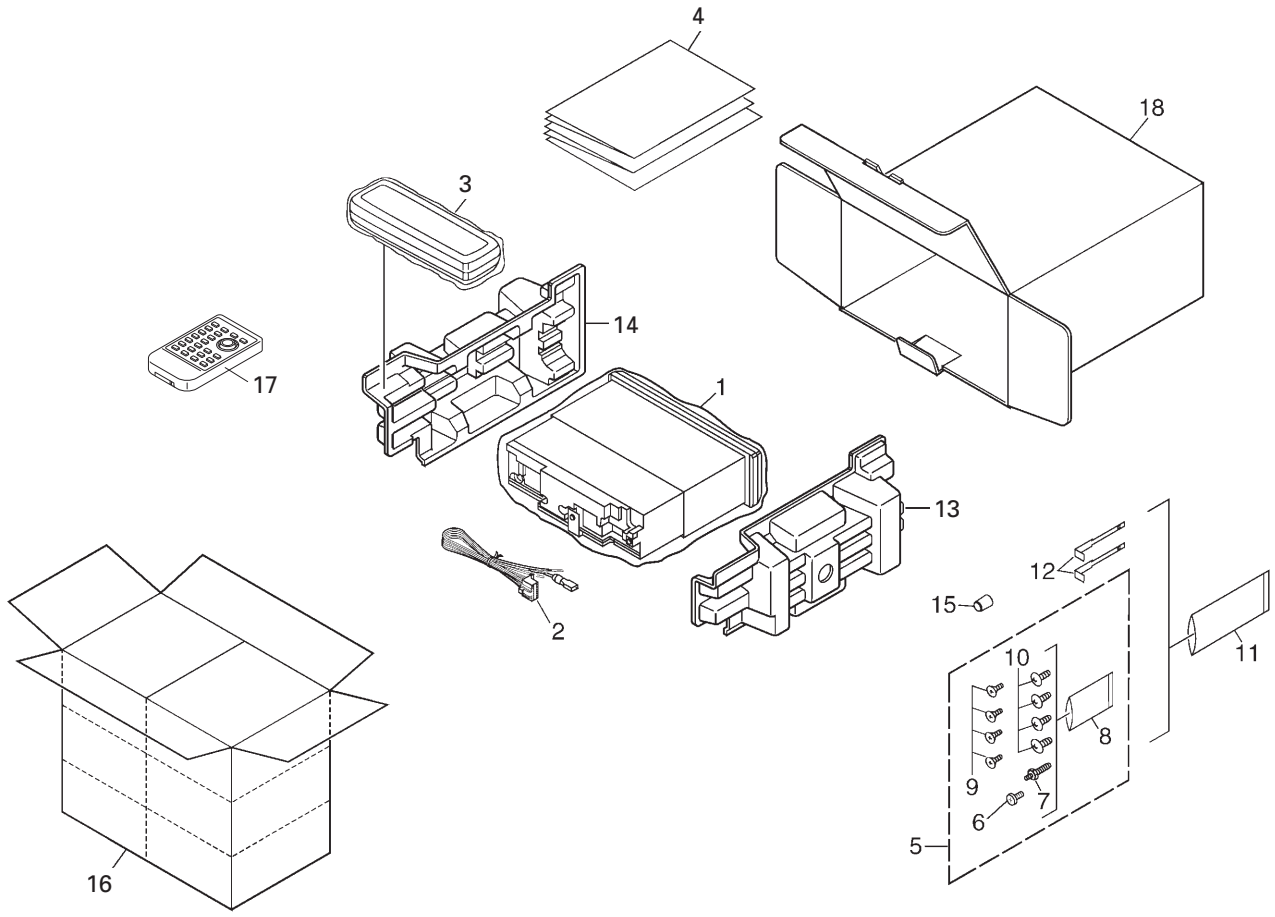


PACKING SECTION PARTS LIST

Mark	No.	Description	DEH-P680MP/XN/UC	DEH-P6800MP/XN/UC	DEH-P6850MP/XN/ES
	1	Polyethylene Bag	CEG1173	CEG1173	CEG-162
	2	Cord Assy	XDE7007	XDE7007	XDE7007
	3	Case Assy	XXA7417	XXA7417	XXA7417
	4-1	Owner's Manual	XRD7109	XRD7111	XRD7113
	4-2	Installation Manual	XRD7110	XRD7112	XRD7115
*	4-3	Caution Card	XRP7002	XRP7002	XRP7002
	4-4	Caution Card	CRP1310	CRP1310	CRP1310
*	4-5	Warranty Card	CRY1070	CRY1246	Not used
	4-6	Owner's Manual	Not used	Not used	XRD7114
*	4-7	Caution Card	Not used	CRP1294	Not used
	5	Screw Assy	CEA5322	CEA5322	CEA3849
	6	Screw	JPZ20P060FTB	JPZ20P060FTB	Not used
	7	Screw	CBA1650	CBA1650	CBA1650
*	8	Polyethylene Bag	CEG-127	CEG-127	CEG-127
	9	Screw	CRZ50P090FTC	CRZ50P090FTC	CRZ50P090FTC
	10	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158	CEG-158	CEG-158
	12	Handle	CNC5395	CNC5395	CNC5395
	13	Protector	XHP7008	XHP7008	XHP7008
	14	Protector	XHP7007	XHP7007	XHP7007
	15	Bush	CNV3930	CNV3930	CNV3930
	16	Contain Box	XHL7111	XHL7110	XHL7109
	17	Remote Control Assy	CXC5717	CXC5717	CXC5717
	18	Unit Box	XHG7111	XHG7110	XHG7109

Owner's Manual,Installation Manual

Part No.	Language
XRD7109,XRD7110, XRD7111,XRD7112	English,French
XRD7113	English,Spanish,Portuguese(B)
XRD7114	Arabic,Traditional Chinese
XRD7115	English,Spanish,Portuguese(B),Arabic,Traditional Chinese

2.2 EXTERIOR

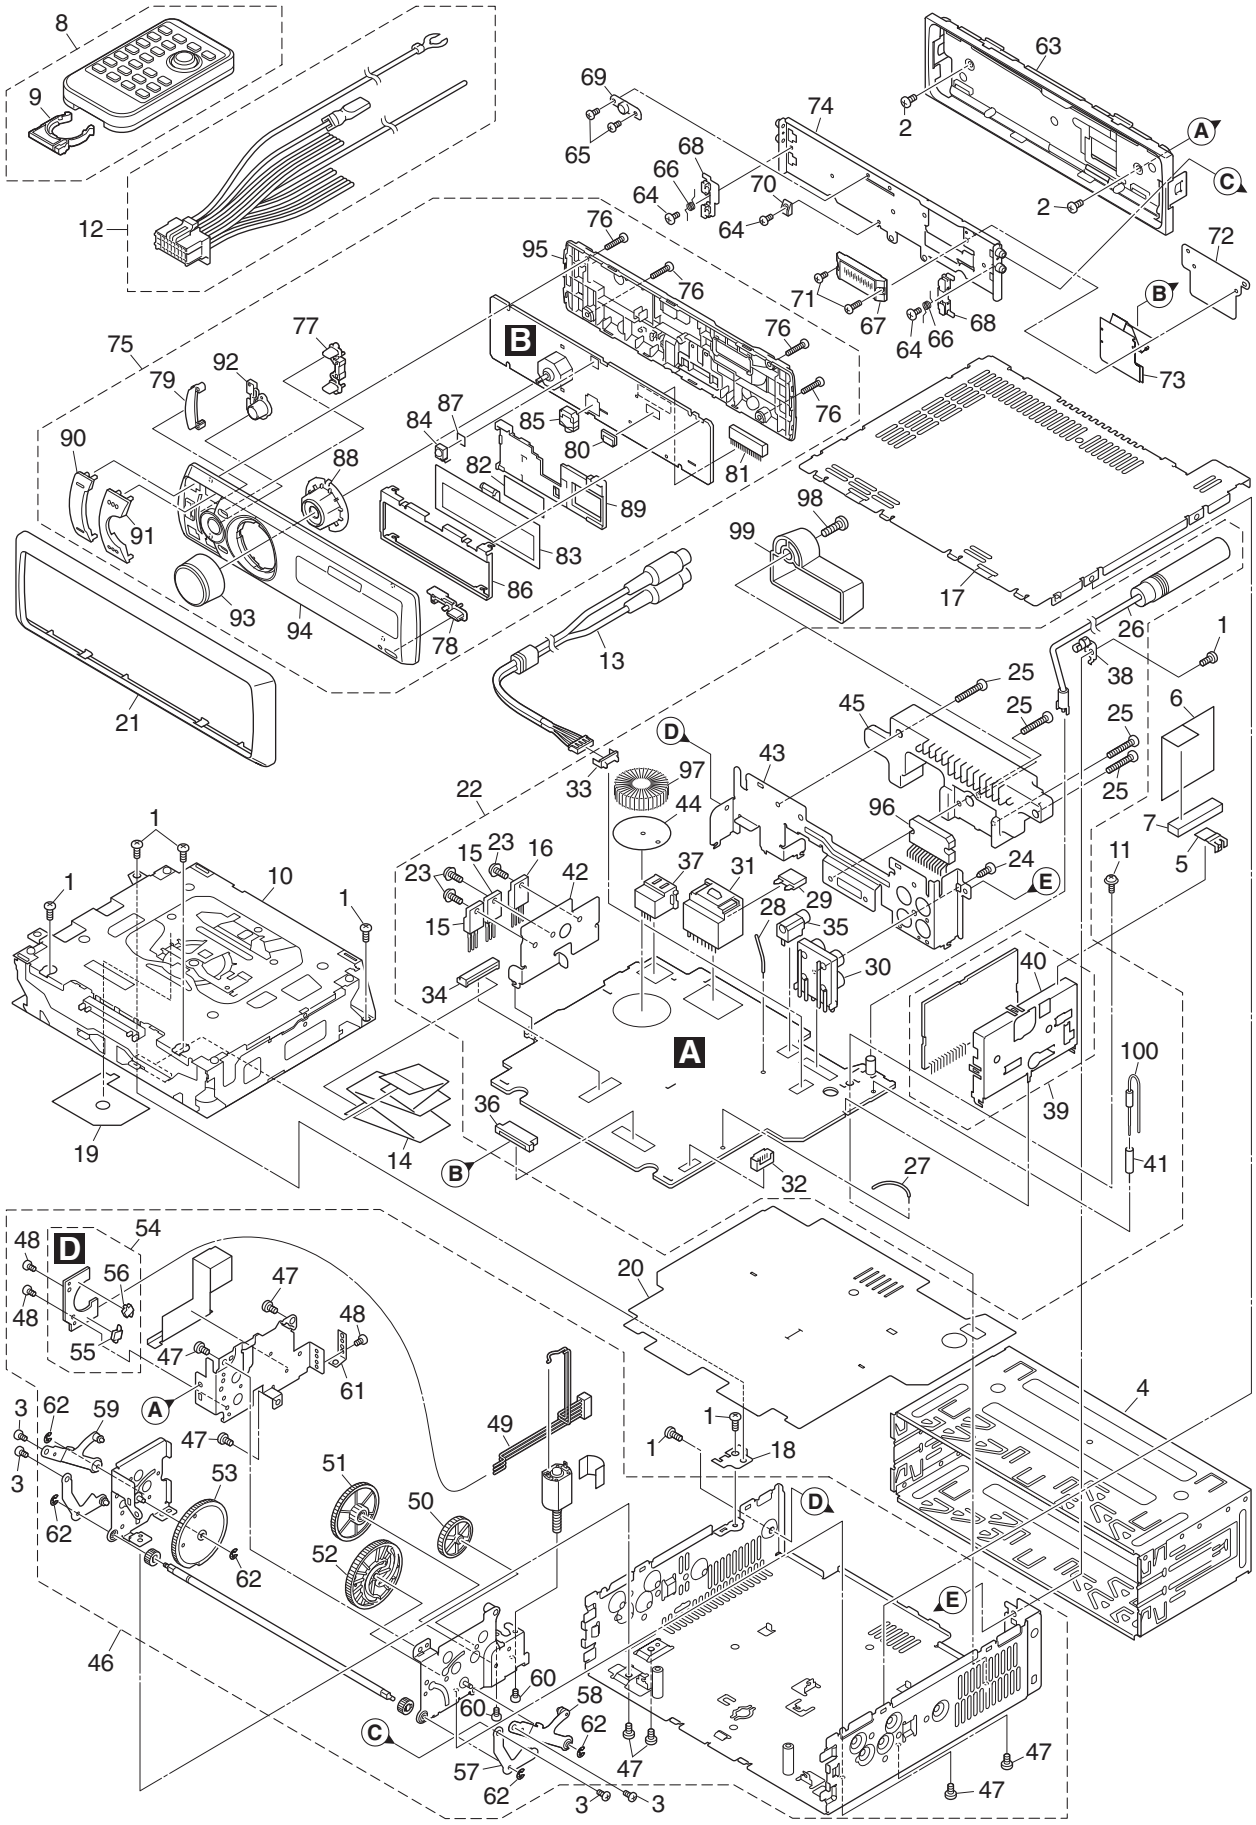

(1)EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw(M2.6x4)	CBA1828
	3	Screw(M2x2.5)	CBA1924
	4	Holder	CNC8659
	5	Earth Plate	CND2171
	6	Insulator	CNM8790
	7	Cushion	CNM9126
	8	Remote Control Assy	CXC5717
	9	Cover	CZN5357
	10	CD Mechanism Module(S10.5)	CXK5752
	11	Screw	ISS26P055FTC
	12	Cord Assy	XDE7007
	13	Cord Assy	XDE7013
	14	Cable	XDE7015
	15	Transistor(Q901,Q951)	2SD2396
	16	IC(IC931)	NJM2388F84
	17	Case	XNB7005
	18	Holder	XNC7014
	19	Insulator	XNM7106
	20	Insulator	XNM7114
	21	Panel	See Contrast table(2)
	22	Tuner Amp Unit	See Contrast table(2)
	23	Screw	ASZ26P060FTC
	24	Screw	BPZ26P080FTC
	25	Screw	BSZ26P160FTC
	26	Antenna Cable	CDH1336
	27	Clamper	CEF1046
	28	Clamper	CEF1048
⚠	29	Fuse(10A)	CEK1208
	30	Pin Jack(CN312)	CKB1051
	31	Plug(CN901)	CKM1376
	32	Plug(CN801)	CKS-786
	33	Plug(CN311)	CKS1238
	34	Connector(CN651)	CKS3834
	35	Connector(CN161)	See Contrast table(2)
	36	Connector(CN871)	CKS4811
	37	Connector(CN101)	CKS5271
	38	Holder	CNC5399
	39	FM/AM Tuner Unit	CWE1952
	40	Holder	CND1054
	41	Tube	XDM7001
	42	Holder	XNC7011
	43	Holder	See Contrast table(2)
	44	Insulator	XNM7031
	45	Heat Sink	XNR7001
	46	DRIVE UNIT	XXA7406
	47	Screw	BMZ26P040FTC
	48	Screw(M2x2)	CBA1871
	49	Cord	CDE7392
	50	Gear	CNV7752
	51	Gear	CNV7753
	52	Gear	CNV7754
	53	Gear	CNV7755
	54	Switch Unit	CWS1389
	55	Switch	CSN1051
	56	Spring Switch	CSN1052
	57	Arm Unit	CXC2199
	58	Arm Unit	CXC6623
	59	Arm Unit	CXC6624
	60	Screw	JFZ20P020FTC
	61	Spring	XBL7003
	62	Washer	YE15FTC
	63	Panel Unit	See Contrast table(2)
	64	Screw(M2x2)	CBA1871
	65	Screw	CBA1935
	66	Spring	CBH2530
	67	Connector	CKS5273
	68	Arm	CNV6962
	69	Guide	CNV6967
	70	Guide	CNV8048
	71	Screw	XBA7002
	72	Holder	XNC7019
	73	FLEXIBLE PCB	XNP7026
	74	CASE UNIT	XXA7426
	75	DETACHABLE ASS'Y	See Contrast table(2)
	76	Screw	BPZ20P080FTB
	77	Button(DISP,CLOCK)	XAC7128
	78	Button(EJECT)	XAC7130
	79	Lighting Conductor	XNV7027
	80	Connector(CN1801)	CKS5272
	81	Connector(CN1802)	CKS5545
	82	Double Sided Tape	CNM8673
	83	OEL UNIT	MXS8231
	84	IC(IC1811)	GP1UX31RK
	85	JACK(CN1803)	XKN7001
	86	Holder	XNC7009
	87	Double Sided Tape	XNM7118
	88	Holder	XNV7023
	89	Holder	XNV7029
	90	Button Unit(EQ,SW)	XXA7377
	91	Button Unit(SRC,BAND)	XXA7379
	92	Button Unit(LIST)	XXA7380
	93	KNOB UNIT	XXA7381
	94	SUB GRILLE ASS'Y	See Contrast table(2)
	95	COVER UNIT	XXA7428
	96	IC(IC301)	PAL007B
	97	Choke Coil(L841)	CTH1280
	98	Screw	See Contrast table(2)
	99	Holder	See Contrast table(2)
	100	Arrestor(AR401)	DSP-201M-S00B

(2) CONTRAST TABLE

DEH-P680MP/XN/UC , DEH-P6800MP/XN/UC and DEH-P6850MP/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P680MP/XN/UC	DEH-P6800MP/XN/UC	DEH-P6850MP/XN/ES
	21	Panel	XNS7145	XNS7144	XNS7144
	22	Tuner Amp Unit	XWM7116	XWM7115	XWM7114
	35	Connector(CN161)	CKS4124	CKS4124	Not used
	43	Holder	XNC7022	XNC7022	XNC7012
	63	Panel Unit	XXA7408	XXA7407	XXA7407
	75	Detachable Assy	XXA7413	XXA7412	XXA7411
	94	Sub Grille Assy	XXA7420	XXA7419	XXA7418
	98	Screw	Not used	BMZ40P140FTC	Not used
	99	Holder	Not used	CNV7619	Not used

2.3 CD MECHANISM MODULE

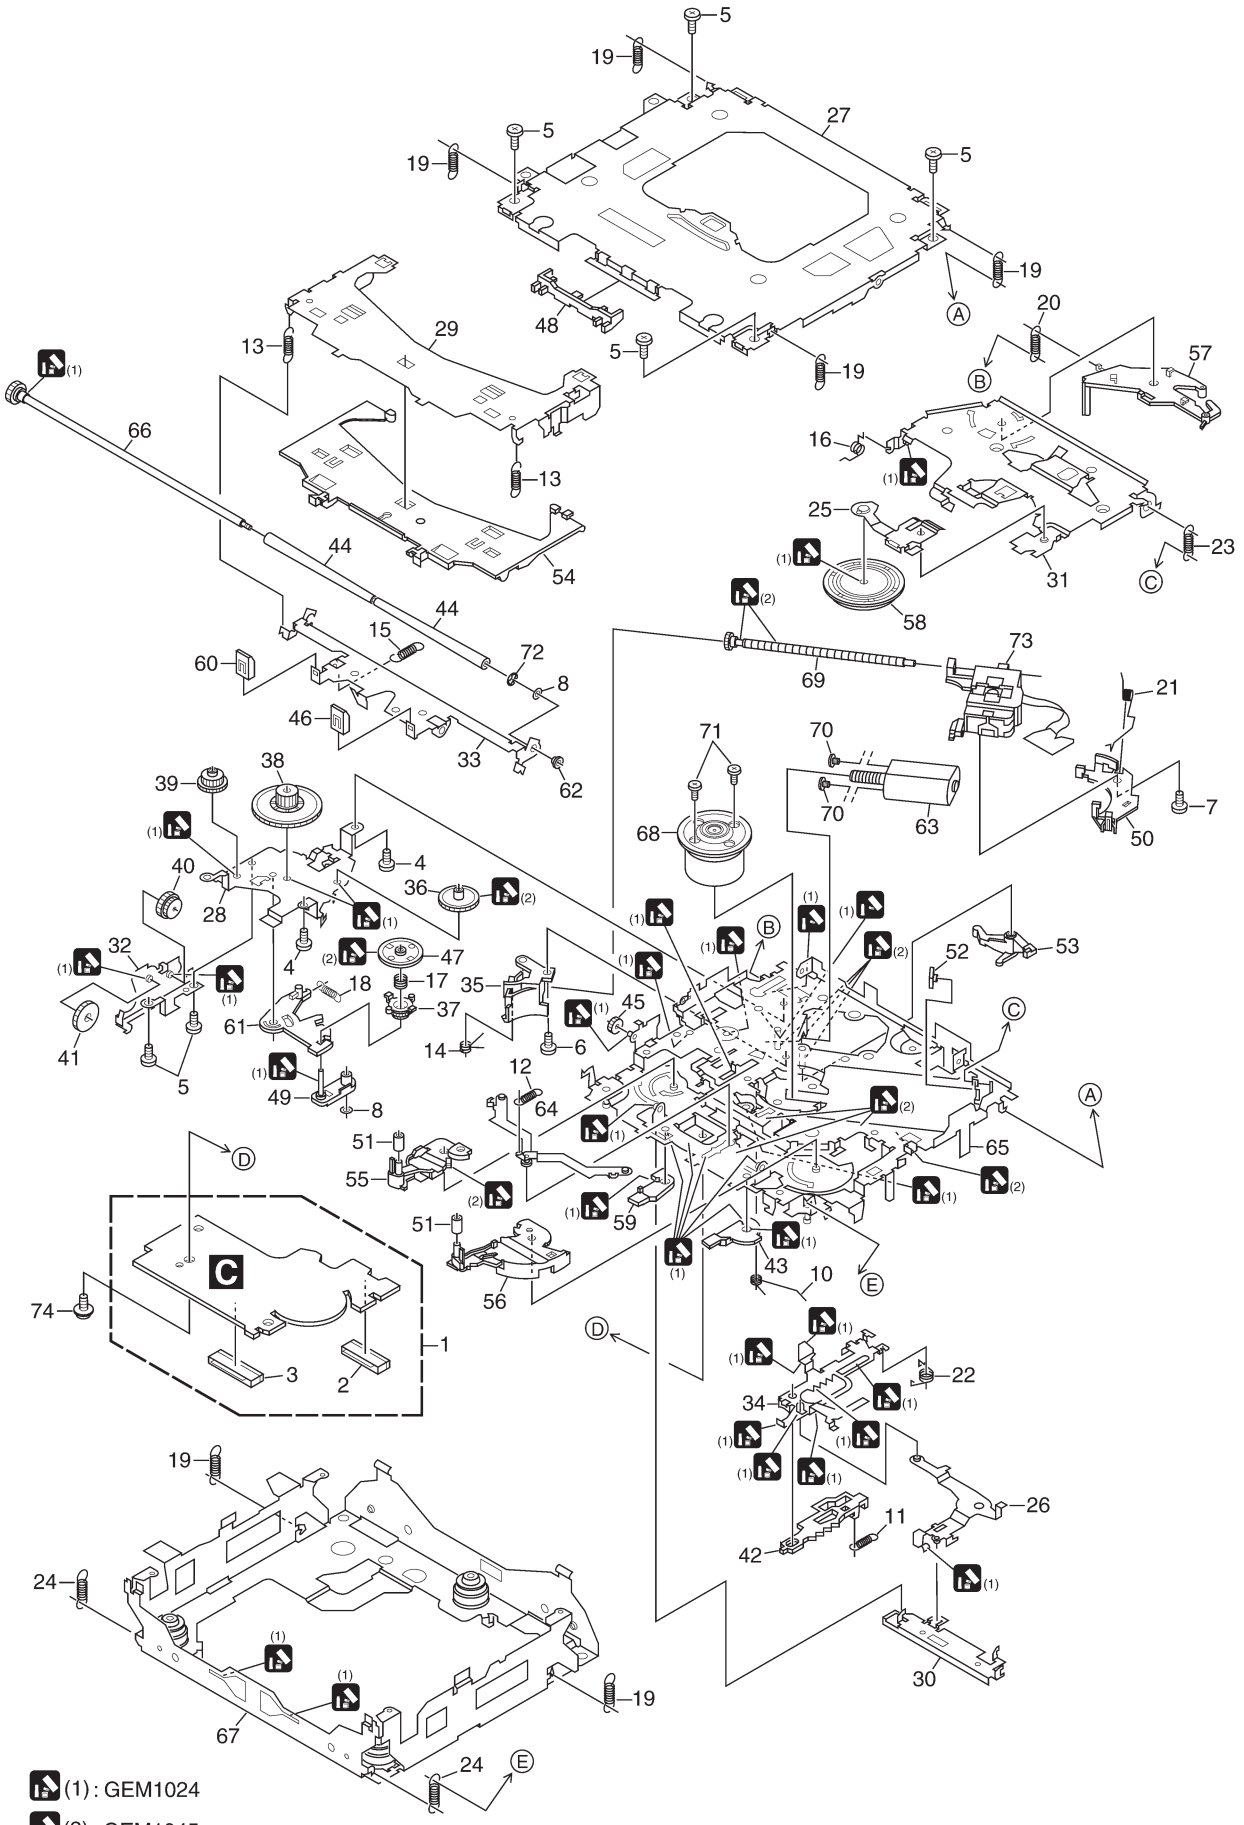

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5COMP1)	CWX3176
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS5284
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	•••••	
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND2584
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV7201
	36	Gear	CNV7207
	37	Gear	CNV7208
	38	Gear	CNV7209
	39	Gear	CNV7210
	40	Gear	CNV7211
	41	Gear	CNV7212
	42	Rack	CNV7214
	43	Arm	CNV7216
	44	Roller	CNV7218
	45	Gear	CNV7219
	46	Guide	CNV7361
	47	Gear	CNV7595
	48	Guide	CNV7799
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV8347
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV8413
	62	Collar	CNV8938
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC4166
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P020FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*
  Chip Resistor
  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J
  Chip Capacitor (except for CQS.....)
  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*
  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.
  IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : XWM7116(P680MP/XN/UC)
Unit Number : XWM7114
(P6850MP/XN/ES)
Unit Name : Tuner Amp Unit
Unit Number : XWM7115
(P6800MP/XN/UC)
Unit Name : Tuner Amp Unit
Unit Number :
Unit Name : Keyboard Unit
Unit Number : CWS1389
Unit Name : Switch Unit
Unit Number : CWX3176
Unit Name : CD Core Unit
(S10.5COMP1)

A

Unit Number : XWM7116(P680MP/XN/UC)
Unit Number : XWM7114
(P6850MP/XN/ES)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,17,119) IC	HA12241FP
IC 171	(A,60,48) IC	BA3121F
IC 201	(A,90,92) IC	PML016A
IC 301	(A,84,132) IC	PAL007B
IC 401	(A,151,82) IC	NJM2885DL1-33
IC 601	(A,123,59) IC(P680MP/XN/UC)	PEG142A
IC 601	(A,123,59) IC(P6850MP/XN/ES)	PEG143A
IC 631	(A,154,66) IC	S-80835CNMC-B8U
IC 801	(A,147,26) IC	BA6288FS
IC 851	(B,43,26) IC	NJM2360M
IC 971	(A,16,96) IC	NJM2388F84

Circuit Symbol and No. **Part No.**

Q 101	(B,32,110) Transistor	2SA1576
Q 102	(B,32,107) Transistor	DTC114EU
Q 191	(A,96,62) Transistor	DTC114EU
Q 192	(A,87,57) Transistor	UMD2N
Q 201	(A,63,71) Transistor	2SD1767
Q 202	(B,67,82) Transistor	UMD2N
Q 311	(A,149,110) Transistor	IMH3A
Q 312	(B,128,125) Transistor	IMH3A
Q 313	(B,142,121) Transistor	IMH3A
Q 501	(A,49,65) Transistor	2SC4081
Q 502	(B,121,123) Transistor	DTC124EU
Q 503	(A,129,116) Transistor	UMD2N
Q 631	(B,150,40) Transistor	2SC3052-12
Q 651	(A,16,56) Transistor	2SD2396
Q 652	(B,32,57) Transistor	UMD2N
Q 801	(A,151,39) Transistor	2SD1760F5
Q 802	(B,138,29) Transistor	UMD3N
Q 821	(A,72,23) Transistor	2SD1767
Q 822	(B,66,13) Transistor	UMD2N
Q 831	(B,124,37) Transistor	2SA1576
Q 832	(B,125,33) Transistor	DTC114EU
Q 841	(B,82,12) Transistor	DTC114EU
Q 851	(A,28,38) Transistor	2SD1760F5
Q 852	(B,30,38) Transistor	UMD2N
Q 911	(A,16,69) Transistor	2SD2396
Q 912	(B,16,82) Transistor	UMD2N
Q 931	(A,90,116) Transistor	UMX1N
Q 941	(A,80,125) Transistor	DTC114EU
Q 951	(A,71,104) Transistor	2SA1576
D 201	(A,57,87) Diode	HZS12L(B1)
D 202	(A,125,75) Diode	RB706F-40
D 301	(A,65,104) Diode	S5688G
D 302	(A,61,104) Diode	S5688G
D 501	(A,35,87) Diode	HZS9L(A2)
D 502	(A,52,62) Diode	DAN202U
D 503	(A,129,98) Diode	1SS133
D 651	(A,27,59) Diode	HZS9L(A1)
D 801	(A,141,19) Diode	HZS7L(A3)
D 802	(A,151,15) Diode	1SS133
D 803	(A,147,15) Diode	1SS133

Circuit Symbol and No.		Part No.
D 821	(A,70,12) Diode	HZS11L(A1)
D 841	(A,94,10) LED	SML412BC5T(NP)
D 851	(A,26,29) Diode	HZS11L(A1)
D 852	(B,63,26) Diode	RB411D
D 871	(B,100,29) Diode	DAP202U
D 872	(B,104,29) Diode	DAN202U
D 873	(B,104,21) Diode	DAP202U
D 874	(B,108,21) Diode	DAN202U
D 875	(B,109,35) Diode	DAP202U
D 876	(B,105,35) Diode	DAN202U
D 877	(B,108,30) Diode Network	DA204U
D 901	(A,57,108) Diode	S5688G
D 902	(A,57,104) Diode	S5688G
D 911	(A,35,82) Diode	S5688G
D 912	(A,31,77) Diode	HZS6L(B1)
D 921	(A,85,113) Diode	HZS9L(B3)
D 922	(B,149,65) Diode Network	DA204U
D 931	(A,78,113) Diode	HZS7L(C3)
D 932	(A,74,108) Diode	HZS7L(A1)
D 941	(A,79,121) Diode	MA111
D 951	(A,60,101) Diode	DAN202U
L 101	(A,22,110) Inductor	LAU2R2K
L 171	(A,63,38) Inductor	LAU2R2K
L 201	(A,68,69) Ferri-Inductor	LAU100K
L 202	(A,58,76) Ferri-Inductor	LAU4R7K
L 401	(B,175,145) Inductor	LCTAW220J2520
L 402	(A,164,97) Inductor	LAU1R0K
L 403	(A,165,108) Ferri-Inductor	LAU100K
L 404	(A,161,108) Inductor	LAU1R0K
L 601	(A,96,50) Ferri-Inductor	LAU100K
L 651	(A,76,45) Ferri-Inductor	LAU100K
L 831	(A,131,27) Ferri-Inductor	LAU100K
L 852	(A,42,21) Inductor	CTF1660
L 901	(A,37,103) Choke Coil 600µH	CTH1280
L 951	(A,57,99) Inductor	LAU2R2K
X 601	(A,109,55) Radiator 10.000MHz	CSS1599
⚠FU311	(B,152,126) Fuse 3A	CEK1286
⚠FU312	(B,152,130) Fuse 3A	CEK1286
⚠	Fuse 10A	CEK1208
BZ601	(A,62,13) Buzzer	CPV1062
AR401	(A,162,146) Surge Protector	DSP-201M-S00B

RESISTORS

R 101	(B,20,119)	RS1/16S223J
R 102	(B,22,119)	RS1/16S181J
R 103	(B,18,119)	RS1/16S102J
R 104	(B,16,120)	RS1/16S102J
R 105	(B,24,119)	RS1/16S222J
R 106	(B,15,133)	RS1/16S181J
R 107	(B,14,120)	RS1/16S223J
R 108	(B,27,127)	RS1/16S101J
R 109	(B,26,134)	RS1/16S620J
R 110	(B,28,121)	RS1/16S101J
R 111	(A,12,120)	RS1/16S102J
R 112	(A,12,116)	RS1/16S472J
R 113	(A,14,113)	RS1/16S472J
R 114	(B,32,115)	RS1/16S223J
R 115	(B,32,113)	RS1/16S472J
R 161	(A,121,127) (P680MP/XN/UC)	RS1/16S102J
R 162	(A,124,120) (P680MP/XN/UC)	RS1/16S102J
R 163	(A,124,122) (P680MP/XN/UC)	RS1/16S103J
R 164	(A,124,127) (P680MP/XN/UC)	RS1/16S103J
R 165	(A,128,122) (P6850MP/XN/ES)	RS1/16S104J
R 166	(A,127,127) (P6850MP/XN/ES)	RS1/16S104J
R 171	(B,66,42)	RS1/16S101J
R 172	(B,49,42)	RS1/16S101J
R 173	(A,66,35)	RS1/16S223J
R 174	(A,49,49)	RS1/16S223J
R 175	(A,63,42)	RS1/16S102J
R 176	(A,53,50)	RS1/16S102J
R 191	(A,97,59)	RS1/16S103J
R 192	(A,85,58)	RS1/16S682J
R 194	(A,93,62)	RS1/16S683J
R 201	(B,81,93)	RS1/16S0R0J
R 202	(B,76,97)	RS1/16S0R0J
R 205	(B,98,91)	RS1/16S101J
R 206	(B,98,90)	RS1/16S0R0J
R 207	(B,98,96)	RS1/16S0R0J
R 208	(B,98,95)	RS1/16S0R0J
R 209	(B,98,88)	RS1/16S0R0J
R 210	(B,98,93)	RS1/16S0R0J
R 211	(A,80,94)	RAB4C102J
R 212	(B,66,77)	RS1/16S152J
R 213	(B,90,107)	RS1/16S221J
R 214	(A,76,96)	RS1/16S221J
R 301	(B,113,129)	RS1/16S153J
R 302	(B,114,91)	RS1/16S682J
R 303	(B,103,95)	RS1/16S682J
R 304	(B,103,94)	RS1/16S682J
R 305	(B,103,90)	RS1/16S682J
R 306	(B,119,91)	RS1/16S123J
R 307	(B,107,101)	RS1/16S123J
R 308	(B,113,103)	RS1/16S123J
R 309	(B,119,93)	RS1/16S123J
R 311	(B,153,109)	RS1/16S390J
R 312	(B,143,110)	RS1/16S390J
R 313	(B,134,121)	RS1/16S0R0J
R 314	(B,126,119)	RS1/16S390J
R 315	(B,147,121)	RS1/16S390J
R 316	(B,138,121)	RS1/16S390J
R 317	(B,151,110)	RS1/16S223J
R 318	(B,146,110)	RS1/16S223J
R 319	(B,137,128)	RS1/16S223J
R 320	(B,126,129)	RS1/16S223J
R 321	(B,143,127)	RS1/16S223J
R 322	(B,141,127)	RS1/16S223J
R 325	(B,129,118)	RS1/16S0R0J
R 329	(A,152,110)	RS1/16S0R0J
R 330	(A,145,112)	RS1/16S0R0J
R 331	(B,132,121)	RS1/16S0R0J
R 332	(B,129,117)	RS1/16S0R0J
R 333	(B,146,121)	RS1/16S0R0J
R 334	(B,136,121)	RS1/16S0R0J
R 402	(B,167,110)	RS1/16S122J
R 404	(B,169,125)	RS1/16S681J
R 405	(B,169,131)	RS1/16S681J
R 406	(B,167,125)	RS1/16S681J
R 407	(B,169,137)	RS1/16S681J
R 408	(B,167,137)	RS1/16S681J
R 501	(A,54,72)	RS1/16S683J

Circuit Symbol and No.		Part No.
R 502	(A,54,69)	RS1/16S683J
R 503	(A,54,66)	RS1/16S223J
R 504	(A,49,61)	RS1/16S223J
R 505	(B,121,118)	RS1/16S103J
R 506	(B,121,120)	RS1/16S103J
R 507	(B,117,122)	RS1/16S331J
R 508	(A,133,115)	RS1/16S102J
R 601	(B,135,58)	RS1/16S104J
R 609	(A,124,72)	RS1/16S473J
R 611	(A,125,47)	RS1/16S0R0J
R 612	(A,127,47)	RS1/16S681J
R 613	(A,128,47)	RS1/16S681J
R 614	(B,68,21)	RS1/16S102J
R 615	(B,112,51)	RS1/16S473J
R 619	(A,135,48)	RS1/16S104J
R 620	(A,135,50)	RS1/16S104J
R 631	(B,139,41)	RS1/16S102J
R 633	(B,148,45)	RS1/16S183J
R 634	(B,145,41)	RS1/16S473J
R 635	(B,139,38)	RS1/16S222J
R 641	(A,144,63)	RS1/16S104J
R 651	(A,27,55)	RD1/4PU561J
R 652	(A,22,63)	RD1/4PU221J
R 655	(B,87,45)	RS1/16S104J
R 657	(B,91,32)	RS1/16S102J
R 658	(B,91,30)	RS1/16S102J
R 659	(B,100,42)	RS1/16S102J
R 660	(B,91,40)	RS1/16S102J
R 661	(A,73,40)	RS1/16S102J
R 662	(B,93,44)	RS1/16S102J
R 663	(A,74,32)	RS1/16S221J
R 664	(A,74,37)	RS1/16S681J
R 665	(B,73,39)	RS1/16S104J
R 666	(B,90,44)	RS1/16S104J
R 667	(B,94,26)	RS1/16S104J
R 668	(B,73,36)	RS1/16S682J
R 669	(B,73,38)	RS1/16S682J
R 801	(A,137,19)	RD1/4PU561J
R 802	(A,134,44)	RAB4C102J
R 803	(A,141,28)	RS1/16S221J
R 823	(A,80,19)	RS1/16S1R0J
R 824	(A,80,17)	RS1/16S473J
R 825	(A,74,12)	RD1/4PU391J
R 831	(B,118,35)	RS1/16S473J
R 832	(B,120,35)	RS1/16S102J
R 833	(B,129,27)	RS1/16S222J
R 841	(B,93,14)	RS1/16S221J
R 851	(B,30,43)	RS1/16S331J
R 852	(B,30,41)	RS1/16S331J
R 853	(B,47,36)	RS1/16S0R0J
R 855	(B,36,29)	RS1/16S391J
R 856	(A,55,24)	RD1/4PU272J
R 857	(B,51,29)	RS1/16S391J
R 860	(B,49,29)	RS1/16S391J
R 861	(A,33,23)	RS1/16S1R0J
R 871	(A,152,52)	RS1/16S102J
R 872	(A,113,41)	RS1/16S102J
R 873	(A,152,51)	RS1/16S0R0J
R 879	(B,108,26)	RS1/16S473J
R 880	(B,109,32)	RS1/16S104J

Circuit Symbol and No.		Part No.
R 881	(B,101,34)	RS1/16S473J
R 883	(B,107,16)	RS1/16S222J
R 884	(B,113,27)	RS1/16S472J
R 885	(B,106,14)	RS1/16S222J
R 886	(B,112,34)	RS1/16S222J
R 887	(B,115,15)	RS1/16S222J
R 888	(B,114,34)	RS1/16S222J
R 889	(B,118,14)	RS1/16S222J
R 911	(B,20,71)	RS1/16S222J
R 912	(B,22,71)	RS1/16S223J
R 913	(B,17,77)	RS1/16S391J
R 921	(A,81,108)	RD1/4PU392J
R 922	(B,147,60)	RS1/16S392J
R 923	(B,149,60)	RS1/16S223J
R 924	(B,152,60)	RS1/16S102J
R 931	(A,90,110)	RS1/16S473J
R 932	(A,90,112)	RS1/16S104J
R 933	(A,95,112)	RS1/16S472J
R 934	(A,95,114)	RS1/16S473J
R 935	(A,95,117)	RS1/16S103J
R 936	(A,98,117)	RS1/16S104J
R 937	(A,91,120)	RS1/16S104J
R 938	(A,57,113)	RD1/4PU102J
R 941	(A,61,113)	RD1/4PU102J
R 942	(A,84,122)	RS1/16S103J
R 943	(A,84,125)	RS1/16S104J
R 951	(A,64,118)	RD1/4PU153J
R 952	(A,64,102)	RS1/16S472J
R 953	(A,64,100)	RS1/16S472J
R 954	(A,75,104)	RS1/16S102J
R 955	(A,75,106)	RS1/16S104J
R 971	(B,19,87)	RS1/16S103J
R 972	(B,54,66)	RS1/16S102J

CAPACITORS

C 101	(B,21,135)	CKSRYB104K16
C 102	(A,25,119)	CKSRYB473K25
C 171	(A,68,35)	CCSRCH471J50
C 172	(A,49,46)	CCSRCH471J50
C 173	(A,60,42)	CKSRYB105K10
C 174	(A,55,50)	CKSRYB105K10
C 175	(A,54,45)	CEJQ2R2M50
C 176	(B,62,41)	CKSRYB104K16
C 178	(B,49,40)	CKSRYB472K50
C 179	(B,66,37)	CKSRYB472K50
C 180	(A,67,52)	CEJQ1R0M50
C 181	(A,58,53)	CKSRYB104K16
C 200	(A,122,79)	CEJQ470M16
C 203	(B,91,69)	CKSQYB225K10
C 205	(A,88,68)	CEJQ470M16
C 206	(A,69,88)	CEJQ4R7M35
C 207	(A,76,88)	CEJQ4R7M35
C 208	(A,78,100)	CEJQ4R7M35
C 209	(A,81,105)	CEJQ4R7M35
C 210	(A,123,108)	CKSRYB104K16
C 211	(A,123,106)	CKSRYB104K16
C 212	(A,69,94)	CEJQ1R0M50
C 213	(A,62,94)	CEJQ1R0M50
C 214	(A,75,80)	CEJQ1R0M50

Circuit Symbol and No.		Part No.
C 215	(A,71,100)	CEJQ1R0M50
C 216	(A,109,79)	CEJQ100M25
C 218	(A,86,79)	CEJQ4R7M35
C 219	(A,85,105)	CEJQ4R7M35
C 220	(A,93,79)	CEJQ4R7M35
C 221	(A,91,105)	CEJQ4R7M35
C 222	(A,100,79)	CEJQ4R7M35
C 223	(A,97,105)	CEJQ4R7M35
C 224	(B,89,90)	CCSRCH120J50
C 225	(B,89,88)	CCSRCH120J50
C 226	(B,93,96)	CCSRCH120J50
C 227	(B,89,92)	CCSRCH120J50
C 230	(A,79,80)	CEJQ100M25
C 232	(A,80,91)	CKSRYB104K16
C 233	(B,121,77)	CKSRYB104K16
C 234	(B,87,64)	CKSRYB105K10
C 235	(B,61,85)	CKSRYB103K50
C 236	(B,60,79)	CKSRYB104K16
C 237	(A,61,82)	CEJQ470M16
C 301	(A,116,100)	CFTNA224J50
C 302	(A,109,110)	CFTNA224J50
C 303	(A,116,110)	CFTNA224J50
C 304	(A,109,100)	CFTNA224J50
C 307	(A,124,95)	CEJQ100M25
C 309	(B,122,109)	CKSQYB225K10
C 310	(B,122,104)	CKSQYB225K10
C 311	(A,148,105)	CEJQ100M25
C 312	(A,141,104)	CEJQ100M25
C 313	(A,128,112)	CEJQ100M25
C 314	(A,128,103)	CEJQ100M25
C 315	(A,135,103)	CEJQ100M25
C 316	(A,137,109)	CEJQ100M25
C 319	(B,128,122)	CKSRYB223K50
C 324	(B,148,141)	CKSRYB103K50
C 401	(B,147,75)	CKSRYB104K16
C 402	(A,144,71)	CEJQ1R0M50
C 403	(A,153,71)	CEJQ470M6R3
C 407	(A,161,113)	CEJQ101M16
C 408	(B,175,140)	CKSRYB103K50
C 409	(B,165,131)	CCSRCH470J50
C 411	(A,157,95)	CEJQ470M6R3
C 412	(B,160,93)	CKSRYB103K50
C 414	(B,172,117)	CKSRYB103K50
C 416	(B,174,96)	CCSRCH101J50
C 417	(B,154,94)	CCSRCH470J50
C 501	(A,124,101)	CEJQ330M10
C 502	(A,131,94)	CEJQ101M16
C 601	(A,101,55)	CEJQ4R7M35
C 602	(B,105,57)	CKSRYB105K10
C 604	(B,115,55)	CCSRCH200J50
C 605	(B,113,60)	CCSRCH200J50
C 606	(B,132,52)	CCSRCH470J50
C 608	(A,121,73)	CCSRCH470J50
C 631	(B,143,41)	CKSRYB105K10
C 632	(B,147,41)	CKSRYB104K16
C 651	(B,25,61)	CKSRYB473K25
C 653	(A,36,51)	CEJQ101M16
C 654	(A,44,59)	CEJQ101M16
C 657	(B,95,32)	CKSRYB152K50
C 658	(B,95,30)	CKSRYB152K50
C 661	(B,90,27)	CKSRYB105K10
C 663	(A,73,42)	CKSRYB105K10
C 802	(B,133,23)	CKSRYB224K10
C 803	(A,142,34)	CEAT331M10
C 804	(B,154,35)	CKSRYB104K16
C 805	(B,148,23)	CKSRYB102K50
C 806	(B,155,17)	CCSRCH101J50
C 807	(B,153,17)	CCSRCH101J50
C 821	(B,59,14)	CKSRYB473K25
C 841	(A,94,16)	CKSRYF104Z25
C 851	(B,27,40)	CKSRYB104K16
C 852	(A,39,39)	CEJQ470M16
C 854	(A,39,31)	CEJQ101M16
C 855	(B,35,23)	CKSRYB104K16
C 856	(B,49,21)	CCSRCH331J50
C 857	(B,52,29)	CKSRYB223K50
C 861	(A,52,21)	CEJQ470M25
C 901	(A,33,121) 3300µF/16V	CCH1486
C 902	(B,42,127)	CKSRYB104K16
C 903	(B,80,149)	CKSYB225K16
C 911	(A,25,70) 470µF/16V	CCH1331
C 912	(A,37,70) 470µF/16V	CCH1331
C 913	(B,29,79)	CKSRYB472K50
C 914	(A,33,60)	CEJQ470M10
C 915	(B,29,67)	CKSRYB103K50
C 921	(B,151,60)	CKSRYB104K16
C 931	(A,95,110)	CKSRYB104K16
C 941	(A,69,111)	CEJQ1R0M50
C 971	(A,25,86)	CEJQ101M16
C 972	(B,19,97)	CKSRYB103K50
C 973	(A,41,82)	CEJQ221M10
C 974	(B,19,92)	CKSRYB103K50

A

Unit Number : XWM7115 (P6800MP/XN/UC)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,17,119) IC	HA12241FP
IC 171	(A,60,48) IC	BA3121F
IC 201	(A,90,92) IC	PML016A
IC 301	(A,84,132) IC	PAL007B
IC 401	(A,151,82) IC	NJM2885DL1-33
IC 601	(A,123,59) IC	PEG142A
IC 631	(A,154,66) IC	S-80835CNMC-B8U
IC 801	(A,147,26) IC	BA6288FS
IC 851	(B,43,26) IC	NJM2360M
IC 971	(A,16,96) IC	NJM2388F84
Q 101	(B,32,110) Transistor	2SA1576
Q 102	(B,32,107) Transistor	DTC114EU
Q 191	(A,96,62) Transistor	DTC114EU
Q 192	(A,87,57) Transistor	UMD2N
Q 311	(A,149,110) Transistor	IMH3A
Q 312	(B,128,125) Transistor	IMH3A
Q 313	(B,142,121) Transistor	IMH3A
Q 501	(A,49,65) Transistor	2SC4081
Q 502	(B,121,123) Transistor	DTC124EU
Q 503	(A,129,116) Transistor	UMD2N

Circuit Symbol and No.		Part No.
Q 631	(B,150,40) Transistor	2SC3052-12
Q 651	(A,16,56) Transistor	2SD2396
Q 652	(B,32,57) Transistor	UMD2N
Q 801	(A,151,39) Transistor	2SD1760F5
Q 802	(B,138,29) Transistor	UMD3N
Q 821	(A,72,23) Transistor	2SD1767
Q 822	(B,66,13) Transistor	UMD2N
Q 831	(B,124,37) Transistor	2SA1576
Q 832	(B,125,33) Transistor	DTC114EU
Q 841	(B,82,12) Transistor	DTC114EU
Q 851	(A,28,38) Transistor	2SD1760F5
Q 852	(B,30,38) Transistor	UMD2N
Q 911	(A,16,69) Transistor	2SD2396
Q 912	(B,16,82) Transistor	UMD2N
Q 931	(A,90,116) Transistor	UMX1N
Q 941	(A,80,125) Transistor	DTC114EU
Q 951	(A,71,104) Transistor	2SA1576
D 202	(A,125,75) Diode	RB706F-40
D 301	(A,65,104) Diode	S5688G
D 302	(A,61,104) Diode	S5688G
D 501	(A,35,87) Diode	HZS9L(A2)
D 502	(A,52,62) Diode	DAN202U
D 503	(A,129,98) Diode	1SS133
D 651	(A,27,59) Diode	HZS9L(A1)
D 801	(A,141,19) Diode	HZS7L(A3)
D 802	(A,151,15) Diode	1SS133
D 803	(A,147,15) Diode	1SS133
D 821	(A,70,12) Diode	HZS11L(A1)
D 841	(A,94,10) LED	SML412BC5T(NP)
D 851	(A,26,29) Diode	HZS11L(A1)
D 852	(B,63,26) Diode	RB411D
D 871	(B,100,29) Diode	DAP202U
D 872	(B,104,29) Diode	DAN202U
D 873	(B,104,21) Diode	DAP202U
D 874	(B,108,21) Diode	DAN202U
D 875	(B,109,35) Diode	DAP202U
D 876	(B,105,35) Diode	DAN202U
D 877	(B,108,30) Diode Network	DA204U
D 901	(A,57,108) Diode	S5688G
D 902	(A,57,104) Diode	S5688G
D 911	(A,35,82) Diode	S5688G
D 912	(A,31,77) Diode	HZS6L(B1)
D 921	(A,85,113) Diode	HZS9L(B3)
D 922	(B,149,65) Diode Network	DA204U
D 931	(A,78,113) Diode	HZS7L(C3)
D 932	(A,74,108) Diode	HZS7L(A1)
D 941	(A,79,121) Diode	MA111
D 951	(A,60,101) Diode	DAN202U
L 101	(A,22,110) Inductor	LAU2R2K
L 171	(A,63,38) Inductor	LAU2R2K
L 201	(A,68,69) Ferri-Inductor	LAU100K
L 202	(A,58,76) Ferri-Inductor	LAU4R7K
L 401	(B,175,145) Inductor	LCTAW220J2520
L 402	(A,164,97) Inductor	LAU1R0K
L 403	(A,165,108) Ferri-Inductor	LAU100K
L 404	(A,161,108) Inductor	LAU1R0K
L 601	(A,96,50) Ferri-Inductor	LAU100K
L 651	(A,76,45) Ferri-Inductor	LAU100K
L 831	(A,131,27) Ferri-Inductor	LAU100K
L 852	(A,42,21) Inductor	CTF1660

Circuit Symbol and No.		Part No.
L 901	(A,37,103) Choke Coil 600µH	CTH1280
L 951	(A,57,99) Inductor	LAU2R2K
X 601	(A,109,55) Radiator 10.000MHz	CSS1599
⚠FU311	(B,152,126) Fuse 3A	CEK1286
⚠FU312	(B,152,130) Fuse 3A	CEK1286
⚠	Fuse 10A	CEK1208
BZ601	(A,62,13) Buzzer	CPV1062
AR401	(A,162,146) Arrestor	DSP-201M-S00B

RESISTORS

R 101	(B,20,119)	RS1/16S223J
R 102	(B,22,119)	RS1/16S181J
R 103	(B,18,119)	RS1/16S102J
R 104	(B,16,120)	RS1/16S102J
R 105	(B,24,119)	RS1/16S222J
R 106	(B,15,133)	RS1/16S181J
R 107	(B,14,120)	RS1/16S223J
R 108	(B,27,127)	RS1/16S101J
R 109	(B,26,134)	RS1/16S620J
R 110	(B,28,121)	RS1/16S101J
R 111	(A,12,120)	RS1/16S102J
R 112	(A,12,116)	RS1/16S472J
R 113	(A,14,113)	RS1/16S472J
R 114	(B,32,115)	RS1/16S223J
R 115	(B,32,113)	RS1/16S472J
R 161	(A,121,127)	RS1/16S102J
R 162	(A,124,120)	RS1/16S102J
R 163	(A,124,122)	RS1/16S103J
R 164	(A,124,127)	RS1/16S103J
R 171	(B,66,42)	RS1/16S101J
R 172	(B,49,42)	RS1/16S101J
R 173	(A,66,35)	RS1/16S223J
R 174	(A,49,49)	RS1/16S223J
R 175	(A,63,42)	RS1/16S102J
R 176	(A,53,50)	RS1/16S102J
R 191	(A,97,59)	RS1/16S103J
R 192	(A,85,58)	RS1/16S682J
R 194	(A,93,62)	RS1/16S683J
R 201	(B,81,93)	RS1/16S0R0J
R 202	(B,76,97)	RS1/16S0R0J
R 205	(B,98,91)	RS1/16S102J
R 206	(B,98,90)	RS1/16S101J
R 207	(B,98,96)	RS1/16S101J
R 208	(B,98,95)	RS1/16S101J
R 209	(B,98,88)	RS1/16S101J
R 210	(B,98,93)	RS1/16S101J
R 211	(A,80,94)	RAB4C102J
R 213	(B,90,107)	RS1/16S221J
R 214	(A,76,96)	RS1/16S221J
R 230	(A,68,74)	RD1/4PU0R0J
R 301	(B,113,129)	RS1/16S153J
R 302	(B,114,91)	RS1/16S0R0J
R 303	(B,103,95)	RS1/16S0R0J
R 304	(B,103,94)	RS1/16S0R0J
R 305	(B,103,90)	RS1/16S0R0J
R 311	(B,153,109)	RS1/16S821J
R 312	(B,143,110)	RS1/16S821J
R 313	(B,134,121)	RS1/16S0R0J
R 314	(B,126,119)	RS1/16S821J

Circuit Symbol and No.		Part No.
R 315	(B,147,121)	RS1/16S821J
R 316	(B,138,121)	RS1/16S821J
R 317	(B,151,110)	RS1/16S223J
R 318	(B,146,110)	RS1/16S223J
R 319	(B,137,128)	RS1/16S223J
R 320	(B,126,129)	RS1/16S223J
R 321	(B,143,127)	RS1/16S223J
R 322	(B,141,127)	RS1/16S223J
R 325	(B,129,118)	RS1/16S0R0J
R 329	(A,152,110)	RS1/16S0R0J
R 330	(A,145,112)	RS1/16S0R0J
R 331	(B,132,121)	RS1/16S0R0J
R 332	(B,129,117)	RS1/16S0R0J
R 333	(B,146,121)	RS1/16S0R0J
R 334	(B,136,121)	RS1/16S0R0J
R 402	(B,167,110)	RS1/16S122J
R 404	(B,169,125)	RS1/16S681J
R 405	(B,169,131)	RS1/16S681J
R 406	(B,167,125)	RS1/16S681J
R 407	(B,169,137)	RS1/16S681J
R 408	(B,167,137)	RS1/16S681J
R 501	(A,54,72)	RS1/16S683J
R 502	(A,54,69)	RS1/16S683J
R 503	(A,54,66)	RS1/16S223J
R 504	(A,49,61)	RS1/16S223J
R 505	(B,121,118)	RS1/16S103J
R 506	(B,121,120)	RS1/16S103J
R 507	(B,117,122)	RS1/16S331J
R 508	(A,133,115)	RS1/16S102J
R 602	(B,133,58)	RS1/16S104J
R 609	(A,124,72)	RS1/16S473J
R 611	(A,125,47)	RS1/16S0R0J
R 612	(A,127,47)	RS1/16S681J
R 613	(A,128,47)	RS1/16S681J
R 614	(B,68,21)	RS1/16S102J
R 615	(B,112,51)	RS1/16S473J
R 619	(A,135,48)	RS1/16S104J
R 620	(A,135,50)	RS1/16S104J
R 631	(B,139,41)	RS1/16S102J
R 633	(B,148,45)	RS1/16S183J
R 634	(B,145,41)	RS1/16S473J
R 635	(B,139,38)	RS1/16S222J
R 641	(A,144,63)	RS1/16S104J
R 651	(A,27,55)	RD1/4PU561J
R 652	(A,22,63)	RD1/4PU221J
R 655	(B,87,45)	RS1/16S104J
R 657	(B,91,32)	RS1/16S102J
R 658	(B,91,30)	RS1/16S102J
R 659	(B,100,42)	RS1/16S102J
R 660	(B,91,40)	RS1/16S102J
R 661	(A,73,40)	RS1/16S102J
R 662	(B,93,44)	RS1/16S102J
R 663	(A,74,32)	RS1/16S221J
R 664	(A,74,37)	RS1/16S681J
R 665	(B,73,39)	RS1/16S104J
R 666	(B,90,44)	RS1/16S104J
R 667	(B,94,26)	RS1/16S104J
R 668	(B,73,36)	RS1/16S682J
R 669	(B,73,38)	RS1/16S682J
R 801	(A,137,19)	RD1/4PU561J
R 802	(A,134,44)	RAB4C102J
R 803	(A,141,28)	RS1/16S221J
R 823	(A,80,19)	RS1/16S1R0J
R 824	(A,80,17)	RS1/16S473J
R 825	(A,74,12)	RD1/4PU391J
R 831	(B,118,35)	RS1/16S473J
R 832	(B,120,35)	RS1/16S102J
R 833	(B,129,27)	RS1/16S222J
R 841	(B,93,14)	RS1/16S221J
R 851	(B,30,43)	RS1/16S331J
R 852	(B,30,41)	RS1/16S331J
R 853	(B,47,36)	RS1/16S0R0J
R 855	(B,36,29)	RS1/16S391J
R 856	(A,55,24)	RD1/4PU272J
R 857	(B,51,29)	RS1/16S391J
R 860	(B,49,29)	RS1/16S391J
R 861	(A,33,23)	RS1/16S1R0J
R 871	(A,152,52)	RS1/16S102J
R 872	(A,113,41)	RS1/16S102J
R 873	(A,152,51)	RS1/16S0R0J
R 879	(B,108,26)	RS1/16S473J
R 880	(B,109,32)	RS1/16S104J
R 881	(B,101,34)	RS1/16S473J
R 883	(B,107,16)	RS1/16S222J
R 884	(B,113,27)	RS1/16S472J
R 885	(B,106,14)	RS1/16S222J
R 886	(B,112,34)	RS1/16S222J
R 887	(B,115,15)	RS1/16S222J
R 888	(B,114,34)	RS1/16S222J
R 889	(B,118,14)	RS1/16S222J
R 911	(B,20,71)	RS1/16S222J
R 912	(B,22,71)	RS1/16S223J
R 913	(B,17,77)	RS1/16S391J
R 921	(A,81,108)	RD1/4PU392J
R 922	(B,147,60)	RS1/16S392J
R 923	(B,149,60)	RS1/16S223J
R 924	(B,152,60)	RS1/16S102J
R 931	(A,90,110)	RS1/16S473J
R 932	(A,90,112)	RS1/16S104J
R 933	(A,95,112)	RS1/16S472J
R 934	(A,95,114)	RS1/16S473J
R 935	(A,95,117)	RS1/16S103J
R 936	(A,98,117)	RS1/16S104J
R 937	(A,91,120)	RS1/16S104J
R 938	(A,57,113)	RD1/4PU102J
R 941	(A,61,113)	RD1/4PU102J
R 942	(A,84,122)	RS1/16S103J
R 943	(A,84,125)	RS1/16S104J
R 951	(A,64,118)	RD1/4PU153J
R 952	(A,64,102)	RS1/16S472J
R 953	(A,64,100)	RS1/16S472J
R 954	(A,75,104)	RS1/16S102J
R 955	(A,75,106)	RS1/16S104J
R 971	(B,19,87)	RS1/16S103J
R 972	(B,54,66)	RS1/16S102J

CAPACITORS

C 101	(B,21,135)	CKSRYB104K16
C 102	(A,25,119)	CKSRYB473K25

Circuit Symbol and No.		Part No.
C 171	(A,68,35)	CCSRCH471J50
C 172	(A,49,46)	CCSRCH471J50
C 173	(A,60,42)	CKSRYB105K10
C 174	(A,55,50)	CKSRYB105K10
C 175	(A,54,45)	CEJQ2R2M50
C 176	(B,62,41)	CKSRYB104K16
C 178	(B,49,40)	CKSRYB472K50
C 179	(B,66,37)	CKSRYB472K50
C 180	(A,67,52)	CEJQ1R0M50
C 181	(A,58,53)	CKSRYB104K16
C 200	(A,122,79)	CEJQ470M16
C 203	(B,91,69)	CKSQYB225K10
C 205	(A,88,68)	CEJQ470M16
C 206	(A,69,88)	CEJQ4R7M35
C 207	(A,76,88)	CEJQ4R7M35
C 208	(A,78,100)	CEJQ4R7M35
C 209	(A,81,105)	CEJQ4R7M35
C 210	(A,123,108)	CKSRYB104K16
C 211	(A,123,106)	CKSRYB104K16
C 212	(A,69,94)	CEJQ1R0M50
C 213	(A,62,94)	CEJQ1R0M50
C 214	(A,75,80)	CEJQ1R0M50
C 215	(A,71,100)	CEJQ1R0M50
C 216	(A,109,79)	CEJQ100M25
C 218	(A,86,79)	CEJQ4R7M35
C 219	(A,85,105)	CEJQ4R7M35
C 220	(A,93,79)	CEJQ4R7M35
C 221	(A,91,105)	CEJQ4R7M35
C 222	(A,100,79)	CEJQ4R7M35
C 223	(A,97,105)	CEJQ4R7M35
C 224	(B,89,90)	CCSRCH120J50
C 225	(B,89,88)	CCSRCH120J50
C 226	(B,93,96)	CCSRCH120J50
C 227	(B,89,92)	CCSRCH120J50
C 230	(A,79,80)	CEJQ100M25
C 232	(A,80,91)	CKSRYB104K16
C 233	(B,121,77)	CKSRYB104K16
C 234	(B,87,64)	CKSRYB105K10
C 301	(A,116,100)	CFTNA224J50
C 302	(A,109,110)	CFTNA224J50
C 303	(A,116,110)	CFTNA224J50
C 304	(A,109,100)	CFTNA224J50
C 307	(A,124,95)	CEJQ100M25
C 309	(B,122,109)	CKSQYB225K10
C 310	(B,122,104)	CKSQYB225K10
C 311	(A,148,105)	CEJQ4R7M35
C 312	(A,141,104)	CEJQ4R7M35
C 313	(A,128,112)	CEJQ4R7M35
C 314	(A,128,103)	CEJQ4R7M35
C 315	(A,135,103)	CEJQ4R7M35
C 316	(A,137,109)	CEJQ4R7M35
C 319	(B,128,122)	CKSRYB472K50
C 324	(B,148,141)	CKSRYB103K50
C 401	(B,147,75)	CKSRYB104K16
C 402	(A,144,71)	CEJQ1R0M50
C 403	(A,153,71)	CEJQ470M6R3
C 407	(A,161,113)	CEJQ101M16
C 408	(B,175,140)	CKSRYB103K50
C 409	(B,165,131)	CCSRCH470J50
C 411	(A,157,95)	CEJQ470M6R3

Circuit Symbol and No.		Part No.
C 412	(B,160,93)	CKSRYB103K50
C 414	(B,172,117)	CKSRYB103K50
C 416	(B,174,96)	CCSRCH101J50
C 417	(B,154,94)	CCSRCH470J50
C 501	(A,124,101)	CEJQ330M10
C 502	(A,131,94)	CEJQ101M16
C 601	(A,101,55)	CEJQ4R7M35
C 602	(B,105,57)	CKSRYB105K10
C 604	(B,115,55)	CCSRCH200J50
C 605	(B,113,60)	CCSRCH200J50
C 606	(B,132,52)	CCSRCH470J50
C 608	(A,121,73)	CCSRCH470J50
C 631	(B,143,41)	CKSRYB105K10
C 632	(B,147,41)	CKSRYB104K16
C 651	(B,25,61)	CKSRYB473K25
C 653	(A,36,51)	CEJQ101M16
C 654	(A,44,59)	CEJQ101M16
C 657	(B,95,32)	CKSRYB152K50
C 658	(B,95,30)	CKSRYB152K50
C 661	(B,90,27)	CKSRYB105K10
C 663	(A,73,42)	CKSRYB105K10
C 802	(B,133,23)	CKSRYB224K10
C 803	(A,142,34)	CEAT331M10
C 804	(B,154,35)	CKSRYB104K16
C 805	(B,148,23)	CKSRYB102K50
C 806	(B,155,17)	CCSRCH101J50
C 807	(B,153,17)	CCSRCH101J50
C 821	(B,59,14)	CKSRYB473K25
C 841	(A,94,16)	CKSRYF104Z25
C 851	(B,27,40)	CKSRYB104K16
C 852	(A,39,39)	CEJQ470M16
C 854	(A,39,31)	CEJQ101M16
C 855	(B,35,23)	CKSRYB104K16
C 856	(B,49,21)	CCSRCH331J50
C 857	(B,52,29)	CKSRYB223K50
C 861	(A,52,21)	CEJQ470M25
C 901	(A,33,121) 3300µF/16V	CCH1486
C 902	(B,42,127)	CKSRYB104K16
C 903	(B,80,149)	CKSYB225K16
C 911	(A,25,70) 470µF/16V	CCH1331
C 912	(A,37,70) 470µF/16V	CCH1331
C 913	(B,29,79)	CKSRYB472K50
C 914	(A,33,60)	CEJQ470M10
C 915	(B,29,67)	CKSRYB103K50
C 921	(B,151,60)	CKSRYB104K16
C 931	(A,95,110)	CKSRYB104K16
C 941	(A,69,111)	CEJQ1R0M50
C 971	(A,25,86)	CEJQ101M16
C 972	(B,19,97)	CKSRYB103K50
C 973	(A,41,82)	CEJQ221M10
C 974	(B,19,92)	CKSRYB103K50

B

Unit Number :

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1811	(A,12,74) IC	GP1UX31RK
IC 1831	(A,38,109) IC	S-1200B33-M5

Circuit Symbol and No.		Part No.
IC 1841	(B,21,95) IC	PEG144A
IC 1871	(A,22,147) IC(P680MP/XN/UC)	PD8153A
IC 1871	(A,22,147) IC(P6800MP/XN/UC)	PD8154A
IC 1871	(A,22,147) IC(P6850MP/XN/ES)	PD8154A
Q 1881	(B,20,126) Transistor	2SC4617
Q 1882	(B,25,120) Transistor	2SC2411K
D 1811	(A,8,20) LED	SML412BC5T(NP)
D 1812	(A,8,7) LED	SML412BC5T(NP)
D 1813	(A,10,33) LED	SML412BC5T(NP)
D 1814	(A,21,26) LED	SML412BC5T(NP)
D 1815	(A,33,33) LED	SML412BC5T(NP)
D 1816	(A,35,20) LED	SML412BC5T(NP)
D 1817	(A,35,7) LED	SML412BC5T(NP)
D 1818	(A,21,10) LED	SML412BC5T(NP)
D 1819	(A,21,72) LED	SML412BC5T(NP)
D 1820	(A,4,55) LED	SML412BC5T(NP)
D 1821	(A,39,55) LED	SML412BC5T(NP)
D 1822	(A,21,38) LED	SML412BC5T(NP)
D 1823	(A,38,156) LED	SML412BC5T(NP)
D 1831	(B,8,68) Diode	1SS355
L 1831	(A,36,99) Inductor	CTF1617
L 1881	(B,14,145) Inductor	CTF1617
L 1882	(A,27,125) Inductor	CTF1617
TH1881	(B,24,128) Thermistor	CCX1037
X 1841	(B,24,79) Ceramic Resonator 16.000MHz	CSS1616
S 1801	(A,37,159) Push Switch	CSG1155
S 1802	(A,38,148) Push Switch	CSG1155
S 1803	(A,4,22) Push Switch	CSG1155
S 1804	(A,7,33) Push Switch	CSG1155
S 1805	(A,4,7) Push Switch	CSG1155
S 1806	(A,21,30) Push Switch	CSG1155
S 1807	(A,36,33) Push Switch	CSG1155
S 1808	(A,38,7) Push Switch	CSG1155
S 1809	(A,38,22) Push Switch	CSG1155
S 1810	(A,21,55) Switch(VOL/SEL)	CSX1065
VR1881	(B,29,119) Semi-fixed6.8kΩ	CCP1228

RESISTORS

R 1801	(A,8,114)	RS1/16S222J
R 1802	(A,13,107)	RS1/16S222J
R 1804	(B,22,41)	RS1/16S104J
R 1808	(B,9,60)	RS1/16S332J
R 1809	(B,11,50)	RS1/16S103J
R 1810	(B,9,50)	RS1/16S333J
R 1811	(B,19,38)	RS1/16S103J
R 1812	(B,30,63)	RS1/16S222J
R 1813	(B,28,63)	RS1/16S103J
R 1814	(B,17,83)	RS1/16S101J
R 1815	(B,16,82)	RS1/16S103J
R 1816	(B,11,70)	RS1/16S2R2J
R 1817	(B,14,19)	RS1/16S181J
R 1818	(B,8,19)	RS1/16S221J
R 1819	(B,14,25)	RS1/16S181J
R 1820	(B,8,25)	RS1/16S221J
R 1821	(B,23,15)	RS1/16S181J
R 1822	(B,23,9)	RS1/16S221J
R 1823	(B,16,15)	RS1/16S181J
R 1824	(B,16,8)	RS1/16S221J
R 1825	(B,14,34)	RS1/16S181J
R 1826	(B,8,34)	RS1/16S221J
R 1827	(B,14,30)	RS1/16S181J
R 1828	(B,8,30)	RS1/16S221J
R 1829	(B,13,156)	RS1/16S271J
R 1830	(B,16,156)	RS1/16S221J
R 1831	(B,19,159)	RS1/16S221J
R 1833	(A,39,101)	RS1/16S222J
R 1834	(B,28,66)	RS1/16S101J
R 1835	(B,36,93)	RS1/16S101J
R 1836	(B,31,94)	RS1/16S101J
R 1837	(B,39,92)	RS1/16S101J
R 1838	(B,37,102)	RAB4C101J
R 1839	(A,12,141)	RAB4C101J
R 1840	(B,33,143)	RAB4C101J
R 1841	(B,33,107)	RAB4C101J
R 1842	(B,31,112)	RAB4C101J
R 1843	(A,26,104)	RAB4C101J
R 1844	(A,21,104)	RAB4C101J
R 1845	(B,24,141)	RAB4C101J
R 1846	(B,12,104)	RS1/16S101J
R 1847	(A,11,94)	RS1/16S101J
R 1848	(A,12,104)	RS1/16S101J
R 1849	(A,9,94)	RS1/16S101J
R 1850	(B,9,104)	RS1/16S101J
R 1851	(B,10,91)	RS1/16S473J
R 1852	(B,10,97)	RS1/16S473J
R 1853	(B,10,94)	RAB4C473J
R 1855	(A,6,43)	RS1/16S101J
R 1856	(A,35,41)	RS1/16S101J
R 1857	(A,24,75)	RS1/16S101J
R 1858	(B,12,67)	RS1/16S473J
R 1859	(B,10,67)	RS1/16S154J
R 1860	(B,25,68)	RS1/16S104J
R 1863	(A,9,106)	RS1/16S103J
R 1881	(B,20,128)	RS1/16S183J
R 1882	(B,24,127)	RS1/16S563J
R 1883	(A,24,130)	RS1/16S333J
R 1884	(A,22,130)	RS1/16S392J
R 1885	(A,25,117)	RS1/16S102J
R 1886	(A,25,118)	RS1/16S102J
R 1887	(A,25,120)	RS1/16S102J
R 1888	(A,25,121)	RS1/16S102J
R 1889	(B,24,112)	RS1/16S152J

CAPACITORS

C 1805	(B,8,74)	CKSYF106Z10
C 1811	(A,10,20)	CKSRYF104Z25
C 1812	(A,10,7)	CKSRYF104Z25
C 1813	(A,12,33)	CKSRYF104Z25
C 1814	(A,21,25)	CKSRYF104Z25
C 1815	(A,31,34)	CKSRYF104Z25
C 1816	(A,33,20)	CKSRYF104Z25
C 1817	(A,33,7)	CKSRYF104Z25
C 1818	(A,21,12)	CKSRYF104Z25
C 1819	(A,18,71)	CKSRYF104Z25
C 1820	(A,4,52)	CKSRYF104Z25
C 1821	(A,38,60)	CKSRYF104Z25
C 1822	(A,16,38)	CKSRYF104Z25
C 1823	(A,37,154)	CKSRYF104Z25
C 1824	(B,31,67)	CKSRYB473K25

Circuit Symbol and No.		Part No.
C 1831	(A,38,112)	CKSRYB224K10
C 1832	(A,37,103)	CKSRYB224K10
C 1833	(A,39,98)	CKSRYB103K50
C 1834	(A,37,95)	CSZSR4R7M10
C 1837	(B,7,71)	CKSRYB104K16
C 1871	(B,24,158)	CKSRYB103K50
C 1884	(A,20,130)	CKSRYB104K25
C 1885	(A,25,123)	CKSRYB104K16
C 1886	(A,22,127)	CKSRYB104K25
C 1887	(A,21,115)	CKSRYB104K25

D

Unit Number : CWS1389
Unit Name : Switch Unit

Switch(OPEN SENSE)	CSN1051
Spring Switch(CLOSE SENSE)	CSN1052

C

Unit Number : CWX3176
Unit Name : CD Core Unit
(S10.5COMP1)

MISCELLANEOUS

IC 201	(B,39,70)	IC	UPD63763CGJ
IC 203	(A,12,16)	IC	NJM2886DL3-33
IC 301	(A,28,18)	IC	BA5835FP
IC 701	(A,32,48)	IC	PE5505A
Q 101	(B,60,89)	Transistor	2SA1577
Q 701	(B,24,41)	Transistor	UN2111
X 201	(B,28,57)	Ceramic Resonator 16.934MHz	CSS1603
X 701	(A,24,37)	Ceramic Resonator 4.000MHz	CSS1652
S 901	(A,57,57)	Switch(HOME)	CSN1067
S 903	(B,23,78)	Switch(DSCSNS)	CSN1067
S 904	(B,42,87)	Switch(12EJ)	CSN1068
S 905	(B,28,88)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,61,92)	RS1/10SR2R4J
R 102	(B,63,92)	RS1/10SR2R4J
R 103	(B,63,89)	RS1/10SR2R7J
R 104	(A,52,73)	RS1/16SS102J
R 201	(B,44,57)	RS1/16SS102J
R 202	(A,38,62)	RS1/16SS473J
R 203	(A,37,62)	RS1/16SS473J
R 214	(A,46,79)	RS1/16SS472J
R 216	(A,46,81)	RS1/16SS472J
R 221	(A,44,81)	RS1/16SS103J
R 222	(A,45,81)	RS1/16SS103J
R 225	(B,52,78)	RS1/16SS103J
R 226	(B,52,77)	RS1/16SS393J
R 227	(A,44,75)	RS1/16SS562J
R 228	(A,46,72)	RS1/16SS122J
R 229	(A,44,72)	RS1/16SS472J
R 232	(A,46,75)	RS1/16SS122J
R 241	(B,26,63)	RS1/16SS333J
R 243	(B,26,62)	RS1/16SS333J
R 245	(B,26,69)	RS1/16SS333J
R 248	(B,55,74)	RS1/16SS105J
R 307	(A,19,20)	RS1/16SS183J
R 308	(A,17,20)	RS1/16SS183J
R 309	(A,18,18)	RS1/16SS183J
R 310	(A,17,16)	RS1/16SS183J
R 601	(B,30,47)	RS1/16S101J
R 602	(B,28,50)	RS1/16S101J
R 606	(B,20,54)	RS1/16S0R0J
R 701	(B,26,44)	RS1/16SS221J
R 707	(B,32,45)	RS1/16SS473J
R 709	(A,36,35)	RS1/16SS222J
R 710	(B,41,46)	RS1/16SS102J
R 712	(A,45,57)	RS1/16SS222J
R 713	(B,40,57)	RS1/16SS222J
R 716	(B,29,37)	RS1/16SS472J
R 724	(B,31,36)	RS1/16S473J
R 726	(B,23,47)	RS1/16SS103J
R 727	(B,31,42)	RS1/16SS473J
R 729	(B,20,48)	RS1/16SS223J
R 730	(B,20,46)	RS1/16SS473J
R 740	(A,38,59)	RS1/16SS222J
R 746	(A,13,38)	RS1/16SS104J
R 750	(A,40,66)	RS1/16SS473J
R 902	(A,20,36)	RS1/16SS221J
R 905	(A,21,36)	RS1/16SS221J
R 906	(B,20,36)	RS1/16SS221J
R 907	(B,16,62)	RS1/16SS0R0J
R 908	(B,16,64)	RS1/16SS0R0J
R 911	(B,20,32)	RS1/16SS0R0J

CAPACITORS

C 103	(B,57,83)	CEVW101M16
C 108	(A,47,66)	CKSSYB104K10
C 201	(B,46,56)	CKSSYB102K50
C 202	(B,47,58)	CKSSYB104K10
C 204	(B,35,48)	CEVW220M6R3
C 205	(A,34,63)	CKSSYB104K10
C 208	(B,34,54)	CKSSYB104K10
C 209	(B,31,57)	CKSSYB104K10
C 210	(A,31,66)	CKSRYB105K10
C 216	(B,53,77)	CKSSYB332K50
C 217	(B,52,79)	CKSSYB104K10
C 218	(B,52,76)	CKSSYB473K10
C 219	(B,52,74)	CKSSYB104K10
C 220	(A,46,77)	CKSSYB182K50
C 221	(B,51,74)	CKSSYB104K10
C 222	(A,46,73)	CCSSCH560J50
C 223	(A,44,74)	CCSSCH4R0C50
C 224	(B,52,68)	CKSSYB104K10
C 225	(A,47,67)	CKSSYB103K16
C 226	(A,49,67)	CCSSCH680J50
C 227	(A,48,65)	CCSSCH470J50
C 228	(A,46,62)	CKSSYB103K16
C 232	(A,12,31)	CKSRYB105K10
C 237	(A,31,67)	CKSSYB104K10
C 239	(A,46,74)	CCSSCH220J50
C 246	(A,42,80)	CKSSYB104K10
C 250	(A,42,81)	CKSRYB102K50
C 251	(A,41,83)	CKSRYB102K50

Circuit Symbol and No.		Part No.
C 303	(A,18,20)	CKSSYB472K25
C 304	(A,17,17)	CKSSYB103K16
C 307	(A,34,15)	CKSSYB104K10
C 308	(A,17,30)	CKSRYB105K10
C 601	(B,25,50)	CCSRCH102J50
C 602	(B,26,51)	CCSRCH102J50
C 701	(B,25,47)	CKSSYB104K10
C 703	(B,28,42)	CKSSYB103K16
C 706	(B,34,43)	CKSSYB104K10
C 707	(A,36,57)	CKSSYB104K10
C 714	(A,24,41)	CKSSYB104K10
C 722	(B,29,45)	CKSQYB475K6R3
C 903	(B,14,54)	CKSSYB471K50
C 907	(B,14,62)	CKSSYB103K16

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC4166
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026