



EXPLODED VIEW (DVD MECHANISM)

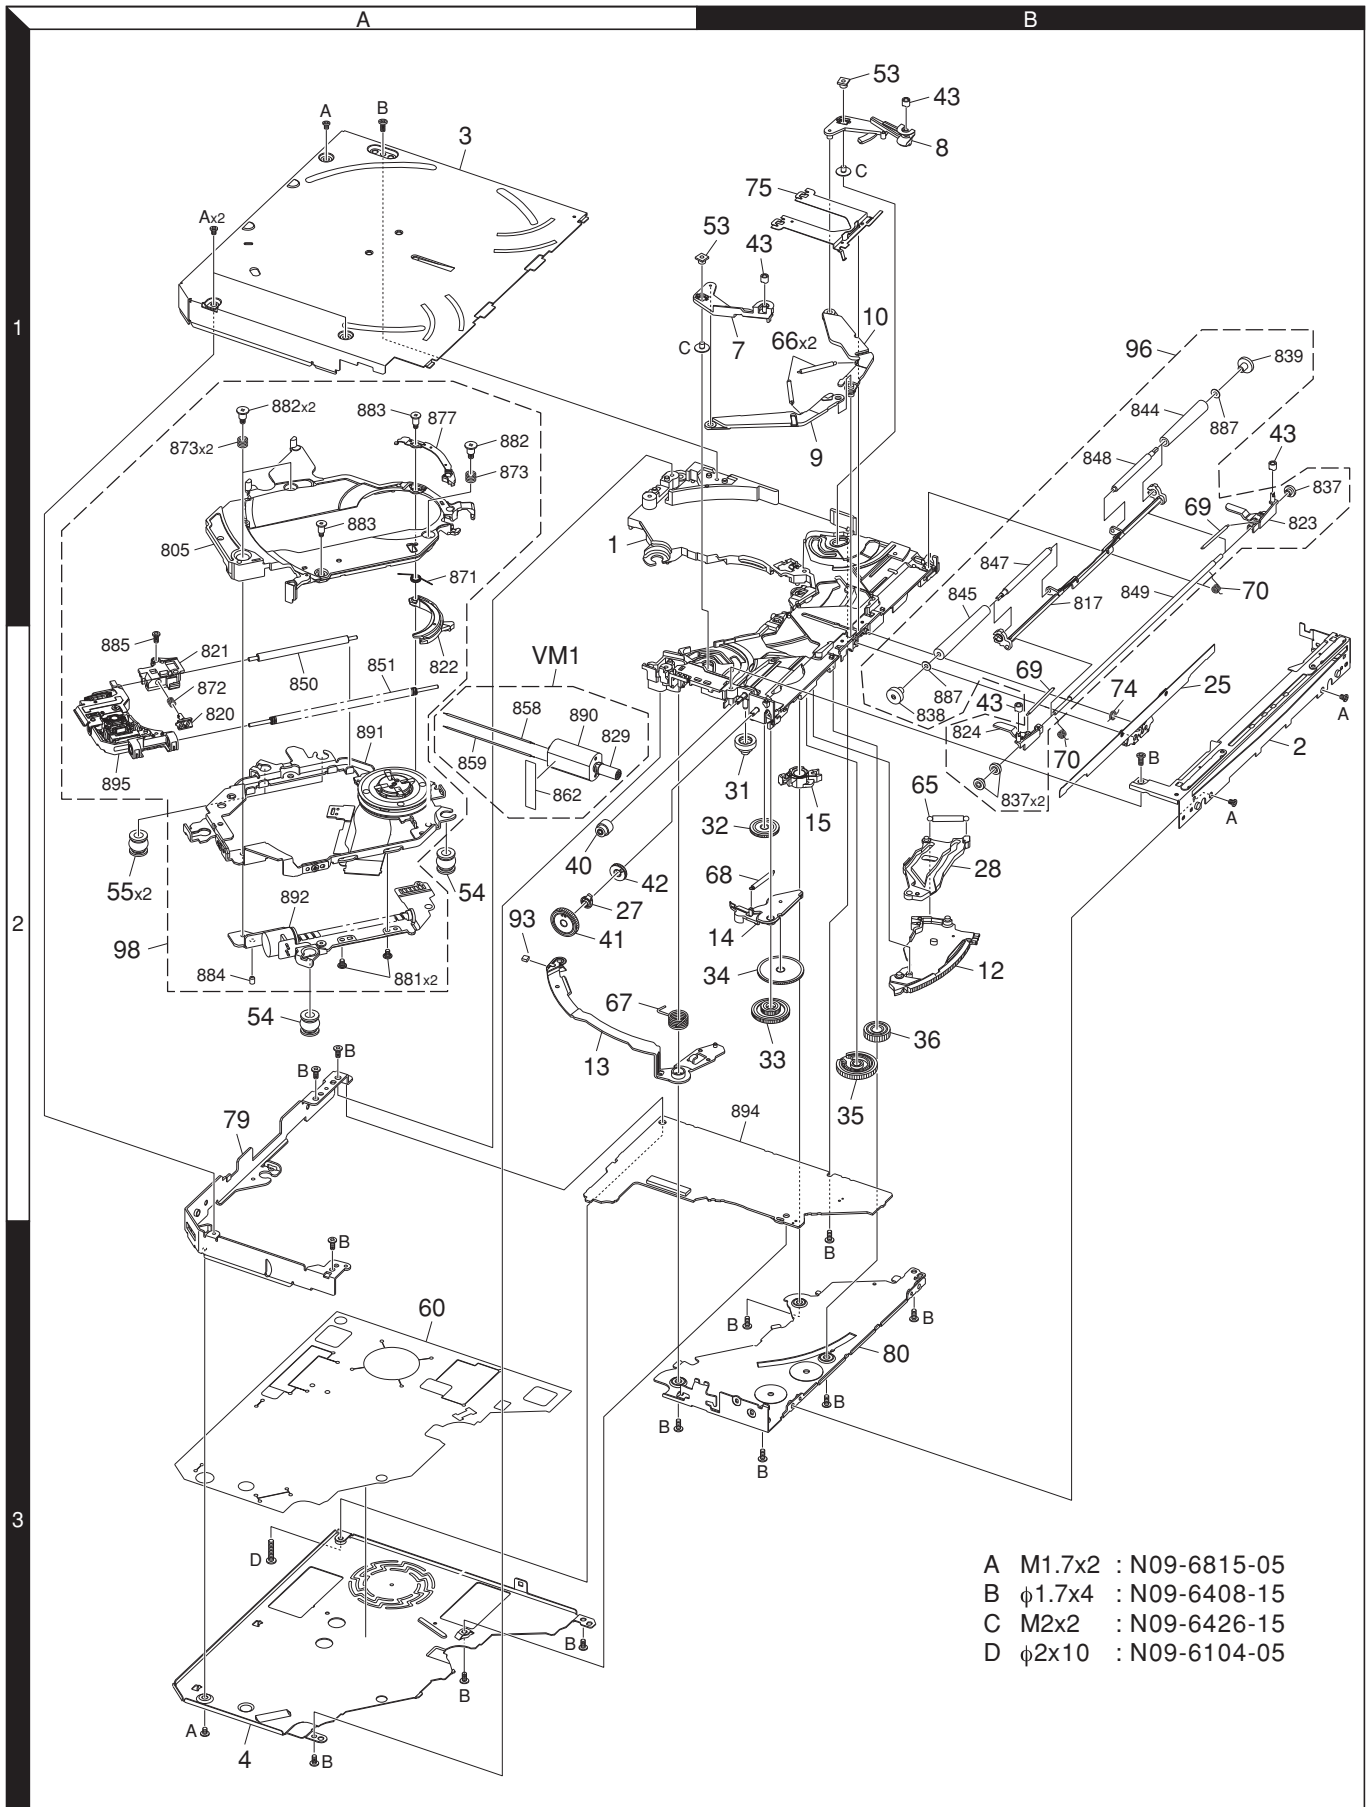

- A M1.7x2 : N09-6815-05
B ϕ 1.7x4 : N09-6408-15
C M2x2 : N09-6426-15
D ϕ 2x10 : N09-6104-05


Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

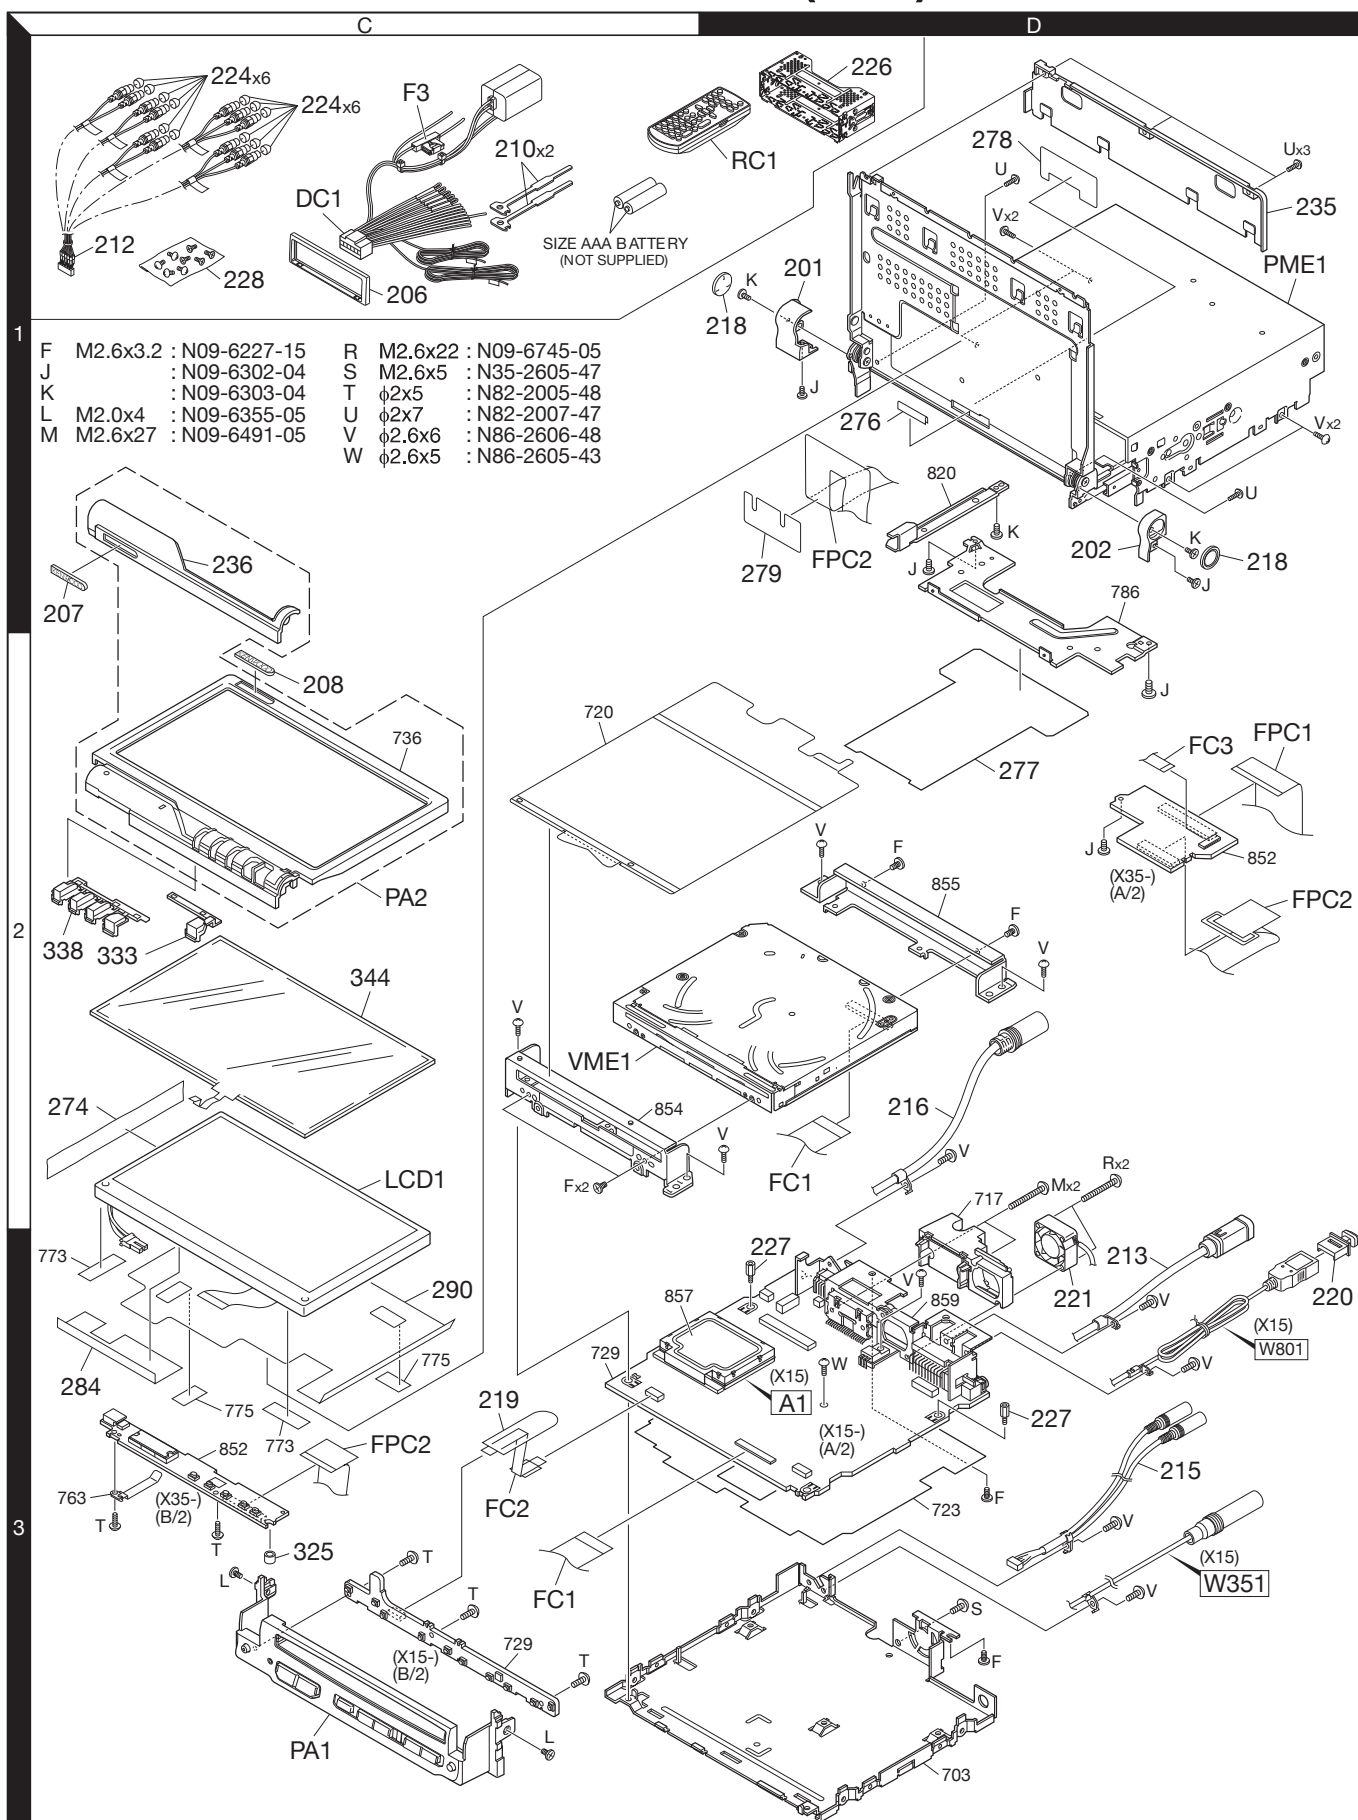

EXPLODED VIEW (DISPLAY ASSY)

A		: N09-6205-05
B	M2x2.2	: N09-6206-05
C	M2x3.5	: N09-6207-05
D		: N09-6211-05
E		: N09-6255-05
H	M1.7x2.2	: N09-6270-05
N	WASHER (1.6x4)	: N19-2195-04
P	WASHER	: N19-2303-04
Q	RETAINING RING	: N29-0538-04
AA	WASHER	: N19-2327-04
AB	WASHER	: N19-2328-04

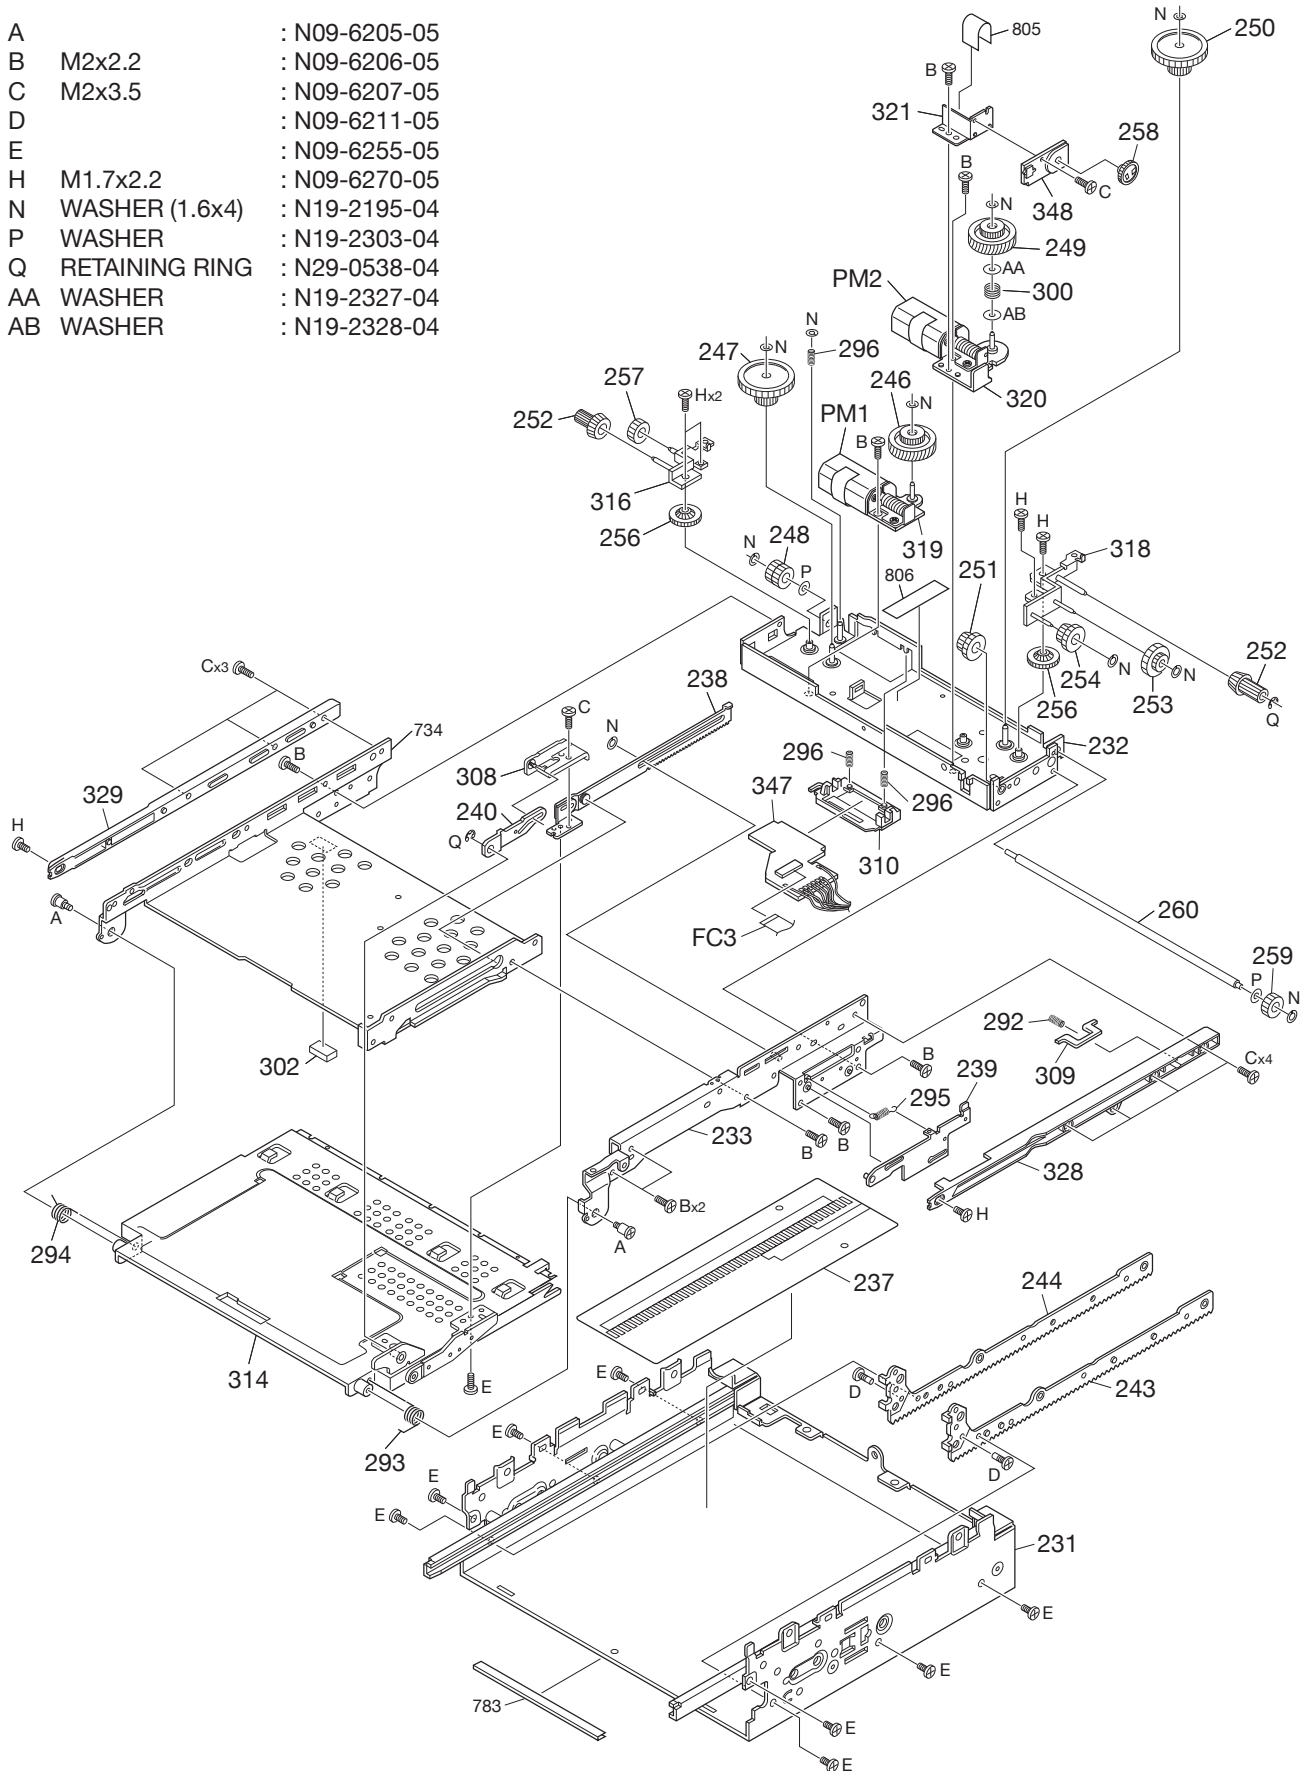

Parts with the exploded numbers larger than 700 are not supplied.

KVT-516/546DVD /636DVD/696

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KVT-516/546DVD/636DVD/696					
201	1D		A21-6612-02+	DRESSING PANEL	K1X1
201	1D		A21-6662-12+	DRESSING PANEL	KR1
202	1D		A21-6613-03+	DRESSING PANEL	K1X1
202	1D		A21-6663-03+	DRESSING PANEL	KR1
PA1	3C		A64-4904-22	PANEL ASSY	KR1
PA1	3C		A64-4943-22	PANEL ASSY	K1X1
RC1	1C		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	R1K1X1
-			B54-4747-00	INSTALLATION MANU (ENG.FRE.SPA)	
-			B54-4748-00	INSTALLATION MANUAL (POR.)	R1
-			B64-4547-00	INSTRUCTION MANUAL (ENG.)	
-			B64-4548-00	INSTRUCTION MANUAL (FRE.)	KK1
-			B64-4549-00	INSTRUCTION MANUAL (SPA.)	KR1K1
-			B64-4550-00	INSTRUCTION MANUAL (POR.)	R1
206	1C		B07-3159-02	ESCUTCHEON	K1X1
206	1C		B07-3314-02	ESCUTCHEON	KR1
207	1C		B43-1518-04	BADGE	
208	2C		B43-1535-04	BADGE	
210	1C		D10-7012-04	LEVER	
212	1C		E30-6886-05	CORD WITH PINPLUG	
213	3D		E30-6814-05	CONNECTING CORD ASSY	
215	3D		E30-6817-05	CORD WITH PLUG	
216	2D		E30-6818-05	CORD WITH PLUG	
DC1	1C		E30-6815-15	DC CORD	
FC1	2D		E39-0999-15	FLAT CABLE	
FC2	3C		E39-1000-15	FLAT CABLE	
218	1D		F07-2213-04	COVER	K1X1
218	1D	*	F07-2215-14	COVER	KR1
219	3C		F09-1206-04	SHEET	
220	3D		F09-2929-04	CAP	
221	3D		F09-2971-05	FAN	
224	1C		F29-0626-04	INSULATING COVER	
F3	1C		F05-1537-05	FUSE 15A	
-			H54-4750-03	ITEM CARTON CASE	K
-			H54-4751-03	ITEM CARTON CASE	R1
-			H54-4756-03	ITEM CARTON CASE	K1
-			H54-4761-03	ITEM CARTON CASE	X1
226	1D		J21-9716-03	MOUNTING HARDWARE ASSY	
227	3D	*	J32-1397-04	HEXAGON BOSS	
228	1C		N99-1758-15	SCREW SET	
F	3D		N09-6227-15	MACHINE SCREW (M2.6X 3.2NI)	
J	1D		N09-6302-04	MACHINE SCREW	
K	1D		N09-6303-04	MACHINE SCREW	
L	3C		N09-6355-05	MACHINE SCREW (M2.0X4)	
M	2D		N09-6491-05	MACHINE SCREW (M2.6X27)	
R	2D		N09-6745-05	MACHINE SCREW (M2.6X22)	
S	3D		N35-2605-47	BINDING HEAD MACHINE SCREW	
T	3C		N82-2005-48	BINDING HEAD TAPTITE SCREW	
V	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
W	3D		N86-2605-43	BINDING HEAD TAPTITE SCREW	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
VME1	2C		X92-6400-00	DVD MECHANISM ASSY (DVS-8220W)	
DISPLAY ASSY					
231	3F		A10-5164-12	CHASSIS CALKING ASSY	
232	2F		A10-5166-33	CHASSIS CALKING ASSY	
233	2F		A10-5168-13	CHASSIS CALKING ASSY	
235	1D		A46-1857-22+	REAR COVER	
PA2	2C		A64-5107-01	PANEL ASSY	K
PA2	2C		A64-5108-01	PANEL ASSY	R1
PA2	2C		A64-5112-01	PANEL ASSY	K1
PA2	2C		A64-5128-01	PANEL ASSY	X1
PME1	1D		A10-5171-51	CHASSIS ASSY (PANEL MECHA)	
236	1C		B07-3340-02	ESCUTCHEON	K
236	1C		B07-3341-02	ESCUTCHEON	R1
236	1C		B07-3345-02	ESCUTCHEON	K1
236	1C		B07-3346-02	ESCUTCHEON	X1
237	3F		B11-1453-04	REFLECTION SHEET	
LCD1	2C		B38-1203-05	LCD	
238	2F		D10-4836-13	ARM ASSY	
239	2F		D10-4837-34	LEVER ASSY	
240	2E		D10-4840-03	ARM	
243	3F		D13-2335-03	RACK (GEAR)	
244	3F		D13-2336-03	RACK (GEAR)	
246	1F		D13-2338-04	GEAR	
247	1F		D13-2339-04	GEAR	
248	2F		D13-2340-04	GEAR	
249	1F		D13-2341-04	GEAR	
250	1F		D13-2342-04	GEAR	
251	1F		D13-2343-04	GEAR	
252	1E		D13-2344-04	GEAR	
253	2F		D13-2345-04	GEAR	
254	2F		D13-2346-04	GEAR	
256	1E		D13-2349-04	GEAR	
257	1E		D13-2350-04	GEAR	
258	1F		D13-2351-04	GEAR	
259	2F		D13-2457-04	GEAR	
260	2F		D21-2446-13	EXTENSION SHAFT	
FC3	2F2D		E39-0665-05	FLAT CABLE	
274	2C	*	F09-3036-04	SHEET	
276	1D		F09-2951-24	SHEET	
277	2D		F09-2952-04	SHEET	
278	1D		F09-2953-14	SHEET	
279	1D		F09-2954-14	SHEET	
284	3C		F12-0966-04	SHIELDING SHEET	
290	3C		F20-2447-03	INSULATING SHEET	
292	2F		G01-3222-04	COMPRESSION SPRING	
293	3E		G01-3223-14	TORSION COIL SPRING	
294	3E		G01-3224-04	TORSION COIL SPRING	
295	2F		G01-3225-04	EXTENSION SPRING	
296	2F		G01-3226-04	COMPRESSION SPRING	
300	1F		G01-4653-04	COMPRESSION SPRING	
302	2E		G11-3587-04	CUSHION	

K : KVT-516 **K1** : KVT-696 (North America)

X1 : KVT-636DVD (Australia) **R1** : KVT-546DVD (Latin America)

△Indicates safety critical components.

PARTS LIST

DISPLAY ASSY

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
308	2E		J19-7004-03	HOLDER	
309	2F		J19-7005-04	STABILIZER	
310	2F		J19-7007-03	HOLDER	
314	3E		J22-0198-32	MOUNTING HARDWARE ASSY	
316	1E		J22-0200-14	MOUNTING HARDWARE ASSY	
318	1F		J22-0202-14	MOUNTING HARDWARE ASSY	
319	1F		J22-0203-23	MOUNTING HARDWARE ASSY	
320	1F		J22-0206-33	MOUNTING HARDWARE ASSY	
321	1F		J22-0212-04	MOUNTING HARDWARE	
325	3C		J39-0864-14	SPACER	
328	2F		J90-1092-03	GUIDE	
329	2E		J90-1093-03	GUIDE	
FPC1	2D		J86-0052-05	FPC(LEAD FREE)	
FPC2	2D	*	J86-0072-05	FPC(LEAD FREE)	
333	2C		K24-4866-13	PUSH KNOB (NAV)	
338	2C		K25-1925-12	PUSH KNOB (4)	
A	2E		N09-6205-05	STEPPED SCREW	
AA	1F		N19-2327-04	FLAT WASHER	
AB	1F		N19-2328-04	FLAT WASHER	
B	2F		N09-6206-05	MACHINE SCREW (M2X2.2)	
C	2E		N09-6207-05	MACHINE SCREW (M2X3.5)	
D	3F		N09-6211-05	STEPPED SCREW	
E	3F		N09-6225-05	MACHINE SCREW	
H	2E		N09-6270-05	MACHINE SCREW (M1.7X2.2)	
J	1D		N09-6302-04	MACHINE SCREW	
K	1D		N09-6303-04	MACHINE SCREW	
N	1F		N19-2195-04	FLAT WASHER (1.6X4X0.25 BLUE)	
P	2F		N19-2303-04	FLAT WASHER	
Q	2E		N29-0538-04	RETAINING RING (2)	
T	3C		N82-2005-48	BINDING HEAD TAPTITE SCREW	
U	1D		N82-2007-47	BINDING HEAD TAPTITE SCREW	
344	2C		S79-0871-05	SWITCH ASSY	
PM1	1F		T42-1097-04	MOTOR ASSY	
PM2	1F		T42-1099-04	MOTOR ASSY	
347	2F		W02-5121-05	ELECTRIC CIRCUIT MODULE	
348	1F		W02-5122-05	ELECTRIC CIRCUIT MODULE	
VIDEO CONTROL UNIT (X15-126x-xx)					
D551-559			B30-1566-05	LED (1608,RED)	
D560			B30-1779-05	LED (1608_SR)	
D561			B30-1566-05	LED (1608,RED)	
D562-570			B30-1780-05	LED (1608_PG)	
D596			B30-1780-05	LED (1608_PG)	
C1			CK73FB1C105K	CHIP C 1.0UF K	
C2			CK73HB1E103K	CHIP C 0.010UF K	
C3 ,4			CK73FB1C105K	CHIP C 1.0UF K	
C5 -7			CK73HB1E103K	CHIP C 0.010UF K	
C8			C90-5670-05	ELECTRO 2200UF 16WV	
C9			CK73FB1A335K	CHIP C 3.3UF K	
C10			CK73FB1C105K	CHIP C 1.0UF K	
C11			C90-5670-05	ELECTRO 2200UF 16WV	
C12			CK73GB1H104K	CHIP C 0.10UF K	
C13			CK73HB1E103K	CHIP C 0.010UF K	

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
C14			CK73FB1E474K	CHIP C 0.47UF K	
C15			CK73GB1H104K	CHIP C 0.10UF K	
C16			CK73EB1C106K	CHIP C 10UF K	
C18			CE32BQ1C221M	CHIP EL 220UF 16WV	
C19			CE32BF0J101M	CHIP EL 100UF 6.3WV	
C21			CK73FB0J475K	CHIP C 4.7UF K	
C22			CK73HB0J105K	CHIP C 1.0UF K	
C24			CK73GB1H104K	CHIP C 0.10UF K	
C25			CE32BF1C101M	CHIP EL 100UF 16WV	
C26			CK73FB1E474K	CHIP C 0.47UF K	
C27			CK73GB1A105K	CHIP C 1.0UF K	
C28			CE32BF1C101M	CHIP EL 100UF 16WV	
C29			CK73FB0J475K	CHIP C 4.7UF K	
C31			CK73FB0J106K	CHIP C 10UF K	
C32			CK73FB1E104K	CHIP C 0.10UF K	
C35			CC73HCH1H101J	CHIP C 100PF J	
C36			CK73HB1C473K	CHIP C 0.047UF K	
C37			CC73HCH1H221J	CHIP C 220PF J	
C38			CC73HCH1H101J	CHIP C 100PF J	
C39			CC73HCH1H470J	CHIP C 47PF J	
C40			CC73HCH1H221J	CHIP C 220PF J	
C41			CK73HB1C473K	CHIP C 0.047UF K	
C43 ,44			CK73HB1E103K	CHIP C 0.010UF K	
C45			CK73HB1E223K	CHIP C 0.022UF K	
C46			CK73HB1E103K	CHIP C 0.010UF K	
C48 -50			CK73HB1H102K	CHIP C 1000PF K	
C51 ,52			CK73HB1H222K	CHIP C 2200PF K	
C53			CK73FB0J106K	CHIP C 10UF K	
C54			CK73GB1H104K	CHIP C 0.10UF K	
C55			CK73HB1E103K	CHIP C 0.010UF K	
C56			CK73GB1C104K	CHIP C 0.10UF K	
C57			CK73FB0J106K	CHIP C 10UF K	
C58			CK73HB1E103K	CHIP C 0.010UF K	
C59 -61			CK73GB1H104K	CHIP C 0.10UF K	
C62			CK73HB1H102K	CHIP C 1000PF K	
C63			CK73GB1C104K	CHIP C 0.10UF K	
C64 ,65			CK73HB1H102K	CHIP C 1000PF K	
C66			CK73EB1E225K	CHIP C 2.2UF K	
C67			CK73HB1H102K	CHIP C 1000PF K	
C68 -70			CK73GB1H104K	CHIP C 0.10UF K	
C71			CK73HB1H102K	CHIP C 1000PF K	
C72 ,73			CK73HB1E103K	CHIP C 0.010UF K	
C74 -76			CK73HB1H102K	CHIP C 1000PF K	
C77			CE32AV1A121M	CHIP EL 120UF 10WV	
C78			CE32AV0J221M	CHIP EL 220UF 6.3WV	
C80			CK73HB1E103K	CHIP C 0.010UF K	
C81			CK73GB1H104K	CHIP C 0.10UF K	
C82 ,83			CE32BQ1E680M	CHIP EL 68UF 25WV	
C84			CK73GB1H104K	CHIP C 0.10UF K	
C85			CK73HB1E103K	CHIP C 0.010UF K	
C87 ,88			CK73HB1E103K	CHIP C 0.010UF K	
C89 ,90			CK73HB1A104K	CHIP C 0.10UF K	
C91			CC73HCH1H101J	CHIP C 100PF J	
C92			CK73GB1C104K	CHIP C 0.10UF K	
C93			CC73HCH1H221J	CHIP C 220PF J	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C94 ,95 C96 C97 C99 C100			CC73HCH1H470J CC73HCH1H221J CK73HB1C473K CK73HB1E103K CK73HB1E223K	CHIP C 47PF J CHIP C 220PF J CHIP C 0.047UF K CHIP C 0.010UF K CHIP C 0.022UF K	
C101 C103-105 C106 C107 C108			CK73HB1E153K CK73HB1H102K CK73FB0J106K CK73GB1H104K CK73HB1E103K	CHIP C 0.015UF K CHIP C 1000PF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C109 C110 C111 C112-114 C115			CK73GB1C104K CK73FB0J106K CK73HB1E103K CK73GB1H104K CK73HB1H102K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1000PF K	
C116 C117,118 C119 C120 C121-123			CK73GB1C104K CK73HB1H102K CK73EB1E225K CK73HB1H102K CK73GB1H104K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 2.2UF K CHIP C 1000PF K CHIP C 0.10UF K	
C124 C125,126 C127-129 C130,131 C133			CK73HB1H102K CK73HB1E103K CK73HB1H102K CE32AV0J221M CK73HB1E103K	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 1000PF K CHIP EL 220UF 6.3WV CHIP C 0.010UF K	
C134 C135,136 C137 C138 C139			CK73GB1H104K CE32BQ1E680M CK73GB1H104K CK73HB1E103K CK73EB1E225K	CHIP C 0.10UF K CHIP EL 68UF 25WV CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 2.2UF K	
C140,141 C142-144 C145 C146 C147			CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73EB1C106K CK73HB1A104K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.10UF K	
C148 C149 C150 C151 C152			CK73HB1E103K CK73EB1C106K CK73HB1A104K CK73HB1E103K CK73HB1A104K	CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C153 C154 C155 C156 C157			CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73HB1A104K CK73HB1E103K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C161 C162 C163 C164 C165,166			CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73GB1C104K CK73HB0J105K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1.0UF K	
C167 C168 C169 C170 C171			CK73HB1A104K CK73HB1H221K CK73HB1A104K CK73HB1H221K CK73HB1A104K	CHIP C 0.10UF K CHIP C 220PF K CHIP C 0.10UF K CHIP C 220PF K CHIP C 0.10UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C172 C173 C175 C178 C180			CK73HB1H221K CK73GB1H104K CK73EB1E106K CK73EB1E106K CK73EB1E106K	CHIP C 220PF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 10UF K CHIP C 10UF K	
C181 C182 C183 C184,185 C186-192			CK73EB1E225K CK73HB1A104K CK73HB1H102K CK73FB0J106K CK73HB1A104K	CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 1000PF K CHIP C 10UF K CHIP C 0.10UF K	
C193 C194 C195 C196 C197			CC73HCH1H180J CC73HCH1H220J CK73HB1E103K CK73HB1A104K CK73HB1E103K	CHIP C 18PF J CHIP C 22PF J CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C199-201 C202 C203 C229 C300			CK73HB1A104K CK73HB1E103K CK73HB1H102K CK73HB1E103K CK73FB1C106K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K CHIP C 10UF K	K1X1
C301 C302-304 C305 C306 C307			CE32BJ1C101M CK73EB1E225K CK73FB1C106K CK73EB1E225K CK73GB1H223K	CHIP EL 100UF 16WV CHIP C 2.2UF K CHIP C 10UF K CHIP C 2.2UF K CHIP C 0.022UF K	K1X1 K1X1 K1X1 K1X1 K1X1
C308 C309,310 C311 C312 C313,314			CK73HB1E103K CK73FB1C106K CK73HB1A104K CK73EB1C106K CK73HB1H102K	CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 1000PF K	K1X1 K1X1
C315 C315-318 C319-321 C322-330 C331-333			CK73EB1C106K CK73EB1C106K CK73HB1E103K CK73EB1C106K CK73GB1H103K	CHIP C 10UF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K	KR1 K1X1 K1X1 K1X1 K1X1
C351 C352 C353-358 C359 C360			CK73HB0J105K CE32CL1E330M CK73FB1C105K CK73HB1H102K CK73HB0J105K	CHIP C 1.0UF K CHIP EL 33UF 25WV CHIP C 1.0UF K CHIP C 1000PF K CHIP C 1.0UF K	
C361 C362 C363,364 C365 C366			CK73HB1A104K CK73EB1C106K CK73HB1H102K CK73EB1C106K CK73HB1A104K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 1000PF K CHIP C 10UF K CHIP C 0.10UF K	
C367 C368,369 C370 C371 C372			CK73EB1C106K CK73HB1H102K CK73EB1C106K CK73HB1A104K CK73EB1C106K	CHIP C 10UF K CHIP C 1000PF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K	
C373,374 C375 C376 C377 C378			CK73HB1H102K CK73EB1C106K CK73HB1E103K CK73GB1A474K CK73FB0J106K	CHIP C 1000PF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.47UF K CHIP C 10UF K	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C379			CK73GB1A474K	CHIP C 0.47UF K		C602,603			CK73HB1E103K	CHIP C 0.010UF K	
C380-383			CK73FB1C105K	CHIP C 1.0UF K		C604-606			CK73HB0J105K	CHIP C 1.0UF K	
C384			CK73FB1A475K	CHIP C 4.7UF K		C607			CK73FB0J106K	CHIP C 10UF K	
C385			CK73HB1H102K	CHIP C 1000PF K		C621-624			CK73HB1A104K	CHIP C 0.10UF K	
C386			CK73GB0J475K	CHIP C 4.7UF K		C625			CK73GB0J475K	CHIP C 4.7UF K	
C387			CK73FB0J106K	CHIP C 10UF K		C626-630			CK73HB1A104K	CHIP C 0.10UF K	
C388			CK73GB0J475K	CHIP C 4.7UF K		C631			CK73GB0J475K	CHIP C 4.7UF K	
C389			CK73HB1H102K	CHIP C 1000PF K		C632-638			CK73HB1A104K	CHIP C 0.10UF K	
C390-392			CK73HB1E103K	CHIP C 0.010UF K		C655,656			CK73FB0J106K	CHIP C 10UF K	
C397			CK73HB1A104K	CHIP C 0.10UF K		C657,658			CK73HB1A104K	CHIP C 0.10UF K	
C404			CK73EB1C106K	CHIP C 10UF K		C661,662			CK73FB0J106K	CHIP C 10UF K	
C405			CK73HB1E103K	CHIP C 0.010UF K		C663,664			CK73HB1H222K	CHIP C 2200PF K	
C406,407			CC73HCH1H070D	CHIP C 7.0PF D		C665,666			CK73HB1H221K	CHIP C 220PF K	
C409			CK73EB1C106K	CHIP C 10UF K		C667,668			CK73FB0J106K	CHIP C 10UF K	
C410			CC73HCH1H331J	CHIP C 330PF J		C672			CK73HB0J105K	CHIP C 1.0UF K	
C411-413			CK73GB1A105K	CHIP C 1.0UF K		C673			CK73FB0J106K	CHIP C 10UF K	
C414			CK73HB1A104K	CHIP C 0.10UF K		C701,702			CK73FB0J106K	CHIP C 10UF K	
C423			CK73GB1A474K	CHIP C 0.47UF K		C703			CE32BQJ560M	CHIP EL 56UF 6.3WV	
C424			CK73FB0J106K	CHIP C 10UF K		C704			CK73HB0J105K	CHIP C 1.0UF K	
C425			CK73GB1A474K	CHIP C 0.47UF K		C705-725			CK73HB1A104K	CHIP C 0.10UF K	
C428,429			CK73FB1A335K	CHIP C 3.3UF K		C726,727			CC73HCH1H100D	CHIP C 10PF D	
C431			CK73FB1A475K	CHIP C 4.7UF K		C728			CK73HB1A104K	CHIP C 0.10UF K	
C432-434			CK73HB0J105K	CHIP C 1.0UF K		C729,730			CC73HCH1H220J	CHIP C 22PF J	
C435,436			CK73GB1A105K	CHIP C 1.0UF K		C731			CK73FB0J106K	CHIP C 10UF K	
C437,438			CK73HB0J474K	CHIP C 0.47UF K		C732,733			CK73HB1A104K	CHIP C 0.10UF K	
C439,440			CK73GB1A105K	CHIP C 1.0UF K		C734,735			CK73HB1H102K	CHIP C 1000PF K	
C441			CK73HB0J105K	CHIP C 1.0UF K		C741			CK73GB0J475K	CHIP C 4.7UF K	
C443			CK73HB1E103K	CHIP C 0.010UF K		C742-748			CK73HB1A104K	CHIP C 0.10UF K	
C446			CK73HB1E103K	CHIP C 0.010UF K		C751			CK73GB0J475K	CHIP C 4.7UF K	
C447			CK73FB0J106K	CHIP C 10UF K		C752-758			CK73HB1A104K	CHIP C 0.10UF K	
C448,449			CK73FB1C105K	CHIP C 1.0UF K		C761,762			CK73FB0J106K	CHIP C 10UF K	
C454,455			CC73HCH1H070D	CHIP C 7.0PF D		C763,764			CK73HB1A104K	CHIP C 0.10UF K	
C456			CE32CL1C470M	CHIP EL 47UF 16WV		C801-804			CK73GB1A105K	CHIP C 1.0UF K	
C457			CE32BQJ331M	CHIP EL 330UF 6.3WV		C807			CK73HB0J105K	CHIP C 1.0UF K	
C459,460			CK73HB1A104K	CHIP C 0.10UF K		C808,809			CK73HB1A104K	CHIP C 0.10UF K	
C462			CK73HB0J105K	CHIP C 1.0UF K		C811			CK73HB0J105K	CHIP C 1.0UF K	
C463			CC73HCH1H101J	CHIP C 100PF J		C812-825			CK73HB1A104K	CHIP C 0.10UF K	
C466			CC73HCH1H101J	CHIP C 100PF J		C826			CK73HB0J105K	CHIP C 1.0UF K	
C467			CK73HB1A104K	CHIP C 0.10UF K		C827,828			CK73HB1A104K	CHIP C 0.10UF K	
C468			CK73FB0J106K	CHIP C 10UF K		C829			CK73HB0J105K	CHIP C 1.0UF K	
C469			CK73GB1C225K	CHIP C 2.2UF K		C830			CK73HB1A104K	CHIP C 0.10UF K	
C470			CK73HB0J105K	CHIP C 1.0UF K		C833			CK73HB0J105K	CHIP C 1.0UF K	
C471			CK73GB1C225K	CHIP C 2.2UF K		C834,835			CC73HCH1H080D	CHIP C 8.0PF D	
C472-474			CK73HB0J105K	CHIP C 1.0UF K		C836,837			CK73FB0J106K	CHIP C 10UF K	
C475			CK73HB1A104K	CHIP C 0.10UF K		C840			CK73HB1A104K	CHIP C 0.10UF K	
C476			CK73FB0J106K	CHIP C 10UF K		C841			CE32BQ1C221M	CHIP EL 220UF 16WV	
C477,478			CK73EB1A475K	CHIP C 4.7UF K		C842			CC73HCH1H101J	CHIP C 100PF J	
C479			CK73HB0J105K	CHIP C 1.0UF K		C843			CK73FB0J106K	CHIP C 10UF K	
C480			CK73HB1A104K	CHIP C 0.10UF K		C844			CK73HB1A104K	CHIP C 0.10UF K	
C481			CK73HB0J105K	CHIP C 1.0UF K		C862,863			CK73GB1C104K	CHIP C 0.10UF K	
C482			CK73EB1C106K	CHIP C 10UF K		C950-953			CC73HCH1H101J	CHIP C 100PF J	
C494-499			CK73HB0J105K	CHIP C 1.0UF K		CN1			E41-2248-05	PIN ASSY	
C500			CK73HB1E103K	CHIP C 0.010UF K		CN2			E41-2735-05	PIN ASSY	
C551			CK73FB1A225K	CHIP C 2.2UF K		CN3			E41-2608-05	FLAT CABLE CONNECTOR	
C601			CK73HB1A104K	CHIP C 0.10UF K							

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
CN4 CN351 CN352 CN353 CN355			E41-2963-15 E41-2962-05 E41-2806-05 E41-2961-05 E41-2958-05	FLAT CABLE CONNECTOR PIN ASSY PIN ASSY PIN ASSY PIN ASSY	
CN356 CN357 CN551 CN701 J1			E40-9106-05 E40-9093-05 E41-2982-05 E41-2114-15 E58-1043-05	SOCKET FOR PIN ASSY SOCKET FOR PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR RECTANGULAR RECEPTACLE	
W351 W801	3D 3D		E30-6775-05 E30-6778-05	CORD WITH PLUG (ANT) CORD WITH CONNECTOR (USB L)	
F1 F2			F53-0306-05 F53-0297-05	FUSE (UL,CSA) 5A FUSE (UL,CSA) 1.6A	
L1 L2 ,3 L4 ,5 L6 ,7 L8 ,9			L33-2369-05 L92-0373-05 L33-2455-05 L33-2369-05 L33-2455-05	CHOKE COIL CHIP FERRITE CHOKE COIL CHOKE COIL CHOKE COIL	
L10 ,11 L12 ,13 L300 L353 L355,356			L33-2369-05 L92-0319-05 L41-2205-33 L41-4795-33 L41-4795-33	CHOKE COIL CHIP FERRITE SMALL FIXED INDUCTOR (22U) SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U)	K1X1
L357 L361 L451 L601-603 L701-706			L92-0319-05 L92-0319-05 L41-1005-33 L92-0373-05 L92-0373-05	CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR (10U) CHIP FERRITE CHIP FERRITE	
L731 L741 L751 L801 L803			L92-0373-05 L92-0373-05 L92-0373-05 L92-0642-05 L92-0642-05	CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE	
L804,805 L806 L811 X1 X2			L92-0641-05 L92-0651-05 L92-0373-05 L77-2921-15 L78-1226-15	FERRITE CORE CHIP FERRITE CHIP FERRITE CRYSTAL RESONATOR (32.768KHZ) RESONATOR (11.059MHZ)	
X351 X701 X808			L77-3811-05 L77-2866-05 L77-2943-05	CRYSTAL RESONATOR (4.332MHZ) CRYSTAL RESONATOR (27MHZ) CRYSTAL RESONATOR (24.000MHZ)	
V	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
CP701-708 CP709-712 CP714,715 CP721-724 CP733			RK74HB1J220J RK74HB1J100J RK74HB1J220J RK74HB1J330J RK74HB1J100J	CHIP-COM 22 J 1/16W CHIP-COM 10 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 10 J 1/16W	
CP751,752 CP753,754 R1 R2 R3			RK74HB1J103J RK74HB1J220J RK73HB1J103J RK73EB2E272J RK73HB1J102J	CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP R 10K J 1/16W CHIP R 2.7K J 1/4W CHIP R 1.0K J 1/16W	

Ref. No.	Ad	New	Parts No.	Description	Destination
R4 R5 R6 R7 R8			RK73HB1J473J RK73EB2E103J RK73EB2E102J RK73HB1J104J RK73EB2E272J	CHIP R 47K J 1/16W CHIP R 10K J 1/4W CHIP R 1.0K J 1/4W CHIP R 100K J 1/16W CHIP R 2.7K J 1/4W	
R9 R10 R11 R12 ,13 R15			RK73HB1J102J RK73FB2B472J RK73HB1J223J R92-5226-05 RK73FB2B472J	CHIP R 1.0K J 1/16W CHIP R 4.7K J 1/8W CHIP R 22K J 1/16W METAL G-R 1.0K J 1/2W CHIP R 4.7K J 1/8W	
R16 R17 ,18 R19 ,20 R25 R26			RK73HB1J222J RK73HB1J103J R92-5226-05 RK73HB1J104J RK73HB1J473J	CHIP R 2.2K J 1/16W CHIP R 10K J 1/16W METAL G-R 1.0K J 1/2W CHIP R 100K J 1/16W CHIP R 47K J 1/16W	
R27 R28 ,29 R30 R31 R32			RK73EB2E103J RK73EB2E622J RK73GB2A912J RK73HB1J153J RK73HB1J473J	CHIP R 10K J 1/4W CHIP R 6.2K J 1/4W CHIP R 9.1K J 1/10W CHIP R 15K J 1/16W CHIP R 47K J 1/16W	
R33 R34 R35 R36 R39			RK73GH2A104D RK73GH2A333D RK73GH2A513D RK73GH2A684D RK73GH2A683D	CHIP R 100K D 1/10W CHIP R 33K D 1/10W CHIP R 51K D 1/10W CHIP R 680K D 1/10W CHIP R 68K D 1/10W	
R40 R41 -45 R46 R47 R48			RK73GH2A913D RK73HB1J224J RK73HB1J304J RK73HB1J303J RK73HB1J224J	CHIP R 91K D 1/10W CHIP R 220K J 1/16W CHIP R 300K J 1/16W CHIP R 30K J 1/16W CHIP R 220K J 1/16W	
R49 R50 R51 R52 R53			RK73GB2A202J RK73HB1J101J RK73HB1J224J RK73GB2A154J RK73GB2A164J	CHIP R 2.0K J 1/10W CHIP R 100 J 1/16W CHIP R 220K J 1/16W CHIP R 150K J 1/10W CHIP R 160K J 1/10W	
R54 R55 R56 R57 R59			RK73GH2A104D RK73GH2A154D RK73GH2A433D RK73GB2A183J RK73HB1J472J	CHIP R 100K D 1/10W CHIP R 150K D 1/10W CHIP R 43K D 1/10W CHIP R 18K J 1/10W CHIP R 4.7K J 1/16W	
R60 R67 R68 R69 R70			RK73HB1J561J RK73EB2E000J RK73GB2A823J RK73HB1J103J RK73HB1J224J	CHIP R 560 J 1/16W CHIP R 0.0 J 1/4W CHIP R 82K J 1/10W CHIP R 10K J 1/16W CHIP R 220K J 1/16W	
R71 R72 R73 R74 R75			RK73HB1J333J RK73HB1J224J RK73FB2B221J RK73GH2A273D RK73GH2A472D	CHIP R 33K J 1/16W CHIP R 220K J 1/16W CHIP R 220 J 1/8W CHIP R 27K D 1/10W CHIP R 4.7K D 1/10W	
R76 R77 R78 R79 R80			RK73GH2A333D RK73GH2A393D RK73GH2A332D RK73HB1J272J RK73HB1J104J	CHIP R 33K D 1/10W CHIP R 39K D 1/10W CHIP R 3.3K D 1/10W CHIP R 2.7K J 1/16W CHIP R 100K J 1/16W	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R81			RK73HB1J473J	CHIP R 47K J 1/16W	
R89			RK73GH2A681D	CHIP R 680 D 1/10W	
R90			RK73GH2A622D	CHIP R 6.2K D 1/10W	
R91			RK73HB1J333J	CHIP R 33K J 1/16W	
R92			RK73GB2A683J	CHIP R 68K J 1/10W	
R93			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R94			RK73HB1J103J	CHIP R 10K J 1/16W	
R95			RK73GH2A113D	CHIP R 11K D 1/10W	
R98 ,99			RK73GH2A333D	CHIP R 33K D 1/10W	
R100,101			RK73GH2A561D	CHIP R 560 D 1/10W	
R105,106			RK73GH2A561D	CHIP R 560 D 1/10W	
R108			RK73HB1J220J	CHIP R 22 J 1/16W	
R111			RK73HB1J220J	CHIP R 22 J 1/16W	
R112-116			RK73EB2E100J	CHIP R 10 J 1/4W	
R117,118			R92-5160-05	CHIP R 0.047 J 1/4W	
R119			R92-5159-05	CHIP R 0.033 J 1/4W	
R121			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R123			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R124			RK73GH2A681D	CHIP R 680 D 1/10W	
R125			RK73GH2A561D	CHIP R 560 D 1/10W	
R126			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R127,128			RK73GB2A683J	CHIP R 68K J 1/10W	
R129			RK73GH2A103D	CHIP R 10K D 1/10W	
R130			RK73HB1J103J	CHIP R 10K J 1/16W	
R133,134			RK73GH2A333D	CHIP R 33K D 1/10W	
R141			RK73HB1J220J	CHIP R 22 J 1/16W	
R144			RK73HB1J220J	CHIP R 22 J 1/16W	
R145-149			RK73EB2E100J	CHIP R 10 J 1/4W	
R150			R92-5158-05	CHIP R 0.022 J 1/4W	
R153			R92-5158-05	CHIP R 0.022 J 1/4W	
R154-157			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R159-168			RK73HB1J101J	CHIP R 100 J 1/16W	
R170-172			RK73HB1J101J	CHIP R 100 J 1/16W	
R174			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R175,176			RK73HB1J473J	CHIP R 47K J 1/16W	
R177			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R178,179			RK73HB1J473J	CHIP R 47K J 1/16W	
R180			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R181,182			RK73HB1J473J	CHIP R 47K J 1/16W	
R183,184			RK73EB2E101J	CHIP R 100 J 1/4W	
R185			RK73HB1J101J	CHIP R 100 J 1/16W	
R186			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R187,188			RK73EB2E101J	CHIP R 100 J 1/4W	
R193			RK73HB1J473J	CHIP R 47K J 1/16W	
R196			RK73HB1J473J	CHIP R 47K J 1/16W	
R198			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R201			RK73HB1J104J	CHIP R 100K J 1/16W	
R202-205			RK73HB1J103J	CHIP R 10K J 1/16W	KK1
R202-206			RK73HB1J103J	CHIP R 10K J 1/16W	R1X1
R207			RK73GB2A103J	CHIP R 10K J 1/10W	KK1
R207			RK73GB2A303J	CHIP R 30K J 1/10W	X1
R208			RK73HB1J473J	CHIP R 47K J 1/16W	
R210,211			RK73HB1J123J	CHIP R 12K J 1/16W	
R212			RK73HB1J473J	CHIP R 47K J 1/16W	
R213-215			RK73HB1J101J	CHIP R 100 J 1/16W	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R216			RK73HB1J103J	CHIP R 10K J 1/16W	
R217-220			RK73HB1J101J	CHIP R 100 J 1/16W	
R221,222			RK73HB1J473J	CHIP R 47K J 1/16W	
R223			RK73HB1J104J	CHIP R 100K J 1/16W	
R224			RK73HB1J103J	CHIP R 10K J 1/16W	
R225			RK73HB1J473J	CHIP R 47K J 1/16W	
R227			RK73HB1J473J	CHIP R 47K J 1/16W	
R228,229			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R230,231			RK73HB1J101J	CHIP R 100 J 1/16W	
R232			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R233			RK73HB1J223J	CHIP R 22K J 1/16W	
R234			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R235-238			RK73HB1J101J	CHIP R 100 J 1/16W	
R239			RK73HB1J100J	CHIP R 10 J 1/16W	
R240			RK73HB1J101J	CHIP R 100 J 1/16W	
R241			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R242			RK73HB1J101J	CHIP R 100 J 1/16W	
R243,244			RK73HB1J471J	CHIP R 470 J 1/16W	
R245-248			RK73HB1J103J	CHIP R 10K J 1/16W	
R249-253			RK73HB1J473J	CHIP R 47K J 1/16W	
R254-256			RK73HB1J101J	CHIP R 100 J 1/16W	
R257			RK73HB1J473J	CHIP R 47K J 1/16W	
R258			RK73HB1J101J	CHIP R 100 J 1/16W	
R260,261			RK73HB1J101J	CHIP R 100 J 1/16W	
R263			RK73HB1J153J	CHIP R 15K J 1/16W	
R264			RK73HB1J473J	CHIP R 47K J 1/16W	
R265			RK73HB1J101J	CHIP R 100 J 1/16W	
R266			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R267,268			RK73HB1J101J	CHIP R 100 J 1/16W	
R269			RK73HB1J473J	CHIP R 47K J 1/16W	
R270,271			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R272-276			RK73HB1J473J	CHIP R 47K J 1/16W	
R277			RK73HB1J104J	CHIP R 100K J 1/16W	
R278-280			RK73HB1J473J	CHIP R 47K J 1/16W	
R281			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R282			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R283			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R284			RK73HB1J104J	CHIP R 100K J 1/16W	
R285			RK73HB1J103J	CHIP R 10K J 1/16W	K1X1
R286			RK73HB1J103J	CHIP R 10K J 1/16W	KR1
R288			RK73HB1J103J	CHIP R 10K J 1/16W	
R300			RK73FB2B152J	CHIP R 1.5K J 1/8W	K1X1
R301			RK73HB1J752J	CHIP R 7.5K J 1/16W	K1X1
R302			RK73HB1J750J	CHIP R 75 J 1/16W	K1X1
R303			RK73HB1J272J	CHIP R 2.7K J 1/16W	K1X1
R304			RK73HB1J470J	CHIP R 47 J 1/16W	K1X1
R305			RK73HB1J752J	CHIP R 7.5K J 1/16W	K1X1
R306			RK73HB1J274J	CHIP R 270K J 1/16W	K1X1
R307			RK73HB1J563J	CHIP R 56K J 1/16W	K1X1
R308			RK73HB1J470J	CHIP R 47 J 1/16W	K1X1
R309			RK73HB1J103J	CHIP R 10K J 1/16W	K1X1
R310,311			RK73HB1J913J	CHIP R 91K J 1/16W	K1X1
R312,313			RK73HB1J223J	CHIP R 22K J 1/16W	
R314-316			RK73FB2B153J	CHIP R 15K J 1/8W	K1X1
R317-319			RK73FB2B123J	CHIP R 12K J 1/8W	K1X1

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
R320			RK73FB2B820J	CHIP R 82 J 1/8W	K1X1
R323-328			RK73HB1J104J	CHIP R 100K J 1/16W	K1X1
R329			RK73FB2B820J	CHIP R 82 J 1/8W	K1X1
R332-334			RK73FB2B153J	CHIP R 15K J 1/8W	K1X1
R335-337			RK73FB2B123J	CHIP R 12K J 1/8W	K1X1
R338,339			RK73HB1J471J	CHIP R 470 J 1/16W	
R351			RK73HB1J333J	CHIP R 33K J 1/16W	
R352			RK73HB1J270J	CHIP R 27 J 1/16W	
R353			RK73GB2A103J	CHIP R 10K J 1/10W	
R354			RK73HB1J471J	CHIP R 470 J 1/16W	
R355			RK73HB1J223J	CHIP R 22K J 1/16W	
R356			RK73GB2A221J	CHIP R 220 J 1/10W	
R357			RK73GB2A183J	CHIP R 18K J 1/10W	
R358			RK73FB2B820J	CHIP R 82 J 1/8W	K1X1
R359			RK73HB1J471J	CHIP R 470 J 1/16W	
R360			RK73HB1J223J	CHIP R 22K J 1/16W	
R361			RK73HB1J471J	CHIP R 470 J 1/16W	
R363			RK73HB1J223J	CHIP R 22K J 1/16W	
R364			RK73HB1J473J	CHIP R 47K J 1/16W	
R365			RK73FB2B820J	CHIP R 82 J 1/8W	K1X1
R366			RK73HB1J471J	CHIP R 470 J 1/16W	
R367			RK73FB2B820J	CHIP R 82 J 1/8W	K1X1
R368			RK73HB1J471J	CHIP R 470 J 1/16W	
R369			RK73HB1J223J	CHIP R 22K J 1/16W	
R370			RK73HB1J473J	CHIP R 47K J 1/16W	
R372			RK73HB1J223J	CHIP R 22K J 1/16W	
R374			RK73FB2B820J	CHIP R 82 J 1/8W	K1X1
R375			RK73HB1J471J	CHIP R 470 J 1/16W	
R376			RK73FB2B101J	CHIP R 100 J 1/8W	
R377			RK73HB1J471J	CHIP R 470 J 1/16W	
R378			RK73HB1J223J	CHIP R 22K J 1/16W	
R381			RK73HB1J223J	CHIP R 22K J 1/16W	
R383			RK73FB2B101J	CHIP R 100 J 1/8W	
R384			RK73HB1J471J	CHIP R 470 J 1/16W	
R385			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R386			RK73EB2E100J	CHIP R 10 J 1/4W	
R387-389			RK73FB2B101J	CHIP R 100 J 1/8W	KR1
R390			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R391-393			RK73FB2B101J	CHIP R 100 J 1/8W	KR1
R394			RK73EB2E100J	CHIP R 10 J 1/4W	
R400			RK73EB2E101J	CHIP R 100 J 1/4W	
R401			RK73HB1J100J	CHIP R 10 J 1/16W	
R402			RK73HB1J750J	CHIP R 75 J 1/16W	
R403			RK73EB2E750J	CHIP R 75 J 1/4W	
R404			RK73EB2E100J	CHIP R 10 J 1/4W	
R405			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R406			RK73EB2E100J	CHIP R 10 J 1/4W	
R407			RK73EB2E101J	CHIP R 100 J 1/4W	
R408			RK73HB1J100J	CHIP R 10 J 1/16W	
R409			RK73HB1J560J	CHIP R 56 J 1/16W	
R410			RK73EB2E101J	CHIP R 100 J 1/4W	
R411			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R412			RK73HB1J223J	CHIP R 22K J 1/16W	
R413			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R416,417			RK73HB1J222J	CHIP R 2.2K J 1/16W	

Ref. No.	Ad	New	Parts No.	Description	Destination
R418			RK73EB2E100J	CHIP R 10 J 1/4W	
R419			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R420			RK73EB2E100J	CHIP R 10 J 1/4W	
R421			RK73EB2E101J	CHIP R 100 J 1/4W	
R422			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R423			RK73EB2E101J	CHIP R 100 J 1/4W	
R424			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R425-427			RK73HB1J101J	CHIP R 100 J 1/16W	
R452			RK73EB2E100J	CHIP R 10 J 1/4W	
R453			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R454			RK73EB2E100J	CHIP R 10 J 1/4W	
R455			RK73HB1J100J	CHIP R 10 J 1/16W	
R456			RK73EB2E101J	CHIP R 100 J 1/4W	
R457			RK73HB1J100J	CHIP R 10 J 1/16W	
R458			RK73EB2E101J	CHIP R 100 J 1/4W	
R459			RK73HB1J100J	CHIP R 10 J 1/16W	
R460			RK73EB2E101J	CHIP R 100 J 1/4W	
R461			RK73HB1J100J	CHIP R 10 J 1/16W	
R462			RK73EB2E101J	CHIP R 100 J 1/4W	
R463-466			RK73HB1J750J	CHIP R 75 J 1/16W	
R467			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R468			RK73EB2E101J	CHIP R 100 J 1/4W	
R469			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R470			RK73HB1J104J	CHIP R 100K J 1/16W	
R471			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R472-475			RK73HB1J103J	CHIP R 10K J 1/16W	
R476			RK73HB1J101J	CHIP R 100 J 1/16W	
R477			RK73HB1J103J	CHIP R 10K J 1/16W	
R478			RK73HB1J101J	CHIP R 100 J 1/16W	
R479			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R480			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R481,482			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R483			RK73GB2A103J	CHIP R 10K J 1/10W	
R486,487			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R488,489			RK73HB1J100J	CHIP R 10 J 1/16W	
R492			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R493,494			RK73GH2A271D	CHIP R 270 D 1/10W	
R495			RK73GH2A123D	CHIP R 12K D 1/10W	
R510,511			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R512,513			RK73HB1J101J	CHIP R 100 J 1/16W	
R515			RK73HB1J101J	CHIP R 100 J 1/16W	
R516-519			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R537			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R543-548			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R551			RK73GB2A101J	CHIP R 100 J 1/10W	
R554			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R556			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R559			RK73EB2E101J	CHIP R 100 J 1/4W	
R561			RK73GB2A561J	CHIP R 560 J 1/10W	
R562			RK73GB2A221J	CHIP R 220 J 1/10W	
R563			RK73GB2A561J	CHIP R 560 J 1/10W	
R564			RK73GB2A221J	CHIP R 220 J 1/10W	
R565			RK73GB2A561J	CHIP R 560 J 1/10W	
R566			RK73GB2A221J	CHIP R 220 J 1/10W	
R567			RK73GB2A561J	CHIP R 560 J 1/10W	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R568			RK73GB2A221J	CHIP R 220 J 1/10W	
R569			RK73GB2A561J	CHIP R 560 J 1/10W	
R570			RK73GB2A221J	CHIP R 220 J 1/10W	
R571			RK73GB2A561J	CHIP R 560 J 1/10W	
R572			RK73GB2A221J	CHIP R 220 J 1/10W	
R573			RK73GB2A561J	CHIP R 560 J 1/10W	
R574			RK73GB2A221J	CHIP R 220 J 1/10W	
R575			RK73GB2A561J	CHIP R 560 J 1/10W	
R576			RK73GB2A221J	CHIP R 220 J 1/10W	
R577			RK73GB2A561J	CHIP R 560 J 1/10W	
R578			RK73GB2A221J	CHIP R 220 J 1/10W	
R579			RK73GB2A220J	CHIP R 22 J 1/10W	
R580			RK73GB2A181J	CHIP R 180 J 1/10W	
R581			RK73GB2A391J	CHIP R 390 J 1/10W	
R585			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R587			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R588			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R589			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R590			RK73GB2A163J	CHIP R 16K J 1/10W	
R591			RK73GB2A513J	CHIP R 51K J 1/10W	
R612			RK73GH2A750D	CHIP R 75 D 1/10W	
R613			RK73GH2A301D	CHIP R 300 D 1/10W	
R614			RK73GH2A330D	CHIP R 33 D 1/10W	
R620-625			RK73GH2A750D	CHIP R 75 D 1/10W	
R626			RK73GH2A360D	CHIP R 36 D 1/10W	
R627			RK73GH2A151D	CHIP R 150 D 1/10W	
R651-654			RK73HB1J220J	CHIP R 22 J 1/16W	
R661,662			RK73HB1J203J	CHIP R 20K J 1/16W	
R663,664			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R665,666			RK73HB1J153J	CHIP R 15K J 1/16W	
R667,668			RK73HB1J561J	CHIP R 560 J 1/16W	
R669,670			RK73HB1J473J	CHIP R 47K J 1/16W	
R673,674			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R676			RK73HB1J104J	CHIP R 100K J 1/16W	
R677			RK73HB1J394J	CHIP R 390K J 1/16W	
R681			RK73HB1J103J	CHIP R 10K J 1/16W	
R683			RK73HB1J220J	CHIP R 22 J 1/16W	
R684,685			RK73HB1J331J	CHIP R 330 J 1/16W	
R686			RK73HB1J220J	CHIP R 22 J 1/16W	
R687			RK73HB1J103J	CHIP R 10K J 1/16W	
R696			RK73HB1J220J	CHIP R 22 J 1/16W	
R703			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R704			RK73HB1J101J	CHIP R 100 J 1/16W	
R709-712			RK73HB1J220J	CHIP R 22 J 1/16W	
R713,714			RK73HB1J6R8J	CHIP R 6.8 J 1/16W	
R732-738			RK73HB1J220J	CHIP R 22 J 1/16W	
R748-753			RK73HB1J220J	CHIP R 22 J 1/16W	
R758			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R759			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R763,764			RK73HB1J6R8J	CHIP R 6.8 J 1/16W	
R769			RK73GH2A153D	CHIP R 15K D 1/10W	
R770			RK73GH2A123D	CHIP R 12K D 1/10W	
R771			RK73HB1J103J	CHIP R 10K J 1/16W	
R774,775			RK73HB1J103J	CHIP R 10K J 1/16W	
R777			RK73HB1J102J	CHIP R 1.0K J 1/16W	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R795-797			RK73HB1J103J	CHIP R 10K J 1/16W	
R805,806			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R812			RK73HB1J103J	CHIP R 10K J 1/16W	
R814			RK73HB1J103J	CHIP R 10K J 1/16W	
R815			RK73GH2A622D	CHIP R 6.2K D 1/10W	
R816,817			RK73HB1J220J	CHIP R 22 J 1/16W	
R823			RK73HB1J103J	CHIP R 10K J 1/16W	
R825			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R826			RK73HB1J103J	CHIP R 10K J 1/16W	
R846			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R849			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R851			RK73HB1J473J	CHIP R 47K J 1/16W	
R854-856			RK73HB1J103J	CHIP R 10K J 1/16W	
R857,858			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R859-861			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R863-880			RK73HB1J103J	CHIP R 10K J 1/16W	
R881			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R883			RK73HB1J103J	CHIP R 10K J 1/16W	
R884,885			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R886-889			RK73HB1J473J	CHIP R 47K J 1/16W	
R890			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R892			RK73HB1J103J	CHIP R 10K J 1/16W	
R893			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R895,896			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R898			RK73HB1J103J	CHIP R 10K J 1/16W	
R899			RK73HB1J331J	CHIP R 330 J 1/16W	
R900			RK73HB1J220J	CHIP R 22 J 1/16W	
R950-953			RK73HB1J820J	CHIP R 82 J 1/16W	
R955			RK73HB1J100J	CHIP R 10 J 1/16W	
R956-958			RK73GB2A100J	CHIP R 10 J 1/10W	
R959			RK73HB1J100J	CHIP R 10 J 1/16W	
R999			RK73HB1J102J	CHIP R 1.0K J 1/16W	
S551-560			S70-0901-05	TACT SWITCH	
D1 ,2			1SS355	DIODE	
D3			UDZW6.2(B)	ZENER DIODE	
D4 ,5			1SS355	DIODE	
D6 -9			1SR154-400	DIODE	
D11			UDZW4.7(B)	ZENER DIODE	
D12			1SS355	DIODE	
D13			UDZW6.2(B)	ZENER DIODE	
D14			EP05Q04	DIODE	
D15 -18			1SS357-F	DIODE	
D19 -23			AVRM16120M6AB	VARIATOR	
D24 ,25			AVRM16180M6AB	VARIATOR	
D27 -31			AVRM16120M6AB	VARIATOR	
D32			DA204U	DIODE	
D33 -36			AVRM16120M6AB	VARIATOR	
D37			AVRM16180M6AB	VARIATOR	
D39			AVRM16180M6AB	VARIATOR	
D40 ,41			AVRM16120M6AB	VARIATOR	
D42			1SS355	DIODE	
D300			UDZW11(B)	ZENER DIODE	K1X1
D301			UDZW5.6(B)	ZENER DIODE	K1X1

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
D302,303 D304,305 D351 D352 D353,354			AVRM16180M6AB DAP202U DAP202U 1SS355 AVRM16180M6AB	VARISTOR DIODE DIODE DIODE VARISTOR		IC652 IC701 IC702 IC703,704 IC705			NJM4565V-ZB MS8312A-IQG S29GL64A9I5C5 V543128164CI6 SI-3010KDP	ANALOGUE IC MICROPROCESSOR IC ROM IC DRAM IC ANALOGUE IC	
D355,356 D357,358 D359 D361,362 D363,364			DAP202U AVRM16180M6AB DAP202U AVRM16180M6AB DAP202U	DIODE VARISTOR DIODE VARISTOR DIODE		IC801 IC804 IC805 IC806 IC807			S1R72C05F15 MIC2005-08YM6 XC6219B332PR XC6219B182PR 74AHC573PW	MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC MOS-IC	
D365 D366 D367 D368 D369-376			UDZW6.8(B) UDZW6.2(B) UDZW6.8(B) DAP202U AVRM16270MAAB	ZENER DIODE ZENER DIODE ZENER DIODE DIODE VARISTOR		IC852 Q1 Q2 Q3 Q4			MFI341S2162 DTC124EE DTA143ZE DTC124EE 2SB1188(R)	MICROPROCESSOR IC DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
D378 D379 D380,381 D382,383 D396			UDZW6.8(B) UDZW6.2(B) AVRM16120M6AB UDZW6.2(B) UDZW6.8(B)	ZENER DIODE ZENER DIODE VARISTOR ZENER DIODE ZENER DIODE		Q5 Q6 Q7 Q8 Q9			2SA1774 DTA114EE DTC143ZE 2SB1188(R) 2SC4617	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
D397-400 D401 D402,403 D404,405 D406-408			AVRM16270MAAB UDZW6.8(B) UDZW6.2(B) 1SS355 DAP202U	VARISTOR ZENER DIODE ZENER DIODE DIODE DIODE		Q11 -13 Q14 Q15 Q16 Q17			2SC4617 2SA1774 DTC143ZE 2SA1774 2SC4617	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
D409 D413,414 D415 D589-591 D592			UDZW6.8(B) UDZW6.2(B) 1SS355 AVRM16180M6AB AVRM16270MAAB	ZENER DIODE ZENER DIODE DIODE VARISTOR VARISTOR		Q18 Q19 Q20 Q21 ,22 Q23			KRA311-P DTA114EE DTC143ZE 2SC4617 2SB1184	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
D801,802 IC1 IC2 IC3 ,4 IC5 ,6			AVRL1613R3FTA XC6201P502PR M5237ML-CF0J LTC3728LEGN LB1836M-TLM-E	VARISTOR ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC		Q24 Q25 Q26 Q27 Q28			2SC4617 2SA1774 2SC4617 2SA1576A 2SC4617	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
IC7 IC8 IC9 IC10 IC10			R1114N331B-TR 74AHC1G08GW 30878MJBA50GP W05-1387-00 W05-1390-00	ANALOGUE IC (3.3V LF) MOS-IC MICROCONTROLLER IC ROM IC ROM IC	KK1 R1X1	Q29 Q30 Q35 Q36 ,37 Q38			DTC143ZE 2SB1689 DTC114YE 2SA1774 TPC8110-F	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR FET	
IC12 IC13 IC300 IC301-303 IC351			S-80835CNNB-G 74AHC1G32GW ICL7660SIBAZ NJM4565V-ZB E-TDA7850A	MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	K1X1 K1X1	Q39 Q40 Q41 Q42 Q43			KTA1046-P 2SA1576A 2SC4081 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
IC354 IC355 IC356 IC357 IC358			NJM2505AF-ZB E-TDA7478AD 74AHC08PW E-TDA7415CB AK4220	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC ANALOGUE IC		Q44 Q45 Q46 Q51 Q52			2SA1576A DTC143ZE TPC8110-F KRC408-P DTC143ZE	TRANSISTOR DIGITAL TRANSISTOR FET DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
IC361 IC551 IC601 IC602 IC651			NJM2286V-ZB PIC95603 MM1671XNRE NJM2573V-ZB PCM1754DB	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC		Q53 Q54 ,55 Q56 ,57 Q58 ,59 Q60			KRC408-P HAT2218R-E KRC408-P HAT2218R-E 2SA1576A	DIGITAL TRANSISTOR DUAL FET DIGITAL TRANSISTOR DUAL FET TRANSISTOR	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-126x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q61			2SC4617	TRANSISTOR	
Q62			2SA1576A	TRANSISTOR	
Q63			2SC4617	TRANSISTOR	
Q64			2SA1576A	TRANSISTOR	
Q65			2SC4617	TRANSISTOR	
Q66			DTB123YU	DIGITAL TRANSISTOR	
Q67			DTC143EE	DIGITAL TRANSISTOR	
Q68			DTB123YU	DIGITAL TRANSISTOR	
Q69			DTC143EE	DIGITAL TRANSISTOR	
Q71			DTA124EE	DIGITAL TRANSISTOR	
Q72			DTC124EE	DIGITAL TRANSISTOR	
Q73 ,74			DTC144EE	DIGITAL TRANSISTOR	
Q75			KRA302-P	DIGITAL TRANSISTOR	
Q76			2SK3019	FET	
Q77			KRA308-P	DIGITAL TRANSISTOR	
Q78 ,79			2SK3019	FET	
Q80			DTA114EE	DIGITAL TRANSISTOR	
Q82			DTA124EE	DIGITAL TRANSISTOR	
Q300			UMC2N	TRANSISTOR	K1X1
Q301			2SA1797	TRANSISTOR	K1X1
Q302			2SC4617	TRANSISTOR	K1X1
Q303			2SA1774	TRANSISTOR	K1X1
Q304			2SC4617	TRANSISTOR	K1X1
Q305			2SA1774	TRANSISTOR	K1X1
Q306			2SC4617	TRANSISTOR	K1X1
Q307			2SA1774	TRANSISTOR	K1X1
Q308			2SC4617	TRANSISTOR	K1X1
Q309,310			KRC410-P	DIGITAL TRANSISTOR	
Q311			DTA144EUA	DIGITAL TRANSISTOR	
Q350			2SC4081	TRANSISTOR	
Q351			KRC410-P	DIGITAL TRANSISTOR	
Q352			DTA144EUA	DIGITAL TRANSISTOR	
Q353,354			KRC410-P	DIGITAL TRANSISTOR	
Q356,357			KRC410-P	DIGITAL TRANSISTOR	
Q358			DTA144EE	DIGITAL TRANSISTOR	
Q359			DTC124EE	DIGITAL TRANSISTOR	
Q360			KRC410-P	DIGITAL TRANSISTOR	
Q361			2SA1577	TRANSISTOR	
Q362			DTC124EE	DIGITAL TRANSISTOR	
Q370			2SC4081	TRANSISTOR	
Q371			DTA144EE	DIGITAL TRANSISTOR	
Q372,373			KRC410-P	DIGITAL TRANSISTOR	
Q451			2SA1576A	TRANSISTOR	
Q453			2SA1774	TRANSISTOR	
Q454,455			DTC144EE	DIGITAL TRANSISTOR	
Q654			2SA1774	TRANSISTOR	
Q655			2SC4617	TRANSISTOR	
TH351			PRF18BE471QS2	POSITIVE RESISTOR	
A1			X86-4030-16	FRONT-END UNIT	
VIDEO UNIT (X35-4960-10)					
D451-453			B30-3201-05	LED (RGB F3)	
C1 ,2			CK73EB1E106K	CHIP C 10UF	K
C3			C93-1283-05	CHIP C 1.0UF	K
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C5			C93-1363-05	CHIP C 10PF	
C6			C93-1464-05	CHIP C 0.012UF	F
C7			CK73GB1H473K	CHIP C 0.047UF	K
C8			C93-1383-05	CHIP C 220PF	F
C9			CK73GB0J225K	CHIP C 2.2UF	K
C11			CK73GB0J225K	CHIP C 2.2UF	K
C12			CK73HB1E103K	CHIP C 0.010UF	K
C13			CK73GB1A474K	CHIP C 0.47UF	K
C14			CK73HB1E103K	CHIP C 0.010UF	K
C15			CK73GB1H473K	CHIP C 0.047UF	K
C16			CK73HB1C183K	CHIP C 0.018UF	K
C17			CK73HB1E103K	CHIP C 0.010UF	K
C18			C93-1283-05	CHIP C 1.0UF	K
C21			CK73GB0J225K	CHIP C 2.2UF	K
C22			CK73HB1H152K	CHIP C 1500PF	K
C23			CK73EB1E106K	CHIP C 10UF	K
C24			CK73GB1H103K	CHIP C 0.010UF	K
C25			C93-1460-05	CHIP C 2200PF	F
C28			C93-1283-05	CHIP C 1.0UF	K
C100			CC73GCH1H151J	CHIP C 150PF	J
C101			CK73GB1C104K	CHIP C 0.10UF	K
C102			CK73FB0J106K	CHIP C 10UF	K
C103			CK73GB1H103K	CHIP C 0.010UF	K
C104			CK73FB1C106K	CHIP C 10UF	K
C105			CK73GB1C104K	CHIP C 0.10UF	K
C106			CK73EB1A106K	CHIP C 10UF	K
C107			CK73EB1C106K	CHIP C 10UF	K
C108			CK73GB1C104K	CHIP C 0.10UF	K
C109			CK73FB1C105K	CHIP C 1.0UF	K
C110			CK73GB1H103K	CHIP C 0.010UF	K
C112			CK73FB1E154K	CHIP C 0.15UF	K
C113			CK73EB1E225K	CHIP C 2.2UF	K
C114			CK73GB1C224K	CHIP C 0.22UF	K
C115			CK73GB1C104K	CHIP C 0.10UF	K
C116			CK73EB0J226K	CHIP C 22UF	K
C117			CK73HB1H102K	CHIP C 1000PF	K
C118			CK73GB1H103K	CHIP C 0.010UF	K
C119			CK73HB1E103K	CHIP C 0.010UF	K
C120			CK73GB1C104K	CHIP C 0.10UF	K
C121			CK73HB1E103K	CHIP C 0.010UF	K
C122			CK73HB1A104K	CHIP C 0.10UF	K
C129			CK73EB1C106K	CHIP C 10UF	K
C130			CK73GB1H103K	CHIP C 0.010UF	K
C131			CK73EB1E106K	CHIP C 10UF	K
C132			CK73GB1H104K	CHIP C 0.10UF	K
C133			CK73GB1H103K	CHIP C 0.010UF	K
C134			CK73FB0J106K	CHIP C 10UF	K
C135			CK73GB1H103K	CHIP C 0.010UF	K
C140			CC73GCH1H151J	CHIP C 150PF	J
C145			CK73EB1C106K	CHIP C 10UF	K
C150,151			CK73FB1C106K	CHIP C 10UF	K
C200			CK73EB1A106K	CHIP C 10UF	K
C202			CK73EB1C106K	CHIP C 10UF	K
C203			CK73HB1E103K	CHIP C 0.010UF	K
C204			CC73GCH1H560J	CHIP C 56PF	J

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4960-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C205 C206 C221 C222 C223-225			CK73EB1C106K CK73HB1E103K CK73GB1C104K CC73HCH1H102J CK73EB1C106K	CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1000PF J CHIP C 10UF K	
C300 C301 C302 C303 C304			CK73GB1A105K CK73GB1H103K CK73FB0J106K CK73GB1H103K CK73GB1A105K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 1.0UF K	
C306 C307 C308 C309-314 C315			CC73HCH1H101J CK73HB1A104K CC73HCH1H101J CK73HB1A104K CC73HCH1H101J	CHIP C 100PF J CHIP C 0.10UF K CHIP C 100PF J CHIP C 0.10UF K CHIP C 100PF J	
C316-318 C319-321 C322,323 C324 C325,326			CK73HB1E103K CK73HB1A104K CK73HB1E103K CC73HCH1H101J CK73HB1E103K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 100PF J CHIP C 0.010UF K	
C327,328 C329-331 C332-338 C339 C340,341			CC73GCH1H180J CC73HCH1H101J CK73HB1E103K CK73GB1C104K CK73HB1E103K	CHIP C 18PF J CHIP C 100PF J CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C342 C343 C344,345 C346,347 C348			CK73HB1A104K CK73HB1E103K CK73HB1A104K CK73HB1H102K CC73HCH1H101J	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1000PF K CHIP C 100PF J	
C349 C350 C351 C352 C353			CK73HB1H102K CK73FB0J106K CK73HB1A104K CK73FB0J106K CK73HB1A104K	CHIP C 1000PF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K	
C354 C355 C356 C357 C360-365			CK73FB0J106K CK73HB1A104K CK73HB1E103K CC73HCH1H101J CK73HB1A104K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 100PF J CHIP C 0.10UF K	
C401 C500 C501-503 C504 C505			CK73HB1H102K CK73GB0J225K CK73HB1E103K CK73FB0J106K CK73GB1A105K	CHIP C 1000PF K CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 1.0UF K	
C506 C507			CK73FB0J106K CK73EB1E105K	CHIP C 10UF K CHIP C 1.0UF K	
CN1 CN101 CN103 CN104 CN302			E41-2874-05 E41-2608-05 E41-2359-05 E41-2444-05 E41-2761-05	PIN ASSY FLAT CABLE CONNECTOR PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
CN501 CN502			E41-2087-05 E41-2762-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CN503			E41-2901-15	FLAT CABLE CONNECTOR	
F1 F100			F53-0297-05 F53-0280-05	FUSE (UL,CSA) 1.6A FUSE 0.63A	
L1 L100 L101,102 L103 L104-106			L19-0783-05 L33-2454-05 L41-3392-13 L41-4792-13 L41-1005-33	TRANSFORMER FOR CONVERTER CHOKE COIL SMALL FIXED INDUCTOR (3.3UH) SMALL FIXED INDUCTOR (4.7UH) SMALL FIXED INDUCTOR (10U)	
L200 L300 L302-304 L305-307 L308			L41-1005-33 L33-2454-05 L41-1005-33 L92-0319-05 L41-1005-33	SMALL FIXED INDUCTOR (10U) CHOKE COIL SMALL FIXED INDUCTOR (10U) CHIP FERRITE SMALL FIXED INDUCTOR (10U)	
L309-312 L314 L501 X300			L92-0319-05 L41-8281-15 L41-1005-33 L77-2963-15	CHIP FERRITE SMALL FIXED INDUCTOR (0.82U) SMALL FIXED INDUCTOR (10U) CRYSTAL RESONATOR (12M)	
R1 R3 R4 R5 R6			RK73HB1J512J RK73HB1J220J RK73GH2A433D RK73HB1J153J RK73HH1J563D	CHIP R 5.1K J 1/16W CHIP R 22 J 1/16W CHIP R 43K D 1/10W CHIP R 15K J 1/16W CHIP R 56K D 1/16W	
R7 R8 R9 R10 R11			RK73HB1J220J RK73HB1J512J RK73HH1J204D RK73FB2B152J RK73HB1J220J	CHIP R 22 J 1/16W CHIP R 5.1K J 1/16W CHIP R 200K D 1/16W CHIP R 1.5K J 1/8W CHIP R 22 J 1/16W	
R12 R13 R14 R15 R16 ,17			RK73HB1J105J RK73HB1J220J RK73GH2A471D RK73GH2A513D RK73HB1J220J	CHIP R 1.0M J 1/16W CHIP R 22 J 1/16W CHIP R 470 D 1/10W CHIP R 51K D 1/10W CHIP R 22 J 1/16W	
R18 R21 R22 R23 R24			RK73HB1J222J RK73HB1J104J RK73GB2A515J RK73HH1J824D RK73HB1J472J	CHIP R 2.2K J 1/16W CHIP R 100K J 1/16W CHIP R 5.1M J 1/10W CHIP R 820K D 1/16W CHIP R 4.7K J 1/16W	
R100 R101 R102 R103 R104			RK73HB1J100J RK73GH2A104D RK73GH2A113D RK73GH2A164D RK73GH2A123D	CHIP R 10 J 1/16W CHIP R 100K D 1/10W CHIP R 11K D 1/10W CHIP R 160K D 1/10W CHIP R 12K D 1/10W	
R105 R108,109 R110 R111 R112			RK73GB2A562J RK73GB2A103J RK73GB2A472J RK73HB1J473J RK73GB2A472J	CHIP R 5.6K J 1/10W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 47K J 1/16W CHIP R 4.7K J 1/10W	
R113,114 R118 R119 R201 R202			RK73GB2A000J RK73HB1J754J RK73FB2B222J RK73HB1J243J RK73HB1J183J	CHIP R 0.0 J 1/10W CHIP R 750K J 1/16W CHIP R 2.2K J 1/8W CHIP R 24K J 1/16W CHIP R 18K J 1/16W	
R204,205			RK73HB1J000J	CHIP R 0.0 J 1/16W	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△Indicates safety critical compo nents.

PARTS LIST

VIDEO UNIT (X35-4960-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R206			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R207			RK73HH1J222D	CHIP R 2.2K D 1/16W	
R208			RK73HH1J153D	CHIP R 15K D 1/16W	
R209,210			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R212			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R214,215			RK73GB2A470J	CHIP R 47 J 1/10W	
R216			RK73HB1J101J	CHIP R 100 J 1/16W	
R220			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R221			RK73HH1J182D	CHIP R 1.8K D 1/16W	
R222			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R223,224			RK73HH1J473D	CHIP R 47K D 1/16W	
R225			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R301,302			RK73HB1J101J	CHIP R 100 J 1/16W	
R303			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R306			RK73HB1J101J	CHIP R 100 J 1/16W	
R309-312			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R313,314			RK73HB1J101J	CHIP R 100 J 1/16W	
R336			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R341-343			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R344,345			RK73HB1J101J	CHIP R 100 J 1/16W	
R346			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R347-349			RK73HB1J473J	CHIP R 47K J 1/16W	
R350			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R351,352			RK73HB1J101J	CHIP R 100 J 1/16W	
R353-355			RK73HB1J473J	CHIP R 47K J 1/16W	
R356,357			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R358			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R366-373			RK73HB1J101J	CHIP R 100 J 1/16W	
R375			RK73HB1J820J	CHIP R 82 J 1/16W	
R376			RK73HB1J300J	CHIP R 30 J 1/16W	
R380			RK73HB1J103J	CHIP R 10K J 1/16W	
R382			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R402			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R403			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R404			RK73HB1J243J	CHIP R 24K J 1/16W	
R405,406			RK73GB2A620J	CHIP R 62 J 1/10W	
R441			RK73GB2A820J	CHIP R 82 J 1/10W	
R453			RK73GB2A820J	CHIP R 82 J 1/10W	
R454			RK73GB2A620J	CHIP R 62 J 1/10W	
R455-458			RK73GB2A820J	CHIP R 82 J 1/10W	
R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
R503-506			RK73GB2A100J	CHIP R 10 J 1/10W	
VR200			R32-0350-05	SEMI FIXED VARIABLE RESISTOR	
S401-405			S70-0901-05	TACT SWITCH	
D1 ,2			UDZW5.6(B)	ZENER DIODE	
D3			1SS355	DIODE	
D4 ,5			DA204U	DIODE	
D6			MA2S784-F	DIODE	
D7			UDZW5.6(B)	ZENER DIODE	
D8			AVRM16120M6AB	VARISTOR	
D9			DA204U	DIODE	
D10			1SS355	DIODE	
D11			AVRM16120M6AB	VARISTOR	
D12			DA204U	DIODE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D101			EP05Q04	DIODE	
D102			EP05Q06	DIODE	
D103,104			EP05Q04	DIODE	
D300			DA204U	DIODE	
D302			AVRM16120M6AB	VARISTOR	
D308			DA204U	DIODE	
D401			AVRM16120M6AB	VARISTOR	
D409-411			AVRM16180M6AB	VARISTOR	
D501-504			AVRM16180M6AB	VARISTOR	
D505-507			AVRM16120M6AB	VARISTOR	
IC1			OZ964ISN-C-SN	ANALOGUE IC	
IC101			LT1947-PBF	ANALOGUE IC	
IC102			TC7WH123FU-F	MOS-IC	
IC103			74AHC1G04GW	MOS-IC	
IC200			TA75W558FU-F	ANALOGUE IC	
IC300			S-1112B25MCG	ANALOGUE IC	
IC302			AT25F2048-4Z8	ROM IC	
IC304			MST7988LA-ALF	MOS-IC	
Q1			2SC4081	TRANSISTOR	
Q2 ,3			SI5504DC-E3	DUAL FET	
Q4			DTC114YUA	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q101			2SC4081	TRANSISTOR	
Q102			2SA1576A	TRANSISTOR	
Q200			2SC4097	TRANSISTOR	
Q202			2SA1577	TRANSISTOR	
Q203			UMZ1N	TRANSISTOR	
Q501			DTC114YE	DIGITAL TRANSISTOR	
Q502,503			PUMD10-H	DUAL TRANSISTOR	
DVD UNIT (X37-1250-00) IN DVD MECHA.					
C3			CK73HB1A104K	CHIP C 0.10UF K	
C4			CC73HCH1H471J	CHIP C 470PF J	
C5 -7			CK73HB1E103K	CHIP C 0.010UF K	
C8			CC73HCH1H471J	CHIP C 470PF J	
C9			CK73HB0J105K	CHIP C 1.0UF K	
C11 ,12			CK73HB1E103K	CHIP C 0.010UF K	
C13			CK73HB1H472K	CHIP C 4700PF K	
C14			CK73GB0J106M	CHIP C 10UF M	
C15			CK73HB1A104K	CHIP C 0.10UF K	
C16			CK73GB0J106M	CHIP C 10UF M	
C17			CK73GB0J475K	CHIP C 4.7UF K	
C18			CK73FB0J226M	CHIP C 22UF M	
C21			CK73GB0J106M	CHIP C 10UF M	
C22 ,23			CK73GB0J475K	CHIP C 4.7UF K	
C50			CK73HB1E103K	CHIP C 0.010UF K	
C51			CK73HB1A104K	CHIP C 0.10UF K	
C52			CK73HB1E223K	CHIP C 0.022UF K	
C53			CC73HCH1H470J	CHIP C 47PF J	
C54			CC73HCH1H102J	CHIP C 1000PF J	
C55			CC73HCH1H100D	CHIP C 10PF D	
C56			CC73HCH1H102J	CHIP C 1000PF J	
C57			CC73HCH1E681J	CHIP C 680PF J	
C58			CK73HB1H682K	CHIP C 6800PF K	
C60 ,61			CK73HB1A104K	CHIP C 0.10UF K	
C62			CC73HCH1H102J	CHIP C 1000PF J	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1250-00) IN DVD MECHA.

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
C63			CC73HCH1H331J	CHIP C 330PF J	
C64			CK73HB1H222K	CHIP C 2200PF K	
C65			CC73HCH1E681J	CHIP C 680PF J	
C66			CK73HB1H152K	CHIP C 1500PF K	
C67 ,68			CC73HCH1H102J	CHIP C 1000PF J	
C69 -72			CC73HCH1H151J	CHIP C 150PF J	
C73 -82			CK73HB1A104K	CHIP C 0.10UF K	
C84			CK73HB0J105K	CHIP C 1.0UF K	
C85			CK73HB1A104K	CHIP C 0.10UF K	
C90			CK73HB1E103K	CHIP C 0.010UF K	
C93 -95			CK73HB1A104K	CHIP C 0.10UF K	
C97			CK73HB1A104K	CHIP C 0.10UF K	
C99			CK73HB1A104K	CHIP C 0.10UF K	
C100			CK73FB0J226M	CHIP C 22UF M	
C101			CK73GB0J475K	CHIP C 4.7UF K	
C103			CK73FB0J226M	CHIP C 22UF M	
C104			CK73GB0J475K	CHIP C 4.7UF K	
C120,121			CK73HB1E223K	CHIP C 0.022UF K	
C143,144			CC73HCH1H100D	CHIP C 10PF D	
C202			CK73FB0J226M	CHIP C 22UF M	
C207,208			CK73HB1A104K	CHIP C 0.10UF K	
C210			CK73HB1A104K	CHIP C 0.10UF K	
C212			CK73HB1A104K	CHIP C 0.10UF K	
C213			CK73HB1H332K	CHIP C 3300PF K	
C214,215			CK73HB1A104K	CHIP C 0.10UF K	
C216			CC73HCH1H471J	CHIP C 470PF J	
C217			CK73HB1A104K	CHIP C 0.10UF K	
C218			CK73HB1C473K	CHIP C 0.047UF K	
C219-222			CK73HB1A104K	CHIP C 0.10UF K	
C223			CK73HB0J105K	CHIP C 1.0UF K	
C224			CK73HB1A104K	CHIP C 0.10UF K	
C225			CK73GB0J475K	CHIP C 4.7UF K	
C227			CK73FB0J226M	CHIP C 22UF M	
C434			CK73GB0J106M	CHIP C 10UF M	
C435			CK73HB1E103K	CHIP C 0.010UF K	
C440-442			CK73FB0J226M	CHIP C 22UF M	
C446			CC73HCH1H101J	CHIP C 100PF J	
C447,448			CC73HCH1H102J	CHIP C 1000PF J	
C449,450			CK73HB1H472K	CHIP C 4700PF K	
C451			CC73HCH1H102J	CHIP C 1000PF J	
C452-454			CK73HB0J105K	CHIP C 1.0UF K	
C455			CK73FB0J226M	CHIP C 22UF M	
C456			CC73HCH1H150J	CHIP C 15PF J	
CN1			E41-2594-05	FLAT CABLE CONNECTOR	
CN2			E41-2114-15	FLAT CABLE CONNECTOR	
CN3			E41-2596-05	FLAT CABLE CONNECTOR	
L1			L92-0365-05	CHIP FERRITE	
L5			L92-0365-05	CHIP FERRITE	
X2			L77-3803-05	CRYSTAL RESONATOR (16.897849MHZ)	
CP2 -4			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP5 -9			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP10			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP11			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R1			RK73HB1J103J	CHIP R 10K J 1/16W	

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
R3 ,4			RK73HB1J103J	CHIP R 10K J 1/16W	
R5 ,6			RK73HH1J123D	CHIP R 12K D 1/16W	
R7			RK73HH1J333D	CHIP R 33K D 1/16W	
R8 ,9			RK73HB1J103J	CHIP R 10K J 1/16W	
R10			RK73HB1J163J	CHIP R 16K J 1/16W	
R11			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R13			RK73HB1J103J	CHIP R 10K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21 ,22			RK73HH1J103D	CHIP R 10K D 1/16W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R50 ,51			RK73HB1J510J	CHIP R 51 J 1/16W	
R52			RK73HH1J153D	CHIP R 15K D 1/16W	
R53			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R54			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R55			RK73HB1J103J	CHIP R 10K J 1/16W	
R56			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R57 ,58			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R59 ,60			RK73HB1J103J	CHIP R 10K J 1/16W	
R63			RK73HB1J103J	CHIP R 10K J 1/16W	
R64 ,65			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R81			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R83 ,84			RK73HB1J473J	CHIP R 47K J 1/16W	
R85			RK73HB1J223J	CHIP R 22K J 1/16W	
R86			RK73HB1J103J	CHIP R 10K J 1/16W	
R87			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R88			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R89 ,90			RK73HB1J123J	CHIP R 12K J 1/16W	
R91			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R92			RK73HB1J273J	CHIP R 27K J 1/16W	
R96			RK73HB1J103J	CHIP R 10K J 1/16W	
R98			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R101			RK73HH1J273D	CHIP R 27K D 1/16W	
R105			RK73HB1J103J	CHIP R 10K J 1/16W	
R120			RK73HB1J103J	CHIP R 10K J 1/16W	
R121			RK73HB1J820J	CHIP R 82 J 1/16W	
R122			RK73HB1J103J	CHIP R 10K J 1/16W	
R123			RK73HB1J330J	CHIP R 33 J 1/16W	
R124-126			RK73HB1J820J	CHIP R 82 J 1/16W	
R150,151			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R152,153			RK73HB1J104J	CHIP R 100K J 1/16W	
R154,155			RK73HB1J103J	CHIP R 10K J 1/16W	
R158,159			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R160			R92-3350-05	CHIP R 2.2 F 1/10W	
R162,163			RK73HB1J104J	CHIP R 100K J 1/16W	
R164,165			RK73HH1J101D	CHIP R 100 D 1/16W	
R167			RK73HH1J113D	CHIP R 11K D 1/16W	
R168			RK73HH1J273D	CHIP R 27K D 1/16W	
R169			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R255			R92-5112-05	CHIP R 4.7 F 1/10W	
R257			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R260			RK73HH1J132D	CHIP R 1.3K D 1/16W	
R261			RK73HH1J203D	CHIP R 20K D 1/16W	
R262			RK73HB1J821J	CHIP R 820 J 1/16W	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1250-00) IN DVD MECHA.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R263			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R272			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R273			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R274			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R275			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R278			R92-5112-05	CHIP R 4.7 F 1/10W	
R284			RK73HB1J470J	CHIP R 47 J 1/16W	
R288			R92-3416-05	METAL G-R 2.2 F 0.27W	
R289			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R297			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R298,299			RK73HB1J330J	CHIP R 33 J 1/16W	
R300			RK73HB1J103J	CHIP R 10K J 1/16W	
S1			S68-0911-15	PUSH SWITCH	
S2			S68-0917-05	PUSH SWITCH	
D1			1SS402-F	DIODE	
D5 ,6			015AZ5.1-F(Y)	ZENER DIODE	
D8			1SS387-F	DIODE	
IC1			AN22022ABV	ANALOGUE IC	
IC3			-	ROM IC	
IC4			MN103S71F	MOS-IC	
IC5			S1000N2814T1G	ANALOGUE IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC11			-	ROM IC	
IC13			NJM2845DL115B	ANALOGUE IC	
IC14			NJM2845DL133B	ANALOGUE IC	
Q1 -4			DTA143XE	DIGITAL TRANSISTOR	
Q12 ,13			2SB1709	TRANSISTOR	
Q16			UM6K1N	DUAL FET	

DVD MECHANISM ASSY (X92-6400-00) (DVS-8220W)

1	1A	*	A10-5523-11+	CHASSIS	
2	2B		A10-5524-01+	CHASSIS	
3	1A	*	A10-5535-01	CHASSIS	
4	3A	*	A10-5534-12	CHASSIS	
7	1B		D10-7080-02+	ARM	
8	1B		D10-7081-02+	ARM	
9	1B		D10-7082-02+	LEVER	
10	1B		D10-7083-02+	LEVER	
12	2B		D10-7084-02+	SLIDER	
13	2A		D10-7085-02+	ARM	
14	2B		D10-7086-03+	ARM	
15	2B		D10-7087-02+	ARM	
25	2B		D10-7092-04+	SLIDER ASSY	
27	2A		D10-7091-04+	LEVER	
28	2B		D12-0640-02+	CAM	
31	2B		D13-3029-04+	GEAR	
32	2B		D13-3030-04+	GEAR	
33	2B		D13-3031-04+	GEAR	
34	2B		D13-3032-04+	GEAR	
35	2B		D13-3033-04+	GEAR	
36	2B		D13-3034-04+	GEAR	
40	2A		D13-3038-04+	GEAR	
41	2A		D13-3039-04+	GEAR	
42	2A		D13-3040-04+	GEAR	

The IC3, and IC11 in the DVD unit (X37-1250-00) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6400-00).

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
43	1B		D14-1034-04+	ROLLER	
53	1B		D21-2487-24+	SHAFT	
54	2A		D39-0275-05	DAMPER	
55	2A		D39-0276-05	DAMPER	
60	3A		F09-3019-03	SHEET	
65	2B		G01-4734-04	EXTENSION SPRING	
66	1B	*	G01-4735-14	EXTENSION SPRING	
67	2A		G01-3300-14+	TORSION COIL SPRING	
68	2B	*	G01-4737-14	EXTENSION SPRING	
69	1B	*	G01-4602-14+	EXTENSION SPRING	
70	1B		G01-4740-04	TORSION COIL SPRING	
74	2B	*	G01-4609-24+	TORSION COIL SPRING	
75	1B		G02-1904-03+	FLAT SPRING	
79	2A	*	J22-0898-01	MOUNTING HARDWARE	
80	3B		J22-0891-11+	MOUNTING HARDWARE	
A	1A	*	N09-6815-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4.0 P-T)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW)	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP, SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

K : KVT-516 K1 : KVT-696 (North America)
X1 : KVT-636DVD (Australia) R1 : KVT-546DVD (Latin America)

△ Indicates safety critical components.