

PARTS LIST

* New Parts.  indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

Y : AAFES (Europe)

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

TK-8180H (Y51-5030-XX)

TK-8182H (Y51-5090-XX)

DISPLAY UNIT (X54-3480-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-8180H/8182H					
1	1B,1D		A01-2194-11	METALLIC CABINET	
2	3A,3C		A62-1094-23	PANEL ASSY	
4	2A,2C		B09-0681-03	CAP (KAP-2)	
5	1F		B62-1848-00	INSTRUCTION MANUAL	
7	2B,2D		E04-0167-05	RF COAXIAL RECEPTACLE (M)	
8	2B,2D		E30-7520-05	DC CORD (PIG TAIL)	
9	2E		E30-7523-05	DC CORD ASSY (WATER-PROOF)	
10	2A,2C		E37-1110-15	FLAT CABLE (30P/D-SUB)	
11	1A,1C		E37-1118-05	LEAD WIRE WITH CONNECTOR (SHORT CABLE)	
12	2A,2C		E37-1120-15	FLAT CABLE (30P/TX-RX)	
13	3B,3D		E37-1124-05	LEAD WIRE WITH CONNECTOR (2P/SP)	
15	2B,2D		F10-2488-02	SHIELDING PLATE (CHASSIS)	
16	1A,1C		F10-2489-03	SHIELDING CASE (FINAL)	
17	1A,1C		F10-2490-03	SHIELDING CASE (VCO)	
18	1E		F52-0024-05	FUSE (BLADE TYPE) 15A/32V	
19	3B,3D		G02-1824-04	EARTH SPRING (PANEL HOLDER)	SK,SK2
20	3B,3D		G10-1342-04	FIBROUS SHEET (BIRITSUKI)	
21	2A,2C		G11-4290-04	RUBBER SHEET (CHASSIS)	
22	1B,1D		G11-4343-04	SHEET (CABINET)	
23	1A,1C		G13-2018-04	CUSHION	
24	2B,2D		G13-2047-04	CUSHION (DC SCREW)	
25	1B,1D		G53-1613-01	PACKING (SHIELD PLATE)	
27	1A,1C		G53-1616-03	PACKING (PHONE JACK)	
28	2B,2D		G53-1626-03	PACKING (D-SUB OUTER)	
29	2B,2D		G53-1643-04	PACKING (DC CORD)	
30	2B,2D		G53-1645-03	PACKING (D-SUB INNER)	
31	2A,2C		G53-1662-04	PACKING (ANT M TYPE)	
32	3A,3C		G53-1676-03	PACKING (CHASSIS)	
33	2E		H02-0624-03	INNER CARTON CASE	
34	2F		H12-3170-01	PACKING FIXTURE (LOWER)	
35	1F		H12-3171-03	PACKING FIXTURE (UPPER)	
37	3F	*	H52-2097-03	ITEM CARTON CASE	SK,SK2 K,K2
37	3F	*	H52-2102-03	ITEM CARTON CASE	
39	1E		J19-1584-05	HOLDER (ACCESSORY)	
40	3B,3D		J19-5464-13	HOLDER (SP)	
41	3B,3D		J19-5485-02	HOLDER (PANEL)	
42	2B,2D		J21-8479-02	HARDWARE FIXTURE (D-SUB)	
43	3B,3D		J21-8481-03	HARDWARE FIXTURE (SP)	
44	2E		J29-0662-03	BRACKET (ACCESSORY)	
45	3B,3D		J30-1289-04	SPACER (SP)	
47	3A,3C		K29-9349-01	KEY TOP	
A	2B,2D		N09-2409-05	HEXAGON HEAD SCREW (D-SUB)	
B	1A,1C		N67-3008-48	PAN HEAD SEMS SCREW (FINAL IC)	
C	1A,1C		N87-2606-48	BRAZIER HEAD TAPTITE SCREW (ANT, PCB)	
D	1A,1C		N87-2608-43	BRAZIER HEAD TAPTITE SCREW (AUDIO IC)	
49	2E		N99-2039-05	SCREW SET (ACCESSORY)	
51	3B,3D		T07-0757-05	SPEAKER	
52	1E		T91-0639-05	MICROPHONE (ACCESSORY)	
54	2A		W09-0971-05	LITHIUM CELL	K,K2

Ref. No.	Address	New parts	Parts No.	Description	Destination
DISPLAY UNIT (X54-3480-10) : TK-8180H					
101	3B		B11-1825-04	FILTER (LCD)	
102	3B		B38-0888-15	LCD	
D907			B30-2151-05	LED (R/G)	
D909-920			B30-2281-05	LED (Y)	
D921-930			B30-2282-05	LED (Y)	
C907,908			CK73HB1H102K	CHIP C 1000PF	K
C909			CK73GB1H222K	CHIP C 2200PF	K
C910,911			CC73GCH1H101J	CHIP C 100PF	J
C912,913			CK73GB1H102K	CHIP C 1000PF	K
C914			CC73GCH1H101J	CHIP C 100PF	J
C916,917			CK73GB1C104K	CHIP C 0.10UF	K
C918			C92-0628-05	CHIP-TAN 10UF	10WV
C920			CC73GCH1H101J	CHIP C 100PF	J
C921			CK73GB1H102K	CHIP C 1000PF	K
C922			CK73GB1H103K	CHIP C 0.010UF	K
C924,925			CC73GCH1H100D	CHIP C 10PF	D
C926-928			CK73GB1H102K	CHIP C 1000PF	K
C930			CK73GB1H103K	CHIP C 0.010UF	K
C931			C92-0784-05	CHIP-TAN 4.7UF	10WV
C932-934			CK73GB1H103K	CHIP C 0.010UF	K
C935			CK73GB1H471K	CHIP C 470PF	K
C936			CK73GB1C104K	CHIP C 0.10UF	K
C937			CK73GB1H103K	CHIP C 0.010UF	K
C938			CK73GB1H102K	CHIP C 1000PF	K
104	3B		E29-1202-04	INTER CONNECTOR (LCD)	
CN901			E40-5704-05	PIN ASSY	
CN902			E40-6372-05	FLAT CABLE CONNECTOR	
J901	3B		E08-0877-05	MODULAR JACK	
107	3B		J19-5467-03	HOLDER (LCD)	
108	3B		J21-8470-03	MOUNTING HARDWARE (LCD)	
-			J31-0551-05	COLLAR	
L901,902			L40-1095-85	SMALL FIXED INDUCTOR (1.0UH)	
L903-907			L92-0140-05	CHIP FERRITE	
L908,909			L92-0163-05	BEADS CORE	
X901			L77-1956-05	CRYSTAL RESONATOR (14.7456MHZ)	
CP901-911			RK75HA1J101J	CHIP-COM 100	J 1/16W
R901			RK73GB2A102J	CHIP R 1.0K	J 1/10W
R903			RK73GB2A000JX	CHIP R 0.0	J 1/10W
R904			RK73GB2A102J	CHIP R 1.0K	J 1/10W
R905			RK73GB2A472J	CHIP R 4.7K	J 1/10W
R907			RK73GB2A333J	CHIP R 33K	J 1/10W
R909-911			RK73GB2A473J	CHIP R 47K	J 1/10W
R913-916			RK73HB1J474J	CHIP R 470K	J 1/16W
R917			RK73FB2B471J	CHIP R 470	J 1/8W
R918			RK73FB2B271J	CHIP R 270	J 1/8W
R919			RK73HB1J102J	CHIP R 1.0K	J 1/16W
R920			RK73HB1J000JX	CHIP R 0.0	J 1/16W
R925			RK73HB1J471J	CHIP R 470	J 1/16W
R926			RK73HB1J473J	CHIP R 47K	J 1/16W
R927-935			RK73HB1J102J	CHIP R 1.0K	J 1/16W
R936			RK73HB1J103J	CHIP R 10K	J 1/16W
R939			RK73GB2A472J	CHIP R 4.7K	J 1/10W
R940			RK73HB1J101J	CHIP R 100	J 1/16W

K : TK-8180H(K) K2 : TK-8180H(K2) SK : TK-8182H(K) SK2 : TK-8182H(K2)

TK-8180H/8182H

PARTS LIST

DISPLAY UNIT (X54-3480-10)

DISPLAY UNIT (X54-3540-10)

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R941		*	RK73HB1J102J	CHIP R 1.0K J 1/16W	
R942			RK73EB2E470J	CHIP R 47 J 1/4W	
R943			RK73EB2E101J	CHIP R 100 J 1/4W	
R944			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R945			RK73GB2A103J	CHIP R 10K J 1/10W	
R947-950			RK73FB2B101J	CHIP R 100 J 1/8W	
R951,952			RK73FB2B391J	CHIP R 390 J 1/8W	
R953,954			RK73FB2B821J	CHIP R 820 J 1/8W	
R955-958			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R959			RK73HB1J103J	CHIP R 10K J 1/16W	
R962,963			RK73GB2A103J	CHIP R 10K J 1/10W	
R967			RK73HB1J271J	CHIP R 270 J 1/16W	
R969			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R970			RK73GB2A103J	CHIP R 10K J 1/10W	
R971			RK73HB1J102J	CHIP R 1.0K J 1/16W	
D901,902			02DZ18(X,Y)	ZENER DIODE	
D903			MINISMDC020	VARISTOR	
D905			DA204U	DIODE	
D931-933			AVRM1608080MAA	VARISTOR	
IC901			TA78L05F	MOS-IC	
IC902			30302M88Z7GU	MICROCONTROLLER IC	
IC903			LC75810T-8726	MOS-IC	
Q901,902			DTC144EE	DIGITAL TRANSISTOR	
Q904-906			DTC114EE	DIGITAL TRANSISTOR	
Q907			2SC2873(Y)	TRANSISTOR	
Q909,910			12A02CH	TRANSISTOR	
Q911			DTC114EE	DIGITAL TRANSISTOR	
Q913			DTC114EE	DIGITAL TRANSISTOR	
TH901			S1R103J440H	THERMISTOR	
DISPLAY UNIT (X54-3540-10) : TK-8182H					
101	3D		B11-1825-04	FILTER (LCD)	
103	3D		B38-0915-05	LCD	
D908			B30-2151-05	LED (R/G)	
D909-920			B30-2281-05	LED (Y)	
D921-930			B30-2282-05	LED (Y)	
C901			CK73GB1H102K	CHIP C 1000PF K	
C904			CK73GB1C104K	CHIP C 0.10UF K	
C905			CC73GCH1H101J	CHIP C 100PF J	
C906			CK73GB1H102K	CHIP C 1000PF K	
C908-910			CC73GCH1H101J	CHIP C 100PF J	
C911-915			CK73GB1H102K	CHIP C 1000PF K	
C916			CK73GB1E104K	CHIP C 0.10UF K	
C917			C92-0838-05	CHIP-TAN 10UF 10WV	
C918			CK73GB1E104K	CHIP C 0.10UF K	
C919			C92-0784-05	CHIP-TAN 4.7UF 10WV	
C920-922			CK73GB1H103K	CHIP C 0.010UF K	
C923			CK73GB1H681K	CHIP C 680PF K	
C924,925			CK73GB1H102K	CHIP C 1000PF K	
105	3D		E29-1207-04	INTER CONNECTOR (LCD)	
CN901			E40-5704-05	PIN ASSY	
CN902			E40-6372-05	FLAT CABLE CONNECTOR	
J901	3D		E08-0877-05	MODULAR JACK	
107	3D		J19-5467-03	HOLDER (LCD)	
108	3D		J21-8470-03	MOUNTING HARDWARE (LCD)	
-			J31-0551-05	COLLAR	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L901,902			L40-1095-85	SMALL FIXED INDUCTOR (1.0UH)	
L903-909			L92-0140-05	CHIP FERRITE	
R901			RK73GB2A471J	CHIP R 470 J 1/10W	
R902			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R903			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R904			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R905			RK73GB2A333J	CHIP R 33K J 1/10W	
R906			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R907			RK73GB2A103J	CHIP R 10K J 1/10W	
R908			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R909,910			RK73GB2A103J	CHIP R 10K J 1/10W	
R911-915			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R916			RK73GB2A563J	CHIP R 56K J 1/10W	
R917			RK73FB2B471J	CHIP R 470 J 1/8W	
R918			RK73FB2B271J	CHIP R 270 J 1/8W	
R919,920			RK73GB2A103J	CHIP R 10K J 1/10W	
R921			RK73GB2A474J	CHIP R 470K J 1/10W	
R922,923			RK73EB2E101J	CHIP R 100 J 1/4W	
R924-927			RK73FB2B101J	CHIP R 100 J 1/8W	
R928,929			RK73FB2B391J	CHIP R 390 J 1/8W	
R930,931			RK73FB2B821J	CHIP R 820 J 1/8W	
R932-936			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
D902			02DZ18(X,Y)	ZENER DIODE	
D903			MINISMDC020	VARISTOR	
D904			1SS388	DIODE	
D906			DA204U	DIODE	
D931-933			AVRM1608080MAA	VARISTOR	
IC901			XC6201P502PR	MOS-IC	
IC902			LC75854W	MOS-IC	
Q901			DTC144EE	DIGITAL TRANSISTOR	
Q902			12A02CH	TRANSISTOR	
Q903			DTC144EE	DIGITAL TRANSISTOR	
Q904-907			DTC114EE	DIGITAL TRANSISTOR	
Q908			12A02CH	TRANSISTOR	
Q909			2SK2009	FET	
TX-RX UNIT (X57-6990-XX) -14 : K -15 : K2 -16 : SK -17 : SK2					
C1			CK73GB1H102K	CHIP C 1000PF K	
C2-5			CC73GCH1H101J	CHIP C 100PF J	
C6			C92-0585-05	CHIP-TAN 4.7UF 16WV	
C7,8			CC73GCH1H101J	CHIP C 100PF J	
C9			CC73GCH1H060D	CHIP C 6.0PF D	
C10			CC73GCH1H101J	CHIP C 100PF J	
C13-15			CC73GCH1H101J	CHIP C 100PF J	
C16			CC73GCH1H060D	CHIP C 6.0PF D	
C16			CC73GCH1H080D	CHIP C 8.0PF D	
C17			CC73GCH1H220J	CHIP C 22PF J	
C18			CK73GB1H471K	CHIP C 470PF K	
C19			CC73GCH1H470J	CHIP C 47PF J	
C20			CC73GCH1H101J	CHIP C 100PF J	
C21			CK73FB1H471K	CHIP C 470PF K	
C22			CK73GB1H471K	CHIP C 470PF K	
C24			C92-0606-05	CHIP-TAN 4.7UF 10WV	
C26			CC73GCH1H220J	CHIP C 22PF J	
C27			CC73GCH1H470J	CHIP C 47PF J	

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C28			CC73GCH1H101J	CHIP C 100PF J		C135			CC73GCH1H270J	CHIP C 27PF J	K2,SK2
C29-31			CK73GB1H471K	CHIP C 470PF K		C136			CC73GCH1H040B	CHIP C 4.0PF B	K,SK
C32			C92-0834-05	ELECTRO 47UF 25WV		C136			CC73GCH1H060B	CHIP C 6.0PF B	K2,SK2
C33-35			CC73GCH1H101J	CHIP C 100PF J		C137			CK73GB1H471K	CHIP C 470PF K	
C38-40			CC73GCH1H220J	CHIP C 22PF J		C138			CC73GCH1H050B	CHIP C 5.0PF B	
C42			C93-0553-05	CHIP C 3.0PF C	K,SK	C139			CK73GB1H471K	CHIP C 470PF K	
C42			C93-0555-05	CHIP C 5.0PF C	K2,SK2	C140			CC73GCH1H220J	CHIP C 22PF J	K,SK
C43			CC73FCH1H030C	CHIP C 3.0PF C	K,SK	C140			CC73GCH1H270J	CHIP C 27PF J	K2,SK2
C43			CC73FCH1H050C	CHIP C 5.0PF C	K2,SK2	C141			CC73GCH1H090B	CHIP C 9.0PF B	K,SK
C44			C93-0573-05	CHIP C 120PF J		C141			CC73GCH1H100D	CHIP C 10PF D	K2,SK2
C45			C93-0553-05	CHIP C 3.0PF C	K2,SK2	C142			CK73GB1H471K	CHIP C 470PF K	
C45			C93-0555-05	CHIP C 5.0PF C	K,SK	C143			CK73GB1H103K	CHIP C 0.010UF K	
C47			CC73GCH1H0R5B	CHIP C 0.5PF B		C144			CC73GCH1H070B	CHIP C 7.0PF B	K,SK
C48			CC73GCH1H030B	CHIP C 3.0PF B	K,SK	C144			CC73GCH1H080B	CHIP C 8.0PF B	K2,SK2
C48			CC73GCH1H040B	CHIP C 4.0PF B	K2,SK2	C145			CC73GCH1H020B	CHIP C 2.0PF B	K2,SK2
C49			CC73GCH1H101J	CHIP C 100PF J		C145			CC73GCH1H1R5B	CHIP C 1.5PF B	K,SK
C50			C93-0555-05	CHIP C 5.0PF C	K2,SK2	C146			CK73GB1H471K	CHIP C 470PF K	
C50			C93-0558-05	CHIP C 8.0PF D	K,SK	C147			CC73GCH1H050B	CHIP C 5.0PF B	K,SK
C51			CC73GCH1H101J	CHIP C 100PF J		C147			CC73GCH1H080B	CHIP C 8.0PF B	K2,SK2
C52			CC73GCH1H0R5B	CHIP C 0.5PF B		C148			CC73GCH1H010B	CHIP C 1.0PF B	
C53			C93-0555-05	CHIP C 5.0PF C	K2,SK2	C149			CK73GB1H471K	CHIP C 470PF K	
C53			C93-0558-05	CHIP C 8.0PF D	K,SK	C150			CC73GCH1H050B	CHIP C 5.0PF B	K,SK
C54			C93-0556-05	CHIP C 6.0PF D	K2,SK2	C150			CC73GCH1H080B	CHIP C 8.0PF B	K2,SK2
C55			CC73GCH1H020B	CHIP C 2.0PF B	K,SK	C151			CC73GCH1H010B	CHIP C 1.0PF B	
C55			CC73GCH1H040B	CHIP C 4.0PF B	K2,SK2	C152			CK73GB1H471K	CHIP C 470PF K	
C56			CC73GCH1H101J	CHIP C 100PF J		C153			CC73GCH1H050B	CHIP C 5.0PF B	K,SK
C57			CC73GCH1H0R5B	CHIP C 0.5PF B		C153			CC73GCH1H080B	CHIP C 8.0PF B	K2,SK2
C58			CC73GCH1H020B	CHIP C 2.0PF B		C154			CC73GCH1H020B	CHIP C 2.0PF B	K2,SK2
C59			CC73GCH1H101J	CHIP C 100PF J		C154			CC73GCH1H1R5B	CHIP C 1.5PF B	K,SK
C60			C93-0555-05	CHIP C 5.0PF C	K,SK	C155,156			CK73GB1H471K	CHIP C 470PF K	
C60			C93-0556-05	CHIP C 6.0PF D	K2,SK2	C171			CC73GCH1H060B	CHIP C 6.0PF B	K,SK
C61,62			CC73GCH1H101J	CHIP C 100PF J		C171			CC73GCH1H100D	CHIP C 10PF D	K2,SK2
C63			CC73GCH1H070D	CHIP C 7.0PF D	K2,SK2	C173			CC73GCH1H120J	CHIP C 12PF J	K,SK
C64			CC73GCH1H020B	CHIP C 2.0PF B	K2,SK2	C173			CC73GCH1H180J	CHIP C 18PF J	K2,SK2
C65			CC73GCH1H070D	CHIP C 7.0PF D	K2,SK2	C175			CC73GCH1H060B	CHIP C 6.0PF B	K,SK
C74			CC73GCH1H101J	CHIP C 100PF J		C175			CC73GCH1H100D	CHIP C 10PF D	K2,SK2
C76,77			CK73GB1H471K	CHIP C 470PF K		C176-178			CK73GB1H471K	CHIP C 470PF K	
C78			CK73GB1E105K	CHIP C 1.0UF K	K2,SK2	C181			CK73GB1H471K	CHIP C 470PF K	
C79,80			CK73GB1H471K	CHIP C 470PF K		C182,183			CK73GB1H103K	CHIP C 0.010UF K	
C83			C93-0555-05	CHIP C 5.0PF C	K2,SK2	C184			CK73GB1H471K	CHIP C 470PF K	
C85			C92-0516-05	CHIP-TAN 4.7UF 16WV	K2,SK2	C185			CK73GB1H103K	CHIP C 0.010UF K	
C119			CC73GCH1H050B	CHIP C 5.0PF B	K,SK	C186			CC73GCH1H330J	CHIP C 33PF J	
C119			CC73GCH1H100D	CHIP C 10PF D	K2,SK2	C187			CC73GCH1H390J	CHIP C 39PF J	
C121			CK73GB1H471K	CHIP C 470PF K		C188,189			CC73GCH1H040B	CHIP C 4.0PF B	
C124			CC73GCH1H060B	CHIP C 6.0PF B	K2,SK2	C190			CC73GCH1H390J	CHIP C 39PF J	
C124			CC73GCH1H100D	CHIP C 10PF D	K,SK	C192-194			CK73GB1H103K	CHIP C 0.010UF K	
C125			CK73GB1H471K	CHIP C 470PF K		C195			CK73GB1H471K	CHIP C 470PF K	
C127			CC73GCH1H220J	CHIP C 22PF J	K,SK	C196,197			CK73GB1H103K	CHIP C 0.010UF K	
C127			CC73GCH1H270J	CHIP C 27PF J	K2,SK2	C198			CC73GCH1H680J	CHIP C 68PF J	
C128			CC73GCH1H070B	CHIP C 7.0PF B	K2,SK2	C199			CC73GCH1H390J	CHIP C 39PF J	
C128			CC73GCH1H090B	CHIP C 9.0PF B	K,SK	C200,201			CC73GCH1H040B	CHIP C 4.0PF B	
C129			CK73GB1H471K	CHIP C 470PF K		C202			CC73GCH1H390J	CHIP C 39PF J	
C130			CC73GCH1H050B	CHIP C 5.0PF B		C204-206			CK73GB1H103K	CHIP C 0.010UF K	
C131			CK73GB1H471K	CHIP C 470PF K		C207			CK73GB1H471K	CHIP C 470PF K	
C132			CC73GCH1H220J	CHIP C 22PF J	K,SK	C208,209			CK73GB1H103K	CHIP C 0.010UF K	
C132			CC73GCH1H270J	CHIP C 27PF J	K2,SK2	C210			CC73GCH1H680J	CHIP C 68PF J	
C133			CC73GCH1H060B	CHIP C 6.0PF B	K,SK	C211			CC73GCH1H100D	CHIP C 10PF D	
C133			CC73GCH1H070B	CHIP C 7.0PF B	K2,SK2	C212			CK73GB1H471K	CHIP C 470PF K	
C134			CC73GCH1H030B	CHIP C 3.0PF B		C213			CK73GB1H103K	CHIP C 0.010UF K	
C135			CC73GCH1H220J	CHIP C 22PF J	K,SK	C214			CK73GB1C104K	CHIP C 0.10UF K	

K : TK-8180H(K) K2 : TK-8180H(K2) SK : TK-8182H(K) SK2 : TK-8182H(K2)

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C215			CC73GCH1H180J	CHIP C 18PF J		C342			CK73GB1H102K	CHIP C 1000PF K	
C216			CC73GCH1H150J	CHIP C 15PF J		C343			C92-0628-05	CHIP-TAN 10UF 10WV	
C217			CK73GB1H102K	CHIP C 1000PF K		C346,347			CC73GCH1H220G	CHIP C 22PF G	K,SK
C218			CK73GB1H103K	CHIP C 0.010UF K		C346,347			CC73GCH1H390J	CHIP C 39PF J	K2,SK2
C219			CK73FB1C105K	CHIP C 1.0UF K		C350			CC73GCH1H080D	CHIP C 8.0PF D	K,SK
C220,221			CK73GB1C104K	CHIP C 0.10UF K		C350			CC73GCH1H110J	CHIP C 11PF J	K2,SK2
C222			CK73GB1H102K	CHIP C 1000PF K		C351			CC73GCH1H0R5B	CHIP C 0.5PF B	K,SK
C223			CK73GB1C104K	CHIP C 0.10UF K		C351			CC73GCH1H1R5B	CHIP C 1.5PF B	K2,SK2
C224,225			CC73GCH1H271J	CHIP C 270PF J		C352			CC73GCH1H120J	CHIP C 12PF J	
C226,227			CK73GB1H102K	CHIP C 1000PF K		C353			CC73GCH1H471J	CHIP C 470PF J	
C228			CK73GB1C104K	CHIP C 0.10UF K		C354			CC73GCH1H040B	CHIP C 4.0PF B	K,SK
C229			CK73GB1C333K	CHIP C 0.033UF K		C354,355			CC73GCH1H050B	CHIP C 5.0PF B	K2,SK2
C230			CK73GB1H103K	CHIP C 0.010UF K		C355			CC73GCH1H050B	CHIP C 5.0PF B	K,SK
C231			CC73GCH1H820J	CHIP C 82PF J		C356			CC73GCH1H0R5B	CHIP C 0.5PF B	
C232,233			CK73GB1H102K	CHIP C 1000PF K		C357			CC73GCH1H060B	CHIP C 6.0PF B	K,SK
C234			CK73FB1C224K	CHIP C 0.22UF K		C357,358			CC73GCH1H060B	CHIP C 6.0PF B	K2,SK2
C235			CK73GB1C104K	CHIP C 0.10UF K		C358			CC73GCH1H050B	CHIP C 5.0PF B	K,SK
C236			CK73GB1H103K	CHIP C 0.010UF K		C359,360			CC73GCH1H070B	CHIP C 7.0PF B	
C237			C92-0712-05	CHIP-TAN 22UF 6.3WV		C361-363			CC73GCH1H471J	CHIP C 470PF J	
C238			CK73GB1H103K	CHIP C 0.010UF K		C364			CC73GCH1H0R5B	CHIP C 0.5PF B	K,SK
C239,240			CK73GB1C104K	CHIP C 0.10UF K		C364,365			CC73GCH1H0R5B	CHIP C 0.5PF B	K2,SK2
C241			CK73GB1H102K	CHIP C 1000PF K		C365			CC73GCH1H0R3B	CHIP C 0.3PF B	K,SK
C251,252			CK73GB1H471K	CHIP C 470PF K		C367			CK73GB1H102K	CHIP C 1000PF K	
C253			CK73GB1H103K	CHIP C 0.010UF K		C368			CC73GCH1H471J	CHIP C 470PF J	
C255			C92-0694-05	CHIP-TAN 10UF 16WV		C369,370			CK73GB1H471K	CHIP C 470PF K	
C256			CK73GB1H103K	CHIP C 0.010UF K		C371			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C257			C92-0519-05	CHIP-TAN 1.0UF 25WV		C372			CC73GCH1H180J	CHIP C 18PF J	K2,SK2
C258			C92-0516-05	CHIP-TAN 4.7UF 16WV		C372			CC73GCH1H220J	CHIP C 22PF J	K,SK
C259			C92-0628-05	CHIP-TAN 10UF 10WV		C373			CC73GCH1H471J	CHIP C 470PF J	
C260-262			CC73GCH1H101J	CHIP C 100PF J		C374			CK73GB1H102K	CHIP C 1000PF K	
C299			CC73GCH1H0R5B	CHIP C 0.5PF B		C375			CC73GCH1H120J	CHIP C 12PF J	K2,SK2
C302			CC73GCH1H0R5B	CHIP C 0.5PF B	K,SK	C375			CC73GCH1H270J	CHIP C 27PF J	K,SK
C302			CC73GCH1H1R5B	CHIP C 1.5PF B	K2,SK2	C376-378			CK73GB1H471K	CHIP C 470PF K	
C306			CC73GCH1H100D	CHIP C 10PF D		C379			CC73GCH1H050C	CHIP C 5.0PF C	K2,SK2
C307			CK73GB1H471K	CHIP C 470PF K		C379			CC73GCH1H060D	CHIP C 6.0PF D	K,SK
C308			CC73GCH1H100D	CHIP C 10PF D	K,SK	C380,381			CK73GB1H471K	CHIP C 470PF K	
C308,309			CC73GCH1H101J	CHIP C 100PF J	K2,SK2	C382			CK73GB1H103K	CHIP C 0.010UF K	
C309			CC73GCH1H101J	CHIP C 100PF J	K,SK	C383			CK73GB1H102K	CHIP C 1000PF K	
C311			CC73GCH1H101J	CHIP C 100PF J	K2,SK2	C384			CK73GB1H103K	CHIP C 0.010UF K	
C311			CC73GCH1H390J	CHIP C 39PF J	K,SK	C385			CK73GB1H471K	CHIP C 470PF K	
C312			C92-0555-05	CHIP-TAN 0.047UF 35WV		C386			C92-0713-05	CHIP-TAN 10UF 6.3WV	
C314			CK73FB1E104K	CHIP C 0.10UF K		C387,388			CC73GCH1H050C	CHIP C 5.0PF C	K,SK
C316			CC73GCH1H080D	CHIP C 8.0PF D	K,SK	C387,388			CC73GCH1H080D	CHIP C 8.0PF D	K2,SK2
C316,317			CC73GCH1H101J	CHIP C 100PF J	K2,SK2	C389			CC73GCH1H020B	CHIP C 2.0PF B	K2,SK2
C317			CC73GCH1H101J	CHIP C 100PF J	K,SK	C389			CC73GCH1H060B	CHIP C 6.0PF B	K,SK
C318			C92-0657-05	CHIP-TAN 2.2UF 20WV		C390			CC73GCH1H080B	CHIP C 8.0PF B	K2,SK2
C320			C92-0657-05	CHIP-TAN 2.2UF 20WV		C390			CC73GCH1H120J	CHIP C 12PF J	K,SK
C322			CK73GB1E473J	CHIP C 0.047UF J	K,SK	C391			CC73GCH1H020B	CHIP C 2.0PF B	K,SK
C322,323			CK73GB1H471K	CHIP C 470PF K	K2,SK2	C391			CC73GCH1H1R5B	CHIP C 1.5PF B	K2,SK2
C323			CK73GB1H471K	CHIP C 470PF K	K,SK	C392			CC73GCH1H120J	CHIP C 12PF J	K,SK
C324			CK73GB1C104K	CHIP C 0.10UF K		C392			CC73GCH1H220J	CHIP C 22PF J	K2,SK2
C325			CK73GB1H102K	CHIP C 1000PF K		C393			CC73GCH1H050B	CHIP C 5.0PF B	K2,SK2
C327			CK73FB1E224K	CHIP C 0.22UF K		C393			CC73GCH1H060B	CHIP C 6.0PF B	K,SK
C331			CK73GB1H103K	CHIP C 0.010UF K		C394			CC73GCH1H020B	CHIP C 2.0PF B	K2,SK2
C333			CC73GCH1H040B	CHIP C 4.0PF B	K2,SK2	C394			CC73GCH1H040B	CHIP C 4.0PF B	K,SK
C333			CC73GCH1H050B	CHIP C 5.0PF B	K,SK	C395			CC73GCH1H020B	CHIP C 2.0PF B	K,SK
C334			CK73GB1H102K	CHIP C 1000PF K		C395			CC73GCH1H2R5B	CHIP C 2.5PF B	K2,SK2
C335			CK73GB1C223K	CHIP C 0.022UF K		C396			CK73GB1H103K	CHIP C 0.010UF K	
C338			C92-0502-05	CHIP-TAN 0.33UF 35WV		C397			CC73GCH1H120J	CHIP C 12PF J	
C339			CK73GB1H471K	CHIP C 470PF K		C398			CC73GCH1H010B	CHIP C 1.0PF B	K,SK

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C398			CC73GCH1H070B	CHIP C 7.0PF B	K2,SK2	C496			CK73GB1C104K	CHIP C 0.10UF K	
C400			CK73FB1H123K	CHIP C 0.012UF K		C497			CK73GB1H102K	CHIP C 1000PF K	
C403			CK73HB1A104K	CHIP C 0.10UF K	K,K2	C498			CC73HCH1H101J	CHIP C 100PF J	
C404			CC73HCH1H050C	CHIP C 5.0PF C	K,K2	C499			CK73GB1H821K	CHIP C 820PF K	
C406			CC73GCH1H0R3B	CHIP C 0.3PF B		C500			CC73HCH1H101J	CHIP C 100PF J	
C407			CK73GB1H103K	CHIP C 0.010UF K		C501			CC73GCH1H220J	CHIP C 22PF J	
C408,409			CC73HCH1H150G	CHIP C 15PF G		C502			CK73HB1H102K	CHIP C 1000PF K	
C410-412			CK73GB1C104K	CHIP C 0.10UF K		C503			CC73GCH1H680J	CHIP C 68PF J	
C420,421			CC73GCH1H101J	CHIP C 100PF J		C504			CK73HB1H102K	CHIP C 1000PF K	
C422			CK73GB1H102K	CHIP C 1000PF K		C505,506			CK73GB1A105K	CHIP C 1.0UF K	
C423			CK73FF1C105Z	CHIP C 1.0UF Z		C507			CK73GB1C104K	CHIP C 0.10UF K	
C424			CK73GB1H102K	CHIP C 1000PF K		C511-513			CK73GB1C104K	CHIP C 0.10UF K	
C425-428			CC73GCH1H101J	CHIP C 100PF J		C514			CC73GCH1H820J	CHIP C 82PF J	
C429			CK73GB1A105K	CHIP C 1.0UF K		C515,516			CK73HB1H102K	CHIP C 1000PF K	
C430,431			CC73GCH1H101J	CHIP C 100PF J		C517			CK73GB1H103K	CHIP C 0.010UF K	
C432			CK73GB1H102K	CHIP C 1000PF K		C518			CK73GB1C104K	CHIP C 0.10UF K	
C433			CK73GB1C104K	CHIP C 0.10UF K		C519,520			CK73GB1H102K	CHIP C 1000PF K	
C434			CK73GB1H561K	CHIP C 560PF K		C524			CK73GB1H102K	CHIP C 1000PF K	
C435			CK73GB1H102K	CHIP C 1000PF K		C525,526			CK73GB1C104K	CHIP C 0.10UF K	
C436,437			CC73GCH1H101J	CHIP C 100PF J		C528			CK73GB1H222K	CHIP C 2200PF K	
C438			CK73GB1E103K	CHIP C 0.010UF K		C529			CC73GCH1H470J	CHIP C 47PF J	
C439			CK73GB1H102K	CHIP C 1000PF K		C530			CK73FB0J106K	CHIP C 10UF K	
C440			CK73GB1C104K	CHIP C 0.10UF K		C531			CK73GB1H102K	CHIP C 1000PF K	
C441			CK73FB0J106K	CHIP C 10UF K		C532			CK73GB1E123K	CHIP C 0.012UF K	
C442			CK73GB1C104K	CHIP C 0.10UF K		C533			CK73GB1E153K	CHIP C 0.015UF K	
C443			CK73GB1H103K	CHIP C 0.010UF K		C534			CK73GB1H102K	CHIP C 1000PF K	
C444			CC73GCH1H390J	CHIP C 39PF J		C535			CK73GB1C683K	CHIP C 0.068UF K	
C445			CC73GCH1H150J	CHIP C 15PF J		C536,537			CK73GB1C104K	CHIP C 0.10UF K	
C446			CK73GB1H103K	CHIP C 0.010UF K		C538			CK73GB1H102K	CHIP C 1000PF K	
C447			CK73HB1A333K	CHIP C 0.033UF K		C539,540			C92-0628-05	CHIP-TAN 10UF 10WV	
C448			CC73GCH1H101J	CHIP C 100PF J		C541			CK73GB1C104K	CHIP C 0.10UF K	
C450			CK73FB0J106K	CHIP C 10UF K		C542			CK73GB1H102K	CHIP C 1000PF K	
C451			CK73GB1H103K	CHIP C 0.010UF K		C543,544			C92-0628-05	CHIP-TAN 10UF 10WV	
C452			CC73GCH1H101J	CHIP C 100PF J		C545			CK73HB1H102K	CHIP C 1000PF K	
C453			CK73GB1C104K	CHIP C 0.10UF K		C546			CK73GB1H103K	CHIP C 0.010UF K	
C454			CK73GB1H103K	CHIP C 0.010UF K		C547-549			CK73HB1H102K	CHIP C 1000PF K	
C455			C92-0589-05	CHIP-TAN 47UF 6.3WV		C550			CC73HCH1H101J	CHIP C 100PF J	
C457			CK73GB1H471K	CHIP C 470PF K		C551-553			CK73HB1H102K	CHIP C 1000PF K	
C459			C92-0628-05	CHIP-TAN 10UF 10WV		C554			CC73HCH1H101J	CHIP C 100PF J	
C460-463			CK73GB1H103K	CHIP C 0.010UF K		C555-557			CK73HB1H102K	CHIP C 1000PF K	
C464			CK73HB1A333K	CHIP C 0.033UF K		C558			CC73HCH1H101J	CHIP C 100PF J	
C465			CC73GCH1H220J	CHIP C 22PF J		C559			CK73HB1H102K	CHIP C 1000PF K	
C467,468			CK73GB1H103K	CHIP C 0.010UF K		C560,561			CK73GB1C104K	CHIP C 0.10UF K	
C469			CK73GB1C104K	CHIP C 0.10UF K		C562-565			C92-0519-05	CHIP-TAN 1.0UF 25WV	
C470			CK73GB1H103K	CHIP C 0.010UF K		C566			CK73FB1C105K	CHIP C 1.0UF K	
C472			CK73GB1C104K	CHIP C 0.10UF K		C567			CC73HCH1H101J	CHIP C 100PF J	
C475			CC73GCH1H101J	CHIP C 100PF J		C568			CK73HB1H102K	CHIP C 1000PF K	
C476			CK73GB1C104K	CHIP C 0.10UF K		C570			CK73FB1C105K	CHIP C 1.0UF K	
C478			CC73HCH1H101J	CHIP C 100PF J		C572,573			CK73GB1H102K	CHIP C 1000PF K	
C479,480			CK73GB1H102K	CHIP C 1000PF K		C574			C92-0672-05	ELECTRO 22UF 16WV	
C481			CK73HB1H102K	CHIP C 1000PF K		C575			C92-0834-05	ELECTRO 47UF 25WV	
C482			CK73FB1A475K	CHIP C 4.7UF K		C576			C92-0836-05	ELECTRO 330UF 16WV	
C483			CK73GB1H103K	CHIP C 0.010UF K		C577			CK73GB1C104K	CHIP C 0.10UF K	
C484			CK73FB1A475K	CHIP C 4.7UF K		C578			C92-0834-05	ELECTRO 47UF 25WV	
C485			CK73FB1H183K	CHIP C 0.018UF K		C579			CK73GB1H102K	CHIP C 1000PF K	
C487			CK73HB1H102K	CHIP C 1000PF K		C580			C92-0834-05	ELECTRO 47UF 25WV	
C489			CK73GB1C104K	CHIP C 0.10UF K		C581,582			CK73GB1H102K	CHIP C 1000PF K	
C490			CK73HB1H102K	CHIP C 1000PF K		C583			CK73GB1H471K	CHIP C 470PF K	
C491,492			CK73GB1C104K	CHIP C 0.10UF K		C584-587			CC73GCH1H101J	CHIP C 100PF J	
C493			CK73FB1A475K	CHIP C 4.7UF K		C588			CK73GB1H102K	CHIP C 1000PF K	

K : TK-8180H(K) K2 : TK-8180H(K2) SK : TK-8182H(K) SK2 : TK-8182H(K2)

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C591			CK73GB1C104K	CHIP C 0.10UF K	
C592,593			CC73GCH1H070D	CHIP C 7.0PF D	
C594			CK73GB1H471K	CHIP C 470PF K	
C595			CC73GCH1H101J	CHIP C 100PF J	
C596			CK73GB1C104K	CHIP C 0.10UF K	
C597,598			CK73GB1H103K	CHIP C 0.010UF K	
C701			CK73GB1H102K	CHIP C 1000PF K	
C702-704			CC73GCH1H101J	CHIP C 100PF J	
C705-711			CK73GB1H102K	CHIP C 1000PF K	
C712			CC73GCH1H101J	CHIP C 100PF J	
C713			CK73GB1H102K	CHIP C 1000PF K	
C714,715			CC73GCH1H101J	CHIP C 100PF J	
C716,717			CK73GB1H102K	CHIP C 1000PF K	
C718-720			CC73GCH1H101J	CHIP C 100PF J	
C721			CK73GB1H102K	CHIP C 1000PF K	
C722,723			CC73GCH1H101J	CHIP C 100PF J	
C801			C92-0777-05	ELECTRO 1000UF 25WV	
C802			CK73GB1H102K	CHIP C 1000PF K	
C803			CK73GB1E473J	CHIP C 0.047UF J	
C804			CC73GCH1H471J	CHIP C 470PF J	
C805			CK73GB1H102K	CHIP C 1000PF K	
C806			CC73GCH1H101J	CHIP C 100PF J	
C807			CK73GB1E473J	CHIP C 0.047UF J	
C808			CK73GB1C104K	CHIP C 0.10UF K	
C809			CC73GCH1H471J	CHIP C 470PF J	
C810			CK73GB1E473J	CHIP C 0.047UF J	
C811,812			CK73GB1C104K	CHIP C 0.10UF K	
C813,814			CC73GCH1H471J	CHIP C 470PF J	
C815			C92-0585-05	CHIP-TAN 4.7UF 16WV	
C816			C92-0628-05	CHIP-TAN 10UF 10WV	
C817			CC73GCH1H471J	CHIP C 470PF J	
C818			CK73GB1H472K	CHIP C 4700PF K	
C819,820			CK73GB1C104K	CHIP C 0.10UF K	
C821			C92-0585-05	CHIP-TAN 4.7UF 16WV	
C822			CC73GCH1H471J	CHIP C 470PF J	
C823			CK73GB1H102K	CHIP C 1000PF K	
C824			CK73GB1H103K	CHIP C 0.010UF K	
C825			CK73HB1H102K	CHIP C 1000PF K	
C826			CK73GB1H471K	CHIP C 470PF K	
C827,828			CK73GB1H102K	CHIP C 1000PF K	
C831,832			C92-0585-05	CHIP-TAN 4.7UF 16WV	
TC301,302			C05-0396-05	CERAMIC TRIMMER CAPACITOR (8PF)	
CN1-3			E23-1278-05	TERMINAL	
CN13			E23-1278-05	TERMINAL	
CN100-102			E23-1278-05	TERMINAL	
CN202,203			E23-1278-05	TERMINAL	
CN301,302			E40-6404-05	PIN ASSY	
CN322,323			E23-1278-05	TERMINAL	
CN326			E23-1278-05	TERMINAL	
CN329			E23-1278-05	TERMINAL	
CN403			E40-6361-05	PIN ASSY	
CN427			E40-6371-05	FLAT CABLE CONNECTOR	
CN428			E40-6373-05	PIN ASSY	
CN429			E40-6412-05	FLAT CABLE CONNECTOR	
CN701			E40-6371-05	FLAT CABLE CONNECTOR	
CN802,803			E23-1260-04	TERMINAL	
CN804			E40-3246-05	PIN ASSY	
CN815			E23-1278-05	TERMINAL	
J401			E11-0425-05	3.5D PHONE JACK (3P)	
Ref. No.	Address	New parts	Parts No.	Description	Destination
J701			E58-0494-05	SUB SOCKET (D)	
F401			F53-0352-05	FUSE (2A)	
F801			F53-0278-05	FUSE (5A)	
CN401			J19-5386-05	HOLDER	K,K2
CD171			L79-1701-05	TUNING COIL	
CF171			L72-0376-05	CERAMIC FILTER	
CF172			L72-0372-05	CERAMIC FILTER	
L1			L40-1875-92	SMALL FIXED INDUCTOR (18NH)	
L2			L92-0140-05	CHIP FERRITE	
L3			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	
L4			L92-0140-05	CHIP FERRITE	
L5,6			L92-0179-05	CHIP FERRITE	
L7			L34-4638-05	AIR-CORE COIL	
L8			L34-4758-05	AIR-CORE COIL	
L9,10			L34-4743-05	AIR-CORE COIL	
L12			L34-4743-05	AIR-CORE COIL	
L13			L34-4482-05	AIR-CORE COIL	
L14			L40-1275-92	SMALL FIXED INDUCTOR (12NH)	K2,SK2
L15			L92-0179-05	CHIP FERRITE	
L101			L41-1078-14	SMALL FIXED INDUCTOR (10NH)	K2,SK2
L101			L41-8268-14	SMALL FIXED INDUCTOR (8.2NH)	K,SK
L108			L92-0140-05	CHIP FERRITE	
L109			L41-1278-14	SMALL FIXED INDUCTOR (12NH)	K2,SK2
L109			L41-1878-14	SMALL FIXED INDUCTOR (18NH)	K,SK
L110-113			L34-4565-05	AIR-CORE COIL	K,SK
L110-113			L34-4566-05	AIR-CORE COIL	K2,SK2
L114-117			L41-1078-14	SMALL FIXED INDUCTOR (10NH)	K2,SK2
L114-117			L41-8268-14	SMALL FIXED INDUCTOR (8.2NH)	K,SK
L119			L41-2263-14	SMALL FIXED INDUCTOR (2.2NH)	K2,SK2
L119			L41-3378-14	SMALL FIXED INDUCTOR (33NH)	K,SK
L171,172			L41-1578-14	SMALL FIXED INDUCTOR (15NH)	K,SK
L171,172			L41-1878-14	SMALL FIXED INDUCTOR (18NH)	K2,SK2
L173,174			L39-1421-05	TOROIDAL COIL	
L175			L92-0140-05	CHIP FERRITE	
L176			L39-1421-05	TOROIDAL COIL	
L177			L41-2785-14	SMALL FIXED INDUCTOR (270NH)	
L178,179			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L180			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L181			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L182			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L183,184			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L185			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L186			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L187			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L188			L40-8281-86	SMALL FIXED INDUCTOR (0.82UH)	
L189			L40-1091-86	SMALL FIXED INDUCTOR (1.0UH)	
L251			L33-1468-05	SMALL FIXED INDUCTOR	
L301			L40-2295-85	SMALL FIXED INDUCTOR (2.2UH)	
L302			L92-0140-05	CHIP FERRITE	
L304-306			L92-0140-05	CHIP FERRITE	
L309,310			L40-1095-85	SMALL FIXED INDUCTOR (1.0UH)	
L311,312			L41-1098-08	SMALL FIXED INDUCTOR (1.0UH)	
L314			L34-4607-05	AIR-CORE COIL	K,SK
L314			L34-4608-05	AIR-CORE COIL	K2,SK2
L315-317			L41-1098-08	SMALL FIXED INDUCTOR (1.0UH)	
L318			L40-2775-92	SMALL FIXED INDUCTOR (27NH)	K2,SK2
L318,319			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	K,SK
L319			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	K2,SK2

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L320			L40-1075-92	SMALL FIXED INDUCTOR (10NH)	K,SK	R29			RK73GB2A823J	CHIP R 82K J 1/10W	K,SK
L320,321			L40-1575-92	SMALL FIXED INDUCTOR (15NH)	K2,SK2	R30			R92-1061-05	JUMPER REST 0 OHM	
L321			L40-8265-92	SMALL FIXED INDUCTOR (8.2NH)	K,SK	R31			RK73GB2A332J	CHIP R 3.3K J 1/10W	
L322			L41-5668-14	SMALL FIXED INDUCTOR (5.6NH)	K,SK	R33			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
L322,323			L41-5668-14	SMALL FIXED INDUCTOR (5.6NH)	K2,SK2	R38,39			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
L323			L41-4763-14	SMALL FIXED INDUCTOR (4.7NH)	K,SK	R71			RK73GB2A563J	CHIP R 56K J 1/10W	
L324			L41-2263-14	SMALL FIXED INDUCTOR (2.2NH)	K,SK	R72			RK73GB2A333J	CHIP R 33K J 1/10W	
L324			L41-3363-14	SMALL FIXED INDUCTOR (3.3NH)	K2,SK2	R75			RK73GB2A473J	CHIP R 47K J 1/10W	
L325			L34-4605-05	AIR-CORE COIL	K,SK	R76-78			RK73GB2A104J	CHIP R 100K J 1/10W	
L325			L34-4645-05	AIR-CORE COIL	K2,SK2	R79			RK73GB2A124J	CHIP R 120K J 1/10W	K2,SK2
L326			L41-1098-08	SMALL FIXED INDUCTOR (1.0UH)	K,SK	R79			RK73GB2A224J	CHIP R 220K J 1/10W	K,SK
L326			L41-4785-08	SMALL FIXED INDUCTOR (470NH)	K2,SK2	R81,82			RK73GB2A104J	CHIP R 100K J 1/10W	
L327			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	K,SK	R84			RK73GB2A124J	CHIP R 120K J 1/10W	K,SK
L327,328			L40-1875-92	SMALL FIXED INDUCTOR (18NH)	K2,SK2	R84			RK73GB2A823J	CHIP R 82K J 1/10W	K2,SK2
L328			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	K,SK	R85			RK73GB2A104J	CHIP R 100K J 1/10W	
L401,402			L92-0138-05	CHIP FERRITE		R86			RK73GB2A824J	CHIP R 820K J 1/10W	
L403-407			L92-0140-05	CHIP FERRITE		R87			RK73GB2A393J	CHIP R 39K J 1/10W	
L408			L92-0138-05	CHIP FERRITE		R88,89			RK73GB2A104J	CHIP R 100K J 1/10W	
L409			L92-0140-05	CHIP FERRITE		R90			RK73GB2A334J	CHIP R 330K J 1/10W	
L410,411			L92-0179-05	CHIP FERRITE		R108			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
L418			L92-0179-05	CHIP FERRITE		R109			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L701,702			L92-0140-05	CHIP FERRITE		R115,116			RK73GB2A183J	CHIP R 18K J 1/10W	
X171			L77-1762-05	CRYSTAL RESONATOR (44.395MHZ)		R119			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
X301			L77-1952-05	TCXO (16.8MHZ)		R120			RK73GB2A221J	CHIP R 220 J 1/10W	
X401			L77-1802-05	CRYSTAL RESONATOR (32768HZ)	K,K2	R121-124			RK73GB2A104J	CHIP R 100K J 1/10W	
X403			L77-1965-05	CRYSTAL RESONATOR (3.6864MHZ)		R126			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
X404			L77-1950-05	CRYSTAL RESONATOR (11.0592MHZ)		R129-133			RK73GB2A104J	CHIP R 100K J 1/10W	
XF171			L71-0618-05	MCF (44.85M)		R134			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
CP401			R90-0740-05	MULTIPLE RESISTOR	K,K2	R171			RK73GB2A271J	CHIP R 270 J 1/10W	
CP402-417			RK75HA1J102J	CHIP-COM 1.0K J 1/16W		R172			RK73GB2A180J	CHIP R 18 J 1/10W	
R1			RK73GB2A821J	CHIP R 820 J 1/10W		R173			RK73GB2A271J	CHIP R 270 J 1/10W	
R2			RK73GB2A5R6J	CHIP R 5.6 J 1/10W		R174			RK73GB2A680J	CHIP R 68 J 1/10W	
R3			RK73GB2A821J	CHIP R 820 J 1/10W		R175			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R4			RK73GB2A333J	CHIP R 33K J 1/10W		R176			RK73GB2A470J	CHIP R 47 J 1/10W	
R5			RK73GB2A682J	CHIP R 6.8K J 1/10W		R177			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R6			RK73GB2A221J	CHIP R 220 J 1/10W		R178			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R7			RK73GB2A100J	CHIP R 10 J 1/10W		R179			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R8			RK73GB2A471J	CHIP R 470 J 1/10W		R180			RK73GB2A821J	CHIP R 820 J 1/10W	
R9			RK73GB2A220J	CHIP R 22 J 1/10W		R181			RK73GB2A331J	CHIP R 330 J 1/10W	
R10			RK73GB2A561J	CHIP R 560 J 1/10W		R182			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R11			RK73GB2A272J	CHIP R 2.7K J 1/10W		R183			RK73GB2A680J	CHIP R 68 J 1/10W	
R12			RK73GB2A100J	CHIP R 10 J 1/10W		R184			RK73GB2A100J	CHIP R 10 J 1/10W	
R13			RK73GB2A331J	CHIP R 330 J 1/10W		R185			RK73GB2A821J	CHIP R 820 J 1/10W	
R14			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R186			RK73GB2A331J	CHIP R 330 J 1/10W	
R15			RK73FB2B221J	CHIP R 220 J 1/8W		R187			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R16,17			RK73FB2B470J	CHIP R 47 J 1/8W		R188			RK73GB2A680J	CHIP R 68 J 1/10W	
R18			RK73FB2B221J	CHIP R 220 J 1/8W		R189			RK73GB2A100J	CHIP R 10 J 1/10W	
R19			RK73GB2A151J	CHIP R 150 J 1/10W		R190			RK73GB2A153J	CHIP R 15K J 1/10W	
R21			RK73GB2A331J	CHIP R 330 J 1/10W	K,SK	R191,192			RK73GB2A223J	CHIP R 22K J 1/10W	
R21			RK73GB2A471J	CHIP R 470 J 1/10W	K2,SK2	R193			RK73GB2A473J	CHIP R 47K J 1/10W	
R22			RK73GB2A102J	CHIP R 1.0K J 1/10W		R194,195			RK73GB2A223J	CHIP R 22K J 1/10W	
R23			RK73GB2A682J	CHIP R 6.8K J 1/10W		R196			RK73GB2A153J	CHIP R 15K J 1/10W	
R24			RK73GB2A104J	CHIP R 100K J 1/10W		R197,198			RK73GB2A334J	CHIP R 330K J 1/10W	
R25			R92-1261-05	CHIP R 150 J 1/2W		R199			RK73GB2A560J	CHIP R 56 J 1/10W	
R26			RK73GB2A103J	CHIP R 10K J 1/10W	K,SK	R200			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R26			RK73GB2A822J	CHIP R 8.2K J 1/10W	K2,SK2	R202			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R27			RK73GB2A104J	CHIP R 100K J 1/10W		R203			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R28			RK73GB2A000JX	CHIP R 0.0 J 1/10W	K,SK	R204			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R29			RK73GB2A104J	CHIP R 100K J 1/10W	K2,SK2	R205			RK73GB2A332J	CHIP R 3.3K J 1/10W	
						R206			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K : TK-8180H(K) K2 : TK-8180H(K2) SK : TK-8182H(K) SK2 : TK-8182H(K2)

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R207			RK73GB2A473J	CHIP R 47K J 1/10W		R349,350			RK73GB2A333J	CHIP R 33K J 1/10W	K,SK
R208			RK73GB2A392J	CHIP R 3.9K J 1/10W		R350			RK73GB2A393J	CHIP R 39K J 1/10W	K2,SK2
R209			RK73GB2A100J	CHIP R 10 J 1/10W		R351			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R210			RK73GB2A272J	CHIP R 2.7K J 1/10W		R352			RK73GB2A100J	CHIP R 10 J 1/10W	K,SK
R212			RK73GB2A104J	CHIP R 100K J 1/10W		R352			RK73GB2A101J	CHIP R 100 J 1/10W	K2,SK2
R217			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R353			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R221			RK73GB2A473J	CHIP R 47K J 1/10W		R354			RK73GB2A121J	CHIP R 120 J 1/10W	K2,SK2
R251			RK73GB2A102J	CHIP R 1.0K J 1/10W		R355			RK73GB2A101J	CHIP R 100 J 1/10W	K2,SK2
R252			RK73GB2A472J	CHIP R 4.7K J 1/10W		R355			RK73GB2A560J	CHIP R 56 J 1/10W	K,SK
R253			RK73GB2A103J	CHIP R 10K J 1/10W		R356			RK73GB2A103J	CHIP R 10K J 1/10W	K2,SK2
R254,255			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R356,357			RK73GB2A103J	CHIP R 10K J 1/10W	K,SK
R256			RK73GB2A124J	CHIP R 120K J 1/10W		R357,358			RK73GB2A223J	CHIP R 22K J 1/10W	K2,SK2
R257			RK73GB2A153J	CHIP R 15K J 1/10W		R358			RK73GB2A822J	CHIP R 8.2K J 1/10W	K,SK
R258			RK73GB2A220J	CHIP R 22 J 1/10W		R359			RK73GB2A101J	CHIP R 100 J 1/10W	K,SK
R292			RK73GB2A000JX	CHIP R 0.0 J 1/10W	K,SK	R359,360			RK73GB2A101J	CHIP R 100 J 1/10W	K2,SK2
R292,293			RK73GB2A000JX	CHIP R 0.0 J 1/10W	K2,SK2	R360			RK73GB2A121J	CHIP R 120 J 1/10W	K,SK
R295			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R361			RK73GB2A221J	CHIP R 220 J 1/10W	
R298			RK73HB1J000JX	CHIP R 0.0 J 1/16W		R362			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R301			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R365,366			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R302			RK73GB2A100J	CHIP R 10 J 1/10W		R367			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R303			RK73GB2A561J	CHIP R 560 J 1/10W		R369			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R305			RK73GB2A560J	CHIP R 56 J 1/10W		R370			RK73GB2A103J	CHIP R 10K J 1/10W	K,SK
R306			RK73GB2A183J	CHIP R 18K J 1/10W		R370			RK73GB2A183J	CHIP R 18K J 1/10W	K2,SK2
R307			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R371			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R308			RK73GB2A392J	CHIP R 3.9K J 1/10W		R373			RK73GB2A000JX	CHIP R 0.0 J 1/10W	K2,SK2
R309,310			RK73GB2A101J	CHIP R 100 J 1/10W		R373			RK73GB2A100J	CHIP R 10 J 1/10W	K,SK
R311			RK73GB2A182J	CHIP R 1.8K J 1/10W	K,SK	R375			RK73GB2A331J	CHIP R 330 J 1/10W	K,SK
R311,312			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2,SK2	R375			RK73GB2A821J	CHIP R 820 J 1/10W	K2,SK2
R312			RK73GB2A102J	CHIP R 1.0K J 1/10W	K,SK	R376,377			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R315			RK73GB2A102J	CHIP R 1.0K J 1/10W		R378			RK73GB2A103J	CHIP R 10K J 1/10W	
R316			RK73GB2A104J	CHIP R 100K J 1/10W	K,SK	R401			RK73HB1J362D	CHIP R 3.6K D 1/16W	K,K2
R316			RK73GB2A823J	CHIP R 82K J 1/10W	K2,SK2	R402			RK73HB1J512D	CHIP R 5.1K D 1/16W	K,K2
R317			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R403			RK73HB1J105D	CHIP R 1.0M D 1/16W	
R318			R92-1301-05	CHIP R 4.7K J 1/4W	K2,SK2	R405,406			RK73HB1J474J	CHIP R 470K J 1/16W	
R318			R92-2577-05	METAL-R 1.8K J 1/4W	K,SK	R407			RK73HB1J103J	CHIP R 10K J 1/16W	
R319			RK73GB2A100J	CHIP R 10 J 1/10W		R408,409			RK73HB1J471J	CHIP R 470 J 1/16W	
R320			RK73GB2A180J	CHIP R 18 J 1/10W		R410			RK73HB1J103J	CHIP R 10K J 1/16W	
R321			RK73GB2A103J	CHIP R 10K J 1/10W		R411,412			RK73HB1J474J	CHIP R 470K J 1/16W	
R322			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R414			RK73HB1J103J	CHIP R 10K J 1/16W	
R323			RK73GB2A102J	CHIP R 1.0K J 1/10W		R415			RK73HB1J474J	CHIP R 470K J 1/16W	
R325			RK73GB2A154J	CHIP R 150K J 1/10W		R416			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R326			RK73GB2A271J	CHIP R 270 J 1/10W	K,SK	R418,419			RK73HB1J473J	CHIP R 47K J 1/16W	
R326			RK73GB2A331J	CHIP R 330 J 1/10W	K2,SK2	R420			RK73HB1J334J	CHIP R 330K J 1/16W	
R327			RK73GB2A100J	CHIP R 10 J 1/10W		R421,422			RK73HB1J473J	CHIP R 47K J 1/16W	
R330			RK73GB2A100J	CHIP R 10 J 1/10W		R423			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R332			RK73GB2A100J	CHIP R 10 J 1/10W		R424-427			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R333-335			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R428			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R336			RK73GB2A102J	CHIP R 1.0K J 1/10W		R429,430			RK73HB1J471J	CHIP R 470 J 1/16W	
R337			RK73GB2A103J	CHIP R 10K J 1/10W		R431			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R339			RK73GB2A104J	CHIP R 100K J 1/10W		R432			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R340			RK73GB2A101J	CHIP R 100 J 1/10W		R433			RK73HB1J471J	CHIP R 470 J 1/16W	SK,SK2
R341,342			RK73GB2A181J	CHIP R 180 J 1/10W		R434			RK73HB1J473J	CHIP R 47K J 1/16W	K,K2
R343			RK73GB2A472J	CHIP R 4.7K J 1/10W		R435			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R344			RK73GB2A180J	CHIP R 18 J 1/10W	K2,SK2	R437			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R344			RK73GB2A470J	CHIP R 47 J 1/10W	K,SK	R439			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R345			RK73GB2A000JX	CHIP R 0.0 J 1/10W	K,SK	R440-444			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R345			RK73GB2A221J	CHIP R 220 J 1/10W	K2,SK2	R445,446			RK73GB2A103J	CHIP R 10K J 1/10W	
R347			RK73GB2A472J	CHIP R 4.7K J 1/10W		R447			RK73HB1J474J	CHIP R 470K J 1/16W	
R348			RK73GB2A103J	CHIP R 10K J 1/10W		R448			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R349			RK73GB2A183J	CHIP R 18K J 1/10W	K2,SK2	R449			RK73HB1J474J	CHIP R 470K J 1/16W	

K : TK-8180H(K) K2 : TK-8180H(K2) SK : TK-8182H(K) SK2 : TK-8182H(K2)

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R450			RK73HB1J102J	CHIP R 1.0K J 1/16W		R527			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R451			RK73HB1J474J	CHIP R 470K J 1/16W		R528			RK73GB2A183J	CHIP R 18K J 1/10W	
R452			RK73HB1J102J	CHIP R 1.0K J 1/16W		R529			RK73GB2A684J	CHIP R 680K J 1/10W	
R453			RK73HB1J474J	CHIP R 470K J 1/16W		R530			RK73GB2A563J	CHIP R 56K J 1/10W	
R454			RK73HB1J102J	CHIP R 1.0K J 1/16W		R531			RK73GB2A103J	CHIP R 10K J 1/10W	
R455,456			RK73HB1J471J	CHIP R 470 J 1/16W		R532			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R457			RK73HB1J473J	CHIP R 47K J 1/16W		R533			RK73GB2A104J	CHIP R 100K J 1/10W	
R458,459			RK73HB1J474J	CHIP R 470K J 1/16W		R534			RK73GB2A273J	CHIP R 27K J 1/10W	
R460			RK73HB1J102J	CHIP R 1.0K J 1/16W	SK,SK2	R535			RK73GB2A394J	CHIP R 390K J 1/10W	
R461			RK73HB1J474J	CHIP R 470K J 1/16W	K,K2	R536			RK73GB2A153J	CHIP R 15K J 1/10W	
R461,462			RK73HB1J474J	CHIP R 470K J 1/16W	SK,SK2	R537,538			RK73GB2A104J	CHIP R 100K J 1/10W	
R463,464			RK73HB1J102J	CHIP R 1.0K J 1/16W	SK,SK2	R539			RK73GB2A393J	CHIP R 39K J 1/10W	
R465			RK73GB2A473J	CHIP R 47K J 1/10W		R540			RK73GB2A473J	CHIP R 47K J 1/10W	
R466			RK73HB1J473J	CHIP R 47K J 1/16W		R541			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R467			RK73HB1J000JX	CHIP R 0.0 J 1/16W		R542			RK73GB2A154J	CHIP R 150K J 1/10W	
R468			RK73HB1J473J	CHIP R 47K J 1/16W		R544			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R469			RK73HB1J102J	CHIP R 1.0K J 1/16W		R545			RK73GB2A103J	CHIP R 10K J 1/10W	
R470			RK73GB2A102J	CHIP R 1.0K J 1/10W		R546			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R471,472			RK73HB1J102J	CHIP R 1.0K J 1/16W		R548			RK73GB2A823J	CHIP R 82K J 1/10W	
R473,474			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R549			RK73GB2A473J	CHIP R 47K J 1/10W	
R475			RK73GB2A101J	CHIP R 100 J 1/10W		R550			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R476			RK73HB1J473J	CHIP R 47K J 1/16W		R552			RK73GB2A103J	CHIP R 10K J 1/10W	
R477-481			RK73HB1J474J	CHIP R 470K J 1/16W	SK,SK2	R553			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R477,478			RK73HB1J474J	CHIP R 470K J 1/16W	K,K2	R554			RK73GB2A563J	CHIP R 56K J 1/10W	
R481			RK73HB1J474J	CHIP R 470K J 1/16W	K,K2	R555			RK73GB2A123J	CHIP R 12K J 1/10W	
R482			RK73HB1J473J	CHIP R 47K J 1/16W		R556			RK73GB2A563J	CHIP R 56K J 1/10W	
R483-486			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R557			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R487			RK73GB2A185J	CHIP R 1.8M J 1/10W		R558			RK73GB2A224J	CHIP R 220K J 1/10W	
R488,489			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R559			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R490			RK73GB2A184J	CHIP R 180K J 1/10W		R565			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R491			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R566			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R492			RK73GB2A684J	CHIP R 680K J 1/10W		R567			RK73GB2A394J	CHIP R 390K J 1/10W	
R493			RK73GB2A105J	CHIP R 1.0M J 1/10W		R568			RK73GB2A124J	CHIP R 120K J 1/10W	
R494,495			RK73GB2A472J	CHIP R 4.7K J 1/10W		R569			RK73GB2A104J	CHIP R 100K J 1/10W	
R496			RK73GB2A104J	CHIP R 100K J 1/10W		R570			RK73GB2A154J	CHIP R 150K J 1/10W	
R497			RK73GB2A332J	CHIP R 3.3K J 1/10W		R571			RK73GB2A124J	CHIP R 120K J 1/10W	
R498			RK73GB2A274J	CHIP R 270K J 1/10W		R572			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R499			RK73GB2A104J	CHIP R 100K J 1/10W		R573			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R500			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R574,575			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R501			RK73GB2A472J	CHIP R 4.7K J 1/10W		R576			RK73GB2A224J	CHIP R 220K J 1/10W	
R502			RK73GB2A103J	CHIP R 10K J 1/10W		R577,578			RK73HB1J000JX	CHIP R 0.0 J 1/16W	K,K2
R503			RK73GB2A104J	CHIP R 100K J 1/10W		R578			RK73HB1J000JX	CHIP R 0.0 J 1/16W	SK,SK2
R504			RK73GB2A103J	CHIP R 10K J 1/10W		R579			RK73GB2A223J	CHIP R 22K J 1/10W	
R505			RK73GB2A683J	CHIP R 68K J 1/10W		R580,581			RK73GB2A272J	CHIP R 2.7K J 1/10W	K,SK
R506,507			RK73GB2A224J	CHIP R 220K J 1/10W		R580,581			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2,SK2
R508			RK73GB2A102J	CHIP R 1.0K J 1/10W		R582			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R509			RK73GB2A333J	CHIP R 33K J 1/10W		R583,584			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R511			RK73HB1J152J	CHIP R 1.5K J 1/16W		R585			RK73GB2A184J	CHIP R 180K J 1/10W	
R512			RK73GB2A153J	CHIP R 15K J 1/10W		R586			RK73GB2A151J	CHIP R 150 J 1/10W	K2,SK2
R513			RK73GB2A564J	CHIP R 560K J 1/10W		R586			RK73GB2A271J	CHIP R 270 J 1/10W	K,SK
R514			RK73GB2A183J	CHIP R 18K J 1/10W		R587			RK73GB2A154J	CHIP R 150K J 1/10W	
R515			RK73GB2A104J	CHIP R 100K J 1/10W		R588			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R517			RK73GB2A563J	CHIP R 56K J 1/10W		R589,590			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R519			RK73GB2A104J	CHIP R 100K J 1/10W		R591			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R520			RK73GB2A000JX	CHIP R 0.0 J 1/10W		R592			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R521			RK73GB2A473J	CHIP R 47K J 1/10W		R594			RK73GB2A681J	CHIP R 680 J 1/10W	
R522,523			RK73GB2A104J	CHIP R 100K J 1/10W		R595			RK73GB2A274J	CHIP R 270K J 1/10W	
R524			RK73GB2A103J	CHIP R 10K J 1/10W		R596			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R525			RK73HB1J152J	CHIP R 1.5K J 1/16W		R597			RK73GB2A224J	CHIP R 220K J 1/10W	
R526			RK73GB2A274J	CHIP R 270K J 1/10W		R598			RK73GB2A472J	CHIP R 4.7K J 1/10W	

K : TK-8180H(K) K2 : TK-8180H(K2) SK : TK-8182H(K) SK2 : TK-8182H(K2)

PARTS LIST

TX-RX UNIT (X57-6990-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R599			RK73GB2A184J	CHIP R 180K J 1/10W	
R600			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R601			RK73GB2A474J	CHIP R 470K J 1/10W	
R602			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R603,604			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R606			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R607			RK73GB2A274J	CHIP R 270K J 1/10W	
R608			RK73GB2A184J	CHIP R 180K J 1/10W	
R609			RK73GB2A223J	CHIP R 22K J 1/10W	
R610			RK73GB2A154J	CHIP R 150K J 1/10W	
R611			RK73GB2A103J	CHIP R 10K J 1/10W	
R612,613			RK73GB2A104J	CHIP R 100K J 1/10W	
R614			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R615,616			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R617			RK73GB2A104J	CHIP R 100K J 1/10W	
R618			RK73GB2A224J	CHIP R 220K J 1/10W	
R619			RK73GB2A104J	CHIP R 100K J 1/10W	
R620			RK73GB2A224J	CHIP R 220K J 1/10W	
R621,622			RK73FB2B000JX	CHIP R 0.0 J 1/8W	
R623,624			RK73GB2A473J	CHIP R 47K J 1/10W	
R625			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R629,630			RK73FB2B000JX	CHIP R 0.0 J 1/8W	
R632			RK73GB2A473J	CHIP R 47K J 1/10W	
R633			RK73FB2B000JX	CHIP R 0.0 J 1/8W	
R636			RK73FB2B000JX	CHIP R 0.0 J 1/8W	
R641,642			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R643			RK73GB2A471J	CHIP R 470 J 1/10W	
R644			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R645			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R646			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R647			RK73GB2A104J	CHIP R 100K J 1/10W	
R648			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R651			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R652			RK73GB2A820J	CHIP R 82 J 1/10W	
R653			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R654			RK73FB2B000JX	CHIP R 0.0 J 1/8W	
R655			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R657			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R658			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R659			RK73GB2A333J	CHIP R 33K J 1/10W	
R661			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R663,664			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R672			RK73GB2A334J	CHIP R 330K J 1/10W	
R673			RK73GB2A183J	CHIP R 18K J 1/10W	
R701-705			RK73GB2A473J	CHIP R 47K J 1/10W	
R706-710			RK73GB2A471J	CHIP R 470 J 1/10W	
R711-713			RK73GB2A473J	CHIP R 47K J 1/10W	
R714-720			RK73GB2A471J	CHIP R 470 J 1/10W	
R800			RK73HH1J105D	CHIP R 1.0M D 1/16W	
R801			RK73GB2A224J	CHIP R 220K J 1/10W	
R802			RK73GB2A334J	CHIP R 330K J 1/10W	
R803			RK73GB2A103J	CHIP R 10K J 1/10W	
R804			RK73HH1J104D	CHIP R 100K D 1/16W	
R805			RK73GB2A471J	CHIP R 470 J 1/10W	
R806,807			RK73GB2A103J	CHIP R 10K J 1/10W	
R808,809			RK73GB2A473J	CHIP R 47K J 1/10W	
R811,812			RK73GB2A103J	CHIP R 10K J 1/10W	
R813			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R814			RK73GB2A473J	CHIP R 47K J 1/10W	
R815			RK73GB2A683J	CHIP R 68K J 1/10W	
Ref. No.	Address	New parts	Parts No.	Description	Destination
R818			RK73GB2A473J	CHIP R 47K J 1/10W	K,K2
R900-903			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R904			RK73GB2A473J	CHIP R 47K J 1/10W	
R905			RK73GB2A103J	CHIP R 10K J 1/10W	
R906			RK73HB1J102J	CHIP R 1.0K J 1/16W	
D1			02DZ5.6(X,Y)	ZENER DIODE	
D2			XB15A709	DIODE	
D3,4			XB15A407A2GB	DIODE	
D6-8			HSM88AS	DIODE	
D103-106			1SV286	VARIABLE CAPACITANCE DIODE	
D107-110			1SV291	VARIABLE CAPACITANCE DIODE	
D111			HVC131	DIODE	
D171,172			DAN235E	DIODE	
D173			RB706F-40	DIODE	
D174			MA2S111	DIODE	
D251			1SS388	DIODE	
D308,309			BB664	VARIABLE CAPACITANCE DIODE	
D311			BB664	VARIABLE CAPACITANCE DIODE	
D313			BB664	VARIABLE CAPACITANCE DIODE	
D314			1SV278	VARIABLE CAPACITANCE DIODE	
D315,316			HVC131	DIODE	K,K2
D402-404			1SS388	DIODE	
D405			EMZ6.8N	ZENER DIODE	
D406			02DZ5.1(Y)	ZENER DIODE	
D407			RB706F-40	DIODE	
D408,409			MA742	DIODE	
D412-414			DA204U	DIODE	
D416			DAN202U	DIODE	
D417,418			1SS388	DIODE	
D421-423			1SS388	DIODE	
D600,601			1SS388	DIODE	
D701			02DZ18(X,Y)	ZENER DIODE	
D702,703			1SS355	DIODE	
D704-708			DA204U	DIODE	
D709,710			02DZ18(X,Y)	ZENER DIODE	
D711-713			DA204U	DIODE	
D714			02DZ18(X,Y)	ZENER DIODE	
D801			22ZR-10D	SURGE ABSORBER	
D802			DSA3A1	DIODE	
D804			02DZ18(X,Y)	ZENER DIODE	
D805			02CZ9.1(X,Y)	ZENER DIODE	K2,SK2
IC1	2A,2C		RA55H4047MA-23	MOS-IC	
IC1	2A,2C		RA55H4452M-23	MOS-IC	
IC71,72			TA75W01FU	MOS-IC	
IC171			SPM5001	MOS-IC	
IC172			TA31136FN	MOS-IC	
IC251			MAX5026EUT+T	MOS-IC	
IC301			ADF4111BCP7	MOS-IC	
IC302			TC7S66FU	MOS-IC	
IC401			AT24256N10SU27	ROM IC	
IC402			RV5C386A	MOS-IC	K,K2
IC403			BU4094BCFV	MOS-IC	
IC404			30625MGP169GU	MICROPROCESSOR IC	
IC404			30625MGP238GU	MICROPROCESSOR IC	
IC405			AT29C040A-90TU	ROM IC	
IC406-409			TC75W51FU	MOS-IC	
IC410			M62364FP-F	MOS-IC	
IC411			LMC7101BIM5	MOS-IC	
IC412			TC75W51FU	MOS-IC	
IC413			TC7MZ4053FK	MOS-IC	

PARTS LIST

TX-RX UNIT (X57-6990-XX)


Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC414	2A,2C		TC75W51FU	MOS-IC							
IC415			AQUA-L	MOS-IC							
IC416			ADM202EARN	MOS-IC							
IC417			TA7252AP	ANALOGUE IC							
IC801			S-80942CNNBG9C	MOS-IC							
IC802			XC61CN5002NR	MOS-IC							
IC803			TA7808F	ANALOGUE IC							
IC804			TA7805F	MOS-IC							
IC805			NJM78L05UA	BI-POLAR IC							
IC807			XC6201P502PR	MOS-IC							
Q1			2SC5108(Y)	TRANSISTOR							
Q2			2SC5192	TRANSISTOR							
Q3			DTC114EE	DIGITAL TRANSISTOR							
Q70			DTC114EE	DIGITAL TRANSISTOR							
Q72			2SK1824	FET							
Q103			2SC3357	TRANSISTOR							
Q171,172			2SC5108(Y)	TRANSISTOR							
Q173			DTA114EE	DIGITAL TRANSISTOR							
Q174			DTC144EE	DIGITAL TRANSISTOR							
Q175			2SC4617(Q)	TRANSISTOR							
Q176			2SK1824	FET							
Q177			DTC144EE	DIGITAL TRANSISTOR							
Q178			DTA144EE	DIGITAL TRANSISTOR							
Q179			DTC144EE	DIGITAL TRANSISTOR							
Q251			2SC4617(S)	TRANSISTOR							
Q301			2SC5108(Y)	TRANSISTOR							
Q302,303			2SC4116(BL)	TRANSISTOR							
Q306,307			2SK508NV(K52)	FET							
Q308,309			2SC4116(GR)	TRANSISTOR							
Q310			DTC114EE	DIGITAL TRANSISTOR							
Q311			2SC5108(Y)	TRANSISTOR							
Q312			2SC4617(S)	TRANSISTOR							
Q313			2SC5108(Y)	TRANSISTOR							
Q402			DTC114YE	DIGITAL TRANSISTOR							
Q405			DTA114EE	DIGITAL TRANSISTOR							
Q406			HN1J02FU	FET							
Q409			DTC363EU	DIGITAL TRANSISTOR							
Q410			2SC4116(Y)	TRANSISTOR							
Q411			2SA1586(Y,GR)	TRANSISTOR							
Q412			2SK1824	FET							
Q413,414			2SJ243	FET							
Q415			HN1L02FU	FET							
Q416,417			2SJ243	FET							
Q418			DTC114EE	DIGITAL TRANSISTOR							
Q419			DTC363EU	DIGITAL TRANSISTOR							
Q600			DTA144EE	DIGITAL TRANSISTOR							
Q701,702			2SD2114K(W)	TRANSISTOR							
Q801			2SC2873(Y)	TRANSISTOR							
Q802			DTC114EE	DIGITAL TRANSISTOR							
Q803-805			12A02CH	TRANSISTOR							
Q806-809			DTC114EE	DIGITAL TRANSISTOR							
Q810			2SJ645	FET							
Q811			DTC114TE	DIGITAL TRANSISTOR							
Q812			DTC114EE	DIGITAL TRANSISTOR							
TH1			S1R104J475H	THERMISTOR							
TH171			S1R473J475H	THERMISTOR							

K : TK-8180H(K) K2 : TK-8180H(K2) SK : TK-8182H(K) SK2 : TK-8182H(K2)

TK-8180H/8182H

EXPLODED VIEW (TK-8180H)

- A : N09-2409-05
 B M3 x 8 : N67-3008-48
 C M2.6 x 6 (Br-Tap) : N87-2606-48
 D M2.6 x 8 (Br-Tap) : N87-2608-43

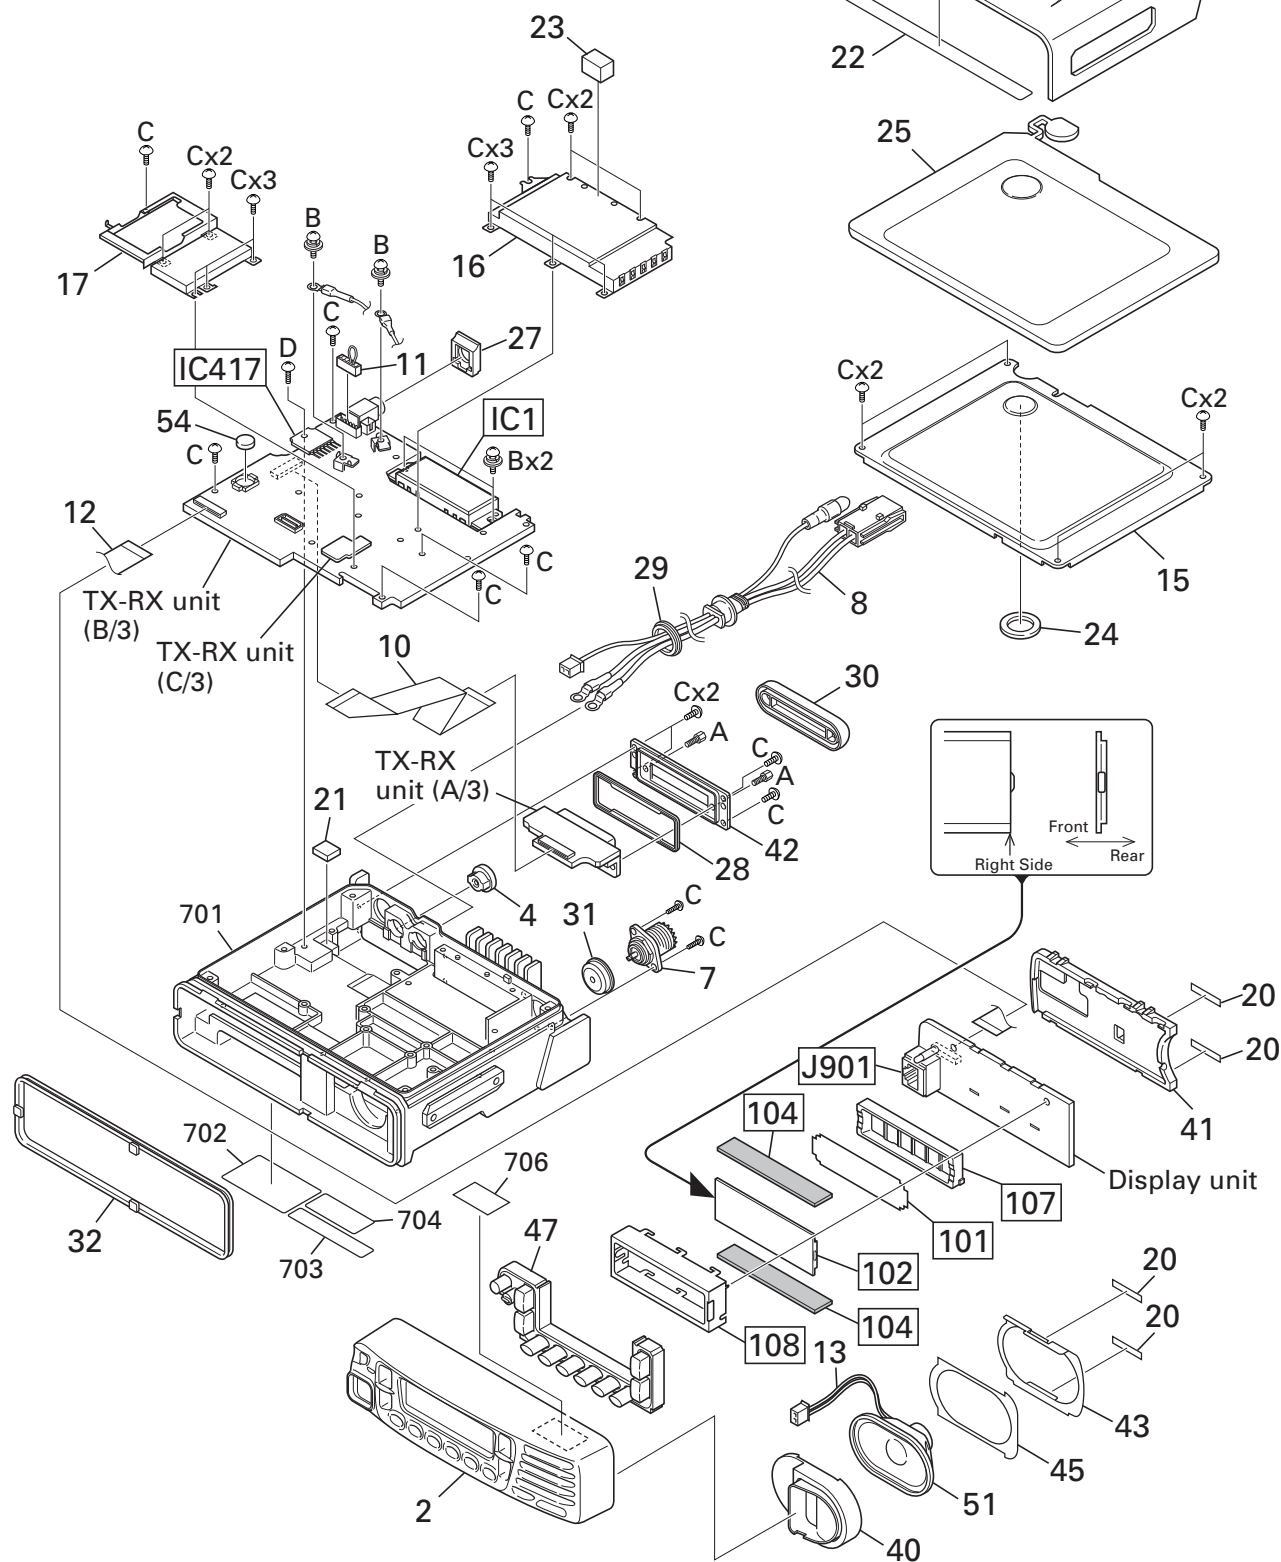

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

