

9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.


• The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

• Screw adjacent to ∇ mark on the product are used for disassembly.

• For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

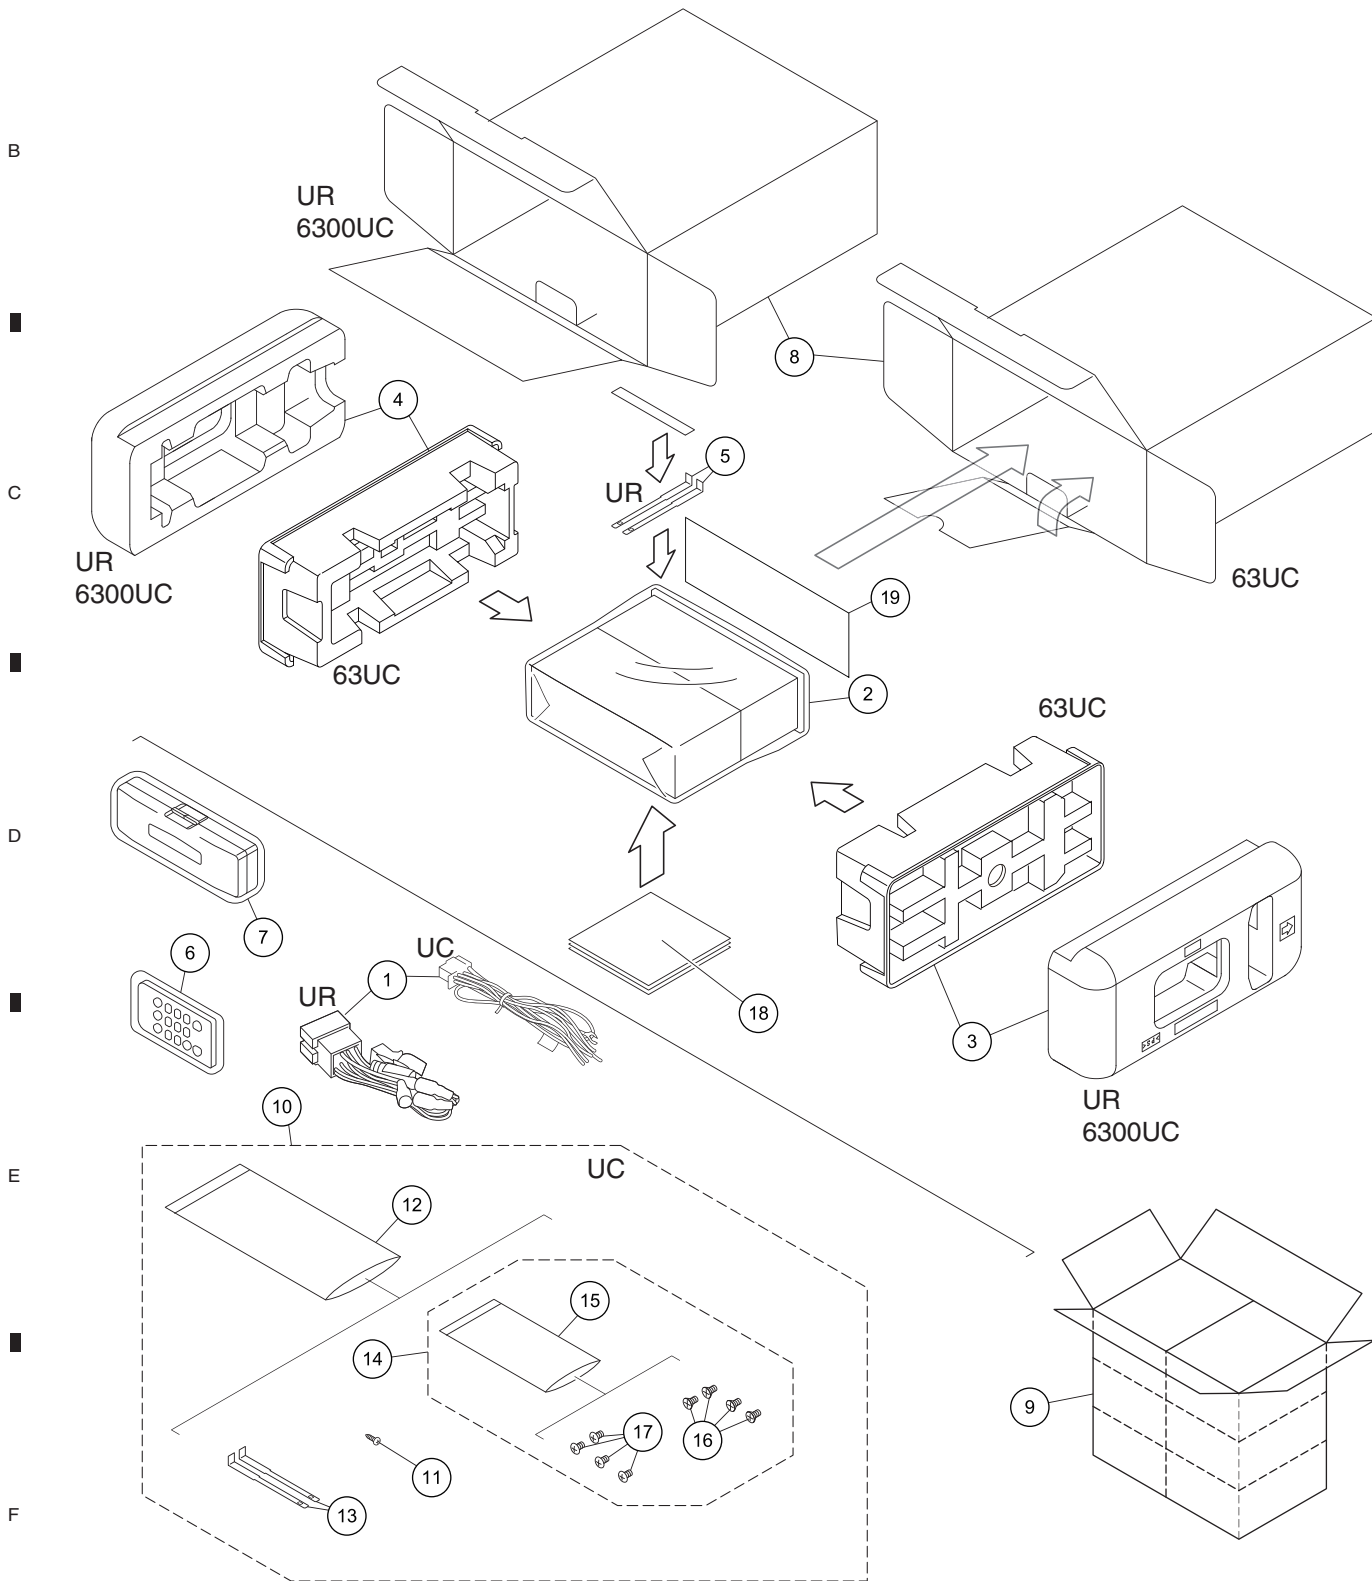


PACKING SECTION PARTS LIST

Mark	No.	Description	DEH-6310SD/XSUR	DEH-6300UB/XSUC	DEH-63UB/XSUC
*	1	Cord Assy	QDP3012	QDP3013	QDP3013
	2	Polyethylene Bag	QEG3001	CEG1173	CEG1173
	3	Protector	QHP3016	QHP3016	CHP4103
	4	Protector	QHP3016	QHP3016	CHP4104
	5	Handle	QNC3021	Not used	Not used
	6	Remote Control Unit	Not used	CXE3669	CXE3669
	7	Case Assy	QXA3129	Not used	Not used
	8	Unit Box	YHG5607	YHG5606	YHG5608
	9	Contain Box	YHL5607	YHL5606	YHL5608
	10	Accessory Assy	Not used	QEA3008	QEA3008
*	11	Screw	Not used	BPZ20P060FTC	BPZ20P060FTC
	12	Polyethylene Bag	Not used	CEG1160	CEG1160
	13	Handle	Not used	QNC3021	QNC3021
	14	Screw Assy	Not used	YEA5072	YEA5072
	15	Polyethylene Bag	Not used	CEG-127	CEG-127
*	16	Screw	Not used	CRZ50P090FTC	CRZ50P090FTC
	17	Screw	Not used	TRZ50P080FTC	TRZ50P080FTC
	18-1	Owner's Manual	YRB5166	YRD5328	YRD5328
	18-2	Warranty Card	YRY5003	CRY1276	CRY1276
	19	Cover	YEG5008	YEG5008	YEG5008

Owner's Manual,Installation Manual

Part No.	Language
YRB5166	Russian
YRD5328	English, French, Spanish(Espanol)

9.2 EXTERIOR

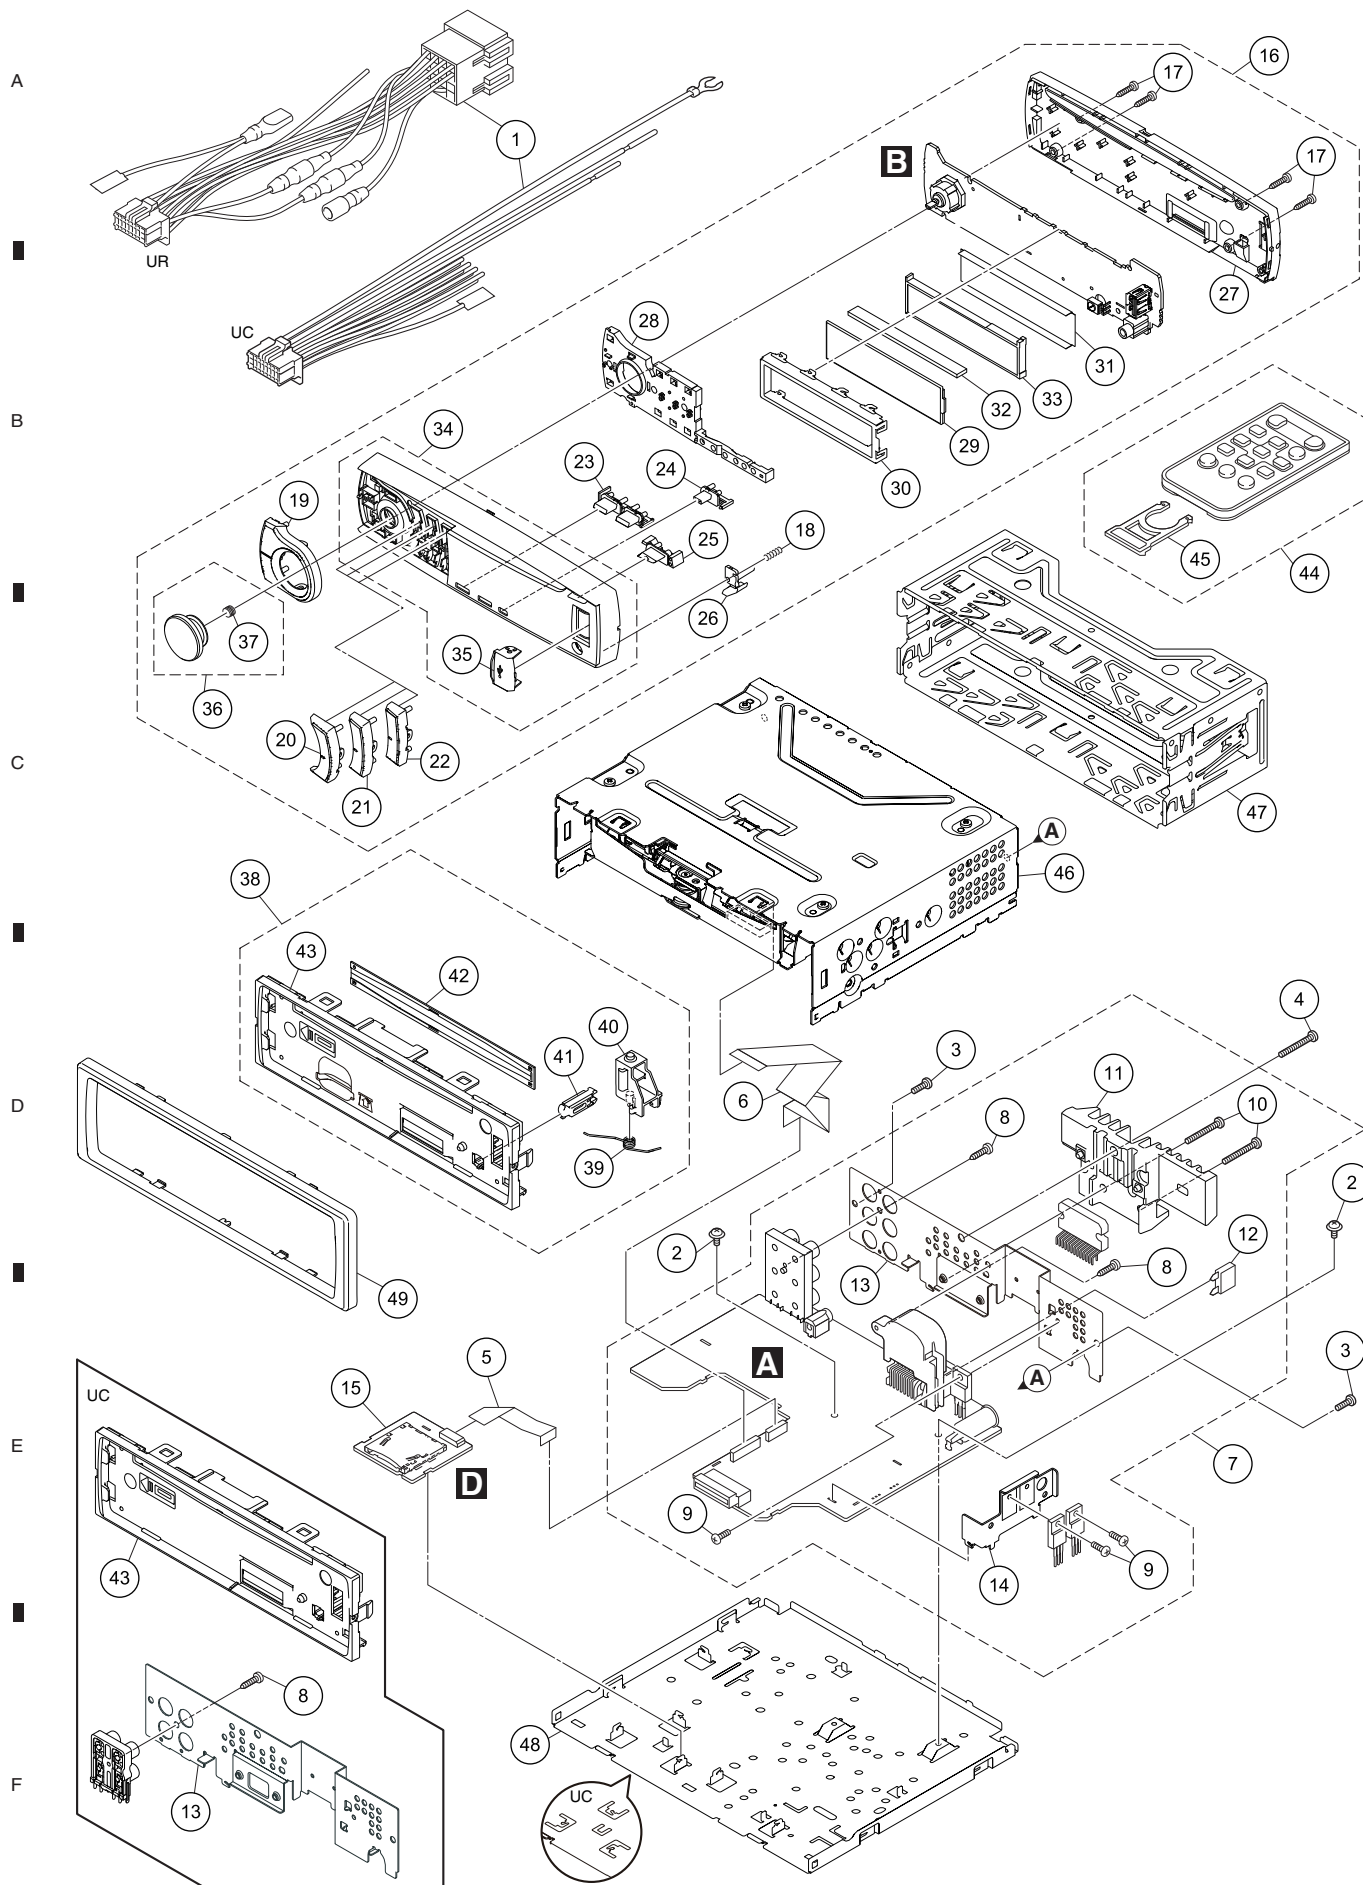

DEH-6310SD/XSUR

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Cord Assy	See Contrast table (2)	26	Button(DETACH)	YAC5430	A
2	Screw	ASZ26P050FTC	27	Cover	YNS5623	
3	Screw	BSZ26P060FTC	28	Lighting Conductor	YNV5213	
4	Screw	BSZ26P120FTC	29	LCD	YAW5110	
5	Cable	See Contrast table (2)	30	Holder	YNC5093	
6	Cable	CDE9337	31	Sheet	YNM5165	
7	Tuner Amp Unit	See Contrast table (2)	32	Connector	YNV5209	
8	Screw	BPZ26P080FTC	33	Lighting Conductor	YNV5211	
9	Screw	BSZ26P060FTC	34	Grille Unit	See Contrast table (2)	
10	Screw	BSZ26P120FTC	35	Door(USB)	YAT5020	
11	Heat Sink	QNR3002	36	Knob Unit	YXC5148	B
⚠ 12	Fuse(10 A)	YEK5001	37	Coil Spring	YBH5015	
13	Holder	See Contrast table (2)	38	Panel Unit	See Contrast table (2)	
14	Holder	YND5063	39	Spring	QBH3001	
15	SD Unit	See Contrast table (2)	40	Arm	QNV3025	
16	Grille Assy	See Contrast table (2)	41	Button	QNV3026	
17	Screw	BPZ20P100FTC	42	Cover	YNN5030	
18	Spring	CBH2210	43	Panel	See Contrast table (2)	
19	Button(LIST, RPT)	YAC5423	44	Remote Control Unit	See Contrast table (2)	
20	Button(1, 4)	YAC5424	45	Cover	See Contrast table (2)	
21	Button(2, 5)	YAC5425	46	CD Mechanism Module(S11.1)	CXK5802	C
22	Button(3, 6)	YAC5426	47	Holder	QNC3020	
23	Button(SRC, BAND)	YAC5427	48	Case	See Contrast table (2)	
24	Button(TA(UR), TAG(UC))	YAC5428	49	Panel	YNS5625	
25	Button(EJECT)	YAC5429				

(2) CONTRAST TABLE

DEH-6310SD/XSUR, DEH-6300UB/XSUC and DEH-63UB/XSUC are constructed the same except for the following:

Mark	No.	Description	DEH-6310SD/XSUR	DEH-6300UB/XSUC	DEH-63UB/XSUC	
*	1	Cord Assy	QDP3012	QDP3013	QDP3013	D
	5	Cable	CDE9107	Not used	Not used	
	7	Tuner Amp Unit	YWM5502	YWM5504	YWM5504	
	13	Holder	YND5061	CND5848	CND5848	
	15	SD Unit	YWM5516	Not used	Not used	
	16	Grille Assy	YXE5023	YXE5022	YXE5024	
	34	Grille Unit	YXA5758	YXA5757	YXA5759	
	38	Panel Unit	YXA5766	YXA5767	YXA5767	
	43	Panel	YNS5628	YNS5629	YNS5629	
	44	Remote Control Unit	Not used	CXE3669	CXE3669	
	45	Cover	Not used	CNS7068	CNS7068	E
	48	Case	YNA5106	YNA5107	YNA5107	

9.3 CD MECHANISM MODULE

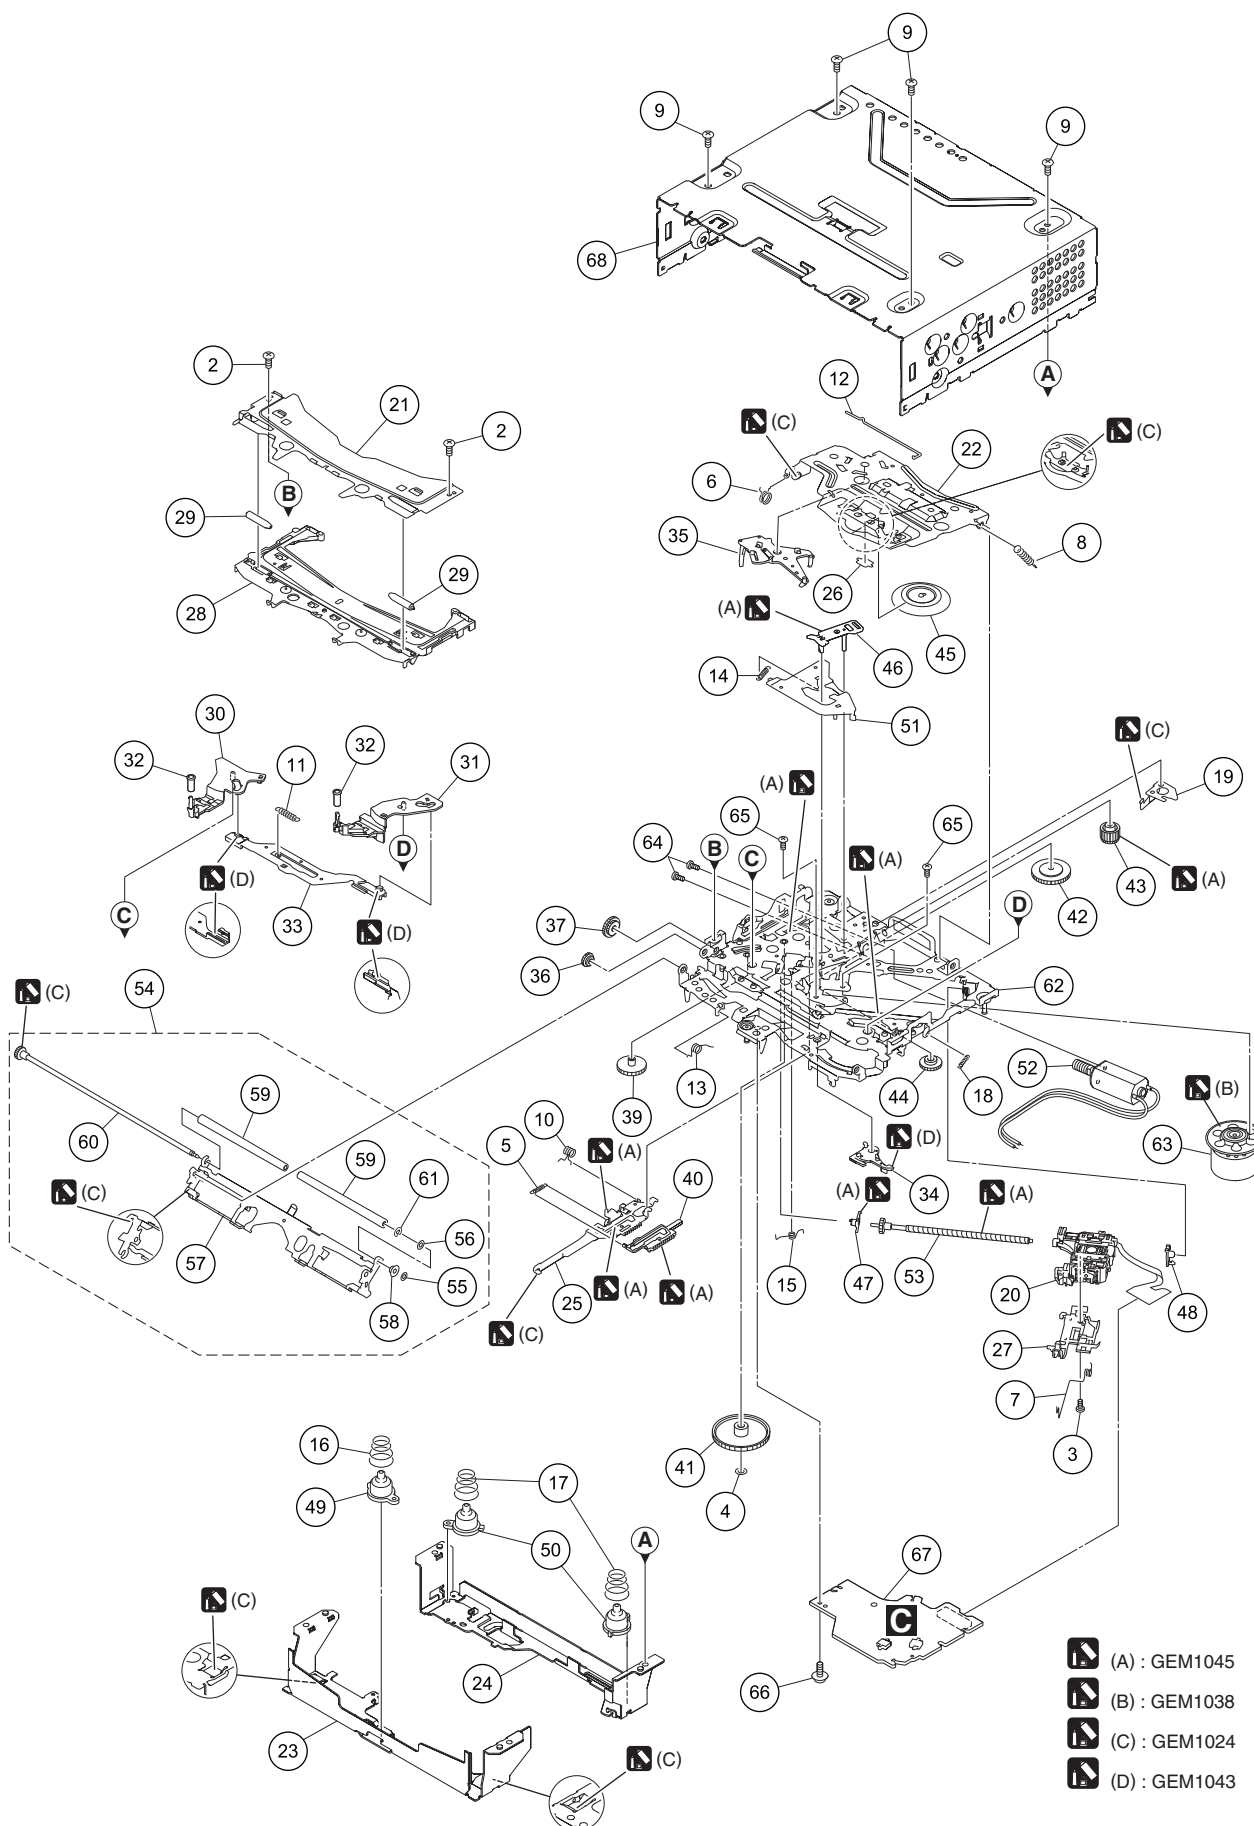

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE3849	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND5886	
10	Spring	CBH3011	58	Collar	CNV6906	
11	Spring	CBH3012	59	Roller	CNW1196	
12	Spring	CBH3014	60	Gear Unit	CXC8893	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE3818	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Spring	CBL1822	67	CD Core Unit (S11.1STD-DOUT)	CWX3985	
20	Pickup Unit(P10.5)(Service)	CXX1942	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Bracket	CND5709				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN2280				
27	Rack	CNV8342				
28	Guide	CNW1171				
29	Roller	CNW1172				D
30	Arm	CNW2157				
31	Arm	CNW1174				
32	Roller	CNW1175				
33	Lever	CNW1176				
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW1188				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.			Part No.	Circuit Symbol and No.			Part No.
A:DEH-6310SD/XSUR				IC 581	(A,42,103) Regulator IC		S-1172B33-E6
B:DEH-6300UB/XSUC				IC 583	(A,43,95) IC		BH12PB3WHFV
C:DEH-63UB/XSUC				IC 591	(A,130,14) IC		341S2162
Unit Number : YWM5502(A)				IC 601	(A,122,96) IC(A)		PEG729A8
: YWM5504(B,C)				IC 601	(A,122,96) IC(B)		PEG730A8
Unit Name : Tuner Amp Unit				IC 651	(A,69,104) IC		S-80827CNMC-B8M
Unit Number : (A)				IC 801	(A,100,21) L-MOS And Gate		TC7SET08FUS1
: (B,C)				IC 831	(A,17,60) IC(A)		NJM2360M
Unit Name : Keyboard Unit				IC 901	(A,155,75) Regulator IC		S-1132B33-U5
Unit Number : CWX3985				IC 911	(A,139,139) IC		NJM2388F84
Unit Name : CD Core Unit(\$11.1STD-DOUT)				Q 201	(A,9,70) Transistor(A)		LSC4081UB
Unit Number : YWM5516(A)				Q 301	(A,9,129) Chip Transistor		RN1910
Unit Name : SD Unit				Q 302	(A,18,129) Chip Transistor(A)		RN1910
				Q 303	(A,25,129) Chip Transistor		RN1910
				Q 361	(A,56,132) Transistor		LTC114EUB
				Q 381	(A,47,132) Transistor		LSC4081UB
				Q 382	(A,36,131) Chip Transistor		RN4983
				Q 591	(A,95,25) Transistor		LSA1576UB
				Q 751	(A,165,61) Transistor		2SD2396
				Q 752	(A,158,46) Chip Transistor		RN4983
				Q 781	(A,54,95) Chip Transistor(A)		2SB1689
				Q 782	(A,57,94) Transistor(A)		LTC114EUB
				Q 783	(A,61,91) Transistor(A)		DTA123EU
				Q 823	(A,28,108) Transistor		2SD2318F5
				Q 824	(A,34,109) Chip Transistor		RN4983
				Q 831	(A,12,80) Chip Transistor(A)		RN4983
				Q 832	(A,11,86) Transistor(A)		2SD1664
				Q 841	(A,135,26) Transistor		LSA1576UB
				Q 842	(A,135,22) Transistor		LTC114EUB
				Q 901	(A,165,73) Transistor		2SD2396
				Q 902	(A,152,55) Chip Transistor		RN4983
				Q 921	(A,107,129) Chip Transistor		HN1C01FU
				Q 951	(A,94,127) Transistor(A)		LSA1576UB
				D 161	(A,11,114) Diode		CRG03
				D 163	(A,18,95) Diode		RB160L-40
				D 201	(A,13,69) Diode(A)		UDZS15(B)
				D 241	(A,129,109) Diode		RB551V-30
				D 242	(A,129,108) Diode		RB551V-30
				D 244	(A,107,108) Diode		1SS300
				D 245	(A,113,109) Diode		RB551V-30
				D 246	(A,113,111) Diode		RB551V-30
MISCELLANEOUS							
IC 151	(A,36,89) IC	R5523N001B					
IC 161	(A,18,105) IC	BD9008F					
IC 181	(A,108,73) IC	WM8761GED					
IC 182	(A,59,100) Regulator IC	NJM2872F05					
IC 201	(A,62,121) IC	PM9012A					
IC 241	(A,122,109) IC	NJM4558MD					
IC 351	(A,79,143) IC	PA2030A					
IC 401	(A,153,96) IC	TDA7706					
IC 451	(A,90,118) IC	NJM2886DL3-05					
IC 461	(A,91,14) IC(B,C)	SST25V040BIS					
IC 501	(A,118,50) IC	R5S7262ZD144FPU					
IC 571	(A,143,55) Software Unit	CWW2867					

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 248 (A,112,107) Diode RB751V-40
 D 249 (A,112,105) Diode RB751V-40
 D 381 (A,45,124) Diode RKZ8.2KG(B2)

X 503 (A,99,43) Oscillator 16.93 MHz CSS1794
 X 601 (A,109,97) Oscillator 20.000 MHz CSS1795
 P 301 (A,26,120) Poly Switch MINISMDC075F/24
 P 401 (A,157,112) Surge Protector IMSA-6802-
 01Y900

A D 382 (A,45,129) Diode 1SS301
 D 383 (A,41,132) Diode 1SS352
 D 401 (A,162,110) Diode KP2311E
 D 402 (A,161,104) Diode KP2311E
 D 581 (A,44,87) Diode 1SS352

VA661 (A,50,138) Varistor VR105C5R0AAA
 VA662 (A,49,138) Varistor VR105C5R0AAA
 VA801 (A,105,15) Varistor VR105C5R0AAA
 VA802 (A,103,15) Varistor VR105C5R0AAA
 VA803 (A,107,15) Varistor VR105C5R0AAA

D 582 (A,37,99) Diode CRG03
 D 601 (A,99,86) Diode RB551V-30
 D 602 (A,121,106) Diode RB751S-40
 D 651 (A,73,103) Diode 1SS352
 D 751 (A,152,44) Diode RKZ8.2KG(B2)

VA806 (A,101,15) Varistor VR105C5R0AAA
 VA807 (A,100,15) Varistor VR105C5R0AAA
 VA808 (A,123,14) Varistor VR105C5R0AAA
 VA809 (A,110,15) Varistor VR105C5R0AAA
 VA810 (A,111,15) Varistor VR105C5R0AAA

B D 801 (A,114,16) Diode DZ2S068C
 D 802 (A,117,16) Diode DZ2S068C
 D 803 (A,113,14) Diode DZ2S068C
 D 804 (A,119,14) Diode DZ2S068C
 D 805 (A,121,14) Diode DZ2S068C

VA811 (A,109,15) Varistor VR105C5R0AAA
 CN701 (A,92,40) Connector VKN1192
 CN781 (A,92,62) Connector(A) VKN1186
 CN801 (A,110,5) Connector CKS6188
 JA301 (A,20,142) Pin Jack(A) YKB5016
 (A,20,142) Pin Jack(B,C) YKB5011

D 822 (A,37,111) Diode RKZ9.1KG(B2)
 D 823 (A,19,115) Diode CRG03
 D 824 (A,17,115) Diode CRG03
 D 831 (A,9,81) Diode(A) RKZ10KG(B2)
 D 832 (A,18,66) Diode(A) RB551V-30

JA401 (A,159,130) Antenna Jack YKS5041
 JA661 (A,43,140) Connector CKS4124
 JA981 (A,115,142) Plug CKM1586
 ⚠ Fuse(10 A) YEK5001

C D 901 (A,158,70) Diode CRG03
 D 902 (A,156,56) Diode RKZ5.6KG(B2)
 D 921 (A,124,130) Diode HZU7L(C3)
 D 922 (A,113,130) Diode HZU7L(A1)
 D 941 (A,98,130) Diode CRG03

RESISTORS

R 151 (A,112,89) RS1/16SS104J
 R 161 (A,23,99) RS1/16SS513J
 R 163 (A,19,99) RS1/16SS183J
 R 164 (A,30,91) RS1/16SS4702F
 R 165 (A,30,93) RS1/16SS682J

D 942 (A,102,130) Diode CRG03
 D 951 (A,93,129) Diode(A) 1SS301
 D 981 (A,136,117) Diode 1SR154-400
 D 982 (A,133,117) Diode 1SR154-400
 L 161 (A,23,93) Coil CTH1475

R 166 (A,29,93) RS1/16SS1002F
 R 168 (A,29,90) RS1/10SR471J
 R 191 (A,77,109) RS1/16SS821J
 R 192 (A,77,111) RS1/16SS821J
 R 193 (A,36,92) RS1/4SA221J

L 181 (A,101,68) Chip Ferrite Bead DTL1107
 L 182 (A,56,98) Inductor CTF1786
 D L 401 (A,162,107) Chip Coil LCTAWR15J2520
 L 402 (A,154,106) Inductor CTF1786
 L 403 (A,150,108) Inductor CTF1786

R 194 (A,36,94) RS1/4SA221J
 R 201 (A,56,127) RAB4CQ102J
 R 202 (A,63,110) RS1/16SS331J
 R 203 (A,75,127) (B,C) RS1/10SR0R0J
 R 207 (A,62,110) RS1/16SS223J
 R 208 (A,65,110) RS1/16SS223J

L 404 (A,158,108) Chip Coil LCTAWR27J2520
 L 405 (A,144,107) Inductor CTF1389
 L 406 (A,142,105) Inductor LCTAW220J2520
 L 407 (A,164,101) Inductor CTF1786
 L 408 (A,164,99) Inductor CTF1786

R 209 (A,9,68) (A) RS1/10SR101J
 R 210 (A,7,76) (A) RS1/10SR0R0J
 R 241 (A,127,109) RS1/16SS104J
 R 242 (A,116,110) RS1/16SS104J
 R 243 (A,127,111) RS1/16SS473J

E L 409 (A,141,99) Chip Coil LCTAW470J2520
 L 411 (A,144,94) Inductor(A) CTF1786
 L 412 (A,162,88) Inductor CTF1786
 L 415 (A,150,87) Inductor CTF1786
 L 416 (A,155,86) Inductor CTF1786

R 244 (A,117,110) RS1/16SS473J
 R 245 (A,129,106) RS1/16SS474J
 R 246 (A,125,106) RS1/16SS474J
 R 301 (A,6,130) (A) RS1/16SS820J
 (A,6,130) (B,C) RS1/16SS821J
 R 302 (A,13,129) (A) RS1/16SS820J
 (A,13,129) (B,C) RS1/16SS821J

L 419 (A,158,105) Inductor CTF1794
 L 450 (A,147,110) Inductor(B,C) LCYB68NJ1005
 L 451 (A,97,112) Chip Coil LCTAWR27J2520
 L 501 (A,86,84) Chip Ferrite Bead DTL1107
 L 502 (A,91,86) Chip Ferrite Bead OTL8019
 L 602 (A,111,94) Inductor CTF1786

R 303 (A,14,130) (A) RS1/16SS820J
 R 304 (A,31,130) (A) RS1/16SS820J
 R 305 (A,23,130) (A) RS1/16SS820J
 (A,23,130) (B,C) RS1/16SS821J
 R 306 (A,28,130) (A) RS1/16SS820J
 (A,28,130) (B,C) RS1/16SS821J
 R 307 (A,6,132) RS1/16SS223J

F L 801 (A,116,18) Inductor CTF1713
 L 831 (A,25,72) Inductor(A) CTF1660
 L 951 (A,88,129) Chip Coil(A) BTH1101
 L 981 (A,113,142) Choke Coil 600 uH CTH1432
 X 401 (A,164,93) Oscillator 36.48 MHz CSS1805
 X 501 (A,121,68) Oscillator 48.000 MHz CSS1760

5			6			7			8		
Circuit Symbol and No.			Part No.			Circuit Symbol and No.			Part No.		
R 308	(A,12,131)		RS1/16SS223J			R 509	(A,127,65)		RS1/16SS473J		
R 309	(A,14,131) (A)		RS1/16SS223J			R 510	(A,126,65)		RS1/16SS473J		
R 310	(A,30,131) (A)		RS1/16SS223J			R 513	(A,118,65)		RS1/16SS102J		
R 311	(A,23,131)		RS1/16SS223J			R 518	(A,99,65)		RS1/16SS101J		A
R 312	(A,28,131)		RS1/16SS223J								
						R 519	(A,115,65)		RS1/16SS5601F		
R 313	(A,20,131) (A)		RS1/16SS0R0J			R 521	(A,103,55)		RS1/16SS473J		
R 314	(A,20,132) (A)		RS1/16SS0R0J			R 522	(A,103,54)		RS1/16SS473J		
R 315	(A,19,132) (B,C)		RS1/16SS0R0J			R 526	(A,107,68)		RS1/16SS221J		
R 316	(A,22,132) (B,C)		RS1/16SS0R0J			R 529	(A,103,42)		RS1/16SS332J		
R 361	(A,55,137)		RS1/16SS103J								
R 362	(A,57,135)		RS1/16SS103J			R 530	(A,102,40) (A)		RS1/16SS473J		
R 363	(A,57,137)		RS1/16SS331J			R 531	(A,87,15) (A)		RS1/10SR473J		
						R 532	(A,108,35) (A)		RS1/16SS221J		
							(A,108,35) (B,C)		RS1/16SS561J		
R 365	(A,52,137)		RS1/16SS103J			R 533	(A,109,35)		RS1/16SS101J		
R 366	(A,53,137)		RS1/16SS103J			R 534	(A,109,34)		RS1/16SS101J		B
R 367	(A,54,138)		RS1/16SS562J								
R 372	(A,68,134) (A)		RS1/16SS362J			R 535	(A,111,35)		RS1/16SS221J		
	(A,68,134) (B,C)		RS1/16SS0R0J			R 544	(A,134,40)		RS1/16SS472J		
R 374	(A,68,131) (A)		RS1/16SS362J			R 554	(A,110,66)		RS1/16SS473J		
	(A,68,131) (B,C)		RS1/16SS0R0J			R 560	(A,133,42)		RS1/16SS473J		
						R 561	(A,99,67)		RS1/16SS103J		
R 375	(A,75,130) (A)		RS1/16SS362J								
	(A,75,130) (B,C)		RS1/16SS0R0J			R 572	(A,137,42)		RS1/16SS472J		
R 376	(A,75,128) (A)		RS1/16SS362J			R 574	(A,138,42)		RS1/16SS472J		
	(A,75,128) (B,C)		RS1/16SS0R0J			R 575	(A,132,28)		RAB4CQ221J		
R 377	(A,77,129) (A)		RS1/16SS562J			R 576	(A,134,31)		RAB4CQ221J		
R 378	(A,76,130) (A)		RS1/16SS562J			R 577	(A,136,32)		RAB4CQ221J		
R 379	(A,69,132) (A)		RS1/16SS562J								C
						R 578	(A,135,35)		RAB4CQ221J		
R 380	(A,69,134) (A)		RS1/16SS562J			R 591	(A,97,26)		RS1/16SS472J		
R 381	(A,45,126)		RS1/10SR473J			R 592	(A,130,20)		RS1/16SS101J		
R 382	(A,49,129)		RS1/10SR104J			R 593	(A,130,19)		RS1/16SS103J		
R 383	(A,109,85)		RS1/16SS473J			R 594	(A,132,18)		RS1/16SS101J		
R 384	(A,44,132)		RS1/10SR473J								
						R 595	(A,130,18)		RS1/16SS103J		
R 385	(A,38,131)		RS1/16SS102J			R 596	(A,127,16)		RS1/16SS473J		
R 401	(A,164,110)		RS1/16SS221J			R 599	(A,130,10)		RS1/16SS272J		
R 402	(A,164,104)		RS1/16SS751J			R 600	(A,132,9)		RS1/16SS472J		
R 403	(A,141,107)		RS1/16SS152J			R 602	(A,130,84)		RS1/10SR472J		
R 405	(A,145,104)		RS1/16SS105J								
						R 603	(A,111,96)		RS1/16SS105J		D
R 406	(A,141,102)		RS1/16SS471J			R 604	(A,111,98)		RS1/16SS101J		
R 407	(A,142,101)		RS1/16SS330J			R 605	(A,110,93)		RS1/16SS104J		
R 408	(A,143,97)		RS1/16SS681J			R 606	(A,111,90)		RS1/16SS222J		
R 409	(A,162,94)		RS1/16SS0R0J			R 607	(A,111,91)		RS1/16SS104J		
R 410	(A,142,85)		RS1/4SA8R2J								
						R 608	(A,120,84)		RS1/16SS104J		
R 412	(A,142,87)		RS1/4SA8R2J			R 609	(A,109,92)		RS1/16SS104J		
R 413	(A,147,111)		RS1/16SS105J			R 610	(A,108,92)		RS1/16SS104J		
R 414	(A,133,103)		RS1/16SS102J			R 613	(A,117,84)		RS1/16SS104J		
R 415	(A,132,106)		RS1/16SS102J			R 614	(A,118,85)		RS1/16SS104J		
R 417	(A,132,102)		RS1/16SS102J								
						R 615	(A,116,84)		RS1/16SS104J		
R 419	(A,134,105)		RS1/16SS103J			R 616	(A,121,84)		RS1/16SS104J		E
R 420	(A,132,105)		RS1/16SS103J			R 617	(A,123,84)		RS1/16SS104J		
R 422	(A,142,93) (B,C)		RS1/16SS0R0J			R 618	(A,124,85)		RS1/16SS104J		
R 463	(A,88,10) (B,C)		RS1/10SR0R0J			R 619	(A,126,84)		RS1/16SS472J		
R 464	(A,107,27) (B,C)		RS1/16SS101J								
						R 620	(A,125,84)		RS1/16SS104J		
R 465	(A,105,27) (B,C)		RS1/16SS101J			R 621	(A,122,84) (A)		RS1/16SS104J		
R 466	(A,88,13) (B,C)		RS1/16SS101J			R 623	(A,133,95)		RS1/16SS104J		
R 467	(A,97,22) (B,C)		RS1/16SS101J			R 626	(A,123,106)		RS1/16SS103J		
R 468	(A,87,13) (B,C)		RS1/16SS473J			R 630	(A,131,100)		RS1/16SS104J		
R 469	(A,83,115)		RS1/16SS102J			R 643	(A,149,75)		RS1/16SS104J		
R 501	(A,131,63)		RS1/16SS473J			R 651	(A,75,102)		RS1/16SS104J		
R 502	(A,133,61)		RS1/16SS101J			R 652	(A,75,104)		RS1/16SS152J		F
R 504	(A,129,65)		RS1/16SS473J			R 661	(A,50,135)		RS1/10SR102J		
						R 662	(A,49,135)		RS1/10SR102J		
R 505	(A,128,65)		RS1/16SS473J								

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 701 (A,96,49) RS1/16SS472J
 R 702 (A,98,47) RS1/16SS473J
 R 703 (A,99,27) RS1/16SS472J
 R 704 (A,101,27) RS1/16SS472J
 R 705 (A,96,46) RS1/10SR221J

R 838 (A,11,55) (A)
 R 842 (A,131,23)
 R 843 (A,136,24)
 R 844 (A,138,26)
 R 901 (A,150,55)

RS1/10SR222J
 RS1/16SS472J
 RS1/16SS102J
 RS1/16SS103J
 RS1/16SS332J

R 706 (A,97,46) RS1/16SS221J
 R 707 (A,102,36) RS1/16SS101J
 R 708 (A,114,32) RS1/16SS221J
 R 709 (A,102,34) RS1/16SS101J
 R 710 (A,98,37) RS1/16SS102J

R 902 (A,159,56)
 R 911 (A,149,137)
 R 912 (A,147,137)
 R 921 (A,121,130)
 R 922 (A,110,130)

RS1/16SS223J
 RS1/16SS102J
 RS1/16SS473J
 RS1/16SS104J
 RS1/16SS103J

R 711 (A,96,37) RS1/16SS151J
 R 712 (A,96,36) RS1/16SS151J
 R 713 (A,96,35) RS1/16SS151J
 R 714 (A,95,32) RS1/16SS221J
 R 715 (A,116,32) RS1/16SS104J

R 923 (A,124,128)
 R 924 (A,111,128)
 R 925 (A,114,128)
 R 926 (A,118,130)
 R 951 (A,97,127) (A)

RS1/16SS473J
 RS1/16SS473J
 RS1/16SS472J
 RS1/4SA102J
 RS1/16SS102J

R 716 (A,97,32) RS1/16SS104J
 R 717 (A,96,38) RS1/16SS104J
 R 751 (A,160,48) RS1/10SR821J
 R 753 (A,158,51) RS1/16SS473J
 R 754 (A,158,50) RS1/16SS103J

R 952 (A,91,127) (A)
 R 954 (A,90,129) (A)

RS1/16SS223J
 RS1/16SS153J

CAPACITORS

R 781 (A,96,63) (A)
 R 783 (A,96,62) (A)
 R 784 (A,96,61) (A)
 R 785 (A,96,60) (A)
 R 786 (A,96,59) (A)

RS1/16SS221J
 RS1/16SS221J
 RS1/16SS221J
 RS1/16SS221J
 RS1/16SS221J

C 151 (A,33,89)
 C 152 (A,33,87)
 C 161 (A,10,105)
 C 162 (A,16,99)
 C 164 (A,19,100)

CKSSYB104K10
 CKSSYB104K10
 CEJQ221M16
 CKSRYB105K16
 CCSSCH220J50

R 787 (A,96,55) (A)
 R 788 (A,96,56) (A)
 R 789 (A,56,97) (A)
 R 790 (A,54,97) (A)
 R 792 (A,101,54)

RS1/16SS221J
 RS1/16SS221J
 RS1/10SR681J
 RS1/10SR103J
 RAB4CQ473J

C 165 (A,20,100)
 C 166 (A,24,84) Capacitor
 C 182 (A,105,77) 10 uF
 C 183 (A,102,70)
 C 184 (A,104,68) 10 uF

CKSSYB153K16
 CEVW221M10
 CCG1192
 CKSSYB103K16
 CCG1192

R 793 (A,100,58)
 R 794 (A,58,91) (A)
 R 795 (A,101,56) (B,C)
 R 801 (A,123,17)
 R 802 (A,99,17)
 R 803 (A,105,21)

RAB4CQ473J
 RS1/10SR102J
 RS1/16SS0R0J
 RS1/10SR222J
 RS1/10SR222J
 RS1/10SR222J

C 186 (A,99,70)
 C 187 (A,58,102)
 C 188 (A,61,100)
 C 190 (A,114,74)
 C 191 (A,75,108)

CKSRYB105K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB102K50
 CCSRCH182J50

R 804 (A,106,18)
 R 805 (A,104,18)
 R 806 (A,110,18)
 R 807 (A,111,18)
 R 808 (A,109,18)

RS1/10SR222J
 RS1/10SR222J
 RS1/10SR222J
 RS1/10SR222J
 RS1/10SR222J

C 192 (A,75,111)
 C 196 (A,100,72) (A)
 (A,100,72) (B,C)
 C 197 (A,109,78) (B,C)
 C 199 (A,56,100) (B,C)

CCSRCH182J50
 CKSSYB681K50
 CKSSYB221K50
 CCSRCH220J50
 CKSSYB104K16

R 809 (A,107,18)
 R 810 (A,116,21)
 R 811 (A,115,21)
 R 812 (A,107,21)
 R 813 (A,97,21)

RS1/10SR104J
 RS1/10SR8R2J
 RS1/10SR8R2J
 RS1/16SS104J
 RS1/16SS104J

C 200 (A,111,78) (B,C)
 C 201 (A,59,112)
 C 202 (A,65,112)
 C 203 (A,62,111)

CCSRCH220J50
 CKSRYB105K10
 CKSRYB105K10
 CKSQYB225K10

R 814 (A,113,18)
 R 815 (A,107,20)
 R 816 (A,121,18)
 R 817 (A,119,19)
 R 818 (A,119,23)

RS1/10SR101J
 RS1/16SS103J
 RS1/10SR101J
 RS1/16SS473J
 RS1/16SS473J

C 204 (A,17,69) (A)
 C 205 (A,9,76) (A)
 C 206 (A,15,74) Capacitor(A)
 C 209 (A,71,115)
 C 210 (A,71,113)

CKSRYB104K16
 CKSRYB104K16
 CEVW470M16
 CKSRYB224K16
 CKSRYB224K16

R 819 (A,102,19)
 R 820 (A,121,20)
 R 821 (A,76,116)
 R 824 (A,34,104)
 R 825 (A,77,123)

RS1/16SS332J
 RS1/16SS473J
 RS1/10SR1R0J
 RS1/4SA182J
 RS1/10SR222J

C 211 (A,69,109)
 C 212 (A,70,111)
 C 213 (A,71,121) 10 uF
 C 214 (A,70,123) 10 uF
 C 215 (A,69,125)

CKSRYB105K10
 CKSRYB105K10
 CCG1192
 CCG1192
 CKSSYB104K10

R 832 (A,7,86) (A)
 R 833 (A,14,83) (A)
 R 835 (A,19,55) (A)
 R 836 (A,8,55) (A)
 R 837 (A,12,55) (A)

RS1/10SR122J
 RS1/16SS1R0J
 RS1/10SR821J
 RS1/10SR153J
 RS1/10SR332J

C 216 (A,70,126) 10 uF
 C 217 (A,74,125)
 C 218 (A,72,126) 10 uF
 C 219 (A,57,120)
 C 220 (A,68,117)

CCG1192
 CKSSYB104K10
 CCG1192
 CKSRYB105K10
 CKSRYB105K10

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 241	(A,127,107)	CKSSYB104K10		C 427	(A,143,96)	CCSSCH820J50	
C 242	(A,117,109)	CKSSYB104K10		C 428	(A,164,95)	CCSSCH100D50	
C 243	(A,128,111)	CKSSYB104K10		C 429	(A,164,90)	CCSSCH100D50	
C 244	(A,116,111)	CKSSYB104K10		C 430	(A,142,91)	CKSRYB474K16	A
C 245	(A,130,106)	CKSSYB474K6R3		C 431	(A,161,91)	CKSSYB104K16	
C 246	(A,115,108)	CKSSYB474K6R3		C 432	(A,159,89) 2.2 uF	CCG1205	
C 247	(A,128,106)	CCSSCH101J50		C 434	(A,144,95) (A)	CKSSYB102K50	
C 248	(A,115,107)	CCSSCH101J50			(A,144,95) (B,C)	CKSSYB104K16	
C 249	(A,127,112)	CKSSYB103K16		C 436	(A,146,83) (B,C)	CCSSCK1R0C50	
C 260	(A,62,113)	CKSRYB105K10		C 439	(A,147,87) (A)	CKSRYB105K10	
				C 440	(A,150,89)	CKSSYB104K10	
C 301	(A,8,126) 10 uF	CCG1192		C 441	(A,152,88) 2.2 uF	CCG1205	
C 302	(A,13,126) 10 uF	CCG1192					
C 303	(A,18,126) 10 uF(A)	CCG1192		C 443	(A,147,109) (A)	CKSSYB103K16	
C 304	(A,34,131) 10 uF(A)	CCG1192		C 445	(A,145,105)	CKSSYB223K16	
C 305	(A,23,127) 10 uF	CCG1192		C 447	(A,145,91)	CKSSYB102K50	B
				C 448	(A,159,102) (A)	CKSSYB104K16	
C 306	(A,30,128) 10 uF	CCG1192			(A,159,102) (B,C)	CCSSCK1R0C50	
C 351	(A,73,133)	CKSRYB474K10		C 451	(A,95,111) 4.7 uF	CCG1201	
C 352	(A,73,134)	CKSRYB474K10					
C 353	(A,80,131)	CKSRYB474K10		C 452	(A,92,110)	CKSRYB103K50	
C 354	(A,81,131)	CKSRYB474K10		C 453	(A,89,111) 4.7 uF	CCG1201	
				C 454	(A,141,96) (A)	CKSSYB104K16	
C 355	(A,76,133)	CKSRYB474K10			(A,141,96) (B,C)	CCSSCK2R0C50	
C 356	(A,76,134)	CKSRYB474K10		C 455	(A,141,108) (B,C)	CCSSCH6R0D50	
C 357	(A,80,134)	CKSRYB474K10					
C 358	(A,81,134)	CKSRYB474K10		C 457	(A,166,103) (B,C)	CCSSCH100D50	
C 361	(A,131,123) 3 300 uF/16 V	CCH1486		C 458	(A,165,102) (B,C)	CCSSCH100D50	
				C 461	(A,91,19) (B,C)	CKSRYB104K16	C
C 362	(A,63,139)	CKSRYB104K16		C 501	(A,86,86) 10 uF	CCG1192	
C 363	(A,85,131) 2.2 uF	CCG1205		C 503	(A,91,83) 10 uF	CCG1192	
C 364	(A,83,132) 2.2 uF	CCG1205					
C 365	(A,65,133) 10 uF	CCG1236		C 504	(A,89,87) 10 uF	CCG1192	
C 367	(A,58,133) 10 uF	CCG1192		C 506	(A,93,83) 10 uF	CCG1192	
				C 507	(A,133,40)	CKSSYB104K10	
C 377	(A,79,129)	CCSSCH220J50		C 508	(A,134,42)	CKSSYB104K10	
C 378	(A,78,130)	CCSSCH220J50		C 509	(A,133,48)	CKSSYB104K10	
C 379	(A,70,133)	CCSSCH220J50					
C 380	(A,71,134)	CCSSCH220J50		C 510	(A,134,49)	CKSSYB104K10	
C 381	(A,40,127) Capacitor	CEVW220M16		C 511	(A,133,53)	CKSSYB104K10	
				C 512	(A,134,54)	CKSSYB104K10	
C 401	(A,157,110)	CCSSCH330J50		C 513	(A,133,59)	CKSSYB104K10	D
C 402	(A,160,109)	CCSSCH6R0D50		C 514	(A,134,59)	CKSSYB104K10	
C 403	(A,163,109)	CKSSYB103K16					
C 404	(A,153,105)	CKSSYB104K16		C 515	(A,133,63)	CKSSYB103K16	
C 405	(A,150,105)	CKSSYB104K16		C 516	(A,130,65)	CKSSYB104K10	
				C 519	(A,124,65)	CKSSYB104K10	
C 406	(A,162,105)	CKSSYB103K16		C 520	(A,121,65)	CKSSYB104K10	
C 407	(A,151,105)	CKSSYB104K16		C 521	(A,120,65)	CKSSYB104K10	
C 409	(A,164,105)	CKSSYB103K16					
C 410	(A,151,104)	CKSSYB103K16		C 522	(A,115,67)	CKSSYB104K10	
C 411	(A,148,104)	CKSSYB103K16		C 523	(A,120,70)	CCSSCH100D50	
				C 524	(A,122,70)	CCSSCH100D50	
C 412	(A,147,105) 10 uF	CCG1192		C 525	(A,116,65)	CKSSYB104K10	
C 413	(A,155,105)	CKSSYB103K16		C 526	(A,113,67)	CKSSYB104K10	E
C 414	(A,155,107)	CKSRYB105K10					
C 415	(A,144,104)	CKSSYB103K16		C 527	(A,113,65)	CKSSYB104K10	
C 416	(A,162,102)	CKSRYB224K16		C 528	(A,112,65)	CKSSYB104K10	
				C 529	(A,108,65)	CKSSYB104K10	
C 417	(A,162,101)	CKSSYB104K16		C 530	(A,107,65)	CKSSYB104K10	
C 418	(A,141,103) 10 uF	CCG1192		C 531	(A,103,57)	CKSSYB104K10	
C 419	(A,161,98)	CKSRYB105K10					
C 420	(A,143,102)	CKSSYB104K16		C 532	(A,103,56)	CKSSYB104K10	
C 421	(A,141,101)	CCSSCH101J50		C 533	(A,103,52)	CKSSYB104K10	
				C 534	(A,103,51)	CKSSYB104K10	
C 422	(A,145,102)	CKSSYB104K16		C 535	(A,101,48)	CKSRYB104K16	
C 423	(A,139,101)	CKSSYB103K16		C 536	(A,103,44)	CKSRYB104K16	F
C 424	(A,165,97)	CKSSYB472K25					
C 425	(A,165,98)	CKSSYB472K25		C 537	(A,103,40)	CKSSYB104K10	
C 426	(A,162,96)	CKSSYB104K16		C 538	(A,103,39)	CKSSYB104K10	
				C 539	(A,112,35)	CKSSYB104K10	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.****MISCELLANEOUS**

C 540	(A, 113,35)	CKSSYB104K10
C 541	(A, 117,33)	CKSSYB104K10
C 542	(A, 121,35)	CKSSYB104K10
C 543	(A, 126,34)	CKSSYB104K10
C 544	(A, 127,35)	CKSSYB104K10
C 545	(A, 98,67)	CKSSYB105K6R3
C 546	(A, 130,70)	CKSSYB102K50
C 548	(A, 97,42)	CCSSCH120J50
C 549	(A, 97,44)	CCSSCH120J50
C 571	(A, 135,39) 10 uF	CCG1192
C 572	(A, 136,47)	CKSSYB104K10
C 574	(A, 140,67)	CKSSYB103K16
C 581	(A, 37,103) 10 uF	CCG1192
C 583	(A, 42,99) 10 uF	CCG1192
C 585	(A, 47,95) 10 uF	CCG1192
C 588	(A, 43,92) 10 uF	CCG1192
C 591	(A, 132,11)	CKSSYB104K10
C 592	(A, 132,10)	CKSSYB104K10
C 604	(A, 106,98)	CCSSCH100D50
C 605	(A, 106,96)	CCSSCH120J50
C 606	(A, 111,95)	CKSSYB105K6R3
C 608	(A, 131,95)	CKSRYB105K10
C 610	(A, 72,105)	CKSSYB104K10
C 651	(A, 71,101)	CKSRYB105K10
C 703	(A, 97,33)	CCSSCH220J50
C 704	(A, 100,31)	CCSRCH100D50
C 705	(A, 97,31)	CCSSCH220J50
C 706	(A, 115,32)	CKSSYB103K16
C 754	(A, 155,45)	CKSSYB473K16
C 788	(A, 96,75) (A)	CKSRYB102K50
C 801	(A, 125,6)	CKSRYB104K16
C 802	(A, 126,9)	CKSRYB105K16
C 803	(A, 100,20)	CKSSYB104K10
C 821	(A, 36,111)	CKSRYB104K16
C 822	(A, 77,121)	CKSQYB105K16
C 831	(A, 11,83) (A)	CKSSYB473K16
C 832	(A, 13,83) (A)	CKSSYB104K16
C 833	(A, 25,62) (A)	CEVW101M16
C 834	(A, 17,55) (A)	CKSRYB104K16
C 835	(A, 14,65) (A)	CCSRCH471J50
C 836	(A, 8,54) (A)	CCSRCH101J50
C 838	(A, 9,60) Capacitor(A)	CEVW470M16
C 839	(A, 8,65) 10 uF(A)	CCG1236
C 901	(A, 156,64)	CEAT102M16(P30)
C 902	(A, 160,56)	CKSSYB103K16
C 904	(A, 151,59) 10 uF	CCG1192
C 905	(A, 159,80)	CKSQYB475K6R3
C 907	(A, 155,80)	CKSQYB475K6R3
C 911	(A, 147,130) Capacitor	CEVW221M10
C 913	(A, 139,131)	CEVW101M16
C 921	(A, 115,128)	CKSSYB104K16
C 941	(A, 102,128)	CKSRYB473K50
C 951	(A, 90,130) (A)	CKSSYB104K16

IC 1	(B,86,21) IC	PD6538A
IC 2	(A,125,7) Remote IC	GP1UXC14RK
IC 3	(B,53,16) DAC	BU2507FV
Q 1	(B,58,10) Chip Transistor	HN1C01FU
Q 2	(B,42,7) Chip Transistor	HN1C01FU
Q 3	(B,43,14) Chip Transistor	HN1C01FU
Q 4	(B,65,27) Chip Transistor	HN1C01FU
Q 5	(B,53,20) Chip Transistor	HN1C01FU
Q 7	(B,7,15) Chip Transistor	HN1C01FU
Q 8	(B,35,12) Chip Transistor	HN1C01FU
Q 9	(B,64,13) Chip Transistor	HN1C01FU
Q 10	(B,54,29) Chip Transistor	HN1C01FU
Q 11	(B,41,30) Chip Transistor	HN1C01FU
Q 12	(B,136,22) Chip Transistor	HN1C01FU
Q 17	(B,43,23) Chip Transistor	HN1C01FU
Q 18	(B,146,32) Chip Transistor	HN1C01FU
Q 19	(B,141,31) Chip Transistor	HN1C01FU
D 1	(B,106,20) Diode	1SS301
D 2	(B,89,9) Diode	1SS300
D 3	(B,145,20) Diode	DZ2S068C
D 4	(B,148,20) Diode	DZ2S068C
D 5	(B,147,20) Diode	DZ2S068C
D 6	(A,7,21) LED	NSSM025A-A0886
D 7	(A,58,21) LED	NSSM025A-A0886
D 8	(A,37,21) LED	NSSM025A-A0886
D 9	(A,83,8) LED	NSSM025A-A0886
D 10	(A,162,26) Chip LED	NSSM038A-6430
D 11	(A,149,22) Chip LED	NSSM038A-6430
D 13	(A,153,41) LED(RED)	SML-D12V8W(PQ)
D 14	(B,147,24) Varistor	EZJZ1V800AM
D 15	(B,145,23) Varistor	EZJZ1V800AM
L 2	(B,108,19) Inductor	CTF1389
X 1	(B,79,11) Ceramic Resonator 5.00 MHz	
CS1547		
S 1	(A,7,37) Push Switch	CSG1155
S 2	(A,7,10) Push Switch	CSG1155
S 3	(A,106,8) Push Switch	CSG1155
S 4	(A,41,33) Push Switch	CSG1155
S 5	(A,40,9) Push Switch	CSG1155
S 6	(A,94,8) Push Switch	CSG1155
S 7	(A,51,33) Push Switch	CSG1155
S 8	(A,50,8) Push Switch	CSG1155
S 9	(A,71,8) Push Switch	CSG1155
S 10	(A,61,32) Push Switch	CSG1155
S 11	(A,60,8) Push Switch	CSG1155
S 12	(A,158,40) Push Switch	CSG1155
S 13	(A,22,21) Switch(MULTI-CONTROL)	CSX1120
CN1	(B,108,10) Connector	CKS6049
CN2	(A,156,26) Connector	YKS5039
CN3	(A,154,11) Jack	YKN5006
LCD		YAW5110

RESISTORS

R 1	(B,102,18)	RS1/16S222J
R 2	(B,103,20)	RS1/16S222J
R 3	(B,7,10)	RS1/4SA221J
R 4	(B,11,10)	RS1/4SA181J
R 5	(B,51,31)	RS1/4SA181J

B**Unit Number : (A)****: (B,C)****Unit Name : Keyboard Unit**

1

2

3

4

5		6
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
R 6	(B,62,10)	RS1/4SA181J
R 10	(B,37,24)	RS1/4SA181J
R 11	(B,152,39)	RS1/4SA181J
R 12	(B,135,25)	RS1/4SA221J
R 13	(B,146,29)	RS1/4SA181J
R 14	(B,131,26)	RS1/4SA471J
R 15	(B,9,15)	RS1/16S101J
R 16	(B,57,32)	RS1/16S101J
R 17	(B,41,33)	RS1/16S101J
R 18	(B,62,15)	RS1/16S101J
R 19	(B,59,32)	RS1/16S101J
R 20	(B,45,30)	RS1/16S101J
R 21	(B,62,31)	RS1/16S101J
R 22	(B,38,11)	RS1/16S101J
R 23	(B,44,20)	RS1/16S101J
R 24	(B,129,30)	RS1/16S101J
R 27	(B,59,15)	RS1/16S102J
R 28	(B,47,13)	RS1/16S102J
R 29	(B,47,15)	RS1/10SR1001D
R 30	(B,47,21)	RS1/10SR1001D
R 31	(B,47,19)	RS1/10SR1001D
R 32	(B,60,19)	RS1/10SR1001D
R 35	(B,112,21)	RS1/16S121J
R 37	(B,48,7)	RS1/16S683J
R 38	(B,12,32)	RS1/16S122J
R 39	(B,10,33)	RS1/16S182J
R 40	(B,10,36)	RS1/16S332J
R 41	(B,8,33)	RS1/16S822J
R 42	(B,144,17)	RS1/16S101J
R 43	(B,125,19)	RS1/16S101J
R 44	(B,63,18)	RS1/16S272J
R 45	(B,63,20)	RS1/16S272J
R 46	(B,63,21)	RS1/16S272J
R 49	(B,157,39)	RS1/4SA681J
R 50	(B,54,11)	RS1/16S102J
R 52	(B,43,10)	RS1/16S102J
R 54	(B,43,16)	RS1/16S102J
R 56	(B,63,24)	RS1/16S102J
R 58	(B,124,30)	RS1/16S102J
R 60	(B,58,21)	RS1/16S102J
R 62	(B,57,28)	RS1/16S101J
R 63	(B,7,18)	RS1/16S101J
R 64	(B,64,32)	RS1/16S101J
R 65	(B,38,13)	RS1/16S101J
R 66	(B,42,20)	RS1/16S101J
R 67	(B,62,29)	RS1/16S101J
R 68	(B,49,31)	RS1/4SA221J
R 69	(B,40,24)	RS1/4SA221J
R 70	(B,62,8)	RS1/4SA221J
R 71	(B,154,39)	RS1/4SA221J
R 72	(B,33,9)	RS1/4SA471J
R 73	(B,30,9)	RS1/4SA471J
R 74	(B,44,27)	RS1/4SA471J
R 75	(B,135,29)	RS1/4SA471J
R 76	(B,38,19)	RS1/4SA471J

CAPACITORS

C 1	(B,116,20) 10 uF	CCG1192
C 2	(B,110,19)	CKSRYB474K16

7		8
<u>Circuit Symbol and No.</u>		<u>Part No.</u>
C 3	(B,86,9)	CKSRYB104K16
C 4	(B,83,9)	CKSRYB104K16
C 5	(B,147,17)	CKSRYB472K50
C 6	(B,144,20)	CKSRYB472K50
C 7	(B,144,26)	CCSRCH101J50
C 8	(B,145,26)	CKSRYB102K50
C 10	(B,111,19)	CKSRYB105K10
C 11	(B,50,11)	CKSRYB105K10
C 12	(B,48,11)	CKSRYB103K50
C 19	(A,7,18)	CKSRYB104K16
C 20	(A,7,25)	CKSRYB104K16
C 21	(A,61,23)	CKSRYB104K16
C 22	(A,61,20)	CKSRYB104K16
C 23	(A,41,23)	CKSRYB104K16
C 24	(A,41,20)	CKSRYB104K16
C 25	(A,90,8)	CKSRYB104K16
C 26	(A,77,8)	CKSRYB104K16
C 27	(A,150,32)	CKSRYB104K16
C 28	(A,150,29)	CKSRYB104K16
C 29	(A,145,7)	CKSRYB104K16
C 30	(A,146,7)	CKSRYB104K16



Unit Number : CWX3985

Unit Name : CD Core Unit(\$11.1STD-DOUT)

MISCELLANEOUS

IC 201	(A,28,33) IC	PE5756A
IC 301	(A,64,27) IC	BA5839FP
Q 101	(B,8,56) Transistor	2SA1577
Q 102	(B,21,51) Chip Digital Transistor	LTA123JUB
X 201	(A,15,27) Ceramic Resonator 16.934 MHz	CSS1603

S 901	(A,42,53) Switch(HOME)	CSN1080
S 903	(B,21,12) Switch(DSCSNS)	CSN1081

CN101	(A,16,58) Connector	CKS4808
CN701	(A,37,10) Connector	CKS6146

RESISTORS

R 101	(B,6,59)	RS1/10SR2R4J
R 102	(B,7,59)	RS1/10SR2R4J
R 103	(B,8,59)	RS1/10SR2R7J
R 108	(B,19,53)	RS1/16SS105J
R 109	(B,11,52)	RS1/16SS222J

R 214	(A,38,41)	RS1/16SS103J
R 215	(A,38,40)	RS1/16SS393J
R 216	(A,30,44)	RS1/16SS122J
R 217	(A,33,46)	RS1/16SS562J
R 218	(A,30,46)	RS1/16SS472J

R 225	(A,33,23)	RS1/16SS0R0J
R 229	(A,31,44)	RS1/16SS471J
R 232	(A,19,21)	RS1/16SS0R0J
R 235	(A,45,32)	RS1/16SS103J
R 236	(A,46,32)	RS1/16SS103J

R 237	(B,24,25)	RS1/16SS221J
R 240	(B,26,30)	RS1/16SS473J
R 245	(B,28,30)	RS1/16SS104J
R 254	(B,29,30)	RS1/16SS104J
R 260	(B,41,21)	RS1/16SS103J

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.****Unit Name : SD Unit****MISCELLANEOUS**

CN1202	(A,5,33) Connector	VKN1302
JA 1203	(A,30,23) Connector	YKS5040

Miscellaneous Parts List

M 1	Motor Unit(SPDL)	CXE2273
M 2	Motor Unit(LOAD/CRG)	CXC4026
	Pickup Unit(P10.5)(Service)	CXX1942

CAPACITORS

C 104	(B,11,55)	CKSQYB475K6R3
C 203	(A, 18,35)	CKSSYB104K10
C 209	(A, 17,28)	CKSRYB104K16
C 210	(A,21,21)	CKSSYB104K10
C 211	(A,24,23)	CKSSYB104K10

C 212	(A,38,33)	CKSSYB104K10
C 213	(A,40,41)	CKSSYB332K50
C 214	(A,40,40)	CKSSYB473K10
C 215	(A,38,37)	CKSSYB104K10
C 216	(A,36,46)	CKSSYB182K50

C 217	(A,31,46)	CCSSCH560J50
C 218	(A,29,46)	CCSSCH4R0C50
C 219	(A,32,43)	CKSSYB104K10
C 220	(B,32,41)	CKSSYB104K10
C 221	(A,35,43)	CKSSYB104K10

C 222	(A,29,43)	CKSSYB104K10
C 223	(A,25,44)	CCSSCH680J50
C 224	(A,23,44)	CCSSCH470J50
C 225	(A,20,43)	CKSSYB103K16
C 228	(A,32,46)	CCSSCH270J50

C 229	(B,28,40)	CKSSYB104K10
C 231	(B,44,28)	CKSSYB102K50
C 232	(B,45,28)	CKSSYB102K50
C 233	(B,25,25)	CKSSYB103K16
C 236	(B,26,41)	CKSSYB104K10

C 238	(A,15,35)	CKSRYB104K16
C 299	(A, 17,33)	CKSSYB104K10
C 304	(A,60,35)	CKSSYB472K25
C 305	(A,58,35)	CKSSYB223K16
C 306	(A,68,20)	CKSRYB105K10

C 710	(B,43,10)	CKSSYB102K50
-------	-----------	--------------

D**Unit Number: YWM5516(A)**

1

2

3

4