


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

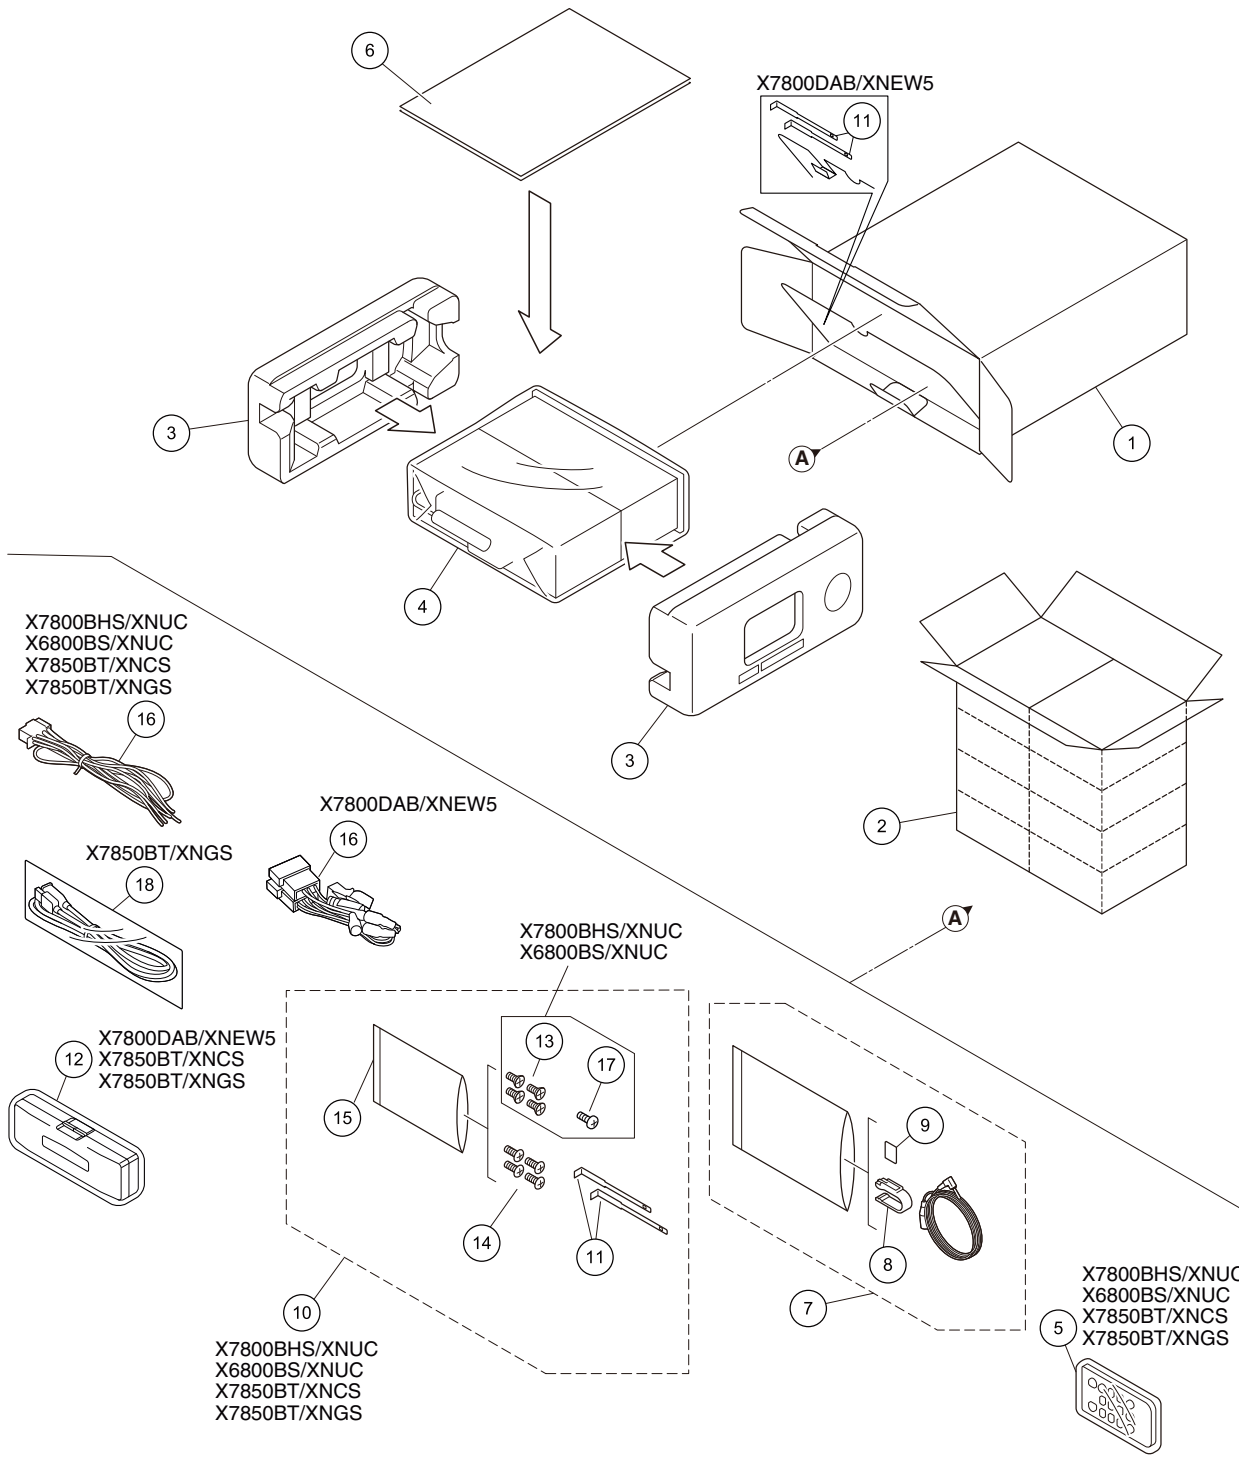

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Unit Box	See Contrast table (2)		10	Accessory Assy	See Contrast table (2)
	2	Contain Box	See Contrast table (2)		11	Handle	QNC3021
	3	Protector	CHP4594		12	Case Assy	See Contrast table (2)
	4	Polyethylene Bag	See Contrast table (2)		13	Screw	See Contrast table (2)
	5	Card Remote Control Unit	See Contrast table (2)		14	Screw	See Contrast table (2)
*	6-1	Warranty Card	See Contrast table (2)	*	15	Polyethylene Bag	See Contrast table (2)
	6-2	Owner's Manual	See Contrast table (2)		16	Cord Assy	See Contrast table (2)
	7	Microphone Assy	CPM1109		17	Screw	See Contrast table (2)
	8	Holder	CZN7192		18	USB Extended Cable	See Contrast table (2)
	9	Cushion	CZN7193				

(2) CONTRAST TABLE

DEH-X7800BHS/XNUC, DEH-X7800DAB/XNEW5, DEH-X6800BS/XNUC, DEH-X7850BT/XNCS and DEH-X7850BT/XNGS are constructed the same except for the following:

Mark	No.	Description	DEH-X7800BHS/XNUC	DEH-X7800DAB/XNEW5	DEH-X6800BS/XNUC	DEH-X7850BT/XNCS	DEH-X7850BT/XNGS
*	1	Unit Box	QHG3876	QHG3875	QHG3877	QHG3879	QHG3880
	2	Contain Box	QHL3876	QHL3875	QHL3877	QHL3879	QHL3880
	4	Polyethylene Bag	CEG1173	QEG3001	CEG1173	QEG3001	QEG3001
	5	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
	6-1	Warranty Card	QRY3001	CRY1376	QRY3001	Not used	Not used
*	6-2	Owner's Manual	QRD3346	QRD3345	QRD3346	QRD3350	QRD3347
	10	Accessory Assy	QEA3337	Not used	QEA3337	QEA3338	QEA3338
	12	Case Assy	Not used	QXA3129	Not used	QXA3129	QXA3129
	13	Screw	CBA2383	Not used	CBA2383	Not used	Not used
	14	Screw	CBA2384	Not used	CBA2384	CBA2384	CBA2384
	15	Polyethylene Bag	CEG1160	Not used	CEG1160	CEG1160	CEG1160
	16	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	17	Screw	BPZ20P060FTC	Not used	BPZ20P060FTC	Not used	Not used
	18	USB Extended Cable	Not used	Not used	Not used	Not used	CDP1587

Owner's Manual,Installation Manual

Part No.	Language
QRD3345	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3346	English, French, Spanish(Espanol)
QRD3347	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian
QRD3350	English, Spanish(Espanol), Portuguese(B)

X7800BHS/XNUC
X6800BS/XNUC
X7850BT/XNCS
X7850BT/XNGS



(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Detach Grille Assy	See Contrast table (2)	35	Lighting Conductor	QNV3118	
2	USB Cable	See Contrast table (2)				
3	Lighting Conductor	QNV3120	36	Sheet	QNM3143	A
4	Holder	QNC3120	37	Sheet	QNM3144	
5	Rubber Connector	QNV3126	38	Sheet	QNM3145	
			39	Tuner Amp Unit	See Contrast table (2)	
6	Case	QNB3034	40	Holder	See Contrast table (2)	
7	Heat Conductor Sheet	QNM3165				
8			41	Screw	BPZ26P080FTC	
9	Heat Conductor Sheet	QNM3164	42	Heat Sink	See Contrast table (2)	
10	Heat Conductor Sheet	QNM3135	43	Screw	BSZ26P120FTC	
			⚠ 44	Fuse(10 A)	YEK5001	
11	Door	QAT3021	45	Screw	BSZ26P120FTC	B
12	Segment LCD(V1801)	CAW2057				
13	Grille Unit	See Contrast table (2)	46	Screw	ASZ26P050FTC	
14	Grille	See Contrast table (2)	47			
15	Plate	See Contrast table (2)	48	Screw	BSZ26P060FTC	
			49	Gasket	QNM3174	
16	Button Unit	QXA4598	50	BE Core Unit(U951)	See Contrast table (2)	
17	Panel	QNS3576				
18	Panel Assy	QXA4716	51	Holder	See Contrast table (2)	
19	Cover	QNM3029	52	Cover	See Contrast table (2)	
20	Arm	QNV3025	53	Card Remote Control Unit	See Contrast table (2)	
			54	FFC	QDE3029	C
21	Button	QNV3026	55	Cord Assy	See Contrast table (2)	
22	Spring	QBH3001				
23	CD Mechanism Module (11.6VA_T07)	CXK5808	56	Lighting Conductor	QNV3117	
24	Holder	QNC3020	57	Plate	QNS3966	
25	Knob Unit	See Contrast table (2)	58	Holder	QNS3968	
			59	Double Side Tape	QNM3141	
26	Knob	See Contrast table (2)	60	Double Side Tape	QNM3140	
* 27	Spring	YBL5010	61	Lighting Conductor	QNV3119	
28	Button(TRACK, 1-6)	QAC3222	62	Keyboard Unit	See Contrast table (2)	D
29	Button(DETACH)	QAC3224	63	Shield Case	QNC3107	
30	Button(EJECT)	QAC3223	64	Panel	QNS4071	
			65	ANT Pigtail Cable Assy	See Contrast table (2)	
31	Cover	QNS3962				
32	Spring	CBH2210	66	Cushion	QNM3142	
33	Screw	BPZ20P100FTC	67	Screw	See Contrast table (2)	
34	Button(PHONE)	QAC3220				

(2) CONTRAST TABLE

DEH-X7800BHS/XNUC, DEH-X7800DAB/XNEW5, DEH-X6800BS/XNUC, DEH-X7850BT/XNCS and DEH-X7850BT/XNGS are constructed the same except for the following:

Mark	No.	Description	DEH-X7800BHS/ XNUC	DEH-X7800DAB/ XNEW5	DEH-X6800BS/ XNUC	DEH-X7850BT/ XNCS	DEH-X7850BT/ XNGS	
	1	Detach Grille Assy	QXA4627	QXA4626	QXA4628	QXA4630	QXA4631	
	2	USB Cable	Not used	Not used	Not used	Not used	QDP3089	
	13	Grille Unit	QXA4585	QXA4584	QXA4586	QXA4588	QXA4588	
	14	Grille	QNS3960	QNS3960	QNS3969	QNS3960	QNS3960	
	15	Plate	QNS3971	QNS3961	QNS3972	QNS3974	QNS3974	
	25	Knob Unit	QXA4712	QXA4713	QXA4712	QXA4712	QXA4713	
	26	Knob	QAA3056	QAA3057	QAA3056	QAA3056	QAA3057	
	39	Tuner Amp Unit	QWM4149	QWM4148	QWM4150	QWM4151	QWM4152	
	40	Holder	QNC3112	QNC3115	QNC3112	QNC3113	QNC3117	F
	42	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002	

	1		2		3		4
Mark	No.	Description	DEH-X7800BHS/ XNUC	DEH-X7800DAB/ XNEW5	DEH-X6800BS/ XNUC	DEH-X7850BT/ XNCS	DEH-X7850BT/ XNGS
A	50	BE Core Unit(U951)	CWE2518	CWE2534(WWR Tuner Unit)	Not used	Not used	Not used
	51	Holder	CND7288	CND7288	Not used	Not used	Not used
	52	Cover	CNS7068	Not used	CNS7068	CNS7068	CNS7068
	53	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
	55	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	62	Keyboard Unit	QWM4240	QWM4167	QWM4240	QWM4240	QWM4240
	65	ANT Pigtail Cable Assy	Not used	QXA4122	Not used	Not used	Not used
	67	Screw	Not used	Not used	Not used	Not used	BSZ26P060FTC

B


C

D

E

F

9.3 CD MECHANISM MODULE

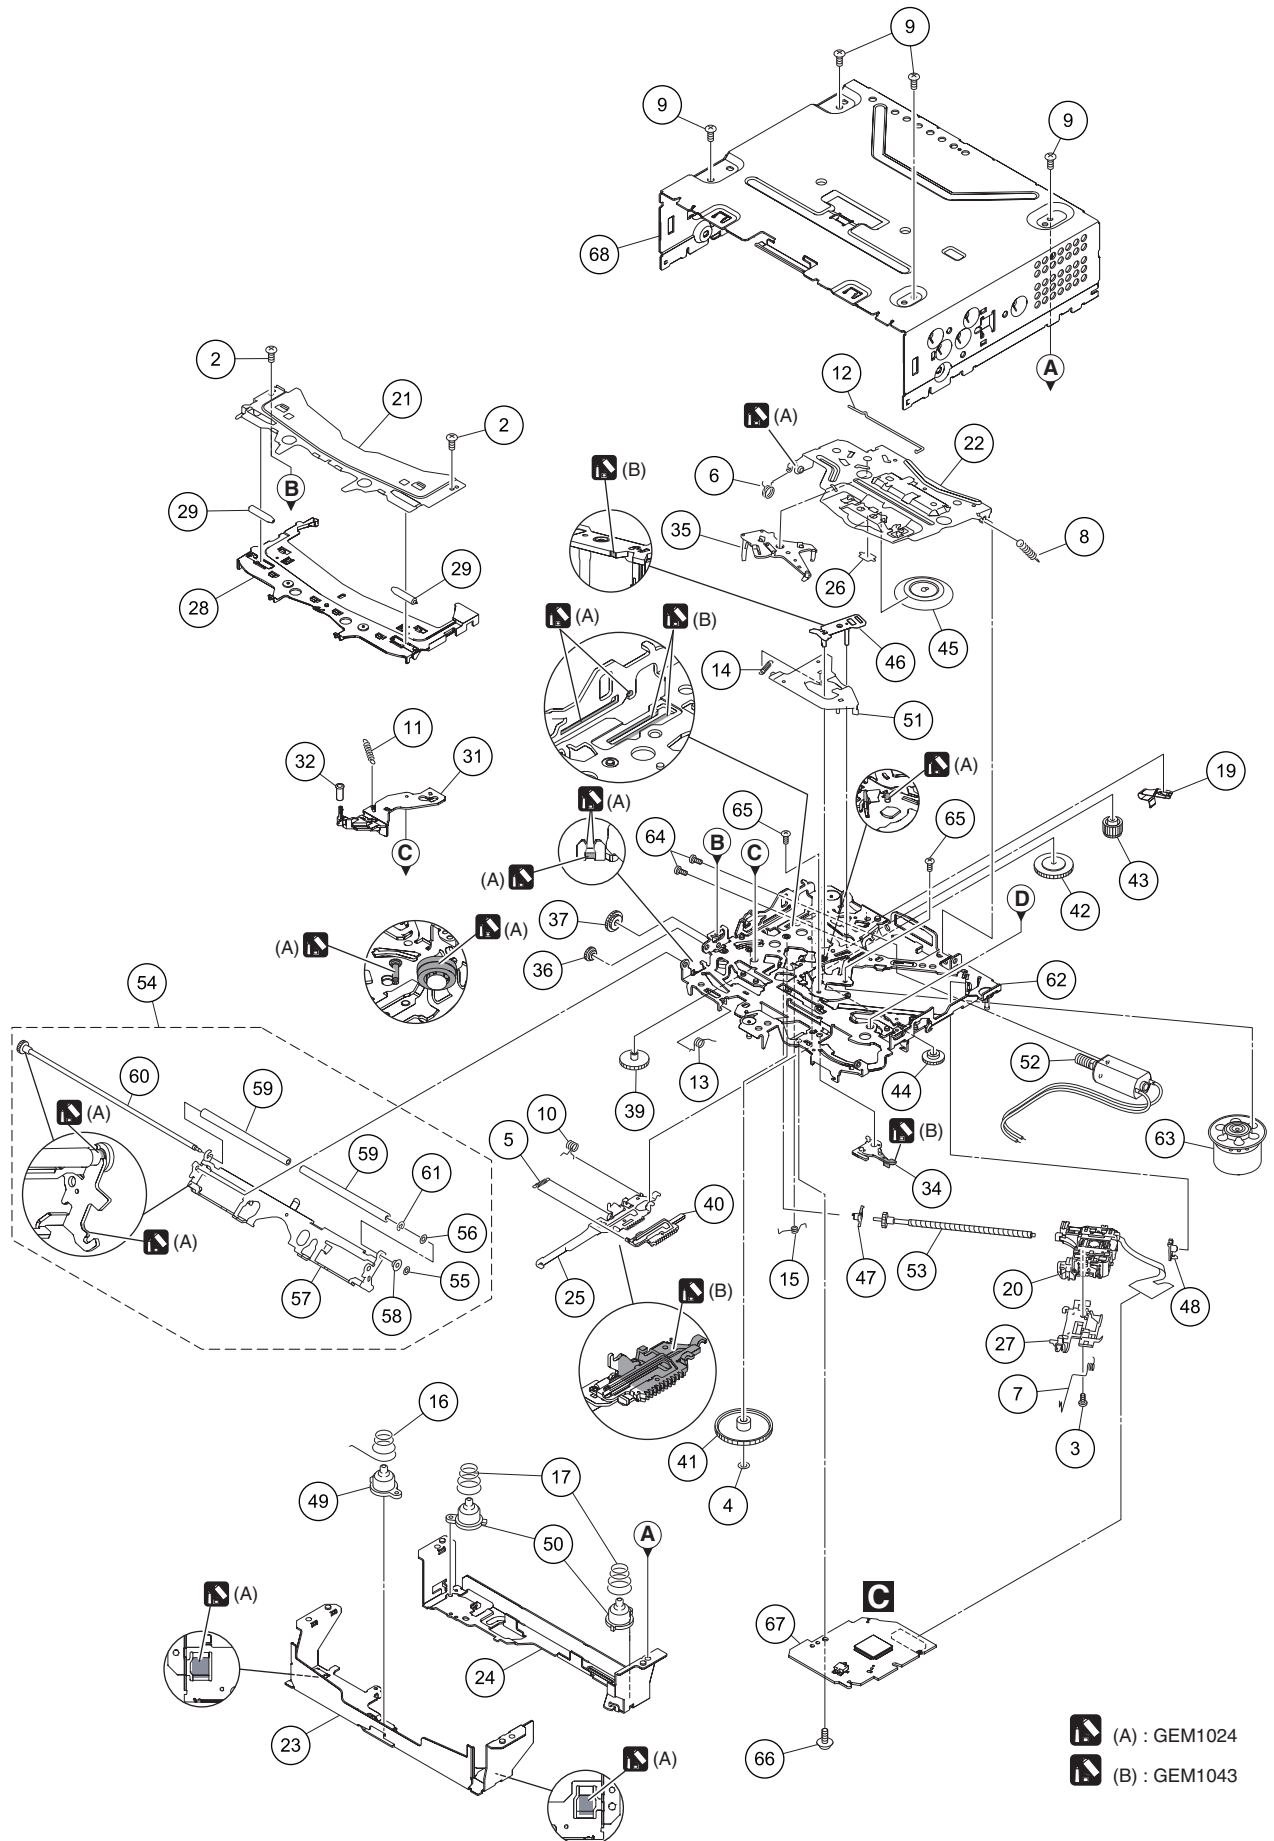

CD MECHANISM MODULE SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1			50	Damper	CNW1198
	2	Screw	BSZ20P040FTC	51	Arm	CNW1726
	3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
	4	Washer	CBF1038	53	Screw Unit	CXC8894
	5	Spring	CBH3010	54	Arm Assy	CXE6232
	6	Spring	CBH2855	55	Washer	CBF1037
	7	Spring	CBH2856			
	8	Spring	CBH2860	56	Washer	CBF1038
	9	Screw	BSZ26P060FTC	57	Arm	CND6242
	10	Spring	CBH3011	58	Collar	CNW2444
B	11	Coil Spring	CBH3095	59	Roller	CNW2500
	12	Spring	CBH3014	60	Gear Unit	CXE6225
	13	Spring	CBH3015			
	14	Spring	CBH3016	61	Washer	YE15FTC
	15	Spring	CBH3017	62	Chassis Unit	CXE4528
	16	Spring	CBH3086	63	Motor Unit(M1)(SPDL)	CXE2273
	17	Spring	CBH3019	64	Screw	JFZ20P025FTC
	18			65	Screw	JGZ17P022FTC
	19	Leaf Spring	CBL1824	66	Screw	EBA1028
	20	Service Unit (P11)	CXX4754	67	CD Core Unit (S11.6VA)	CWX4269
C	21	Bracket	CND4553	68	Chassis	CNA3181
	22	Arm	CND6406			
	23	Bracket	CND6127			
	24	Bracket	CND5710			
	25	Lever	CND5398			
	26	Sheet	CNN3678			
	27	Rack	CNV8342			
	28	Guide	CNW2240			
	29	Roller	CNW1172			
	30					
D	31	Arm	CNW2241			
	32	Roller	CNW1175			
	33					
	34	Arm	CNW1177			
	35	Arm	CNW1178			
	36	Gear	CNW1180			
	37	Gear	CNW1181			
	38					
	39	Gear	CNW1183			
	40	Rack	CNW1184			
E	41	Gear	CNW1185			
	42	Gear	CNW1186			
	43	Gear	CNW1187			
	44	Gear	CNW2287			
	45	Clamper	CNW1190			
	46	Arm	CNW1192			
	47	Holder	CNW1193			
	48	Holder	CNW1194			
	49	Damper	CNW1197			

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.
- Chip Resistor
RS1/○S○○○○J, RS1/○○S○○○○J
- Chip Capacitor (except for CQS.....)
CKS....., CCS....., CSZS.....
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
A:DEH-X7800BHS/XNUC		* IC501 Microprocessor IC	STA1080
B:DEH-X7800DAB/XNEW5		IC 502 IC	S-80827CNMC-B8M
C:DEH-X6800BS/XNUC		IC 503 L-MOS And Gate(A,C)	TC7SET08FUS1
D:DEH-X7850BT/XNCS		IC 504 IC(A,C)	TC7SH126FU
E:DEH-X7850BT/XNGS		IC 701 IC	337S3959
Unit Number : QWM4149(A)		IC 702 RAM IC	M12L128168A-5TG2N
Unit Number : QWM4148(B)		IC 731 ROM IC	M95512-RMN6P
Unit Number : QWM4150(C)		IC 741 IC(A)	QWW4080
Unit Number : QWM4151(D)		IC 741 IC(B)	QWW4082
Unit Number : QWM4152(E)		IC 741 IC(C)	QWW4081
Unit Name : Tuner Amp Unit		IC 741 IC(D,E)	QWW4078
Unit Number : QWM4240(A,C,D,E)		IC 742 IC	MX25L1636EM2I-08G
Unit Number : QWM4167(B)		IC 751 E-VOL System LSI	PM9015A
Unit Name : Keyboard Unit		IC 801 Op-amp IC(E)	NJW1240V
Unit Number : CWX4269		IC 851 Tuner IC(A)	TEF6688HN-V102
Unit Name : CD Core Unit(S11.6VA)		IC 851 Tuner IC(B,C,D,E)	TEF6686HN-V102
A		IC 1301 Power Amp IC(A,B,C)	PAL013B
Unit Number : QWM4149(A)		IC 1301 Power Amp IC(D,E)	PA2032A
Unit Number : QWM4148(B)		Q 111 Bipolar Transistor	LSCR523UB
Unit Number : QWM4150(C)		Q 121 Resistor Built-in Transistor	LTC014EEB
Unit Number : QWM4151(D)		Q 141 Bipolar Transistor	LSCR523UB
Unit Number : QWM4152(E)		Q 142 Bipolar Transistor	LSCR523UB
Unit Name : Tuner Amp Unit		Q 201 Bipolar Transistor	LSCR523UB
MISCELLANEOUS		Q 202 FET	SSM3J332R
IC 201 Power supply IC	BD49101AEFS	Q 203 Power MOS FET	RRR040P03
IC 202 Power supply IC	BD2232G-G	Q 401 Transistor(B)	2SAR293PGZE
IC 301 DC/DC Converter IC(A,B,E)	KBD9876EFJ	Q 402 Transistor(B)	LTC014EEB
IC 321 Power supply IC(E)	BD2232G-G	Q 441 Transistor	2SAR502UB
IC 421 Regulator IC(B)	S-1155B33-U5	Q 442 Resistor Built-in Transistor	LTC023YEB
IC 422 Regulator IC(A,B)	MM3411A33N	Q 481 Transistor	2SAR502UB
IC 423 Regulator IC(A,B)	S-1172B12-E6	Q 482 Resistor Built-in Transistor	LTC043EEB
IC 461 Regulator IC(E)	NJW4184DL3-08A	Q 701 Bipolar Transistor	LSAR523UB
		Q 801 Transistor(E)	LTC014EEB
		Q 851 Bipolar Transistor(A)	MMBT2369L
		Q 852 Bipolar Transistor(A)	MMBT2369L
		Q 853 Bipolar Transistor(A)	MMBT2369L
		Q 854 Bipolar Transistor(A)	MMBT2369L
		Q 1241 Transistor(A,B,C,D)	EMH53
		Q 1242 Transistor(A,B,C,D)	EMH53
		Q 1243 Transistor(A,B,C,D)	EMH53
		Q 1276 Transistor(E)	EMD53
		Q 1301 Transistor	EMD52
		D 101 Diode	D1F60-5053

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 102 Diode
D 111 Diode(A,C,D,E)
D 111 Diode(B)
D 121 Diode

D1F60-5053
DZ2J068M0
DZ2J075M0
CRG03

L 1102 Chip Beads
L 1103 Chip Beads
L 1104 Chip Beads
L 1276 Chip Beads

VTL1133
VTL1133
VTL1133
VTL1126

D 141 Diode
D 201 Schottky Diode
D 202 Diode
D 203 Diode
D 206 Schottky Diode

DZ2J075M0
RB162M-40
RR264MM-400TF
RB056L-40
CMS30I30A

L 1277 Chip Beads
L 1278 Chip Beads
L 1279 Chip Beads
L 1291 Inductor(E)
L 1292 Chip Beads

VTL1126
VTL1126
VTL1126
CTF1713
VTL1126

D 207 Schottky Diode
D 208 Diode(A,B,C,D)
D 209 Diode(E)
D 210 Diode(A,B,C,D)
D 211 Diode(E)

RB751SM-40
DZ2S068C
DZ2S068C
DZ2S068C
DZ2S068C

L 1293 Chip Beads
L 1294 Chip Beads
L 1295 Chip Beads
L 1296 Chip Beads
L 1297 Chip Beads

VTL1126
VTL1126
VTL1126
VTL1126
VTL1126

D 301 Diode(A,B,E)
D 302 Diode(A,B,E)
D 321 Switching Diode(E)
D 421 Diode(B)
D 422 Diode(A,B)

RB056L-40
RB060M-30
1SS355VM
RR264MM-400TF
RR264MM-400TF

T 851 Variable Coil
X 501 Resonator 24 MHz
X 502 Resonator 32.768 kHz
X 751 Crystal Resonator 18.432MHz
X 851 Crystal Resonator

CTC1215
CSS1773
CSS1807
CSS1826
CSS1868

D 423 Diode(A,B)
D 424 Diode(A,B)
D 425 Diode(A,B)
D 501 Schottky Diode(A,B,C)
D 502 Schottky Diode(A,B,C)

RR264MM-400TF
RR264MM-400TF
RR264MM-400TF
RB751SM-40
RB751SM-40

S 501 Switch (RESET)
P 401 Poly Switch(A,C)
P 401 Poly Switch(B)
P 852 Surge Absorber
P 1243 Poly Switch

CSG1020
FSMD110-24R
FSMD020-R
IMSA-6803-01Y900
FSMD075-24R

D 504 Diode
D 505 Diode
D 506 Diode(E)
D 507 Diode(E)
D 1102 Diode

EZAEG2A50AX
EZAEG2A50AX
EZAEG2A50AX
EZAEG2A50AX
DZ2S068C

P 1276 Poly Switch
VA321 SMD Varistor
VA1101 SMD Varistor
VA1201 SMD Varistor
VA1202 SMD Varistor

FSMD075-24R
MLV0402ES012V0010N
MLV0402ES012V0010N
MLV0402ES012V0010N
MLV0402ES012V0010N

D 1201 Diode
D 1204 Diode
D 1205 Diode
D 1206 Diode
D 1207 Diode

DZ2S068C
EZAEG2A50AX
EZAEG2A50AX
DZ2S068C
DZ2S068C

U 951 BE Core Unit(A)
U 951 WWR Tuner Unit(B)
U 1001 BT Module
CN1101 Connector
CN1201 Connector

CWE2518
CWE2534
CWX4751
VKN1192
CKS6452

D 1208 Diode
D 1209 Diode
D 1210 Diode
D 1291 Diode(E)
D 1292 Diode(E)

DZ2S068C
DZ2S068C
DZ2S068C
EZAEG2A50AX
EZAEG2A50AX

CN1291 Connector(E)
CN1292 Clamper(E)
CN1552 Clamper(E)
JA 101 Plug
JA851 Antenna Jack

KM200NA5L
CEF1046
CEF1046
CKM1624
CKX1104

D 1293 Rectifier Diode
D 1301 Diode(A,B,C)
D 1302 Diode
L 101 Choke Coil
L 201 SMD SPL Inductor

DAN202UM
CRG03
CRG03
CTH1620
CTH1521

JA 1231 Connector(A,C)
JA 1241 Jack
JA 1276 Jack

CKS3806
CKB1113
CKN1103

RESISTORS

L 202 SMD SPL Inductor
L 301 SMD SPL Inductor(A,B,E)
L 401 Inductor
L 502 Inductor
L 503 Chip Beads

CTH1524
CTH1584
CTF1793
CTF1645
VTL1133

R 111
R 112
R 113 (A,C,D,E)
R 113 (B)
R 114 (A,C,D,E)

RS1/16SS223J
RS1/16SS473J
RS1/16SS682J
RS1/16SS333J
RS1/4SA102J

L 504 Chip Beads
L 505 Chip Beads
L 854 Inductor
L 855 Inductor
L 856 Inductor(A,B,C,D)

VTL1133
VTL1133
LCMAR27J1608
CTF1786
CTF1389

R 114 (B)
R 121
R 123
R 141
R 142

RS1/4SA122J
RS1/16SS103J
RS1/4SA102J
RS1/16SS104J
RS1/16SS473J

L 857 Inductor(E)
L 858 Chip Coil(E)
L 859 Chip Coil(E)
L 860 Inductor(A,B,C,D)
L 1001 Inductor

ATL7033
LCTAWR27J2520
LCTAW3R3J2520
LCYC150K1608
CTF1786

R 143
R 144
R 145
R 202
R 207

RS1/16SS103J
RS1/16SS472J
RS1/16SS0R0J
RS1/16SS3303D
RS1/16SS222J

L 1101 Inductor

CTF1389

1

2

3

4

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 208	RS1/16SS472J	R 441	RS1/16SS103J
R 209	RS1/4SA472J	R 442	RS1/10SR221J
R 210	RS1/16SS103J	R 481	RS1/16SS471J
R 214	RS1/16SS102J	R 482	RS1/16SS103J
R 215	RS1/16SS2403D	R 501 (E)	RS1/16SS222J
R 216	RS1/16SS7502D	R 503	RS1/16SS222J
R 217	RS1/16SS4303D	R 504	RS1/16SS222J
R 218	RS1/16SS4303D	R 506	RS1/16SS473J
R 219	RS1/16SS104J	R 507	RS1/16SS473J
R 220	RS1/16SS3903D	R 508	RS1/16SS473J
R 221	RS1/16SS6202D	R 509	RS1/16SS473J
R 222	RS1/16SS6802D	R 510	RS1/16SS473J
R 223 0.02 ohm	CCN1401	R 511	RS1/16SS473J
R 224	RS1/16SS6802D	R 512	RS1/16SS101J
R 225	RS1/16SS102J	R 513	RS1/16SS222J
R 226	RS1/16SS1203D	R 514	RS1/16SS221J
R 227	RS1/16SS1802D	R 515	RS1/16SS221J
R 229	RS1/16SS3902D	R 516	RS1/16SS221J
R 230	RS1/16SS682J	R 517	RS1/16SS221J
R 231	RS1/16SS4703D	R 518	RS1/16SS472J
R 232	RS1/16SS1503D	R 519	RS1/16SS271J
R 233	RS1/16SS1003D	R 520 (A,B)	RS1/16SS472J
R 234	RS1/16SS7503D	R 522	RS1/16SS0R0J
R 235	RS1/16SS1603D	R 524	RS1/16SS3001D
R 236	RS1/16SS102J	R 525	RS1/16SS103J
R 237 (A,B,C,D)	RS1/16SS102J	R 526	RS1/16SS1213F
R 238	RS1/16SS102J	R 527 (E)	RS1/16SS0R0J
R 239	RS1/16SS101J	R 528 (E)	RS1/16SS0R0J
R 240	RS1/16SS221J	R 529	RS1/16SS0R0J
R 241	RS1/16SS121J	R 530	RS1/16SS0R0J
R 242	RS1/16SS6801F	R 531	RS1/16SS222J
R 243	RS1/16SS393J	R 532	RS1/16SS102J
R 244	RS1/16SS103J	R 533	RS1/10SR103J
R 245 (A,B,C,D)	RS1/8SQ0R0J	R 534	RS1/10SR103J
R 246 (E)	RS1/8SQ0R0J	R 536 (E)	RS1/16SS473J
R 247 (E)	RS1/16SS102J	R 537 (A,B,C,D)	RS1/16SS473J
R 248 (A,B,C,D)	RS1/16SS332J	R 538 (A,C,D)	RS1/16SS473J
R 249 (E)	RS1/16SS332J	R 538 (B,E)	RS1/16SS472J
R 250	RS1/10SR471J	R 539 (A,C)	RS1/16SS103J
R 256	RS1/16SS0R0J	R 539 (D)	RS1/16SS223J
R 260	RS1/16SS473J	R 540	RS1/16SS103J
R 263	RS1/10SR471J	R 541	RS1/16SS103J
R 264	RS1/10SR0R0J	R 545	RS1/16SS473J
R 268	RS1/10SR0R0J	R 546	RS1/16SS103J
R 269	RS1/16SS101J	R 547	RS1/16SS473J
R 301 (A,B,E)	RS1/10SR471J	R 548	RS1/16SS102J
R 303 (A,B,E)	RS1/16SS1803D	R 550	RS1/16SS103J
R 304 (A,B,E)	RS1/16SS4302D	R 551	RS1/16SS103J
R 305 (A,B,E)	RS1/16SS682J	R 554	RS1/16SS222J
R 306 (A,B,E)	RS1/16SS0R0J	R 555	RS1/16SS0R0J
R 321 (E)	RS1/16SS222J	R 557	RS1/16SS221J
R 322	RS1/16SS0R0J	R 558	RS1/16SS221J
R 323 (A,B,E)	RS1/16SS102J	R 559	RS1/16SS221J
R 401 (B)	RS1/10SR103J	R 560	RS1/16SS473J
R 402 (B)	RS1/4SA471J	R 561	RS1/16SS103J
R 403 (B)	RS1/4SA471J	R 563	RS1/16SS0R0J
R 404 (A,C)	RS1/10SR0R0J	R 564	RS1/16SS472J
R 405 (B)	RS1/16SS1003F	R 565	RS1/16SS0R0J
R 406	RS1/16SS183J	R 566	RAB4CQ473J
R 422 (A,B)	RS1/16SS102J	R 570	RS1/16SS221J

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	R 571	RS1/16SS221J	R 701	RS1/16SS103J
	R 573	RS1/16SS473J	R 702	RS1/16SS472J
	R 574	RS1/16SS473J	R 703	RS1/16SS101J
	R 575	RS1/16SS473J	R 704	RS1/16SS101J
	R 576	RS1/16SS473J	R 705	RS1/16SS222J
	R 577	RS1/16SS473J	R 706	RS1/16SS222J
	R 578	RS1/16SS473J	R 707	RS1/16SS472J
	R 579	RS1/16SS473J	R 708	RS1/16SS272J
	R 580	RS1/16SS473J	R 709	RS1/16SS473J
	R 581	RS1/16SS472J	R 710	RS1/16SS0R0J
B	R 584	RS1/16SS102J	R 711	RS1/16SS0R0J
	R 586	RS1/16SS103J	R 714	RAB4CQ121J
	R 587	RS1/16SS0R0J	R 715	RAB4CQ121J
	R 591	RS1/16SS361J	R 716	RAB4CQ121J
	R 595	RS1/16SS0R0J	R 717	RAB4CQ121J
	R 596	RS1/16SS0R0J	R 718	RAB4CQ121J
	R 597	RS1/16SS102J	R 719	RAB4CQ121J
	R 598	RS1/16SS102J	R 720	RAB4CQ121J
	R 599	RS1/16SS102J	R 721	RAB4CQ121J
	R 610 (C,D,E)	RS1/16SS473J	R 722	RAB4CQ121J
	R 611	RS1/16SS472J	R 724	RS1/16SS121J
	R 614	RS1/16SS473J	R 728	RS1/10SR0R0J
	R 615	RS1/16SS103J	R 729	RS1/10SR0R0J
	R 616 (E)	RS1/10SR473J	R 730	RS1/10SR0R0J
	R 617	RS1/16SS473J	R 731	RS1/16SS330J
C	R 619 (A,B,C,D)	RS1/16SS473J	R 732	RS1/16SS330J
	R 620	RS1/16SS0R0J	R 733	RS1/16SS103J
	R 622	RS1/16SS0R0J	R 734	RS1/16SS103J
	R 627 (A,B,C,D)	RS1/16SS153J	R 735	RS1/16SS103J
	R 628 (A,B,C,D)	RS1/16SS153J	R 736	RS1/16SS330J
	R 629	RS1/16SS472J	R 737	RS1/16SS330J
	R 630	RS1/16SS101J	R 741	RS1/16SS330J
	R 631	RS1/16SS221J	R 742	RS1/16SS103J
	R 632	RS1/16SS101J	R 743	RS1/16SS103J
	R 633	RS1/16SS101J	R 744	RS1/16SS330J
D	R 634	RS1/16SS101J	R 745	RS1/16SS330J
	R 635	RS1/16SS101J	R 746	RS1/16SS103J
	R 636	RS1/16SS101J	R 747	RS1/16SS330J
	R 637	RS1/16SS221J	R 748	RS1/16SS330J
	R 638	RS1/16SS221J	R 749	RS1/16SS330J
	R 639	RS1/16SS101J	R 750	RS1/16SS103J
	R 640	RS1/16SS101J	R 753	RS1/16SS0R0J
	R 642	RS1/16SS0R0J	R 754	RS1/16SS105J
	R 643	RS1/16SS101J	R 755	RS1/16SS471J
	R 644	RS1/16SS102J	R 758	RS1/10SR221J
E	R 645	RS1/16SS101J	R 798 (A,B,C,D)	RS1/10SR0R0J
	R 646	RS1/16SS102J	R 799 (E)	RS1/16SS0R0J
	R 647	RS1/16SS102J	R 801 (E)	RS1/16SS103J
	R 648	RS1/16SS102J	R 802 (E)	RS1/16SS100J
	R 649	RS1/16SS102J	R 803 (E)	RS1/16SS0R0J
	R 650	RS1/16SS121J	R 804 (E)	RS1/16SS684J
	R 651	RS1/16SS102J	R 805 (E)	RS1/16SS102J
	R 652	RS1/16SS101J	R 800	RS1/16SS0R0J
	R 653	RS1/16SS102J	R 810	RS1/10SR0R0J
	R 654	RS1/16SS102J	R 851	RS1/16SS105J
F	R 655	RS1/16SS102J	R 852	RS1/16SS105J
	R 657	RS1/4SA0R0J	R 853 (A,B,C,D)	RS1/16SS391J
	R 658	RS1/4SA0R0J	R 853 (E)	RS1/16SS101J
	R 659	RS1/10SR0R0J	R 860 (A)	RS1/16SS0R0J
	R 672	RS1/16SS101J	R 861 (A)	RS1/16SS0R0J

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 862 (A)	RS1/16SS0R0J	R 1107	RS1/16SS101J
R 864	RS1/16SS103J	R 1108	RS1/16SS221J
R 865 (A)	RS1/16SS332J	R 1109	RS1/16SS101J
R 866 (A)	RS1/16SS182J	R 1110	RS1/16SS102J
R 868	RS1/16SS103J	R 1112	RS1/16SS221J
R 869 (A)	RS1/16SS0R0J	R 1113	RS1/16SS104J
R 870	RS1/16SS101J	R 1114	RS1/16SS473J
R 871 (A)	RS1/16SS102J	R 1115	RS1/16SS472J
R 872 (A)	RS1/16SS121J	R 1116	RS1/16SS472J
R 873	RS1/16SS472J	R 1117	RS1/16SS472J
R 874	RS1/16SS101J	R 1120	RS1/16SS151J
R 875	RS1/16SS472J	R 1121	RS1/16SS151J
R 876 (A)	RS1/16SS121J	R 1122	RS1/16SS151J
R 876 (B)	RS1/16SS0R0J	R 1123	RS1/16SS0R0J
R 877 (A)	RS1/16SS121J	R 1126	RS1/16SS0R0J
R 877 (B)	RS1/16SS0R0J	R 1201	RS1/10SR222J
R 878 (A)	RS1/16SS121J	R 1203	RS1/16SS223J
R 878 (B)	RS1/16SS0R0J	R 1204	RS1/16SS223J
R 879 (A)	RS1/16SS121J	R 1205	RS1/10SR222J
R 879 (B)	RS1/16SS0R0J	R 1206	RS1/10SR221J
R 881 (A)	RS1/16SS332J	R 1207	RS1/10SR221J
R 882 (A)	RS1/16SS182J	R 1208	RS1/10SR0R0J
R 883 (A)	RS1/16SS102J	R 1209	RS1/10SR222J
R 884 (A)	RS1/16SS121J	R 1210	RS1/10SR222J
R 890	RS1/16SS0R0J	R 1211	RS1/10SR222J
R 891	RS1/10SR0R0J	R 1212	RS1/10SR222J
R 952 (A)	RS1/16SS101J	R 1213	RS1/16SS123J
R 953 (A)	RS1/16SS101J	R 1214	RS1/10SR222J
R 954 (A)	RS1/16SS101J	R 1215	RS1/10SR101J
R 955 (A)	RS1/16SS101J	R 1218	RS1/10SR0R0J
R 957 (A,B)	RS1/16SS101J	R 1231 (A,C)	RS1/16SS181J
R 958 (A,B)	RS1/16SS101J	R 1232 (A,C)	RS1/16SS181J
R 959 (A,B)	RS1/16SS101J	R 1233 (A,C)	RS1/16SS223J
R 960 (A,B)	RS1/16SS101J	R 1234 (A,C)	RS1/16SS223J
R 961 (A,B)	RS1/10SR102J	R 1235 (A,C)	RS1/16SS181J
R 962 (A,B)	RS1/10SR221J	R 1236 (A,C)	RS1/16SS181J
R 963 (A,B)	RS1/10SR121J	R 1237 (A,C)	RAB4CQ102J
R 966	RS1/10SR0R0J	R 1241 (A,B,C,D)	RS1/16SS821J
R 968	RS1/10SR0R0J	R 1241 (E)	RS1/16SS0R0J
R 970	RS1/4SA0R0J	R 1242 (A,B,C,D)	RS1/16SS821J
R 971	RS1/4SA0R0J	R 1242 (E)	RS1/16SS0R0J
R 1001	RS1/16SS0R0J	R 1243 (A,B,C,D)	RS1/16SS821J
R 1002	RS1/16SS221J	R 1243 (E)	RS1/16SS0R0J
R 1004	RS1/16SS473J	R 1244 (A,B,C,D)	RS1/16SS821J
R 1005	RS1/16SS221J	R 1244 (E)	RS1/16SS0R0J
R 1006	RS1/16SS0R0J	R 1245 (A,B,C,D)	RS1/16SS821J
R 1007	RS1/16SS0R0J	R 1245 (E)	RS1/16SS0R0J
R 1008	RS1/10SR0R0J	R 1246 (A,B,C,D)	RS1/16SS821J
R 1011	RS1/16SS0R0J	R 1246 (E)	RS1/16SS0R0J
R 1012	RS1/16SS221J	R 1247	RS1/16SS223J
R 1013	RS1/16SS0R0J	R 1248	RS1/16SS223J
R 1014	RS1/10SR0R0J	R 1249	RS1/16SS223J
R 1015	RS1/10SR0R0J	R 1250	RS1/16SS223J
R 1016	RS1/4SA0R0J	R 1251	RS1/16SS223J
R 1017	RS1/16SS473J	R 1252	RS1/16SS223J
R 1018	RS1/16SS473J	R 1253	RS1/16SS0R0J
R 1101	RS1/16SS104J	R 1255	RS1/16SS0R0J
R 1104	RS1/16SS104J	R 1257 (A,B,C,D)	RS1/16SS0R0J
R 1105	RS1/16SS221J	R 1258 (A,B,C,D)	RS1/16SS0R0J
R 1106	RS1/16SS221J	R 1259 (A,B,C,D)	RS1/16SS0R0J

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

R 1260 (A,B,C,D)
 R 1261 (A,B,C,D)
 R 1262 (A,B,C,D)
 R 1263
 R 1277 (E)

RS1/16SS0R0J
 RS1/16SS0R0J
 RS1/16SS0R0J
 RS1/10SR0R0J
 RS1/16SS471J

C 231
 C 232
 C 234 4.7 uF
 C 236 10 uF

CKSRYB104K16
 CEVQW221M6R3
 CCG1212
 CCG1236

R 1278
 R 1279 (E)
 R 1280
 R 1281
 R 1282

RS1/16SS102J
 RS1/16SS471J
 RS1/16SS102J
 RS1/16SS101J
 RS1/16SS101J

C 238 22 uF
 C 239
 C 240
 C 241 10 uF
 C 242

CCG1254
 CCSSCH100D50
 CCSSCH100D50
 CCG1192
 CEVW101M16

R 1284
 R 1286
 R 1287
 R 1301
 R 1302

RS1/10SR0R0J
 RS1/16SS0R0J
 RS1/16SS0R0J
 RS1/16SS103J
 RS1/16SS223J

C 243 10 uF
 C 245
 C 247
 C 248 1 uF
 C 249

CCG1236
 CKSRYB104K16
 CKSRYB105K10
 CCG1393
 CKSRYB105K10

R 1303
 R 1306
 R 1307
 R 1309
 R 1313

RS1/16SS221J
 RS1/16SS103J
 RS1/16SS0R0J
 RS1/10SR0R0J
 RS1/10SR0R0J

C 250
 C 251
 C 252 4.7 uF
 C 253 1 uF
 C 255 1 uF

CKSRYB105K10
 CKSRYB105K10
 CCG1212
 CCG1393
 DCH1246

R 1314

RS1/10SR0R0J

C 257 10 uF
 C 259 10 uF
 C 260 10 uF
 C 261
 C 263 (E)

CCG1236
 CCG1192
 CCG1192
 CKSSYB104K10
 CKSRYB105K16

CAPACITORS

C 101 2 200 uF/16 V
 C 102
 C 103
 C 104
 C 105

CCH1405
 CKSRYB103K50
 CKSSYB102K50
 CKSSYB102K50
 CKSSYB102K50

C 264 (E)
 C 265 10 uF
 C 266 10 uF
 C 270 4.7 uF
 C 302 (A,B,E)

CKSRYB102K50
 CCG1236
 CCG1236
 CCG1212
 CEVQW221M6R3

C 106
 C 107
 C 108
 C 109
 C 110

CKSSYB102K50
 CKSSYB102K50
 CKSSYB102K50
 CKSSYB102K50
 CKSSYB102K50

C 303 1 uF(A,B,E)
 C 304 (A,B,E)
 C 305 4.7 uF(A,B,E)
 C 306 (A,B,E)
 C 308 (A,B,E)

DCH1246
 CKSRYB105K10
 CCG1212
 CKSSYB682K25
 CKSRYB103K50

C 111
 C 122 1 uF
 C 201
 C 202
 C 203 10 uF

CKSRYB104K50
 CCG1396
 CCSSCH681J50
 CEVW101M16
 CCG1192

C 309 10 uF(A,B,E)
 C 311 1 uF(A,B,E)
 C 312 (A,B,E)
 C 313
 C 315

CCG1236
 CCG1396
 CEAT102M16
 CKSRYB102K50
 CKSRYB104K16

C 204
 C 205 1 uF
 C 206 10 uF
 C 208
 C 209

CEVQW221M6R3
 CCG1396
 CCG1236
 CCSSCH471J50
 CCSSCH681J50

C 317
 C 321
 C 322 (E)
 C 324 (E)
 C 401 (B)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB104K50

C 210 2 200 uF/16 V
 C 211 10 uF
 C 213 1 uF
 C 214 10 uF
 C 216 10 uF

CCH1405
 CCG1192
 CCG1396
 CCG1192
 CCG1236

C 422 10 uF(B)
 C 424 10 uF(B)
 C 425 4.7 uF(A,B)
 C 426 10 uF(A,B)
 C 427 4.7 uF(A,B)

CCG1192
 CCG1192
 CCG1212
 CCG1192
 CCG1212

C 217
 C 218 10 uF
 C 220 10 uF
 C 221 10 uF
 C 222

CKSRYB105K10
 CCG1236
 CCG1236
 CCG1236
 XCEVW221M10

C 428 10 uF(A,B)
 C 430 10 uF(A,B)
 C 432 10 uF(A,B)
 C 433 1 uF(A,B)
 C 442 10 uF

CCG1192
 CCG1192
 CCG1192
 DCH1246
 CCG1192

C 223
 C 224
 C 225
 C 227
 C 228

CCSSCH221J50
 CKSRYB105K10
 CKSRYB105K10
 CCSSCH391J50
 CCSSCH681J50

C 444 10 uF
 C 462 10 uF(E)
 C 464 10 uF(E)
 C 481
 C 482 1 uF

CCG1192
 CCG1192
 CCG1236
 CEVQW470M6R3
 DCH1246

C 230 10 uF

CCG1192

C 502

CKSSYB104K10

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 503	4.7 uF	CCG1212		C 579		CKSSYB104K10	
C 505		CKSSYB104K10		C 580		CKSRYB104K16	
C 506	4.7 uF	CCG1212		C 586		CCSSCH102J50	
C 507	4.7 uF	CCG1212		C 701		CKSSYB104K10	A
C 508		CKSSYB104K10		C 702		CKSSYB104K10	
C 509	4.7 uF	CCG1212		C 711	4.7 uF	CCG1212	
C 510		CKSSYB104K10		C 712	1 uF	DCH1246	
C 511	4.7 uF	CCG1212		C 713		CKSSYB104K10	
C 512		CKSSYB104K10		C 714	1 uF	DCH1246	
C 513	4.7 uF	CCG1212		C 715	1 uF	DCH1246	
C 514		CKSSYB104K10		C 716	1 uF	DCH1246	
C 517		CKSSYB104K10		C 718		CKSSYB104K10	
C 518		CCSSCH100D50		C 719		CKSSYB104K10	
C 519		CCSSCH100D50		C 720	1 uF	DCH1246	
C 520	4.7 uF	CCG1212		C 722		CKSSYB104K10	B
C 521		CKSSYB104K10		C 724		CKSRYB102K50	
C 522	4.7 uF	CCG1212		C 730	10 uF	CCG1192	
C 523	4.7 uF	CCG1212		C 731		CKSSYB104K10	
C 524	4.7 uF	CCG1212		C 741	2.2 uF	CCG1205	
C 525	10 uF	CCG1192		C 742		CKSSYB104K10	
C 526		CKSSYB103K16		C 743		CKSSYB104K10	
C 527	10 uF	CCG1192		C 751	(A,C)	CKSRYB105K10	
C 528		CKSSYB103K16		C 752	(A,C)	CKSRYB105K10	
C 529		CKSSYB104K10		C 753		CKSRYB105K10	
C 530	4.7 uF	CCG1212		C 754		CKSRYB105K10	C
C 531	1 uF	DCH1246		C 755		CKSRYB105K10	
C 532	1 uF	DCH1246		C 757		CKSRYB105K10	
C 533	4.7 uF	CCG1212		C 758		CKSRYB105K10	
C 534		CKSSYB104K10		C 759	(A,C)	CKSRYB105K10	
C 535		XCEVW221M10		C 760	(A,C)	CKSRYB105K10	
C 536		CCSSCH101J50		C 762		CEVQW470M6R3	
C 537		CKSSYB103K16		C 763	(E)	CKSSYB104K10	
C 538	10 uF	CCG1192		C 764		CKSSYB104K10	
C 539		CKSSYB103K16		C 765		CCSSCH151J50	
C 540	10 uF	CCG1192		C 766		CCSSCH151J50	
C 541		CKSSYB222K50		C 767		CEVQW470M6R3	D
C 542		CKSSYB104K10		C 768		CEVQW470M6R3	
C 543	1 uF	DCH1246		C 771	10 uF	CCG1192	
C 544		CKSSYB473K16		C 772		CKSSYB104K10	
C 545		CCSSCH100D50		C 773		CKSSYB104K10	
C 546		CCSSCH120J50		C 774		CCSSCH100D50	
C 551		CKSSYB104K10		C 775		CCSSCH100D50	
C 552	4.7 uF	CCG1212		C 776		CKSRYB105K10	
C 553	10 uF	CCG1192		C 777		CKSRYB105K10	
C 555		CKSSYB103K16		C 778		CKSRYB105K10	
C 556		CKSSYB104K10		C 783	1 uF	DCH1246	
C 557	(A,C)	CKSSYB104K10		C 790		CKSSYB102K50	E
C 558	(A,C)	CKSSYB104K10		C 791	10 uF	CCG1192	
C 559		CKSQYB224K50		C 792		CKSSYB472K50	
C 560		CKSSYB103K16		C 793		CKSSYB103K16	
C 565		CCSRCH330J50		C 799		CKSSYB222K50	
C 566		CCSRCH330J50		C 800		CKSSYB222K50	
C 569		CCSSCH101J50		C 801	1 uF(E)	CCG1255	
C 571		CCSRCH330J50		C 802	1 uF(E)	CCG1255	
C 572		CCSRCH330J50		C 803	1 uF(E)	CCG1325	
C 573		CCSRCH101J50		C 804	1 uF(E)	CCG1325	
C 574		CCSSCH101J50		C 805	1 uF(E)	CCG1325	
C 575		CKSSYB104K10		C 806	1 uF(E)	CCG1325	F
C 577		CCSSCH101J50		C 807	1 uF(E)	CCG1325	
C 578		CKSSYB104K10		C 808	1 uF(E)	CCG1325	

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	C 809 1 uF(E)	CCG1255	C 1231 (A,C)	CKSRYB104K16
	C 810 1 uF(E)	CCG1255	C 1232 (A,C)	CKSRYB105K16
	C 811 (E)	CKSQYB104K50	C 1241 10 uF	CCG1192
	C 813 1 uF(E)	CCG1255	C 1242 10 uF	CCG1192
	C 814 1 uF(E)	CCG1255	C 1243 10 uF	CCG1192
	C 853	CCSSCH100D50	C 1244 10 uF	CCG1192
	C 854	CCSSCH471J50	C 1245 10 uF	CCG1192
	C 858	CCSSCH220J50	C 1246 10 uF	CCG1192
	C 859	CCSSCH331J50	C 1247	CCSSCH101J50
	C 860 (E)	CCSSCK2R0C50	C 1248	CCSSCH101J50
	C 861 (E)	CCSSCK1R0C50	C 1249	CCSSCH101J50
	C 862 (E)	CCSSCK1R0C50	C 1250	CCSSCH101J50
	C 863 (E)	CCSSCH120J50	C 1251	CCSSCH101J50
	C 866	CKSSYB224K6R3	C 1252	CCSSCH101J50
	C 867	CKSSYB102K50	C 1253	CKSSYB103K16
B	C 870	CCSSCH102J50	C 1254	CKSSYB104K10
	C 871	CKSSYB104K10	C 1255	CKSSYB104K10
	C 872	CKSSYB104K10	C 1257	CKSSYB102K50
	C 874	CCSSCH390J50	C 1276	CKSRYB104K16
	C 878	CKSSYB152K50	C 1277	CKSRYB104K16
	C 882 1 uF(C,D,E)	DCH1246	C 1278	CKSRYB104K16
	C 885 (A,E)	CKSSYB104K10	C 1279	CKSRYB104K16
	C 886	CKSRYB102K50	C 1280	CKSSYB102K50
	C 887	CKSRYB104K50	C 1281	CKSSYB102K50
	C 888 (C,D,E)	CKSRYB104K16	C 1291 (E)	CKSRYB105K16
C	C 889	CKSSYB104K10	C 1292 (E)	CKSRYB102K50
	C 890 2.2 uF	CCG1205	C 1294 (E)	CCSSCH470J50
	C 891 2.2 uF	CCG1205	C 1295 (E)	CCSSCH470J50
	C 892	CKSRYB105K10	C 1301	CKSRYB474K10
	C 951 (B)	CCSSCH101J50	C 1302	CKSRYB474K10
	C 952 (B)	CKSSYB104K10	C 1303	CKSRYB474K10
	C 954 (A)	CCSSCH150J50	C 1304	CKSRYB474K10
	C 955 (A)	CCSSCH150J50	C 1306	CKSRYB105K10
	C 958 10 uF(A,B)	CCG1192	C 1310 10 uF/16 V	DCH1263
	C 959 (A,B)	CKSSYB104K10	C 1311 2.2 uF	CCG1205
D	C 960 10 uF(A,B)	CCG1192	C 1312	CKSRYB104K50
	C 961 (A,B)	CKSSYB104K10	C 1316	CKSRYB104K50
	C 969 (B)	CCSSCH150J50	C 1317	CKSRYB105K10
	C 970 (B)	CCSSCH150J50	C 1319	CKSSYB103K16
	C 1003	CKSRYB104K16	C 1328	CKSRYB105K10
	C 1004	CKSRYB104K16	B Unit Number : QWM4240(A,C,D,E) Unit Number : QWM4167(B) Unit Name : Keyboard Unit	
	C 1101	CKSSYB103K16		
	C 1105 1 uF	DCH1246		
	C 1106 1 uF	DCH1246		
	C 1107	CKSRYB104K16		
E	C 1108	CKSRYB104K16		
	C 1111	CKSSYB102K50		
	C 1201	CCSRCH102J50		
	C 1202	CKSRYB104K50		
	C 1203	CKSRYB104K16		
	C 1204	CKSRYB105K10		
	C 1205	CCSRCH221J50		
	C 1206	CCSRCH221J50		
	C 1207	CKSRYB474K10		
	C 1210	CKSRYB105K10		
F	C 1213	CKSRYB104K16		
	C 1214	CKSRYB102K50		
	C 1215	CKSRYB105K10		
	C 1217	CCSSCH121J50		
	C 1218	CKSRYB104K16		

Unit Number : QWM4240(A,C,D,E)
Unit Number : QWM4167(B)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	Driver IC	BU97540KV-M
IC 1802	Driver IC	BU97540KV-M
IC 1951	IC(A,C,D,E)	PNJ4833M
Q 1841	Bipolar Transistor	LSCR523UB
Q 1842	Bipolar Transistor	LSCR523UB
Q 1843	Bipolar Transistor	LSCR523UB
Q 1847	Bipolar Transistor	LSCR523UB
Q 1848	Bipolar Transistor	LSCR523UB
Q 1849	Bipolar Transistor	LSCR523UB
D 1841	LED	SMLVN6RGB2UK(B)
D 1842	LED	SMLVN6RGB2UK(B)

Part No.

D 1843	LED	SMLVN6RGB2UK(B)
D 1844	LED	SMLVN6RGB2UK(B)
D 1845	LED	SMLVN6RGB2UK(B)
D 1901	SMD Varistor	MLV0402ES012V0010N
D 1902	SMD Varistor	MLV0402ES012V0010N
L 1901	Inductor	CTF1713
L 1921	Inductor	CTF1786
L 1922	Inductor	CTF1786
L 1923	Inductor	CTF1786
S 1821	Push Switch	CSG1155
S 1822	Push Switch	CSG1155
S 1823	Push Switch	CSG1155
S 1825	Push Switch	CSG1155
S 1826	Push Switch	CSG1155
S 1827	Push Switch	CSG1155
S 1828	Push Switch	CSG1155
S 1829	Push Switch	CSG1155
S 1830	Push Switch	CSG1155
S 1831	Push Switch	CSG1155
S 1832	Push Switch	CSG1155
S 1833	Push Switch	CSG1155
S 1834	Push Switch	CSG1155
S 1835	Push Switch	CSG1155
S 1836	Encoder (MULTI-CONTROL)	CSD1168
CN1941	Connector	CKS6451
JA1901	Connector	CKS6443
JA1921	Jack	CKN1090
V 1801	LCD	CAW2057

RESISTORS

R 1801	RS1/16SS0R0J
R 1802	RS1/16SS0R0J
R 1803	RS1/16SS0R0J
R 1804	RS1/16SS0R0J
R 1805	RS1/16SS472J
R 1821	RS1/16SS273J
R 1841	RS1/16SS332J
R 1842	RS1/16SS152J
R 1843	RS1/16SS332J
R 1844	RS1/16SS152J
R 1845	RS1/16SS332J
R 1846	RS1/16SS152J
R 1847	RS1/16SS470J
R 1849	RS1/16SS470J
R 1851	RS1/16SS470J
R 1865	RS1/16SS332J
R 1866	RS1/16SS152J
R 1867	RS1/16SS332J
R 1868	RS1/16SS152J
R 1869	RS1/16SS332J
R 1870	RS1/16SS152J
R 1871	RS1/16SS390J
R 1873	RS1/16SS390J
R 1875	RS1/16SS390J
R 1877	RS1/16SS0R0J
R 1878	RS1/16SS0R0J
R 1879	RS1/16SS0R0J
R 1883	RS1/8SQ101J
R 1884	RS1/10SR221J
R 1885	RS1/10SR0R0J

R 1886	RS1/10SR0R0J
R 1887	RS1/16SS101J
R 1888	RS1/16SS101J
R 1941	RS1/10SR222J
R 1942	RS1/10SR222J
R 1943	RS1/10SR222J
R 1944	RS1/10SR222J
R 1952 (B)	RS1/16SS473J
R 1953 (A,C,D,E)	RS1/10SR101J

CAPACITORS

C 1801		CKSRYB105K10
C 1802		CKSRYB105K10
C 1901		CKSRYB105K10
C 1902		CKSRYB104K16
C 1904		CKSRYB105K16
C 1905		CKSRYB105K16
C 1906	4.7 uF	CCG1212
C 1951	10 uF(A,C,D,E)	CCG1192
C 1952		CCSSCH470J50
C 1953		CCSSCH470J50

C

Unit Number: CWX4269

Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201	IC	PEQ094A
IC 301	IC	BD8223EFV
Q 101	Transistor	2SA1577
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Spring Switch(HOME)	CSN1080
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS152J
R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS102J
R 217	RS1/16SS562J
R 218	RS1/16SS472J
R 229	RS1/16SS471J
R 232	RS1/16SS0R0J
R 237	RS1/16SS221J
R 240	RS1/16SS473J
R 245	RS1/16SS104J
R 254	RS1/16SS104J
R 260	RS1/16SS103J
R 264	RS1/16SS102J
R 281	RS1/16SS560J
R 282	RS1/16SS560J

Circuit Symbol and No.**Part No.**

A	R 291	RS1/16SS560J
	R 294	RS1/16SS471J
	R 303	RS1/16SS123J
	R 304	RS1/16SS123J
	R 305	RS1/16SS102J
	R 306	RS1/16SS472J
	R 307	RS1/16SS102J
	R 308	RS1/16SS472J
	R 309	RS1/16SS473J
	R 310	RS1/16SS472J
B	R 311	RS1/16SS472J
	R 312	RS1/16SS472J
	R 313	RS1/16SS472J
	R 701	RS1/16SS101J
	R 702	RS1/16SS101J
	R 706	RS1/16SS221J

CAPACITORS

	C 104	CKSQYB475K6R3
	C 110	CKSSYB104K10
	C 111	CKSSYB103K16
	C 203	CKSSYB104K10
	C 205	CKSRYB105K10
C	C 209	CKSRYB104K16
	C 210	CKSSYB104K10
	C 211	CKSSYB104K10
	C 212	CKSSYB104K10
	C 213	CKSSYB332K50
	C 214	CKSSYB473K16
	C 215	CKSSYB104K10
	C 216	CKSSYB152K50
	C 217	CCSSCH390J50
	C 218	CCSSCH5R0C50
D	C 219	CKSSYB104K10
	C 220	CKSSYB104K10
	C 221	CKSSYB104K10
	C 222	CKSSYB104K10
	C 223	CCSSCH680J50
	C 224	CCSSCH470J50
	C 225	CKSSYB103K16
	C 228	CCSSCH180J50
	C 229	CKSSYB104K10
	C 233	CKSSYB103K16
E	C 236	CKSSYB104K10
	C 238	CKSRYB104K16
	C 299	CKSSYB104K10
	C 302	CKSSYB102K50
	C 303	CKSSYB102K50
	C 304	CKSSYB223K16
	C 305	CKSSYB104K10
	C 306	CKSSYB104K10
	C 307	CKSRYB105K10
	C 308	CKSRYB105K10
	C 710	CKSSYB102K50

F