


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :**
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

A: DEH-S1100UB/XNUC
 B: DEH-S1150UB/XNCN5
 C: DEH-S1150UB/XNCS
 D: DEH-S1150UB/XNGS
 E: DEH-S1150UB/XNGS1
 F: DEH-S1190UB/XNID
 G: DEH-S19UB/XNID
 H: DEH-S1152UB/XNES

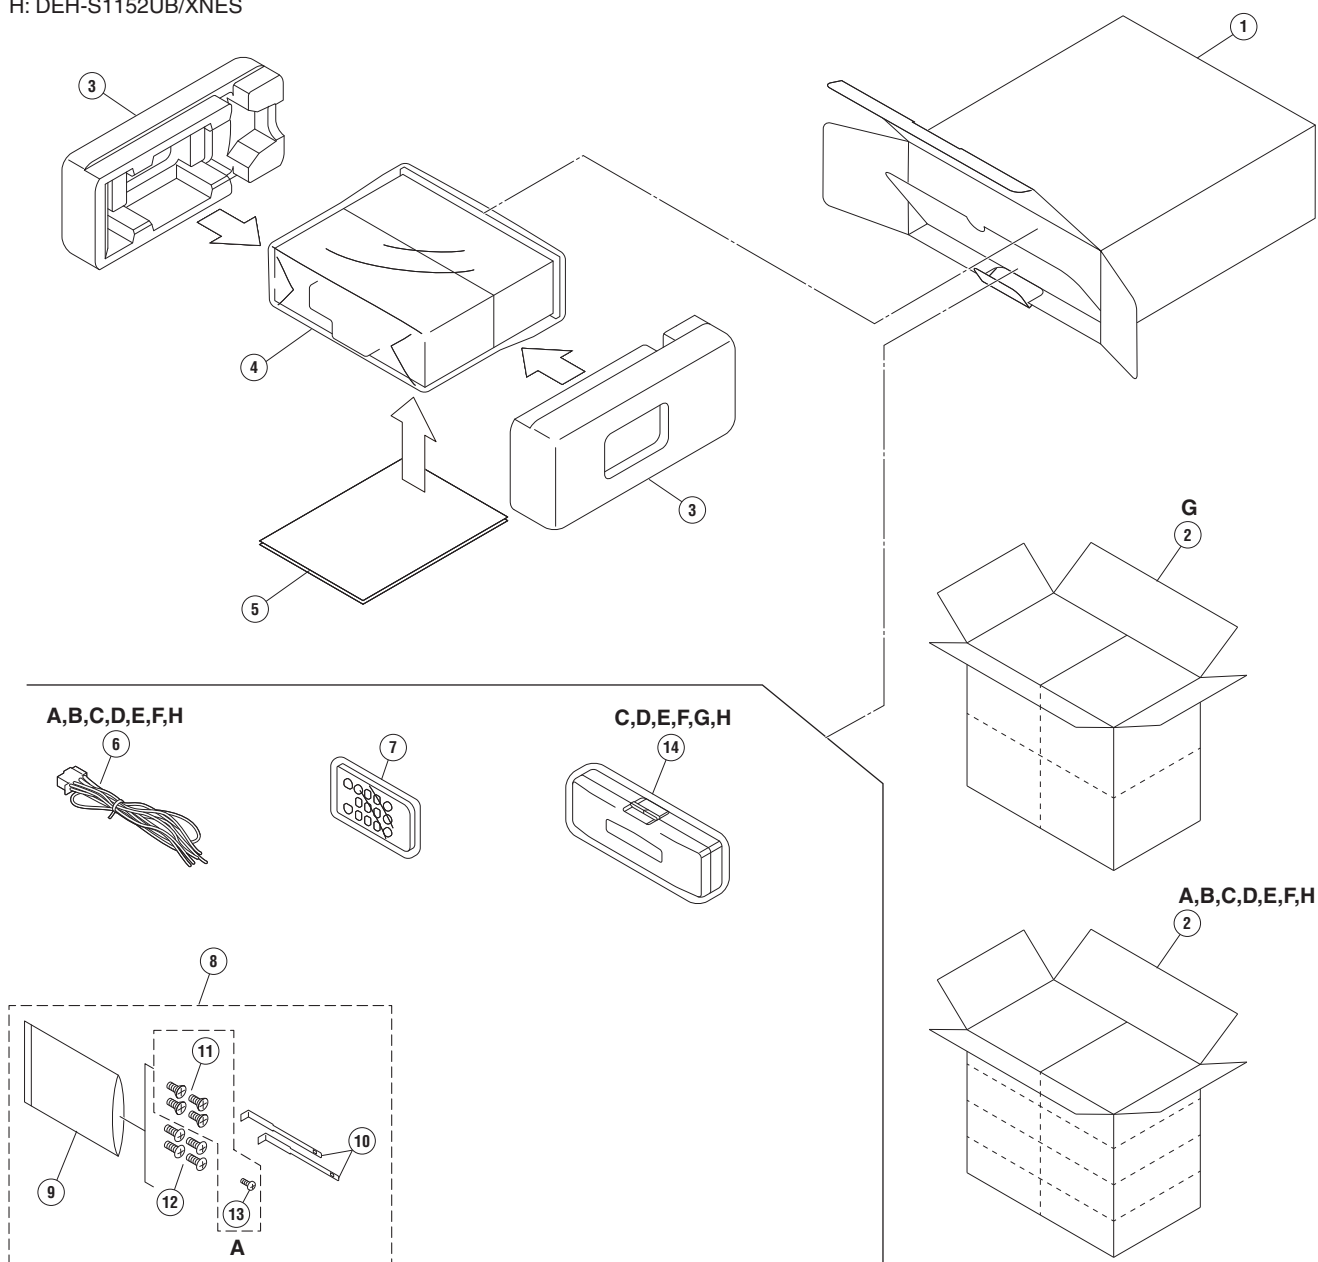

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	DEH-S1100UB /XNUC	DEH-S1150UB /XNCN5	DEH-S1150UB /XNCS	DEH-S1150UB /XNGS
A	1	Unit Box	QHG4374	QHG4378	QHG4380	QHG4376
	2	Contain Box	QHL4374	QHL4378	QHL4380	QHL4376
	3	Protector	QHP3048	QHP3048	QHP3048	QHP3048
	4	Polyethylene Bag	CEG1173	QEG3001	QEG3001	QEG3001
	5-1	Owner's Manual	Not used	QRB3778	Not used	QRD3596
	5-2	Quick Start Guide	QRD3653	Not used	QRD3654	Not used
	5-3	Web IM	See Contents of Web IM (2)	Not used	Not used	Not used
	5-4	Warranty Card	QRY3001	YRY5002	Not used	Not used
	6	Cord Assy	CDP1480	CDP1480	CDP1480	CDP1480
	7	Card Remote Control Unit	CXE9606	CXE9606	CXE9606	CXE9606
	8	Accessory Assy	QEA3337	QEA3338	QEA3338	QEA3338
	9	Polyethylene Bag	CEG1160	CEG1160	CEG1160	CEG1160
	10	Handle	QNC3021	QNC3021	QNC3021	QNC3021
	11	Screw	CBA2383	Not used	Not used	Not used
	12	Screw	CBA2384	CBA2384	CBA2384	CBA2384
B	13	Screw	BPZ20P060FTC	Not used	Not used	Not used
	14	Case Assy	Not used	Not used	QXA3129	QXA3129

Mark	No.	Description	DEH-S1150UB /XNGS1	DEH-S1190UB /XNID	DEH-S19UB /XNID	DEH-S1152UB /XNES
C	1	Unit Box	QHG4377	QHG4382	QHG4384	QHG4379
	2	Contain Box	QHL4377	QHL4382	QHL4384	QHL4379
	3	Protector	QHP3048	QHP3048	QHP3048	QHP3048
	4	Polyethylene Bag	QEG3001	QEG3001	QEG3001	QEG3001
	5-1	Owner's Manual	QRD3596	QRB3776	QRB3776	QRD3596
	5-2	Quick Start Guide	Not used	Not used	Not used	Not used
	5-3	Web IM	Not used	Not used	Not used	Not used
	5-4	Warranty Card	Not used	CRY1304	QRY3003	Not used
	6	Cord Assy	CDP1480	CDP1480	Not used	CDP1480
	7	Card Remote Control Unit	CXE9606	CXE9606	CXE9606	CXE9606
	8	Accessory Assy	QEA3338	QEA3338	QEA3338	QEA3338
	9	Polyethylene Bag	CEG1160	CEG1160	CEG1160	CEG1160
	10	Handle	QNC3021	QNC3021	QNC3021	QNC3021
	11	Screw	Not used	Not used	Not used	Not used
	12	Screw	CBA2384	CBA2384	CBA2384	CBA2384
D	13	Screw	Not used	Not used	Not used	Not used
	14	Case Assy	QXA3129	QXA3129	QXA3129	QXA3129

Owner's Manual, Installation Manual

Part No.	Language
QRB3776	English
QRB3778	Simplified Chinese
QRD3596	English, Traditional Chinese, Persian, Arabic
QRD3653	English, French, Spanish(Espanol)
QRD3654	English, Spanish(Espanol), Portuguese(B)


(2) CONTENTS OF WEB IM

Part No.	Language
*QRI3141(for XNUC)	English, French, Spanish(Espanol)

All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

9.2 EXTERIOR SECTION

- A: DEH-S1100UB/XNUC
 B: DEH-S1150UB/XNCN5
 C: DEH-S1150UB/XNCS
 D: DEH-S1150UB/XNGS
 E: DEH-S1150UB/XNGS1
 F: DEH-S1190UB/XNID
 G: DEH-S19UB/XNID
 H: DEH-S1152UB/XNES

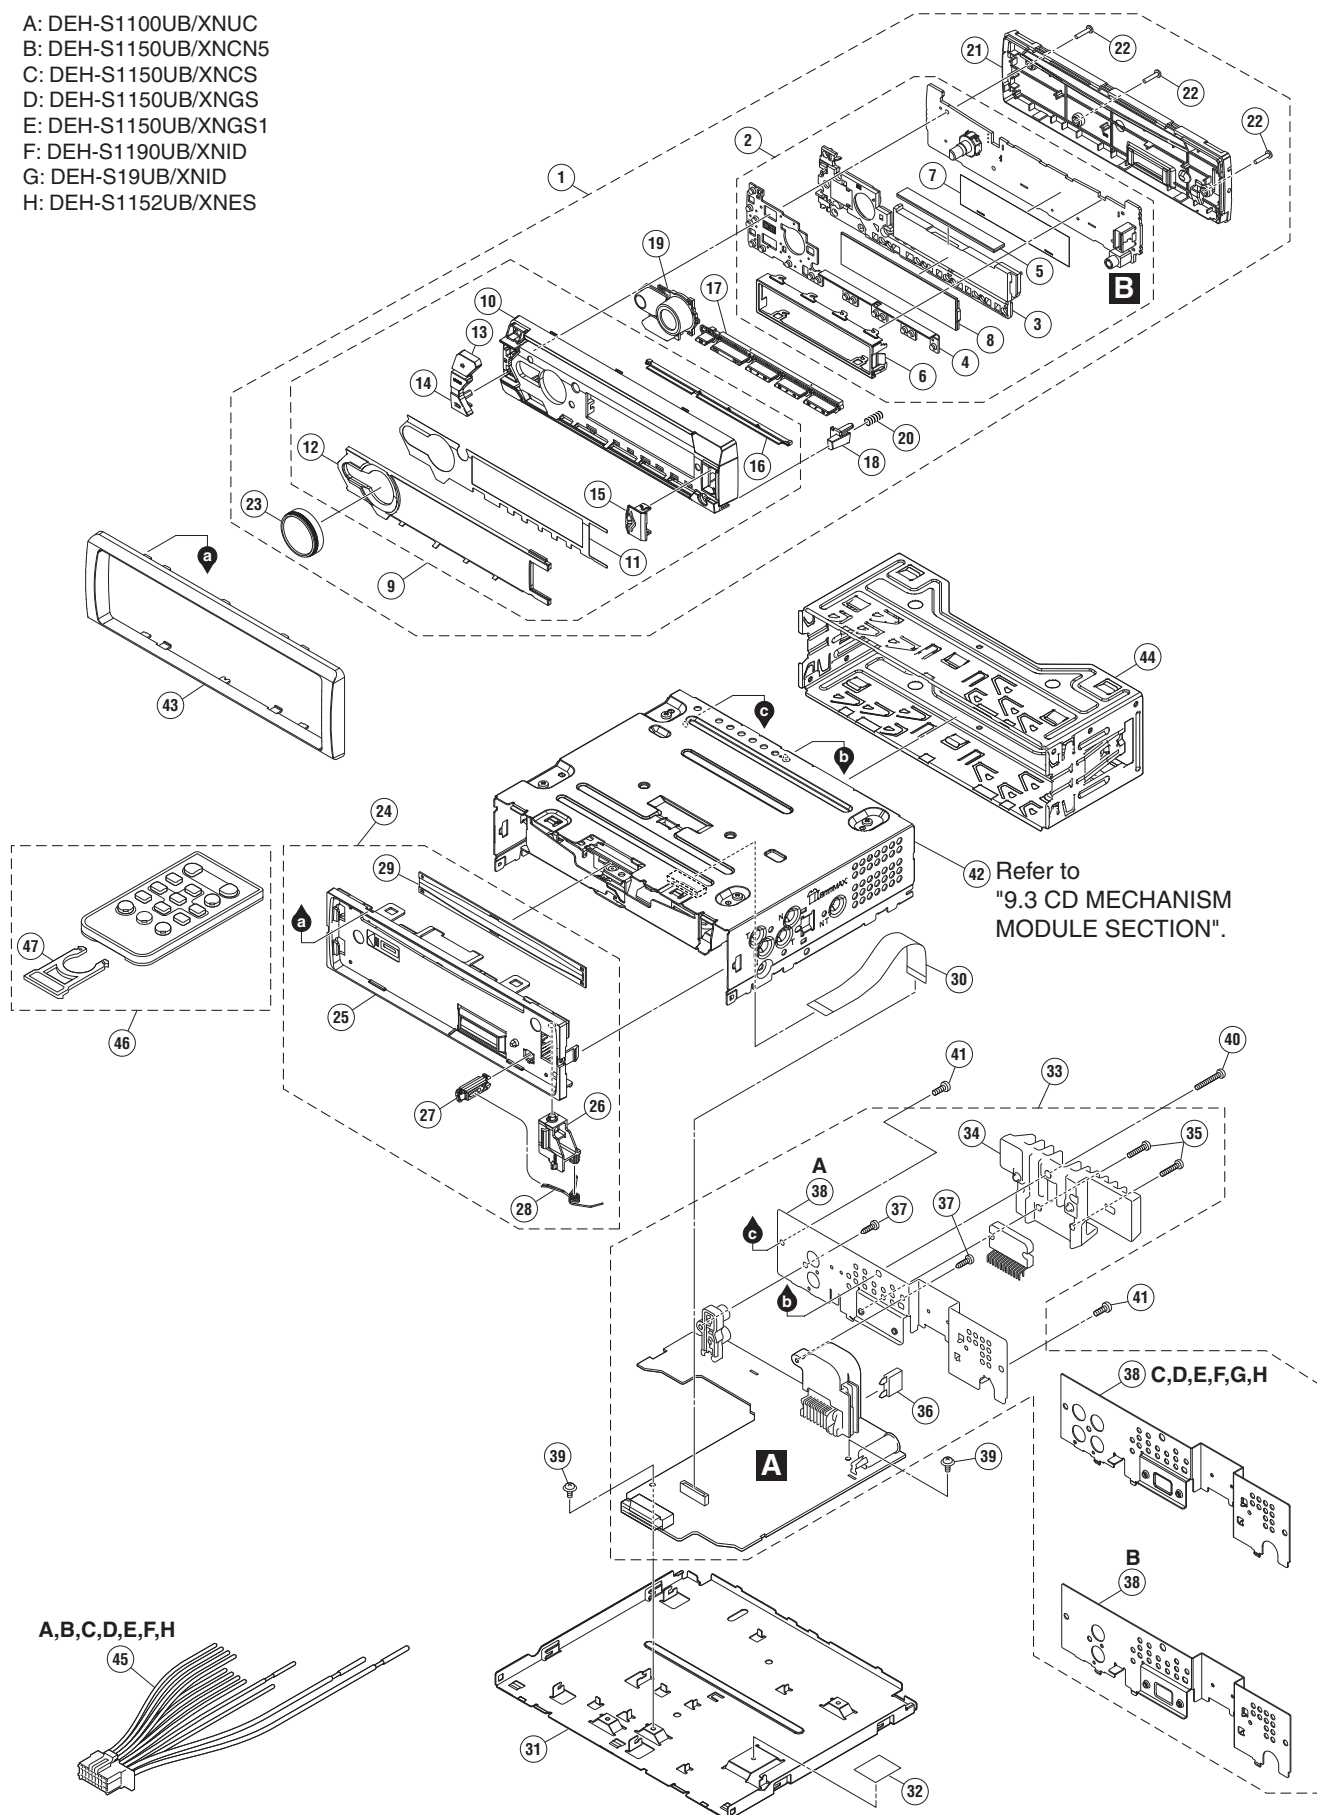

(1) EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	Detach Grille Assy	See Contrast table (2)		26	Arm	QNV3025
	2	Keyboard Unit	See Contrast table (2)		27	Button	QNV3026
	3	Lighting Conductor	QNV3153		28	Spring	QBH3001
	4	Contact Rubber	QNV3155		29	Cover	QNM3029
	5	Rubber Connector	QNV3129		30	FFC	QDE3029
B	6	Holder	QNC3173		31	Case	See Contrast table (2)
	7	Sheet	QNM3256		32	Heat Cond Sheet	See Contrast table (2)
	8	Segment LCD(V1801)	CAW2056		33	Tuner Amp Unit	See Contrast table (2)
	9	Grille Unit	See Contrast table (2)		34	Heat Sink	See Contrast table (2)
	* 10	Grille	QNS4331		35	Screw	BSZ26P120FTC
B	* 11	DS Tape	QNM3231	⚠	36	Fuse (10 A)	YEK5001
	* 12	Plate	QNS4295		37	Screw	BPZ26P080FTC
	* 13	Button(EJECT)	QAC3311		38	Holder	See Contrast table (2)
	* 14	Button(SRC,BACK)	QAC3312		39	Screw	ASZ26P050FTC
	* 15	Door	See Contrast table (2)		40	Screw	BSZ26P120FTC
C	* 16	Lighting Conductor	QNV3154		41	Screw	BSZ26P060FTC
	17	Button(DISP,TRACK,1-6)	QAC3319		42	CD Mechanism Module (11.6VA_T07) CXK5808	
	18	Button(DETACH)	QAC3320			CD Mechanism Module (S11.6_T07) CXK5807	
	19	Button(BASS,EQ)	QAC3317		43	Panel	QNS4341
	20	Spring	CBH2210		44	Holder	QNC3020
D	21	Cover	QNS4296		45	Cord Assy	See Contrast table (2)
	22	Screw	BPZ20P100FTC		46	Card Remote Control Unit	CXE9606
	23	Knob Unit	See Contrast table (2)		47	Cover	CNU3681
	24	Panel Assy	QXA3261				
	25	Panel	QNS3126				

Notes: For No.42, please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.


(2) CONTRAST TABLE

DEH-S1100UB/XNUC, DEH-S1150UB/XNCN5, DEH-S1150UB/XNCS, DEH-S1150UB/XNGS, DEH-S1150UB/XNGS1, DEH-S1190UB/XNID, DEH-S19UB/XNID and DEH-S1152UB/XNES are constructed the same except for the following:

Mark	No.	Description	DEH-S1100UB /XNUC	DEH-S1150UB /XNCN5	DEH-S1150UB /XNCS	DEH-S1150UB /XNGS
*	1	Detach Grille Assy	QXA5807	QXA5809	QXA5813	QXA5809
	2	Keyboard Unit	QWM4994	QWM4994	QWM4994	QWM4994
	9	Grille Unit	QXA5457	QXA5459	QXA5463	QXA5459
	15	Door	QAT3037	QAT3036	QAT3037	QAT3036
	23	Knob Unit	QXA5423	QXA5423	QXA5423	QXA5423
	31	Case	QNB3043	QNB3033	QNB3043	QNB3033
	32	Heat Cond Sheet	QNM3175	QNM3135	QNM3175	QNM3135
	33	Tuner Amp Unit	QWM4961	QWM4966	QWM4963	QWM4964
	34	Heat Sink	QNR3010	QNR3002	QNR3010	QNR3002
	38	Holder	QNC3051	QNC3050	QNC3049	QNC3049
	45	Cord Assy	CDP1480	CDP1480	CDP1480	CDP1480

Mark	No.	Description	DEH-S1150UB /XNGS1	DEH-S1190UB /XNID	DEH-S19UB /XNID	DEH-S1152UB /XNES
*	1	Detach Grille Assy	QXA5809	QXA5815	QXA5810	QXA5812
	2	Keyboard Unit	QWM4994	QWM4994	QWM5074	QWM5000
	9	Grille Unit	QXA5459	QXA5465	QXA5460	QXA5462
	15	Door	QAT3036	QAT3037	QAT3037	QAT3036
	23	Knob Unit	QXA5423	QXA5430	QXA5430	QXA5423
	31	Case	QNB3033	QNB3043	QNB3043	QNB3033
	32	Heat Cond Sheet	QNM3135	QNM3175	QNM3175	QNM3135
	33	Tuner Amp Unit	QWM4965	QWM4967	QWM5073	QWM4969
	34	Heat Sink	QNR3002	QNR3002	QNR3002	QNR3002
	38	Holder	QNC3049	QNC3049	QNC3049	QNC3049
	45	Cord Assy	CDP1480	CDP1480	Not used	CDP1480

9.3 CD MECHANISM MODULE

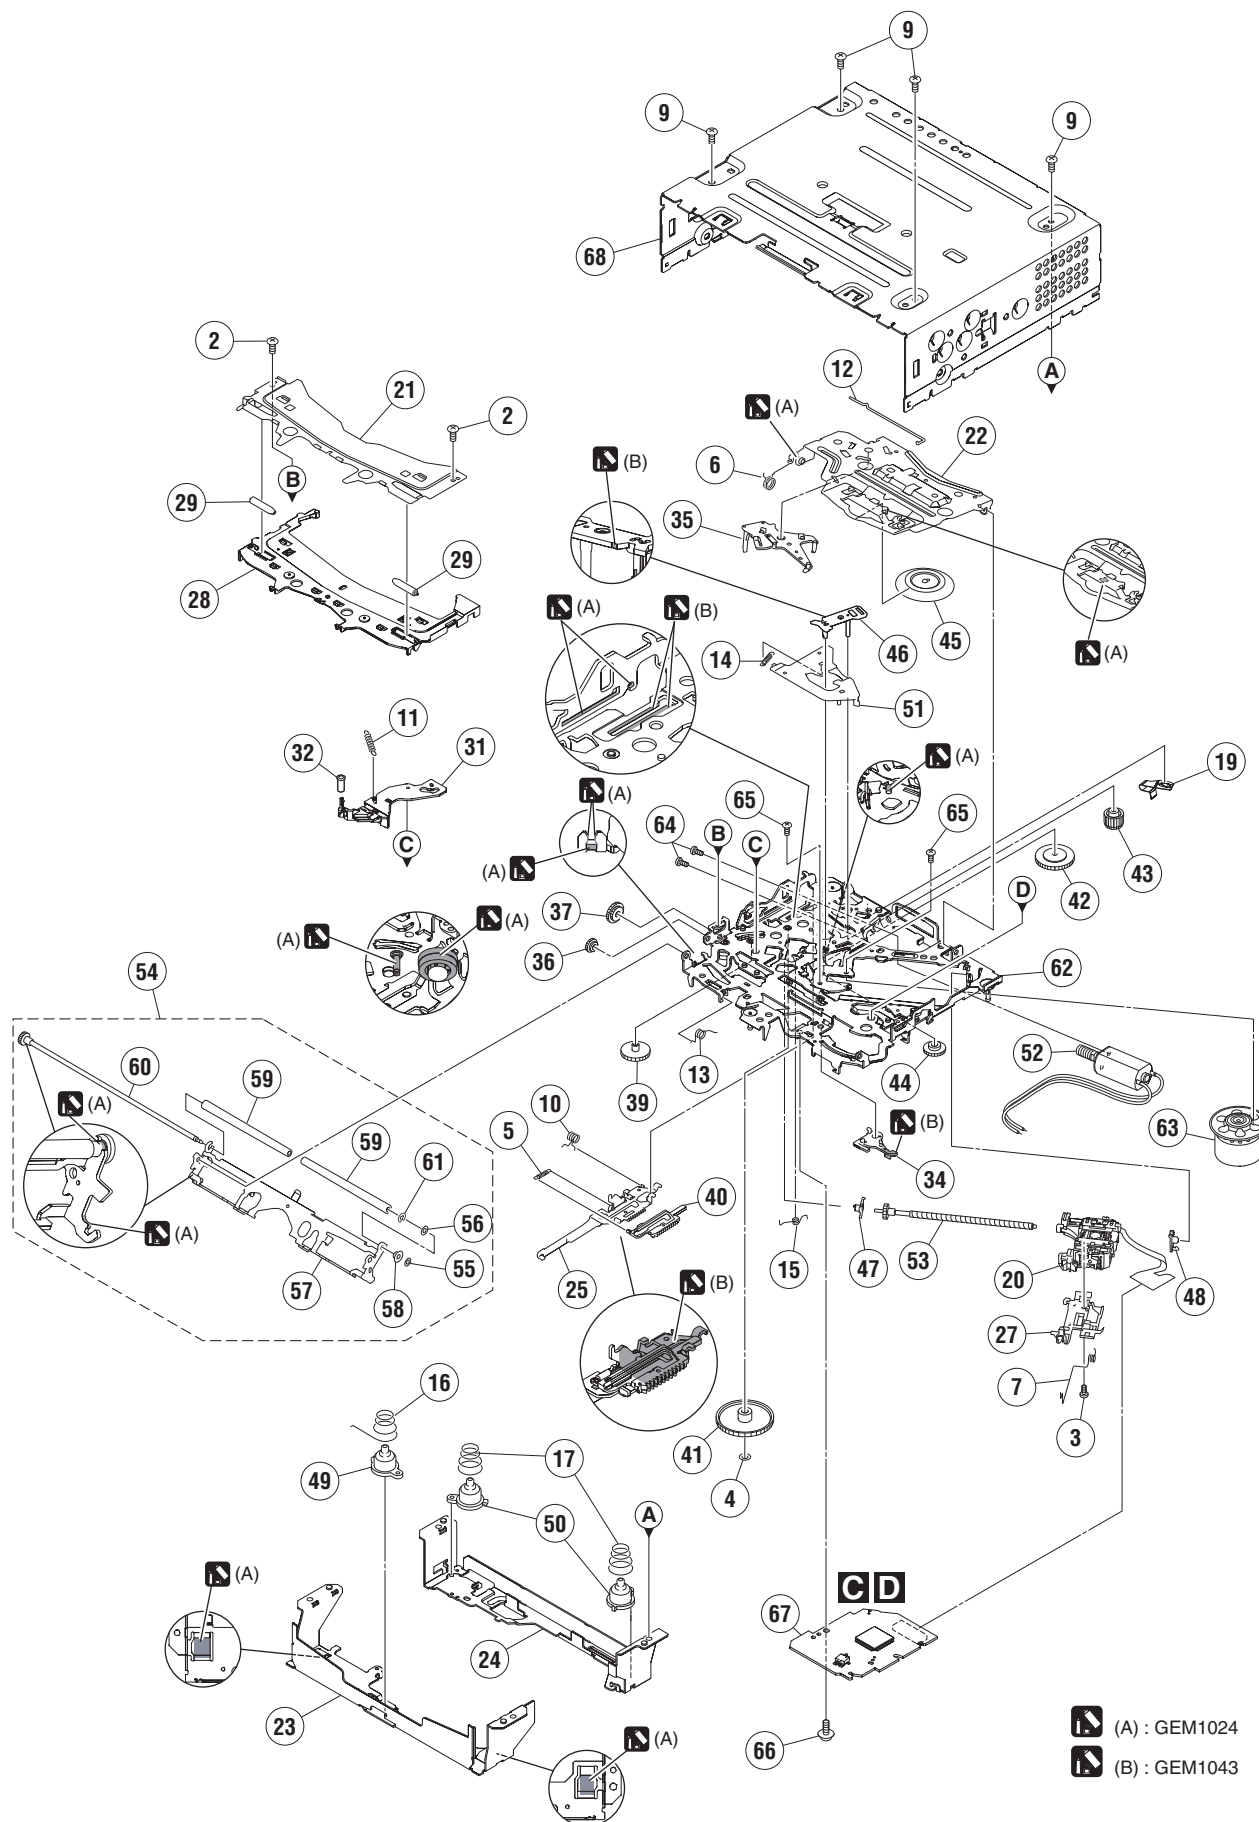

(A) : GEM1024
(B) : GEM1043

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			36	Gear	CNW1180	A
2	Screw	BSZ20P040FTC	37	Gear	CNW1181	
3	Screw(M2 x 4)	CBA1835	38			
4	Washer	CBF1038	39	Gear	CNW1183	
5	Spring	CBH3010	40	Rack	CNW1184	
6	Spring	CBH2855	41	Gear	CNW1185	
7	Spring	CBH2856	42	Gear	CNW1186	
8			43	Gear	CNW1187	
9	Screw	BSZ26P060FTC	44	Gear	CNW2287	
10	Spring	CBH3011	45	Clamper	CNW1190	B
11	Coil Spring	CBH3095	46	Arm	CNW1192	
12	Spring	CBH3014	47	Holder	CNW1193	
13	Spring	CBH3145	48	Holder	CNW1194	
14	Spring	CBH3016	49	Damper	CNW1197	
15	Spring	CBH3017	50	Damper	CNW1198	
16	Spring	CBH3086	51	Arm	CNW1726	
17	Spring	CBH3019	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
18			53	Screw Unit	CXC8894	
19	Leaf Spring	CBL1824	54	Arm Assy	CXE8953	C
20	Pickup Unit(P11)(Service) for CXK5808 CXX4754 Pickup Unit(P10.6)(Service) for CXK5807 CXX3556		55	Washer	CBF1037	
21	Bracket	CND4553	56	Washer	CBF1038	
22	Arm	CND7608	57	Arm	CND6242	
23	Bracket	CND6127	58	Collar	CNW2444	
24	Bracket	CND5710	59	Roller	CNW2500	
25	Lever	CND6834	60	Gear Unit	CXE8952	
26			61	Washer	YE15FTC	
27	Rack	CNV8342	62	Chassis Unit	CXE9531	
28	Guide	CNW3489	63	Motor Unit(M1)(SPDL)	CXE2273	D
29	Roller	CNW1172	64	Screw	JFZ20P025FTC	
30			65	Screw	JGZ17P022FTC	
31	Arm	CNW2241	66	Screw	EBA1028	
32	Roller	CNW1175	67	CD Core Unit (S11.6VA)(for CXK5808) CWX4269 CD Core Unit (S11.6STD)(for CXK5807) CWX4023		
33			68	Chassis	CNA3373	
34	Arm	CNW1177				
35	Arm	CNW1178				

Notes: For No.20 and 67, please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A:DEH-S1100UB/XNUC	
B:DEH-S1150UB/XNCN5	
C:DEH-S1150UB/XNCS	
D:DEH-S1150UB/XNGS	
E:DEH-S1150UB/XNGS1	
F:DEH-S1190UB/XNID	
G:DEH-S19UB/XNID	
H:DEH-S1152UB/XNES	
Unit Number: QWM4961(A)	
Unit Number: QWM4966(B)	
Unit Number: QWM4963(C)	
Unit Number: QWM4964(D)	
Unit Number: QWM4965(E)	
Unit Number: QWM4967(F)	
Unit Number: QWM5073(G)	
Unit Number: QWM4969(H)	
Unit Name : Tuner Amp Unit	
Unit Number: QWM4994(A,B,C,D,E,F)	
Unit Number: QWM5074(G)	
Unit Number: QWM5000(H)	
Unit Name : Keyboard Unit	
Unit Number: CWX4269	
Unit Name : CD Core Unit(11.6VA_T07)	
Unit Number: CWX4023	
Unit Name : CD Core Unit(S11.6STD)	

Notes:

For CD Core Unit, please refer to "1.3 NOTES ON REPLACING PARTS" for part distinguish.

A

Unit Number: QWM4961(A)
Unit Number: QWM4966(B)
Unit Number: QWM4963(C)
Unit Number: QWM4964(D)
Unit Number: QWM4965(E)

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Unit Number: QWM4967(F)	
Unit Number: QWM5073(G)	
Unit Number: QWM4969(H)	
Unit Name : Tuner Amp Unit	

MISCELLANEOUS

IC 151	Power supply IC	BD49101AEFS
IC 321	Interface IC(A,C,F,G)	STCC2540IQ
*IC351	Blank Flash IC	R5S726A0D216FP
IC 361	IC	S-80827CNMC-B8M
IC 371	FlashROM Unit(A)	QVQ1068
IC 371	FlashROM Unit(B,D,E,F,G,H)	QVQ1066
IC 371	FlashROM Unit(C)	QVQ1069
IC 551	E-VOL System LSI	PM9013A
IC 601	Tuner IC	TEF6686AHN
IC 801	Logic IC	TC7SET08FUS3
IC 851	Power Amp IC	PAL014A
Q 111	Resistor Built-in Transistor	LTC014TEB
Q 151	Power MOS FET	RRR040P03
Q 301	Transistor	2SAR502UB
Q 302	Transistor	2SCR514PGZE
Q 303	Transistor	LTC143EUB
Q 751	Transistor(C,D,E,F,G,H)	EMH53
Q 752	Transistor	EMH53
Q 781	Bipolar Transistor(C,D,E,F,G,H)	EMH53
Q 782	Bipolar Transistor(C,D,E,F,G,H)	EMH53
Q 783	Bipolar Transistor(C,D,E,F,G,H)	EMH53
Q 784	Bipolar Transistor(C,D,E,F,G,H)	EMH53
Q 901	Transistor	EMD52
D 101	Diode	D1F60-5053
D 102	Diode	D1F60-5053
D 111	Zener Diode	UDZV6R8(B)
D 152	Rectifier Diode	RR1VWM4STF
D 153	Schottky Diode	RB162MM-40TF
D 154	Rectifier Diode	RR1VWM4STF
D 155	Schottky Diode	RB162MM-40TF
D 156	Schottky Diode	RB056LAM-40TF
D 157	Schottky Diode	CMS30I30A
D 301	Zener Diode	UDZV10(B)
D 302	Zener Diode(A,C,F,G)	RSB6R8SM
D 303	Diode(A,C,F,G)	RSB6R8SM

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 351 Schottky Diode(B,C,D,E,F,G,H) RB751SM-40
 D 352 Schottky Diode(B,C,D,E,F,G,H) RB751SM-40
 D 701 Zener Diode(A,C,F,G) RSB6R8SM
 D 702 Zener Diode(A,C,F,G) RSB6R8SM
 D 802 Zener Diode RSB6R8SM

R 161

XRS1/16SS4703D

R 162

XRS1/16SS4303D

R 163

XRS1/16SS3903D

R 164

XRS1/16SS6202D

R 165

20 mohm

CCN1401

R 167

XRS1/16SS102J

D 803 Zener Diode RSB6R8SM
 D 804 Zener Diode RSB6R8SM
 D 805 Zener Diode RSB6R8SM
 D 806 Zener Diode RSB6R8SM
 D 807 Zener Diode RSB6R8SM

R 168

XRS1/16SS102J

R 169

XRS1/16SS102J

R 172

XRS1/16SS393J

R 173

XRS1/16SS4703D

R 174

XRS1/16SS1503D

D 815 Zener Diode(A,C,F,G) RSB6R8SM
 D 816 Zener Diode(A,C,F,G) RSB6R8SM
 D 817 Zener Diode(A,C,F,G) RSB6R8SM
 D 911 Rectifier Diode RR1VWM4STF
 D 912 Rectifier Diode RR1VWM4STF

R 175

XRS1/16SS393J

R 176

XRS1/16SS103J

R 177

XRS1/16SS472J

R 178

XRS1/16SS1003D

R 179

XRS1/16SS7503D

L 101 Choke Coil 120 uH CTH1620
 L 151 SMD SPL Inductor CTH1521
 L 152 SMD SPL Inductor CTH1584
 L 193 Inductor(A,B,C) CTF1786
 L 301 Noise Filter(A,C,F,G) CTF1901

R 180

XRS1/16SS1603D

R 182

(A,C,F,G,H)

XRS1/16SS680J

R 182

(B,D,E)

XRS1/16SS820J

R 184

(A,C,F,G,H)

XRS1/16SS4701F

R 184

(B,D,E)

XRS1/16SS682J

L 552 Inductor CTF1736
 L 602 Inductor(A,B,C) CTF1787
 L 603 Chip Coil(D,E,F,G,H) LCTAWR27J2520
 L 604 Chip Coil(D,E,F,G,H) LCTAW3R3J2520
 L 605 Inductor(A,B,C) LCYC150K1608

R 185

XRS1/16SS102J

R 187

XRS1/16SS1203D

R 188

XRS1/16SS1802D

R 189

XRS1/16SS6802D

R 190

XRS1/16SS3903D

L 606 Inductor CTF1786
 L 609 Inductor(D,E,F,G,H) CTF1786
 L 610 SMD SPL Inductor LCMAR27J1608
 L 611 SMD SPL Inductor(D,E,F,G,H) LCYAR82J2016
 L 615 Inductor LCMAR22J1608

R 192

XRS1/16SS102J

R 193

(D,E,F,G,H)

XRS1/16SS0R0J

R 194

(D,E,F,G,H)

XRS1/16SS0R0J

R 301

XRS1/16SS473J

R 303

XRS1/16SS103J

L 701 Inductor CTF1787
 L 702 Chip Beads VTL1133
 L 703 Chip Beads VTL1133
 L 704 Chip Beads VTL1133
 L 801 Noise Filter CTF1901

R 304

XRS1/16SS272J

R 305

XRS1/16SS473J

R 308

XRS1/10SR102J

R 323

(A,C,F,G)

XRS1/16SS2702F

R 325

(A,C,F,G)

XRS1/16SS103J

X 351 Crystal Resonator 12 MHz CSS1906
 X 353 Crystal Resonator 16.9344 MHz CSS1882
 X 601 Crystal Resonator 55.46667 MHz CSS1898
 P 601 Surge Absorber IMSA-6803-01Y900
 P753 Fuse 3.0 A CEK1404

R 326

(A,C,F,G)

XRS1/16SS103J

R 327

(A,C,F,G)

XRS1/16SS0R0J

R 328

(A,C,F,G)

XRS1/16SS103J

R 329

(B,D,E,H)

XRS1/10SR0R0J

R 330

(B,D,E,H)

XRS1/10SR0R0J

VA801 SMD Varistor MLV0402ES012V0010N
 VA802 Varistors MLV0402ES012V0010N
 CN701 Connector VKN1192
 CN801 Connector CKS6452
 JA101 Plug CKM1624

R 331

(B,D,E,H)

XRS1/10SR0R0J

R 332

(B,D,E,H)

XRS1/10SR0R0J

R 334

(B,D,E,H)

XRS1/10SR0R0J

R 335

(B,D,E,H)

XRS1/10SR0R0J

R 337

(A,C,F,G)

XRS1/16SS0R0J

E JA601 Antenna Jack CKX1104
 JA751 RCA Jack(A,B) CKB1115
 JA751 RCA Jack(C,D,E,F,G,H) CKB1109
 JA782 Jack(B,C,D,E,F,G,H) CKS6437

R 355

XRS1/16SS103J

R 357

XRS1/16SS473J

R 359

XRS1/16SS0R0J

R 360

XRS1/16SS0R0J

R 363

XRS1/16SS221J

RESISTORS

R 111 XRS1/16SS223J
 R 112 XRS1/16SS473J
 R 113 XRS1/16SS682J
 R 114 RS1/4SA102J
 R 151 XRS1/16SS8202D

R 364

XRS1/16SS104J

R 365

XRS1/16SS221J

R 366

XRS1/16SS221J

R 368

XRS1/16SS102J

R 369

XRS1/16SS473J

F R 156 XRS1/16SS102J
 R 158 XRS1/16SS2403D
 R 159 XRS1/16SS7502D
 R 160 XRS1/16SS103J

R 370

XRS1/16SS473J

R 371

XRS1/16SS473J

R 373

XRS1/16SS152J

5		6		7		8	
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.	
R 374		XRS1/16SS153J		R 607		XRS1/16SS101J	
R 375		XRS1/16SS153J		R 609		XRS1/16SS103J	
				R 610		XRS1/16SS103J	A
R 376		XRS1/16SS473J					
R 377		XRS1/16SS103J		R 617		XRS1/16SS0R0J	
R 378 (B,G)		XRS1/16SS103J		R 620 (A,B,C)		XRS1/16SS0R0J	
R 378 (C,E,F)		XRS1/16SS473J		R 637		XRS1/16SS472J	
R 379 (A,B,D,G,H)		XRS1/16SS473J		R 638		XRS1/16SS472J	
				R 651		XRS1/16SS0R0J	
R 380		XRS1/16SS103J					
R 383		XRS1/16SS222J		R 652		XRS1/16SS0R0J	
R 384		XRS1/16SS473J		R 653 (A,H)		XRS1/10SR0R0J	
R 385		RAB4CQ473J		R 656 (D,E,F,G,H)		XRS1/16SS0R0J	
R 386		XRS1/16SS473J		R 701		XRS1/16SS473J	
				R 702		XRS1/16SS104J	
R 387		XRS1/16SS473J					
R 388		XRS1/16SS473J		R 704		XRS1/16SS104J	B
R 389		XRS1/16SS473J		R 706		XRS1/16SS221J	
R 390		XRS1/16SS473J		R 707		XRS1/16SS221J	
R 391		XRS1/16SS221J		R 708		XRS1/16SS101J	
				R 709		XRS1/16SS221J	
R 392		XRS1/16SS221J					
R 393		XRS1/16SS221J		R 710		XRS1/16SS101J	
R 394		XRS1/16SS221J		R 711		XRS1/16SS102J	
R 395		XRS1/16SS221J		R 718		XRS1/16SS221J	
R 396		XRS1/16SS221J		R 719		XRS1/16SS104J	
				R 721		XRS1/16SS472J	
R 397		XRS1/16SS473J					
R 398		XRS1/16SS473J		R 722		XRS1/16SS472J	C
R 399		XRS1/16SS101J		R 723		XRS1/16SS472J	
R 400		XRS1/16SS473J		R 724 (A,C,F,G)		XRS1/16SS0R0J	
R 401		XRS1/16SS102J		R 751 (C,D,E,F,G,H)		XRS1/16SS821J	
				R 752 (C,D,E,F,G,H)		XRS1/16SS821J	
R 402		XRS1/16SS473J					
R 403		XRS1/16SS473J		R 753 (C,D,E,F,G,H)		XRS1/16SS223J	
R 404		XRS1/16SS473J		R 754 (C,D,E,F,G,H)		XRS1/16SS223J	
R 409		XRS1/16SS472J		R 755		XRS1/16SS821J	
R 411		XRS1/16SS472J		R 756		XRS1/16SS821J	
				R 757		XRS1/16SS223J	
R 412		XRS1/16SS104J					
R 413		XRS1/16SS101J		R 758		XRS1/16SS223J	
R 414		XRS1/16SS101J		R 764		XRS1/16SS0R0J	D
R 415		XRS1/16SS101J		R 765 (C,D,E,F,G,H)		XRS1/16SS0R0J	
R 416		XRS1/16SS102J		R 789 (B,C,D,E,F,G,H)		XRS1/16SS0R0J	
				R 795 (C,D,E,F,G,H)		XRS1/16SS681J	
R 417 (A,C,F,G)		XRS1/16SS101J					
R 418		XRS1/16SS102J		R 798 (C,D,E,F,G,H)		XRS1/16SS681J	
R 419		XRS1/16SS102J		R 799 (C,D,E,F,G,H)		XRS1/16SS822J	
R 420 (A,C,F,G)		XRS1/16SS101J		R 800 (C,D,E,F,G,H)		XRS1/16SS822J	
R 421		XRS1/16SS473J		R 801		XRS1/10SR222J	
				R 803		XRS1/16SS223J	
R 423		XRS1/16SS222J					
R 424		XRS1/16SS222J		R 804		XRS1/16SS223J	
R 425		XRS1/16SS103J		R 805		XRS1/10SR101J	
R 426 (B,C)		XRS1/16SS0R0J		R 806		XRS1/10SR101J	E
R 428		XRS1/16SS0R0J		R 807		XRS1/10SR101J	
				R 808		XRS1/10SR222J	
R 430 (D,E,G)		XRS1/16SS473J					
R 431 (B,F,H)		XRS1/16SS473J		R 809		XRS1/10SR220J	
R 432 (A,C,F,G)		XRS1/16SS103J		R 810		XRS1/10SR220J	
R 433 (B,C,D,E,F,G,H)		XRS1/16SS102J		R 813		XRS1/10SR222J	
R 434 (B,C,D,E,F,G,H)		XRS1/16SS102J		R 814		XRS1/10SR222J	
				R 815		XRS1/16SS822J	
R 509		XRS1/16SS473J					
R 510		XRS1/16SS473J		R 816		XRS1/10SR222J	
R 603 (A,B,C)		XRS1/16SS391J		R 817		XRS1/10SR222J	
R 603 (D,E,F,G,H)		XRS1/16SS101J		R 821 (B,C)		XRS1/16SS0R0J	
R 604		XRS1/16SS105J		R 822		XRS1/10SR0R0J	F
				R 823		XRS1/16SS0R0J	
R 605		XRS1/16SS105J					
R 606		XRS1/16SS101J		R 841		XRS1/16SS472J	

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 859		XRS1/16SS103J
R 872		XRS1/10SR0R0J
R 901		XRS1/16SS103J
R 902		XRS1/16SS221J
R 903		XRS1/16SS223J
R 914		XRS1/10SR0R0J

C 353		CKSSYB104K10
C 354		CKSSYB104K10
C 357		CKSSYB104K10
C 359		CKSSYX105K10
C 361		CKSSYB104K10

CAPACITORS

C 101	2 200 uF/16V	CCH1659
C 111		CKSRYB103K50
C 151		CEVW221M16
C 152		CKSRYX105K25
C 153	10 uF	CCG1236
C 154		CKSSYX105K10
C 156		CEAT102M16
C 157	10 uF	CCG1236
C 158		CKSSYX105K10
C 160	10 uF	CCG1236
C 162		CCSSCH391J50
C 163		CEVQW221M6R3
C 164		CCSSCH471J50
C 165		CCSSCH102J50
C 166		CKSQYX106K10

C 362	(A,B,C)	CKSSYB104K10
C 362	(D,E,F,G,H)	CCSSCH101J50
C 363	(A,B,C)	CKSSYB104K10
C 363	(D,E,F,G,H)	CKSSYB102K50
C 364	(D,E,F,G)	CCSSCH120J50

C 167		CKSQYX106K10
C 169		CKSQYX106K10
C 171	10 uF	CCG1236
C 172	10 uF	CCG1236
C 173		CKSRYX105K16

C 365	(A,B,C)	CCSSCH120J50
C 366		CCSSCH120J50
C 368		CKSSYB102K50
C 369		CKSSYB104K10
C 375		CCSSCH120J50

C 174		CKSRYX105K16
C 177		CKSQYX106K10
C 178		CCSSCH391J50
C 179		CKSSYB102K50
C 180		CKSQYX106K10

C 376		CCSSCH120J50
C 377		CKSSYX105K10
C 379		CCSSCH391J50
C 381	(A,D,E,F,G,H)	CKSSYB104K10
C 383		CKSSYB104K10

C 181		CEVQW221M6R3
C 183		CKSRYX475K6R3
C 184	(B,C)	CKSSYX105K10
C 185		CEVW221M10
C 186		CCSSCH331J50
C 187		CCSRCH101J50

C 384		CCSSCH220J50
C 385		CKSSYB104K10
C 386		CKSSYB104K10
C 387		CKSSYB104K10
C 388		CCSSCH330J50

C 188	(A)	CKSSYX105K10
C 188	(B,C)	CKSSYB102K50
C 192		CKSYX226M16
C 194	(B,C,D,E,F,G,H)	CKSRYB103K50
C 195		CKSSYX105K16
C 196		CKSSYX105K10

C 389		CKSSYB104K10
C 390		CCSSCH100D50
C 391		CCSSCH220J50
C 392		CCSSCH220J50
C 393		CCSSCH220J50

C 197		CKSRYX105K16
C 198	(A,C,F,G)	CEAT102M16
C 199		CKSSYB122K50
C 200		CKSYX106K35
C 201		CCSSCH102J50

C 394		CKSSYB104K10
C 395		CKSSYB103K16
C 398		CKSSYX105K10
C 399		CKSSYB104K10
C 400		CCSSCH100D50

C 253		CKSSYB104K10
C 255		CKSRYX225K10
C 302		CCSSCH101J50
C 303		CKSSYB104K16
C 304		CKSSYB104K16

C 404	(C)	CKSSYB104K10
C 551		CKSRYX105K16
C 553		CKSRYX105K16
C 554		CKSSYX105K10
C 555		CKSRYX105K16

C 321	(A,C,F,G)	CKSSYB104K10
C 322	(A,C,F,G)	CKSQYX106K10
C 323	(A,C,F,G)	CKSQYX106K10
C 351		CKSSYB104K10
C 352		CKSSYB104K10

C 560		CKSRYX105K16
C 561		CKSRYX105K16
C 562		CKSRYX105K16
C 563		CKSQYX106K10
C 564		CEVW470M16

C 565		CKSSYB104K10
C 568		CKSSYB104K10
C 569		CKSSYB104K10
C 570		CKSQYX106K10
C 573		CKSSYX105K10

C 574	(D,E,F,G,H)	CKSSYX105K10
C 575		CKSQYX106K10
C 576		CKSSYB104K10
C 577		CKSQYX106K10
C 583		CKSQYX106K10

C 584		CKSSYB104K10
C 585		CKSSYB104K10
C 586		CKSSYB104K10
C 587		CKSSYB102K50

Circuit Symbol and No.**Part No.**

C 589		CKSSYX105K10
C 590		CKSRYX105K16
C 591	(A,B,C)	CCSSCH391J50
C 602	(D,E,F,G,H)	CCSSCK2R0C50
C 603	(D,E,F,G,H)	CCSSCK1R0C50
C 604	(D,E,F,G,H)	CCSSCK1R0C50
C 605	(D,E,F,G,H)	CCSSCH120J50
C 607		CKSSYB102K50
C 610		CKSSYB152K50
C 611		CCSSCH120J50
C 612		CCSSCH5R0C50
C 613		CCSSCH120J50
C 615		CKSSYB104K10
C 617		CKSSYB102K50
C 618		CKSSYB224K6R3
C 620	(A,B,C)	CKSSYB104K10
C 620	(D,E,F,G,H)	CKSSYX105K10
C 621		CCSSCH180J50
C 624		CKSRYX225K10
C 626		CKSQYX106K10
C 630	(A,)	CKSSYX105K10
C 631	(A)	CCSSCH391J50
C 631	(B,C,D,E,F,G,H)	CKSSYB102K50
C 632		CKSSYB104K16
C 633		CKSSYB104K16
C 635	(B,C,D,E,F,G,H)	CKSSYB104K10
C 636	(A)	CKSSYB102K50
C 637	(A,B,C)	CKSSYB104K10
C 639		CCSSCH471J50
C 701		CKSSYB103K16
C 702		CKSSYB103K16
C 709		CKSSYB104K10
C 751	(C,D,E,F,G,H)	CKSQYX106K10
C 752	(C,D,E,F,G,H)	CKSQYX106K10
C 755		CKSQYX106K10
C 756		CKSQYX106K10
C 760		CKSSYB104K10
C 787	(B,C,D,E,F,G,H)	CKSSYB104K16
C 788	(B,C,D,E,F,G,H)	CKSSYB104K16
C 801	1 000 pF	CCG1345
C 803		CKSSYX105K10
C 804	(B,D,E,H)	CKSSYX105K10
C 806		CKSRYX104K50
C 807		CKSSYX105K10
C 809		CCSRCH221J50
C 810		CCSRCH221J50
C 811		CKSSYB104K10
C 851		CKSRYB474K10
C 853		CKSRYB474K10
C 855		CKSRYB474K10
C 857		CKSRYB474K10
C 863		CKSRYX225K10
C 864		CKSRYX104K50
C 866		CKSRYX105K16
C 868		CKSQYX106K16
C 901		CKSSYX105K10
C 913		CKSRYX104K50

Circuit Symbol and No.**Part No.****B****Unit Number: QWM4994(A,B,C,D,E,F)****Unit Number: QWM5074(G)****Unit Number: QWM5000(H)****Unit Name : Keyboard Unit****MISCELLANEOUS**

IC 1801	Flash Written UC IC	PD6586A8
IC 1851	IR RC REC Module	SIR8440B5
Q 1953	Bipolar Transistor(H)	HN1C01FUS1
D 1924	Zener Diode	RSB6R8SM
D 1951	White LED	SWBA05(FI231719)
D 1952	LED(H)	FC-F1608BAK5
D 1953	LED(H)	FC-F1608BAK5
D 1954	LED(H)	FC-F1608BAK5
D 1955	LED(H)	FC-F1608BAK5
D 1956	LED(H)	FC-F1608BAK5
D 1957	LED(H)	FC-F1608BAK5
D 1959	LED(H)	FC-F1608BAK5
D 1960	LED(H)	FC-F1608BAK5
D 1961	LED(H)	FC-F1608BAK5
D 1962	LED(H)	FC-F1608BAK5
D 1963	LED(H)	FC-F1608BAK5
D 1964	LED(H)	FC-F1608BAK5
D 1965	LED(H)	FC-F1608BAK5
D 1966	LED(H)	FC-F1608BAK5
D 1967	LED(H)	FC-F1608BAK5
D 1968	LED(H)	FC-F1608BAK5
D 1969	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1969	Red LED(G)	SML-D12D8W(RS)
D 1970	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1970	Red LED(G)	SML-D12D8W(RS)
D 1971	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1971	Red LED(G)	SML-D12D8W(RS)
D 1972	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1972	Red LED(G)	SML-D12D8W(RS)
D 1973	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1973	Red LED(G)	SML-D12D8W(RS)
D 1974	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1974	Red LED(G)	SML-D12D8W(RS)
D 1976	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1976	Red LED(G)	SML-D12D8W(RS)
D 1977	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1977	Red LED(G)	SML-D12D8W(RS)
D 1978	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1978	Red LED(G)	SML-D12D8W(RS)
D 1979	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1979	Red LED(G)	SML-D12D8W(RS)
D 1980	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1980	Red LED(G)	SML-D12D8W(RS)
D 1981	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1981	Red LED(G)	SML-D12D8W(RS)
D 1982	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1982	Red LED(G)	SML-D12D8W(RS)
D 1983	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08
D 1983	Red LED(G)	SML-D12D8W(RS)
D 1984	Red LED(A,B,C,D,E,F,H)	FC-1608SXX630D08

Circuit Symbol and No.**Part No.**

D 1984	Red LED(G)	SML-D12D8W(RS)
D 1985	Red LED(A,B,C,D,E,F,H)	FC-1608SXXK630D08
D 1985	Red LED(G)	SML-D12D8W(RS)
X 1801	Ceramic Resonator 5.00 MHz	CSS1547
S 1828	Encoder(MULTI-CONTROL)	CSD1193

CN1941	Connector	CKS6451
JA 1901	Connector	CKS6443
JA 1921	Jack	CKN1111
V 1801	Segment LCD	CAW2056

RESISTORS

R 1801	XRS1/10SR473J
R 1802	XRS1/10SR473J
R 1803	XRS1/10SR222J
R 1805	XRS1/10SR473J
R 1806	XRS1/10SR473J

R 1807	XRS1/10SR473J
R 1808	XRS1/10SR473J
R 1823	XRS1/10SR273J
R 1853	XRS1/10SR101J
R 1941	XRS1/10SR222J

R 1942	XRS1/10SR222J
R 1951	RS1/4SA151J
R 1952	RS1/4SA181J
R 1956 (H)	XRS1/10SR182J
R 1958 (H)	XRS1/10SR561J

R 1960 (H)	XRS1/10SR391J
R 1964 (H)	XRS1/10SR392J
R 1966 (H)	XRS1/10SR392J
R 1968 (H)	XRS1/10SR392J
R 1970 (H)	XRS1/10SR332J

R 1972 (H)	XRS1/10SR332J
R 1974 (A,B,C,D,E,F,H)	XRS1/10SR102J
R 1974 (G)	XRS1/10SR821J
R 1976 (A,B,C,D,E,F,H)	XRS1/10SR152J
R 1976 (G)	XRS1/10SR182J

R 1977	RS1/8SQ561J
R 1982 (A,B,C,D,E,F,H)	XRS1/10SR182J
R 1982 (G)	XRS1/10SR272J
R 1984 (A,B,C,D,E,F,H)	XRS1/10SR821J
R 1984 (G)	XRS1/10SR122J

R 1986 (A,B,C,D,E,F,H)	XRS1/10SR821J
R 1986 (G)	XRS1/10SR122J
R 1988 (A,B,C,D,E,F,H)	XRS1/10SR821J
R 1988 (G)	XRS1/10SR122J
R 1990 (A,B,C,D,E,F,H)	XRS1/10SR821J

R 1990 (G)	XRS1/10SR122J
R 1992 (H)	XRS1/10SR102J
R 1993 (H)	XRS1/10SR103J
R 1994 (H)	XRS1/10SR102J
R 1995 (H)	XRS1/10SR103J

R 1996 (A,B,C,D,E,F,G)	XRS1/10SR0R0J
------------------------	---------------

CAPACITORS

C 1801	CKSRYX105K16
C 1806	CKSRYB104K25
C 1851	CKSQYX106K10
C 1902	CKSRYB103K50
C 1921	CKSRYB104K25

Circuit Symbol and No.**Part No.****Unit Number: CWX4269****Unit Name : CD Core Unit(11.6VA_T07)****MISCELLANEOUS**

IC 201	Mask UC IC	PEQ094A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SAR502UB
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603

S 901	Lever Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS152J

R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS102J
R 217	RS1/16SS562J
R 218	RS1/16SS472J

R 229	RS1/16SS471J
R 232	RS1/16SS0R0J
R 237	RS1/16SS221J
R 240	RS1/16SS473J
R 245	RS1/16SS104J

R 254	RS1/16SS104J
R 260	RS1/16SS103J
R 264	RS1/16SS102J
R 281	RS1/16SS560J
R 282	RS1/16SS560J

R 291	RS1/16SS560J
R 294	RS1/16SS471J
R 303	RS1/16SS123J
R 304	RS1/16SS123J
R 305	RS1/16SS102J

R 306	RS1/16SS472J
R 307	RS1/16SS102J
R 308	RS1/16SS472J
R 309	RS1/16SS473J
R 310	RS1/16SS472J

R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J

R 706	RS1/16SS221J
-------	--------------

CAPACITORS

C 104	CKSQYB475K6R3
C 110	CKSSYB104K10
C 111	CKSSYB103K16
C 203	CKSSYB104K10

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
C 205	CKSRYB105K10	R 218	RS1/16SS472J	
C 209	CKSRYB104K16	R 229	RS1/16SS471J	
C 210	CKSSYB104K10	R 232	RS1/16SS0R0J	A
C 211	CKSSYB104K10	R 237	RS1/16SS221J	
C 212	CKSSYB104K10	R 240	RS1/16SS473J	
C 213	CKSSYB332K50	R 245	RS1/16SS104J	
C 214	CKSSYB473K16	R 254	RS1/16SS104J	
C 215	CKSSYB104K10	R 260	RS1/16SS103J	
C 216	CKSSYB152K50	R 264	RS1/16SS102J	
C 217	CCSSCH390J50	R 281	RS1/16SS560J	
C 218	CCSSCH5R0C50	R 282	RS1/16SS560J	
C 219	CKSSYB104K10	R 291	RS1/16SS560J	
C 220	CKSSYB104K10	R 294	RS1/16SS471J	
C 221	CKSSYB104K10	R 303	RS1/16SS123J	B
C 222	CKSSYB104K10	R 304	RS1/16SS123J	
C 223	CCSSCH680J50	R 305	RS1/16SS102J	
C 224	CCSSCH470J50	R 306	RS1/16SS472J	
C 225	CKSSYB103K16	R 307	RS1/16SS102J	
C 228	CCSSCH180J50	R 308	RS1/16SS472J	
C 229	CKSSYB104K10	R 309	RS1/16SS473J	
C 233	CKSSYB103K16	R 310	RS1/16SS472J	
C 236	CKSSYB104K10	R 311	RS1/16SS472J	
C 238	CKSRYB104K16	R 312	RS1/16SS472J	
C 299	CKSSYB104K10	R 313	RS1/16SS472J	
C 302	CKSSYB102K50	R 701	RS1/16SS101J	C
C 303	CKSSYB102K50	R 702	RS1/16SS101J	
C 304	CKSSYB223K16	R 706	RS1/16SS221J	
C 305	CKSSYB104K10			
C 306	CKSSYB104K10			
C 307	CKSRYB105K10			
C 308	CKSRYB105K10			
C 710	CKSSYB102K50			



Unit Number: CWX4023

Unit Name : CD Core Unit(S11.6STD)

MISCELLANEOUS

IC 201	Mask UC IC	PE5791A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SAR502UB
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Lever Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS222J
R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS122J
R 217	RS1/16SS562J

CAPACITORS

C 104	CKSQYB475K6R3
C 203	CKSSYB104K10
C 209	CKSRYB104K16
C 210	CKSSYB104K10
C 211	CKSSYB104K10
C 212	CKSSYB104K10
C 213	CKSSYB332K50
C 214	CKSSYB473K16
C 215	CKSSYB104K10
C 216	CKSSYB182K50
C 217	CCSSCH560J50
C 218	CCSSCH4R0C50
C 219	CKSSYB104K10
C 220	CKSSYB104K10
C 221	CKSSYB104K10
C 222	CKSSYB104K10
C 223	CCSSCH680J50
C 224	CCSSCH470J50
C 225	CKSSYB103K16
C 228	CCSSCH270J50
C 229	CKSSYB104K10
C 233	CKSSYB103K16
C 236	CKSSYB104K10
C 238	CKSRYB104K16
C 299	CKSSYB104K10
C 302	CKSSYB102K50
C 303	CKSSYB102K50
C 304	CKSSYB223K16
C 305	CKSSYB104K10
C 306	CKSSYB104K10

Circuit Symbol and No.

Part No.

A	C 307	CKSRYB105K10
	C 308	CKSRYB105K10
	C 710	CKSSYB102K50

B

C

D

E

F