

EXPLODED VIEW

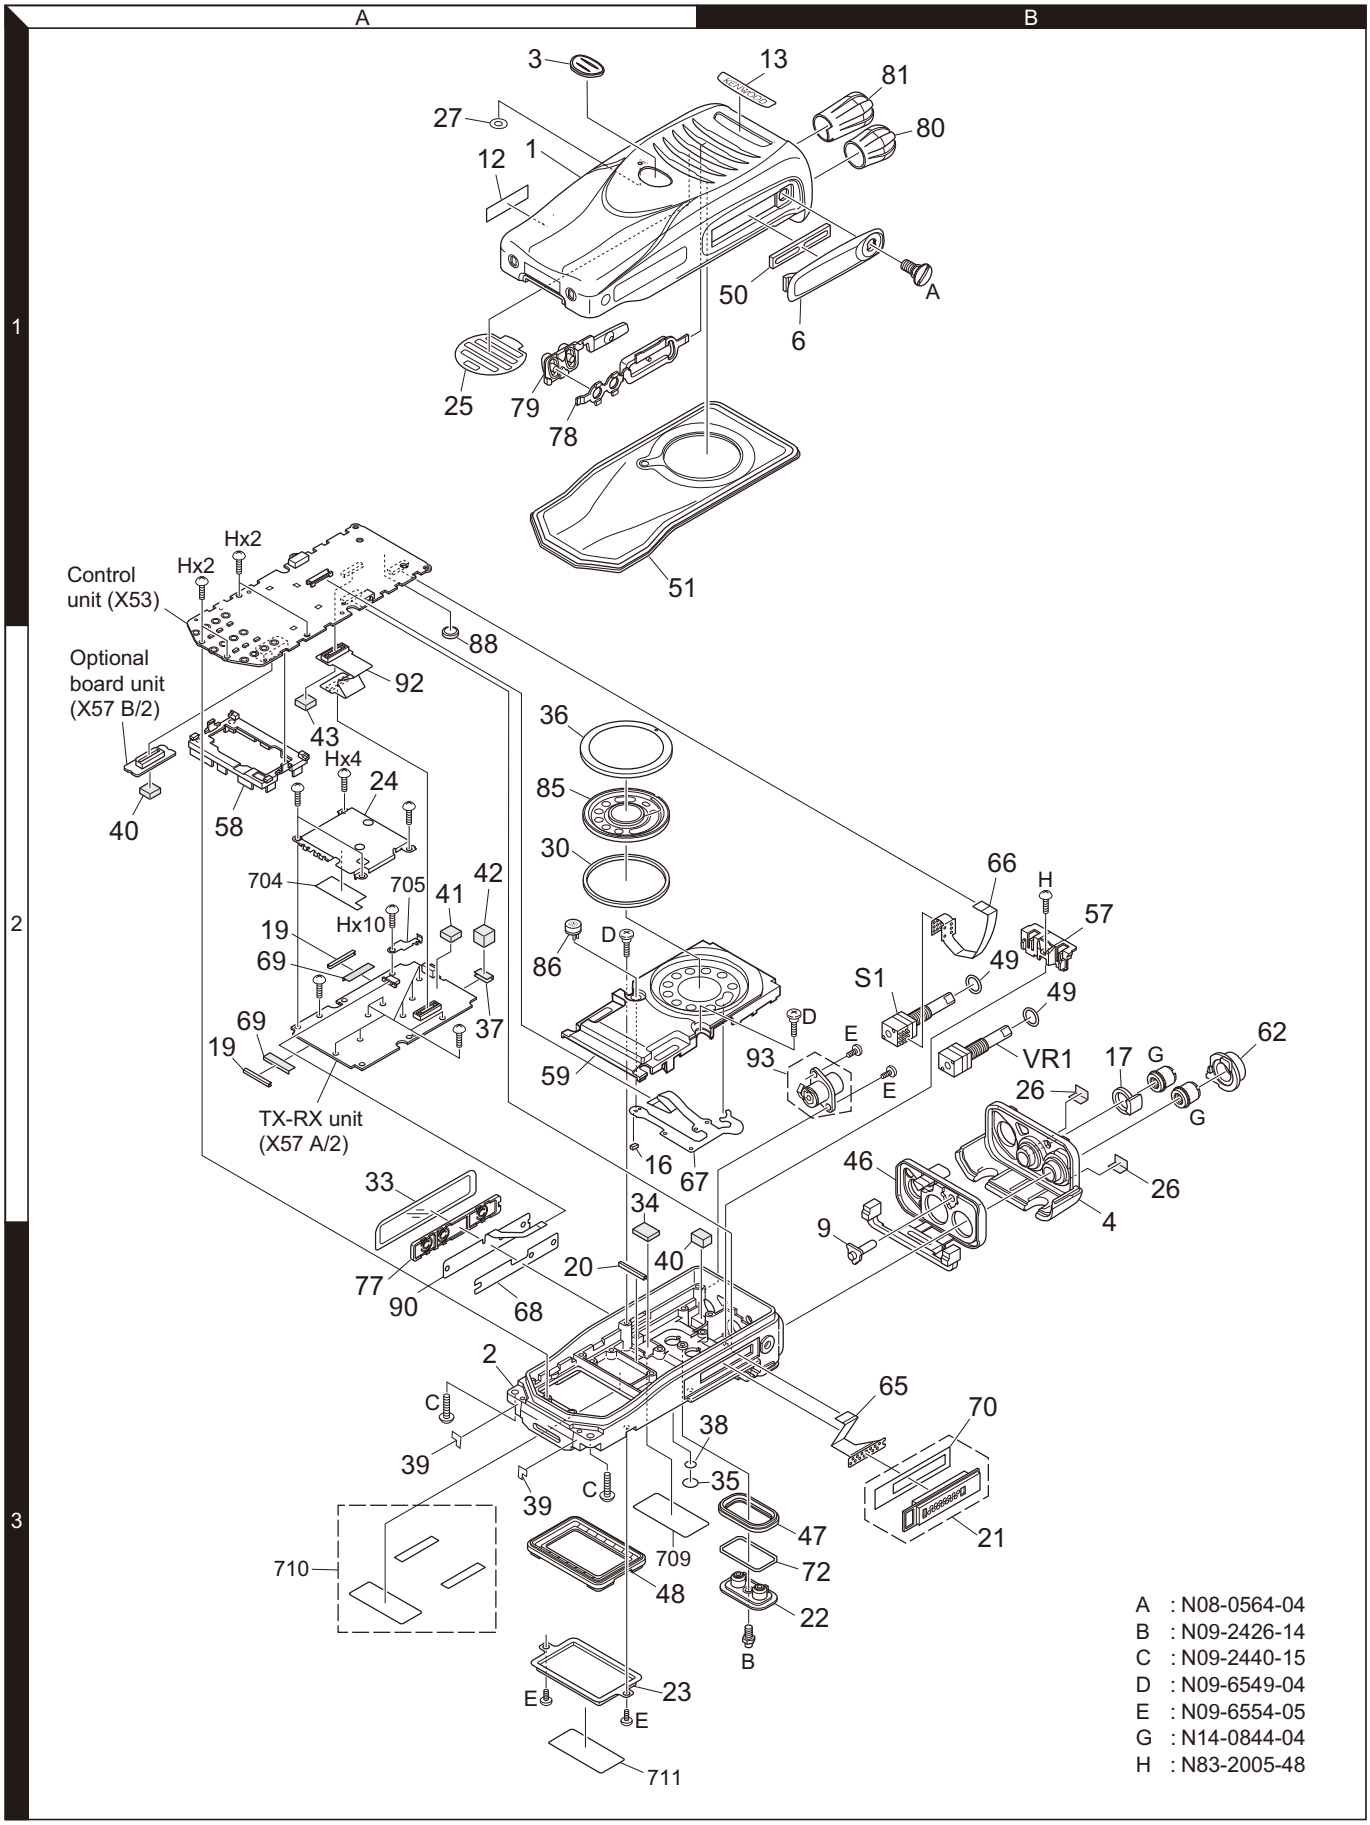

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

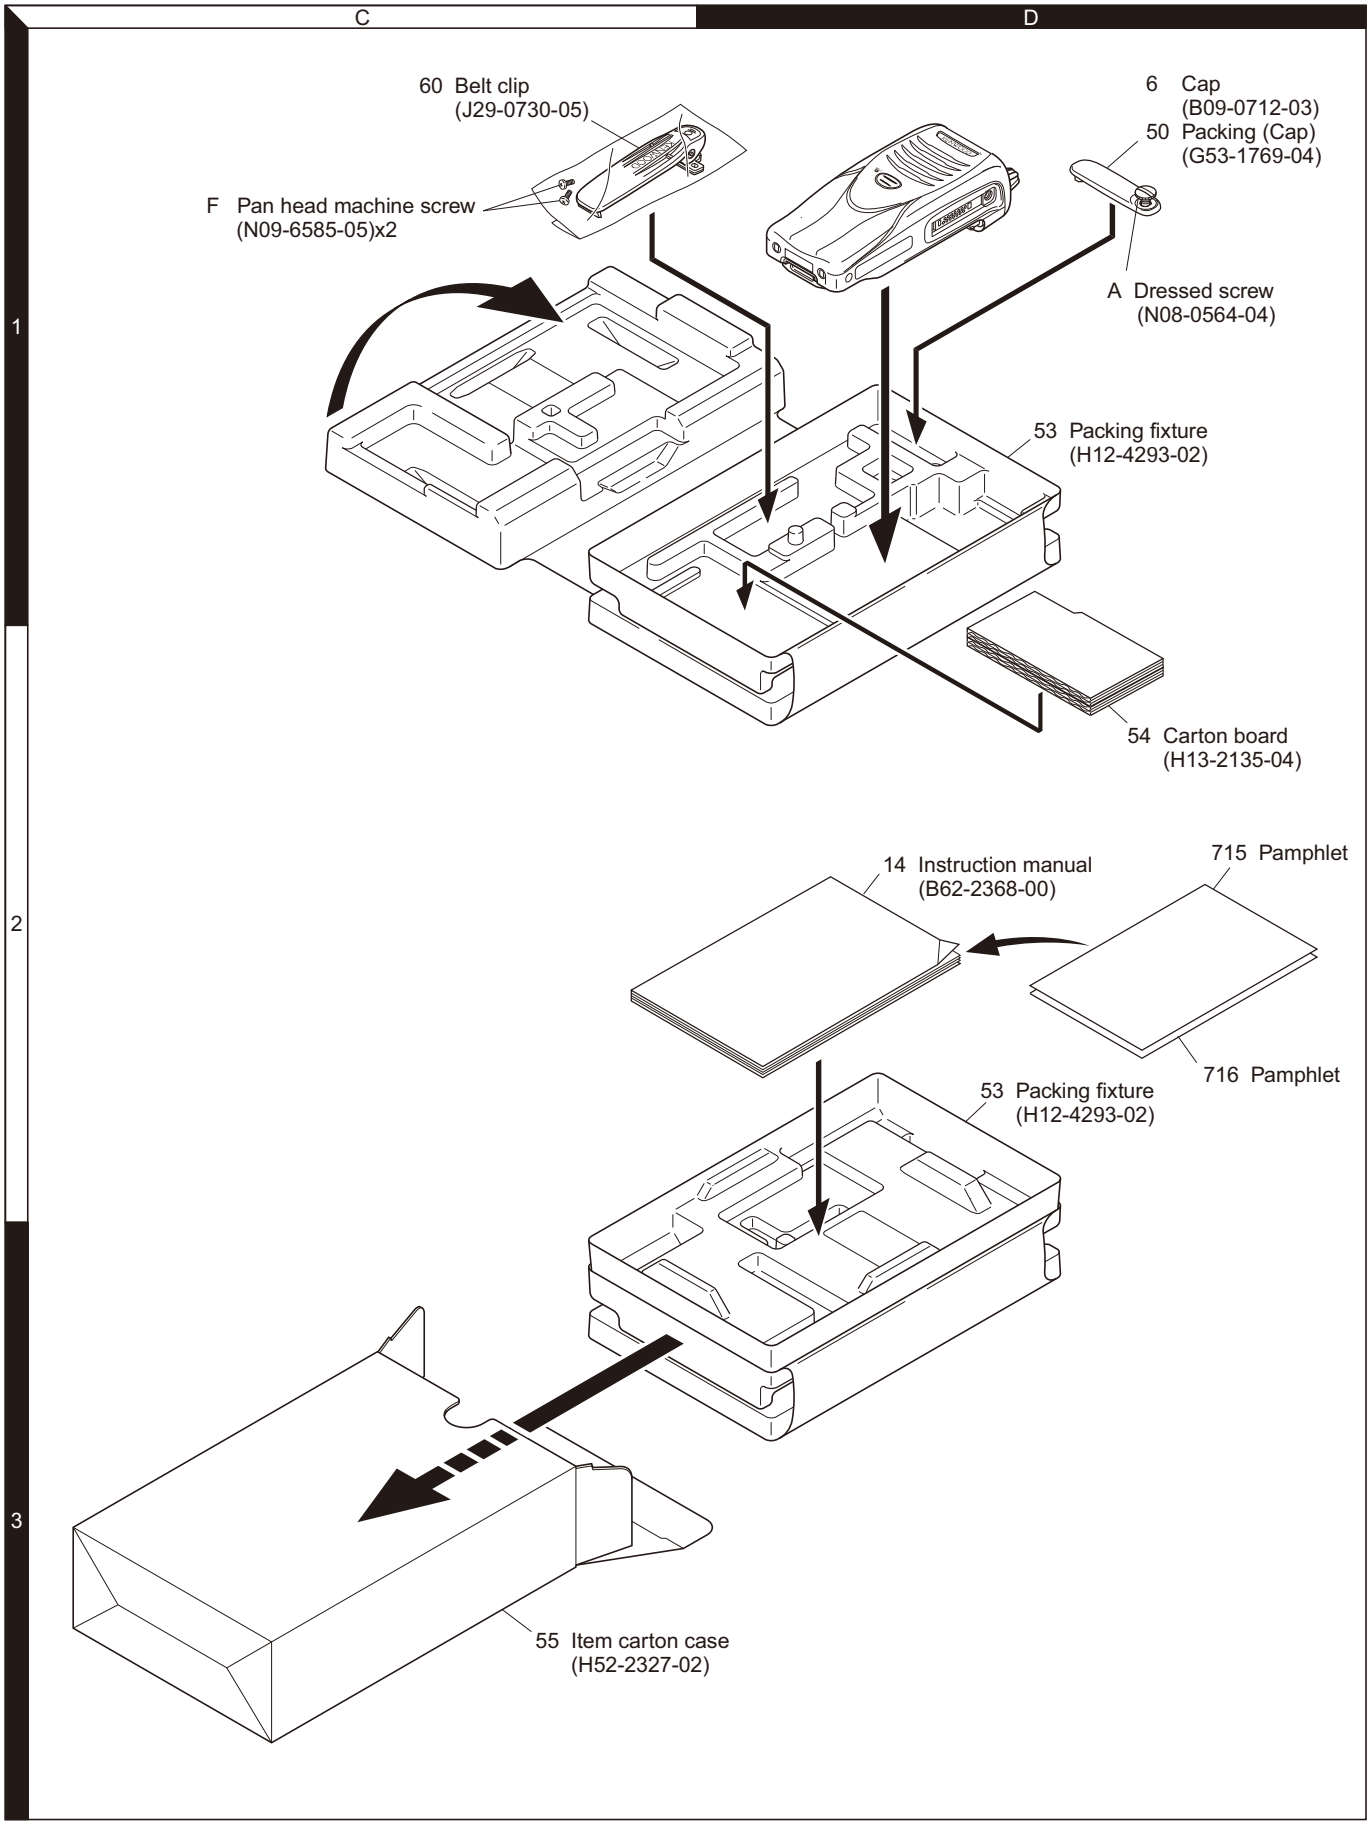

Parts with the exploded numbers larger than 700 are not supplied.

NX-300(S)

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

NX-300(S)
CONTROL UNIT (X53-4432-75)

Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-300(S)					
1	1A		A02-4116-03	PLASTIC CABINET	
2	3A		A10-4111-21	CHASSIS	
3	1A		A21-1664-03	DRESSING PANEL	
4	2B		A62-1156-02	PANEL(TOP)	
6	1B,1D		B09-0712-03	CAP ACCESSORY	
9	3B		B11-1855-04	ILLUMINATION GUIDE(TX/BUSY)	
12	1A		B42-7463-04	STICKER(NEXEDGE)	
13	1B		B43-1645-04	BADGE(KENWOOD)	
14	2D	✻	B62-2368-00	INSTRUCTION MANUAL	
16	2A		CC73GCH1H101J	CHIP C 100PF J	
17	2B		D32-0446-14	STOPPER(16CH)	
19	2A		E29-1220-04	RELAY HARDWARE(VCO-PCB)	
20	3A		E29-1221-14	RELAY HARDWARE(VCO-CHASSIS)	
21	3B		E58-0532-05	RECTANGULAR RECEPTACLE(SP/MIC)	
22	3B		E72-0425-03	TERMINAL BLOCK	
23	3A		F07-1931-04	COVER(OP BOARD)	
24	2A		F10-3106-03	SHIELDING CASEASSY	
25	1A		G10-1806-04	FIBROUS SHEET(SP)	
26	2B		G10-1807-04	FIBROUS SHEET(TOP PANEL)	
27	1A		G10-1822-04	FIBROUS SHEET(ECM)	
30	2A		G11-4272-14	RUBBER CUSHION(SP)	
33	2A		G11-4428-04	SHEET(PTT)	
34	3A		G11-4429-04	RUBBER SHEET(FET)	
35	3A		G11-4440-04	SHEET(AIR)	
36	2A		G11-4458-14	SHEET(SP)	
37	2A		G11-4459-04	SHEET(TX-RX PCB)	
38	3A		G11-4500-04	SHEET(AIR)	
39	3A		G11-4538-04	SHEET(CHASSIS)	
40	2A,3B		G13-2220-04	CUSHION(ANT/OP BOARD)	
41	2A		G13-2249-04	CUSHION(TX-RX PCB)	
42	2A		G13-2292-04	CUSHION(TX-RX PCB)	
43	2A		G13-2293-04	CUSHION(50PIN FPC)	
46	2B		G53-1762-02	PACKING(TOP)	
47	3B		G53-1763-03	PACKING(TERMINAL BLOCK)	
48	3A		G53-1764-03	PACKING(OP BOARD)	
49	2B		G53-1768-04	PACKING(VOL,SELECTOR O-RING)	
50	1B,1D		G53-1769-04	PACKING(CAP) ACCESSORY	
51	1A		G53-1824-01	PACKING	
53	1D,2D	✻	H12-4293-02	PACKING FIXTURE	
54	2D		H13-2135-04	CARTON BOARD	
55	3C		H52-2327-02	ITEM CARTON CASE	
57	2B		J19-5506-03	HOLDER(VOL,SELECTOR)	
58	2A		J19-5507-02	HOLDER(OP BOARD)	
59	2A		J19-5539-01	HOLDER(SP)	
60	1C		J29-0730-05	BELT CLIP ACCESSORY	
62	2B		J30-1296-04	SPACER(VOL)	
65	3B		J87-0007-25	FPC(LEAD FREE/UNIVERSAL)	
66	2B		J87-0028-05	FPC(LEAD FREE/VOL,SELECTOR)	
67	2A		J87-0037-05	FPC(LEAD FREE/ECM,SP)	
68	3A		J99-0711-04	ADHESIVE SHEET(PTT FPC)	
69	2A		J99-0714-04	ADHESIVE SHEET(TX-RX PCB)	
70	3B		J99-0715-08	ADHESIVE SHEET(UNIVERSAL)	
72	3B		J99-0747-04	ADHESIVE SHEET(TERMINAL BLOCK)	
77	3A		K25-2001-03	PUSH KNOB(PTT)	
78	1A		K29-9405-03	KNOB(PTT)	
79	1A		K29-9406-03	BUTTON KNOB(SIDE KEY)	
80	1B		K29-9407-03	KNOB(VOL)	
81	1B		K29-9408-13	KNOB(SELECTOR)	
A	1B,1D		N08-0564-04	DRESSED SCREW ACCESSORY	
B	3B		N09-2426-14	HEXAGON HEAD SCREW(BATT-)	
C	3A		N09-2440-15	SPECIAL SCREW(CASE/CHASSIS)	
D	2A,2B		N09-6549-04	STEPPED SCREW(FG-SP HOLDER)	
E	2B,3A		N09-6554-05	PAN HEAD SCREW(ANT/OP BOARD)	
F	1C		N09-6585-05	PAN HEAD MACHINE SCREW(BELT CLIP)	
G	2B		N14-0844-04	CIRCULAR NUT(VOL,SELECTOR)	
H	1A,2A,2B		N83-2005-48	PAN HEAD TAPTITE SCREW(PCB)	
VR1	2B		R31-0666-05	VARIABLE RESISTOR(VOL)	
S1	2B		S60-0437-05	ROTARY SWITCH(SELECTOR)	
85	2A		T07-0749-25	SPEAKER	
86	2A		T91-0579-05	MIC ELEMENT	
88	2A		W09-0971-05	LITHIUM CELL	
90	3A		X41-3760-10	SWITCH UNIT(PTT FPC)	
92	2A		X42-3380-10	CORD ASSY(50PIN FPC)	
-			X53-4432-77	SERVICE CONTROL UNIT	
93	2B		X60-3910-10	TERMINAL ASSY(SMA)	
CONTROL UNIT (X53-4432-75)					
C13 -15			CK73HB1H471K	CHIP C 470PF K	
C16 ,17			CC73HCH1H101J	CHIP C 100PF J	
C23			CK73HB1H102K	CHIP C 1000PF K	
C24			CC73HCH1H470J	CHIP C 47PF J	
C25 -27			CK73HB1H102K	CHIP C 1000PF K	
C28 -34			CC73HCH1H101J	CHIP C 100PF J	
C35			CK73HB1H102K	CHIP C 1000PF K	
C36			CK73HB1E682K	CHIP C 6800PF K	
C37			CK73HB1H102K	CHIP C 1000PF K	
C38			CC73HCH1H101J	CHIP C 100PF J	
C101-104			CK73HB1A104K	CHIP C 0.10UF K	
C105			CK73HB0J105K	CHIP C 1.0UF K	
C106			CK73HB1E103K	CHIP C 0.010UF K	
C107			CK73HB1A104K	CHIP C 0.10UF K	
C109,110			CK73HB1H102K	CHIP C 1000PF K	
C111-113			CK73HB1A104K	CHIP C 0.10UF K	
C116,117			CK73HB1A104K	CHIP C 0.10UF K	
C118,119			CK73HB0J105K	CHIP C 1.0UF K	
C120,121			CK73HB1A104K	CHIP C 0.10UF K	
C122-124			CK73HB1E103K	CHIP C 0.010UF K	
C130			CK73HB1E103K	CHIP C 0.010UF K	
C131			CK73HB1A104K	CHIP C 0.10UF K	
C133			CS77CP0J100M	CHIP TNTL 10UF 6.3WV	
C134			CK73HB1E103K	CHIP C 0.010UF K	
C135			CK73HB1H102K	CHIP C 1000PF K	

PARTS LIST

CONTROL UNIT (X53-4432-75)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C136			CK73HB1E103K	CHIP C	0.010UF	K	
C137			CK73GB1E105K	CHIP C	1.0UF	K	
C138-140			CK73HB1A104K	CHIP C	0.10UF	K	
C141			CC73HCH1H101J	CHIP C	100PF	J	
C142			CS77CP0J100M	CHIP TNTL	10UF	6.3WV	
C143			CK73HB1E103K	CHIP C	0.010UF	K	
C144			CK73GB1E105K	CHIP C	1.0UF	K	
C145-148			CK73HB1A104K	CHIP C	0.10UF	K	
C149			CK73HB1E103K	CHIP C	0.010UF	K	
C150			CK73GB1E105K	CHIP C	1.0UF	K	
C151-155			CK73HB1A104K	CHIP C	0.10UF	K	
C156,157			CK73HB1H102K	CHIP C	1000PF	K	
C158			CK73HB1E103K	CHIP C	0.010UF	K	
C159			CK73HB1A104K	CHIP C	0.10UF	K	
C160,161			CK73HB1E682K	CHIP C	6800PF	K	
C409			CK73HB0J105K	CHIP C	1.0UF	K	
C411,412			CK73HB0J105K	CHIP C	1.0UF	K	
C414			CK73HB0J105K	CHIP C	1.0UF	K	
C415			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C416			CK73FB1A106K	CHIP C	10UF	K	
C417			CC73HCH1H221J	CHIP C	220PF	J	
C418			CK73HB1E103K	CHIP C	0.010UF	K	
C419			CK73FB1E475K	CHIP C	4.7UF	K	
C420			CK73HB1E103K	CHIP C	0.010UF	K	
C421			CK73HB1E682K	CHIP C	6800PF	K	
C422			CC73HCH1H100C	CHIP C	10PF	C	
C424,425			CK73HB1A104K	CHIP C	0.10UF	K	
C427			CK73HB1E103K	CHIP C	0.010UF	K	
C428			CC73HCH1H030C	CHIP C	3.0PF	C	
C429,430			CK73HB1A104K	CHIP C	0.10UF	K	
C431			CK73FB1A106K	CHIP C	10UF	K	
C433			CK73FB1A106K	CHIP C	10UF	K	
C435-438			CK73HB1A563K	CHIP C	0.056UF	K	
C439,440			CK73HB1A104K	CHIP C	0.10UF	K	
C441			CK73GB1E105K	CHIP C	1.0UF	K	
C442			CK73HB1H471K	CHIP C	470PF	K	
C443			CK73HB1E103K	CHIP C	0.010UF	K	
C445			CK73HB1H102K	CHIP C	1000PF	K	
C446			CK73GB1E105K	CHIP C	1.0UF	K	
C447			CK73HB1H102K	CHIP C	1000PF	K	
C448-450			CK73HB0J105K	CHIP C	1.0UF	K	
C452,453			CK73HB1E103K	CHIP C	0.010UF	K	
C454			CK73GB1E105K	CHIP C	1.0UF	K	
C455-457			CK73HB1H471K	CHIP C	470PF	K	
C459			CK73HB1H471K	CHIP C	470PF	K	
C460			CK73HB1E682K	CHIP C	6800PF	K	
C461-463			CK73HB1H471K	CHIP C	470PF	K	
C464			CK73HB1E103K	CHIP C	0.010UF	K	
C465			CK73HB1H102K	CHIP C	1000PF	K	
C466			CK73HB1E682K	CHIP C	6800PF	K	
C467,468			CK73HB1A104K	CHIP C	0.10UF	K	
C469,470			CK73HB1H102K	CHIP C	1000PF	K	
C471			CK73HB1C473K	CHIP C	0.047UF	K	
C480			CK73HB1E103K	CHIP C	0.010UF	K	
C701			CK73HB1A104K	CHIP C	0.10UF	K	
C703			CK73GB0J475K	CHIP C	4.7UF	K	
C704,705			CK73HB1A104K	CHIP C	0.10UF	K	
C706			CC73HCH1H680J	CHIP C	68PF	J	
C707			CC73HCH1H270J	CHIP C	27PF	J	
C708			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C709			CK73HB0J105K	CHIP C	1.0UF	K	
C710			CK73HB1E103K	CHIP C	0.010UF	K	
C711			CK73HB1A104K	CHIP C	0.10UF	K	
C712			CK73HB1E103K	CHIP C	0.010UF	K	
C713			CK73HB1H332K	CHIP C	3300PF	K	
C714			CK73HB1H122K	CHIP C	1200PF	K	
C715			CK73HB1A104K	CHIP C	0.10UF	K	
C716			CK73HB1H681K	CHIP C	680PF	K	
C717			CK73HB1E103K	CHIP C	0.010UF	K	
C718			CK73HB1H152K	CHIP C	1500PF	K	
C720			CK73HB1E103K	CHIP C	0.010UF	K	
C721			CK73HB1A104K	CHIP C	0.10UF	K	
C722			CK73HB1E103K	CHIP C	0.010UF	K	
C723			CK73HB1A104K	CHIP C	0.10UF	K	
C724			CK73HB1E103K	CHIP C	0.010UF	K	
C725			CC73HCH1E181J	CHIP C	180PF	J	
C726,727			CK73HB1A104K	CHIP C	0.10UF	K	
C728			CK73HB1H331K	CHIP C	330PF	K	
C730			CK73HB1H331K	CHIP C	330PF	K	
C731,732			CK73HB1E103K	CHIP C	0.010UF	K	
C734			CK73HB1H102K	CHIP C	1000PF	K	
C735			CK73HB1H122K	CHIP C	1200PF	K	
C736,737			CK73HB1A104K	CHIP C	0.10UF	K	
C738			CK73HB1H102K	CHIP C	1000PF	K	
C739			CK73HB1E682K	CHIP C	6800PF	K	
C740			CK73HB1H102K	CHIP C	1000PF	K	
C742			CK73GB1E105K	CHIP C	1.0UF	K	
C743			CK73HB0J105K	CHIP C	1.0UF	K	
C744-746			CK73HB1E103K	CHIP C	0.010UF	K	
C747,748			CK73HB1A104K	CHIP C	0.10UF	K	
C749,750			CC73HCH1H470J	CHIP C	47PF	J	
C751			CK73GB1E105K	CHIP C	1.0UF	K	
C752,753			CC73HCH1H101J	CHIP C	100PF	J	
C755			CC73HCH1H470J	CHIP C	47PF	J	
C756			CK73HB1A104K	CHIP C	0.10UF	K	
C757,758			CK73GB0J475K	CHIP C	4.7UF	K	
C759,760			CK73HB1E103K	CHIP C	0.010UF	K	
C761			CC73HCH1H100D	CHIP C	10PF	D	
C762			CK73HB1A104K	CHIP C	0.10UF	K	
C763			CK73HB1E103K	CHIP C	0.010UF	K	
C764			CK73HB1H102K	CHIP C	1000PF	K	
C765-767			CK73HB1A104K	CHIP C	0.10UF	K	
C768			CK73HB1H102K	CHIP C	1000PF	K	
C771			CK73HB1A224K	CHIP C	0.22UF	K	
C772			CK73HB1E103K	CHIP C	0.010UF	K	
C775			CC73HCH1H470J	CHIP C	47PF	J	
C777			CK73HB1H102K	CHIP C	1000PF	K	
C778			CK73HB0J105K	CHIP C	1.0UF	K	
C779			CK73HB1E103K	CHIP C	0.010UF	K	
C780			CK73HB1A224K	CHIP C	0.22UF	K	
C781,782			CK73HB0J105K	CHIP C	1.0UF	K	
C785			CK73HB1A224K	CHIP C	0.22UF	K	
C786			CK73HB1E103K	CHIP C	0.010UF	K	
C787			CK73HB0J105K	CHIP C	1.0UF	K	
C788			CC73HCH1H150J	CHIP C	15PF	J	
C789			CC73HCH1H680J	CHIP C	68PF	J	
C790			CK73HB1A104K	CHIP C	0.10UF	K	
C791			CK73HB1A393K	CHIP C	0.039UF	K	
C792			CK73HB0J105K	CHIP C	1.0UF	K	
C793,794			CK73HB1A104K	CHIP C	0.10UF	K	

PARTS LIST

CONTROL UNIT (X53-4432-75)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C795			CK73HB1E103K	CHIP C 0.010UF K	
C796			CK73HB1A104K	CHIP C 0.10UF K	
C797			CK73HB0J105K	CHIP C 1.0UF K	
C798			CS77CP1A100M	CHIP TNTL 10UF 10WV	
C799			CK73HB1A104K	CHIP C 0.10UF K	
C800			CK73HB1H152K	CHIP C 1500PF K	
C801			CK73HB1C223K	CHIP C 0.022UF K	
C802			CK73HB1E103K	CHIP C 0.010UF K	
C803			CK73HB1H102K	CHIP C 1000PF K	
C804			CC73HCH1H470J	CHIP C 47PF J	
C805,806			CK73HB1H471K	CHIP C 470PF K	
C808			CK73GB0J475K	CHIP C 4.7UF K	
C809			CK73FB1A106K	CHIP C 10UF K	
C812			CK73HB0J105K	CHIP C 1.0UF K	
CN22			E23-1325-05	TERMINAL	
CN23			E40-6758-05	PIN ASSY	
CN24			E23-1325-05	TERMINAL	
CN403			E40-6813-05	PIN ASSY	
CN404			E40-6421-15	PIN ASSY	
CN405			E40-6754-05	FLAT CABLE CONNECTOR	
CN710			E40-6757-05	PIN ASSY	
F701			F53-0360-05	FUSE(0.25A)	
CN401			J19-5386-05	HOLDER(LITHIUM CELL)	
L1 ,2			L92-0408-05	CHIP FERRITE	
L3			L92-0140-05	CHIP FERRITE	
L4 -7			L92-0408-05	CHIP FERRITE	
L8			L92-0140-05	CHIP FERRITE	
L101,102			L92-0408-05	CHIP FERRITE	
L401			L33-1496-05	SMALL FIXED INDUCTOR(22UH)	
L402			L92-0467-05	CHIP FERRITE	
L403			L92-0466-05	CHIP FERRITE	
L409-411			L92-0467-05	CHIP FERRITE	
L701			L92-0140-05	CHIP FERRITE	
L702			L92-0162-05	BEADS CORE	
L704-706			L92-0162-05	BEADS CORE	
L708,709			L92-0162-05	BEADS CORE	
L710-712			L92-0444-05	CHIP FERRITE	
L713			L92-0163-05	BEADS CORE	
L714-717			L92-0444-05	CHIP FERRITE	
L718			L92-0408-05	CHIP FERRITE	
L719			L33-1494-05	SMALL FIXED INDUCTOR(4.7UH)	
X101			L77-1802-05	CRYSTAL RESONATOR(32.768KHZ)	
X102			L77-3015-05	TCXO(18.432MHZ)	
R18			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R19			RK73HB1J471J	CHIP R 470 J 1/16W	
R27			RK73HB1J104J	CHIP R 100K J 1/16W	
R28 ,29			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R30			RK73HB1J101J	CHIP R 100 J 1/16W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R32 -35			RK73HB1J101J	CHIP R 100 J 1/16W	
R40			RK73HB1J000J	CHIP R 0 J 1/16W	
R101,102			RK73HB1J474J	CHIP R 470K J 1/16W	
R103			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R105			RK73HB1J104J	CHIP R 100K J 1/16W	
R107			RK73HB1J104J	CHIP R 100K J 1/16W	
R110,111			RK73HB1J104J	CHIP R 100K J 1/16W	
R113			RK73HB1J104J	CHIP R 100K J 1/16W	
R115			RK73HB1J104J	CHIP R 100K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R116			RK73HB1J473J	CHIP R 47K J 1/16W	
R118			RK73HB1J473J	CHIP R 47K J 1/16W	
R119			RK73HB1J104J	CHIP R 100K J 1/16W	
R120			RK73HB1J474J	CHIP R 470K J 1/16W	
R121-123			RK73HB1J104J	CHIP R 100K J 1/16W	
R126			RK73HB1J101J	CHIP R 100 J 1/16W	
R127,128			RK73HB1J000J	CHIP R 0 J 1/16W	
R129-131			RK73HB1J101J	CHIP R 100 J 1/16W	
R132,133			RK73HB1J104J	CHIP R 100K J 1/16W	
R135-137			RK73HB1J104J	CHIP R 100K J 1/16W	
R138			RK73HB1J473J	CHIP R 47K J 1/16W	
R139			RK73HB1J104J	CHIP R 100K J 1/16W	
R140			RK73HB1J000J	CHIP R 0 J 1/16W	
R141-143			RK73HB1J104J	CHIP R 100K J 1/16W	
R144			RK73HB1J471J	CHIP R 470 J 1/16W	
R145-147			RK73HB1J104J	CHIP R 100K J 1/16W	
R148			RK73HB1J151J	CHIP R 150 J 1/16W	
R149			RK73HB1J000J	CHIP R 0 J 1/16W	
R150			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R153,154			RK73HB1J104J	CHIP R 100K J 1/16W	
R155			RK73HB1J473J	CHIP R 47K J 1/16W	
R156,157			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R158,159			RK73HB1J220J	CHIP R 22 J 1/16W	
R160,161			RK73HB1J000J	CHIP R 0 J 1/16W	
R162			RK73HB1J474J	CHIP R 470K J 1/16W	
R163			RK73HH1J104D	CHIP R 100K D 1/16W	
R165			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R166			RK73HB1J104J	CHIP R 100K J 1/16W	
R167			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R168			RK73HB1J000J	CHIP R 0 J 1/16W	
R170			RK73HH1J103D	CHIP R 10K D 1/16W	
R171-173			RK73HB1J000J	CHIP R 0 J 1/16W	
R174-178			RK73HB1J104J	CHIP R 100K J 1/16W	
R180,181			RK73HB1J104J	CHIP R 100K J 1/16W	
R182			RK73HB1J474J	CHIP R 470K J 1/16W	
R183			RK73HB1J104J	CHIP R 100K J 1/16W	
R184			RK73HB1J473J	CHIP R 47K J 1/16W	
R185			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R186			RK73HB1J473J	CHIP R 47K J 1/16W	
R187			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R188			RK73HB1J473J	CHIP R 47K J 1/16W	
R189			RK73HB1J104J	CHIP R 100K J 1/16W	
R190			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R191			RK73HB1J474J	CHIP R 470K J 1/16W	
R192			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R193,194			RK73HB1J104J	CHIP R 100K J 1/16W	
R413			RK73HB1J471J	CHIP R 470 J 1/16W	
R416			RK73HB1J471J	CHIP R 470 J 1/16W	
R419,420			RK73HB1J000J	CHIP R 0 J 1/16W	
R424			RK73HH1J683D	CHIP R 68K D 1/16W	
R425			RK73HH1J333D	CHIP R 33K D 1/16W	
R426-429			RK73HB1J000J	CHIP R 0 J 1/16W	
R431			RK73HB1J474J	CHIP R 470K J 1/16W	
R432,433			RK73HB1J000J	CHIP R 0 J 1/16W	
R434			RK73HB1J393J	CHIP R 39K J 1/16W	
R435,436			RK73HB1J104J	CHIP R 100K J 1/16W	
R437			RK73HB1J471J	CHIP R 470 J 1/16W	
R438,439			RK73HB1J104J	CHIP R 100K J 1/16W	
R440			RK73HB1J000J	CHIP R 0 J 1/16W	
R441			RK73HB1J153J	CHIP R 15K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4432-75)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R442			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R443			RK73HB1J474J	CHIP R	470K	J	1/16W	
R444			RK73HB1J564J	CHIP R	560K	J	1/16W	
R445			RK73HB1J154J	CHIP R	150K	J	1/16W	
R446			RK73HB1J274J	CHIP R	270K	J	1/16W	
R447			RK73HB1J104J	CHIP R	100K	J	1/16W	
R448			RK73HB1J103J	CHIP R	10K	J	1/16W	
R449-452			RK73HB1J474J	CHIP R	470K	J	1/16W	
R453			RK73HB1J104J	CHIP R	100K	J	1/16W	
R454			RK73HB1J474J	CHIP R	470K	J	1/16W	
R455			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R456			RK73HB1J474J	CHIP R	470K	J	1/16W	
R457,458			RK73HB1J104J	CHIP R	100K	J	1/16W	
R459,460			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R461			RK73HB1J103J	CHIP R	10K	J	1/16W	
R462			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R463			RK73HB1J104J	CHIP R	100K	J	1/16W	
R465			RK73HB1J103J	CHIP R	10K	J	1/16W	
R466,467			RK73HB1J104J	CHIP R	100K	J	1/16W	
R468			RK73HB1J000J	CHIP R	0	J	1/16W	
R469			RK73HB1J474J	CHIP R	470K	J	1/16W	
R470			RK73HB1J183J	CHIP R	18K	J	1/16W	
R471			RK73HB1J000J	CHIP R	0	J	1/16W	
R472			RK73HB1J223J	CHIP R	22K	J	1/16W	
R473			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R474,475			RK73HB1J333J	CHIP R	33K	J	1/16W	
R477,478			RK73HB1J000J	CHIP R	0	J	1/16W	
R479			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R481			RK73HB1J474J	CHIP R	470K	J	1/16W	
R483			RK73HB1J473J	CHIP R	47K	J	1/16W	
R484			RK73HB1J223J	CHIP R	22K	J	1/16W	
R485			RK73HB1J103J	CHIP R	10K	J	1/16W	
R487-490			RK73HH1J223D	CHIP R	22K	D	1/16W	
R491			RK73HB1J104J	CHIP R	100K	J	1/16W	
R492			RK73HB1J474J	CHIP R	470K	J	1/16W	
R493			RK73HB1J000J	CHIP R	0	J	1/16W	
R494-497			RK73HH1J104D	CHIP R	100K	D	1/16W	
R500			RK73HB1J473J	CHIP R	47K	J	1/16W	
R501			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R502,503			RK73HB1J103J	CHIP R	10K	J	1/16W	
R504			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R506			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R507-511			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R512			RK73HB1J101J	CHIP R	100	J	1/16W	
R513-515			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R516			RK73HB1J101J	CHIP R	100	J	1/16W	
R517			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R518			RK73HB1J101J	CHIP R	100	J	1/16W	
R519-528			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R529-531			RK73HB1J101J	CHIP R	100	J	1/16W	
R532			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R533-535			RK73HB1J101J	CHIP R	100	J	1/16W	
R536-540			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R541			RK73HB1J101J	CHIP R	100	J	1/16W	
R543			RK73HB1J101J	CHIP R	100	J	1/16W	
R544			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R545			RK73HB1J101J	CHIP R	100	J	1/16W	
R546,547			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R548,549			RK73HB1J473J	CHIP R	47K	J	1/16W	
R550			RK73HB1J000J	CHIP R	0	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R716			RK73GB2A000J	CHIP R	0	J	1/10W	
R717-722			RK73HB1J104J	CHIP R	100K	J	1/16W	
R723			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R724			RK73HB1J104J	CHIP R	100K	J	1/16W	
R725			RK73HB1J100J	CHIP R	10	J	1/16W	
R726			RK73HB1J104J	CHIP R	100K	J	1/16W	
R727-729			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R730			RK73HB1J471J	CHIP R	470	J	1/16W	
R731,732			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R733			RK73HB1J473J	CHIP R	47K	J	1/16W	
R735			RK73HB1J473J	CHIP R	47K	J	1/16W	
R736			RK73HB1J823J	CHIP R	82K	J	1/16W	
R737			RK73HB1J153J	CHIP R	15K	J	1/16W	
R738			RK73HB1J563J	CHIP R	56K	J	1/16W	
R739			RK73HB1J823J	CHIP R	82K	J	1/16W	
R740			RK73HB1J000J	CHIP R	0	J	1/16W	
R741			RK73HB1J474J	CHIP R	470K	J	1/16W	
R742,743			RK73HB1J103J	CHIP R	10K	J	1/16W	
R744			RK73HB1J223J	CHIP R	22K	J	1/16W	
R745			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R746			RK73HB1J563J	CHIP R	56K	J	1/16W	
R748			RK73HB1J103J	CHIP R	10K	J	1/16W	
R749			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R750			RK73HB1J103J	CHIP R	10K	J	1/16W	
R752			RK73HB1J101J	CHIP R	100	J	1/16W	
R753			RK73HB1J683J	CHIP R	68K	J	1/16W	
R754			RK73HB1J564J	CHIP R	560K	J	1/16W	
R755			RK73HB1J104J	CHIP R	100K	J	1/16W	
R756			RK73HB1J101J	CHIP R	100	J	1/16W	
R757			RK73HB1J223J	CHIP R	22K	J	1/16W	
R758			RK73HB1J103J	CHIP R	10K	J	1/16W	
R759			RK73HB1J101J	CHIP R	100	J	1/16W	
R761-764			RK73HB1J223J	CHIP R	22K	J	1/16W	
R765			RK73HB1J334J	CHIP R	330K	J	1/16W	
R766			RK73HB1J000J	CHIP R	0	J	1/16W	
R767			RK73HB1J103J	CHIP R	10K	J	1/16W	
R768			RK73HB1J224J	CHIP R	220K	J	1/16W	
R769,770			RK73HB1J334J	CHIP R	330K	J	1/16W	
R771			RK73HB1J153J	CHIP R	15K	J	1/16W	
R775			RK73HB1J183J	CHIP R	18K	J	1/16W	
R777			RK73HB1J473J	CHIP R	47K	J	1/16W	
R778			RK73HB1J333J	CHIP R	33K	J	1/16W	
R779			RK73HB1J473J	CHIP R	47K	J	1/16W	
R780			RK73HB1J104J	CHIP R	100K	J	1/16W	
R782			RK73HB1J104J	CHIP R	100K	J	1/16W	
R783			RK73HB1J183J	CHIP R	18K	J	1/16W	
R784			RK73HB1J104J	CHIP R	100K	J	1/16W	
R785			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R786			RK73HB1J000J	CHIP R	0	J	1/16W	
R787			RK73HB1J124J	CHIP R	120K	J	1/16W	
R788			RK73HB1J473J	CHIP R	47K	J	1/16W	
R789			RK73HB1J154J	CHIP R	150K	J	1/16W	
R790			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R791			RK73HB1J474J	CHIP R	470K	J	1/16W	
R793			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R794			RK73HB1J104J	CHIP R	100K	J	1/16W	
R795			RK73HB1J000J	CHIP R	0	J	1/16W	
R796			RK73HB1J333J	CHIP R	33K	J	1/16W	
R797			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R798			RK73HB1J104J	CHIP R	100K	J	1/16W	

PARTS LIST

CONTROL UNIT (X53-4432-75)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R799			RK73HB1J334J	CHIP R 330K J 1/16W	
R800			RK73HB1J474J	CHIP R 470K J 1/16W	
R801			RK73HB1J473J	CHIP R 47K J 1/16W	
R802			RK73HB1J474J	CHIP R 470K J 1/16W	
R803			RK73HB1J103J	CHIP R 10K J 1/16W	
R804			RK73HB1J000J	CHIP R 0 J 1/16W	
R805,806			RK73HB1J473J	CHIP R 47K J 1/16W	
R807			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R808			RK73HB1J471J	CHIP R 470 J 1/16W	
R809			RK73HB1J334J	CHIP R 330K J 1/16W	
R810			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R811			RK73HB1J823J	CHIP R 82K J 1/16W	
R812			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R813			RK73HB1J273J	CHIP R 27K J 1/16W	
R814			RK73HB1J564J	CHIP R 560K J 1/16W	
R815			RK73HB1J104J	CHIP R 100K J 1/16W	
R816			RK73HB1J683J	CHIP R 68K J 1/16W	
R818			RK73HB1J104J	CHIP R 100K J 1/16W	
R819,820			RK73HB1J103J	CHIP R 10K J 1/16W	
R821			RK73HB1J104J	CHIP R 100K J 1/16W	
R822,823			RK73HB1J103J	CHIP R 10K J 1/16W	
R824			RK73HB1J393J	CHIP R 39K J 1/16W	
R825			RK73HB1J104J	CHIP R 100K J 1/16W	
R826			RK73HB1J334J	CHIP R 330K J 1/16W	
R827			RK73HB1J184J	CHIP R 180K J 1/16W	
R828,829			RK73HB1J000J	CHIP R 0 J 1/16W	
R830			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R831			RK73HB1J474J	CHIP R 470K J 1/16W	
R832			RK73HB1J473J	CHIP R 47K J 1/16W	
R833			RK73HB1J684J	CHIP R 680K J 1/16W	
R834			RK73HB1J000J	CHIP R 0 J 1/16W	
R835			RK73HB1J153J	CHIP R 15K J 1/16W	
R836			RK73HB1J473J	CHIP R 47K J 1/16W	
R837			RK73HB1J683J	CHIP R 68K J 1/16W	
R838			RK73HB1J564J	CHIP R 560K J 1/16W	
R839			RK73HB1J333J	CHIP R 33K J 1/16W	
R840			RK73HB1J123J	CHIP R 12K J 1/16W	
R841			RK73HB1J564J	CHIP R 560K J 1/16W	
R842			RK73HB1J104J	CHIP R 100K J 1/16W	
R843			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R844			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R845			RK73HB1J104J	CHIP R 100K J 1/16W	
R846			RK73HB1J471J	CHIP R 470 J 1/16W	
R847			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R848-850			RK73HB1J000J	CHIP R 0 J 1/16W	
R851,852			RK73HB1J683J	CHIP R 68K J 1/16W	
R853			RK73HB1J000J	CHIP R 0 J 1/16W	
R855			RK73HB1J332J	CHIP R 3.3K J 1/16W	
D12 -16			1SS416	DIODE	
D17			EMZ6.8N	ZENER DIODE	
D18 ,19			HZC6.8-E	ZENER DIODE	
D20 ,21			NNCD6.8G-A	ZENER DIODE	
D22 ,23			DA221	DIODE	
D102			1SS416	DIODE	
D404,405			1SS388F	DIODE	
D406			HRB0502A	DIODE	
D407			MA2S111-F	DIODE	
D408			1SS301F	DIODE	
D409,410			MA2S111-F	DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D411			1SS416	DIODE	
D412			1SS301F	DIODE	
D413			1SS388F	DIODE	
D414,415			1SS416	DIODE	
D416,417			1SS388F	DIODE	
D701			1SS301F	DIODE	
D702			MA2S111-F	DIODE	
D703-706			KDR731	DIODE	
D707			DA221	DIODE	
IC101			**Note 1**	ROM IC	
IC102			**Note 1**	MICROPROCESSOR IC	
IC103			**Note 1**	SRAM IC	
IC104			TC7SH08FU-F	MOS-IC	
IC105			XC6109C29AN-G	MOS-IC	
IC106			RV5C386A	MOS-IC	
IC107			SM5023CNDH-G	MOS-IC	
IC108			**Note 1**	MOS-IC	
IC109			TC7SH08FU-F	MOS-IC	
IC404			XC6204B332D-G	MOS-IC	
IC406			XC6204B332M-G	MOS-IC	
IC407			LT1616ES6-PBF	ANALOGUE IC	
IC408			TC75S51FE(F)	MOS-IC	
IC409			TC7W66FK-F	MOS-IC	
IC411			NJM2880U105ZB	ANALOGUE IC	
IC412,413			TPA6201A1DRBR	ANALOGUE IC	
IC414			XC61CC5602N-G	MOS-IC	
IC415			TC7SET08FU-F	MOS-IC	
IC416			S-812C31BPI-G	ANALOGUE IC	
IC417			TC7WH126FK	MOS-IC	
IC418			TC7WT125FUF	MOS-IC	
IC701			PCA9535BS	MOS-IC	
IC702			TC75W51FK(F)	MOS-IC	
IC703			M62364FP-F	MOS-IC	
IC704			TC75S51FE(F)	MOS-IC	
IC705			TC75W51FK(F)	MOS-IC	
IC706			TC75S51FE(F)	MOS-IC	
IC707			TC7W53FK(F)	MOS-IC	
IC708			XC6209B502P-G	MOS-IC	
IC709			TC7W53FK(F)	MOS-IC	
IC710,711			TC75W51FK(F)	MOS-IC	
IC712			TC7S66FUF	MOS-IC	
IC713			TC75W51FK(F)	MOS-IC	
IC714			TC7W53FK(F)	MOS-IC	
IC715			TC75S51FE(F)	MOS-IC	
IC716			TC75W51FK(F)	MOS-IC	
IC717			XC9235A15CM-G	MOS-IC	
Q4			SSM3K15TE(F)	FET	
Q5			2SJ347F	FET	
Q401,402			SSM6N16FE-F	FET	
Q403			2SJ648-A	FET	
Q404			SSM3K15TE(F)	FET	
Q405			SSM6N16FE-F	FET	
Q406			2SB1132(Q,R)	TRANSISTOR	
Q407			UMG3N	TRANSISTOR	
Q408			EMD12	TRANSISTOR	
Q409			2SA1955A-F	TRANSISTOR	
Q410			SSM3K15TE(F)	FET	
Q411			SSM6N16FE-F	FET	
Q412			SSM3K15TE(F)	FET	
Q413			2SA1955A-F	TRANSISTOR	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

CONTROL UNIT (X53-4432-75)
TX-RX UNIT (X57-7830-11)

Ref. No.	Address	New parts	Parts No.	Description			Destination
Q414,415			EMD12	TRANSISTOR			
Q702,703			SSM3K15TE(F)	FET			
Q704			KTC4075E(Y,GR)	TRANSISTOR			
Q705			2SC4738(GR)F	TRANSISTOR			
Q706			2SA1832(GR)F	TRANSISTOR			
Q707			2SJ243-A	FET			
TH701			ERTJ0EV104H	THERMISTOR			
TX-RX UNIT (X57-7830-11)							
D900			B30-2278-05	LED(RED/YELLOW)			
C500			CK73HB1A104K	CHIP C	0.10UF	K	
C501			CC73HCH1H101J	CHIP C	100PF	J	
C502			CK73HB1H471K	CHIP C	470PF	K	
C503			CK73HB1A104K	CHIP C	0.10UF	K	
C504			CK73HB1C103K	CHIP C	0.010UF	K	
C505			CC73HCH1H101J	CHIP C	100PF	J	
C506			CC73HCH1H100C	CHIP C	10PF	C	
C508			CK73HB1C103K	CHIP C	0.010UF	K	
C509			CC73HCH1H100C	CHIP C	10PF	C	
C511			CK73FB0J106K	CHIP C	10UF	K	
C512			CK73HB1C103K	CHIP C	0.010UF	K	
C513			CC73HCH1H101J	CHIP C	100PF	J	
C514,515			CK73HB1C103K	CHIP C	0.010UF	K	
C517-519			CC73HCH1H101J	CHIP C	100PF	J	
C520			CK73GB1E105K	CHIP C	1.0UF	K	
C521			CC73HCH1H101J	CHIP C	100PF	J	
C522			CK73HB1A104K	CHIP C	0.10UF	K	
C523,524			CC73HCH1H101J	CHIP C	100PF	J	
C525			CC73HCH1H470J	CHIP C	47PF	J	
C526			CK73HB1A104K	CHIP C	0.10UF	K	
C527,528			CC73HCH1H101J	CHIP C	100PF	J	
C533			CK73HB1H471K	CHIP C	470PF	K	
C534			CC73HCH1H101J	CHIP C	100PF	J	
C535			CS77CA1VR15M	CHIP TNTL	0.15UF	35WV	
C536			CC73HCH1H470J	CHIP C	47PF	J	
C539			CS77BA1D100M	CHIP TNTL	10UF	20WV	
C541			C92-0863-05	CHIP TNTL	0.047UF	35WV	
C542			C93-0787-05	CHIP C	0.1UF	J	
C543			CC73HCH1H040B	CHIP C	4.0PF	B	
C545			CK73HB1H471K	CHIP C	470PF	K	
C546			CK73HB1H472K	CHIP C	4700PF	K	
C547			CK73HB1H471K	CHIP C	470PF	K	
C548			CC73HCH1H101J	CHIP C	100PF	J	
C550			CC73HCH1H050B	CHIP C	5.0PF	B	
C553			CC73HCH1H100B	CHIP C	10PF	B	
C554			CC73HCH1H470J	CHIP C	47PF	J	
C555			CK73HB0J105K	CHIP C	1.0UF	K	
C556,557			CK73HB1H471K	CHIP C	470PF	K	
C561			CK73HB1C103K	CHIP C	0.010UF	K	
C562			CK73HB0J105K	CHIP C	1.0UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C563			CC73HCH1H101J	CHIP C	100PF	J	
C565			CC73HCH1H330J	CHIP C	33PF	J	
C566			CC73HCH1H820J	CHIP C	82PF	J	
C567			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C568			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C570			CC73HCH1HR75B	CHIP C	0.75PF	B	
C571			CC73HCH1H030B	CHIP C	3.0PF	B	
C572			CK73FB0J106K	CHIP C	10UF	K	
C573			CC73HCH1H060B	CHIP C	6.0PF	B	
C574			CC73HCH1H020B	CHIP C	2.0PF	B	
C575			CC73HCH1H060B	CHIP C	6.0PF	B	
C576			CC73HCH1H050B	CHIP C	5.0PF	B	
C577			CK73HB1H471K	CHIP C	470PF	K	
C578			CK73GB0J475K	CHIP C	4.7UF	K	
C579			CC73HCH1H050B	CHIP C	5.0PF	B	
C580			CK73HB1H471K	CHIP C	470PF	K	
C581			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C582			CK73HB1H471K	CHIP C	470PF	K	
C583			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C584,585			CK73HB1H471K	CHIP C	470PF	K	
C586			CC73HCH1H100B	CHIP C	10PF	B	
C587			CK73HB1H471K	CHIP C	470PF	K	
C588			CC73HCH1H100B	CHIP C	10PF	B	
C600			CK73HB1A104K	CHIP C	0.10UF	K	
C601			CC73HCH1H101J	CHIP C	100PF	J	
C602			CK73HB1A104K	CHIP C	0.10UF	K	
C603			CC73HCH1H100B	CHIP C	10PF	B	
C604,605			CK73HB1H471K	CHIP C	470PF	K	
C607			CC73HCH1H070B	CHIP C	7.0PF	B	
C609			CC73GCH1H010B	CHIP C	1.0PF	B	
C610-612			CK73HB1H471K	CHIP C	470PF	K	
C613			CC73HCH1H040B	CHIP C	4.0PF	B	
C614,615			CK73HB1H471K	CHIP C	470PF	K	
C617,618			CK73HB1H471K	CHIP C	470PF	K	
C619			CK73HB1A104K	CHIP C	0.10UF	K	
C621			CC73HCH1H040B	CHIP C	4.0PF	B	
C622			CK73HB1H471K	CHIP C	470PF	K	
C623			CC73HCH1H120J	CHIP C	12PF	J	
C625			CK73HB1H471K	CHIP C	470PF	K	
C626			CK73HB1A104K	CHIP C	0.10UF	K	
C627			CC73HCH1H080B	CHIP C	8.0PF	B	
C628			CC73HCH1H100C	CHIP C	10PF	C	
C629			CK73HB1H471K	CHIP C	470PF	K	
C630			CK73GB1E105K	CHIP C	1.0UF	K	
C631			CS77CA1A6R8M	CHIP TNTL	6.8UF	10WV	
C632			CK73HB1H471K	CHIP C	470PF	K	
C634-637			CK73HB1H471K	CHIP C	470PF	K	
C639			CC73HCH1H330J	CHIP C	33PF	J	
C640			CC73HCH1H470J	CHIP C	47PF	J	
C641			CC73HCH1H100C	CHIP C	10PF	C	
C642,643			CC73HCH1H151J	CHIP C	150PF	J	
C645			CK73GB1C104K	CHIP C	0.10UF	K	
C646			CK73GB1E105K	CHIP C	1.0UF	K	
C648,649			CK73HB1C103K	CHIP C	0.010UF	K	
C651			CK73HB1H471K	CHIP C	470PF	K	
C653			CK73HB1H471K	CHIP C	470PF	K	
C660			CC73GCH1H101J	CHIP C	100PF	J	
C661			CK73HB1H471K	CHIP C	470PF	K	
C662			CC73GCH1H040B	CHIP C	4.0PF	B	
C663			CC73GCH1H101J	CHIP C	100PF	J	

PARTS LIST

TX-RX UNIT (X57-7830-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C664			CC73GCH1H2R5B	CHIP C 2.5PF B	
C665			CC73GCH1H030B	CHIP C 3.0PF B	
C666			CC73GCH1H080B	CHIP C 8.0PF B	
C667			CC73GCH1H2R5B	CHIP C 2.5PF B	
C668			CC73GCH1H100C	CHIP C 10PF C	
C669			CC73GCH1H1R5B	CHIP C 1.5PF B	
C670			CK73HB1H471K	CHIP C 470PF K	
C671			CC73HCH1H100B	CHIP C 10PF B	
C689-691			CK73HB1A104K	CHIP C 0.10UF K	
C692			C93-0951-05	CHIP C 47PF G	
C693			CK73GB1C224K	CHIP C 0.22UF K	
C700			CC73HCH1H070B	CHIP C 7.0PF B	
C701			CK73HB1C103K	CHIP C 0.010UF K	
C702			CC73HCH1H820J	CHIP C 82PF J	
C703			CK73HB1A104K	CHIP C 0.10UF K	
C704			CC73HCH1H100B	CHIP C 10PF B	
C705			CK73FB1E475K	CHIP C 4.7UF K	
C706			CC73HCH1H100B	CHIP C 10PF B	
C707			CC73HCH1H680J	CHIP C 68PF J	
C708			CC73HCH1H101J	CHIP C 100PF J	
C709-711			CK73HB1A104K	CHIP C 0.10UF K	
C712			CC73HCH1H680J	CHIP C 68PF J	
C713			CK73FB1A106K	CHIP C 10UF K	
C714			CK73GB1H102K	CHIP C 1000PF K	
C715			CC73HCH1H470J	CHIP C 47PF J	
C717			CK73HB1C103K	CHIP C 0.010UF K	
C718			CK73HB1A104K	CHIP C 0.10UF K	
C719			CK73FB1A106K	CHIP C 10UF K	
C720			CC73HCH1H100B	CHIP C 10PF B	
C721			CK73HB1A104K	CHIP C 0.10UF K	
C722			CC73HCH1H470G	CHIP C 47PF G	
C723,724			CK73HB1A104K	CHIP C 0.10UF K	
C725			CK73HB1C103K	CHIP C 0.010UF K	
C727,728			CK73HB1A104K	CHIP C 0.10UF K	
C729			CK73FB1E474K	CHIP C 0.47UF K	
C730			CK73HB1C103K	CHIP C 0.010UF K	
C732			CK73HB1H471K	CHIP C 470PF K	
C733,734			CK73HB1C103K	CHIP C 0.010UF K	
C735			CC73HCH1H470G	CHIP C 47PF G	
C736			CK73HB1C103K	CHIP C 0.010UF K	
C737			CC73HCH1H020B	CHIP C 2.0PF B	
C738			CC73HCH1H220G	CHIP C 22PF G	
C739			CC73HCH1H060B	CHIP C 6.0PF B	
C740,741			CK73HB1C103K	CHIP C 0.010UF K	
C742			CK73FB1A475K	CHIP C 4.7UF K	
C743			CK73HB1C103K	CHIP C 0.010UF K	
C744,745			CK73HB1H471K	CHIP C 470PF K	
C746			CC73HCH1H090B	CHIP C 9.0PF B	
C747			CC73HCH1H100B	CHIP C 10PF B	
C748			CK73HB1H471K	CHIP C 470PF K	
C749			CC73HCH1H040B	CHIP C 4.0PF B	
C750			CK73HB1C103K	CHIP C 0.010UF K	
C751			CC73HCH1H090B	CHIP C 9.0PF B	
C752			CK73HB1H471K	CHIP C 470PF K	
C753			CC73HCH1H040B	CHIP C 4.0PF B	
C754			CC73HCH1H090B	CHIP C 9.0PF B	
C755			CC73HCH1H050B	CHIP C 5.0PF B	
C756			CK73HB1H471K	CHIP C 470PF K	
C758			CK73HB1H471K	CHIP C 470PF K	
C759,760			CK73HB1A104K	CHIP C 0.10UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C761			CK73GB1E105K	CHIP C 1.0UF K	
C764			CC73HCH1H1R5B	CHIP C 1.5PF B	
C765			CK73HB1H471K	CHIP C 470PF K	
C766			CK73GB1H104K	CHIP C 0.10UF K	
C767			CC73HCH1H120G	CHIP C 12PF G	
C768			CC73HCH1H010B	CHIP C 1.0PF B	
C769			CK73HB1H471K	CHIP C 470PF K	
C770			CC73HCH1H030B	CHIP C 3.0PF B	
C771			CK73HB1H471K	CHIP C 470PF K	
C772			CC73HCH1H120G	CHIP C 12PF G	
C773			CC73HCH1H1R5B	CHIP C 1.5PF B	
C774			CC73HCH1H020B	CHIP C 2.0PF B	
C775			CK73HB1H471K	CHIP C 470PF K	
C776			CC73HCH1H120G	CHIP C 12PF G	
C777,778			CK73HB1H471K	CHIP C 470PF K	
C779			CK73HB1C103K	CHIP C 0.010UF K	
C780			CK73GB1H104K	CHIP C 0.10UF K	
C782			CC73HCH1H0R5B	CHIP C 0.5PF B	
C783			CK73GB1E105K	CHIP C 1.0UF K	
C784-786			CK73HB1H471K	CHIP C 470PF K	
C788			CK73GB1H104K	CHIP C 0.10UF K	
C789			CK73HB1H471K	CHIP C 470PF K	
C790			CK73HB1A104K	CHIP C 0.10UF K	
C791			CK73HB1H471K	CHIP C 470PF K	
C792			CK73HB1A104K	CHIP C 0.10UF K	
C794,795			CK73HB1H471K	CHIP C 470PF K	
C796			CC73HCH1H110G	CHIP C 11PF G	
C798			CC73HCH1H030B	CHIP C 3.0PF B	
C799			CK73HB1H471K	CHIP C 470PF K	
C800			CC73HCH1H1R5B	CHIP C 1.5PF B	
C801			CK73HB1H471K	CHIP C 470PF K	
C802,803			CC73HCH1H040B	CHIP C 4.0PF B	
C804			CC73HCH1H110G	CHIP C 11PF G	
C807			CC73HCH1H030B	CHIP C 3.0PF B	
C810			CC73HCH1H040B	CHIP C 4.0PF B	
C811			CC73HCH1H070B	CHIP C 7.0PF B	
C813,814			CC73HCH1H270J	CHIP C 27PF J	
C849			CK73HB1H471K	CHIP C 470PF K	
C850			CC73HCH1H101J	CHIP C 100PF J	
C900			CK73GB1H102K	CHIP C 1000PF K	
C901,902			CK73HB1H471K	CHIP C 470PF K	
C903			CK73GB1H471K	CHIP C 470PF K	
C904-908			CC73HCH1H470J	CHIP C 47PF J	
C910			CC73HCH1H470J	CHIP C 47PF J	
C912-920			CC73HCH1H470J	CHIP C 47PF J	
C922,923			CC73HCH1H470J	CHIP C 47PF J	
C925-943			CC73HCH1H470J	CHIP C 47PF J	
C944			CK73HB1H471K	CHIP C 470PF K	
C945,946			CC73HCH1H470J	CHIP C 47PF J	
C947			CK73HB1H471K	CHIP C 470PF K	
C948,949			CK73GB1E105K	CHIP C 1.0UF K	
C950			C92-0765-05	CHIP TNTL 4.7UF 16WV	
C951			CK73GB1C224K	CHIP C 0.22UF K	
C952			CK73HB1H102K	CHIP C 1000PF K	
C953			CK73HB1A104K	CHIP C 0.10UF K	
C954			CK73GB1C224K	CHIP C 0.22UF K	
C955,956			CK73HB1H102K	CHIP C 1000PF K	
C957,958			CK73GB1E105K	CHIP C 1.0UF K	
C961			CK73HB1H471K	CHIP C 470PF K	
C962			CC73HCH1E181J	CHIP C 180PF J	

PARTS LIST

TX-RX UNIT (X57-7830-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C963			CK73GB1E105K	CHIP C 1.0UF K	
C964,965			CK73GB1C224K	CHIP C 0.22UF K	
C966			CC73HCH1H220J	CHIP C 22PF J	
C967			CK73HB1H471K	CHIP C 470PF K	
C968			CK73GB1C224K	CHIP C 0.22UF K	
C969			CK73GB1E105K	CHIP C 1.0UF K	
C970,971			CK73HB1H102K	CHIP C 1000PF K	
C972-974			CK73GB1E105K	CHIP C 1.0UF K	
C975			C93-0899-05	CHIP C 9.0PF C	
C976			CC73HCH1H470J	CHIP C 47PF J	
C977			CK73GB1E105K	CHIP C 1.0UF K	
C980			CK73GB1E105K	CHIP C 1.0UF K	
C981			CK73HB1A474K	CHIP C 0.47UF K	
C987			CC73HCH1H050B	CHIP C 5.0PF B	
C988			C93-0945-05	CHIP C 27PF G	
C989			C93-0939-05	CHIP C 15PF G	
CN600			E23-1326-05	TERMINAL	
CN601			E23-1167-05	TERMINAL	
CN737			E40-6358-05	SOCKET FOR PIN ASSY	
CN900			E40-6422-15	SOCKET FOR PIN ASSY	
CN901			E40-6752-05	FLAT CABLE CONNECTOR	
CN902			E23-1326-05	TERMINAL	
F900			F53-0324-15	FUSE(2.5A)	
CF700			L72-1017-05	CERAMIC FILTER	
CF701			L72-1020-05	CERAMIC FILTER	
L500			L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)	
L503			L92-0163-05	BEADS CORE	
L504			L40-1275-92	SMALL FIXED INDUCTOR(12NH)	
L508,509			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L514-519			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L520			L40-2278-67	SMALL FIXED INDUCTOR(22NH)	
L521			L40-2778-67	SMALL FIXED INDUCTOR(27NH)	
L522			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L523			L92-0446-05	BEADS CORE	
L524-526			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L527			L92-0446-05	BEADS CORE	
L528			L40-3375-71	SMALL FIXED INDUCTOR(33NH)	
L530			L40-5675-57	SMALL FIXED INDUCTOR(56.0NH)	
L598,599			L92-0163-05	BEADS CORE	
L600			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	
L602			L40-2775-92	SMALL FIXED INDUCTOR(27NH)	
L603			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	
L604			L92-0138-05	CHIP FERRITE	
L605			L40-1275-92	SMALL FIXED INDUCTOR(12NH)	
L606			L41-1875-43	SMALL FIXED INDUCTOR(18NH)	
L607			L92-0149-05	CHIP FERRITE	
L609			L34-4575-05	AIR-CORE COIL	
L610			L92-0149-05	CHIP FERRITE	
L611			L41-2285-14	SMALL FIXED INDUCTOR(220NH)	
L612-614			L34-4564-05	AIR-CORE COIL	
L615			L40-2275-57	SMALL FIXED INDUCTOR(22.0NH)	
L701			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L703			L41-4778-45	SMALL FIXED INDUCTOR(47NH)	
L704			L40-1891-86	SMALL FIXED INDUCTOR(1.8UH)	
L705,706			L92-0138-05	CHIP FERRITE	
L707			L41-2785-39	SMALL FIXED INDUCTOR(0.27UH)	
L708			L41-5685-39	SMALL FIXED INDUCTOR(0.56UH)	
L709,710			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L711			L40-3375-92	SMALL FIXED INDUCTOR(33NH)	
L713-715			L41-1078-14	SMALL FIXED INDUCTOR(10NH)	
L716			L92-0138-05	CHIP FERRITE	
L717			L41-2285-14	SMALL FIXED INDUCTOR(220NH)	
L721,722			L41-1078-14	SMALL FIXED INDUCTOR(10NH)	
L723			L34-4564-05	AIR-CORE COIL	
L725			L40-6865-92	SMALL FIXED INDUCTOR(6.8NH)	
L726			L41-3978-03	SMALL FIXED INDUCTOR(39NH)	
L780			L40-1085-57	SMALL FIXED INDUCTOR(100NH)	
L900			L92-0149-05	CHIP FERRITE	
L901			L33-1462-05	SMALL FIXED INDUCTOR	
L902			L40-2702-86	SMALL FIXED INDUCTOR(27UH)	
L903			L41-6869-16	SMALL FIXED INDUCTOR(6.8NH)	
X500			L77-3016-05	TCXO (19.2MHZ)	
XF700			L71-0640-05	MCF (58.05MHZ)	
R430			RK73GB2A000J	CHIP R 0 J 1/10W	
R431,432			RK73HB1J000J	CHIP R 0 J 1/16W	
R500,501			RN73HH1J104D	CHIP R 100K D 1/16W	
R503			RK73HB1J100J	CHIP R 10 J 1/16W	
R504			RK73HB1J104J	CHIP R 100K J 1/16W	
R505			RK73HB1J000J	CHIP R 0 J 1/16W	
R506			RK73HB1J473J	CHIP R 47K J 1/16W	
R511-514			RK73HB1J100J	CHIP R 10 J 1/16W	
R515			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R519			RK73HB1J100J	CHIP R 10 J 1/16W	
R520			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R522			RK73HB1J100J	CHIP R 10 J 1/16W	
R523			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R527			RK73HB1J000J	CHIP R 0 J 1/16W	
R529			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R530			RK73HB1J473J	CHIP R 47K J 1/16W	
R531			RK73HB1J683J	CHIP R 68K J 1/16W	
R532			RK73HB1J000J	CHIP R 0 J 1/16W	
R533			RK73HH1J224D	CHIP R 220K D 1/16W	
R534			RK73HH1J473D	CHIP R 47K D 1/16W	
R535			RK73HB1J151J	CHIP R 150 J 1/16W	
R536			RK73HB1J000J	CHIP R 0 J 1/16W	
R537			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R538			RK73HH1J391D	CHIP R 390 D 1/16W	
R539			RK73HB1J106J	CHIP R 10M J 1/16W	
R541			RK73HB1J103J	CHIP R 10K J 1/16W	
R546			RK73HB1J104J	CHIP R 100K J 1/16W	
R547			RK73HB1J000J	CHIP R 0 J 1/16W	
R548			RK73HB1J104J	CHIP R 100K J 1/16W	
R550			RK73HB1J000J	CHIP R 0 J 1/16W	
R552			RK73HB1J104J	CHIP R 100K J 1/16W	
R554,555			RK73HB1J473J	CHIP R 47K J 1/16W	
R557			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R558			RK73HB1J474J	CHIP R 470K J 1/16W	
R559			RK73HH1J221D	CHIP R 220 D 1/16W	
R560			RK73HB1J220J	CHIP R 22 J 1/16W	
R561			RK73HH1J221D	CHIP R 220 D 1/16W	
R562			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R563			RK73HB1J473J	CHIP R 47K J 1/16W	
R564			RK73HB1J154J	CHIP R 150K J 1/16W	
R565			RK73HB1J101J	CHIP R 100 J 1/16W	
R566			RK73HH1J474D	CHIP R 470K D 1/16W	
R567			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R570,571			RK73HB1J000J	CHIP R 0 J 1/16W	
R572			RK73HB1J100J	CHIP R 10 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7830-11)

Ref. No.	Address	New parts	Parts No.	Description			Destination
R573			RK73HB1J124J	CHIP R	120K	J 1/16W	
R574-576			RK73HB1J000J	CHIP R	0	J 1/16W	
R577			RK73GB2A000J	CHIP R	0	J 1/10W	
R580,581			RK73HB1J000J	CHIP R	0	J 1/16W	
R583			RK73HB1J000J	CHIP R	0	J 1/16W	
R586			RK73HB1J000J	CHIP R	0	J 1/16W	
R589,590			RK73HB1J103J	CHIP R	10K	J 1/16W	
R599			RK73HB1J104J	CHIP R	100K	J 1/16W	
R600			RK73HB1J103J	CHIP R	10K	J 1/16W	
R601			RK73HB1J183J	CHIP R	18K	J 1/16W	
R602			RK73HB1J124J	CHIP R	120K	J 1/16W	
R603			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R604			RK73HB1J682J	CHIP R	6.8K	J 1/16W	
R605			RK73HB1J103J	CHIP R	10K	J 1/16W	
R606			RK73HB1J331J	CHIP R	330	J 1/16W	
R607			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R608			RK73HB1J470J	CHIP R	47	J 1/16W	
R610			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R612			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R613			RK73HB1J000J	CHIP R	0	J 1/16W	
R616			RK73HB1J181J	CHIP R	180	J 1/16W	
R617			RK73HB1J331J	CHIP R	330	J 1/16W	
R618			RK73HB1J220J	CHIP R	22	J 1/16W	
R619			RK73HB1J821J	CHIP R	820	J 1/16W	
R620			RK73HB1J5R6J	CHIP R	5.6	J 1/16W	
R621			RK73HB1J821J	CHIP R	820	J 1/16W	
R622			RK73HB1J101J	CHIP R	100	J 1/16W	
R623			RK73HB1J123J	CHIP R	12K	J 1/16W	
R624			RK73HB1J333J	CHIP R	33K	J 1/16W	
R626			RK73HB1J221J	CHIP R	220	J 1/16W	
R627,628			RK73HB1J000J	CHIP R	0	J 1/16W	
R629			RK73HB1J273J	CHIP R	27K	J 1/16W	
R630			RK73HB1J103J	CHIP R	10K	J 1/16W	
R631			RK73HB1J470J	CHIP R	47	J 1/16W	
R632			RK73HB1J562J	CHIP R	5.6K	J 1/16W	
R633			RK73HB1J101J	CHIP R	100	J 1/16W	
R634			RK73HB1J000J	CHIP R	0	J 1/16W	
R635			RK73HB1J561J	CHIP R	560	J 1/16W	
R636			RK73HB1J221J	CHIP R	220	J 1/16W	
R639			RK73HB1J103J	CHIP R	10K	J 1/16W	
R641			RK73HB1J103J	CHIP R	10K	J 1/16W	
R642			RK73EB2ER39K	CHIP R	0.39	K 1/4W	
R644			RK73HB1J220J	CHIP R	22	J 1/16W	
R645			RK73EB2ER39K	CHIP R	0.39	K 1/4W	
R646			RK73HB1J333J	CHIP R	33K	J 1/16W	
R647			RK73EB2ER39K	CHIP R	0.39	K 1/4W	
R648,649			RK73HH1J154D	CHIP R	150K	D 1/16W	
R650			RK73GB2A000J	CHIP R	0	J 1/10W	
R651-654			RK73HH1J274D	CHIP R	270K	D 1/16W	
R655			RK73HB1J103J	CHIP R	10K	J 1/16W	
R656			RK73HB1J563J	CHIP R	56K	J 1/16W	
R657			RK73HB1J000J	CHIP R	0	J 1/16W	
R658			RK73HB1J821J	CHIP R	820	J 1/16W	
R659			RK73HB1J474J	CHIP R	470K	J 1/16W	
R660			RK73HB1J473J	CHIP R	47K	J 1/16W	
R661			RK73HB1J104J	CHIP R	100K	J 1/16W	
R664			RK73HB1J000J	CHIP R	0	J 1/16W	
R665,666			RK73HB1J271J	CHIP R	270	J 1/16W	
R667			RK73EB2E823J	CHIP R	82K	J 1/4W	
R670			RK73HB1J224J	CHIP R	220K	J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description			Destination
R671			RK73GB2A000J	CHIP R	0	J 1/10W	
R701			RK73HB1J561J	CHIP R	560	J 1/16W	
R702			RK73HB1J334J	CHIP R	330K	J 1/16W	
R703			RK73HB1J100J	CHIP R	10	J 1/16W	
R704			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R705			RK73HB1J000J	CHIP R	0	J 1/16W	
R709			RK73HB1J103J	CHIP R	10K	J 1/16W	
R712			RK73HB1J103J	CHIP R	10K	J 1/16W	
R714			RK73HB1J100J	CHIP R	10	J 1/16W	
R717			RK73HB1J473J	CHIP R	47K	J 1/16W	
R718			RK73HB1J183J	CHIP R	18K	J 1/16W	
R719			RK73HB1J274J	CHIP R	270K	J 1/16W	
R720			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R721			RK73HB1J103J	CHIP R	10K	J 1/16W	
R722			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R724			RK73HB1J104J	CHIP R	100K	J 1/16W	
R725			RK73HB1J223J	CHIP R	22K	J 1/16W	
R726			RK73HB1J183J	CHIP R	18K	J 1/16W	
R727			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R728			RK73HB1J221J	CHIP R	220	J 1/16W	
R730			RK73HB1J000J	CHIP R	0	J 1/16W	
R731			RK73HB1J103J	CHIP R	10K	J 1/16W	
R733			RK73HB1J564J	CHIP R	560K	J 1/16W	
R735			RK73HB1J101J	CHIP R	100	J 1/16W	
R736			RK73HB1J104J	CHIP R	100K	J 1/16W	
R737			RK73HB1J221J	CHIP R	220	J 1/16W	
R738			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R739			RK73HB1J221J	CHIP R	220	J 1/16W	
R740			RK73HB1J470J	CHIP R	47	J 1/16W	
R742			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R743			RK73HB1J681J	CHIP R	680	J 1/16W	
R744			RK73HB1J221J	CHIP R	220	J 1/16W	
R745			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R746			RK73HB1J104J	CHIP R	100K	J 1/16W	
R747			RK73HB1J154J	CHIP R	150K	J 1/16W	
R748			RK73HB1J104J	CHIP R	100K	J 1/16W	
R749			RK73HB1J224J	CHIP R	220K	J 1/16W	
R750			RK73GB2A000J	CHIP R	0	J 1/10W	
R752,753			RK73HB1J000J	CHIP R	0	J 1/16W	
R755			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R757			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R758			RK73HB1J103J	CHIP R	10K	J 1/16W	
R759,760			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R761			RK73HB1J101J	CHIP R	100	J 1/16W	
R762			RK73HB1J103J	CHIP R	10K	J 1/16W	
R763			RK73HB1J824J	CHIP R	820K	J 1/16W	
R764			RK73HB1J104J	CHIP R	100K	J 1/16W	
R765			RK73HB1J000J	CHIP R	0	J 1/16W	
R768			RK73HB1J000J	CHIP R	0	J 1/16W	
R769			RK73HB1J103J	CHIP R	10K	J 1/16W	
R770			RK73HB1J680J	CHIP R	68	J 1/16W	
R771			RK73HB1J151J	CHIP R	150	J 1/16W	
R772			RK73HB1J000J	CHIP R	0	J 1/16W	
R773			RK73HB1J824J	CHIP R	820K	J 1/16W	
R774,775			RK73HB1J104J	CHIP R	100K	J 1/16W	
R777			RK73HB1J103J	CHIP R	10K	J 1/16W	
R778			RK73HB1J104J	CHIP R	100K	J 1/16W	
R779			RK73HB1J683J	CHIP R	68K	J 1/16W	
R780			RK73HB1J000J	CHIP R	0	J 1/16W	
R781			RK73HB1J182J	CHIP R	1.8K	J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7830-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R783			RK73HB1J224J	CHIP R 220K J 1/16W	
R784			RK73HB1J474J	CHIP R 470K J 1/16W	
R785			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R786			RK73HB1J000J	CHIP R 0 J 1/16W	
R788			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R790			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R791			RK73HB1J000J	CHIP R 0 J 1/16W	
R792			RK73HB1J104J	CHIP R 100K J 1/16W	
R794,795			RK73HB1J103J	CHIP R 10K J 1/16W	
R796			RK73HB1J000J	CHIP R 0 J 1/16W	
R797			RK73HB1J473J	CHIP R 47K J 1/16W	
R798			RK73HB1J470J	CHIP R 47 J 1/16W	
R799			RK73HB1J000J	CHIP R 0 J 1/16W	
R800			RK73GB2A000J	CHIP R 0 J 1/10W	
R900			RK73HB1J391J	CHIP R 390 J 1/16W	
R901			RK73GB2A000J	CHIP R 0 J 1/10W	
R902			RK73HB1J100J	CHIP R 10 J 1/16W	
R903			RK73HB1J821J	CHIP R 820 J 1/16W	
R904			RK73HB1J000J	CHIP R 0 J 1/16W	
R905			RK73HB1J330J	CHIP R 33 J 1/16W	
R906			RK73HB1J474J	CHIP R 470K J 1/16W	
R907			RK73GB2A100J	CHIP R 10 J 1/10W	
R908			RK73HB1J473J	CHIP R 47K J 1/16W	
R909			RK73GB2A000J	CHIP R 0 J 1/10W	
R910-912			RK73HB1J474J	CHIP R 470K J 1/16W	
R913			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R914			RK73HB1J154J	CHIP R 150K J 1/16W	
R915-917			RK73HB1J474J	CHIP R 470K J 1/16W	
R918			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R920,921			RK73HB1J473J	CHIP R 47K J 1/16W	
R922			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R923			RK73HB1J123J	CHIP R 12K J 1/16W	
R925			RK73HH1J334D	CHIP R 330K D 1/16W	
R926			RK73HH1J223D	CHIP R 22K D 1/16W	
R927			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R928			RK73HB1J000J	CHIP R 0 J 1/16W	
R929			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R931			RK73GB2A000J	CHIP R 0 J 1/10W	
R932			RK73HB1J104J	CHIP R 100K J 1/16W	
R933			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R934			RK73HB1J273J	CHIP R 27K J 1/16W	
R935			RK73HB1J153J	CHIP R 15K J 1/16W	
R951			RK73HB1J000J	CHIP R 0 J 1/16W	
R954			RK73GB2A000J	CHIP R 0 J 1/10W	
R955-958			RK73HB1J000J	CHIP R 0 J 1/16W	
R959			RK73HB1J104J	CHIP R 100K J 1/16W	
S1			S70-0483-05	TACT SWITCH	
D501			HSC119	DIODE	
D505			DA221	DIODE	
D506,507			1SV325F	VARIABLE CAPACITANCE DIODE	
D510			1SV290B-F	VARIABLE CAPACITANCE DIODE	
D511			1SV282-F	VARIABLE CAPACITANCE DIODE	
D514,515			1SV290B-F	VARIABLE CAPACITANCE DIODE	
D516,517			1SV282-F	VARIABLE CAPACITANCE DIODE	
D518			HSC119	DIODE	
D519			1SV278F	VARIABLE CAPACITANCE DIODE	
D600,601			HSC277	DIODE	
D604			HZU2ALL	ZENER DIODE	
D605			HZU5CLL	ZENER DIODE	
D606,607			HVC131	DIODE	
D611			HSC119	DIODE	
D700			HSC119	DIODE	
D702-704			1SV286F	VARIABLE CAPACITANCE DIODE	
D705			HSC119	DIODE	
D706			1SV286F	VARIABLE CAPACITANCE DIODE	
D708			1SV286F	VARIABLE CAPACITANCE DIODE	
D709			HVC131	DIODE	
D710			1SV286F	VARIABLE CAPACITANCE DIODE	
D711			HVC131	DIODE	
D901			1SR154-400	DIODE	
D902			HSC119	DIODE	
IC404			TC75W51FUF	MOS-IC	
IC500			LM73CIMKX-0	MOS-IC	
IC501			TLV2381IDBV	MOS-IC	
IC502			SKY72310-362	MOS-IC	
IC503			TLV2381IDBV	MOS-IC	
IC504			TC75W51FUF	MOS-IC	
IC600			TA75W01FUF	MOS-IC	
IC700			MCP6021-E/OT	MOS-IC	
IC701			TK10931VTL-G	ANALOGUE IC	
IC702,703			TLV2381IDBV	MOS-IC	
IC900			TC75S51FE(F)	MOS-IC	
IC901			XC9101D09AK-G	MOS-IC	
IC902			TK11250CUCB	MOS-IC	
IC903			TK71733S	BI-POLAR IC	
Q503			2SC5383-T111	TRANSISTOR	
Q504			2SK879-F(Y)	FET	
Q507			2SC5383-T111	TRANSISTOR	
Q508,509			2SK508NV(K52)	FET	
Q510			SSM6L05FU-F	FET	
Q511			2SJ347F	FET	
Q512			2SC5636	TRANSISTOR	
Q600,601			2SC5636	TRANSISTOR	
Q602			2SK3077F	FET	
Q603			RD01MUS1-T113	FET	
Q604			2SC5383-T111	TRANSISTOR	
Q605			SSM3K15TE(F)	FET	
Q606			RD07MVS1BT122	FET	
Q607			RT1N441U-T111	TRANSISTOR	
Q608			2SK1824-A	FET	
Q610			EMD5	TRANSISTOR	
Q700			2SC5108(Y)F	TRANSISTOR	
Q701			2SC4215-F(Y)	TRANSISTOR	
Q703			3SK318	FET	
Q704			2SC5383-T111	TRANSISTOR	
Q705			3SK318	FET	
Q706			2SK1830F	FET	
Q900			UMG9N	TRANSISTOR	
Q901-903			SSM6L05FU-F	FET	
Q904			SSM5H01TU-F	FET	
Q905			2SA1955A-F	TRANSISTOR	
TH600			ERTJ0EV104H	THERMISTOR	