


2. EXPLODED VIEWS AND PARTS LIST

2.1 EXTERIOR

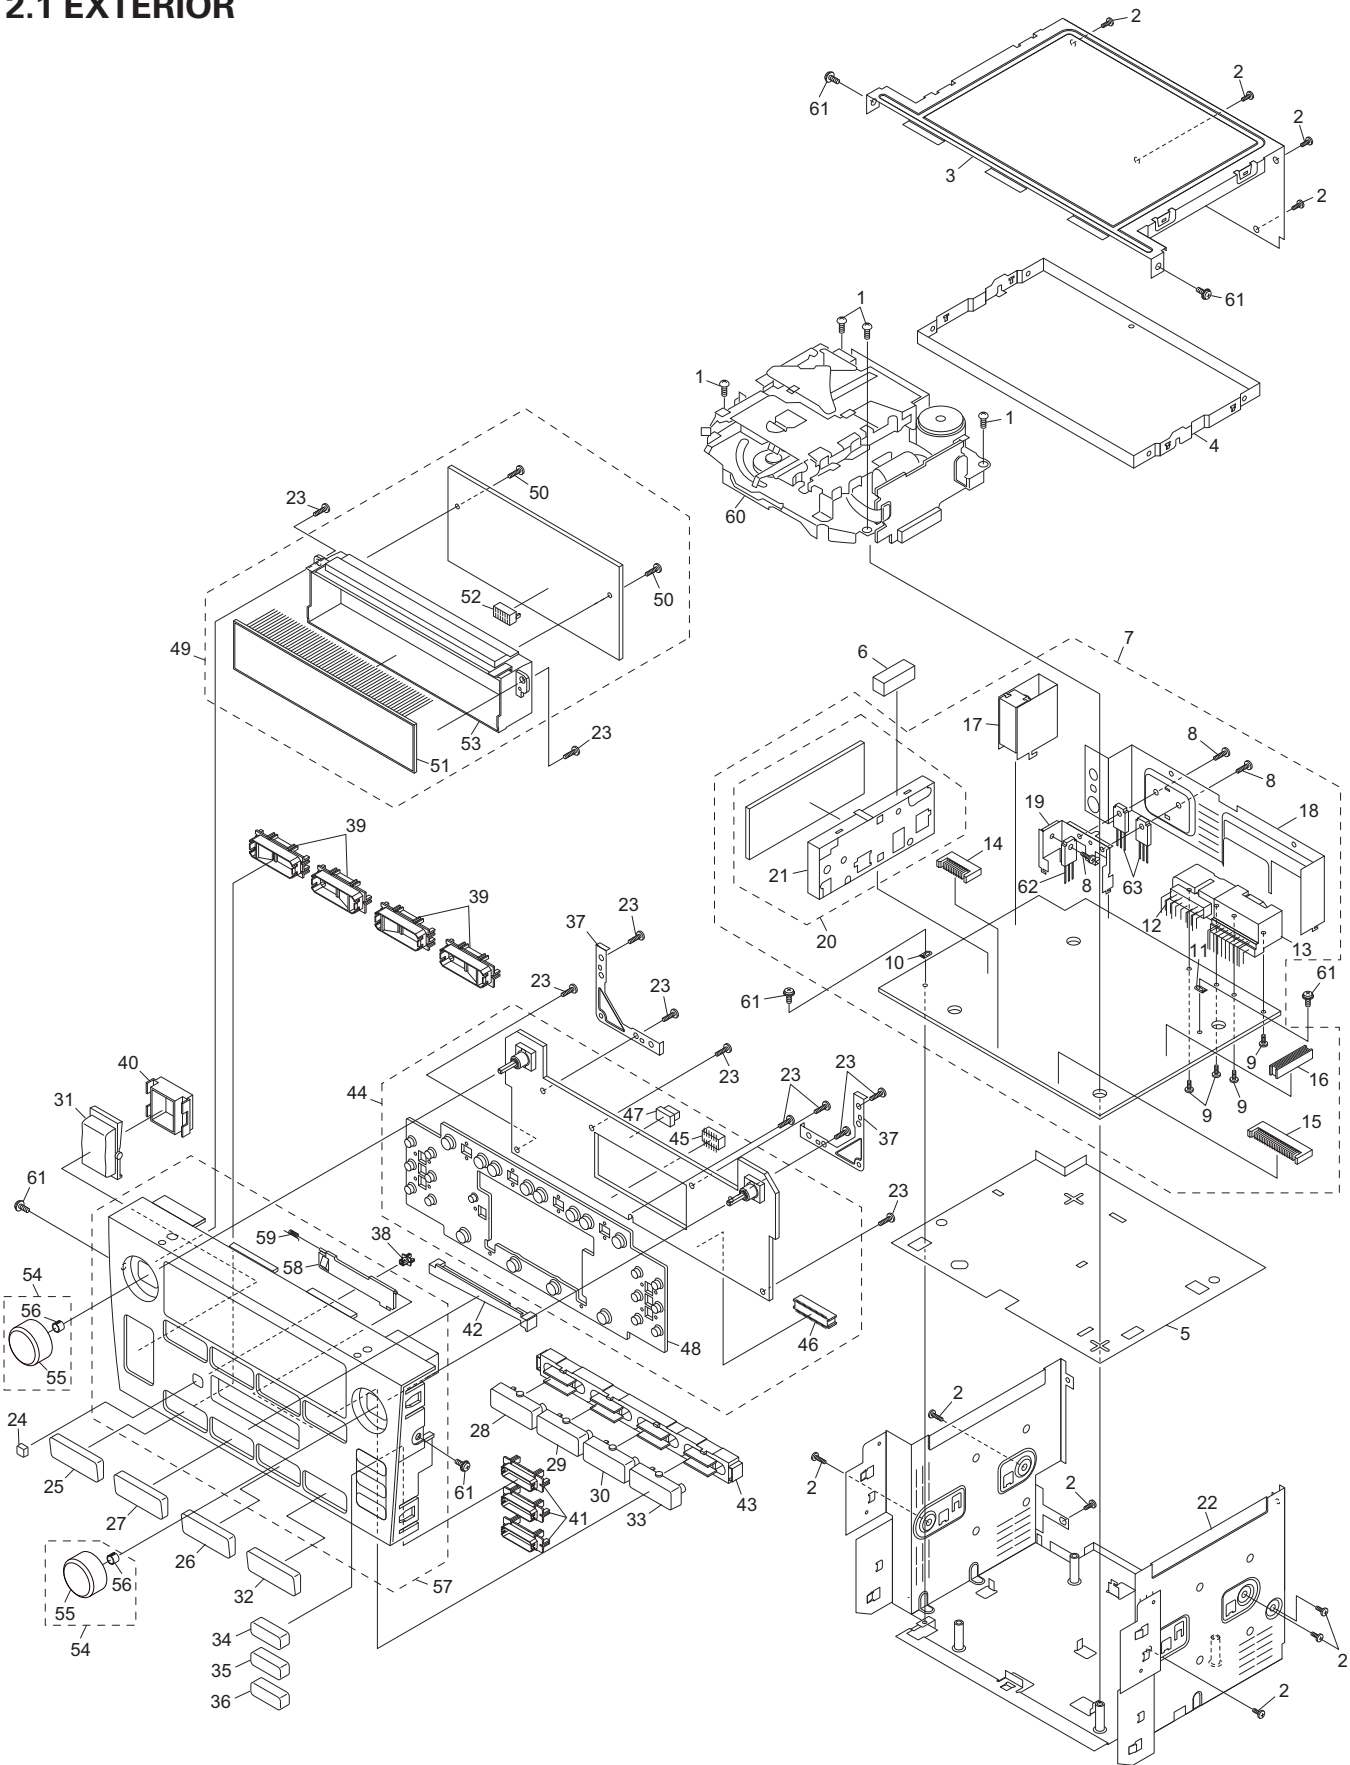


NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ26P050FMC	39	Holder	CNV4739
2	Screw	BMZ30P050FMC	40	Holder	CNV4740
3	Case	CNB2550			
4	Holder	CNC8972	41	Holder	CNV4741
5	Insulator	CNM6849	42	Lighting Conductor	CNV4883
			43	Holder	CNV5337
6	Cushion	CNM6935	44	Keyboard Unit	CWM7101
7	Main Unit	CWM7090	45	Socket(CN902)	CKS3548
8	Screw	BMZ30P080FMC			
9	Screw	BPZ30P060FSN	46	Socket(CN901)	CKS3555
10	Terminal(CN202)	CKF1059	47	Socket(CN903)	CKS3972
			48	Rubber	CNV4743
11	Terminal(CN303)	CKF1059	49	LCD Unit	CWM7104
12	Connector(CN302)	CKM1065	50	Screw	BPZ26P100FMC
13	Connector(CN301)	CKM1322			
14	Plug(CN652)	CKS3535	51	LCD	CAW1594
15	Plug(CN651)	CKS3542	52	Plug(CN951)	CKS3574
			53	Holder	CNV6140
16	Connector(CN701)	CKS3568	54	Knob Assy	CXA9518
17	Antenna Jack(CN201)	CKX1024	* 55	Knob	CAA1401
18	Holder	CNC8711			
19	Holder	CNC8712	56	Spring	CBL-108
20	FM/AM Tuner Unit	CWE1543	57	Grille Unit(M8406ZT)	CXB5287
				Grille Unit(M9406ZT)	CXB5582
21	Holder	CNC6774	58	Door(M8406ZT)	CAT2127
22	Chassis Unit	CXB5288		Door(M9406ZT)	CAT2140
23	Screw	BPZ26P100FMC			
24	Button(EJECT)	CAC4839	59	Spring	CBH1371
25	Button(AM)	CAC4841	60	Cassette Mechanism Module	EXK3885
			61	Screw	IMS26P050FMC
26	Button(TAPE)	CAC4843	62	Transistor(Q331)	2SB1185
27	Button(FM)	CAC4848	63	Transistor(Q521,522)	2SB1185
28	Button(1,2)	CAC5274			
29	Button(3,4)	CAC5275			
30	Button(5,6)	CAC5276			
31	Button(SEEK,TRACK)	CAC6543			
32	Button(DISC)	CAC6544			
33	Button(SCAN,MSG)	CAC6545			
34	Button(RDS)	CAC6546			
35	Button(TRAF)	CAC6547			
36	Button(TYPE)	CAC6548			
37	Holder	CNC7052			
38	Holder	CNV4738			

2.2 CASSETTE MECHANISM MODULE

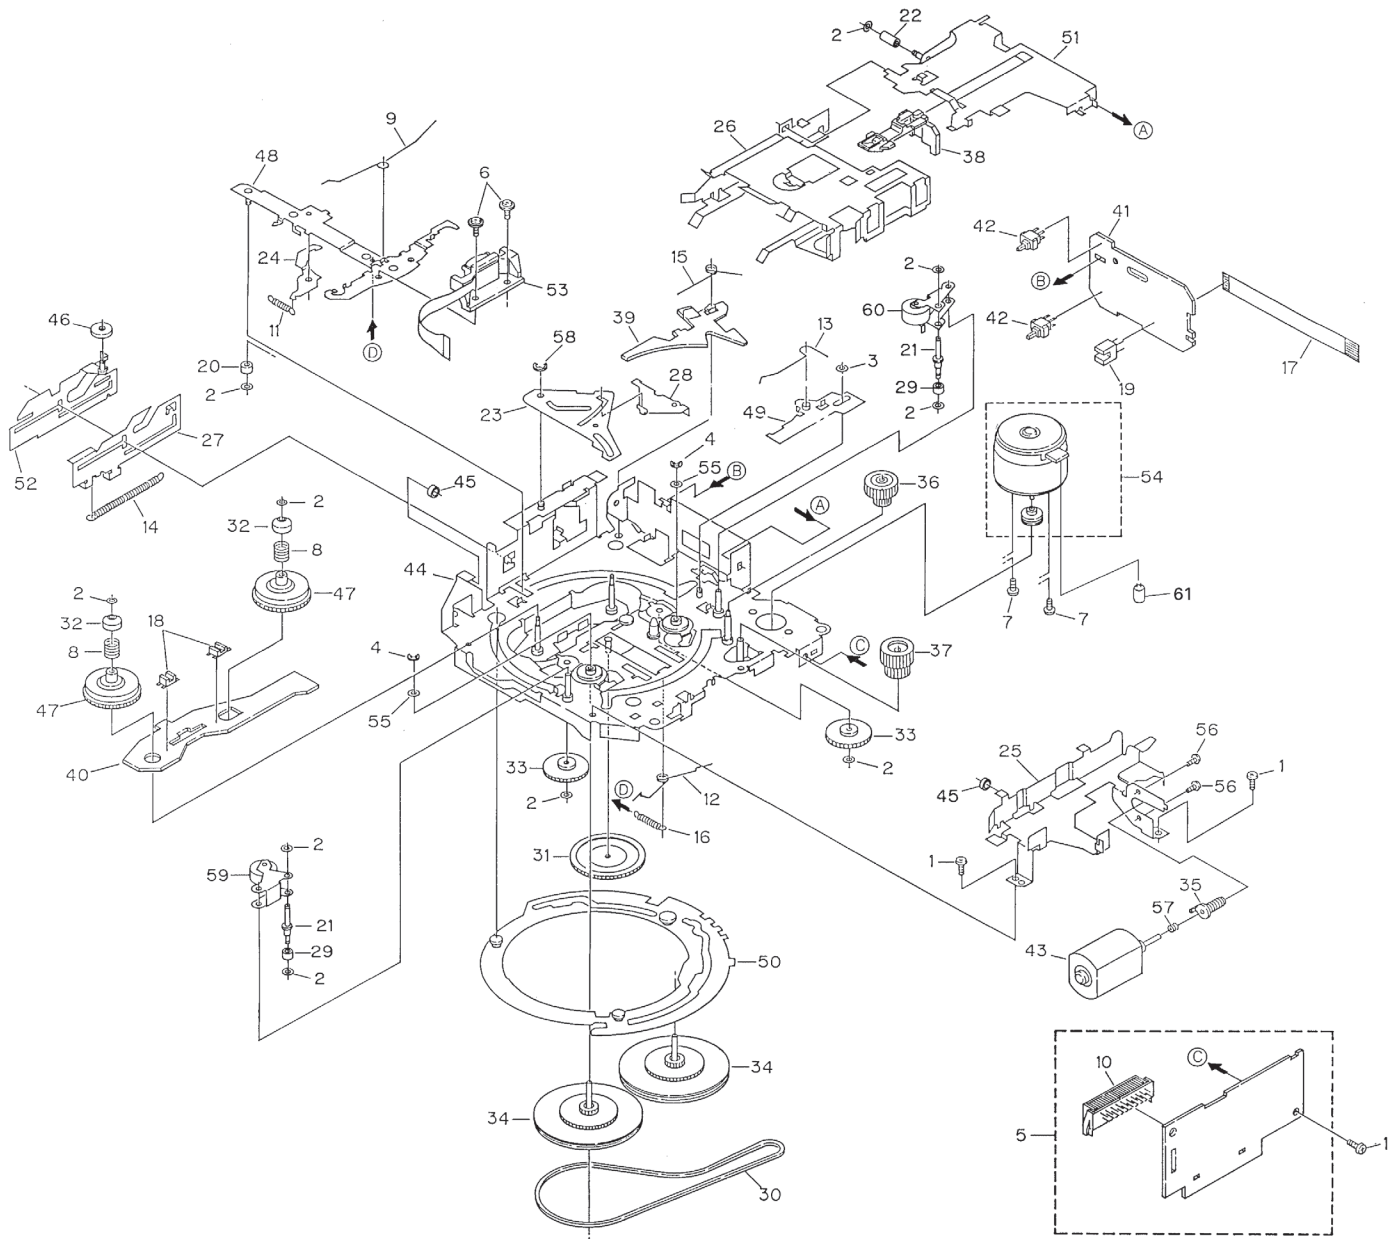

● CASSETTE MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ20P040FMC	31	Gear	ENV1347
2	Washer	CBF1037	32	Collar	ENV1508
3	Washer	CBF1038	33	Gear	ENV1350
4	Washer	CBG1003	34	Flywheel	ENV1500
5	Deck Unit	EWM1027	35	Worm Gear	ENV1439
6	Screw(M2x5)	EBA1028	36	Worm Wheel	ENV1440
7	Screw(M2x2.5)	EBA1037	37	Gear	ENR1037
8	Spring	EBH1531	38	Lever	ENV1533
9	Spring	EBH1589	39	Arm	ENV1525
10	Connector(CN251)	CKS3540	40	Gathering PCB	ENX1037
11	Spring	EBH1515	41	Gathering PCB	ENX1060
12	Spring	EBH1587	42	Switch(S1)(S2)	ESG1004
13	Spring	EBH1517	43	Motor Unit(M2)(SUB)	EXA1382
14	Spring	EBH1518	44	Chassis Unit	EXA1559
15	Spring	EBH1519	45	Tube	ENM1039
16	Spring	EBH1537	46	Roller	ENR1027
17	Cord	EDD1027	47	Reel Unit	EXA1560
18	Photo-interrupter(EGN2,3)	EGN1006	48	Head Base Unit	EXA1434
19	Photo-interrupter(EGN1)	EGN1005	49	Lever Unit	EXA1578
20	Roller	ENR1031	50	Gear Unit	EXA1545
21	Shaft	ELA1362	51	Frame Unit	EXA1476
22	Roller	ELA1348	52	Lever Unit	EXA1439
23	Arm	ENC1490	53	Head Assy(HD1)	EXA1594
24	Arm	ENC1397	54	Motor Unit(M1)(MAIN)	EXA1499
25	Guide	ENC1519	55	Washer	HBF-179
26	Holder	ENC1516	56	Screw	JGZ20P025FNI
27	Lever	ENC1448	57	Spring	EBH1545
28	Arm	ENC1488	58	Washer	YE20FUC
29	Roller	ENR1023	59	Pinch Roller Unit	EXA1533
30	Belt	ENT1027	60	Pinch Roller Unit	EXA1532
			61	Capacitor(C1)	CEAL4R7M35

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
B Unit Number : CWE1543				VR 101	Semi-fixed 15kΩ(B)		CCP1230
Unit Name : FM/AM Tuner Unit				VR 151	Semi-fixed 10kΩ(B)		CCP1229
MISCELLANEOUS				VR 154	Semi-fixed 150kΩ(B)		CCP1236
				VR 156	Semi-fixed 100kΩ(B)		CCP1235
				RESISTORS			
IC	1	IC	PA4026A	R	3		RS1/16S223J
IC	2	IC	PA4024A	R	4		RS1/16S101J
Q	1	Chip Transistor	2SC2712	R	6		RS1/16S101J
Q	3	FET	3SK263	R	8		RS1/16S332J
Q	5	Transistor	2SK1067	R	9		RS1/16S823J
Q	31	Chip Transistor	2SC2712				
Q	151	Transistor	DTC144EU	R	10		RS1/16S223J
Q	165	Transistor	2SC4116	R	11		RS1/16S124J
Q	201	FET	2SK291	R	12		RS1/16S474J
Q	202	Chip Transistor	2SC2712	R	15		RS1/16S161J
Q	203	FET	2SK2373	R	16		RS1/16S104J
D	3	Diode	1SV251				
D	4	Diode	1SV250	R	17		RS1/16S332J
D	5	Diode	KV1410-F1	R	18		RS1/16S332J
D	6	Diode	MA157	R	19		RS1/16S154J
D	7	Diode	KV1410-F1	R	21		RS1/16S332J
D	8	Diode	KV1410-F1	R	22		RS1/16S510J
D	9	Diode	KV1410-F1				
D	10	Diode	1SV250	R	24		RS1/16S101J
D	201	Diode	MA157	R	25		RS1/16S221J
D	202	Diode	1SV251	R	26		RS1/16S102J
D	231	Diode	SVC253	R	31		RS1/16S470J
L	1	Inductor	LCTBR12K2125	R	32		RS1/16S912J
L	2	Air-core Coil	CTC1152	R	33		RS1/16S912J
L	3	Air-core Coil	CTC1152	R	34		RS1/16S331J
L	4	Air-core Coil	CTC1151	R	35		RS1/16S331J
L	5	Coil	CTC1147	R	51		RS1/16S331J
L	6	Air-core Coil	CTC1153	R	55		RS1/16S102J
L	40	Inductor	LCTBR15K1608				
L	51	Ferri-Inductor	LAU150K	R	56		RS1/16S823J
L	52	Coil	CTC1136	R	61		RS1/16S392J
L	201	Ferri-Inductor	LAU4R7K	R	62		RS1/16S273J
L	202	Ferri-Inductor	LAU330K	R	103		RS1/16S333J
L	203	Inductor	CTF1371	R	104		RS1/16S334J
L	208	Inductor	LAU390K				
L	209	Inductor	LCTA680J3225	R	105		RS1/16S683J
L	210	Coil	CTB1103	R	107		RS1/16S222J
L	231	Inductor	LAU3R3J	R	152		RS1/16S393J
T	31	Coil	CTE1116	R	155		RS1/16S393J
TC	1	Trimmer	CCL1019	R	157		RS1/10S223J
TC	2	Trimmer	CCL1019				
TC	3	Trimmer	CCL1019	R	160		RS1/16S222J
CF	25	Ceramic Filter	CTF1292	R	161		RS1/16S563J
CF	51	Ceramic Filter	CTF1292	R	162		RS1/16S225J
CF	52	Ceramic Filter	CTF1292	R	163		RS1/16S222J
CF	53	Ceramic Filter	CTF1292	R	164		RS1/16S823J
CF	230	Crystal Filter	CTF1262				
CF	232	Ceramic Filter	CTF1348	R	165		RS1/16S102J
X	151	Radiator 918.5Hz	CSS1365	R	201		RS1/16S103J
X	231	Crystal Resonator 10.26MHz	CSS1111	R	202		RS1/16S103J
				R	203		RS1/16S225J
				R	204		RS1/16S472J
				R	205		RS1/16S471J
				R	206		RS1/16S220J
				R	207		RS1/16S101J
				R	208		RS1/16S102J
				R	210		RS1/16S125J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 211	RS1/16S223J	C 157	CEAL3R3M50
R 214	RS1/16S393J	C 158	CKSYB474K16
R 215	RS1/16S104J	C 159	CEAL220M6R3
R 230	RS1/16S0R0J	C 160	CKSQYB104K16
R 231	RS1/16S242J	C 161	CKSQYB104K16
R 232	RS1/16S473J	C 162	CEAL3R3M50
R 237	RS1/16S103J	C 163	CKSRYB102K50
R 238	RS1/16S104J	C 165	CCSRCH100D50
R 239	RS1/16S104J	C 201	CKSRYB103K25
R 240	RS1/16S103J	C 202	CCSRCH100D50
R 241	RS1/16S202J	C 203	CKSRYB332K50
R 243	RS1/16S123J	C 204	CKSQYB473K16
R 244	RS1/16S103J	C 205	CKSQYB473K16
R 246	RS1/16S0R0J	C 206	CKSRYB103K25
R 247	RS1/10S303J	C 207	CCSRCH120J50
R 248	RS1/16S0R0J	C 211	CCSRCH560J50
R 250	RS1/16S0R0J	C 212	CEAL680M10
CAPACITORS		C 213	CKSRYB103K25
C 1	CCSRCH220J50	C 214	CKSQYB225K10
C 2	CKSRYB222K50	C 215	CCSRCH680J50
C 3	CCSRCH4R0D50	C 216	CCSRCH101J50
C 5	CKSRYB222K50	C 217	CEAL2R2M50
C 6	CKSQYB473K16	C 219	CKSRYB223K25
C 7	CKSQYB473K16	C 220	CKSRYB103K25
C 8	CKSQYB104K16	C 221	CKSRYB103K25
C 9	CKSRYB222K50	C 230	CKSQYB104K16
C 10	CEAL1R0M50	C 231	CCSRCH330J50
C 11	CCSRCH470J50	C 232	CCSRCH150J50
C 12	CCSRCJ3R0C50	C 233	CKSRYB103K25
C 13	CKSRYB222K50	C 234	CEJA330M10
C 15	CCSRCJ3R0D50	C 235	CKSRYB332K50
C 17	CCSRCH120J50	C 236	CKSQYB473K16
C 18	CKSRYB103K25	C 237	CCSRTH180J50
C 19	CCSRCH120J50	C 239	CKSRYB103K25
C 20	CKSRYB222K50	C 240	CKSYB104K16
C 21	CEAL100M16	C 241	CKSQYB104K16
C 22	CCSRRH100D50	C 242	CEALR47M50
C 23	CCSRRH150J50	C 244	CKSQYB473K16
C 24	CCSRCH471J50	C 245	CKSQYB103K25
C 30	CCSRRH201J50	C 248	CKSQYB334K16
C 31	CKSRYB103K25	C 250	CCSRCJ3R0C50
C 32	CKSQYB473K16	A Unit Number : CWM7090 Unit Name : Main Unit	
C 33	CCSRCH220J50		
C 34	CCSRCH4R0D50	MISCELLANEOUS	
C 41	CKSQYB104K16	IC 201	IC
C 51	CKSRYB223K25	IC 202	IC
C 52	CKSRYB103K25	IC 203	IC
C 54	CCSRCH470J50	IC 204	IC
C 55	CKSQYB223K25	IC 205	IC
C 56	CKSQYB104K16	IC 601	IC
C 57	CKSRYB472K50	IC 602	IC
C 58	CEJA330M10	IC 681	IC
C 59	CKSRYB103K25	IC 701	IC
C 61	CCSRCH270J50	IC 702	IC
C 62	CKSRYB103K25	IC 703	IC
C 63	CEALR22M50	IC 781	IC
C 65	CKSQYB104K16	Q 201	Chip Transistor
C 101	CEALNP100M10	Q 202	Transistor
C 102	CKSRYB182K50	Q 203	Transistor
C 103	CKSQYB682K50	Q 204	Chip Transistor
C 104	CEAL2R2M50	Q 205	Chip Transistor
C 105	CKSRYB103K25	Q 206	Chip Transistor
C 106	CCSRCH151J50	Q 301	Chip Transistor
C 107	CKSRYB103K25	Q 302	Transistor
C 151	CKSRYB562K25		
C 152	CKSQYB104K16		
C 153	CEAL3R3M50		
C 154	CKSQYB104K16		

KEX-M8406ZT,M8406ZT-91,M9406ZT,M9406ZT-91

====Circuit Symbol and No.===Part Name			Part No.	====Circuit Symbol and No.===Part Name			Part No.
Q	303	Transistor	DTC144TK	D	334	Diode	MA152WK
Q	323	Transistor	2SD2318F5	D	354	Diode	UDZ20(B)
Q	331	Transistor	2SB1185	D	355	Diode	HZU8R2(B3)
Q	332	Transistor	IMX1	D	501	Diode	UDZS8R2(B)
Q	335	Transistor	DTB123EK	D	502	Diode	MA153
Q	336	Transistor	DTB123EK	D	571	Diode	1SS355
Q	337	Transistor	IMX1	D	591	Diode	UDZS10(B)
Q	357	Transistor	DTC114EK	D	601	Diode	1SS355
Q	358	Transistor	DTA114EK	D	656	Diode	1SS355
Q	359	Transistor	DTC114EK	D	657	Diode	1SS355
Q	360	Transistor	DTA114EK	D	658	Diode	1SS355
Q	368	Chip Transistor	2SC2712	D	659	Diode	1SS355
Q	501	Transistor	2SA1162	D	660	Diode	1SS355
Q	521	Transistor	2SB1185	D	681	Diode	UDZ18(B)
Q	522	Transistor	2SB1185	D	682	Diode	UDZ18(B)
Q	525	Transistor	2SD1767	D	771	Diode	HZU4LL(C)
Q	526	Chip Transistor	2SC2712	D	781	Diode	UDZS10(B)
Q	527	Transistor	2SA1797	D	782	Diode	UDZS10(B)
Q	528	Transistor	2SA1797	D	783	Diode	UDZS10(B)
Q	529	Transistor	2SA1162	D	784	Diode	UDZS10(B)
Q	530	Transistor	2SA1162	L	201	Inductor	LCTB4R7K3216
Q	531	Transistor	IMD3A	L	202	Inductor	LCTA4R7J3225
Q	551	Transistor	2SA1797	L	203	Inductor	LCTA4R7J2520
Q	552	Transistor	2SA1162	L	204	Inductor	LCTA4R7J3225
Q	553	Transistor	IMD3A	L	205	Inductor	LCTB6R8K3216
Q	571	Transistor	2SA1797	L	206	Inductor	LCTB6R8K3216
Q	572	Transistor	2SA1797	L	207	Inductor	LCTB6R8K3216
Q	573	Transistor	2SA1797	L	208	Inductor	LCTA4R7J3225
Q	574	Transistor	2SA1162	L	209	Inductor	LCTA561J4532
Q	575	Transistor	2SA1162	L	211	Inductor	LCTA2R2J2520
Q	576	Transistor	2SA1162	L	212	Inductor	LCTA101J3225
Q	577	Transistor	DTC123YK	L	213	Inductor	CTF1305
Q	578	Transistor	DTA114EK	L	251	Inductor	LCTA101J2520
Q	601	Transistor	DTA144EK	L	252	Inductor	LCTB2R2K2125
Q	602	Transistor	2SA1162	L	253	Inductor	LCTB2R2K2125
Q	603	Transistor	DTA114EK	L	301	Coil 350μH	CTH1092
Q	607	Chip Transistor	2SC2712	L	601	Inductor	LCTB100K3216
Q	608	Transistor	DTA114EK	L	602	Inductor	LCTB100K3216
Q	701	Transistor	IMH4	L	603	Inductor	LCTB100K3216
Q	702	Transistor	IMX1	L	605	Inductor	CTF1305
Q	703	Transistor	IMH4	L	607	Inductor	CTF1305
Q	704	Transistor	IMH4	L	608	Inductor	CTF1305
Q	705	Transistor	IMH4	L	609	Inductor	CTF1305
Q	706	Transistor	IMH4	CG	201	Surge Protector	DSP-201M-A21F
Q	707	Transistor	IMH4	CG	202	Surge Protector	DSP-201M-A21F
Q	708	Transistor	2SC2412K	X	201	Crystal Resonator 7.200MHz	CSS1379
Q	709	Transistor	IMH4	X	202	Crystal Resonator 4.332MHz	CSS1056
Q	710	Transistor	IMH4	X	601	Radiator 10.00MHz	CSS1428
D	201	Diode	1SS355	VR	201	Semi-fixed 10kΩ(B)	CCP1396
D	202	Diode	1SV241	VR	202	Semi-fixed 2.2kΩ(B)	CCP1392
D	203	Diode	1SV241	FU	301	Fuse 5A	CEK1195
D	204	Diode	1SS355			FM/AM Tuner Unit	CWE1543
D	205	Diode	MA152WK				
D	206	Diode	DAP202K				
D	301	Diode	ERC05-10B				
D	302	Diode	HZU8R2(B1)	R	201		RS1/10S103J
D	303	Diode	HZU8R2(B1)	R	204		RS1/10S102J
D	304	Diode	HZU8R2(B1)	R	205		RS1/10S471J
D	306	Diode	1SS355	R	206		RS1/10S105J
D	307	Diode	1SS355	R	207		RS1/10S472J
D	321	Diode	ERA15-02VH	R	208		RS1/10S750J
D	322	Diode	UDZS5R6(B)	R	209		RS1/10S750J
D	331	Diode	1SS355	R	210		RS1/10S225J
D	332	Diode	HZU8R2(B1)	R	211		RS1/10S225J
D	333	Diode	1SS355	R	212		RS1/10S225J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 213	RS1/10S225J	R 279	RS1/10S102J
R 214	RS1/10S225J	R 280	RS1/10S102J
R 215	RS1/10S225J	R 281	RS1/10S104J
R 216	RS1/10S103J	R 282	RS1/10S562J
R 217	RS1/10S102J	R 283	RS1/10S104J
R 218	RS1/10S103J	R 284	RS1/10S333J
R 219	RS1/10S103J	R 286	RS1/10S681J
R 220	RS1/10S104J	R 287	RS1/10S222J
R 221	RS1/10S473J	R 288	RS1/10S102J
R 222	RS1/10S473J	R 289	RS1/10S562J
R 223	RS1/10S224J	R 290	RS1/10S684J
R 224	RS1/10S103J	R 291	RS1/10S222J
R 225	RS1/10S334J	R 292	RS1/10S222J
R 226	RS1/10S101J	R 301	RS1/10S104J
R 227	RS1/10S101J	R 302	RS1/10S104J
R 228	RS1/10S104J	R 303	RS1/10S104J
R 229	RS1/10S104J	R 304	RS1/8S222J
R 230	RS1/10S103J	R 305	RS1/8S222J
R 231	RS1/10S182J	R 306	RS1/8S472J
R 232	RS1/10S683J	R 307	RS1/8S472J
R 233	RS1/10S153J	R 308	RS1/10S473J
R 234	RS1/10S103J	R 322	RS1/10S223J
R 235	RS1/10S561J	R 325	RS1/10S101J
R 236	RS1/10S472J	R 331	RS1/10S223J
R 237	RS1/10S682J	R 332	RS1/10S102J
R 238	RS1/10S102J	R 333	RS1/10S331J
R 239	RS1/10S222J	R 334	RS1/10S103J
R 240	RS1/10S682J	R 335	RS1/10S471J
R 241	RS1/10S472J	R 336	RS1/10S102J
R 242	RS1/10S331J	R 343	RS1/10S472J
R 243	RS1/10S102J	R 366	RS1/8S221J
R 244	RS1/10S102J	R 370	RS1/10S104J
R 245	RS1/10S473J	R 371	RS1/10S473J
R 246	RS1/10S562J	R 501	RS1/8S222J
R 247	RS1/10S222J	R 502	RS1/10S103J
R 248	RS1/10S562J	R 503	RS1/10S103J
R 249	RS1/10S222J	R 504	RS1/10S123J
R 250	RS1/10S222J	R 505	RS1/10S103J
R 251	RS1/10S102J	R 506	RS1/10S103J
R 252	RS1/10S473J	R 521	RS1/4S2R2J
R 253	RS1/10S472J	R 522	RS1/4S2R2J
R 254	RS1/10S473J	R 523	RS1/4S2R2J
R 255	CCN1121	R 524	RS1/4S2R2J
R 256	RS1/10S0R0J	R 527	RS1/10S103J
R 258	RS1/10S393J	R 528	RS1/4S221J
R 259	RS1/10S272J	R 531	RS1/10S2R2J
R 260	RS1/10S392J	R 532	RS1/10S2R2J
R 261	RS1/10S222J	R 533	RS1/10S471J
R 262	RS1/10S392J	R 534	RS1/10S471J
R 263	RS1/10S152J	R 535	RS1/10S822J
R 264	RS1/10S332J	R 536	RS1/10S822J
R 265	RS1/10S473J	R 537	RS1/10S103J
R 266	RS1/10S223J	R 538	RS1/10S102J
R 267	RS1/10S184J	R 539	RS1/10S102J
R 268	RS1/10S104J	R 551	RS1/10S2R2J
R 269	RS1/10S123J	R 552	RS1/10S471J
R 270	RS1/10S105J	R 553	RS1/10S822J
R 271	RS1/10S822J	R 554	RS1/10S103J
R 272	RS1/10S822J	R 555	RS1/10S102J
R 273	RS1/10S222J	R 571	RS1/10S2R2J
R 274	RS1/10S102J	R 572	RS1/10S2R2J
R 275	RS1/10S102J	R 573	RS1/10S2R2J
R 276	RS1/10S102J	R 574	RS1/10S471J
R 277	RS1/10S102J	R 575	RS1/10S471J
R 278	RS1/10S102J	R 576	RS1/10S471J

KEX-M8406ZT,M8406ZT-91,M9406ZT,M9406ZT-91

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
R 577	RS1/10S822J	R 698	RS1/10S0R0J
R 578	RS1/10S822J	R 701	RS1/10S392J
R 579	RS1/10S822J	R 702	RS1/10S392J
R 580	RS1/10S103J	R 703	RS1/10S224J
R 581	RS1/10S102J	R 704	RS1/10S224J
R 582	RS1/10S102J	R 705	RS1/10S224J
R 583	RS1/10S102J	R 706	RS1/10S222J
R 591	RS1/8S222J	R 707	RS1/10S222J
R 592	RS1/8S472J	R 708	RS1/10S822J
R 601	RS1/10S104J	R 709	RS1/10S102J
R 602	RS1/10S102J	R 710	RS1/10S102J
R 604	RS1/10S102J	R 711	RS1/10S222J
R 607	RS1/10S102J	R 712	RS1/10S222J
R 608	RS1/10S102J	R 713	RS1/10S102J
R 609	RS1/10S102J	R 715	RS1/10S272J
R 610	RS1/10S681J	R 716	RS1/10S272J
R 611	RS1/10S102J	R 717	RS1/10S222J
R 612	RS1/10S102J	R 718	RS1/10S222J
R 613	RS1/10S473J	R 719	RS1/10S103J
R 614	RS1/10S473J	R 720	RS1/10S103J
R 615	RS1/10S103J	R 721	RS1/10S393J
R 616	RS1/10S103J	R 722	RS1/10S393J
R 617	RS1/10S472J	R 723	RS1/10S823J
R 618	RA3C103J	R 724	RS1/10S823J
R 620	RS1/10S0R0J	R 725	RS1/10S102J
R 621 1kΩ	CCN1120	R 726	RS1/10S102J
R 622	RS1/10S473J	R 727	RS1/10S473J
R 623	RS1/10S473J	R 728	RS1/10S473J
R 624	RS1/10S473J	R 729	RS1/10S222J
R 625	RS1/10S104J	R 730	RS1/10S222J
R 626	RS1/10S223J	R 731	RS1/10S682J
R 627 1kΩ	CCN1120	R 732	RS1/10S682J
R 628 47kΩ	CCN1131	R 735	RS1/10S222J
R 629	RS1/10S102J	R 736	RS1/10S222J
R 630	RA3C102J	R 737	RS1/10S222J
R 631	RS1/10S681J	R 738	RS1/10S222J
R 632	RS1/10S102J	R 739	RS1/10S470J
R 633	RS1/10S102J	R 740	RS1/10S470J
R 634	RS1/10S473J	R 741	RS1/10S470J
R 635	RS1/10S103J	R 742	RS1/10S470J
R 641	RS1/10S473J	R 743	RS1/10S102J
R 644	RS1/10S102J	R 744	RS1/10S102J
R 645	RS1/10S103J	R 745	RS1/10S473J
R 651	RS1/10S102J	R 746	RS1/10S473J
R 652	RS1/10S102J	R 747	RS1/10S473J
R 653	RS1/10S102J	R 748	RS1/10S473J
R 654 1kΩ	CCN1120	R 771	RS1/10S103J
R 655	RS1/10S102J	R 781	RS1/10S223J
R 656	RA3C102J	R 784	RS1/10S470J
R 657	RS1/10S102J	R 785	RS1/10S470J
R 658	RS1/10S102J	R 786	RS1/10S470J
R 659 47kΩ	CCN1131	R 787	RS1/10S470J
R 660	RS1/10S473J	R 788	RS1/10S272J
R 661	RS1/10S473J	R 789	RS1/10S272J
R 662	RS1/10S473J	R 790	RS1/10S822J
R 663	RS1/10S473J	R 791	RS1/10S822J
R 664	RS1/10S473J	CAPACITORS	
R 665	RS1/10S473J	C 201	CKSQYB222K50
R 666	RS1/10S102J	C 202	CKSQYB103K50
R 667	RS1/10S102J	C 203	CCSQCH471J50
R 681	RS1/4S101J	C 204	CKSQYB222K50
R 682	RS1/4S101J	C 205	CKSQYB222K50
R 683	RS1PMF680J		
R 693	RS1/10S473J	C 206	CKSQYB222K50
R 697	RS1/10S473J	C 207	CKSQYB222K50
		C 208	CKSQYB103K50
		C 209	CKSQYB222K50
		C 210	CEJA100M16

KEX-M8406ZT,M8406ZT-91,M9406ZT,M9406ZT-91

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
C 211	CKSQYB103K50	C 282	CKSQYB334K16
C 212	CKSQYB472K50	C 283	CKSQYB473K50
C 213	CKSQYB392K50	C 284	CKSQYB473K50
C 214	CKSQYB103K50	C 290	CKSQYB473K50
C 215	CKSQYB103K50	C 294	CKSQYB222K50
C 216	CEJA100M16	C 301	2200μF/16V
C 217	CKSQYB473K50	C 302	CCH1186
C 218	CEJA2R2M50	C 303	CKSQYB473K50
C 219	CKSQYB102K50	C 304	CEAL1R0M50
C 220	CKSQYB103K50	C 305	CEAL1R0M50
C 221	CKSQYB473K50	C 306	CKSQYB102K50
C 223	CKSQYB103K50	C 323	CKSQYB473K50
C 224	4.7μF/10V	C 324	CEAL1R0M50
C 225	CKSQYB154K16	C 325	CKSQYB103K50
C 226	CKSQYB103K50	C 326	CEJA330M10
C 227	CSZSR220M10	C 331	CKSQYB103K50
C 228	CKSQYB103K50	C 332	CEJA101M16
C 229	CKSQYB103K50	C 333	CKSQYB103K50
C 230	CSZSR220M10	C 334	CKSQYB473K50
C 231	CEJA101M10	C 335	CKSQYB473K50
C 232	CKSQYB473K50	C 354	CKSQYB102K50
C 233	CKSQYB223K50	C 356	1000μF/16V
C 234	CKSQYB223K50	C 501	CCH1149
C 235	CCSQCH101J50	C 502	CKSQYB102K50
C 236	CKSQYB103K50	C 503	CEAL1R0M50
C 237	CKSQYB103K50	C 521	CEAL1R0M50
C 239	CKSYB473K50	C 522	CKSQYB472K50
C 240	CKSQYB102K50	C 523	CEJA101M16
C 241	CCSQCH150J50	C 524	CKSQYB103K50
C 242	CCSQCH150J50	C 525	CKSQYB102K50
C 243	CKSQYB103K50	C 551	CKSQYB102K50
C 244	4.7μF/10V	C 571	CKSQYB102K50
C 245	CCH1280	C 572	CKSQYB102K50
C 247	CKSQYB103K50	C 573	CKSQYB102K50
C 248	CKSQYB473K50	C 591	CKSQYB102K50
C 249	CKSQYB473K50	C 603	CKSQYB103K50
C 250	CKSQYB473K50	C 604	CKSQYB103K50
C 251	CKSQYB334K16	C 605	CKSQYB102K50
C 252	CKSQYB102K50	C 606	CKSQYB473K50
C 253	CKSQYB392K50	C 607	CKSQYB473K50
C 254	CKSQYB682K50	C 608	CKSQYB102K50
C 255	CKSQYB473K50	C 612	CEAL4R7M35
C 256	CEJA3R3M50	C 614	CKSQYB105K16
C 257	CKSQYB333K50	C 651	CKSQYB103K50
C 258	CEJANP1R0M50	C 652	CKSQYB103K50
C 259	CQMA683J50	C 653	CKSQYB103K50
C 260	CQMA333J50	C 654	CKSQYB102K50
C 261	CQMA333J50	C 655	CKSQYB102K50
C 262	CQMA333J50	C 656	CKSQYB102K50
C 263	CKSQYB393K50	C 657	CKSQYB102K50
C 264	CKSQYB682K50	C 658	CKSQYB103K50
C 265	CKSQYB473K50	C 659	CKSQYB103K50
C 266	CKSQYB473K50	C 660	CKSQYB103K50
C 267	CEAL4R7M35	C 661	CKSQYB102K50
C 268	CKSQYB104K50	C 662	CKSQYB102K50
C 270	CCSQCH220J50	C 663	CKSQYB102K50
C 271	CCSQCH220J50	C 664	CKSQYB102K50
C 272	CKSQYB223K50	C 665	CKSQYB102K50
C 273	CKSQYB104K50	C 668	CEJA101M6R3
C 275	CKSQYB104K50	C 669	CKSQYB473K50
C 276	CKSQYB105K16	C 681	CKSQYB103K50
C 277	CKSQYB104K50	C 682	CCSQCH221J50
C 278	CKSQYB472K50	C 683	CCSQCH221J50
C 279	CKSQYB103K50	C 684	CKSQYB102K50
C 280	CKSQYB103K50	C 701	CKSQYB105K16

====Circuit Symbol and No.====Part Name	Part No.
C 703 2.2μF/50V	CCH1375
C 704 2.2μF/50V	CCH1375
C 705	CKSQYB223K50
C 706	CKSQYB223K50
C 707	CKSQYB223K50
C 709	CKSQYB153K50
C 710	CKSQYB153K50
C 711 2.2μF/50V	CCH1375
C 712 2.2μF/50V	CCH1375
C 713 4.7μF/35V	CCH1016
C 714 4.7μF/35V	CCH1016
C 715	CCSQCH120J50
C 716	CCSQCH120J50
C 717 4.7μF/35V	CCH1016
C 718 4.7μF/35V	CCH1016
C 719 4.7μF/35V	CCH1016
C 720 4.7μF/35V	CCH1016
C 721	CCSQCH151J50
C 722	CCSQCH151J50
C 723	CCSQCH331J50
C 724	CCSQCH331J50
C 725	CKSQYB682K50
C 726	CKSQYB682K50
C 727	CKSQYB682K50
C 728	CKSQYB682K50
C 771	CEJA101M6R3
C 772	CKSQYB103K50
C 773	CEJA101M10
C 774	CKSQYB103K50
C 775	CKSQYB103K50
C 776	CKSQYB103K50
C 777	CEJA101M16
C 778	CKSQYB103K50
C 781	CKSQYB104K50
C 782	CEALNP4R7M16
C 783	CEALNP4R7M16
C 784	CEALNP4R7M16
C 785	CEALNP4R7M16
C 786	CCSQCH101J50
C 787	CCSQCH101J50
C 788	CCSQCH101J50
C 789	CCSQCH101J50
C 790 4.7μF/50V	CCH1320
C 791 4.7μF/50V	CCH1320

G Unit Number : CWM7104
Unit Name : LCD Unit

MISCELLANEOUS

IC 951	IC
IL 951	Lamp 8V100mA
IL 952	Lamp 8V100mA
LCD 901	LCD

RESISTORS

R 951	1kΩ
R 952	22kΩ
R 953	
R 954	
R 955	

R 956

CAPACITORS

C 951	
C 952	
C 953	
C 954	

LC75874W
CEL1530
CEL1530
CAW1594

CCN1120
CCN1129
RS1/10S433J
RS1/10S472J
RS1/10S472J

RS1/10S472J

CKSQYB104K50
CCSQCH681J50
CKSQYB104K50
CKSQYB104K50

====Circuit Symbol and No.====Part Name Part No.
F Unit Number : CWM7101
Unit Name : Keyboard Unit

MISCELLANEOUS

S 901	Encoder	CSD1055
S 902	Encoder	CSD1057
IL 901	Lamp 8V 60mA	CEL1531
IL 902	Lamp 8V 60mA	CEL1531
IL 903	Lamp 8V 60mA	CEL1531
IL 904	Lamp 8V 60mA	CEL1531
IL 905	Lamp 8V 60mA	CEL1531
IL 907	Lamp 8V 60mA	CEL1531
IL 909	Lamp 8V 60mA	CEL1531
IL 910	Lamp 8V 60mA	CEL1531
IL 912	Lamp 8V 60mA	CEL1531
IL 913	Lamp 8V 60mA	CEL1531
IL 914	Lamp 8V 60mA	CEL1531
IL 915	Lamp 8V 60mA	CEL1531

RESISTORS

R 901		RS1/10S3R3J
R 902		RS1/10S3R3J
R 903		RS1/10S3R3J
R 904		RS1/10S3R3J
R 905		RS1/10S3R3J
R 906		RS1/10S3R3J
R 907		RS1/10S1R5J
R 908		RS1/10S2R2J
R 909		RS1/10S1R5J
R 910		RS1/10S2R2J
R 911	0Ω	CCN1110
R 913	0Ω	CCN1110
R 915		RS1/10S0R0J
R 917		RS1/10S0R0J
R 919		RS1/10S0R0J
R 922		RS1/10S0R0J

C Unit Number : EWM1027
Unit Name : Deck Unit

MISCELLANEOUS

IC 251	IC	HA12216F
IC 351	IC	PA2020A
Q 271	Transistor	2SC4116
Q 351	Transistor	2SB1260
Q 352	Transistor	2SC4102
D 351	Diode	1SS355
VR 301	Semi-fixed 33kΩ(B)	CCP1280
VR 302	Semi-fixed 33kΩ(B)	CCP1280

RESISTORS

R 255		RS1/16S181J
R 256		RS1/16S181J
R 257		RS1/16S183J
R 258		RS1/16S183J
R 259		RS1/16S133J
R 260		RS1/16S133J
R 261		RS1/16S274J
R 262		RS1/16S274J
R 271		RS1/16S183J
R 272		RS1/8S0R0J
R 273		RS1/8S0R0J
R 274		RS1/8S0R0J
R 275		RS1/16S473J
R 276		RS1/16S104J
R 277		RS1/16S224J

====Circuit Symbol and No.==Part Name

Part No.

R 278
R 281
R 282
R 283
R 284

RS1/16S104J
RS1/8S0R0J
RS1/8S0R0J
RS1/8S0R0J
RS1/8S0R0J

R 285
R 288
R 289
R 291
R 292

RS1/16S0R0J
RS1/16S0R0J
RS1/16S0R0J
RS1/8S0R0J
RS1/10S0R0J

R 293
R 294
R 321
R 351
R 352

RS1/10S0R0J
RS1/10S0R0J
RS1/8S0R0J
RS1/16S102J
RS1/16S102J

R 353
R 354
R 355
R 356
R 357

RS1/16S102J
RS1/16S102J
RS1/10S274J
RS1/10S202J
RS1/10S472J

R 358
R 359
R 360
R 361
R 362

RS1/10S103J
RS1/10S103J
RS1/10S102J
RS1/10S622J
RS1/8S181J

R 373
R 374
R 375
R 401
R 402

RS1/8S0R0J
RS1/8S0R0J
RS1/8S0R0J
RS1/16S123J
RS1/16S332J

R 403
R 404

RS1/16S911J
RS1/16S274J

CAPACITORS

C 251
C 252
C 253
C 254
C 255

CKSRYB391K50
CKSRYB391K50
CKSRYB391K50
CKSRYB391K50
CKSRYB103K50

C 256
C 271
C 272
C 301
C 302

CKSRYB103K50
CEJA1R0M50
CKSQYB104K16
CKSQYB104K16
CKSQYB104K16

C 309
C 310
C 351
C 352
C 353

CKSQYB104K16
CKSQYB104K16
CKSYB224K25
CKSQYB392K50
CKSQYB103K50

C 354
C 355
C 356
C 401
C 402

CKSQYB103K50
CKSYB104K50
CKSQYB103K50
CKSRYB472K50
CKSYB334K25

C 403
C 404
C 405

CKSRYB223K25
CKSRYB103K50
CKSRYB333K16

====Circuit Symbol and No.==Part Name

Part No.

D Unit Number :
Unit Name : PCB Unit

L 1 Inductor
S 1 Switch (LOAD)
S 2 Switch (70μs)
EGN 1 Photo-Interrupter

ETH0002
ESG1004
ESG1004
EGN1005

E Unit Number :
Unit Name : Reel PCB

EGN 2 Photo-Interrupter
EGN 3 Photo-Interrupter

EGN1006
EGN1006

Miscellaneous Parts List

C 1
M 1 Motor Unit (Main)
M 2 Motor Unit (Sub)
HD 1 Head Assy

CEAL4R7M35
EXA1499
EXA1382
EXA1594