


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
- (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

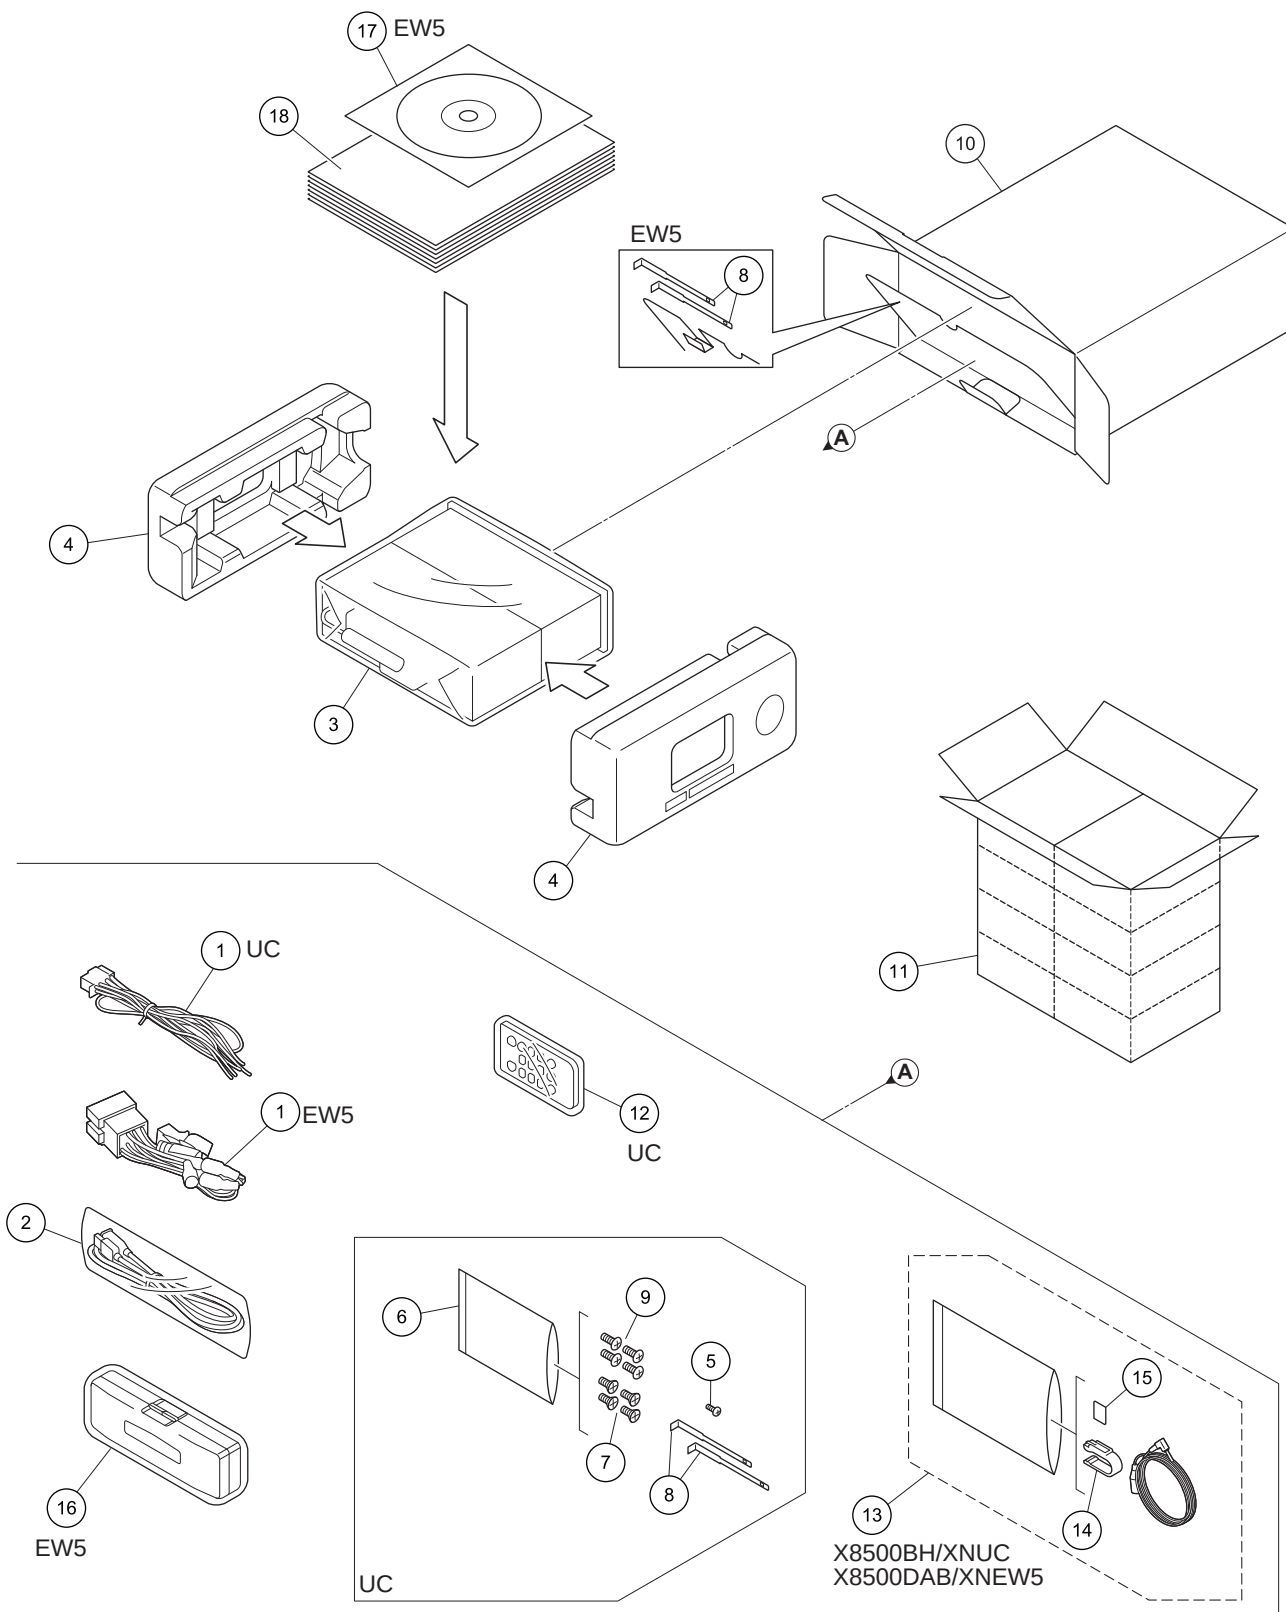

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	See Contrast table(2)	13	Microphone Assy	See Contrast table(2)
2	USB Extended Cable	CDP1585	14	Holder	See Contrast table(2)
3	Polyethylene Bag	See Contrast table(2)	15	Cushion	See Contrast table(2)
4	Protector	CHP4594			
5	Screw	See Contrast table(2)	16	Case Assy	See Contrast table(2)
			17	IM CD-ROM	See Contrast table(2)
6	Polyethylene Bag	See Contrast table(2)	18-1	Owner's Manual	See Contrast table(2)
7	Screw	See Contrast table(2)	*	18-2 Warranty Card	See Contrast table(2)
8	Handle	QNC3021	*	18-3 Caution Card	See Contrast table(2)
9	Screw	See Contrast table(2)			
10	Unit Box	See Contrast table(2)	*	18-4 Caution Card	See Contrast table(2)
				18-5 Quick Start Guide	See Contrast table(2)
11	Contain Box	See Contrast table(2)		18-6 Installation Manual	See Contrast table(2)
12	Card Remote Control Unit	See Contrast table(2)	*	18-7 Caution Card	See Contrast table(2)

(2) CONTRAST TABLE


DEH-X7500HD/XNUC, DEH-X8500BH/XNUC and DEH-X8500DAB/XNEW5 are constructed the same except for the following:

Mark	No.	Description	DEH-X7500HD/XNUC	DEH-X8500BH/XNUC	DEH-X8500DAB/XNEW5
	1	Cord Assy	CDP1484	CDP1484	QDP3024
	3	Polyethylene Bag	CEG1173	CEG1173	QEG3001
	5	Screw	BPZ20P060FTC	BPZ20P060FTC	Not used
	6	Polyethylene Bag	CEG1160	CEG1160	Not used
	7	Screw	CRZ50P090FTC	CRZ50P090FTC	Not used
	9	Screw	TRZ50P080FTC	TRZ50P080FTC	Not used
	10	Unit Box	QHG3403	QHG3402	QHG3401
	11	Contain Box	QHL3403	QHL3402	QHL3401
	12	Card Remote Control Unit	QXE1047	QXE1044	Not used
	13	Microphone Assy	Not used	CPM1083	CPM1083
	14	Holder	Not used	CZN7192	CZN7192
	15	Cushion	Not used	CZN7193	CZN7193
	16	Case Assy	Not used	Not used	YXA5856
	17	IM CD-ROM	Not used	Not used	QPJ3018
	18-1	Owner's Manual	QRD3150	QRD3150	Not used
*	18-2	Warranty Card	QRY3001	QRY3001	CRY1376
*	18-3	Caution Card	Not used	Not used	CRP1438
*	18-4	Caution Card	Not used	Not used	CRP1441
	18-5	Quick Start Guide	Not used	Not used	QRD3148
	18-6	Installation Manual	Not used	Not used	QRD3149
*	18-7	Caution Card	Not used	Not used	QRP3016

Owner's Manual,Installation Manual

Part No.	Language
QRD3150	English, French, Spanish(Espanol)
QRD3148	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3149	English, French, Italian, Spanish(Espanol), German, Dutch, Russian

9.2 EXTERIOR

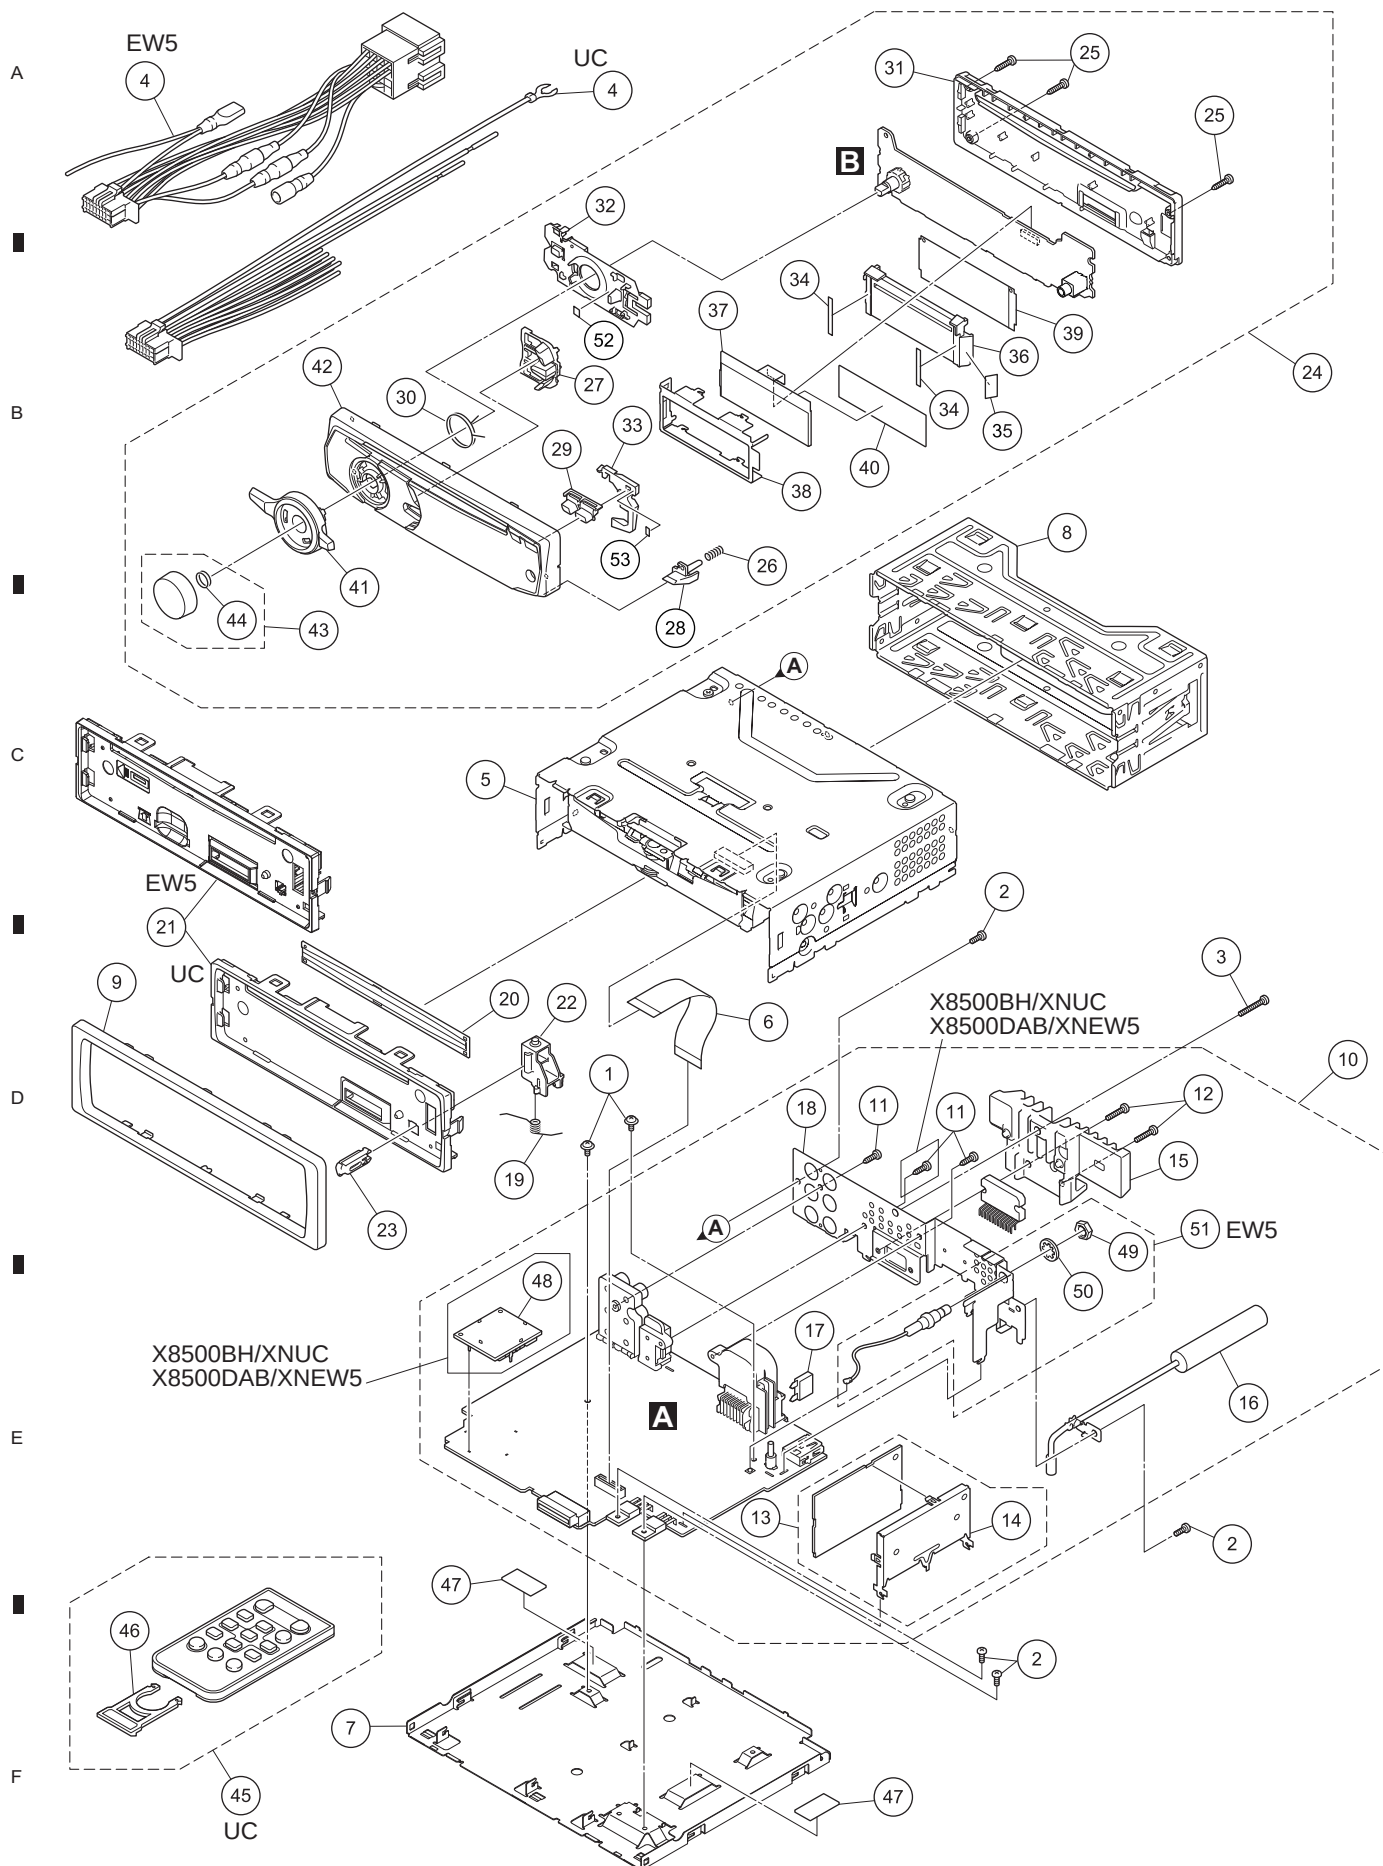

5

6

7

8

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	ASZ26P050FTC	28	Button (DETACH)	QAC3098
2	Screw	BSZ26P060FTC	29	Button	See Contrast table(2)
3	Screw	BSZ26P120FTC	30	Spring	QBH3005
4	Cord Assy	See Contrast table(2)			
5	CD Mechanism Module (S11.6)	CXK5804	31	Cover	QNS3446
			32	Lighting Conductor	QNV3063
6	FFC	QDE3029	33	Lighting Conductor	QNV3064
7	Case	QNB3008	34	Tape	QNM3063
8	Holder	QNC3020	35	Sheet	QNM3076
9	Panel	QNS3447			
10	Tuner Amp Unit	See Contrast table(2)	36	Lighting Conductor	QNV3067
			37	STN LCD	YAW5112
11	Screw	BPZ26P080FTC	38	Holder	YNC5101
12	Screw	BSZ26P120FTC	39	Sheet	YNM5187
13	WWR Core Tuner Unit	See Contrast table(2)	40	Sheet	YNM5200
14	Holder	CND6449			
15	Heat Sink	QNR3010	41	Lever Unit	QXA3725
			42	Grille Unit	See Contrast table(2)
16	Antenna Attached Cable	YDH5001	43	Knob Unit	YXC5158
⚠ 17	Fuse (10A)	YEK5001	44	Spring	YBL5010
18	Holder	See Contrast table(2)	45	Card Remote Control Unit	See Contrast table(2)
19	Spring	QBH3001			
20	Cover	QNM3029	46	Cover	See Contrast table(2)
			47	Sheet	YNM5198
21	Panel	See Contrast table(2)	48	BT Module	See Contrast table(2)
22	Arm	QNV3025	49	Nut	See Contrast table(2)
23	Button	QNV3026	50	Washer	See Contrast table(2)
24	Detachable Grille Assy	See Contrast table(2)			
25	Screw	BPZ20P100FTC	51	Antenna Attached Assy	See Contrast table(2)
			52	Sheet	QNM3084
26	Spring	CBH2210	53	Sheet	QNM3085
27	Button (MIX, UP/DOWN)	QAC3097			

(2) CONTRAST TABLE

DEH-X7500HD/XNUC, DEH-X8500BH/XNUC and DEH-X8500DAB/XNEW5 are constructed the same except for the following:

Mark	No.	Description	DEH-X7500HD/XNUC	DEH-X8500BH/XNUC	DEH-X8500DAB/XNEW5
	4	Cord Assy	CDP1484	CDP1484	QDP3024
	10	Tuner Amp Unit	QWM3567	QWM3566	QWM3565
	13	WWR Core Tuner Unit	CWE2364	CWE2364	CWE2363
	18	Holder	YNC5109	YNC5108	QNC3063
	21	Panel	QNS3449	QNS3449	QNS3448
	24	Detachable Grille Assy	QXA3785	QXA3784	QXA3783
	29	Button	QAC3105 (EJECT, CLOCK)	QAC3096 (EJECT, PHONE)	QAC3096 (EJECT, PHONE)
	42	Grille Unit	QXA3769	QXA3768	QXA3724
	45	Card Remote Control Unit	QXE1047	QXE1044	Not used
	46	Cover	CNS7068	CNS7068	Not used
	48	BT Module	Not used	CWX4317	CWX4317
	49	Nut	Not used	Not used	QBA3002
	50	Washer	Not used	Not used	QBE3001
	51	Antenna Attached Assy	Not used	Not used	QXA3732

9.3 CD MECHANISM MODULE

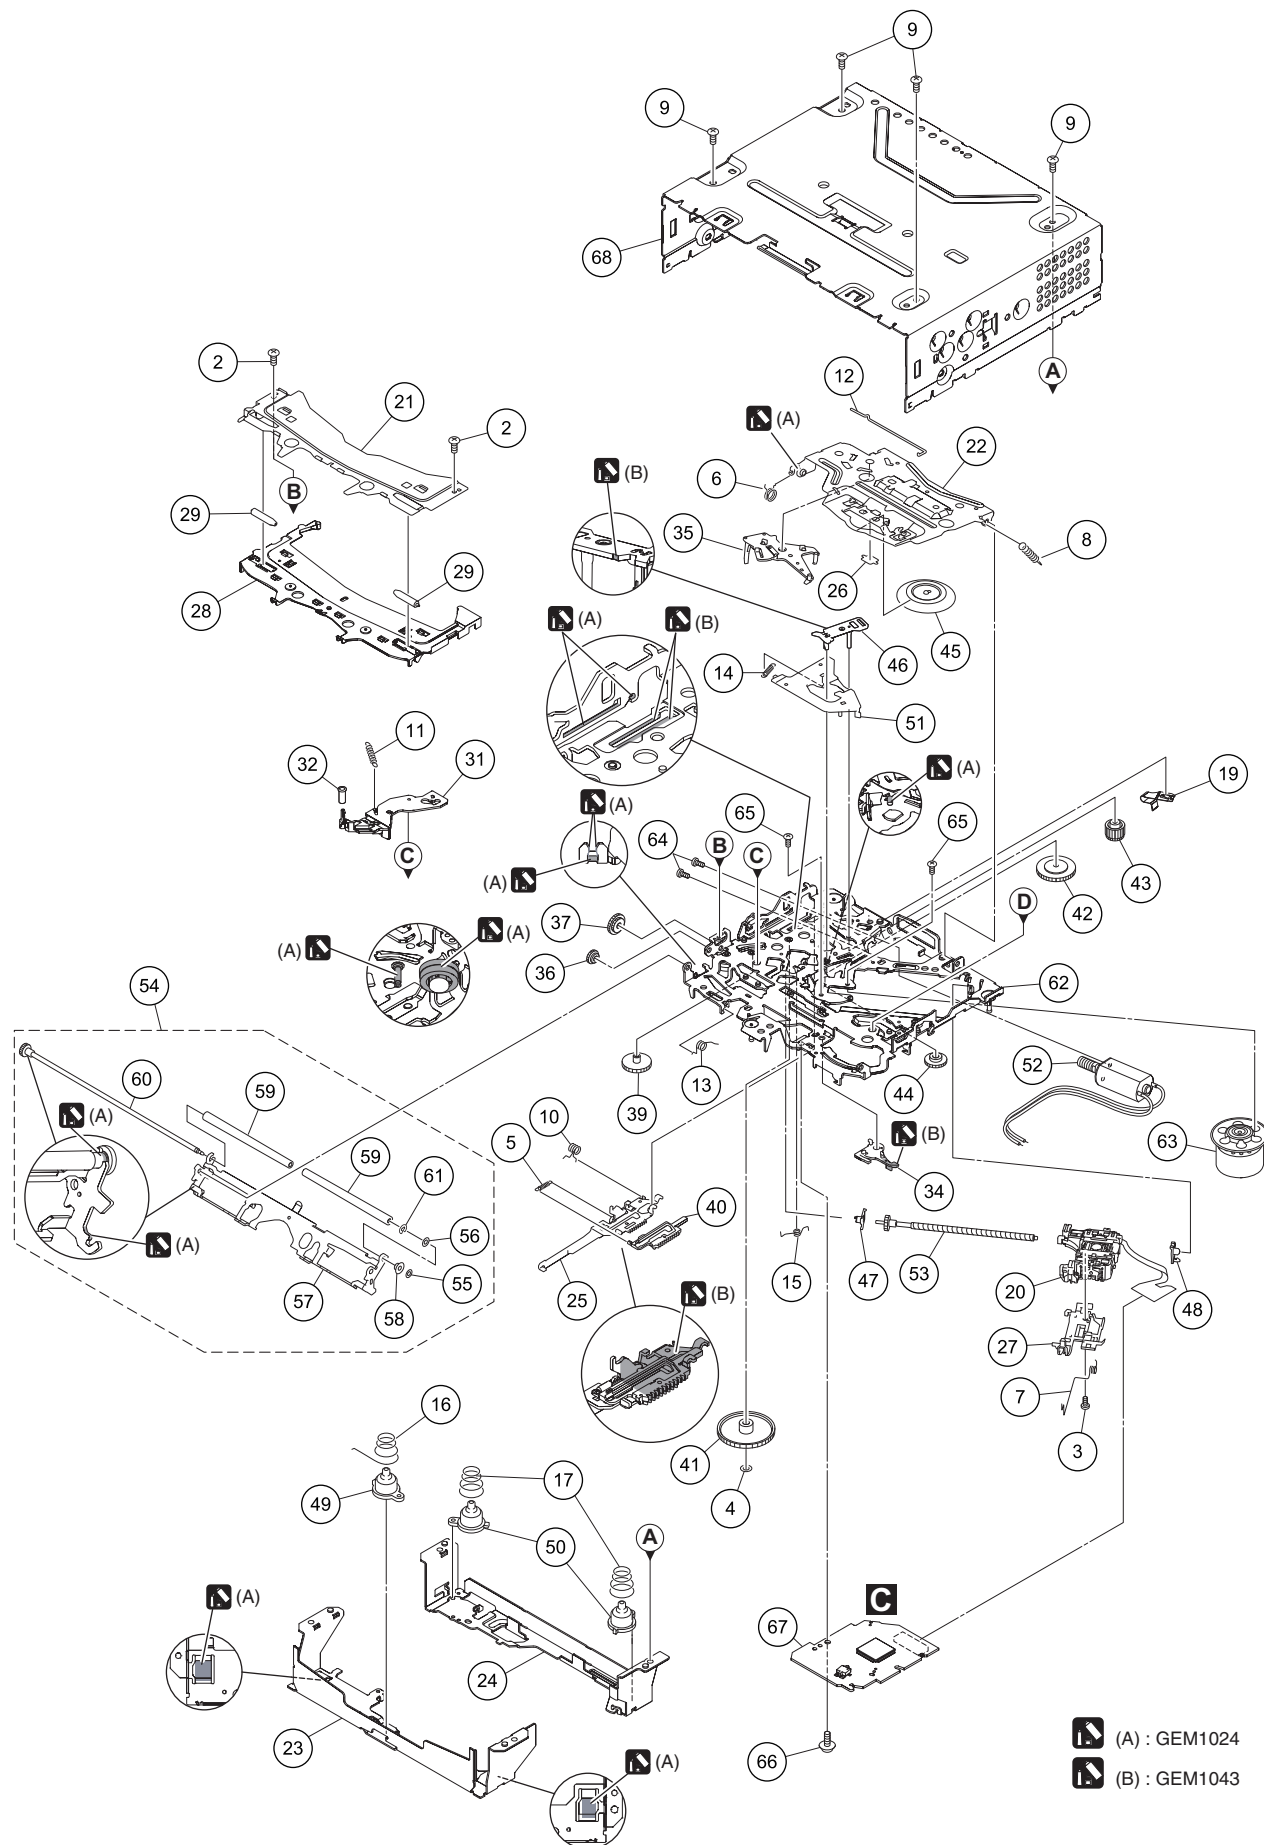

DEH-X7500HD/XNUC

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE6232	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
11	Coil Spring	CBH3095	59	Roller	CNW2500	
12	Spring	CBH3014	60	Gear Unit	CXE6225	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6STD)	CWX4023	
20	Pickup Unit(P10.6)(Service)	CXX3556	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	A:DEH-X7500HD/XNUC		IC 561 (A,13,84) Regulator IC	BD9876EFJ
	B:DEH-X8500BH/XNUC		IC 601 (A,106,65) IC(A)	PEQ111A8
	C:DEH-X8500DAB/XNEW5		(A,106,65) IC(B)	PEQ112A8
C	Unit Number: QWM3567(A)		(A,106,65) IC(C)	PEQ113A8
	Unit Number: QWM3566(B)		IC 603 (A,127,46) IC	S-80827CNMC-B8M
	Unit Number: QWM3565(C)		IC 651 (A,70,68) IC	R5S726B0D216FP
	Unit Name : Tuner Amp Unit		IC 701 (A,43,70) IC	M12L64164A-5TG2Y
	Unit Number:		IC 721 (A,33,92) Regulator IC	S-1155B12-U5
	Unit Name : Keyboard Unit		IC 731 (A,72,89) Flash ROM Unit	PEB055A8
	Unit Number: CWX4023		IC 741 (A,84,52) IC	MX25L4006EM2I-12G
D	Unit Name : CD Core Unit (S11.6STD)		IC 881 (A,54,93) IC	337S3959
			IC 901 (A,13,63) Regulator IC	BD9876EFJ
			IC 931 (A,27,57) Regulator IC	S-1172B33-E6
			IC 941 (A,140,42) IC	NJM2388F84
			IC 991 (A,116,110) IC	TPD1052F
			IC 992 (A,90,81) IC(C)	TC7MB3257FK
			Q 181 (A,92,109) Transistor	LSCR523UB
			Q 182 (A,99,110) FET	RSF014N03
			Q 183 (A,93,105) Transistor	DRC9A43E0
			Q 191 (A,109,109) Transistor	LSAR523UB
			Q 192 (A,110,104) Transistor	LTC014EEB
			Q 301 (A,11,130) Transistor	IMH23
			Q 302 (A,19,130) Transistor	IMH23
			Q 303 (A,28,130) Transistor	IMH23
			Q 321 (A,91,123) Transistor	LTC014YEB
			Q 351 (A,59,133) Transistor	LSCR523UB
			Q 352 (A,61,129) Chip Transistor	RN4983
			Q 353 (A,66,130) Transistor	LTC014EEB
			Q 471 (A,119,88) Transistor(C)	2SB1132
			Q 473 (A,118,82) Transistor(C)	LTC014EEB
			Q 701 (A,34,84) Transistor	LSAR523UB
			Q 771 (A,155,41) Transistor	2SD2396
			Q 772 (A,153,46) Chip Transistor	RN4983
			Q 831 (A,114,28) Transistor	2SA1577
			Q 832 (A,114,31) Transistor	LTC143EUB
			Q 841 (A,107,29) Transistor	LSAR523UB
			Q 842 (A,110,31) Transistor	LTC014EEB
			Q 851 (A,53,40) Chip Transistor(C)	2SB1689
			Q 852 (A,55,40) Transistor(C)	LTC014EEB
			Q 853 (A,58,40) Transistor(C)	DTA123EU
E	MISCELLANEOUS			
	IC 151 (A,81,115) IC	PM9012A		
	IC 181 (A,100,105) IC	TK11840L		
	IC 201 (A,40,110) IC	AN33014UA		
	IC 221 (A,14,110) IC(C)	AN33014UA		
	IC 271 (A,27,48) Regulator IC(B,C)	S-1172B18-E6		
	IC 281 (A,20,48) Regulator IC(B,C)	S-1170B33UC-OTS		
	IC 321 (A,81,142) IC	PA2030A		
	IC 371 (A,62,88) IC	WM8761BGED		
	IC 391 (A,136,60) Regulator IC	NJM2885DL1-05		
F	IC 401 (A,141,87) IC	TDA7706		
	IC 531 (A,146,51) Regulator IC	S-1155B33-U5		
	IC 541 (A,150,57) Regulator IC	S-1172B12-E6		
	IC 551 (A,148,65) Regulator IC(C)	S-1172B33-E6		

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
Q 881	(A,50,87) Transistor	LSAR523UB		L 651	(A,83,63) Chip Beads	VTL1126	
Q 921	(A,20,54) Transistor	2SD2153					
Q 922	(A,21,59) Chip Transistor	RN4983		L 653	(A,44,53) Chip Ferrite Bead DTL1107		
Q 931	(A,42,52) Chip Transistor	RN1903		L 701	(A,31,78) Chip Ferrite Bead DTL1107		A
Q 951	(A,143,130) Chip Transistor	HN1C01FU		L 731	(B,75,88) Inductor	CTF1389	
				L 851	(B,55,36) Inductor(C)	CTF1389	
Q 961	(A,93,120) Transistor	LTC014EEB		L 901	(A,10,74) Inductor	CTH1521	
D 181	(B,94,106) Diode	RKZ15KG(B2)		L 981	(A,114,141) Choke Coil 600 uH	CTH1432	
D 182	(A,97,113) Diode	RB551VM-30					
D 201	(A,45,109) Diode	RB070M-30		X 401	(A,152,85) Resonator 36.480 MHz	CSS1805	
D 202	(B,58,119) Diode	RB050LA-30		X 601	(A,93,66) Resonator 20.000 MHz	CSS1795	
D 221	(A,20,109) Diode(C)	RB070M-30		X 651	(A,85,66) Resonator 12.000 MHz	YSS5005	
				X 652	(A,77,84) Resonator 16.93 MHz	CSS1794	
D 351	(A,56,129) Diode	DA2J101		P 301	(A,37,128) Poly Switch	FSMD075-24R	
D 352	(A,56,131) Diode	RKZ8.2KG(B2)					
D 353	(A,62,132) Diode	DAN202UM		P 401	(A,152,112) Surge Absorber	IMSA-6803-01Y900	
D 401	(A,149,102) Diode	RN731VN		△P471	(A,127,99) Fuse 250 mA(C)	CEK1276	B
D 402	(A,148,95) Diode	RN731VN		BZ601	(A,87,29) Buzzer	CPV1062	
				VA121	(A,38,132) Varistor	VR105C5R0AAA	
D 541	(B,149,50) Diode	CRG03					
D 542	(B,142,50) Diode	CRG03		VA122	(A,50,133) Varistor	VR105C5R0AAA	
D 561	(A,12,89) Diode	RB056L-40		VA123	(A,41,131) Varistor(B,C)	VR105C5R0AAA	
D 562	(B,11,90) Diode	CRG03		VA124	(A,40,132) Varistor(B,C)	VR105C5R0AAA	
D 603	(A,127,50) Diode	DA2J101		VA201	(B,161,137) Varistor	EZJZ1V800AM	
D 771	(A,156,46) Diode	RKZ8.2KG(B2)		VA202	(B,165,137) Varistor	EZJZ1V800AM	
D 801	(B,106,22) Diode	DZ2S068C		VA221	(B,161,136) Varistor(C)	EZJZ1V800AM	
D 802	(B,108,22) Diode	DZ2S068C		VA222	(B,165,136) Varistor(C)	EZJZ1V800AM	
D 803	(B,110,22) Diode	DZ2S068C		VA501	(A,156,106) Varistor(C)	AVRL101A1R1NTB	C
D 901	(A,12,68) Diode	RB056L-40					
				VA801	(B,102,22) Varistor	EZJZ1V270RM	
D 902	(B,8,72) Diode	1SR154-400		VA802	(B,113,22) Varistor	EZJZ1V270RM	
D 903	(B,25,54) Diode	CRG03		VA803	(B,119,22) Varistor	EZJZ1V270RM	
D 922	(B,20,56) Diode	RKZ5.6KG(B2)		VA804	(B,117,22) Varistor	EZJZ1V270RM	
D 923	(B,12,44) Diode	DA2J101					
D 924	(B,14,50) Diode(C)	DB2J31400		VA805	(B,115,22) Varistor	EZJZ1V270RM	
D 941	(A,126,56) Diode	DAN202UM		VA806	(B,121,22) Varistor	EZJZ1V270RM	
				VA807	(B,122,22) Varistor	EZJZ1V270RM	
D 951	(A,134,126) Diode	HZU7L(C3)		VA808	(B,120,12) Varistor	EZJZ1V270RM	
D 952	(A,140,131) Diode	HZU7L(A1)		U 501	(A,162,77) WWR C-TUN Unit(A,B)	CWE2364	
D 961	(B,104,125) Diode	CRG03			(A,162,77) WWR C-TUN Unit(C)	CWE2363	
D 981	(A,135,132) Diode	1SR154-400					
D 982	(A,135,128) Diode	1SR154-400		CN251	(A,48,34) Connector(B,C)	CKS6346	D
				CN751	(A,116,38) Connector	VKN1192	
D 991	(B,95,127) Diode	CRG03		CN802	(A,111,4) Connector	CKS6452	
D 992	(B,119,141) Diode	CRG03		JA121	(A,45,138) Jack(A)	CKS6437	
L 151	(A,92,115) Inductor	LCTAW6R8J2520					
L 181	(A,104,110) Choke Coil 47 uH	CTH1388		JA122	(A,45,141) Jack(B,C)	YKS5035	
L 201	(A,154,125) Inductor	CTF1713		JA201	(A,163,135) USB Jack(A,B)	CKN1091	
					(A,163,135) Connector(C)	YKS5043	
L 202	(A,50,106) Inductor	CTH1524		JA301	(A,22,138) Pin Jack	XKB7001	
L 221	(A,154,123) Inductor(C)	CTF1713					
L 222	(A,24,106) Inductor(C)	CTH1524		JA401	(A,157,116) ANT Pigtail Cable	YDH5001	
L 251	(A,14,35) Inductor(B,C)	CTF1786		JA501	(A,152,106) Connector(C)	CKX1103	
L 252	(A,14,33) Inductor(B,C)	CTF1786		JA851	(A,66,21) Connector(C)	YKS5040	E
				JA981	(A,116,141) Connector	CKM1613	
L 371	(A,58,96) Chip Ferrite Bead DTL1107						
L 402	(A,142,97) Inductor	CTF1786					
L 403	(A,139,99) Inductor	CTF1786					
L 404	(A,149,98) Chip Coil	LCTAWR15J2520					
L 405	(A,146,99) Chip Coil	LCTAWR27J2520					
L 406	(A,140,101) Inductor	CTF1389					
L 409	(A,133,95) Inductor	LCTC1R5K1608					
L 410	(A,151,92) Inductor	CTF1786					
L 411	(A,151,91) Inductor	CTF1786					
L 412	(A,128,87) Chip Coil	LCTAW470J2520					
L 414	(A,132,78) Inductor	CTF1786					
L 415	(A,146,78) Inductor	CTF1786					
L 501	(A,157,104) Inductor(C)	LCYBR22J1608					
L 561	(A,10,95) Inductor	CTH1521					

RESISTORS

R 121	(A,45,129)	RS1/10SR102J
R 122	(A,44,129)	RS1/10SR102J
R 151	(A,72,107)	RS1/16SS223J
R 152	(A,86,107)	RS1/16SS223J
R 153	(A,73,107)	RS1/16SS331J
R 154	(A,73,124)	RS1/16SS102J
R 155	(A,72,124)	RS1/16SS102J
R 156	(A,73,123)	RS1/16SS102J
R 181	(A,94,113)	RS1/16SS681J
R 182	(B,106,104)	RS1/10SR0R0J

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	R 183	(A,106,105)	RS1/16SS3003D				
	R 184	(A,105,103)	RS1/16SS1002D	R 327	(A,82,127)	RS1/16SS562J	
	R 185	(A,97,108)	RS1/16SS512J	R 328	(A,84,127)	RS1/16SS562J	
	R 186	(A,99,108)	RS1/16SS0R0J	R 329	(B,75,131)	RS1/10SR562J	
	R 187	(B,100,107)	RS1/10SR621J	R 330	(B,70,131)	RS1/10SR103J	
				R 331	(B,73,131)	RS1/10SR103J	
	R 189	(A,95,105)	RS1/16SS331J				
	R 190	(A,95,106)	RS1/16SS4301D	R 350	(A,95,133)	RS1/16SS103J	
	R 191	(A,95,104)	RS1/16SS222J	R 351	(A,62,127)	RS1/16SS473J	
	R 194	(A,110,106)	RS1/16SS102J	R 352	(A,56,133)	RS1/16SS473J	
	R 195	(A,109,111)	RS1/16SS103J	R 353	(B,57,132)	RS1/10SR473J	
				R 354	(A,56,134)	RS1/16SS104J	
	R 196	(A,94,104)	RS1/16SS3302D				
	R 202	(A,55,103)	RS1/10SR681J	R 355	(A,69,129)	RS1/16SS103J	
	R 203	(A,55,104)	RS1/10SR681J	R 356	(B,57,131)	RS1/10SR102J	
	R 204	(A,47,113) 0.056 ohm	ACN7160	R 358	(A,68,131)	RS1/16SS681J	
B	R 206	(A,40,103)	RS1/16SS4702D	R 371	(A,78,96)	RS1/16SS821J	
				R 372	(A,78,94)	RS1/16SS821J	
	R 207	(A,37,103)	RS1/16SS224J				
	R 208	(A,33,117)	RS1/16SS152J	R 401	(A,144,103)	RS1/16SS105J	
	R 210	(A,34,116)	RS1/16SS3302D	R 402	(A,152,102)	RS1/16SS221J	
	R 211	(A,34,114)	RS1/16SS8201D	R 403	(A,151,95)	RS1/16SS751J	
	R 212	(A,35,116)	RS1/16SS223J	R 404	(A,131,95)	RS1/16SS331J	
				R 405	(A,135,95)	RS1/16SS105J	
	R 218	(A,151,126)	RS1/16SS0R0J				
	R 219	(A,151,125)	RS1/16SS0R0J	R 406	(A,130,91)	RS1/16SS471J	
	R 222	(A,29,104) (C)	RS1/10SR681J	R 407	(A,131,90)	RS1/16SS330J	
	R 223	(A,29,103) (C)	RS1/10SR681J	R 408	(A,131,88)	RS1/16SS681J	
C	R 224	(A,22,113) 0.056 ohm(C)	ACN7160	R 410	(A,128,80)	RS1/4SA8R2J	
				R 411	(A,126,80)	RS1/4SA8R2J	
	R 226	(A,14,103) (C)	RS1/16SS4702D				
	R 227	(A,11,103) (C)	RS1/16SS224J	R 413	(A,137,74)	RS1/16SS102J	
	R 228	(A,8,117) (C)	RS1/16SS152J	R 414	(A,143,77) (A,B)	RS1/16SS221J	
	R 230	(A,8,116) (C)	RS1/16SS3302D	R 416	(A,132,77)	RS1/16SS0R0J	
	R 231	(A,8,114) (C)	RS1/16SS8201D	R 417	(A,138,72)	RS1/16SS472J	
				R 418	(A,138,74)	RS1/16SS472J	
	R 232	(A,10,116) (C)	RS1/16SS223J	R 419	(A,150,77) (C)	RS1/16SS0R0J	
	R 238	(A,151,124) (C)	RS1/16SS0R0J				
	R 239	(A,151,123) (C)	RS1/16SS0R0J	R 420	(B,144,105)	RS1/8SQ0R0J	
	R 251	(B,55,29) (B,C)	RS1/10SR221J	R 421	(B,152,100) (A,B)	RS1/8SQ0R0J	
	R 252	(B,55,32) (B,C)	RS1/10SR221J	R 422	(B,148,100) (A,B)	RS1/8SQ0R0J	
D				R 423	(B,159,99) (C)	RS1/8SQ0R0J	
	R 253	(B,55,31) (B,C)	RS1/10SR221J	R 424	(A,129,98)	RS1/8SQ0R0J	
	R 254	(A,50,41) (B,C)	RS1/16SS102J				
	R 255	(A,49,41) (B,C)	RS1/16SS102J	R 425	(A,139,106)	RS1/8SQ0R0J	
	R 256	(A,16,36) (B,C)	RS1/16SS102J	R 427	(A,157,100) (C)	RS1/10SR0R0J	
	R 257	(B,48,43) (B,C)	RS1/10SR101J	R 428	(A,157,98) (C)	RS1/10SR0R0J	
				R 429	(A,157,96) (C)	RS1/10SR0R0J	
	R 258	(B,46,43) (B,C)	RS1/10SR101J	R 472	(A,122,91) (C)	RS1/10SR0R0J	
	R 259	(B,44,43) (B,C)	RS1/10SR102J				
	R 260	(A,16,32) (B,C)	RS1/16SS0R0J	R 473	(A,119,85) (C)	RS1/16SS1003F	
	R 301	(A,8,129)	RS1/16SS820J	R 474	(A,117,84) (C)	RS1/16SS1802D	
	R 302	(A,14,129)	RS1/16SS820J	R 475	(A,123,82) (C)	RS1/4SA471J	
	R 303	(A,16,129)	RS1/16SS820J	R 476	(A,120,82) (C)	RS1/4SA471J	
				R 478	(A,123,87) (C)	RS1/10SR103J	
E	R 304	(A,23,129)	RS1/16SS820J				
	R 305	(A,25,129)	RS1/16SS820J	R 501	(A,144,76) (A,B)	RS1/16SS101J	
	R 306	(A,31,129)	RS1/16SS820J	R 502	(A,150,76) (A,B)	RS1/16SS101J	
	R 307	(A,8,130)	RS1/16SS223J	R 503	(A,147,74) (A,B)	RS1/16SS101J	
	R 308	(A,14,130)	RS1/16SS223J	R 504	(A,144,74) (A,B)	RS1/16SS101J	
				R 505	(A,134,104) (C)	RS1/10SR0R0J	
	R 309	(A,16,130)	RS1/16SS223J	R 506	(A,157,93)	RS1/16SS101J	
	R 310	(A,23,130)	RS1/16SS223J				
	R 311	(A,25,130)	RS1/16SS223J	R 507	(A,157,91)	RS1/16SS101J	
	R 312	(A,31,130)	RS1/16SS223J	R 508	(A,157,89)	RS1/16SS101J	
	R 321	(A,78,125)	RS1/16SS362J	R 509	(A,157,87)	RS1/16SS101J	
				R 512	(A,156,68)	RS1/16SS101J	
F	R 322	(A,79,125)	RS1/16SS362J	R 513	(A,156,67)	RS1/16SS101J	
	R 323	(A,82,125)	RS1/16SS362J				
	R 324	(A,83,125)	RS1/16SS362J	R 514	(A,156,66)	RS1/16SS101J	
	R 325	(A,77,127)	RS1/16SS562J	R 531	(A,149,51) (C)	RS1/10SR102J	
	R 326	(A,79,127)	RS1/16SS562J	R 561	(B,20,93)	RS1/10SR102J	

1

2

3

4

5		6		7		8		
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>		
R 563	(A,9,82)	RS1/16SS333J		R 688	(A,86,76)	RS1/16SS473J		
R 564	(A,7,82)	RS1/16SS103J		R 689	(A,85,77)	RS1/16SS473J		
R 565	(A,7,83)	RS1/16SS103J						
R 601	(A,92,35)	RS1/16SS102J		R 690	(B,58,72)	RS1/10SR473J		A
R 602	(B,102,71)	RS1/10SR154J		R 691	(B,84,63)	RS1/10SR0R0J		
R 603	(A,98,56)	RS1/16SS222J		R 692	(B,67,80)	RS1/10SR473J		
R 604	(A,95,65)	RS1/16SS105J		R 693	(A,56,64) (C)	RS1/16SS221J		
R 606	(B,94,62) (B,C)	RS1/10SR104J		R 701	(B,43,76)	RS1/10SR473J		
R 607	(A,98,55)	RS1/16SS104J		R 702	(A,43,79)	RS1/16SS472J		
R 608	(A,99,54)	RS1/16SS104J		R 703	(A,41,79)	RAB4CQ220J		
R 609	(A,92,71)	RS1/16SS104J		R 704	(A,37,79)	RAB4CQ220J		
R 610	(A,99,76)	RS1/16SS104J		R 705	(A,34,79)	RAB4CQ220J		
R 611	(A,93,60)	RS1/16SS104J		R 707	(A,37,83)	RS1/16SS472J		
R 612	(A,93,58)	RS1/16SS104J		R 708	(A,41,61)	RS1/16SS220J		
R 613	(A,105,82)	RS1/16SS104J		R 710	(A,37,61)	RAB4CQ220J		B
R 614	(A,96,64)	RS1/16SS104J		R 711	(A,34,61)	RAB4CQ220J		
R 615	(A,96,66)	RS1/16SS101J		R 731	(A,73,93)	RS1/16SS473J		
R 618	(B,106,52)	RS1/10SR472J		R 732	(B,71,92)	RS1/10SR473J		
R 619	(A,112,76)	RS1/16SS103J		R 733	(A,72,93)	RS1/16SS473J		
R 620	(B,106,64)	RS1/10SR104J		R 734	(A,78,90)	RS1/16SS473J		
R 621	(A,104,54)	RS1/16SS104J		R 735	(A,78,87)	RS1/16SS473J		
R 622	(B,93,50)	RS1/10SR104J		R 741	(A,82,56)	RS1/16SS101J		
R 623	(B,95,50)	RS1/10SR104J		R 742	(A,74,49)	RS1/16SS101J		
R 624	(B,108,77) (B,C)	RS1/10SR104J		R 743	(A,79,53)	RS1/16SS101J		
R 627	(A,110,53) (C)	RS1/16SS104J		R 744	(A,79,54)	RS1/16SS101J		
R 628	(A,116,68)	RS1/16SS104J		R 745	(A,85,56)	RS1/16SS473J		C
R 631	(A,116,64)	RS1/16SS104J		R 751	(B,110,33)	RS1/10SR472J		
R 636	(A,124,46)	RS1/16SS104J		R 752	(B,106,34)	RS1/10SR473J		
R 638	(A,123,46)	RS1/16SS152J		R 753	(B,113,33)	RS1/10SR472J		
R 639	(A,122,57)	RS1/16SS104J		R 754	(A,116,41)	RS1/16SS104J		
R 642	(B,94,64)	RS1/10SR104J		R 755	(B,115,33)	RS1/10SR472J		
R 643	(B,98,70)	RS1/10SR104J		R 756	(A,104,39)	RS1/16SS221J		
R 647	(A,104,82)	RS1/16SS103J		R 757	(A,104,40)	RS1/16SS221J		
R 649	(A,115,57) (C)	RS1/16SS0R0J		R 758	(A,104,38)	RS1/16SS101J		
R 657	(A,87,62)	RS1/16SS101J		R 759	(A,110,41)	RS1/16SS221J		
R 660	(B,84,69)	RS1/10SR221J		R 760	(A,104,37)	RS1/16SS101J		
R 661	(B,58,86)	RS1/10SR221J		R 761	(A,115,41)	RS1/16SS102J		D
R 662	(A,84,62)	RS1/16SS101J		R 762	(A,117,34)	RS1/16SS151J		
R 663	(A,83,67)	RS1/16SS332J		R 763	(A,119,41)	RS1/16SS151J		
R 664	(B,77,71)	RS1/10SR473J		R 764	(A,119,34)	RS1/16SS151J		
R 666	(B,77,75) (B,C)	RS1/10SR473J		R 765	(A,123,41)	RS1/16SS221J		
R 667	(B,81,74) (A)	RS1/10SR473J		R 766	(A,122,41)	RS1/16SS104J		
R 669	(A,69,81)	RS1/16SS101J		R 767	(B,105,37)	RS1/10SR104J		
R 670	(A,70,83)	RS1/16SS101J		R 771	(B,143,41)	RS1/10SR473J		
R 671	(A,71,83)	RS1/16SS101J		R 772	(B,143,43)	RS1/10SR103J		
R 672	(A,72,83)	RS1/16SS101J		R 773	(A,151,46)	RS1/10SR821J		
R 673	(A,73,81)	RS1/16SS101J		R 803	(A,107,22)	RS1/10SR101J		
R 674	(A,74,81)	RS1/16SS101J		R 804	(A,109,22)	RS1/10SR101J		E
R 675	(A,65,81)	RS1/16SS221J		R 805	(A,105,22)	RS1/10SR222J		
R 676	(A,65,82)	RS1/16SS221J		R 806	(A,111,22)	RS1/10SR222J		
R 677	(A,67,81)	RS1/16SS221J		R 807	(A,117,22)	RS1/10SR222J		
R 678	(B,69,81)	RS1/10SR221J		R 808	(A,116,22)	RS1/10SR222J		
R 679	(A,76,81)	RS1/16SS332J		R 809	(A,115,22)	RS1/10SR222J		
R 680	(A,37,89)	RS1/16SS0R0J		R 810	(A,119,22)	RS1/10SR222J		
R 681	(A,84,81)	RAB4CQ473J		R 811	(A,120,22)	RS1/10SR222J		
R 682	(A,83,69)	RS1/16SS153J		R 812	(B,95,20)	RS1/10SR102J		
R 683	(A,83,70)	RS1/16SS153J		R 813	(B,95,22)	RS1/10SR104J		
R 684	(A,88,71)	RS1/16SS153J		R 831	(B,100,24)	RS1/10SR1R0J		F
R 685	(A,88,72)	RS1/16SS153J		R 832	(B,109,26)	RS1/10SR473J		
R 686	(A,83,72)	RS1/16SS473J		R 833	(B,116,29)	RS1/10SR332J		
R 687	(A,83,73)	RS1/16SS473J		R 834	(A,117,28)	RS1/10SR103J		

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

R 841	(A,105,29)	RS1/10SR472J
R 842	(B,106,30)	RS1/10SR102J
R 843	(B,105,30)	RS1/10SR103J
R 844	(A,78,37)	RS1/16SS0R0J
R 845	(A,98,33)	RS1/16SS472J
R 851	(B,59,39) (C)	RS1/10SR221J
R 852	(A,60,38) (C)	RS1/16SS221J
R 854	(A,70,37) (C)	RS1/16SS221J
R 855	(B,67,44) (C)	RS1/10SR221J
R 856	(B,69,44) (C)	RS1/10SR221J
R 857	(A,55,37) (C)	RS1/16SS102J
R 858	(B,54,41) (C)	RS1/10SR821J
R 859	(B,53,44) (C)	RS1/10SR103J
R 860	(A,70,38)	RS1/16SS473J
R 862	(A,69,38) (C)	RS1/16SS221J
R 863	(B,65,44)	RS1/10SR473J
R 864	(B,60,45) (A,B)	RS1/10SR0R0J
R 865	(B,71,44)	RS1/10SR473J
R 866	(B,60,36)	RS1/10SR473J
R 867	(B,62,36)	RS1/10SR473J
R 869	(B,62,45)	RS1/10SR473J
R 881	(A,47,87)	RS1/10SR103J
R 882	(A,55,96)	RS1/16SS473J
R 883	(A,54,96)	RS1/16SS222J
R 884	(A,53,90)	RS1/16SS222J
R 885	(A,54,89)	RS1/16SS272J
R 886	(A,53,85)	RS1/16SS472J
R 887	(A,53,96)	RS1/16SS101J
R 888	(A,53,89)	RS1/16SS101J
R 889	(A,56,89)	RS1/16SS472J
R 901	(B,26,72)	RS1/10SR102J
R 902	(A,7,61)	RS1/16SS512J
R 903	(A,9,62)	RS1/16SS473J
R 904	(A,7,62)	RS1/16SS103J
R 905	(A,6,63)	RS1/16SS103J
R 921	(B,21,58)	RS1/10SR223J
R 922	(B,21,60)	RS1/10SR332J
R 931	(A,31,52)	RS1/16SS473J
R 941	(B,130,43)	RS1/10SR473J
R 951	(A,142,133)	RS1/16SS103J
R 952	(A,141,128)	RS1/16SS104J
R 953	(A,142,134)	RS1/16SS473J
R 954	(A,142,130)	RS1/16SS473J
R 955	(B,120,128)	RS1/10SR472J
R 956	(A,119,129)	RS1/4SA102J
R 961	(B,99,126)	RS1/10SR103J
R 962	(A,114,129)	RS1/4SA102J
R 991	(A,118,115)	RS1/16SS103J
R 992	(A,116,114)	RS1/16SS103J
R 993	(A,114,113)	RS1/16SS105J
R 1001	(A,87,76) (A,B)	RS1/16SS220J
R 1002	(A,88,76) (C)	RS1/16SS180J
R 1003	(A,90,77) (A,B)	RS1/16SS220J
R 1004	(A,91,77) (C)	RS1/16SS180J
R 1006	(A,87,78) (C)	RS1/16SS102J
R 1007	(A,88,85) (C)	RS1/16SS102J
R 1008	(A,86,87) (C)	RS1/16SS7502D
R 1009	(A,82,88) (C)	RS1/16SS3302D
R 1010	(A,82,87) (C)	RS1/16SS1002D
R 1011	(A,88,88) (C)	RS1/16SS1003D

R 1012	(A,88,87) (C)	RS1/16SS1003D
R 1013	(A,84,87) (C)	RS1/16SS1003D
R 1014	(A,83,87) (C)	RS1/16SS1003D

CAPACITORS

C 121	(B,55,148)	CKSRYB102K50
C 122	(B,37,129)	CKSRYB102K50
C 123	(B,39,132)	CKSRYB102K50
C 151	(A,74,113)	CKSRYB105K10
C 152	(A,87,112)	CKSRYB105K10
C 153	(A,74,112)	CKSRYB105K10
C 154	(B,92,111)	CKSRYB105K10
C 159	(A,74,110)	CKSRYB105K10
C 160	(A,87,109)	CKSRYB105K10
C 161	(A,74,109) 2.2 uF	CCG1205
C 163	(A,75,115)	CKSRYB105K10
C 164	(A,86,114)	CKSRYB105K10
C 165	(A,87,117) 10 uF	CCG1192
C 166	(A,89,115) 10 uF	CCG1192
C 168	(A,86,125)	CKSQYB225K16
C 170	(A,88,122)	CKSQYB225K16
C 181	(A,91,108)	CKSSYB104K16
C 182	(B,92,107)	CKSRYB104K16
C 184	(A,105,105)	CKSSYB103K16
C 185	(A,96,110) 4.7 uF	CCG1222
C 186	(B,96,102)	CKSRYB104K16
C 187	(B,100,103)	CKSRYB104K16
C 188	(B,100,105) 4.7 uF	CCG1222
C 189	(A,96,106)	CCSSCH271J50
C 201	(A,46,118)	CKSSYB104K10
C 202	(A,51,112) 22 uF	CCG1254
C 204	(A,38,103)	CKSSYB102K50
C 205	(A,42,104)	CKSSYB104K16
C 206	(A,36,103)	CKSSYB472K25
C 207	(A,41,103)	CKSSYB104K16
C 208	(A,32,116)	CCSSCH151J50
C 209	(A,38,115) 1 uF	DCH1246
C 210	(A,37,116)	CKSSYB472K25
C 211	(A,43,117) 10 uF	DCH1165
C 212	(A,35,115)	CCSSCH270J50
C 213	(A,61,109)	CEVW101M25
C 214	(A,39,116)	CKSSYB104K16
C 215	(A,52,117) Capacitor	CEHVW101M6R3
C 216	(A,47,118) (A,B)	CKSSYB102K50
C 217	(B,66,112) 22 uF	CCG1254
C 222	(A,25,112) 22 uF(C)	CCG1254
C 224	(A,12,103) (C)	CKSSYB102K50
C 225	(A,16,104) (C)	CKSSYB104K16
C 226	(A,10,103) (C)	CKSSYB472K25
C 227	(A,15,103) (C)	CKSSYB104K16
C 228	(A,7,116) (C)	CCSSCH151J50
C 229	(A,13,115) 1 uF(C)	DCH1246
C 230	(A,12,116) (C)	CKSSYB472K25
C 231	(A,18,117) 22 uF(C)	CCG1254
C 232	(A,10,115) (C)	CCSSCH270J50
C 233	(A,14,117) (C)	CKSSYB104K16
C 234	(A,27,117) (C)	XCEVW101M16
C 251	(A,36,48) (B,C)	XCEVW471M10
C 253	(A,16,34) (B,C)	CKSRYB105K16
C 255	(B,40,32) 4.7 uF(B,C)	CCG1212

1

2

3

4

5			6			7			8		
Circuit Symbol and No.			Part No.			Circuit Symbol and No.			Part No.		
C 256	(B,40,34)	4.7 uF(B,C)	CCG1212			C 424	(A,149,93)		CKSRYB224K16		
C 262	(B,49,34)	(B,C)	CCSRCH270J50			C 426	(A,133,93)		CKSSYB103K16		
						C 427	(A,148,90)		CKSSYB104K10		
C 264	(B,55,34)		CKSRYB104K16			C 428	(A,130,92)	10 uF	CCG1192		A
C 272	(B,26,45)	4.7 uF(B,C)	CCG1212								
C 273	(B,26,50)	4.7 uF(B,C)	CCG1212			C 429	(A,150,90)		CKSRYB105K10		
C 281	(B,22,45)	4.7 uF(B,C)	CCG1212			C 430	(A,131,91)		CKSSYB104K10		
C 284	(B,18,45)	4.7 uF(B,C)	CCG1212			C 431	(A,154,88)		CKSSYB472K25		
						C 432	(A,154,90)		CKSSYB472K25		
C 301	(A,9,126)	10 uF	CCG1192			C 433	(A,130,90)		CCSSCH101J50		
C 302	(A,13,126)	10 uF	CCG1192								
C 303	(A,17,126)	10 uF	CCG1192			C 434	(A,135,94)		CKSSYB104K10		
C 304	(A,22,126)	10 uF	CCG1192			C 435	(A,128,90)		CKSSYB103K16		
C 305	(A,26,126)	10 uF	CCG1192			C 436	(A,152,87)		CCSSCH100D50		
						C 437	(A,149,87)		CKSSYB104K10		
C 306	(A,30,126)	10 uF	CCG1192			C 438	(A,132,88)		CCSSCH820J50		
C 307	(A,8,131)		CKSSYB103K16								
C 308	(A,14,131)		CKSSYB103K16			C 441	(A,130,82)		CKSRYB474K10		B
C 309	(A,16,131)		CKSSYB103K16			C 443	(A,131,80)		CCSRCH471J50		
C 310	(A,23,131)		CKSSYB103K16			C 444	(A,152,82)		CCSSCH100D50		
						C 445	(A,153,79)		CKSSYB104K10		
C 311	(A,25,131)		CKSSYB103K16			C 447	(A,150,79)	2.2 uF	CCG1205		
C 312	(A,31,131)		CKSSYB103K16								
C 315	(B,33,142)		CKSRYB102K50			C 449	(A,148,82)	(A,B)	CKSSYB104K10		
C 325	(B,77,131)		CKSRYB224K16			C 450	(A,145,80)		CKSSYB104K10		
C 326	(B,79,131)		CKSRYB224K16			C 451	(A,135,79)		CKSSYB102K50		
						C 452	(A,144,80)	1 uF	DCH1246		
C 327	(B,82,131)		CKSRYB224K16			C 453	(A,144,78)	2.2 uF	CCG1205		
C 328	(B,84,131)		CKSRYB224K16								
C 333	(A,62,136)		CKSRYB105K16			C 454	(A,138,79)	(A,B)	CKSSYB104K10		C
C 335	(B,61,137)		CKSRYB102K50				(A,138,79)	(C)	CKSSYB102K50		
C 337	(B,63,141)		CKSRYB103K50			C 456	(A,152,113)	(A,B)	CCSSCJ3R0C50		
						C 457	(A,140,99)	(C)	CKSSYB102K50		
C 338	(B,63,143)	10 uF	CCG1236			C 459	(A,128,84)		CCSSCH100D50		
C 339	(B,88,143)		CKSRYB104K16								
C 340	(A,128,123)	3 300 uF/16 V(A,B)	CCH1486			C 461	(A,156,92)	(A,B)	CKSSYB104K10		
	(A,128,123)	3 300 uF/16 V(C)	CCH2046			C 472	(A,131,103)	(C)	CKSRYB104K16		
C 344	(B,66,137)		CKSRYB103K50			C 474	(A,123,78)	10 uF(A,B)	CCG1192		
C 351	(A,50,129)		XCEVW220M16			C 507	(A,156,103)	(C)	CKSSYB104K16		
						C 508	(A,155,103)	(C)	CCSSCH101J50		
C 352	(B,63,133)	2.2 uF	CCG1205			C 511	(B,154,74)	(A,B)	CCSRCH220J50		
C 375	(A,67,90)	4.7 uF	CCG1212								
C 376	(A,58,93)		CKSSYB103K16			C 512	(B,156,76)	(A,B)	CCSRCH220J50		D
C 377	(A,59,95)	4.7 uF	CCG1212			C 513	(A,157,70)	(A,B)	CCSSCH220J50		
C 378	(B,65,96)		CKSRYB104K16			C 531	(A,144,45)	4.7 uF(C)	CCG1212		
						C 532	(A,142,46)	(C)	CKSRYB102K50		
C 379	(A,80,96)		CKSSYB182K50			C 533	(A,146,45)	4.7 uF	CCG1212		
C 380	(A,80,94)		CKSSYB182K50			C 534	(B,121,81)	10 uF(C)	DCH1201		
C 391	(A,141,57)	4.7 uF	CCG1212			C 535	(A,141,54)	(A,B)	CKSRYB102K50		
C 393	(A,130,57)		CKSQYB474K16			C 537	(A,142,54)	10 uF(A,B)	CCG1192		
C 401	(A,147,102)		CCSSCH330J50								
						C 541	(A,145,56)	4.7 uF	CCG1212		
C 402	(A,143,100)		CKSSYB103K16			C 542	(B,152,64)	4.7 uF	CCG1212		
C 403	(A,148,100)		CCSSCH6R0D50			C 551	(A,143,64)	4.7 uF(C)	CCG1212		
C 404	(A,150,100)		CKSSYB103K16			C 552	(B,152,67)	4.7 uF(C)	CCG1212		
C 405	(A,141,97)		CKSSYB104K10			C 561	(A,17,99)	(A,B)	CKSSYB102K50		E
C 406	(A,137,96)		CKSSYB104K10			C 562	(A,16,99)		CKSRYB105K16		
						C 563	(A,22,95)		CEVQW221M6R3		
C 410	(A,150,97)		CKSSYB103K16								
C 411	(A,139,97)		CKSSYB104K10			C 564	(A,7,84)		CKSSYB102K50		
C 412	(A,152,97)		CKSSYB103K16			C 565	(A,8,83)		CKSSYB682K25		
C 413	(A,137,97)		CKSSYB103K16			C 566	(A,18,84)		CKSSYB103K16		
C 414	(A,135,98)	10 uF	CCG1192			C 568	(A,18,86)		CKSRYB105K16		
						C 569	(A,22,87)	47 uF	CCG1256		
C 415	(A,134,98)	(A,B)	CCSSCK2R0C50			C 571	(A,27,100)	10 uF(C)	CCG1192		
C 416	(B,134,85)	(A,B)	RS1/10SR0R0J								
C 419	(A,135,96)		CKSSYB223K16			C 601	(A,92,68)		CCSSCH100D50		
C 420	(A,139,95)		CKSSYB103K16			C 602	(A,92,64)		CCSSCH120J50		F
C 421	(A,144,95)		CKSSYB104K10			C 604	(A,92,70)		CKSSYB104K10		
C 422	(A,146,97)		CKSSYB103K16			C 605	(B,99,65)		CKSRYB105K10		
						C 608	(B,113,64)		CKSRYB105K10		
C 423	(A,143,97)		CKSRYB105K10								

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

A	C 610	(A,103,50)	CKSRYB104K50	
	C 612	(B,120,47)	CKSRYB105K10	
	C 615	(B,97,65) 10 uF	DCH1201	
	C 651	(B,68,58)	CKSRYB104K16	
	C 652	(B,76,61)	CKSRYB104K16	
	C 653	(B,85,56)	CKSRYB104K16	
	C 654	(B,61,58)	CKSRYB104K16	
	C 655	(B,67,62)	CKSRYB104K16	
	C 656	(B,72,62)	CKSRYB104K16	
	C 657	(B,78,57)	CKSRYB104K16	
B	C 658	(A,56,65) (C)	CCSSCH100D50	
	C 659	(B,81,63)	CKSRYB104K16	
	C 660	(B,85,60)	CCSRCH100D50	
	C 661	(B,59,62)	CKSRYB104K16	
	C 662	(A,86,64)	CCSSCH120J50	
	C 663	(B,81,67)	CKSRYB104K16	
	C 664	(A,57,65) (C)	CCSSCH100D50	
	C 665	(B,59,66)	CKSRYB104K16	
	C 666	(B,81,65)	CKSRYB104K16	
	C 667	(A,57,70) (C)	CCSSCH100D50	
	C 668	(B,59,69)	CKSRYB104K16	
	C 669	(A,86,69)	CCSSCH120J50	
	C 670	(B,81,70)	CKSRYB104K16	
	C	C 671	(B,60,72)	CKSRYB104K16
		C 672	(B,81,76)	CKSRYB104K16
C 673		(B,81,78)	CKSRYB104K16	
C 674		(B,65,80)	CKSRYB104K16	
C 675		(B,71,75)	CKSRYB104K16	
	C 676	(B,76,79)	CKSRYB104K16	
	C 677	(B,63,80)	CKSRYB104K16	
	C 678	(B,69,79)	CKSRYB104K16	
	C 679	(B,66,65)	CCSRCH100D50	
	C 680	(B,66,67)	CCSRCH100D50	
	C 682	(A,37,86) 4.7 uF	CCG1212	
	C 683	(B,49,52) 4.7 uF	CCG1212	
	D	C 685	(A,74,83)	CCSSCH120J50
		C 686	(A,79,84)	CCSSCH120J50
		C 687	(B,47,52)	CKSRYB104K50
C 688		(B,44,52) 4.7 uF	CCG1212	
C 696		(A,64,81) (A,B)	CCSSCH220J50	
	C 701	(B,53,71)	CKSRYB104K16	
	C 702	(B,51,71)	CKSRYB104K16	
	C 703	(B,47,71)	CKSRYB104K16	
	C 704	(B,43,71)	CKSRYB104K16	
	C 705	(B,34,73)	CKSRYB104K16	
E	C 706	(B,49,65)	CKSRYB104K16	
	C 707	(B,44,65)	CKSRYB104K16	
	C 708	(B,31,82) 2.2 uF	CCG1205	
	C 711	(B,51,37)	CKSRYB104K16	
	C 712	(B,53,49)	CKSRYB104K16	
	C 721	(A,35,87) 10 uF	CCG1192	
	C 722	(A,32,87) 10 uF	CCG1192	
	C 731	(B,75,92)	CKSRYB104K16	
	C 741	(A,77,50)	CKSSYB104K10	
	C 752	(A,120,34)	CCSSCH220J50	
F	C 753	(A,121,41)	CCSSCH100D50	
	C 754	(A,116,34)	CCSSCH220J50	
	C 755	(B,106,37)	CKSRYB103K50	
	C 758	(A,93,38)	CKSSYB102K50	
	C 760	(A,112,41)	CKSSYB221K50	
	C 770	(B,123,42)	CKSRYB104K16	

C 771	(B,151,41) 10 uF	DCH1201
C 773	(A,155,45)	CKSSYB473K16
C 802	(B,111,14)	CKSRYB221K50
C 803	(A,103,21)	CKSRYB104K16
C 805	(B,100,14)	CKSRYB104K16
C 806	(B,104,22)	CKSRYB104K16
C 807	(B,98,11)	CKSRYB104K16
C 809	(B,117,48)	CKSRYB104K16
C 810	(B,82,36)	CKSRYB104K16
C 811	(B,100,19)	CKSRYB105K16
C 812	(A,95,20)	CKSRYB104K16
C 831	(B,112,26)	CKSQYB105K16
C 841	(A,103,29)	CKSRYB104K16
C 851	(A,67,38) (C)	CKSQYB105K16
C 881	(A,57,90)	CKSSYB104K10
C 882	(A,56,90)	CKSSYB104K10
C 891	(A,37,92)	CKSRYB104K16
C 892	(A,50,92)	CKSRYB104K16
C 901	(A,15,79) (A,B)	CKSSYB102K50
C 902	(A,16,79)	CKSRYB105K16
C 903	(A,22,74)	CEVQW221M6R3
C 904	(A,6,64)	CKSSYB102K50
C 905	(A,8,63)	CKSSYB682K25
C 906	(A,18,64)	CKSSYB103K16
C 908	(A,18,66)	CKSRYB105K16
C 909	(A,11,55) 1 000 uF/16 V	CCH2024
C 921	(B,17,55)	CKSRYB104K16
C 922	(B,21,53)	CKSRYB103K50
C 931	(A,29,63) 10 uF	CCG1192
C 932	(A,31,55) 10 uF	CCG1192
C 941	(B,136,40)	CKSRYB104K16
C 942	(A,135,49)	XCEVW221M10
C 943	(A,143,42)	CKSQYB105K16
C 951	(B,115,128)	CKSRYB104K16
C 961	(B,104,128)	CKSRYB105K10
C 991	(B,116,140)	CKSRYB104K16
C 992	(A,118,107)	CKSRYB104K16
C 994	(A,119,112)	CKSRYB104K16
C 995	(A,114,114)	CKSSYB333K16
C 1002	(A,85,87) (C)	CKSSYB104K10

B**Unit Number :****Unit Name : Keyboard Unit****MISCELLANEOUS**

IC 1621	(A,132,14) IC	BH2228FV
IC 1701	(B,84,21) IC	PEQ124A8
IC 1702	(A,103,22) Flash ROM Unit(A,B)	PEH394A8
	(A,103,22) Flash ROM Unit(C)	PEH385A8
Q 1631	(B,54,17) Transistor	LSCR523UB
Q 1632	(B,57,14) Transistor	LSCR523UB
Q 1633	(B,57,11) Transistor	LSCR523UB
Q 1634	(B,52,12) Transistor	LSCR523UB
Q 1635	(B,17,27) Transistor	LSCR523UB
Q 1636	(B,18,15) Transistor	LSCR523UB
Q 1661	(A,137,12) Transistor	LSCR523UB
Q 1662	(A,138,20) Transistor	LSCR523UB
Q 1663	(A,138,24) Transistor	LSCR523UB
Q 1670	(B,140,27) Transistor	LSCR523UB

1

2

3

4

5	<u>Circuit Symbol and No.</u>		6	<u>Part No.</u>
Q 1671	(B,139,22)	Transistor	LSCR523UB	
Q 1673	(A,141,14)	Transistor	LSCR523UB	
Q 1681	(B,63,18)	Transistor	LTC014EEB	
Q 1682	(B,66,17)	Transistor	LTC014YEB	
D 1631	(A,14,24)	LED	SMLVN6RGB2U(A)	
D 1632	(A,162,31)	LED	SMLVN6RGB2U(A)	
D 1633	(A,59,25)	LED	SMLVN6RGB2U(A)	
D 1634	(A,59,12)	LED	SMLVN6RGB2U(A)	
D 1661	(A,152,11)	LED	SMLVN6RGB2U(A)	
D 1662	(A,152,18)	LED	SMLVN6RGB2U(A)	
D 1681	(A,72,19)	LED(Red)	SML-D12V8W(PQ)	
D 1701	(B,69,18)	Diode	DA2J101	
L 1781	(B,152,20)	Inductor	CTF1389	
L 1782	(B,152,24)	Inductor	CTF1389	
L 1783	(B,152,16)	Inductor	CTF1389	
X 1701	(B,73,20)	Ceramic Resonator 16.000 MHz	CSS1616	
S 1611	(A,37,19)	Encoder(MULTI-CONTROL)	CSD1168	
S 1731	(A,147,38)	Push Switch	CSG1155	
S 1732	(A,162,38)	Push Switch	CSG1155	
S 1733	(A,11,12)	Push Switch	CSG1155	
S 1735	(A,59,6)	Push Switch	CSG1155	
S 1737	(A,75,7)	Push Switch	CSG1155	
S 1738	(A,59,31)	Push Switch	CSG1155	
S 1739	(A,11,35)	Push Switch	CSG1155	
S 1740	(A,27,12)	Spring Switch	CSN1080	
S 1741	(A,27,26)	Spring Switch	CSN1081	
S 1742	(A,75,30)	Push Switch	CSG1155	
S 1743	(A,77,19)	Push Switch	CSG1155	
U 1731	(A,155,29)	Remote Receiver Unit	RS-470	
CN1601	(B,109,10)	Connector	CKS6451	
CN1751	(B,116,30)	Connector	CKS6228	
JA1781	(A,161,20)	Jack	CKN1096	

RESISTORS

R 1601	(B,92,9)	RS1/10SR222J
R 1602	(B,92,11)	RS1/10SR222J
R 1611	(B,50,25)	RS1/16SS103J
R 1621	(A,127,17)	RS1/10SR272J
R 1622	(A,127,16)	RS1/10SR272J
R 1623	(A,127,14)	RS1/10SR272J
R 1631	(B,56,16)	RS1/16SS102J
R 1632	(B,60,14)	RS1/16SS102J
R 1633	(B,60,11)	RS1/16SS102J
R 1640	(B,52,15)	RS1/16SS101J
R 1643	(B,18,24)	RS1/16SS101J
R 1646	(B,19,12)	RS1/16SS101J
R 1649	(B,50,16)	RS1/10SR101J
R 1650	(B,20,29)	RS1/10SR101J
R 1651	(B,16,19)	RS1/10SR101J
R 1661	(A,136,9)	RS1/16SS102J
R 1662	(A,139,18)	RS1/16SS102J
R 1663	(A,139,22)	RS1/16SS102J
R 1664	(A,138,14)	RS1/16SS101J
R 1667	(A,140,21)	RS1/16SS101J
R 1670	(A,140,24)	RS1/16SS101J
R 1672	(B,136,23)	RS1/10SR101J
R 1673	(B,135,27)	RS1/10SR101J
R 1674	(A,140,10)	RS1/10SR101J
R 1681	(B,54,20)	RS1/4SA102J

	7		8
	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
R	1682	(B,54,22)	RS1/4SA0R0J
R	1683	(B,65,19)	RS1/10SR331J
R	1701	(B,73,17)	RS1/16SS472J
R	1702	(B,69,21)	RS1/16SS102J
R	1703	(B,69,20)	RS1/16SS154J
R	1704	(A,85,19)	RS1/16SS473J
R	1705	(B,72,25)	RS1/16SS103J
R	1706	(B,72,27)	RAB4CQ102J
R	1707	(B,73,29)	RS1/16SS103J
R	1708	(A,77,25)	RAB4CQ103J
R	1709	(A,72,25)	RS1/16SS103J
R	1710	(A,85,21)	RAB4CQ473J
R	1711	(B,85,31)	RS1/16SS473J
R	1712	(B,87,31)	RS1/16SS473J
R	1714	(A,87,28)	RS1/16SS101J
R	1715	(B,95,30)	RAB4CQ101J
R	1716	(A,86,16)	RS1/16SS101J
R	1717	(B,96,26)	RAB4CQ101J
R	1718	(B,100,25)	RAB4CQ101J
R	1719	(B,96,20)	RAB4CQ101J
R	1720	(B,96,18)	RAB4CQ101J
R	1721	(A,91,14)	RAB4CQ101J
R	1722	(A,96,14)	RAB4CQ101J
R	1723	(A,90,21)	RAB4CQ101J
R	1724	(A,90,26)	RAB4CQ101J
R	1725	(B,78,10)	RAB4CQ102J
R	1726	(B,74,11)	RS1/16SS104J
R	1728	(A,85,17)	RS1/16SS473J
R	1731	(A,145,29)	RS1/16SS470J
R	1753	(B,124,23)	RAB4CQ473J
R	1755	(A,117,28)	RAB4CQ101J

CAPACITORS

C 1621	(A,130,19)	CKSSYB103K16
C 1622	(A,130,20)	CKSRYB105K10
C 1701	(B,102,18) 10 uF	CCG1192
C 1703	(B,70,21)	CKSSYB104K10
C 1704	(B,73,23)	CKSSYB103K16
C 1705	(B,95,23)	CKSSYB103K16
C 1706	(A,91,24)	CKSSYB103K16
C 1731	(A,143,28) 10 uF	CCG1192
C 1751	(B,109,23)	CKSQYB334K50
C 1752	(B,112,22) 4.7 uF	CCG1212
C 1753	(B,112,24) 4.7 uF	CCG1212
C 1754	(B,116,22) 4.7 uF	CCG1212
C 1755	(B,115,24) 4.7 uF	CCG1212
C 1756	(B,116,19) 2.2 uF	CCG1205
C 1781	(B,141,15)	CKSRYB472K50
C 1782	(B,142,17)	CKSRYB472K50
C 1783	(B,149,16)	CKSRYB471K50



Unit Number : CWX4023

Unit Name : CD Core Unit (S11.6STD)

MISCELLANEOUS

IC 201	(B,23,37) IC	PE5791A
IC 301	(A,37,11) IC	BD8223EFV
Q 101	(B,11,53) Transistor	2SA1577

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

Q 102	(B,15,54)	Transistor	LTA123JUB
X 201	(B,25,49)	Ceramic Resonator	16.934 MHz CSS1603
S 901	(A,42,53)	Spring Switch(HOME)	CSN1080
S 903	(B,21,12)	Spring Switch(DSCSNS)	CSN1081
CN101	(A,16,58)	Connector	CKS4808
CN701	(A,25,29)	Connector	CKS6146

C 220	(A,18,38)	CKSSYB104K10
C 221	(B,14,32)	CKSSYB104K10
C 222	(B,13,37)	CKSSYB104K10
C 223	(B,12,42)	CCSSCH680J50
C 224	(B,13,45)	CCSSCH470J50
C 225	(B,13,46)	CKSSYB103K16
C 228	(B,10,33)	CCSSCH270J50

RESISTORS

R 101	(B,6,57)	RS1/10SR2R4J
R 102	(B,8,57)	RS1/10SR2R4J
R 103	(B,9,57)	RS1/10SR2R7J
R 108	(B,18,55)	RS1/16SS105J

C 229	(B,9,40)	CKSSYB104K10
C 233	(B,32,46)	CKSSYB103K16
C 236	(B,8,40)	CKSSYB104K10
C 238	(A,25,44)	CKSRYB104K16
C 299	(A,26,41)	CKSSYB104K10

R 109	(B,12,50)	RS1/16SS222J
R 214	(B,18,28)	RS1/16SS103J
R 215	(B,17,28)	RS1/16SS393J
R 216	(B,12,35)	RS1/16SS122J

C 302	(B,28,12)	CKSSYB102K50
C 303	(B,29,12)	CKSSYB102K50
C 304	(B,27,12)	CKSSYB223K16
C 305	(B,26,12)	CKSSYB104K10
C 306	(A,31,7)	CKSSYB104K10

R 217	(B,10,32)	RS1/16SS562J
R 218	(B,10,35)	RS1/16SS472J
R 229	(B,12,34)	RS1/16SS471J
R 232	(A,31,54)	RS1/16SS0R0J
R 237	(B,33,45)	RS1/16SS221J

C 307	(A,41,19)	CKSRYB105K10
C 308	(A,31,15)	CKSRYB105K10
C 710	(A,34,42)	CKSSYB102K50

R 240	(B,34,40)	RS1/16SS473J
R 245	(A,34,46)	RS1/16SS104J
R 254	(A,37,56)	RS1/16SS104J
R 260	(B,30,27)	RS1/16SS103J
R 264	(A,22,9)	RS1/16SS102J

R 281	(B,33,38)	RS1/16SS560J
R 282	(B,33,39)	RS1/16SS560J
R 291	(B,33,34)	RS1/16SS560J
R 294	(B,27,48)	RS1/16SS471J

R 303	(A,27,11)	RS1/16SS123J
R 304	(A,28,11)	RS1/16SS123J
R 305	(A,26,9)	RS1/16SS102J
R 306	(A,26,11)	RS1/16SS472J
R 307	(A,25,9)	RS1/16SS102J

R 308	(A,25,11)	RS1/16SS472J
R 309	(A,35,6)	RS1/16SS473J
R 310	(B,30,9)	RS1/16SS472J
R 311	(B,30,10)	RS1/16SS472J
R 312	(B,30,11)	RS1/16SS472J

R 313	(B,30,12)	RS1/16SS472J
R 701	(A,21,38)	RS1/16SS101J
R 702	(A,23,38)	RS1/16SS101J
R 706	(A,32,42)	RS1/16SS221J

CAPACITORS

C 104	(B,12,57)	CKSQYB475K6R3
C 203	(B,22,47)	CKSSYB104K10
C 209	(B,28,47)	CKSRYB104K16
C 210	(B,33,43)	CKSSYB104K10
C 211	(B,33,41)	CKSSYB104K10

C 212	(B,22,28)	CKSSYB104K10
C 213	(B,18,26)	CKSSYB332K50
C 214	(B,17,26)	CKSSYB473K16
C 215	(B,19,28)	CKSSYB104K10
C 216	(B,12,33)	CKSSYB182K50

C 217	(B,10,34)	CCSSCH560J50
C 218	(B,10,36)	CCSSCH4R0C50
C 219	(B,14,34)	CKSSYB104K10