


2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to ▽ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

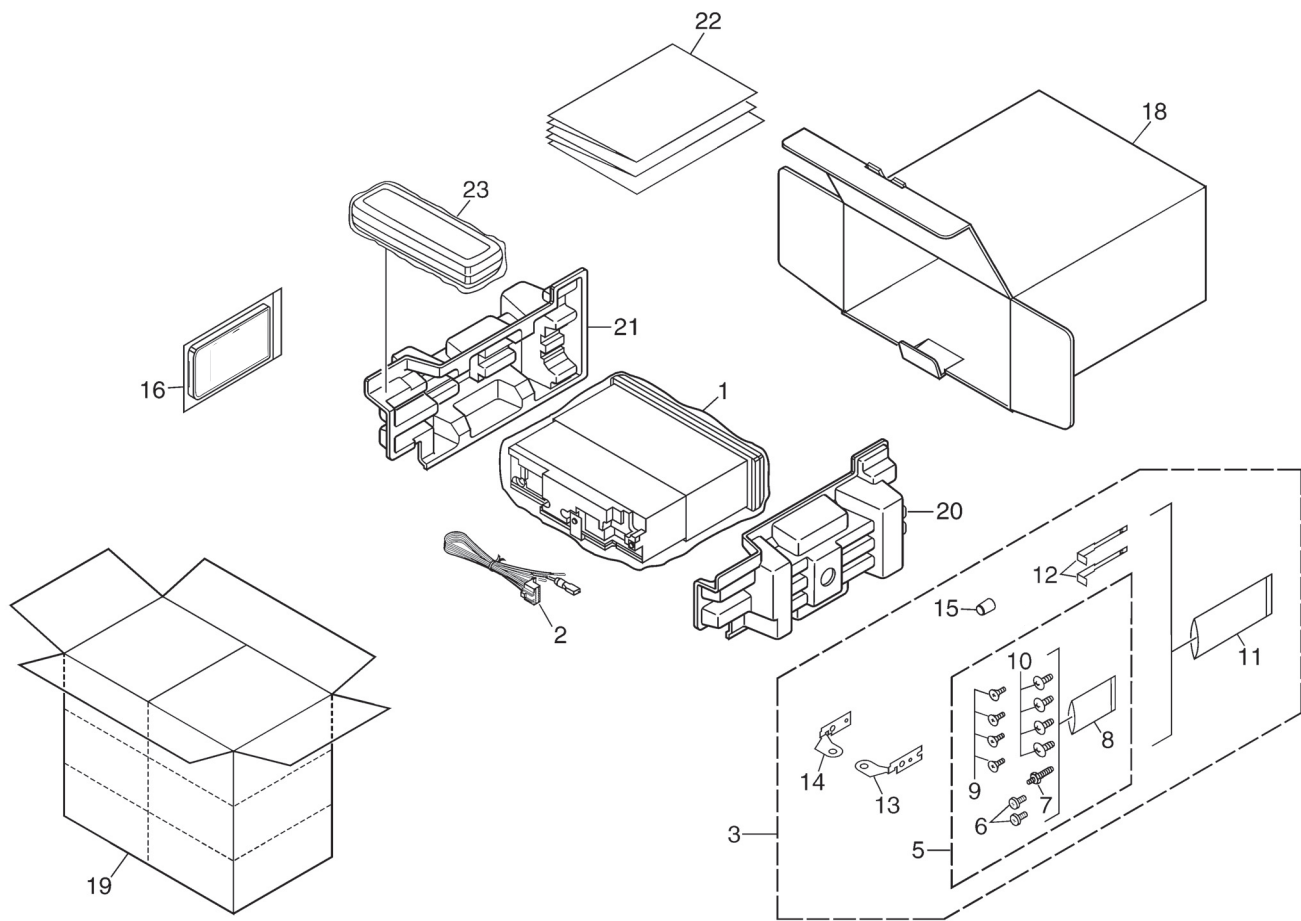


PACKING SECTION PARTS LIST

Mark	No.	Description	DEH-P770MP/XN/UC	DEH-P7700MP/XN/UC	DEH-P7750MP/XN/ES
*	1	Polyethylene Bag	CEG1173	CEG1173	CEG-162
	2	Cord Assy	XDE7007	XDE7007	XDE7007
	3	Accessory Assy	CEA4993	CEA4993	CEA4850
	4				
	5	Screw Assy	CEA3848	CEA3848	CEA3849
	6	Fixing Screw	BPZ20P060FZK	BPZ20P060FZK	Not used
	7	Screw	CBA1650	CBA1650	CBA1650
	8	Polyethylene Bag	CEG-127	CEG-127	CEG-127
	9	Screw	CRZ50P090FTC	CRZ50P090FTC	CRZ50P090FTC
	10	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158	CEG-158	CEG-158
	12	Handle	CNC5395	CNC5395	CNC5395
	13	Holder	CND1249	CND1249	Not used
	14	Holder	CND1250	CND1250	Not used
	15	Bush	CNV3930	CNV3930	CNV3930
	16	Remote Control Unit	CXC2665	CXC2665	CXC2665
	17				
	18	Carton	XHG7072	XHG7073	XHG7074
	19	Contain Box	XHL7072	XHL7073	XHL7074
	20	Protector	XHP7003	XHP7003	XHP7003
*	21	Protector	XHP7004	XHP7004	XHP7004
	22-1	Owner's Manual	XRD7055	XRD7057	XRD7059
	22-2	Owner's Manual	Not used	Not used	XRD7060
	22-3	Installation Manual	XRD7056	XRD7058	XRD7061
	22-4	Warranty Card	CRY1070	Not used	Not used
	22-5	Card	Not used	ARY1048	Not used
	22-6	Caution Card	CRP1207	CRP1207	CRP1207
	22-7	Caution Card	Not used	CRP1294	Not used
	22-8	Caution Card	CRP1310	CRP1310	CRP1310
	23	Case Assy	CXB3520	CXB3520	CXB3520

Owner's Manual,Installation Manual

Part No.	Language
XRD7055, XRD7056, XRD7057, XRD7058	English,French,Spanish
XRD7059	English,Spanish,Portuguese(B)
XRD7060	Arabic,Traditional Chinese
XRD7061	English,Spanish,Portuguese(B),Arabic,Traditional Chinese

2.2 EXTERIOR

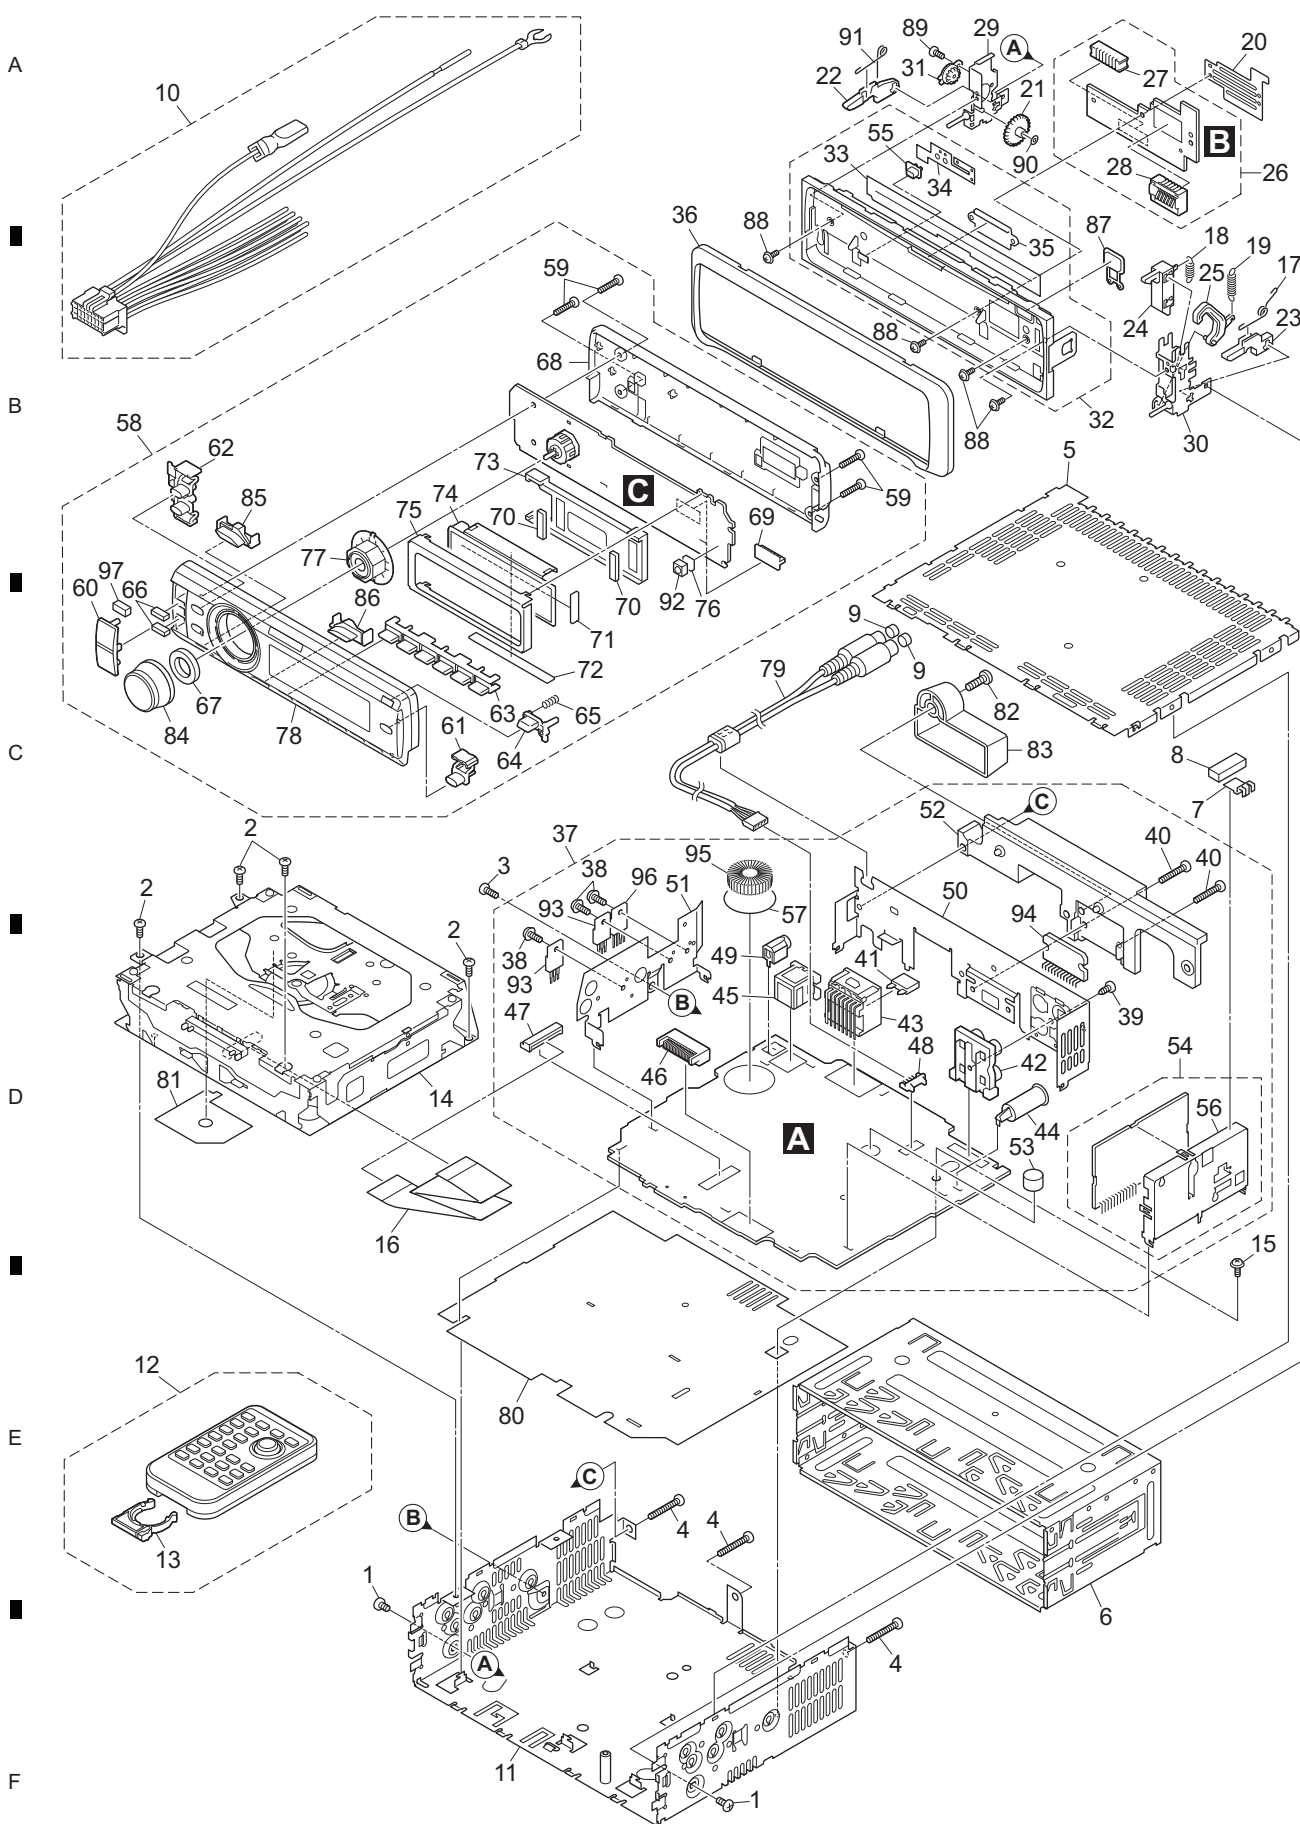

(1)EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FZK	50	Holder	See Contrast table(2)	
2	Screw	BSZ26P060FTC				A
3	Screw	BSZ30P060FTC	51	Holder	CND1352	
4	Screw	BSZ30P200FTC	52	Heat Sink	CNR1668	
5	Case	CNB2793	53	Microphone(CN751)	CPM1068	
			54	FM/AM Tuner Unit	CWE1802	
6	Holder	CNC8659	55	Pin	CNV6486	
7	Earth Plate	CNC8915				
8	Cushion	CNM8890	56	Holder	CND2144	
9	Cap	CNV6727	57	Insulator	XNM7031	
10	Cord Assy	XDE7007	58	Detachable Assy	See Contrast table(2)	
			59	Screw	BPZ20P100FZK	
11	Chassis Unit	CXB9528	60	Button(SRC,ESC)	XAC7081	B
12	Remote Control Unit	CXC2665				
13	Cover	CZN5357	61	Button(CLK)	XAC7082	
14	CD Mechanism Module(S10.1AACA) CXK5617		62	Button(LIST,DISP)	XAC7083	
15	Screw	ISS26P055FTC	63	Button(1-6)	See Contrast table(2)	
			64	Button(OPEN)	See Contrast table(2)	
16	Cable	XDE7002	65	Spring	XBH7001	
17	Spring	CBH2651				
18	Spring	CBH2652	66	Cushion	XNM7053	
19	Spring	CBH2653	67	Cushion	XNM7099	
20	Holder	CND1254	68	Cover	XNS7117	
			69	Connector(CN1901)	CKS4524	C
21	Gear	CNV5997	70	Cushion	CNM6633	
22	Arm	CNV7400				
23	Arm	CNV7401	71	Spacer	CNM7697	
24	Arm	CNV7402	72	Spacer	CNM7698	
25	Arm	CNV7403	73	Holder	CNV6910	
			74	OEL Unit	MXS8221	
26	Panel Unit	CWM8758	75	Holder	XNC7006	
27	Socket(CN1950)	CKS3550				
28	Connector(CN1951)	CKS4806	76	Cushion	XNM7049	
29	Holder Unit	CXB9501	77	Holder	XNV7023	
30	Holder Unit	CXB9502	78	Sub Grille Assy	See Contrast table(2)	D
			79	Cord Assy	XDE7009	
31	Damper Unit	CXB9503	80	Insulator	XNM7100	
32	Sub Panel Unit	XXA7364				
33	Cover	CNM6854	81	Insulator	XNM7106	
34	Spring	CBL1512	82	Screw	See Contrast table(2)	
35	Lighting Conductor	CNV6487	83	Holder	See Contrast table(2)	
			84	Knob Unit	XXA7337	
36	Panel	See Contrast table(2)	85	Button Unit(EQ)	XXA7340	
37	Tuner Amp Unit	See Contrast table(2)				
38	Screw	ASZ26P060FTC	86	Button Unit(SW)	XXA7341	E
39	Screw	BPZ26P080FTC	87	Button	CAC7752	
40	Screw	BSZ26P160FTC	88	Screw(M2x4.5)	CBA1647	
			89	Screw(M2x4)	CBA1649	
⚠ 41	Fuse(10A)	CEK1208	90	Washer	CBF1038	
42	Pin Jack(CN352)	CKB1051				
43	Plug(CN901)	CKM1376	91	Spring	CBH2650	
44	Antenna Jack(CN401)	CKX1056	92	IC(IC1991)	TSOP4840SB1	
45	Connector(CN101)	CKS3408	93	Transistor(Q650,Q911)	2SD2396	
			94	IC(IC301)	PAL007A	
46	Plug(CN801)	CKS3537	95	Choke Coil(L901)	CTH1280	
47	Connector(CN651)	CKS3837				F
48	Plug(CN351)	CKS1238	96	IC(IC901)	NJM2388F84	
49	Connector(CN161)	See Contrast table(2)	97	Cushion	XNM7111	

(2) CONTRAST TABLE

DEH-P770MP/XN/UC , DEH-P7700MP/XN/UC and DEH-P7750MP/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P770MP/XN/UC	DEH-P7700MP/XN/UC	DEH-P7750MP/XN/ES
A	36	Panel	XNS7088	XNS7089	XNS7088
	37	Tuner Amp Unit	XWM7083	XWM7084	XWM7085
	49	Connector(CN161)	CKS4124	CKS4124	Not used
	50	Holder	CND1270	CND1270	CND1239
	58	Detachable Assy	XXA7321	XXA7322	XXA7323
B	63	Button	XAC7084	XAC7085	XAC7084
	64	Button	XAC7086	XAC7087	XAC7086
	78	Sub Grille Assy	XXA7325	XXA7326	XXA7327
	82	Screw	Not used	BMZ40P140FTC	Not used
	83	Holder	Not used	CNV7619	Not used

△



CD MECHANISM SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.1)	CWX3096	50	Gear	CNV8379	
2	Connector(CN101)	CKS4182				A
3	Connector(CN901)	CKS4017	51	Gear	CNV8380	
4	Screw	BMZ20P035FTC	52	Gear	CNV8381	
5	Screw	BSZ20P040FTC	53	Gear	CNV8382	
			54	Gear	CNV8383	
6	Screw(M2x4)	CBA1362	55	Gear	CNV8384	
7	Screw(M2x3)	CBA1824				
8	Screw(M2x3)	CBA1825	56	Rack	CNV8385	
9			57	Arm	CNV8386	
10	Washer	CBF1038	58	Arm	CNV8387	
			59	Guide	CNV8388	
11	Washer	CBF1060	60	Roller	CNV7218	B
12	Spring	CBH2390				
13	Spring	CBH2606	61	Gear	CNV8389	
14	Spring	CBH2607	62	Arm	CNV8391	
15	Spring	CBH2608	63	Arm	CNV8390	
			64	Arm	CNV8392	
16	Spring	CBH2609	65	Damper	CNV7313	
17	Spring	CBH2610				
18	Spring	CBH2735	66	Damper	CNV7314	
19	Spring	CBH2612	67	Arm	CNV8394	
20	Spring	CBH2613	68	Arm	CNV8395	
			69	Guide	CNV8396	C
21	Spring	CBH2614	70	Guide	CNV8397	
22	Spring	CBH2615				
23	Spring	CBH2616	71	Holder	CNV8398	
24	Spring	CBH2617	72	Arm	CNV8402	
25	Spring	CBH2620	73	Gear	CNV8400	
			74	Damper	CNV7618	
26	Spring	CBH2621	75	Motor Unit(M1)	CXC4440	
27	Spring	CBH2641				
28	Spring	CBH2642	76	Chassis Unit	CXC2318	
29	Spring	CBH2643	77	Screw Unit	CXB8729	
30	Spring	CBH2659	78	Gear Unit	CXC2397	D
			79	Arm Unit	CXC2316	
31	Spring	CBH2688	80	Arm	CND1896	
32						
33	Shaft	CLA4441	81	Arm	CND1894	
34	Frame	CNC9962	82	Motor Unit(M2)	CXB8933	
35	Frame	CNC9963	83	Bracket	CNC9985	
			84			
36	Bracket	CND2712	85	Screw(M2x5)	EBA1028	
37	Bracket	CND1895				
38	Arm	CNC9968	86	Screw	JFZ20P020FTC	E
39	Arm	CND1909	87	Screw	JGZ17P022FTC	
40	Lever	CND2032	88			
			89	Washer	YE20FTC	
41	Lever	CNC9984	90	Pickup Unit(P9.9MP3)(Service)	CXX1805	
42	Sheet	CNM8134				
43	Collar	CNV7798	91	Screw	IMS26P030FTC	
44	Guide	CNV7799	92	Spring	CBL1635	
45	Arm	CNV8403	93	Clamper	CNV8372	
46	Rack	CNV8374				
47	Holder	CNV8376				F
48	Holder	CNV8377				
49	Arm	CNV8378				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Circuit Symbol and No.

Part No.

Circuit Symbol and No.

Part No.

Q 981	(B,27,90) Transistor	2SC4081
Q 982	(A,129,98) Transistor	UMD2N
D 131	(A,62,65) Diode Network	DA204U
D 132	(A,46,68) Diode Network	DA204U
D 133	(A,55,59) Diode	DAN202U
D 134	(A,56,64) Diode	DAP202U
D 301	(A,97,110) Diode	S5688G
D 302	(A,93,110) Diode	S5688G
D 650	(A,11,69) Diode	HZS7L(C3)
D 751	(B,103,81) Diode	RB706F-40
D 801	(B,102,32) Diode Network	DA204U
D 802	(B,107,28) Diode	DAN202U
D 803	(B,111,32) Diode	DAP202U
D 804	(B,111,28) Diode	DAN202U
D 805	(B,107,32) Diode	DAP202U
D 821	(A,76,11) Diode	HZS11L(A1)
D 851	(A,23,28) Diode	HZS11L(A1)
D 852	(B,42,22) Diode	RB411D
D 901	(A,64,116) Diode	S5688G
D 902	(A,67,113) Diode	S5688G
D 911	(A,17,83) Diode	S5688G
D 912	(A,13,78) Diode	HZS6L(B1)
D 931	(A,53,107) Diode	HZS7L(A1)
D 932	(A,56,100) Diode	HZS7L(C3)
D 933	(A,76,60) Diode	HZS9L(B3)
D 934	(A,78,65) Diode Network	DA204U
D 941	(A,69,105) Diode	MA111
D 951	(A,41,92) Diode	DAN202U
D 981	(A,18,89) Diode	HZS9L(A2)
D 982	(A,93,71) Diode	DAN202U
L 101	(A,31,79) Inductor	LAU2R2K
L 201	(A,73,79) Ferri-Inductor	LAU4R7K
L 401	(A,154,48) Inductor	LAUR47K
L 402	(A,148,90) Inductor	LAU1R0K
L 403	(B,154,95) Inductor	LCTAW4R7J2520
L 405	(A,154,60) Ferri-Inductor	LAU4R7K
L 451	(A,136,84) Ferri-Inductor(P770MP)	LAU101K
L 601	(A,80,58) Ferri-Inductor	LAU100K
L 640	(A,76,48) Ferri-Inductor	LAU100K
L 831	(A,101,21) Inductor	LAU2R2K
L 852	(A,38,15) Inductor	CTF1510
L 901	(A,30,106) Choke Coil 600μH	CTH1280
L 951	(A,51,87) Inductor	LAU2R2K
X 601	(A,92,58) Radiator 10.00MHz	CSS1599
S 802	(A,21,8) Switch(DETACH SENSE)	CSN1039
VR751	(A,104,84) Semi-fixed 10kΩ	(B)CCP1229

A

Unit Number:XWM7083(P770MP)
Unit Number:XWM7084(P7700MP)
Unit Number:XWM7085(P7750MP)
Unit Name:Tuner Amp Unit

MISCELLANEOUS

C

IC 101	(A,41,86) IC	HA12240FP
IC 131	(A,54,70) IC	NJM4558MD
IC 201	(A,82,86) IC	PML009A
IC 301	(A,91,132) IC	PAL007A
IC 420	(A,150,26) IC	NJM2391DL1-33

■

IC 421	(A,130,33) IC	NJM2391DL1-05
IC 451	(A,133,74) IC(P770MP)	PA2028A
IC 601	(A,107,53) IC	PEG070A
IC 602	(A,84,64) IC	S-80835CNUA-B8U
IC 851	(B,35,16) IC	NJM2360M

D

IC 901	(A,4,119) IC	NJM2388F84
Q 101	(B,39,103) Transistor	2SA1576
Q 102	(B,36,101) Transistor	DTC114EU
Q 301	(A,134,98) Transistor	DTC124EU
Q 351	(B,130,118) Transistor	UMH3N

■

Q 352	(B,135,127) Transistor	UMH3N
Q 353	(B,160,127) Transistor	UMH3N
Q 403	(B,153,39) Transistor	2SA1576
Q 404	(B,153,45) Transistor	2SA1576
Q 641	(B,28,50) Transistor	2SA1577

E

Q 642	(B,35,53) Transistor	DTC114EU
Q 650	(A,4,66) Transistor	2SD2396
Q 651	(B,22,56) Transistor	UMD2N
Q 801	(A,105,20) Transistor	DTC143EU
Q 821	(A,65,11) Transistor	2SD1767

■

Q 822	(B,75,17) Transistor	UMD2N
Q 831	(B,97,26) Transistor	2SA1576
Q 832	(B,91,20) Transistor	DTC114EU
Q 851	(A,16,31) Transistor	2SD1760F5
Q 852	(B,25,34) Transistor	UMD2N

F

Q 911	(A,4,100) Transistor	2SD2396
Q 912	(B,18,75) Transistor	UMD2N
Q 931	(B,49,97) Transistor	UMX1N
Q 941	(B,114,82) Transistor	DTC114EU
Q 951	(A,44,92) Transistor	2SA1576

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
⚠ FU351 (B,121,115) Fuse 3A	CEK1286
BZ621 (A,133,22) Buzzer	CPV1062
AR401 (A,158,117) Surge Protector	DSP-201M-S00B
⚠ Fuse 10A	CEK1208
FM/AM Tuner Unit	CWE1802

RESISTORS

R 101	(B,36,134)	RS1/16S101J
R 102	(B,36,132)	RS1/16S620J
R 103	(B,36,126)	RS1/16S101J
R 104	(A,38,82)	RS1/16S102J
R 105	(A,45,82)	RS1/16S472J
R 106	(A,47,85)	RS1/16S472J
R 107	(B,24,127)	RS1/16S821J
R 108	(B,22,127)	RS1/16S223J
R 109	(B,32,104)	RS1/16S222J
R 110	(B,30,120)	RS1/16S821J
R 111	(B,28,120)	RS1/16S223J
R 112	(B,26,120)	RS1/16S102J
R 113	(B,23,132)	RS1/16S102J
R 114	(B,42,106)	RS1/16S223J
R 115	(B,37,106)	RS1/16S472J
R 131	(A,60,62)	RS1/16S563J
R 132	(A,48,70)	RS1/16S563J
R 133	(A,59,70)	RS1/16S104J
R 134	(A,48,72)	RS1/16S104J
R 135	(A,63,61)	RS1/16S474J
R 136	(A,54,64)	RS1/16S474J
R 161	(A,18,133) (P770MP,P7700MP)	RS1/16S102J
R 162	(B,14,131) (P770MP,P7700MP)	RS1/16S102J
R 163	(A,18,131) (P770MP,P7700MP)	RS1/16S103J
R 164	(A,18,129) (P770MP,P7700MP)	RS1/16S103J
J R 165	(A,18,135) (P7750MP)	RS1/16S
R 201	(A,115,72)	RAB4C102J
R 220	(A,75,93)	RS1/16S102J
R 221	(B,73,84)	RS1/16S102J
R 222	(B,99,102)	RS1/16S471J
R 223	(B,97,78)	RS1/16S471J
R 224	(B,99,100)	RS1/16S471J
R 225	(A,98,80)	RS1/16S471J
R 301	(A,137,95)	RS1/16S103J
R 302	(A,134,94)	RS1/16S331J
R 303	(A,134,96)	RS1/16S103J
R 304	(B,117,126)	RS1/16S153J
R 351	(B,143,106) (P770MP)	RS1/16S820J
R 351	(B,143,106) (P7700MP,P7750MP)	RS1/16S471J
R 352	(B,144,117) (P770MP)	RS1/16S820J
R 352	(B,144,117) (P7700MP,P7750MP)	RS1/16S471J
R 353	(B,139,121) (P770MP)	RS1/16S820J
R 353	(B,139,121) (P7700MP,P7750MP)	RS1/16S471J
R 354	(B,137,118) (P770MP)	RS1/16S820J
R 354	(B,137,118) (P7700MP,P7750MP)	RS1/16S471J
R 355	(B,155,119) (P770MP)	RS1/16S820J
R 355	(B,155,119) (P7700MP,P7750MP)	RS1/16S821J
R 356	(B,143,127) (P770MP)	RS1/16S820J
R 356	(B,143,127) (P7700MP,P7750MP)	RS1/16S821J
R 357	(B,131,115)	RS1/16S223J
R 358	(B,130,120)	RS1/16S223J
R 359	(B,141,127)	RS1/16S223J
R 360	(B,127,129)	RS1/16S223J

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 361 (B,158,131)	RS1/16S223J
R 362 (B,156,126)	RS1/16S223J
R 363 (B,131,113) (P770MP)	RS1/16S471J
R 364 (B,131,124) (P770MP)	RS1/16S471J
R 365 (B,139,127) (P770MP)	RS1/16S471J
R 366 (B,125,133) (P770MP)	RS1/16S471J
R 367 (B,160,130) (P770MP)	RS1/16S471J
R 368 (B,156,123) (P770MP)	RS1/16S471J
R 403 (B,158,69)	RS1/16S681J
R 404 (A,104,73)	RS1/16S681J
R 406 (B,155,78)	RS1/16S681J
R 407 (B,122,47)	RS1/16S681J
R 408 (B,155,80)	RS1/16S681J
R 409 (B,155,83)	RS1/16S681J
R 410 (B,122,50)	RS1/16S681J
R 411 (B,155,85)	RS1/16S681J
R 412 (B,122,52)	RS1/16S681J
R 413 (B,156,88)	RS1/16S681J
R 416 (B,148,36)	RS1/16S222J
R 417 (B,148,39)	RS1/16S561J
R 418 (B,148,43)	RS1/16S561J
R 419 (B,148,45)	RS1/16S222J
R 421 (B,143,44)	RS1/16S471J
R 424 (A,99,68)	RS1/16S471J
R 451 (A,124,75) (P770MP)	RS1/16S103J
R 452 (A,126,75) (P770MP)	RS1/16S123J
R 453 (A,120,72) (P7700MP,P7750MP)	RS1/16S0R0J
R 454 (A,117,68) (P7700MP,P7750MP)	RS1/16S0R0J
R 455 (A,118,72) (P7700MP,P7750MP)	RS1/16S0R0J
R 456 (A,121,72) (P7700MP,P7750MP)	RS1/16S0R0J
R 457 (A,122,69) (P7700MP,P7750MP)	RS1/16S0R0J
R 458 (A,125,68) (P7700MP,P7750MP)	RS1/16S0R0J
R 601 (B,111,60) (P770MP,P7750MP)	RS1/16S104J
R 602 (B,106,62) (P7700MP)	RS1/16S104J
R 603 (B,111,62) (P770MP,P7700MP)	RS1/16S104J
R 604 (B,113,54) (P7750MP)	RS1/16S104J
R 605 (B,106,60)	RS1/16S104J
R 606 (A,90,63)	RS1/16S104J
R 607 (B,62,56)	RS1/16S822J
R 608 (B,95,47)	RS1/16S102J
R 609 (A,92,43)	RS1/16S102J
R 610 (A,79,49)	RS1/16S104J
R 611 (A,91,47)	RS1/16S473J
R 613 (B,81,29)	RS1/16S221J
R 614 (B,81,25)	RS1/16S682J
R 615 (A,64,30)	RS1/16S682J
R 616 (A,64,25)	RS1/16S221J
R 617 (A,49,64) (P7750MP)	RS1/16S104J
R 621 (B,130,28)	RS1/16S102J
R 631 (A,122,55)	RS1/16S104J
R 641 (B,25,49)	RS1/16S103J
R 643 (B,30,53)	RS1/16S182J
R 646 (B,78,39)	RS1/16S102J
R 647 (A,86,42)	RS1/16S102J
R 648 (B,52,37)	RS1/16S222J
R 649 (B,78,37)	RS1/16S104J
R 650 (A,11,63)	RD1/4PU0R0J
R 651 (A,16,60)	RD1/4PU271J
R 652 (A,16,66)	RD1/4PU221J
R 666 (B,52,39)	RS1/16S104J

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 667 (B,58,41) RS1/16S102J
R 668 (B,61,33) RS1/16S102J

R 951 (A,59,105) RD1/4PU153J
R 952 (A,42,89) RS1/16S472J

A R 669 (B,134,94) (P7700MP,P7750MP) RS1/16S0R0J
R 671 (B,122,106) (P770MP) RS1/16S0R0J
R 751 (B,96,97) RS1/16S222J
R 752 (B,107,96) RS1/16S561J
R 753 (B,101,83) RS1/16S104J

R 953 (A,45,89) RS1/16S472J
R 954 (A,47,93) RS1/16S102J
R 981 (B,23,90) RS1/16S683J
R 982 (B,22,88) RS1/16S683J
R 983 (B,23,83) RS1/16S223J

R 754 (B,107,81) RS1/16S104J
R 801 (B,121,26) RS1/16S102J
R 802 (A,14,23) RS1/16S104J
R 803 (A,18,23) RS1/16S102J
R 804 (B,121,22) RS1/16S222J

R 984 (B,122,136) RS1/16S102J

CAPACITORS

R 805 (B,123,22) RS1/16S222J
B R 806 (B,118,22) RS1/16S222J
R 807 (B,116,22) RS1/16S222J
R 808 (B,110,21) RS1/16S222J
R 809 (B,103,23) RS1/16S222J

C 101 (B,28,134) CKSRYB104K16
C 102 (A,41,80) CKSRYB473K25
C 103 (A,38,89) CKSRYB102K50
C 104 (A,41,82) CKSRYB102K50
C 131 (A,60,59) CKSRYB104K16

R 810 (B,128,21) RS1/16S102J
R 811 (B,121,28) RS1/16S102J
R 812 (B,117,27) RS1/16S102J
R 813 (A,71,15) RS1/16S1R0J
R 814 (B,106,23) RS1/16S222J

C 132 (A,49,66) CKSRYB104K16
C 133 (A,60,70) CKSRYB104K16
C 134 (A,46,72) CKSRYB104K16
C 135 (A,63,62) CKSRYB474K10
C 136 (A,50,64) CKSRYB474K10

R 815 (A,100,33) RS1/16S473J
R 816 (B,110,24) RS1/16S473J
C R 817 (B,102,28) RS1/16S473J
R 818 (B,128,23) RS1/16S104J
R 821 (A,52,21) RD1/4PU391J

C 137 (A,63,59) CCSRCH101J50
C 138 (A,52,64) CCSRCH101J50
C 139 (A,54,75) CKSRYB103K50
C 201 (A,72,74) CEJQ4R7M35
C 202 (A,72,99) CEJQ4R7M35

R 822 (B,58,16) RS1/16S391J
R 823 (B,63,16) RS1/16S391J
R 824 (A,76,15) RS1/16S472J
R 831 (B,93,26) RS1/16S473J
R 832 (B,95,22) RS1/16S102J

C 203 (A,75,74) CEJQ4R7M35
C 204 (A,78,100) CEJQ4R7M35
C 205 (A,81,74) CEJQ4R7M35
C 206 (A,89,100) CEJQ4R7M35
C 207 (A,87,74) CEJQ4R7M35

R 833 (B,100,17) RS1/16S222J
R 851 (B,29,34) RS1/16S331J
R 852 (B,25,37) RS1/16S331J
D R 853 (B,31,22) RS1/16S1R0J
R 854 (B,31,20) RS1/16S391J

C 208 (A,85,100) CEJQ4R7M35
C 209 (A,65,95) CEJQ1R0M50
C 210 (A,59,95) CEJQ1R0M50
C 211 (A,68,90) CEJQ1R0M50
C 212 (A,59,85) CEJQ1R0M50

R 855 (B,41,28) RS1/16S121J
R 856 (A,48,21) RD1/4PU152J
R 858 (B,26,21) RS1/16S0R0J
R 901 (B,16,98) RS1/16S102J
R 902 (B,18,100) RS1/16S103J

C 213 (B,77,84) CKSRYB104K16
C 214 (A,69,84) CEJQ470M16
C 215 (A,72,88) CKSRYB105K10
C 216 (B,78,81) CKSRYB104K16
C 217 (A,61,90) CEJQ1R0M50

R 912 (B,10,79) RS1/16S222J
R 913 (B,10,84) RS1/16S223J
R 914 (B,47,92) RS1/16S104J
R 915 (B,45,96) RS1/16S104J
E R 916 (A,109,69) RS1/16S104J

C 218 (A,59,79) CEJQ1R0M50
C 220 (B,72,94) CKSRYB152K50
C 221 (B,78,87) CKSRYB152K50
C 222 (B,84,93) CCSRCH120J50
C 223 (B,86,81) CCSRCH120J50

R 918 (B,10,103) RS1/16S391J
R 931 (A,50,107) RD1/4PU102J
R 932 (B,45,103) RS1/16S472J
R 933 (B,51,101) RS1/16S473J
R 934 (B,53,101) RS1/16S103J

C 224 (B,84,91) CCSRCH120J50
C 225 (A,89,79) CCSRCH120J50
C 226 (A,94,90) CEJQ100M16
C 240 (B,52,84) CKSQYB225K10
C 301 (A,115,98) CFTNA224J50

R 935 (B,47,102) RS1/16S473J
R 936 (B,43,98) RS1/16S104J
R 937 (A,75,65) RS1/16S223J
R 938 (A,76,68) RS1/16S102J
F R 939 (A,71,65) RS1/16S392J

C 302 (A,111,109) CFTNA224J50
C 303 (A,105,109) CFTNA224J50
C 304 (A,123,102) CFTNA224J50
C 309 (A,116,106) CEJQ330M10
C 310 (A,125,133) CKSQYB225K10

R 940 (A,47,107) RD1/4PU392J
R 941 (A,63,100) RD1/4PU102J
R 942 (A,74,105) RS1/16S103J

C 311 (A,127,129) CKSQYB225K10
C 312 (A,122,128) CEHAR100M16
C 351 (A,140,105) (P770MP) CEJQ100M25
C 351 (A,140,105) (P7700MP,P7750MP)CEJQ4R7M35

5			6			7			8		
Circuit Symbol and No.			Part No.			Circuit Symbol and No.			Part No.		
C 352	(A,141,116)	(P770MP)	CEJQ100M25			C 821	(B,74,13)		CKSRYB473K25		
C 352	(A,141,116)	(P7700MP,P7750MP)	CEJQ4R7M35			C 822	(A,73,15)		CKSRYB473K25		
C 353	(A,137,111)	(P770MP)	CEJQ100M25			C 832	(B,97,28)		CKSQYB105K16		A
C 353	(A,137,111)	(P7700MP,P7750MP)	CEJQ4R7M35			C 851	(B,25,31)		CKSRYB104K16		
C 354	(A,135,117)	(P770MP)	CEJQ100M25			C 852	(A,26,24)		CEJQ470M16		
C 354	(A,135,117)	(P7700MP,P7750MP)	CEJQ4R7M35			C 853	(A,27,17)		CEJQ101M16		
C 355	(A,144,110)	(P770MP)	CEJQ100M25			C 854	(B,26,19)		CKSRYB104K16		
C 355	(A,144,110)	(P7700MP,P7750MP)	CEJQ4R7M35			C 855	(B,41,16)		CCSRCH331J50		
C 356	(A,132,106)	(P770MP)	CEJQ100M25			C 856	(B,38,20)		CKSRYB223K50		
C 356	(A,132,106)	(P7700MP,P7750MP)	CEJQ4R7M35			C 857	(A,49,12)		CEJQ470M25		
C 357	(B,131,111)	(P770MP)	CKSRYB222K50			C 901	(A,48,121)	3300µF/16V	CCH1486		
C 358	(B,130,122)	(P770MP)	CKSRYB222K50			C 902	(B,58,119)		CKSRYB104K25		
C 359	(B,139,124)	(P770MP)	CKSRYB222K50			C 903	(B,103,144)		CKSYB225K16		B
C 360	(B,127,133)	(P770MP)	CKSRYB222K50			C 904	(B,84,136)		CKSYB225K16		
C 361	(B,157,130)	(P770MP)	CKSRYB222K50			C 911	(A,23,74)	470µF/16V	CCH1331		
C 362	(B,155,126)	(P770MP)	CKSRYB222K50			C 912	(B,27,77)		CKSRYB472K50		
C 405	(B,145,93)		CKSRYB103K50			C 913	(B,12,76)		CKSRYB103K50		
C 406	(A,147,96)		CEJQ101M16			C 914	(A,12,73)		CEJQ470M10		
C 407	(B,164,75)		CCSRCH101J50			C 922	(B,14,114)		CKSRYB103K50		
C 411	(B,156,39)		CKSRYB332K50			C 923	(A,12,116)		CEJQ101M16		
C 412	(B,156,44)		CKSRYB332K50			C 924	(B,27,84)		CKSRYB103K50		
C 414	(B,143,38)		CKSRYB103K50			C 925	(A,24,81)		CEJQ221M10		
C 416	(A,151,67)		CEJQ470M10			C 931	(B,43,102)		CKSRYB104K16		
C 417	(A,141,41)		CEJQ101M16			C 933	(A,73,65)		CKSRYB104K16		
C 420	(A,142,52)		CEJQ470M10			C 941	(A,115,90)		CEJQ1R0M50		C
C 422	(A,142,32)		CEJQ100M16								
C 426	(B,124,36)		CKSRYB104K16								
C 430	(A,101,71)		CCSRCH470J50								
C 451	(B,128,83)	(P770MP)	CKSQYB225K10								
C 452	(A,125,83)	(P770MP)	CEJQ100M16								
C 453	(B,130,79)	(P770MP)	CKSYB684K16								
C 454	(A,117,85)	(P770MP)	CEJQ4R7M35								
C 455	(A,131,90)	(P770MP)	CEJQ101M16			D 1970	LED		CL220PGC		
C 456	(A,125,72)	(P770MP)	CKSRYB105K10			S 1970	Push Switch(EJECT)		CSG1112		
C 457	(A,125,70)	(P770MP)	CKSRYB105K10								
C 458	(B,128,75)	(P770MP)	CKSRYB105K10								D
C 459	(B,128,73)	(P770MP)	CKSRYB105K10			R 1970			RS1/16S101J		
C 460	(B,128,71)	(P770MP)	CKSRYB105K10			R 1971			RS1/16S101J		
C 461	(B,128,69)	(P770MP)	CKSRYB105K10			R 1972			RS1/16S0R0J		
C 462	(A,142,85)	(P770MP)	CEJQ330M25								
C 463	(A,127,91)	(P770MP)	CASAQ3R3M16								
C 464	(A,142,77)	(P770MP)	CEJQ330M25								
C 601	(A,96,50)		CKSRYB103K50			C 1970			CKSRYB104K16		
C 602	(A,86,52)		CEJQ4R7M35								
C 603	(B,83,54)		CCSRCH101J50								
C 604	(A,68,56)		CEJQ2R2M50								
C 605	(B,90,56)		CCSRCH200J50								
C 606	(B,89,52)		CCSRCH200J50								
C 643	(B,78,42)		CKSRYB683K16								
C 644	(A,56,30)		CEAT471M16								
C 650	(B,17,56)		CKSRYB473K25								
C 651	(A,13,53)		CEJQ101M16								
C 652	(B,59,37)		CKSRYB152K50								
C 653	(B,59,35)		CKSRYB152K50								
C 654	(B,81,22)		CCSRCH470J50								
C 751	(A,102,89)		CEJQ100M16								
C 752	(A,91,95)		CEJQ220M10								
C 753	(A,94,81)		CEJQNP100M16								
C 754	(B,82,81)		CKSRYB474K10								
C 755	(B,89,84)		CKSRYB474K10								

B

Unit Number:CWM8758

Unit Name:Panel Unit

MISCELLANEOUS

D 1970

LED

CL220PGC

S 1970

Push Switch(EJECT)

CSG1112

RESISTORS

R 1970

RS1/16S101J

R 1971

RS1/16S101J

R 1972

RS1/16S0R0J

CAPACITORS

C 1970

CKSRYB104K16

C

Unit Number:

Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1910

(B,13,57) IC

S-818A33AUC-BGN

IC 1940

(B,27,85) IC

PEG072A

IC 1990

(A,22,108) IC(P770MP)

PD8135A

IC 1990

(A,22,108) IC(P7700MP,P7750MP)

PD8136A

IC 1991

(A,28,150) IC

TSOP4840SB1

Q 1980

(B,11,68) Transistor

2SC4617

Q 1981

(A,6,63) Transistor

2SC2411K

D 1903

(A,22,62) LED

SML311BBT(PQ)

D 1904

(A,38,45) LED

SML311BBT(PQ)

D 1905

(A,4,45) LED

SML311BBT(PQ)

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	D 1906	(A,22,29) LED	SML311BBT(PQ)
	D 1907	(A,40,64) LED	SML311BBT(PQ)
	D 1908	(A,40,26) LED	SML311BBT(PQ)
	D 1910	(A,5,156) LED	CL-195PG-CD
	D 1911	(A,14,20) LED	SML311BBT(PQ)
	D 1912	(A,30,8) LED	SML311BBT(PQ)
	D 1913	(A,28,20) LED	SML311BBT(PQ)
	D 1914	(A,12,8) LED	SML311BBT(PQ)
	D 1915	(A,20,156) LED	SML311BBT(PQ)
	D 1940	(B,22,70) Diode	1SS355
	L 1901	(A,17,135) Inductor	CTF1530
	L 1940	(A,13,63) Inductor	CTF1530
	TH1980	(B,7,62) Thermistor	CCX1037
B	X 1940	(B,27,73) Ceramic Resonator	16MHzCSS1616
	S 1901	(A,9,8) Push Switch	CSG1155
	S 1902	(A,34,9) Push Switch	CSG1155
	S 1903	(A,18,20) Switch	CSG1110
	S 1904	(A,24,20) Switch	CSG1110
	S 1905	(A,37,26) Push Switch	CSG1155
	S 1906	(A,37,65) Push Switch	CSG1155
	S 1907	(A,38,86) Switch	CSG1107
	S 1908	(A,38,95) Switch	CSG1108
	S 1909	(A,38,112) Switch	CSG1107
	S 1910	(A,38,121) Switch	CSG1108
C	S 1911	(A,38,138) Switch	CSG1107
	S 1912	(A,38,147) Switch	CSG1108
	S 1913	(A,24,156) Switch	CSG1110
	S 2030	(A,21,46) Switch	CSX1065
	VR2000	(B,33,117) Semi-fixed 15kΩ(B)CCP1230	
	VR2001	(B,33,111) Semi-fixed 15kΩ(B)CCP1230	
		OEL UNIT	MXS8221

RESISTORS

D	R 1901	(B,14,151)	RS1/16S222J
	R 1902	(B,9,151)	RS1/16S222J
	R 1903	(B,32,131)	RS1/16S473J
	R 1905	(B,36,32)	RS1/16S391J
	R 1906	(B,33,32)	RS1/16S101J
	R 1907	(B,17,28)	RS1/16S391J
	R 1908	(B,17,25)	RS1/16S101J
	R 1909	(B,36,29)	RS1/16S391J
	R 1910	(B,33,29)	RS1/16S101J
	R 1914	(A,40,80)	RS1/16S181J
	R 1915	(B,18,157)	RS1/16S221J
	R 1916	(B,22,157)	RS1/16S331J
E	R 1917	(B,20,157)	RS1/16S391J
	R 1918	(B,8,155)	RS1/16S560J
	R 1919	(B,13,13)	RS1/16S391J
	R 1921	(B,13,9)	RS1/16S101J
	R 1923	(B,17,13)	RS1/16S391J
	R 1925	(B,17,9)	RS1/16S101J
	R 1938	(B,15,88)	RS1/16S473J
	R 1939	(B,31,65)	RS1/16S104J
	R 1940	(A,11,60)	RS1/16S222J
	R 1941	(B,22,68)	RS1/16S154J
	R 1942	(B,22,74)	RS1/16S473J
F	R 1943	(B,38,56)	RS1/16S101J
	R 1944	(A,12,74)	RS1/16S473J
	R 1945	(B,14,83)	RAB4C473J

R 1946	(B,15,86)	RS1/16S473J
R 1947	(B,15,92)	RS1/16S101J
R 1948	(B,14,92)	RS1/16S101J
R 1949	(B,17,92)	RS1/16S101J
R 1950	(B,22,104)	RS1/16S101J
R 1951	(B,23,104)	RS1/16S101J
R 1952	(B,24,100)	RAB4C101J
R 1953	(B,28,101)	RAB4C101J
R 1954	(A,25,94)	RAB4C101J
R 1955	(A,21,93)	RAB4C101J
R 1956	(B,34,101)	RAB4C101J
R 1957	(A,17,93)	RAB4C101J
R 1958	(A,28,88)	RAB4C101J
R 1959	(A,13,93)	RAB4C101J
R 1960	(A,32,63)	RS1/16S101J
R 1961	(B,37,94)	RS1/16S101J
R 1962	(B,36,103)	RS1/16S101J
R 1963	(A,28,79)	RS1/16S101J
R 1964	(A,34,63)	RS1/16S101J
R 1967	(A,28,74)	RS1/16S101J
R 1968	(A,28,77)	RS1/16S101J
R 1969	(A,28,75)	RS1/16S101J
R 1980	(B,11,71)	RS1/16S333J
R 1981	(B,11,66)	RS1/16S683J
R 1982	(A,8,59)	RS1/16S393J
R 1983	(A,9,63)	RS1/16S392J
R 1991	(B,39,133)	RS1/16S2R2J
R 1992	(B,26,156)	RS1/16S101J
R 1993	(B,30,157)	RS1/16S103J
R 2001	(B,28,115)	RS1/16S222J
R 2002	(A,24,120)	RS1/16S222J
R 2003	(A,23,80)	RS1/16S102J
R 2004	(A,21,80)	RS1/16S102J
R 2006	(B,19,74)	RS1/16S102J
R 2007	(B,17,74)	RS1/16S102J
R 2008	(A,11,79)	RS1/16S102J
R 2009	(A,13,86)	RS1/16S102J
R 2031	(B,28,40)	RS1/16S332J
R 2032	(B,8,39)	RS1/16S822J
R 2033	(B,11,39)	RS1/16S473J
R 2034	(B,29,38)	RS1/16S222J
R 2035	(B,29,36)	RS1/16S103J
R 2036	(B,29,34)	RS1/16S103J

CAPACITORS

C 1909	(B,20,60)	CSZSR4R7M16
C 1910	(B,9,57)	CSZSR4R7M10
C 1911	(A,25,62)	CKSRYF104Z25
C 1912	(A,38,41)	CKSRYF104Z25
C 1913	(A,4,49)	CKSRYF104Z25
C 1914	(A,18,29)	CKSRYF104Z25
C 1915	(A,39,59)	CKSRYF104Z25
C 1916	(A,40,30)	CKSRYF104Z25
C 1917	(A,11,25)	CKSRYF104Z25
C 1918	(A,29,8)	CKSRYF104Z25
C 1919	(A,31,24)	CKSRYF104Z25
C 1920	(A,14,8)	CKSRYF104Z25
C 1921	(A,17,158)	CKSRYF104Z25
C 1940	(A,16,63)	CKSRYB103K50
C 1941	(B,22,66)	CKSRYB104K16

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 1942	(B,22,64)		CKSRYB105K10			R 307	(A,36,85)		RS1/16SS183J		
C 1943	(B,30,98)		CKSRYB103K50			R 308	(A,32,83)		RS1/16SS183J		
C 1944	(B,18,67)		CSZSR4R7M10			R 309	(A,38,89)		RS1/16SS183J		A
C 1990	(A,29,109)		CKSRYB103K50			R 310	(A,35,88)		RS1/16SS183J		
C 1991	(B,30,155)		CKSYF106Z10			R 601	(B,43,59)		RS1/16S101J		
C 2000	(A,15,81)		CKSRYB104K25			R 602	(B,41,62)		RS1/16S101J		
C 2001	(A,19,119)		CKSRYB104K25			R 606	(B,44,67)		RS1/16S0R0J		
C 2003	(B,23,116)		CKSRYB104K25			R 607	(B,43,56)		RS1/16SS0R0J		
C 2004	(A,18,81)		CKSRYB104K16			R 608	(B,36,67)		RS1/16SS0R0J		
C 2005	(A,15,79)		CKSRYB104K25			R 705	(B,50,59)		RS1/16SS221J		
C 2006	(A,15,83)		CKSRYB104K25			R 706	(B,57,61)		RS1/16SS221J		
C 2007	(A,18,80)		CKSRYB104K16			R 707	(A,62,47)		RS1/16SS473J		
						R 708	(B,50,57)		RS1/16SS221J		
						R 710	(A,28,77)		RS1/16SS102J		
						R 711	(B,44,53)		RS1/16SS221J		B
						R 714	(B,51,53)		RS1/16SS473J		
						R 716	(A,63,56)		RS1/16SS472J		
						R 719	(B,49,45)		RS1/16SS221J		
						R 720	(B,46,52)		RS1/16SS471J		
						R 724	(A,62,42)		RS1/16S473J		
						R 725	(B,57,43)		RS1/16SS222J		
						R 726	(A,52,41)		RS1/16SS103J		
						R 727	(B,50,54)		RS1/16SS473J		
						R 729	(A,57,40)		RS1/16SS223J		
						R 730	(A,65,41)		RS1/16SS473J		C
						R 731	(A,53,41)		RS1/16SS104J		
						R 737	(A,41,42)		RS1/16SS104J		
						R 740	(A,35,46)		RS1/16SS473J		
						R 742	(A,50,41)		RS1/16SS104J		
						R 746	(B,60,56)		RS1/16SS104J		
						R 750	(A,39,59)		RS1/16SS473J		
						R 754	(B,48,60)		RS1/16SS102J		
						R 755	(A,43,61)		RS1/16SS102J		
						R 765	(B,51,40)		RAB4CQ221J		
						R 769	(B,48,40)		RAB4CQ221J		
						R 773	(B,39,37)		RAB4CQ221J		D
						R 777	(B,48,51)		RS1/16SS221J		
						R 778	(B,48,52)		RS1/16SS221J		
						R 779	(B,45,54)		RS1/16SS221J		
						R 901	(B,52,65)		RAB4CQ221J		
						R 905	(B,54,60)		RS1/16SS221J		
						R 906	(B,56,68)		RS1/16SS221J		
						R 908	(B,45,69)		RS1/16SS0R0J		
						R 910	(B,44,69)		RS1/16SS0R0J		
						R 911	(B,40,73)		RS1/16SS102J		

D
Unit Number: CWX3096
Unit Name: CD Core Unit(S10.1)

MISCELLANEOUS

IC 201	(A,39,24)	IC	UPD63763GJ	
IC 203	(B,45,78)	IC	NJM2885DL1-33	
IC 301	(A,49,88)	IC	BA5835FP	
IC 701	(A,48,51)	IC	PE5454A	
IC 703	(A,30,44)	IC	S-812C33AUA-C2N	
Q 101	(A,20,22)	Transistor	2SA1577	
Q 701	(B,62,59)	Transistor	UN2111	
L 203	(A,53,32)	Inductor	CTF1389	
L 207	(A,53,31)	Inductor	CTF1389	
L 209	(A,26,20)	Inductor	CTF1389	
L 703	(A,64,49)	Inductor	CTF1389	
X 201	(A,51,35)	Ceramic Resonator	16.934MHzCSS1603	
X 701	(A,59,53)	Ceramic Resonator	4.00MHzCSS1652	
S 901	(A,15,43)	Switch(HOME)	CSN1067	
S 903	(B,53,100)	Switch(DSCSNS)	CSN1068	
S 904	(B,35,108)	Switch(12EJ)	CSN1067	
S 905	(B,48,109)	Switch(8EJ)	CSN1067	

RESISTORS

R 101	(A,22,24)		RS1/10SR2R4J	
R 102	(A,22,26)		RS1/10SR2R4J	
R 103	(A,25,25)		RS1/10SR2R7J	
R 201	(A,53,16)		RS1/16SS102J	
R 202	(A,55,21)		RS1/16SS333J	
R 221	(B,31,18)		RS1/16SS103J	
R 222	(B,26,18)		RS1/16SS103J	
R 225	(A,27,8)		RS1/16SS103J	
R 226	(A,27,7)		RS1/16SS393J	
R 227	(B,33,10)		RS1/16SS562J	
R 228	(B,36,8)		RS1/16SS122J	
R 229	(B,34,8)		RS1/16SS472J	
R 232	(B,35,10)		RS1/16SS122J	
R 241	(B,42,28)		RS1/16SS333J	
R 243	(B,44,28)		RS1/16SS333J	
R 245	(A,39,38)		RS1/16SS333J	
R 301	(A,48,78)		RS1/16SS183J	
R 302	(A,42,78)		RS1/16SS822J	
R 304	(A,50,78)		RS1/16SS183J	
R 305	(A,42,77)		RS1/16SS822J	

CAPACITORS

C 103	(B,14,8)	100μF/16V	CCH1504	
C 105	(A,19,15)		CKSSYB104K10	
C 108	(B,39,16)		CKSSYB104K10	
C 110	(A,18,6)		CKSSYB104K10	
C 201	(A,51,14)		CKSSYB102K50	
C 202	(B,50,17)		CKSSYB104K10	
C 203	(A,55,23)		CKSSYB104K10	
C 204	(B,28,22)		CEVW220M6R3	
C 205	(A,53,25)		CKSSYB104K10	
C 208	(B,44,25)		CKSSYB104K10	
C 209	(A,54,29)		CKSSYB104K10	
C 212	(A,45,37)		CKSRYB105K10	
C 216	(A,25,8)		CKSSYB332K50	

Circuit Symbol and No.**Part No.**

	C 217	(A,28,12)	CKSSYB104K10
	C 218	(A,25,7)	CKSSYB473K10
A	C 219	(A,34,7)	CKSSYB104K10
	C 220	(A,33,11)	CKSSYB182K50
	C 221	(B,35,6)	CKSSYB104K10
	C 222	(B,35,8)	CCSSCH560J50
	C 223	(B,33,8)	CCSSCH4R0C50
	C 224	(B,40,16)	CKSSYB104K10
	C 225	(B,45,14)	CKSSYB103K16
	C 226	(B,43,12)	CCSSCH680J50
	C 227	(A,45,10)	CCSSCH470J50
	C 228	(A,49,9)	CKSSYB103K16
	C 234	(B,36,81)	CEVW221M4
B	C 237	(B,38,29)	CKSSYB104K10
	C 239	(B,34,10)	CCSSCH220J50
	C 242	(B,58,32)	CKSSYB104K10
	C 243	(B,39,76)	CKSSYB104K10
	C 244	(B,49,70)	CKSSYB104K10
	C 246	(A,23,19)	CKSSYB104K10
	C 251	(B,28,31)	CKSRYB102K50
	C 260	(A,54,25)	CKSSYB104K10
	C 301	(A,43,78)	CKSSYB221K50
	C 302	(A,50,79)	CKSSYB221K50
	C 303	(A,37,85)	CKSSYB472K25
C	C 304	(A,39,89)	CKSSYB103K16
	C 305	(B,34,92)	CEVW101M16
	C 307	(B,56,90)	CKSSYB104K10
	C 601	(B,46,60)	CCSRCH102J50
	C 602	(B,41,65)	CCSRCH102J50
	C 701	(A,64,46)	CKSSYB104K10
	C 703	(B,50,61)	CKSSYB103K16
	C 706	(B,50,62)	CKSSYB104K10
	C 707	(A,36,45)	CKSSYB104K10
	C 712	(A,22,42)	CKSRYB224K16
	C 714	(B,60,45)	CKSSYB104K10
D	C 716	(A,61,40)	CKSSYB103K16
	C 722	(B,52,48)	CKSQYB475K6R3
	C 723	(A,26,41)	CKSRYB105K10
	C 903	(B,56,70)	CKSSYB471K50
	C 906	(A,40,77)	CKSRYB224K16
	C 907	(A,47,76)	CKSSYB103K16
	C 910	(B,60,71)	CKSQYB225K10

Miscellaneous Parts List

		Pickup Unit(P9.9MP3)(Service)CXX1805
E	M 1	Motor Unit(SPINDLE) CXC4440
	M 2	Motor Unit(LOADING/CARRIAGE)CXB8933

F