
9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

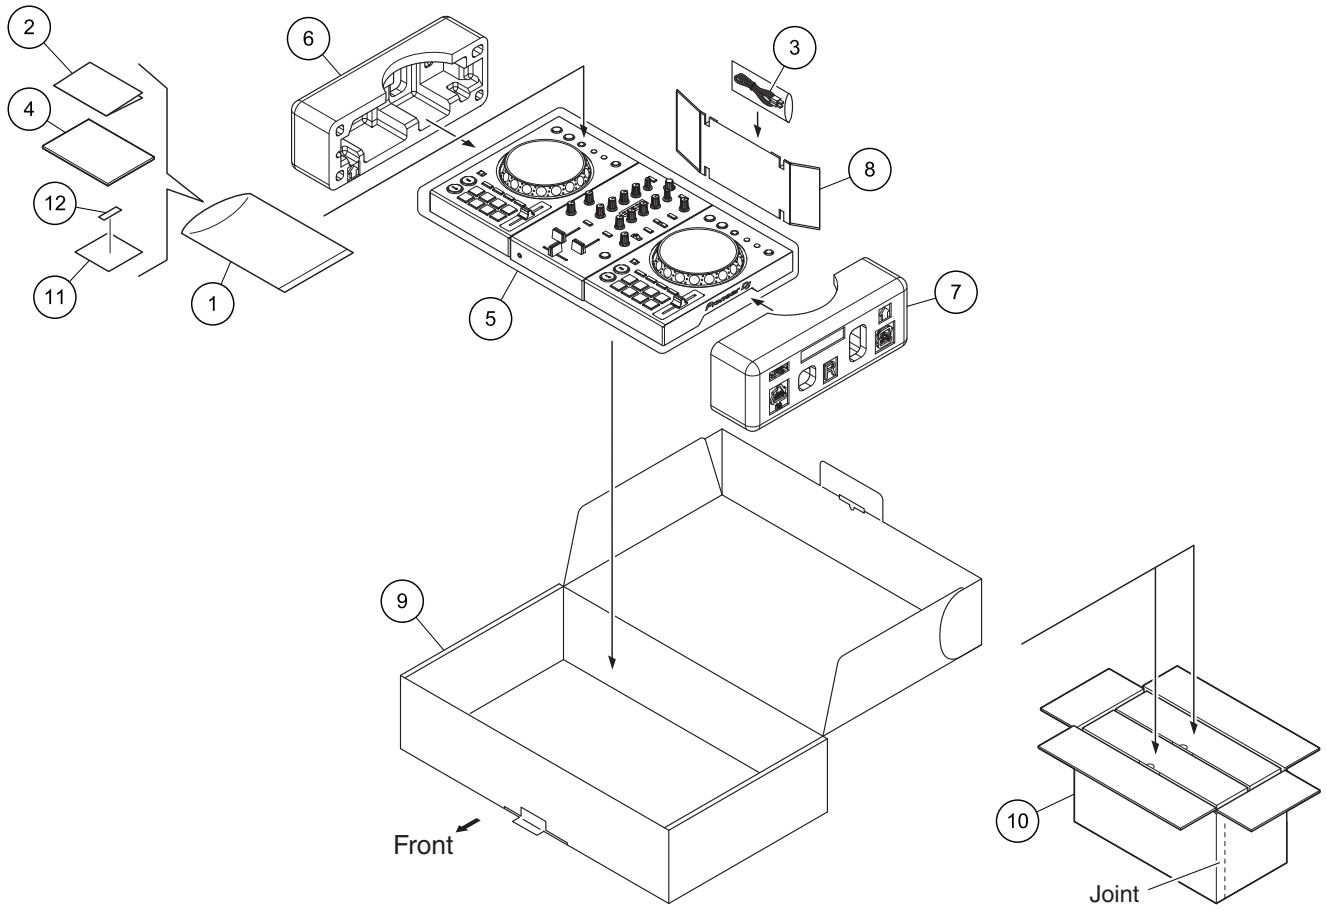

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
NSP	1	Polyethylene Bag	AHG7117
NSP	2	Warranty	See Contrast table (2)
	3	USB Cable	DDE1150
	4	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	5	Packing Sheet	AHG7053
	6	Packing Pad	DHA1978
	7	Packing Pad	DHA1979
	8	Partition/ACC	DHC1085
	9	Packing Case	See Contrast table (2)
	10	Master Carton	See Contrast table (2)
NSP	11	Leaflet	DRM1410
NSP	12	License Key Label ASSY	DXA2304

(2) CONTRAST TABLE

SXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	SXJ	XJCN
NSP	2	Warranty	DRY1270	Not used
	4	Operating Instructions (Quick Start Guide)	DRH1505	DRH1506
	9	Packing Case	DHG3628	DHG3629
	10	Master Carton	DHG3631	DHG3632

9.2 EXTERIOR SECTION

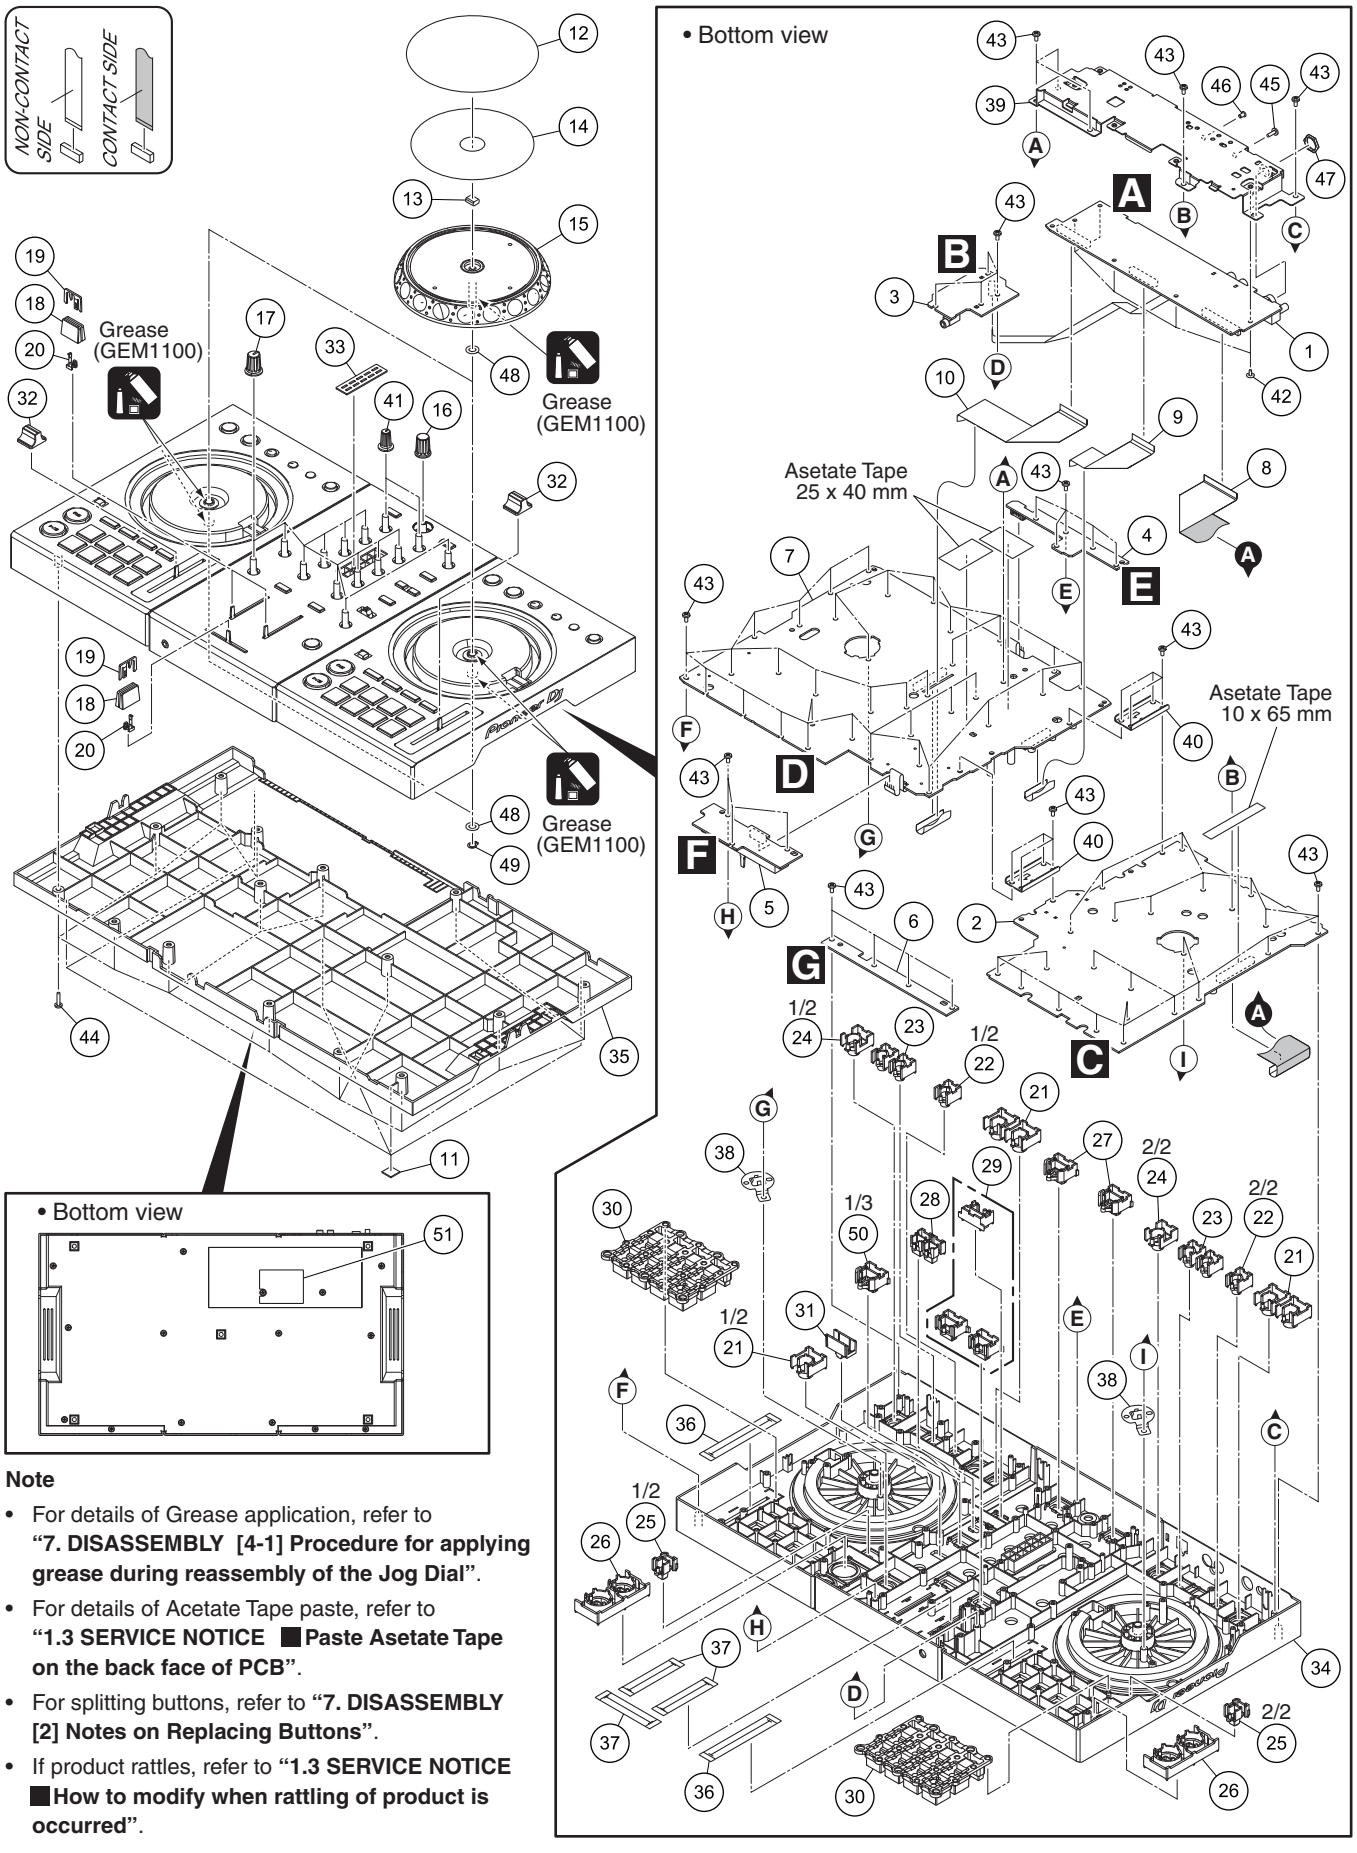

Note

- For details of Grease application, refer to **"7. DISASSEMBLY [4-1] Procedure for applying grease during reassembly of the Jog Dial"**.
- For details of Acetate Tape paste, refer to **"1.3 SERVICE NOTICE ■ Paste Asetate Tape on the back face of PCB"**.
- For splitting buttons, refer to **"7. DISASSEMBLY [2] Notes on Replacing Buttons"**.
- If product rattles, refer to **"1.3 SERVICE NOTICE ■ How to modify when rattling of product is occurred"**.

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN ASSY	DWX4152
	2	DCK1 ASSY	DWX4153
	3	HPJK ASSY	DWX4155
	4	BRWS ASSY	DWX4156
	5	CRFD ASSY	DWX4157
	6	HLD1 ASSY	DWX4158
	7	PNL2 ASSY	DWX4154
	8	FFC	DDD1858
	9	FFC	DDD1859
	10	FFC	DDD1860
	11	Rubber Foot	VEB1349
	12	Plate	DAH3209
	13	Gasket/JOG	DEC3539
	14	Ds Tape/JOG	DEH1042
	15	Jog Dial	DNK6763
	16	Dial Knob S (B)	DAA1273
	17	Knob/PLS	DAA1324
	18	Slider Knob 1	DAC2684
	19	Slider Knob 2	DAC2685
	20	Stopper/SLD	DNK6009
	21	Button/LOP	DAC3074
	22	Button/MT	DAC2875
	23	Button/CAL	DAC3020
	24	Button	DAC3408
	25	Button S (Black)	DAC2663
	26	Button	DAC3417
	27	Button	DAC3151
	28	Button	DAC3381
	29	Button	DAC3380
	30	Button	DEB2063
	31	SW Cap	DAC2753
	32	Knob/PLS	DNK6769
	33	Panel	DAH3210
	34	Control Panel	DNK6765
	35	Chassis	DNK6764
	36	Packing/TMP	DEC3392
	37	Sheet	DEC3795
	38	Plate/CND	DNH3137
	39	Stay	DNH3354
	40	Plate	DNH3353
	41	Knob	DAA1390
	42	Screw	ASZ26P050FTC
	43	Screw	BPZ30P100FTC
	44	Screw	BPZ30P120FTB
	45	Screw	BPZ30P080FTB
	46	Screw (M3 x 5)	DBA1340
	47	Nut (M12)	NKX2FNI
	48	Washer	WA62D095D050
	49	Washer	YC60FAC
	50	Button	DAC3416
NSP	51	Name Label	See Contrast table (2)

(2) CONTRAST TABLE

SXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	SXJ	XJCN
NSP	51	Name Label	Not used	DRW2768

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω	→	*56 × 10¹*	→	*561* ····· *RD1/4PU 5 6 1 J*
47 kΩ	→	*47 × 10³*	→	*473* ····· *RD1/4PU 4 7 3 J*
0.5 Ω	→	*R50*		····· *RN2H R 5 0 K*
1 Ω	→	*1R0*		····· *RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ	→	*562 × 10¹*	→	*5621* ····· *RN1/4PC 5 6 2 1 F*

Mark	No.	Description	Part No.

LIST OF ASSEMBLIES

	1	MAIN ASSY	DWX4152
NSP	1	PNL1 ASSY	DWM2684
	2	DCK1 ASSY	DWX4153
	2	HPJK ASSY	DWX4155
	2	BRWS ASSY	DWX4156
	2	CRFD ASSY	DWX4157
	2	HLD1 ASSY	DWX4158
	1	PNL2 ASSY	DWX4154

Mark	No.	Description	Part No.

A

Unit Number: DWX4152
Unit Name: MAIN ASSY

SEMICONDUCTORS

⚠	IC	202,211 Regulator IC	MM3411A33N
⚠	IC	204,210 Regulator IC	MM1856A50N
⚠	IC	205 Regulator IC	S-1172B1C-U5
⚠	IC	207 DC-DC Converter IC	NJM2392M
	IC	209 IC	S-80942CNMC-G9C
	IC	406 Flash Blank UC IC	R5S72670P144FP
	IC	407 IC	TC74VHC08FK
	IC	408 Flash ROM	DYW2102*
		*Part number of the initial firmware equipped	
	IC	409 IC	S-80927CNMC-G8X
	IC	410 Buffer Logic IC	TC7SH126FUS1
	IC	701,703 Audio DAC	AK4387ET
	IC	702 Dual OP-AMP	NJM4565MD
	IC	705 IC	NJM4580MD
	IC	706 Headphone AMP IC	BH3547F
	IC	708 AD Converter IC	AK5358AET
	IC	711,712,713 Logic IC	74VHC4051AFT
	Q	104,105 Resistor Built-IN TR	RN1903S1
	Q	107,108 Resistor Built-IN TR	RN1903S1
	Q	109,201 Resistor Built-IN TR	LTC024EEB
	Q	202,206,705,706 Bipolar TR	LSCR523UB
⚠	Q	203 FET	RTQ040P02
	Q	205,211 Resistor Built-IN TR	LTC024EEB
	Q	207,209,213,713 Bipolar TR	LSAR523UB
	Q	221 Transistor	KTX101U
	Q	224 Resistor Built-IN TR	RN1903S1

Mark	No.	Description	Part No.
	Q	704,710 Resistor Built-IN TR	LTC024EEB
	Q	707,708 Transistor	IMX9
	Q	709,712 Resistor Built-IN TR	LTA024EEB
	Q	711 Bipolar TR	LSCR523UB
	D	202,212,215 Switching Diode	1SS355VM
⚠	D	207,208,209 Schottky Diode	RB551VM-30
	D	210 Schottky Diode	RB551VM-30
	D	214 Diode	MC2848-11
	D	217,702,704 Switching Diode	1SS355VM
	D	705,708 Schottky Diode	RB501VM-40

MISCELLANEOUS

	L	104 Coil	ATH7015
	L	205 Power Inductor	ATH7053
	L	401 Chip Beads	VTL1129
	L	402,403,404,406,408 Inductor	CTF1793
	X	401 Crystal(24.576MHz)	DSS1204
	X	404 Resonator	CSS1760
	JH	101 5P Cable Holder	51048-0500
	JP	101 Jumper Wire	D20PDY0520E
⚠	P	101 Protector(1.000A)	DEK1097
	VA	103,701,702,703 Varistors	EZJZ1V270RM
	VA	704 Varistors	EZJZ1V270RM
	VR	701 Potentiometer	DCS1111
	CN	101 39P Connector	VKN2097
	CN	102 31P Connector	VKN1262
	CN	103 25P Connector	VKN1256
	JA	101 USB Connector	DKN1237
	JA	701 6.5 DIA Jack	DKN1669
	JA	702 Pin Jack(2P)	AKB7181

RESISTORS

	R	125	RS1/10SR102J
	R	201	RS1/16SS102J
	R	202,205,227,243,258,261	RS1/16SS103J
	R	204,206	RS1/16SS104J
	R	208,211,248,259,267,292	RS1/10SR0R0J
	R	219,252	RS1/4SA100J
	R	224,226	RS1/8SQ1R5J
	R	231	RS1/10SR271J
	R	245	RS1/16SS1802F
	R	246	RS1/16SS3901D
	R	251	RS1/10SR103J
	R	254,256,280,307	RS1/16SS183J
	R	255	RS1/16SS123J
	R	257,265,281	RS1/16SS273J

Mark	No.	Description	Part No.
	R	260	RS1/10SR471J
	R	266	RS1/16SS473J
	R	268	RS1/16SS272J
	R	291,405	RS1/16SS0R0J
	R	293,294	RS1/16SS1002D
	R	295,309	RS1/10SR0R0J
	R	296	RS1/16SS223J
	R	297	RS1/16SS104J
	R	298,299,301,302	RS1/16SS472J
	R	303,408,412,416,425	RS1/16SS103J
	R	401	RS1/16SS105J
	R	402,403,406,409,415,424	RS1/16SS560J
	R	404	RS1/16SS102J
	R	411	RAB4CQ560J
	R	413,414,427,429,450	RS1/16SS221J
	R	418,422,446	RAB4CQ103J
	R	419,420,421,460	RS1/16SS220J
	R	423,459	RS1/16SS101J
	R	426,431,432,433,438,439	RS1/16SS0R0J
	R	430	RS1/16SS472J
	R	434	RAB4CQ101J
	R	435,436,437,454,463,464	RS1/16SS560J
	R	449	RAB4CQ221J
	R	453	RS1/16SS470J
	R	461,477	RS1/16SS103J
	R	462,472,474	RS1/16SS104J
	R	465,467,469	RS1/16SS330J
	R	466,471,475,482,485,487	RS1/16SS560J
	R	476	RAB4CQ103J
	R	479,480	RS1/16SS220J
	R	488,489,491	RS1/16SS560J
	R	490,493,496,507,511	RS1/16SS472J
	R	492,499,506,518,521,522	RS1/16SS221J
	R	494,497,501,503,504,566	RS1/16SS0R0J
	R	495,498,505,509,512,513	RS1/16SS101J
	R	514,582	RS1/16SS101J
	R	520,530,532,586	RS1/16SS103J
	R	523,549,552,591,592	RS1/16SS221J
	R	525	RAB4CQ472J
	R	531,535,564	RS1/16SS102J
	R	533	RS1/16SS5601F
	R	534	RS1/16SS472J
	R	536,571,572	RS1/10SR0R0J
	R	548	RS1/16SS105J
	R	555	RS1/16SS331J
	R	569,570,580,609,610,612	RS1/16SS560J
	R	576,701,702,703,704	RS1/16SS470J
	R	577,578,579	RS1/16SS330J
	R	593,594,599,600	RS1/16SS224J
	R	601,607	RS1/16SS103J
	R	603,604,708,716	RS1/16SS101J
	R	605,651,659,663	RS1/16SS0R0J
	R	606,611	RS1/16SS221J
	R	706,737,738,744,745	RS1/16SS473J
	R	707	RS1/10SR1501D
	R	709	RS1/10SR6802D
	R	710	RS1/10SR1801D
	R	711,752,753	RS1/10SR3301D
	R	713,714,717,721	RS1/16SS470J
	R	715,720,723,761	RS1/10SR0R0J
	R	722,727	RS1/10SR100J
	R	724	RS1/10SR9101D
	R	728	RS1/10SR7500D
	R	729,730,755,767,778,779	RS1/16SS103J
	R	740,741	RS1/10SR4701D
	R	746,747	RS1/10SR271J
	R	750,751	RS1/10SR1002D
	R	756	RS1/16SS104J
	R	768,771	RS1/16SS472J
	R	772,773,791	RS1/16SS223J
	R	774,775,786,787,788,789	RS1/16SS473J
	R	776,777	RS1/10SR471J
	R	780,781,783,785	RS1/10SR331J
	R	782,784,795	RS1/16SS103J
	R	790	RS1/10SR0R0J
	R	794	RS1/10SR3301D
	R	797	RS1/16SS0R0J
	R	836	RS1/10SR1001D
	R	837	RS1/10SR7500D
	R	838,839,840	RS1/16SS470J
	R	841	RS1/16SS220J
	R	842	RS1/16SS101J
	R	843,844	RS1/10SR330J

CAPACITORS

	C	102	CKSSYB103K16
	C	104,209,264	DCH1201
	C	108	CKSRYB104K16
	C	109,201,205,206,217,232	CKSRYB105K10
	C	118,120	CKSSYB102K50
	C	148,402,403,405	CCSSCH101J50
	C	211	DCH1266
	C	218,235,236,242,249,285	CKSSYB104K10
	C	234,412,413	CEVW470M6R3
	C	243,254,262,274,280,287	CKSRYB105K10
	C	244	CCSSCH121J50
	C	252,267,270	CEVW471M10
	C	257,286,425	CCSSCH221J50
	C	290	CKSRYB105K10
	C	401,404	CCSSCH120J50
	C	406,407,408,411,414,415	CCSSCH101J50
	C	410,437	CKSSYB102K50
	C	418,421,422,423,435,436	CCSSCH101J50
	C	424,426,427,428,429,430	CKSSYB103K16
	C	431,433,434,438,442,444	CKSSYB103K16
	C	432,441,458,469,470	CKSSYB104K10
	C	439,443,446,449,471	CCSSCH101J50
	C	440	CCSSCH221J50
	C	445,448,454,456	CKSSYB471K50
	C	447,450,452,455,457,459	CKSSYB103K16
	C	461,462,463,464,465,483	CKSSYB103K16
	C	466,468,475,476,493,494	CKSSYB102K50
	C	473,474,478,482,484,485	CKSSYB104K10
	C	477,489,490,503,504,505	DCH1201
	C	480,496,497,498,510,511	CCSSCH101J50
	C	487	CCSSCH120J50
	C	488,492	CKSSYB103K16
	C	491	CKSSYB222K50

Mark	No.	Description	Part No.
C	495,507,544,545,547,548		CKSSYB102K50
C	499,500,501,506,546,554		CKSSYB104K10
C	502		CCSSCH100D50
C	513,514,515,516,519,520		CCSSCH101J50
C	521,522,523,524,564,565		CCSSCH101J50
C	533		DCH1201
C	549,550,552,553,555,556		CKSSYB102K50
C	557,558,560,562,570,571		CKSSYB102K50
C	561,713,714		CKSSYB104K10
C	566,575		CCSSCH101J50
C	568,569		CCSSCH221J50
C	572,573,702,708,709,715		CKSSYB102K50
C	701		CKSRYB104K25
C	704		CCSSCH561J50
C	705		CKSSYB332K50
C	706,710		CKSSYB103K16
C	707		ACG1147
C	712,721,731		CEVW470M6R3
C	716,722,723,727,728		CKSRYB104K16
C	717,718		CCSRCH222J50
C	719,724		CEVW101M16
C	726		CKSSYB104K10
C	729,742,743		CKSRYB105K10
C	730,734,782		CKSSYB102K50
C	732,733,765,804		DCH1201
C	735		CCH1565
C	739,740,773,774		CEVW220M16
C	744,807		DCH1263
C	745		CCSSCH221J50
C	747,748,783,814		CKSSYB103K16
C	749,750		CCSSCH681J50
C	751,752		CCSSCH181J50
C	753		CKSQYB475K6R3
C	755,761		CCH2090
C	766		CEVW470M6R3
C	781		CKSRYB104K25
C	784		CEVW331M6R3
C	785		CKSRYB105K10
C	786		CKSSYB102K50
C	806,809,811		CKSSYB104K10
C	808,810		DCH1201

PNL1 ASSY
Consist of
DCK1 ASSY
HPJK ASSY
BRWS ASSY
CRFD ASSY
HLD1 ASSY

B C E F G

Unit Number: DWM2684
Unit Name: PNL1 ASSY

SEMICONDUCTORS

IC	1201 Flash Written UC IC	DYW1962*
	*Part number of the initial firmware equipped	
Q	1201,1202,1419 Bipolar TR	LSCR523UB
Q	1401,1403,1405 Transistor	LTC124EUB
Q	1402,1404,1406 Transistor	ISA1602AM1
Q	1407,1409,1411 Transistor	LTC124EUB
Q	1408,1410,1412 Transistor	ISA1602AM1
Q	1413,1415 Transistor	LTC124EUB
Q	1414,1416 Transistor	ISA1602AM1
Q	1417,1418,1421 Transistor	LTC123JUB
Q	1420 Bipolar TR	LSCR523UB
Q	1422 Transistor	LTC123JUB
Q	1601,1602 Chip Transistor	INC2002AC1
D	1201,1202,1203,1204 Diode	MC2848-11
D	1205,1206,1207,1208 Diode	MC2848-11
D	1209,1211,1212,1213 Diode	MC2848-11
D	1214 Diode	MC2848-11
D	1216 Schottky Diode	RB501VM-40
D	1401,1402,1403,1404 LED(Red)	SLI-343U8R(HJK)
D	1405,1406,1407,1408 LED(Red)	SLI-343U8R(HJK)
D	1409,1410,1412,1413 LED(Red)	SLI-343U8R(HJK)
D	1411,1422,1423 LED(Amber)	SLI-343Y8Y(KLM)
D	1414,1415,1416,1417 LED(Red)	SLI-343U8R(HJK)
D	1418 LED(Red)	SLI-343U8R(HJK)
D	1419 LED(Green)	SLI-343M8G(GHJ)
D	1424 LED(Amber)	SLI-343Y8Y(KLM)

MISCELLANEOUS

L	1201,1202,1204 Inductor	CTF1379
KN	1201 Earth Terminal	AKF7002
PC	1201,1202 Photo Interrupter	RPI-579N1
S	1201,1205,1206 Tact Switch	DSG1079
S	1202,1203,1204 Tact Switch	DSG1117
S	1207,1208,1209 Tact Switch	DSG1117
S	1210,1211,1212 Tact Switch	DSG1079
S	1213,1215,1216 Tact Switch	DSG1079
S	1217,1218,1220 Tact Switch	DSG1117
S	1221 Tact Switch	DSG1117
S	1223,1225 Tact Switch	DSG1079
S	1703 Rotary Encoder	DSX1138
VA	1201,1202 SMD Varistor	EZJZ1V80010
VA	1203,1204,1205 Varistors	EZJZ1V270RM
VA	1206 Varistors	EZJZ1V270RM
VR	1201 Potentiometer	DCS1096
VR	1202 Variable Resistor	DCV1011
VR	1204 Potentiometer	DCS1097
VR	1801 Variable Resistor	DCV1023
CN	1001 39P Connector	VKN2098
CN	1601 5P Jumper Connector	52147-0510
CN	1701 5P Jumper Connector	52147-0510
CN	1801 5P Jumper Connector	52147-0510
JA	1601 Stereo Mini Jack	XKN3017

RESISTORS

R	1001	RS1/4SA2R0J
R	1202,1203,1227	RS1/10SR0R0J
R	1204,1205,1225,1228	RS1/10SR103J
R	1206,1207	DCN1187
R	1208,1209,1222,1223,1226	RS1/10SR101J
R	1210,1211	RS1/10SR222J
R	1212,1213	RS1/10SR111J
R	1215	RS1/10SR2202D
R	1218,1219	RS1/10SR2201D
R	1220	RS1/10SR221J

Mark	No.	Description	Part No.
	R	1224	RS1/10SR391J
	R	1401,1406,1411,1418,1424	RS1/10SR182J
	R	1402,1407,1413,1420,1425	RS1/10SR223J
	R	1403,1408,1414,1421,1426	RS1/10SR473J
	R	1405,1410,1417,1423,1428	RS1/10SR560J
	R	1412,1416,1419,1422,1432	RS1/10SR151J
	R	1415,1449	RS1/10SR751J
	R	1427,1456	RS1/10SR271J
	R	1429,1434,1440,1454	RS1/10SR182J
	R	1430,1436,1442	RS1/10SR223J
	R	1431,1437,1443,1452,1453	RS1/10SR473J
	R	1433,1439,1445	RS1/10SR560J
	R	1435,1438,1441,1444	RS1/10SR151J
	R	1447	RS1/10SR152J
	R	1448	RS1/10SR821J
	R	1601,1602	RS1/10SR272J
	R	1603,1604	RS1/4SA0R0J
	R	1605,1606	RS1/10SR103J
	R	1611,1612,1801	RS1/10SR0R0J
	R	1701,1702	RS1/10SR101J

CAPACITORS

	C	1003	CEJQ101M16
	C	1203,1207,1212,1603,1604	CKSRYB104K16
	C	1204	CCSRCH221J50
	C	1208,1211,1701,1702,1802	CKSRYB103K50
	C	1214	DCH1201
	C	1601,1602	CEAT471M10
	C	1801	CKSRYB104K16

D

Unit Number: DWX4154
Unit Name: PNL2 ASSY

SEMICONDUCTORS

	IC	2401 Flash Written UC IC	DYW1962*
		*Part number of the initial firmware equipped	
	Q	2201,2401,2403 Transistor	LTC124EUB
	Q	2402,2404 Chip Transistor	2SB1689
	Q	2405,2407,2409 Transistor	LTC124EUB
	Q	2406,2408 Chip Transistor	2SB1689
	Q	2410,2412 Chip Transistor	2SB1689
	Q	2411,2413,2415 Transistor	LTC124EUB
	Q	2414,2416 Chip Transistor	2SB1689
	Q	2417,2418,2419 Bipolar TR	LSCR523UB
	Q	2420,2421,2423 Bipolar TR	LSCR523UB
	Q	2422 Transistor	LTC123JUB
	Q	2424 Bipolar TR	LSCR523UB
	D	2201,2202,2203,2204 Diode	MC2848-11
	D	2205,2206,2207,2208 Diode	MC2848-11
	D	2210,2211,2212,2213 Diode	MC2848-11
	D	2214,2215,2216,2217 Diode	MC2848-11
	D	2218,2219,2221,2222 Diode	MC2848-11
	D	2401,2405,2406 LED(Amber)	SLI-343Y8Y(KLM)
	D	2402 Blue LED	SLR343BD2T(NP)
	D	2403,2404,2409,2411 LED(Red)	SLI-343U8R(HJK)
	D	2407,2408,2410 LED(Amber)	SLI-343Y8Y(KLM)
	D	2413,2414,2416,2417 LED(Red)	SLI-343U8R(HJK)
	D	2415,2422,2425 LED(Amber)	SLI-343Y8Y(KLM)
	D	2418,2419,2420,2421 LED(Red)	SLI-343U8R(HJK)
	D	2423,2424,2427,2429 LED(Red)	SLI-343U8R(HJK)
	D	2426 Schottky Diode	RB501VM-40
	D	2428,2431 LED(Amber)	SLI-343Y8Y(KLM)
	D	2430,2434,2439 LED(Red)	SLI-343U8R(HJK)
	D	2432,2435,2437 LED(Green)	SLI-343M8G(GHJ)
	D	2440,2441 LED(Green)	SLI-343M8G(GHJ)

MISCELLANEOUS

	L	2403,2404,2407 Inductor	CTF1379
	JH	2001,2002 5P Cable Holder	51048-0500
	JP	2001,2002 Parallel Jumper	D20PDY0505E
	KN	2401 Earth Terminal	AKF7002
	PC	2401,2402 Photo Interrupter	RPI-579N1
	S	2201,2202,2203 Tact Switch	DSG1117
	S	2204,2205,2209 Tact Switch	DSG1079
	S	2206,2207,2208 Tact Switch	DSG1117
	S	2210,2211,2213 Tact Switch	DSG1079
	S	2214,2216,2217 Tact Switch	DSG1079
	S	2218,2221,2225 Tact Switch	DSG1079
	S	2219,2220,2223 Tact Switch	DSG1117
	S	2224 Tact Switch	DSG1117
	S	2226,2227,2228 Tact Switch	DSG1079
	S	2229,2230,2231 Tact Switch	DSG1079
	S	2232,2233 Tact Switch	DSG1079
	S	2234 Slide Switch	DSH1058
	VA	2001,2002,2003 Varistors	EZJZ1V270RM
	VA	2201,2202,2203 Varistors	EZJZ1V270RM
	VA	2204,2205,2206 Varistors	EZJZ1V270RM
	VA	2207,2208,2209 Varistors	EZJZ1V270RM
	VA	2210 Varistors	EZJZ1V270RM
	VA	2401,2402 SMD Varistor	EZJZ1V80010
	VR	2201,2207,2210 Potentiometer	DCS1096
	VR	2202,2203,2204 Potentiometer	DCS1097
	VR	2205,2208,2211 Potentiometer	DCS1097
	VR	2206,2209 Variable Resistor	DCV1024
	VR	2212,2213,2214 Potentiometer	DCS1097
	VR	2215 Variable Resistor	DCV1011
	CN	2001 25P Connector	VKN1256
	CN	2002 31P Connector	VKN1262

RESISTORS

	R	2001	RS1/4SA2R0J
	R	2206,2214	RS1/10SR0R0J
	R	2217,2218	RS1/10SR2201D
	R	2219,2220	RS1/10SR101J
	R	2401,2409	RS1/10SR152J
	R	2402,2412,2422,2430	RS1/10SR223J
	R	2403,2413,2423,2431	RS1/10SR473J
	R	2404,2415	RS1/10SR820J
	R	2405,2416,2420,2425,2429	RS1/10SR151J
	R	2406,2432,2435	RS1/10SR271J
	R	2407,2417,2426,2434,2444	RS1/10SR560J
	R	2408,2418,2427	RS1/10SR121J
	R	2410,2411	DCN1187
	R	2414,2442,2445,2447,2454	RS1/10SR221J
	R	2419,2428,2437,2448	RS1/10SR182J

Mark	No.	Description	Part No.
R	2433,2438,2443,2450,2455		RS1/10SR151J
R	2439		RS1/10SR2202D
R	2440,2451,2462,2471		RS1/10SR223J
R	2441,2452,2463,2472,2482		RS1/10SR473J
R	2453,2460		RS1/10SR101J
R	2456,2466,2475		RS1/10SR560J
R	2457		RS1/10SR221J
R	2458,2468,2491,2492		RS1/10SR103J
R	2459,2469,2477,2478,2479		RS1/10SR122J
R	2461,2487,2488		RS1/10SR0R0J
R	2464,2467,2473,2476		RS1/10SR820J
R	2480		RS1/10SR821J
R	2481		RS1/10SR122J
R	2483,2484,2485,2486		RS1/10SR473J
R	2489		RS1/10SR271J
R	2493,2494		RS1/10SR101J
R	2495,2496		RS1/10SR222J
R	2497,2498		RS1/10SR111J

CAPACITORS

C	2001		CEJQ101M16
C	2206,2217,2230,2403,2405		CKSRYB104K16
C	2212,2228,2231,2233		CKSRYB103K50
C	2402		CCSRCH221J50
C	2404		DCH1201